



# Sony Cyber-shot DSC-P100 Back Casing Replacement

This is a step-by-step guide to disassemble the back casing of the camera.

Written By: Katie McCraw



---

 **TOOLS:**

- Phillips #00 Screwdriver (1)
-

## Step 1 — Back Casing




- It is necessary to first locate the appropriate screws in order to disassemble the back casing.

## Step 2



- Remove the found screws with a small screwdriver.
- ⓘ It is important to put the small screws in a safe location in order to reassemble the casing.

### Step 3

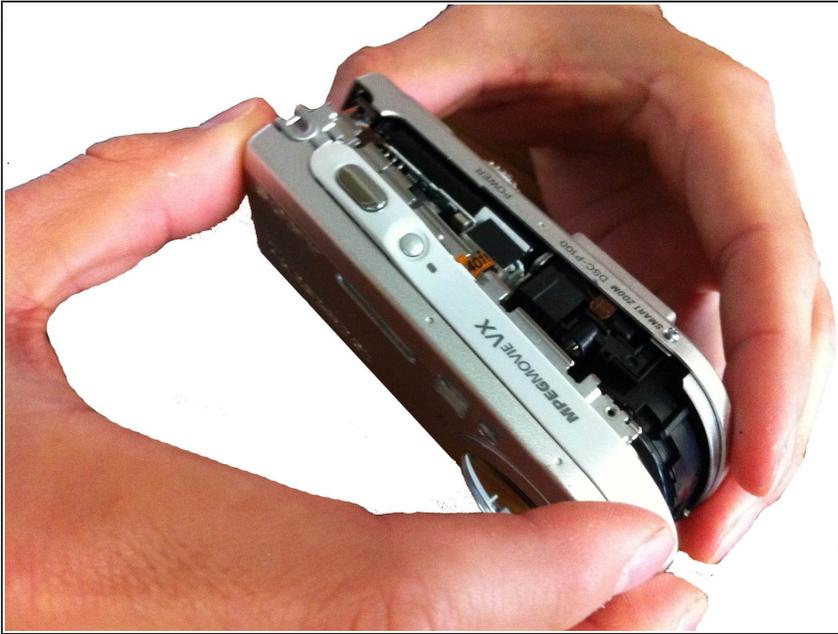

- Carefully pull the back casing away from the camera.

### Step 4



- The back casing is now removed from the camera.

To reassemble your device, follow these instructions in reverse order.