


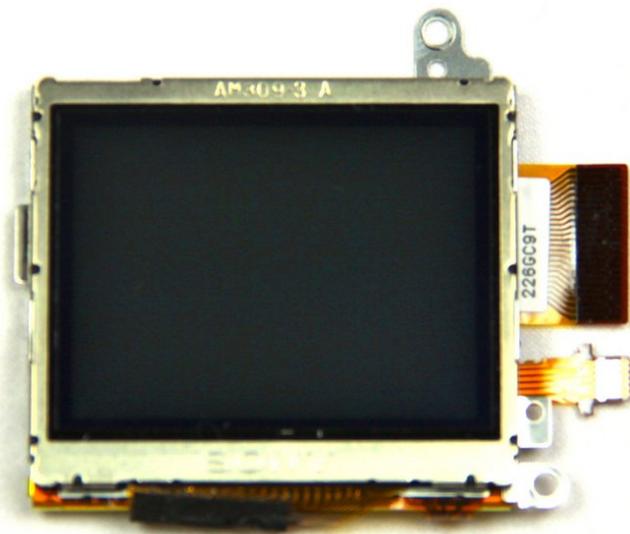

Sony Cyber-shot DSC-P9 LCD Replacement

Replace the LCD screen with this guide.

Written By: Jenna Crawford



 **TOOLS:**

- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery



- Slide the battery latch down the side of the camera with your hands.
- The latch will automatically pop open.

Step 2



- Unlatch the clip over the battery.
- The battery will partially pop out.

Step 3



- Remove the battery from the camera.

Step 4 — LCD



- Unscrew the four 3.0mm Phillips #000 screws holding the back case onto the camera; there are two

screws on top and two on the bottom.

Step 5




- Pull the back case gently away from the rest of the camera.

Step 6




- Remove the two 3.0mm Phillips #000 screws holding the display to the metal backing.

Step 7

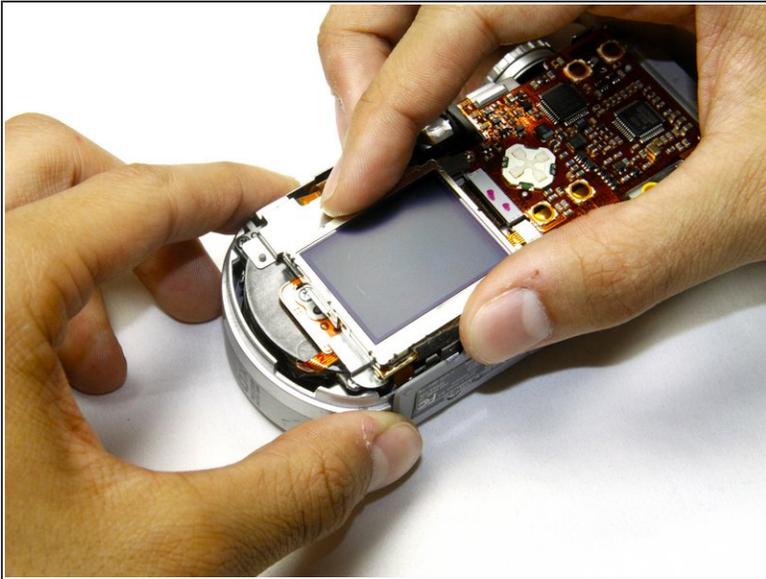


- Unlatch the display by sliding it towards the circuit board.

Step 8

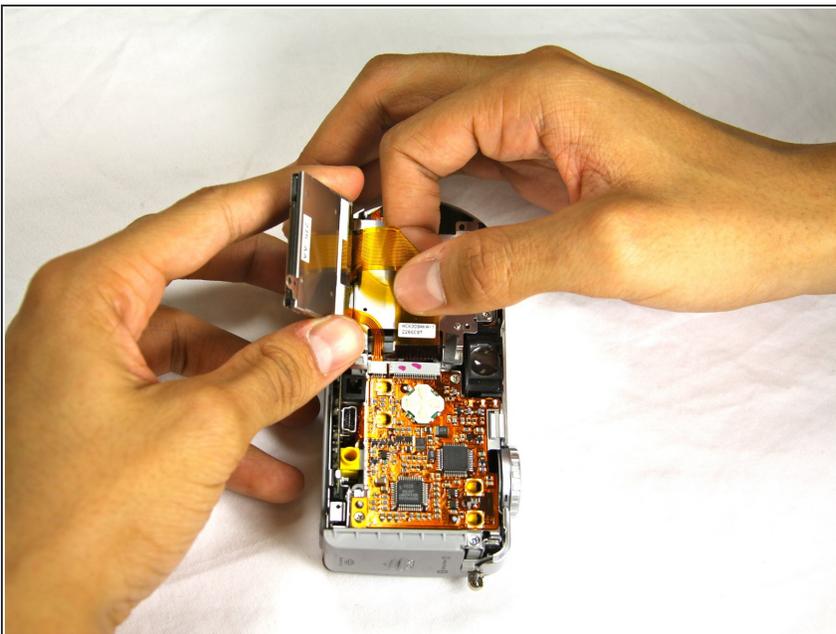

- Remove the two ribbon cables attached to the circuit board by gently pulling them out of their slots.
- ⚠ Be careful not to rip the ribbon cables while disconnecting them.

Step 9

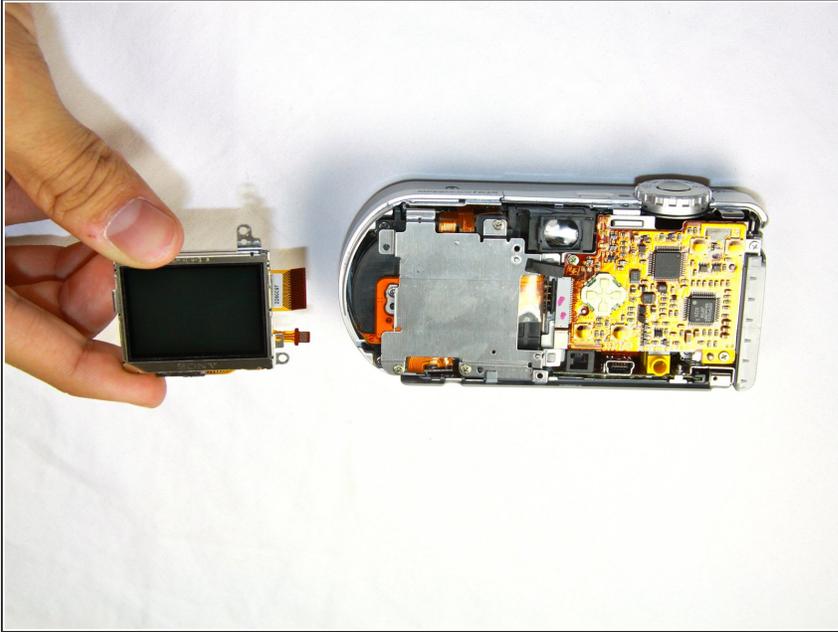

- The LCD is now separated from the camera.

To reassemble your device, follow these instructions in reverse order.