


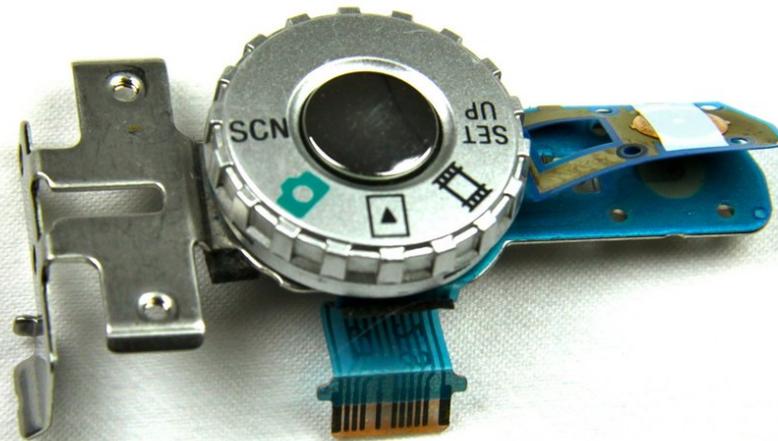

Sony Cyber-shot DSC-P9 Top Button Replacement

Taking off the button on top of the camera.

Written By: Andrew Forster



 **TOOLS:**

- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery



- Slide the battery latch down the side of the camera with your hands.
- The latch will automatically pop open.

Step 2





- Unlatch the clip over the battery.
- The battery will partially pop out.

Step 3




- Remove the battery from the camera.

Step 4 — Outer Casing

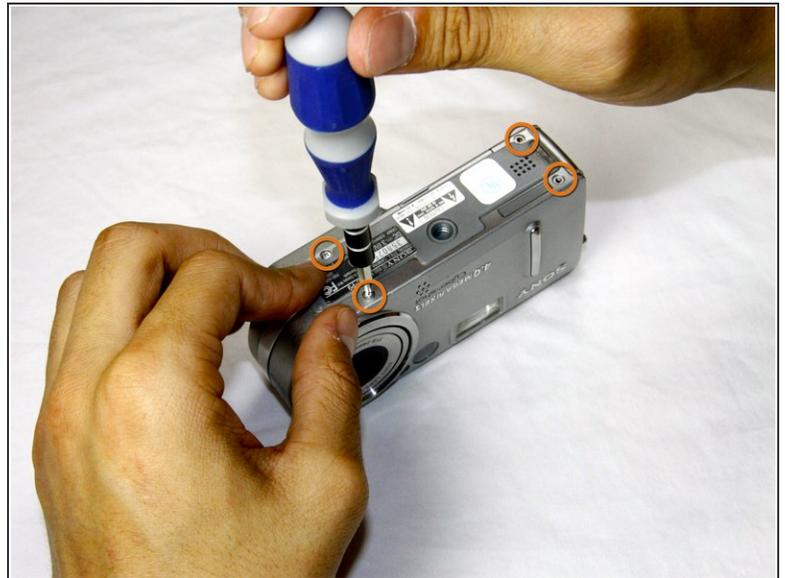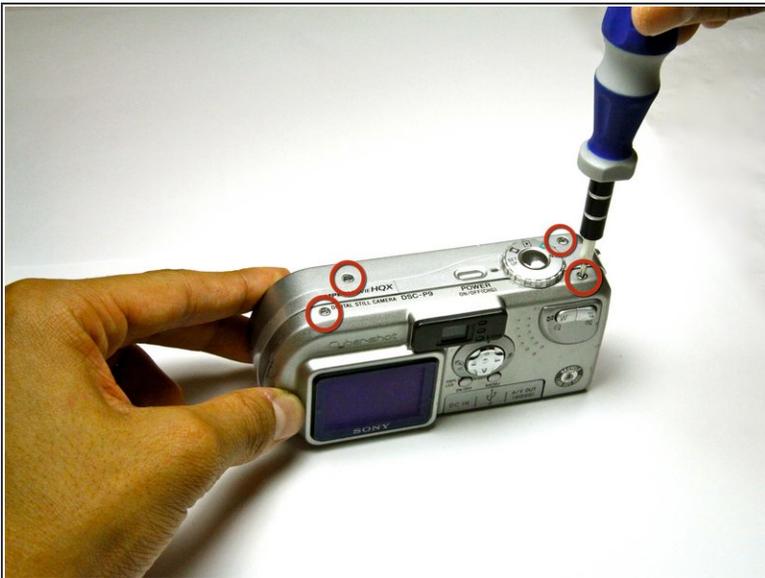


- Remove the four 3.0mm Phillips #000 screws on the top of the camera with the phillips screwdriver.
- Remove the additional four 3.0mm Phillips #000 screws on the bottom of the camera.

Step 5

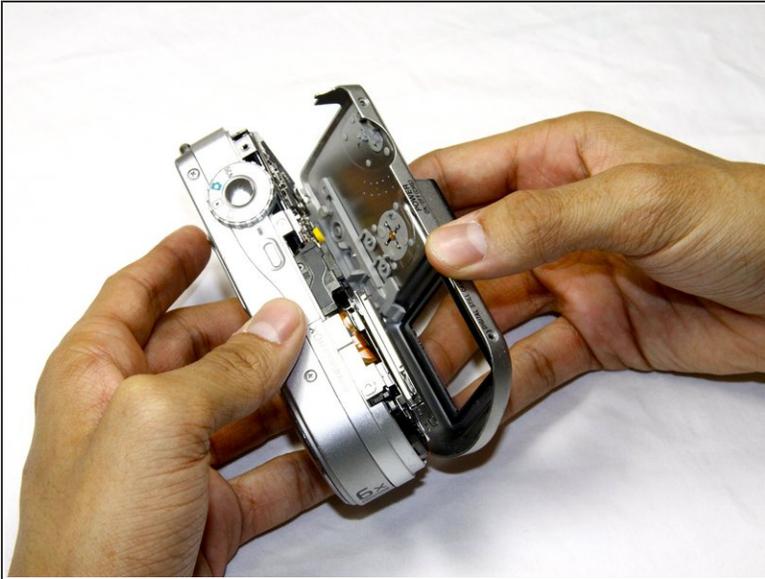

- Once the screws are removed, slowly remove the back casing from the rest of the camera.

Step 6

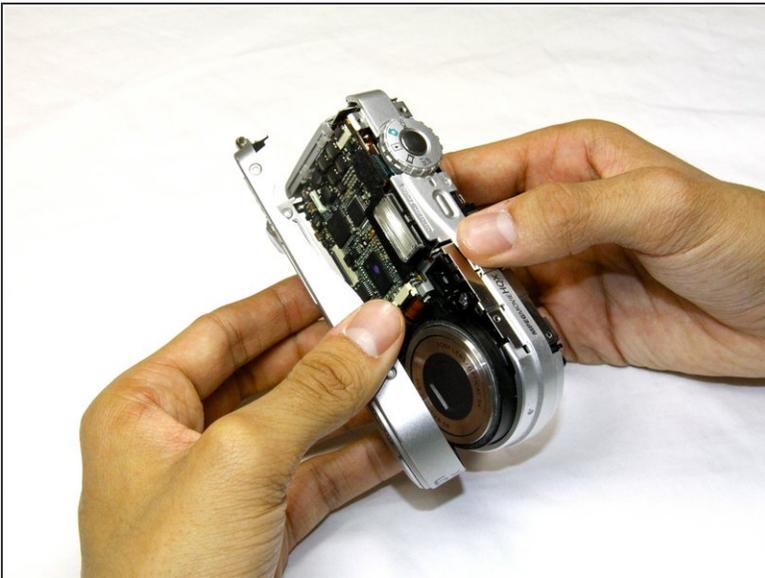

- Then, pull the front case away from the rest of the camera.

Step 7




- After the casing is removed, the camera should look as shown.

Step 8 — Top Button




- Remove the 3.0mm Phillips #000 screw above the battery door on the side of the camera.

Step 9

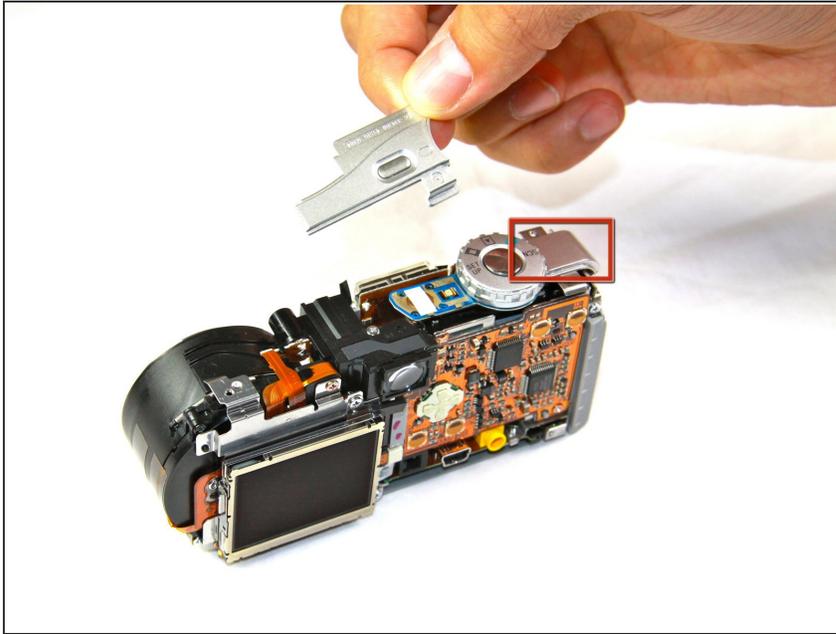

- Pull off the pieces of casing located on either side of the top button of the camera.
- ⓘ Both of the two pieces should slide off very easily. Do not force them off.

Step 10

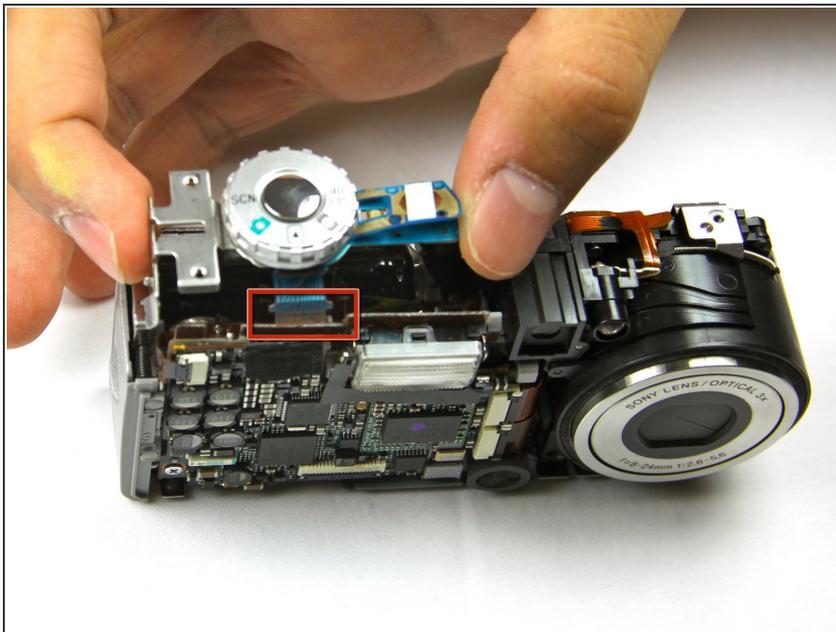

- Remove the top button piece. You will need to detach a small blue ribbon cable before the button can be fully removed.

To reassemble your device, follow these instructions in reverse order.