



Sony Cyber-shot DSC-T500 LCD Screen Replacement

This guide will demonstrate how to remove and replace the LCD touchscreen.

Written By: Chelsea Vitone



 **TOOLS:**

- [Essential Electronics Toolkit \(1\)](#)
-

Step 1 — Remove Case Screws



- There are 4 screws total holding the outer shell of the camera. One on each corner. To reach the bottom two, you have to slide the camera cover up. Vice versa for the top two.
- ⓘ Make sure to remove the battery before taking the camera apart.

Step 2 — Remove Back Panel



- Separate the front and back housings carefully.

 Be careful not to pry it apart as they are connected together by the LCD ribbon cables.

Step 3 — Unplug LCD Ribbon Cables



- Once you have separated the two housings unplug the LCD ribbon cables.

 There should be three. One big one and two small ones

Step 4 — Remove LCD Screen



- Remove the LCD screen from the housing.
- ⓘ You'll have to carefully lift the internal components of the camera in order to remove the LCD screen.

To reassemble your device, follow these instructions in reverse order.