



# Sony Cyber-shot DSC-W570 Battery Replacement

In this guide you will learn how to safely and properly remove the battery of your Sony Cyber-Shot DSC-W570 so it can be replaced or clean the port.

Written By: Anthony



## Step 1 — Battery



- Turn the camera upside down.
- Locate the lock bar and slide to 'open' position.
- *No tools required.*

## Step 2



- Press the blue clip forward, releasing the battery.
- Remove the battery and replace it with a new one.

To reassemble your device, follow these instructions in reverse order.