




Sony DVP-SR200P Power Supply Circuit Board Replacement

Follow this guide in order to remove and replace the power supply circuit board.

Written By: Brian Hua

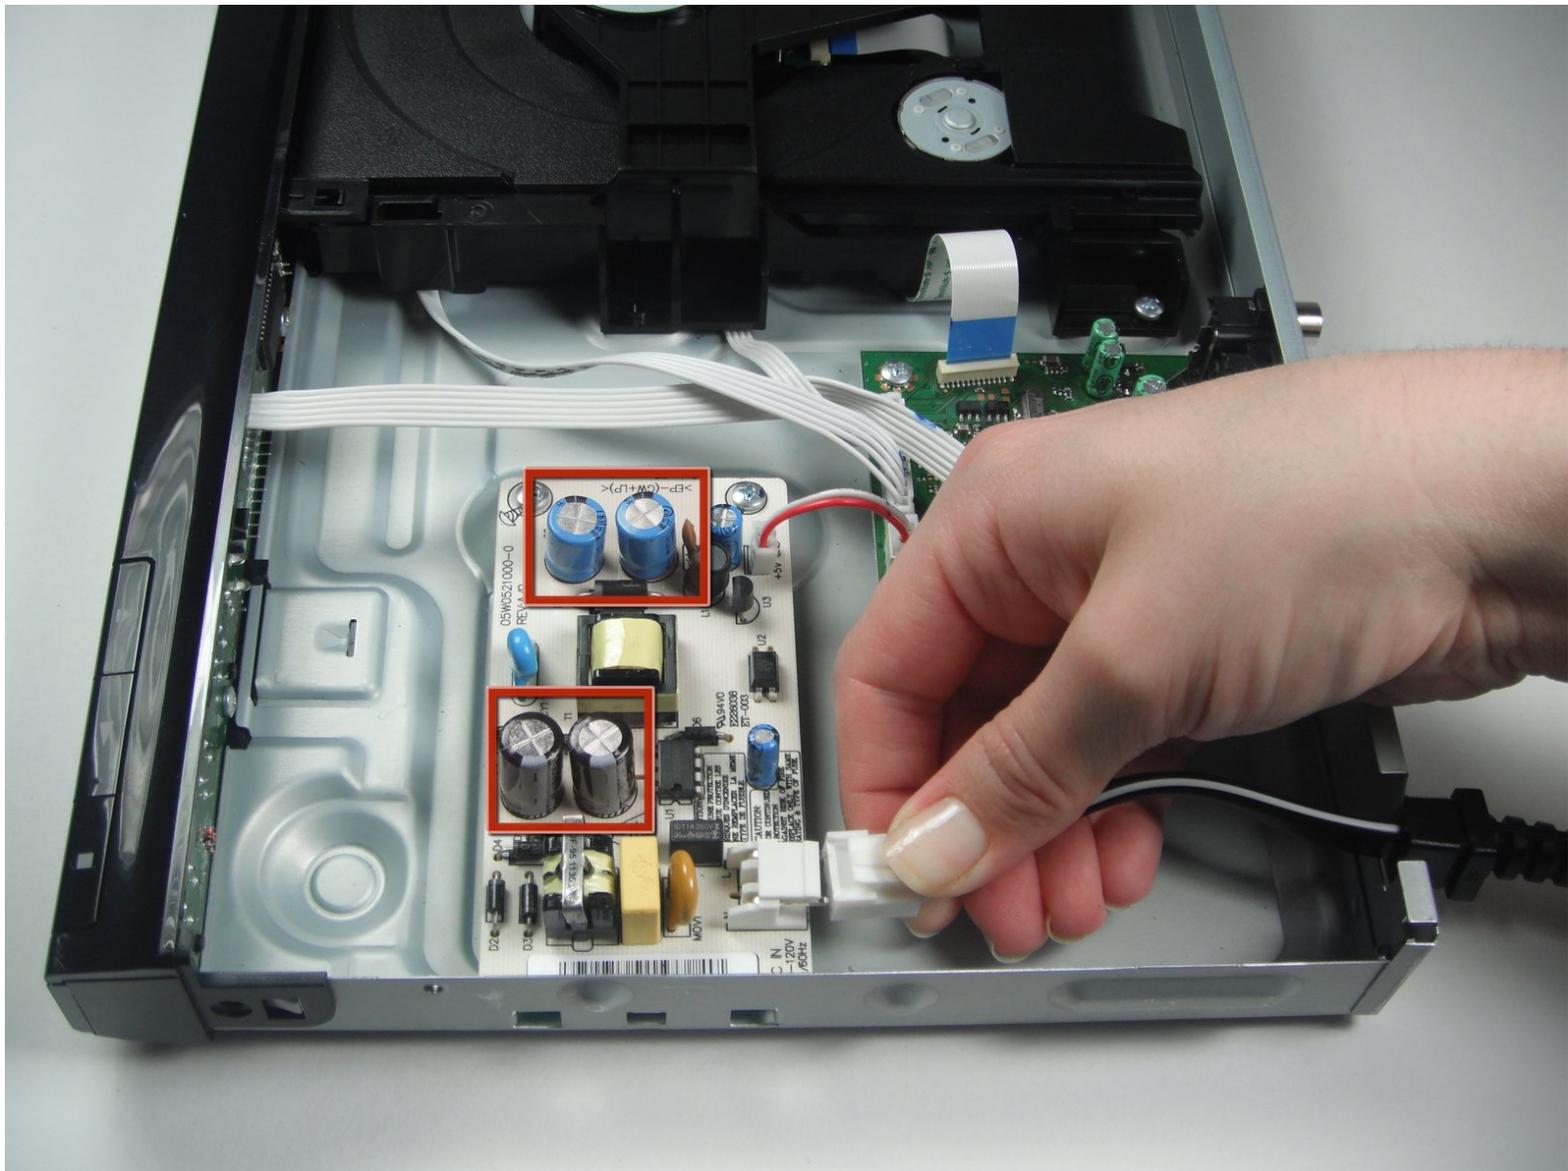

INTRODUCTION

This installation guide allows you to remove the power supply circuit board and power cable.

TOOLS:

- [Tweezers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Top Cover




- Remove the five #1 Phillips screws (black, 3/16") attaching the cover to the DVD player.
 - One 3/16" screw on the right side of the DVD player.
 - One 3/16" screw on the left side of the DVD player (directly opposite of other screw).
 - Three 3/16" screws on the back of the DVD player.

Step 2





- Slide the cover away from the front of the DVD player until it is off.

Step 3 — Processing Board

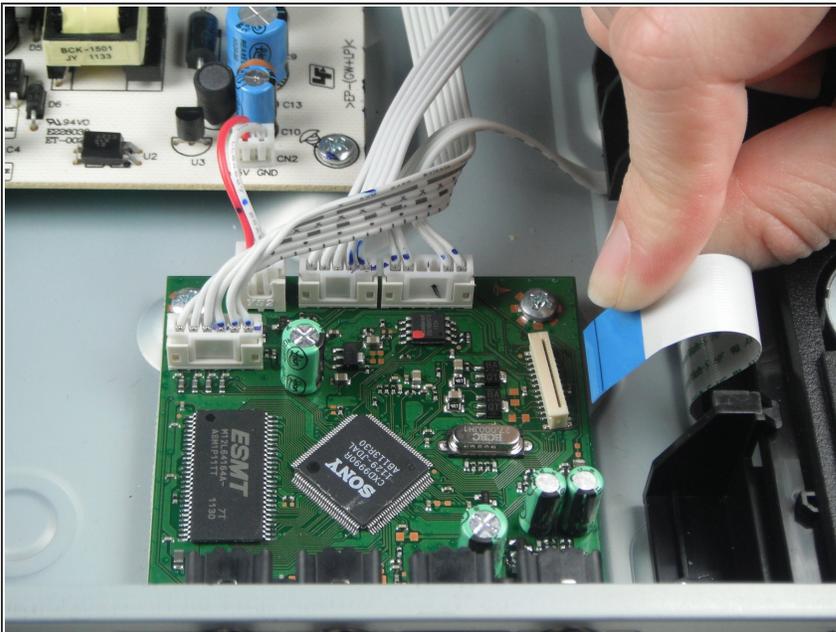


- Remove the blue tape from the processing board by gently pulling upward.

Step 4

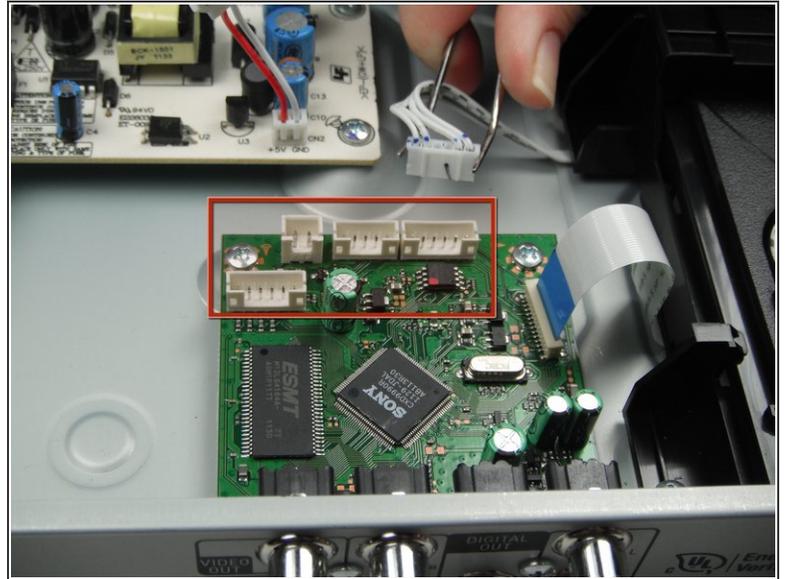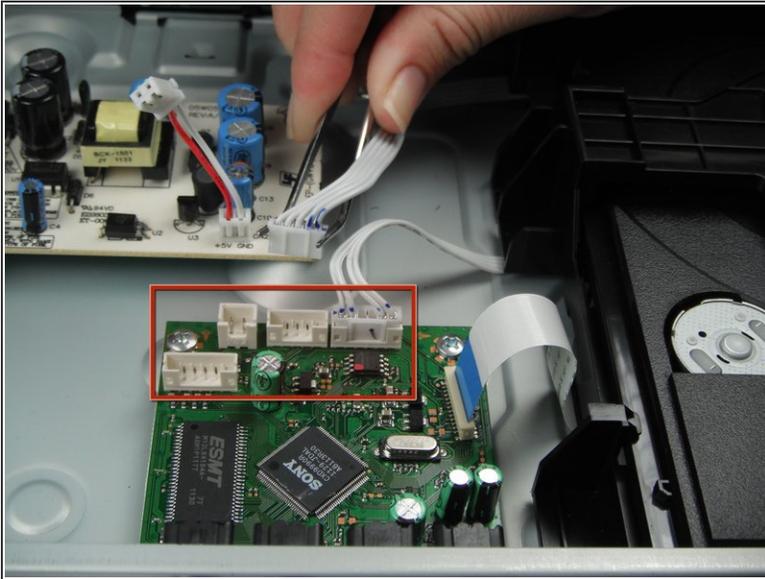

- Use the tweezers to remove the four sets of wires connected to the processing board. Start with the cord located in front of the row of three cords.
- ⓘ The wires may be difficult to remove. Wiggling them while lifting them up may help remove them.

Step 5

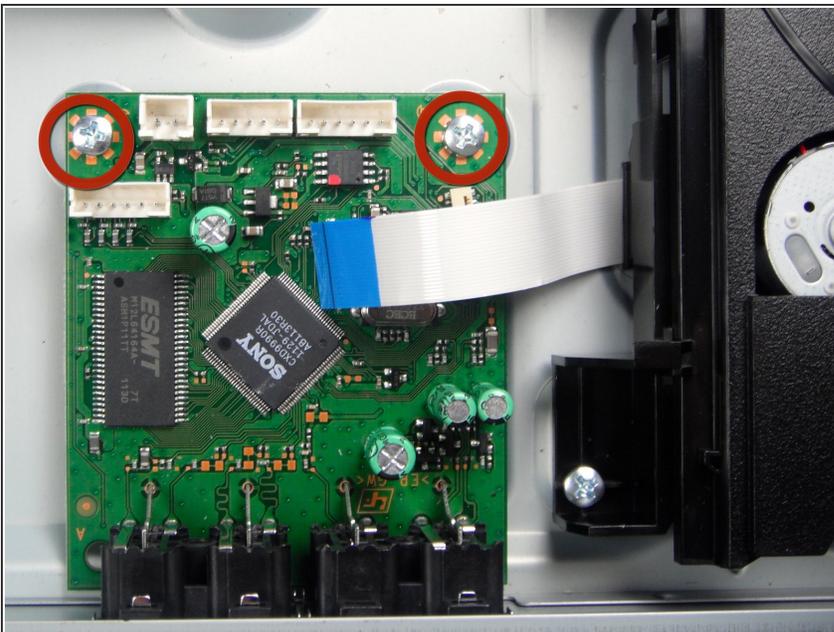

- ⚠ Handle the processing board with care. It is fragile.
- Unscrew the two #1 Phillips screws (silver, 3/16") located on the two edge corners of the processing board.

Step 6




- Orient the DVD player so that you are facing the video and audio jacks.
- Unscrew the two #1 Phillips screws (silver, 3/16") located on the outside of the DVD player
- ⓘ The processing board is now free to be removed and replaced.

Step 7 — Power Supply Circuit Board



- ⚠ **Caution:** The circuit board contains capacitors (they look like cylinders) that can shock you if they discharge. Be careful not to touch them as you work. If possible, use a [capacitor discharge probe](#) to safely rid the capacitors of dangerous charges.
- Unhook the power supply connector from the power supply board by pressing down on the small latch.

Step 8

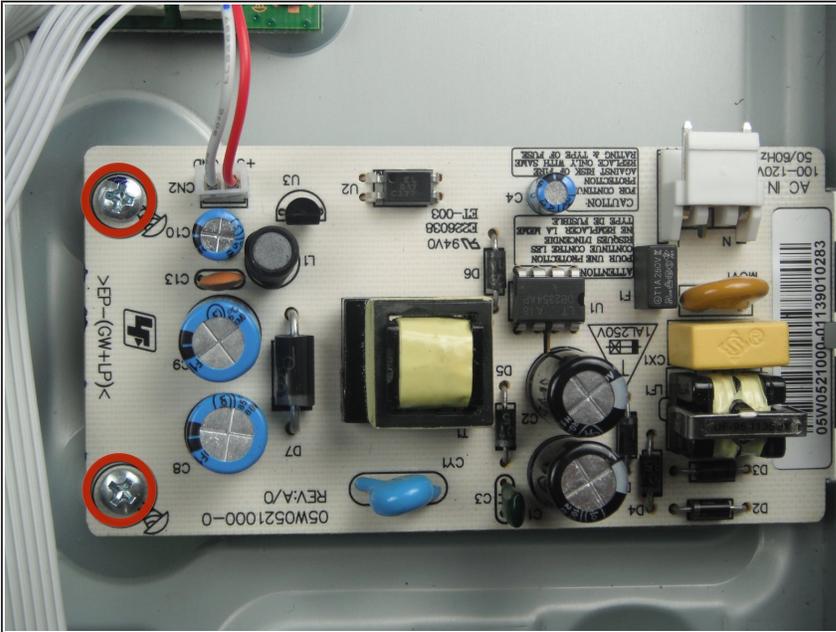

- Orient the DVD player so the back of the DVD player is opposite of you.
- Unscrew the two #1 Phillips screws (silver, 3/16") that attach the power supply circuit board to the bottom of the DVD player.

To reassemble your device, follow these instructions in reverse order.