


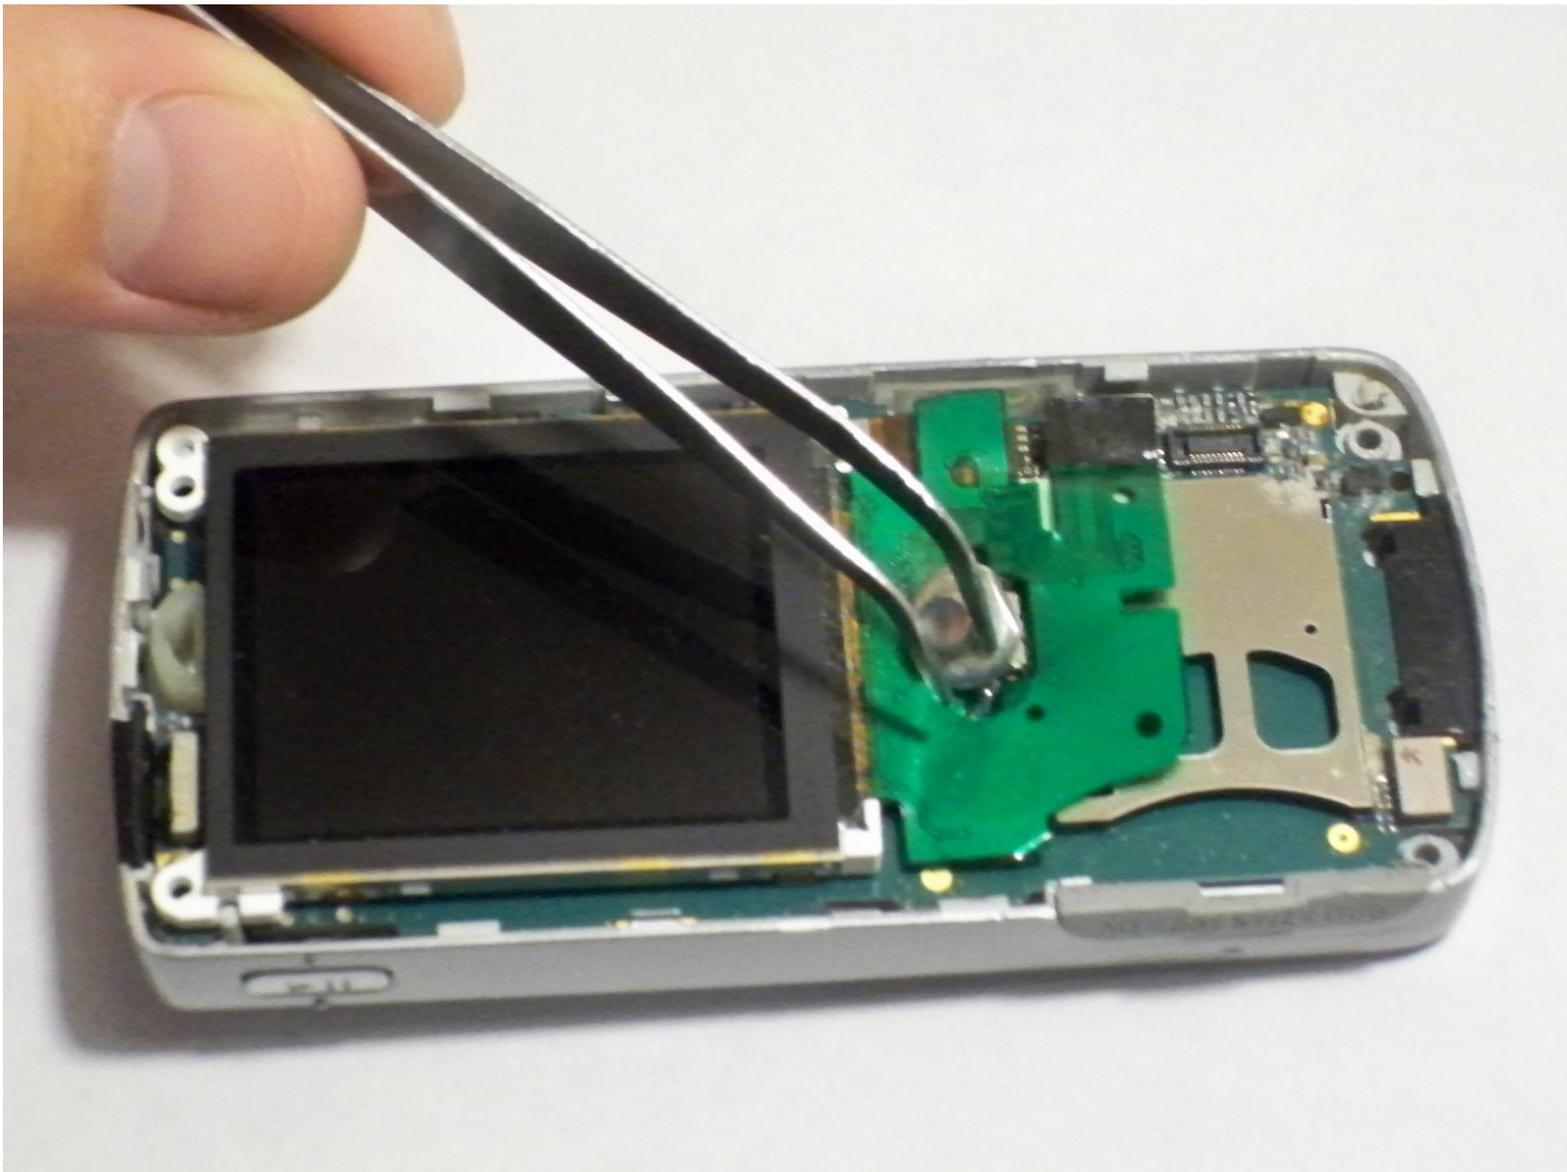

Sony Ericsson K750i Joystick Replacement

This guide will illustrate the removal or replacement of the joystick.

Written By: Abby Evers



 **TOOLS:**

- Phillips #0 Screwdriver (1)
- Flathead 3/32" or 2.5 mm Screwdriver (1)
- T6 Torx Screwdriver (1)
- Tweezers (1)

Step 1 — Battery Cover



- Remove the battery cover.
- Press down firmly with your thumb and slide the cover back.

Step 2 — Back Casing




- Remove two Phillips #0 screws from the battery chamber.
- Remove two Torx T6 screws from the battery chamber.

Step 3



- Gently pry off the back casing.
- ⓘ Work an opening tool around the entire seam before attempting to pull off the casing. This action will reduce the chance of cracking the casing.

Step 4

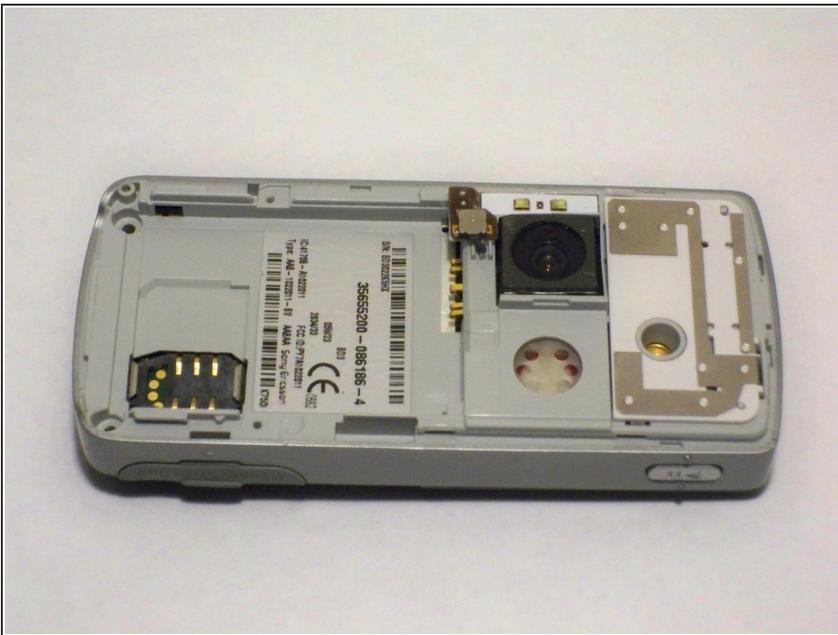

- Remove the casing to expose the camera's components.

Step 5 — Keypad




- Gently pry open the front casing by working an opening tool along the entire seam.

Step 6



- Remove the front casing by gently lifting it from the phone.
- ⓘ Be careful not to pull off any other delicate pieces.


Step 7

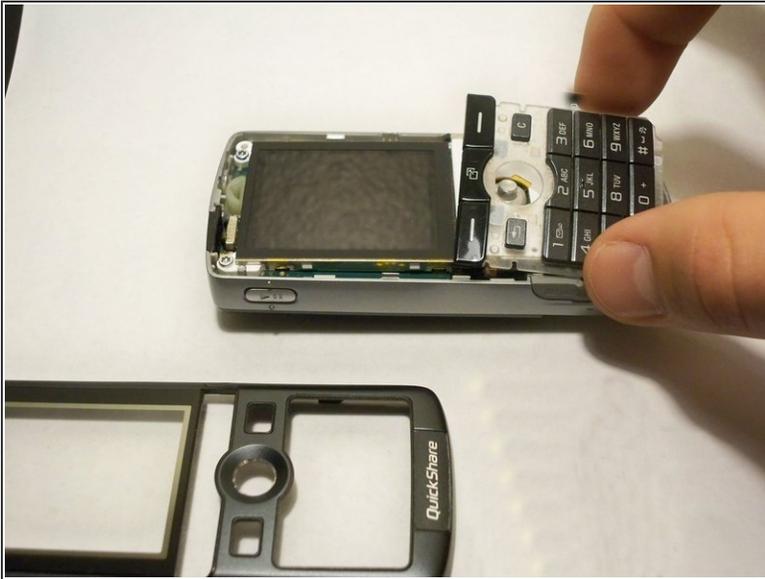

- Remove the keypad.

⚠ The LCD screen is very fragile. Be careful not to catch the keypad on it while removing.

Step 8 — Joystick

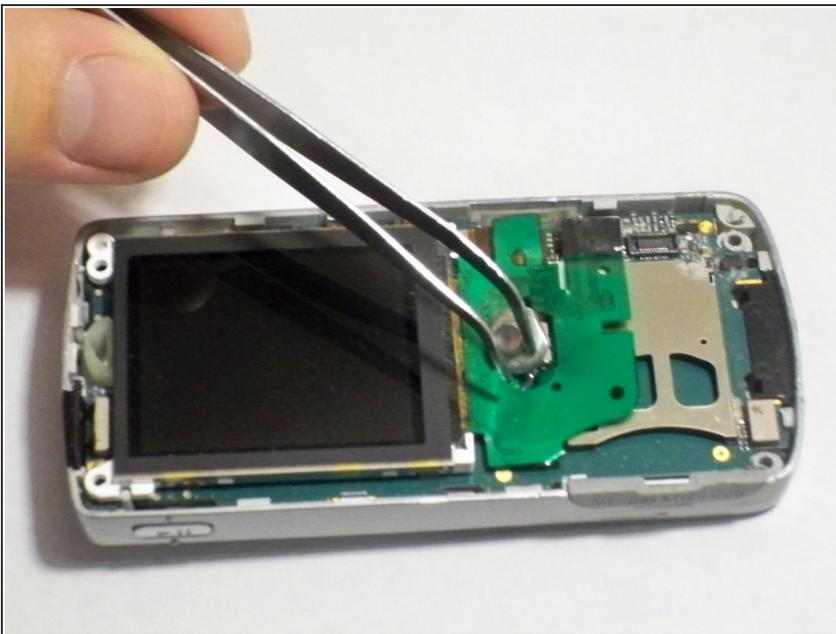

- Use tweezers to get a grip on the joystick
- Pull off
- **Warning:** the green film surrounding the joystick is fragile. Take care not to puncture or rip it.

To reassemble your device, follow these instructions in reverse order.