



Sony Handycam HDR-CX220 Camera's Body Replacement

Remove the body casing to access the components inside the camcorder.

Written By: Keven



INTRODUCTION

This procedure only requires 2 tools and the most difficult part will be pulling the case off with your hands without breaking it.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Push in the battery indicator.

Step 2



- Slide the battery out of the slot.
- ★ To put the battery back in, line up the battery's metal part with the camera's and slide it in.

Step 3 — Camera's Body




- Use the Phillips #0 screwdriver to remove the two 5mm screws.
- Use the Phillips #0 screwdriver to remove the two 5mm screws.
- Use the Phillips #0 screwdriver to remove the three 5mm screws.

Step 4



- Use the plastic opening tool to loosen the plastic case of the camcorder.

Step 5

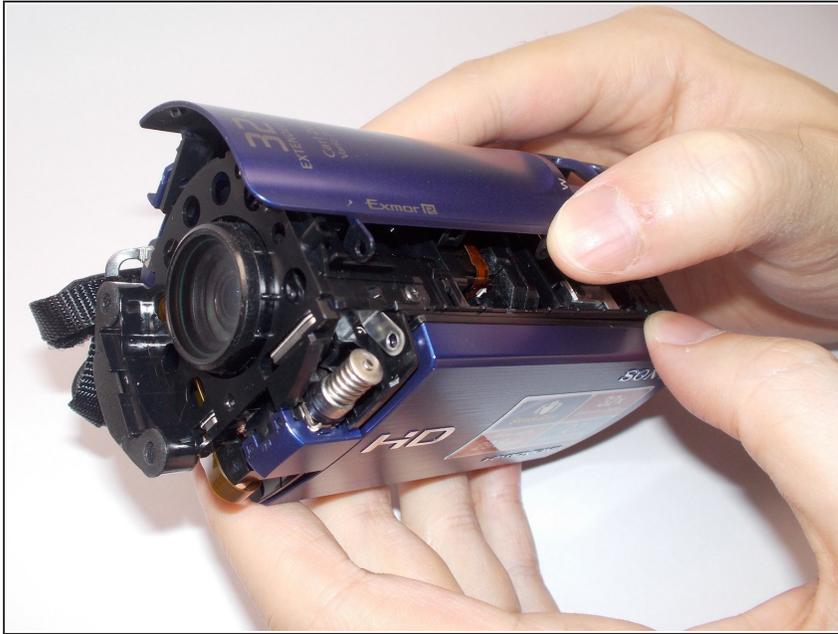

- Use your hands to remove the plastic case.
- ⚠ Gently pull on the case not to damage anything internally.

To reassemble your device, follow these instructions in reverse order.