



Sony NEX-5R Front Case Replacement

This guide will help you remove the front case of your Sony NEX-5R.

Written By: Emily Trujillo



INTRODUCTION

We will be teaching you the proper way to disassemble your Sony NEX-5R so that you can replace your front case. This will be helpful to those that have damaged the front case and are looking to fix it by themselves.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Front Case




- Open the battery pack door by moving the slider to "OPEN".
- Remove the 3.25 mm silver screw inside the battery pack with a Phillips screwdriver.

Step 2



- Remove the 3.25 mm exterior screw with a Phillips screwdriver.

Step 3

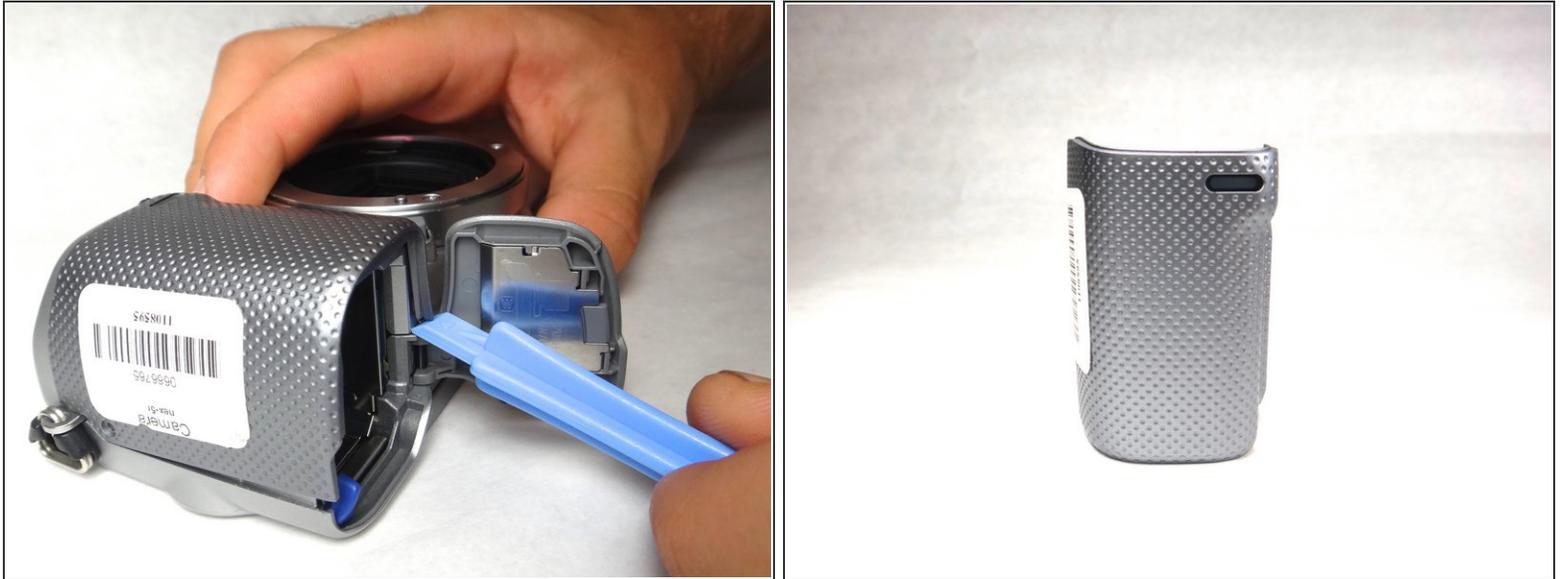

- Use the spudger to raise the corner of the case from the camera.
- One component of the front case should now be separate from the camera.

To reassemble your device, follow these instructions in reverse order.