



Sony VAIO PCG-61611L Hard Disk Drive Replacement

The guide will showcase how to replace the battery on the Sony VAIO PCG-61611L.

Written By: Christopher Hover



INTRODUCTION

This guide shows how to remove/replace the hard disk drive on the Sony VAIO PCG-61611L laptop computer.

TOOLS:


- [JIS #0 Screwdriver](#) (1)
-

Step 1 — Battery



- ⚠ Ensure that the laptop is powered off before disconnecting the battery.
- Flip the laptop over so the underside of the laptop is facing up.

Step 2

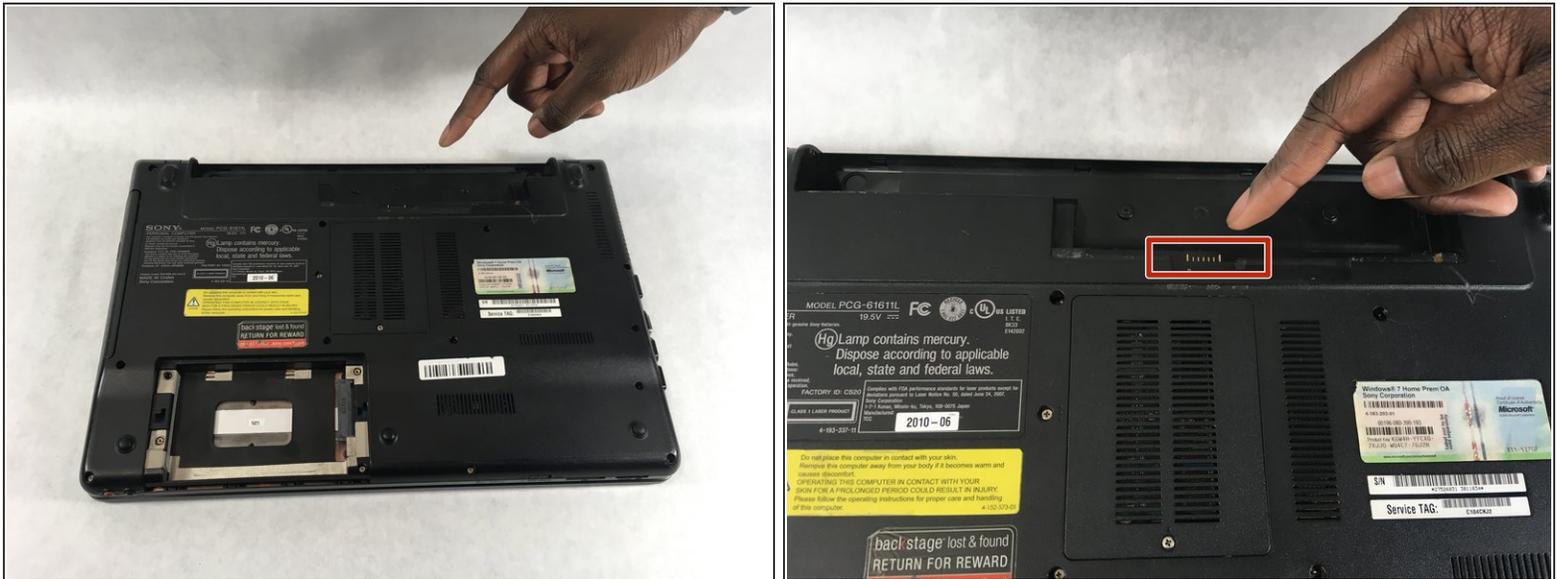

- Slide the two tabs towards each other until the battery disconnects slightly from its position.
 - Carefully lift the battery out of its position away from the laptop.
- i** The battery is not pictured here, since it is missing from this particular device.

Step 3 — Hard Disk Drive



- Using a JIS #0 screwdriver, remove the two 4mm screws securing the hard drive cover to the laptop.
- Lift the hard drive up and out of its place.
- ⓘ The drive cover and hard drive are not pictured. They are both missing from this particular device.

To reassemble your device, follow these instructions in reverse order.