



Sony VAIO PCG-933A Hard Drive Replacement

Rent a new storage unit.

Written By: Sara Lillard



INTRODUCTION

This repair guide shows how to replace your hard drive.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Turn the laptop upside down
- The battery is located on the front right side of the laptop; the opposite side from the floppy disk drive.

Step 2




- As shown by the arrow, slide the plastic cover up and then pull out and downwards.
- You should now be able to pull the battery out.

Step 3 — Keyboard



- Remove the four 16mm Phillips screws bordering the edge of the laptop, indicated here.

Step 4

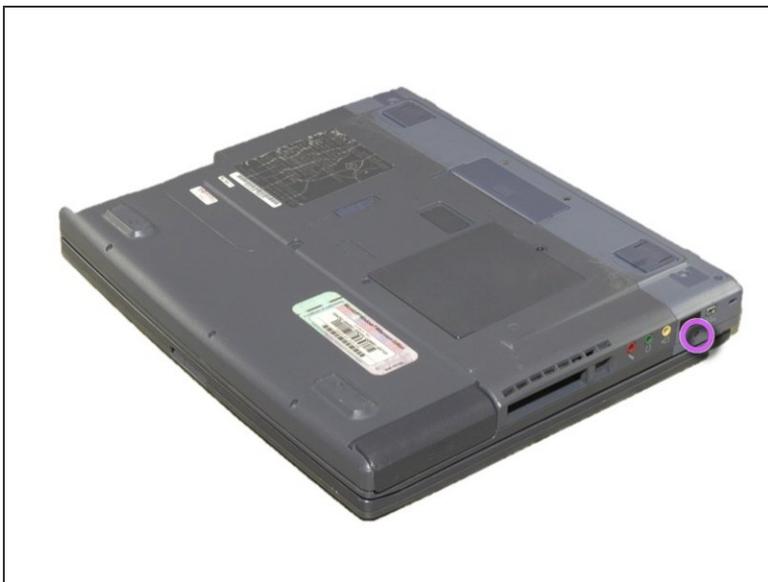


- Remove the 4mm Phillips screw on the right rear side of the laptop next to the audio ports.
- This will release the speaker grille.

Step 5



- Flip the computer back over and open the screen.

Step 6

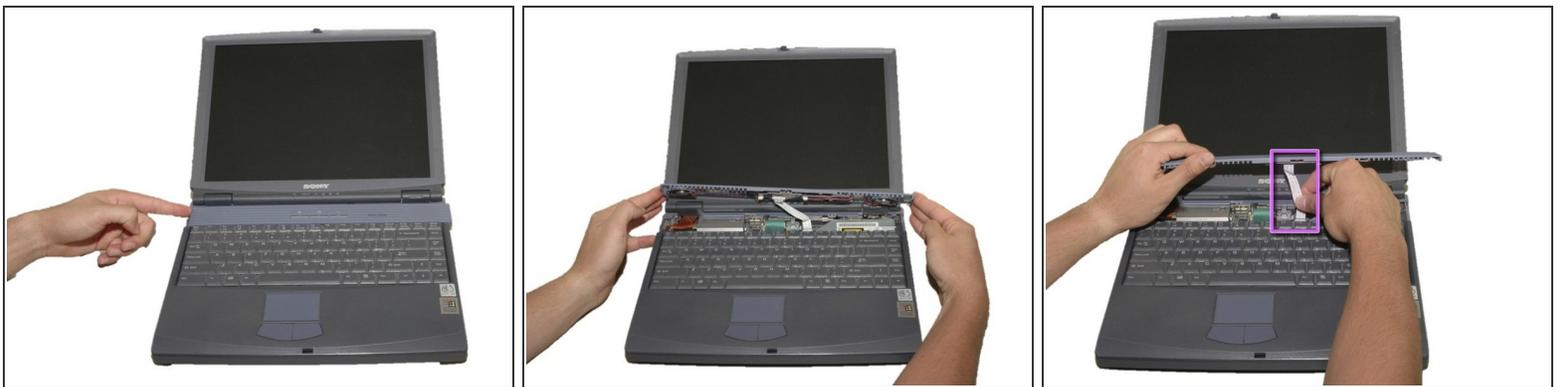

- Slide the blue speaker grille (located above the keyboard) to the right and gently pull upward. The grille will still be connected by a white electrical strip.
- Carefully pull out the white electrical strip.

Step 7



- Remove the 4mm Phillips screw in the center (located to the left of the green strip).
- Carefully pull the green strip straight up to disconnect it.
- The keyboard can now be removed.

Step 8 — Hard Drive



- Remove the two 4mm Phillips screws in the center of the computer located on each side of the copper electrical strip.

Step 9




- Remove the four 4mm Phillips screws around the hard drive cage.

⚠ WARNING: DVD drive is now loose as well.

- Carefully lift the hard drive cage out.
- Carefully disconnect the copper strip to pull out the hard drive.

Step 10

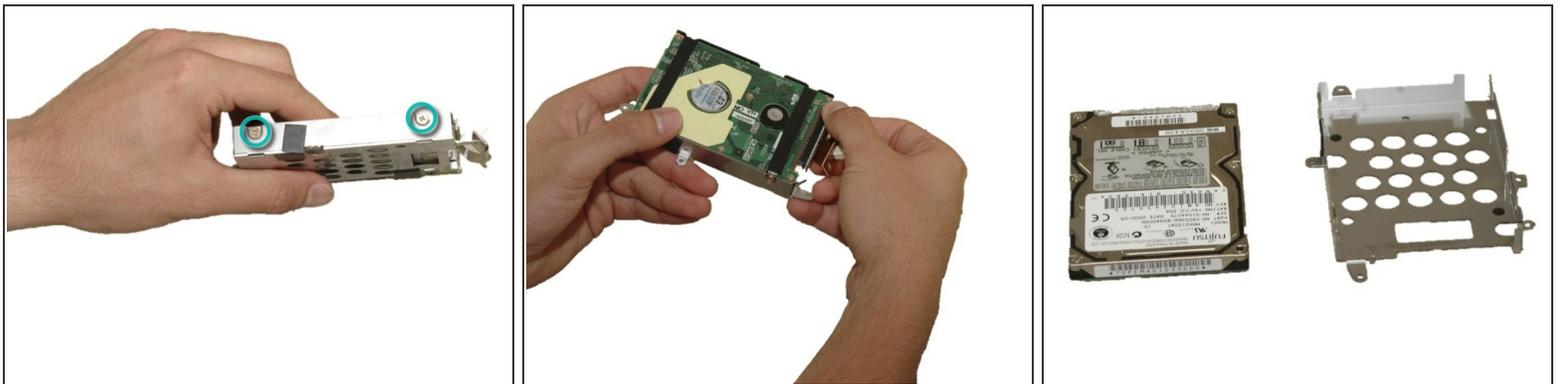

- Remove the four 4mm Phillips screws that hold the hard drive in the hard drive cage.
- Gently remove the hard drive from the cage.
- Gently remove the copper electrical strip from the harddrive.

To reassemble your device, follow these instructions in reverse order.