



Sony Vaio Fit SVF14A190X Battery Replacement

Battery replacement for the Sony Vaio Fit SVF14A190X.

Written By: Randal Crosby



INTRODUCTION

This is an easy to follow, step by step guide to help aid in the replacement of the battery for the Sony Vaio Fit SVF14A190X. The battery is a vital component to the device to ensure it can properly operate.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Battery Replacement



⚠ Make sure the battery is drained or the computer is turned off.

- Use the Phillips head screw driver to remove the eleven 6 mm screws.
- Use the Phillips head screw driver to remove the one 4 mm screw securing the CD drive.

Step 2

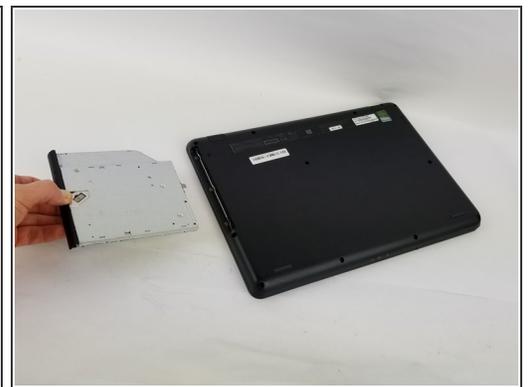

- Insert the plastic opening tool into the slit of the CD drive.
- Then pull it outwards.
- Grab the CD drive with your hand.
- Take the CD drive all the way out.

Step 3



- Insert the plastic opening tool into the slit between the back cover and the rest of the computer.
- Move the plastic opening tool around all sides of the device.
- Peel off the back cover.

Step 4



- Use the Phillips head screw driver to remove the four 7 mm screws.
- Lift the battery out with your hand.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-11-07 04:24:42 PM (MST).

