



Sony Vaio PCG-81114L Disk Drive Replacement

Follow this guide to replace a Sony Vaio PCG -81114L disk drive.

Written By: Haylie Hotte



INTRODUCTION

The disk drive replacement is intended to show a simple way to remove and replace a disk drive.

Note: Do not pull disk drive out with force, as it can damage disk drive panel.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Disk Drive



- Remove the 9mm Phillips #1 screw holding the disk drive in place.
- Remove the 9mm screw near the memory stick.

Step 2



- Using an iFixit opening tool, carefully pry the disk drive away from the device.

To reassemble your device, follow these instructions in reverse order.