



# Sony Xperia Z5 Main Flex Replacement

Main Flex also known as side button flex. Can you power on/off the screen? Or can you turn up/down the volume? How about using camera by shutter button? Sometimes, not your buttons broken but the main flex didn't work. So this video will show you how to r

Written By: Witrigs



## INTRODUCTION

Main Flex also known as side button flex. Can you power on/off the screen? Or can you turn up/down the volume? How about using camera by shutter button? Sometimes, not your buttons broken but the main flex didn't work. So this video will show you how to remove the main flex cable in your Sony Xperia Z5.

[video: <https://www.youtube.com/watch?v=OBvueomF-ew>]

### TOOLS:

- [Hair Dryer](#) (1)
- [Suction Handle](#) (1)
- [iFixit Opening Picks set of 6](#) (1)
- [Heavy-Duty Spudger](#) (1)
- [Tweezers](#) (1)
- [Phillips #000 Screwdriver](#) (1)

### PARTS:

- [Sony Xperia Z5 Side Button Cable Assembly](#) (1)
- [Sony Xperia Z5 Back Cover Adhesive](#) (1)

To reassemble your device, follow these instructions in reverse order.