




TOSHIBA Satellite E45W-C4200X DC Power Jack Replacement

Use this guide to replace the DC power jack in your Toshiba Satellite E45W-C4200X.

Written By: masato tsuchida

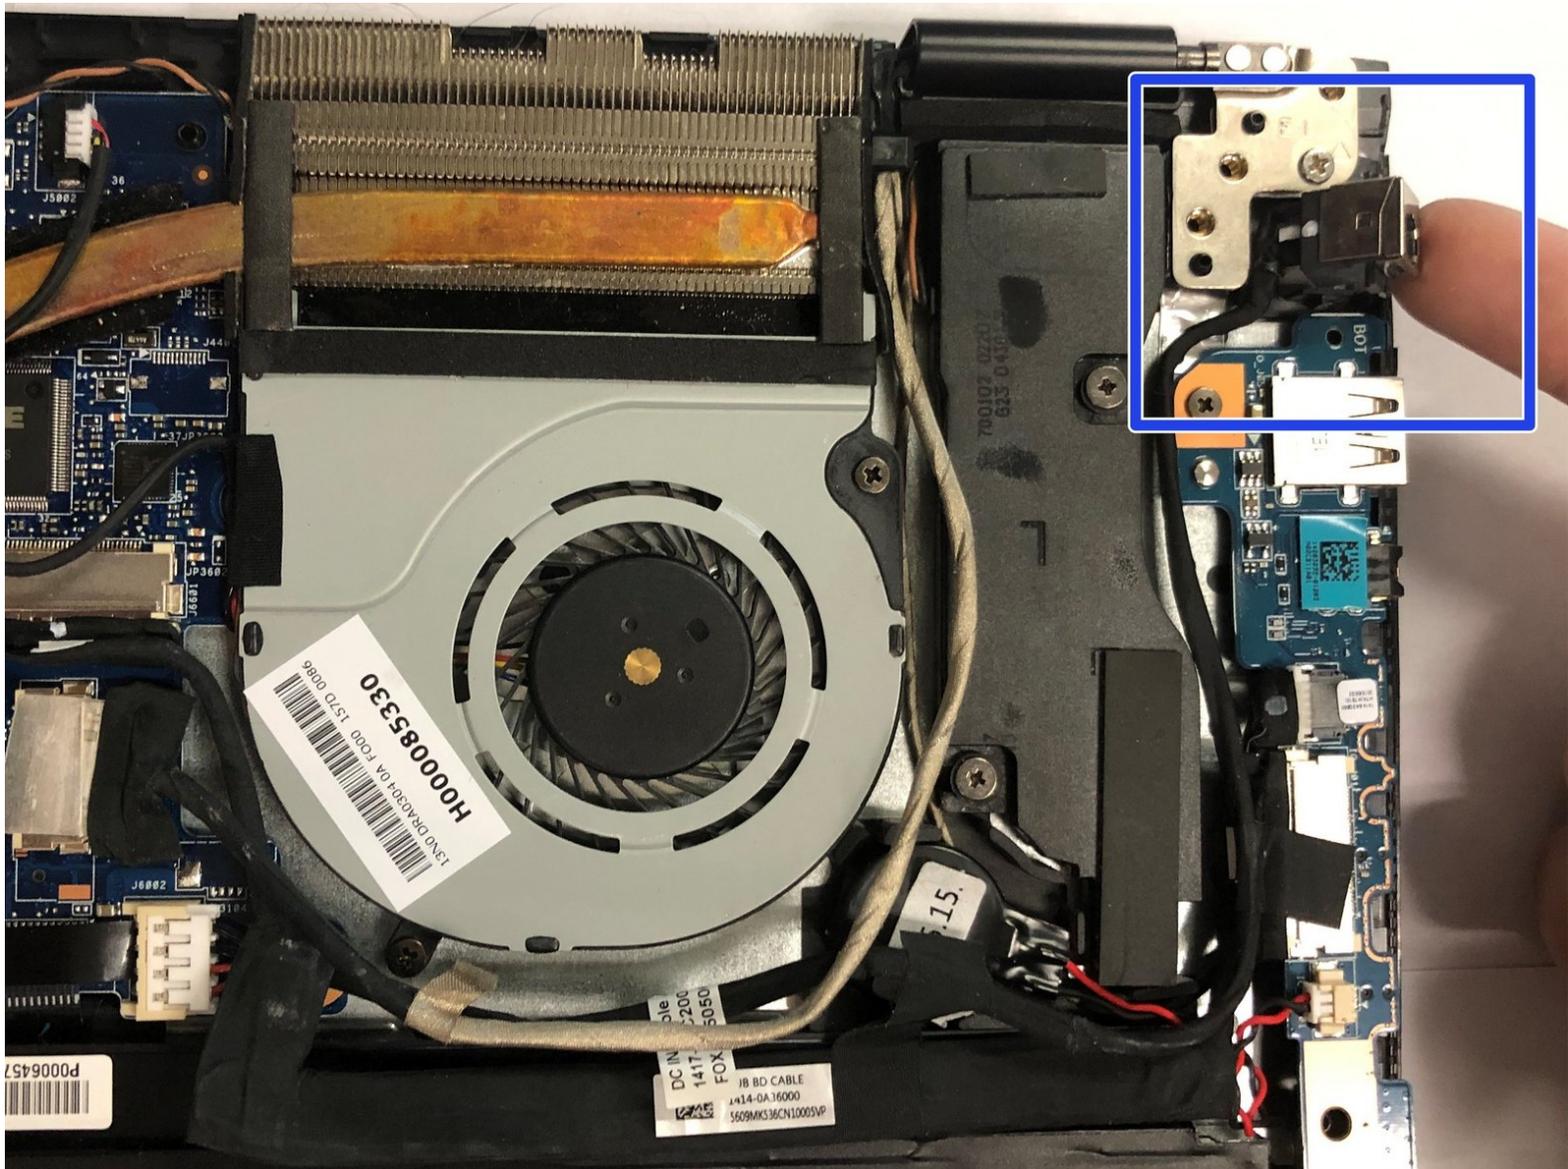

INTRODUCTION

This guide will walk you through the necessary steps for replacing the power jack on your Toshiba Satellite E45W-C4200X.

The power jack has been a common problem with the Toshiba Satellite laptops and the replacement is quick and relatively inexpensive.

Before using this guide, make sure to review the [troubleshooting page](#) to ensure this replacement is necessary.

Make sure to power off your laptop completely and disconnect from any external power source prior to beginning the process.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [Toshiba Satellite DC Power Jack Cable](#) (1)
-

Step 1 — DC Power Jack




- Remove the ten 1 mm screws that secure the back cover using a Phillip's #1 screwdriver.

Step 2



- Use plastic opening tool to separate the back cover from the laptop.
- ⚠ Go slowly and be careful as the plastic can crack.
- ℹ It is recommended that you start from a corner and run the tool along the edge

Step 3

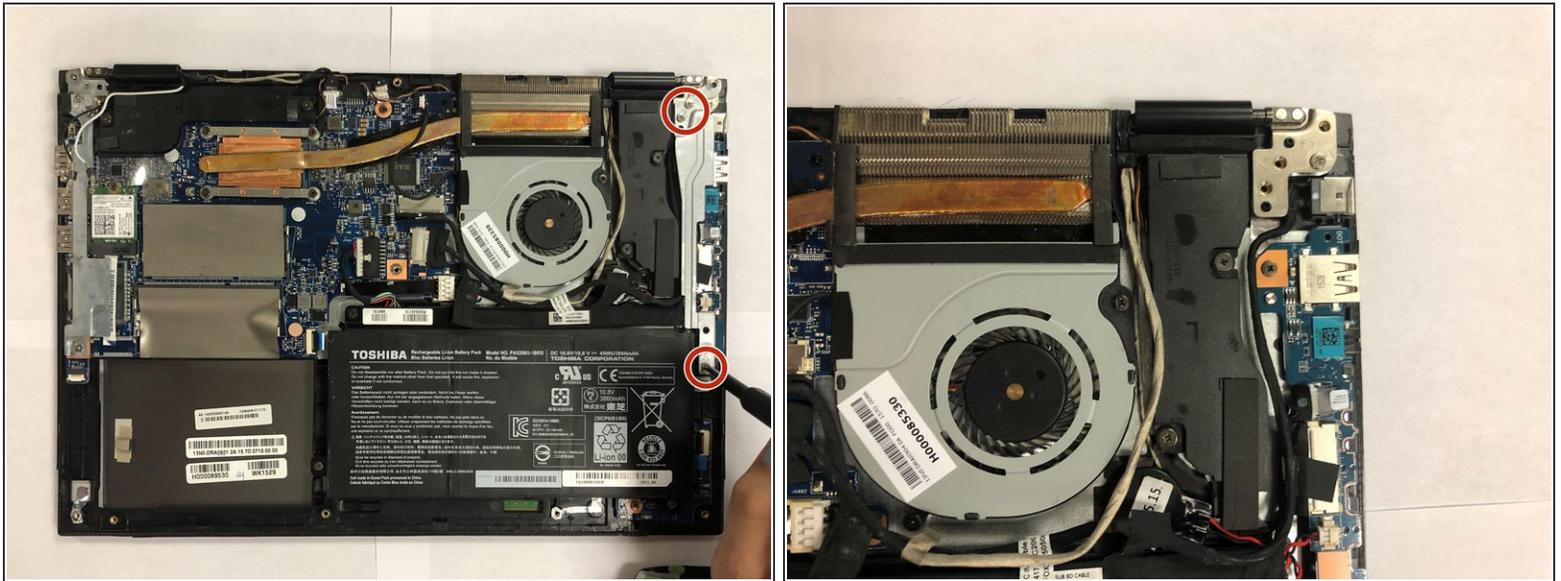

- Using a Phillips # 1 screwdriver, remove the three screws holding the bracket over the ports on the right side.
- Remove the bracket.

Step 4



- Unplug the power cable harness from the motherboard.
- Lift the power jack out of its slot in the top right corner.
- Remove the cable.

To reassemble your device, follow these instructions in reverse order.