



Timex W-10 Children's Watch Battery Replacement

If your Timex W-10 children's watch needs a battery replacement, this guide will help if there are any questions concerning how to change the battery.

Written By: Tarik Ihmoud




INTRODUCTION

If your Timex W-10 children's watch needs a battery replacement, this guide will help if there are any questions concerning how to change the battery.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

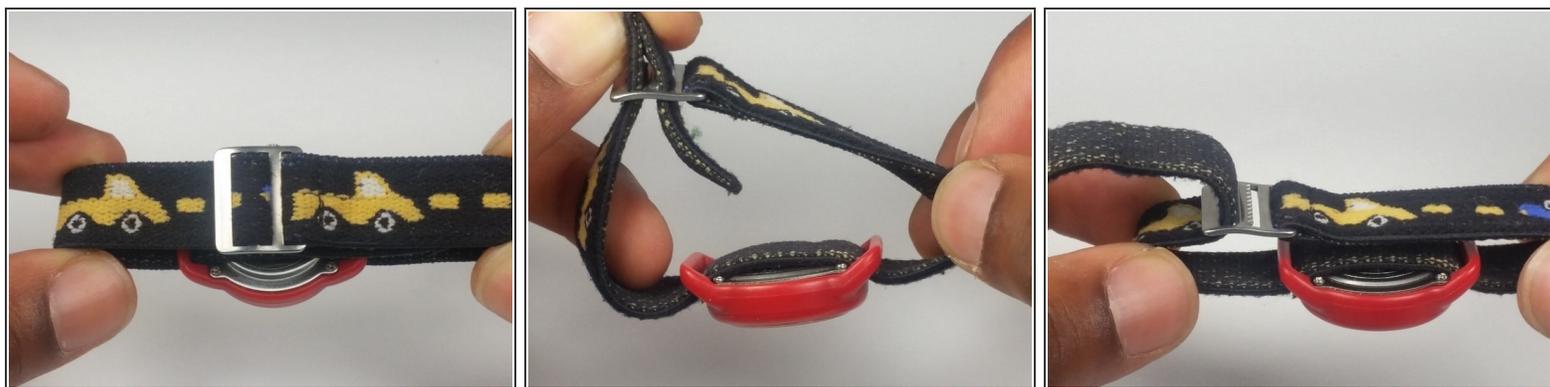

- Pull on the watch strap through the top of the strap buckle to unlock the strap.

Step 2



- Once the strap has been unlocked, hold onto the strap buckle and pull away from the watch to completely remove the band.

Step 3



- Use the PH00 screwdriver to remove the four screws from each corner of the rear metal cover.

Step 4



- Gently remove the back plate to expose the battery.

Step 5



- The battery spring will propel the battery upward as soon as the base cover is removed. Be sure to place the battery in a safe spot.

To reassemble your device, follow these instructions in reverse order.