



# Toshiba Excite 7c Battery Replacement

This guide will show you how to replace the battery on your Toshiba Excite 7c.

Written By: Reyna Serrato



---

## INTRODUCTION

This guide will show you how to replace the battery on a Toshiba excite 7c. The battery may need to be replaced because it is not holding a charge or the tablet will not turn on. Once the tablet case is open, battery replacement is rather easy and requires only a set of tweezers.


**Be careful not to pull the wires of the connector while performing this repair.**

---

### TOOLS:


- [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Open Device

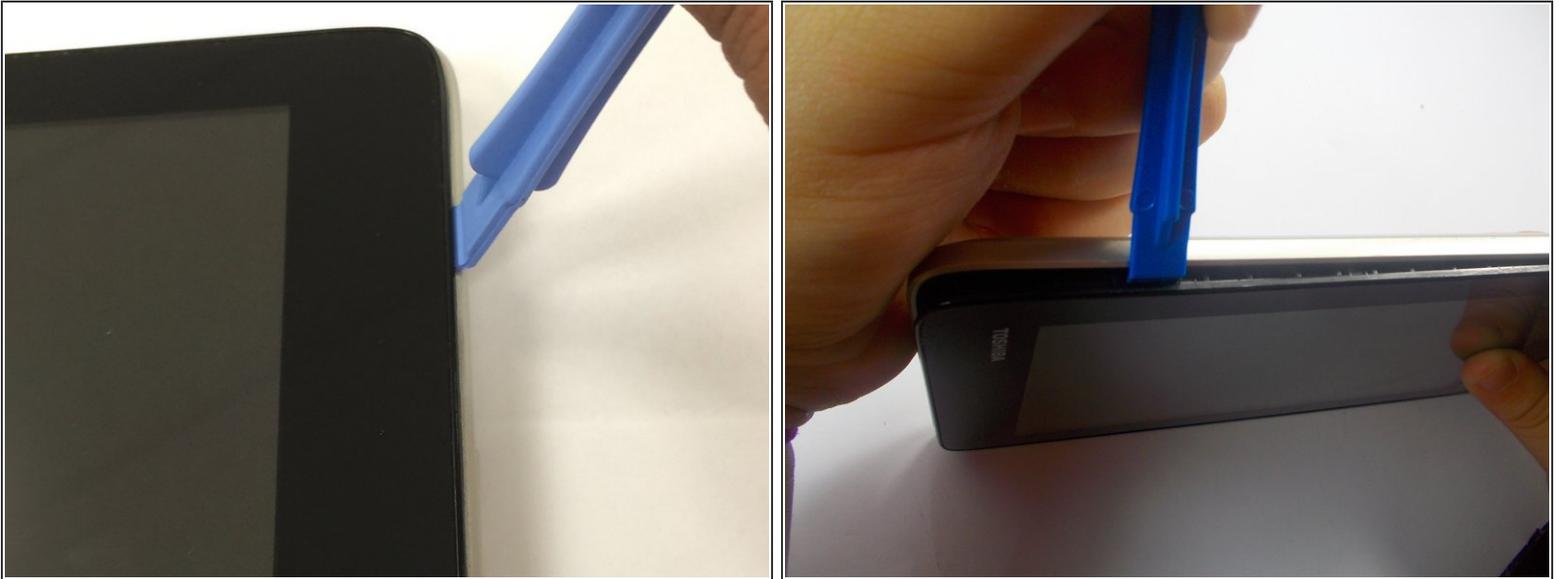

- To open your device use the plastic opener. Locate the seam on your device and gently separate applying pressure down all four sides.
- The back casing will start to peel away from the screen.
- Carefully lift and remove the back panel with tablet lying face down on table. this will reveal the back side.

## Step 2 — Remove Battery

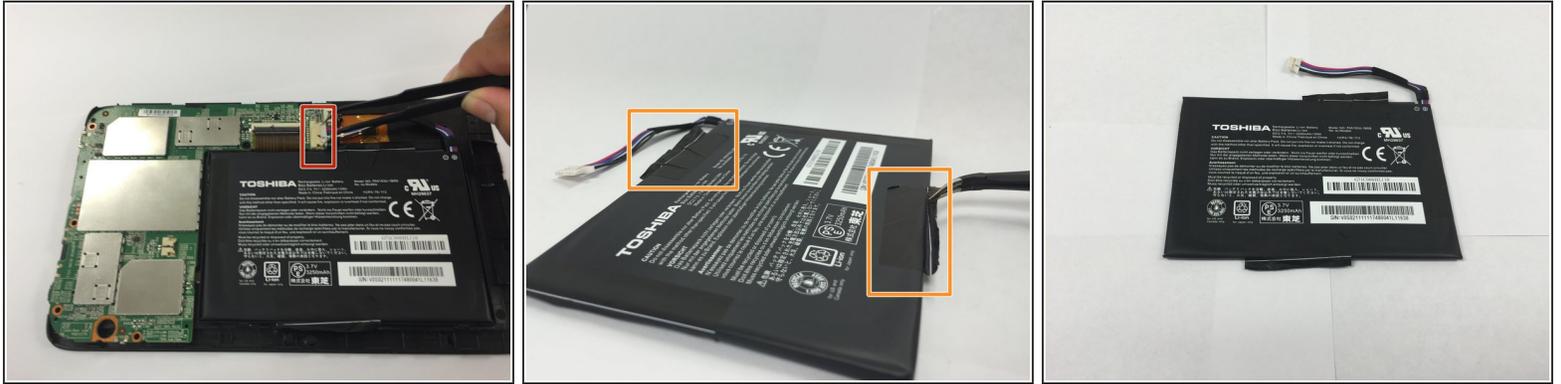

- Locate the battery on the back of your device.
- Remove the battery connector using a pair of tweezers.
- On the side of the battery peel back but do not remove the two black pieces of tape.
- ⓘ Remove just to the white line NOT completely.
- Carefully lift the battery out of the device, and set aside.

To reassemble your device, follow these instructions in reverse order.