



Toshiba NB205 N330PK Speaker Removal

This lengthy guide outlines how to remove a non-functioning speaker inside the netbook.


Written By: Mason McCaskill



 **TOOLS:**


- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [64 Bit Driver Kit](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Power Button

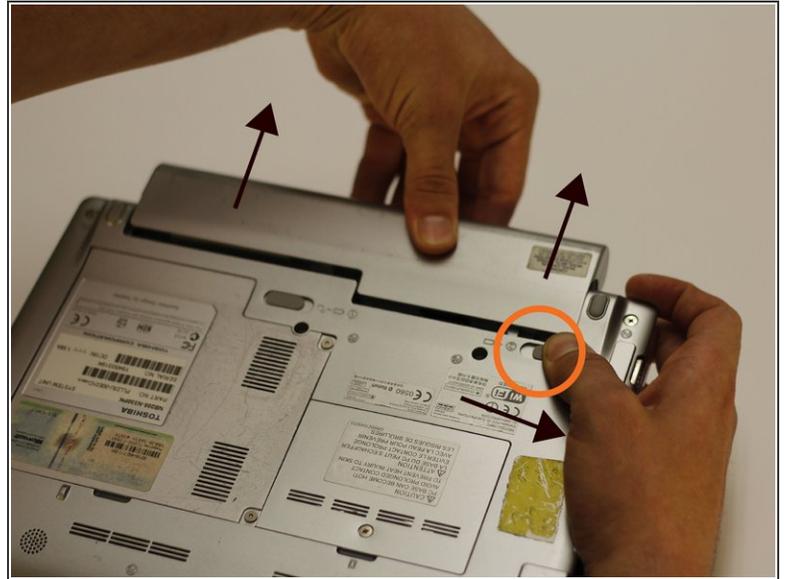


- Start by first removing the battery.
- Move the first release switch to the right position.
- Move the second release switch to the right position while pulling the battery towards the top of the netbook.

Step 2

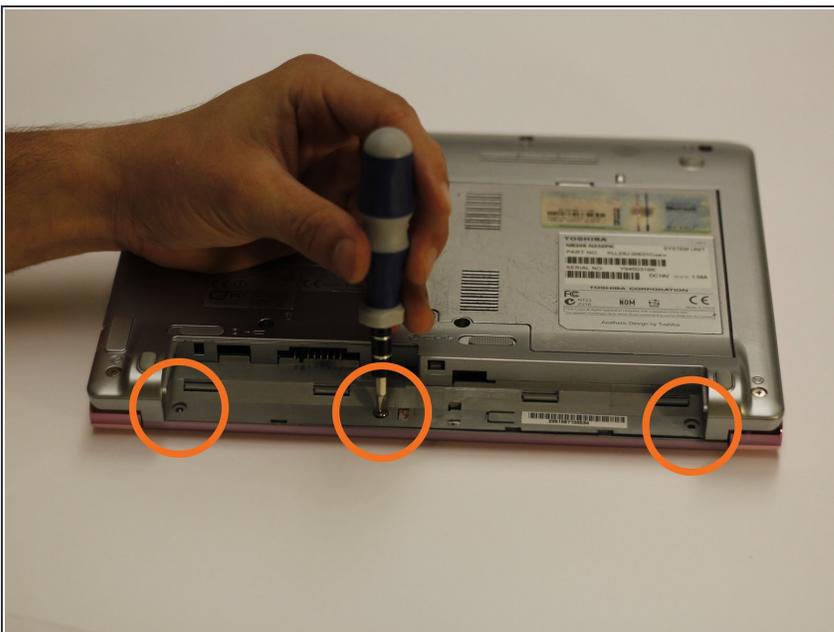

- Using the bit driver and a Phillips #0 bit, remove the three circled screws, 5 mm in length.

Step 3

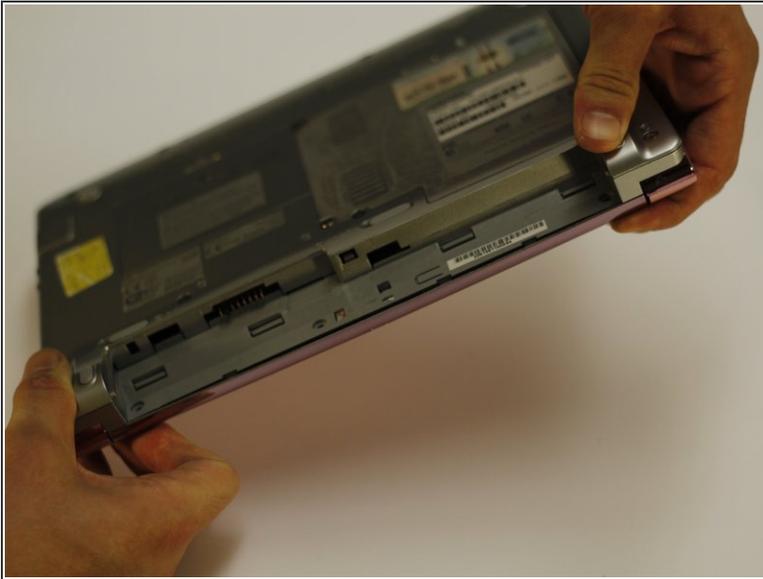


- While holding the top of the netbook, flip the netbook over.

Step 4



- Carefully lift off the power bar assembly for access to the button and receiver.

Step 5 — Speaker

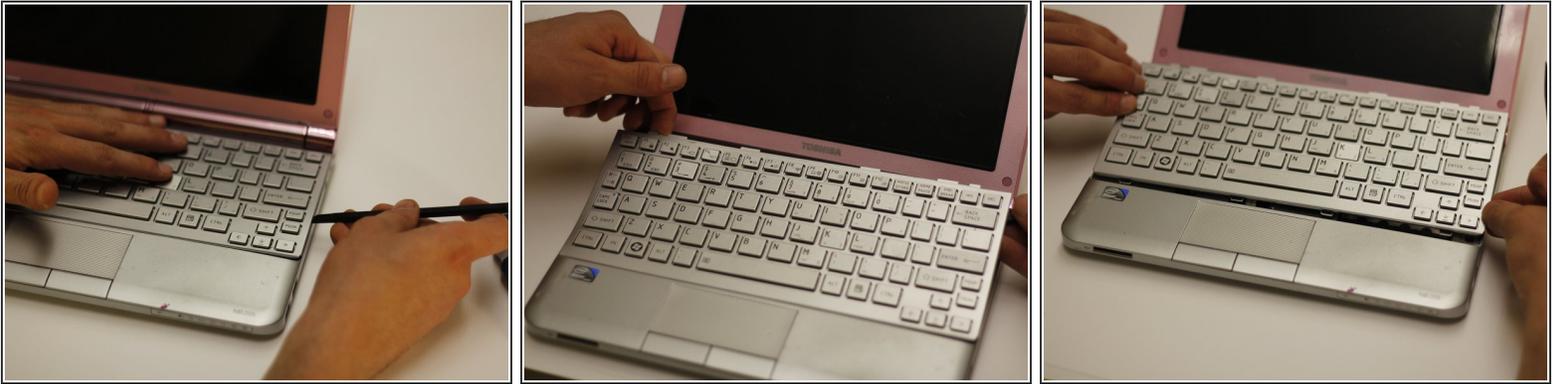



- Use the spudger to gently pry around the keyboard. This will release the keyboard assembly from the body.

Step 6




- Reach under the keyboard and disconnect the electrical connection.
- Lift the keyboard assembly out and away from the netbook.

Step 7

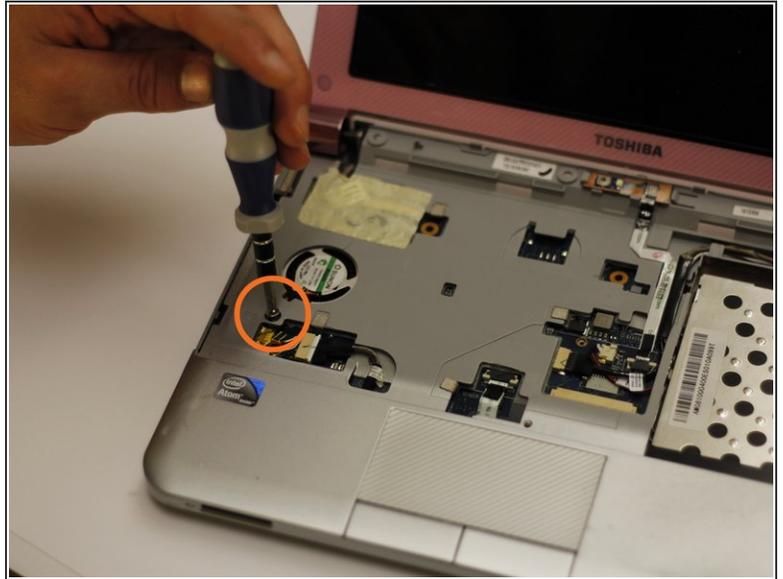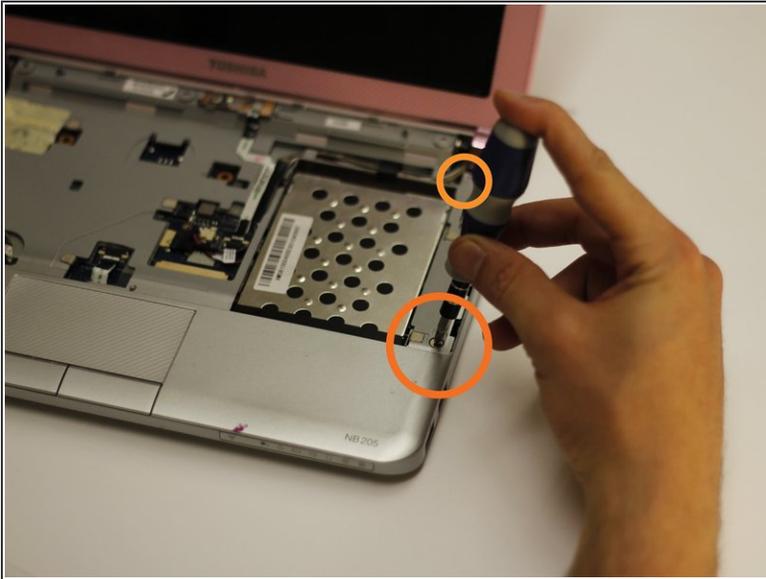


- Remove the two noted screws, 5 mm in length, with a bit driver and Phillips 3/16" tool.

Step 8

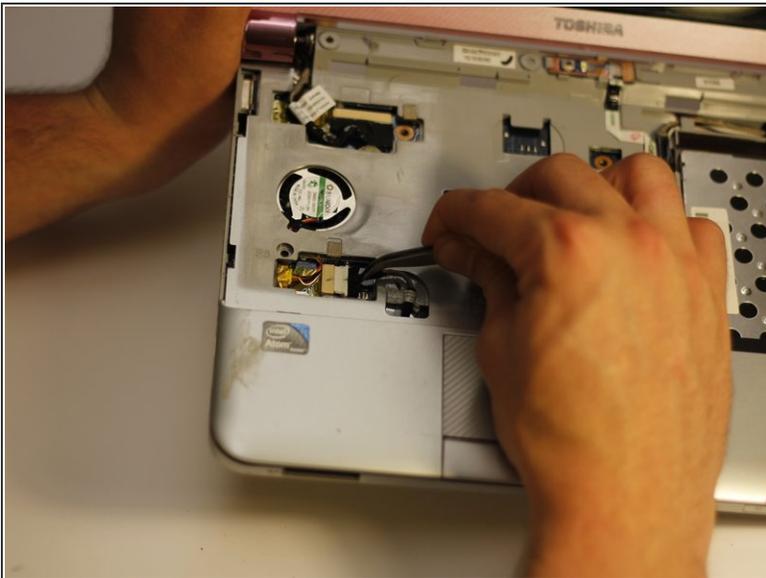



- Remove this electrical connection with tweezers.
- Use a spudger to gently pry the bezel from retaining clips.
- This will allow the keyboard bezel to lift off of the body.

Step 9

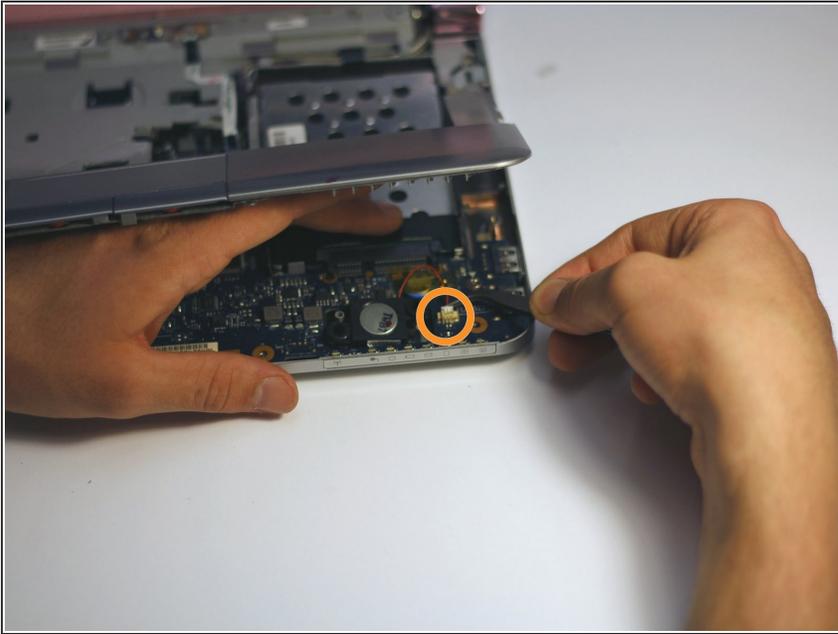

- Use tweezers to remove the electrical connection to the old speaker assembly.

Step 10

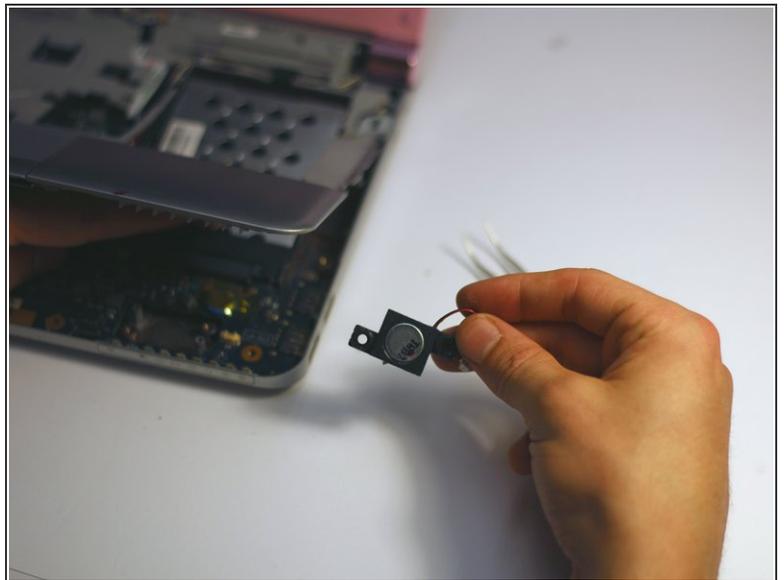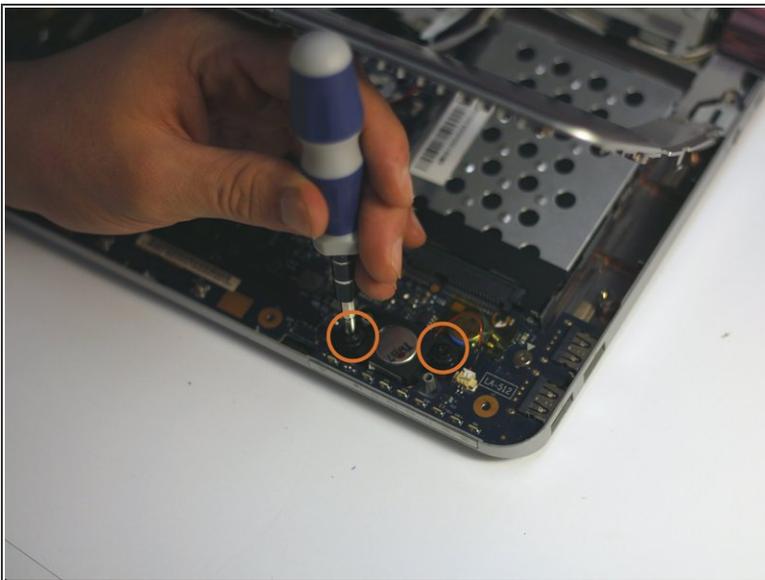

- Use a bit driver and a Phillips #0 bit to remove the two retaining screws on the speaker assembly.
- Lift out the old speaker assembly.

To reassemble your device, follow these instructions in reverse order.