




Toshiba Qosmio X505-Q860 CD Drive Replacement

This guide will help you replace the CD Drive of your Toshiba Qosmio X505-Q860.

Written By: Danielle Lapensee-Rankine

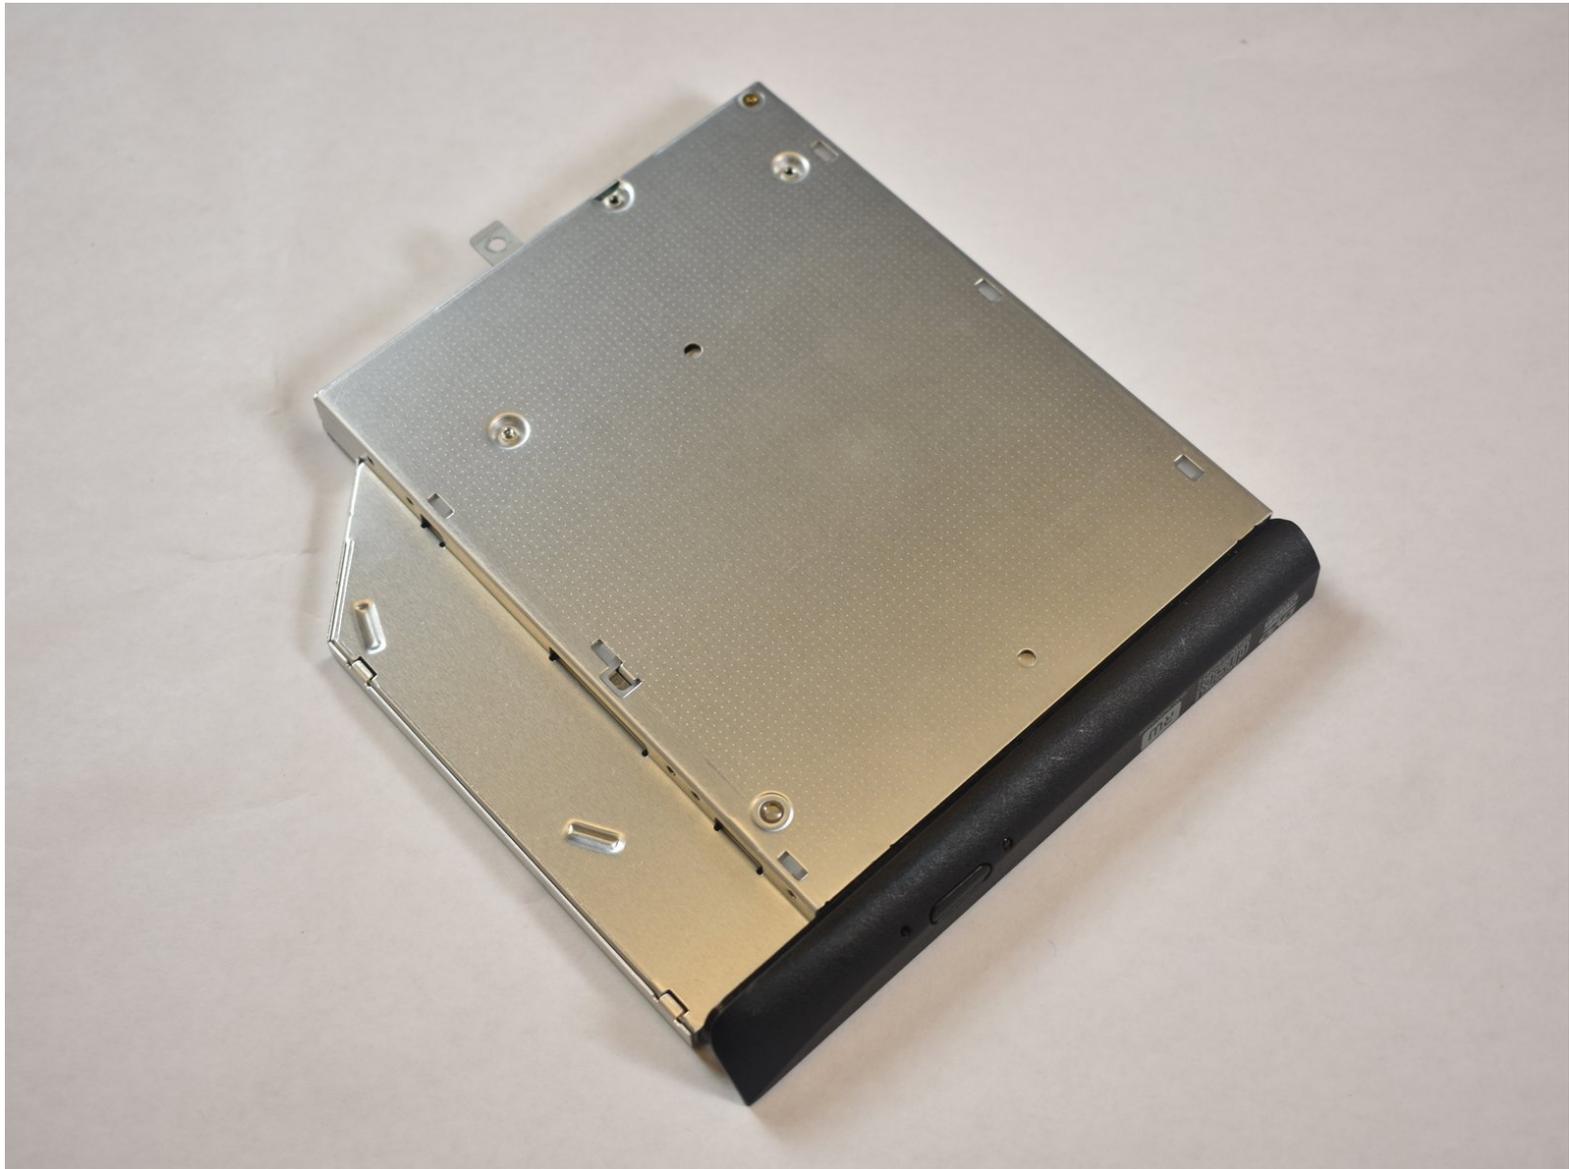

INTRODUCTION

If your disks run on other devices but not this laptop, use this guide to replace the CD Drive.

TOOLS:

- [JIS #0 Screwdriver](#) (1)
-

Step 1 — Battery



 Turn off laptop before starting.

- Flip the switch on the right to the unlocked position.

Step 2



- Hold the switch on the left and pull the battery up towards you, using the marked tab, to take it out.

Step 3 — Hard Disk Drive Cover Panel



- Use a JIS #0 screwdriver to unscrew the two 4.6 mm screws at the base of the casing.
- Pull off the part of the case that's now loose by the indicated tab.

Step 4 — CD Drive



- Take out the 4.7mm long JIS #0 screw with a JIS Screwdriver.
- The CD Drive is now loose. Pull it straight out of the side.

To reassemble your device, follow these instructions in reverse order.