



# Toshiba Satellite C55D-A5108 Wi-Fi Card Replacement

How to replace a Toshiba Satellite C55D-A5108 Wi-Fi card.

Written By: Ryan Smith



## INTRODUCTION

Quick guide on how to replace a faulty Wi-Fi card in a Toshiba Satellite C55D-A5108.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

### PARTS:

- [Details about AzureWave 802.11 bgn + 802.15 BT Combo WiFi Wireless Card AW-NB087H RT3290 C3](#) (1)

## Step 1 — Battery



- Flip over the device so that the model stickers are facing up.

## Step 2




- Move the right notch to the unlock position by sliding it to the right.

### Step 3




- Hold the left notch in an unlocked position with one hand and use the other hand to slide the battery out.

### Step 4 — Hard Drive

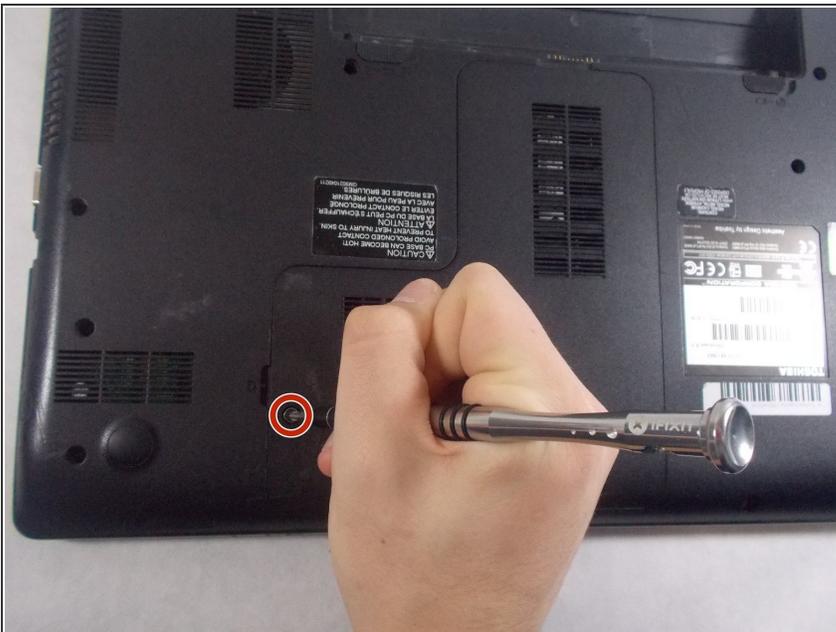


- Remove the Phillips #0 screw from the memory cover.

## Step 5

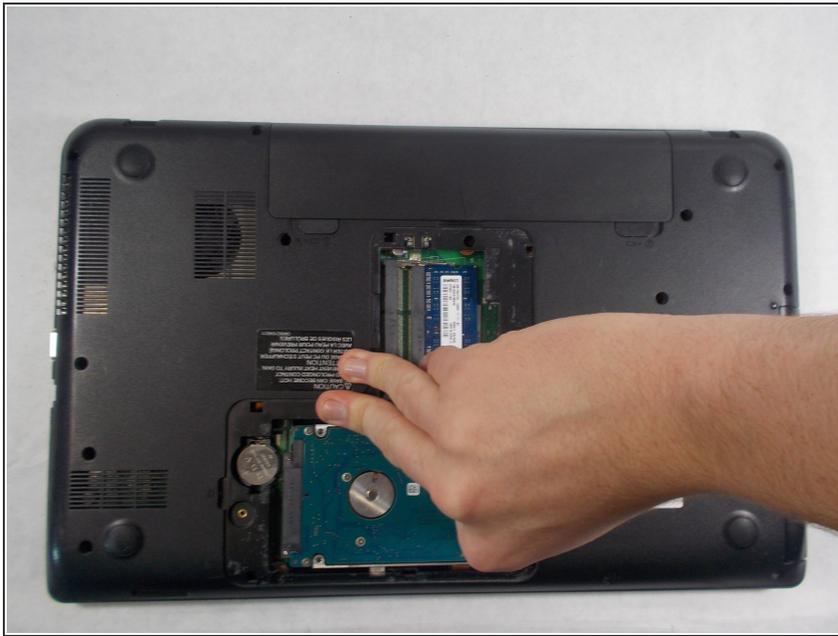

- Grasp the side of the hard drive opposite the circular battery, and carefully pull out the drive by moving it away from the circular battery.

## Step 6 — Back Cover

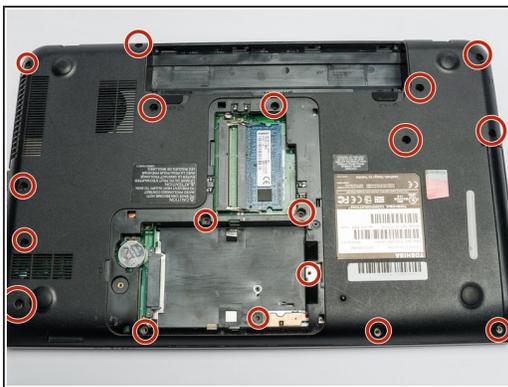


- Remove the 16 screws holding the back cover with a Phillips #0 screwdriver.
- Pry the cover off with an opening tool.
- Gently remove the cover with your hands and place to the side.

## Step 7 — Wi-Fi Card



- Remove the single screw securing the Wi-Fi card using a Phillips #0 screwdriver.

## Step 8

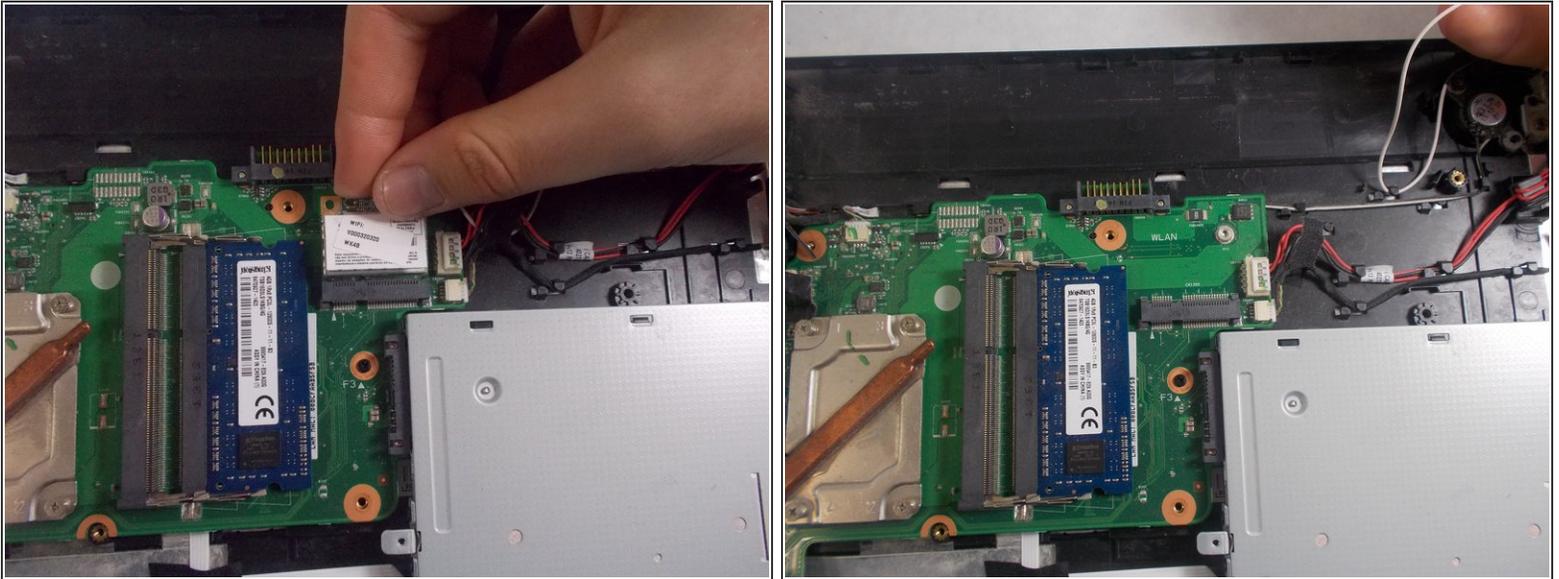

- The card will pop up; gently pull the card out of the port.
- Unplug the wireless antenna cables attached to the card.
- ☑ Remember how the cables were connected to assure you do not cross the Bluetooth and wireless connections by accident.

To reassemble your device, follow these instructions in reverse order.