



# Toshiba Satellite C675-S7106 Hard Drive Replacement

Following this guide allows the user to easily replace the hard disk drive or solid state drive in their laptop.

Written By: Dinis Valcorba



---

## INTRODUCTION

Faulty or corrupted storage drives can be the root of many computer issues. Replacing it is an especially simple process in this laptop - you'll just need a PH0-head screwdriver.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery




- Flip the laptop over, so that the "top" of the laptop is against your working surface.
- Orient the laptop so that the silver label is in the bottom-left corner, with the battery facing you.

## Step 2



- On the right side of the battery, move the tab marked 1 to the right, unlocking the battery.
- On the left side of the battery, hold the tab marked 2 to the left while pulling the battery towards you.

### Step 3 — Hard Drive

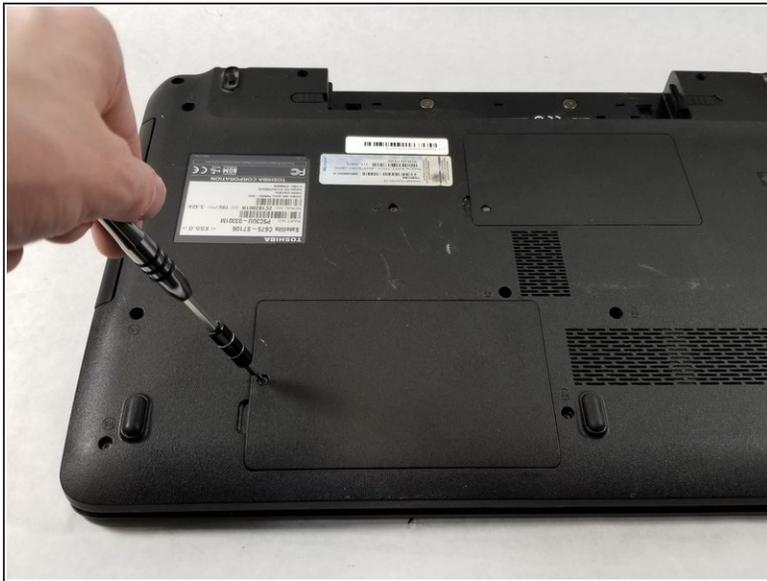

- Rotate the laptop so that the battery cavity faces away from you.
- Remove the lower-left plastic panel by loosening the single PH0-head screw and prying it up with a plastic spudger.
- ⓘ The screw does not need to be completely removed, as it's permanently attached to the device.

### Step 4



- Remove the existing drive by sliding it towards the left until it's disconnected, and then lift it out of the device.

To reassemble your device, follow these instructions in reverse order.