



# Toshiba Satellite C675-S7106 Wireless Card Replacement

This guide should allow the user to easily remove and replace the Wi-Fi adapter for their laptop.

Written By: Dinis Valcorba



---

## INTRODUCTION

Sometimes a faulty wireless card causes network connection issues, and replacing the card should alleviate them. You'll need to remove the keyboard as a prerequisite, requiring a PH0-head screwdriver, a rigid pry-tool, and some gentle care needed when opening the ZIF connector. The rest of the process is fairly simple.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery




- Flip the laptop over, so that the "top" of the laptop is against your working surface.
- Orient the laptop so that the silver label is in the bottom-left corner, with the battery facing you.

## Step 2





- On the right side of the battery, move the tab marked 1 to the right, unlocking the battery.
- On the left side of the battery, hold the tab marked 2 to the left while pulling the battery towards you.

## Step 3 — Keyboard

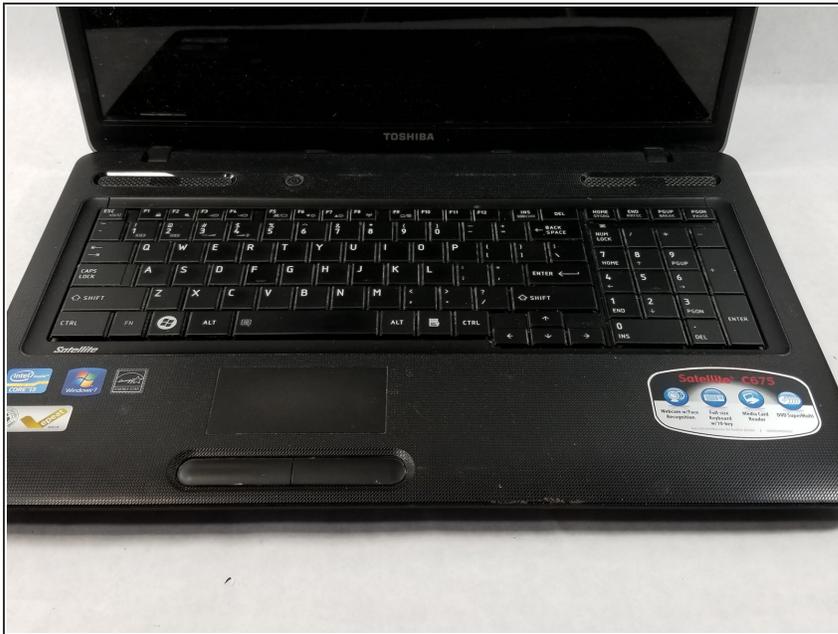


- Open the laptop with the screen facing you, as if to use it.

## Step 4

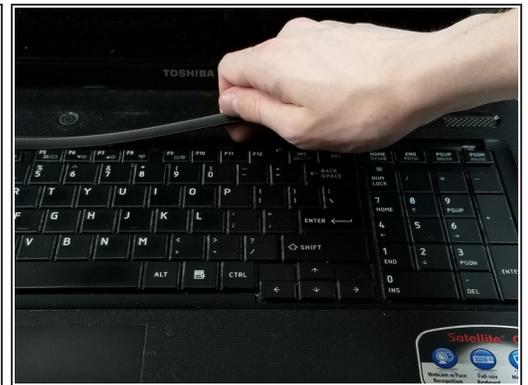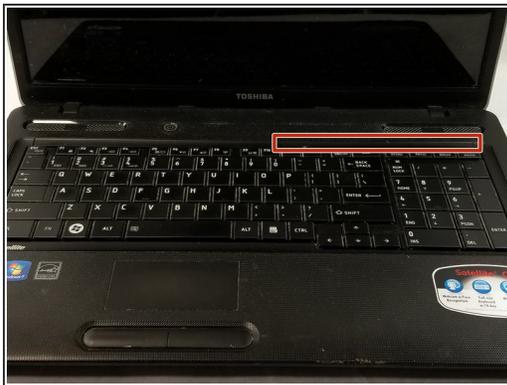

- Starting at the right, pry up part of the plastic bar by using a spudger between the F12 and Insert key.
- Pull up on the rest of the plastic bar to remove it.

## Step 5

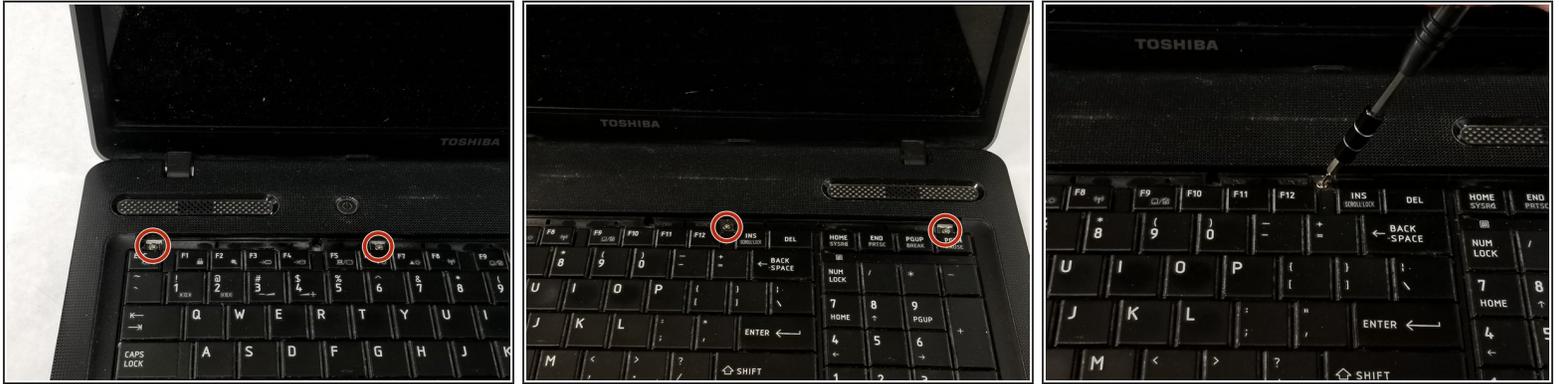


- Remove the four 2.5mm M2 screws above the keyboard using a PH0 screwdriver.

## Step 6



- Once screws are removed, lift the keyboard closest to the screen and gently flip it over.
- Using the spudger, lift up the white ZIF connector to unlatch the ribbon cable, and gently remove the cable.

## Step 7 — Wireless Card

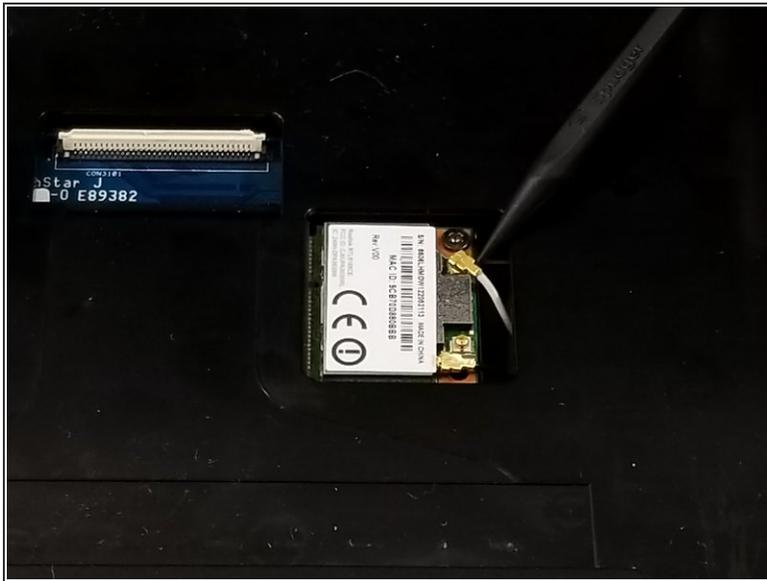


- Underneath the keyboard, gently disconnect the black and white wires on the right of the wireless adapter using a thin plastic spudger.
- ☑ Be sure to properly re-connect the two wires during assembly, perhaps using the back end of the spudger to ensure that the connection is made.

## Step 8



- Unscrew the one 3mm screw in the top-left corner of the wireless adapter using a PH0 screwdriver.

## Step 9

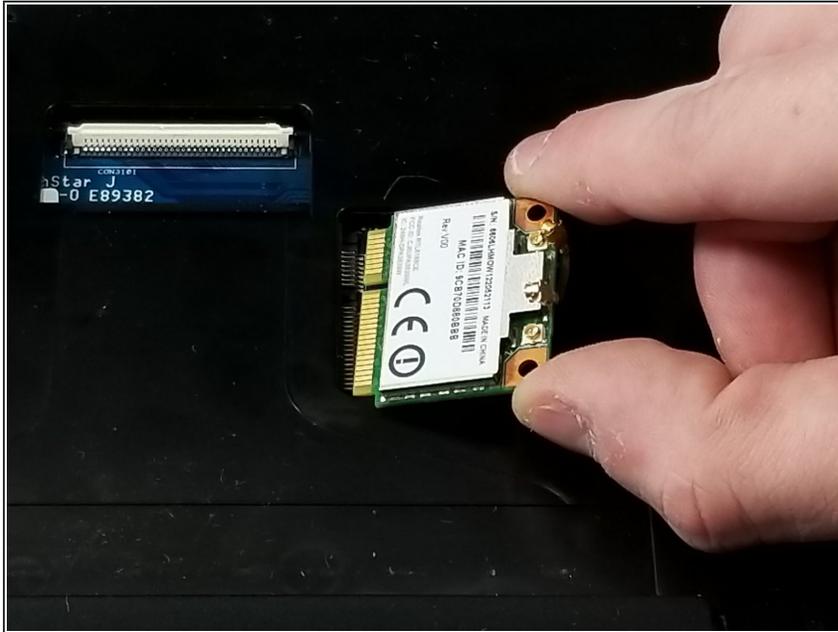

- Lift the card up and to the right to remove it from the device.

To reassemble your device, follow these instructions in reverse order.