



Toshiba Satellite C875-S7304 Battery Replacement

Use this guide to replace the battery in your Toshiba Satellite C875-S7304.

Written By: Emma King



INTRODUCTION

If your laptop has a short battery life or is not charging at all, the battery should be replaced. This guide will instruct you in replacing a battery in a Toshiba Satellite C875-S7304.

A functional battery provides power to your laptop. After repeated use, your battery will begin to drain through its charge cycles. If you begin to notice your battery is losing charge more quickly than usual you may consider calibrating your battery to determine what an accurate charging capacity is for your device. If you still notice large drops in battery percentage after calibration you should replace your battery.

Take precaution when removing a punctured or swollen battery as they can lead to dangerous fires.

Make sure to unplug and power off your device before you begin. You do not need any tools to complete this procedure.

Step 1 — Battery



- Power off and unplug the charger from your device.
- Carefully flip your device upside down laying it onto a flat surface with the battery facing you.
- The two eject switches are located on the right and left side of the battery compartment.

Step 2



- Slide the right switch further towards the right to lock it into place.

Step 3



- Slide the switch to the left. Continue to push the switch because unlike the right switch, it will not lock into place.

Step 4



- Using both hands, continue to push the left switch and grasp onto the center notch located in between the right and left switch.
- Pull the center notch towards you and you will notice the battery will start to eject.

Step 5



- Lift the battery out carefully using two hands.

To reassemble your device, follow these instructions in reverse order.