


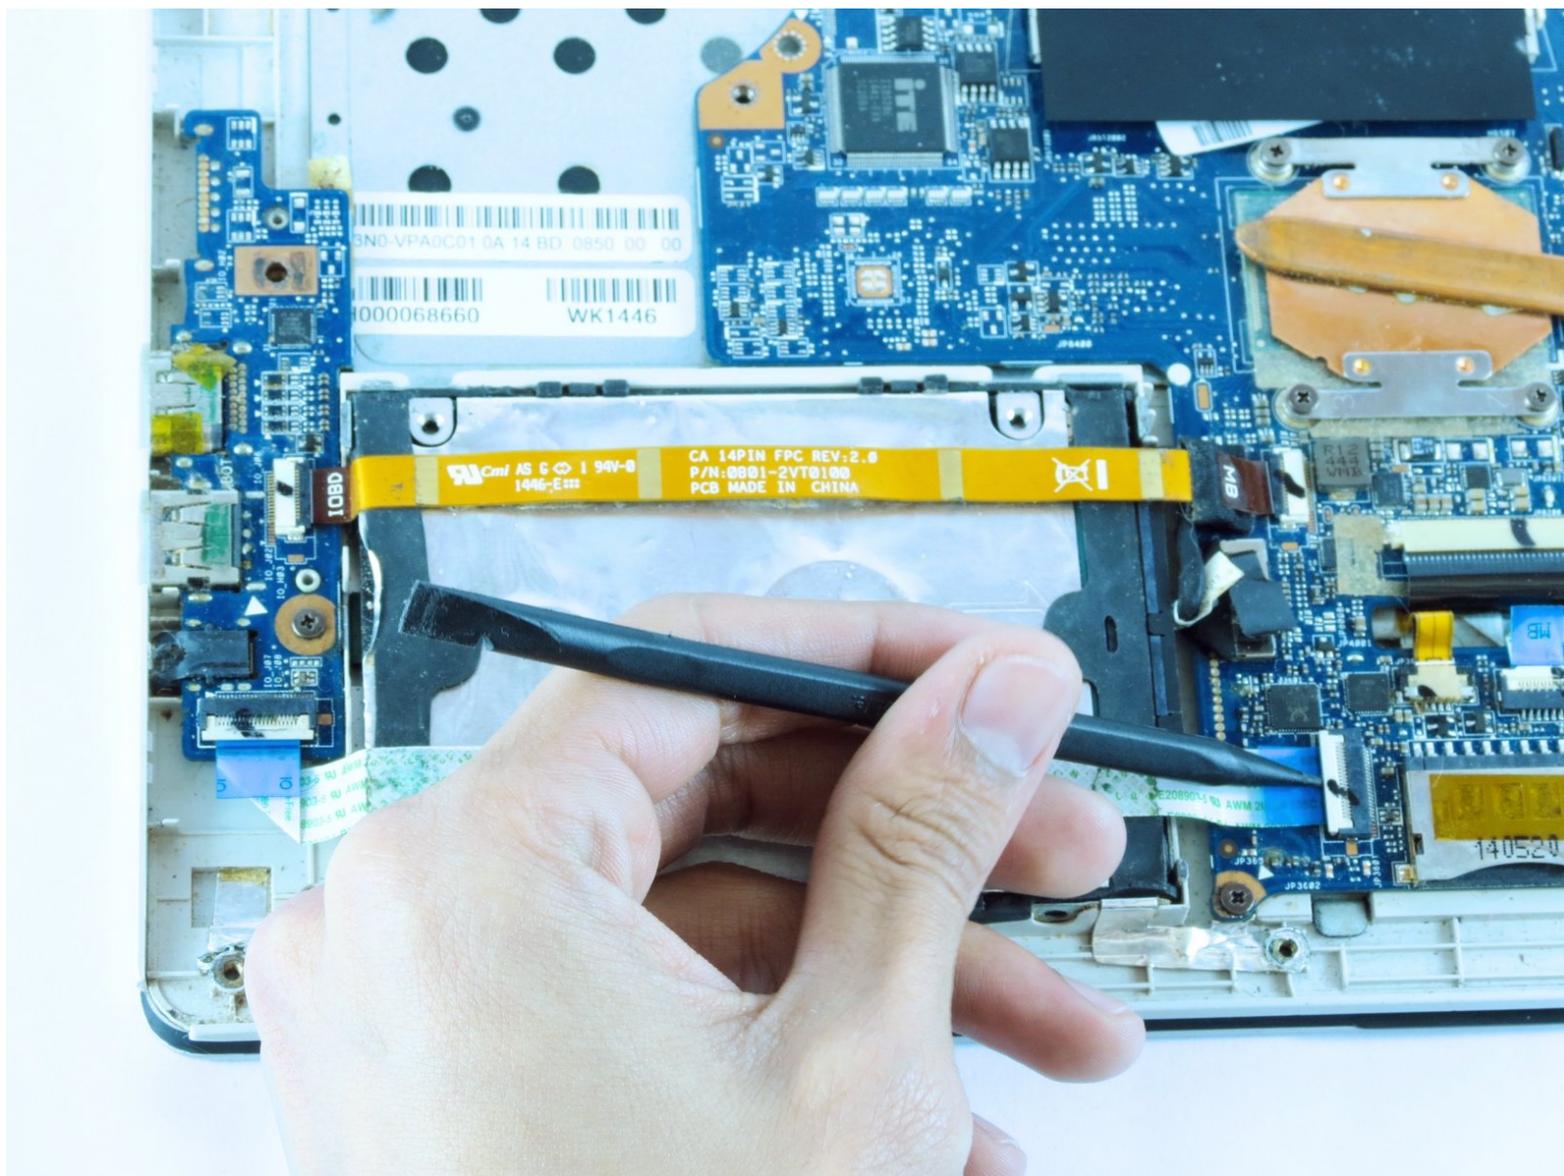

# Toshiba Satellite E45t-B4300 USB HDMI Audio Circuit Board Replacement

This guide will show you how to replace the circuit board containing the USB, HDMI, and audio jack in your Toshiba E45t-B4300.

Written By: Joshua Swanson



## INTRODUCTION

Use this guide to replace a defective USB, HDMI, and audio jack circuit board in your Toshiba E45t-B4300.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery



 Power off your laptop before continuing.

- Remove the following two 4mm screws with a Phillips #0 screwdriver.

## Step 2



- Slide the battery out towards you.

### Step 3 — Bottom Case




- Remove the following twelve 4mm screws with a Phillips #0 screwdriver.

### Step 4




- Use a spudger to depress the six white clips connecting the plastic cover

## Step 5

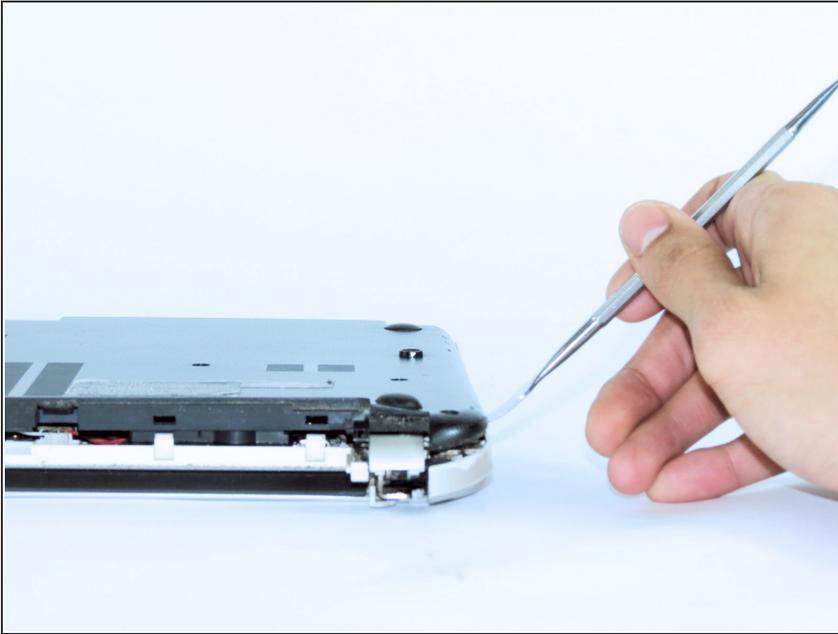

- Run the spudger or a plastic card around the entire laptop to release the rest of the clips.

## Step 6

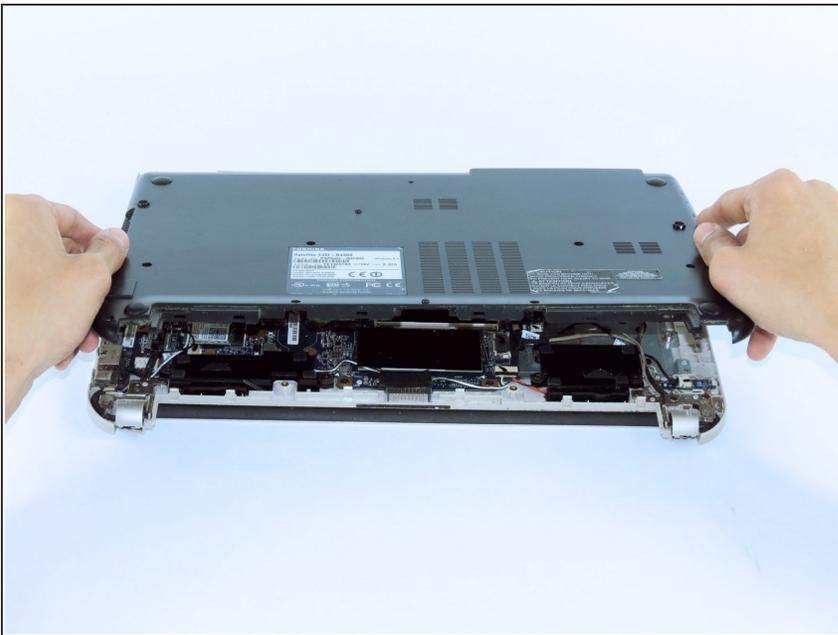


- Remove the cover and set to the side.

## Step 7 — USB HDMI Audio Circuit Board



- Use the point end of the spudger to lift the clips that attach the two ribbons to the motherboard.
- Pull out the ribbons from the motherboard.

## Step 8

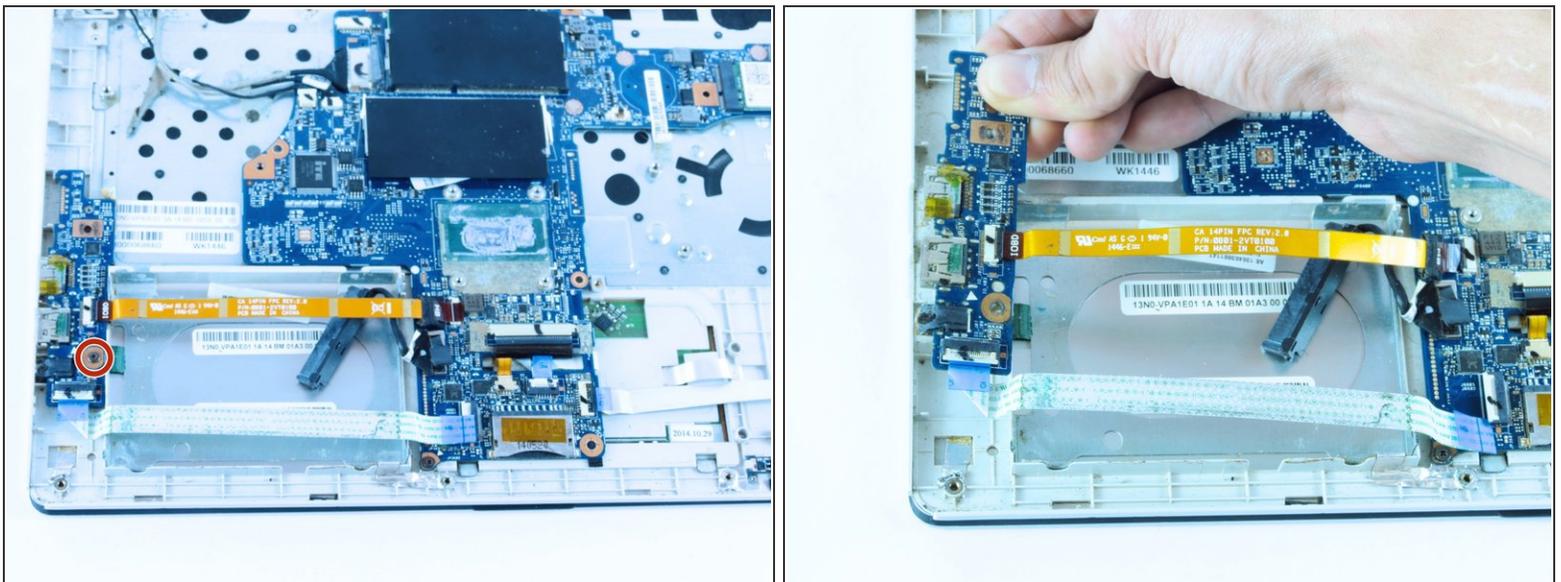

- Unscrew the 2mm screw with a Phillips #0 screwdriver.
- Remove the circuit board.

To reassemble your device, follow these instructions in reverse order.