



Toshiba Satellite L305D-S5900 Optical Drive (Disk Drive) Replacement

This guide will show you how to remove the CD/DVD drive from the laptop.

Written By: Sing Yang Cheng



INTRODUCTION

If your CD/DVDs aren't being read or even if your drive just makes too much noise with a disk in, this guide will assist you in removing the CD Drive from the computer entirely if it needs tweaking or replacement.

TOOLS:

- [Metal Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Optical Drive (Disk Drive)



- ⓘ Power off your laptop before beginning disassembly.
- The 5.3 mm Phillips #1 screw boxed in red is located at the center on the underside of the computer.

Step 2




- Remove the panel that houses the RAM chips by removing the screw that secures it into its spot.

Step 3



- The 5.3 mm Phillips #1 screw boxed in red is located on the right panel that house the RAM on the underside of the computer.
- Remove the screw securing the drive on the plastic edge.

Step 4

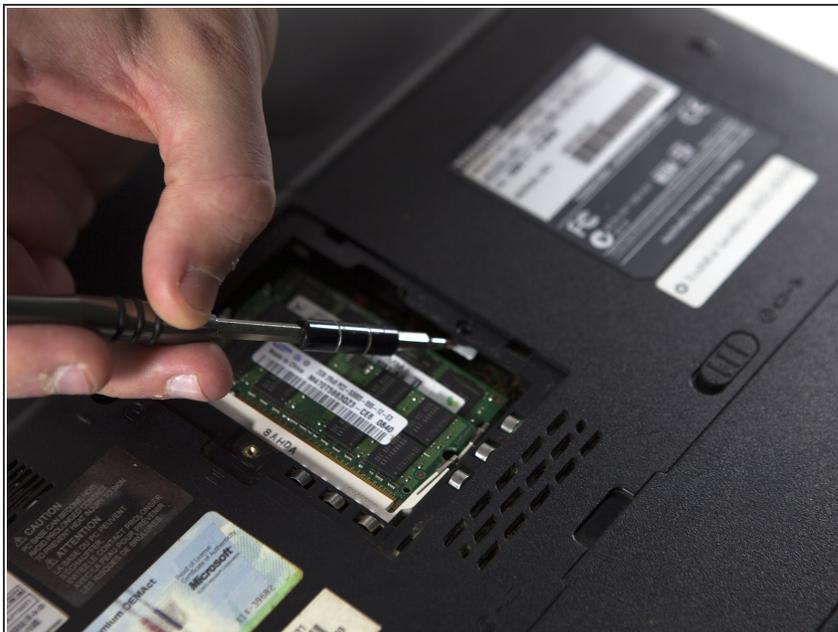

- Use a screwdriver or a metal spludgers to push the metal piece attached to the drive in the direction of the drive opens until the drive pops out of its socket.

Step 5



- Fully remove the drive by pulling it all the way out of its socket.

To reassemble your device, follow these instructions in reverse order.