



Toshiba Satellite L775D-S7340 Optical Disk Drive Replacement

If your Toshiba Satellite L775D-S7340 is having difficulty reading or will not read CDs, your optical disk drive may need replacing.

Written By: Madeline Park



INTRODUCTION

This guide will show how to remove and replace the optical disk drive.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Make sure the laptop is unplugged and powered off.
- Locate the battery latches on the underside of the laptop.

Step 2



- Slide the right latch to the right until you hear it lock into place.
- Slide the left latch to the left and hold it.

Step 3



- Slide the battery out towards you.

Step 4 — Optical Disk Drive



- Remove the (mm) screw in between the two white manufacturer's stickers using the Phillips #1 screwdriver.

Step 5



- Gently slide the optical disk drive out of the computer.

To reassemble your device, follow these instructions in reverse order.