



# Uniden D1483-3BK Battery Replacement

This guide offers instructions on how to remove and replace a Uniden D1483-3BK battery.

Written By: Arbitrary Name



## INTRODUCTION

Follow this guide to replace the handset battery. This guide is easy to complete and does not take much time. Removing the battery will also help you to access other parts of the device.

## Step 1 — Battery



- Set the phone with dial keys facing downward.

## Step 2



- Slide the battery cover toward the bottom of the phone.
- Lift and remove the back cover from the phone.

### Step 3



- Remove the battery from its compartment.
- Pinch the end of cord where the battery is attached to the phone and pull up gently.

To reassemble your device, follow these instructions in reverse order.