



VTech Kidizoom Camera Connect Front Case Replacement

Guide showing the steps necessary to open the Kidizoom Camera Connect to replace the front case.

Written By: Nick Foster



INTRODUCTION

In order to repair or replace most parts of your VTech Kidizoom Camera Connect you'll need to be able to open the device. This guide gives step by step instructions on how to carefully open the main body of the Kidizoom Camera Connect and replace the front case.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Front Case



! Remove batteries and SD card before beginning disassembly!

- Locate the four plastic screw covers denoted by the markers and gently pry them up with the metal spudger.

Step 2



- Remove all four (11mm) screws with the Philips #0 screwdriver.

Step 3



- Remove the two battery cartridges located on the underside of the camera.
- Once cartridges are removed, use the metal spudger to pry open the top, bottom, and both sides of the camera.

Step 4



⚠ Beware of the two black viewfinder lens falling out as you pry open the device!

- The device should now be open and ready for further repair and/or replacement parts.

To reassemble your device, follow these instructions in reverse order.