


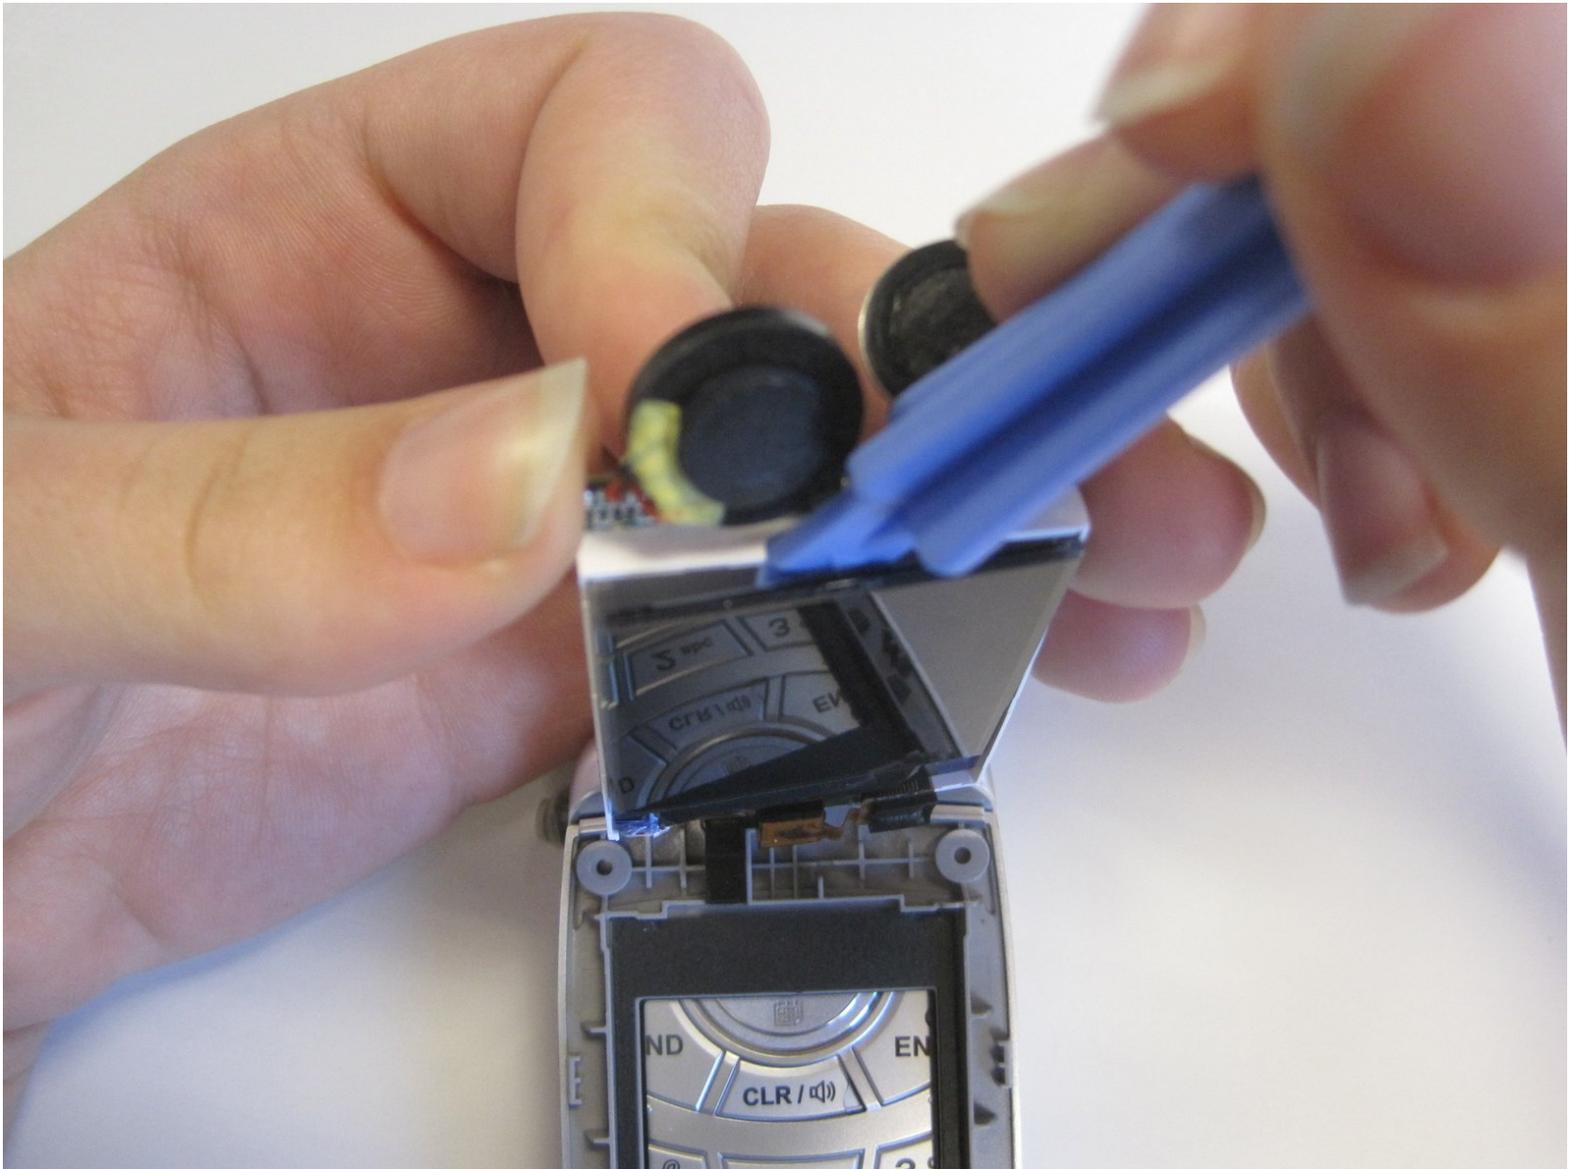

# Verizon Wireless CDM 7075 interior screen replacement

This guide will instruct you on how to replace the LED screen on the Verizon Wireless CDM 7075.

Written By: Corey Ryman



---

## INTRODUCTION

Please ensure you have followed the prerequisite guide of removing the battery before proceeding with this guide.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery



- To remove the back panel, first press and hold the gray button on the back. While doing that also press and slide the panel down and off.

## Step 2



- Carefully remove the battery from the phone by prying it from the top.

### Step 3 — LED Screen



- With the opening tool, remove the rubber plugs from the screw holes around the screen.

### Step 4



- With a Philips screwdriver, remove the four screws from around the phone's screen.

## Step 5




- Pry the top cover off the phone with a plastic opening tool.

## Step 6



- Remove the screen assembly from the phone.

## Step 7

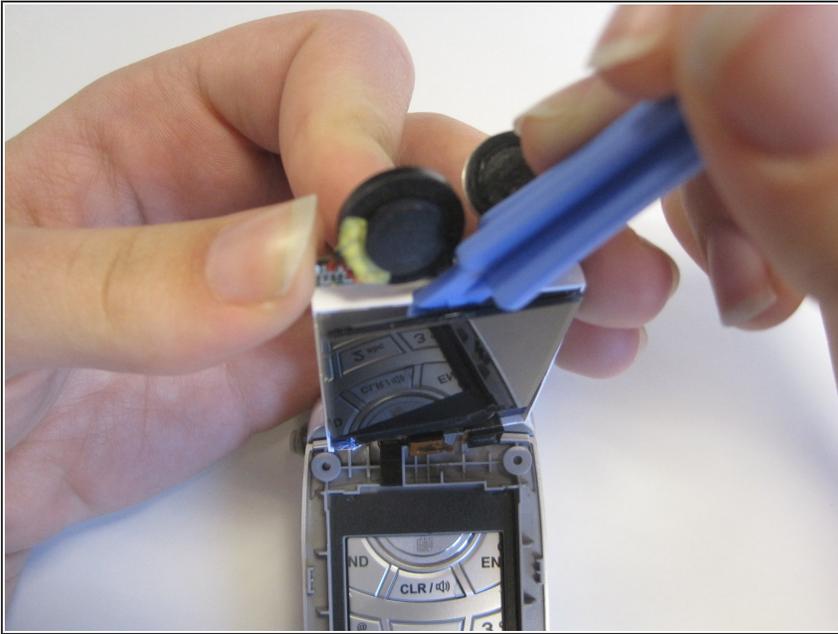

- With the opening tool, pry the circuit board off of the screen.

To reassemble your device, follow these instructions in reverse order.