




# X-street Lamborghini Murcielago LP670-4 SV Steering Column Spring Replacement

This guide will cover how to replace the steering column spring.

Written By: Liam Martinez

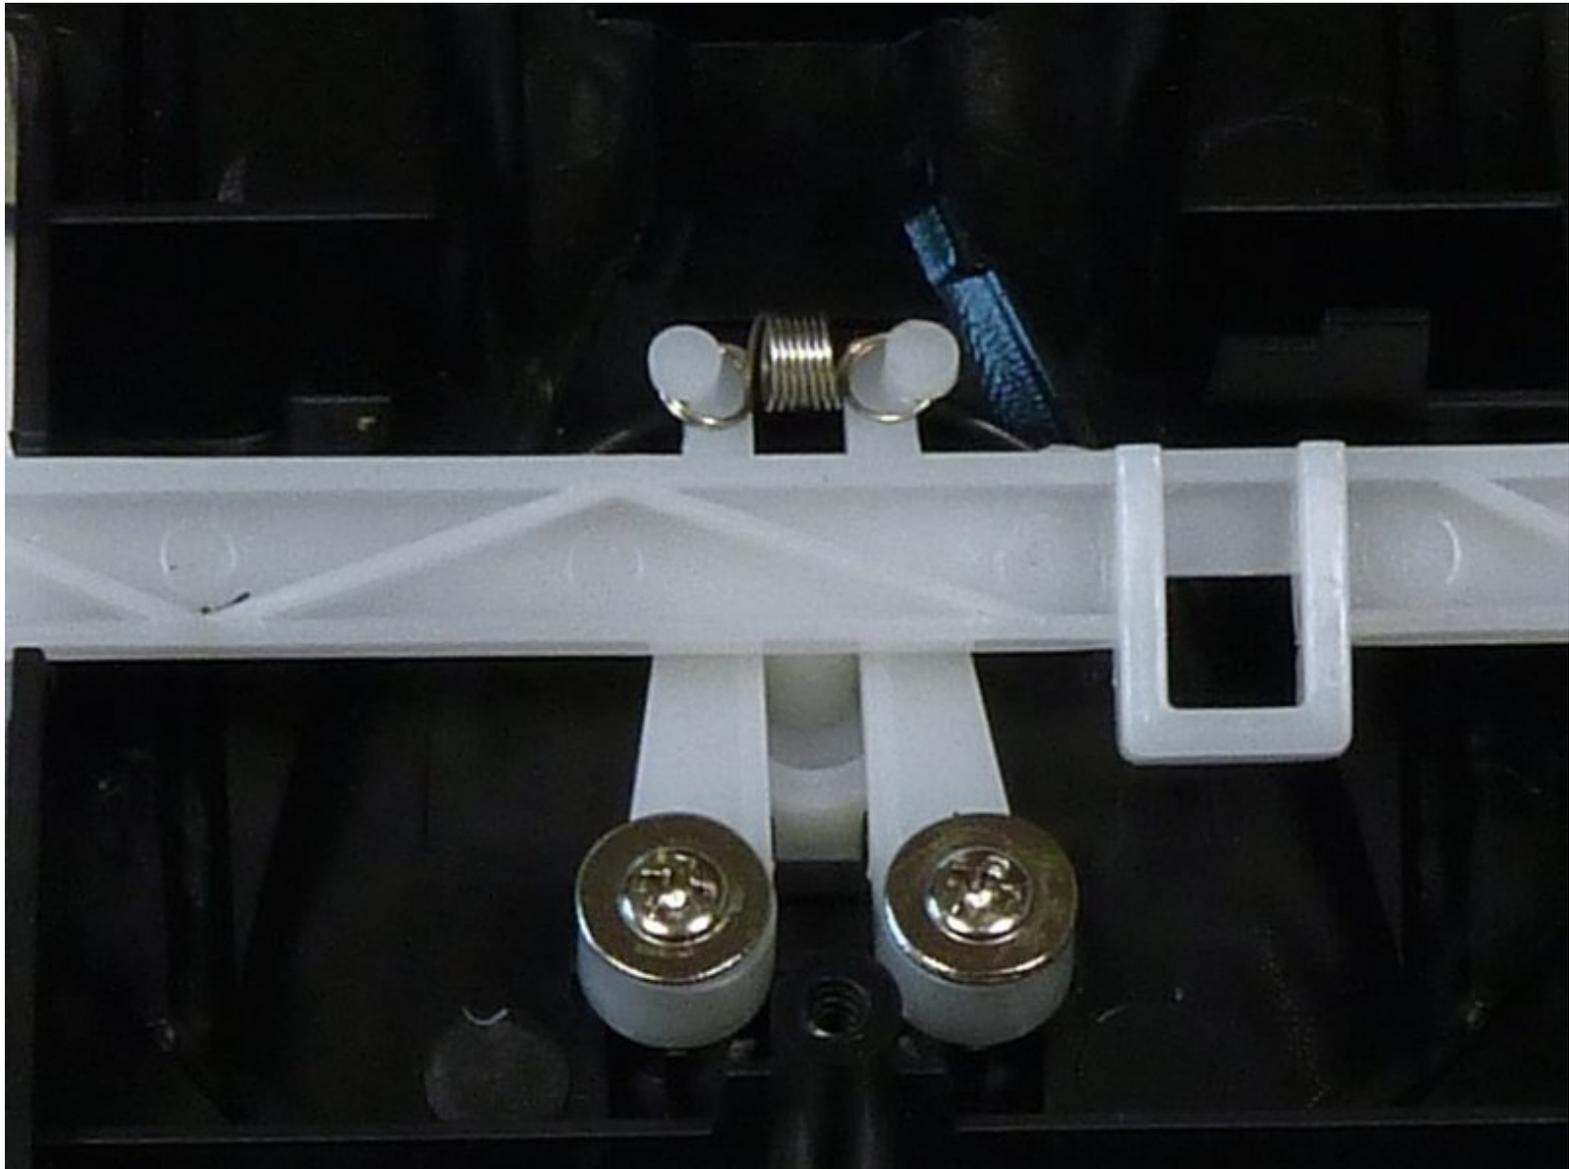

---

## INTRODUCTION

The steering column spring is responsible for reverting the wheels to a straight position when the remote is not turning one way or the other. A faulty steering column spring will fail to default to the straight position after turning the wheel.

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Battery



- Unscrew the two 2.5mm Phillips #00 screws from the middle of the car.
- Unclip the two clips to remove the battery cover.

## Step 2

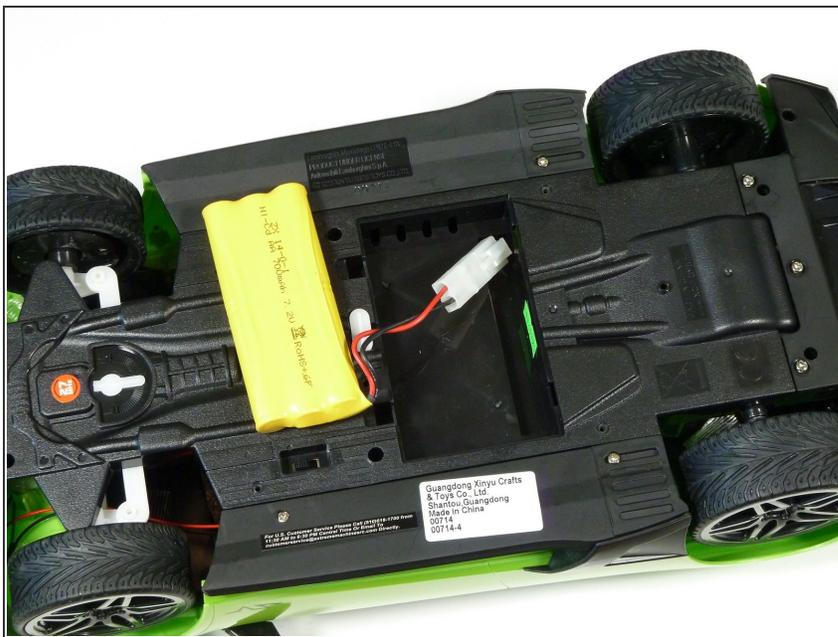


- Unplug the battery by pushing on the clip.

### Step 3 — Underbody



- Unscrew the two 2.5mm Phillips #00 screws from each side

### Step 4

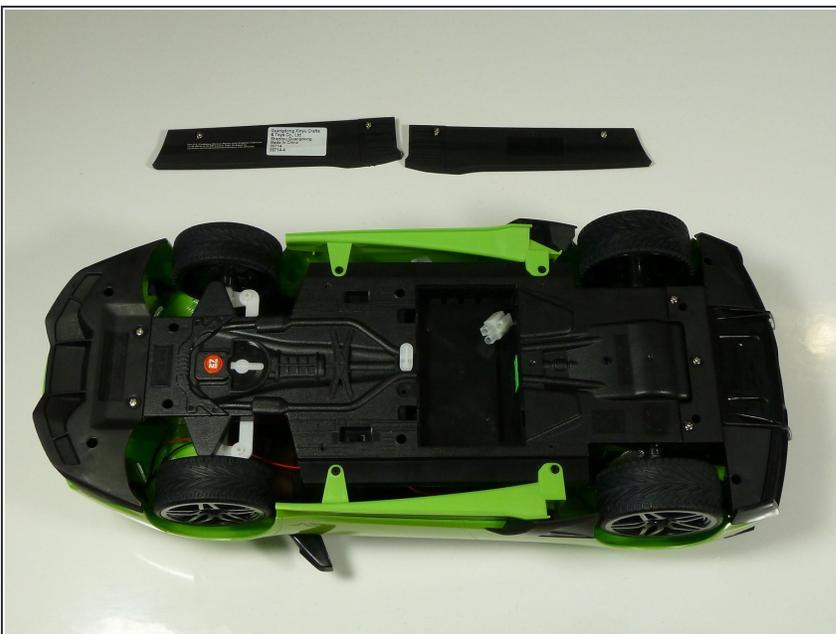

- Remove the side skirt covers on each side of the car.

## Step 5



- Lift up and remove the two side skirts.

## Step 6




- Unscrew the two 2.5mm Phillips #00 screws from the front skirt of the car.

## Step 7




- Lift the front part of the underbody and pull it out from the main underbody.

## Step 8

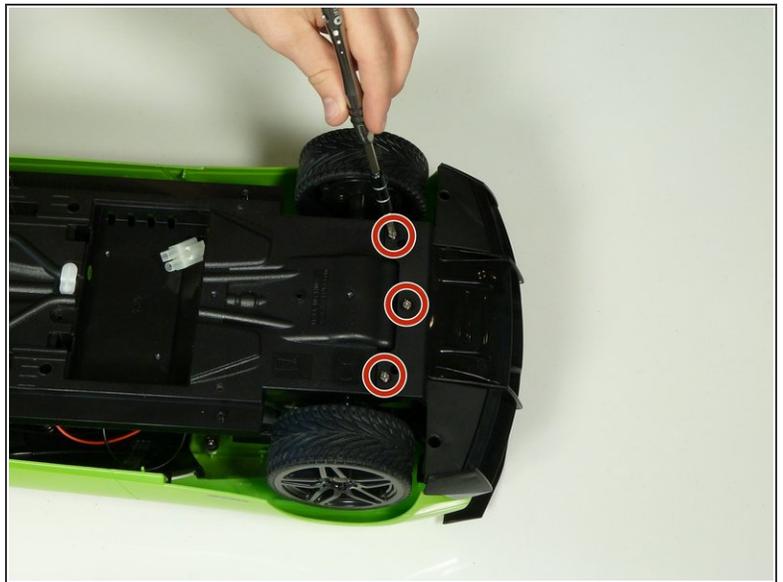


- Unscrew the remaining seven 9mm Phillips #00 screws from the underbody of the car.
- i** The second image shows a closer view of the rear three screws

## Step 9

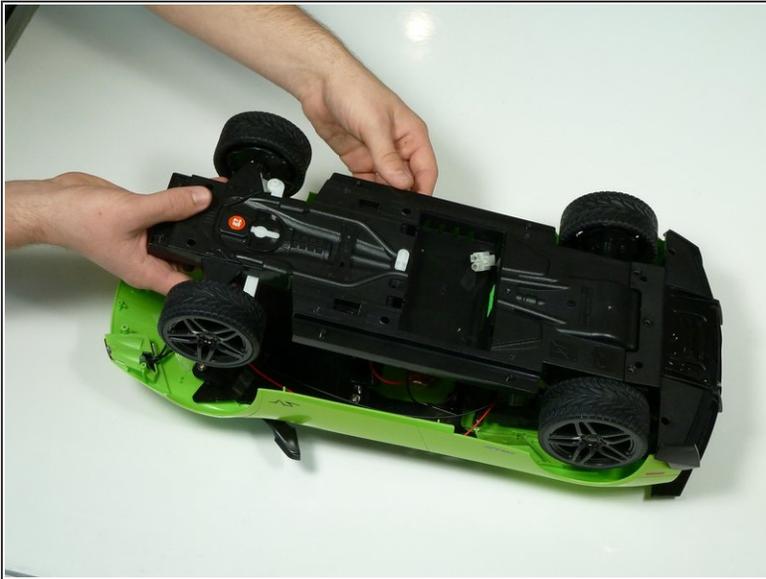


- Lift the main underbody from the shell of the car.
- Lift up the body to expose the wiring and hardware underneath.

## Step 10

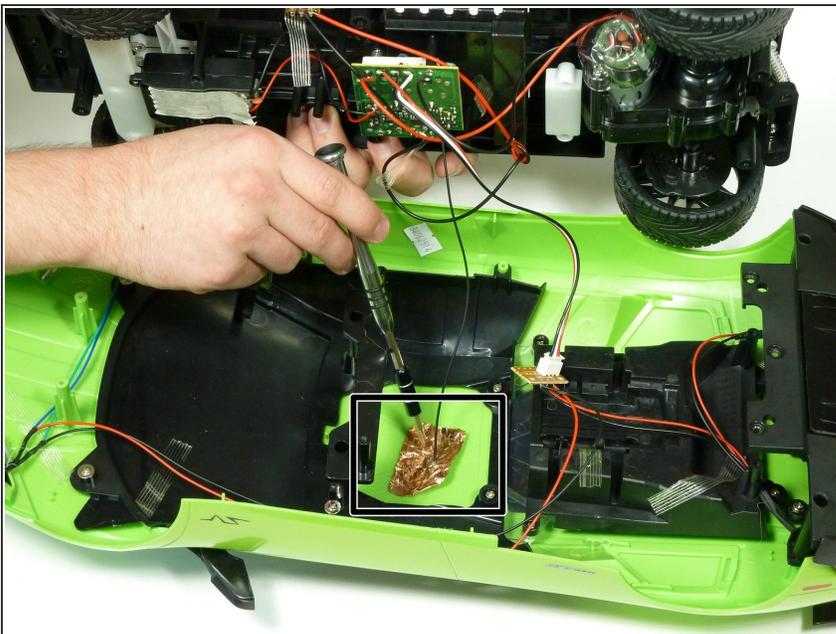

- Remove the reflective sticker from the top of the body.

## Step 11

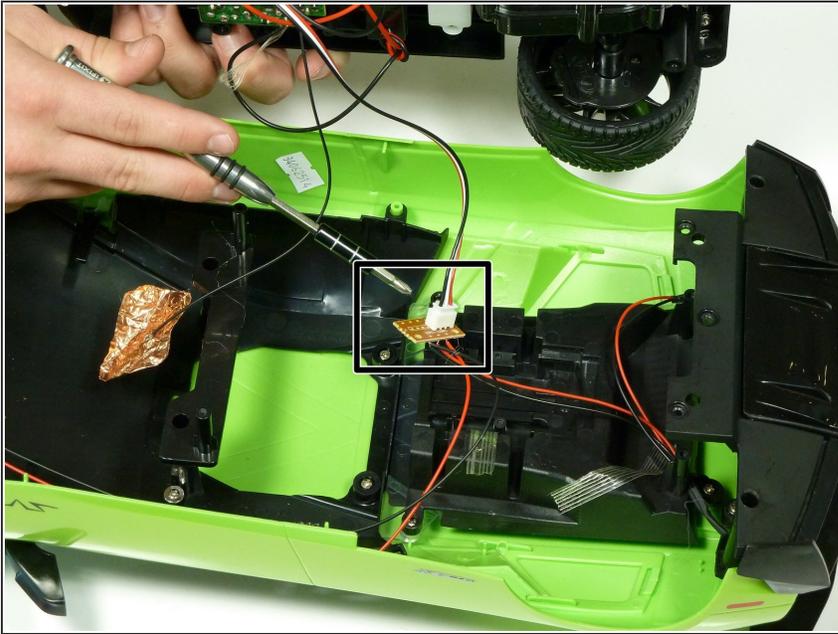

- Unplug the wire connector.


## Step 12 — Steering Column



- Unscrew the three 2.5mm Phillips #00 screws from the white steering column.


**⚠** After removing the three screws, the steering column will pop out of position because of the springs underneath. To reassemble, put the springs back together as shown in picture #3.

## Step 13 — Steering Column Spring

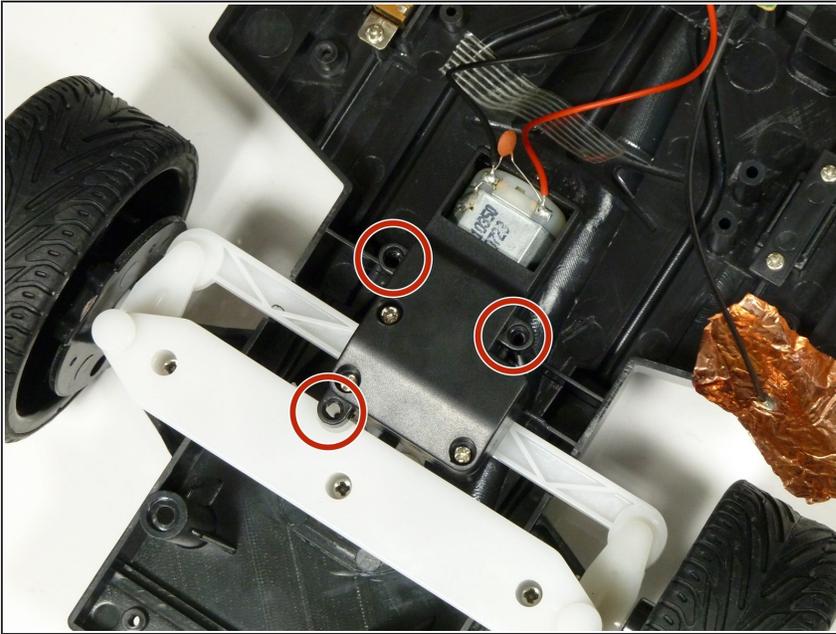


- Remove the three 1.6mm Phillips #000 screws from the black motor casing.

## Step 14

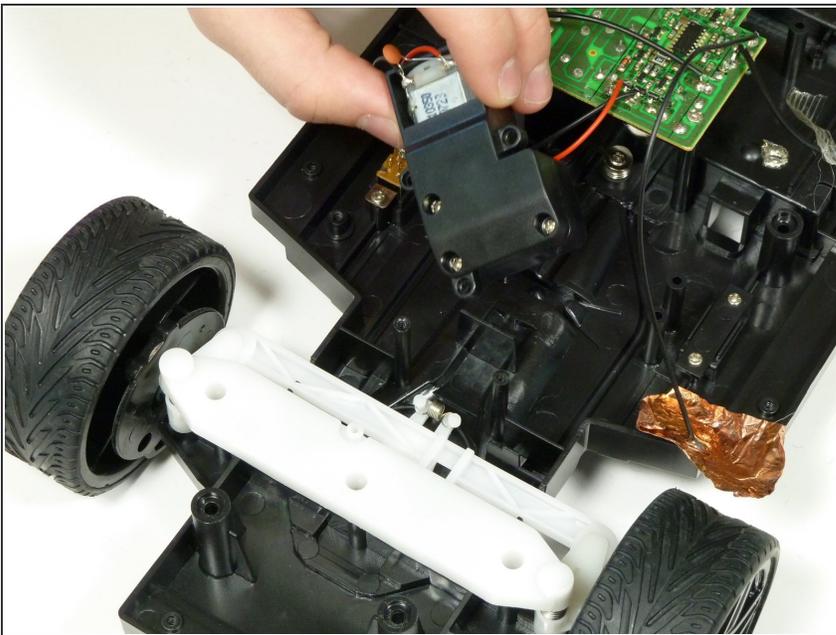

- Remove the front motor and its casing from the chassis of the car.

## Step 15

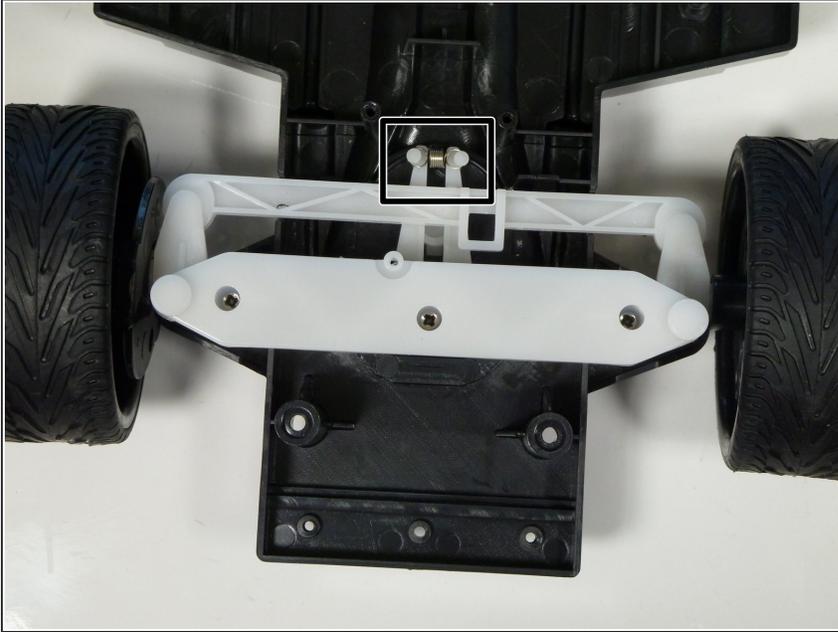

- Carefully remove the steering column spring.

To reassemble your device, follow these instructions in reverse order.