



Zoomer Jurassic World Indominus Rex Nose Sensors Replacement

If the rest of the toy is working properly, but it does not respond to your hand gestures, follow the troubleshooting steps on our [Device Troubleshooting Page](#). If you conclude that the nose sensors are broken, follow this repair guide.

Written By: Luke Selby



INTRODUCTION

Here it is! The mighty Indominus Rex has fallen prey to mechanical failure. Let's get him up and running again.

TOOLS:

- [Heavy-Duty Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Soldering Workstation](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Mouth Part




- i** Flip the toy over to gain direct access to the first screws you need to remove for the replacement.
- Remove the two (2) 7.5mm phillips screws using Phillips #1 screwdriver from the bottom of the jaw.
 - Remove the two (2) 7.2mm phillips screws using Phillips #0 screwdriver from the bottom of the jaw.
 - Gently remove the entire bottom jaw piece.

Step 2



- Remove the 7.5mm phillips screw using Phillips #1 screwdriver from the middle of the tongue.
- Using a spudger, gently pry the tongue out of the mouth.

Step 3 — Nose Sensors

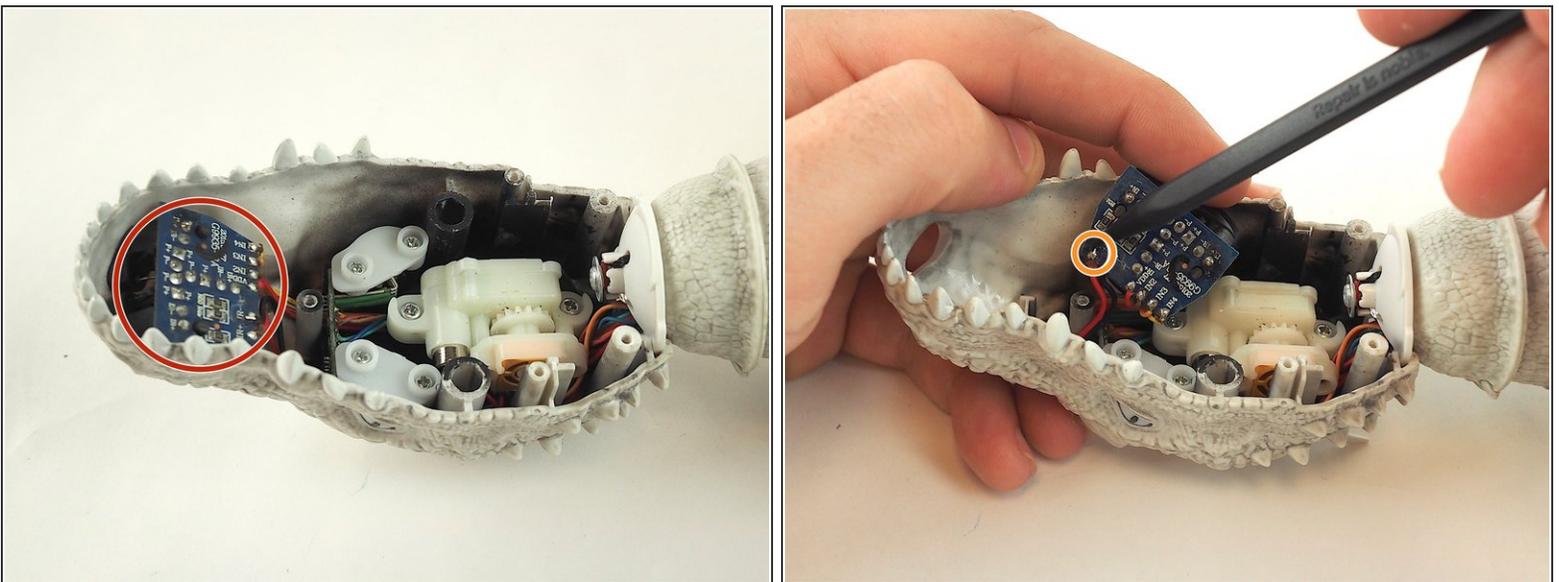

- Carefully, pull out the circuit board that has the three nose sensors attached.
 - You're almost done! The only thing left to do is to use a soldering iron to remove the six (6) wires connected to the circuit board.
- ⚠ Use caution when soldering to avoid being burned.

To reassemble your device, follow these instructions in reverse order.