



# fix a dead acer aspierr switch 10 (model number not required)

Error given, screen freezes, turning it off you have a brick (not a bios issue),

Written By: Travesty

## INTRODUCTION

Mine gave me a cryptic message of some SD buss ~, quitting and it will fix itself, even showed a counter that starts at zero that never changed.

I shut it down after the appropriate time and it never started again. So I fixed it.

Placing it on it's pads with the top shut, that top has to be removed; it has a bezel (ridge) around it's parameter flush to it is the top .

With a very small bladed screw driver you need pry the top off from inside that bezel, there are some 15-20 post that keep it in place and what you have to release (not a big deal).

Taking it slow and deliberate you won't leave a mark (best to mark it's position to put back together correctly (I forgot, yet a 50/50 chance)).

Once the top is off find the battery (duh) and the wires that come from it, disconnecting it from it's female terminal on the mother board.

Watch a movie on the TV with no power being supplied to the switch, just let it alone for awhile (the longer the better).

You need for it to completely discharge -it's the capacitors that will hold the charge and time given for them to discharge.

The power supply has no ground wire so plugging it in will just supply power.

---

When enough time has past - plug in the battery, and snap the top back into place.

Mine booted right up like nothing had happened.

---

## TOOLS:

- [iFixit Opening Tools](#) (1)
-

To reassemble your device, follow these instructions in reverse order.