



***LambdaUnite*[®] MultiService Switch (MSS)**

Release 4.0

Operations System Engineering Guide

365-374-099
CC109330548
Issue a
March 2003

Lucent Technologies - Proprietary

This document contains proprietary information
of Lucent Technologies and is not to be disclosed or used
except in accordance with applicable agreements

Copyright © 2003 Lucent Technologies
Unpublished and Not for Publication
All Rights Reserved



This material is protected by the copyright and trade secret laws of the United States and other countries. It may not be reproduced, distributed, or altered in any fashion by any entity (either internal or external to Lucent Technologies), except in accordance with applicable agreements, contracts or licensing, without the express written consent of Lucent Technologies and the business management owner of the material.

Lucent Learning +49 911 526 3315 or +49 911 526 2455

Notice

Every effort has been made to ensure that the information in this document was complete and accurate at the time of printing. However, information is subject to change.

Mandatory customer information

Declaration of Conformity

The Declaration of Conformity (DoC) for this product can be found in the Applications and Planning Guide in the chapter “Quality and reliability”, or at: <http://www.lucent.de/ecl>.

Trademarks

These trademarks are used in this manual:

LambdaUnite is a trademark of Lucent Technologies.

Ordering information

The order number of this document is 365-374-099 (Issue a).

Support

Technical support

Please contact your Lucent Technologies Local Customer Support Team (LCS) for technical questions about the information in this document.

Information product support

To comment on this information product online, go to <http://www.lucent-info.com/comments> or email your comments to ctiphotline@lucent.com.



Contents

About this information product

<u>Purpose</u>	<u>xxvii</u>
<u>Reason for reissue</u>	<u>xxvii</u>
<u>Safety labels</u>	<u>xxvii</u>
<u>Conventions used</u>	<u>xxvii</u>
<u>Overview of the document</u>	<u>xxviii</u>
<u>Documented feature set</u>	<u>xxix</u>
<u>Intended use</u>	<u>xxix</u>
<u>Optical safety</u>	<u>xxix</u>
<u>Technical Documentation</u>	<u>xxxiv</u>
<u>How to comment</u>	<u>xxxiv</u>

1 General information

<u>Overview</u>	<u>1-1</u>
<u>TL1 message index</u>	<u>1-2</u>
<u>TL1 command state diagram</u>	<u>1-11</u>
<u>Data base change notifications</u>	<u>1-13</u>
<u>Sequence constraints</u>	<u>1-16</u>

2 AID structure

[Overview](#) [2-1](#)

Introduction

[Overview](#) [2-3](#)

[AID syntax](#) [2-4](#)

[Access Identifier \(AID\) syntax](#) [2-5](#)

System level AIDs

[Overview](#) [2-7](#)

[System AID](#) [2-8](#)

[MDI/MDO](#) [2-9](#)

[Timing](#) [2-10](#)

[OSI nodes](#) [2-11](#)

[SCN node](#) [2-12](#)

[General node](#) [2-13](#)

Hierarchically specified AIDs

[Overview](#) [2-14](#)

[Compound AID syntax overview](#) [2-16](#)

[Range specifications](#) [2-19](#)

[Physical layout](#) [2-20](#)

[Bay \(rack\) and shelf \(subrack\)](#) [2-21](#)

[Fans](#) [2-22](#)

[Power interface](#) [2-23](#)

[Backplane](#) [2-24](#)

[User panel](#) [2-25](#)

<u>CI-CTL</u>	<u>2-26</u>
<u>User byte ports</u>	<u>2-27</u>
<u>LAN ports</u>	<u>2-28</u>
<u>Timing interfaces (TI)</u>	<u>2-29</u>
<u>Slot</u>	<u>2-30</u>
<u>Circuit pack</u>	<u>2-32</u>
<u>Socket</u>	<u>2-33</u>
<u>SDH/SONET port</u>	<u>2-34</u>
<u>GbE port</u>	<u>2-36</u>
<u>Virtual concatenation group (VCG)</u>	<u>2-37</u>
<u>AU-3/STS-1 tributary</u>	<u>2-38</u>
<u>Virtual concatenation group (VCG) tributary</u>	<u>2-39</u>
<u>Generic tributary</u>	<u>2-40</u>
<u>Protection groups</u>	<u>2-41</u>
<u>Switch and timing equipment protection group</u>	<u>2-43</u>
<u>Controller equipment protection group</u>	<u>2-44</u>
<u>General equipment protection groups</u>	<u>2-45</u>
<u>Examples</u>	<u>2-46</u>

3 Common data types

<u>Overview</u>	<u>3-1</u>
<u>Conventions used in message descriptions</u>	<u>3-2</u>

4 T11 messages - administration & security

<u>Overview</u>	<u>4-1</u>

Session

<u>Overview</u>	<u>4-3</u>
<u>ACT-USER: Activate user</u>	<u>4-4</u>
<u>CANC-USER: Cancel user</u>	<u>4-11</u>
<u>CANC-USER-SECU: Cancel user security</u>	<u>4-13</u>

NE security administration

<u>Overview</u>	<u>4-16</u>
<u>RTRV-NE-SECU: Retrieve NE security</u>	<u>4-17</u>
<u>ED-NE-SECU: Edit NE security</u>	<u>4-20</u>
<u>ED-NE-SECU notification</u>	<u>4-22</u>

User administration

<u>Overview</u>	<u>4-23</u>
<u>RTRV-USER-SECU: Retrieve user security</u>	<u>4-24</u>
<u>RTRV-USER: Retrieve user</u>	<u>4-31</u>
<u>ENT-USER-SECU: Enter user security</u>	<u>4-33</u>
<u>ENT-USER-SECU notification</u>	<u>4-38</u>
<u>ED-USER-SECU: Edit user security</u>	<u>4-40</u>
<u>ED-USER-SECU notification</u>	<u>4-45</u>
<u>ED-USER: Edit user</u>	<u>4-47</u>
<u>ED-USER notification</u>	<u>4-49</u>
<u>ED-PID: Edit password identifier</u>	<u>4-50</u>
<u>ED-PID notification</u>	<u>4-54</u>
<u>DLT-USER-SECU: Delete user security</u>	<u>4-55</u>
<u>DLT-USER-SECU notification</u>	<u>4-58</u>

5 TL1 messages - configuration management

Overview	5-1
System	
Overview	5-7
RTRV-HDR: Retrieve header	5-8
RTRV-ATTR-MSG: Retrieve attribute message	5-28
INH-MSG: Inhibit message	5-31
ALW-MSG: Allow message	5-33
RTRV-ACTLCP: Retrieve acceptable circuit pack list	5-35
RTRV-STATE-EQPT (system): Retrieve equipment state	5-38
ED-STATE-EQPT (system): Edit equipment state	5-42
ED-STATE-EQPT (system) notification	5-44
RTRV-EQPT (system): Retrieve Equipment (system)	5-45
ED-EQPT (system): Edit equipment (system)	5-49
ED-EQPT (system) notification	5-55
RTRV-AO: Retrieve Autonomous Output	5-56
RTRV-LOG-NTFCN: Retrieve notification Log	5-60
RTRV-LOG-NNEVT: Retrieve NN Event Log	5-64
REPT DBCHG: Report data base change	5-67
ED-DAT: Edit date and time	5-70
ED-DAT notification	5-73
SET-SID: Set SID	5-74
SET-SID notification	5-77
INIT-SYS: Initialize System	5-78

Autonomous notifications	5-80

Bay

Overview	5-81

RTRV-EQPT (bay): Retrieve Equipment (bay)	5-82

Autonomous notifications	5-84

Shelf

Overview	5-85

RTRV-EQPT (shelf): Retrieve Equipment (shelf)	5-86

ED-EQPT (shelf): Edit equipment (shelf)	5-89

ED-EQPT (shelf) notification	5-91

Autonomous notifications	5-92

Slot

Overview	5-93

RTRV-EQPT (slot): Retrieve Equipment (slot)	5-94

ENT-EQPT (slot): Enter equipment (slot)	5-100

ED-EQPT (slot): Edit equipment (slot)	5-109

ED-EQPT notification	5-113

DLT-EQPT (slot): Delete equipment (slot)	5-117

RTRV-STATE-EQPT (slot): Retrieve equipment state (slot)	5-125

ED-STATE-EQPT (slot) notification	5-128

INIT-EQPT (slot): Initialize equipment (slot)	5-129

Autonomous notifications	5-132

Socket

Overview	5-134

RTRV-EQPT (Socket): Retrieve equipment	5-135

<u>ENT-EQPT (Socket): Enter equipment</u>	<u>5-143</u>
<u>ENT-EQPT notification</u>	<u>5-146</u>
<u>ED-EQPT (Socket): Edit equipment</u>	<u>5-147</u>
<u>ED-EQPT notification</u>	<u>5-150</u>
<u>DLT-EQPT (Socket): Delete equipment</u>	<u>5-156</u>
<u>DLT-EQPT notification</u>	<u>5-161</u>
<u>RTRV-STATE-EQPT (Socket): Retrieve equipment state</u>	<u>5-162</u>
<u>ED-STATE-EQPT notification</u>	<u>5-165</u>
<u>Autonomous notifications</u>	<u>5-166</u>
Circuit pack	
<u>Overview</u>	<u>5-168</u>
<u>RTRV-EQPT (CP): Retrieve equipment (circuit pack)</u>	<u>5-169</u>
<u>ENT-EQPT notification</u>	<u>5-176</u>
<u>ED-EQPT (CP): Edit equipment (circuit pack)</u>	<u>5-177</u>
<u>ED-EQPT (cp) notification</u>	<u>5-181</u>
<u>DLT-EQPT notification</u>	<u>5-182</u>
<u>RTRV-STATE-EQPT (CP): Retrieve equipment state (circuit pack)</u>	<u>5-184</u>
<u>ED-STATE-EQPT notification</u>	<u>5-187</u>
<u>Autonomous notifications</u>	<u>5-188</u>
Port	
<u>Overview</u>	<u>5-189</u>
<u>RTRV-STM1E: Retrieve STM1E port</u>	<u>5-192</u>
<u>RTRV-STM1: Retrieve STM1 port</u>	<u>5-199</u>
<u>RTRV-STM4: Retrieve STM4 port</u>	<u>5-206</u>
<u>RTRV-STM16: Retrieve STM16 port</u>	<u>5-214</u>

<u>RTRV-STM64: Retrieve STM64 port</u>	<u>5-228</u>
<u>RTRV-STM256: Retrieve STM256 port</u>	<u>5-237</u>
<u>RTRV-OC3: Retrieve OC3 port</u>	<u>5-243</u>
<u>RTRV-OC12: Retrieve OC12 port</u>	<u>5-250</u>
<u>RTRV-OC48: Retrieve OC48 port</u>	<u>5-257</u>
<u>RTRV-OC192: Retrieve OC192 port</u>	<u>5-267</u>
<u>RTRV-OC768: Retrieve OC768 port</u>	<u>5-275</u>
<u>RTRV-ALL: Retrieve all</u>	<u>5-282</u>
<u>ED-STM1E: Edit STM1E port</u>	<u>5-285</u>
<u>ED-STM1E notification</u>	<u>5-299</u>
<u>ENT- STM1E notification</u>	<u>5-303</u>
<u>DLT- STM1E notification</u>	<u>5-307</u>
<u>ED-STM1E autonomous notifications</u>	<u>5-308</u>
<u>ED-STM1: Edit STM1 port</u>	<u>5-309</u>
<u>ED-STM1 notification</u>	<u>5-324</u>
<u>ENT-STM1 notification</u>	<u>5-328</u>
<u>DLT-STM1 notification</u>	<u>5-332</u>
<u>ED-STM1 autonomous notifications</u>	<u>5-333</u>
<u>ED-STM4: Edit STM4 port</u>	<u>5-334</u>
<u>ED-STM4 notification</u>	<u>5-349</u>
<u>ENT-STM4 notification</u>	<u>5-353</u>
<u>DLT-STM4 notification</u>	<u>5-357</u>
<u>ED-STM4 autonomous notifications</u>	<u>5-358</u>
<u>ED-STM16: Edit STM16 port</u>	<u>5-359</u>
<u>ED-STM16 notification</u>	<u>5-378</u>

<u>ENT-STM16 notification</u>	<u>5-382</u>
<u>DLT-STM16 notification</u>	<u>5-386</u>
<u>ED-STM16 autonomous notifications</u>	<u>5-387</u>
<u>ED-STM64: Edit STM64 port</u>	<u>5-388</u>
<u>ED-STM64 notification</u>	<u>5-405</u>
<u>ENT-STM64 notification</u>	<u>5-410</u>
<u>DLT-STM64 notification</u>	<u>5-415</u>
<u>ED-STM64 autonomous notifications</u>	<u>5-416</u>
<u>ED-STM256: Edit STM256 port</u>	<u>5-417</u>
<u>ED-STM256 notification</u>	<u>5-426</u>
<u>ENT-STM256 notification</u>	<u>5-430</u>
<u>DLT-STM256 notification</u>	<u>5-434</u>
<u>ED-STM256 autonomous notifications</u>	<u>5-435</u>
<u>ED-OC3: Edit OC3 port</u>	<u>5-436</u>
<u>ED-OC3 notification</u>	<u>5-451</u>
<u>ENT-OC3 notification</u>	<u>5-455</u>
<u>DLT-OC3 notification</u>	<u>5-459</u>
<u>ED-OC3 autonomous notifications</u>	<u>5-460</u>
<u>ED-OC12: Edit OC12 port</u>	<u>5-461</u>
<u>ED-OC12 notification</u>	<u>5-476</u>
<u>ENT-OC12 notification</u>	<u>5-480</u>
<u>DLT-OC12 notification</u>	<u>5-484</u>
<u>ED-OC12 autonomous notifications</u>	<u>5-485</u>
<u>ED-OC48: Edit OC48 port</u>	<u>5-486</u>
<u>ED-OC48 notification</u>	<u>5-504</u>

<u>ENT-OC48 notification</u>	<u>5-508</u>
<u>DLT-OC48 notification</u>	<u>5-512</u>
<u>ED-OC48 autonomous notifications</u>	<u>5-513</u>
<u>ED-OC192: Edit OC192 port</u>	<u>5-514</u>
<u>ED-OC192 notification</u>	<u>5-530</u>
<u>ENT-OC192 notification</u>	<u>5-535</u>
<u>DLT-OC192 notification</u>	<u>5-539</u>
<u>ED-OC192 autonomous notifications</u>	<u>5-540</u>
<u>ED-OC768: Edit OC768 port</u>	<u>5-541</u>
<u>ED-OC768 notification</u>	<u>5-551</u>
<u>ENT-OC768 notification</u>	<u>5-555</u>
<u>DLT-OC768 notification</u>	<u>5-559</u>
<u>ED-OC768 autonomous notifications</u>	<u>5-560</u>
Tributary	
<u>Overview</u>	<u>5-561</u>
<u>RTRV-VC3: Retrieve VC3 tributary</u>	<u>5-562</u>
<u>RTRV-ST51: Retrieve ST51 tributary</u>	<u>5-571</u>
<u>RTRV-ALL: Retrieve all</u>	<u>5-576</u>
<u>ED-VC3: Edit VC3 tributary</u>	<u>5-579</u>
<u>ED-ST51: Edit ST51 tributary</u>	<u>5-585</u>
<u>ED-VC3 notification</u>	<u>5-590</u>
<u>ENT-VC3 notification</u>	<u>5-593</u>
<u>DLT-VC3 notification</u>	<u>5-596</u>
<u>ED-ST51 notification</u>	<u>5-597</u>
<u>ENT-ST51 notification</u>	<u>5-600</u>

DLT-STSI notification	5-603
Autonomous notification	5-604

6 TL1 messages - fault management

Overview	6-1

Introduction

Overview	6-4

Alarms, events, ASAPs	6-5

MDI / MDO	6-7

Alarm assignment profiles

Overview	6-8

RTRV-ASAP-PROF: Retrieve ASAP profile	6-9

RTRV-ASAP-ASGNMT: Retrieve ASAP assignment	6-14

ENT-ASAP-PROF: Enter alarm severity assignment profile	6-17

ENT-ASAP-PROF notification	6-19

ED-ASAP-PROF: Edit alarm severity assignment profile	6-20

ED-ASAP-PROF notification	6-24

DLT-ASAP-PROF: Delete alarm severity assignment profile	6-26

DLT-ASAP-PROF notification	6-28

Alarms

Overview	6-29

RTRV-ALM: Retrieve alarm	6-30

RTRV-COND: Retrieve condition	6-37

REPT ALM: Report alarm	6-44

REPT EVT: Report event	6-47

Alarm log

[Overview](#) 6-53

[RTRV-LOG-ALM: Retrieve log alarm](#) 6-54

MDI

[Overview](#) 6-59

[RTRV-ALM-ENV: Retrieve alarm environment](#) 6-60

[RTRV-ATTR-ENV: Retrieve attribute environment](#) 6-64

[SET-ATTR-ENV: Set attribute environment](#) 6-68

[SET-ATTR-ENV notification](#) 6-71

[REPT-ALM-ENV: Report Alarm Environment](#) 6-72

MDO

[Overview](#) 6-75

[RTRV-ATTR-CONT: Retrieve attribute control](#) 6-76

[RTRV-ACTL-CONT: Retrieve actual condition types](#) 6-80

[RTRV-EXT-CONT: Retrieve external control](#) 6-83

[SET-ATTR-CONT: Set attribute control](#) 6-86

[SET-ATTR-CONT notification](#) 6-89

[OPR-EXT-CONT: Operate External Control](#) 6-90

[OPR-EXT-CONT notification](#) 6-92

[RLS-EXT-CONT: Release external control](#) 6-93

[RLS-EXT-CONT notification](#) 6-95

Alarm, event, ASAP tables

[Overview](#) 6-96

[ASAP Type DCN](#) 6-99

[ASAP Type ENET](#) 6-100

<u>ASAP Type ENV</u>	<u>6-103</u>
<u>ASAP Type EQUIP-PROT</u>	<u>6-105</u>
<u>ASAP Type EQUIP-UNPROT</u>	<u>6-109</u>
<u>ASAP Type MSSPRING-BLSR</u>	<u>6-114</u>
<u>ASAP Type MSP-APS</u>	<u>6-117</u>
<u>ASAP Type PATH</u>	<u>6-119</u>
<u>ASAP Type PATHTERM</u>	<u>6-121</u>
<u>ASAP Type PORT</u>	<u>6-123</u>
<u>ASAP Type SNCP-UPSR</u>	<u>6-126</u>
<u>ASAP Type TIMING</u>	<u>6-127</u>
<u>Entity – ASAP relation</u>	<u>6-128</u>

7 TL1 messages - transmission and cross-connect handling

<u>Overview</u>	<u>7-1</u>
Cross-connection	
<u>Overview</u>	<u>7-4</u>
<u>RTRV-CRS: Retrieve cross-connection</u>	<u>7-6</u>
<u>ENT-CRS: Enter cross-connection</u>	<u>7-25</u>
<u>ENT-CRS notification</u>	<u>7-44</u>
<u>ED-CRS: Edit Cross-connection</u>	<u>7-46</u>
<u>ED-CRS notification</u>	<u>7-51</u>
<u>ED-NNCRS: Edit NN cross-connection</u>	<u>7-53</u>
<u>DLT-CRS: Delete cross-connection</u>	<u>7-56</u>
<u>DLT-CRS notification</u>	<u>7-64</u>
<u>ENT-ROLL: Enter roll</u>	<u>7-65</u>

<u>CNVT-CCT: Convert cross-connection topology</u>	<u>7-72</u>
<u>Autonomous notification</u>	<u>7-86</u>
Tributary	
<u>Overview</u>	<u>7-88</u>
<u>RTRV-LPBK: Retrieve loopback (here cross-connection loopback)</u>	<u>7-89</u>
<u>OPR-LPBK (here cross-connection loopback)</u>	<u>7-93</u>
<u>OPR-LPBK notification (here cross-connection loopback)</u>	<u>7-100</u>
<u>RLS-LPBK: Release loopback (here cross-connection loopback)</u>	<u>7-101</u>
<u>RLS-LPBK notification (here cross-connection loopback)</u>	<u>7-104</u>
Port	
<u>Overview</u>	<u>7-105</u>
<u>RTRV-LPBK: Retrieve loopback (here facility loopback)</u>	<u>7-106</u>
<u>OPR-LPBK: Operate loopback (here facility loopback)</u>	<u>7-111</u>
<u>OPR-LPBK notification (here facility loopback)</u>	<u>7-117</u>
<u>RLS-LPBK: Release loopback (here facility loopback)</u>	<u>7-118</u>
<u>RLS-LPBK notification (here facility loopback)</u>	<u>7-122</u>
UserByte port	
<u>Overview</u>	<u>7-123</u>
<u>RTRV-OW: Retrieve Orderwire and User Bytes</u>	<u>7-124</u>
<u>SET-OW: Set Orderwire and User Bytes</u>	<u>7-128</u>
<u>SET-OW notification</u>	<u>7-132</u>
<u>Autonomous notification</u>	<u>7-133</u>
Virtual switch	
<u>Overview</u>	<u>7-134</u>
<u>RTRV-VRTSW: Retrieve Virtual Switch</u>	<u>7-136</u>

<u>ENT-VRTSW notification</u>	<u>7-143</u>
<u>ED-VRTSW: Edit Virtual Switch</u>	<u>7-145</u>
<u>ED-VRTSW notification</u>	<u>7-148</u>
<u>DLT-VRTSW notification</u>	<u>7-150</u>
Ethernet port	
<u>Overview</u>	<u>7-151</u>
<u>RTRV-EPORT: Retrieve Ethernet port</u>	<u>7-153</u>
<u>ENT-EPORT notification</u>	<u>7-165</u>
<u>ED-EPORT: Edit Ethernet port</u>	<u>7-168</u>
<u>ED-EPORT notification</u>	<u>7-174</u>
<u>DLT-EPORT notification</u>	<u>7-176</u>
<u>Autonomous notifications</u>	<u>7-177</u>
Virtual concatenation group	
<u>Overview</u>	<u>7-178</u>
<u>RTRV-VCG: Retrieve virtual concatenation group</u>	<u>7-180</u>
<u>ENT-VCG notification</u>	<u>7-190</u>
<u>ED-VCG: Edit virtual concatenation group</u>	<u>7-193</u>
<u>ED-VCG notification</u>	<u>7-201</u>
<u>DLT-VCG notification</u>	<u>7-204</u>
<u>Autonomous notifications</u>	<u>7-205</u>
Virtual concatenation group tributary	
<u>Overview</u>	<u>7-206</u>
<u>RTRV-VCGTRIB: Retrieve virtual concatenation group tributary</u>	<u>7-207</u>
<u>ENT-VCGTRIB notification</u>	<u>7-221</u>
<u>ED-VCGTRIB: Edit virtual concatenation group tributary</u>	<u>7-224</u>

<u>ED-VCGTRIB notification</u>	<u>7-230</u>
<u>DLT-VCGTRIB notification</u>	<u>7-233</u>
<u>OPR-VCGTRIB: Operate virtual concatenation group tributary</u>	<u>7-234</u>
<u>Autonomous notifications</u>	<u>7-236</u>
Remote Test Access	
<u>Overview</u>	<u>7-237</u>
<u>RTRV-TACC: Retrieve test access</u>	<u>7-241</u>
<u>CONN-TACC: Connect test access</u>	<u>7-246</u>
<u>CONN-TACC notification</u>	<u>7-252</u>
<u>CHG-ACCMD: Change access mode</u>	<u>7-254</u>
<u>CHG-ACCMD notification</u>	<u>7-257</u>
<u>DISC-TACC: Disconnect test access</u>	<u>7-258</u>
<u>DISC-TACC notification</u>	<u>7-260</u>

8 TL1 messages - protection

<u>Overview</u>	<u>8-1</u>
Protection group	
<u>Overview</u>	<u>8-3</u>
<u>Introduction to protection groups</u>	<u>8-5</u>
<u>RTRV-PROTN-GRP: Retrieve protection group</u>	<u>8-13</u>
<u>ENT-PROTN-GRP: Enter protection group</u>	<u>8-56</u>
<u>ENT-PROTN-GRP notification</u>	<u>8-74</u>
<u>ED-PROTN-GRP: Edit protection group</u>	<u>8-80</u>
<u>ED-PROTN-GRP notification</u>	<u>8-92</u>
<u>DLT-PROTN-GRP: Delete protection group</u>	<u>8-97</u>

<u>DLT-PROTN-GRP notification</u>	<u>8-106</u>
<u>OPR-PROTNSW: Operate protection switch</u>	<u>8-109</u>
<u>RLS-PROTNSW: Release protection switch</u>	<u>8-125</u>
<u>REPT SW: Report switch</u>	<u>8-133</u>
<u>Protection switch notification</u>	<u>8-135</u>
<u>Autonomous notifications</u>	<u>8-147</u>
Protection log	
<u>Overview</u>	<u>8-149</u>
<u>RTRV-LOG-PROTNSW: Retrieve log protection switch</u>	<u>8-150</u>
<u>Autonomous notifications</u>	<u>8-156</u>
Ring map	
<u>Overview</u>	<u>8-157</u>
<u>RTRV-MAP-RING: Retrieve map ring</u>	<u>8-158</u>
<u>ED-MAP-RING: Edit map ring</u>	<u>8-165</u>
<u>SET-MAP-RING: Set map ring</u>	<u>8-168</u>
<u>SET-MAP-RING: notification</u>	<u>8-170</u>
<u>ED-FETID: Edit Far End Target Identifier</u>	<u>8-171</u>
<u>ED-FETID notification</u>	<u>8-174</u>

9 TL1 messages - performance monitoring

<u>Overview</u>	<u>9-1</u>
PM register/bin	
<u>Overview</u>	<u>9-2</u>
<u>PM parameters</u>	<u>9-3</u>
<u>RTRV-PM: Retrieve performance monitoring</u>	<u>9-7</u>

<u>RTRV-EPM: Ethernet performance monitoring</u>	<u>9-15</u>
<u>TCA notification</u>	<u>9-19</u>
TCA Profile	
<u>Overview</u>	<u>9-22</u>
<u>TCA Profile</u>	<u>9-23</u>
<u>RTRV-TCA-PROF: Retrieve TCA Profile</u>	<u>9-25</u>
<u>ENT-TCA-PROF: Enter TCA Profile</u>	<u>9-60</u>
<u>ENT-TCA-PROF notification</u>	<u>9-63</u>
<u>ED-TCA-PROF: Edit TCA profile</u>	<u>9-81</u>
<u>ED-TCA-PROF notification</u>	<u>9-101</u>
<u>DLT-TCA-PROF: Delete TCA Profile</u>	<u>9-119</u>
<u>DLT-TCA-PROF notification</u>	<u>9-122</u>
<u>System Start-up with Default DB</u>	<u>9-123</u>

10 TL1 messages - synchronization

<u>Overview</u>	<u>10-1</u>
<u>RTRV-SYCN: Retrieve synchronization</u>	<u>10-3</u>
<u>SET-SYCN: Set synchronization</u>	<u>10-19</u>
<u>SET-SYCN notification</u>	<u>10-27</u>
<u>OPR-SYCN: Operate synchronization switch</u>	<u>10-31</u>
<u>RLS-SYCN: Release synchronization switch</u>	<u>10-37</u>
<u>Protection switch notification</u>	<u>10-41</u>
<u>Autonomous notifications</u>	<u>10-46</u>

11 TL1 messages - software & database management

<u>Overview</u>	<u>11-1</u>

<u>RTRV-PRMTR-DATA: Retrieve parameter data</u>	<u>11-3</u>
<u>RTRV-PRMTR-SFTWR: Retrieve parameter software</u>	<u>11-13</u>
<u>CPY-MEM: Copy memory</u>	<u>11-20</u>
<u>CPY-NEM Notification</u>	<u>11-31</u>
<u>COPY-RFILE: Copy remote file</u>	<u>11-33</u>
<u>REPT EVT FXFR: Report Event FXFR</u>	<u>11-39</u>
<u>APPLY: Apply software generic</u>	<u>11-42</u>
<u>APPLY notification</u>	<u>11-46</u>

12 TL1 messages - data communications network

<u>Overview</u>	<u>12-1</u>
General DCN parameters	
<u>Overview</u>	<u>12-4</u>
<u>RTRV-NE: Retrieve NE</u>	<u>12-5</u>
<u>ED-NE: Edit NE</u>	<u>12-8</u>
<u>ED-NE notification</u>	<u>12-11</u>
DCC terminations	
<u>Overview</u>	<u>12-12</u>
<u>RTRV-FECOM: Retrieve DCC related parameters</u>	<u>12-13</u>
<u>ENT-FECOM: Enter DCC channel related parameters</u>	<u>12-18</u>
<u>ED-FECOM notification</u>	<u>12-26</u>
<u>ENT-FECOM notification</u>	<u>12-28</u>
<u>DLT-FECOM notification</u>	<u>12-30</u>
Transparent DCC cross-connection	
<u>Overview</u>	<u>12-31</u>

<u>RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection</u>	<u>12-32</u>
<u>ENT-CRS-FECOM: Enter transparent DCC cross-connection</u>	<u>12-36</u>
<u>ENT-CRS-FECOM notification</u>	<u>12-39</u>
<u>DLT-CRS-FECOM: Delete transparent DCC cross-connection</u>	<u>12-40</u>
<u>DLT-CRS-FECOM notification</u>	<u>12-43</u>
LAN	
<u>Overview</u>	<u>12-44</u>
<u>RTRV-FECOM-LAN: Retrieve LAN channel related parameters</u>	<u>12-45</u>
<u>ENT-FECOM-LAN: Enter LAN related parameters</u>	<u>12-50</u>
<u>ENT-FECOM-LAN notification</u>	<u>12-57</u>
<u>Autonomous notification</u>	<u>12-59</u>
OSI network layer	
<u>Overview</u>	<u>12-60</u>
<u>RTRV-ULSDCC-L3: Retrieve layer 3 related parameters</u>	<u>12-61</u>
<u>ENT-ULSDCC-L3: Create a further OSI node</u>	<u>12-67</u>
<u>ENT-ULSDCC-L3 Notification</u>	<u>12-72</u>
<u>ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.</u>	<u>12-74</u>
<u>ED-ULSDCC-L3 notification</u>	<u>12-79</u>
<u>DLT-ULSDCC-L3: Delete a node ID other than node-1</u>	<u>12-81</u>
<u>DLT-ULSDCC-L3 Notification</u>	<u>12-84</u>
<u>Autonomous notification</u>	<u>12-85</u>
OSI transport layer and TARP	
<u>Overview</u>	<u>12-86</u>
<u>RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters</u>	<u>12-87</u>
<u>ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks</u>	<u>12-91</u>

<u>ENT-ULSDCC-L4 notification</u>	<u>12-96</u>
<u>DLT-ULSDCC-L4: Delete TARP manual adjacent NSAP address in layer 4 of the specified OSI stack</u>	<u>12-98</u>
<u>DLT-ULSDCC-L4 notification</u>	<u>12-100</u>
TCP/IP parameters	
<u>Overview</u>	<u>12-101</u>
<u>RTRV-ULS: Retrieve upper layer stack</u>	<u>12-102</u>
<u>ENT-ULS: Enter upper layer stack</u>	<u>12-105</u>
<u>ENT-ULS Notification</u>	<u>12-108</u>
IP Map	
<u>Overview</u>	<u>12-109</u>
<u>RTRV-IP-MAP: Retrieve TCP/IP map</u>	<u>12-110</u>
<u>ENT-IP-MAP: Enter TCP/IP map</u>	<u>12-113</u>
<u>ENT-IP-MAP Notification</u>	<u>12-116</u>
<u>DLT-IP-MAP: Delete TCP/IP map</u>	<u>12-117</u>
<u>DLT-IP-MAP notification</u>	<u>12-119</u>
MAPs	
<u>Overview</u>	<u>12-120</u>
<u>RTRV-MAP-NEIGHBOR: Retrieve map neighbor</u>	<u>12-121</u>
<u>RTRV-MAP-NETWORK: Retrieve network map</u>	<u>12-126</u>
<u>RTRV-SCN-NEIGHBOR: Retrieve SCN neighbor</u>	<u>12-132</u>

13 Error codes

<u>Overview</u>	<u>13-1</u>
<u>List of error codes</u>	<u>13-2</u>

14 User privilege codes

Overview	14-1
List of user privilege codes	14-2

15 Optical network navigation system (ONNS)

Overview	15-1
RTRV-PATH: Retrieve ONNS path connection data	15-3
ED-PATH: Edit ONNS connection paths	15-18
ENT-PATH-protClass: Enter ONNS path connection	15-35
DLT-PATH: Delete ONNS path Connection	15-55
RTRV-NNCNFG: Retrieve ONNS configuration data	15-67
ED-NNCNFG: Edit ONNS configuration data	15-72
RTRV-NTDR: Retrieve ONNS data repository	15-75
RTRV-NNDR: Retrieve ONNS Data information	15-88
REPT-NNCHG: Report ONNS data repository changes	15-104
REPT-PTHCHG: Report path change	15-107
REPT-PTHEVT: Report ONNS Path Events	15-121
REPT-NNEVT: Report ONNS internal events	15-129
ED-SYNCDATA: Edit synchronization data	15-133
OPR-DEFRAG: Perform link defragmentation on an ONNS port	15-137
RTRV-PREDEFRAG: Perform pre link defragmentation analysis on an ONNS port	15-141
AUD: Execute audit on various types of ONNS data and return the result of audit	15-146
RTRV-AudLog: Retrieve the last audit result on various types of ONNS data	15-151

Connection status relation to path states	15-156
Path state definitions	15-159
List of error codes	15-161

16 Amendments

Overview	16-1

General amendments

Overview	16-2
Configuration management	16-3
ONNS	16-5
Protection (BLSR/S-SPRing, DRI/DNI,APS/MSP, UPSR/SNCP)	16-7
Equipment protection	16-11
Fault/Alarm management	16-12
Area DCN/DCC management	16-13
Security management	16-14
Gigabit Ethernet	16-15

TL1 amendments

Overview	16-16
Configuration management	16-17
Synchronization management	16-20
ONNS	16-22
Protection (BLSR/S-SPRing, DRI/DNI,APS/MSP, UPSR/SNCP)	16-23
Equipment protection	16-30
Fault/Alarm management	16-31
Remote test access	16-35

<u>DCN/DCC management</u>	<u>16-37</u>
<u>Security management</u>	<u>16-39</u>
<u>Gigabit Ethernet</u>	<u>16-40</u>
<u>Performance monitoring</u>	<u>16-41</u>

IN	<u>Index</u>	<u>IN-1</u>



About this information product

.....

Purpose This document describes the external TL1 interface for *LambdaUnite*[®] MultiService Switch (MSS) in terms of TL1 command, responses, and notification definitions.

This document does not cover the specification of the TL1 protocol itself or that of underlying protocols of the OSI or IP stack.

Reason for reissue The present release “a” is the first version of this manual.

Safety labels This manual contains no safety labels.

Conventions used See [“Conventions used in message descriptions” \(3-2\)](#) for detailed information.

Overview of the document

This manual is structured as follows:

- Chapter 1 contains introductory information (TL1 message index and command state diagram)
- Chapter 2 contains AID definitions, used to address entities with TL1 commands or notifications
- Chapter 3 contains data type definitions, used to define parameters in TL1 commands or notifications
- Chapter 4 to chapter 12 contain the detailed requirements for the TL1 commands separated by:
 - Administration & security
 - Configuration management
 - Fault management
 - Transmission and cross connect handling
 - Protection
 - Performance monitoring
 - Synchronization
 - Software and database management
 - Data communications network.

The command and notification list of an entity group can be appended by an definition of the default database state after node creation (if applicable). This definition describes which entities are (automatically) created after start-up of the system from an empty database.

Within an entity group in a functional area the RTRV command is listed first, followed by any ENT, ED, DLT, OPR, ...

command. REPT DBCHG notifications are directly described after the command which causes it. Other notifications are described after the whole command set per entity group.

Parameters within an entity group are first described in the RTRV command, including default values, which might only be applicable when used as initial values (ENT commands) or default values (ED commands). Other commands in the entity group typically only reference to the definition in the RTRV command. Exceptions are made when the parameter differs syntactically or semantically between RTRV and other command.

- Chapter 13 contains a list of error codes and the related links to the corresponding TL1 commands.
- Chapter 14 contains a list of TL1 commands and the corresponding user privilege codes in alphabetical order.
- Chapter 15 contains detailed information about the TL1 commands related to the Optical Network Navigation System (ONNS) feature.

Documented feature set This manual describes *LambdaUnite*[®] MSS release 4.0. For technical reasons some features have been documented that will not be available until later software versions. For precise information about the availability of features, please consult the Software Release Description. This provides details of the status at the time of software delivery.

Intended use This equipment shall be used only in accordance with intended use, corresponding installation and maintenance statements as specified in this documentation. Any other use or modification is prohibited.

Optical safety

IEC Customer Laser Safety Guidelines

Lucent Technologies declares that this product is compliant with all essential safety requirements as stated in IEC 60825-Part 1 and 2 “Safety of laser products” and “Safety of optical fibre telecommunication systems”. Furthermore Lucent Technologies declares that the warning statements on labels on this equipment are in accordance with the specified laser radiation class.

Optical Safety Declaration (if laser modules used)

Lucent Technologies declares that this product is compliant with all essential safety requirements as stated in IEC 60825-Part 1 and 2 “Safety of Laser Products” and “Safety of Optical Fiber Telecommunication Systems”. Furthermore Lucent Technologies

declares that the warning statements on labels on this equipment are in accordance with the specified laser radiation class.

Optical Fiber Communications

This equipment contains an Optical Fiber Communications semiconductor laser/LED transmitter. The following Laser Safety Guidelines are provided for this product.

General Laser Information

Optical fiber telecommunication systems, their associated test sets, and similar operating systems use semiconductor laser transmitters that emit infrared (IR) light at wavelengths between approximately 800 nanometers (nm) and 1600 nm. The emitted light is above the red end of the visible spectrum, which is normally not visible to the human eye. Although radiant energy at near-IR wavelengths is officially designated invisible, some people can see the shorter wavelength energy even at power levels several orders of magnitude below any that have been shown to cause injury to the eye.

Conventional lasers can produce an intense beam of monochromatic light. The term “monochromaticity” means a single wavelength output of pure color that may be visible or invisible to the eye. A conventional laser produces a small-size beam of light, and because the beam size is small the power density (also called irradiance) is very high. Consequently, lasers and laser products are subject to federal and applicable state regulations, as well as international standards, for their safe operation.

A conventional laser beam expands very little over distance, or is said to be very well collimated. Thus, conventional laser irradiance remains relatively constant over distance. However, lasers used in lightwave systems have a large beam divergence, typically 10 to 20 degrees. Here, irradiance obeys the inverse square law (doubling the distance reduces the irradiance by a factor of 4) and rapidly decreases over distance.

Lasers and Eye Damage

The optical energy emitted by laser and high-radiance LEDs in the 400-1400 nm range may cause eye damage if absorbed by the retina. When a beam of light enters the eye, the eye magnifies and focuses the energy on the retina magnifying the irradiance. The irradiance of the energy that reaches the retina is approximately 10⁵, or 100,000

times more than at the cornea and, if sufficiently intense, may cause a retinal burn.

The damage mechanism at the wavelengths used in an optical fiber telecommunications is thermal in origin, i.e., damage caused by heating. Therefore, a specific amount of energy is required for a definite time to heat an area of retinal tissue. Damage to the retina occurs only when one looks at the light long enough that the product of the retinal irradiance and the viewing time exceeds the damage threshold. Optical energies above 1400 nm cause corneal and skin burns, but do not affect the retina. The thresholds for injury at wavelengths greater than 1400 nm are significantly higher than for wavelengths in the retinal hazard region.

Classification of Lasers

Manufacturers of lasers and laser products in the U.S. are regulated by the Food and Drug Administration's Center for Devices and Radiological Health (FDA/CDRH) under 21 CFR 1040. These regulations require manufacturers to certify each laser or laser product as belonging to one of four major Classes: I, II, IIIa, IIIb, or IV. The International Electro-technical Commission is an international standards body that writes laser safety standards under IEC-60825. Classification schemes are similar with Classes divided into Classes 1, 1M, 2, 2M, 3R, 3B, and 4. Lasers are classified according to the accessible emission limits and their potential for causing injury. Optical fiber telecommunication systems are generally classified as Class I/1 because, under normal operating conditions, all energized laser transmitting circuit packs are terminated on optical fibers which enclose the laser energy with the fiber sheath forming a protective housing. Also, a protective housing/access panel is typically installed in front of the laser circuit pack shelves. The circuit packs themselves, however, may be FDA/CDRH Class I, IIIb, or IV or IEC Class 1, 1M, 3R, 3B, or 4.

Laser Safety Precautions for Optical Fiber Telecommunication Systems

In its normal operating mode, an optical fiber telecommunication system is totally enclosed and presents no risk of eye injury. It is a Class I/1 system under the FDA and IEC classifications.

The fiber optic cables that interconnect various components of an optical fiber telecommunication system can disconnect or break, and may expose people to laser emissions. Also, certain measures and

maintenance procedures may expose the technician to emission from the semiconductor laser during installation and servicing. Unlike more familiar laser devices such as solid-state and gas lasers, the emission pattern of a semiconductor laser results in a highly divergent beam. In a divergent beam, the irradiance (power density) decreases rapidly with distance. The greater the distance, the less energy will enter the eye, and the less potential risk for eye injury. Inadvertently viewing an un-terminated fiber or damaged fiber with the unaided eye at distances greater than 5 to 6 inches normally will not cause eye injury, provided the power in the fiber is less than a few milliwatts at the near IR wavelengths and a few tens of milliwatts at the far IR wavelengths. However, damage may occur if an optical instrument such as a microscope, magnifying glass, or eye loupe is used to stare at the energized fiber end.



CAUTION

Use of controls, adjustments, and procedures other than those specified herein may result in hazardous laser radiation exposure.

Laser Safety Precautions for Enclosed Systems

Under normal operating conditions, optical fiber telecommunication systems are completely enclosed; nonetheless, the following precautions shall be observed:

1. Because of the potential for eye damage, technicians should not stare into optical connectors or broken fibers
2. Under no circumstance shall laser/fiber optic operations be performed by a technician before satisfactorily completing an approved training course
3. Since viewing laser emissions directly in excess of Class I/1 limits with an optical instrument such as an eye loupe greatly increases the risk of eye damage, appropriate labels must appear in plain view, in close proximity to the optical port on the protective housing/access panel of the terminal equipment.

Laser Safety Precautions for Unenclosed Systems

During service, maintenance, or restoration, an optical fiber telecommunication system is considered unenclosed. Under these conditions, follow these practices:

1. Only authorized, trained personnel shall be permitted to do service, maintenance and restoration. Avoid exposing the eye to emissions from un-terminated, energized optical connectors at close distances. Laser modules associated with the optical ports of laser circuit packs are typically recessed, which limits the exposure distance. Optical port shutters, Automatic Power Reduction (APR), and Automatic Power Shut Down (APSD) are engineering controls that are also used to limit emissions. However, technicians removing or replacing laser circuit packs should not stare or look directly into the optical port with optical instruments or magnifying lenses. (Normal eye wear or indirect viewing instruments such as Find-R-Scopes are not considered magnifying lenses or optical instruments.)
2. Only authorized, trained personnel shall use optical test equipment during installation or servicing since this equipment contains semiconductor lasers (Some examples of optical test equipment are Optical Time Domain Reflectometers (OTDR's), Hand-Held Loss Test Sets.)
3. Under no circumstances shall any personnel scan a fiber with an optical test set without verifying that all laser sources on the fiber are turned off
4. All unauthorized personnel shall be excluded from the immediate area of the optical fiber telecommunication systems during installation and service.

Consult ANSI Z136.2, American National Standard for Safe Use of Lasers in the U.S.; or, outside the U.S., IEC-60825, Part 2 for guidance on the safe use of optical fiber optic communication in the workplace.

For the optical specifications please refer to the chapter "Technical specifications" in the Applications and Planning Guide.

Technical Documentation The technical documentation as required by the Conformity Assessment procedure is kept at Lucent Technologies location which is responsible for this product. For more information please contact your local Lucent Technologies representative.

How to comment To comment on this information product, go to the Online Comment Form (<http://www.lucent-info.com/comments>) or email your comments to the Comments Hotline (ctiphotline@lucent.com).



1 General information

Overview

Purpose This chapter contains introductory information.

Contents

TL1 message index	1-2
TL1 command state diagram	1-11
Data base change notifications	1-13
Sequence constraints	1-16

TL1 message index

List The table below lists all supported TL1 commands and notifications in alphabetical order.

Message	Described in section
ACT-USER	“ACT-USER: Activate user” (4-4)
ALW-MSG	“ALW-MSG: Allow message” (5-33)
APPLY	“APPLY: Apply software generic” (11-42)
APPLY notification	“APPLY notification” (11-46)
CANC-USER	“CANC-USER: Cancel user” (4-11)
CANC-USER-SECU	“CANC-USER-SECU: Cancel user security” (4-13)
CHG-ACCMD	“CHG-ACCMD: Change access mode” (7-254)
CNVT-CCT	“CNVT-CCT: Convert cross-connection topology” (7-72)
CONN-TACC	“CONN-TACC: Connect test access” (7-246)
COPY-RFILE	“COPY-RFILE: Copy remote file” (11-33)
CPY-MEM	“CPY-MEM: Copy memory” (11-20)
CPY-MEM notification	“CPY-NEM Notification” (11-31)
DISC-TACC	“DISC-TACC: Disconnect test access” (7-258)
DLT-ASAP-PROF	“DLT-ASAP-PROF: Delete alarm severity assignment profile” (6-26)
DLT-ASAP-PROF notification	“DLT-ASAP-PROF notification” (6-28)
DLT-CRS	“DLT-CRS: Delete cross-connection” (7-56)
DLT-CRS notification	“DLT-CRS notification” (7-64)
DLT-CRS-FECOM	“DLT-CRS-FECOM: Delete transparent DCC cross-connection” (12-40)
DLT-CRS-FECOM notification	“DLT-CRS-FECOM notification” (12-43)
DLT-EPORT Notification	“DLT-EPORT notification” (7-176)
DLT-EQPT (Slot)	“DLT-EQPT (slot): Delete equipment (slot)” (5-117)
DLT-EQPT (Socket)	“DLT-EQPT (Socket): Delete equipment” (5-156)
DLT-EQPT (CP) notification	“DLT-EQPT notification” (5-182)
DLT-FECOM notification	“DLT-FECOM notification” (12-30)
DLT-IP-MAP	“DLT-IP-MAP: Delete TCP/IP map” (12-117)
DLT-IP-MAP notification	“DLT-IP-MAP notification” (12-119)
DLT-PROTN-GRP	“DLT-PROTN-GRP notification” (8-106)
DLT-PROTN-GRP notification	“DLT-PROTN-GRP notification” (8-106)

Message	Described in section
DLT-rr (Port, STM1) notification	“DLT-STM1 notification” (5-332)
DLT-rr (Port, STM1E) notification	“DLT- STM1E notification” (5-307)
DLT-rr (Port, STM4) notification	“DLT-STM4 notification” (5-357)
DLT-rr (Port, STM16) notification	“DLT-STM16 notification” (5-386)
DLT-rr (Port, STM64) notification	“DLT-STM64 notification” (5-415)
DLT-rr (Port, STM256) notification	“DLT-STM256 notification” (5-434)
DLT-rr (Port, OC3) notification	“DLT-OC3 notification” (5-459)
DLT-rr (Port, OC12) notification	“DLT-OC12 notification” (5-484)
DLT-rr (Port, OC48) notification	“DLT-OC48 notification” (5-512)
DLT-rr (Port, OC192) notification	“DLT-OC192 notification” (5-539)
DLT-rr (Port, OC768) notification	“DLT-OC768 notification” (5-559)
DLT-rr (Trib, VC3) notification	“DLT-VC3 notification” (5-596)
DLT-rr (Trib, STS1) notification	“DLT-STs1 notification” (5-603)
ED-TCA-PROF	“DLT-TCA-PROF: Delete TCA Profile” (9-119)
DLT-ULSDCC-L3	“DLT-ULSDCC-L3: Delete a node ID other than node-1” (12-81)
DLT-ULSDCC-L3 notification	“DLT-ULSDCC-L3 Notification” (12-84)
DLT-ULSDCC-L4	“DLT-ULSDCC-L4: Delete TARP manual adjacent NSAP address in layer 4 of the specified OSI stack” (12-98)
DLT-ULSDCC-L4 notification	“DLT-ULSDCC-L4 notification” (12-100)
DLT-USER-SECU	“DLT-USER-SECU: Delete user security” (4-55)
DLT-USER-SECU notification	“DLT-USER-SECU notification” (4-58)
DLT-VCG notification	“DLT-VCG notification” (7-204)
DLT-VCGTRIB notification	“DLT-VCGTRIB notification” (7-233)
DLT-VRTSW notification	“DLT-VRTSW notification” (7-150)
ED-ASAP-PROF	“ED-ASAP-PROF: Edit alarm severity assignment profile” (6-20)
ED-ASAP-PROF notification	“ED-ASAP-PROF notification” (6-24)
ED-CRS	“ED-CRS: Edit Cross-connection” (7-46)
ED-CRS notification	“ED-CRS notification” (7-51)
ED-DAT	“ED-DAT: Edit date and time” (5-70)
ED-DAT notification	“ED-DAT notification” (5-73)
ED-EPORT	“ED-EPORT: Edit Ethernet port” (7-168)
ED-EPORT notification	“ED-EPORT notification” (7-174)
ED-EQPT (System)	“ED-EQPT (system): Edit equipment (system)” (5-49)

Message	Described in section
ED-EQPT (System) notification	“ED-EQPT (system) notification” (5-55)
ED-EQPT (Shelf)	“ED-EQPT (shelf): Edit equipment (shelf)” (5-89)
ED-EQPT (Shelf) notification	“ED-EQPT (shelf) notification” (5-91)
ED-EQPT (Slot)	“ED-EQPT (slot): Edit equipment (slot)” (5-109)
ED-EQPT (Socket)	“ED-EQPT (Socket): Edit equipment” (5-147)
ED-EQPT (Slot) notification	“ED-EQPT notification” (5-113)
ED-EQPT (Circuit Pack)	“ED-EQPT (CP): Edit equipment (circuit pack)” (5-177)
ED-EQPT (Circuit Pack) notification	“ED-EQPT (cp) notification” (5-181)
ED-FECOM notification	“ED-FECOM notification” (12-26)
ED-FETID	“ED-FETID: Edit Far End Target Identifier” (8-171)
ED-MAP-RING	“ED-MAP-RING: Edit map ring” (8-165)
ED-NE	“ED-NE: Edit NE” (12-8)
ED-NE notification	“ED-NE notification” (12-11)
ED-NE-SECU	“ED-NE-SECU: Edit NE security” (4-20)
ED-NE-SECU notification	“ED-NE-SECU notification” (4-22)
ED-NNCRS	“ED-NNCRS: Edit NN cross-connection” (7-53)
ED-PID	“ED-PID: Edit password identifier” (4-50)
ED-PID notification	“ED-PID notification” (4-54)
ED-PROTN-GRP	“ED-PROTN-GRP: Edit protection group” (8-80)
ED-PROTN-GRP notification	“ED-PROTN-GRP notification” (8-92)
ED-rr (Port, STM1)	“ED-STM1: Edit STM1 port” (5-309)
ED-rr (Port, STM1) notification	“ED-STM1 notification” (5-324)
ED-STM1E	“ED-STM1E: Edit STM1E port” (5-285)
ED-STM1E notification	“ED-STM1E notification” (5-299)
ED-rr (Port, STM4)	“ED-STM4: Edit STM4 port” (5-334)
ED-rr (Port, STM4) notification	“ED-STM4 notification” (5-349)
ED-rr (Port, STM16)	“ED-STM16: Edit STM16 port” (5-359)
ED-rr (Port, STM16) notification	“ED-STM16 notification” (5-378)
ED-rr (Port, STM64)	“ED-STM64: Edit STM64 port” (5-388)
ED-rr (Port, STM64) notification	“ED-STM64 notification” (5-405)
ED-rr (Port, STM256)	“ED-STM256: Edit STM256 port” (5-417)
ED-rr (Port, STM256) notification	“ED-STM256 notification” (5-426)

Message	Described in section
ED-rr (Port, OC3)	“ED-OC3: Edit OC3 port” (5-436)
ED-rr (Port, OC3) notification	“ED-OC3 notification” (5-451)
ED-rr (Port, OC12)	“ED-OC12: Edit OC12 port” (5-461)
ED-rr (Port, OC12) notification	“ED-OC12 notification” (5-476)
ED-rr (Port, OC48)	“ED-OC48: Edit OC48 port” (5-486)
ED-rr (Port, OC48) notification	“ED-OC48 notification” (5-504)
ED-rr (Port, OC192)	“ED-OC192: Edit OC192 port” (5-514)
ED-rr (Port, OC192) notification	“ED-OC192 notification” (5-530)
ED-rr (Port, OC768)	“ED-OC768: Edit OC768 port” (5-541)
ED-rr (Port, OC768) notification	“ED-OC768 notification” (5-551)
ED-rr (Trib, VC3)	“ED-VC3: Edit VC3 tributary” (5-579)
ED-rr (Trib, VC3) notification	“ED-VC3 notification” (5-590)
ED-rr (Trib, STS1)	“ED-STs1: Edit STS1 tributary” (5-585)
ED-rr (Trib, STS1) notification	“ED-STs1 notification” (5-597)
ED-STATE-EQPT (System)	“ED-STATE-EQPT (system): Edit equipment state” (5-42)
ED-STATE-EQPT (System) notification	“ED-STATE-EQPT (system) notification” (5-44)
ED-STATE-EQPT (Slot) notification	“ED-STATE-EQPT (slot) notification” (5-128)
ED-STATE-EQPT (CP) notification	“ED-STATE-EQPT notification” (5-187)
ED-TCA-PROF	“ED-TCA-PROF: Edit TCA profile” (9-81)
ED-ULSDCC-L3	“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” (12-74)
ED-ULSDCC-L3 notification	“ED-ULSDCC-L3 notification” (12-79)
ED-USER	“ED-USER: Edit user” (4-47)
ED-USER notification	“ED-USER notification” (4-49)
ED-USER-SECU	“ED-USER-SECU: Edit user security” (4-40)
ED-USER-SECU notification	“ED-USER-SECU notification” (4-45)
ED-VCG	“ED-VCG: Edit virtual concatenation group” (7-193)
ED-VCG notification	“ED-VCG notification” (7-201)
ED-VCGTRIB	“ED-VCGTRIB: Edit virtual concatenation group tributary” (7-224)
ED-VCGTRIB notification	“ED-VCGTRIB notification” (7-230)
ED-VRTSW	“ED-VRTSW: Edit Virtual Switch” (7-145)
ED-VRTSW notification	“ED-VRTSW notification” (7-148)

Message	Described in section
ENT-ASAP-PROF	“ENT-ASAP-PROF: Enter alarm severity assignment profile” (6-17)
ENT-ASAP-PROF notification	“ENT-ASAP-PROF notification” (6-19)
ENT-CRS	“ENT-CRS: Enter cross-connection” (7-25)
ENT-CRS notification	“ENT-CRS notification” (7-44)
ENT-CRS-FECOM	“ENT-CRS-FECOM: Enter transparent DCC cross-connection” (12-36)
ENT-CRS-FECOM notification	“ENT-CRS-FECOM notification” (12-39)
ENT-EPORT notification	“ENT-EPORT notification” (7-165)
ENT-EQPT (Slot)	“ENT-EQPT (slot): Enter equipment (slot)” (5-100)
ENT-EQPT (Socket)	“ENT-EQPT (Socket): Enter equipment” (5-143)
ENT-EQPT (CP) notification	“ENT-EQPT notification” (5-176)
ENT-FECOM	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
ENT-FECOM notification	“ENT-FECOM notification” (12-28)
ENT-FECOM-LAN	“ENT-FECOM-LAN: Enter LAN related parameters” (12-50)
ENT-FECOM-LAN notification	“ENT-FECOM-LAN notification” (12-57)
ENT-IP-MAP	“ENT-IP-MAP: Enter TCP/IP map” (12-113)
ENT-IP-MAP notification	“ENT-IP-MAP Notification” (12-116)
ENT-PROTN-GRP	“ENT-PROTN-GRP: Enter protection group” (8-56)
ENT-PROTN-GRP notification	“ENT-PROTN-GRP notification” (8-74)
ENT-ROLL	“ENT-ROLL: Enter roll” (7-65)
ENT-rr (Port, STM1) notification	“ENT-STM1 notification” (5-328)
ENT-rr (Port, STM1E) notification	“ENT- STM1E notification” (5-303)
ENT-rr (Port, STM4) notification	“ENT-STM4 notification” (5-353)
ENT-rr (Port, STM16) notification	“ENT-STM16 notification” (5-382)
ENT-rr (Port, STM64) notification	“ENT-STM64 notification” (5-410)
ENT-rr (Port, STM256) notification	“ENT-STM256 notification” (5-430)
ENT-rr (Port, OC3) notification	“ENT-OC3 notification” (5-455)
ENT-rr (Port, OC12) notification	“ENT-OC12 notification” (5-480)
ENT-rr (Port, OC48) notification	“ENT-OC48 notification” (5-508)
ENT-rr (Port, OC192) notification	“ENT-OC192 notification” (5-535)
ENT-rr (Port, OC768) notification	“ENT-OC768 notification” (5-555)
ENT-rr (Trib, VC3) notification	“ENT-VC3 notification” (5-593)
ENT-rr (Trib, STS1) notification	“ENT-STST1 notification” (5-600)

Message	Described in section
ENT-TCA-PROF	“ENT-TCA-PROF: Enter TCA Profile” (9-60)
ENT-ULS	“ENT-ULS: Enter upper layer stack” (12-105)
ENT-ULS notification	“ENT-ULS Notification” (12-108)
ENT-ULSDCC-L3	“ENT-ULSDCC-L3: Create a further OSI node” (12-67)
ENT-ULSDCC-L3 notification	“ENT-ULSDCC-L3 Notification” (12-72)
ENT-ULSDCC-L4	“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks ” (12-91)
ENT-ULSDCC-L4 notification	“ENT-ULSDCC-L4 notification” (12-96)
ENT-USER-SECU	“ENT-USER-SECU: Enter user security” (4-33)
ENT-USER-SECU notification	“ENT-USER-SECU notification” (4-38)
ENT-VCG notification	“ENT-VCG notification” (7-190)
ENT-VCGTRIB notification	“ENT-VCGTRIB notification” (7-221)
ENT-VRTSW notification	“ENT-VRTSW notification” (7-143)
INH-MSG	“INH-MSG: Inhibit message” (5-31)
INIT-EQPT (Slot)	“INIT-EQPT (slot): Initialize equipment (slot)” (5-129)
INIT-SYS	“INIT-SYS: Initialize System” (5-78)
OPR-EXT-CONT	“OPR-EXT-CONT: Operate External Control” (6-90)
OPR-EXT-CONT notification	“OPR-EXT-CONT notification” (6-92)
OPR-LPBK (Port)	“OPR-LPBK: Operate loopback (here facility loopback)” (7-111)
OPR-LPBK (Trib)	“OPR-LPBK: Operate loopback (here facility loopback)” (7-111)
OPR-PROTNSW	“OPR-PROTNSW: Operate protection switch” (8-109)
OPR-SYNCNSW	“OPR-SYNCNSW: Operate synchronization switch ” (10-31)
OPR-VCGTRIB	“OPR-VCGTRIB: Operate virtual concatenation group tributary” (7-234)
REPT ALM	“REPT ALM: Report alarm” (6-44)
REPT ALM ENV	“REPT-ALM-ENV: Report Alarm Environment” (6-72)
REPT DBCHG	“REPT DBCHG: Report data base change” (5-67)
REPT EVT	“REPT EVT: Report event” (6-47)
REPT EVT FXFR	“REPT EVT FXFR: Report Event FXFR” (11-39)
REPT SW	“REPT SW: Report switch” (8-133)
RLS-EXT-CONT	“RLS-EXT-CONT: Release external control” (6-93)
RLS-EXT-CONT notification	“RLS-EXT-CONT notification” (6-95)
RLS-LPBK (Port)	“RLS-LPBK: Release loopback (here facility loopback)” (7-118)
RLS-LPBK (Trib)	“RLS-LPBK: Release loopback (here cross-connection loopback)” (7-101)
RLS-PROTNSW	“RLS-PROTNSW: Release protection switch” (8-125)

Message	Described in section
RLS-SYCNNSW	“RLS-SYCNNSW: Release synchronization switch” (10-37)
RTRV-ACTL-CONT	“RTRV-ACTL-CONT: Retrieve actual condition types” (6-80)
RTRV-ACTLCP	“RTRV-ACTLCP: Retrieve acceptable circuit pack list” (5-35)
RTRV-ALM	“RTRV-ALM: Retrieve alarm” (6-30)
RTRV-ALM-ENV	“RTRV-ALM-ENV: Retrieve alarm environment” (6-60)
RTRV-AO	“RTRV-AO: Retrieve Autonomous Output” (5-56)
RTRV-ASAP-ASGNMT	“RTRV-ASAP-ASGNMT: Retrieve ASAP assignment” (6-14)
RTRV-ASAP-PROF	“RTRV-ASAP-PROF: Retrieve ASAP profile” (6-9)
RTRV-ATTR-CONT	“RTRV-ATTR-ENV: Retrieve attribute environment” (6-64)
RTRV-ATTR-ENV	“RTRV-ATTR-ENV: Retrieve attribute environment” (6-64)
RTRV-ATTR-MSG	“RTRV-ATTR-MSG: Retrieve attribute message” (5-28)
RTRV-COND	“RTRV-COND: Retrieve condition” (6-37)
RTRV-CRS	“RTRV-CRS: Retrieve cross-connection” (7-6)
RTRV-CRS-FECOM	“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” (12-32)
RTRV-EPM	“RTRV-EPM: Ethernet performance monitoring” (9-15)
RTRV-EPORT	“RTRV-EPORT: Retrieve Ethernet port” (7-153)
RTRV-EQPT (System)	“RTRV-EQPT (system): Retrieve Equipment (system)” (5-45)
RTRV-EQPT (Shelf)	“RTRV-EQPT (shelf): Retrieve Equipment (shelf)” (5-86)
RTRV-EQPT (Bay)	“RTRV-EQPT (bay): Retrieve Equipment (bay)” (5-82)
RTRV-EQPT (Slot)	“RTRV-EQPT (slot): Retrieve Equipment (slot)” (5-94)
RTRV-EQPT (Circuit Pack)	“RTRV-EQPT (CP): Retrieve equipment (circuit pack)” (5-169)
RTRV-EQPT (Socket)	“RTRV-EQPT (Socket): Retrieve equipment” (5-135)
RTRV-EXT-CONT	“RTRV-EXT-CONT: Retrieve external control” (6-83)
RTRV-FECOM	“RTRV-FECOM: Retrieve DCC related parameters” (12-13)
RTRV-FECOM-LAN	“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” (12-45)
RTRV-HDR	“RTRV-HDR: Retrieve header” (5-8)
RTRV-IP-MAP	“RTRV-IP-MAP: Retrieve TCP/IP map” (12-110)
RTRV-LOG-ALM	“RTRV-LOG-ALM: Retrieve log alarm” (6-54)
RTRV-LOG-NNEVT	“RTRV-LOG-NNEVT: Retrieve NN Event Log” (5-64)
RTRV-LOG-NTFCN	“RTRV-LOG-NTFCN: Retrieve notification Log” (5-60)
RTRV-LOG-PROTNSW	“RTRV-LOG-PROTNSW: Retrieve log protection switch” (8-150)
RTRV-LPBK (Port)	“RTRV-LPBK: Retrieve loopback (here facility loopback)” (7-106)
RTRV-LPBK (Trib)	“RTRV-LPBK: Retrieve loopback (here cross-connection loopback)” (7-89)


Message	Described in section
RTRV-MAP-NEIGHBOR	“RTRV-MAP-NEIGHBOR: Retrieve map neighbor” (12-121)
RTRV-MAP-NETWORK	“RTRV-MAP-NETWORK: Retrieve network map” (12-126)
RTRV-MAP-RING	“RTRV-MAP-RING: Retrieve map ring” (8-158)
RTRV-NE	“RTRV-NE: Retrieve NE” (12-5)
RTRV-NE-SECU	“RTRV-NE-SECU: Retrieve NE security” (4-17)
RTRV-OW	“RTRV-OW: Retrieve Orderwire and User Bytes” (7-124)
RTRV-PM	“RTRV-PM: Retrieve performance monitoring” (9-7)
RTRV-PRMTR-DATA	“RTRV-PRMTR-DATA: Retrieve parameter data” (11-3)
RTRV-PRMTR-SFTWR	“RTRV-PRMTR-SFTWR: Retrieve parameter software” (11-13)
RTRV-PROTN-GRP	“RTRV-PROTN-GRP: Retrieve protection group” (8-13)
RTRV-rr (Port, ALL)	“RTRV-ALL: Retrieve all” (5-282)
RTRV-rr (Port, STM1)	“RTRV-STM1: Retrieve STM1 port” (5-199)
RTRV-rr (Port, STM1E)	“RTRV-STM1E: Retrieve STM1E port” (5-192)
RTRV-rr (Port, STM4)	“RTRV-STM4: Retrieve STM4 port” (5-206)
RTRV-rr (Port, STM16)	“RTRV-STM16: Retrieve STM16 port” (5-214)
RTRV-rr (Port, STM64)	“RTRV-STM64: Retrieve STM64 port” (5-228)
RTRV-rr (Port, STM256)	“RTRV-STM256: Retrieve STM256 port” (5-237)
RTRV-rr (Port, OC3)	“RTRV-OC3: Retrieve OC3 port” (5-243)
RTRV-rr (Port, OC12)	“RTRV-OC12: Retrieve OC12 port” (5-250)
RTRV-rr (Port, OC48)	“RTRV-OC48: Retrieve OC48 port” (5-257)
RTRV-rr (Port, OC192)	“RTRV-OC192: Retrieve OC192 port” (5-267)
RTRV-rr (Port, OC768)	“RTRV-OC768: Retrieve OC768 port” (5-275)
RTRV-rr (Trib, ALL)	“RTRV-ALL: Retrieve all” (5-576)
RTRV-rr (Trib, VC3)	“RTRV-VC3: Retrieve VC3 tributary” (5-562)
RTRV-rr (Trib, STS1)	“RTRV-ST51: Retrieve STS1 tributary” (5-571)
RTRV-SCN-NEIGHBOR	“RTRV-SCN-NEIGHBOR: Retrieve SCN neighbor” (12-132)
RTRV-STATE-EQPT (System)	“RTRV-STATE-EQPT (system): Retrieve equipment state” (5-38)
RTRV-STATE-EQPT (Slot)	“RTRV-STATE-EQPT (slot): Retrieve equipment state (slot)” (5-125)
RTRV-STATE-EQPT (Circuit Pack)	“RTRV-STATE-EQPT (CP): Retrieve equipment state (circuit pack)” (5-184)
RTRV-STATE-EQPT (Socket)	“RTRV-STATE-EQPT (Socket): Retrieve equipment state ” (5-162)
RTRV-STM1E	“RTRV-STM1E: Retrieve STM1E port” (5-192)
RTRV-SYCN	“RTRV-SYCN: Retrieve synchronization” (10-3)

Message	Described in section
RTRV-TACC	“RTRV-TACC: Retrieve test access” (7-241)
RTRV-TCA-PROF	“RTRV-TCA-PROF: Retrieve TCA Profile” (9-25)
RTRV-ULS	“RTRV-ULS: Retrieve upper layer stack” (12-102)
RTRV-ULSDCC-L3	“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” (12-61)
RTRV-ULSDCC-L4	“RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters” (12-87)
RTRV-USER	“RTRV-USER: Retrieve user” (4-31)
RTRV-USER-SECU	“RTRV-USER-SECU: Retrieve user security” (4-24)
RTRV-VCG	“RTRV-VCG: Retrieve virtual concatenation group” (7-180)
RTRV-VCGTRIB	“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” (7-207)
RTRV-VRTSW	“RTRV-VRTSW: Retrieve Virtual Switch” (7-136)
SET-ATTR-CONT	“SET-ATTR-CONT: Set attribute control” (6-86)
SET-ATTR-CONT notification	“SET-ATTR-CONT notification” (6-89)
SET-ATTR-ENV	“SET-ATTR-ENV: Set attribute environment” (6-68)
SET-ATTR-ENV notification	“SET-ATTR-ENV notification” (6-71)
SET-MAP-RING	“SET-MAP-RING: Set map ring” (8-168)
SET-OW	“SET-OW: Set Orderwire and User Bytes” (7-128)
SET-OW notification	“SET-OW notification” (7-132)
SET-SID	“SET-SID: Set SID” (5-74)
SET-SID notification	“SET-SID notification” (5-77)
SET-SYNCN	“SET-SYNCN: Set synchronization” (10-19)
SET-SYNCN notification	“SET-SYNCN notification” (10-27)



TL1 command state diagram

The following state diagram provides an overview in which system states which TL1 commands are allowed. States and transitions are explained below the figure.

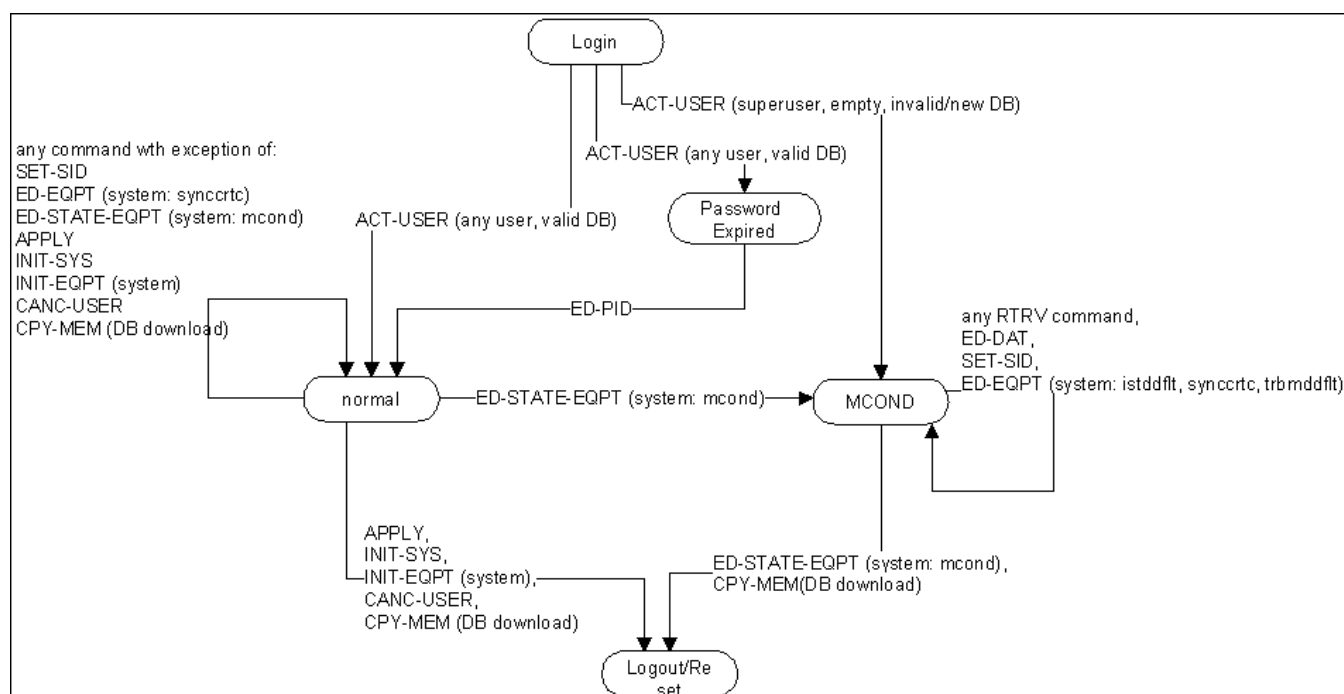

States

- **Login**: initial state, creation of user session
- **Password expired**: entered after login with valid database and when the user's password has expired
- **MCOND**: system is in maintenance condition (see parameter *mcond* in RTRV-STATE-EQPT (system))
- **normal**: system is in normal mode (see parameter *mcond* in RTRV-STATE-EQPT (system))
- **Logout/Reset**: termination of a user session via logout or a command which leads to a system or CTL controller reset

Transitions

Transitions between the states are performed upon execution of the TL1 command(s) on the arrows between the states. An exception are

the transitions from the **Login** state, which are automatically performed based on the database state (see parameter **dbstate** in RTRV-STATE-EQPT (system)) and the password expiration information (see parameter page in RTRV-USER-SECU).



Data base change notifications

Object creation - ENT notification

The creation/establishment of an entity/instance is reported by means of an ENT (Enter) notification. It shall consists of:

- entity class name
- instance/identifier/key
- all attribute values of the instance as defined in the notification section; example: ENT-OC48 notification
- entity class name: OC48
- instance/identifier/key: port AID
- attribute values: all attribute values as defined in the corresponding ENT-OC48 notification section.

The attributes for an entity can be classified as follows:

- inputted: the reported attribute value is specified in the corresponding command request
- modifiable: the reported attribute value is the specified default value (with semantics of initial value) and the attribute itself is modifiable by means of corresponding ED command
- state: the reported attribute value is the specified default value (with semantics of initial value) and the attribute itself is modifiable directly by means of corresponding ED command. The modification can ever be triggered as side affect of a command or by anautonomous event.

Examples for the different attribute classes

- inputted: 1+1 line/ms protection group: attribute wkg - worker port
- modifiable: 1+1 line/ms protection group: attribute wkg - worker port
- state: port: attribute crstat - Constituent Rates Status list (autonomous change) in case of adaptive mode
- port: attribute: fsflpbkstat - Far Side Facililiy Loopback Status(side effect of command)

Note: Protection state information is not contained in any db change notification.

Object modification - ED notification

The modification for some attributes of an entity/instance is reported by means of an ED (Edit) notification. It shall consists of:

- entity class name
- instance/identifier/key
- all attribute values which were modified
This includes all attributes which came into existence by modifying another attribute. (see example below). This also means, that attributes which are already handled internally but where not applicable up to now and therefore were not reported to the manager, must not be reported to the manager, if they became applicable. Reason: The manager can not know the internal default values. If an ED command for an (or the) entity/instance attribute(s) does not modify the attribute(s) value, because (for each individual attribute) `new_attribute_value = old_attribute_value`, no ED notification shall be sent per requirement ID 61381. However, empty notifications, i.e. notifications with no attributes and attribute values, can occur. These empty notifications do not impact the managers, but nevertheless should be avoided. Example: ED-OC48 notification
- entity class name: OC48
- instance/identifier/key: port AID
- attribute values: all attribute values which have been modified.
Thus the corresponding ED notification section describes only the superset of attributes where changes are reported. Which attributes are really contained in a concrete scenario is described either in the detailed behaviour section (if the change is triggered by a command) or in autonomous event section (if the changes it triggered by an spontaneous event). Example: ED-OC48 notification of new attributes.
- entity class name: STM16
- instance/identifier/key: port AID
- action: `istd` is set from SDH to SONET
This action causes that attributes come into existence by modifying *istd*. In detail this means: - attributes, which are named differently in the two standards - attributes, which are only applicable in one standard must be reported. E.g. for the change from SDH to SONET: - *sdthr* (in SDH called *degthr*) - *felpm* (in SDH called *femspm*) - *z0outmode* (new parameter in SONET) must be reported.

Note: Sometimes TL1 uses a different command verb instead of ED for modification commands (e.g. SET). Nevertheless, the statements of this chapter is also valid for these.

Object deletion - DLT notification

he deletion/removal of an entity/instance is reported by means of an DLT (Delete) notification. It shall consists of:

- entity class name
- instance/identifier/key

Example: DLT-OC48 notification

- entity class name: OC48
- instance/identifier/key: port AID.



Sequence constraints

In order to allow the manager a proper interpretation of the received notifications, the NE must assure same sequence constraints. This section specifies these sequence constraints.

Report object creation first

The first notification for an entity is the *db change* reporting that a new entity has been created/established. After this *establish* notification, all other types of notifications may be issued for this instance.

Report creation according to AID hierarchy

If several instances of entities are created in the context of one stimuli, the order of the *establish* notification is according to the hierarchy of the AID structure. The *establish* notification for a subordinate entity is not reported before the *establish* notification of a superior entity.

Example: The *establish* notification for a port should be sent before the *establish* notification of a tributary being a member of this port.

Report object deletion last

The last notification for an entity is the *dbchange* reporting that an entity has been deleted/removed.

Report deletion according to AID hierarchy

If several instances of entities are deleted in the context of one stimuli, the order of the *delete* notification is according to the hierarchy of the AID structure. The *delete* notification for a superior entity is not reported before the *delete* notification of a subordinate entity.

Example: The *delete* notification for a tributary should be sent before the *delete* notification of a port containing that tributary.





2 AID structure

Overview

Purpose This section contains the requirements for Access IDentifiers (AID) for the TL1 interface of the *LambdaUnite*[®] MSS.

Contents

<u>Introduction</u>	<u>2-3</u>
<u>AID syntax</u>	<u>2-4</u>
<u>Access Identifier (AID) syntax</u>	<u>2-5</u>
<u>System level AIDs</u>	<u>2-7</u>
<u>System AID</u>	<u>2-8</u>
<u>MDI/MDO</u>	<u>2-9</u>
<u>Timing</u>	<u>2-10</u>
<u>OSI nodes</u>	<u>2-11</u>
<u>SCN node</u>	<u>2-12</u>
<u>General node</u>	<u>2-13</u>
<u>Hierarchically specified AIDs</u>	<u>2-14</u>
<u>Compound AID syntax overview</u>	<u>2-16</u>
<u>Range specifications</u>	<u>2-19</u>
<u>Physical layout</u>	<u>2-20</u>
<u>Bay (rack) and shelf (subrack)</u>	<u>2-21</u>

Fans	2-22
Power interface	2-23
Backplane	2-24
User panel	2-25
CI-CTL	2-26
User byte ports	2-27
LAN ports	2-28
Timing interfaces (TI)	2-29
Slot	2-30
Circuit pack	2-32
Socket	2-33
SDH/SONET port	2-34
GbE port	2-36
Virtual concatenation group (VCG)	2-37
AU-3/STS-1 tributary	2-38
Virtual concatenation group (VCG) tributary	2-39
Generic tributary	2-40
Protection groups	2-41
Switch and timing equipment protection group	2-43
Controller equipment protection group	2-44
General equipment protection groups	2-45
Examples	2-46



Introduction

Overview

Purpose This section defines the names which will be used to identify physical and logical entities for input and output at the TL1 Interface for the *LambdaUnite*® MSS products.

This document re-uses the general terminology and BWM Access Identifier (AID) Syntax. It is assumed that the reader is familiar with the terms and syntax.

Contents

AID syntax	2-4
Access Identifier (AID) syntax	2-5



AID syntax

General The following specification characters will be used throughout this document as a vehicle for defining the syntax.

Rule	Description
::=	Assignment of a lexical rule to a token or token class.
literal	Characters which must appear literally as typed appear in bold..
	The "exclusive or" token means that exactly one item in the list must be present.
{ }	Items in { } means one of the items in the set must be present.
[]	Items in [] means one of the items in the set may optionally be present.
()	Items in () can be used for grouping to define different precedence for the operators , ⁿ and *.
-	A dash indicates a range of values where any item in the range may be present.
,	A ", " is used as a list item separator in the specification grammar.
a [*]	A superscript * specifies 0 or more repetitions of the previous token that can be present.
a ⁺	A superscript + specifies 1 or more repetitions of the previous token that can be present.
a ⁿ	A superscript n is a number which specifies the number of repetitions of the previous token that can be present.
" "	Blanks between tokens in an expression means to concatenate the tokens.



Access Identifier (AID) syntax

AIDs can be either Simple_AIDs, or Compound_AIDs. AID definitions will use the following syntax:

let ::= {A-Z,a-z,_}

dig ::= {0-9}

AID_field ::= (let (let | dig)*)

Simple_AID ::= (AID_field [Simple_AID]) | #

Compound_AID ::= Simple_AID(-Simple_AID)*

The character "-" (dash) will be used as the Simple_AID separator in compound AIDs.

If a Simple_AID is <null>, the "#" character is used to specify a value of <null> for an AID_field.

Groups of entities of the same type can be specified by using the value `all` or *someprefix* `all` in a Simple_AID.

The legal places to use this value are specified in the appropriate commands below. The convention used in the command descriptions is that the value `all` is not allowed unless explicitly stated otherwise.

In general `all` is only allowed for input AIDs, i.e. when used in a TL1 request.

For the following requirements see also the definition of compound AIDs below.

The value `all` on bay and shelf level is only allowed for RTRV-EQPT on bay and shelf level. It is not allowed on this positions for entities further down in the hierarchy like slot, port, tributary.

Example

valid: `all-all`

invalid: `all-all #-#-1-3-1`

The value `all` on the AID field for slot, CP, port or tributary is only allowed

- when it is the last AID field or
- when there is already an `all` on the AID field following the AID field.

Example

valid: 1-1-#-#-1-3-all

valid: 1-1-#-#-1-all

valid: 1-1-#-#-all-cp

valid: 1-1-#-#-1-all-all

invalid: 1-1-#-#-1-all-1



System level AIDs

Overview

Purpose This section contains all system level AIDs.

Contents

System AID	2-8
MDI/MDO	2-9
Timing	2-10
OSI nodes	2-11
SCN node	2-12
General node	2-13



System AID

To identify the entire system the following AID is used:

SystemAID ::= system



MDI/MDO

General The system has miscellaneous discrete outputs and inputs which are named without any hierarchical, positional information in the AID.

The system provides 8 input and 8 output miscellaneous discrete alarm points which can be assigned user-friendly names so that when the user wants to assert an output point, or receives an alarm from one of the input points, a name is used which reflects what the alarm point is physically connected to.

AIDs for MDIs, MDOs

The following AIDs are used to identify the MDIs/MDOs:

Miscellaneous_in_discreteAID ::= misc_in{1-8} | misc_inall

Miscellaneous_out_discreteAID ::= misc_out{1-8} | misc_outall



Timing

AIDs for external timing references

The timing references can come from two external DS1 or E1 (2MHz or 2Mbit/s) or 64kbit/s (future) signals:

`External_timing_ref_AID ::= extref1 | extref2 | extrefall`

In the system maximal 32 I/O slots are present. Every I/O slot can supply one timing reference signal extracted from the incoming data. Out of those six can be used as line timing input reference.

AIDs for line timing references

The AIDs which can be used for the input selection are:

`Line_timing_ref_AID ::= line{1-6} | lineall`

AIDs for timing input ports

The system has two timing input ports. The AIDs for these timing input ports are:

`External_Timing_input_port_AID ::= exttmg0 | exttmg1 | exttmgall`

AIDs for timing output ports

The system has two timing output ports. The AIDs for these timing output ports are:

`External_Timing_output_port_AID ::= exttmg0_out | exttmg1_out | exttmg_outall`

AID for timing output

The AID for timing output is

`Timing_Output_AID ::= outtmg`

For provisioning or retrieving information related to the system clock the SystemAID is to be used.



OSI nodes

AIDs for OSI nodes The system can support up to 8 OSI nodes, which are used to allow that the system is part in several routing domains.

The AIDs to access the OSI nodes are:

`OSI_node_AID ::= osinode{1-8} | osinodeall`



SCN node

AIDs for OSI nodes The system can support one SCN node, which is used to implement the IP stack for SCN communication related to ONNS.

The AIDs to access the SCN node is:

SCN_node_AID ::= scnnode



General node

General Node AID The system supports a general node AID, which can be used to address any of the particular node AID types of above.

The general node AID is defined as:

Node_AID ::= OSI_node_AID | SCN_node_AID



Hierarchically specified AIDs

Overview

Purpose Below the system level AIDs, other entities are specified in a hierarchical structure.

Contents

Compound AID syntax overview	2-16
Range specifications	2-19
Physical layout	2-20
Bay (rack) and shelf (subrack)	2-21
Fans	2-22
Power interface	2-23
Backplane	2-24
User panel	2-25
CI-CTL	2-26
User byte ports	2-27
LAN ports	2-28
Timing interfaces (TI)	2-29
Slot	2-30
Circuit pack	2-32
Socket	2-33
SDH/SONET port	2-34
GbE port	2-36
Virtual concatenation group (VCG)	2-37
AU-3/STS-1 tributary	2-38
Virtual concatenation group (VCG) tributary	2-39
Generic tributary	2-40
Protection groups	2-41
Switch and timing equipment protection group	2-43
Controller equipment protection group	2-44

General equipment protection groups	2-45
Examples	2-46

Compound AID syntax overview

The AID structure defined for a compound AID is shown in the next table. For each AID Field further information is to be found in the subsequent subsections. Examples of compound AIDs can be found in [“AID examples” \(2-46\)](#).

Entity	AID Field						
	Bay/ Rack	Shelf/ Subrack	Prot Grp	Side Line	Slot	CP/ SPort/ EPort/ VCG/ NVM	STS-1/ AU-3/ VCG Trib
Bay/ Rack	1						
Shelf/ Sub- rack	1	1					
Protec- tion Group	1	1	Simple_ Protection- GroupAID				
Fan Unit	1	1	Simple_ FanAID				
PI	1	1	Simple_ PowerAID				
TI	1	1	Simple_ TimingInter- faceAID				
Back- plane	1	1	Simple_ BackplaneAID				
User Panel	1	1	Simple_ UserPanelAID				
CI-CTL	1	1	Simple_ CiCtlAID				
User Byte Ports	1	1	Simple_ UserBytePor- tAID				
LAN Ports	1	1	Simple_ LanPortAID				
Slot	1	1	#	#	Simple_ SlotAID		
CP	1	1	#	#	Simple_ SlotAID	cp	

Entity	AID Field						
	Bay/ Rack	Shelf/ Subrack	Prot Grp	Side Line	Slot	CP/ SPort/ EPort/ VCG/ NVM	STS-1/ AU-3/ VCG Trib
NVM	1	1	#	#	{ctlwl ctlp}	nvm	
SPort	1	1	#	#	Simple_ SlotAID	Simple_ SPortAID	
EPort	1	1	#	#	Simple_ SlotAID	Simple_ EPort- tAID	
VCG	1	1	#	#	Simple_ SlotAID	Simple_ VCGAID	
STS-1/ AU-3 Trib	1	1	#	#	Simple_ SlotAID	Simple_ SPortAID	Simple_ STS1_ NumAID *
STS- 3c/ AU-4 Trib	1	1	#	#	Simple_ SlotAID	Simple_ SPortAID	Simple_ STS1_ NumAID *
STS- 12c/ AU-4-4c Trib	1	1	#	#	Simple_ SlotAID	Simple_ SPortAID	Simple_ STS1_ NumAID *
STS- 48c/ AU-4- 16c Trib	1	1	#	#	Simple_ SlotAID	Simple_ SPortAID	Simple_ STS1_ NumAID *
STS- 192c/ AU-4- 64c Trib	1	1	#	#	Simple_ SlotAID	Simple_ SPortAID	Simple_ STS1_ NumAID *
STS- 768c/ AU-4- 256c Trib	1	1	#	#	Simple_ SlotAID	Simple_ SPortAID	Simple_ STS1_ NumAID *
VCG Trib	1	1	#	#	Simple_ SlotAID	Simple_ VCGAID	Simple_ VCG NumAID
* See table below.							

The STS-3c/AU-4, STS-12c/AU-4-4c, STS-48c/AU-4-16c, STS-192c/AU4-64c, STS-768c/AU4-256c tributaries also use the

STS-1/AU-3 AID field. They are identified by the first STS-1/AU-3 number of the signal as indicated by the table below:

Signal	MS2.5G/S3[-x] Adaptation (x in {3c, 12c, 48c})	MS10G/S3[-x] Adaptation (x in {3c, 12c, 48c, 192c})	MS40G/S3[-x] Adaptation (x in {3c, 12c, 48c, 192c, 768c})
S3 (STS-1/AU-3)	1, 2, 3, ..., 48	1, 2, 3, ..., 192	1, 2, 3, ..., 768
S3-3c (STS-3c/AU-4)	1, 4, 7, ..., 46	1, 4, 7, ..., 190	1, 4, 7, ..., 766
S3-12c (STS-12c/AU-4-4c)	1, 13, 25, 37	1, 13, 25, ..., 181	1, 13, 25, ..., 757
S3-48c (STS-48c/AU-4-16c)	1	1, 49, 97, 145	1, 49, 97, ..., 721
S3-192c (STS-192c/AU-4-64c)	n/a	1	1, 193, 385, 577
S3-768c (STS-768c/AU-4-256c)	n/a	n/a	1

AID field lengths The following table lists the AID field length specifications. The maximum length of an AID, including the separating –, must not exceed 23 characters:

Field	AID definitions	Length (char)
Bay (Rack)	BayID	1
Shelf (Subrack)	Simple_ShelfID	1
Slot	Simple_SlotAID	5
CP	Simple_CpAID Simple_NvmAID	3
Socket	Simple_SocketAID	5
Optical Module	Simple_OmAID	3
Port	Simple_SPortAID Simple_EPortAID Simple_VCGAID	2
Trib	Simple_STS1NumAID Simple_VCGNumAID	3



Range specifications

Various TL1 commands allow for the specification of a range of entities as input parameters. These ranges are specified in the AID definitions in this document which allow the use of the term all in one or more AID Fields within a Simple_AID. Details of where these values are allowed is detailed in the AID parameter description per command.



Physical layout

Frontside The following graphics show the physical layout of the dual unit row (DUR) subrack (frontside) and the naming conventions:

								USRPNL												
01	1	21	22	23	24	25	26	27	28	XCW	XCP	31	32	33	34	35	36	37	38	39
02	2											CTLW	CTLP							
03	3																			
04	4																			
05	5																			
06	6																			
07	7																			
08	8																			
09																				
10																				
11																				
12																				
13																				
14																				
15																				
16																				
17																				
18																				
19																				

Rearside

FAN																	
ECI 61		ECI 63		ECI 65		ECI 67		TI A		TI B							
61		63		65		67		69		70		72		74			
ECI 41		ECI 43		PI A				CICTL				ECI 52		ECI 54		PI B	
41		43		45						51		52		54		56	
Air Filter Tray																	
Viewed "through the backplane" !																	

Bay (rack) and shelf (subrack)

The *LambdaUnite*[®] MSS system uses a single unit row (SUR) subrack in the REG40 configuration or a dual unit row (DUR) subrack in the LXC40 configuration.

Up to two DUR, three SUR or combinations 2 SUR/1DUR, 1SUR/1DUR fit into one rack (bay). From the AID definition this relationship will not become visible.

AID for bay (rack) The BayAID is used to identify the rack (bay) of the system:

BayAID ::= 1 | all

AID for shelf (subrack) The ShelfAID is used to identify the subrack type (shelf):

Simple_ShelfAID ::= 1 | all

ShelfAID ::= BayAID–Simple_ShelfAID

Note: Different configurations will be distinguished by a the parameter *shlftp* in RTRV-EQPT for subrack (shelf).



Fans

AIDs for fan There is one fan unit in the system. The FanAID is used to identify the fan unit in the subrack:

Simple_FanAID ::= fan | fanall

FanAID ::= BayAID–Simple_ShelfAID–Simple_FanID



Power interface

AIDs for power interfaces

There are two power interface units PI(A) and PI(B) in the subrack, which are located at the rear side. The PowerAID is used to identify the power interface in the subrack:

$\text{Simple\_PowerAID} ::= \text{pia} \mid \text{pib} \mid \text{pia11}$

$\text{PowerAID} ::= \text{BayAID} - \text{Simple\_ShelfAID} - \text{Simple\_PowerAID}$



Backplane

AID for backplane The subrack has a backplane with an inventory EEPROM. The BackplaneAID is used to identify the backplane in the subrack:

Simple_BackplaneAID ::= backp1

BackplaneAID ::= BayAID–Simple_ShelfAID–Simple_BackplaneAID



User panel

AID for user panel There is one user panel in the subrack. The UserPanelAID is used to identify the user panel in the system:

Simple_UserPanelAID ::= usrpnl

UserPanelAID ::= BayAID–Simple_ShelfAID–Simple_UserPanelAID



CI-CTL

AID for CI-CTL The system has a connection interface with e.g. LAN and user byte ports (CI-CTL). The CiCtlAID is used to identify the CI-CTL in the subrack:

Simple_CiCtlAID ::= c i c t l

CiCtlAID ::= BayAID–Simple_ShelfAID–Simple_CiCtlAID



User byte ports

AIDs for user byte ports

The system has six ports to access user bytes which are located on the CI-CTL. The UserBytePortAID is used to identify a user byte port in the subrack:

Simple_UserBytePortAID ::= ubio1 | ubio2 | ubio3 | ubio4 | ubio5 |
ubio6 | ubioall

UserBytePortAID ::=

BayAID–Simple_ShelfAID–Simple_UserBytePortAID



LAN ports

AIDs for LAN ports The system has four LAN ports which are located on the UPL (LAN1) and CI-CTL (LAN2, LAN3). A LAN4 is currently only HW prepared and has no further functionality. The LanPortAID is used to identify a LAN port in the subrack:

$\text{Simple\_LanPortAID} ::= \text{lan1} \mid \text{lan2} \mid \text{lan3} \mid \text{lanall}$

$\text{LanPortAID} ::= \text{BayAID} - \text{Simple\_ShelfAID} - \text{Simple\_LanPortAID}$



Timing interfaces (TI)

AIDs for timing interfaces

The system has up to two timing interfaces TI(A) and TI(B) located on the rear side of the subrack. The TimingInterfaceAID is used to identify a timing interface in the subrack:

Simple_TimingInterfaceAID ::= tia | tib | tia11

TimingInterfaceAID ::= BayAID–Simple_ShelfAID–Simple_TimingInterfaceAID

Electrical Connector Interface (ECI)

The system has up to 12 electrical connector interfaces (ECI) located on the rear side of the subrack. Note: Only the upper shelf row can be used for EP155 configurations.

AIDs for electrical connector interfaces:

The EciAID shall be used to identify a electrical connector interface in the subrack:

Simple_EciAID ::= eci61 | eci63 | eci65 | eci67 | eci72 | eci74 | eci76 | eci78 | ecia11

EciAID ::= BayAID–Simple_ShelfAID–Simple_EciAID



Slot

The *LambdaUnite*[®] MSS in a DUR subrack has in total two rows of circuit packs as shown in figure in [“Frontside” \(2-20\)](#). The slots for the cross connect pack (XC) and for the controller pack (CTL) are distinguished from the universal slots (US). The postfix P(rotection) or W(orking) for the XC and CTL indicates its role in the 1+1 equipment protection relationship.

AIDs for universal slots The UnivSlotAID is used to identify a universal slot in the system:

Simple_UnivSlotAID ::= {1 ... 8, 12 ... 19, 21 ... 28, 32 ... 39} |
usall | all

UnivSlotAID ::=
BayAID–Simple_ShelfAID–#–#–Simple_UnivSlotAID

Note: The us-prefix and leading zeroes have to be removed from Simple_UnivSlotAID. This change is not reflected in all examples below.

Note: The value “all” was added as an additional option to iterate over all slots not considering the type of slot.

AIDs for cross-connect slots The XCSlotAID is used to identify a slot useable for an XC circuit pack in the system:

Simple_XCSlotAID ::= xcp | xcw | xcall | all

XCSlotAID ::= BayAID–Simple_ShelfAID–#–#–Simple_XCSlotAID

Note: The value “all” was added as an additional option to iterate over all slots not considering the type of slot.

AIDs for controller slots The CTLSlotAID is used to identify a slot useable for a CTL circuit pack in the system:

Simple_CTLSlotAID ::= ct1p | ct1w | ct1a11 | all

CTLSlotAID ::=
BayAID–Simple_ShelfAID–#–#–Simple_CTLSlotAID

Note: The value “all” was added as an additional option to iterate over all slots not considering the type of slot.

AIDs for slots

The SlotAID is used to identify a slot in the system:

$\text{Simple\_SlotAID} ::= \text{Simple\_UnivSlotAID} \mid \text{Simple\_XCSlotAID} \mid \text{Simple\_CTLSlotAID} \mid \text{all}$

$\text{SlotAID} ::= \text{BayAID} - \text{Simple\_ShelfAID} - \# - \# - \text{Simple\_SlotAID}$

The “#” in the SlotAID were used in the CG to identify protection group information for ports and tributaries. This addressing scheme is not supported.

OP40G slot restrictions

Since the OP40 is four slot wide, only the following Simple_UnivSlotAIDs are allowed:

$\text{Simple\_SlotAIDOP40} ::= \{4, 8, 15, 19, 24, 28, 35, 39\}$

$\text{SlotAIDOP40} ::=$

$\text{BayAID} - \text{Simple\_ShelfAID} - \# - \# - \text{Simple\_SlotAIDOP40}$



Circuit pack

AIDs for circuit packs cp can be used in the port field to identify a circuit pack:

Simple_CpAID ::= cp

CpAID ::= SlotAID–cp



Socket

Circuit packs may contain sockets where pluggable interfaces can be plugged in.

AIDs for sockets

The Simple_SocketAID shall be used in the port field to identify a socket contained on a circuit pack which is inserted in a slot.

Simple_SocketAID ::= sc1 | sc2 | sc3 | sc4 | sc5 | sc6 | sc7
| sc8 | scall

SocketAID ::= BayAID-Simple_ShelfAID-##-Simple_UnivSlotAID-
Simple_SocketAID

Legal Simple_SocketAIDs depend of the CP provisioned for the slot. The system supports only a one to one relation between sockets and ports. Example: port no. 1 (1-1-##-1-1) is related to a socket no.1 (1-1-##-1-sc1).



SDH/SONET port

AIDs for SDH/SONET ports The SPortAID is used to identify SDH/SONET ports in the system:

Simple_SPortAID ::= 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | all

SPortAID ::= UnivSlotAID–Simple_SPortAID

Legal Simple_SPortAIDs depend on the type of CP provisioned for the slot as shown in the following table:

Functional Name	Legal Port AIDs	Restrictions
EP155	{1, 2, 3, 4, 5, 6, 7, 8} all	none - valid for all supported qualifiers
OP155	{1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16} all	none - valid for all supported qualifiers
OP622	{1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16} all	none - valid for all supported qualifiers
OPLB	{1, 2, 3, 4, 5, 6, 7, 8} all	none - valid for all supported qualifiers
OP2G5	{1, 3} all	qualifier = PARENT
OP2G5	{1, 2, 3, 4} all	qualifier != PARENT
OP2G5D	{1, 2, 3, 4, 5, 6, 7, 8} all	none - valid for all supported qualifiers
OP10G	1 all	none - valid for all supported qualifiers
OP10D	{1, 2} all	none - valid for all supported qualifiers
OP40G	1 all	none - valid for all supported qualifiers

The table above does not take into account the release information when a certain pack is supported.

The number of legal port AIDs shown in the table above does not necessarily reflect the capabilities of the actual circuit pack w.r.t. port numbers. Additional rows are added for the packs if they differ in

terms of port numbers. The functional qualifier is then used as identification criteria - see restriction column.



GbE port

AIDs for gigabit Ethernet ports

The EPortAID can be used to identify gigabit Ethernet ports in the system:

Simple_EPortAID ::= 1 | 2 | 3 | 4 | all

EPortAID ::= UnivSlotAID–EPortAID

Legal Simple_EPortAIDs depend on the type of CP provisioned for the slot as shown in the following table:

Circuit Pack Type	Legal Port AIDs
GE1	{1, 2, 3, 4} all



Virtual concatenation group (VCG)

Virtual concatenation groups (VCG) represent the interface between the Ethernet Switch and the Ethernet over SDH/SONET function. Sometimes they are also denoted as WAN ports.

AIDs for VCG

The VCGAID can be used to identify VCG ports in the system:

Simple_VCGAID ::= v1 | v2 | v3 | v4 | va11

VCGAID ::= UnivSlotAID–Simple_VCGAID

Legal VCG AIDs depend on the type of CP provisioned for the slot as shown in the following table:

Circuit Pack Type	Legal VCG Port AIDs
GE1	{v1, v2, v3, v4} va11



AU-3/STS-1 tributary

AIDs for AU-3/STS-1 tributaries

The STS1NumAID can be used to identify SDH/SONET tributaries in the system:

Simple_STS1NumAID ::= { 1, 2, ..., 768 } | all

STS1NumAID ::= SPortAID–Simple_STS1NumAID

Legal Simple_STS1NumAIDs (STS-1/AU-3 numbers) depend on the type of CP provisioned for the slot and may depend on the provisioned pluggable interface as shown in the following table:

Circuit Pack Type	Legal STS-1/AU-3 Number
EP155	{ 1 ...3 }
OP155	{ 1 ...3 }
OP622	{ 1 ... 12 }
OP2G5	{ 1 ... 48 }
OP10	{ 1 ... 192 }
OP40	{ 1 ... 768 }



Virtual concatenation group (VCG) tributary

AIDs for VCG tributaries

The VCGNumAID can be used to identify VCG tributaries in the system:

$\text{Simple\_VCGNumAID} ::= \{ 1, \dots, 21 \} \mid \text{all}$

$\text{VCGNumAID} ::= \text{VCGAID} - \text{Simple\_VCGNumAID}$

VCG tributaries denote a group of X virtually concatenated STSs/VCs:

STS-1-Xv (X in {1, ..., 21}) or VC-4-Xv (X in {1, ..., 7}).

Legal Simple_VCGNumAIDs (VCG numbers) depend on the type of CP provisioned for the slot and the VCG type (mapping) as shown in the following table:

Circuit Pack Type / VCG mapping	Legal VCG Number
GE1/STS1-VC3	{1 ... 21}
GE1/STS3c-VC4	{1, 4, 7, 10, 13, 16, 19}

The actual value is also dependent on the actual configuration.



Generic tributary

AIDs for generic tributaries In some scenarios the specific tributary type is not of interest. The GenTribAID is used to identify generic tributaries in the system:

Simple_GenTribAID ::= Simple_STS1NumAID | Simple_VCGNumAID | all

Simple_GenTribPortAID ::= Simple_SPortAID | Simple_VCGAID | all

GenTribAID ::=

BayAID–Simple_ShelfAID–#–#–Simple_UnivSlotAID–

Simple_GenTribPortAID–Simple_GenTribAID



Protection groups

Simple protection group AID

The system supports equipment and transmission protection. The ProtGrpAID can be used to identify equipment and transmission protection groups:

Simple_ProtGrpAID ::= eEquipmentProtGrpID | ea111 {o1n1t1f}
TransProtGrpID | oa11 | na11 | ta11 | fa11 | a11

ProtGrpAID ::= BayAID–Simple_ShelfAID–Simple_ProtGrpAID

The first character in the Simple_ProtGrpAID is denoted as **entity type qualifier**. It determines the type of protection as described in the following table:

Entity Type Qualifier	Protection Type
e (quipment)	1+1 or 1:1 (future) equipment protection group
o (ne plus one)	1+1 linear MSP/APS
n (by one)	1:n linear MSP/APS (including 1:1) – future
t (wo fibre)	2 fibre MS SPRING / BLSR
f (our fibre)	4 fibre MS SPRING / BLSR

The **EquipmentProtGrpID** is described in the following subsections.

Transmission protection group ID

The **TransProtGrpID** is a three digit identifier which will be assigned to the group when it is created by the user:

TransProtGrpID ::= { 001, ..., 999 }

Types of transmission protection AIDs

The following types of transmission protection AIDs are defined according to the rules above:

OnePlusOne_ProtGrpAID ::=

BayAID–Simple_ShelfAID–oTransProtGrpID | BayAID–Simple_ShelfAID–oa11

NByOne_ProtGrpAID ::=

BayAID–Simple_ShelfAID–nTransProtGrpID | BayAID–Simple_ShelfAID–na11

TwoFibre_ProtGrpAID ::=

BayAID-Simple_ShelfAID-tTransProtGrpID | BayAID-Simple_
ShelfAID-ta11

FourFibre_ProtGrpAID ::=

BayAID-Simple_ShelfAID-fTransProtGrpID | BayAID-Simple_
ShelfAID-fa11

Path protection group AIDs

The output tributary AID of the associated protected cross-connection is used to identify a path protection group AID.



Switch and timing equipment protection group

AID for switch and timing equipment group

The system can have a 1+1 equipment protection group for the XC320 CP which implements the switch and timing function. The SwitchAndTmgProtGrpAID can be used to identify the 1+1 equipment protection group for the XC320:

Simple_SwitchAndTmgProtGrpAID ::= estgrp

SwitchAndTmgProtGrpAID ::= BayAID–Simple_ShelfAID–estgrp



Controller equipment protection group

AID for controller equipment group

The system can have a 1+1 equipment protection group for the CTL CP which implements the system controller function (SCF) and data communications function (DCF). The CtlProtGrpAID can be used to identify the 1+1 equipment protection group for the CTL:

Simple_CtlProtGroupAID ::= ectlgrp

CtlProtGroupAID ::= BayAID–Simple_ShelfAID–ectlgrp



General equipment protection groups

**Equipment Protection
Group ID**

The EquipProtGrpID is a three digit identifier which shall be assigned to the group when it is created by the user:

EquipProtGrpID ::= { 01, ..., 99 }

**AID for EP155 equipment
group**

The EP155ProtGrpAID shall be used to identify the 1+1 equipment protection group for the EP155:

Simple_EP155ProtGroupAID ::= eepEquipProtGrpID

EP155ProtGroupAID ::= BayAID-Simple_ShelfAID-eepEquipProtGrpID



Examples

AID examples The following tables gives examples for the various AIDs described in the previous sections:

Entity	Example AID
Bay / Rack	1
Shelf / Subrack	1-1
Equipment protection group (Switch and Timing Function)	1-1-estgrp
1+1 MSP / APS protection group	1-1-o100
Two Fiber MSSPRING/BLSR protection group	1-1-t110
Fan Unit	1-1-fan
PI	1-1-pia
TI	1-1-tia
Backplane	1-1-backpl
User Panel	1-1-usrpn1
CI-CTL	1-1-cictl
User Byte Port	1-1-ubio3
LAN Ports	1-1-lan2
Slot	1-1-#-#-2
CP	1-1-#-#-xcw-cp
Socket	1-1-#-#-5-sc2
NVM	1-1-#-#-ctlw-nvm
SPort	1-1-#-#-1-3
EPort	1-1-#-#-2-1
VCG Port	1-1-#-#-2-v1
STS-1 / AU-3 Trib	1-1-#-#-1-3-1
VCG Trib	1-1-#-#-2-v1-1





3 Common data types

Overview

Purpose The following data types are used in the description of TL1 messages, the definition is given in Backus-Naur Form (characters of the Backus-Naur Form are enclosed in " " when they are meant as literal in the definition):



Conventions used in message descriptions

GR-831-CORE Definition	Name used in TL1 messages	Definition
nil	nil	nil, symbolizes the absence of any other thing
let	letter	A B ... Z a b ... z
dig	digit	0 1 2 3 4 5 6 7 8 9
ident	identifier	<letter> (<letter> <digit>) *
sym name	symbolic name	<digit>* ((<letter> "+" # %) <digit>*)+
alphanum	alphanumeric string	(<letter> <digit>) +
dec num	decimal number	[D"]<digit>* [.] <digit>+
arith exp	arithmetic expression	"(" ["+" -] <digit>*[.]<digit>+ ")"
hex num	hexadecimal number	[H"] (<digit> A B C D E F)+
oct num	octal number	[O"] (0 1 2 3 4 5 6 7)+
bin num	binary number	[B"] (0 1)+
keyed num	keyed number	[K"] (<digit> A B C D "*" #)+
num str	numeric string	<digit>+
integer	integer	<numeric string> "(" ["+" -] <digit>+ ")"
text str	text string	"(\ " \ <any character except " or \>)* "
inner str	inner string	\ " (" " \ <any character except " or \>)* \ "
aid	AID	see Chapter 2, "AID structure" .
	AID list	<AID> (&<AID>)*
tid	TID	<identifier>(<identifier>)* <text string> see also RTRV-HDR for <i>LambdaUnite</i> [®] MSS specific constraints
	character string	any character except: ; , : "
	value set	set of predefined <character strings>
	alphanumeric value set	set of predefined <alphanumeric strings>
	numeric value set	set of predefined <numeric strings>
	AID string	(letter digit _ - & #)+





4 Tl1 messages - administration & security

Overview

Purpose This section contains the TL1 interface definition for the domain “administration and security”.

Contents

<u>Session</u>	<u>4-3</u>
<u>ACT-USER: Activate user</u>	<u>4-4</u>
<u>CANC-USER: Cancel user</u>	<u>4-11</u>
<u>CANC-USER-SECU: Cancel user security</u>	<u>4-13</u>
<u>NE security administration</u>	<u>4-16</u>
<u>RTRV-NE-SECU: Retrieve NE security</u>	<u>4-17</u>
<u>ED-NE-SECU: Edit NE security</u>	<u>4-20</u>
<u>ED-NE-SECU notification</u>	<u>4-22</u>
<u>User administration</u>	<u>4-23</u>
<u>RTRV-USER-SECU: Retrieve user security</u>	<u>4-24</u>
<u>RTRV-USER: Retrieve user</u>	<u>4-31</u>
<u>ENT-USER-SECU: Enter user security</u>	<u>4-33</u>
<u>ENT-USER-SECU notification</u>	<u>4-38</u>
<u>ED-USER-SECU: Edit user security</u>	<u>4-40</u>
<u>ED-USER-SECU notification</u>	<u>4-45</u>

<u>ED-USER: Edit user</u>	<u>4-47</u>
<u>ED-USER notification</u>	<u>4-49</u>
<u>ED-PID: Edit password identifier</u>	<u>4-50</u>
<u>ED-PID notification</u>	<u>4-54</u>
<u>DLT-USER-SECU: Delete user security</u>	<u>4-55</u>
<u>DLT-USER-SECU notification</u>	<u>4-58</u>

Session

Overview

Purpose The session entity handles the establishment and removal of sessions between the NE and the Managers.

Contents

ACT-USER: Activate user	4-4
CANC-USER: Cancel user	4-11
CANC-USER-SECU: Cancel user security	4-13



ACT-USER: Activate user

The ACT-USER command must be initiated to set up a login session with the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): Any
Priority: 4
Abortable: No

Input format Command Syntax: ACT-USER:*tid:uid:ctag::pid*;

Input parameters

Command parameters

1. **tid** – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. **uid** – User Identifier
This is the unique user login identifier for which the ACT-USER login command is intended. Grouping and/or ranging of **uid** values for the ACT-USER command are not allowed. Valid **uid** values for the ACT-USER command are case-sensitive alphanumeric strings which have been previously provisioned as valid login IDs in the NE.
Type: alphanumeric string (case-sensitive)
Range: 1 – 10 characters
The **uid** ALL is not allowed in any combination of upper or lower cases.
Default: not applicable
3. **ctag** – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. **pid** – Password Identifier
This required parameter is the confidential password authenticator for the given **uid**. Password strings are transmitted in non-encrypted form in the ACT-USER command; are encrypted when stored in the NE; and are never transmitted from the NE.
Type: character string (case-sensitive)
Range: 6 to 10 legal characters. Valid passwords consist of at least two non-alphabetic characters with at least one special character. The special character can be one of the required

non-alpha characters. For example, TEST1+ is a valid password.
 The first character of a password must be a letter.
 Default: For the two superusers the default password is:
 UNITE+01 for User ID LUC01 and UNITE+02 for User ID
 LUC02. For other users: not applicable.

Output format When a user logs in successfully, the following response is returned:

```

sid date time
M ctag COMPLD
"uid:lastdate,lasttime,attempts,systype,release,
upc:spec_block"
/* Lucent Technologies systype Release release
User Privilege Code: upc
LUCENT TECHNOLOGIES - PROPRIETARY
THIS SOFTWARE CONTAINS INFORMATION OF LUCENT
TECHNOLOGIES AND IS NOT TO BE DISCLOSED OR USED
EXCEPT IN ACCORDANCE WITH APPLICABLE AGREEMENTS.
NOTICE: THIS IS A PRIVATE COMPUTER SYSTEM.
USE OF THIS SOFTWARE IS GOVERNED SOLELY AS EXPRESSLY
AUTHORIZED IN THE RELEVANT AGREEMENT BETWEEN
LUCENT TECHNOLOGIES AND CUSTOMER.
UNAUTHORIZED ACCESS OR USE MAY LEAD TO PROSECUTION.
*/
;
```

Note: A blank line in front of the terminator (;) can be ignored.

Expired password:

If the login request would otherwise complete successfully, but the user password has expired or it is the first login, the following partial completion response is returned:

```

sid date time
M ctag PRTL
"uid:lastdate,lasttime,attempts"
/* Your password has expired. Until you change your
password (ED-PID)
you will not be allowed further access to this
Network Element.
*/
;
```

Advance notice of password expiration:

If the user password is about to expire, the following line is added at the bottom of the login banner, where 'x' is a number from 1 to 5:

```
...  
Your password will expire in x days.  
*/  
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section for the RTRV-HDR command.

Output parameters

Command parameters

1. uid – User Identifier
This is included in the command by the OS/CIT and repeated by the NE as a confirmation that the given user identifier is successfully logged in.
2. lastdate – Last uid Login Date
This is the date of the last session established by this *uid*.
Type: value set of the format YY-MM-DD
Range: Y, M, D are digits. Leading zeros are not suppressed. YY represents the last two digits of the year, MM the month, DD the day.
3. lasttime – Last uid Login Time
This is the time of the last session established by this *uid*.
Type: value set of the format HH-MM-SS
Range: H, M, S are digits. Leading zeros are not suppressed. HH represents the hours, MM the minutes, SS the seconds. The 24 hour format is used.
4. attempts – Unsuccessful Login Attempts
This is the number of unsuccessful login attempts since the last successful login session on this NE.
Type: integer
Range: 0 – 98

5. systype – System Type
This specifies the type of system.
Type: value set
Range: WaveStar_UNITE
Default: WaveStar_UNITE
6. release – Release
This is the software Release number of the system.
Type: value set in the form xx.yy.zz
Range: x, y, z are digits. Leading zeros are not suppressed. The version number ranges from 01.00.00 ... 99.99.99
Example: 01.02.03
Default: 01.00.00
7. upc – User Privilege Code List
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).

Spec block parameters

1. tmleft – Time left before password expires
If there are more than 5 days left before the password expires, this parameter is omitted.
Type: integer
Range: 1 ... 5

Detailed behavior description

An active TL1 access login session is required at each NE in order to interact with that NE (including receiving autonomous message output as well as using TL1 commands).

A maximum of one login per active session is allowed. Any subsequent attempt on the same session is denied. But the user can login several times on different sessions.

Until a successful login attempt is complete for a given NE, there is no communication (autonomous or command responses) outbound from the NE except to DENY unsuccessful login attempts.

If a user password has expired upon execution of the ACT-USER command, the ACT-USER will be accepted but that user will not be able to perform any function or receive any autonomous message output until the associated password has successfully been modified. This will also occur if the user logs in the first time.

A special banner message will be displayed as part of the command completion response, informing the user that the password has expired

ACT-USER: Activate user

and must be updated (see the OUTPUT FORMAT section). The user is allowed to use either ED-PID to update the password identifier or CANC-USER to terminate the session.

When the NE receives an ACT-USER command, the given login ID will initiate a login session on the NE provided that a provisioned login ID and correct password are entered.

When the communication with the NE fails, all active logins to that NE are terminated without notice to the user. Similarly, all active logins to a targeted NE are terminated if a communication failure occurs between the local NE and that remote NE or if an intermediate NE is reset or initialized.

The ACT-USER command does not generate a REPT DBCHG message.

Example input/output

The following example shows a successful login session initiation attempt:

```
ACT-USER:LT-UNITE-123:nbguser1:123456::kj5lee+3;
  LT-UNITE-123 01-01-01 08:00:00
M 123456 COMPLD
  "nbguser1:00-12-31,09-00-00,1,WaveStar_UNITE,1.1.13,
  P3&M3:tmleft=5"
/* Lucent Technologies WaveStar_UNITE Release 1.1.13
User Privilege Code: P3&M3
LUCENT TECHNOLOGIES - PROPRIETARY
THIS SOFTWARE CONTAINS INFORMATION OF LUCENT
TECHNOLOGIES
AND IS NOT TO BE DISCLOSED OR USED EXCEPT IN ACCORDANCE
WITH APPLICABLE AGREEMENTS.
NOTICE: THIS IS A PRIVATE COMPUTER SYSTEM.
USE OF THIS SOFTWARE IS GOVERNED SOLELY AS EXPRESSLY
AUTHORIZED IN THE RELEVANT AGREEMENT BETWEEN
LUCENT TECHNOLOGIES AND CUSTOMER.
UNAUTHORIZED ACCESS OR USE MAY LEAD TO PROSECUTION.
*/
;
```

The following example shows a partial completion response to a login session initiation attempt:

```
ACT-USER:LT-UNITE-123:nbguser1:123456::kj5lee+3;
  LT-UNITE-123 01-01-01 08:00:00
```

```
M 123456 PRTL
"nbguser1:00-12-31,09-00-00,23"
/* Your password has expired. Until you change your
password (ED-PID)
you will not be allowed further access to this Network
Element */
;
```

Note: A blank line in front of the terminator ";" can be ignored.

Error responses The general error responses defined in ["RTRV-HDR: Retrieve header" \(5-8\)](#) are also valid for this command.

Validation rule: Maximum logins exceeded

If a user attempts to login after the maximum number of login sessions has been reached, the following error message will be displayed.

Error code: SARB - Status, All Resources Busy

Validation rule: Invalid uid and/or pid

If the NE receives an ACT-USER command with an invalid *uid* (*uid* not in the NE database or *uid* syntactically incorrect), invalid *pid* or both.

Error code: IDNV - Input, Data Not Valid

Validation rule: Disabled User ID

If a user attempts to log in using a disabled User ID, the login is denied and the following error message will be displayed:

Error code: IDNV - Input, Data Not Valid

Validation rule: Expired password and unsuccessful change of password

The user will be allowed three attempts to change their password. If the third attempt fails, the user will be logged out and the association dropped. The execution of any command prior to the successful change of the password will be counted as one of the three attempts to change the password. This includes failures of the ED-PID command due to incorrect data, attempts to execute valid commands other than the ED-PID command, or invalid commands, possibly due to a data entry error. In all cases, the system will return the following error response.

Error code: IDNV - Input, Data Not Valid

ACT-USER: Activate user

Validation rule: Login on established session

If the system receives an ACT-USER command on an already established session the system responds with the following error response:

Error code: ICNV - Input, Command Not Valid, session already established

Related TL1 messages

- [“CANC-USER: Cancel user” \(4-11\)](#)
- [“CANC-USER-SECU: Cancel user security” \(4-13\)](#)
- [“ED-PID: Edit password identifier” \(4-50\)](#)
- [“DLT-USER-SECU: Delete user security” \(4-55\)](#)
- [“ED-USER-SECU: Edit user security” \(4-40\)](#)
- [“ENT-USER-SECU: Enter user security” \(4-33\)](#)
- [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#)
- [“RTRV-PRMTR-SFTWR: Retrieve parameter software” \(11-13\)](#)

References TR-NWT-000835, OTGR Section 12.5: Operations Applications Messages – NE and Network System Security Administration Messages.



CANC-USER: Cancel user

The CANC-USER command can be initiated to terminate the login session of the user with the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): Any
Priority: 1
Abortable: No

Input format Command Syntax: CANC-USER:*tid*:[*uid*]:*ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *uid* – User Identifier
This is the user identifier that was used in the ACT-USER command that initiated this session. This is an optional parameter; if it is not specified, it defaults to the user identifier of this session. See definition of [“ACT-USER: Activate user” \(4-4\)](#). The *uid* is not really needed in this command, because always the own session will be canceled. But this parameter is in because of telcordia requirements.
3. *ctag* – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format If the logout request completes successfully, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

CANC-USER: Cancel user

Detailed behavior description

When the NE receives a CANC-USER command, the login session on the NE will be terminated provided that the user is currently active on the NE. Only the users own session can be terminated.

The CANC-USER command does not generate a REPT DBCHG message.

Example input/output

The following example shows a successful command completion and login session termination:

```
CANC-USER:LT-UNITE-123::123456;  
    LT-UNITE-123 00-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

The general error responses defined in [“RTRV-HDR: Retrieve header” \(5-8\)](#) are also valid for this command.

Validation rule: not the own uid specified

Only the own *uid* must be specified. There is not so.

Error code: IDNC - Input, Data, Not Consistent, not own uid

Related TL1 messages

- [“ACT-USER: Activate user” \(4-4\)](#)
- [“CANC-USER-SECU: Cancel user security” \(4-13\)](#)
- [“DLT-USER-SECU: Delete user security” \(4-55\)](#)
- [“ED-USER-SECU: Edit user security” \(4-40\)](#)
- [“ENT-USER-SECU: Enter user security” \(4-33\)](#)
- [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#)

References

TR-NWT-000835, OTGR Section 12.5: Operations Applications Messages – NE and Network System Security Administration Messages.



CANC-USER-SECU: Cancel user security

The execution of this command on a NE by an security administrator terminates all login sessions of a particular user or of all non-superusers/non-MEMADMIN-users within the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S5
Priority: 1
Abortable: No

Input format Command Syntax: CANC-USER-SECU:*tid*:*[uid]*:*ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *uid* – User Identifier
This is the *uid* of the user whose sessions are being terminated. If an security administrator wants to force log out another user, then the security administrator could do so by specifying that *uid*. An privileged user could log out any other user including super-users and users of *uidclass* MEMADMIN.
If an security administrator wants to force log out all the users that are currently logged in, then the security administrator could do so by omitting the *uid*. Logging out all users by omitting the *uid* does not include the super-users or MEMADMIN-users logins.
3. *ctag* – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format If the logout request completes successfully, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

CANC-USER-SECU: Cancel user security

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The CANC-USER-SECU command can be only executed by the security administrator (UPC S5). She/he can terminate the sessions of other users by supplying his/her *uid*. If a user has established more than one sessions then all sessions will be terminated. The own session will not be affected this command.

The CANC-USER-SECU command does not generate a REPT DBCHG message.

Example input/output

The following example shows a successful command completion and login session termination:

```
CANC-USER-SECU:LT-UNITE-123:nbguser1:123456;
    LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
;
```

Error responses

The general error responses defined in [“RTRV-HDR: Retrieve header” \(5-8\)](#) are also valid for this command.

Validation rule: uid not in NE data base

The *uid* is not contained in the NE's data base.

Error code: IDNV - Input, Data Not Valid, uid not in NE data base

Validation rule: user with uid not logged in

A user with the specified *uid* is not currently logged in.

Error code: SRQN - Status, invalid request, uid not logged in

Validation rule: uid must not be the own uid

If the own uid matches *uid* the command should be denied.

Error code: IDNV - Input, Data Not Valid, uid must not be the own uid.

CANC-USER-SECU: Cancel user security

Related TL1 messages

- [“ACT-USER: Activate user” \(4-4\)](#)
- [“CANC-USER: Cancel user” \(4-11\)](#)
- [“DLT-USER-SECU: Delete user security” \(4-55\)](#)
- [“ED-NE-SECU: Edit NE security” \(4-20\)](#)
- [“ED-USER-SECU: Edit user security” \(4-40\)](#)
- [“ENT-USER-SECU: Enter user security” \(4-33\)](#)

References TR-NWT-000835, OTGR Section 12.5: Operations Applications Messages – NE and Network System Security Administration Messages.



NE security administration

Overview

Purpose This entity refers to the NE security parameters which are defined for the whole NE.

Contents

RTRV-NE-SECU: Retrieve NE security	4-17
ED-NE-SECU: Edit NE security	4-20
ED-NE-SECU notification	4-22



RTRV-NE-SECU: Retrieve NE security

The RTRV-NE-SECU command can be initiated by a user to retrieve global security information in the NE. The current login sessions in the NE identified by the *uid* which established the session will also be retrieved using the RTRV-NE-SECU command.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
Priority: 1
Abortable: No

Input format Command Syntax: RTRV-NE-SECU:*tid*::*ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *ctag* – Correlation Tag
See definition of [“RTRV-NE-SECU: Retrieve NE security” \(4-17\)](#).
- .

Output format There is one output line for each session. The first line contains user information for the user and session that issued the RTRV-NE-SECU command.

After receiving the RTRV-NE-SECU command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
"uid::spec_block"
"uid"
.
.
"uid"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. uid – User ID
ID of the user that initiated the RTRV-NE-SECU command.
Listed below this *uid* are *uids* of all the other sessions. If the user from which the RTRV-NE-SECU command was issued is logged on via other sessions, the uid list will contain each other instance of the uid, but the additional listing is just like the listing of any other user, without the additional user information.
See definition of [“ACT-USER: Activate user” \(4-4\)](#).

Spec block parameters

1. age – Lockout Aging Period
The time interval during which the number of invalid login attempts are counted. When *age* expires after the last invalid login attempt, the counter of invalid login attempts by that *uid* is reset to zero.
Type: numeric string
Range: 1 – 999 [minute]
Default: 60
2. intrvl – Lockout Period
The time during which login attempts using that *uid* will not be allowed. This occurs when the number of consecutive invalid login attempts by a *uid* reaches *thrshld*. When *intrvl* expires, login attempts will again be allowed from that *uid*. If this parameter is set to 0 (zero), the lockout feature is disabled.
Type: numeric string
Range: 0 – 99 [minute]
Default: 10

3. thrshld – Lockout Threshold
The maximum number of consecutive invalid login attempts that are allowed by a *uid*. If the count of invalid login attempts is equal to the threshold, the *uid* is locked out for *intrvl* period of time. If a login attempt is successful, the count of *invalid* login attempts by that *uid* is reset to zero.
Type: numeric string
Range: 2 – 99
Default: 5
4. usrage – User ID Aging Period
If a *uid* has never been used to perform a successful login during a specified time interval it shall be disabled. A value of 0 disables user ID aging.
The *usrage* does not apply to the super-users. Super-users will be never disabled.
Type: numeric string
Range: 0 – 999 [days]
Default: 10

Example input/output

The following example shows the successful completion of the RTRV-NE-SECU command by the NE:

```
RTRV-NE-SECU:LT-UNITE-123::123456;  
LT-UNITE-123 00-01-01 08:00:00  
M 123456 COMPLD  
"nbguser1::thrshld=3,intrvl=1,age=60,usrage=10"  
"njsmith"  
"hugo"  
"airmail"  
;
```

Error responses

The RTRV-NE-SECU command reports no special error responses. The general error responses defined in [“RTRV-HDR: Retrieve header” \(5-8\)](#) are also valid for this command.

Related TL1 messages

- [“ACT-USER: Activate user” \(4-4\)](#)
- [“ED-NE-SECU: Edit NE security” \(4-20\)](#)



ED-NE-SECU: Edit NE security

The ED-NE-SECU command can be initiated by a user to modify global security parameters in the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S5
 Priority: 1
 Abortable: No

Input format Command Syntax: ED-NE-SECU:*tid*::*ctag*:::*spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *ctag* – Correlation Tag
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Spec block parameters

1. *age* – Lockout Aging Period
 See definition of [“RTRV-NE-SECU: Retrieve NE security” \(4-17\)](#)
 .
2. *intrvl* – Lockout Period
 See definition of [“RTRV-NE-SECU: Retrieve NE security” \(4-17\)](#)
 .
3. *thrshld* – Lockout Threshold
 See definition of [“RTRV-NE-SECU: Retrieve NE security” \(4-17\)](#)
 .
4. *usage* – User ID Aging Period
 See definition of [“RTRV-NE-SECU: Retrieve NE security” \(4-17\)](#)
 .

Output format After receiving the ED-NE-SECU command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
```

;

The NE returns the successful completion response even if none of the parameter values are modified using the ED-NE-SECU command.

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section for the RTRV-HDR command.

**Detailed behavior
description**

This command updates the NE security administration values of *thrshld* (Lockout Threshold), *intrvl* (Lockout Period), *age* (Lockout Aging Period), *usrage* (User ID Aging Period) according the values in the parameters .

This update is reported via the corresponding ED-NE-SECU notification – see [“ED-NE-SECU notification” \(4-22\)](#).

Example input/output

The following example shows the successful completion of the ED-NE-SECU command by the NE:

```
ED-NE-SECU:LT-UNITE-123::123456:::thrshld=5,intrvl=2,  
age=50,usrage=200;  
LT-WBM-789 00-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

The general error responses defined in [“RTRV-HDR: Retrieve header” \(5-8\)](#) are also valid for this command.

Related TL1 messages

- [“ACT-USER: Activate user” \(4-4\)](#)
- [“RTRV-NE-SECU: Retrieve NE security” \(4-17\)](#)



ED-NE-SECU notification

Output format See definition of [“REPT DBCHG: Report data base change” \(5-67\)](#).

The ED-NE-SECU notification will have following specific syntax:

ED-NE-SECU::*spec_block*

Output parameters

Spec block parameters

1. age – Lockout Aging Period
See definition [“RTRV-NE-SECU: Retrieve NE security” \(4-17\)](#).
2. intrvl – Lockout Period
See definition [“RTRV-NE-SECU: Retrieve NE security” \(4-17\)](#).
3. thrshld – Lockout Threshold
See definition [“RTRV-NE-SECU: Retrieve NE security” \(4-17\)](#).
4. usrage – User ID Aging Period
See definition [“RTRV-NE-SECU: Retrieve NE security” \(4-17\)](#).

Example output The example shows a normal notification after an ED-NE-SECU command:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:ED-NE-SECU:::thrshld=5,
intrvl=2,age=50,usage=200"
;
```



User administration

Overview

Purpose This entity refers to the User Security Data.

Contents

<u>RTRV-USER-SECU: Retrieve user security</u>	<u>4-24</u>
<u>RTRV-USER: Retrieve user</u>	<u>4-31</u>
<u>ENT-USER-SECU: Enter user security</u>	<u>4-33</u>
<u>ENT-USER-SECU notification</u>	<u>4-38</u>
<u>ED-USER-SECU: Edit user security</u>	<u>4-40</u>
<u>ED-USER-SECU notification</u>	<u>4-45</u>
<u>ED-USER: Edit user</u>	<u>4-47</u>
<u>ED-USER notification</u>	<u>4-49</u>
<u>ED-PID: Edit password identifier</u>	<u>4-50</u>
<u>ED-PID notification</u>	<u>4-54</u>
<u>DLT-USER-SECU: Delete user security</u>	<u>4-55</u>
<u>DLT-USER-SECU notification</u>	<u>4-58</u>



RTRV-USER-SECU: Retrieve user security

The RTRV-USER-SECU command can be initiated by a user to retrieve user security information of one or all the users in the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S4
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-USER-SECU:*tid*:[*uid*]:*ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *uid* – User ID
If this parameter is omitted, all *uids* will be retrieved.
See definition of [“ACT-USER: Activate user” \(4-4\)](#).
3. *ctag* – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format If the NE has logins to report, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
  "uid::spec_block"
  .
  .
  "uid::spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. uid – User ID
User ID whose security parameters are to be retrieved. See definition of [“ACT-USER: Activate user” \(4-4\)](#).

Spec block parameters

1. alw_login – Allow Login
This parameter displays the enable/disable state of a User ID. A User ID can be automatically disabled by the system when the time specified by parameter *usrage* (see [“RTRV-NE-SECU: Retrieve NE security” \(4-17\)](#)) expires or via the ED-USER-SECU command. A User ID can be enabled via the ED-USER-SECU command.
If a User ID is disabled, logins with that User ID are denied.
Type: alphanumeric value set
Range:
 - YES: User ID is enabled
 - NO: User ID is disabledDefault: YES
2. initobs – Initialization Observability
This parameter allows the system to accept commands before it has completed initialization. Do not enable this parameter in networks using a Telcordia operations system.
Type: alphanumeric value set
Range: DISABLE – The feature is disabled.
Default: DISABLE
Note: *LambdaUnite*[®] MSS does not support Initialization Observability feature. This parameter is only for compatibility. The DISABLE value will be returned as fixed value.
3. page – Password Aging Interval
This parameter specifies the period in days after which the user has to change the password of their account. If the value is set to 0 then the password aging function is disabled.
Type: integer
Range: 0, 7-999 [days]
Default: 90

RTRV-USER-SECU: Retrieve user security

4. screen – Message Screening

This parameter specifies what output messages are associated with the *uid*. This parameter is omitted if the user has none of these values. Any combination of these values may be specified using ampersand (&)

Type: alphanumeric string An '&' is also allowed for concatenation of values.

Range:

- DBCHG
Data Base Change notifications – changes in creation of entities, in user provisionable parameters, in deletion of entities will be reported (data base changes). The user will receive REPT DBCHG messages.
- STCHG
State Change notifications – report changes in user non-provisionable parameters (state changes). The user will receive REPT DBCHG messages.
- PSCHG
Protection switch notifications – report protection switch changes. User will receive REPT EVT and REPT SW messages.
- ALARMS
Alarm notifications. The user will receive REPT ALM ENV, REPT ALM, and REPT EVT messages.
- ONNS
ONNS Notifications. Database and state changes associated with entities managed by ONNS application and only issued when *xcsetup* = NN. The related ONNS TL1 notifications are REPT PTHCHG, REPT PTHEVT, REPT NNCHG, REPT NNEVT.
- OWN
Responses to own commands. The user will receive no other notifications.
Note: OWN will never be shown in conjunction with DBCHG, STCHG, PSCHG or ALARMS.
- NA

RTRV-USER-SECU: Retrieve user security

Not applicable. This value is reserved for users with uidclass=MEMADMIN. The notification behavior is controlled in this case by the user class.

Default: OWN

If more than one value is set the values will be concatenated by '&'.

Example: DBCHG&ALARMS

5. tmout – Inactivity Timeout Period

If there are no messages between the user and the NE over the Timeout Period, the session is logged off. A value of 0 disables the timeout function.

Type: integer

Range: 0 – 999 [minutes]

Default: 30

6. ucpl – User Community Priority Level

This parameter specifies with which priority the commands of a user will be operated by the NE. Input commands from users with higher priority are executed before commands from users with lower priority.

Type: integer

Range: 1

Default: 1

Note: *LambdaUnite*[®] MSS does not support User Community Priority Level's. Only the default value 1 will be reported. The value is not settable.

7. uidclass – UID Class

This is the user class of a *uid*.

Type: alphanumeric value set

RTRV-USER-SECU: Retrieve user security

Range:

- OTHER – This is the default class. For users in this class, command privileges and notifications are controlled only by their UPCs and their notification Registration List.
- MEMADMIN – User class for memory administration users. All users of this class share the same atag counter for autonomous messages and are allowed to execute the command RTRV-AO.

Default: OTHER

8. upc – User Privilege Code List

This parameter specifies the user privilege code UCFC/UCAL pair assigned to a user. Multiple UCFC/UCALs can be specified using single ampersands (&). If a user try to operate a command with a privilege code higher than assigned to the user for the category of the command the command will be denied.

Type: alphanumeric string Also allowed is '&' for concatenation.

Range: Pi, Mi, Ti, Si, PMi, Di where "i" is an integer ranging from 0 to 5, with i=0 implying that there is no authorization for the functional category. S0 is not allowed.

Default: P1&M1&T1&S1&PM1 except for super users:
P5&M5&T5&S5&PM5

Note: The system does not support commands for the D (DEBUG) category. Setting this privilege code does not have any effect on the system behavior and it will not be visible in output direction. It is only for compatibility.

See also [“List of user privilege codes” \(14-2\)](#).

Example input/output Example for specified user:

The following example shows the successful completion of RTRV-USER-SECU command by the NE. The example below retrieves the security information associated with the user specified in the uid field:

```
RTRV-USER-SECU:LT-UNITE-123:nbguser1:123456;
LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
"nbguser1::upc=P3&M3,screen=DBCHG&ALARMS,page=90,
tmout=30,alw_login=YES,uidclass=OTHER"
;
```

RTRV-USER-SECU: Retrieve user security

Example for all users:

The following example shows the successful completion of RTRV-USER-SECU command by the NE. The example below retrieves the security information associated with all the users from the NE:

```
RTRV-USER-SECU:LT-UNITE-123::123456;
    LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
    "LUC01::upc=S5,screen=DBCHG&STCHG&PSCHG&ALARMS,
    page=90,tmout=30,alw_login=YES,uidclass=OTHER"
    "LUC02::upc=S5,screen=DBCHG&STCHG&PSCHG&ALARMS,
    page=47,tmout=11,alw_login=YES,uidclass=OTHER"
    "hugo::upc=P3&M3,screen=DBCHG&ALARMS,page=999,
    tmout=3,alw_login=YES,uidclass=OTHER"
    "egon::upc=P3&M3&T3&PM3,screen=PSCHG&STCHG,page=7,
    tmout=999,alw_login=NO,uidclass=OTHER"
    "ronald::upc=T2,screen=DBCHG&STCHG&PSCHG&ALARMS,
    page=0,tmout=0,alw_login=YES,uidclass=OTHER"
    "cathrin::upc=T2,screen=OWN,page=90,tmout=30,
    alw_login=YES,uidclass=OTHER"
;
```

Error responses The RTRV-USER-SECU command reports no special error responses. The general error responses defined in [“RTRV-HDR: Retrieve header” \(5-8\)](#) are also valid for this command.

Validation rule: invalid uid

If the NE receives an RTRV-USER-SECU command with an invalid (unknown) Only the own *uid* value.

Error code: IDNV - Input, Data Not Valid, invalid UID

Related TL1 messages

- [“ED-USER: Edit user” \(4-47\)](#)
- [“ENT-USER-SECU: Enter user security” \(4-33\)](#)
- [“ED-USER-SECU: Edit user security” \(4-40\)](#)
- [“DLT-USER-SECU: Delete user security” \(4-55\)](#)
- [“RTRV-USER: Retrieve user” \(4-31\)](#)

RTRV-USER-SECU: Retrieve user security

References TR-NWT-000835, OTGR Section 12.5: Operations Applications
Messages – NE and Network System Security Administration
Messages.



RTRV-USER: Retrieve user

The RTRV-USER command retrieves a user's own security information.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S2
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-USER:*tid*::*ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *ctag* – Correlation Tag
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format After receiving the RTRV-USER command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
"uid::spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. *uid* – User ID
 User ID whose security parameters are to be retrieved.
 See definition of input parameters of [“ACT-USER: Activate user” \(4-4\)](#).

Spec block parameters

1. page – Password Aging Interval
See definition [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
2. screen – Message Screening
See definition [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
3. tmout – Inactivity Timeout Period
See definition [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
4. uidclass – UID Class
See definition of output parameter *uidclass* in [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
5. upc – User Privilege Code List
See definition [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).

Example input/output

The following example shows the successful completion of RTRV-USER command by the NE:

```
RTRV-USER:LT-UNITE-123::123456;  
    LT-UNITE-123 00-01-01 08:00:00  
M 123456 COMPLD  
    "nbguser1::upc=P3&M3,screen=DBCHG&ALARMS,page=999,  
    uidclass=OTHER,tmout=3"  
;
```

Error responses

The RTRV-USER command reports no special error responses. The general error responses defined in [“RTRV-HDR: Retrieve header” \(5-8\)](#) are also valid for this command.

Related TL1 messages

- [“ED-USER: Edit user” \(4-47\)](#)
- [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#)

References

TR-NWT-000835, OTGR Section 12.5: Operations Applications Messages – NE and Network System Security Administration Messages.



ENT-USER-SECU: Enter user security

The ENT-USER-SECU command is used by an administrator to enter a new user and security parameters associated with that user.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S5
Priority: 1
Abortable: No.

Input format Command Syntax: ENT-USER-SECU:*tid:uid:ctag::pid*.,[*upc*]:[*spec_block*];

Input parameters **Important!** During a software download (CIT to NE) it may happen that the *Navis*[®] Optical EMS-NE connection get lost. This is caused by the *tmout* (inactivity timeout period) parameter. A value of 0 will disable the timeout function (see Spec block parameters description below).

Note: The new setting becomes operational only after a new login.

Command parameters

1. tid – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. uid – User ID
This parameter specifies the new user ID (*uid*) name.
See definition of input parameters of [“ACT-USER: Activate user” \(4-4\)](#).
3. ctag – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. pid – Password ID
This parameter specifies the password ID for the *uid*.
See definition of [“ACT-USER: Activate user” \(4-4\)](#).
5. upc – User Privilege Code List
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).

Spec block parameters

1. page – Password Aging Interval
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
2. screen – Message Screening
This parameter specifies what output messages are associated with the *uid*. This parameter is omitted if the user has none of these values. Any combination of these values may be specified using ampersand (&)
Type: alphanumeric string. An ‘&’ is also allowed for concatenation of values.
Range:
 - DBCHG
See definition of screen parameter.DBCHG in [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
 - STCHG
See definition of *screen* parameter.STCHG in [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
 - PSCHG
See definition of *screen* parameter.PSCHG in [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
 - ALARMS
See definition of *screen* parameter.ALARMS in [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
 - ONNS
See definition of *screen* parameter.ONNS in [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
 - ALL
All notifications.
This value can be used in input direction as a short-hand notation for DBCHG&STCHG&PSCHG&ALARMS.
 - OWN
Responses to own commands. The user will receive no other notifications.
 - NA
See definition of *screen* parameter.NA in [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
 - Default: OWN

ENT-USER-SECU: Enter user security

If more than one value is set the values will be concatenated by '&'. Example: DBCHG&ALARMS

Restriction: When **uidclass** is set to MEMADMIN, **screen** must be set to NA.

3. **tmout** – Inactivity Timeout Period

See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).

4. **uidclass** – UID Class

See definition of output parameter **uidclass** in [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).

Restriction: When **uidclass** is set to MEMADMIN, **screen** must be set to NA.

Output format

After receiving the ENT-USER-SECU command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters **sid**, **date**, **time**, and **ctag** included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

This command creates the NE's user data. A new user **uid** (User ID) will be established. The values of **pid** (Password ID), **upc** (User Privilege Code List), **alw_login** (Allow Login), **screen** (Message Screening), **page** (Password Aging Interval), **tmout** (Inactivity Timeout Period) will be assigned to the new user. If optional values are not specified the default values will be used.

This update is reported via the corresponding ENT-USER-SECU notification – see [“ENT-USER-SECU notification” \(4-38\)](#) section.

The updated **screen** attribute has either both values STCHG and DBCHG or none. If only one value is added then the other is implicitly added by the NE. If only one is removed then the other is implicitly removed by the NE.

The NE will always have two preinstalled users with full privileges in all functional categories. These two users will be referred to as super-users. The two super-users are also Security Administrators

because they have the S5 privilege code. The NE will not allow adding additional super-user type users. It will not be possible to remove either of the original super-user login IDs. An existing login ID (*uid*) except the super-user login IDs cannot be renamed. It must be deleted and re-entered with new *uid* value.

Example input/output The following example shows the successful completion of the ENT-USER-SECU command by the NE:

```
ENT-USER-SECU:LT-UNITE-123:nbguser1:123456::pass12+, ,
P3&M3:screen=DBCHG&STCHG&PSCHG,page=345,tmout=360;
    LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
;
```

Error responses The general error responses defined in [“RTRV-HDR: Retrieve header” \(5-8\)](#) are also valid for this command.

Validation rule: Entering user’s own or existing uid.

If the NE receives an ENT-USER-SECU command from a user trying to enter his or her own *uid* or an existing *uid*.

Error code: IDNV - Input, Data Not Valid, duplicate UID

Validation rule: Maximum number of *uids* reached

If the NE receives an ENT-USER-SECU command when it already has reached its maximum number of defined User IDs.

Error code: SLEM - Status, List Exceeds Maximum UIDs

Validation rule: Invalid *upc*

If the NE receives an ENT-USER-SECU command with a *upc*=P5&M5&T5&S5&PM5 or a *upc*=S0.

Error code: IDNV - Input, Data Not Valid, invalid UPC

Validation rule: Compatibility screen, *uidclass* parameter

If the NE receives an ENT-USER-SECU command with *uidclass*=MEMADMIN and *screen* !=NA it rejects the command with

Error code: IDNV - Input, Data Not Valid, incompatible *screen*, *uidclass* parameters

ENT-USER-SECU: Enter user security

Related TL1 messages

- [“DLT-USER-SECU: Delete user security” \(4-55\)](#)
- [“ED-USER-SECU: Edit user security” \(4-40\)](#)
- [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#)

References TR-NWT-000835, OTGR Section 12.5: Operations Applications Messages – NE and Network System Security Administration Messages.



ENT-USER-SECU notification

Output format See definition of [“REPT DBCHG: Report data base change” \(5-67\)](#).

The ENT-USER-SECU notification will have following specific syntax:

ENT-USER-SECU:*uid*::,[*upc*]:*spec_block*

Output parameters

Command parameters

1. uid – User ID
See input parameter definition of [“ACT-USER: Activate user” \(4-4\)](#).
2. upc – User Privilege Code List
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#) command.

Spec block parameters

1. alw_login – Allow Login
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#) command.
2. page – Password Aging Interval
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#) command.
3. screen – Message Screening
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#) command.
4. tmout – Inactivity Timeout Period
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#) command.
5. uidclass – UID Class
See definition of output parameter *uidclass* in [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).

Example output The example shows a normal notification after an ENT-USER-SECU Command:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:ENT-USER-SECU:nbguser1:,,
```



```
P3&M3:screen=DBCHG&STCHG&PSCHG,page=345,tmout=360,  
uidclass=OTHER,alw_login=YES"
```

;



ED-USER-SECU: Edit user security

The ED-USER-SECU command is used by an administrator to edit the security parameters associated with a user.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S5
Priority: 1
Abortable: No.

Input format Command Syntax: ED-USER-SECU:*tid:uid:ctag::[new_pid],[upc][:spec_block]*;

Input parameters **Important!** During a software download (CIT to NE) it may happen that the *Navis*[®] Optical EMS-NE connection get lost. This is caused by the *tmout* (Inactivity Timeout Period) parameter. A value of 0 will disable the timeout function (see Spec block parameters description below).

Note: The new setting becomes operational only after a new login.

Command parameters

1. tid – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. uid – User ID
ED-USER-SECU input
Specifies the user ID (*uid*) name which should be edited.
3. ctag – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. new_pid – New Password ID
This parameter specifies the new password ID for the addressed *uid*. This is an optional parameter and in the absence of a value the default is the current value.
See definition of *pid* in [“ACT-USER: Activate user” \(4-4\)](#).
5. upc – User Privilege Code List
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).

Spec block parameters

1. alw_login – Allow Login
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
2. newuid – New UID
This parameter allows to rename the 2 predefined superusers. It cannot be used to rename a non-superuser login. See definition of *uid* in the Input parameter section of [“ACT-USER: Activate user” \(4-4\)](#).
3. page – Password Aging Interval
See definition of *page* in [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
4. screen – Message Screening
See definition of *screen* in [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
5. tmout – Inactivity Timeout Period
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
6. uidclass – UID Class
See definition of output parameter *uidclass* in [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
Restriction: When *uidclass* is set to MEMADMIN, *screen* must be set to NA.

Output format After receiving the ED-USER-SECU command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

If the ED-USER-SECU command does not alter existing user security parameters, the NE provides a normal completion response. An example is when the *upc* of the *uid* is P3 and an ED-USER-SECU command is received which sets the *upc* to P3.

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

This command updates the user data of the user specified in the *uid* parameter. The values of *upc* (User Privilege Code List), *alw_login* (Allow Login), *screen* (Message Screening), *page* (Password Aging Interval), *tmout* (Inactivity Timeout Interval) will be updated according the parameter values. *new_pid* updates the *pid* (Password ID). *newuid* updates the uid (User ID).

It will be reported via the corresponding ED-USER-SECU notification – see [“ED-USER-SECU notification” \(4-45\)](#) section.

The updated *screen* attribute either has both values STCHG and DBCHG or none. If only one value is added then the other is implicitly added by the NE. If only one is removed then the other is implicitly removed by the NE.

The NE always has two preinstalled users with full privileges in all functional categories. These two users will be referred to as supe-ruser. The NE will not allow adding additional super-user type users. It will not be possible to remove either of the original super-user login IDs. An super-users’s *upc* cannot be modified using the ED-USER-SECU command.

An existing non-super-user login ID (*uid*) cannot be renamed. It must be deleted and re-entered.

A superuser login ID (*uid*) can be renamed by a security administrator (privilege code S5 in category Security Administration).

The ED-USER-SECU command enables an Security Administrator to modify the password, user privilege code(s), and/or user security parameters of the non-administrative users. An Security Administrator may modify the password and/or user security parameters of the other Security Administrators including super-users (except the user privilege code).

If the *uid* is currently logged in when the ED-USER-SECU command is successfully executed, the user session identified by the *uid* is not terminated and is unaffected. It will continue to use the previous values. The changes will take effect the next time the user logs in.

Example input/output

The following example shows the successful completion of the ED-USER-SECU command by the NE:

```
ED-USER-SECU:LT-UNITE-123:nbguser1:123456::,pass13+, ,
P3&M3&PM2:screen=DBCHG,page=70,tmout=0, alw_login=YES;
LT-UNITE-123 00-01-01 08:00:00
```

```
M 123456 COMPLD
;
```

This example shows how the super-users *uid* can be changed:

```
ED-USER-SECU:LT-UNITE-123:LUC01:123456::,,,:newuid=Admin1;
    LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
;
```

Error responses The general error responses defined in [“RTRV-HDR: Retrieve header” \(5-8\)](#) are also valid for this command.

Validation rule: Invalid *uid*

If the NE receives an ED-USER-SECU command with an invalid (unknown) *uid* value.

Error code: IDNV - Input, Data Not Valid, invalid UID

Validation rule: Invalid *upc*

If the NE receives an ED-USER-SECU command with a *upc* value=P5&M5&T5&S5&PM5 for a non-administrator login account or a *upc*=S0 or one super-user tries to make the other super-user a non-super-user.

Error code: IDNV - Input, Data Not Valid, invalid UPC

Validation rule: newuid has the same value of an existing *uid*

If the NE receives an ED-USER-SECU command from a user trying to change with the *newuid* the *uid* of the addressed user id to an existing *uid* different from the addressed user id.

Error code: IDNV - Input, Data Not Valid, duplicate UID

Validation rule: newuid defined for non superuser *uid*

If the NE receives an ED-USER-SECU command from a user trying to change the *uid* of a non super-user.

Error code: IDNV - Input, Data Not Valid, newuid for non superuser

Validation rule: disabling of superusers

If the NE receives an ED-USER-SECU command from a user trying to disabling *uid* of a super-user.

Error code: IDNC - Input, Data Not Consistent

Related TL1 messages

- [“DLT-USER-SECU: Delete user security” \(4-55\)](#)
- [“ED-USER-SECU: Edit user security” \(4-40\)](#)
- [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#)

References TR-NWT-000835, OTGR Section 12.5: Operations Applications Messages – NE and Network System Security Administration Messages.



ED-USER-SECU notification

Output format See definition of [“REPT DBCHG: Report data base change” \(5-67\)](#).
The ED-USER-SECU notification will have following specific syntax:
ED-USER-SECU:*uid*:[*upc*]:*spec_block*

Output parameters

Command parameters

1. uid – User ID
See definition of input parameters of [“ACT-USER: Activate user” \(4-4\)](#).
If the *uid* was changed via the ENT-USER-SECU Command and a value of *newuid* is different from the old *uid* then the *uid* contains in the notification the value of old *uid*.
2. upc – User Privilege Code List
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).

Spec block parameters

1. alw_login – Allow Login
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
2. newuid – New UID
see definition of *uid* in input parameter section of [“ACT-USER: Activate user” \(4-4\)](#).
3. page – Password Aging Interval
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
4. screen – Message Screening
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
5. tmout – Inactivity Timeout Period
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).
6. uidclass – UID Class
See definition of output parameter *uidclass* in [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).

Example output The example shows a normal notification after an ED-USER-SECU command:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:ED-USER-SECU:nbguser1:,,
P3&M3&PM2:screen=DBCHG,page=70,tmout=0,newuid=nbguser1,
alw_login=YES"
;
```

This is an example notification in case of the user id was changed for a super-user:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:ED-USER:nbguser1::SCREEN=DBCHG"
;
```



ED-USER: Edit user

The ED-USER command modifies a user's own security parameters.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
Priority: 1
Abortable: No.

Input format Command Syntax: ED-USER:*tid*::*ctag*:::*[spec_block]*;

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *ctag* – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Spec block parameters

1. *screen* – Message Screening
See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).

Output format After receiving the ED-USER command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

If the ED-USER command does not alter existing user security parameters, the NE provides a normal completion response.

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

This command updates the user data of the user *uid* (User ID) who requests the command. The value of *screen* (Message Screening) will be updated according the parameter value.

It will be reported via the corresponding ED-USER notification – see [“ED-USER notification” \(4-49\)](#) section.

The updated *screen* attribute has both values STCHG and DBCHG or none. If only one value is added then the other is implicitly added by the NE. If only one is removed then the other is implicitly removed by the NE.

When the ED-USER command is successfully executed, the user session is not terminated and is unaffected. It will continue to use the previous values. The changes will take effect the next time the user logs in.

Example input/output

The following example shows the successful completion of the ED-USER command by the NE:

```
ED-USER:LT-UNITE-123::123456::screen=DBCHG;  
      LT-UNITE-123 00-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

The general error responses defined in [“RTRV-HDR: Retrieve header” \(5-8\)](#) are also valid for this command.

Validation rule: screen value not allowed for uid

A user is not able to add a message type to their *screen* parameter list if:

- the message type was never added a security administrator or
- the message type has been removed by a security administrator

Error code: IDNV – Input, Data Not Valid, screen value was not set by security administrator

Related TL1 messages

[“RTRV-USER: Retrieve user” \(4-31\)](#)



ED-USER notification

Output format See definition of [“REPT DBCHG: Report data base change” \(5-67\)](#).

The ED-USER notification will have following specific syntax:

ED-USER:*uid*::*spec_block*

Output parameters

Command parameters

1. uid – User ID

See input parameter definition of [“ACT-USER: Activate user” \(4-4\)](#).

Spec block parameters

1. screen – Message Screening

See definition of [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#).

Example output The example shows a normal notification after an ED-USER command:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:ED-USER:nbguser1::
screen=DBCHG"
;
```



ED-PID: Edit password identifier

The ED-PID command can be initiated by a user to change the user's own password on the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
 Priority: 1
 Abortable: No.

Input format Command Syntax: ED-PID:*tid::ctag::old_pid,new_pid*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *ctag* – Correlation Tag
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. *old_pid* – Old Password ID
 This is the current *pid* of the user.
 See definition of *pid* in [“ACT-USER: Activate user” \(4-4\)](#).
4. *new_pid* – New Password ID
 This parameter specifies the new password ID. The *new_pid* value must differ from the *old_pid* value by at least one character.

Output format After receiving the ED-PID command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

If the password change request completes successfully during login procedure after the password expired and transitions the state of the login procedure from the "Password_Expired" state to the "Login_Active" state, the following normal completion response from the ACT-USER command is returned:

```
sid date time
```

ED-PID: Edit password identifier

```

M  ctag COMPLD
    "uid:lastdate,lasttime,attempts,systype,release,upc"
    /* Lucent Technologies systype release
    User Privilege Code: upc
    LUCENT TECHNOLOGIES - PROPRIETARY
    THIS SOFTWARE CONTAINS INFORMATION OF LUCENT
    TECHNOLOGIES
    AND IS NOT TO BE DISCLOSED OR USED EXCEPT IN ACCORDANCE
    WITH APPLICABLE AGREEMENTS.
    NOTICE: THIS IS A PRIVATE COMPUTER SYSTEM.
    USE OF THIS SOFTWARE IS GOVERNED SOLELY AS EXPRESSLY
    AUTHORIZED IN THE RELEVANT AGREEMENT BETWEEN
    LUCENT TECHNOLOGIES AND CUSTOMER.
    UNAUTHORIZED ACCESS OR USE MAY LEAD TO PROSECUTION.
    */
;

```

For description of these output message refer to [“ACT-USER: Activate user” \(4-4\)](#).

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

When the NE receives an ED-PID command, the *pid* (password ID) associated with the user’s login identifier will be changed on the NE provided that:

- the user is currently logged in on the NE
- the *old_pid* provided matches the current password for that login identifier
- the *new_pid* provided satisfies the password requirements of the NE.

It will be reported via the corresponding ED-PID notification – see [“ED-PID notification” \(4-54\)](#) section – if a session is already established; i.e. there will be no notification in the password expiry scenario during a login procedure.

When the ED-PID command is successfully executed, the user session is not terminated and is unaffected. It will continue to use the previous values. The changes will take effect the next time the user logs in.

Example input/output The following example shows a successful password change operation:

```
ED-PID:LT-UNITE-123::123456::soup3r+,mash%52;  
    LT-UNITE-123 00-01-01 08:00:00  
M 123456 COMPLD  
;
```

The following example shows a successful completion response of ED-PID while attempting the ACT-USER command:

```
ED-PID:LT-UNITE-123::123456::soup3r+,mash%52;  
    LT-UNITE-123 00-01-01 08:00:00  
M 123456 COMPLD  
" nbguser1:00-12-31,09-00-00,1,WaveStar_UNITE,1.1.13,P3&M3"  
/* Lucent Technologies WaveStar_UNITE Release 1.1.13  
User Privilege Code: P3&M3  
LUCENT TECHNOLOGIES - PROPRIETARY  
THIS SOFTWARE CONTAINS INFORMATION OF LUCENT  
TECHNOLOGIES  
AND IS NOT TO BE DISCLOSED OR USED EXCEPT IN ACCORDANCE  
WITH APPLICABLE AGREEMENTS.  
NOTICE: THIS IS A PRIVATE COMPUTER SYSTEM.  
USE OF THIS SOFTWARE IS GOVERNED SOLELY AS EXPRESSLY  
AUTHORIZED IN THE RELEVANT AGREEMENT BETWEEN  
LUCENT TECHNOLOGIES AND CUSTOMER.  
UNAUTHORIZED ACCESS OR USE MAY LEAD TO PROSECUTION.  
*/  
;
```

Error responses The general error responses defined in [“RTRV-HDR: Retrieve header” \(5-8\)](#) are also valid for this command.

Validation rule: Invalid *old_pid*

If the NE receives an ED-PID command with an *old_pid* value that does not match with the password ID of the associated user login ID.

Error code: IDNV - Input, Data Not Valid, wrong *old_pid*

Validation rule: Missing or invalid or syntactically incorrect *new_pid*

If the NE receives an ED-PID command with a missing *new_pid* or the *new_pid* is same as the *old_pid* or the *new_pid* is syntactically incorrect.

Error code: IDNV - Input, Data Not Valid, incorrect new_pid

References TR-NWT-000835, OTGR Section 12.5: Operations Applications
Messages – NE and Network System Security Administration
Messages.



ED-PID notification

Output format See definition of [“REPT DBCHG: Report data base change” \(5-67\)](#).

The ED-PID notification will have following specific syntax:

ED-PID:*uid*

Output parameters

Command parameters

1. uid – User ID

See input parameter definition of [“ACT-USER: Activate user” \(4-4\)](#).

Example output The example shows a normal notification after an ED-PID command:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
  "TIME=08-00-12,DATE=00-01-01:ED-PID:nbguser1"
;
```



DLT-USER-SECU: Delete user security

The DLT-USER-SECU command is used by an administrator to remove a non-administrator type user from the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S5
Priority: 1
Abortable: No.

Input format Command Syntax: DLT-USER-SECU:*tid:uid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *uid* – User ID
This parameter specifies the *uid* which should be deleted. Only a single uid is supported in the command.
See input parameter definition of [“ACT-USER: Activate user” \(4-4\)](#).
3. *ctag* – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format After receiving the DLT-USER-SECU command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

Description: The DLT-USER-SECU command is used by an appropriate administrator to delete a user id specified by *uid* from the NE. The DLT-USER-SECU command is applicable where a user

account has to be deleted from the NE. The user data stored in the NE will be updated.

It will be reported via the corresponding DLT-USER-SECU notification – see [“DLT-USER-SECU notification” \(4-58\)](#) section.

It is not possible to delete the user id of one of the predefined super-users.

If the user with the specified *uid* is currently logged into the NE when this command is successfully executed, the user session identified by this *uid* is terminated, and the NE responds to the user who entered the DLT-USER-SECU command with a normal completion response.

Example input/output

The following example shows the successful completion of the DLT-USER-SECU command by the NE:

```
DLT-USER-SECU:LT-UNITE-123:nbguser1:123456;  
    LT-UNITE-123 00-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

The general error responses defined in [“RTRV-HDR: Retrieve header” \(5-8\)](#) are also valid for this command.

Validation rule: Invalid *uid*

If the NE receives a DLT-USER-SECU command with a invalid (unknown) *uid*.

Error code: IDNV – Input, Data Not Valid, invalid UID

Validation rule: Attempt to delete administrator's *uid*

Attempt to delete administrator's *uid*.

Error code: IDNV – Input, Data Not Valid. Attempting to delete an administrator login. Two administrator user logins are required at all times.

Related TL1 messages

- [“ENT-USER-SECU: Enter user security” \(4-33\)](#)
- [“ED-USER-SECU: Edit user security” \(4-40\)](#)
- [“RTRV-USER-SECU: Retrieve user security” \(4-24\)](#)

DLT-USER-SECU: Delete user security

References TR-NWT-000835, OTGR Section 12.5: Operations Applications Messages – NE and Network System Security Administration Messages.



DLT-USER-SECU notification

Output format See definition of [“REPT DBCHG: Report data base change” \(5-67\)](#).

The DLT-USER-SECU notification will have following specific syntax:

DLT-USER-SECU:*uid*

Output parameters

Command parameters

1. uid – User ID

See input parameter definition of *uid* in [“ACT-USER: Activate user” \(4-4\)](#).

Example output The example shows a normal notification after an DLT-USER-SECU command:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:DLT-USER-SECU:nbguser1"
;
```





5 TL1 messages - configuration management

Overview

Purpose This chapter contains the TL1 interface definition for the domain “configuration management”.

Contents

<u>System</u>	<u>5-7</u>
<u>RTRV-HDR: Retrieve header</u>	<u>5-8</u>
<u>RTRV-ATTR-MSG: Retrieve attribute message</u>	<u>5-28</u>
<u>INH-MSG: Inhibit message</u>	<u>5-31</u>
<u>ALW-MSG: Allow message</u>	<u>5-33</u>
<u>RTRV-ACTLCP: Retrieve acceptable circuit pack list</u>	<u>5-35</u>
<u>RTRV-STATE-EQPT (system): Retrieve equipment state</u>	<u>5-38</u>
<u>ED-STATE-EQPT (system): Edit equipment state</u>	<u>5-42</u>
<u>ED-STATE-EQPT (system) notification</u>	<u>5-44</u>
<u>RTRV-EQPT (system): Retrieve Equipment (system)</u>	<u>5-45</u>
<u>ED-EQPT (system): Edit equipment (system)</u>	<u>5-49</u>
<u>ED-EQPT (system) notification</u>	<u>5-55</u>
<u>RTRV-AO: Retrieve Autonomous Output</u>	<u>5-56</u>
<u>RTRV-LOG-NTFCN: Retrieve notification Log</u>	<u>5-60</u>

<u>RTRV-LOG-NNEVT: Retrieve NN Event Log</u>	<u>5-64</u>
<u>REPT DBCHG: Report data base change</u>	<u>5-67</u>
<u>ED-DAT: Edit date and time</u>	<u>5-70</u>
<u>ED-DAT notification</u>	<u>5-73</u>
<u>SET-SID: Set SID</u>	<u>5-74</u>
<u>SET-SID notification</u>	<u>5-77</u>
<u>INIT-SYS: Initialize System</u>	<u>5-78</u>
<u>Autonomous notifications</u>	<u>5-80</u>
<u>Bay</u>	<u>5-81</u>
<u>RTRV-EQPT (bay): Retrieve Equipment (bay)</u>	<u>5-82</u>
<u>Autonomous notifications</u>	<u>5-84</u>
<u>Shelf</u>	<u>5-85</u>
<u>RTRV-EQPT (shelf): Retrieve Equipment (shelf)</u>	<u>5-86</u>
<u>ED-EQPT (shelf): Edit equipment (shelf)</u>	<u>5-89</u>
<u>ED-EQPT (shelf) notification</u>	<u>5-91</u>
<u>Autonomous notifications</u>	<u>5-92</u>
<u>Slot</u>	<u>5-93</u>
<u>RTRV-EQPT (slot): Retrieve Equipment (slot)</u>	<u>5-94</u>
<u>ENT-EQPT (slot): Enter equipment (slot)</u>	<u>5-100</u>
<u>ED-EQPT (slot): Edit equipment (slot)</u>	<u>5-109</u>
<u>ED-EQPT notification</u>	<u>5-113</u>
<u>DLT-EQPT (slot): Delete equipment (slot)</u>	<u>5-117</u>
<u>RTRV-STATE-EQPT (slot): Retrieve equipment state (slot)</u>	<u>5-125</u>
<u>ED-STATE-EQPT (slot) notification</u>	<u>5-128</u>
<u>INIT-EQPT (slot): Initialize equipment (slot)</u>	<u>5-129</u>
<u>Autonomous notifications</u>	<u>5-132</u>
<u>Socket</u>	<u>5-134</u>
<u>RTRV-EQPT (Socket): Retrieve equipment</u>	<u>5-135</u>
<u>ENT-EQPT (Socket): Enter equipment</u>	<u>5-143</u>
<u>ENT-EQPT notification</u>	<u>5-146</u>
<u>ED-EQPT (Socket): Edit equipment</u>	<u>5-147</u>

<u>ED-EQPT notification</u>	<u>5-150</u>
<u>DLT-EQPT (Socket): Delete equipment</u>	<u>5-156</u>
<u>DLT-EQPT notification</u>	<u>5-161</u>
<u>RTRV-STATE-EQPT (Socket): Retrieve equipment state</u>	<u>5-162</u>
<u>ED-STATE-EQPT notification</u>	<u>5-165</u>
<u>Autonomous notifications</u>	<u>5-166</u>
<u>Circuit pack</u>	<u>5-168</u>
<u>RTRV-EQPT (CP): Retrieve equipment (circuit pack)</u>	<u>5-169</u>
<u>ENT-EQPT notification</u>	<u>5-176</u>
<u>ED-EQPT (CP): Edit equipment (circuit pack)</u>	<u>5-177</u>
<u>ED-EQPT (cp) notification</u>	<u>5-181</u>
<u>DLT-EQPT notification</u>	<u>5-182</u>
<u>RTRV-STATE-EQPT (CP): Retrieve equipment state (circuit pack)</u>	<u>5-184</u>
<u>ED-STATE-EQPT notification</u>	<u>5-187</u>
<u>Autonomous notifications</u>	<u>5-188</u>
<u>Port</u>	<u>5-189</u>
<u>RTRV-STM1E: Retrieve STM1E port</u>	<u>5-192</u>
<u>RTRV-STM1: Retrieve STM1 port</u>	<u>5-199</u>
<u>RTRV-STM4: Retrieve STM4 port</u>	<u>5-206</u>
<u>RTRV-STM16: Retrieve STM16 port</u>	<u>5-214</u>
<u>RTRV-STM64: Retrieve STM64 port</u>	<u>5-228</u>
<u>RTRV-STM256: Retrieve STM256 port</u>	<u>5-237</u>
<u>RTRV-OC3: Retrieve OC3 port</u>	<u>5-243</u>
<u>RTRV-OC12: Retrieve OC12 port</u>	<u>5-250</u>
<u>RTRV-OC48: Retrieve OC48 port</u>	<u>5-257</u>
<u>RTRV-OC192: Retrieve OC192 port</u>	<u>5-267</u>
<u>RTRV-OC768: Retrieve OC768 port</u>	<u>5-275</u>
<u>RTRV-ALL: Retrieve all</u>	<u>5-282</u>
<u>ED-STM1E: Edit STM1E port</u>	<u>5-285</u>
<u>ED-STM1E notification</u>	<u>5-299</u>

<u>ENT- STM1E notification</u>	<u>5-303</u>
<u>DLT- STM1E notification</u>	<u>5-307</u>
<u>ED-STM1E autonomous notifications</u>	<u>5-308</u>
<u>ED-STM1: Edit STM1 port</u>	<u>5-309</u>
<u>ED-STM1 notification</u>	<u>5-324</u>
<u>ENT-STM1 notification</u>	<u>5-328</u>
<u>DLT-STM1 notification</u>	<u>5-332</u>
<u>ED-STM1 autonomous notifications</u>	<u>5-333</u>
<u>ED-STM4: Edit STM4 port</u>	<u>5-334</u>
<u>ED-STM4 notification</u>	<u>5-349</u>
<u>ENT-STM4 notification</u>	<u>5-353</u>
<u>DLT-STM4 notification</u>	<u>5-357</u>
<u>ED-STM4 autonomous notifications</u>	<u>5-358</u>
<u>ED-STM16: Edit STM16 port</u>	<u>5-359</u>
<u>ED-STM16 notification</u>	<u>5-378</u>
<u>ENT-STM16 notification</u>	<u>5-382</u>
<u>DLT-STM16 notification</u>	<u>5-386</u>
<u>ED-STM16 autonomous notifications</u>	<u>5-387</u>
<u>ED-STM64: Edit STM64 port</u>	<u>5-388</u>
<u>ED-STM64 notification</u>	<u>5-405</u>
<u>ENT-STM64 notification</u>	<u>5-410</u>
<u>DLT-STM64 notification</u>	<u>5-415</u>
<u>ED-STM64 autonomous notifications</u>	<u>5-416</u>
<u>ED-STM256: Edit STM256 port</u>	<u>5-417</u>
<u>ED-STM256 notification</u>	<u>5-426</u>
<u>ENT-STM256 notification</u>	<u>5-430</u>
<u>DLT-STM256 notification</u>	<u>5-434</u>
<u>ED-STM256 autonomous notifications</u>	<u>5-435</u>
<u>ED-OC3: Edit OC3 port</u>	<u>5-436</u>
<u>ED-OC3 notification</u>	<u>5-451</u>
<u>ENT-OC3 notification</u>	<u>5-455</u>

<u>DLT-OC3 notification</u>	<u>5-459</u>
<u>ED-OC3 autonomous notifications</u>	<u>5-460</u>
<u>ED-OC12: Edit OC12 port</u>	<u>5-461</u>
<u>ED-OC12 notification</u>	<u>5-476</u>
<u>ENT-OC12 notification</u>	<u>5-480</u>
<u>DLT-OC12 notification</u>	<u>5-484</u>
<u>ED-OC12 autonomous notifications</u>	<u>5-485</u>
<u>ED-OC48: Edit OC48 port</u>	<u>5-486</u>
<u>ED-OC48 notification</u>	<u>5-504</u>
<u>ENT-OC48 notification</u>	<u>5-508</u>
<u>DLT-OC48 notification</u>	<u>5-512</u>
<u>ED-OC48 autonomous notifications</u>	<u>5-513</u>
<u>ED-OC192: Edit OC192 port</u>	<u>5-514</u>
<u>ED-OC192 notification</u>	<u>5-530</u>
<u>ENT-OC192 notification</u>	<u>5-535</u>
<u>DLT-OC192 notification</u>	<u>5-539</u>
<u>ED-OC192 autonomous notifications</u>	<u>5-540</u>
<u>ED-OC768: Edit OC768 port</u>	<u>5-541</u>
<u>ED-OC768 notification</u>	<u>5-551</u>
<u>ENT-OC768 notification</u>	<u>5-555</u>
<u>DLT-OC768 notification</u>	<u>5-559</u>
<u>ED-OC768 autonomous notifications</u>	<u>5-560</u>
<u>Tributary</u>	<u>5-561</u>
<u>RTRV-VC3: Retrieve VC3 tributary</u>	<u>5-562</u>
<u>RTRV-ST51: Retrieve ST51 tributary</u>	<u>5-571</u>
<u>RTRV-ALL: Retrieve all</u>	<u>5-576</u>
<u>ED-VC3: Edit VC3 tributary</u>	<u>5-579</u>
<u>ED-ST51: Edit ST51 tributary</u>	<u>5-585</u>
<u>ED-VC3 notification</u>	<u>5-590</u>
<u>ENT-VC3 notification</u>	<u>5-593</u>
<u>DLT-VC3 notification</u>	<u>5-596</u>

ED-STTS1 notification	5-597
ENT-STTS1 notification	5-600
DLT-STTS1 notification	5-603
Autonomous notification	5-604

System

Overview

Purpose This section includes the system level configuration messages.

Contents

<u>RTRV-HDR: Retrieve header</u>	<u>5-8</u>
<u>RTRV-ATTR-MSG: Retrieve attribute message</u>	<u>5-28</u>
<u>INH-MSG: Inhibit message</u>	<u>5-31</u>
<u>ALW-MSG: Allow message</u>	<u>5-33</u>
<u>RTRV-ACTLCP: Retrieve acceptable circuit pack list</u>	<u>5-35</u>
<u>RTRV-STATE-EQPT (system): Retrieve equipment state</u>	<u>5-38</u>
<u>ED-STATE-EQPT (system): Edit equipment state</u>	<u>5-42</u>
<u>ED-STATE-EQPT (system) notification</u>	<u>5-44</u>
<u>RTRV-EQPT (system): Retrieve Equipment (system)</u>	<u>5-45</u>
<u>ED-EQPT (system): Edit equipment (system)</u>	<u>5-49</u>
<u>ED-EQPT (system) notification</u>	<u>5-55</u>
<u>RTRV-AO: Retrieve Autonomous Output</u>	<u>5-56</u>
<u>RTRV-LOG-NTFCN: Retrieve notification Log</u>	<u>5-60</u>
<u>RTRV-LOG-NNEVT: Retrieve NN Event Log</u>	<u>5-64</u>
<u>REPT DBCHG: Report data base change</u>	<u>5-67</u>
<u>ED-DAT: Edit date and time</u>	<u>5-70</u>
<u>ED-DAT notification</u>	<u>5-73</u>
<u>SET-SID: Set SID</u>	<u>5-74</u>
<u>SET-SID notification</u>	<u>5-77</u>
<u>INIT-SYS: Initialize System</u>	<u>5-78</u>
<u>Autonomous notifications</u>	<u>5-80</u>



RTRV-HDR: Retrieve header

Description	The RTRV-HDR command can be initiated by a user to request that the NE returns a normal completion response.
Parameters	In TL1 terminology, a parameter block always follows a colon ':'. Any trailing colons at the end of a command line may be omitted if they do not contain any parameters. A parameter block can be either a block of position-defined parameters or it can be a spec_block (a block of name-defined parameters). In a block of position-defined parameters, the parameter values are supplied at predefined positions within the parameter block. Two parameter values are separated by a comma. If the default value for a parameter is to be used, a null value is placed in the command line and the position of the parameter is maintained by keeping the comma. When default values are used for parameters at the end of the parameter block, it is not necessary to include all the trailing commas. In all the TL1 command pages, for position-defined parameter blocks, simplified notation such as: [d],[e],[f],[g] is used to represent the following format: [d],[e],[f],[g]]. The following notation is also equivalent: [d],[e],[f],[g]. In a specification block (spec_block), every parameter name is followed by an equal sign and the parameter value. The command line does not have to use all of the spec_block parameters. Also, spec_block parameters can appear in any order.
NULL parameter value	The word NULL is used for some of the parameter values in TL1 messages. For both input and output parameters, NULL means that the parameter is omitted.
Quoted text strings	Some string-valued parameters, like NENAME, allow any printable character within the double-quoted string (""). On output (RTRV and REPT DBCHG), the string is surrounded by escaped quotes \"\". Those parameters can contain any printable characters, including the TL1 parse characters (; : , "). Spaces and upper/lowercase are also preserved. Using two double-quotes "" will set the parameter to an empty string. But according to GR-831, within a quoted string, a double-quote character is escaped as \" and the backslash is escaped as \\. Within a backslash-quoted string (\\\"), the double-quote character is escaped as \" and the backslash is escaped as \\. Another caveat is that while that parameter can contain any printable character,

RTRV-HDR: Retrieve header

in networks using a Telcordia OS, the TL1 parse characters (; : , ") should not be used. Particularly, the semicolon (;), less-than (<), and greater-than (>) characters must not be used in the string.

Other notational conventions

The following conventions are used in the description of RTRV-HDR itself to visualize non-printable characters (in all other commands those characters are indicated by a blank).

<cr>

A carriage return in ASCII

<lf>

A line feed in ASCII

<>

The brackets are used to enclose one or more information items, e.g., <date>, <time>, <source identifier>, etc. The brackets are not transmitted.

^

The character ^ indicates a blank that must appear in the message.

Properties

Login Privilege: User Privilege Code (UCFC/UCAL): Any

Priority: 1

Abortable: Yes

Input format

Syntax: RTRV-HDR:*tid::ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
This is the currently active name of the NE to which the command is addressed. The *tid* is a case insensitive character string.
Type: identifier, in addition the special character underscore ("_") and the password characters are allowed
Range: 1 to 20 characters
Default: LUCENT-UNITE-NE
2. ctag – Correlation Tag
This is included in the command by the TL1 user and is repeated by the NE in the response to allow the TL1 user to associate the command and response messages.
Type: alphanumeric string.
Range: non-zero decimal number or identifier of up to 6 characters.
Note: Current implementation also allows '0' as valid CTAG, which is an extension to GR-831.

Output format

Normal system response

After receiving the RTRV-HDR command, the following normal completion response is returned:

```
IP^ctag<cr><lf>
<cr><lf><lf>
^^^sid^date^time<cr><lf>
M^^ctag^COMPLD<cr><lf>
;
```

RL Acknowledgment

If a command cannot be executed at the present time, the following RL (Repeat Later) Acknowledgment is returned:

```
RL^ctag<cr><lf>
<cr><lf><lf>
```

Continuation responses and IP acknowledgments

For commands that generate output, if the output response is less than or equal to 4096 bytes, the response will be terminated by the

semicolon (;) character. If the output response is greater than 4096 bytes, the response lines will be partitioned into multiple responses. The continuation response will have another set of header lines with the same ctag, along with additional output response lines. Each response will be terminated with the greater than (>) character, except the last one which will be terminated by the semicolon (;) character.

Output parameters

1. sid – Source Identifier
This is the currently active name of the NE to which responses to the command.
See definition of *tid* input parameter in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. date – Date
Date when output message is generated. This has the format YY-MM-DD (year-month-day).
Type: value set.
Range:
 - for YY: 00 to 99
 - for MM: 01 to 12
 - for DD: 01 to 312-digit years
TL1 messages use YY-MM-DD for the format of a date, meaning that the year only has two digits. This is consistent with Telcordia requirements. Internally, however, the system does use a 4-digit year. When the year appears in a response, the internal 4-digit year is truncated to two digits. When the year appears as an input parameter, for example in the ED-DAT command, years in the range 90-99 will represent 1990-1999, and years in the range 00-37 will represent 2000-2037.
Default: 00-01-01
3. time – Time
Time when output message is generated. This has the format HH:MM:SS (hours:minutes:seconds).
Type: value set

RTRV-HDR: Retrieve header

Range:

- for HH: 00 to 23
- for MM: 00 to 59
- for SS: 00 to 59

Default: 00:00:00

4. M – Message

This parameter indicates that the output message is generated in response to a manual command.

Type: value set

Range: M

5. ctag – Correlation Tag

See definition of *ctag* input parameter in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

6. IP – In Progress

IP is sent in response to all commands with the exception of commands that result in error code output.

Type: value set.

Range: IP

7. RL – Repeat Later

The requested command cannot be executed due to unavailable system resources. The command may be entered again later.

Type: value set.

Range: RL.

8. COMPLD – Completion Code

This parameter indicates that the command has been completed. COMPLD for successful command execution For a command that is decomposed into a set of atomic commands a COMPLD completion code means that the command was successful for all atomic commands (e.g. AID ranges, group alias).

COMPLD for no changes If a parameter has a current value, and a provisioning command attempts to reprovision the parameter with a value that is the same as its current value, the command will return a COMPLD completion code.

Type: value set.

Range: COMPLD.

Detailed behavior description

The RTRV-HDR command returns a normal completion response with *sid*, *date* and *time* output parameter as described above.

Example input/output

```
RTRV-HDR:LT-UNITE::123456;  
IP 123456  
<  
    LT-UNITE 00-11-03 08:00:00  
M 123456 COMPLD  
;
```

Error responses

The following error conditions are not unique to the RTRV-HDR command but may apply to any TL1 command. Other commands will use the defined command specific error codes with additional error texts.

There is no implied priority order of error checking suggested by this list of error responses.

In general the *sid* value in the error responses is that of the addressed NE. This is true even if a TL1-GNE sends an error message on behalf of an RNE. Some exceptions are noted for some error codes below (e.g. IITA). If the TL1-GNE forwards a command to a remote NE and a communication failure occurs before the remote NE is able to respond, it is understood that no response may be returned.

When an error response is returned, there may not be an in-progress (IP) acknowledgment in the response.

Note, that validation rules for the generic error conditions described below are not repeated for each specific command in the Error response section.

General Format

The general output format is shown below, where <error code> is a 4-character code and <error text> is a text string.

```
<cr><lf><lf>  
    sid date time<cr><lf>  
M  ctag^DENY<cr><lf>  
    <error code><cr><lf>  
    /*<error text[, additional command specific error  
    text]>*/<cr><lf>  
;
```

Input failure (ICNV)

If there was an input failure because the command cannot be processed, the following error response is returned:

```
sid date time<cr><lf>
M ctag DENY
  ICNV
/*Input, Command Not Valid*/
;
```

Input failure for omitted TID

If a *tid* value is required but no *tid* value is included, the following error response is returned, using the *sid* of the system that detected the error:

```
sid date time<cr><lf>
M ctag DENY
  ICNV
/*Input, Command Not Valid, missing TID*/
;
```

Command not recognized (SCNF)

If the command is not recognized, the following error response is returned:

```
sid date time
M ctag DENY
  SCNF
/* Status, Command Not Found, command not recognized */
;
```

Syntax or Punctuation Error (IISP)

If the command cannot be parsed due to a syntax or punctuation error, the following error response is returned. If the command cannot be parsed for at least 3 colons, and no more than the maximum number of colons allowed before the TL1 end-of-message semicolon, the following error response is returned:

```
sid date time
M ctag DENY
  IISP
/* Input, Invalid Syntax or Punctuation */
;
```

Command too long

If the command is longer than 4096 characters, the following error response is returned:

```
sid date time<cr><lf>
M ctag DENY
IISP
/*Input, Invalid Syntax or Punctuation, command too
long*/
;
```

Parameter Input Failure (INUP)

If there is an input failure due to the parameter types, the following error response is returned:

```
sid date time<cr><lf>
M ctag DENY
INUP
/* Input, Non-null Unimplemented Parameter */
;
```

Parameter Missing (IPMS)

If an input parameter value is missing, the following error response is returned:

```
sid date time<cr><lf>
M ctag DENY
IPMS
/* Input, Parameter MiSsing, <parameter name> is
missing */
;
```

Any Input Parameter not valid (IDNV)

If any one or more of the input parameter values are not valid, the following error response is returned:

```
sid date time
M ctag DENY
IDNV
/* Input, Data Not Valid */
;
```

Input Parameter not valid (IDNV)

If an input parameter value is not valid, the following error response is returned. This is the preferred error response.

```
sid date time<cr><lf>
M ctag DENY
  IDNV
/* Input, Data Not Valid, invalid <parameter name> */
;
```

Input Parameter appears more than once (IBEX)

If a name-defined input parameter appears more than once within a command the following error response is returned.

```
sid date time<cr><lf>
M ctag DENY
  IBEX
/* Input, Block, Extra, more than one appearances
of a parameter */
;
```

Invalid Entity (IENE)

If there is an input failure due to an invalid entity, the following error response is returned:

```
sid date time<cr><lf>
M ctag DENY
  IENE
/* Input, Entity Not Exists */
;
```

Invalid Command Qualifier (IPNC)

If there is an input failure due to an invalid command qualifier, the following error response is returned:

```
sid date time<cr><lf>
M ctag DENY
  IPNC
/* Input, Parameter Not Consistent */
;
```

Invalid Instance (SDNC)

If there is an input failure due to an invalid instance of an entity, the following error response is returned:

```
sid date time
M ctag DENY
SDNC
/* Status, Data Not Consistent,invalid instance of
entity */
;
```

Incorrect TID (IITA)

If the command has a syntactically incorrect *tid*, the following error response is returned, using the *sid* of the system that detected the error:

```
sid date time
M ctag DENY
IITA
/* Input, Invalid TArget identifier,incorrect syntax */
;
```

Unknown TID (IITA)

If a command contains an unknown tid value (a *tid* value that does not exist in the network), the following error response is returned, using the *sid* of the system that detected the error:

```
sid date time
M ctag DENY
IITA
/* Input, Invalid TID, Unknown TID */
;
```

Not reachable TID (IITA)

If a command has a valid *tid* value but the addressed remote NE is temporarily unable to communicate with the TL1-GNE, the following error response is returned, using the *sid* of the addressed system:

```
sid date time
M ctag DENY
IITA
/* Input, Invalid TID,Communications Failure */
;
```

Too much AID parameters (ICNV)

If the command line has more aid parameters in the aid block than are allowed for that command, the following error response is returned:

```
sid date time
M ctag DENY
ICNV
/* Input, Command Not Valid, extra AID */
;
```

Missing AID (ICNV)

If the command line has fewer aid parameters in the aid block than are required for the command, the following error response is returned:

```
sid date time
M ctag DENY
ICNV
/* Input, Command Not Valid, required AID missing */
;
```

Incorrect AID Syntax (IIAC)

For commands that have aid input parameters in the aid block, if the aid is syntactically incorrect, the following error response is returned:

```
sid date time
M ctag DENY
IIAC
/* Input, Invalid ACcess identifier, incorrect syntax
*/
;
```

Unknown AID (IIAC)

For commands that have aid input parameters in the aid block, if the aid is valid syntactically but has an unknown value, the following error response is returned:

```
sid date time
M ctag DENY
IIAC
/* Input, Invalid ACcess identifier, unknown AID */
;
```

Missing CTAG (ICNV)

If the *ctag* value is missing, the following error response is returned. Note that the *ctag* value is 0 in the error response:

```
sid date time
M 0 DENY
ICNV
/* Input, Command Not Valid,missing CTAG */
;
```

Invalid CTAG (IICT)

If the *ctag* value is non-NULL but invalid, the following error response is returned. Note that the same invalid *ctag* value is used for the *ctag* field in the error response:

```
sid date time
M ctag DENY
IICT
/* Input, Invalid Correlation Tag (CTAG), incorrect
syntax */
;
```

Input Parameter Range Incorrect (IDRG)

If an input parameter accepts a range but the given range is incorrect, the following error response is returned:

```
sid date time
M ctag DENY
IDRG
/* Input, Data, Range Error */
;
```

Invalid File or Directory Name (SDNC)

If the command failed due to an invalid file or directory name, the following error response is returned:

```
sid date time
M ctag DENY
SDNC
/* Status, Data Not Consistent, invalid file or
directory */
;
```

Invalid Input Parameter Value Combination (IDNC)

If a command has more than one input parameter, but the combination of values is not valid, the following error response is returned:

```
sid date time
M ctag DENY
  IDNC
/* Input, Data Not Consistent */
;
```

Missing Equipage (ENEQ)

If the command failed due to equipage that is missing, the following error response is returned:

```
sid date time
M ctag DENY
  ENEQ
/* Equipage, Not Equipped */
;
```

Insufficient File Space (ENEQ)

If the command failed due to insufficient file space, the following error response is returned:

```
sid date time
M ctag DENY
  ENEQ
/* Equipage, Not Equipped, insufficient file space */
;
```

Incorrect Equipage (EATN)

If the command failed due to incorrect equipage, the following error response is returned:

```
sid date time
M ctag DENY
  EATN
/* Equipage, not valid for Access Type, incorrect
equipage */
;
```

TID Mismatch in retrieved File (EATN)

If the command failed due to a TID mismatch in a retrieved file, the following error response is returned:


```
sid date time
M ctag DENY
EATN
/* Equipage, Not Valid for Access Type, retrieved file
TID mismatch */
;
```

Product Mismatch (SRAC)

If the command failed due to a product mismatch in the retrieved file, the following error response is returned:

```
sid date time
M ctag DENY
SRAC
/* Status, Requested Access Configuration is invalid,
retrieved file NE mismatch */
;
```

Failed Target Hardware (SSTP)

If the command failed due to failed target hardware, the following error response is returned:

```
sid date time
M ctag DENY
SSTP
/* Status, Stopped, failed target hardware */
;
```

Command denied based on Mode, State or Status (SNVS)

If the command is denied based on mode, state, or status, the following error response is returned:

```
sid date time
M ctag DENY
SNVS
/* Status, Not in Valid State */
;
```

Command denied based on Maintenance Condition (SNVS)

If the command is denied based on the maintenance condition, the following error response is returned:

```
sid date time
M ctag DENY
```

```
SNVS
/* Status, Not in Valid State, maintenance condition */
;
```

Entity already exists (IEAE)

If an entity already exists, the following error response is returned:

```
sid date time
M ctag DENY
IEAE
/* Input, Entity Already Exists */
;
```

Session is not initiated (PLNA)

If a user issues a command before a session is initiated with ACT-USER, the following error response is returned:

```
sid date time
M ctag DENY
PLNA
/* Privilege, Login Not Active */
;
```

Command requires higher privilege (PICC)

If a command requires a privilege higher than that of the user issuing the command, or for any other security-related problems, the following error response is returned:

```
sid date time
M ctag DENY
PICC
/* Privilege, Illegal Command Code */
;
```

System Initializing not completed (SNVS)

If a command is not allowed because the system has not completed initializing, the following error response is returned:

```
sid date time
M ctag DENY
SNVS
/* Status, Not in Valid State, system initializing */
;
```

System Limit exceeded (SARB)

If the system is experiencing temporary exhaustion of allocated resources, the following error response is returned:

```
sid date time
M ctag DENY
SARB
/* Status, All Resources Busy, system limit exceeded */
;
```

Internal Limit exceeded (SSRE)

If a command attempts to exceed an internal limit, the following error response is returned:

```
sid date time
M ctag DENY
SSRE
/* Status, System Resources Exceeded, allowed limit
exceeded */
;
```

Operation Failed (SROF)

If the command cannot be completed due to system difficulties other than hardware or equipment, the following error response is returned:

```
sid date time
M ctag DENY
SROF
/* Status, Requested Operation Failed */
;
```

Processing Failed (SROF)

If the command cannot be completed due to internal system processing problems, the following error response is returned:

```
sid date time
M ctag DENY
SROF
/* Status, Requested Operation Failed, processing
failure */
;
```

Hardware Failed (SWFA)

If the command failed because the control hardware is failed, missing, or initializing, the following error response is returned:

```
sid date time
M ctag DENY
SWFA
/* Status, Working unit Failed, control hardware
failed, missing or
initializing */
;
```

Communication Failure (SROF)

If the command failed due to an external communications failure, the following error response is returned:

```
sid date time
M ctag DENY
SROF
/* Status, Requested Operation Failed, external
communications
failure */
;
```

Generic not available (ENSG)

If the command failed because the generic is not available, the following error response is returned:

```
sid date time
M ctag DENY
ENSG
/* Equipage, Not Software Generic, generic not
available */
;
```

Command Aborted (SABT)

If a user or outside agent has aborted the command, the following error response is returned:

```
sid date time
M ctag DENY
SABT
/* Status, Aborted */
;
```

Partial successful completion of a set of atomic commands

For provisioning commands (non-RTRV commands) that operate on a range of entities (e.g. AID range, or via an group alias) range as input, if the command succeeded on only a non-empty subset of the AIDs or another set of atomic commands, the following error response is returned for the AIDs or atomic commands that were not completed successfully. Note that the completion code is PRTL, not DENY.

```
      sid date time
M  ctag PRTL
   "aid"
   <error code>
   /* <error text> */
   "aid"
   <error code>
   /* <error text> */
   ...
   "aid"
   <error code>
   /* <error text> */
;
```

The error codes and error text fields are as defined in the other error responses above. If the command failed on all the AIDs, the completion code will be DENY, and there will only be a single error code and error text in the response.

Partial completion on RTRV commands

For RTRV commands that take an AID range as input, if the command fails on a non-empty subset of the AIDs, and the failure is not related to filtering, the entire command will fail and one error response is returned. If the error is related to filtering, the command completes successfully but only the data that matches is returned.

If there is no data matching the filter criteria, the NE just responds with an empty reply.

For example, RTRV-OC48 with an all AID range for all the ports on a shelf will return the data for the existing OP2G5 circuit packs. RTRV-OC48 with a single AID of a non-OC48 port will fail.

If during the processing of a RTRV command which reports output responses for a number of AIDs an internal error occurs while the

system has already started to send response data, the system does not terminate the output response with the ";" character.

This behavior will lead to a time-out of the manager and cause him to abort the command.

Related TL1 messages All other TL1 commands refer to the ["RTRV-HDR: Retrieve header" \(5-8\)](#) command for common requirements.

Additional notes

Compliance of output parameter blocks with GR-833

For commands that have output parameter blocks, like the following one. The block may have optional trailing commas on a line.

```
sid date time
M ctag COMPLD
  "aid:<parameter block>"
  ...
;
```

AID grouping of output lines

For commands where the output has the AID prepended to each line, like this:

```
sid date time
M ctag COMPLD
  "aid:block"
  ...
;
```

If the parameters for the same AID value are on separate lines, those lines are grouped together.

spec_blocks continued on another line

For commands that have spec_blocks in the output, like this:

```
sid date time
M ctag COMPLD
  "aid:spec_block"
  ...
;
```

If the output line becomes too long, the keywords may be continued on another line, but the AID is repeated on the continuation line. In

addition, the output lines are not limited to 80 characters, and there are no requirements as to how many parameters appear on a line.

Refer to the following example

```
RTRV-EQPT:UNITE-NE:system:123456;  
    UNITE-NE 00-11-03 08:00:00  
M 123456 COMPLD  
    "system:systype=LXC40"  
    "system:istddf1t=SDH"  
    "system:trbmddf1t=FIXED"  
    "system:syncrctc=SDH"  
;
```

References GR-833-CORE



RTRV-ATTR-MSG: Retrieve attribute message

The RTRV-ATTR-MSG is used to retrieve the current status of the autonomous message reporting, which can be controlled via INH-MSG and ALW-MSG.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
 Priority: 1
 Abortable: yes

Input format Command Syntax: RTRV-ATTR-MSG:*tid::ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format If the RTRV-ATTR-MSG request completes successfully, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
"sessions:msgstate"
. . .
;
```

For each value of parameter *sessions* one line is reported.

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

1. sessions – Affected sessions
This parameter specifies for which sessions the *msgstate* is applied.
Type: alphanumeric value set.
Range: CURRENT: affected session is the current session of the user who executed the command.
Default: CURRENT
2. msgstate – Message status
The current state of autonomous message reporting for *sessions*.
Type: alphanumeric value set
Range:
 - ON: autonomous reporting is enabled for *sessions*
 - OFF: autonomous reporting is disabled for *sessions*.Default: ON

Detailed behavior description

The command retrieves the current status of the autonomous message reporting for all values of parameter *sessions*. Control of this state is via the commands INH-MSG and ALW-MSG.

When a user logs into the system via ACT-USER it is recommended to retrieve the status of autonomous reporting to check whether reporting is OFF for *sessions*=ALL.

Example input/output

The following is an example of the RTRV-ATTR-MSG command:

```
RTRV-ATTR-MSG:LT-UNITE::123456;  
  LT-UNITE 00-11-15 08:00:00  
M 123456 COMPLD  
  "ALL:ON"  
  "CURRENT:OFF"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the INH-MSG command.

Related TL1 messages

- [“ALW-MSG: Allow message” \(5-33\)](#)
- [“INH-MSG: Inhibit message” \(5-31\)](#)

System

RTRV-ATTR-MSG: Retrieve attribute
message

TLI messages - configuration management

References GR-833-CORE



INH-MSG: Inhibit message

The INH-MSG command instructs the NE to inhibit the forwarding of autonomous messages on the user session or per system (depending on parameter *sessions*). Autonomous messages are messages which are provided by the system itself without a trigger via the management interface (e.g. alarms, switch reports).

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
Priority: 1
Abortable: no

Input format Command Syntax: INH-MSG-ALL:*tid*::*ctag*[::,,,*sessions*];
The purpose of the commas in case the optional parameter *sessions* is present is that the format is compliant with non-supported position defined parameters in GR-833.

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. *sessions* – Affected sessions
Refer to the definition of output parameter *sessions* in [“RTRV-ATTR-MSG: Retrieve attribute message” \(5-28\)](#).

Output format If the INH-MSG request completes successfully, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The command disables autonomous message reporting as specified by *sessions*.

If the user is logged in more than once, and *sessions*=CURRENT, only the current login session is affected by this command.

If the INH-MSG command inhibits autonomous messages that have already been suspended, it will complete successfully.

For *sessions*=CURRENT, the *atag* sequence will be reset to 000 when autonomous message are resumed.

The *atag* for a memory administration user is not affected by this command, see also [“RTRV-AO: Retrieve Autonomous Output” \(5-56\)](#).

Example input/output

The following is an example of the INH-MSG command:

```
INH-MSG-ALL:LT-UNITE::123456;  
    LT-UNITE 00-11-15 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the INH-MSG command.

Related TL1 messages

- [“ALW-MSG: Allow message” \(5-33\)](#)
- [“RTRV-ATTR-MSG: Retrieve attribute message” \(5-28\)](#)

References

GR-833-CORE



ALW-MSG: Allow message

The ALW-MSG command allows the NE to resume the forwarding of autonomous messages previously suspended with the INH-MSG command.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
Priority: 1
Abortable: no

Input format Command Syntax: ALW-MSG-ALL:*tid*::*ctag*[::,,,*sessions*];
The purpose of the commas in case the optional parameter *sessions* is present is that the format is compliant with non-supported position defined parameters in GR-833.

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. *sessions* – Affected sessions
Refer to the definition of output parameter *sessions* in [“RTRV-ATTR-MSG: Retrieve attribute message” \(5-28\)](#).

Output format If the ALW-MSG request completes successfully, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The command enables autonomous message reporting for *sessions*.
If this command is executed when autonomous messages are already being transmitted, it is complete successfully.

Example input/output

The following is an example of the INH-MSG command:

```
ALW-MSG-ALL:LT-UNITE::123456;  
    LT-UNITE 00-11-15 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ALW-MSG command.

Related TL1 messages

- [“INH-MSG: Inhibit message” \(5-31\)](#)
- [“RTRV-ATTR-MSG: Retrieve attribute message” \(5-28\)](#)

References

GR-833-CORE



RTRV-ACTLCP: Retrieve acceptable circuit pack list

The RTRV-ACTLCP command returns all circuit packs (name and qualifier) which are supported in the system; i.e. there is at least one slot, where a circuit pack of that type is accepted to be provisioned/pre-provisioned.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-ACTLCP:*tid:aid:ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 The aid of the system itself.
 Type: AID
 Range: system.
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-ACTLCP command, the following output report shall be returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
  ...
  ...
  "aid[:spec_block]"
;
```

RTRV-ACTLCP: Retrieve acceptable circuit
pack list

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

The output shall contain one line per supported circuit pack (name, qualifier pair).

Output parameters

Command parameters

1. aid – Access Identifier:
See definition of *aid* input parameter in Input parameter section above.

Spec block parameters

1. actlname – Acceptable Circuit Pack Name
This parameter specifies the name of a circuit pack supported by system.
Type: value set.
Range: 12 character.
2. actlqual - Acceptable Circuit Pack Qualifier
This parameter specifies the qualifier of a circuit pack supported by system.
Type: value set.
Range: 7 character.

Note: The TL1-representation of the functional qualifier shall follow the rules as defined in SRD_ConfigurationManagement:

- alphanumeric characters or the special character '-' only
- special characters like '/' and '.' to be omitted.

Example input/output

```
RTRV-ACTLCP:UNITE-NE:system:123456;
UNITE-NE 00-11-03 08:00:00
M 123456 COMPLD
"system:actlname=OP2G5,actlqual=13SR4"
"system:actlname=OP10,actlqual=15LR1"
...
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also pertain to the RTRV-ACTLCP command.

RTRV-ACTLCP: Retrieve acceptable circuit
pack list

Related TL1 messages

- [“ED-EQPT \(CP\): Edit equipment \(circuit pack\)” \(5-177\)](#)
- [“DLT-EQPT \(slot\): Delete equipment \(slot\)” \(5-117\)](#)
- [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#)
- [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#)



RTRV-STATE-EQPT (system): Retrieve equipment state

The RTRV-STATE-EQPT command retrieves the state information on system (NE) level.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-STATE-EQPT:*tid:aid:ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 The aid of the system itself.
 Type: AID
 Range: system; the usage of the keyword all on system level is not allowed.
 Default: system
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format If the RTRV-STATE-EQPT command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
"system:spec_block"
...
...
"system:spec_block"
;
```

RTRV-STATE-EQPT (system): Retrieve
equipment state

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

1. aid – Access Identifier
See definition of *aid* input parameter in [“RTRV-STATE-EQPT \(system\): Retrieve equipment state” \(5-38\)](#).

Spec block parameters

1. dbstate – Data Base Change State
The system provides an indication of the validity of the active data base.
Type: alphanumeric value set.
Range:
 - EMPTY = data base state empty.
 - NEW = data base state new
 - VALID = database state valid
 - UNKNOWN = database state is not known.Default: UNKNOWN.
2. mcond – Maintenance Condition
This parameter denotes whether the system condition is in maintenance condition or not.
Type: alphanumeric value set.
Range:
 - Y = maintenance mode
 - N = normal mode.

Detailed behavior description

The RTRV-STATE-EQPT command on system level (AID = system) retrieves the current mode of the system.

The system provides the maintenance mode besides the normal operation mode in order to – handle error conditions the system can not autonomously manage – apply privileged commands.

RTRV-STATE-EQPT (system): Retrieve
equipment state

In this maintenance mode acceptance of commands is restricted in the following way:

- commands allowed in maintenance AND normal mode:
 - get any provisionable parameter: any RTRV command
 - get any non-provisionable parameter: any RTRV command
 - set interface standard default mode: ED-EQPT (system)
 - set tributary default mode: ED-EQPT (system)
 - database download to restore empty/corrupt DB: CPY-MEM
 - set time: ED-DAT
 - set date: ED-DAT
 - set LAN parameter ENT-FECOM-LAN (note: restrictions depend on parameter base, details see command)
 - set IP parameter ENT-ULS (note: restrictions depend on parameter base, details see command).
- commands ONLY allowed in maintenance mode:
 - set TID
 - SET-SID
 - set SONET/SDH synchronization default mode: ED-EQPT (system)
 - leave maintenance mode (accept data base): ED-STATE-EQPT (system)
 - set IP addresses and subnet mask ENT-FECOM-LAN, ENT-ULS (note: restrictions depend on parameter base, details see command).

Accepting the database will be a direct result of leaving the maintenance mode.

The system autonomously leaves maintenance mode without accepting the data base after a data base download from the management interface.

The RTRV-STATE-EQPT command does not generate a REPT DBCHG message.

Example input/output

```
RTRV-STATE-EQPT:UNITE-NE:system:123456;
UNITE-NE 00-11-03 08:00:00
M 123456 COMPLD
```

RTRV-STATE-EQPT (system): Retrieve
equipment state

```
"system:dbstate=EMPTY"  
"system:mcond=Y"  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section.

Related TL1 messages

- [“ED-STATE-EQPT \(system\): Edit equipment state” \(5-42\)](#)
- [“ED-EQPT \(system\): Edit equipment \(system\)” \(5-49\)](#)
- [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#)



ED-STATE-EQPT (system): Edit equipment state

The ED-STATE-EQPT command modifies the state information on system (NE) level.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M4
 Priority: 4
 Abortable: no

Input format Command Syntax: ED-STATE-EQPT:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 See definition of *aid* input parameter in [“RTRV-STATE-EQPT \(system\): Retrieve equipment state” \(5-38\)](#).
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. *mcond* – Maintenance Condition
 See definition of *mcond* in [“RTRV-STATE-EQPT \(system\): Retrieve equipment state” \(5-38\)](#).

Output format If the ED-EQPT command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output Parameter section for the RTRV-HDR command.

ED-STATE-EQPT (system): Edit equipment
state

**Detailed behavior
description**

The command switches the system to the maintenance condition or back to normal condition. There is an autonomous system reset when the maintenance condition is left. The following attribute of the system entity is updated due to that operation:

mcond as specified in the command input.

The modification is reported by means of an ED-STATE-EQPT notification for the system.

Updated affected entities:

Setting *mcond*=Y causes that *opstate*=OS_DISABLED for all non-CTL circuit packs in the system. The change is reported by means of an ED-STATE-EQPT notification for the circuit pack.

Example input/output

```
ED-STATE-EQPT:LT-UNITE:system:123456:::mcond=y;  
    LT-UNITE 00-11-14 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-STATE-EQPT command.

Related TL1 messages

[“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#)



ED-STATE-EQPT (system) notification

Output format The ED-STATE-EQPT notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-STATE-EQPT:*aid*::*spec_block*

Output parameters

Command parameters

1. aid - Access Identifier
See definition of *aid* input parameter in [“RTRV-STATE-EQPT \(system\): Retrieve equipment state” \(5-38\)](#).

Spec block parameters

1. dbstate – Data Base Change State
See definition of parameter *dbstate* in [“RTRV-STATE-EQPT \(system\): Retrieve equipment state” \(5-38\)](#).
2. mcond – Maintenance Condition
See definition of parameter *mcond* in [“RTRV-STATE-EQPT \(system\): Retrieve equipment state” \(5-38\)](#).

Example output

```
ED-STATE-EQPT:LT-UNITE:system:123456:::mcond=n;  
LT-UNITE 00-11-14 08:00:00  
M 123456 COMPLD  
;  
LT-UNITE 00-11-14 08:00:30  
A 001 REPT DBCHG  
"TIME=08-00-12,DATE=00-11-14:ED-STATE-EQPT:system::mcond=N"  
;
```



RTRV-EQPT (system): Retrieve Equipment (system)

The RTRV-EQPT command retrieves the provisioning information on system (NE) level.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-EQPT:*tid:aid:ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 The aid of the system itself.
 Type: AID
 Range: system. The usage of the keyword all on system level is not allowed.
 Default: system
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-EQPT command, the following output report is returned:

```
sid date time
M ctag COMPLD
"system:spec_block"
...
...
"system:spec_block"
;
```

RTRV-EQPT (system): Retrieve Equipment
(system)

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

1. aid – Access Identifier
See definition of the input parameters *aid* in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#) .

Spec block parameters

1. eqptpn – Equipment ASAP Profile Name
The name of the current ASAP profile on the system level
Type: Alphanumeric string
Range: up to 24 characters. A hyphen (-) is additionally allowed in the name.
Default: DEFAULT
2. istddflt – Interface Standard Default
Defining the predominantly used interface standard for a port.
Type: alphanumeric value set
Range:
 - SONET
 - SDHDefault: SDH
3. trbmddflt – Tributary Mode Default
Defining the predominantly used tributary mode for a port.
Type: alphanumeric value set.
Range:
 - FIXED
 - ADAPTIVEDefault: FIXED.
4. swmaxcap – Maximum Switch Capacity
This parameter indicates the maximum switch capacity of the system that the user intends to use.
Type: value set.
Range:
 - LXC160 (default), 160 GBit/s switch capacity
 - LXC320, 320 GBit/s switch capacity.

RTRV-EQPT (system): Retrieve Equipment
(system)

5. syncrtc – System Synchronization Characteristic
This parameter specifies whether the NE uses the SDH or SONET timing function for synchronization.
Type: alphanumeric value set.
Range:
 - SONET
 - SDH.
Default: SDH.
6. systype – System Type
This parameter specifies the type of NE.
Type: alphanumeric value set.
Range: WaveStar_UNITE.
Default: WaveStar_UNITE
7. xcsetup – Cross Connect Setup
This parameter indicates whether the system supports the set-up of cross-connections via the ONNS application.
Type: value set.
Range: SWISS ONNS application is enabled; TRADITIONAL ONNS application is disabled.
Default: TRADITIONAL.
8. ASTNNodeID – ASTN node ID
This parameter shows the unique identification of the NE as used by the ONNS application. The value will be read from backplane, if DB is empty.
Type: Four dot separated numeric string.
Range: Each numeric string: 0...255.

**Detailed behavior
description**

The command retrieves the parameters as indicated in the output parameter section from the system.

Example input/output

```
RTRV-EQPT:UNITE-NE:system:123456;
UNITE-NE 00-11-03 08:00:00
M 123456 COMPLD
"system:systype=WaveStar_UNITE"
"system:istddf1t=SDH"
"system:trbmddf1t=FIXED"
"system:syncrtc=SDH"
"system:eqtpn=DEFAULT"
```

RTRV-EQPT (system): Retrieve Equipment
(system)

;

Error responses Refer to [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error Response section. The generic error responses listed there also apply to the RTRV-EQPT command.

Related TL1 messages

- [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#)
- [“ED-EQPT \(system\): Edit equipment \(system\)” \(5-49\)](#)
- [“DLT-EQPT \(slot\): Delete equipment \(slot\)” \(5-117\)](#)
- [“RTRV-STATE-EQPT \(system\): Retrieve equipment state” \(5-38\)](#)

References GR-199-CORE



ED-EQPT (system): Edit equipment (system)

The ED-EQPT command modifies the provisioning values associated with system (NE) level.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
 Priority: 1
 Abortable: no

Input format Command Syntax: ED-EQPT:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 See definition of the input parameters *aid* in RTRV-EQPT (system).
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. eqptpn – Equipment ASAP Profile Name
 See definition of *eqptpn* output parameter in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#).
2. istddflt – Interface Standard Default
 See definition of *istddflt* output parameter in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#).
3. syncrtc – System Synchronization Characteristic
 See definition of *syncrtc* output parameter in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#).
4. trbmddflt – Tributary Mode Default
 See definition of *trbmddflt* output parameter in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#).

ED-EQPT (system): Edit equipment
(system)

5. *swmaxcapp* – Maximum Switch Capacity
See definition of *swmaxcap* output parameter in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#).
6. *xcsetup* – Cross Connect Setup
See definition of *xcsetup* output parameter in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#).

Output format If the ED-EQPT command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

The command modifies the current values for the system.

The following attributes of the system entity is updated due to that operation:

1. *istddflt* as specified in the command input
2. *trbmddflt* as specified in the command input
3. *syncrtc* as specified in the command input
4. *eqtpn* as specified in the command input.

Change of the parameters *istddflt*, *trbmddflt* has no effect on the corresponding parameters for existing entities on port and tributary level, but only on entities which are created afterwards.

The modification is reported by means of an ED-EQPT notification for the system.

Dependencies *istddflt* and *trbmddflt*

If *istddflt* is changed to SDH the *trbmddflt* parameter is set to FIXED by the system.

Updated affected entities

See discussion in [Chapter 10, “TL1 messages - synchronization”](#) after change of *syncrtc* and leave of MCOND.

Behaviour when setting of *xcsetup* from TRADITIONAL to SWISS or vice versa

The system must assure that the validation rules as listed in the Error responses section are met.

To set the system back from *xcsetup*=SWISS to *xcsetup*=TRADITIONAL it has to be ensured that no resources are in use by SWISS (ONNS).

The following steps are recommended to achieve this:

- identify all SDH/SONET ports with *portClass*=INNI or *portClass*=EDGE, then set *portControl*=LOCKOUT
- identify all GbE ports with *eportClass*=INNI or *eportClass*=EDGE, then set *eportControl*=LOCKOUT
- ensure that all NN paths which start, end, or traverse this NE are deleted or re-routed by the SWISS application via NN TL1 ENT/ED/DLT-PATH
- In exceptional cases, when the previous step is not possible: Identify all remaining cross-connections with *xconcls*=NN, then use ED-NNCRS to set *xconcls*=TRADITIONAL
- identify all SDH/SONET ports with *portClass*=INNI or *portClass*=EDGE, then set *portClass*=TRADITIONAL
- identify all GbE ports with *eportClass*=INNI or *eportClass*=EDGE, then set *eportClass*=TRADITIONAL
- identify all DCC channels with *scn_dccstat*=ENABLE, then set *scn_dccstat*=DISABLE
- identify all LANs with *osinode*=scnnode, then either set *osinode* to *osinode*{1..8} or DISABLE *lanstat*, *ip_lanstat*.

Dependency between setting of *xcsetup* and acceptable CP type list

By changing the value of *xcsetup* also the acceptable circuit pack type list changes.

Dependency between *xcsetup* and ONNS TL1 commands

While *xcsetup*=TRADITIONAL any ONNS TL1 command shall be rejected.

ED-EQPT (system): Edit equipment
(system)

Behaviour when setting *swmaxcap*

The command modifies the maximum switch capacity of the system. No other entities of the system will be affected. The modification is reported by means of an ED-EQPT notification for the system.

Example input/output

```
ED-EQPT:UNITE-NE:system:123456:::istddflt=SONET;
    UNITE-NE 98-01-01 08:00:00
M 123456 COMPLD
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ENT-EQPT command.

Validation rule: check of the maintenance condition

System must be in MCOND for change of *syncrtc*.

Error code: SNVS - Status, Not in Valid State, not in Maintenance Condition

Validation rule: compatibility *istddflt* and *trbmddflt*

Change of *trbmddflt* to ADAPTIVE while *istddflt*= SDH is not allowed.

Error code: SNVS - Status, Not in Valid State, incompatibility *istddflt* and *trbmddflt*

Validation rule: Compatibility *xcsetup* and HW configuration

The system shall verify that ONNS capable HW is (pre-)provisioned during an attempt to set *xcsetup*=SWISS. Otherwise the following error shall be reported:

Error Code: SNVS - Status, Not in Valid State, no Swiss capable HW

Compatibility *xcsetup* and NVM size

The system shall verify that the installed NVM has a capacity > 256 Mbytes during an attempt to set *xcsetup*=SWISS. Otherwise the following error shall be reported:

Error Code: SNVS - Status, Not in Valid State, NVM size not sufficient

Validation rule: Compatibility *xcsetup* and IP configuration for SCN

The system shall verify that the mandatory ASTN IP address is provisioned during an attempt to set *xcsetup*=SWISS. Otherwise the following error shall be reported:

Error Code: SNVS - Status, Not in Valid State, incomplete IP configuration

See corresponding validation rules in [“ENT-ULS: Enter upper layer stack” \(12-105\)](#) for details.

Validation rule: Setting *xcsetup* back to TRADITIONAL

On an attempt to set *xcsetup* to TRADITIONAL it has to be ensured that all of the following rules are fulfilled:

- for all (pre-)provisioned SDH/SONET ports (i.e. ports which are identified via SPortAID) in the system holds *portClass*=TRADITIONAL, see RTRV/ED-rr (port)
- for all (pre-)provisioned GbE ports (i.e. ports which are identified via EPortAID) in the system holds *eportClass*=TRADITIONAL, see RTRV/ED-EPORT
- for all cross-connections in the system holds *xconcls*=TRADITIONAL, see RTRV/ED-CRS, ED-NNCRS
- no DCC channel shall have *scn_dccstat*=ENABLED, see RTRV/ENT-FECOM
- no LAN shall be assigned to the SCN with *osinode*=scnnode, see RTRV/ENT-FECOM-LAN.

Otherwise the following error shall be reported:

Error Code: SNVS - Status, Not in Valid State, resources in use by SWISS.

Validation rule: Do not accept ONNS TL1 commands when *xcsetup*=TRADITIONAL

The system shall DENY ONNS TL1 commands when *xcsetup*=TRADITIONAL.

Error code: SNVS - Status, Not in Valid State, SWISS not enabled

Validation rule: Maximum switch capacity according XC CP

If the *swmaxcap* parameter is set it shall be ensured that the provided switch capacity is not higher than the switch capacity of the

ED-EQPT (system): Edit equipment
(system)

provisioned XC circuit pack with the smallest switch capacity in the system.

Error Code: SNVS - Status, Not in Valid State, switch capacity below provisioned XC CP switch capacity

Validation rule: No decrease of maximum switch capacity

If the *swmaxcap* parameter is set it shall be ensured that the *swmaxcap* value in the ED-EQPT command is not lower than the actual provisioned swmaxcap value in the system.

Error Code: IDNV - Input, Data Not Valid, switch capacity cannot be decreased

Related TL1 messages

- [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#)
- [“DLT-EQPT \(slot\): Delete equipment \(slot\)” \(5-117\)](#)
- [“RTRV-STATE-EQPT \(system\): Retrieve equipment state” \(5-38\)](#)
- [“RTRV-NNCNFG: Retrieve ONNS configuration data” \(15-67\)](#)
- [“ED-NNCNFG: Edit ONNS configuration data” \(15-72\)](#)

References GR-199-CORE



ED-EQPT (system) notification

Output format The ED-EQPT notification uses the general format of a REPT DBCHG Report Database Change notification.

Syntax: ED-EQPT:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of the input parameters *aid* in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#).

Spec block parameters

See definition of the output parameters *eqptpn*, *istddf1t*, *syncrtc*, *trbmddf1t*, *swmaxcap* and *xcsetup* in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#).

Example output

```
ED-EQPT:UNITE-NE:system:123456:::istddf1t=SONET;  
UNITE-NE 00-11-14 08:00:00  
M 123456 COMPLD  
;  
UNITE-NE 00-11-14 08:00:50  
A 001 REPT DBCHG  
"TIME=08-00-12,DATE=00-11-14:ED-EQPT:system::  
istddf1t=SONET"  
;
```



RTRV-AO: Retrieve Autonomous Output

The RTRV-AO command is used to retrieve copies of past REPT DBCHG messages for users in the memory administration user class.

The copies of REPT DBCHG messages available for retrieval include those actually reported to the user as well as those that may not have reached the user due to external (for example, DCN failures) or internal (for example, inhibited autonomous TL1 message reporting) conditions.

If messages are inhibited with the INH-MSG command, the internal buffering of autonomous messages is unaffected.

The system saves a copy of each REPT DBCHG message for users in the memory administration user class (*uidclass*=MEMADMIN). Those copies share one *atag* counter for all users of the memory administration user class. Message is saved even if no user of the memory administration user class is actually logged into the system.

This is in contrast to the autonomous messages which are sent to users of user classes different from memory administration, where the *atag* counter is available per user session.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
 User Class: The user must belong to the user class *uidclass*=MEMADMIN (see [“RTRV-USER: Retrieve user” \(4-31\)](#)).
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-AO:*tid*::*ctag*[::*spec_block*];

Input parameters

Command parameters

1. *tid* – Target Identifier
 See definition of *tid* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *ctag* – Correlation Tag
 See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Spec block parameters

1. atagseq – ATAG Sequence

This parameter specifies one or more *atags* for which the REPT DBCHG messages is retrieved from the log.

Examples of ranges that are allowed:

- *atagseq*=10 → Retrieve *atag* message 010
- *atagseq*=10&20 → Retrieve *atag* message 010, 020
- *atagseq*=10&&20 → Retrieve *atag* message 010-020
- *atagseq*=999&&1 → Retrieve *atag* message 999, 000, 001.

If the value is omitted, all messages are retrieved, regardless of *atag*.

Type: (range of) numeric string.

Examples of ranges that are allowed:

- *atagseq*=10 Retrieve REPT DBCHG message with *atag* 010
- *atagseq*=10&20 Retrieve REPT DBCHG message with *atag* s 010, 020
- *atagseq*=10&&20 Retrieve REPT DBCHG message with *atag* s 010-020
- *atagseq*=999&&1 Retrieve REPT DBCHG message with *atag* s 999, 000, 001.

Range: 0 .. 999

Default: *null*, if the value is omitted, all messages are retrieved, regardless of *atag*.

2. msgtype – Message Type

Retrieve only atag messages of this specific type.

Type: alphanumeric value set

Range: DBCHG: Retrieve messages reported by REPT DBCHG.

Default: *null*, if the value is omitted, only DBCHG messages are retrieved.

Output format

If there are autonomous messages to report, the following response is returned:

```
sid date time
M ctag COMPLD
/*
complete autonomous messages without the termination
indicator (";")
*/
;
```

RTRV-AO: Retrieve Autonomous Output

Sorting

If more than one REPT DBCHG message is returned, the output is sorted by ascending time order. If the system clock is reset, the output is sorted in the order in which the messages were stored into the log.

For example, if the system originally sent messages 998 through 001, and the user requests those messages, the *atag* numbers in the output will be in the order: 998, 999, 000, 001.

If the *atag* numbers have wrapped and the most recent entry is *atag* 040, and if the user requests *atagseq*=38&&43, the *atag* order in the output will be 041, 042, 043, 038, 039, 040.

Output parameters

The output parameters reflect the autonomous messages that are retrieved from the database change log, see [“RTRV-LOG-NTFCN: Retrieve notification Log” \(5-60\)](#), in the format of a REPT DBCHG message.

Detailed behavior description

The system returns all REPT DBCHG messages matching the *atag* range of the input parameter *atagseq* to the user.

Update affected entities: Execution of this command does not affect other entities in the system.

Example input/output

The following is an example of the successful execution of a RTRV-AO command:

```
RTRV-AO:LT-UNITE:12:123456;
    LT-UNITE 00-11-01 08:00:00
M 123456 COMPLD
/*
    LT-UNITE 00-11-01 07:50:00
A 012 REPT DBCHG
    "DATE=00-11-01,TIME=07-49-58:ED-NE:::tunstat=ENABLE"
*/
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error Response section. The error responses listed there also apply to the RTRV-AO command.

RTRV-AO: Retrieve Autonomous Output

Validation rule: valid *atagseq*

If the NE receives a RTRV-AO command with an invalid *atagseq* value the command is rejected with

Error code: IDNV - Input Data Not Valid, invalid *atagseq*

Validation rule: user class

If the NE receives a RTRV-AO command from a user that is not in the memory administration user class, i.e. *uidclass*=MEMADMIN, the command is rejected with

Error code: PICC - Privilege, Illegal Command Code, invalid user class.

Related TL1 messages

- [“RTRV-LOG-NTFCN: Retrieve notification Log” \(5-60\)](#)
- [“REPT DBCHG: Report data base change” \(5-67\)](#)

References GR-199-CORE



RTRV-LOG-NTFCN: Retrieve notification Log

The RTRV-LOG-NTFCN command retrieves the notification log, which is used to store the most recent notification reported via REPT DBCHG. This log allows the user to see the most recent activity that has caused updates to the system database. This is useful in solving database audit problems. This information can also be used to re-synchronize a management system with the NE after a communications outage between the two.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
Priority: 1
Abortable: Yes.

Input format Command Syntax:
RTRV-LOG-NTFCN:*tid::ctag::[startdate],[starttime],[replytype]*;

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. startdate – Date for the Starting point
The format is YY-MM-DD. If both *startdate* and *starttime* are omitted, the entire log is retrieved. Both *startdate* and *starttime* must be specified, or both must be omitted.
Type: value set.

Range:

- for YY: 00 to 99
- for MM: 01 to 12
- for DD: 01 to 31.

2. starttime – Time for the Starting point

The format is HH-MM-SS. If both *startdate* and *starttime* are omitted, the entire log is retrieved. Both *startdate* and *starttime* must be specified, or both must be omitted.

Type: value set.

Range:

- for HH: 00 to 23
- for MM: 00 to 59
- for SS: 00 to 59.

3. replytype – Type of Reply

BROWSE is used if user browsing is needed. If the requested *startdate* and *starttime* is in the log, those entries and any subsequent log entries are returned. If the requested *startdate* and *starttime* is NOT in the log, the first log entry in the log with a timestamp later than the *startdate* and *starttime* plus subsequent log entries will be returned. If the requested *startdate* and *starttime* is NOT in the log only a completion message is returned without further error messages.

DBSYNC is used if the management system requires the log for database synchronization. If the requested *startdate* and *starttime* is in the log, those entries and any subsequent log entries are returned. If the requested *startdate* and *starttime* is NOT in the log, an SNVS error response is returned.

Type: alphanumeric value set.

Range:

- BROWSE
- DBSYNC.

Default: BROWSE.

Output format

If the RTRV-LOG-NTFCN request completes successfully, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
"Time=time,Date=date:[ccb]:[aid]:[com_block]:[spec_
block]"
```

```
...  
"Time=time,Date=date:[ccb]:[aid]:[com_block]:[spec_  
block]"  
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

1. date – Date
See definition of *chgdat* parameter in [“REPT DBCHG: Report data base change” \(5-67\)](#).
2. time – Time
See definition of *chgtm* parameter in [“REPT DBCHG: Report data base change” \(5-67\)](#).
3. ccb – Command Block Code
See definition of *ccb* parameter in [“REPT DBCHG: Report data base change” \(5-67\)](#).
4. aid – Access Identifier
See definition of *aid* parameter in [“REPT DBCHG: Report data base change” \(5-67\)](#).
5. com_block – Common Block
See definition of *com_block* in [“REPT DBCHG: Report data base change” \(5-67\)](#).
6. spec_block – Specific Block
See definition of *spec_block* in [“REPT DBCHG: Report data base change” \(5-67\)](#).

Example input/output The following is an example of the RTRV-LOG-NTFCN command:

```
RTRV-LOG-NTFCN:LT-UNITE::123456::;  
LT-UNITE 00-11-15 08:00:00  
M 123456 COMPLD  
"TIME=07-59-59,DATE=00-11-15:ENT-EQPT:1-1::shlftp=DUR"  
...  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-LOG-NTFCN command.

Validation rule: matching log entry

There is at least one matching log entry for the specified *startdate* and *starttime* if reply type equals DBSYNC.

Error code: SNVS - Status, Not in Valid State, no matching log entry

Related TL1 messages [“REPT DBCHG: Report data base change” \(5-67\)](#)

References GR-833



RTRV-LOG-NNEVT: Retrieve NN Event Log

The RTRV-LOG-NNEVT command retrieves the NN event log which is used to store the most recent NN events non volatile.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
 Priority: 1
 Abortable: Yes.

Input format Command Syntax: RTRV-LOG-NNEVT:*tid*::*ctag*::[*startdate*],[*starttime*];

Input parameters

Command parameters

1. *tid* – Target Identifier
 See definition of *tid* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *ctag* – Correlation Tag
 See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Spec block parameters

1. *startdate* – Date for the Starting point
 Refer to the [“RTRV-LOG-NTFCN: Retrieve notification Log” \(5-60\)](#) command for the input parameter syntax and description of this parameter.
2. *starttime* – Time for the Starting point
 Refer to the [“RTRV-LOG-NTFCN: Retrieve notification Log” \(5-60\)](#) command for the input parameter syntax and description of this parameter.

Output format If the RTRV-LOG-NNEVT request completes successfully, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
  "Time=time,Date=date:nnevt"
  ...
  "Time=time,Date=date:nnevt"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

1. *date* – Date
This parameter shows the occurrence date of the NN event. For syntactical details see definition of *chgdat* parameter in [“REPT DBCHG: Report data base change” \(5-67\)](#).
2. *time* – Time
This parameter shows the occurrence time of the NN event. For syntactical details see definition of *chgdat* parameter in [“REPT DBCHG: Report data base change” \(5-67\)](#).
3. *nnevt* – NN Event
This parameter shall provide the details of the ONNS event. It consists of the text block without the date/time information of the ONNS event enclosed in double quotes (“”).
Note: The following NN event types are stored in this log: REPT PTHCHG, REPT PTHEVT, REPT NNCHG, REPT NNEVT. The detailed TL1 specification can be found on the ONNS TL1 page.
Type: inner string.
Range: a string of arbitrary length, any character except “ and \, upper and lower cases are considered.

Detailed behavior description

If the error log of the system does not contain any records at all or no records exist matching the specified startdate and starttime an empty reply is returned. Note: The log shall contain the last 1000 ONNS events.

Example input/output

The following is an example of the RTRV-LOG-NNEVT command:

```
RTRV-LOG-NNEVT:LT-UNITE::123456::;  
LT-UNITE 02-02-05 08:00:00  
M 123456 COMPLD  
"TIME=07-59-59,DATE=02-07-01:CCB=PATH:125.114.48.12:  
SNN:C015:\\" Connection restored and Saved in NVM \":"  
"ConnID=125.114.48.12&1-1-3-4-1&1,ConnStatus=CON&OK,  
2WAY,AUTONR,STS192,  
connAlias=AEXP-NY-BOS-ckt,
```

```
MaxDelay=199,,,SrlgExclude=630&820&720,IncludeID=0,  
RstrPriority=3,,SrcNID=125.114.48.12,1-1-3-4-1,  
DestNID=125.6.19.43,1-1-14-2-1:  
PathID=125.114.48.12-12123,State=CON &OK,  
NodeList=125.114.48.12&nodeIP1&nodeIP2&...&  
125.6.19.43:PathID=125.114.48.12-11013,State=CON&TRDOWN,  
NodeList=125.114.48.12&nodeIP4&nodeIP5&...&125.6.19.43"  
.  
.  
.  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-LOG-NNEVT command.



REPT DBCHG: Report data base change

The REPT DBCHG message reports any change in the system database.

Output format The REPT DBCHG message uses the following format:

```

sid date time
A atag REPT DBCHG
  "TIME=chgtm,DATE=chgdatt:ccb:[aid]:[com_block]:[spec_
  block]"
  ...
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

1. atag – Automatic Tag
The **atag** is used for message sequencing. The **atag** is available per user session. The number is incremented by one for each autonomous message, and the messages are transmitted to the user in that same order.
Type: decimal number.
Range: 0 to 999.
Default: 0
2. chgtm – Change Time
Time when the change is occurred.
Type: value set.
Range: HH-MM-SS.
3. chgdatt – Change Date
Date when the change occurred
Type: value set
Range: YY-MM-DD
4. ccb – Command Code Block
This field will be set to the TL command that causes that database change. The **com_block** and **spec_block** fields will be set according to the parameters that changed.
Type: alphanumeric value set verb-modifier[-modifier] (see [“TL1 message index” \(1-2\)](#)).

REPT DBCHG: Report data base change

5. aid – Access Identifier
AID of the entity for which the change is reported
Type: AID.
Range: As defined by the *aid* input parameter of the corresponding command, defined by *ccb*.
6. com_block – Common Block
This is a position-defined field. If the database change is the result of a TL1 command which contains parameters in this block, the parameter values are included in this block in the same order as the corresponding TL1 command.
As exception to this rule are some commands in the protection fragment, where the aliases *rid* and *ppgname* are not reported in the REPT DBCHG notification.
Type: As defined in the input *com_block* of the corresponding command, defined by *ccb*.
Range: As defined in the input *com_block* of the corresponding command, defined by *ccb*.
Default: As defined in the input *com_block* of the corresponding command, defined by *ccb*.
7. spec_block – Specific Block
This is a name-defined field. If the database change is the result of a TL1 command which contains parameters in this block, the parameter names and values are included in this block.
parameters within the specific block are positionally independent and are specified using a name-defined construct of *parameter=value* in a comma-separated list. The parameter names are the same as those for the corresponding TL1 command.
Type: As defined in the input *spec_block* of the corresponding command, defined by *ccb*.
Range: As defined in the input *spec_block* of the corresponding command, defined by *ccb*.
Default: As defined in the input *spec_block* of the corresponding command, defined by *ccb*.

Detailed behavior description

The REPT DBCHG message reports any change in the system database. Changes can be caused by a TL1 user or by an internally-generated state change.

Changes in user provisionable attributes are reported as the equivalent TL1 command that would cause that change.

REPT DBCHG: Report data base change

This also means, that e.g. for an ED command the REPT DBCHG message will contain those parameters as specified in the corresponding TL1 command, regardless of whether the command led to an actual change of the attribute or not.

Changes in non-user provisionable attributes are reported using only the AID and the block parameters, i.e. leaving the *ccb* parameter empty.

System initialization

Any time a command is entered that causes a system reset, a REPT DBCHG message is transmitted before the system resets.

AID ranges

If a database change occurs as a result of a TL1 command in which an AID range is entered, the system responds separate REPT DBCHG messages for each affected AID.

Messages caused by own changes

If the database change occurs as a result of a TL1 command, a REPT DBCHG message is transmitted to users provisioned to receive REPT DBCHG messages, including the user which issued the command.

Example input/output

The following is an example of the REPT DBCHG command:

```
UNITE-NE 00-11-08 08:00:00
A 001 REPT DBCHG
"TIME=07-59-59,DATE=00-11-08: ENT-EQPT:1-1-#-#-
05::nvmname=OP2G5,nvmqual=13SR4"
;
```

References

GR-199-CORE



ED-DAT: Edit date and time

The ED-DAT command can be initiated by a user to change the date and time information in the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S4
Priority: 1
Abortable: no

Input format Command Syntax: ED-DAT:*tid*::*ctag*::[*date*][,*time*];

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. *date* – Date
The *date* specifies the current date as YY-MM-DD. If the parameter *time* is not specified, the current value is not changed, but then *date* must be specified for the ED-DAT command to complete successfully.
Type: value set.
Range: YY-MM-DD, with YY between 00 and 99, MM between 01 and 12, DD between 01 and 31.
Default: 00-01-01 after start-up with default DB, current NE value, if not supplied in the command.
4. *time* – Time
The *time* specifies the current time of day as HH-MM-SS. If the parameter *date* is not specified, the current value is not changed, but then *time* must be specified for the ED-DAT command to complete successfully.
Type: value set.
Range: HH-MM-SS, with HH between 00 and 23, MM between 00 and 59, SS between 00 and 59.
Default: 00-00-00 after start-up with default DB current NE value, if not supplied in the command.

Output format If the ED-DAT request completes successfully, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description The following attributes of the system entity is updated due to that command

1. *date* as specified in the command input
2. *time* as specified in the command input.

If either *date* or *time* is not supplied in the command parameter, this value is left unchanged.

The update is reported by means of an ED-DAT notification for the system.

Update affected entities

If ED-DAT is changed so that a performance monitoring period is crossed, than one history bin will be lost. In every case the *validity* parameter is modified accordingly (see [“RTRV-PM: Retrieve performance monitoring” \(9-7\)](#)).

Example input/output

```
ED-DAT:LT-UNITE:789::123456::01-12-31,11-50-30;
LT-UNITE:789 01-12-31 11:51:41
M 123456 COMPLD
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-DAT command.

Validation rule: Incorrect date/time format

If the NE receives an ED-DAT command with an incorrectly formatted date and/or time, the following error response is returned. This check includes checks for invalid days within a month (e.g. no 30th February).

ED-DAT: Edit date and time

Error code: IDNV - Input, Data Not Valid, incorrect
date/time format

Related TL1 messages [“RTRV-HDR: Retrieve header” \(5-8\)](#)

References GR-199-CORE



ED-DAT notification

Output format The ED-DAT notification uses the general format of a REPT DBCHG Report Database Change notification.

Syntax: ED-DAT::*[date]**[,time]*

Output parameters

Command parameters

1. date – Date
See definition of input parameter *date* in [“ED-DAT: Edit date and time” \(5-70\)](#).
2. time – Time
See definition of input parameter *time* in [“ED-DAT: Edit date and time” \(5-70\)](#).

Example output

```
ED-DAT:LT-UNITE:789::123456::01-12-31,11-50-30;  
LT-UNITE:789 01-12-31 11:51:41  
M 123456 COMPLD  
;  
LT-UNITE 01-12-31 11:52:03  
A 078 REPT DBCHG  
"Time=11-52-05,DATE=01-12-31:ED-DAT::date=01-12-  
31,time=11-50-30"  
;
```



SET-SID: Set SID

SET-SID is used to change the target/source identification of the NE. The SET-SID command is denied if the system is not in maintenance condition.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S4
Priority: 1
Abortable: no

Input format Command Syntax: SET-SID:*tid*::*ctag*::*newsid*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command.
2. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command.
3. *newsid* – New Target/Source Identification
This is the new name of the NE. Future commands must use this name instead of the current name.
See definition of input parameter *tid* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format If the NE fully complies with the SET-SID request, the normal completion response is returned as shown below:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

This command provides a new name to the NE.
The update is reported by means of an SET-SID notification.

The SET-SID command is denied if the system is not in maintenance condition. Maintenance condition applies only to NE.

The new SID will come into effect only after reset of the CTL. This reset takes place autonomously when the maintenance condition is left. Commands after the reset must use the new SID instead of the current name.

The response as well as corresponding REPT DBCHG notification use the old SID in the *sid* parameter.

The SET-SID command generates a REPT DBCHG message.

Updated affected entities

There is no further entities affected.

If the NE is a node in a BLSR ring/MS-SPRing and the TID is changed, then this may impact cross-connection entities of ring neighbors. Since these updates are reported by NEs not addressed in the command request, these events are treated like autonomous events. For further details see corresponding section in the transmission chapter – entity cross-connection.

Example input/output

The following shows an example of the SET-SID command where the target/source identification of the NE was changed to HARRY:

```
SET-SID:LT-UNITE::123456::HARRY;  
    LT-UNITE 00-11-15 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the SET-SID command.

Validation rule: Check of Maintenance Condition

If a SET-SID command is entered when the administrative state of the system is not in maintenance condition, the following error response is returned.

Error code: SNVS – Status, Not in Valid State, not in Maintenance Condition

Validation rule: Uniqueness of TID within Ringmaps

If the new sid conflicts with an existing TID in at least one of the valid ringmaps, the following error response is returned.

Error code: IDNV - Input, Data Not Valid, sid is already used by another BLSR/MS-SPRing Node

Related TL1 messages [“RTRV-HDR: Retrieve header” \(5-8\)](#)

References GR-833-CORE, “Surveillance Messages”



SET-SID notification

Output format The SET-SID notification uses the general format of a REPT DBCHG Report Database Change notification.

Syntax: SET-SID::*newsid*

Output parameters

Command parameters

1. *newsid* – New Target/Source Identification
See definition of input parameter *tid* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Example output

```
SET-SID:LT-UNITE::805::HARRY;  
LT-UNITE 00-11-17 10:11:00  
M 805 COMPLD;  
LT-UNITE 00-11-17 10:12:03  
A 610 REPT DBCHG  
Time=13-49-30,DATE=00-11-17:SET-SID::HARRY"  
;
```



INIT-SYS: Initialize System

The INIT-SYS command results in a full reset of all circuit packs that are present in the system. The initialization is equivalent to power cycle reset of the whole system.

The INIT-SYS command is traffic affecting.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S4
Priority: 1
Abortable: no

Input format Command Syntax: INIT-SYS:*tid*::*ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format If the NE fully complies with the INIT-SYS request, the following normal completion response is returned to indicate the initialization has been started:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The INIT-SYS command does not generate a REPT DBCHG message. There are no unique state change notifications associated with the INIT-SYS command. There are, however, all the state change notifications associated with the subsequent restart of all CTIPs. This

includes multiple state change messages. Refer to autonomous notifications because of state changes.

Example input/output

The following is an example for the INIT-SYS command:

```
INIT-SYS:LT-UNITE::123456;  
    LT-UNITE 00-11-16 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to INIT-SYS command.

Related TL1 messages

[“INIT-EQPT \(slot\): Initialize equipment \(slot\)” \(5-129\)](#)

References

GR-833-CORE



Autonomous notifications

Change acceptable type list for CTL

During system startup it shall be detected which CTL type is plugged in.

Appropriate to this CTL the acceptable type list of the second controller slot shall be changed

- If the first controller is a CTL, the second controller can be CTL or CTL/2
- If the first controller is a CTL/2, the second controller must be CTL/2.

The term *first* and *second* is related on installation time. No database change notification will be send out during system initialization.

Change of the data base change status

The data base change state (see *dbstate* parameter in [“RTRV-STATE-EQPT \(system\): Retrieve equipment state” \(5-38\)](#)) can change autonomously. This change is reported by means of an ED-STATE-EQPT notification.

System start-up with default DB

The system autonomously create the entity *system* when starting up with the default database. No notification is sent.

Change of system switch capacity

The switch capacity of the system can change if a cross connect circuit pack will be auto provisioned with a higher switch capacity as currently defined for the system. The system switch capacity will change to the cross-connect circuit pack switch capacity. This shall be reported by means of an ED-EQPT notification reporting the *swmaxcap* parameter.



Bay

Overview

Purpose This section includes the bay level configuration messages.

Contents

RTRV-EQPT (bay): Retrieve Equipment (bay)	5-82
Autonomous notifications	5-84



RTRV-EQPT (bay): Retrieve Equipment (bay)

The RTRV-EQPT command retrieves information associated with the bay level.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-EQPT:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
Description: The AID of the bay/rack.
Type: AID.
Range: BayAID. The keyword *all* is allowed.
Default: 1.
3. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-EQPT command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

aid – Access Identifier

Description: The AID of the bay/rack.

Type: AID

Range: BayAID. The keyword all is not allowed as output parameter.

Default: 1

**Detailed behavior
description**

The system supplies a normal completion response with the AID of the bay/subrack.

Example input/output

```
RTRV-EQPT:UNITE-NE:1:123456;  
    UNITE-NE 00-11-03 08:00:00  
M 123456 COMPLD  
    "1"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to RTRV-EQPT (bay) command.

References

GR-199-CORE



Autonomous notifications

**System start-up with
default DB**

The system autonomously create the entity ***bay*** when starting up with the default database. No notification is sent.



Shelf

Overview

Purpose This section includes the shelf level configuration messages.

Contents

RTRV-EQPT (shelf): Retrieve Equipment (shelf)	5-86
ED-EQPT (shelf): Edit equipment (shelf)	5-89
ED-EQPT (shelf) notification	5-91
Autonomous notifications	5-92



RTRV-EQPT (shelf): Retrieve Equipment (shelf)

The RTRV-EQPT command retrieves the provisioning information associated with the shelf level.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-EQPT:*tid:aid:ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 The AID of the shelf/subrack.
 Type: AID
 Range: ShelfAID. The keyword all is allowed on bay AID and shelf AID level.
 Default: 1-1.
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-EQPT command, the following output report is returned:

```
sid date time
M ctag COMPLD
"1-1[:spec_block]"
...
...
"1-1[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

1. aid – Access Identifier
The AID of the shelf/subrack.
Type: AID
Range: ShelfAID. The keyword all is not allowed on bay AID and shelf AID level.
Default: 1-1.

Spec block parameters

1. eqptpn – Equipment ASAP Profile Name
The name of the current ASAP profile of type EQUIP-UNPROT of the shelf level.
Type: Alphanumeric string.
Range: up to 24 characters. A hyphen (-) is additionally allowed in the name.
Default: DEFAULT.
2. eqptprotpn – Protected Equipment ASAP Profile Name
The name of the current ASAP profile of type EQUIP-PROT of the shelf level.
Type: Alphanumeric string.
Range: up to 24 characters. A hyphen (-) is additionally allowed in the name.
Default: DEFAULT.
3. shlftp – Shelf Type
The shelf type of the addressed NE is provided.
Type: alphanumeric value set
Range: LXC40.
Default: none.
4. ssoride - SS Bits Overrides
This parameter determines the value to be inserted into the SS bits of the pointer of every AU-N or STS-N signal in the output direction of every SDH or SONET port in the shelf.

The terms *override*, *enable* and *disable* are used since:

- the default value of the SS bits in 00
- the parameter allows you to diverge from that default.

Type: alphanumeric value set.

Range: ENABLE insert value 00 into SS bits, DISABLE insert value 10 into SS bits.

Default: DISABLE.

**Detailed behavior
description**

The system retrieves the output parameters as described above.
The shelf type is derived from the inventory data of the subrack.

Example input/output

```
RTRV-EQPT:UNITE-NE:1-1:123456;  
UNITE-NE 00-11-03 08:00:00  
M 123456 COMPLD  
"1-1:eqtpn=DEFAULT,eqtprotn=DEFAULT,shlftp=LXC40"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to RTRV-EQPT (shelf) command.

Related TL1 messages

- [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#)
- [“ED-EQPT \(shelf\): Edit equipment \(shelf\)” \(5-89\)](#)
- [“DLT-EQPT \(slot\): Delete equipment \(slot\)” \(5-117\)](#)
- [“RTRV-STATE-EQPT \(system\): Retrieve equipment state” \(5-38\)](#)

References

GR-199-CORE



ED-EQPT (shelf): Edit equipment (shelf)

The ED-EQPT command modifies the provisioning values associated with the shelf.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: no.

Input format Command Syntax: ED-EQPT:*tid:aid:ctag:::spec_block;*

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
See definition of output parameter *aid* in [“RTRV-EQPT \(shelf\): Retrieve Equipment \(shelf\)” \(5-86\)](#).
3. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. eqptpn – Equipment ASAP Profile Name
See definition of output parameter *eqptpn* in [“RTRV-EQPT \(shelf\): Retrieve Equipment \(shelf\)” \(5-86\)](#).
2. eqptprotpn – Protected Equipment ASAP Profile Name
See definition of output parameter *eqptprotpn* in [“RTRV-EQPT \(shelf\): Retrieve Equipment \(shelf\)” \(5-86\)](#).
3. ssoride - SS Bits Override
See definition of output parameter *ssoride* in [“RTRV-EQPT \(shelf\): Retrieve Equipment \(shelf\)” \(5-86\)](#).

Output format If the ED-EQPT command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
```

ED-EQPT (shelf): Edit equipment (shelf)

;

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The following attribute of the shelf entity is updated due to the command ED-EQPT:

- *eqptpn* as specified in the command input
- *eqptprotpn* as specified in the command input.

The modification is reported by means of an ED-EQPT notification for the shelf.

Example input/output

```
ED-EQPT:UNITE-NE:1-1:123456:::eqptpn=Nuernberg-1;
      UNITE-NE 98-01-01 08:00:00
M 123456 COMPLD
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to RTRV-EQPT (shelf) command.

Validation rule: Check for ASAP profile existence

When no ASAP profile with the name specified by *eqptpn* or *eqptprotpn* does exist the following error message is returned.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Related TL1 messages

- [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#)
- [“DLT-EQPT \(slot\): Delete equipment \(slot\)” \(5-117\)](#)
- [“RTRV-STATE-EQPT \(system\): Retrieve equipment state” \(5-38\)](#)

References

GR-199-CORE



ED-EQPT (shelf) notification

Output format The ED-EQPT notification uses the general format of a REPT DBCHG Report Database Change notification.

Syntax: ED-EQPT:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-EQPT \(shelf\): Retrieve Equipment \(shelf\)” \(5-86\)](#).

Spec block parameters

1. *eqtpn* – Equipment ASAP Profile Name
See definition of output parameter *eqtpn* in [“RTRV-EQPT \(shelf\): Retrieve Equipment \(shelf\)” \(5-86\)](#).
2. *eqtprotn* – Protected Equipment ASAP Profile Name
See definition of output parameter *eqtprotn* in [“RTRV-EQPT \(shelf\): Retrieve Equipment \(shelf\)” \(5-86\)](#).
3. *ssoride* - SS Bits Override
See definition of output parameter *ssoride* in [“RTRV-EQPT \(shelf\): Retrieve Equipment \(shelf\)” \(5-86\)](#).

Example output

```
ED-EQPT:UNITE-NE:1-1:123456::eqtpn=Nuernberg-1;
UNITE-NE 00-11-20 08:00:00
M 123456 COMPLD
;
UNITE-NE 00-11-20 8:01:03
A 610 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:ED-EQPT:1-1::
eqtpn=Nuernberg-1"
;
```



Autonomous notifications

**System start-up with
default DB**

The system autonomously create the entity *shelf* when starting up with the default database. No notification is sent.



Slot

Overview

Purpose This section includes the slot level configuration messages.

Contents

RTRV-EQPT (slot): Retrieve Equipment (slot)	5-94
ENT-EQPT (slot): Enter equipment (slot)	5-100
ED-EQPT (slot): Edit equipment (slot)	5-109
ED-EQPT notification	5-113
DLT-EQPT (slot): Delete equipment (slot)	5-117
RTRV-STATE-EQPT (slot): Retrieve equipment state (slot)	5-125
ED-STATE-EQPT (slot) notification	5-128
INIT-EQPT (slot): Initialize equipment (slot)	5-129
Autonomous notifications	5-132



RTRV-EQPT (slot): Retrieve Equipment (slot)

The RTRV-EQPT command retrieves the provisioning information associated with slot.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Priority: 1
Abortable: Yes.

Input format Command Syntax: RTRV-EQPT:*tid:aid:ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
The AID of a slot.
Type: AID
Range:
 - SlotAID
 - UnivSlotAID
 - XCSlotAID
 - CTLSlotAID.The keyword `usa11` is allowed for Simple_UnivSlotAID.
The keyword `xca11` is allowed for Simple_XCSlotAID.
The keyword `cta11` is allowed for Simple_CTLSlotAID.
The keyword `a11` is allowed for Simple_SlotAID.
The keyword `a11` is not allowed on bay/shelf level.
3. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-EQPT command, the following output report is returned:

sid date time

```
M ctag COMPLD
  "aid[:spec_block]"
  ...
  ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

The output actlname is an attribute list per slot and nvmname/nvmqual is an optional pair of attributes per slot.

1. aid – Access Identifier
Description: The AID of a slot.
Type: AID
Range: SlotAID
The keyword *usall* is not allowed for Simple_UnivSlotAID.
The keyword *xcall* is not allowed for Simple_XCSlotAID.
The keyword *ctla11* is not allowed for Simple_CTLSlotAID.
The keyword *a11* is not allowed for Simple_SlotAID, Simple_UnivSlotAID, Simple_XCSlotAID, Simple_CTLSlotAID.
The keyword *a11* is not allowed on bay/shelf level.

Spec block parameters

1. actlname – Acceptable Circuit Pack Name
This parameter is reported by itself The line is repeated for all groups of acceptable circuit packs in the slot. This list specifies the groups of circuit packs which can be provisioned for that slot. The detailed information about the groups can be requested via RTRV-ACTLCP.
Type: value set.
Range: 12 character.
2. app – Apparatus Code
Apparatus Code as stored in the EEPROM on the circuit pack. This parameter should be reported for a SlotAID, if the value of *holdst* is VALID or UNEXPECTED.
Type: alphanumeric string.
Range: up to 9 characters.

3. clei – Common Language Equipment
Common Language Equipment as stored in the EEPROM on the circuit pack.
This parameter should be reported for a SlotAID, if the value of **holdst** is VALID or UNEXPECTED.
Type: value set
Range: 10 characters
4. eci – Equipment Catalog Item
Equipment Catalog Item as stored in the EEPROM on the circuit pack.
This parameter should be reported for a SlotAID, if the value of **holdst** is VALID or UNEXPECTED.
Type: value set.
Range: 6 digits.
Default: none.
5. eqptpn – Equipment ASAP Profile Name
The name of the current ASAP profile of type EQUIP-PROT on slot level
Type: Alphanumeric string
Range: up to 24 characters. A hyphen (-) is additionally allowed in the name.
Default: DEFAULT.
Note: **eqptpn** is used on system, shelf and circuit pack level for a profile of type EQUIP-UNPROT.
6. name – Circuit Pack Name
Circuit Pack Name as stored in the EEPROM on the circuit pack.
This parameter should be reported for a SlotAID, if the value of **holdst** is VALID or UNEXPECTED.
Type: value set.
Range: up to 12 characters.
7. nvmname – Circuit Pack Name
This parameter specifies the name of the provisioned circuit pack of the slot. If no circuit pack is provisioned the default value is reported.
Type: value set.
Range: 12 character.
Default: UNDEFINED.

RTRV-EQPT (slot): Retrieve Equipment
(slot)

8. nvmqual – Circuit Pack Qualifier

This parameter specifies the qualifier of the provisioned circuit pack of the slot. If no circuit pack is provisioned the value UNDEF is reported.

Type: value set.

Range: 7 characters.

The allowed values are:

- UNDEF (default)
- EXTD
- all values as defined in SRD_ConfigurationManagement

Note: The TL1-representation of the functional qualifier follows the following rules:

- alphanumeric characters or the special character '-' only
- special characters like '/' and '.' to be omitted.

9. qual – Circuit Pack Qualifier

Circuit Pack Qualifier as stored in the EEPROM on the circuit pack.

This parameter should be reported for a SlotAID, if the value of **holdst** is VALID or UNEXPECTED.

Type: value set.

Range: up to 7 characters.

Note: The TL1-representation of the functional qualifier follows the following rules:

- alphanumeric characters or the special character '-' only
- special characters like '/' and '.' to be omitted.

10. sln – Serial Number

Serial number as stored in the EEPROM on the circuit pack to identify each circuit pack and indicate the date and place of manufacture.

This parameter should be reported for a SlotAID, if the value of **holdst** is VALID or UNEXPECTED.

Type: Alphanumeric string.

Range: 12 characters.

11. ssn – Series Number

Series Number as stored in the EEPROM on the circuit pack.

This parameter should be reported for a SlotAID, if the value of **holdst** is VALID or UNEXPECTED.

Type: value set.

Range: up to 6 characters.

Note: A dash (-) is used instead of a colon (:) for the series number in TL1.

Example input/output

```
RTRV-EQPT:UNITE-NE:1-1-#-#-5:123456;  
UNITE-NE 00-11-03 08:00:00  
M 123456 COMPLD  
"1-1-#-#-5:actlname=OP2G5"  
"1-1-#-#-5:actlname=OP10"  
...  
"1-1-#-#-5:nvmname=OP2G5,nvmqual=13SR4,eqtpn=DEFAULT"  
"1-1-#-#-5:name=OP2G5,qual=13SR4,app=KFA12"  
"1-1-#-#-5:clei=SN49CRTBAB,eci=255694"  
"1-1-#-#-5:sln=00NB01002333,ssn=1-1"  
;
```

The following example shows the case when it is not possible to provision slot 5, because **actlname** is empty:

```
RTRV-EQPT:UNITE-NE:1-1-#-#-5:123456;  
UNITE-NE 00-11-03 08:00:00  
M 123456 COMPLD  
"1-1-#-#-5:actlname=\"\""  
...  
"1-1-#-#-5:nvmname=OP40,nvmqual=EXTD,eqtpn=DEFAULT"  
"1-1-#-#-5:name=\"\",qual=\"\",app=\"\""  
"1-1-#-#-5:clei=\"\",eci=\"\""  
"1-1-#-#-5:sln=\"\",ssn=\"\""
```

RTRV-EQPT (slot): Retrieve Equipment
(slot)

;

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command in the Error responses section. The error responses listed there also pertain to the RTRV-EQPT command.

Related TL1 messages

- [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#)
- [“ED-EQPT \(slot\): Edit equipment \(slot\)” \(5-109\)](#)
- [“DLT-EQPT \(slot\): Delete equipment \(slot\)” \(5-117\)](#)
- [“RTRV-STATE-EQPT \(slot\): Retrieve equipment state \(slot\)” \(5-125\)](#)
- [“RTRV-ACTLCP: Retrieve acceptable circuit pack list” \(5-35\).](#)

References GR-199-CORE



ENT-EQPT (slot): Enter equipment (slot)

The ENT-EQPT command pre-provisions a slot for a dedicated circuit pack.

The CTL can not be pre-provisioned. It is always auto-provisioned.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: No.

Input format Command Syntax: ENT-EQPT:*tid:aid:ctag:::[spec_block]*;

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
See definition of output parameter *aid* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).
3. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. nvmmname – Circuit Pack Name
See definition of output parameter *nvmmname* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).
2. nvmmqual – Circuit Pack Qualifier
See definition of output parameter *nvmmqual* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).
Option: If the parameter is omitted, then the special character '-' (i.e. the minus-sign, without the quotes) shall be used as default value.

Output format If the ENT-EQPT command completes successfully, then the following normal completion response is returned:

sid date time

ENT-EQPT (slot): Enter equipment (slot)

```
M  ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The command preprovisions a slot for a dedicated circuit pack. The following attributes of the slot entity is updated due to that operation:

1. *nvmname* as specified in the command input
2. *nvmqual* as specified in the command input.

The command is only allowed if the slot is not provisioned (*nvmname/nvmqual* = UNDEFINED/UNDEF).

The update is reported by means of an ED-EQPT notification for that slot.

Behavior of preprovisioning of multislot circuit packs

The attribute *actlname* of the neighbor slots which are also covered by a multislot circuit pack (e.g. OP40) shall be modified and set to empty (i.e. the output contains one row with *actlname*="", see also Example Input/output section of RTRV-EQPT(slot)).

The attributes *nvmname*, *nvmqual* of the neighbor slots which are also covered by a multislot circuit pack (e.g. OP40) shall be modified and set to *nvmname*, EXTD.

The update is reported by means of an ED-EQPT notification for those slots.

Behavior of preprovisioning on multislot circuit packs

The attribute *actname* of the neighbor slot which can not be used anymore by a multislot circuit pack (the physical slot of e.g. an OP40) shall be modified and all multislot CPs shall be removed.

The update is reported by means of an ED-EQPT notification for this slot.

ENT-EQPT (slot): Enter equipment (slot)

Update affected entities

The command creates in addition a set of entities of different types depending on the value of *nvmname* of command input as follows.

1. One instance of type circuit pack is created. This is reported by means of an ENT-EQPT notification for circuit pack.
2. Some instances of port STM-16 are created if *nvmname* of command equals **OP2G5** and attribute *istddflt* of the node equals **SDH**. This is reported by means of ENT-STM16 notification for port. The number of port instances to be created depends on the capabilities of the actual circuit pack.
3. Some instances of port OC-48 are created if *nvmname* of command equals **OP2G5** and attribute *istddflt* of the node equals **SONET**. This is reported by means of ENT-OC48 notification for port. The number of port instances to be created depends on the capabilities of the actual circuit pack.
4. One instance of port STM-64 is created if *nvmname* of command equals **OP10** and attribute *istddflt* of the node equals **SDH**. This is reported by means of ENT-STM64 notification for port.
5. One instance of port OC-192 is created if *nvmname* of command equals **OP10** and attribute *istddflt* of the node equals **SONET**. This is reported by means of ENT-OC192 notification for port.
6. One instance of port STM-256 is created if *nvmname* of command equals **OP40** and attribute *istddflt* of the node equals **SDH**. This is reported by means of ENT-STM256 notification for port.
7. One instance of port OC-768 is created if *nvmname* of command equals **OP40** and attribute *istddflt* of the node equals **SONET**. This is reported by means of ENT-OC768 notification for port.
8. 48, 192, 768 VC3 tributaries are created for each to the previously created SDH port according to the port rate. This is reported by means of ENT-VC3 notification for tributary.
9. 48, 192, 768 STS1 tributaries are created for each to the previously created SONET port according to the port rate. This is reported by means of ENT-STST1 notification for tributary.

ENT-EQPT (slot): Enter equipment (slot)

10. Two dcc channels entities are created (one per type section/dccr and one type line/dccm) for each previously created SDH/SONET port. This is reported by means of ENT-FECOM notification for dcc channel.
11. One instance of 1+1 equipment protection group of type 'EQPTSWFBR' is created if *nvmname* of command equals **XC320** and another **XC320** circuit pack exists already. This is reported by means of ENT-PROTNGRP notification for 1+1 equipment protection group. The initial protection state is reported by means of a protection switch notification for the 1+1 equipment protection group.

Update affected entities – GE1

The command creates in addition a set of entities of different types depending on the value of *nvmname* of command input as follows.

1. One instance of type circuit pack is created. This shall be reported by means of an ENT-EQPT notification for circuit pack.
2. Four instances of entity EPORT are created if *nvmname* of command equals **GE1**. This shall be reported by means of ENT-EPORT notification.
3. Four instances of entity VCG are created if *nvmname* of command equals **GE1**. This shall be reported by means of ENT-VCG notification.
4. 7 VC-4 tributaries are created for each to the previously created VCG if attribute *istddflt* of the node equals 'SDH'. This is reported by means of ENT-VCGTRIB notification.
5. 21 STS-1 tributaries shall be created for each to the previously created VCG if attribute *istddflt* of the node equals 'SONET'. This is reported by means of ENT-VCGTRIB notification.

ENT-EQPT (slot): Enter equipment (slot)

Update affected entities - Port Entities of OP622

In addition to the rules listed in ID 17111 the command shall create the following entities if nvname equals OP622:

- Some instances of port STM-4 are created if the attribute *istddflt* of the node equals 'SDH'. This shall be by means of ENT-STM4 notification for port. The number of port instances to be created depends on the capabilities of the actual circuit pack.
- Some instances of port OC-12 are created if the attribute *istddflt* of the node equals 'SONET'. This is reported by means of ENT-OC12 notification for port. The number of port instances to be created depends on the capabilities of the actual circuit pack.
- 12 VC3 tributaries are created for each of the previously created SDH ports. This is reported by means of ENT-VC3 notifications for tributary.
12 STS1 tributaries are created for each of the previously created SONET port. This is reported by means of ENT-STSI notifications for tributary.

Update affected entities - Port Entities of OP155

In addition to the rules listed in ID 17111 the command shall create the following entities if nvname equals OP155:

- Some instances of port STM-1 are created if the attribute *istddflt* of the node equals SDH. This is reported by means of ENT-STM1 notification for port. The number of port instances to be created depends on the capabilities of the actual circuit pack.
- Some instances of port OC-3 are created if the attribute *istddflt* of the node equals SONET. This is reported by means of ENT-OC3 notification for port. The number of port instances to be created depends on the capabilities of the actual circuit pack.
- 3 VC3 tributaries are created for each of the previously created SDH ports. This is reported by means of ENT-VC3 notifications for tributary.
- 3 STS1 tributaries are created for each of the previously created SONET port. This is reported by means of ENT-STSI notifications for tributary.

ENT-EQPT (slot): Enter equipment (slot)

Update affected entities - Port Entities of EP155

In addition to the rules listed in ID 17111 the command shall create the following entities if nvmmname equals EP155:

- 8 STM-1E port instances of the actual circuit pack shall be created. This shall be reported by means of ENT-STM1E notification for port.
- 1 VC4 tributary shall be created for each of the previously created SDH ports. This shall be reported by means of ENT-VC3 notifications for tributary.

Update affected entities - OPLB

The command shall create following entities:

- One instance of type circuit pack shall be created. This shall be reported by means of an ENT-EQPT notification for circuit pack.
- Some instances of type socket shall be created for each socket contained on the circuit pack one. This shall be reported by means of ENT-EQPT notifications for sockets.

Update affected entities - OP2G5D

The command shall create following entities:

- One instance of type circuit pack shall be created. This shall be reported by means of an ENT-EQPT notification for circuit pack.
- Some instances of type socket shall be created for each socket contained on the circuit pack one. This shall be reported by means of ENT-EQPT notifications for sockets.

Update affected entities - OP10D

The command shall create following entities:

- One instance of type circuit pack shall be created. This shall be reported by means of an ENT-EQPT notification for circuit pack.
- Some instances of type socket shall be created for each socket contained on the circuit pack one. This shall be reported by means of ENT-EQPT notifications for sockets.

Update affected entities - OP2G5 qualifier = PARENT

If the nvmmqual is equal PARENT for an circuit pack to be provisioned additional to rules described for an OP2G5 circuit pack following rules shall apply.

ENT-EQPT (slot): Enter equipment (slot)

The command shall create following entities:

- Some instances of type socket shall be created for each socket contained on the circuit pack one. This shall be reported by means of ENT-EQPT notifications for sockets.

Group notification for STS-1/AU-3 tributaries

For efficiency reasons the notifications for tributaries are sent out as a single notification (so-called group notification) using a range over the aid which depends on the port rate of the associated port, i.e. the Simple_STS1NumAID field in the STS1NumAID is set to:

1&&-<N> with N is maximal legal STS-1/AU-3 number.

Reference - AID range for group notification: See STS-1/AU-3 Tributaries AID w.r.t. range for legal STS-1/AU-3 number.

See STS-1/AU-3 Tributaries AID w.r.t. range for legal STS-1/AU-3 number.

Example: The AID field in a group notification for a tributaries related to port 1 for a OP10 pack in slot 1 looks like:

1-1-#-#-1-1-1&&-192.

Group notification for VCG tributaries

For efficiency reasons the notifications for VCG tributaries are sent out as a single notification (so-called group notification) using a range over the aid which depends on the used mapping of the associated VCG port, i.e. the Simple_VCGNumAID field in the VCGNumAID is set to:

- 1&&-<N> for sequential range
- 1&-4 .. &-<N> for non-sequential range.

with N is maximal legal VCG tributary number.

Reference - AID range for group notification: See VCG Tributaries AID w.r.t. range for legal VCG number and sequential/non-sequential aid range.

Example: The AID field in a group notification for a VCG tributaries related to VCG port 1 for a GE1 pack in slot 1 looks like:

1-1-#-#-1-v1-1&&-21 (for STS-1/VC-3 mapping) 1-1-#-#-1-v1-1&-4&-7&-10&-13&-16&-19 (for STS-3c/VC-4 mapping).

Example input/output

```
ENT-EQPT:UNITE-NE:1-1-#-#-1:123456:::nvmname=OP10,
nvmqual=1.5LR1;
```

ENT-EQPT (slot): Enter equipment (slot)

```

    UNITE-NE 98-01-01 08:00:00
M 123456 COMPLD
;

```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ENT-EQPT command.

Validation rule: Slot must not be provisioned

It should be check whether the slot is still auto or preprovisioned. Only a unprovisioned slot can be preprovisioned for a dedicated circuit pack. To preprovision a slot the *nvmname/nvmqual* shall be UNDEFINED/UNDEF (=unprovisioned).

Error code: IDNV - Input, Data Not Valid, Slot still provisioned

Validation rule: Check whether CP is acceptable

Check of the circuit pack type which is allowed for the slot.

Consistency shall be checked at two levels:

- between *actlname/actlqual* with *nvmname/nvmqual* at system level
- between actlname with nvmname at slot level.

Error code: EATN - Status, incorrect equipage, unrecognized CP for this slot.

Validation rule: Check whether system is maintenance condition

Preprovisioning is not allowed, when the system in maintenance condition (see [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#)).

Error code: SNVS - Status, Not in Valid State, maintenance condition

Validation rule: Reject Request for CTL slots

If *ctlw* or *ctlp* is specified as Simple_CTLSlotAID the command is rejected.

Error code: IENE - Input, Entity Not Exists

ENT-EQPT (slot): Enter equipment (slot)

Related TL1 messages

- [“ED-EQPT \(slot\): Edit equipment \(slot\)” \(5-109\)](#)
- [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#)
- [“DLT-EQPT \(slot\): Delete equipment \(slot\)” \(5-117\)](#)
- [“RTRV-ACTLCP: Retrieve acceptable circuit pack list” \(5-35\).](#)

References GR-199-CORE



ED-EQPT (slot): Edit equipment (slot)

The ED-EQPT command modifies the provisioning values associated with slot.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: No.

Input format Command Syntax: ED-EQPT:*tid:aid:ctag:::spec_block;*

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
See definition of output parameter *aid* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).
3. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. eqptpn – Equipment ASAP Profile Name
See definition of output parameter *eqptpn* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).
2. nvmmname – Circuit Pack Name
See definition of output parameter *nvmmname* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).
3. nvmmqual – Circuit Pack Qualifier
See definition of output parameter *nvmmqual* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).
Option: If this parameter is omitted but parameter *nvmmname* is specified in the command request, then the special character '-' (i.e. the minus-sign, without the quotes) shall be used as default value.

ED-EQPT (slot): Edit equipment (slot)

Output format	If the ED-EQPT command completes successfully, then the following normal completion response is returned: <pre> sid date time M ctag COMPLD ; </pre> The output parameters <i>sid</i>, <i>date</i>, <i>time</i>, and <i>ctag</i> included in the normal completion response are specified in the Output parameter section of “RTRV-HDR: Retrieve header” (5-8).
Detailed behavior description	The command shall modify the provisioned circuit pack for a specified slot. The spec block parameters of the slot entity as specified in the command input shall be updated due to that operation. The modification is reported by means of ED-EQPT notification for the slot.
Example input/output	<pre> ED-EQPT:UNITE-NE:1-1-#-#-1:123456:::nvmmname=OP10, nvmmqual=1.5LR1; UNITE-NE 98-01-01 08:00:00 M 123456 COMPLD ; </pre>
Error responses	Refer to the “RTRV-HDR: Retrieve header” (5-8) command Error responses section. The error responses listed there also apply to the ED-EQPT command. Validation rule: Check whether CP is acceptable Check of the circuit pack type which is allowed for the slot. Consistency shall be checked at two levels: • between <i>actlname/actlqual</i> with <i>nvmmname/nvmmqual</i> at system level • between <i>actlname</i> with <i>nvmmname</i> at slot level. Error code: EATN - Status, incorrect equipage, unrecognized CP for this slot. Validation rule: Check whether system is maintenance condition Preprovisioning is not allowed, when the system in maintenance condition (see “RTRV-EQPT (system): Retrieve Equipment (system)” (5-45)).

ED-EQPT (slot): Edit equipment (slot)

Error code: SNVS - Status, Not in Valid State, maintenance condition

Validation rule: Check for ASAP profile existence

When no ASAP profile with the name specified by *eqtpn* exists the following error is returned.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: Check exchangeability rules for optical packs

When the currently provisioned circuit pack is replaced by a new one by specifying the parameters *nvmname* and *nvmqual* the following exchangeability rules shall be checked whether all are fulfilled:

- the currently provisioned CP as well as the new one is an optical pack
- the holder state of the addressed slot is empty OR a pack with the specified *nvmname* and *nvmqual* is already plugged in
- the number of ports of both CPs is identical
- the transmission capacity of both CPs is identical.
- the current port configuration concerning forward error correction is supported by the new CP.

Error code: EATN - Status, incorrect equipage, unrecognized CP for this slot.

Validation rule: Check Exchangeability rules for XC Packs

When the currently provisioned circuit pack is replaced by a new one by specifying the parameters *nvmname* and *nvmqual* the following exchangeability rules shall be checked whether all are fulfilled:

- the currently provisioned CP as well as the new one is a cross-connect pack AND
- the holder state of the addressed slot is empty OR a pack with the specified *nvmname* and *nvmqual* is already plugged in.

Error code: EATN - Status, incorrect equipage, unrecognized CP for this slot.

Related TL1 messages

- [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#)
- [“DLT-EQPT \(slot\): Delete equipment \(slot\)” \(5-117\)](#)

ED-EQPT (slot): Edit equipment (slot)

- [“RTRV-STATE-EQPT \(slot\): Retrieve equipment state \(slot\)” \(5-125\)](#)
- [“RTRV-ACTLCP: Retrieve acceptable circuit pack list” \(5-35\)](#).

References GR-199-CORE



ED-EQPT notification

Output format The ED-EQPT notification uses the general format of a REPT DBCHG Report Database Change notification.

Syntax: ED-EQPT:*aid::spec_block*

Output parameters

Command parameters

1. aid – Access Identifier
See definition of output parameter *aid* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).

Spec block parameters

1. actlname – Acceptable Circuit Pack Name
See definition of output parameter *actlname* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).
2. nvmmname – Circuit Pack Name
See definition of output parameter *nvmmname* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).
3. nvmmqual – Circuit Pack Qualifier
See definition of output parameter *nvmmqual* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).
4. eqptpn – Equipment ASAP Profile Name
See definition of output parameter *eqptpn* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).
5. name – Circuit Pack Name
Circuit Pack Name as stored in the EEPROM of the replaceable unit.
Type: value set.
Range: up to 12 characters.
Default: empty string ""
The default is reported on CP plug-out or when the EEPROM is not readable.
Note: In TL1 output direction the quotes have to be escaped \"

6. qual – Circuit Pack Qualifier
Circuit Pack Qualifier as stored in the EEPROM of the replaceable unit.
Type: value set.
Range: up to 7 characters.
Default: empty string ""
The default is reported on CP plug-out or when the EEPROM is not readable.
Note: In TL1 output direction the quotes have to escaped \"
7. app – Apparatus Code
Apparatus Code as stored in the EEPROM of the replaceable unit.
Type: alphanumeric string.
Range: up to 9 characters.
Default: empty string ""
The default is reported on CP plug-out or when the EEPROM is not readable.
Note: In TL1 output direction the quotes have to escaped \"
8. ssn – Series Number
Series Number as stored in the EEPROM of the replaceable unit.
Type: value set.
Range: up to 6 characters.
Default: empty string ""
The default is reported on CP plug-out or when the EEPROM is not readable.
Note: In TL1 output direction the quotes have to escaped \"
Note: A dash (-) is used instead of a colon (:) for the series number in TL1.
9. clei – Common Language Equipment
Common Language Equipment as stored in the EEPROM of the replaceable unit.
Type: value set.
Range: 10 characters.
Default: empty string ""
The default is reported on CP plug-out or when the EEPROM is not readable.
Note: In TL1 output direction the quotes have to escaped \"

10. eci – Equipment Catalog Item
Equipment Catalog Item as stored in the EEPROM of the replaceable unit.
Type: value set.
Range: 6 digits.
Default: empty string ""
The default is reported on CP plug-out or when the EEPROM is not readable.
Note: In TL1 output direction the quotes have to escaped \"
11. sln – Serial Number
Serial number as stored in the EEPROM on the circuit pack to identify the replaceable unit and indicate the date and place of manufacture.
Type: Alphanumeric string.
Range: 12 characters.
Default: empty string ""
The default is reported on CP plug-out or when the EEPROM is not readable.
Note: In TL1 output direction the quotes have to escaped \"

Example output

The following examples shows the case after pre-provisioning of slot 1 for an OP2G5/13SR4 pack:

```
ED-EQPT:UNITE-NE:1-1-#-#-1:123456:::nvmname=OP2G5,
nvmqual=13SR4;
    UNITE-NE 00-11-14 08:00:00
M 123456 COMPLD
;
    UNITE-NE 00-11-14 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-14:ED-EQPT:1-1-#-#-1::
nvmname=OP2G5,nvmqual=13SR4"
;
```

The following examples shows a case after auto-provisioning of slot 1 with an OP2G5/13SR4 pack (note: it is possible that change of *nvmname*, *nvmqual* and change of inventory data is reported in two notifications):

```
    UNITE-NE 00-11-14 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-14:ED-EQPT:1-1-#-#-1::
```

```
nvmname=OP2G5,nvmqual=13SR4"
UNITE-NE 00-11-14 08:00:31
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-14:ED-EQPT:1-1-#-#-1::
name=OP2G5,qual=13SR4,app=KFA12,ssn=1-1,
clei=WMTBJDGAAA,eci=276912,sln=123456789012"
;
```

The following examples shows a case after plug-out of the
OP2G5/13SR4 pack from slot 1:

```
UNITE-NE 00-11-14 08:00:31
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-14:ED-EQPT:1-1-#-#-1::
name="",qual="",app="",ssn="",clei="",
eci="",sln=""
;
```

The following examples shows the case after auto-provisioning of an
OP40 into slot 4 and the effect on slot 1:

```
UNITE-NE 00-11-14 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-14:ED-EQPT:1-1-#-#-1::
nvmname=OP40,nvmqual=EXTD"
"TIME=08-00-12,DATE=00-11-14:ED-EQPT:1-1-#-#-1::
actlname=""
;
```



DLT-EQPT (slot): Delete equipment (slot)

The DLT-EQPT command deletes equipment that has been previously created with the ENT-EQPT command or via CP plug-in (auto-provisioning).

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: No.

Input format Command Syntax: DLT-EQPT:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).
The CTL cannot be de-provisioned.
3. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format If the DLT-EQPT command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description The command deletes a circuit pack for a specified slot.

DLT-EQPT (slot): Delete equipment (slot)

The deletion is reported by means of an DLT-EQPT notification for circuit pack.

For de-provisioning of a slot some conditions must be fulfilled.

Behavior of deprovisioning for multislot circuit packs

The attribute *actname* of the neighbor slots which were covered by the multislot circuit pack (e.g. OP40) shall be modified and set from empty to the list of accepted packs.

The attributes *nvmname*, *nvmqual* of the neighbor slots which were covered by the multislot circuit pack (e.g. OP40) are modified and set to UNDEFINED, UNDEF.

The update is reported by means of an ED-EQPT notification for this slot.

Behavior of deprovisioning on multislot circuit packs

The attribute *actname* of the neighbor slot which can now be used again by a multislot circuit pack (the physical slot of e.g. an OP) is modified and all multislot CPs shall be added.

The update is reported by means of an ED-EQPT notification for this slot.

Update affected entities

The command deletes in addition a set of entities of different types depending on the provisioned circuit pack

1. One instance of type circuit pack is deleted with attribute *aid*. This is reported by means of DLT-EQPT notification for the CP.
2. The instances of port STM-16 is deleted if *nvmname* of the addressed circuit pack equals *OP2G5* and the port attribute *istd* equals *SDH*. This is reported by means of DLT-STM16 notification of port. The number of port instances to be deleted depends on the capabilities of the actual circuit pack.
3. The instances of port OC-48 are deleted if *nvmname* of the addressed circuit pack equals *OP2G5* and the port attribute *istd* equals *SONET*. This is reported by means of DLT-OC48 notification of port. The number of port instances to be deleted depends on the capabilities of the actual circuit pack.
4. One instance of port STM-64 is deleted if *nvmname* of the addressed circuit pack equals *OP10* and the port attribute *istd* equals 'SDH'. This is reported by means of DLT-STM64 notification of port.

DLT-EQPT (slot): Delete equipment (slot)

5. One instances of port OC-192 is deleted if *nvmname* of the addressed circuit pack equals **OP10** and the port attribute *istd* equals **SONET**. This is reported by means of DLT-OC192 notification of port.
6. One instance of port STM-256 is deleted if *nvmname* of the addressed circuit pack equals **OP40** and the port attribute *istd* equals **SDH**. This is reported by means of DLT-STM256 notification of port.
7. One instances of port OC-768 is deleted if *nvmname* of the addressed circuit pack equals **OP40** and the port attribute *istd* equals **SONET**. This is reported by means of DLT-OC768 notification of port.
8. 48, 192, 768 VC3 tributaries are deleted for each existing SDH port. This is reported by means of DLT-VC3 notifications for tributary.
9. 48, 192, 768 STS1 tributaries are deleted for each existing SONET port. This is reported by means of DLT-STS1 notifications for tributary.
10. The dcc channel entities are deleted for each existing SDH/SONET port. This is reported by means of DLT-FECOM notification for dcc channel.
11. One instance of 1+1 equipment protection group is deleted if *nvmname* of the addressed circuit pack equals **XC320** and another XC320 circuit pack exists. This is reported by means of DLT-PROTNGRP notification for the 1+1 protection group.
12. The parameters *nvmname*, *nvmqual* of the slot will be set to UNDEFINED, UNDEF, which will be reported by an ED-EQPT notification for slot.

Update affected entities - GE1

In addition to the rules listed above the command deletes the following entities if *nvmname* equals GE1:

- all instances of the entity EPORT owned by this circuit pack are deleted. This is reported by means of DLT-EPORT notification
- all instances of the entity VCG owned by this circuit pack are deleted. This is reported by means of DLT-VCG notification.
- For each VCG to be deleted all tributaries owned by this VCG are deleted. This is reported by means of DLT-VCGTRIB notification.

DLT-EQPT (slot): Delete equipment (slot)

Update affected entities - Port Entities of OP622

In addition to the rules listed above the command deletes the following entities if *nvmname* equals OP622:

- 12 VC3 tributaries are deleted for each existing SDH ports. This is reported by means of DLT-VC3 notifications for tributary.
- 12 STS1 tributaries are deleted for each existing SONET port. This is reported by means of DLT-STS1 notifications for tributary.
- The instances of port STM-4 are deleted if the port attribute *istd* of the node equals 'SDH'. This is reported by means of DLT-STM4 notification for port. The number of port instances to be deleted depends on the capabilities of the actual circuit pack.
- The instances of port OC-12 are deleted if the port attribute *istd* of the node equals 'SONET'. This is reported by means of DLT-OC12 notification for port. The number of port instances to be deleted depends on the capabilities of the actual circuit pack.

Update affected entities - Port Entities of OP155

In addition to the rules listed above the command deletes the following entities if *nvmname* equals OP155:

- 3 VC3 tributaries are deleted for each existing SDH ports. This is reported by means of DLT-VC3 notifications for tributary.
- 3 STS1 tributaries are deleted for each existing SONET port. This is reported by means of DLT-STS1 notifications for tributary.
- The instances of port STM-1 are deleted if the port attribute *istd* of the node equals SDH. This will be reported by means of DLT-STM1 notification for port. The number of port instances to be deleted depends on the capabilities of the actual circuit pack.
- The instances of port OC-3 are deleted if the port attribute *istd* of the node equals SONET. This will be reported by means of DLT-OC3 notification for port. The number of port instances to be deleted depends on the capabilities of the actual circuit pack.

Update affected entities - GE1-VRTSW Entity

If *nvmname* is GE1 the command has the following additional side effects:

- If *vlantgmd* is 802.1tag the command shall delete the instance of entity *vrtsw*. This is notified by a DLT-VRTSW notification.

DLT-EQPT (slot): Delete equipment (slot)

Update affected entities - OPLB

The command shall delete in addition following entities:

- Some instances of type socket shall be deleted for each socket contained on the circuit pack one. This shall be reported by means of DLT-EQPT notifications for sockets.
- One instance of type circuit pack shall be deleted. This shall be reported by means of an DLT-EQPT notification for circuit pack.

If optical modules are provisioned when the OPLB circuit pack will be de provisioned implicit also the optical modules will be de provisioned at first. The actions described in the DLT-EQPT (socket) command for de provisioning of modules will be performed in this case.

Update affected entities - OP2G5D

The command shall delete in addition following entities:

- Some instances of type socket shall be deleted for each socket contained on the circuit pack one. This shall be reported by means of DLT-EQPT notifications for sockets.
- One instance of type circuit pack shall be deleted. This shall be reported by means of an DLT-EQPT notification for circuit pack.

If optical modules are provisioned when the OP2G5D circuit pack will be de provisioned implicit also the optical modules will be de provisioned at first. The actions described in the DLT-EQPT (socket) command for de provisioning of modules will be performed in this case.

Update affected entities - OP10D

The command shall delete in addition following entities:

- Some instances of type socket shall be deleted for each socket contained on the circuit pack one. This shall be reported by means of DLT-EQPT notifications for sockets.
- One instance of type circuit pack shall be deleted. This shall be reported by means of an DLT-EQPT notification for circuit pack.

If optical modules are provisioned when the OP10D circuit pack will be de provisioned implicit also the optical modules will be de provisioned at first. The actions described in the DLT-EQPT (socket) command for de provisioning of modules will be performed in this case.

DLT-EQPT (slot): Delete equipment (slot)

Update affected entities - OP2G5 Qualifier = PARENT

Additional to the rules described for circuit packs with nvmmname = OP2G5 following rules apply if the nvmmqual is equal PARENT.

The command shall delete in addition following entities:

- Some instances of type socket shall be deleted for each socket contained on the circuit pack one. This shall be reported by means of DLT-EQPT notifications for sockets.

Group notification for STS-1/AU-3 tributaries

Refer to Detailed behavior of the [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#) command for details on grouped notifications for STS1/AU3 tributaries.

Group notification for VCG tributaries

Refer to Detailed behavior of the [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#) command for details on grouped notifications for VCG tributaries.

Disabling of PM monitor

See Detailed behavior of the [“ED-STM16: Edit STM16 port” \(5-359\)](#) w.r.t PM impact as side of effect of port/tributary deletion.

Example input/output

```
DLT-EQPT:LT-UNITE:1-1-#-#-1:123456;
      LT-UNITE 00-11-14 08:00:00
M 123456 COMPLD
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the DLT-EQPT command.

Validation rule: No XC loopbacks allowed

Check of XC loopbacks involving the circuit pack to be removed.

Error code: SNVS - Status, Not in Valid State, XC loopbacks still exist

Validation rule: No protection groups allowed

Check of protection groups involving the circuit pack to be removed.

Error code: SNVS - Status, Not in Valid State, a protection group is existing

DLT-EQPT (slot): Delete equipment (slot)

Validation Rule: No transparent DCC connections

Check of used transparent DCC connections involving the circuit pack to be removed.

Error code: SNVS - Status, Not in Valid State, transparent DCC connections are still existing

Validation rule: Not used as timing reference

Check of that none of the ports of the involving circuit pack is used as timing reference

Error code: SNVS - Status, Not in Valid State, at least one port used as timing reference

Validation rule: Not used for OW

Check of that no connection to a OW port exists.

Error code: SNVS - Status, Not in Valid State, connection to OW port exists

Validation rule: CP must be plugged out

Check of that the involved circuit pack is plugged out.

Error code: SNVS - Status, Not in Valid State, the CP is not plugged out

Validation rule: Check whether system is maintenance condition

Preprovisioning is not allowed, when the system in maintenance condition (see [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#)).

Error code: SNVS - Status, Not in Valid State, maintenance condition

Validation rule: Reject Request for CTL slots

If *ctlw* or *ctlp* is specified as Simple_CTLSlotAID the command is rejected.

Error code: IENE - Input, Entity Not Exists

Validation rule: Check if related port are not in use by ONNS

If the provisioned circuit pack has ports with portClass=INNI or portClass=EDGE the following must be fulfilled: (1) No cross-connection may exist on any tributary of the port (2) portControl must be LOCKOUT.

DLT-EQPT (slot): Delete equipment (slot)

Error code: SNVS - Status, Not in Valid State, Port is still in use by ONNS

Related TL1 messages

- [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#)
- [“ED-EQPT \(slot\): Edit equipment \(slot\)” \(5-109\)](#)
- [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#)
- [“RTRV-STATE-EQPT \(slot\): Retrieve equipment state \(slot\)” \(5-125\)](#)
- [“ED-STATE-EQPT \(system\): Edit equipment state” \(5-42\)](#)

References GR-199-CORE



RTRV-STATE-EQPT (slot): Retrieve equipment state (slot)

The RTRV-STATE-EQPT command retrieves the state information for slots in the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
 Priority: 1
 Abortable: Yes.

Input format Command Syntax: RTRV-STATE-EQPT:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 See definition of input parameter *aid* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format If the RTRV-STATE-EQPT command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
  "aid:spec_block"
  ...
  ...
  "aid:spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

aid – Access Identifier

See definition of output parameter *aid* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).

Spec block parameters

1. holdst – Holder Status

Each provisionable slot has an attribute indicating its equipage state.

Type: alphanumeric value set

Range:

- EMPTY. The system uses the value “EMPTY” if no circuit pack is equipped in that slot.
- VALID. The system shall use the value “Valid” if a circuit pack is equipped in that slot as provisioned.
- UNEXPECTED. The system shall use the value “Unexpected” if a different circuit pack is equipped in that slot as provisioned or if the circuit pack is not acceptable for this slot.
- UNKNOWN. The system shall use the value “Unknown” if a circuit pack is equipped in that slot with non-readable functional type or illegal values for the functional type.

Default: EMPTY.

Detailed behavior description

The system retrieves the output parameters as described above.

Example input/output

```
RTRV-STATE-EQPT:UNITE-NE:1-1-#-#-2:123456;  
UNITE-NE 00-11-03 08:00:00  
M 123456 COMPLD  
"1-1-#-#-2:holdst=VALID"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-STATE-EQPT command.

Slot

TL1 messages - configuration management

RTRV-STATE-EQPT (slot): Retrieve
equipment state (slot)

Related TL1 messages

- [“ED-STATE-EQPT \(system\): Edit equipment state” \(5-42\)](#)
- [“ED-EQPT \(slot\): Edit equipment \(slot\)” \(5-109\)](#)
- [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#)

References GR-833-CORE



ED-STATE-EQPT (slot) notification

Output format The ED-STATE-EQPT notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-STATE-EQPT:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#).

Spec block parameters

1. *holdst* – Holder Status
See definition of output parameter *holdst* in [“RTRV-STATE-EQPT \(slot\): Retrieve equipment state \(slot\)” \(5-125\)](#).

Example output

```
UNITE-NE 00-11-14 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-14:ED-STATE-EQPT:
1-1-#-#-1::holdst=VALID"
;
```



INIT-EQPT (slot): Initialize equipment (slot)

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M4
 Priority: 1
 Abortable: No.

Input format Command Syntax: INIT-EQPT:*tid:aid:ctag*[::*spec_block*];

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 The AID of a slot.
 Type: AID.
 Range:
 - SlotAID
 - UnivSlotAID
 - XCSlotAID
 - CTLSlotAID.
 The keyword *usa11* is not allowed for Simple_UnivSlotAID
 The keyword *xca11* is not allowed for Simple_XCSlotAID
 The keyword *cta11* is not allowed for Simple_CTLSlotAID
 The keyword *a11* is not allowed for Simple_SlotAID
 The keyword *a11* is not allowed on bay/shelf level.
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. *resettype* – Reset Type
 With this parameter the type of the reset is selected. Full reset can be traffic affecting and controller reset is not traffic affecting.
 Type: alphanumeric value set.

Slot
INIT-EQPT (slot): Initialize equipment
(slot)

Range:

- FULL: Full reset
- CONTR: Controller reset.

Default: FULL.

Output format If the NE fully complies with the INIT-EQPT request, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

- **resettype=FULL**: The command resets the controller and all transmission devices of the circuit pack in the addressed slot.
- **resettype=CONTR**: The command resets only the controller of the circuit pack in the addressed slot and not the transmission devices.

The INIT-EQPT command does not generate a REPT DBCHG message. There are no unique state change notifications associated with the INIT-EQPT command. There are, however, all the state change notifications (operational state) associated with the subsequent restart of the circuit pack.

Update affected entities

These resets affect the operational state of the circuit pack. This change is reported by means of an ED-STATE-EQPT notification for the affected circuit pack. An exception is the reset for CTL pack. For this board no notification is created.

Example input/output The following shows an example of the INIT-EQPT command where the AID identifies the universal slot 7 in bay 1, shelf 1:

```
INIT-EQPT:LT-UNITE:1-1-#-#-7:123456:::resettype=CONTR;
LT-UNITE 00-11-16 08:00:00
M 123456 COMPLD
```

Slot

TL1 messages - configuration management

INIT-EQPT (slot): Initialize equipment
(slot)

;

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the INIT-EQPT command.

Related TL1 messages [“INIT-SYS: Initialize System” \(5-78\)](#)

References GR-833-CORE



Autonomous notifications

Circuit pack plug in

Autoprovisioning

If a circuit pack is plugged into an allowed slot, which is not provisioned to any circuit pack, this slot is auto-provisioned to this plugged-in pack. This change is reported by means of an ED-EQPT notification for this slot for the *nvmname*, *nvmqual* parameters and an ED-STATE-EQPT notification for the *holdst* parameter.

Unexpected, not acceptable, not recognizable CP handling

If an unexpected or not acceptable circuit pack or a circuit pack which inventory data can not be read is plugged into the slot only the holder status is changed and this is notified by an ED-STATE-EQPT notification.

For all these cases alarms will be sent out in addition.

Report of inventory data

In addition to the notifications above the system reports an ED-EQPT (slot) notification for the parameters *name*, *qual*, *app*, *ssn*, *clei*, *eci*, *sln*.

In case the inventory data can not be read the fields shall be reported as empty ("").

If circuit packs will be plugged in containing plugged in modules or fixed mounted modules implicit the socket entities will be updated and created according description of auto provisioning of modules.

Create CTL protection group- when plugging a second CTL

When plugging in a second CTL the system shall create one instance of 1+1 equipment protection group of type EQPTCTL

This shall be reported by means of ENT-PROTNGRP notification for 1+1 equipment protection group. The initial protection state shall be reported by means of a protection switch notification for the 1+1 equipment protection group.

Further autonomous notifications

For details on further autonomous notifications when auto-provisioning a slot refer to the detailed behavior of [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#) describing the side effects during pre-provisioning.

Circuit pack plug out

If a circuit pack is plugged out the holder state for this board will change. This change is reported by means of an ED-STATE-EQPT notification for the *holdst* parameter.

In addition to the notification above the system reports an ED-EQPT (slot) notification for the parameters *name*, *qual*, *app*, *ssn*, *clei*, *eci*, *sln*.

If circuit packs will be plugged out containing plugged in modules or fixed mounted modules implicit the socket entities will be updated according description of plug out of modules.

Change of functional type for neighbor slots

If a multislot circuit pack with *nvmname*=<XXX> is provisioned to slot n the parameters *nvmname*, *nvmqual* of each slots m to n-1 (n>m) change to <XXX>, EXTENDED and the parameter *actlname* is set to empty (i.e. the output contains one row with *actlname*="", see also Example Input/output section of ED-EQPT(slot) notification). This change is reported by means of ED-EQPT notification for slot m to n-1 for *nvmname*, *nvmqual*, *actlname* parameters.

If a circuit pack is provisioned and as side effect it is no longer possible to use one of the neighbor slot for a multislot CP, the parameter *actlname* for this slot is changed and all multislot CPs are removed. This change is reported by means of an ED-EQPT notification.

If a multislot circuit pack of slot n is deprovisioned the parameters *nvmname*, *nvmqual* of each slots m to n-1 (n>m) change to UNDEFINED, UNDEF and the parameters *actlname* changes to list of acceptable CPs. This change is reported by means of ED-EQPT notifications for slot m to n-1 for *nvmname*, *nvmqual*, *actlname* parameters.

If a circuit pack is deprovisioned and as side effect it becomes now possible to use one of the neighbor slot for a multislot CP, the parameter *actlname* for this slot is changed and all multislot CPs are added. This change is reported by means of an ED-EQPT notification.

System start-up with default DB

The system shall autonomously create all entities addressable by SlotAID when starting up with the default database. No notification is sent.

□

Socket

Overview

Purpose Circuit packs can contain sockets where modules can be plugged in. For unite in the current version Pluggable Interfaces mainly optical modules will be plugged in. A module with a pluggable interface will be only related to one port (e.g. a STM64 port). The relation is done in that way that a socket number n is related to a port number n of the same slot (e.g. port 1-1-#-#-1-sc3 is related to socket 1-1-#-#-1-3) The port functionality (and the related e.g. tributaries) is not available as long no module is provisioned by a provisioning command or by plugging in. This means the related entities will be only available if a module is provisioned. A socket behaves similar like a slot. That means there can be inventory data of the module read out, it can be (pre- or auto-) provisioned and also the acceptable type list for the socket is available. Also the rules how and when a module can be provisioned or de provisioned are similar.

Contents

RTRV-EQPT (Socket): Retrieve equipment	5-135
ENT-EQPT (Socket): Enter equipment	5-143
ENT-EQPT notification	5-146
ED-EQPT (Socket): Edit equipment	5-147
ED-EQPT notification	5-150
DLT-EQPT (Socket): Delete equipment	5-156
DLT-EQPT notification	5-161
RTRV-STATE-EQPT (Socket): Retrieve equipment state	5-162
ED-STATE-EQPT notification	5-165
Autonomous notifications	5-166



RTRV-EQPT (Socket): Retrieve equipment

The RTRV-EQPT command shall retrieve the provisioning information associated with socket.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
 Priority: 1
 Abortable: Yes.

Input format Command Syntax: RTRV-EQPT:*tid:aid:ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 The AID of a socket.
 Type: AID.
 Range: SocketAID. The keyword *usall* or *all* shall be allowed for Simple_UnivSlotAID. The keyword *scall* shall be allowed for Simple_SocketAID. The keyword *all* is not allowed on bay/shelf level.
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-EQPT command, the following output report is returned:

```

sid date time
M ctag COMPLD
  "aid[:spec_ block]"
  ... ..
  "aid[:spec_ block]"
;
```

RTRV-EQPT (Socket): Retrieve equipment

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

The output *actlname/actlqual* is a list of attribute pairs per socket and *nvmname/nvmqual* is an optional pair of attributes per socket.

1. aid – Access Identifier
The AID of a socket.
Type: AID.
Range: SocketAID. The keywords *all* / *usall* / *scall* shall are not allowed on any level.

Spec block parameters

1. actlname – Acceptable Module Name
This parameter shall be reported by itself together with actlmodqual. The line shall be repeated for all acceptable modules in the socket. This list specifies the modules which can be provisioned for that socket.
Type: value set.
Range: 12 characters.
2. actlqual – Acceptable Module Qualifier
This parameter shall be reported by itself together with actlmodname. The line shall be repeated for all acceptable modules in the socket. This list specifies the modules which can be provisioned for that socket.
Type: value set.
Range: 7 characters.
Note: The TL1-representation of the functional qualifier shall follow the rules as defined in SRD_ConfigurationManagement:
 - alphanumeric characters or the special character '-' only
 - special characters like '/' and '.' to be omitted
3. app - Apparatus Code
Apparatus Code as stored in the EEPROM. This parameter shall be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED and the data in the EEPROM is stored according to the Small EEPROM Format.
Type: alphanumeric string.
Range: up to 9 characters.

RTRV-EQPT (Socket): Retrieve equipment

4. ccode - Commercial Code
Commercial code + suffix as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED and the data in the EEPROM is stored according to the SFP EEPROM Format.
Type: numeric string.
Range: up to 12 digits.
5. clei – Common Language Equipment
Common Language Equipment as stored in the EEPROM on the module.
This parameter should be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED.
Type: value set.
Range: 10 characters.
6. datecde - Date Code
Vendor Date Code as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED and the data in the EEPROM is stored according to the SFP EEPROM Format.
Type: Text string.
Range: 8 characters.
7. eci – Equipment Catalog Item
Equipment Catalog Item as stored in the EEPROM on the module.
This parameter should be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED.
Type: value set.
Range: 6 digits.
8. eqtpn – Equipment ASAP Profile Name
The name of the current ASAP profile of type EQUIP-PROT on socket level.
Type: Alphanumeric string.
Range: up to 24 characters. A hyphen (-) is additionally allowed in the name.
Default: DEFAULT.

RTRV-EQPT (Socket): Retrieve equipment

9. name – Module Name
Circuit Pack Name as stored in the EEPROM on the module.
This parameter should be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED.
Type: value set.
Range: up to 12 characters.
10. nvmname – Provisioned Module Name
This parameter shall specify the name of the provisioned module of the socket. If no module is provisioned the default value is reported.
Type: value set.
Range: 12 character.
Default: UNDEFINED.
11. nvmqual – Provisioned Module Qualifier
This parameter shall specify the qualifier of the provisioned module of the slot. If no module is provisioned the default value is reported..
Type: value set.
Range: 7 characters.
Default: UNDEF.
Note: The TL1-representation of the functional qualifier shall follow the rules as defined in SRD_ConfigurationManagement:
 - alphanumeric characters or the special character '-' only
 - special characters like '/' and '.' to be omitted.
12. prodid - Product Line Id
Binary Compatibility + UNITE Serial Number Identifier as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED and the data in the EEPROM is stored according to the SFP EEPROM Format.
Type: Hexadecimal number.
Range: 5 bytes where each byte shall be represented as 2 hexadecimal digits.
13. qual – Module Qualifier
Circuit Pack Qualifier as stored in the EEPROM on the module.
This parameter should be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED.
Type: value set.
Range: up to 7 characters.

RTRV-EQPT (Socket): Retrieve equipment

Note: The TL1-representation of the functional qualifier shall follow the rules as defined in SRD_ConfigurationManagement:

- Alphanumeric characters or the special character '-' only
- Special characters like '/' and '.' to be omitted.

14. sln – Serial Number

Serial number as stored in the EEPROM on the module to identify each module and indicate the date and place of manufacture.

This parameter should be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED.

Type: Alphanumeric string

Range: 12 characters.

15. ssn – Series Number

Series Number as stored in the EEPROM on the module.

This parameter shall be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED and the data in the EEPROM is stored according to the Small EEPROM Format.

Type: value set.

Range: up to 6 characters.

Note: A dash (-) is used instead of a colon (:) for the series number in TL1.

16. vendorname - Vendor Name

Vendor Name as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED and the data in the EEPROM is stored according to the SFP EEPROM Format.

Type: Text string

Range: 16 characters.

17. vendoroui - Vendor Company Identifier

Vendor Company Identifier as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED and the data in the EEPROM is stored according to the SFP EEPROM Format.

Type: Hexadecimal number

Range: 3 bytes where each byte shall be represented as 2 hexadecimal digits.

RTRV-EQPT (Socket): Retrieve equipment

18. vendorpartno - Vendor Part Number
Vendor Part Number as stored in the EEPROM on the module.
This parameter shall be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED and the data in the EEPROM is stored according to the SFP EEPROM Format.
Type: Text string
Range: 16 characters.
19. vendorrevlvl - Vendor Revision Level
Vendor Revision Level as stored in the EEPROM on the module.
This parameter shall be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED and the data in the EEPROM is stored according to the SFP EEPROM Format.
Type: Text string.
Range: 4 characters.
20. vendorsln - Vendor Serial Number
Vendor Serial Number + WES Vendor Identifier as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the value of holdst is VALID or UNEXPECTED and the data in the EEPROM is stored according to the SFP EEPROM Format.
Type: Text string.
Range: 20 characters.

Detailed behavior description

Omit inventory data parameters if not accessible.

If the system cannot access inventory data related to the addressed socket, e.g. due to a missing or defect pack or a system-internal communication outage, the following parameters shall be omitted from the command response:

- *clei*
- *ccode*
- *eci*
- *name*
- *prodid*
- *qual*
- *sln*
- *ssn*

RTRV-EQPT (Socket): Retrieve equipment

- *vendorname*
- *vendoroui*
- *vendorpartno*
- *vendorrevlvl*
- *vendorsln.*

Reporting of inventory data for different module types

Different module types will support a different set of inventory data.

Modules with a LUCENT specific specification will support following parameters:

- *clei*
- *eci*
- *name*
- *qual*
- *sln*
- *ssn.*

For SFP modules following parameters will be supported:

- *ccode*
- *clei*
- *datecde*
- *name*
- *prodid*
- *qual*
- *vendorname*
- *vendoroui*
- *vendorpartno*
- *vendorrevlvl*
- *vendorsln.*

Reporting of inventory data based on defined format of EEPROM content

As long as the Inventory Data on the Optical Modules is accessible and readable, the parameters shall be reported as they are extracted from the EEPROM according to the format definitions. If the data in the EEPROM is not according to the defined format, then for each

RTRV-EQPT (Socket): Retrieve equipment

parameter the defined number of bytes is taken from the defined location in the EEPROM without any check of the extracted data.

Example input/output

The following example shows a normal response for RTRV-EQPT for one socket when a module is plugged in:

```
RTRV-EQPT:UNITE-NE:1-1-#-#-5-sc2:123456;
    UNITE- NE 00-11-03 08:00:00
M 123456 COMPLD
"1- 1-#-#-5-sc2:actlname=0M2G5,actlqual=13LR1"
"1- 1-#-#-5-sc2:actlname=0M2G5,actlqual=15LR1"
"1- 1-#-#-5-sc2:nvmname=0P2G5,nvmqual=13SR4,
eqtpn=DEFAULT"
"1- 1-#-#-5:name=0M2G5,qual=15LR1,comcde=109192278000,
clei=WM3ILPEDAA,eci=255694,sln=00NB01002333,ssn=1-1"
;
```

The following example shows a response if a module is not plugged into a socket:

```
RTRV-EQPT:UNITE-NE:1-1-#-#-5-sc2:123456;
    UNITE- NE 00-11-03 08:00:00
M 123456 COMPLD
"1- 1-#-#-5-sc2:actlname=0M2G5,actlqual=13LR1"
"1- 1-#-#-5-sc2:actlname=0M2G5,actlqual=15LR1"
"1- 1-#-#-5-sc2:nvmname=0P2G5,nvmqual=13SR4,
eqtpn=DEFAULT"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-EQPT command.



ENT-EQPT (Socket): Enter equipment

The ENT-EQPT command preprovisions a socket for a dedicated module.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
 Priority: 1
 Abortable: No.

Input format Command Syntax: ENT-EQPT:*tid:aid*:ctag::*[spec_block]*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 See definition of output parameter *aid* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. nvmmname – Provisioned Module Name
 See definition of output parameter *nvmmname* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
2. nvmmqual – Provisioned Module Qualifier
 See definition of output parameter *nvmmqual* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
 Option: If the parameter is omitted, then the special character '-' (i.e. the minus-sign, without the quotes) shall be used as default value.

Output format If the ENT-EQPT command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
```

ENT-EQPT (Socket): Enter equipment

;

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The command shall preprovision a socket for a dedicated module.

The following attributes of the socket entity shall be updated due to that operation:

- ***nvmname*** as specified in the command input
- ***nvmqual*** as specified in the command input.

The command is only allowed if the socket is unprovisioned (*nvmname*/*nvmqual* = UNDEFINED/UNDEF).

The update shall be reported by means of an ED-EQPT notification for that socket.

Since the creation of the module is not reported no ENT-EQPT notification for a module entity will be reported.

Group notification for STS-1/AU-3 tributaries

For efficiency reasons the notifications for tributaries shall be sent out as a single notification (so-called group notification) using a range over the aid which depends on the port rate of the associated port, i.e. the Simple_STS1NumAID field in the STS1NumAID is set to:

- 1&&-<N>

with N is maximal legal STS-1/AU-3 number.

See STS-1/AU-3 Tributaries AID w.r.t. range for legal STS-1/AU-3 number.

Example:

The AID field in a group notification for a tributaries related to port 1 for a OP10 pack in slot 1 looks like: 1-1-#-#-1-1-1&&-192.

Example input/output

This example shows an ENT-EQPT command for pre provisioning of a socket:

```
ENT-EQPT:UNITE-NE:1-1-#-#-5-sc2:123456:::nvmname=OM2G5,
nvmqual=13LR1;
    UNITE-NE 98-01-01 08:00:00
M 123456 COMPLD
```

ENT-EQPT (Socket): Enter equipment

;

Error responses Refer to the RTRV-HDR command Error responses section. The error responses listed there also apply to the ENT-EQPT command.

Validation rule: Socket must not be provisioned

It should be check wether the socket is still auto or preprovisioned. Only a unprovisioned slot can be preprovisioned for a dedicated module. To preprovision a socket the nvmmname/nvmqual shall be UNDEFINED/UNDEF (=unprovisioned).

Error code: IDNV - Input, Data Not Valid, Socket still provisioned

Validation rule: Check whether module is acceptable

Check of the module type which is allowed for the socket. Consistency between actlname/actlqual with nvmmname/nvmqual shall be checked.

Error code: EATN - Status, incorrect equipage, unrecognized Module for this socket.

Validation rule: Check whether system is maintenance condition

Preprovisioning shall not be allowed, when the system in maintenance condition. (See [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\).](#))

Error code: SNVS - Status, Not in Valid State, maintenance condition

Related TL1 messages

- [“DLT-EQPT \(Socket\): Delete equipment” \(5-156\)](#)
- [“ED-EQPT \(Socket\): Edit equipment” \(5-147\)](#)
- [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#)

References GR-199-CORE



ENT-EQPT notification

Output format The ENT-EQPT notification uses the general format of a REPT DBCHG Report Database Change notification.

Syntax: ENT-EQPT:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of input parameter *aid* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).

Spec block parameters

1. *eqptpn* – Equipment ASAP Profile Name
See definition of output parameter *eqptpn* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
2. *nvmname* – Provisioned Module Name
See definition of output parameter *nvmname* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
3. *nvmqual* – Provisioned Module Qualifier
See definition of output parameter *nvmqual* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).

Example output The following examples shows the case after pre-provisioning of slot 5 socket 2:

```
A 001 REPT DBCHG
    "TIME=08-00-12,DATE=00-11-14:ENT-EQPT:1-1-#-#-5-
    sc2::nvmname=0M2G5,nvmqual=15LR1,eqptpn=PROFILE1"
;
```



ED-EQPT (Socket): Edit equipment

The ED-EQPT command shall modify the provisioning values associated with socket.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: no.

Input format Command Syntax: ED-EQPT:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
See definition of output parameter *aid* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
3. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. eqptpn – Equipment ASAP Profile Name
See definition of output parameter *eqptpn* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
2. nvmmname – Provisioned Module Name
See definition of output parameter *nvmmname* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
3. nvmmqual - VLAN Tagging Mode
See definition of output parameter *nvmmqual* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
Option: If this parameter is omitted but parameter *nvmmname* is specified in the command request, then the special character '-' (i.e. the minus-sign, without the quotes) shall be used as default value.

ED-EQPT (Socket): Edit equipment

Output format	If the ED-EQPT command completes successfully, then the following normal completion response is returned: <pre> sid date time M ctag COMPLD ; </pre> The output parameters <i>sid</i>, <i>date</i>, <i>time</i>, and <i>ctag</i> included in the normal completion response are specified in the Output parameter section of “RTRV-HDR: Retrieve header” (5-8).
Detailed behavior description	The command modifies the provisioned module for a specified socket. The spec block operation. The modification shall be reported by means of ED-EQPT notification for the slot.
Example input/output	This example shows an ED-EQPT command which reprovisions the socket and assigns a new ASAP: <pre> ED-EQPT:UNITE-NE:1-1-#-#-5-sc2:123456:::nvmname=0M2G5, nvmqual=15LR1,eqtpn=PROFILE1; UNITE-NE 98-01-01 08:00:00 M 123456 COMPLD ; </pre>
Error responses	Refer to the “RTRV-HDR: Retrieve header” (5-8) command Error responses section. The error responses listed there also apply to the ED-EQPT command. Validation rule: Check whether module is acceptable Check of the module type which is allowed for the socket. Consistency between actlname/actlqual list with nvmname/nvmqual shall be checked. Error code: EATN - Status, incorrect equipage, unrecognized module for this socket Validation rule: Check exchangeability rules for optical modules When the currently provisioned optical module is replaced by a new one by specifying the parameters <i>nvmname</i> and <i>nvmqual</i> the

ED-EQPT (Socket): Edit equipment

following exchangeability rules shall be checked whether all are fulfilled:

- the currently provisioned module as well as the new one is an optical module
- the currently provisioned module as well as the new one is an optical module - the holder state of the addressed socket is empty OR a module with the specified *nvmname* and *nvmqual* is already plugged in.
- the transmission capacity of both modules is identical.

Errorcode: EATN - Status, incorrect equipage, unrecognized module for this socket

Validation rule: Check whether system is in maintenance condition

Preprovisioning shall not be allowed, when the system is in maintenance condition. (See [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#).)

Error code: SNVS - Status, Not in Valid State, maintenance condition

Validation rule: Check for ASAP profile existence

When no ASAP profile with the name specified by eqtpn exists the following error shall be returned.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Related TL1 messages

- [“DLT-EQPT \(Socket\): Delete equipment” \(5-156\)](#)
- [“ENT-EQPT \(Socket\): Enter equipment” \(5-143\)](#)
- [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#)
- [“RTRV-STATE-EQPT \(Socket\): Retrieve equipment state” \(5-162\)](#)

References GR-199-CORE

ED-EQPT notification

Output format The ED-EQPT notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-EQPT:*aid::spec_block*

Output parameters

Command parameters

1. aid – Access Identifier
See definition of input parameter *aid* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).

Spec block parameters

1. app - Apparatus Code
Apparatus Code as stored in the EEPROM. This parameter shall be reported for a SocketAID, if the data in the EEPROM is stored according to the Small EEPROM Format.
Type: alphanumeric string
Range: up to 9 characters.
Default: empty string "". The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to escaped \"\".
2. ccode - Commercial Code
Commercial code + suffix as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the data in the EEPROM is stored according to the SFP EEPROM Format.
Type: alphanumeric string
Range: up to 12 digits
Default: empty string "". The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to escaped \"\".

3. clei – Common Language Equipment
Common Language Equipment as stored in the EEPROM of the module.
Type: value set.
Range: 10 characters.
Default: empty string "".
The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to escaped \"
4. datecde - Date Code
Vendor Date Code as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the data in the EEPROM is stored according to the SFP EEPROM Format.
Type: Text string.
Range: 8 characters.
Default: empty string "".
The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to escaped \"
5. eci – Equipment Catalog Item
Equipment Catalog Item as stored in the EEPROM of the module.
Type: value set
Range: 6 digits.
Default: empty string "".
The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to escaped \"
6. eqptpn – Equipment ASAP Profile Name
See definition of output parameter *eqptpn* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
7. name – Module Name
Module Name as stored in the EEPROM of the module.
Type: value set.
Range: up to 12 characters.
Default: empty string "".
The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to escaped \"

8. **nvmname** – Provisioned Module Name
See definition of output parameter **nvmname** in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
9. **nvmqual** – Provisioned Module Qualifier
See definition of output parameter **nvmqual** in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
10. **prodid** - Product Line Id
Binary Compatibility + UNITE Serial Number Identifier as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the data in the EEPROM is stored according to the SFP EEPROM Format.
Type: Hexadecimal Number
Range: 5 bytes where each byte shall be represented as 2 hexadecimal digits.
Default: empty string "".
The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to be escaped \".
11. **qual** – Module Qualifier
Module Qualifier as stored in the EEPROM of the module.
Type: value set.
Range: up to 7 characters.
Default: empty string "".
The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to be escaped \".
12. **sln** – Serial Number
Serial number as stored in the EEPROM on the module to identify the module and indicate the date and place of manufacture.
Type: alphanumeric string.
Range: 12 characters.
Default: empty string "".
The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to be escaped \".

13. **ssn – Series Number**
Series Number as stored in the EEPROM of the module.
Type: value set.
Range: up to 6 characters.
Default: empty string "".
The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to be escaped \".
Note: A dash (-) is used instead of a colon (:) for the series number in TL1.
14. **vendorname - Vendor Name**
Vendor Name as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the data in the EEPROM is stored according to the SFP EEPROM Format.
Type: Text string
Range: 16 characters
Default: empty string ""
The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to be escaped \".
15. **Vendor Company Identifier**
Vendor Company Identifier as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the data in the EEPROM is stored according to the SFP EEPROM Format.
Type: Hexadecimal number
Range: 3 bytes where each byte shall be represented as 2 hexadecimal digits.
Default: empty string ""
The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to be escaped \".
16. **vendorpartno - Vendor Part Number**
Vendor Part Number as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the data in the EEPROM is stored according to the SFP EEPROM Format.
Type: Text string

Range: 16 characters

Default: empty string ""

The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to be escaped \"

17. vendorrevlvl - Vendor Revision Level

Vendor Revision Level as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the data in the EEPROM is stored according to the SFP EEPROM Format.

Type: Text string

Range: 4 characters

Default: empty string ""

The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to be escaped \"

18. vendorsln - Vendor Serial Number

Vendor Serial Number + WES Vendor Identifier as stored in the EEPROM on the module. This parameter shall be reported for a SocketAID, if the data in the EEPROM is stored according to the SFP EEPROM Format.

Type: Text string

Range: 20 characters

Default: empty string ""

The default is reported on module plug-out or when the EEPROM is not readable. Note: In TL1 output direction the quotes have to be escaped \"

Example output This example shows the ED-EQPT notification after reprovisioning of a socket:

```
UNITE-NE 00-11-14 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-14:ED-EQPT:1-1-#-#-5-
sc2::nvmname=OM2G5,nvmqual=15LR1,eqtpn=PROFILE1"
;
```

This example shows the ED-EQPT notification reporting the inventory data after plugging in a modul:

```
UNITE-NE 00-11-14 08:00:30
A 001 REPT DBCHG
```

```
"TIME=08-00-12,DATE=00-11-14:ED-EQPT:1-1-#-#-5-sc2::  
name=0M2G5,qual=15LR1,ccode=109192278000,  
clei=WM3ILPEDAA,eci=255694,sln=00NB01002333,ssn=1-1"  
;
```

This example shows the ED-EQPT notification reporting the not readable inventory data after plug out of a module:

```
UNITE-NE 00-11-14 08:00:30  
A 001 REPT DBCHG  
"TIME=08-00-12,DATE=00-11-14:ED-EQPT:1-1-#-#-5-sc2::  
name=\"\",qual=\"\",comcde=\"\",clei=\"\",eci=\"\",  
sln=\"\",ssn=\"\"  
;
```



DLT-EQPT (Socket): Delete equipment

Output format The DLT-EQPT command shall delete module that has been previously created with the ENT-EQPT command or via module plug-in (autoprovisioning).

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: no.

Input format Command Syntax: DLT-EQPT:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
3. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format If the DLT-EQPT command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section for the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command.

Detailed behaviour description The command shall delete a module for a specified socket. Since the creation of the module is not reported no DLT-EQPT notification for module will be reported.

Update affected entities

The command updates / deletes in addition a set of entities of different types depending on the provisioned optical module:

1. 3, 12, 48, 192 VC3 tributaries shall be deleted for each existing SDH port. This shall be reported by means of DLT-VC3 notifications for tributary.
2. 3, 12, 48, 192 STS1 tributaries shall be deleted for each existing SONET port. This shall be reported by means of DLT-STS1 notifications for tributary.
3. The dcc channel entities shall be deleted for each existing SDH/SONET port. This shall be reported by means of DLT-FECOM notification for dcc channel.
4. One instance of port STM-1 shall be deleted if *nvmname* of the addressed optical module equals **OM155** and the port attribute *istd* equals SDH. This shall be reported by means of DLT-STM1 notification of port.
5. One instances of port OC-3 shall be deleted if *nvmname* of the addressed optical module equals OM155 and the port attribute *istd* equals SONET. This shall be reported by means of DLT-OC3 notification of port.
6. One instance of port STM-4 shall be deleted if *nvmname* of the addressed optical module equals OM622 and the port attribute *istd* equals SDH. This shall be reported by means of DLT-STM4 notification of port.
7. One instances of port OC-12 shall be deleted if *nvmname* of the addressed optical module equals OM622 and the port attribute *istd* equals SONET. This shall be reported by means of DLT-OC12 notification of port.
8. One instance of port STM-16 shall be deleted if *nvmname* of the addressed optical module equals 'OM2G5' and the port attribute *istd* equals 'SDH'. This shall be reported by means of DLT-STM16 notification of port.
9. One instances of port OC-48 shall be deleted if *nvmname* of the addressed optical module optical equals OM2G5 and the port attribute *istd* equals SONET. This shall be reported by means of DLT-OC48 notification of port.

DLT-EQPT (Socket): Delete equipment

10. One instance of port STM-64 shall be deleted if if *nvmname* of the addressed optical module equals OM10 and the port attribute *istd* equals SDH. This shall be reported by means of DLT-STM64 notification of port.
11. One instances of port OC-192 shall be deleted if *nvmname* of the addressed optical module equals OM10 and the port attribute *istd* equals SONET. This shall be reported by means of DLT-OC192 notification of port.
12. The parameters *nvmname*, *nvmqual* of the slot will be set to UNDEFINED, UNDEF, which will be reported by an ED-EQPT notification for slot.

Group notification for STS-1/AU-3 tributaries

Refer to the Detailed behavior of the [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#) command for details on grouped notifications for STS1/AU3 tributaries.

Disabling of PM monitor

See Detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#) w.r.t PM impact as side of effect of port/tributary deletion.

Example input/output

This example shows a DLT-EQPT command de provisioning a socket:

```
DLT-EQPT:UNITE-NE:1-1-#-#-5-sc2:123456;
    UNITE-NE 98-01-01 08:00:00
M 123456 COMPLD
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the DLT-EQPT command.

Validation rule: No cross-connections allowed

Check of cross-connections involving the module to be removed.

Error code: SNVS - Status, Not in Valid State,
cross-connections are still existing

Validation rule: No XC loopbacks allowed

Check of XC loopbacks involving the module to be removed.

Error code: SNVS - Status, Not in Valid State, XC loopbacks
still exist

DLT-EQPT (Socket): Delete equipment

Validation rule: No facility loopbacks allowed

Check of facility loopbacks involving the module to be removed.

Error code: SNVS - Status, Not in Valid State, facility loopbacks still exist

Validation rule: No protection groups allowed

Check of protection groups involving the module to be removed.

Error code: SNVS - Status, Not in Valid State, protection group still exist

Validation rule: No transparent DCC connections

Check of used transparent DCC connections involving the module to be removed.

Error code: SNVS - Status, Not in Valid State, transparent DCC connections are still existing

Validation rule: Not used as timing reference

Check of that none of the ports of the involving module is used as timing reference.

Error code: SNVS - Status, Not in Valid State, at least one port used as timing reference

Validation rule: Not used for OW

Check of that no connection to a OW port exists.

Error code: SNVS - Status, Not in Valid State, connection to OW port exists

Validation rule: module must be plugged out

Check of that the involved module is plugged out.

Error code: SNVS - Status, Not in Valid State, the Module is not plugged out

Validation rule: Check whether system is in maintenance condition

Deprovisioning shall not be allowed, when the system is in maintenance condition. (See [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\).](#))

Error code: SNVS - Status, Not in Valid State, maintenance condition

DLT-EQPT (Socket): Delete equipment

Validation rule: Check if related port are not in use by ONNS

If the provisioned module has ports with *portClass*=INNI or *portClass*=EDGE the following must be fulfilled:

- No cross-connection may exist on any tributary of the port
- *portControl* must be LOCKOUT.

Error Code: SNVS - Status, Not in Valid State, Port is still in use by ONNS

Validation rule: No test access session

De-provisioning shall not be allowed if one or more tributaries on the port related to the socket are used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, Tributary used in test access session

Related TL1 messages

- [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#)
- [“ED-EQPT \(Socket\): Edit equipment” \(5-147\)](#)
- [“ENT-EQPT \(Socket\): Enter equipment” \(5-143\)](#)
- [“RTRV-STATE-EQPT \(Socket\): Retrieve equipment state” \(5-162\)](#)



DLT-EQPT notification

Output format The DLT-EQPT notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Command Syntax: DLT-EQPT:*aid*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).

Example output This example shows a DLT-EQPT notification reporting the deletion of a socket:

```
UNITE-NE 00-11-14 08:00:30
A 001 REPT DBCHG
  "TIME=08-00-12,DATE=00-11-14:DLT-EQPT:1-1-#-#-5-sc2"
;
```



RTRV-STATE-EQPT (Socket): Retrieve equipment state

The RTRV-STATE-EQPT command shall retrieve the state information for sockets in the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-STATE-EQPT:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 See definition of input parameter *aid* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format If the RTRV-STATE-EQPT command completes successfully, then the following normal completion response shall be returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_ block]"
... ..
  "aid[:spec_ block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

RTRV-STATE-EQPT (Socket): Retrieve equipment state

Output parameters

Command Parameter

1. aid – Access Identifier
See definition of output parameter aid in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).

Spec block parameters

1. holdst – Holder Status
Each provisionable socket shall have an attribute indicating its equipage state.
Type: alphanumeric value set.
Range:
 - EMPTY, the system shall use the value “EMPTY” if no module is equipped in that socket.
 - VALID, the system shall use the value “Valid” if a module is equipped in that socket as provisioned.
 - UNEXPECTED, the system shall use the value “Unexpected” if a different module is equipped in that socket as provisioned or if the module is not acceptable for this socket.
 - UNKNOWN, the system shall use the value “Unknown” if a module is equipped in that socket with non-readable functional type or illegal values for the functional type.
 For further details w.r.t. state transitions for holder status - see SRD_ConfigurationManagement.
Default: EMPTY.

Detailed behavior description

The system shall retrieve the output parameters as described above.

Example input/output

This example shows a RTRV-STATE-EQPT command for a socket:

```
RTRV-STATE-EQPT:UNITE- NE:1-1-#-#-5-sc2:123456;
  UNITE- NE 00-11-03 08:00:00
M 123456 COMPLD
  "1- 1-#-#-5-sc2:holdst=VALID"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-STATE-EQPT command.

Socket

TL1 messages - configuration management

RTRV-STATE-EQPT (Socket): Retrieve
equipment state

Related TL1 messages

- [“ED-EQPT \(CP\): Edit equipment \(circuit pack\)” \(5-177\)](#)
- [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#)

References GR-833-CORE



ED-STATE-EQPT notification

Output format The ED-STATE-EQPT notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-STATE-EQPT:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-EQPT \(Socket\): Retrieve equipment” \(5-135\)](#).

Spec block parameters

1. *holdst* – Holder Status
See definition of output parameter *holdst* in [“RTRV-STATE-EQPT \(Socket\): Retrieve equipment state” \(5-162\)](#).

Example output This example shows an ED-STATE-EQPT notification reporting a plug out of a module from the socket:

```
UNITE-NE 00-11-14 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-14:ED-STATE-EQPT:1-1-#-#-5-
sc2::holdst=EMPTY"
;
```



Autonomous notifications

Module plug in

Auto provisioning

If a module will be plugged into a not provisioned socket the socket will be auto provisioned to the plugged in module if the plugged in module type matches the acceptable type list of the socket. This shall be reported by means of the ED-EQPT (socket) notification. In addition also all entities will be created and updated as described in the detailed behaviour of the ENT-EQPT (socket) command. The update of the holder status of the socket will be reported by means of the ED-STATE-EQPT (socket) notification.

Unexpected, not acceptable, not recognizeable module handling

If an unexpected or not acceptable module or a module whichs inventory data can not be read is plugged into the socket only the holder status is changed and this is notified by an ED-STATE-EQPT(socket) notification. For all these cases alarms will be sent out in addition , either Optical Module Type Mismatch or Optical Module EPROM Access Fail.

Report of inventory data

In addition to the notifications above the system shall report an ED-EQPT (socket) notification for the parameters *name*, *qual*, *ssn*, *clei*, *comcde*, *eci*, *sln*. In case the inventory data can not be read the fields shall be reported as empty ("").

Auto provisioning of CPs with plugged in modules

If a circuit pack is auto provisioned which contains already plugged in modules or fixed installed modules or an already provisioned circuit pack will be plugged in where the modules are not provisioned but already plugged in or fixed mounted then is the behaviour the same as the module will be auto provisioned by plugging in a module into a socket of the circuit pack. It can be seen as two independent actions, which will be performed one after the other: (auto) provisioning of the circuit pack with following auto provisioning of modules.

Module plug out

If a module is plugged out the holder state for this socket will change. This change shall be reported by means of an ED-STATE-EQPT (socket) notification for the holdst parameter. In addition to the notification above the system shall report an ED-EQPT (socket)

notification for the parameters *name*, *qual*, *comcde*, *ssn*, *clei*, *eci*, *sln*, *ssn*, *vendorname*, *vendoroui*, *vendorpartno*, *vendorrevlvl*, *vendorsln* with the defined default value (empty string ""). The parameter set in the ED-EQPT (socket) Notification depends on the EEPROM format of the Optical Module which is plugged out..

Circuit pack plug out with plugged in modules

If a circuit pack will be plugged out with plugged in modules or with fixed mounted modules the system behaves like two independent actions, which will be performed one after the other: plug out of the plugged in or fixed mounted modules and plug out of the circuit pack. Regarding modules notifications will be sent as described for module plug out.



Circuit pack

Overview

Purpose This section includes the circuit pack level configuration messages.

Contents

RTRV-EQPT (CP): Retrieve equipment (circuit pack)	5-169
ENT-EQPT notification	5-176
ED-EQPT (CP): Edit equipment (circuit pack)	5-177
ED-EQPT (cp) notification	5-181
DLT-EQPT notification	5-182
RTRV-STATE-EQPT (CP): Retrieve equipment state (circuit pack)	5-184
ED-STATE-EQPT notification	5-187
Autonomous notifications	5-188



RTRV-EQPT (CP): Retrieve equipment (circuit pack)

The RTRV-EQPT command retrieves the provisioning information associated with a circuit pack. The RTRV-EQPT command retrieves the inventory information associated with other replaceable units.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-EQPT:*tid:aid:ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 The AID of a circuit pack, the backplane or another replaceable unit (e.g. user panel or fan unit).
 Type: AID
 Range:
 - CpAID ::= UnivSlotAID-cp for universal circuit packs
 - CpAID ::= XCSlotAID-cp for cross-connect circuit packs
 - CpAID ::= CTLSlotAID-cp for controller circuit packs
 - CpAID ::= SlotAID-cp for any circuit pack
 The keyword `usa11` is allowed for Simple_UnivSlotAID.
 The keyword `xca11` is allowed for Simple_XCSlotAID.
 The keyword `cta11` is allowed for Simple_CTLSlotAID.
 The keyword `a11` is allowed for Simple_SlotAID
 - BackplaneAID for backplane. The keyword `a11` is not allowed for the backplane AID.
 - UserPanelAID for user panel. The keyword `a11` is not allowed for the user panel AID.
 - FanAID for fan. The keyword `fana11` is not allowed for FanAID.

- TimingInterfaceAID for TI Interface board. The keyword `tia11` is allowed for TimingInterfaceAID.
- CiCtlAID for CI-CTL Interface board. The keyword `a11` is not allowed for the CiCtl AID
- PowerAID for power interface The keyword `pia11` is allowed for PowerAID.
- EciAID for Electrical Connector interface The keyword `ecia11` shall be allowed for EciAID.

The keyword `a11` is not allowed on bay/shelf level.

Refer to the AID syntax description.

3. `ctag` – Correlation Tag

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-EQPT command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
  ...
  ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

1. `aid` – Access Identifier

The AID of a circuit pack, the backplane or another replaceable unit (e.g. user panel or fan unit).

Type: AID

Range:

- CpAID ::= UnivSlotAID-cp for universal circuit packs
- CpAID ::= XCSlotAID-cp for cross-connect circuit packs
- CpAID ::= CTLSlotAID-cp for controller circuit packs
- CpAID ::= SlotAID-cp for any circuit pack

The keyword `usall` is allowed for Simple_UnivSlotAID.
The keyword `xcall` is allowed for Simple_XCSlotAID.
The keyword `ctla11` is allowed for Simple_CTLSlotAID.
The keyword `a11` is allowed for Simple_SlotAID

- BackplaneAID for backplane. The keyword `a11` is not allowed for the backplane AID.
- UserPanelAID for user panel. The keyword `a11` is not allowed for the user panel AID.
- FanAID for fan. The keyword `fanall` is not allowed for FanAID.
- TimingInterfaceAID for TI Interface board. The keyword `tia11` is allowed for TimingInterfaceAID.
- CiCtlAID for CI-CTL Interface board. The keyword `a11` is not allowed for the CiCtl AID
- PowerAID for power interface The keyword `pia11` is allowed for PowerAID.
- EciAID for Electrical Connector interface The keyword `ecia11` shall be allowed for EciAID.

Refer to the AID syntax description.

Spec block parameters

1. **name** – Circuit Pack Name

Circuit Pack Name as stored in the EEPROM of the replaceable unit.

This parameter should be reported for the AID for the backplane, AID for the user panel , AID for CI-CTL, AID for TI-Interface, AID for the fan, AID for power interface, AID for ECI, if equipped and supported.

This parameter is not reported for a CpAID.

Type: value set.

Range: up to 12 characters.

2. **qual** – Circuit Pack Qualifier

Circuit Pack Qualifier as stored in the EEPROM of the replaceable unit.

This parameter should be reported for the AID for the backplane, AID for the user panel , AID for CI-CTL, AID for TI-Interface,

AID for the fan, AID for power interface, if equipped and supported.

This parameter is not reported for a CpAID.

Type: value set.

Range: up to 7 characters.

Note: The TL1-representation of the functional qualifier follows the rules as defined in SRD_ConfigurationManagement:

- alphanumeric characters or the special character '-' only
- special characters like '/' and '.' to be omitted.

3. app – Apparatus Code

Apparatus code as stored in the EEPROM of the replaceable unit. This parameter should be reported for the AID for the backplane, AID for the user panel , AID for CI-CTL, AID for TI-Interface, AID for the fan, AID for power interface, AID for ECI, if equipped and supported.

This parameter is not reported for a CpAID.

Type: alphanumeric string.

Range: up to 9 characters.

4. ssn – Series Number

Series number as stored in the EEPROM of the replaceable unit. This parameter should be reported for the AID for the backplane, AID for the user panel , AID for CI-CTL, AID for TI-Interface, AID for the fan, AID for power interface, AID for ECI, if equipped and supported.

This parameter is not reported for a CpAID.

Type: value set.

Range: up to 6 characters.

Note: A dash (-) is used instead of a colon (:) for the series number in TL1.

5. clei – Common Language Equipment

Common Language Equipment as stored in the EEPROM of the replaceable unit.

This parameter should be reported for the AID for the backplane, AID for the user-panel , AID for CI-CTL, AID for TI-Interface, AID for the fan, AID for power interface, AID for ECI, if equipped and supported.

This parameter is not reported for a CpAID.

Type: value set.

Range: 10 characters.

6. eci – Equipment Catalog Item
Equipment Catalog Item as stored in the EEPROM of the replaceable unit.
This parameter should be reported for the AID for the backplane, AID for the user panel , AID for CI-CTL, AID for TI-Interface, AID for the fan, AID for power interface, AID for ECI, if equipped and supported.
This parameter is not reported for a CpAID.
Type: value set.
Range: 6 digits.
7. sln – Serial Number
Serial number as stored in the EEPROM on the circuit pack to identify the replaceable unit and indicate the date and place of manufacture.
This parameter should be reported for the AID for the backplane, AID for the user panel , AID for CI-CTL, AID for TI-Interface, AID for the fan, AID for power interface, AID for ECI, if equipped and supported.
This parameter is not reported for a CpAID.
Type: Alphanumeric string.
Range: 12 characters.
8. eqptpn – Equipment ASAP Profile Name
The name of the current ASAP profile of type EQIP-UNPROT of the circuit pack. This parameter is reported for a CpAID , PowerAID and EciAID.
Type: Alphanumeric string. A hyphen (-) is additionally allowed in the name.
Range: up to 24 characters.
Default: DEFAULT.
9. eqptprotpn – Protected Equipment ASAP Profile Name
The name of the current ASAP profile of type EQUIP-PROT for the equipment.
Option: This parameter is only reported for a CpAID.
Type: Alphanumeric string.
Range: up to 24 characters. A hyphen (-) is additionally allowed in the name.
Default: DEFAULT

10. vlantgmd – VLAN Tagging Mode

VLAN tagging mode of the circuit pack. This parameter is relevant only for circuit packs of type GE1 (i.e. nvmmname = GE1).

Type: value set.

Range:

- BCMD (default), for the backward compatible mode
- 802.1tag, for the VLAN tag based mode according to IEEE802.1Q.

Example input/output

The following shows the successful execution of the command for a replaceable unit (non CpAID):

```
RTRV-EQPT:UNITE-NE:1-1-usrpn1:123456;  
UNITE-NE 00-11-03 08:00:00  
M 123456 COMPLD  
"1-1-usrpn1:name=UPL,qual=-"  
"1-1-usrpn1:app=XYZ,ssn=S1-3,clei=WMMYABJDAA"  
"1-1-usrpn1:eci=437442,sln=00NB02160832  
;
```

The following shows the successful execution of the command for a circuit pack (CpAID):

```
RTRV-EQPT:UNITE-NE:1-1-#-#-5-cp:123456;  
UNITE-NE 00-11-03 08:00:00  
M 123456 COMPLD  
"1-1-#-#-5-cp:eqtpn=DEFAULT,eqtprotn=DEFAULT"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-EQPT command.

Related TL1 messages

- [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#)
- [“ED-EQPT \(CP\): Edit equipment \(circuit pack\)” \(5-177\)](#)
- [“DLT-EQPT \(slot\): Delete equipment \(slot\)” \(5-117\)](#)
- [“RTRV-STATE-EQPT \(CP\): Retrieve equipment state \(circuit pack\)” \(5-184\)](#)

Circuit pack
RTRV-EQPT (CP): Retrieve equipment
(circuit pack)

TLI messages - configuration management

References GR-199-CORE



ENT-EQPT notification

Output format The ENT-EQPT notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-EQPT:*aid*::*spec_block*

Output parameters

Command parameters

1. aid – Access Identifier
See definition of input parameter *aid* in [“ED-EQPT \(CP\): Edit equipment \(circuit pack\)” \(5-177\)](#).

Spec block parameters

1. eqptpn – Equipment ASAP Profile Name
See definition of output parameter *eqptpn* in [“ED-EQPT \(CP\): Edit equipment \(circuit pack\)” \(5-177\)](#).
2. eqptprotpn – Protected Equipment ASAP Profile Name
See definition of output parameter *eqptprotpn* in [“ED-EQPT \(CP\): Edit equipment \(circuit pack\)” \(5-177\)](#).
3. opstate – Operational State
See definition of output parameter *opstate* in [“RTRV-STATE-EQPT \(CP\): Retrieve equipment state \(circuit pack\)” \(5-184\)](#).

Example output

```
UNITE-NE 00-11-14 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-14:ENT-EQPT:1-1-#-#-1-
cp:::eqptpn=DEFAULT,eqptprotpn=DEFAULT,opstate=OS_
ENABLE";
```



ED-EQPT (CP): Edit equipment (circuit pack)

The ED-EQPT command modifies the provisioning values associated with equipment. Circuit packs must first be provisioned with the ENT-EQPT command or via auto provisioning before they can be modified.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
 Priority: 1
 Abortable: no

Input format Command Syntax: ED-EQPT:*tid:aid:ctag:::spec_block;*

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 The AID of an equipment.
 Type: AID
 Range:
 - CpAID ::= UnivSlotAID-cp for a universal circuit pack
 - CpAID ::= XCSlotAID-cp for a cross-connect circuit pack
 - CpAID ::= CTLSlotAID-cp for a controller circuit pack
 - CpAID ::= SlotAID-cp for any circuit pack.

The keyword `usall` is not allowed for Simple_UnivSlotAID.
 The keyword `xcall` is not allowed for Simple_XCSlotAID.
 The keyword `ctllall` is not allowed for Simple_CTLSlotAID.
 The keyword `all` is not allowed for Simple_SlotAID.
 PowerAID for power interface: The keyword `piall` is not allowed for PowerAID.
 EciAID for ECI interface The keyword `eciall` shall not be allowed for EciAID.
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. eqptpn – Equipment ASAP Profile Name
See definition of output parameter *eqptpn* in [“RTRV-EQPT \(CP\): Retrieve equipment \(circuit pack\)” \(5-169\)](#).
2. eqptprotpn – Protected Equipment ASAP Profile Name
See definition of output parameter *eqptprotpn* in [“RTRV-EQPT \(CP\): Retrieve equipment \(circuit pack\)” \(5-169\)](#)
3. vlantagmd - VLAN Tagging Mode
See definition of output parameter *vlantagmd* in [“RTRV-EQPT \(CP\): Retrieve equipment \(circuit pack\)” \(5-169\)](#).

Output format If the ED-EQPT command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The command modifies the value of *eqptpn*, *eqptprotpn* for a circuit pack entity as indicated by the *spec_block* parameter.

The update is reported by means of an ED-EQPT notification for circuit pack.

Change of VLAN tagging mode: changing vlantagmd to 802.1TAG - update affected entities

If *nvmname* is GE1 a change of parameter *vlantagmd* from BCMD to 802.1TAG has the following side effects:

- The command shall create one instance of entity virtual switch. This shall be notified by a ENT-VRTSW notification
- All attributes of related EPORTs and VCGs shall remain unchanged.

Change of VLAN tagging mode: changing vlantagmd to BCMD - update affected entities

If *nvmname* is GE1 a change of parameter *vlantagmd* from 802.1TAG to BCMD has the following side effects: The command shall delete

the instance of entity virtual switch. This shall be notified by a DLT-VRTSW notification.

The following attributes of the related EPORTs shall be set to their default values:

- *cnprole, stdis, stpp, stpcost, rstpmd.*

The following attributes of the related VCGs shall be set to their default values:

- *cnprole, stdis, stpp, stpcost, rstpmd.*

All other attributes of related EPORTs and VCGs shall remain unchanged.

Example input/output

```
ED-EQPT:UNITE-NE:1-1-#-#-1-cp:123456:::eqtpn=NOALARM;  
    UNITE-NE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-EQPT command.

Validation rule: Validate ASAP profile

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: Check whether VLAN lists are empty

If *nvmname* is GE1 and the parameter *vlangmd* is set to BCMD it shall be checked whether for the specified slot:

- the static VLAN lists (*vvidls*) of all EPORT entities are empty
- the static VLAN lists (*vvidls*) of all VCG entities are empty
- the default VLAN Id (*dftvlan*) of all EPORT entities is set to unavailable
- the default VLAN Id (*dftvlan*) of all VCG entities is set to unavailable.

Errorcode: SNVS - Status, Not in Valid State, static VLAN configuration not cleared

Circuit pack
ED-EQPT (CP): Edit equipment (circuit
pack)

TL1 messages - configuration management

Related TL1 messages

- [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#)
- [“RTRV-EQPT \(CP\): Retrieve equipment \(circuit pack\)” \(5-169\)](#)
- [“DLT-EQPT \(slot\): Delete equipment \(slot\)” \(5-117\)](#)

References GR-199-CORE



ED-EQPT (cp) notification

Output format The ED-EQPT notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-EQPT:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of input parameter *aid* in [“RTRV-EQPT \(CP\): Retrieve equipment \(circuit pack\)” \(5-169\)](#).

Spec block parameters

1. *eqtpn* – Equipment ASAP Profile Name
See definition of output parameter *eqtpn* in [“RTRV-EQPT \(CP\): Retrieve equipment \(circuit pack\)” \(5-169\)](#).
2. *eqtprotn* – Protected Equipment ASAP Profile Name
See definition of output parameter *eqtprotn* in [“RTRV-EQPT \(CP\): Retrieve equipment \(circuit pack\)” \(5-169\)](#).
3. *vlantagmd* - VLAN Tagging Mode
See definition of output parameter *vlantagmd* in [“RTRV-EQPT \(CP\): Retrieve equipment \(circuit pack\)” \(5-169\)](#).

Example output

```
ED-EQPT:UNITE-NE:1-1-#-#-1-cp:123456::eqtpn=NOALARM;
UNITE-NE 00-11-14 08:00:00
M 123456 COMPLD
;
UNITE-NE 00-11-14 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-14:ED-EQPT:1-1-#-#-1-
cp::eqtpn=NOALARM"
;
```



DLT-EQPT notification

Output format The DLT-EQPT notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax DLT-EQPT:*aid*::

Output parameters

Command parameters

1. aid – Access Identifier

Description: AID of the deleted circuit pack.

Type: CpAID

Range:

- CpAID ::= UnivSlotAID-cp for universal circuit packs
- CpAID ::= XCSlotAID-cp for cross-connect circuit packs
- CpAID ::= CTLSlotAID-cp for controller circuit packs
- CpAID ::= SlotAID-cp for any circuit pack.

The keyword *usa11* is not allowed for Simple_UnivSlotAID. The keyword *xca11* is not allowed for Simple_XCSlotAID. The keyword *cta11* is not allowed for Simple_CTLSlotAID. The keyword *a11* is not allowed for Simple_SlotAID.

Example output

```
DLT-EQPT:UNITE-NE:1-1-#-#-1:123456;
UNITE-NE 00-11-20 08:00:00
M 123456 COMPLD
;
UNITE-NE 00-11-20 8:01:03
A 610 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-EQPT:1-1-#-#-1-cp::"
;
UNITE-NE 00-11-20 8:01:03
A 611 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-OC768:1-1-#-#-1-1::"
;
UNITE-NE 00-11-20 8:01:03
A 612 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-VC3:1-1-#-#-1-1-1&&-768::"
;
```

```
UNITE-NE 00-11-20 8:01:03
A 613 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-FECOM:1-1-#-#-
1,LINE:::"
;
UNITE-NE 00-11-20 8:01:03
A 613 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-FECOM:1-1-#-#-
1,SECTION:::"
;
UNITE-NE 00-11-20 8:01:03
A 613 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:ED-EQPT:1-1-#-#-
1::nvmname=UNDEFINED,nvmqual=UNDEF:"
;
```



RTRV-STATE-EQPT (CP): Retrieve equipment state (circuit pack)

The RTRV-STATE-EQPT command retrieves the state information for circuit packs in the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-STATE-EQPT:*tid:aid:ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 The AID of a circuit pack.
 Type: AID
 Range:
 - CpAID ::= UnivSlotAID-cp for universal circuit packs
 - CpAID ::= XCSlotAID-cp for cross-connect circuit packs
 - CpAID ::= CTLSlotAID-cp for controller circuit packs
 - CpAID ::= SlotAID-cp for any circuit pack.
 The keyword `usall` is allowed for Simple_UnivSlotAID
 The keyword `xcall` is allowed for Simple_XCSlotAID
 The keyword `ctllall` is allowed for Simple_CTLSlotAID
 The keyword `all` is allowed for Simple_SlotAID
 Refer to the AID syntax description.
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format If the RTRV-STATE-EQPT command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
  "aid:spec_block"
    ...
    ...
  "aid:spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command Parameter

1. aid – Access Identifier
The AID of a circuit pack.
Type: AID
Range:
 - CpAID ::= UnivSlotAID-cp for universal circuit packs
 - CpAID ::= XCSlotAID-cp for cross-connect circuit packs
 - CpAID ::= CTLSlotAID-cp for controller circuit packs
 - CpAID ::= SlotAID-cp for any circuit pack.The keyword *usa11* is not allowed for Simple_UnivSlotAID.
The keyword *xca11* is not allowed for Simple_XCSlotAID. The keyword *ctla11* is not allowed for Simple_CTLSlotAID. The keyword *a11* is not allowed for Simple_SlotAID.
The keyword *ctla11* is not allowed for Simple_CTLSlotAID. The keyword *a11* is not allowed for Simple_SlotAID.
The keyword *a11* is not allowed for Simple_SlotAID.

Spec block parameters

1. opstate – Operational State
Each circuit pack has a retrievable attribute indicating whether circuit pack is operational for the system internal communication.
Type: alphanumeric value set
Range:
 - OS_ENABLED
 - OS_DISABLED (default).

RTRV-STATE-EQPT (CP): Retrieve
equipment state (circuit pack)

**Detailed behavior
description**

The system retrieves the state information for the CP as specified by the spec block parameters.

Example input/output

```
RTRV-STATE-EQPT:UNITE-NE:1-1-#-#-2-cp:123456;  
UNITE-NE 00-11-03 08:00:00  
M 123456 COMPLD  
"1-1-#-#-2-cp:opstate=OS_ENABLE"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-STATE-EQPT command.

Related TL1 messages

- [“ED-STATE-EQPT \(system\): Edit equipment state” \(5-42\)](#)
- [“ED-EQPT \(CP\): Edit equipment \(circuit pack\)” \(5-177\)](#)
- [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#)

References

GR-833-CORE



ED-STATE-EQPT notification

Output format The ED-STATE-EQPT notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-STATE-EQPT:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STATE-EQPT \(CP\): Retrieve equipment state \(circuit pack\)” \(5-184\)](#).

Spec block parameters

1. *opstate* – Operational State
See definition of output parameter *opstate* in [“RTRV-STATE-EQPT \(CP\): Retrieve equipment state \(circuit pack\)” \(5-184\)](#).

Example output

```
UNITE-NE 00-11-14 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-14:ED-STATE-EQPT:
1-1-#-#-1-cp::opstate=OS_ENABLE";
```



Autonomous notifications

System start-up with default DB

The system autonomously creates the following entities when starting up with the default database:

- backplane (backpl)
- user panel (upl)
- fan unit (fan)
- two TIs (tia and tib)
- CI-CTL (cictl)
- two PIs (pia and pib)
- CTL (ctlw-cp).

No notifications is sent.

Change of the operational state

A change of the operational state is autonomously reported by means of an ED-STATE-EQPT notification for this circuit pack.



Port

Overview

Purpose The term port is defined as physical interface of the EP155 and OPn packs including the 10-Gigabit Ethernet WANPHY interface variant. The ports of the OPn packs can work in SDH or SONET mode. Therefore SDH and SONET related commands are defined for physically identical ports. The ports of the EP155 packs can only work in SDH mode. Therefore only SDH related commands are defined for physically identical ports.

TL1 commands related to gigabit Ethernet LAN ports (GE1 packs) are described in the [“Virtual switch” \(7-134\)](#) section.

Contents

RTRV-STM1E: Retrieve STM1E port	5-192
RTRV-STM1: Retrieve STM1 port	5-199
RTRV-STM4: Retrieve STM4 port	5-206
RTRV-STM16: Retrieve STM16 port	5-214
RTRV-STM64: Retrieve STM64 port	5-228
RTRV-STM256: Retrieve STM256 port	5-237
RTRV-OC3: Retrieve OC3 port	5-243
RTRV-OC12: Retrieve OC12 port	5-250
RTRV-OC48: Retrieve OC48 port	5-257
RTRV-OC192: Retrieve OC192 port	5-267
RTRV-OC768: Retrieve OC768 port	5-275
RTRV-ALL: Retrieve all	5-282
ED-STM1E: Edit STM1E port	5-285
ED-STM1E notification	5-299
ENT- STM1E notification	5-303
DLT- STM1E notification	5-307
ED-STM1E autonomous notifications	5-308
ED-STM1: Edit STM1 port	5-309

<u>ED-STM1 notification</u>	<u>5-324</u>
<u>ENT-STM1 notification</u>	<u>5-328</u>
<u>DLT-STM1 notification</u>	<u>5-332</u>
<u>ED-STM1 autonomous notifications</u>	<u>5-333</u>
<u>ED-STM4: Edit STM4 port</u>	<u>5-334</u>
<u>ED-STM4 notification</u>	<u>5-349</u>
<u>ENT-STM4 notification</u>	<u>5-353</u>
<u>DLT-STM4 notification</u>	<u>5-357</u>
<u>ED-STM4 autonomous notifications</u>	<u>5-358</u>
<u>ED-STM16: Edit STM16 port</u>	<u>5-359</u>
<u>ED-STM16 notification</u>	<u>5-378</u>
<u>ENT-STM16 notification</u>	<u>5-382</u>
<u>DLT-STM16 notification</u>	<u>5-386</u>
<u>ED-STM16 autonomous notifications</u>	<u>5-387</u>
<u>ED-STM64: Edit STM64 port</u>	<u>5-388</u>
<u>ED-STM64 notification</u>	<u>5-405</u>
<u>ENT-STM64 notification</u>	<u>5-410</u>
<u>DLT-STM64 notification</u>	<u>5-415</u>
<u>ED-STM64 autonomous notifications</u>	<u>5-416</u>
<u>ED-STM256: Edit STM256 port</u>	<u>5-417</u>
<u>ED-STM256 notification</u>	<u>5-426</u>
<u>ENT-STM256 notification</u>	<u>5-430</u>
<u>DLT-STM256 notification</u>	<u>5-434</u>
<u>ED-STM256 autonomous notifications</u>	<u>5-435</u>
<u>ED-OC3: Edit OC3 port</u>	<u>5-436</u>
<u>ED-OC3 notification</u>	<u>5-451</u>
<u>ENT-OC3 notification</u>	<u>5-455</u>
<u>DLT-OC3 notification</u>	<u>5-459</u>
<u>ED-OC3 autonomous notifications</u>	<u>5-460</u>
<u>ED-OC12: Edit OC12 port</u>	<u>5-461</u>
<u>ED-OC12 notification</u>	<u>5-476</u>

<u>ENT-OC12 notification</u>	<u>5-480</u>
<u>DLT-OC12 notification</u>	<u>5-484</u>
<u>ED-OC12 autonomous notifications</u>	<u>5-485</u>
<u>ED-OC48: Edit OC48 port</u>	<u>5-486</u>
<u>ED-OC48 notification</u>	<u>5-504</u>
<u>ENT-OC48 notification</u>	<u>5-508</u>
<u>DLT-OC48 notification</u>	<u>5-512</u>
<u>ED-OC48 autonomous notifications</u>	<u>5-513</u>
<u>ED-OC192: Edit OC192 port</u>	<u>5-514</u>
<u>ED-OC192 notification</u>	<u>5-530</u>
<u>ENT-OC192 notification</u>	<u>5-535</u>
<u>DLT-OC192 notification</u>	<u>5-539</u>
<u>ED-OC192 autonomous notifications</u>	<u>5-540</u>
<u>ED-OC768: Edit OC768 port</u>	<u>5-541</u>
<u>ED-OC768 notification</u>	<u>5-551</u>
<u>ENT-OC768 notification</u>	<u>5-555</u>
<u>DLT-OC768 notification</u>	<u>5-559</u>
<u>ED-OC768 autonomous notifications</u>	<u>5-560</u>



RTRV-STM1E: Retrieve STM1E port

The RTRV-STM1E command shall be used to retrieve all parameters related to the electrical STM1E port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-STM1E:*tid:aid:ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 Access Identifier of an STM1E port.
 Type: AID.
 Range: SPortAID of STM1E port.
 The keyword all is allowed up to shelf level.
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-STM1E command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
    ...
    ...
  "aid[:spec_block]"
;
```

RTRV-STM1E: Retrieve STM1E port

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command Parameter

1. *aid* – Access Identifier
Access Identifier of STM1 port.
Type: AID.
Range: SPortAID of STM1E port.

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
This parameter shows the rates of the port signals. For fixed mode (*trbmd* = FIXED) this parameter is derived from the parameter *inputsig* showing the Tributary Input Rate Signal List.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 3, or 4 representing VC3 or VC4.
5. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM1E: Retrieve STM1E port

8. femspm – Far-end Multiplex Section PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. fsflpbkstat – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
11. inputsig – Tributary Input Signal Rate List
This parameter is a list of VCn rates across the port’s bandwidth.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 3 or 4 representing VC3 or VC4.
Default: 14.
12. istd – Interface Standard
See definition of output parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
13. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. neighborASTNNodeID – Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. neighborNodeID - Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. nemspm – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM1E: Retrieve STM1E port

19. **outql** – Outgoing timing quality
See definition of output parameter **outql** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
20. **pmmsfes** – Performance Monitoring MS Far-End SES Threshold
This parameter describes the Multiplex-Section Far-End SES threshold value. It indicates the number of errored blocks (SDH) per second to declare a second as severely errored.
Type: numeric value set.
Range: STM1: 1 – 192000.
Default: for STM1: 28800.
21. **pmmsnes** – Performance Monitoring MS Near-End SES Threshold
This parameter describes the Multiplex-Section Far-End SES threshold value. It indicates the number of errored blocks (SDH) per second to declare a second as severely errored.
Type: numeric value set.
Range: STM1: 1 – 192000.
Default: for STM1: 28800.
22. **pmode** – Port Mode
See definition of output parameter **pmode** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. **pmrsnes** – Performance Monitoring RS Near-End SES Threshold
This parameter describes the RS Near-End SES threshold value. It indicates the number of errored blocks (SDH) per second to declare a second as severely errored.
Type: numeric value set.
Range: 1 – 64000.
Default: for STM1: 2400.
24. **portClass** – Port Class
See definition of output parameter **portClass** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **portControl** – Port Control
See definition of output parameter **portControl** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
26. **propagationDelay** - Propagation Delay
See definition of output parameter **propagationDelay** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

RTRV-STM1E: Retrieve STM1E port

27. ptype – Port Type
This identifies the port type of the AID.
Type: alphanumeric value set.
Range: STM1E.
28. rsmstca – RS/MS TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. rspm – RS PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. rstimca – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. rstimmon – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. sdhpn – SDH ASAP
See definition of output parameter *sdhpn* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
33. sdsfmode – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. servcond – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. srlgList – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
36. strc – Value of incoming J0
See definition of output parameter *strc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. strcfmt – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
38. strcout – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM1E: Retrieve STM1E port

39. *strcst* - Status of incoming J0
See definition of output parameter *strcst* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
40. *strcwfmt* - Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
41. *tcamd* - TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
42. *trbmd* - Tributary mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
43. *unequiposig* - Unequipped Output Signal List
This parameter is a list of VCn rates across the port's bandwidth. It determines the rate(s) of the “unequipped” signal that will be transmitted if there is no cross-connection. *unequiposig* and *inputsig* do not need the identical setting. Mixed rates for tx and rx side of the port are allowed.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 3 or 4 representing VC3 or VC4.
Default: 14.

Detailed behavior description

The command retrieves the parameters as described above.

The RTRV-STM1E command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful execution of a RTRV-STM1E command. Not all output parameters are listed (missing ones indicated by ...):

```
RTRV-STM1E:LT-UNITE:1-1-#-#-1-1:123456;
LT-UNITE 00-11-24 08:00:00
M 123456 COMPLD
"1-1-#-#-1-1:ptype=STM1E,frcdus=DISABLE,dexcthr=-
3,degthr=-6, pmode=MON,...,pmmsneses=15,pmrsneses=30"
;
```

RTRV-STM1E: Retrieve STM1E port

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-STM1E command.

Check CCB against ptype and istd

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Related TL1 messages [“ED-STM1E: Edit STM1E port” \(5-285\)](#)

References GR-199-CORE (RTRV-*rr*)



RTRV-STM1: Retrieve STM1 port

The RTRV-STM1 command is used to retrieve all parameters related to the optical STM1 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-STM1:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 Access Identifier of an STM1 port.
 Type: AID.
 Range: SPortAID of STM1 port.
 The keyword *all* is allowed up to shelf level.
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-STM1 command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
  ...
  ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command Parameter

1. aid – Access Identifier
Access Identifier of STM1 port.
Type: AID.
Range: SPortAID of STM1 port.

Spec block parameters

1. adminCost - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. brstintvl – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. brstthr – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. crstat – Constituent Rates Status list
This parameter shows the rates of the port signals. For fixed mode (*trbmd* = FIXED) this parameter is derived from the parameter inputsig showing the Tributary Input Rate Signal List.
Type: numeric value set.
Range: NX-NX-NX-... N is the number of Xs. X can be 3 or 4 representing VC3 or VC4.
5. degthr – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. dexcthr – Excessive Degrade Threshold
See definition of output parameter *dexcthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. exprstrc – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. femspm – Far-end Multiplex Section PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM1: Retrieve STM1 port

10. *fsflpbkstat* – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
11. *inputsig* – Tributary Input Signal Rate List
This parameter is a list of VCn rates across the port’s bandwidth.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 3 or 4 representing VC3 or VC4.
Default: 14.
12. *istd* – Interface Standard
See definition of output parameter *istd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
13. *lpbk* – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. *ndetmd* - Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
15. *neighborASTNNodeID* – Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. *neighborNodeID* - Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. *neighborPortID* – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. *nemspm* – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. *opdis* – Optical Distance
See definition of output parameter *opdis* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
20. *opwl* – Optical Wavelength
See definition of output parameter *opwl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM1: Retrieve STM1 port

21. **outql** – Outgoing timing quality
See definition of output parameter **outql** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. **pmmsfeses** – Performance Monitoring Line/MS Far-End SES Threshold
This parameter describes the Line/Multiplex-Section Far-End SES threshold value. It indicates the number of errored blocks (SDH) or code violations (SONET) per second to declare a second as severely errored. The default value depends on the interface standard and may differ between SDH and SONET. If the interface standard is changed the current default value is not adapted automatically.
Type: numeric value set.
Range (the range depends on the line rate but is identical for the corresponding SDH and SONET rates):
- STM-1/OC-3: 1 – 192000.
- Default: The default values differ for SDH and SONET:
- STM1: 28800
 - OC3: 154.
23. **pmmsneses** – Performance Monitoring Line/MS Near-End SES Threshold
This parameter describes the Line/Multiplex-Section Near-End SES threshold value. It indicates the number of errored blocks (SDH) or code violations (SONET) per second to declare a second as severely errored. The default value depends on the interface standard and may differ between SDH and SONET. If the interface standard is changed the current default value is not adapted automatically.
Type: numeric value set.
Range (the range depends on the line rate but is identical for the corresponding SDH and SONET rates):
- STM-1/OC-3: 1 – 192000.
- Default: The default values differ for SDH and SONET and the different rates:
- STM1: 28800
 - OC3: 154.
24. **pmode** – Port Mode
See definition of output parameter **pmode** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM1: Retrieve STM1 port

25. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
This parameter describes the Section/RS Near-End SES threshold value. It indicates the number of errored blocks (SDH) or code violations (SONET) per second to declare a second as severely errored. The default value depends on the interface standard and may differ between SDH and SONET. If the interface standard is changed the current default value is not adapted automatically.
Type: numeric value set.
Range (superset of allowed ranges for SDH and SONET): 1 – 64000.
Default: The default values differ for SDH and SONET and the different rates:
 - STM1: 2400
 - OC3: 155.
26. **portClass** – Port Class
See definition of output parameter **portClass** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
27. **portControl** – Port Control
See definition of output parameter **portControl** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
28. **propagationDelay** - Propagation Delay
See definition of output parameter **propagationDelay** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
29. **ptype** – Port Type
This identifies the port type of the AID.
Type: alphanumeric value set.
Range: STM1.
30. **rsmstca** – RS/MS TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **rspm** – RS PM Enable
See definition of output parameter **rspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter **rstimca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM1: Retrieve STM1 port

- 33. *rstimmon* – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 34. *sdhpn* – SDH ASAP
See definition of output parameter *sdhpn* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
- 35. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 36. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 37. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 38. *strc* – Value of incoming J0
See definition of output parameter *strc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 39. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 40. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 41. *strcst* - Status of incoming J0
See definition of output parameter *strcst* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 42. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 43. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM1: Retrieve STM1 port

- 44. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 45. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).

Detailed behavior description

The command retrieves the parameters as described above.

The RTRV-STM1 command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful execution of a RTRV-STM1 command. Not all output parameters are listed (missing ones indicated by ...):

```
RTRV-STM1:LT-UNITE:1-1-#-#-1-1:123456;
LT-UNITE 00-11-24 08:00:00
M 123456 COMPLD
"1-1-#-#-1-1:ptype=STM1,frcdus=DISABLE,dexctr=-
3,degthr=-6, pmode=MON,...,pmmsneses=15,pmrsneses=30"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-STM1 command.

Check CCB against ptype and istd

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Related TL1 messages

[“ED-STM1: Edit STM1 port” \(5-309\)](#)

References

GR-199-CORE (RTRV-*rr*)



RTRV-STM4: Retrieve STM4 port

The RTRV-STM4 command is used to retrieve all parameters related to the optical STM4 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-STM4:*tid:aid:ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
Access Identifier of an STM4 port.
Type: AID.
Range: SPortAID of STM4 port.
The keyword all is allowed up to shelf level.
3. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-STM4 command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
    ...
    ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command Parameter

1. aid – Access Identifier
Access Identifier of STM-4 port.
Type: AID.
Range: SPortAID of STM-4 port.

Spec block parameters

1. adminCost - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. brstintvl – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. brstthr – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. crstat – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
N is the number of Xs. X can be 3, 4 or 4C representing VC3, VC4 or VC4-4C
5. degthr – Signal Degrad Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. dexcthr – Excessive Degrad Threshold
See definition of output parameter *dexcthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. exprstrc – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. femspm – Far-end Multiplex Section PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM4: Retrieve STM4 port

10. **fsflpbkstat** – Far Side Facilitiy Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
11. **inputsig** – Tributary Input Signal Rate List
This parameter is a list of VCn rates across the port’s bandwidth.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 3, 4 or 4C representing VC3, VC4 or VC4-4C.
Default: 44.
12. **istd** – Interface Standard
See definition of output parameter *istd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
13. **lpbk** – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. **ndetmd** – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. **neighborASTNNodeID** – Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. **neighborNodeID** - Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. **neighborPortID** – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. **nemspm** – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. **opdis** – Optical Distance
See definition of output parameter *opdis* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
20. **opwl** – Optical Wavelength
See definition of output parameter *opwl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM4: Retrieve STM4 port

21. outql – Outgoing timing quality
See definition of output parameter *outql* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
This parameter describes the Line/Multiplex-Section Far-End SES threshold value. It indicates the number of errored blocks (SDH) or code violations (SONET) per second to declare a second as severely errored. The default value depends on the interface standard and may differ between SDH and SONET. If the interface standard is changed the current default value is not adapted automatically.
Type: numeric value set.
Range (the range depends on the line rate but is identical for the corresponding SDH and SONET rates):
 - STM-4/OC-12: 1 – 768000.Default: The default values differ for SDH and SONET:
 - STM4: 115200
 - OC12: 615.
23. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
This parameter describes the Line/Multiplex-Section Near-End SES threshold value. It indicates the number of errored blocks (SDH) or code violations (SONET) per second to declare a second as severely errored. The default value depends on the interface standard and may differ between SDH and SONET. If the interface standard is changed the current default value is not adapted automatically.
Type: numeric value set.
Range (the range depends on the line rate but is identical for the corresponding SDH and SONET rates):
 - STM-4/OC-12: 1 – 768000.Default: The default values differ for SDH and SONET and the different rates:
 - STM4: 115200
 - OC3: 615.
24. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM4: Retrieve STM4 port

25. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
This parameter describes the Section/RS Near-End SES threshold value. It indicates the number of errored blocks (SDH) or code violations (SONET) per second to declare a second as severely errored. The default value depends on the interface standard and may differ between SDH and SONET. If the interface standard is changed the current default value is not adapted automatically.
Type: numeric value set.
Range (superset of allowed ranges for SDH and SONET): 1 – 64000.
Default: The default values differ for SDH and SONET and the different rates:
- STM4: 2400
 - OC12: 616.
26. **portClass** – Port Class
See definition of output parameter *portClass* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
27. **portControl** – Port Control
See definition of output parameter *portControl* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
28. **propagationDelay** - Propagation Delay
See definition of output parameter *propagationDelay* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
29. **ptype** – Port Type
This identifies the port type of the AID.
Type: alphanumeric value set.
Range: STM4.
30. **rsmstca** – RS/MS TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **rspm** – RS PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM4: Retrieve STM4 port

33. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter ***rstimmon*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. **sdhpn** – SDH ASAP
This parameter retrieves the ASAP profile name of type PORT to which the designated AID points. The value of this parameter is identical to the SONET ASAP for the SONET ports of corresponding line rate (see definition of output parameter SONET in RTRV-OC12) to be compatible with current generation applications.
Type: alphanumeric string. A hyphen (-) is additionally allowed in the name.
Range: String with a maximum of 24 characters.
Default: DEFAULT.
35. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter ***sdsfmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. **servcond** – Service Condition
See definition of output parameter ***servcond*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. **srlgList** – Shared Risk Link Group Identity List
See definition of output parameter ***srlgList*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
38. **strc** – Value of incoming J0
See definition of output parameter ***strc*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
39. **strcfmt** – Format of incoming J0
See definition of output parameter ***strcfmt*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
40. **strcout** – Value of outgoing J0
See definition of output parameter ***strcout*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
41. **strcst** – Status of incoming J0
See definition of output parameter ***strcst*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
42. **strcwfmt** – Format of outgoing J0
See definition of output parameter ***strcwfmt*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM4: Retrieve STM4 port

- 43. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 44. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 45. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
Range: NX-NX-NX-...
N is the number of Xs. X can be 3, 4 or 4 representing VC3, VC4 or VC4-4C.
Default: 44.

Detailed behavior description

The command retrieves the parameters as described above.

The RTRV-STM4 command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful execution of a RTRV-STM4 command. Not all output parameters are listed (missing ones indicated by ...):

```
RTRV-STM4:LT-UNITE:1-1-#-#-1-1:123456;
LT-UNITE 00-11-24 08:00:00
M 123456 COMPLD
"1-1-#-#-1-1:ptype=STM4,frcdus=DISABLE,dexcthr=-
3,degthr=-6, pmode=MON,...,pmmsneses=15,pmsneses=30"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-STM4 command.

Check CCB against ptype and istd

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Related TL1 messages

[“ED-STM4: Edit STM4 port” \(5-334\)](#)

Port

TL1 messages - configuration management

RTRV-STM4: Retrieve STM4 port

References GR-199-CORE (RTRV-*rr*)



RTRV-STM16: Retrieve STM16 port

The RTRV-STM16 command is used to retrieve all parameters related to the optical STM16 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-STM16:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
Description: Access Identifier of an STM16 port.
Type: AID.
Range: SPortAID of STM16 port.
The keyword *all* is allowed up to shelf level.
3. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-STM16 command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
  ...
  ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command Parameter

1. aid – Access Identifier
Access Identifier of STM16 port.
Type: AID.
Range: SPortAID of STM16 port.
The keyword all is not allowed.

Spec block parameters

1. adminCost - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. brstintvl – Bursty Interval
Measurement period for determining bursty errors. This parameter applies when *sdsfmode*=BURST.
Type: numeric value set.
Range: 2 to 10.
Default: 7.
3. brstthr – Bursty Error Threshold
Degradation threshold in a range from 5% to 50% with a resolution of 5% steps. This parameter applies when *sdsfmode*=BURST.
Type: numeric value set.
Range (as percentage): 5, 10, ... 50.
Default: 30.
4. crstat – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
Range: NX-NX-NX-...
N is the number of Xs. X can be 3, 4, 4C or 16C representing VC3, VC4, VC4-4C or VC4-16C.
5. degthr – Signal Degrade Threshold
Signal degrade threshold in a range from 10exp-5 to 10exp-9. This parameter applies when *sdsfmode*=POISSON.
Type: numeric value set.
Range (as exponents of 10): -5; -6; -7; -8; -9.
Default: -6.

RTRV-STM16: Retrieve STM16 port

6. **dexcthr** – Excessive Degrade Threshold
Retrieving of the excessive degrade/signal failure threshold in exponent of 10. This parameter is available when *sdsfmode*=POISSON
Type: numeric value set.
Range (as exponent of 10): -3; -4; -5.
Default: -3.
7. **exprstrc** – Value of Expected J0
Expected regenerator section trace identifier.
The parameter *expstrc* specifying the expected path trace is only relevant for the section trace supervision when the related trace read format *strcfmt* is set to 16 (16-byte-specific-string mode). If the parameter *portClass* is set to INNI and *ndetmd* is set to AUTO, the parameter *exprstrc* shall be autonomously set by the neighbour detection mechanism.
Type: Hexadecimal digits
Range: 16 byte string. Each byte is expressed as two hexadecimal digits (example value: 6D). The first byte value is in the range from 80 to FF. The other byte values are in the range from 00 to 7F.
Default: 89hex followed by 15 bytes 00hex
8. **femspm** – Far-end Multiplex Section PM Enable
Enable or disable of the performance monitoring of the multiplex section.
Type: alphanumeric value set.
Range:
 - ENABLE
 - DISABLE (default).
9. **frcdus** – Force to DUS
Force DUS/DNU for sync messaging on optical interfaces. When provisioned for ENABLE, the message "do not use" will be transmitted from that optical interface.
Type: alphanumeric value set.
Range:
 - ENABLE , set a forced DUS/DNU
 - DISABLE (default), clear a forced DUS/DNU

RTRV-STM16: Retrieve STM16 port

10. fsflpbkstat – Far Side Facility Loopback Status

This parameter specifies the current far-side facility loopback status of the considered output *aid*.

A far-side loopback means that the signal on the outgoing port is looped to the incoming port – this would thus correspond to loop via an external fibre cable, connecting the out-port with the in-port. If YES then the port is (far-side) loop-backed – if NO then there is no (far-side) loopback existing for the aid.

Note: not both loopbacks (*lpbk* and *fsflpbkstat*) can be set to YES at the same time.

Type: alphanumeric value set.

Range:

- YES
- NO (default).

11. inputsig – Tributary Input Signal Rate List

This parameter is a list of VCn rates across the port's bandwidth.

Type: numeric value set.

Range: NX-NX-NX-...

N is the number of Xs. X can be 3, 4, 4C or 16C representing VC3, VC4, VC4-4C or VC4-16C.

Default: The initial value of X is 4.

Example:

An STM-16 signal might be represented by 93-14-14C-243 which implies 9 VC3s, 1 VC4, 1 VC4-4C, 24 VC3s. The representation is not unique, for example it could also be 33-63-14-14C-243. Worst case of string length for STM16: 47 characters.

12. istd – Interface Standard

Each synchronous optical interface can be set to SDH or SONET.

The default value depends on the setting of the parameter *istddflt*.

Type: alphanumeric value set.

Range: SDH.

Default: As specified via *istddflt* on system level, see definition in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#).

RTRV-STM16: Retrieve STM16 port

13. lpbk – Loopback

This parameter specifies the current near-side loopback status of the considered output *aid*.

A near-side loopback means that the signal on the incoming port is looped to the outgoing port. If YES then the port is (near-side) loop-backed – if NO then there is no (near-side) loopback existing for the port.

Type: alphanumeric value set.

Range:

- YES
- NO (default).

14. ndetmd – Neighbor Detection Mode

See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

15. neighborASTNNodeID – Neighbor ASTN Node Id

See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

16. neighborNodeID - Neighbor Node Id

See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

17. neighborPortID – Neighbor Port Id

See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

18. nemspm – MS Near-End PM Enable

Enable or disable near-end multiplex section (near-end line) performance monitoring.

Type: alphanumeric value set.

Range:

- ENABLE
- DISABLE (default).

19. opdis – Optical Distance

It shows the type of application for which the optical transmitter on this port is suited.

Type: alphanumeric value set

Range:

- INTRA-OFFICE
- SHORT-HAUL
- LONG-HAUL

RTRV-STM16: Retrieve STM16 port

- VERY-LONG-HAUL
 - OLS_PASSIVE
 - OLS_400G
 - OLS_800G
 - XTREME.
20. opwl – Optical Wavelength
Optical Wavelength in nanometers. It shows the type of optics that is used on this port.
Type: numeric value set.
Range (wavelength in [nm]): 0 (i.e. undefined), 1310; 1550; 1530.334 ... 1562.640 (i.e. C-Band); 1553.731 ... 1608.329 (i.e. L-Band). The value undefined is used e.g. in the context of optical modules if the retrieval of the inventory data is not yet supported.
21. outql – Outgoing timing quality
This parameter provides the outgoing quality level message on the S1 SDH MS overhead byte.
Type: alphanumeric value set
Range:
 - PRC
 - SSUL
 - SSUT
 - SEC
 - DNU (default).
22. pmmsfes – Performance Monitoring Line/MS Far-End SES Threshold
This parameter describes the Line/Multiplex-Section Far-End SES threshold value. It indicates the number of errored blocks (SDH) or code violations (SONET) per second to declare a second as severely errored. The default value depends on the interface standard and may differ between SDH and SONET. If the interface standard is changed the current default value is not adapted automatically.
Type: numeric value set.

RTRV-STM16: Retrieve STM16 port

Range (the range depends on the line rate but is identical for the corresponding SDH and SONET rates):

- STM-16/OC-48: 1 – 3072000
- STM-64/OC-192: 1 – 12288000
- STM-256/OC-768: 1 – 49152000.

Default: The default values differ for SDH and SONET and the different rates:

- STM16: 460800
- STM64: 1843200
- STM256: 7372800
- SONET OC48: 2459
- SONET OC192: 8835
- SONET OC768: 39340.

23. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold

This parameter describes the Line/Multiplex-Section Near-End SES threshold value. It indicates the number of errored blocks (SDH) or code violations (SONET) per second to declare a second as severely errored. The default value depends on the interface standard and may differ between SDH and SONET. If the interface standard is changed the current default value is not adapted automatically.

Type: numeric value set.

Range (the range depends on the line rate but is identical for the corresponding SDH and SONET rates):

- STM-16/OC-48: 1 – 3072000
- STM-64/OC-192: 1 – 12288000
- STM-256/OC-768: 1 – 49152000.

Default: The default values differ for SDH and SONET and the different rates:

- STM16: 460800
- STM64: 1843200
- STM256: 7372800
- SONET OC48: 2459
- SONET OC192: 8835
- SONET OC768: 39340.

24. pmode – Port Mode

This parameter sets the mode of the port. In the case of AUTO the pmode state transitions to MON if the loss-of-signal alarm of this port is cleared.

Type: alphanumeric value set

Range:

- AUTO (default) indicates that, when a signal is detected at the port, then alarm monitoring will start.
- MON indicates that alarm monitoring is taking place on the port.
- NMON means that alarm monitoring is not occurring on the port.

25. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold

This parameter describes the Section/RS Near-End SES threshold value. It indicates the number of errored blocks (SDH) or code violations (SONET) per second to declare a second as severely errored. The default value depends on the interface standard and may differ between SDH and SONET. If the interface standard is changed the current default value is not adapted automatically.

Type: numeric value set.

Range (superset of allowed ranges for SDH and SONET): 1 – 64000

Default: The default values differ for SDH and SONET and the different rates:

- SDH (all rates): 2400
- SONET OC48: 2392
- SONET OC192: 8554
- SONET OC768: 22776.

26. portClass – Port Class

See definition of output parameter *portClass* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

27. portControl – Port Control

See definition of output parameter *portControl* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

28. propagationDelay - Propagation Delay

See definition of output parameter *propagationDelay* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

RTRV-STM16: Retrieve STM16 port

29. ptype – Port Type
This identifies the port type of the AID.
Type: alphanumeric value set.
Range: STM16.
30. rsmstca – RS/MS TCA Profile Pointer
Definition of the active regenerator section/section and multiplex section/line threshold crossing alarm profile pointer.
Type: alphanumeric string.
Range: String with maximum of 24 characters.
Default: DEFAULT0.
31. rspm – RS PM Enable
Enable or disable regenerator section (section) performance monitoring.
Type: alphanumeric value set.
Range:
- ENABLE
 - DISABLE (default).
32. rstimca – RS TIM Consequent Action Enable
Regenerator Section Trace Identifier Mismatch consequent action enable (J0).
This parameter is relevant only if the related trace read format *strcfmt* is set to 16 (16-byte-specific-string mode). If the parameter portClass is set to INNI and ndetmd is set to AUTO, the parameter rstimca shall be autonomously set by the neighbour detection mechanism.
Type: alphanumeric value set.
Range:
- ENABLE (default): enable consequent action for TIM
 - DISABLE: disable consequent action for TIM.
33. rstimmon – RS TIM Monitor Enable
Regenerator Section Trace Identifier Mismatch Monitor enable (J0).
This parameter is relevant only if the related trace read format *strcfmt* is set to 16 (16-byte-specific-string mode). If the parameter portClass is set to INNI and ndetmd is set to AUTO, the parameter rstimmon shall be autonomously set by the neighbour detection mechanism.
Type: alphanumeric value set.

RTRV-STM16: Retrieve STM16 port

Range:

- ENABLE: enable TIM Monitor
- DISABLE (default): disable TIM Monitor

34. sdhpn – SDH ASAP

This parameter retrieves the ASAP profile name of type PORT to which the designated AID points. The value of this parameter is identical to the SONET Alarm Severity Assignment Profile for the SONET ports (see definition of output parameter SONET in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#)) to be compatible with current generation applications.

Type: alphanumeric string. A hyphen (-) is additionally allowed in the name.

Range: String with a maximum of 24 characters.

Default: DEFAULT.

35. sdsfmode – Signal Degrade/Signal Fail Mode

The degraded state is detected in Burst or Poisson mode.

Type: alphanumeric value set.

Range:

- BURST (default)
- POISSON.

36. servcond – Service Condition

This parameter indicates its status concerning service involvement.

Type: alphanumeric value set.

Range:

- INSERVICE (default): Provisioning values for service are accepted
- OUTOFSERVICE: Provisioning values for service are not accepted.

37. srlgList – Shared Risk Link Group Identity List

See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

38. strc – Value of incoming J0

This parameter shows the value of the Section Trace Identifier on the incoming section overhead J0 byte of a port. The length of the string depends on the value of the parameter *strcfmt*. The status of this value is contained in parameter *strcst*. If *strcst* indicates NORMAL, then strc contains a valid value. If *strcst*

RTRV-STM16: Retrieve STM16 port

indicates UNAVAILABLE or AIS, then no incoming section trace identifier could be obtained by the system, e.g. due to a signal-fail condition, and the output parameter *strc* is omitted from the response.

Type: hexadecimal (each byte is expressed as two hexadecimal digits. An example of a byte is 6D).

Range: 1 byte string, 16 byte string, 64 byte string (dependent on the *strcfmt* parameter).

39. *strcfmt* – Format of incoming J0

The read format of J0, the incoming section trace (*strc*) and the expected section trace (*exprstrc*). If the parameter *portClass* is set to INNI and *ndetmd* is set to AUTO, the parameter *strcfmt* shall be autonomously set by the neighbour detection mechanism.

Type: numeric string

Range:

- 1: for specific repeating byte (SONET)
- 2 (default): for non-specific repeating byte (ITU/ETSI mode 2)
- 16: for 16 byte specific string (ITU/ETSI mode 1).
- 64: for 64 byte string (SONET).

40. *strcout* – Value of outgoing J0

This identifies the section trace message to be transmitted. The length is set with the *strcwfmt* parameter.

If ITU/ETSI mode 2 is selected (*strcwfmt* = 2) the outgoing J0 is fixed to 01hex. Therefore the setting of this parameter has no impact. If the parameter *portClass* is set to INNI, the system shall autonomously set the parameter *strcout* according to the actually outgoing J0.

Type: Hexadecimal digits.

Range:

- 1 byte string
- 16 bytes string
- 64 bytes string.

Dependent on the *strcwfmt* parameter. Each byte is expressed as two hexadecimal digits (example value: 6D). Value constraint for 16 byte format: The first byte value is in the range from 80 to FF. The other byte values are in the range from 00 to 7F.

Default: 01Hex

RTRV-STM16: Retrieve STM16 port

41. *strcst* – Status of incoming J0

This parameter shows the status of the value of the incoming RS/Section Trace Identifier which is available with parameter *strc*.

Type: alphanumeric value set.

Range: NORMAL: strc contains a valid value; UNAVAILABLE: no value for strc could be obtained by the system; AIS: no value for strc due to an SF condition.

42. *strcwfmt* – Format of outgoing J0

The write format of J0, the outgoing section trace (*strcout*). If the parameter *portClass* is set to INNI, the system shall autonomously set the parameter *strcwfmt* according to the actually outgoing J0.

Type: numeric string

Range:

- 1: for specific repeating byte (SONET)
- 2 (default): for non-specific repeating byte (ITU/ETSI mode 2)
- 16: for 16 byte specific string (ITU/ETSI mode 1).
- 64: for 64 byte string (SONET).

43. *tcamd* – TCA mode

This parameter shows the modus of the PM thresholding.

Two thresholding methods are applicable:

- TR-only (also known as the implicit reset method)
- TR-RTR (also known as the explicit reset method).

Type: alphanumeric value set.

Range: TR or TRRTR (default).

RTRV-STM16: Retrieve STM16 port

44. *trbmd* – Tributary mode

If *trbmd* is FIXED, then *inputsig* constrains the cross-connection rates that can be entered for the port. If *trbmd* is ADAPTIVE, then input *inputsig* has no effect.

Type: alphanumeric value set.

Range: ADAPTIVE, FIXED.

Default: The initial value is defined as the *trbmddflt* parameter on system level, see definition in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#) command.

45. *unequiposig* – Unequipped Output Signal List

See definition of output parameter *unequiposig* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).

Range: NX-NX-NX-...

N is the number of Xs. X can be 3, 4, 4C or 16C representing VC3, VC4, VC4-4C or VC4-16C.

Default: 164 = all VC4.

Detailed behavior description

The command retrieves the parameters as described above.

The RTRV-STM16 command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful execution of a RTRV-STM16 command. Not all output parameters are listed (missing ones indicated by ...):

```
RTRV-STM16:LT-UNITE:1-1-#-#-1-1:123456;
LT-UNITE 00-11-24 08:00:00
M 123456 COMPLD
"1-1-#-#-1-1:ptype=STM16,frcdus=DISABLE,dexcthr=-
3,degthr=-6,pmode=MON,...,pmmsneses=15,pmrsneses=30"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-STM16 command.

Validation rule: Check CCB against ptype and istd

Check whether the CCB fits to *ptype* and *istd*.

RTRV-STM16: Retrieve STM16 port

Error code: ICNV - Input, Command Not Valid, Interface Standard does not match.

E.g. DENY, if a command with rr=STM16 is made on a OP2G5 port which is provisioned as *istd*=SONET and *pptype*=OC48.

Related TL1 messages [“ED-STM16: Edit STM16 port” \(5-359\)](#)

References GR-199-CORE (RTRV-*rr*)



RTRV-STM64: Retrieve STM64 port

The RTRV-STM64 command is used to retrieve all parameters related to the optical STM64 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-STM64:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 Access Identifier of an STM64 port.
 Type: AID.
 Range: SPortAID of ST-64 port.
 The keyword *all* is allowed up to shelf level.
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-STM64 command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
  ...
  ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command Parameter

1. aid – Access Identifier
Type: AID
Range: STM-64 port AID

Spec block parameters

1. adminCost - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. brstintvl – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. brstthr – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. crstat – Constituent Rates Status list
This parameter shows the rates of the port signals. For fixed mode (*trbmd* = FIXED) this parameter is derived from the parameter *inputsig* showing the Tributary Input Rate Signal List.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 3, 4, 4C, 16C or C64 representing VC3, VC4, VC4-4C, VC4-16C or VC-64C.
5. degthr – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. dexcthr – Excessive Degrade Threshold
See definition of output parameter *dexcthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. exprstrc – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. fec – FEC Enable
Forward Error Correction Enable. Enable to include the FEC information in the outgoing signal.
Type: alphanumeric value set.
Range:

RTRV-STM64: Retrieve STM64 port

DISABLE (only) for:

- OC192 / STM64 Intermediate Reach / Short Haul 1550 nm optics
- OC192 / STM64 intermediate reach / SH 32 colour passive WDM compatible optics
- OC192 / STM64 Long Reach / Long Haul 1550 nm optics
- OC192 / STM64 low cost intra office 1310nm optics
- Basic OC768 / STM256 low cost intra office (2 km).

ENABLE / DISABLE for:

- OC192 / STM64 OLS800G compatible 80 colour optics
- OC192 / STM64 OLS Xtreme compatible 128 colour optics 40G
- OC768 / STM256 Long Reach / Long Haul 1.5æ optics with strong FEC (80km)
- OC768 / STM256 OLS Xtreme compatible 64 colour optics (extended L band)

Default:

DISABLE (only) for:

- OC192 / STM64 Intermediate Reach / Short Haul 1550 nm optics
- OC192 / STM64 intermediate reach / SH 32 colour passive WDM compatible optics
- OC192 / STM64 Long Reach / Long Haul 1550 nm optics
- OC192 / STM64 low cost intra office 1310nm optics
- Basic OC768 / STM256 low cost intra office (2 km).

ENABLE / DISABLE for:

- OC192 / STM64 OLS800G compatible 80 colour optics
- OC192 / STM64 OLS Xtreme compatible 128 colour optics 40G
- OC768 / STM256 Long Reach / Long Haul 1.5æ optics with strong FEC (80km)
- OC768 / STM256 OLS Xtreme compatible 64 colour optics (extended L band)

9. femspm – Far-end Multiplex Section PM Enable

See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM64: Retrieve STM64 port

10. **frcdus** – Force to DUS
Force DUS/DNU for sync messaging on optical interfaces. When provisioned for ENABLE, the message “do not use” will be transmitted from that optical interface.
Type: alphanumeric value set.
Range:
 - ENABLE: (set a forced DUS/DNU)
 - DISABLE (default): (clear a forced DUS/DNU).
11. **fsflpbkstat** – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. **inputsig** – Tributary Input Signal Rate List
This parameter is a list of VCn rates across the port’s bandwidth.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 3, 4, 4C, 16C or C64 representing VC3, VC4, VC4-4C, VC4-16C or VC4-64C.
Default: 644.
13. **istd** – Interface Standard
See definition of output parameter *istd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. **lpbk** – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
15. **ndetmd** – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. **neighborASTNNodeID** – Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. **neighborNodeID** - Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. **neighborPortID** – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

RTRV-STM64: Retrieve STM64 port

19. msrei – MS-REI mode

Definition: An special extended MS REI mode is standardized for STM64/OC192 interfaces. To support the interworking with older STM64/OC192 interfaces the single byte mode (non-extended) should also be supported.

Type: alphanumeric value set.

Range:

- SINGLE
- EXTENDED (default).

20. nemspm – MS Near-End PM Enable

See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

21. och – optical channel enable

Enable or disable of the optical channel. If the optical channel is disabled the further optical channel parameters don't have any impact on transmission.

Type: alphanumeric value set.

Range:

- for OP10 packs, which support to enable or disable OCH: ENABLE: enable optical channel; DISABLE: disable optical channel
- for OP40 packs, which cannot support OCH: DISABLE: disable optical channel
- for OP40 packs, which only support OCH: ENABLE: enable optical channel.

Default:

- for OP10 packs, which cannot support OCH: DISABLE
- for OP40 packs, which cannot support OCH: DISABLE
- for OP40 packs, which only support OCH: ENABLE.

22. opdis – Optical Distance

See definition of output parameter *opdis* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

23. opwl – Optical Wavelength

See definition of output parameter *opwl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

24. outql – Outgoing timing quality

See definition of output parameter *outql* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM64: Retrieve STM64 port

25. **pmmsfeses** – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter ***pmmsfeses*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. **pmmsneses** – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter ***pmmsneses*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. **pmode** – Port Mode
See definition of output parameter ***pmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter ***pmrsneses*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **polynomial** - Optical Channel Scrambling Polynomial
This parameter is used by the Wavewrapper scrambler on the optical channel. This parameter is relevant only if the optical channel is enabled (och == ENABLE).
Type: numeric value set.
Range: $1x7 + x + 1$; $2x16 + x12 + x3 + x + 1$.
Default: 2.
30. **portClass** – Port Class
See definition of output parameter ***portClass*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. **portControl** – Port Control
See definition of output parameter ***portControl*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
32. **propagationDelay** - Propagation Delay
See definition of output parameter ***propagationDelay*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
33. **ptype** – Port Type
Definition: This identifies the port type of the AID.
It is derived from the functional name and functional qualifier of a circuit pack. If the functional qualifier indicates a pack with 10GE_WANPHY interfaces the port type has the value 10GE_WANPHY, else STM64.
Type: alphanumeric value set.
Range: STM64.

RTRV-STM64: Retrieve STM64 port

34. **rsmstca** – RS/MS TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. **rspm** – RS PM Enable
See definition of output parameter **rspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter **rstimca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter **rstimmon** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
38. **sdhpn** – SDH ASAP
This parameter retrieves the ASAP profile name of type PORT to which the designated AID points. The value of this parameter is identical to the SONET Alarm Severity Assignment Profile for the SONET ports (see definition of output parameter SONET in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#)) to be compatible with current generation applications.
Type: alphanumeric string. A hyphen (-) is additionally allowed in the name.
Range: String with a maximum of 24 characters.
Default: DEFAULT.
39. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
40. **servcond** – Service Condition
See definition of output parameter **servcond** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
41. **srlgList** – Shared Risk Link Group Identity List
See definition of output parameter **srlgList** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
42. **strc** – Value of incoming J0
See definition of output parameter **strc** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
43. **strcfmt** – Format of incoming J0
See definition of output parameter **strcfmt** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM64: Retrieve STM64 port

44. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
45. *strcst* – Status of incoming J0
See definition of output parameter *strcst* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
46. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
47. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
48. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
49. *unequiposig* – Unequipped Output Signal List
This parameter is a list of VCn rates across the port’s bandwidth. It determines the rate(s) of the *unequipped* signal that will be transmitted if there is no cross-connection. *unequiposig* and *inputsig* do not need the identical setting. Mixed rates for *tx* and *rx* side of the port are allowed.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 3, 4, 4C, 16C or C64 representing VC3, VC4, VC4-4C, VC4-16C or VC4-64C.
Default: 644 = all VC4.

Detailed behavior description

The command retrieves the parameters as described above.

The RTRV-STM64 command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful execution of a RTRV-STM64 command. Not all output parameters are listed (missing ones indicated by ...):

```
RTRV-STM64:LT-UNITE:1-1-#-#-1-1:123456;
LT-UNITE 00-11-24 08:00:00
M 123456 COMPLD
```

RTRV-STM64: Retrieve STM64 port

```
"1-1-#-#-1-1:ptype=STM64,frcdus=DISABLE,dexcthr=-
3,degthr=-6, pmode=MON,...,pmmsneses=15,pmrsneses=30"
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-STM64 command.

Check CCB against ptype and istd

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Related TL1 messages [“ED-STM64: Edit STM64 port” \(5-388\)](#)

References GR-199-CORE (RTRV-*rr*)



RTRV-STM256: Retrieve STM256 port

The RTRV-STM256 command is used to retrieve all parameters related to the optical STM256 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-STM256:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 Description: Access Identifier of an STM256 port.
 Type: AID.
 Range: SPortAID of STM256 port.
 The keyword *all* is allowed up to shelf level.
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-STM256 command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
  ...
  ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

RTRV-STM256: Retrieve STM256 port

Output parameters The RTRV-STM256 command does not generate a REPT DBCHG message.

Command parameters

1. aid – Access Identifier
Type: AID.
Range: STM-256 port AID.

Spec block parameters

1. brstintvl – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
2. brstthr – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. crstat – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
4. degthr – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
5. dexcthr – Excessive Degrade Threshold
See definition of output parameter *dexcthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. exprstrc – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. fec – FEC Enable
See definition of output parameter *fec* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
8. femspm – Far-end Multiplex Section PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. fsflpbkstat – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM256: Retrieve STM256 port

11. **inputsig** – Tributary Input Signal Rate List
This parameter is a list of VCn rates across the port's bandwidth.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 3, 4, 4C, 16C, C64 representing VC3, VC4, VC4-4C, VC4-16C or VC64C.
Default: 2564 (all VC4).
12. **istd** – Interface Standard
See definition of output parameter *istd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
13. **lpbk** – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. **nemspm** – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
15. **och** – optical channel enable
See definition of output parameter *och* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
16. **opdis** – Optical Distance
See definition of output parameter *opdis* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. **opwl** – Optical Wavelength
See definition of output parameter *opwl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. **outql** – Outgoing timing Quality
See definition of output parameter *outql* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. **pmmsfeses** – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
20. **pmmsneses** – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
21. **pmode** – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM256: Retrieve STM256 port

22. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter **pmrsneses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. **ptype** – Port Type
Description: This identifies the port type of the AID.
Type: alphanumeric value set.
Range: STM256.
24. **rsmstca** – RS/MS TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. **rspm** – RS PM Enable
See definition of output parameter **rspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter **rstimca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter **rstimmon** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **sdhpn** – SDH ASAP
This parameter retrieves the ASAP profile name of type PORT to which the designated AID points. The value of this parameter is identical to the SONET Alarm Severity Assignment Profile for the SONET ports (see definition of output parameter SONET in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#)) to be compatible with current generation applications.
Type: alphanumeric string. A hyphen (-) is additionally allowed in the name.
Range: String with a maximum of 24 characters.
Default: DEFAULT.
29. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **servcond** – Service Condition
See definition of output parameter **servcond** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-STM256: Retrieve STM256 port

31. *strc* – Value of incoming J0
See definition of output parameter *strc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. *strcst* – Status of incoming J0
See definition of output parameter *strcst* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
38. *unequiposig* – Unequipped Output Signal List
This parameter is a list of VCn rates across the port's bandwidth. It determines the rate(s) of the *unequipped* signal that will be transmitted if there is no cross-connection. *unequiposig* and *inputsig* do not need the identical setting. Mixed rates for *tx* and *rx* side of the port are allowed.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 3, 4, 4C, 16C, C64 representing VC3, VC4, VC4-4C, VC4-16C or VC4-64C.
Default: 2564 = all VC4.

Detailed behavior description

The command retrieves the parameters as described above.

The RTRV-STM256 command does not generate a REPT DBCHG message.

RTRV-STM256: Retrieve STM256 port

Example input/output The following example shows the successful execution of a RTRV-STM256 command. Not all output parameters are listed (missing ones indicated by ...):

```
RTRV-STM256:LT-UNITE:1-1-#-#-4-1:123456;  
LT-UNITE 00-11-24 08:00:00  
M 123456 COMPLD  
"1-1-#-#-1-1:ptype=STM256,frcdus=DISABLE,dexcthr=-  
3,degthr=-6, pmode=MON,.....,pmmsneses=15,pmrsneses=30"  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-STM256 command.

Check CCB against ptype and istd

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Related TL1 messages [“ED-STM256: Edit STM256 port” \(5-417\)](#)

References GR-199-CORE (RTRV-*rr*)



RTRV-OC3: Retrieve OC3 port

The RTRV-OC3 command is used to retrieve all parameters related to the optical OC3 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-OC3:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 Access Identifier of an OC3 port.
 Type: AID.
 Range: SPortAID of OC3 port.
 The keyword *all* is allowed up to shelf level.
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-OC3 command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
  ...
  ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid – Access Identifier
Type: AID.
Range: OC3 port AID.

Spec block parameters

1. adminCost - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. brstintvl – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. brstthr – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. crstat – Constituent Rates Status list
This parameter shows the rates of the port signals. It is the pointer processor setup if adaptive mode (*trbmd* = ADAPTIVE) is selected.
When switching *trbmd* from FIXED to ADAPTIVE or when creating a port newly *crstat* inherits the current value of *inputsig* until the system delivers an up-to-date value from the pointer processor. If no value is available from the pointer processor the latest known value is retained.
For fixed mode (*trbmd* = FIXED) this parameter is derived from the parameter *inputsig* showing the Tributary Input Rate Signal List.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 1 or 3 representing STS1 or STS3C.
5. exprstrc – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. felpm – Far-end Line PM Enable
See definition of output parameter *felpm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-OC3: Retrieve OC3 port

7. **frcdus** – Force to DUS
See definition of output parameter **frcdus** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. **fsflpbkstat** – Far Side Facililiy Loopback Status
See definition of output parameter **fsflpbkstat** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. **inputsig** – Tributary Input Signal Rate List
This parameter is a list of STSn rates across the port’s bandwidth.
If **trbmd** is FIXED, then **inputsig** constrains the cross-connection rates that can be entered for the port. If **trbmd** is ADAPTIVE, then **inputsig** is setable and retrievable as in fixed mode but does not influence the port behavior.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 1 or 3 representing STS1 or STS3C.
Default: 31.
Example: An O-3 signal might be represented by 31 which implies 3 STS1’s or 13 which implies 1 STS3C.
10. **istd** – Interface Standard
See definition of output parameter **istd** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
11. **lpbk** – Loopback
See definition of output parameter **lpbk** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. **ndetmd** – Neighbor Detection Mode
See definition of ouput parameter **ndetmd** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. **neighborASTNNodeID** – Neighbor ASTN Node Id
See definition of ouput parameter **neighborASTNNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. **neighborNodeID** - Neighbor Node Id
See definition of ouput parameter **neighborNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. **neighborPortID** – Neighbor Port Id
See definition of ouput parameter **neighborPortID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

RTRV-OC3: Retrieve OC3 port

16. nelpm – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. opdis – Optical Distance
See definition of output parameter *opdis* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. opwl – Optical Wavelength
See definition of output parameter *opwl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. outql – Outgoing timing quality
See definition of output parameter *outql* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
20. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
21. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
22. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. portClass – Port Class
See definition of output parameter *portClass* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. portControl – Port Control
See definition of output parameter *portControl* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
26. propagationDelay – Propagation Delay
See definition of output parameter *propagationDelay* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

27. ptype – Port Type
This identifies the port type of the AID.
Type: alphanumeric value set.
Range: OC3.
28. rstimca – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
29. rstimmon – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. sdsfmode – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. sdthr – Signal Degrade Threshold
See definition of output parameter *sdthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. servcond – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. sfthr – Signal Failure Threshold
See definition of output parameter *dexcthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. sltca – Section and Line TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. sonet – SONET ASAP
See definition of output parameter *sonet* in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).
36. spm – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. srlgList – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
38. strc – Value of incoming J0
See definition of output parameter *strc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

- 39. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 40. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 41. *strcst* - Status of incoming J0
See definition of output parameter *strcst* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#)
- 42. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 43. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 44. *unequiposig* – Unequipped Output Signal List
This parameter is a list of STSn rates across the port’s bandwidth. It determines the rate(s) of the “unequipped” signal that will be transmitted if there is no cross-connection.
unequiposig and *inputsig* do not need to have the identical setting. Mixed rates for tx and rx side of the port are allowed. If *trbmd* is ADAPTIVE, then *unequiposig* is settable and retrievable as in fixed mode but does not influence the port behavior.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 1 or 3 representing STS1 or STS3C.
Default: 3 1 = all STS1.
- 45. *z0outmode* – Mode of outgoing Z0 byte insertion
See definition of output parameter *z0outmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

**Detailed behavior
description**

The command retrieves the parameters as described above.
The RTRV-OC3 command does not generate a REPT DBCHG message.

RTRV-OC3: Retrieve OC3 port

Example input/output

The following example shows the successful execution of a RTRV-OC3 command. Not all output parameters are listed (missing ones indicated by ...):

```
RTRV-OC3:LT-UNITE:1-1-#-#-1-1:123456;  
LT-UNITE 00-11-27 08:00:00  
M 123456 COMPLD  
"1-1-#-#-1-1:ptype=OC3,frcdus=DISABLE,sfthr=-3,sdthr=-  
6, pmode=MON,..... pmmsneses=15,pmrsneses=30"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-OC3 command.

Check CCB against ptype and istd

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

References

GR-199-CORE (RTRV-*rr*)



RTRV-OC12: Retrieve OC12 port

The RTRV-OC12 command is used to retrieve all parameters related to the optical OC12 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-OC12:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 Access Identifier of an OC12 port.
 Type: AID.
 Range: SPortAID of OC12 port.
 The keyword *all* is allowed up to shelf level.
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-OC12 command, the following output report is returned:

```

sid date time
M ctag COMPLD
  "aid[:spec_block]"
    ...
    ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid – Access Identifier
Type: AID.
Range: OC-12 port AID.

Spec block parameters

1. adminCost - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. brstintvl – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. brstthr – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. crstat – Constituent Rates Status list
This parameter shows the rates of the port signals. It is the pointer processor setup if adaptive mode (*trbmd* = ADAPTIVE) is selected.
When switching *trbmd* from FIXED to ADAPTIVE or when creating a port newly *crstat* inherits the current value of *inputsig* until the system delivers an up-to-date value from the pointer processor. If no value is available from the pointer processor the latest known value is retained.
For fixed mode (*trbmd* = FIXED) this parameter is derived from the parameter *inputsig* showing the Tributary Input Rate Signal List.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 1, 3 or 12 representing STS1, STS3C or STS12C.
5. exprstrc – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. felpm – Far-end Line PM Enable
See definition of output parameter *felpm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-OC12: Retrieve OC12 port

7. *frcdus* – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *fsflpbkstat* – Far Side Facililiy Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. *inputsig* – Tributary Input Signal Rate List
This parameter is a list of STSn rates across the port’s bandwidth.
If *trbmd* is FIXED, then *inputsig* constrains the cross-connection rates that can be entered for the port. If *trbmd* is ADAPTIVE, then *inputsig* is settable and retrievable as in fixed mode but does not influence the port behavior.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 1, 3 or 12 representing STS1, STS3C or STS12C.
Default: 121.
Example:
An OC12 signal might be represented by 31-33 which implies 3 STS1’s, 3 STS3C’s.
10. *istd* – Interface Standard
See definition of output parameter *istd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
11. *lpbk* – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. *ndetmd* – Neighbor Detection Mode
See definition of ouput parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. *neighborASTNNodeID* – Neighbor ASTN Node Id
See definition of ouput parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. *neighborNodeID* - Neighbor Node Id
See definition of ouput parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. *neighborPortID* – Neighbor Port Id
See definition of ouput parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

RTRV-OC12: Retrieve OC12 port

16. nelpm – Near-End Line PM Enable
See definition of output parameter *nelpm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. opdis – Optical Distance
See definition of output parameter *opdis* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. opwl – Optical Wavelength
See definition of output parameter *opwl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. outql – Outgoing timing quality
See definition of output parameter *outql* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
20. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
21. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
22. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. portClass – Port Class
See definition of output parameter *portClass* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. portControl – Port Control
See definition of output parameter *portControl* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
26. propagationDelay – Propagation Delay
See definition of output parameter *propagationDelay* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

RTRV-OC12: Retrieve OC12 port

27. ptype – Port Type
This identifies the port type of the AID.
Type: alphanumeric value set.
Range: OC12.
28. rstimca – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
29. rstimmon – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. sdsfmode – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. sdthr – Signal Degrade Threshold
See definition of output parameter *sdthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. servcond – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. sfthr – Signal Failure Threshold
See definition of output parameter *sfthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. sltca – Section and Line TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. sonet – SONET ASAP
SONET Alarm Severity Assignment Profile. This parameter sets a SONET ASAP profile name of type PORT to which the designated AID points. The value of this parameter is identical to the SDH ASAP for SDH ports of corresponding line rate (see [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#), output parameter *sdhpn*) to be compatible with current generation applications.
Type: alphanumeric string.
Range: String with a maximum of 24 characters. A hyphen (-) is additionally allowed in the name.
Default: DEFAULT.
36. spm – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-OC12: Retrieve OC12 port

37. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
38. *strc* – Value of incoming J0
See definition of output parameter *strc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
39. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
40. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
41. *strcst* – Status of incoming J0
See definition of output parameter *strcst* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
42. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
43. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
44. *unequiposig* – Unequipped Output Signal List
This parameter is a list of STSn rates across the port’s bandwidth. It determines the rate(s) of the “unequipped” signal that will be transmitted if there is no cross-connection.
unequiposig and *inputsig* do not need to have the identical setting. Mixed rates for tx and rx side of the port are allowed. If *trbmd* is ADAPTIVE, then *unequiposig* is settable and retrievable as in fixed mode but does not influence the port behavior.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 1, 3 or 12 representing STS1, STS3C or STS12C.
Default: 121 = all STS1 (fixed).
45. *z0outmode* – Mode of outgoing Z0 byte insertion
See definition of output parameter *z0outmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

Detailed behavior description

The command retrieves the parameters as described above.
The RTRV-OC12 command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful execution of a RTRV-OC12 command. Not all output parameters are listed (missing ones indicated by ...):

```
RTRV-OC12:LT-UNITE:1-1-#-#-1-1:123456;  
LT-UNITE 00-11-27 08:00:00  
M 123456 COMPLD  
"1-1-#-#-1-1:ptype=OC12,frcdus=DISABLE,sfthr=-3,  
sdthr=-6, pmode=MON,..... pmmsneses=15,pmrsneses=30"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-OC12 command.

Check CCB against ptype and istd

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

References

GR-199-CORE (RTRV-*rr*)



RTRV-OC48: Retrieve OC48 port

The RTRV-OC48 command is used to retrieve all parameters related to the optical OC48 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-OC48:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 Access Identifier of an OC-48 port.
 Type: AID.
 Range: SPortAID of OC48 port.
 The keyword *all* is allowed up to shelf level.
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-OC48 command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
  ...
  ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid – Access Identifier
Type: AID.
Range: OC-48 port AID.

Spec block parameters

1. adminCost - Administrative Cost (Link Cost)
This identifies the provisioned administrative link cost setting for ports of portClass=INNI. For all ports with other values of portClass, this parameter shall not be relevant, i.e. parameter can be retrieved and changed, but will internally not be evaluated until portClass is INNI. Parameter name adapted to ONNS specific TL1. adminCost is introduced specifically for use by ONNS application.
Type: Numeric string.
Range: 1(default).....255
2. brstintvl – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. brstthr – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. crstat – Constituent Rates Status list
This parameter shows the rates of the port signals. It is the pointer processor setup if adaptive mode (*trbmd* = ADAPTIVE) is selected.
When switching *trbmd* from FIXED to ADAPTIVE or when creating a port newly *crstat* inherits the current value of *inputsig* until the system delivers an up-to-date value from the pointer processor. If no value is available from the pointer processor the latest known value is retained.
For fixed mode (*trbmd* = FIXED) this parameter is derived from the parameter *inputsig* showing the Tributary Input Rate Signal List.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 1, 3, 12, 48 representing STS1, STS3C, STS12C, STS48C.

RTRV-OC48: Retrieve OC48 port

5. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *felpm* – Far-end Line PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *frcdus* – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *fsflpbkstat* – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. *inputsig* – Tributary Input Signal Rate List
This parameter is a list of STSn rates across the port's bandwidth.
If *trbmd* is FIXED, then *inputsig* constrains the cross-connection rates that can be entered for the port. If *trbmd* is ADAPTIVE, then *inputsig* is settable and retrievable as in fixed mode but does not influence the port behavior.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 1, 3, 12 or 48 representing STS1, STS3C, STS12C or STS48C.
Default: 481.
Example: An OC-48 signal might be represented by 91-13-112-241 which implies 9 STS1's, 1 STS3C, 1 STS12C, 24 STS1's.
10. *istd* – Interface Standard
Each synchronous optical interface can be set to SDH or SONET.
Type: alphanumeric value set.
Range: SONET.
Default: As specified via *istddflt* on system level, see definition in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#).
11. *lpbk* – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

12. ndetmd – Neighbor Detection Mode

This identifies the mode for neighbor detection for ports of portClass INNI. For all ports with other values of portClass, this parameter shall not be relevant, i.e. parameter can be retrieved and changed, but will internally not be evaluated until portClass is INNI.

ndetmd is introduced specifically for use by NN application.

Type: alphanumeric value set.

Range: AUTO (default), MAN.

13. neighborASTNNodeID – Neighbor ASTN Node Id

This identifies the unique node identifier of the neighbor node of ports of portClass=INNI to be used for ONNS application. For all ports with other values of portClass, this parameter shall not be relevant, i.e. parameter can be retrieved and changed, but will internally not be evaluated until portClass is INNI. This parameter can only be modified, if ndetmd=MAN.

If ndetmd=MAN, this parameter shall indicate the value set by the operator. If ndetmd=AUTO, this parameter shall indicate the value detected via automatic neighbor detection.

neighborASTNNodeID is introduced specifically for use by ONNS application.

Type: Four dot separated numeric string.

Range: Each numeric string: 0...255.

Default: 0.0.0.0 If portClass=INNI, the default value shall have the meaning of "no neighbor discovered".

14. neighborNodeID - Neighbor Node Id

This identifies the IP address of the neighbor node of ports of portClass=INNI. For all ports with other values of portClass, this parameter shall not be relevant, i.e. parameter can be retrieved and changed, but will internally not be evaluated until portClass is INNI. This parameter can only be modified, if ndetmd=MAN. If ndetmd=MAN, this parameter shall indicate the value set by the operator. If ndetmd=AUTO, this parameter shall indicate the value detected via automatic neighbor detection.

neighborNodeID is introduced specifically for use by ONNS application.

Type: Four dot separated numeric string.

Range: Each numeric string: 0...255.

Default: 0.0.0.0

If **portClass**=INNI, the default value shall have the meaning of "no neighbor discovered"

15. neighborPortID – Neighbor Port Id

This identifies the identity of the adjacent port at the neighbor NE for ports of *portClass*=INNI. For all ports with other values of *portClass*, this parameter shall not be relevant, i.e. parameter can be retrieved and changed, but will internally not be evaluated until *portClass* is INNI. This parameter can only be modified, if *ndetmd*=MAN.

If *ndetmd*=MAN, this parameter shall indicate the value set by the operator. If *ndetmd*=AUTO, this parameter shall indicate the value detected via automatic neighbor detection.

neighborPortID is introduced specifically for use by NN application.

Type: Four dash separated numeric string.

Range: Each numeric string: 0...255.

Default: 0-0-0-0.

Interpretation: For UNITE ports the contents of this parameter shall be interpreted as SPort AID, a value of a-b-c-d shall be interpreted as the SPortAID a-b-#-#-c-d.

16. nelpm – Near-End Line PM Enable

See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

17. opdis – Optical Distance

It shows the type of application for which the optical transmitter on this port is suited.

Type: alphanumeric value set.

Range:

- VERY-SHORT-REACH
- SHORT-REACH
- INTERMEDIATE-REACH
- LONG-REACH
- VERY-LONG-REACH
- OLS_PASSIVE
- OLS_400G
- OLS_800G
- XTREME.

18. opwl – Optical Wavelength

See definition of output parameter *opwl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-OC48: Retrieve OC48 port

19. outql – Outgoing timing quality
This parameter provides the outgoing quality level message on the S1 SONET line overhead byte.
Type: alphanumeric value set.
Range:
 - PRS
 - STU
 - ST2
 - ST3
 - DUS (default).
20. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
21. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. portClass – Port Class
This identifies the port class of the AID.
portClass is used to specify ports for use by NN application and if so to also specify the role in which they will be used.
Type: alphanumeric value set.
Range: TRADITIONAL (default), INNI, EDGE.
25. portControl – Port Control (PortAdministrative Mode)
This identifies the administrative mode of ports of *portClass* INNI or EDGE. For ports of *portClass* TRADITIONAL this parameter shall not be relevant, i.e. parameter can be retrieved and changed, but will internally not be evaluated until *portClass* is different from TRADITIONAL.
Parameter name adapted to ONNS specific TL1. Old UNITE

RTRV-OC48: Retrieve OC48 port

parameter name: ***portadminmd***.

portControl is introduced specifically for use by ONNS application.

Type: alphanumeric value set.

Range: NORMAL (default), LOCKOUT.

propagationDelay - Propagation Delay

This identifies the provisioned propagation delay value for ports of ***portClass***=INNI. For all ports with other values of ***portClass*** this parameter shall not be relevant, i.e. parameter can be retrieved and changed, but will internally not be evaluated until ***portClass*** is INNI.

propagationDelay is introduced specifically for use by ONNS application.

Type: Numeric string

Range: 0(sedault) ...25. The unit of this value is "milliseconds".

26. ptype – Port Type

This identifies the port type of the AID.

Type: alphanumeric value set.

Range: OC48.

27. rstimca – RS TIM Consequent Action Enable

Regenerator Section Trace Identifier Mismatch consequent action enable (J0).

This parameter is relevant only if the related trace read format ***strcfmt*** is set to 16 (16-byte-specific-string mode).

Type: alphanumeric value set.

Range:

- ENABLE: enable consequent action for TIM
- DISABLE (default): disable consequent action for TIM.

28. rstimmon – RS TIM Monitor Enable

See definition of output parameter ***rstimmon*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

29. sdsfmode – Signal Degrade/Signal Fail Mode

The degraded state is detected in Burst or Poisson mode.

Type: alphanumeric value set.

Range:

- BURST
- POISSON (default).

RTRV-OC48: Retrieve OC48 port

30. **sdthr** – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **servcond** – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. **sfthr** – Signal Failure Threshold
See definition of output parameter *dexcthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. **sltca** – Section and Line TCA Profile Pointer
See definition of output parameter *remstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. **sonet** – SONET ASAP
This parameter sets a SONET ASAP profile name of type PORT to which the designated AID points. The value of this parameter is identical to the SDH Alarm Severity Assignment Profile for SDH ports (see [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#), output parameter *sdhpn*) to be compatible with current generation applications.
Type: alphanumeric string. A hyphen (-) is additionally allowed in the name.
Range: String with a maximum of 24 characters.
Default: DEFAULT.
35. **spm** – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. **srlgList** – Shared Risk Link Group Identities List
This identifies the provisioned shared risk group identities for ports of *portClass* INNI. Up to 3 shared risk group identities can be given per INNI port. For all ports with other values of *portClass*, this parameter shall not be relevant, i.e. parameter can be retrieved and changed, but will internally not be evaluated until *portClass* is INNI.
srlgList is introduced specifically for use by ONNS application. The order of the three identities is not significant, e.g. 3-7-1 is considered the same as 7-1-3. If only one or two identities are

RTRV-OC48: Retrieve OC48 port

provisioned, the remaining one shall be set to the default value 0, e.g. 3-0-0.

Type: Three numeric strings separated by dashes.

Range: Each numeric string: 0...65535.

Default: 0-0-0.

37. **strc** – Value of incoming J0
See definition of output parameter **strc** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
38. **strcfmt** – Format of incoming J0
See definition of output parameter **strcfmt** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
39. **strcout** – Value of outgoing J0
See definition of output parameter **strcout** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
40. **strcst** – Format of outgoing J0
See definition of output parameter **strcst** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
41. **strcwfmt** – Format of outgoing J0
See definition of output parameter **strcwfmt** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
42. **trbmd** – Tributary mode
If **trbmd** is FIXED, then **inputsig** constrains the cross-connection rates that can be entered for the port. If **trbmd** is ADAPTIVE, then input **inputsig** and **unequiposig** have no effect. See definition of output parameter **trbmd** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#) for SDH equivalent.
Type: alphanumeric value set.
Range:
 - ADAPTIVE
 - FIXED.
 Default: The initial value is defined as the **trbmddflt** parameter on system level, see definition in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#) command.
43. **unequiposig** – Unequipped Output Signal List
This parameter is a list of STSn rates across the port's bandwidth. It determines the rate(s) of the **unequipped** signal that will be transmitted if there is no cross-connection. **unequiposig** and **inputsig** do not need to have the identical setting. Mixed rates for **tx** and **rx** side of the port are allowed. If **trbmd** is

ADAPTIVE, then *unequiposig* is settable and retrievable as in fixed mode but does not influence the port behavior.

Type: numeric value set.

Range: NX-NX-NX-...

N is the number of Xs. X can be 1, 3, 12 or 48 representing STS1, STS3C, STS12C or STS48C.

Default: 481 = all STS1 (fixed).

44. z0outmode – Mode of outgoing Z0 byte insertion

The Z0 insertion is configurable to support interworking with old SONET equipment for STS-M interfaces (M=3, 12, 48).

Type: alphanumeric value set.

Range:

- FIXEDCC (default): for inserting the fixed value CChex
- STSID: for inserting the STS-Id of the current frame.

Detailed behavior description

The command retrieves the parameters as described above.

The RTRV-OC48 command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful execution of a RTRV-OC48 command. Not all output parameters are listed (missing ones indicated by ...):

```
RTRV-OC48:LT-UNITE:1-1-#-#-1-1:123456;  
LT-UNITE 00-11-27 08:00:00  
M 123456 COMPLD  
"1-1-#-#-1-1:ptype=OC48,frcdus=DISABLE,sfthr=-3,  
sdthr=-6, pmode=MON,..... pmmsneses=15,pmrsneses=30"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-OC48 command.

Check CCB against ptype and istd

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

References

GR-199-CORE (RTRV-*rr*)



RTRV-OC192: Retrieve OC192 port

The RTRV-OC192 command is used to retrieve all parameters related to the optical OC192 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-OC192:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
Access Identifier of an OC192 port.
Type: AID.
Range: SPortAID of OC192 port.
The keyword *all* is allowed up to shelf level.
3. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-OC192 command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
  ...
  ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid – Access Identifier
Access Identifier of the OC192 port.
Type: AID.
Range: SPortAID of OC192 port.
The keyword all is not allowed.

Spec block parameters

1. adminCost - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. brstintvl – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. brstthr – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. crstat – Constituent Rates Status list
This parameter shows the rates of the port signals. It is the pointer processor setup if adaptive mode (*trbmd* = ADAPTIVE) is selected.
When switching *trbmd* from FIXED to ADAPTIVE or when creating a port newly *crstat* inherits the current value of *inputsig* until the system delivers an up-to-date value from the pointer processor. If no value is available from the pointer processor the latest known value is retained.
For fixed mode (*trbmd* = FIXED) this parameter is derived from the parameter *inputsig* showing the tributary input rate signal list.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 1, 3, 12, 48, 192 representing STS1, STS3C, STS12C, STS48C, STS192C.
5. exprstrc – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. fec – FEC Enable
See definition of output parameter *fec* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

7. **felpm** – Far-end Line PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. **frcdus** – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
9. **fsflpbkstat** – Far Side Facility Loopback Status
See definition of output parameter *fsflpbstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. **inputsig** – Tributary Input Signal Rate List
This parameter is a list of STSn rates across the port’s bandwidth.
If *trbmd* is FIXED, then *inputsig* constrains the cross-connection rates that can be entered for the port. If *trbmd* is ADAPTIVE, then *inputsig* is settable and retrievable as in fixed mode but does not influence the port behavior.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 1, 3, 12, 48, 192 representing STS1, STS3C, STS12C, STS48C or STS192C.
Default: 1921.
11. **istd** – Interface Standard
See definition of output parameter *istd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
12. **lpbk** – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
13. **ndetmd** – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. **neighborASTNNodeID** – Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. **neighborNodeID** - Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. **neighborPortID** – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

17. msrei – MS-REI mode
See definition of output parameter *msrei* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
18. nelpm – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. och – optical channel enable
See definition of output parameter *och* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
20. opdis – Optical Distance
See definition of output parameter *opdis* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
21. opwl – Optical Wavelength
See definition of output parameter *opwl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. outql – Outgoing timing quality
See definition of output parameter *outql* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
23. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. polynomial - Optical Channel Scrambling Polynomial
See definition of output parameter *polynomial* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

RTRV-OC192: Retrieve OC192 port

28. portClass – Port Class
See definition of output parameter *portClass* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
29. portControl – Port Control
See definition of output parameter *portControl* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
30. propagationDelay - Propagation Delay
See definition of output parameter *propagationDelay* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. ptype – Port Type
This identifies the port type of the AID.
It is derived from the functional name and functional qualifier of a circuit pack. If the functional qualifier indicates a pack with 10GE_WANPHY interfaces the port type has the value 10GE_WANPHY, else OC192.
Type: alphanumeric value set.
Range: OC192.
32. rstimca – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
33. rstimmon – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. sdsfmode – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
35. sdthr – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. servcond – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. sfthr – Signal Failure Threshold
See definition of output parameter *dexcthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
38. sltca – Section and Line TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-OC192: Retrieve OC192 port

39. sonet – SONET ASAP

This parameter sets a SONET ASAP profile name of type PORT to which the designated AID points. The value of this parameter is identical to the SDH Alarm Severity Assignment Profile for SDH ports (see [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#), output parameter *sdhpn*) to be compatible with current generation applications.

Type: alphanumeric string. A hyphen (-) is additionally allowed in the name.

Range: String with a maximum of 24 characters.

Default: DEFAULT.

40. spm – Section PM Enable

See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

41. srlgList – Shared Risk Link Group Identity List

See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

42. strc – Value of incoming J0

See definition of output parameter *strc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

43. strcfmt – Format of incoming J0

See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

44. strcout – Value of outgoing J0

See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

45. strcst - Status of incoming J0

See definition of output parameter *strcst* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

46. strcwfmt – Format of outgoing J0

See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-OC192: Retrieve OC192 port

47. trbmd – Tributary mode

See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

48. unequipsig – Unequipped Output Signal List

This parameter is a list of STSn rates across the port's bandwidth. It determines the rate(s) of the *unequipped* signal that will be transmitted if there is no cross-connection. *unequipsig* and *inputsig* do not need to have the identical setting. Mixed rates for tx and rx side of the port is allowed. If *trbmd* is ADAPTIVE, then *unequipsig* is settable and retrievable as in fixed mode but does not influence the port behavior.

Type: numeric value set.

Range: NX-NX-NX-...

N is the number of Xs. X can be 1, 3, 12, 48 or 192 representing STS1, STS3C, STS12C, STS48C or STS192C.

Default: 1921 = all STS1 (fixed).

Detailed behavior description

The command retrieves the parameters as described above.

The RTRV-OC192 command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful execution of a RTRV-OC192 command. Not all output parameters are listed (missing ones indicated by ...):

```
RTRV-OC192:LT-UNITE:1-1-#-#-1-1:123456;
LT-UNITE 00-11-27 08:00:00
M 123456 COMPLD
"1-1-#-#-1-1:ptype=OC192,frcdus=DISABLE,sfthr=-3,
sdthr=-6,emi=TRUE, pmode=MON,..... pmmsneses=15,
pmrsneses=30"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-OC192 command.

RTRV-OC192: Retrieve OC192 port

Check CCB against ptype and istd

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

References GR-199-CORE (RTRV-*rr*)



RTRV-OC768: Retrieve OC768 port

The RTRV-OC768 command is used to retrieve all parameters related to the optical OC768 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-OC768:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
Description: Access Identifier of an OC768 port.
Type: AID.
Range: SPortAID of OC768 port.
The keyword *all* is allowed up to shelf level.
3. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-OC768 command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
  ...
  ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

RTRV-OC768: Retrieve OC768 port

Output parameters

Command parameters

1. aid – Access Identifier
Access Identifier of the OC768 port.
Type: AID.
Range: SPortAID of OC768 port.
The keyword all is not allowed.

Spec block parameters

Refer to spec block description of the [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#) command

1. brstintvl – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
2. brstthr – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. crstat – Constituent Rates Status list
This parameter shows the rates of the port signals. It is the pointer processor setup if adaptive mode (*trbmd* = ADAPTIVE) is selected.
When switching *trbmd* from FIXED to ADAPTIVE or when creating a port newly *crstat* inherits the current value of *inputsig* until the system delivers an up-to-date value from the pointer processor. If no value is available from the pointer processor the latest known value is retained.
For fixed mode (*trbmd* = FIXED) this parameter is derived from the parameter *inputsig* showing the tributary input rate signal list.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 1, 3, 12, 48, 192 representing STS1, STS3C, STS12C, STS48C, STS192C.
4. exprstrc – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
5. fec – FEC Enable
See definition of output parameter *fec* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

6. **felpm** – Far-end Line PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. **frcdus** – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. **fsflpbkstat** – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. **inputsig** – Tributary Input Signal Rate List
This parameter is a list of STSn rates across the port’s bandwidth.
If *trbmd* is FIXED, then *inputsig* constrains the cross-connection rates that can be entered for the port. If *trbmd* is ADAPTIVE, then *inputsig* is settable and retrievable as in fixed mode but does not influence the port behavior.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 1, 3, 12, 48, 192 representing STS1, STS3C, STS12C, STS48C or STS192C.
Default: 7681.
10. **istd** – Interface Standard
See definition of output parameter *istd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
11. **lpbk** – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. **nelpm** – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
13. **och** – optical channel enable
See definition of output parameter *och* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
14. **opdis** – Optical Distance
See definition of output parameter *opdis* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. **opwl** – Optical Wavelength
See definition of output parameter *opwl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-OC768: Retrieve OC768 port

16. outql – Outgoing timing quality
See definition of output parameter *opdis* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
20. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
21. ptype – Port Type
This identifies the port type of the AID.
Type: alphanumeric value set.
Range: OC768.
22. rstimca – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
23. rstimmon – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. sdsfmode – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. sdthr – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. servcond – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

27. **sfthr** – Signal Failure Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **sltca** – Section and Line TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **sonet** – SONET ASAP
This parameter sets a SONET ASAP profile name of type PORT to which the designated AID points. The value of this parameter is identical to the SDH ASAP for SDH ports (see [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#), output parameter **sdhpn**) to be compatible with current generation applications.
Type: alphanumeric string. A hyphen (-) is additionally allowed in the name.
Range: String with a maximum of 24 characters.
Default: DEFAULT.
30. **spm** – Section PM Enable
See definition of output parameter **rspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **srlgList** – Shared Risk Link Group Identity List
See definition of output parameter **srlgList** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
32. **strc** – Value of incoming J0
See definition of output parameter **strc** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. **strcfmt** – Format of incoming J0
See definition of output parameter **strcfmt** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. **strcout** – Value of outgoing J0
See definition of output parameter **strcout** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. **strcst** – Status of incoming J0
See definition of output parameter **strcst** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. **strcwfmt** – Format of outgoing J0
See definition of output parameter **strcwfmt** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

RTRV-OC768: Retrieve OC768 port

37. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
38. *unequiposig* – Unequipped Output Signal List
This parameter is a list of STSn rates across the port’s bandwidth. It determines the rate(s) of the *unequipped* signal that will be transmitted if there is no cross-connection. *unequiposig* and *inputsig* do not need to have the identical setting. Mixed rates for *tx* and *rx* side of the port is allowed. If *trbmd* is ADAPTIVE, then *unequiposig* is settable and retrievable as in fixed mode but does not influence the port behavior.
Type: numeric value set.
Range: NX-NX-NX-...
N is the number of Xs. X can be 1, 3, 12, 48 or 192 representing STS1, STS3C, STS12C, STS48C or STS192C.
Default: 7681 = all STS1 (fixed).

Detailed behavior description

The command retrieves the parameters as described above.

The RTRV-OC768 command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful execution of a RTRV-OC768 command. Not all output parameters are listed (missing ones indicated by ...):

```
RTRV-OC768:LT-UNITE:1-1-#-#-1-1:123456;
LT-UNITE 00-11-27 08:00:00
M 123456 COMPLD
"1-1-#-#-1-1:ptype=OC768,frcdus=DISABLE,sfthr=-3,
sdthr=-6,emi=TRUE, pmode=MON,..... pmmsneses=15,
pmrsneses=30"
;
```

Error Responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-OC768 command.

RTRV-OC768: Retrieve OC768 port

Check CCB against ptype and istd

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Related TL1 messages [“ED-OC768: Edit OC768 port” \(5-541\)](#)

References GR-199-CORE (RTRV-*rr*)



RTRV-ALL: Retrieve all

The RTRV-ALL command is used to retrieve all parameters related to SDH/SONET ports.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-ALL:*tid:aid:ctag*[::*spec_block*];

Input parameters

Command parameters

1. **tid** – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. **aid** – Access Identifier
AID of SDH or SONET port.
Type: AID.
Range: SPortAID of STMn ports and OCn ports of supported rates.
The keyword `usa11` and `a11` is allowed for Simple_SlotAID. The keyword `a11` is allowed for Simple_SPortAID.
3. **ctag** – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. **dyn** - Retrieve Dynamic Parameters
This parameter controls whether dynamic parameters shall be reported with the command reply or not.
The following output parameters of a port are affected:
 - `strc`
 - `strcst`.Type: alphanumeric value set.
Range: YES: Report dynamic parameters in the reply as well;
NO: Do not report dynamic parameters in the reply.
Default: NO.

RTRV-ALL: Retrieve all

Output format In response to a valid RTRV-ALL command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
    ...
    ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid – Access Identifier
Access Identifier of the SDH or SONET port.
Type: AID.
Range: SPortAID.
The value all is not allowed.

Spec block parameters

1. ptype – Port Type
This identifies the port type of the AID.
Type: alphanumeric value set.
Range:
 - STM1E
 - STM1
 - STM4
 - STM16
 - STM64
 - STM256
 - OC3
 - OC12
 - OC48
 - OC192
 - OC768.

Detailed behavior description

The command retrieves the parameters as described above.
The RTRV-ALL command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful execution of a RTRV-ALL command. Not all output parameters are listed (missing ones indicated by ...):

```
RTRV-ALL:LT-UNITE:1-1-#-#-usa11-a11:123456;  
LT-UNITE 00-11-27 08:00:00  
M 123456 COMPLD  
"1-1-#-#-4-1:ptype=OC768,frcdus=DISABLE,sfthr=-3,  
sdthr=-6, pmode=MON,..... pmmsneses=15,pmrsneses=30"  
"1-1-#-#-5-1: ptype=STM64,frcdus=DISABLE,dexcthr=-3,  
degthr=-6, pmode=MON,.....,pmmsneses=15,pmrsneses=30"  
;
```

Error Responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-ALL command.

Related TL1 messages

- [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#)
- [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#)
- [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#)
- [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#)
- [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#)
- [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#)
- [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#)
- [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#)
- [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#)
- [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#)
- [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#)

References

GR-199-CORE (RTRV-*rr*)



ED-STM1E: Edit STM1E port

The ED-STM1E command is used to provision all parameters related to the electrical STM1E port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
 Priority: 1
 Abortable: no

Input format Command Syntax: ED-STM1E:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 See definition of output parameter *aid* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. *adminCost* - Administrative Cost
 See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
 See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
 The setting of this parameter is allowed when the related STM1E port is created, it is used when *sdfsmode*=BURST.
3. *brstthr* – Bursty Error Threshold
 See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
 The setting of this parameter is allowed when the related STM1E port is created, it is used when *sdfsmode*=BURST.

4. **degthr** – Signal Degrade Threshold
See definition of output parameter **degthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM1E port is created, it is used when **sdfsmode**=POISSON.
5. **dexcthr** – Excessive Degrade Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM1E port is created, it is used when **sdfsmode**=POISSON.
6. **exprstrc** – Value of Expected J0
See definition of output parameter **exprstrc** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. **femspm** – Far-end Multiplex Section Enable
See definition of output parameter **femspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. **frcdus** – Force to DUS
See definition of output parameter **frcdus** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. **inputsig** – Tributary Input Signal Rate List
See definition of output parameter **inputsig** in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
10. **ndetmd** – Neighbor Detection Mode
See definition of output parameter **ndetmd** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
11. **neighborASTNNodeID** - Neighbor ASTN Node Id
See definition of output parameter **neighborASTNNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
12. **neighborNodeID** – Neighbor Node Id
See definition of output parameter **neighborNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. **neighborPortID** – Neighbor Port Id
See definition of output parameter **neighborPortID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. **nemspm** – MS Near-End PM Enable
See definition of output parameter **nemspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

15. **pmmsfeses** – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter ***pmmsfeses*** in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
16. **pmmsneses** – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter ***pmmsneses*** in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
17. **pmode** – Port Mode
See definition of output parameter ***pmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. **portClass** – Port Class
See definition of output parameter ***portClass*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
19. **portControl** – Port Control
See definition of output parameter ***portControl*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
propagationDelay - Propagation Delay
See definition of output parameter ***propagationDelay*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
20. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter ***pmrsneses*** in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
21. **rsmstca** – RS/MS TCA Profile Pointer
See definition of output parameter ***rsmstca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. **rspm** – RS PM Enable
See definition of output parameter ***rspm*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter ***rstimca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter ***rstimmon*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. **sdhpn** – SDH ASAP
See definition of output parameter ***sdhpn*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

26. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
29. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).

Output format If the ED-STM1E command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description The command modifies the attributes (listed in the *spec_block* parameters part of this command) of the addressed port entity according to the parameters given with this command.

The modification is reported by means of an ED-STM1 notification for port (except for parameter *istd*; see below).

Supply outgoing J0 trace value and format together

When changing the format of the outgoing J0 trace *strcwfmt*, the parameter *strcout* specifying the outgoing J0 trace is always supplied within the same TL1-command to always have a consistent set of trace format and value.

Supply outgoing J0 trace value according to format of outgoing J0

When changing the outgoing J0 trace value, the format must be according to the format parameter *strcwfmt* for the outgoing J0 trace.

Disabling of PM Monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Changing TCA mode from TR-RTR to TR-only

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

ONNS specific behaviour - Impact on tributary mode setting when portClass is set to INNI

When *portClass* is set to INNI for a port, the parameter *trbmd* shall be set to “adaptive”. This is reported by an ED-STM1E notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on tributary mode setting when portClass is set to EDGE

When *portClass* is set to EDGE for a port, the parameter *trbmd* shall be set to FIXED. This is reported by an ED-STM1E notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on loca, locz when setting portClass from EDGE to TRADITIONAL when port is involved in a 2F or 4F BLSR/MSSPRING protection group

For all tributaries of that port the *loca*, *locz* parameters shall be reset to their default values (empty string). This is reported by an ED-STS1 (*istd*=SONET for the port) or ED-VC3 (*istd*=SDH for the port) notification using a range over the port.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is INNI

When *portClass* has the value INNI for a port, setting of the following parameters shall be inhibited:

- *exprstrc*
- *rstimca*
- *rstimmon*
- *strcfmt*
- *strcout*
- *strcwfmt.*

At the moment *portClass* is changed away from INNI the parameters are set back to their default values. This is reported by means of an ED-STM1E notification.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is different from INNI

When *portClass* has a value being different from INNI for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed to INNI:

- *ndetmd*
- *neighborNodeID*
- *neighborPortID*
- *propagationDelay*
- *adminCost*
- *srlgList*
- *neighborASTNNodeID.*

At the moment the *portClass* is changed to INNI the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is TRADITIONAL

When *portClass* has the value TRADITIONAL for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed away from TRADITIONAL:

- *portControl.*

At the moment the *portClass* is changed away from TRADITIONAL the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on *portControl* when changing *portClass*

When *portClass* is changed *portControl* shall be set to NORMAL.

ONNS specific behaviour - Impact on port parameter settings when *ndetmd* is set to AUTO

When *ndetmd* is set to AUTO for a port, the parameters *neighborNodeID* and *neighborPortID* shall keep their current values until automatic neighbor detection delivers new valid values.

When *ndetmd* is set to AUTO for a port, the parameter *neighborASTNNodeID* shall keep its current value until automatic neighbor detection delivers a new valid value.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to AUTO

When *portClass* is set to INNI and *ndetmd* is set to AUTO for a port, the parameter *pmode* shall be set to MONITORING. This shall be reported by an ED-STM1E notification for the parameter *pmode*.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to MAN

When *portClass* is set to INNI and *ndetmd* is set to MAN for a port, the parameters *rstimca* and *rstimmon* shall be set to DISABLE. This shall be reported by an ED-STM1E notification for the parameters *rstimca* and *rstimmon*.

ONNS specific behaviour - Impact on tributary parameter settings when *portClass* is set to INNI

When *portClass* is set to INNI, the parameter *hptimmon* shall be set to DISABLE for all tributaries located on this port.. This shall be reported by ED-VC3 notifications for the parameter *hptimmon*.

Example input/output

```
ED-STM1E:UNITE-NE:1-1-#-#-1-1:123456::INPUTSIG=14,  
UNEQUIPOSIG=14;  
    UNITE-NE 00-11-28 08:00:00  
M 123456 COMPLD  
;  
    UNITE-NE 00-11-28 08:00:30  
A 001 REPT DBCHG  
    "TIME=08-00-12,DATE=00-11-28:ED-STM1E:1-1-#-#-1-1  
    ::inputsig=14,unequiposig=14:"  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-STM1E command.

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: TCA profile exists

Check of the existence of the TCA profile.

Error code: IDNV - Input, Data Not Valid, TCA profile does not exist

Validation rule: inputsig consistent with existing cross-connections

Check of the consistency of the structure of the input signal (*inputsig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent input signal

Validation rule: unequiposig consistent with existing cross-connections

Check of the consistency of the structure of the output signal (*unequiposig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent output signal

Validation rule: *servcond* must be enabled when timing source

Check that the *servcond* is not disabled when the port is used as a timing source.

Error code: SNVS - Status, Not in Valid State, Timing reference is assigned to this port

Validation rule: *servcond* must be enabled when DCC enabled

Check that the *servcond* is not disabled when DCC channels are still existing for this port.

Error code: SNVS - Status, Not in Valid State, DCC channels are active for this port

Validation rule: *servcond* must be enabled when *portClass*=INNI

Check that the *servcond* is not OUTOFSERVICE when *portClass*=INNI.

Error code: SNVS - Status, Not in Valid State, can not disable *servcond* for INNI ports

Validation rule: *servcond* must be disabled for facility loopback

Check that the *servcond* is not enabled when a facility loopback is existing for this port.

Error code: SNVS - Status, Not in Valid State, Facility Loopback is active for this port

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation rule: Supply of outgoing J0 trace

Check that an outgoing J0 trace value (*strcout*) is supplied, too, if the format of the outgoing J0 trace (*strcwfmt*) is changed.

Error code: IDNC - Input, Data Not Consistent, a new trace value must also be supplied for a trace format change.

Validation rule: transmitted path trace length

Check that the length of the outgoing J0 trace value (*strcout*) fits to the length given by outgoing J0 trace mode, i.e. write format (*strcwfmt*).

Error code: IDNC - Input, Data, Not Consistent, *strcout* length must match the given outgoing J0 trace mode.

Check CCB against ptype and istd

Check whether the CCB fits to ptype and SDH standard.

Error code: ICNV - Input, Command Not Valid, Interface Standard does not match

E.g. DENY, if a command with rr=OC3 is made on a EP155 port which is provisioned as ptype=STM1E.

ONNS specific error codes (validation rules)

Validation rule: *portClass* only settable when xcsetup=SWISS

Modification of the *portClass* parameter shall only be allowed when xcsetup=SWISS.

Error code: SNVS - Status, Not in Valid State, Swiss not enabled

Validation rule: Some parameters not settable for ports of *ndetmd* AUTO

The following parameters shall not be changeable for ports with *ndetmd* AUTO:

- *neighborNodeID*
- *neighborPortID*

Error code: SNVS - Status, Not in Valid State, *ndetmd* must not be AUTO

Validation rule: Some parameters not settable for ports of *ndetmd* AUTO

The following parameter shall not be changeable for ports with *ndetmd* Auto: *neighborASTNNodeID*.

Error code: SNVS - Status, Not in Valid State, *ndetmd* must not be AUTO

Validation rule: Additional parameters required when setting *ndetmd* to MAN

Values for the following parameters must be given, if *ndetmd* is changed to MAN:

- *neighborNodeID*
- *neighborPortID*

Error code: IDNV - Input, Data Not Valid, additional parameters *neighborNodeID* and *neighborPortID* required

Validation rule: Additional parameter required when setting *ndetmd* to MAN

A values for the following parameter must be given, if *ndetmd* is changed to MAN: ***neighborASTNNodeID***.

Error code: IDNV - Input, Data Not Valid, additional parameter required

Validation rule: No setting of duplicate *neighborASTNNodeID* and *neighborPortID* parameter combination

Setting of the parameters ***neighborASTNNodeID*** and ***neighborPortID*** shall only be possible, if the same combination of values does not already exists for a different INNI port in the system.

Error code: IDNV - Input, Data Not Valid, duplicate neighbor port information

Validation rule: Setting of *portClass* to INNI not possible for ports in equipment protection groups

It shall not be allowed to change ***portClass*** of a port to INNI, if this port is member of an equipment protection group.

Error code: SNVS - Status, Not in Valid State, Port must not be member of an equipment protection group

Validation rule: Setting of *portClass* to INNI only possible, if no cross-connection existing

It shall not be allowed to change *portClass* to INNI, if cross-connections on that port are still existing.

Error code: SNVS - Status, Not in Valid State, Cross-connections still existing

Validation rule: Setting of *portClass* to INNI only possible, if service condition not OUTOFSERVICE

It shall not be allowed to change ***portClass*** to INNI, if *servcond*=OUTOFSERVICE

Error code: SNVS - Status, Not in Valid State, port in out of service state

Validation rule: Setting of *portControl* to NORMAL only possible, if no cross-connection loopbacks existing

It shall not be allowed to change *portControl* to NORMAL, if there are existing cross-connection loopbacks associated with the port.

Error code: SNVS - Status, Not in Valid State, loopbacks present

Validation rule: Setting of some INNI properties only possible, if no cross-connection existing

It shall not be allowed to change one of the following parameters (provided this parameter is supported in a particular release at all) on a port with *portClass*=INNI, if cross-connections on that port are existing:

- *adminCost*, *ink_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*

Error code: SNVS - Status, Not in Valid State, no XCs allowed for change of iNNI parameters

Validation rule: Setting of some INNI properties only possible, if no cross-connection existing

It shall not be allowed to change one of the following parameters (provided this parameter is supported in a particular release at all) on a port with *portClass*=INNI, if cross-connections on that port are existing: *neighborASTNNodeID*.

Error code: SNVS - Status, Not in Valid State, no XCs allowed for change of iNNI parameters

Validation rule: Setting of INNI properties only possible for INNI ports

The system shall allow to change the following parameters only if the port class (*portClass*) is set to INNI and the port control (*portControl*) is set to LOCKOUT: *adminCost*, *link_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*

Error code: SNVS - Status, Not in Valid State, only allowed for INNI port in lockout state

Validation rule: Setting of *portClass* to INNI or EDGE only possible, if no test access session active

It shall not be allowed to change *portClass* of a port to INNI or EDGE when a tributary related to this port is used in a test access session either as tributary under test or as test access tributary.

Error code: SNVS - Status, Not in Valid State, a test access session exists

Validation rule: Setting of *portClass* away from INNI only possible, if the port is not in use

For setting portClass from INNI to TRADITIONAL or EDGE the following must be fulfilled:

- No cross-connection may exist on any tributary of the port
- *portControl* must be LOCKOUT

Error Code: SNVS - Status, Not in Valid State, Port is still in use

Validation rule: Changing of *portClass* only possible, if MS-DCC is not enabled on the port

For changing the value of the parameter portClass the MS-DCC of the port may not be enabled.

Error Code: SNVS - Status, Not in Valid State, MS-DCC may not be enabled

Validation Rule: Setting of *portClass* from EDGE to TRADITIONAL only possible, if the tributaries on the port are not in use by ONNS

For setting *portClass* from EDGE to TRADITIONAL the following must be fulfilled:

- No cross-connections of xconcls=NN may exist on any tributary of the port
- *portControl* must be LOCKOUT

Error Code: SNVS - Status, Not in Valid State, Port is still in use

Validation rule: Setting of *portClass* to EDGE not possible for ports in Equipment Protection Groups

It shall not be allowed to change portClass of a port to EDGE, if this port is member of an equipment protection group..

Error Code: SNVS - Status, Not in Valid State, Port must not be member of an equipment protection group

Validation rule: Not allowed to change the portClass directly from INNI to EDGE or EDGE to INNI

It shall not be allowed to change the portClass of a port directly from INNI to EDGE or from EDGE to INNI.

Error code: SNVS - Status, Not in Valid State, Port Class must not be EDGE or INNI

Validation rule: Some Parameters not settable for ports of *portClass=INNI*

The following parameters shall not be changeable for ports with *portClass=INNI*:

- *exprstrc, rstimca, rstimmon, strcfmt, strcout, strcwfmt.*

Error code: SNVS - Status, Not in Valid State, J0 parameters can not be set for INNI ports

Related TL1 messages [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#)

References GR-199-CORE (ED-rr)



ED-STM1E notification

Output format The ED-STM1E notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-STM1:*aid*::*spec_block*

Output parameter

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
5. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *femspm* – Far-end Multiplex Section Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. fsflpbkstat – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
11. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
12. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
13. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. nemspm – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
19. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
20. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

21. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter **pmrsneses** in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
22. **portClass** – Port Class
See definition of output parameter **portClass** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
23. **portControl** – Port Control
See definition of output parameter **portControl** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **propagationDelay** - Propagation Delay
See definition of output parameter **propagationDelay** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **rsmstca** – RS/MS TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. **rspm** – RS PM Enable
See definition of output parameter **rspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter **rstimca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter **rstimmon** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **sdhpn** – SDH ASAP
See definition of output parameter **sdhpn** in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
30. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **servcond** – Service Condition
See definition of output parameter **servcond** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. **srlgList** – Shared Risk Link Group Identity List
See definition of output parameter **srlgList** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

- 33. `strcfmt` – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 34. `strcout` – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 35. `strcfmt` – Format of outgoing J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 36. `tcamd` – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 37. `trbmd` – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 38. `unequiposig` – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).

Example input/output

```
ED-STM1E:UNITE-NE:1-1-#-#-1-1:123456:::INPUTSIG=14,
UNEQUIPOSIG=14;
  UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
  UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ED-STM1E:1-1-#-#-1-1
::inputsig=14,unequiposig=14:"
;
```



ENT- STM1E notification

Output format The ENT-STM1E notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-STM1:*aid::spec_block*

Output parameter

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
5. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *femspm* – Far-end Multiplex Section Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. fsflpbkstat – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
11. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
12. istd – Interface Standard
See definition of output parameter *istd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
13. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. nemspm – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
20. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).

21. *pmode* – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. *pmrsneses* – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).
23. *propagationDelay* - Propagation Delay
See definition of output parameter *propagationDelay* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. *rsmstca* – RS/MS TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. *rspm* – RS PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. *rstimca* – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. *rstimmon* – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. *sdhpn* – SDH ASAP
See definition of output parameter *sdhpn* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
29. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
32. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

- 33. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 34. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 35. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 36. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
- 37. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).

Example input/output

```
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ENT-STM1E:1-1-#-#-1-
1::servcond=DISABLE,inputsig=14,...,unequiposig=14"
;
```



DLT- STM1E notification

Output format The DLT-STM1E notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: DLT-STM1:*aid*

Output parameter

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM1E: Retrieve STM1E port” \(5-192\)](#).

Example output

```
UNITE-NE 00-11-20 8:01:03
A 611 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-STM1E:1-1-#-#-4-1"
;
```



ED-STM1E autonomous notifications

LOS for transmission port STM1E clears

If LOS is cleared and current port mode is AUTO, then ***pmode*** is updated (new value: MON). This update is reported via ED-STM1E notification with parameter ***pmode***.

Change of neighbor Node and Neighbor Port Information

If ***ndetmd***=AUTO a change of the attributes ***neighborNodeID*** or ***neighborPortID*** is notified by the related ED-STM1E notification.

If ***ndetmd***=AUTO a change of the attribute ***neighborASTNNodeID*** is notified by the related ED-STM1E notification.



ED-STM1: Edit STM1 port

The ED-STM1 command is used to provision all parameters related to optical STM1 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
 Priority: 1
 Abortable: no

Input format Command Syntax: ED-STM1:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
3. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM1 port is created, it is used when *sdfsmode*=BURST.
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM1 port is created, it is used when *sdfsmode*=BURST.

4. **degthr** – Signal Degrade Threshold
See definition of output parameter **degthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM1 port is created, it is used when **sdfsmode**=POISSON.
5. **dexcthr** – Excessive Degrade Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM1 port is created, it is used when **sdfsmode**=POISSON.
6. **exprstrc** – Value of Expected J0
See definition of output parameter **exprstrc** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. **femspm** – Far-end Multiplex Section Enable
See definition of output parameter **femspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. **frcdus** – Force to DUS
See definition of output parameter **frcdus** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. **inputsig** – Tributary Input Signal Rate List
See definition of output parameter **inputsig** in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
10. **istd** – Interface Standard
See definition of output parameter **istd** in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
11. **ndetmd** – Neighbor Detection Mode
See definition of output parameter **ndetmd** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
12. **neighborASTNNodeID** - Neighbor ASTN Node Id
See definition of output parameter **neighborASTNNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. **neighborNodeID** – Neighbor Node Id
See definition of output parameter **neighborNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. **neighborPortID** – Neighbor Port Id
See definition of output parameter **neighborPortID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

15. nemspm – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
16. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
17. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
18. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. portClass – Port Class
See definition of output parameter *portClass* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
20. portControl – Port Control
See definition of output parameter *portControl* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
21. propagationDelay - Propagation Delay
See definition of output parameter *propagationDelay* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
22. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
23. rsmstca – RS/MS TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. rspm – RS PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. rstimca – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

26. *rstimmon* – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. *sdhpn* – SDH ASAP
See definition of output parameter *sdhpn* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
28. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. *strefmt* – Format of incoming J0
See definition of output parameter *strefmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).

Output format If the ED-STM1 command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

Behavior

The command modifies the attributes (listed in the *spec_block* parameters part of this command) of the addressed port entity according to the parameters given with this command.

The modification is reported by means of an ED-STM1 notification for port (except for parameter *istd*; see below).

Switching of interface standard – Ignore other parameters

If additional parameters beside *istd* are specified with the *ED-rr* command they will be ignored by the NE.

This simple approach has the advantage that all ambiguous situations are avoided and it is not necessary to implement an order or follow a certain sequence when evaluating the parameters.

Switching of interface standard – FM impact

The change of the interface standard of a port from SDH to SONET has the following impact related to fault management:

- all SDH alarms related to that port are cleared
- the corresponding SONET alarms are raised.

Supply outgoing J0 trace value and format together

When changing the format of the outgoing J0 trace *strcwfmt*, the parameter *strcout* specifying the outgoing J0 trace is always supplied within the same TL1-command to always have a consistent set of trace format and value.

Supply outgoing J0 trace value according to format of outgoing J0

When changing the outgoing J0 trace value, the format must be according to the format parameter *strcwfmt* for the outgoing J0 trace.

Switching of interface standard – Impact on port parameters

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching of interface standard – Side effects on tributaries

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching of interface standard – notification behavior

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching of interface standard – PM impact

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Disabling of PM monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Changing TCA mode from TR-RTR to TR-only

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to EDGE

When *portClass* is set to EDGE for a port, the parameter *trbmd* shall be set to FIXED. This shall be reported by an ED-STM1 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on *loca*, *locz* when setting *portClass* from EDGE to TRADITIONAL when port is involved in a 2F or 4F BLSR/MSSPRING protection group

For all tributaries of that port the *loca*, *locz* parameters shall be reset to their default values (empty string). This is reported by an ED-STS1 (istd=SONET for the port) or ED-VC3 (istd=SDH for the port) notification using a range over the port.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is INNI

When *portClass* has the value INNI for a port, setting of the following parameters shall be inhibited:

- *exprstrc*
- *rstimca*
- *rstimmon*
- *strcfmt*

- *strcout*
- *strewfmt*.

At the moment *portClass* is changed away from INNI the parameters are set back to their default values. This shall be reported by means of an ED-STM1 notification.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is different from INNI

When *portClass* has a value being different from INNI for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed to INNI:

- *ndetmd*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *adminCost*, *srlgList*, *link_includeID*.

At the moment the *portClass* is changed to INNI the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is different from INNI

When *portClass* has a value being different from INNI for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed to INNI: *neighborASTNNodeID*.

At the moment the *portClass* is changed to INNI the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is TRADITIONAL

When *portClass* has the value TRADITIONAL for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed away from TRADITIONAL: *portControl*.

At the moment the *portClass* is changed away from TRADITIONAL the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on *portControl* when changing *portClass*

When *portClass* is changed *portControl* shall be set to NORMAL.

ONNS specific behaviour - Impact on port parameter settings when *ndetmd* is set to AUTO

When *ndetmd* is set to AUTO for a port, the parameters *neighborNodeID* and *neighborPortID* shall keep their current values until automatic neighbor detection delivers new valid values.

When *ndetmd* is set to AUTO for a port, the parameter *neighborASTNNodeID* shall keep its current value until automatic neighbor detection delivers a new valid value.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to AUTO

When *portClass* is set to INNI and *ndetmd* is set to AUTO for a port, the parameter *pmode* shall be set to MONITORING. This is reported by an ED-STM1 notification for the parameter *pmode*.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to MAN

When *portClass* is set to INNI and *ndetmd* is set to MAN for a port, the parameters *rstimca* and *rstimmon* shall be set to DISABLE. This is reported by an ED-STM1 notification for the parameters *rstimca* and *rstimmon*.

ONNS specific behaviour - Impact on tributary parameter settings when *portClass* is set to INNI

When *portClass* is set to INNI, the parameter *hptimmon* shall be set to DISABLE for all tributaries located on this port. This shall be reported by ED-VC3 notifications for the parameter *hptimmon*.

Example input/output

```
ED-STM1:UNITE-NE:1-1-#-#-1-1:123456:::INPUTSIG=14,
UNEQUIPOSIG=14;
    UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
    UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
    "TIME=08-00-12,DATE=00-11-28:ED-STM1:1-1-#-#-1-1
    ::inputsig=14,unequiposig=14:"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-STM1 command.

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: TCA profile exists

See definition of validation rule in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Validation rule: *inputsig* consistent with existing cross-connections

Check of the consistency of the structure of the input signal (*inputsig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent input signal

Validation rule: *unequiposig* consistent with existing cross-connections

Check of the consistency of the structure of the output signal (*unequiposig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent output signal

Validation rule: no cross-connections for *istd* change

Check that the interface standard parameter (*istd*) is not changed when cross-connections are still on this port.

Error code: SNVS - Status, Not in Valid State, cross-connections are still existing

Validation rule: no loopbacks for *istd* change

Check that the interface standard parameter (*istd*) is not changed when cross-connection loopback is still on this port.

Error code: SNVS - Status, Not in Valid State, a loopback is existing

Validation rule: no ONNS for interface standard change

Check that the interface standard parameter (*istd*) is not changed if ONNS functionality is available.

This means:

- *portClass* must be TRADITIONAL or
- *portControl* must be LOCKOUT.

Error code: SNVS - Status, Not in Valid State, Swiss access possible

Validation rule: no protection for istd change

Check that the interface standard parameter (*istd*) is not changed when this port is in an protection group.

Error code: SNVS - Status, Not in Valid State, a protection group is existing

Validation rule: servcond must be enabled when timing source

Check that the *servcond* is not disabled when the port is used as a timing source.

Error code: SNVS - Status, Not in Valid State, Timing reference is assigned to this port

Validation rule: *servcond* must be enabled when DCC enabled

Check that the *servcond* is not disabled when DCC channels are still existing for this port.

Error code: SNVS - Status, Not in Valid State, DCC channels are active for this port

Validation rule: *servcond* must be enabled when *portClass*=INNI

Check that the *servcond* is not OUTOFSERVICE when *portClass*=INNI.

Error code: SNVS - Status, Not in Valid State, can not disable *servcond* for INNI ports

Validation rule: *servcond* must be disabled for facility loopback

Check that the *servcond* is not enabled when a facility loopback is existing for this port.

Error code: SNVS - Status, Not in Valid State, Facility Loopback is active for this port

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation rule: Supply of outgoing J0 trace

Check that an outgoing J0 trace value (*strcout*) is supplied, too, if the format of the outgoing J0 trace (*strcwfnt*) is changed.

Error code: IDNC - Input, Data Not Consistent, a new trace value must also be supplied for a trace format change.

Validation rule: transmitted path trace length

Check that the length of the outgoing J0 trace value (*strcout*) fits to the length given by outgoing J0 trace mode, i.e. write format (*strcwfnt*).

Error code: IDNC - Input, Data, Not Consistent, strcout length must match the given outgoing J0 trace mode.

Check CCB against ptype and istd

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

ONNS specific validation rule: *portClass* only settable when *xcsetup*=SWISS

Modification of the *portClass* parameter shall only be allowed when *xcsetup*=SWISS.

Error code: SNVS - Status, Not in Valid State, Swiss not enabled

ONNS specific validation rule: Some parameters not settable for ports of *portClass* INNI

The following parameter is not changeable for ports with *portClass* INNI: *trbmd*.

Error Code: SNVS - Status, Not in Valid State, portClass must not be INNI

ONNS specific validation rule: Some parameters not settable for ports of *ndetmd* AUTO

The following parameters shall not be changeable for ports with *ndetmd* AUTO: *neighborNodeID*, *neighborPortID*, *neighborAST-NodeID*.

Error Code: SNVS - Status, Not in Valid State, ndetmd must not be AUTO

ONNS specific validation rule: Additional parameters required when setting *ndetmd* to MAN

Values for the following parameters must be given, if *ndetmd* is changed to MAN: *neighborNodeID*, *neighborPortID*

Error Code: IDNV - Input, Data Not Valid, additional parameters *neighborNodeID* and *neighborPortID* required

ONNS specific validation rule: Additional parameters required when setting *ndetmd* to MAN

A values for the following parameter must be given, if *ndetmd* is changed to MAN: *neighborASTNNodeID*.

Error Code: IDNV - Input, Data Not Valid, additional parameter required

ONNS specific validation rule: No setting of duplicate *neighborASTNNodeID* and *neighborPortID* parameter combination

Setting of the parameters *neighborASTNNodeID* and *neighborPortID* shall only be possible, if the same combination of values does not already exists for a different INNI port in the system.

Error code: IDNV - Input, Data Not Valid, duplicate neighbor port information

ONNS specific validation rule: Setting of *portClass* to INNI not possible for ports in protection groups

It shall not be allowed to change *portClass* of a port to INNI, if this port is member of a Line/MS protection scheme.

Error Code: SNVS - Status, Not in Valid State, Port must not be member of a protection group

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if no cross-connection existing

It shall not be allowed to change *portClass* to INNI, if cross-connections on that port are still existing.

Error Code: SNVS - Status, Not in Valid State, Cross-connections still existing

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if service condition not OUTOFSERVICE

It shall not be allowed to change *portClass* to INNI, if *servcond*=OUTOFSERVICE.

Error code: SNVS - Status, Not in Valid State, port in out of service state

ONNS specific validation rule: Setting of *portControl* to NORMAL only possible, if no cross-connection loopbacks existing

It shall not be allowed to change *portControl* to NORMAL, if there are existing cross-connection loopbacks associated with the port.

Error code: SNVS - Status, Not in Valid State, loopbacks present

ONNS specific validation rule: Setting of some INNI properties only possible, if no cross-connection existing

It shall not be allowed to change one of the following parameters (provided this parameter is supported in a particular release at all) on a port with *portClass*=INNI, if cross-connections on that port are existing:

- *adminCost, link_IncludeID, neighborNodeID, neighborPortID, propagationDelay, srlgList, neighborASTNNodeID*

Error code: SNVS - Status, Not in Valid State, no XCs allowed for change of INNI parameters

ONNS specific validation rule: Setting of INNI properties only possible for INNI ports

The system allows to change the following parameters only if the port class (*portClass*) is set to INNI and the port control (*portControl*) is set to LOCKOUT: *adminCost, link_IncludeID, neighborNodeID, neighborPortID, propagationDelay, srlgList*.

Error code: SNVS - Status, Not in Valid State, only allowed for INNI port in lockout state

ONNS specific validation rule: Setting of *portClass* to INNI or EDGE only possible, if no test access session active

It shall not be allowed to change *portClass* of a port to INNI when a tributary related to this port is used in a test access session either as tributary under test or as test access tributary.

Error code: SNVS - Status, Not in Valid State, a test access session exists

ONNS specific validation rule: Setting of *portClass* away from INNI only possible, if the port is not in use

For setting *portClass* from INNI to TRADITIONAL or EDGE the following must be fulfilled:

- No cross-connection may exist on any tributary of the port
- *portControl* must be LOCKOUT.

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Changing of *portClass* from INNI to EDGE or TRADITIONAL only possible, if no DCC for SCN is enabled on the port

For changing the value of the parameter *portClass* no DCC of the port must be enabled for the SCN.

Error Code: SNVS - Status, Not in Valid State, DCC on SCN may not be enabled

ONNS specific validation rule: Setting of *portClass* from EDGE to TRADITIONAL only possible, if the tributaries on the port are not in use by ONNS:

For setting *portClass* from EDGE to TRADITIONAL the following must be fulfilled:

- No cross-connections of xconcls=NN may exist on any tributary of the port
- *portControl* must be LOCKOUT.

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Setting of *portClass* from TRADITIONAL to EDGE

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1+1 MSP group.

Error code: SNVS - Status, Not in Valid State, Port must not be a 1+1 protection port

ONNS specific validation rule: Setting of *portClass* from TRADITIONAL to EDGE

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1:1 MSP group.

Error code: SNVS - Status, Not in Valid State, Port must not be a 1:1 protection port

ONNS specific validation rule: Not allowed to change the *portClass* directly from INNI to EDGE or EDGE to INNI

It shall not be allowed to change the *portClass* of a port directly from INNI to EDGE or from EDGE to INNI.

Error code: SNVS - Status, Not in Valid State, Port Class must not be EDGE or INNI

ONNS specific validation rule: Some parameters not settable for ports of *portClass*=INNI

The following parameters shall not be changeable for ports with *portClass*=INNI: *exprstrc*, *rstimca*, *rstimmon*, *strcfmt*, *strcout*, *strcwfmt*.

Error code: SNVS - Status, Not in Valid State, J0 parameters can not be set for INNI ports

Related TL1 messages [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#)

References GR-199-CORE (ED-*rr*)



ED-STM1 notification

Output format The ED-STM1 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-STM1:*aid::spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
5. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *dexcthr* – Excessive Degrade Threshold
See definition of output parameter *dexcthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *femspm* – Far-end Multiplex Section Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. **frcdus** – Force to DUS
See definition of output parameter **frcdus** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. **fsflpbkstat** – Far Side Facility Loopback Status
See definition of output parameter **fsflpbkstat** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
11. **inputsig** – Tributary Input Signal Rate List
See definition of output parameter **inputsig** in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
12. **istd** – Interface Standard
See definition of input parameter **istd** in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
13. **lpbk** – Loopback
See definition of output parameter **lpbk** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. **ndetmd** – Neighbor Detection Mode
See definition of output parameter **ndetmd** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. **neighborASTNNodeID** - Neighbor ASTN Node Id
See definition of output parameter **neighborASTNNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. **neighborNodeID** – Neighbor Node Id
See definition of output parameter **neighborNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. **nemspm** – MS Near-End PM Enable
See definition of output parameter **nemspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. **pmmsfeses** – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter **pmmsfeses** in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
19. **pmmsneses** – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter **pmmsneses** in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
20. **pmode** – Port Mode
See definition of output parameter **pmode** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

21. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter **pmrsneses** in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
22. **portClass** – Port Class
See definition of output parameter **portClass** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
23. **portControl** – Port Control
See definition of output parameter **portControl** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **propagationDelay** - Propagation Delay
See definition of output parameter **portpropagationDelayControl** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **rsmstca** – RS/MS TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. **rspm** – RS PM Enable
See definition of output parameter **rspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter **rstimca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter **rstimmon** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **sdhpn** – SDH ASAP
See definition of output parameter **sdhpn** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **servcond** – Service Condition
See definition of output parameter **servcond** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. **srlgList** – Shared Risk Link Group Identity List
See definition of output parameter **srlgList** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

33. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
38. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).

Example output

```
ED-STM1:UNITE-NE:1-1-#-#-1-1:123456:::INPUTSIG=14,
UNEQUIPOSIG=14;
  UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
  UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
  "TIME=08-00-12,DATE=00-11-28:ED-STM1:1-1-#-#-1-1::
  inputsig=14,unequiposig=14:"
;
```



ENT-STM1 notification

Output format The ENT-STM1 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-STM1:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
5. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *femspm* – Far-end Multiplex Section Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. **frcdus** – Force to DUS
See definition of output parameter **frcdus** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. **fsflpbkstat** – Far Side Facility Loopback Status
See definition of output parameter **fsflpbkstat** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
11. **inputsig** – Tributary Input Signal Rate List
See definition of output parameter **inputsig** in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
12. **istd** – Interface Standard
See definition of input parameter **istd** in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
13. **lpbk** – Loopback
See definition of output parameter **lpbk** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. **ndetmd** – Neighbor Detection Mode
See definition of output parameter **ndetmd** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. **neighborASTNNodeID** - Neighbor ASTN Node Id
See definition of output parameter **neighborASTNNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. **neighborNodeID** – Neighbor Node Id
See definition of output parameter **neighborNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. **neighborPortID** – Neighbor Port Id
See definition of output parameter **neighborPortID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. **nemspm** – MS Near-End PM Enable
See definition of output parameter **nemspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. **pmmsfeses** – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter **pmmsfeses** in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
20. **pmmsneses** – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter **pmmsneses** in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).

21. **pmode** – Port Mode
See definition of output parameter ***pmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter ***pmrsneses*** in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
23. **portClass** – Port Class
See definition of output parameter ***portClass*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **portControl** – Port Control
See definition of output parameter ***portControl*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **propagationDelay** - Propagation Delay
See definition of output parameter ***portpropagationDelayControl*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
26. **rsmstca** – RS/MS TCA Profile Pointer
See definition of output parameter ***rsmstca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. **rspm** – RS PM Enable
See definition of output parameter ***rspm*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter ***rstimca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter ***rstimmon*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sdhpn** – SDH ASAP
See definition of output parameter ***sdhpn*** in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
31. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter ***sdsfmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. **servcond** – Service Condition
See definition of output parameter ***servcond*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

33. srlgList – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
34. strcfmt – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. strcout – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. strcfmt – Format of outgoing J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. tcamd – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
38. trbmd – Tributary Mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
39. unequipsig – Unequipped Output Signal List
See definition of output parameter *unequipsig* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).

Example output

```
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ENT-STM1:1-1-#-#-1-
1::servcond=DISABLE,inputsig=14,...,unequipsig=14"
;
```



DLT-STM1 notification

Output format The DLT-STM1 notification uses the general format of a REPT DBCHG (Report Database Change) notification.
Syntax: DLT-STM1:*aid*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).

Example output UNITE-NE 00-11-20 8:01:03
A 611 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-STM1:1-1-#-#-4-1"
;



ED-STM1 autonomous notifications

LOS for transmission port STM1 clears

If LOS is cleared and current port mode is AUTO, then ***pmode*** is updated (new value: MON). This update is reported via ED-STM1 notification with parameter ***pmode***.

Change of neighbor node and neighbor port Information

If ***ndetmd***=AUTO a change of the attributes ***neighborNodeID*** or ***neighborPortID*** is notified by the related ED-STM1 notification.

If ***ndetmd***=AUTO a change of the attribute ***neighborASTNNodeID*** is notified by the related ED-STM1 notification.



ED-STM4: Edit STM4 port

The ED-STM4 command is used to provision all parameters related to optical STM4 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
 Priority: 1
 Abortable: no

Input format Command Syntax: ED-STM4:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 See definition of output parameter *aid* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. adminCost - Administrative Cost
 See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. brstintvl – Bursty Interval
 See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
 The setting of this parameter is allowed when the related STM4 port is created, it is used when *sdfsmode*=BURST.
3. brstthr – Bursty Error Threshold
 See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
 The setting of this parameter is allowed when the related STM4 port is created, it is used when *sdfsmode*=BURST.

4. **degthr** – Signal Degrade Threshold
See definition of output parameter **degthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM4 port is created, it is used when **sdfsmode**=POISSON.
5. **dexcthr** – Excessive Degrade Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM4 port is created, it is used when **sdfsmode**=POISSON.
6. **exprstrc** – Value of Expected J0
See definition of output parameter **exprstrc** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. **femspm** – Far-end Multiplex Section Enable
See definition of output parameter **femspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. **frcdus** – Force to DUS
See definition of output parameter **frcdus** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. **inputsig** – Tributary Input Signal Rate List
See definition of output parameter **inputsig** in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
10. **istd** – Interface Standard
See definition of output parameter **istd** in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
11. **ndetmd** – Neighbor Detection Mode
See definition of output parameter **ndetmd** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
12. **neighborASTNNodeID** - Neighbor ASTN Node Id
See definition of output parameter **neighborASTNNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. **neighborNodeID** – Neighbor Node Id
See definition of output parameter **neighborNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. **neighborPortID** – Neighbor Port Id
See definition of output parameter **neighborPortID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

15. nemspm – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
16. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
17. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
18. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
20. portClass – Port Class
See definition of output parameter *portClass* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
21. portControl – Port Control
See definition of output parameter *portControl* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
22. propagationDelay - Propagation Delay
See definition of output parameter *portpropagationDelayControl* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
23. rsmstca – RS/MS TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. rspm – RS PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. rstimca – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

26. *rstimmon* – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. *sdhpn* – SDH ASAP
See definition of output parameter *sdhpn* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
28. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).

Output format If the ED-STM4 command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

Behavior

The command modifies the attributes (listed in the *spec_block* parameters part of this command) of the addressed port entity according to the parameters given with this command.

The modification is reported by means of an ED-STM16 notification for port (except for parameter *istd*; see below).

Switching of interface standard – Ignore other parameters

If additional parameters beside *istd* are specified with the *ED-rr* command they will be ignored by the NE.

This simple approach has the advantage that all ambiguous situations are avoided and it is not necessary to implement an order or follow a certain sequence when evaluating the parameters.

Switching of interface standard – FM impact

The change of the interface standard of a port from SDH to SONET has the following impact related to fault management:

- all SDH alarms related to that port are cleared
- the corresponding SONET alarms are raised.

Supply outgoing J0 trace value and format together

When changing the format of the outgoing J0 trace *strcwfmt*, the parameter *strcout* specifying the outgoing J0 trace is always supplied within the same TL1-command to always have a consistent set of trace format and value.

Supply outgoing J0 trace value according to format of outgoing J0

When changing the outgoing J0 trace value, the format must be according to the format parameter *strcwfmt* for the outgoing J0 trace.

Switching of interface standard – Impact on port parameters

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching of interface standard – Side effects on tributaries

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching of interface standard – notification behavior

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching of interface standard – PM impact

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Disabling of PM monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Changing TCA mode from TR-RTR to TR-only

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to INNI

When *portClass* is set to INNI for a port, the parameter *trbmd* shall be set to *adaptive*. This shall be reported by an ED-STM4 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to EDGE

When *portClass* is set to EDGE for a port, the parameter *trbmd* shall be set to FIXED. This shall be reported by an ED-STM4 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on *loca*, *locz* when setting *portClass* from EDGE to TRADITIONAL when port is involved in a 2F or 4F BLSR/MSSPRING protection group

For all tributaries of that port the *loca*, *locz* parameters shall be reset to their default values (empty string). This is reported by an ED-STS1 (istd=SONET for the port) or ED-VC3 (istd=SDH for the port) notification using a range over the port.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is INNI

When *portClass* has the value INNI for a port, setting of the following parameters will be accepted, but will have no impact until *portClass* is changed away from INNI:

- *exprstrc*
- *rstimca*
- *rstimmon*
- *strcfmt*
- *strcout*
- *strcwfmt.*

At the moment *portClass* is changed away from INNI the parameters are set back to their default values. This shall be reported by means of an ED-STM4 notification.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is different from INNI

When *portClass* has a value being different from INNI for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed to INNI:

- *ndetmd, neighborNodeID, neighborPortID, propagationDelay, adminCost, srlgList, link_includeID, neighborASTNNodeID.*

At the moment the *portClass* is changed to INNI the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is TRADITIONAL

When *portClass* has the value TRADITIONAL for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed away from TRADITIONAL: *portControl*.

At the moment the *portClass* is changed away from TRADITIONAL the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on *portControl* when changing *portClass*

When *portClass* is changed *portControl* shall be set to NORMAL.

ONNS specific behaviour - Impact on port parameter settings when *ndetmd* is set to AUTO

When *ndetmd* is set to AUTO for a port, the parameters *neighborNodeID*, *neighborPortID* and *neighborASTNNodeID* shall keep their current values until automatic neighbor detection delivers new valid values.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to AUTO

When *portClass* is set to INNI and *ndetmd* is set to AUTO for a port, the parameter *pmode* shall be set to MONITORING. This is reported by an ED-STM4 notification for the parameter *pmode*.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to MAN

When *portClass* is set to INNI and *ndetmd* is set to MAN for a port, the parameters *rstimca* and *rstimmon* shall be set to DISABLE. This is reported by an ED-STM4 notification for the parameters *rstimca* and *rstimmon*.

ONNS specific behaviour - Impact on tributary parameter settings when *portClass* is set to INNI

When *portClass* is set to INNI, the parameter *hptimmon* shall be set to DISABLE for all tributaries located on this port.. This shall be reported by ED-VC3 notifications for the parameter *hptimmon*.

Example input/output

```
ED-STM4:UNITE-NE:1-1-#-#-1-1:123456:::INPUTSIG=14-33-24,UNEQUIPOSIG=14-33-24;
  UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
  UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
  "TIME=08-00-12,DATE=00-11-28:ED-STM4:1-1-#-#-1-1::inputsig=14-33-24,unequiposig=14-33-24:"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-STM4 command.

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: TCA profile exists

See definition of Validation rule in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Validation rule: *inputsig* consistent with existing cross-connections

Check of the consistency of the structure of the input signal (*inputsig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent input signal

Validation rule: *unequiposig* consistent with existing cross-connections

Check of the consistency of the structure of the output signal (*unequiposig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent output signal

Validation rule: no cross-connections for *istd* change

Check that the interface standard parameter (*istd*) is not changed when cross-connections are still on this port.

Error code: SNVS - Status, Not in Valid State, cross-connections are still existing

Validation rule: no loopbacks for *istd* change

Check that the interface standard parameter (*istd*) is not changed when cross-connection loopback is still on this port.

Error code: SNVS - Status, Not in Valid State, a loopback is existing

Validation rule: no protection for *istd* change

Check that the interface standard parameter (*istd*) is not changed when this port is in an protection group.

Error code: SNVS - Status, Not in Valid State, a protection group is existing

Validation rule: no ONNS for interface standard change

Check that the interface standard parameter (istd) is not changed if ONNS functionality is available.

This means:

- *portClass* must be TRADITIONAL or
- *portControl* must be LOCKOUT.

Error code: SNVS - Status, Not in Valid State, Swiss access possible

Validation rule: *servcond* must be enabled when timing source

Check that the *servcond* is not disabled when the port is used as a timing source.

Error code: SNVS - Status, Not in Valid State, Timing reference is assigned to this port

Validation rule: *servcond* must be enabled when DCC enabled

Check that the *servcond* is not disabled when DCC channels are still existing for this port.

Error code: SNVS - Status, Not in Valid State, DCC channels are active for this port

Validation rule: *servcond* must be enabled when portClass=INNI

Check that the *servcond* is not OUTOFSERVICE when portClass=INNI.

Error code: SNVS - Status, Not in Valid State, can not disable *servcond* for INNI ports

Validation rule: *servcond* must be disabled for facility loopback

Check that the *servcond* is not enabled when a facility loopback is existing for this port.

Error code: SNVS - Status, Not in Valid State, Facility Loopback is active for this port

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation rule: Supply of outgoing J0 trace

Check that an outgoing J0 trace value (*strcout*) is supplied, too, if the format of the outgoing J0 trace (*strcwfnt*) is changed.

Error code: IDNC - Input, Data Not Consistent, a new trace value must also be supplied for a trace format change.

Validation rule: transmitted path trace length

Check that the length of the outgoing J0 trace value (*strcout*) fits to the length given by outgoing J0 trace mode, i.e. write format (*strcwfnt*).

Error code: IDNC - Input, Data Not Consistent, strcout length must match the given outgoing J0 trace mode.

Check CCB against ptype and istd

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

ONNS specific validation rule: *portClass* only settable when *xcsetup*=SWISS

Modification of the *portClass* parameter shall only be allowed when *xcsetup*=SWISS.

Error code: SNVS - Status, Not in Valid State, Swiss not enabled

ONNS specific validation rule: Some parameters not settable for ports of *portClass* INNI

The following parameters shall not be changeable for ports with *portClass* INNI: *trbmd*.

Error Code: SNVS - Status, Not in Valid State, portClass must not be INNI

ONNS specific validation rule: Some parameters not settable for ports of *ndetmd* AUTO

The following parameters shall not be changeable for ports with *ndetmd* AUTO: *neighborNodeID*, *neighborPortID*, *neighborASTNNodeID*.

Error Code: SNVS - Status, Not in Valid State, *ndetmd* must not be AUTO

ONNS specific validation rule: Additional parameters required when setting *ndetmd* to MAN

Values for the following parameters must be given, if *ndetmd* is changed to MAN: *neighborNodeID*, *neighborPortID*

Error Code: IDNV - Input, Data Not Valid, additional parameters *neighborNodeID* and *neighborPortID* required

ONNS specific validation rule: Additional parameters required when setting *ndetmd* to MAN

A value for the following parameter must be given, if *ndetmd* is changed to MAN: *neighborASTNNodeID*

Error Code: IDNV - Input, Data Not Valid, additional parameter required

ONNS specific validation rule: No setting of duplicate *neighborASTNNodeID* and *neighborPortID* parameter combination

Setting of the parameters *neighborASTNNodeID* and *neighborPortID* shall only be possible, if the same combination of values does not already exists for a different INNI port in the system.

Error code: IDNV - Input, Data Not Valid, duplicate neighbor port information

ONNS specific validation rule: Setting of *portClass* to INNI not possible for ports in protection groups

It shall not be allowed to change *portClass* of a port to INNI, if this port is member of a Line/MS protection scheme.

Error Code: SNVS - Status, Not in Valid State, Port must not be member of a protection group

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if no cross-connection existing

It shall not be allowed to change *portClass* to INNI, if cross-connections on that port are still existing.

Error Code: SNVS - Status, Not in Valid State,
Cross-connections still existing

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if service condition not OUTOFSERVICE

It shall not be allowed to change *portClass* to INNI, if
servcond=OUTOFSERVICE.

Error code: SNVS - Status, Not in Valid State, port in out
of service state

ONNS specific validation rule: Setting of *portControl* to NORMAL only possible, if no cross-connection loopbacks existing

It shall not be allowed to change *portControl* to NORMAL, if there
are existing cross-connection loopbacks associated with the port.

Error code: SNVS - Status, Not in Valid State, loopbacks
present

ONNS specific validation rule: Setting of some INNI properties only possible, if no cross-connection existing

It is not allowed to change one of the following parameters (provided
this parameter is supported in a particular release at all) on a port with
portClass=INNI, if cross-connections on that port are existing:

- *adminCost, link_IncludeID, neighborNodeID, neighborPortID, propagationDelay, srlgList, neighborASTNNodeID.*

Error code: SNVS - Status, Not in Valid State, no XCs
allowed for change of iNNI parameters

ONNS specific validation rule: Setting of INNI properties only possible for INNI ports

The system allows to change the following parameters only if the port
class (*portClass*) is set to INNI and the port control (*portControl*) is
set to LOCKOUT: *adminCost, link_IncludeID, neighborNodeID, neighborPortID, propagationDelay, srlgList.*

Error code: SNVS - Status, Not in Valid State, only allowed
for INNI port in lockout state

ONNS specific validation rule: Setting of *portClass* to INNI or EDGE only possible, if no test access session active

It shall not be allowed to change *portClass* of a port to INNI or
EDGE when a tributary related to this port is used in a test access
session either as tributary under test or as test access tributary.

Error code: SNVS - Status, Not in Valid State, a test access session exists

ONNS specific validation rule: Setting of *portClass* away from INNI only possible, if the port is not in use

For setting *portClass* from INNI to TRADITIONAL or EDGE the following must be fulfilled:

- No cross-connection may exist on any tributary of the port
- *portControl* must be LOCKOUT.

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Changing of *portClass* from INNI to EDGE or TRADITIONAL only possible, if no DCC for SCN is enabled on the port

For changing the value of the parameter *portClass* no DCC of the port must be enabled for the SCN.

Error Code: SNVS - Status, DCC on SCN may not be enabled

ONNS specific validation rule: Setting of *portClass* from EDGE to TRADITIONAL only possible, if the tributaries on the port are not in use by ONNS:

For setting *portClass* from EDGE to TRADITIONAL the following must be fulfilled:

- No cross-connections of xconcls=NN may exist on any tributary of the port
- *portControl* must be LOCKOUT.

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Setting of *portClass* from TRADITIONAL to EDGE

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1+1 MSP group.

Error code: SNVS - Status, Not in Valid State, Port must not be a 1+1 protection port

ONNS specific validation rule: Setting of *portClass* from TRADITIONAL to EDGE

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1:1 MSP group.

Error code: SNVS - Status, Not in Valid State, Port must not be a 1:1 protection port

ONNS specific validation rule: Not allowed to change the portClass directly from INNI to EDGE or EDGE to INNI

It shall not be allowed to change the portClass of a port directly from INNI to EDGE or from EDGE to INNI.

Error code: SNVS - Status, Not in Valid State, Port Class must not be EDGE or INNI

ONNS specific validation rule: Some Parameters not settable for ports of portClass=INNI

The following parameters shall not be changeable for ports with *portClass*=INNI: *exprstrc*, *rstimca*, *rstimmon*, *strcfmt*, *strcout*, *strcfwfmt*.

Error code: SNVS - Status, Not in Valid State, J0 parameters can not be set for INNI ports

Related TL1 messages [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#)

References GR-199-CORE (ED-rr)



ED-STM4 notification

Output format The ED-STM4 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-STM4:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
5. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *femspm* – Far-end Multiplex Section Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. fsflpbkstat – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
11. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
12. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
13. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. nemspm – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
20. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).

21. **pmode** – Port Mode
See definition of output parameter ***pmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter ***pmrsneses*** in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
23. **portClass** – Port Class
See definition of output parameter ***portClass*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **portControl** – Port Control
See definition of output parameter ***portControl*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **propagationDelay** - Propagation Delay
See definition of output parameter ***propagationDelay*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
26. **rsmstca** – RS/MS TCA Profile Pointer
See definition of output parameter ***rsmstca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. **rspm** – RS PM Enable
See definition of output parameter ***rspm*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter ***rstimca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter ***rstimmon*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sdhpn** – SDH ASAP
See definition of output parameter ***sdhpn*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter ***sdsfmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. **servcond** – Service Condition
See definition of output parameter ***servcond*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

- 33. srlgList – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 34. strcfmt – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 35. strcout – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 36. strcwfmt – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 37. tcamd – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 38. trbmd – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 39. unequiposig – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).

Example output

```
ED-STM4:UNITE-NE:1-1-#-#-1-1:123456:::INPUTSIG=14-33-24,UNEQUIPOSIG=14-33-24;
UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ED-STM4:1-1-#-#-1-1::inputsig=14-33-24,unequiposig=14-33-24:"
;
```



ENT-STM4 notification

Output format The ENT-STM4 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-STM4:*aid::spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
5. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *femspm* – Far-end Multiplex Section Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. fsflpbkstat – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
11. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
12. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM4: Edit STM4 port” \(5-334\)](#).
13. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. nemspm – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
20. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).

21. **pmode** – Port Mode
See definition of output parameter ***pmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter ***pmrsneses*** in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
23. **portClass** – Port Class
See definition of output parameter ***portClass*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **portControl** – Port Control
See definition of output parameter ***portControl*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **propagationDelay** - Propagation Delay
See definition of output parameter ***propagationDelay*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
26. **rsmstca** – RS/MS TCA Profile Pointer
See definition of output parameter ***rsmstca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. **rspm** – RS PM Enable
See definition of output parameter ***rspm*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter ***rstimca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter ***rstimmon*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sdhpn** – SDH ASAP
See definition of output parameter ***sdhpn*** in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
31. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter ***sdsfmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. **servcond** – Service Condition
See definition of output parameter ***servcond*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

- 33. srlgList – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 34. strcfmt – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 35. strcout – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 36. strcwfmt – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 37. tcamd – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 38. trbmd – Tributary Mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 39. unequiposig – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).

Example output

```
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ENT-STM4:1-1-#-#-1-
1::servcond=DISABLE,inputsig=44,...,unequiposig=44"
;
```



DLT-STM4 notification

Output format The DLT-STM4 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: DLT-STM4:*aid*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).

Example output

```
UNITE-NE 00-11-20 8:01:03
A 611 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-STM4:1-1-#-#-4-1"
;
```



ED-STM4 autonomous notifications

LOS for transmission port STM4 clears	If LOS is cleared and current port mode is AUTO, then <i>pmode</i> is updated (new value: MON). This update is reported via ED-STM4 notification with parameter <i>pmode</i> .
Change of neighbor node and neighbor port Information	If <i>ndetmd</i> =AUTO a change of the attributes <i>neighborNodeID</i> , <i>neighborPortID</i> or <i>neighborASTNNodeID</i> is notified by the related ED-STM4 notification.



ED-STM16: Edit STM16 port

The ED-STM16 command is used to provision all parameters related to optical STM16 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: no

Input format Command Syntax: ED-STM16:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM16 port is created, it is used when *sdfsmode*=BURST.
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM16 port is created, it is used when *sdfsmode*=BURST.

4. **degthr** – Signal Degrade Threshold
See definition of output parameter **degthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM16 port is created, it is used when **sdfsmode**=POISSON.
5. **dexcthr** – Excessive Degrade Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM16 port is created, it is used when **sdfsmode**=POISSON.
6. **exprstrc** – Value of Expected J0
See definition of output parameter **exprstrc** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. **femspm** – Far-end Multiplex Section Enable
See definition of output parameter **femspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. **frcdus** – Force to DUS
See definition of output parameter **frcdus** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. **inputsig** – Tributary Input Signal Rate List
See definition of output parameter **inputsig** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. **istd** – Interface Standard
Each synchronous optical interface can be set to SDH or SONET.
Type: alphanumeric value set.
Range:
 - SONET
 - SDH.Default: As specified via **istddflt** on system level, see definition in [“RTRV-EQPT \(system\): Retrieve Equipment \(system\)” \(5-45\)](#).
11. **ndetmd** – Neighbor Detection Mode
See definition of output parameter **ndetmd** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
12. **neighborASTNNodeID** - Neighbor ASTN Node Id
See definition of output parameter **neighborASTNNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

13. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. nemspm – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
16. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
20. portClass – Port Class
See definition of output parameter *portClass* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
21. portControl – Port Control
See definition of output parameter *portControl* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
22. propagationDelay - Propagation Delay
See definition of output parameter *propagationDelay* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
23. rsmstca – RS/MS TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

24. *rspm* – RS PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. *rstimca* – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. *rstimmon* – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. *sdhpn* – SDH ASAP
See definition of output parameter *sdhpn* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Output format If the ED-STM16 command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

Behavior

The command modifies the attributes (listed in the *spec_block* parameters part of this command) of the addressed port entity according to the parameters given with this command.

The modification is reported by means of an ED-STM16 notification for port (except for parameter *istd*; see below).

Switching of interface standard – Ignore other parameters

If additional parameters beside *istd* are specified with the *ED-rr* command they will be ignored by the NE.

This simple approach has the advantage that all ambiguous situations are avoided and it is not necessary to implement an order or follow a certain sequence when evaluating the parameters.

Switching of interface standard – FM impact

The change of the interface standard of a port from SDH to SONET has the following impact related to fault management:

- all SDH alarms related to that port are cleared
- the corresponding SONET alarms are raised.

Supply outgoing J0 trace value and format together

When changing the format of the outgoing J0 trace *strcwfmt*, the parameter *strcout* specifying the outgoing J0 trace is always supplied within the same TL1-command to always have a consistent set of trace format and value.

Supply outgoing J0 trace value according to format of outgoing J0

When changing the outgoing J0 trace value, the format must be according to the format parameter *strcwfmt* for the outgoing J0 trace.

Switching of interface standard – Impact on port parameters

Switching of interface standard I:

In detail the following attributes are influenced by switching of the *istd* from SDH to SONET (see also the related RTRV-OCn command for SONET parameter description):

- *brstintvl* is set to the default value
- *brstthr* is set to the default value
- *crstat* may change according to its semantics (see description of *crstat*)
- *femspm* is mapped to *felpm* (no changes)
- *inputsig* is set to the default value
- *istd* is set to SONET
- *nemspm* is mapped to *nelpm* (no changes)
- *rspm* is mapped to *spm* (no changes)
- *rstimca* is set to the default value for a SONET port
- *rstimmon* is set to the default value for a SONET port
- *sdhpn* is mapped to SONET (no changes)
- *sdsfmode* is set to the default value for a SONET port
- *sdthr* is set to the default value for a SONET port
- *sfthr* is set to the default value for a SONET port
- *trbmd* is set to the default value for a SONET port
- *unequiposig* is set to its default value
- *z0outmode* is set to its default value for a SONET port.

All other port parameters remain unchanged.

Switching of interface standard II:

In addition to the list of attributes above the following attributes are influenced by switching of the *istd* from SDH to SONET (see also the related RTRV-OCn command for SONET parameter description):

- *sltca* is set to the default value for a SONET port
- *tcamd* is set to the default value for a SONET port.

The attribute *tcamd* does not exist for SONET ports. SONET ports only support TR-only mode. Thus the mode must be internally set to TR-only.

Switching of interface standard III:

In addition to the list of attributes above the following attributes are influenced by switching of the *istd* from SDH to SONET (see also the related RTRV-OCn command for SONET parameter description):

- *pmmsfeses* is set to the default value for a SONET port
- *pmmsneses* is set to the default value for a SONET port
- *pmrsneses* is set to the default value for a SONET port.

Switching of interface standard – Side effects on tributaries

The switching of *istd* should not result in an deletion and recreation of the tributaries of a port. NE internally there are no differences between SDH and SONET.

In detail the following side-effects apply to the related tributary attributes when switching the *istd* from SDH to SONET (see also the related RTRV-OCn command for SONET parameter description):

- *brstintvl* is set to the default value for a SONET tributary
- *brstthr* is set to the default value for a SONET tributary
- *pse* (PDI-P parameter) is set to the default value for a SONET tributary
- *sdsfmode* is set to the default value for a SONET tributary.

Switching of interface standard – Side effects on tributaries II

In addition to the list of attributes above the following side-effects apply to the related tributary attributes when switching the *istd* from SDH to SONET (see also the related RTRV-OCn command for SONET parameter description):

- *degthr* is set to the default value for an SONET tributary
- *dexcth* is set to the default value for an SONET tributary
- *ptca* shall be set to the default value for a SONET tributary
- *tcamd* is set to the default value for a SONET tributary.

The attribute *tcamd* does not exist for SONET ports. SONET ports only support "TR-only" mode. Thus the mode must be internally set to "TR-only".

Switching of interface standard – Side effects on tributaries III

In addition to the list of attributes above the following side-effects apply to the related tributary attributes when switching the *istd* from SDH to SONET (see also the related RTRV-OCn command for SONET parameter description):

- *pmhpneses* is set to the default value for an SONET tributary
- *pmhpfeses* is set to the default value for an SONET tributary.

The attribute *tcamd* does not exist for SONET ports. SONET ports only support "TR-only" mode. Thus the mode must be internally set to "TR-only".

Switching of interface standard – notification behavior for port attributes

When changing the interface standard *istd* using the ED-STMn command all resulting parameter changes are reported by ED-OCn notifications of the related port rate. This is valid for the parameter *istd* itself as well as for all other parameters which might change as a consequence of changing the interface standard.

Switching of interface standard – notification behavior for tributary attributes

When changing the interface standard *istd* using the ED-STMn command all resulting tributary parameter changes are reported by ED-STS1 notifications.

For efficiency reasons the ED-STS1 notifications shall be sent out as a single notification using a range over the aid which depends on the port rate of the associated port, i.e. the Simple_STS1NumAID field in the STS1NumAID is set to

- 1 - 3, in case of an STM1/OC3 port
- 1 - 12, in case of an STM4/OC12 port
- 1 - 48, in case of an STM16/OC48 port
- 1 - 192, in case of an STM64/OC192 port
- 1 - 768, in case of an STM256/OC768 port.

Switching of interface standard - notification behavior for active TCA events

If the changing of the interface standard *istd* to SONET includes an change of *tcamd* from TR-RTR to TR-only (SONET default value), then all active TCA events of the related entities must be cleared.

Switching of interface standard – PM impact

The change of interface standard has the following impacts w.r.t. existing PM registers:

1. all current bins related to the port will be reset
2. all history bins related to the port remain unchanged
3. all current bins related to tributaries being a member of the port will be reset
4. all history bins related to tributaries being a member of the port remain unchanged.

Retrieving the bins after switching the interface standard may result in a strange reporting behavior:

- When switching the interface standard to SONET the periods before the switch contain SDH-related parameters and values even though the port is addressed as a SONET port.
- When switching the interface standard to SDH the periods before the switch contain SONET-related parameters and values even though the port is addressed as a SDH port.

Disabling of PM monitor

The disabling of a PM monitor shall have the following impacts w.r.t. existing PM registers:

1. stop PM counting
2. all current bins related to the PM monitor shall be deleted
3. all history bins related to the PM monitor shall be deleted

The term PM monitor has the same semantics as the term PM package as used in SRD_PerformanceMonitoring. The number of PM monitors is determined by means of the number of *pm enable attributes*.

PM monitors can be disabled explicitly by means of the *pm enable* attribute or are implicitly disabled as part of a port/tributary deletion.

Additional to the above listed impacts (ID 52924) the disabling of a PM monitor shall have the following impacts: the system has to clear all active TCA events of the deleted PM monitor if TCA mode TR-RTR was selected.

Changing TCA mode from TR-RTR to TR-only

The change of tcamd from TR-RTR (also known as the explicit reset method) to TR-only (also known as the implicit reset method) has the

impact, that all active TCA events of the related entity must be cleared.

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to INNI

When *portClass* is set to INNI for a port, the parameter *trbmd* shall be set to *adaptive*. This shall be reported by an ED-STM16 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to EDGE

When *portClass* is set to EDGE for a port, the parameter *trbmd* shall be set to FIXED. This shall be reported by an ED-STM16 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is INNI

When *portClass* has the value INNI for a port, setting of the following parameters shall be inhibited:

- *exprstrc*
- *rstimca*
- *rstimmon*
- *strcfmt*
- *strcout*
- *strcwfmt*.

At the moment *portClass* is changed away from INNI the parameters are set back to their default values. This shall be reported by means of an ED-STM16 notification.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is different from INNI

When *portClass* has a value being different from INNI for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed to INNI:

- *ndetmd*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *adminCost*, *srlgList*, *link_includeID*, *neighborASTNNodeID*.

At the moment the *portClass* is changed to INNI the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is TRADITIONAL

When *portClass* has the value TRADITIONAL for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed away from TRADITIONAL: *portControl*.

At the moment the *portClass* is changed away from TRADITIONAL the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on *portControl* when changing *portClass*

When *portClass* is changed *portControl* shall be set to NORMAL.

ONNS specific behaviour - Impact on port parameter settings when *ndetmd* is set to AUTO

When *ndetmd* is set to AUTO for a port, the parameters *neighborNodeID*, *neighborPortID* or *neighborASTNNodeID* keeps their current values until automatic neighbor detection delivers new valid values.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to AUTO

When *portClass* is set to INNI and *ndetmd* is set to AUTO for a port, the parameter *pmode* shall be set to MONITORING. This is reported by an ED-STM16 notification for the parameter *pmode*.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to MAN

When *portClass* is set to INNI and *ndetmd* is set to MAN for a port, the parameters *rstimca* and *rstimmon* are set to DISABLE. This is reported by an ED-STM16 notification for the parameters *rstimca* and *rstimmon*.

ONNS specific behaviour - Impact on tributary parameter settings when *portClass* is set to INNI

When *portClass* is set to INNI, the parameter *hptimmon* shall be set to DISABLE for all tributaries located on this port.. This shall be reported by ED-VC3 notifications for the parameter *hptimmon*.

Example input/output

```
ED-STM16:UNITE-NE:1-1-#-#-1-1:123456:::INPUTSIG=74-33-84,UNEQUIPOSIG=74-33-84;
    UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
```

```
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ED-STM16:1-1-#-#-1-
1::inputsig=74-33-84,unequiposig=74-33-84:"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-STM16 command.

Validation rule: Enough bandwidth reserved for 2F protection group

Check of the tributary rate (*inputsig/unequiposig*) if the port is member of a 2f protection group. Then the assigned bandwidth will be max. half of the port's bandwidth.

Error code: IDNV - Input, Data Not Valid, Assigned bandwidth exceeds half port's bandwidth

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: *inputsig* consistent with existing cross-connections

Check of the consistency of the structure of the input signal (*inputsig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent input signal

Validation rule: *unequiposig* consistent with existing cross-connections

Check of the consistency of the structure of the output signal (*unequiposig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent output signal

Validation rule: no cross-connections for *istd* change

Check that the interface standard parameter (*istd*) is not changed when cross-connections are still on this port.

Error code: SNVS - Status, Not in Valid State,
cross-connections are still existing

Validation rule: no loopbacks for *istd* change

Check that the interface standard parameter (*istd*) is not changed when cross-connection loopback is still on this port.

Error code: SNVS - Status, Not in Valid State, a loopback is existing

Validation rule: no protection for *istd* change

Check that the interface standard parameter (*istd*) is not changed when this port is in an protection group

Error code: SNVS - Status, Not in Valid State, a protection group is existing

Validation rule: no ONNS for interface standard change

Check that the interface standard parameter (*istd*) is not changed if ONNS functionality is available.

This means:

- *portClass* must be TRADITIONAL or
- *portControl* must be LOCKOUT.

Error code: SNVS - Status, Not in Valid State, Swiss access possible

Validation rule: *servcond* must be enabled when timing source

Check that the *servcond* is not disabled when the port is used as a timing source.

Error code: SNVS - Status, Not in Valid State, Timing reference is assigned to this port

Validation rule: *servcond* must be enabled when DCC enabled

Check that the *servcond* is not disabled when DCC channels are still existing for this port.

Error code: SNVS - Status, Not in Valid State, DCC channels are active for this port

Validation rule: *servcond* must be enabled when *portClass*=INNI

Check that the *servcond* is not OUTOFSERVICE when *portClass*=INNI.

Error code: SNVS - Status, Not in Valid State, can not disable servcond for INNI ports.

Validation rule: *servcond* must be disabled for facility loopback

Check that the *servcond* is not enabled when a facility loopback is existing for this port.

Error code: SNVS - Status, Not in Valid State, Facility Loopback is active for this port

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation rule: Supply of outgoing J0 trace

Check that an outgoing J0 trace value (*strc* out) is supplied, too, if the format of the outgoing J0 trace (*strcwfmt*) is changed.

Error code: IDNC - Input, Data Not Consistent, a new trace value must also be supplied for a trace format change.

Validation rule: transmitted path trace length

Check that the length of the outgoing J0 trace value (*strcout*) fits to the length given by outgoing J0 trace mode, i.e. write format (*strcwfmt*).

Error code: IDNC - Input, Data, Not Consistent, strcout length must match the given outgoing J0 trace mode.

Check CCB against *ptype* and *istd*

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Validation rule: TCA profile exists

Check of the existence of the TCA profile.

Error code: IDNV - Input, Data Not Valid, TCA profile does not exist

ONNS specific validation rule: *portClass* only settable when *xcsetup*=SWISS

Modification of the *portClass* parameter shall only be allowed when *xcsetup*=SWISS.

Error code: SNVS - Status, Not in Valid State, Swiss not enabled

ONNS specific validation rule: Some parameters not settable for ports of *portClass* INNI

The following parameters shall not be changeable for ports with *portClass* INNI: *trbmd*.

Error Code: SNVS - Status, Not in Valid State, portClass must not be INNI

ONNS specific validation rule: Some parameters not settable for ports of *ndetmd* AUTO

The following parameters shall not be changeable for ports with *ndetmd* AUTO: *neighborNodeID*, *neighborPortID*, *neighborASTNNodeID*.

Error Code: SNVS - Status, Not in Valid State, ndetmd must not be AUTO

ONNS specific validation rule: Additional parameters required when setting *ndetmd* to MAN

Values for the following parameters must be given, if *ndetmd* is changed to MAN: *neighborNodeID*, *neighborPortID*.

Error Code: IDNV - Input, Data Not Valid, additional parameters *neighborNodeID* and *neighborPortID* required

A values for the following parameter must be given, if *ndetmd* is changed to MAN: *neighborASTNNodeID*:

Error Code: IDNV - Input, Data Not Valid, additional parameter required

ONNS specific validation rule: No setting of duplicate *neighborASTNNodeID* and *neighborPortID* parameter combination

Setting of the parameters *neighborASTNNodeID* and *neighborPortID* shall only be possible, if the same combination of values does not already exists for a different INNI port in the system.

Error code: IDNV - Input, Data Not Valid, duplicate neighbor port information

ONNS specific validation rule: Setting of *portClass* to INNI not possible for ports in protection groups

It shall not be allowed to change *portClass* of a port to INNI, if this port is member of a Line/MS protection scheme.

Error Code: SNVS - Status, Not in Valid State, Port must not be member of a protection group

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if no cross-connection existing

It shall not be allowed to change *portClass* to INNI, if cross-connections on that port are still existing.

Error Code: SNVS - Status, Not in Valid State, Cross-connections still existing

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if service condition not OUTOFSERVICE

It shall not be allowed to change *portClass* to INNI, if servcond=OUTOFSERVICE.

Error code: SNVS - Status, Not in Valid State, port in out of service state

ONNS specific validation rule: Setting of *portControl* to NORMAL only possible, if no cross-connection loopbacks existing

It shall not be allowed to change *portControl* to NORMAL, if there are existing cross-connection loopbacks associated with the port.

Error code: SNVS - Status, Not in Valid State, loopbacks present

ONNS specific validation rule: Setting of some INNI properties only possible, if no cross-connection existing

It shall not be allowed to change one of the following parameters (provided this parameter is supported in a particular release at all) on

a port with *portClass*=INNI, if cross-connections on that port are existing:

- *adminCost*, *link_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*, *neighborASTNNodeID*.

Error code: SNVS - Status, Not in Valid State, no XCs allowed for change of INNI parameters

ONNS specific validation rule: Setting of INNI properties only possible for INNI ports

The system allows to change the following parameters only if the port class (*portClass*) is set to INNI and the port control (*portControl*) is set to LOCKOUT: *adminCost*, *link_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*.

Error code: SNVS - Status, Not in Valid State, only allowed for INNI port in lockout state

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if no test access session active

It shall not be allowed to change *portClass* of a port to INNI when a tributary related to this port is used in a test access session either as tributary under test or as test access tributary.

Error code: SNVS - Status, Not in Valid State, a test access session exists

ONNS specific validation rule: Setting of *portClass* away from INNI only possible, if the port is not in use

For setting *portClass* from INNI to TRADITIONAL or EDGE the following must be fulfilled:

- No cross -connection may exist on any tributary of the port
- *portControl* must be LOCKOUT.

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Changing of *portClass* from INNI to EDGE or TRADITIONAL only possible, if no DCC for SCN is enabled on the port

For changing the value of the parameter *portClass* no DCC of the port must be enabled for the SCN.

Error Code: SNVS - Status, Not in Valid State, DCC on SCN may not be enabled

ONNS specific validation rule: Setting of *portClass* from EDGE to TRADITIONAL only possible, if the tributaries on the port are not in use by SNN:

For setting *portClass* from EDGE to TRADITIONAL the following must be fulfilled:

- No cross-connections of *xconcls*=NN may exist on any tributary of the port
- *portControl* must be LOCKOUT.

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Setting of *portClass* from TRADITIONAL to EDGE

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1+1 MSP group.

Error code: SNVS - Status, Not in Valid State, Port must not be a 1+1 protection port

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1:1 MSP group.

Error code: SNVS - Status, Not in Valid State, Port must not be a 1:1 protection port

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 4f-MSSPRING group

Error code: SNVS - Status, Not in Valid State, Port must not be a 4f-MSSPRING protection port

ONNS specific validation rule: Not allowed to change the *portClass* directly from INNI to EDGE or EDGE to INNI

It shall not be allowed to change the *portClass* of a port directly from INNI to EDGE or from EDGE to INNI.

Error Code: SNVS - Status, Not in Valid State, Port Class must not be EDGE or INNI

ONNS specific validation rule: Some parameters not settable for ports of *portClass*=INNI

The following parameters shall not be changeable for ports with *portClass*=INNI: *exprstrc*, *rstimca*, *rstimmon*, *strcfmt*, *strcout*, *strcwfmt*.

Error code: SNVS - Status, Not in Valid State, J0 parameters can not be set for INNI ports

Related TL1 messages [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#)

References GR-199-CORE (ED-*rr*)



ED-STM16 notification

Output format The ED-STM16 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-STM16:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
5. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *femspm* – Far-end Multiplex Section Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. **frcdus** – Force to DUS
See definition of output parameter **frcdus** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. **fsflpbkstat** – Far Side Facility Loopback Status
See definition of output parameter **fsflpbkstat** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
11. **inputsig** – Tributary Input Signal Rate List
See definition of output parameter **inputsig** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. **istd** – Interface Standard
See definition of input parameter **istd** in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
13. **lpbk** – Loopback
See definition of output parameter **lpbk** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. **ndetmd** – Neighbor Detection Mode
See definition of output parameter **ndetmd** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. **neighborASTNNodeID** - Neighbor ASTN Node Id
See definition of output parameter **neighborASTNNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. **neighborNodeID** – Neighbor Node Id
See definition of output parameter **neighborNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. **neighborPortID** – Neighbor Port Id
See definition of output parameter **neighborPortID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. **nemspm** – MS Near-End PM Enable
See definition of output parameter **nemspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. **pmmsfeses** – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter **pmmsfeses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
20. **pmmsneses** – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter **pmmsneses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

21. **pmode** – Port Mode
See definition of output parameter ***pmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter ***pmrsneses*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. **portClass** – Port Class
See definition of output parameter ***portClass*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **portControl** – Port Control
See definition of output parameter ***portControl*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **propagationDelay** - Propagation Delay
See definition of output parameter ***propagationDelay*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
26. **rsmstca** – RS/MS TCA Profile Pointer
See definition of output parameter ***rsmstca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. **rspm** – RS PM Enable
See definition of output parameter ***rspm*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter ***rstimca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter ***rstimmon*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sdhpn** – SDH ASAP
See definition of output parameter ***sdhpn*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter ***sdsfmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. **servcond** – Service Condition
See definition of output parameter ***servcond*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

33. srlgList – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
34. strcfmt – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. strcout – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. strcwfmt – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. trbmd – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
38. tcamd – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
39. unequiposig – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Example output

```
ED-STM16:UNITE-NE:1-1-#-#-1-1:123456:::INPUTSIG=74-33-84,UNEQUIPOSIG=74-33-84;
  UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
  UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
  "TIME=08-00-12,DATE=00-11-28:ED-STM16:1-1-#-#-1-1::inputsig=74-33-84,unequiposig=74-33-84:"
;
```



ENT-STM16 notification

Output format The ENT-STM16 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-STM16:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
5. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *femspm* – Far-end Multiplex Section Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. **frcdus** – Force to DUS
See definition of output parameter **frcdus** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. **fsflpbkstat** – Far Side Facility Loopback Status
See definition of output parameter **fsflpbkstat** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
11. **inputsig** – Tributary Input Signal Rate List
See definition of output parameter **inputsig** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. **istd** – Interface Standard
See definition of input parameter **istd** in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
13. **lpbk** – Loopback
See definition of output parameter **lpbk** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. **ndetmd** – Neighbor Detection Mode
See definition of output parameter **ndetmd** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. **neighborASTNNodeID** - Neighbor ASTN Node Id
See definition of output parameter **neighborASTNNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. **neighborNodeID** – Neighbor Node Id
See definition of output parameter **neighborNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. **neighborPortID** – Neighbor Port Id
See definition of output parameter **neighborPortID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. **nemspm** – MS Near-End PM Enable
See definition of output parameter **nemspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. **pmmsfeses** – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter **pmmsfeses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
20. **pmmsneses** – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter **pmmsneses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

21. **pmode** – Port Mode
See definition of output parameter ***pmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter ***pmrsneses*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. **portClass** – Port Class
See definition of output parameter ***portClass*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **portControl** – Port Control
See definition of output parameter ***portControl*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **propagationDelay** - Propagation Delay
See definition of output parameter ***propagationDelay*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
26. **rsmstca** – RS/MS TCA Profile Pointer
See definition of output parameter ***rsmstca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. **rspm** – RS PM Enable
See definition of output parameter ***rspm*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter ***rstimca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter ***rstimmon*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sdhpn** – SDH ASAP
See definition of output parameter ***sdhpn*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter ***sdsfmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. **servcond** – Service Condition
See definition of output parameter ***servcond*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

33. srlgList – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
34. strcfmt – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. strcout – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. strcwfmt – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. tcamd – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
38. trbmd – Tributary Mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
39. unequiposig – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Example output

```
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ENT-STM16:1-1-#-#-1-
1::servcond=DISABLE,inputsig=164,...,unequiposig=164"
;
```



DLT-STM16 notification

Output format The DLT-STM16 notification uses the general format of a REPT DBCHG (Report Database Change) notification.
Syntax: DLT-STM16:*aid*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Example output UNITE-NE 00-11-20 8:01:03
A 611 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-STM16:1-1-#-#-4-1"
;



ED-STM16 autonomous notifications

**LOS for transmission port
STM16 clears**

If LOS is cleared and current port mode is AUTO, then ***pmode*** is updated (new value: MON). This update is reported via ED-STM16 notification with parameter ***pmode***.

**Change of neighbor node
and neighbor port
Information**

If ndetmd=AUTO a change of the attributes ***neighborNodeID***, ***neighborPortID*** or ***neighborASTNNodeID*** is notified by the related ED-STM16 notification.



ED-STM64: Edit STM64 port

The ED-STM64 command is used to provision all parameters related to optical STM64 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
 Priority: 1
 Abortable: no

Input format Command Syntax: ED-STM64:*tid:aid:ctag::spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 See definition of output parameter *aid* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. *adminCost* - Administrative Cost
 See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
 See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
 The setting of this parameter is allowed when the related STM64 port is created, it is used when *sdfsmode*=BURST.
3. *brstthr* – Bursty Error Threshold
 See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
 The setting of this parameter is allowed when the related STM64 port is created, it is used when *sdfsmode*=BURST.

4. **degthr** – Signal Degrade Threshold
See definition of output parameter **degthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM64 port is created, it is used when **sdfsmode**=POISSON.
5. **dexcthr** – Excessive Degrade Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM64 port is created, it is used when **sdfsmode**=POISSON.
6. **exprstrc** – Value of Expected J0
See definition of output parameter **exprstrc** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. **fec** – FEC Enable
Forward Error Correction Enable. Enable to include the FEC information in the outgoing signal.
The FEC functionality is strongly related to the used frame format. The FEC is supported by the OCh frame format (LU proprietary solution) and G.709 frame format.
OCh frame format: For cards, which support the OCh frame format, the FEC functionality is directly coupled to the activation/deactivation of the OCh layer. This means, that the **fec** parameter is not considered by these cards and **fec** is implicit switched on/off by switching on/off **och** .
G.709 frame format: For cards, which support the G.709 frame format, the FEC functionality can separately switched on and off, if the G.709 frame format is selected by **och**= enable.
As long as the G.709 frame format is not supported, the **fec** parameter would not be needed.
Type: alphanumeric value set
Range: ENABLE, DISABLE
8. **femspm** – Far-end Multiplex Section Enable
See definition of output parameter **femspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. **frcdus** – Force to DUS
See definition of output parameter **frcdus** in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
10. **inputsig** – Tributary Input Signal Rate List
See definition of output parameter **inputsig** in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

11. **istd** – Interface Standard
See definition of input parameter **istd** in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
12. **msrei** – MS-REI Mode
See definition of output parameter **msrei** in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
13. **ndetmd** – Neighbor Detection Mode
See definition of output parameter **ndetmd** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. **neighborASTNNodeID** - Neighbor ASTN Node Id
See definition of output parameter **neighborASTNNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. **neighborNodeID** – Neighbor Node Id
See definition of output parameter **neighborNodeID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. **neighborPortID** – Neighbor Port Id
See definition of output parameter **neighborPortID** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. **och** – Optical Channel enable
See definition of output parameter **msrei** in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
18. **pmmsfeses** – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter **pmmsfeses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. **pmmsneses** – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter **pmmsneses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
20. **pmode** – Port Mode
See definition of output parameter **pmode** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
21. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter **pmrsneses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

22. polynomial - Optical Channel Scrambling Polynomial
See definition of output parameter **polynomial** [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
23. portClass – Port Class
See definition of output parameter **portClass** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. portControl – Port Control
See definition of output parameter **portControl** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. propagationDelay - Propagation Delay
See definition of output parameter **propagationDelay** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
26. rsmstca – RS/MS TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. rspm – RS PM Enable
See definition of output parameter **rspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. nemspm – MS Near-End PM Enable
See definition of output parameter **nemspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. rstimca – RS TIM Consequent Action Enable
See definition of output parameter **rstimca** [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. rstimmon – RS TIM Monitor Enable
See definition of output parameter **rstimmon** [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. sdhpn – SDH ASAP
See definition of output parameter **sdhpn** [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
32. sdsfmode – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. servcond – Service Condition
See definition of output parameter **servcond** [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

- 34. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 35. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 36. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 37. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 38. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 39. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

Output format If the ED-STM64 command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

Behavior

The command modifies the attributes (listed in the *spec_block* parameters part of this command) of the addressed port entity according to the parameters given with this command.

The modification is reported by means of an ED-STM64 notification for port (except for parameter *istd*; see below).

Switching of interface standard – Ignore other parameters

If additional parameters beside *istd* are specified with the *ED-rr* command they will be ignored by the NE.

This simple approach has the advantage that all ambiguous situations are avoided and it is not necessary to implement an order or follow a certain sequence when evaluating the parameters.

Switching of interface standard – FM impact

The change of the interface standard of a port from SDH to SONET has the following impact related to fault management:

- all SDH alarms related to that port are cleared
- the corresponding SONET alarms are raised.

Supply outgoing J0 trace value and format together

When changing the format of the outgoing J0 trace *strcwfmt*, the parameter *strcout* specifying the outgoing J0 trace is always supplied within the same TL1-command to always have a consistent set of trace format and value.

Supply outgoing J0 trace value according to format of outgoing J0

When changing the outgoing J0 trace value, the format must be according to the format parameter *strcwfmt* for the outgoing J0 trace.

Switching of interface standard – Impact on port parameters

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching of interface standard – Side effects on tributaries

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching of interface standard – notification behavior

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching of interface standard – PM impact

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Disabling of PM monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Changing TCA mode from TR-RTR to TR-only

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching FEC

For OCh cards the FEC parameter is not considered: The FEC functionality is directly coupled to the activation/deactivation of the OCh layer for OP packs, which support the OCh frame format (LU proprietary solution). This means, that the fec parameter is not considered for the ED command. The FEC functionality is implicit switched on/off by switching on/off the OCh frame format by the och parameter.

The FEC automatically switched off: The FEC functionality is directly coupled to availability of a OCH or G.709 frame. This means, that the fec parameter is set to [Disable] if the OCH or G.709 frame is switched off by the och parameter.

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to INNI

When *portClass* is set to INNI for a port, the parameter *trbmd* shall be set to *adaptive*. This shall be reported by an ED-STM64 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to EDGE

When *portClass* is set to EDGE for a port, the parameter *trbmd* shall be set to FIXED. This shall be reported by an ED-STM64 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on *loca*, *locz* when setting *portClass* from EDGE to TRADITIONAL when port is involved in a 2F or 4F BLSR/MSSPRING protection group

For all tributaries of that port the *loca*, *locz* parameters shall be reset to their default values (empty string). This is reported by an ED-STS1 (istd=SONET for the port) or ED-VC3 (istd=SDH for the port) notification using a range over the port.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is INNI

When *portClass* has the value INNI for a port, setting of the following parameters will be accepted, but will have no impact until *portClass* is changed away from INNI:

- *exprstrc*
- *rstimca*
- *rstimmon*
- *strcfmt*
- *strcout*
- *strcfmt*.

At the moment *portClass* is changed away from INNI the parameters are set back to their default values. This shall be reported by means of an ED-STM64 notification.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is different from INNI

When *portClass* has a value being different from INNI for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed to INNI:

- *ndetmd*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *adminCost*, *srlgList*, *link_includeID*, *neighborASTNNodeID*.

At the moment the *portClass* is changed to INNI the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is TRADITIONAL

When *portClass* has the value TRADITIONAL for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed away from TRADITIONAL: *portControl*.

At the moment the *portClass* is changed away from TRADITIONAL the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on *portControl* when changing *portClass*

When *portClass* is changed *portControl* shall be set to NORMAL.

ONNS specific behaviour - Impact on port parameter settings when *ndetmd* is set to AUTO

When *ndetmd* is set to AUTO for a port, the parameters *neighborNodeID*, *neighborPortID* or *neighborASTNNodeID* keeps their current values until automatic neighbor detection delivers new valid values.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to AUTO

When *portClass* is set to INNI and *ndetmd* is set to AUTO for a port, the parameter *pmode* is set to MONITORING. This is reported by an ED-STM64 notification for the parameter *pmode*.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to MAN

When *portClass* is set to INNI and *ndetmd* is set to MAN for a port, the parameters *rstimca* and *rstimmon* are set to DISABLE. This is reported by an ED-STM64 notification for the parameters *rstimca* and *rstimmon*.

Impact on tributary parameter settings when *portClass* is set to INNI

When *portClass* is set to INNI, the parameter *hptimmon* is set to DISABLE for all tributaries located on this port. This is reported by ED-VC3 notifications for the parameter *hptimmon*.

Example input/output

```
ED-STM64:UNITE-NE:1-1-#-#-1-1:123456:::INPUTSIG=644,
UNEQUIPOSIG=644;
    UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
    UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ED-STM16:1-1-#-#-1-1::
inputsig=644,unequiposig=644:"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-STM64 command.

Validation rule: Enough bandwidth reserved for 2F protection group

Check of the tributary rate (*inputsig/uneqiposig*) if the port is member of a 2f protection group. Then the assigned bandwidth will be max. half of the port's bandwidth.

Error code: IDNV - Input, Data Not Valid, Assigned bandwidth exceeds half port's bandwidth

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation Rule: TCA profile exists

Check of the existance of the TCA profile.

Error code: IDNV - Input, Data Not Valid, TCA profile does not exist

Validation rule: *inputsig* consistent with existing cross-connections

Check of the consistency of the structure of the input signal (*inputsig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent input signal

Validation rule: *unequiposig* consistent with existing cross-connections

Check of the consistency of the structure of the output signal (*unequiposig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent output signal

Validation rule: no cross-connections for *istd* change

Check that the interface standard parameter (*istd*) is not changed when cross-connections are still on this port.

Error code: SNVS - Status, Not in Valid State, cross-connections are still existing

Validation rule: no loopbacks for *istd* change

Check that the interface standard parameter (*istd*) is not changed when loopback is still on this port.

Error code: SNVS - Status, Not in Valid State, a loopback is existing

Validation rule: no protection for *istd* change

Check that the interface standard parameter (*istd*) is not changed when this port is in an protection group.

Error code: SNVS - Status, Not in Valid State, a protection group is existing

Validation rule: no ONNS for interface standard change

Check that the interface standard parameter (*istd*) is not changed if ONNS functionality is available.

This means:

- *portClass* must be TRADITIONAL or
- *portControl* must be LOCKOUT.

Error code: SNVS - Status, Not in Valid State, SWISS access possible

Validation rule: *servcond* must be enabled when timing source

Check that the *servcond* is not disabled when the port is used as a timing source.

Error code: SNVS - Status, Not in Valid State, Timing reference is assigned to this port

Validation rule: *servcond* must be enabled when DCC enabled

Check that the *servcond* is not disabled when DCC channels are still existing for this port.

Error code: SNVS - Status, Not in Valid State, DCC channels are active for this port

Validation rule: *servcond* must be enabled when portClass=INNI

Check that the *servcond* is not OUTOFSERVICE when portClass=INNI.

Error code: SNVS - Status, Not in Valid State, can not disable *servcond* for INNI ports

Validation rule: *servcond* must be disabled for facility loopback

Check that the *servcond* is not enabled when a facility loopback is existing for this port.

Error code: SNVS - Status, Not in Valid State, Facility Loopback is active for this port

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation rule: Supply of outgoing J0 trace

Check that an outgoing J0 trace value (*strc* out) is supplied, too, if the format of the outgoing J0 trace (*strcwfmt*) is changed.

Error code: IDNC - Input, Data Not Consistent, a new trace value must also be supplied for a trace format change.

Validation rule: transmitted path trace length

Check that the length of the outgoing J0 trace value (*strcout*) fits to the length given by outgoing J0 trace mode, i.e. write format (*strcwfmt*).

Error code: IDNC - Input, Data, Not Consistent, strcout length must match the given outgoing J0 trace mode.

Validation rule: Change of FEC parameters only if supported by the current circuit pack

When changing one of the FEC-related parameters *fec*, *feccor* and *fectype* it is checked, whether the currently provisioned circuit pack supports this. If it is not supported the following error code is used:

Error code: IDNV - Input, Data Not Valid, Parameter not supported

Validation rule: Enabling of optical channel only if supported by the current circuit pack

When enabling the optical channel via parameter *och* it will be checked, whether the currently provisioned circuit pack supports this. If it is not supported the following error code is used:

Error code: IDNV - Input, Data Not Valid, Parameter not supported

Validation rule: Enabling of outband FEC only if optical channel is enabled

When enabling outband FEC (*fectype* = *OUTBAND*, *fec* = *ENABLE*) it will be checked, whether the optical channel is enabled (*och* = *ENABLE*) as well.

Error code: SNVS - Status, Not in Valid State, Optical Channel must be enabled

Check CCB against *ptype* and *istd*

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

ONNS specific validation rule: *portClass* only settable when *xcsetup*=SWISS

Modification of the *portClass* parameter shall only be allowed when *xcsetup*=SWISS.

Error code: SNVS - Status, Not in Valid State, SWISS not enabled

ONNS specific validation rule: Some parameters not settable for ports of *portClass* INNI

The following parameters shall not be changeable for ports with *portClass* INNI: *trbmd*.

Error Code: SNVS - Status, Not in Valid State, portClass must not be INNI

ONNS specific validation rule: Some parameters not settable for ports of *ndetmd* AUTO

The following parameters shall not be changeable for ports with *ndetmd* AUTO: *neighborNodeID*, *neighborPortID*, *neighborAST-NodeID*.

Error Code: SNVS - Status, Not in Valid State, ndetmd must not be AUTO

ONNS specific validation rule: Additional parameters required when setting *ndetmd* to MAN

Values for the following parameters must be given, if *ndetmd* is changed to MAN: *neighborNodeID*, *neighborPortID*.

Error Code: IDNV - Input, Data Not Valid, additional parameters *neighborNodeID* and *neighborPortID* required

A values for the following parameter must be given, if *ndetmd* is changed to MAN: *neighborASTNNodeID*.

Error Code: IDNV - Input, Data Not Valid, additional parameter required

ONNS specific validation rule: No setting of duplicate *neighborASTNNodeID* and *neighborPortID* parameter combination

Setting of the parameters *neighborASTNNodeID* and *neighborPortID* shall only be possible, if the same combination of values does not already exists for a different INNI port in the system.

Error code: IDNV - Input, Data Not Valid, duplicate neighbor port information

ONNS specific validation rule: Setting of *portClass* to INNI not possible for ports in protection groups

It shall not be allowed to change *portClass* of a port to INNI, if this port is member of a Line/MS protection scheme.

Error Code: SNVS - Status, Not in Valid State, Port must not be member of a protection group

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if no cross-connection existing

It shall not be allowed to change *portClass* to INNI, if cross-connections on that port are still existing.

Error Code: SNVS - Status, Not in Valid State, Cross-connections still existing

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if service condition not OUTOFSERVICE

It shall not be allowed to change *portClass* to INNI, if *servcond*=OUTOFSERVICE.

Error code: SNVS - Status, Not in Valid State, port in out of service state

ONNS specific validation rule: Setting of *portControl* to NORMAL only possible, if no cross-connection loopbacks existing

It shall not be allowed to change *portControl* to NORMAL, if there are existing cross-connection loopbacks associated with the port.

Error code: SNVS - Status, Not in Valid State, loopbacks present

ONNS specific validation rule: Setting of some INNI properties only possible, if no cross-connection existing

It shall not be allowed to change one of the following parameters (provided this parameter is supported in a particular release at all) on a port with *portClass*=INNI, if cross-connections on that port are existing:

- *adminCost*, *ink_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*, *neighborASTNNodeID*.

Error code: SNVS - Status, Not in Valid State, no XCs allowed for change of iNNI parameters

ONNS specific validation rule: Setting of INNI properties only possible for INNI ports

The system allows to change the following parameters only if the port class (*portClass*) is set to INNI and the port control (*portControl*) is set to LOCKOUT: *adminCost*, *link_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*.

Error code: SNVS - Status, Not in Valid State, only allowed for INNI port in lockout state

ONNS specific validation rule: Setting of *portClass* to INNI or EDGE only possible, if no test access session active

It shall not be allowed to change *portClass* of a port to INNI or EDGE when a tributary related to this port is used in a test access session either as tributary under test or as test access tributary.

Error code: SNVS - Status, Not in Valid State, a test access session exists

ONNS specific validation rule: Setting of *portClass* away from INNI only possible, if the port is not in use

For setting *portClass* from INNI to TRADITIONAL or EDGE the following must be fulfilled:

- No cross-connection may exist on any tributary of the port
- *portControl* must be LOCKOUT.

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Changing of *portClass* from INNI to EDGE or TRADITIONAL only possible, if no DCC for SCN is enabled on the port

For changing the value of the parameter *portClass* no DCC of the port must be enabled for the SCN.

Error Code: SNVS - Status, Not in Valid State, DCC on SCN may not be enabled

ONNS specific validation rule: Setting of *portClass* from EDGE to TRADITIONAL only possible, if the tributaries on the port are not in use by SNN:

For setting *portClass* from EDGE to TRADITIONAL the following must be fulfilled:

- No cross-connections of xconcls=NN may exist on any tributary of the port
- *portControl* must be LOCKOUT.

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Setting of *portClass* from TRADITIONAL to EDGE

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1+1 MSP group.

Error code: SNVS - Status, Not in Valid State, Port must not be a 1+1 protection port

For setting portClass from TRADITIONAL to EDGE the port must not be the protection port of a 1:1 MAP group.

Error code: SNVS - Status, Not in Valid State, Port must not be a 1:1 protection port

For setting portClass from TRADITIONAL to EDGE the port must not be the protection port of a 4f-MSSPRING group.

Error Code: SNVS - Status, Not in Valid State, Port must not be a 4f-MSSPRING protection port

ONNS specific validation rule: Not allowed to change the portClass directly from INNI to EDGE or EDGE to INNI

It shall not be allowed to change the portClass of a port directly from INNI to EDGE or from EDGE to INNI.

Error Code: SNVS - Status, Not in Valid State, Port Class must not be EDGE or INNI

ONNS specific validation rule: Some Parameters not settable for ports of portClass=INNI

The following parameters shall not be changeable for ports with *portClass*=INNI: *exprstrc*, *rstimca*, *rstimmon*, *strcfmt*, *strcout*, *strcwfmt*.

Error code: SNVS - Status, Not in Valid State, J0 parameters can not be set for INNI ports

ONNS specific validation rule: Setting of portClass to EDGE for TOP

If the port is part of a 4F MSSPRING group and protmode equals SHORTENED or TOPEX (both are TOP), then setting the portClass to EDGE shall not be allowed.

Error code: SNVS - Status, Not in Valid State, portClass must not be EDGE for TOP

Related TL1 messages [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#)

References GR-199-CORE (ED-*rr*)



ED-STM64 notification

Output format The ED-STM64 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-STM64:*aid::spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
Usage: The setting of this parameter is allowed when the related STM64 port is created, it is used when *sdfsmode*=BURST.
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
Usage: The setting of this parameter is allowed when the related STM64 port is created, it is used when *sdfsmode*=BURST.
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
5. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
Usage: The setting of this parameter is allowed when the related STM64 port is created, it is used when *sdfsmode*=POISSON.
6. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
Usage: The setting of this parameter is allowed when the related STM64 port is created, it is used when *sdfsmode*=POISSON.

7. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *fec* – FEC Enable
See definition of output parameter *fec* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
9. *feccor* – FEC Correction Enable
See definition of output parameter *feccor* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
10. *fectype* – FEC Type
See definition of output parameter *fectype* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
11. *femspm* – Far-end Multiplex Section Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. *frcdus* – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
13. *fsflpbkstat* – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. *inputsig* – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
15. *istd* – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
16. *lpbk* – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. *msrei* – MS-REI Mode
See definition of output parameter *msrei* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
18. *ndetmd* – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

19. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
20. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
21. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
22. nemspm – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. och – Optical Channel enable
See definition of output parameter *msrei* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
24. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. polynomial - Optical Channel Scrambling Polynomial
See definition of output parameter *polynomial* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
29. portClass – Port Class
See definition of output parameter *portClass* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

30. portControl – Port Control
See definition of output parameter *portControl* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. propagationDelay - Propagation Delay
See definition of output parameter *propagationDelay* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
32. rsmstca – RS/MS TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. rspm – RS PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. rstimca – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. rstimmon – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. sdhpn – SDH ASAP
See definition of output parameter *sdhpn* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
37. sdsfmode – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
38. servcond – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
39. srlgList – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
40. strcfmt – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
41. strcout – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

- 42. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 43. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 44. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 45. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

Example output

```
ED-STM64:UNITE-NE:1-1-#-#-1-1:123456:::INPUTSIG=644,  
UNEQUIPOSIG=644;  
    UNITE-NE 00-11-28 08:00:00  
M 123456 COMPLD  
;  
    UNITE-NE 00-11-28 08:00:30  
A 001 REPT DBCHG  
    "TIME=08-00-12,DATE=00-11-28:ED-STM16:1-1-#-#-1-1::  
    inputsig=644,unequiposig=644:"  
;
```



ENT-STM64 notification

Output format The ENT-STM64 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-STM64:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
5. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *fec* – FEC Enable
See definition of output parameter *fec* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

9. femspm – Far-end Multiplex Section Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
11. fsflpbkstat – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. inputsig – Tributary Input Signal Rate List
See definition of output parameter *femspm* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
13. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
14. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
15. msrei – MS-REI Mode
See definition of output parameter *msrei* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
16. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
19. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
20. nemspm – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

21. och – Optical Channel enable
See definition of output parameter *msrei* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
22. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. polynomial - Optical Channel Scrambling Polynomial
See definition of output parameter *polynomial* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
27. portClass – Port Class
See definition of output parameter *portClass* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
28. portControl – Port Control
See definition of output parameter *portControl* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
29. propagationDelay - Propagation Delay
See definition of output parameter *propagationDelay* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
30. rsmstca – RS/MS TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. rspm – RS PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

32. *rstimca* – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. *rstimmon* – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. *sdhpn* – SDH ASAP
See definition of output parameter *sdhpn* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
35. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
38. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
39. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
40. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
41. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
42. *trbmd* – Tributary Mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
43. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

Example output

```
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ENT-STM64:1-1-#-#-1-1::
servcond=DISABLE,och=DISABLE,inputsig=644,...,
unequiposig=644,fec=DISABLE,feccor=DISABLE,
fectype=INBAND"
;
```



DLT-STM64 notification

Output format The DLT-STM64 notification uses the general format of a REPT DBCHG (Report Database Change) notification.
Syntax: DLT-STM64:*aid*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

Example output UNITE-NE 00-11-20 8:01:03
A 611 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-STM64:1-1-#-#-4-1"
;



ED-STM64 autonomous notifications

LOS for transmission port STM64 clears	If LOS is cleared and current port mode is AUTO, then <i>portmode</i> is updated (new value: MON). This update is reported via ED-STM64 notification with parameter pmode.
Change of neighbor node and neighbor port information	If <i>ndetmd</i> =AUTO a change of the attributes <i>neighborNodeID</i> , <i>neighborPortID</i> or <i>neighborASTNNodeID</i> is notified by the related ED-STM64 notification.



ED-STM256: Edit STM256 port

The ED-STM256 command is used to provision all parameters related to optical STM256 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: no

Input format Command Syntax: ED-STM256:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#).
3. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
Usage: The setting of this parameter is allowed when the related STM256 port is created, it is used when *sdfsmode*=BURST.
2. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
Usage: The setting of this parameter is allowed when the related STM256 port is created, it is used when *sdfsmode*=BURST.
3. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
Usage: The setting of this parameter is allowed when the related STM256 port is created, it is used when *sdfsmode*=POISSON.

4. **dexcthr** – Excessive Degrade Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
Usage: The setting of this parameter is allowed when the related STM64 port is created, it is used when **sdfsmode**=POISSON.
5. **exprstrc** – Value of Expected J0
See definition of output parameter **exprstrc** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. **fec** – FEC Enable
See definition of output parameter **fec** in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
7. **femspm** – Far-end Multiplex Section Enable
See definition of output parameter **femspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. **frcdus** – Force to DUS
See definition of output parameter **frcdus** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. **inputsig** – Tributary Input Signal Rate List
See definition of output parameter **inputsig** in [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#).
10. **istd** – Interface Standard
See definition of input parameter **istd** in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
11. **nemspm** – MS Near-End PM Enable
See definition of output parameter **nemspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. **och** – optical channel enable
See definition of output parameter **och** in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
13. **pmmsfeses** – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter **pmmsfeses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. **pmmsneses** – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter **pmmsneses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

15. *pmode* – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
16. *pmrsneses* – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. *rsmstca* – RS/MS TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. *rspm* – RS PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. *rstimca* – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
20. *rstimmon* – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
21. *sdhpn* – SDH ASAP
See definition of output parameter *sdhpn* in [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#).
22. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

27. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#).

Output format If the ED-STM256 command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

The command modifies the attributes (listed in the *spec_block* parameters part of this command) of the addressed port entity according to the parameters given with this command.

The modification is reported by means of an ED-STM256 notification for port (except for parameter *istd*; see below).

Switching of interface standard – Ignore other parameters

If additional parameters beside *istd* are specified with the *ED-rr* command they will be ignored by the NE.

This simple approach has the advantage that all ambiguous situations are avoided and it is not necessary to implement an order or follow a certain sequence when evaluating the parameters.

Switching of interface standard – FM impact

The change of the interface standard of a port from SDH to SONET has the following impact related to Fault Management:

- all SDH alarms related to that port are cleared
- the corresponding SONET alarms are raised.

Supply outgoing J0 trace value and format together

When changing the format of the outgoing J0 trace *strcwfmt*, the parameter *strcout* specifying the outgoing J0 trace is always supplied within the same TL1-command to always have a consistent set of trace format and value.

Supply outgoing J0 trace value according to format of outgoing J0

When changing the outgoing J0 trace value, the format must be according to the format parameter *strcwfmt* for the outgoing J0 trace.

Switching of interface standard – Impact on port parameters

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching of interface standard – Side effects on tributaries

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching of interface standard – notification behavior

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching of interface standard – PM impact

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Disabling of PM monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Changing TCA mode from TR-RTR to TR-only

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Switching FEC

See detailed behavior specification in [“ED-STM64: Edit STM64 port” \(5-388\)](#).

Example input/output

```
ED-STM256:UNITE-NE:1-1-#-#-us01-1:123456:::INPUTSIG=644,  
UNEQUIPOSIG=644;  
    UNITE-NE 00-11-28 08:00:00  
M 123456 COMPLD  
;
```

```
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ED-STM256:1-1-#-#-1-1::
inputsig=644,unequiposig=644:"
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the [“ED-STM256: Edit STM256 port” \(5-417\)](#) command.

Validation rule: Enough bandwidth reserved for 2F protection group

Check of the tributary rate (*inputsig/unequiposig*) if the port is member of a 2f protection group. Then the assigned bandwidth is max. half of the port's bandwidth.

Error code: IDNV - Input, Data Not Valid, Assigned bandwidth exceeds half port's bandwidth

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation Rule: TCA profile exists

Check of the existence of the TCA profile.

Error code: IDNV - Input, Data Not Valid, TCA profile does not exist

Validation rule: *inputsig* consistent with existing cross-connections

Check of the consistency of the structure of the input signal (*inputsig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent input signal

Validation rule: *unequiposig* consistent with existing cross-connections

Check of the consistency of the structure of the output signal (*unequiposig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent output signal

Validation rule: no cross-connections for *istd* change

Check that the interface standard parameter (*istd*) is not changed when cross-connections are still on this port.

Error code: SNVS - Status, Not in Valid State, cross-connections are still existing

Validation rule: no loopbacks for *istd* change

Check that the interface standard parameter (*istd*) is not changed when cross-connection loopback is still on this port.

Error code: SNVS - Status, Not in Valid State, a loopback is existing

Validation rule: no protection for *istd* change

Check that the interface standard parameter (*istd*) is not changed when this port is in an protection group.

Error code: SNVS - Status, Not in Valid State, a protection group is existing

Validation rule: no ONNS for interface standard change

Check that the interface standard parameter (*istd*) is not changed if ONNS functionality is available.

This means:

- *portClass* must be TRADITIONAL or
- *portControl* must be LOCKOUT.

Error code: SNVS - Status, Not in Valid State, Swiss access possible

Validation rule: *servcond* must be enabled when timing source

Check that the *servcond* is not disabled when the port is used as a timing source.

Error code: SNVS - Status, Not in Valid State, Timing reference is assigned to this port

Validation rule: *servcond* must be enabled when DCC enabled

Check that the *servcond* is not disabled when DCC channels are still existing for this port.

Error code: SNVS - Status, Not in Valid State, DCC channels are active for this port

Validation rule: servcond must be enabled when portClass=INNI

Check that the servcond is not OUTOFSERVICE when *portClass=INNI*.

Error Code: SNVS - Status, Not in Valid State, can not disable servcond for INNI ports

Validation rule: servcond must be disabled for facility loopback

Check that the *servcond* is not enabled when a facility loopback is existing for this port.

Error code: SNVS - Status, Not in Valid State, Facility Loopback is active for this port

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation rule: Supply of outgoing J0 trace

Check that an outgoing J0 trace value (*strc* out) is supplied, too, if the format of the outgoing J0 trace (*strcwfmt*) is changed.

Error code: IDNC - Input, Data Not Consistent, a new trace value must also be supplied for a trace format change.

Validation rule: transmitted path trace length

Check that the length of the outgoing J0 trace value (*strcout*) fits to the length given by outgoing J0 trace mode, i.e. write format (*strcwfmt*).

Error code: IDNC - Input, Data, Not Consistent, strcout length must match the given outgoing J0 trace mode.

Validation rule: Change of FEC parameters only if supported by the current circuit pack

When changing one of the FEC-related parameters *fec*, *feccor* and *fectype* it will be checked, whether the currently provisioned circuit pack supports this. If it is not supported the following error code is used:

Error code: IDNV - Input, Data Not Valid, Parameter not supported

Validation rule: Enabling of optical channel only if supported by the current circuit pack

When enabling the optical channel via parameter *och* it will be checked, whether the currently provisioned circuit pack supports this. If it is not supported the following error code is used:

Error code: IDNV - Input, Data Not Valid, Parameter not supported

Check CCB against *ptype* and *istd*

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Related TL1 messages [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#)

References GR-199-CORE (ED-*rr*)



ED-STM256 notification

Output format The ED-STM256 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-STM256:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#).

Spec block parameters

1. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM256 port is created, it is used when *sdfsmode*=BURST.
2. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM256 port is created, it is used when *sdfsmode*=BURST.
3. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
4. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM256 port is created, it is used when *sdfsmode*=POISSON.
5. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
The setting of this parameter is allowed when the related STM64 port is created, it is used when *sdfsmode*=POISSON.
6. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

7. fec – FEC Enable
See definition of output parameter *fec* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
8. femspm – Far-end Multiplex Section Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
9. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. fsflpbkstat – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
11. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#).
12. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
13. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. nemspm – MS Near-End PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
15. och – optical channel enable
See definition of output parameter *och* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
16. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

19. *pmrsneses* – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
20. *rsmstca* – RS/MS TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
21. *rspm* – RS PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. *rstimca* – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. *rstimmon* – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. *sdhpn* – SDH ASAP
See definition of output parameter *sdhpn* in [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#).
25. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. *strefmt* – Format of incoming J0
See definition of output parameter *strefmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

31. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#).

Example output

```
ED-STM256:UNITE-NE:1-1-#-#-1-1:123456:::INPUTSIG=644,
UNEQUIPOSIG=644;
    UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
    UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ED-STM256:1-1-#-#-1-1::
inputsig=644,unequiposig=644:"
;
```

□

ENT-STM256 notification

Output format The ENT-STM256 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-STM256:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#).

Spec block Parameter

1. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
2. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
4. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
5. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *fec* – FEC Enable
See definition of output parameter *fec* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
8. *femspm* – Far-end Multiplex Section Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. **frcdus** – Force to DUS
See definition of output parameter **frcdus** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. **fsflpbkstat** – Far Side Facility Loopback Status
See definition of output parameter **fsflpbkstat** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
11. **inputsig** – Tributary Input Signal Rate List
See definition of output parameter **inputsig** in [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#).
12. **istd** – Interface Standard
See definition of input parameter **istd** in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
13. **lpbk** – Loopback
See definition of output parameter **lpbk** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. **nemspm** – MS Near-End PM Enable
See definition of output parameter **nemspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
15. **och** – optical channel enable
See definition of output parameter **och** in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
16. **pmmsfeses** – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter **pmmsfeses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. **pmmsneses** – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter **pmmsneses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. **pmode** – Port Mode
See definition of output parameter **pmode** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter **pmrsneses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

20. *rsmstca* – RS/MS TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
21. *rspm* – RS PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. *rstimca* – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. *rstimmon* – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. *sdhpn* – SDH ASAP
See definition of output parameter *sdhpn* in [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#).
25. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. *tcamd* – TCA mode
See definition of output parameter *tcamd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

31. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#).

Example output

```
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ENT-STM256:1-1-#-#-4-1::
servcond=DISABLE,och=DISABLE,inputsig=2564,...,
unequiposig=2564,fec=DISABLE,feccor=DISABLE,
fectype=INBAND"
;
```



DLT-STM256 notification

Output format The DLT-STM256 notification uses the general format of a REPT DBCHG (Report Database Change) notification.
Syntax: DLT-STM256:*aid*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STM256: Retrieve STM256 port” \(5-237\)](#).

Example output UNITE-NE 00-11-20 8:01:03
A 611 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-STM256:1-1-#-#-4-1
;



ED-STM256 autonomous notifications

LOS for transmission port STM256 clears

If LOS is cleared and current port mode is AUTO, then ***pmode*** is updated (new value: MON). This update is reported via ED-STM256 notification with parameter ***pmode***.



ED-OC3: Edit OC3 port

The ED-OC3 command is used to provision all parameters related to optical OC3 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
 Priority: 1
 Abortable: no

Input format Command Syntax: ED-OC3:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 See definition of output parameter *aid* in [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#).
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. *adminCost* - Administrative Cost
 See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
 See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
 See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *exprstrc* – Value of Expected J0
 See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

5. felpm – Far-end Line PM Enable
See definition of output parameter *felpm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#).
8. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
9. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
10. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
11. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
12. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. nelpm – Near-End Line PM Enable
See definition of output parameter *nelpm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
15. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
16. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

17. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter **pmrsneses** in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
18. **portClass** – Port Class
See definition of output parameter **portClass** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
19. **portControl** – Port Control
See definition of output parameter **portControl** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
20. **propagationDelay** - Propagation Delay
See definition of output parameter **propagationDelay** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
21. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter **rstimca** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
22. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter **rstimmon** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **sdthr** – Signal Degrade Threshold
See definition of output parameter **degthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. **servcond** – Service Condition
See definition of output parameter **servcond** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. **sfthr** – Signal Failure Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. **sltca** – Section and Line TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **sonet** – SONET ASAP
See definition of output parameter **sonet** in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).

29. *spm* – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. *strcfwmt* – Format of outgoing J0
See definition of output parameter *strcfwmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
35. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#).
36. *z0outmode* – Mode of outgoing Z0 byte insertion
See definition of output parameter *z0outmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

Output format If the ED-OC3 command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description The command modifies the attributes (listed in the *spec_block* parameters part of this command) of the addressed port entity according to the parameters given with this command.

The modification is reported by means of an ED-OC3 notification for port (except for parameter *istd*; see below).

Switching of interface standard – Ignore other parameters

If additional parameters beside *istd* are specified with the *ED-rr* command they will be ignored by the NE.

This simple approach has the advantage that all ambiguous situations are avoided and it is not necessary to implement an order or follow a certain sequence when evaluating the parameters.

Switching of interface standard – FM impact

The change of the interface standard of a port from SONET to SDH has the following impact related to Fault Management:

- all SONET alarms related to that port are cleared
- the corresponding SDH alarms are raised.

Switching of tributary mode

When changing the parameter *trbmd* – tributary mode from FIXED to ADAPTIVE the parameter *crstat* may change its value, too, depending on the current input signal structure. This change is notified using the related ED-OC3 notification.

When changing the parameter *trbmd* – tributary mode from ADAPTIVE to FIXED the parameter *crstat* may change its value, too, depending on the current setting of parameter *inputsig*. This change is notified using the related ED-OC3 notification.

Supply outgoing J0 trace value and format together

When changing the format of the outgoing J0 trace *strcwfnt*, the parameter *strcout* specifying the outgoing J0 trace is always supplied within the same TL1-command to always have a consistent set of trace format and value.

Supply outgoing J0 trace value according to format of outgoing J0

When changing the outgoing J0 trace value, the format must be according to the format parameter *strcwfnt* for the outgoing J0 trace.

Switching of interface standard – Impact on port parameters

See detailed behavior specification in [“ED-OC48: Edit OC48 port” \(5-486\)](#).

Switching of interface standard – Side effects on tributaries

See detailed behavior specification in [“ED-OC48: Edit OC48 port” \(5-486\)](#).

Switching of interface standard – notification behavior

See detailed behavior specification in [“ED-OC48: Edit OC48 port” \(5-486\)](#).

Switching of interface standard – PM impact

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Disabling of PM monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to INNI

When *portClass* is set to INNI for a port, the parameter *trbmd* shall be set to ADAPTIVE. This shall be reported by an ED-OC3 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to EDGE

When *portClass* is set to EDGE for a port, the parameter *trbmd* shall be set to FIXED. This shall be reported by an ED-OC3 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is INNI

When *portClass* has the value INNI for a port, setting of the following parameters shall be inhibited:

- *exprstrc*
- *rstimca*
- *rstimmon*
- *strcfmt*
- *strcout*
- *strcwfmt*.

At the moment *portClass* is changed away from INNI the parameters are set back to their default values. This shall be reported by means of an ED-OC3 notification.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is different from INNI

When *portClass* has a value being different from INNI for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed to INNI:

- *ndetmd*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *adminCost*, *srlgList*, *link_includeID*, *neighborASTNNodeID*.

At the moment the *portClass* is changed to INNI the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is TRADITIONAL

When *portClass* has the value TRADITIONAL for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed away from TRADITIONAL: *portControl*.

At the moment the *portClass* is changed away from TRADITIONAL the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on *portControl* when changing *portClass*

When *portClass* is changed *portControl* shall be set to NORMAL.

ONNS specific behaviour - Impact on port parameter settings when *ndetmd* is set to AUTO

When *ndetmd* is set to AUTO for a port, the parameters *neighborNodeID*, *neighborPortID* or *neighborASTNNodeID* shall keep their current values until automatic neighbor detection delivers new valid values.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to AUTO

When *portClass* is set to INNI and *ndetmd* is set to AUTO for a port, the parameter *pmode* shall be set to MONITORING. This shall be reported by an ED-OC3 notification for the parameter *pmode*.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to MAN

When *portClass* is set to INNI and *ndetmd* is set to MAN for a port, the parameters *rstimca* and *rstimmon* are set to DISABLE. This is reported by an ED-OC3 notification for the parameters *rstimca* and *rstimmon*.

Impact on tributary parameter settings when *portClass* is set to INNI

When *portClass* is set to INNI, the parameter *hptimmon* is set to DISABLE for all tributaries located on this port.. This is reported by ED-STS1 notifications for the parameter *hptimmon*.

Example input/output

```
ED-OC3:UNITE-NE:1-1-#-#-1-1:123456::INPUTSIG=31,
UNEQUIPOSIG=31;
    UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
    UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
    "TIME=08-00-12,DATE=00-11-28:ED-OC3:1-1-#-#-1-1::
    inputsig=31,unequiposig=31:"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-OC3 command.

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: TCA profile exists

See definition of validation rule in [“ED-STM16: Edit STM16 port” \(5-359\)](#)

Validation rule: *inputsig* consistent with existing cross-connections

Check of the consistency of the structure of the input signal (*inputsig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent input signal

Validation rule: *unequiposig* consistent with existing cross-connections

Check of the consistency of the structure of the output signal (*unequiposig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent output signal

Validation rule: no cross-connections for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when cross-connections are still on this port.

Error code: SNVS - Status, Not in Valid State, cross-connections are still existing

Validation rule: no loopbacks for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when cross-connection loopback is still on this port.

Error code: SNVS - Status, Not in Valid State, a loopback is existing

Validation rule: no test access session for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when a tributary related to this port is used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, a test access session exists

Validation rule: no protection for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when this port is in an protection group.

Error code: SNVS - Status, Not in Valid State, a protection group is existing

Validation rule: no ONNS for interface standard change

Check that the interface standard parameter (*istd*) is not changed if ONNS functionality is available.

This means:

- *portClass* must be TRADITIONAL or
- *portControl* must be LOCKOUT.

Error code: SNVS - Status, Not in Valid State, Swiss access possible

Validation rule: no path protection for *trbmd* change to ADAPTIVE

Check that *trbmd* is not set to ADAPTIVE when this port is in a path protection group.

Error code: SNVS - Status, Not in Valid State, a path protection group is existing

Validation rule: *servcond* must be enabled when timing source

Check that the *servcond* is not disabled when the port is used as a timing source.

Error code: SNVS - Status, Not in Valid State, Timing reference is assigned to this port

Validation rule: *servcond* must be enabled when DCC enabled

Check that the *servcond* is not disabled when DCC channels are still existing for this port.

Error code: SNVS - Status, Not in Valid State, DCC channels are active for this port

Validation rule: *servcond* must be enabled when portClass=INNI

Check that the *servcond* is not OUTOFSERVICE when portClass=INNI.

Error code: SNVS - Status, Not in Valid State, can not disable *servcond* for INNI ports

Validation rule: *servcond* must be disabled for facility loopback

Check that the *servcond* is not enabled when a facility loopback is existing for this port.

Error code: SNVS - Status, Not in Valid State, Facility Loopback is active for this port

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation rule: Supply of outgoing J0 trace

Check that an outgoing J0 trace value (*strc* out) is supplied, too, if the format of the outgoing J0 trace (*strcwfmt*) is changed.

Error code: IDNC - Input, Data Not Consistent, a new trace value must also be supplied for a trace format change.

Validation rule: transmitted path trace length

Check that the length of the outgoing J0 trace value (*strcout*) fits to the length given by outgoing J0 trace mode, i.e. write format (*strcwfmt*).

Error code: IDNC - Input, Data, Not Consistent, *strcout* length must match the given outgoing J0 trace mode.

Check CCB against *ptype* and *istd*

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

ONNS specific validation rule: *portClass* only settable when *xcsetup*=SWISS

Modification of the *portClass* parameter shall only be allowed when *xcsetup*=SWISS.

Error Code: SNVS - Status, Not in Valid State, Swiss not enabled

ONNS specific validation rule: Some parameters not settable for ports of *portClass* INNI

The following parameters shall not be changeable for ports with *portClass* INNI: *trbmd*.

Error Code: SNVS - Status, Not in Valid State, *portClass* must not be INNI

ONNS specific validation rule: Some parameters not settable for ports of *portClass* EDGE

The following parameters shall not be changeable for ports with *portClass* EDGE: *trbmd*.

Error Code: SNVS - Status, Not in Valid State, *portClass* must not be EDGE

ONNS specific validation rule: Some parameters not settable for ports of *ndetmd* AUTO

The following parameters shall not be changeable for ports with *ndetmd* AUTO: *neighborNodeID*, *neighborPortID*, *neighborASTNNodeID*.

Error Code: SNVS - Status, Not in Valid State, *ndetmd* must not be AUTO

ONNS specific validation rule: Additional parameters required when setting *ndetmd* to MAN

Values for the following parameters must be given, if *ndetmd* is changed to MAN: *neighborNodeID*, *neighborPortID*.

Error Code: IDNV - Input, Data Not Valid, additional parameters *neighborNodeID* and *neighborPortID* required

A values for the following parameter must be given, if *ndetmd* is changed to MAN: *neighborASTNNodeID*.

Error Code: IDNV - Input, Data Not Valid, additional parameter required

ONNS specific validation rule: No setting of duplicate *neighborASTNNodeID* and *neighborPortID* parameter combination

Setting of the parameters *neighborASTNNodeID* and *neighborPortID* is only possible, if the same combination of values does not already exists for a different INNI port in the system.

Error Code: IDNV - Input, Data Not Valid, duplicate neighbor port information

ONNS specific validation rule: Setting of *portClass* to INNI not possible for ports in protection groups

It shall not be allowed to change *portClass* of a port to INNI, if this port is member of a Line/MS protection scheme.

Error Code: SNVS - Status, Not in Valid State, Port must not be member of a protection group

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if no cross-connection existing

It shall not be allowed to change *portClass* to INNI, if cross-connections on that port are still existing.

Error Code: SNVS - Status, Not in Valid State, Cross-connections still existing

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if service condition not OUTOFSERVICE

It shall not be allowed to change *portClass* to INNI, if servcond=OUTOFSERVICE.

Error code: SNVS - Status, Not in Valid State, port in out of service state

ONNS specific validation rule: Setting of *portControl* to NORMAL only possible, if no cross-connection loopbacks existing

It shall not be allowed to change *portControl* to NORMAL, if there are existing cross-connection loopbacks associated with the port.

Error code: SNVS - Status, Not in Valid State, loopbacks present

ONNS specific validation rule: Setting of some INNI properties only possible, if no cross-connection existing

It shall not be allowed to change one of the following parameters (provided this parameter is supported in a particular release at all) on a port with *portClass*=INNI, if cross-connections on that port are existing: *adminCost*, *link_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*, *neighborASTNNodeID*.

Error code: SNVS - Status, Not in Valid State, no XCs allowed for change of iNNI parameters

ONNS specific validation rule: Setting of INNI properties only possible for INNI ports

The system allows to change the following parameters only if the port class (*portClass*) is set to INNI and the port control (*portControl*) is set to LOCKOUT: *adminCost*, *link_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*.

Error code: SNVS - Status, Not in Valid State, only allowed for INNI port in lockout state

ONNS specific validation rule: Setting of *portClass* to INNI or EDGE only possible, if no test access session active

It shall not be allowed to change *portClass* of a port to INNI or EDGE when a tributary related to this port is used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, a test access session exists

ONNS specific validation rule: Setting of *portClass* away from INNI only possible, if the port is not in use

For setting *portClass* from INNI to TRADITIONAL or EDGE the following must be fulfilled:

- No cross-connection may exist on any tributary of the port
- *portControl* must be LOCKOUT.

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Changing of *portClass* from INNI to EDGE or TRADITIONAL only possible, if no DCC for SCN is enabled on the port

For changing the value of the parameter *portClass* no DCC of the port must be enabled for the SCN.

Error Code: SNVS - Status, Not in Valid State, DCC on SCN may not be enabled

ONNS specific validation rule: Setting of *portClass* from EDGE to TRADITIONAL only possible, if the tributaries on the port are not in use by ONNS:

For setting *portClass* from EDGE to TRADITIONAL the following must be fulfilled:

- No cross-connections of xconcls=NN may exist on any tributary of the port
- *portControl* must be LOCKOUT.

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Setting of *portClass* from TRADITIONAL to EDGE

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1+1 MSP group.

Error Code: SNVS - Status, Not in Valid State, Port must not be a 1+1 protection port

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1:1 MSP group.

Error Code: SNVS - Status, Not in Valid State, Port must not be a 1:1 protection port

ONNS specific validation rule: Not allowed to change the *portClass* directly from INNI to EDGE or EDGE to INNI

It is not be allowed to change the *portClass* of a port directly from INNI to EDGE or from EDGE to INNI.

Error Code: SNVS - Status, Not in Valid State, Port Class must not be EDGE or INNI

ONNS specific validation rule: Some parameters not settable for ports of *portClass*=INNI

The following parameters shall not be changeable for ports with *portClass*=INNI: *exprstrc*, *rstimca*, *rstimmon*, *strcfmt*, *strcout*, *strcwfmt*.

Error code: SNVS - Status, Not in Valid State, J0 parameters can not be set for INNI ports

Related TL1 messages [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#)

References GR-199-CORE (ED-rr)



ED-OC3 notification

Output format The ED-OC3 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-OC3:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#).
5. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *felpm* – Far-end Line PM Enable
See definition of output parameter *felpm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *frcdus* – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *fsflpbkstat* – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#).
10. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
11. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. nelpm – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
18. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
19. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

20. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter ***pmrsneses*** in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
21. **portClass** – Port Class
See definition of output parameter ***portClass*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
22. **portControl** – Port Control
See definition of output parameter ***portControl*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
23. **propagationDelay** - Propagation Delay
See definition of output parameter ***propagationDelay*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter ***rstimca*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter ***rstimmon*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter ***sdsfmode*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
27. **sdthr** – Signal Degrade Threshold
See definition of output parameter ***degthr*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **servcond** – Service Condition
See definition of output parameter ***servcond*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **sfthr** – Signal Failure Threshold
See definition of output parameter ***dexcthr*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sltca** – Section and Line TCA Profile Pointer
See definition of output parameter ***rsmstca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **sonet** – SONET ASAP
See definition of output parameter ***sonet*** in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).

- 32. *spm* – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 33. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 34. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 35. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 36. *strcfwmt* – Format of outgoing J0
See definition of output parameter *strcfwmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 37. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 38. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#).
- 39. *z0outmode* – Mode of outgoing Z0 byte insertion
See definition of output parameter *z0outmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

Example output

```
ED-OC3:UNITE-NE:1-1-#-#-u1-1:123456:::INPUTSIG=31,
UNEQUIPOSIG=31;
  UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
  UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ED-OC3:1-1-#-#-1-1::
inputsig=31,unequiposig=31:"
;
```



ENT-OC3 notification

Output format The ENT-OC3 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-OC3:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#).
5. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *felpm* – Far-end Line PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *frcdus* – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *fsflpbkstat* – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#).
10. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
11. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. nelpm – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
18. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
19. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

20. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter ***pmrsneses*** in [“RTRV-STM1: Retrieve STM1 port” \(5-199\)](#).
21. **portClass** – Port Class
See definition of output parameter ***portClass*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
22. **portControl** – Port Control
See definition of output parameter ***portControl*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
23. **propagationDelay** - Propagation Delay
See definition of output parameter ***propagationDelay*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter ***rstimca*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter ***rstimmon*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter ***sdsfmode*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
27. **sdthr** – Signal Degrade Threshold
See definition of output parameter ***degthr*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **servcond** – Service Condition
See definition of output parameter ***servcond*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **sfthr** – Signal Failure Threshold
See definition of output parameter ***dexcthr*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sltca** – Section and Line TCA Profile Pointer
See definition of output parameter ***rsmstca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **sonet** – SONET ASAP
See definition of output parameter ***sonet*** in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).

- 32. *spm* – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 33. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 34. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 35. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 36. *strcfwmt* – Format of outgoing J0
See definition of output parameter *strcfwmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 37. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 38. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#).
- 39. *z0outmode* – Mode of outgoing Z0 byte insertion
See definition of output parameter *z0outmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

Example output

```
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ENT-OC3:1-1-#-#-1-
1::servcond=ENABLE, sdsfmode=POISSON,sdthr=-
6,brstthr=30,....,istd=SONET,inputsig=31,unequiposig=31"
;
```

□

DLT-OC3 notification

Output format The DLT-OC3 notification uses the general format of a REPT DBCHG (Report Database Change) notification.
Syntax: DLT-OC3:*aid*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC3: Retrieve OC3 port” \(5-243\)](#).

Example output

```
UNITE-NE 00-11-20 8:01:03
A 611 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-OC3:1-1-#-#-4-1
;
```



ED-OC3 autonomous notifications

LOS for transmission port OC3 clears	If LOS is cleared and current port mode is AUTO, then portmode is updated (new value: MON). This update is reported via ED-OC3 notification with parameter <i>pmode</i> .
Change of the constituent rates status list	If <i>trbmd</i> =ADAPTIVE a change of the attribute <i>crstat</i> is notified by the related ED-OC3 notification.



ED-OC12: Edit OC12 port

The ED-OC12 command is used to provision all parameters related to optical OC12 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
 Priority: 1
 Abortable: no

Input format Command Syntax: ED-OC12:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 See definition of output parameter *aid* in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. adminCost - Administrative Cost
 See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. brstintvl – Bursty Interval
 See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. brstthr – Bursty Error Threshold
 See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. exprstrc – Value of Expected J0
 See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

5. felpm – Far-end Line PM Enable
See definition of output parameter *felpm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).
8. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
9. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
10. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
11. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
12. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. nelpm – Near-End Line PM Enable
See definition of output parameter *nelpm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
15. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
16. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

17. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter ***pmrsneses*** in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
18. **portClass** – Port Class
See definition of output parameter ***portClass*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
19. **portControl** – Port Control
See definition of output parameter ***portControl*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
20. **propagationDelay** - Propagation Delay
See definition of output parameter ***propagationDelay*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
21. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter ***rstimca*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
22. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter ***rstimmon*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter ***sdsfmode*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **sdthr** – Signal Degrade Threshold
See definition of output parameter ***degthr*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. **servcond** – Service Condition
See definition of output parameter ***servcond*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. **sfthr** – Signal Failure Threshold
See definition of output parameter ***dexcthr*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. **sltca** – Section and Line TCA Profile Pointer
See definition of output parameter ***rsmstca*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **sonet** – SONET ASAP
See definition of output parameter ***sonet*** in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).

29. *spm* – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. *strcfwmt* – Format of outgoing J0
See definition of output parameter *strcfwmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
35. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).
36. *z0outmode* – Mode of outgoing Z0 byte insertion
See definition of output parameter *z0outmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

Output format If the ED-OC12 command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description The command modifies the attributes (listed in the *spec_block* parameters part of this command) of the addressed port entity according to the parameters given with this command.

The modification is reported by means of an ED-OC12 notification for port (except for parameter *istd*; see below).

Switching of interface standard – Ignore other parameters

If additional parameters beside *istd* are specified with the *ED-rr* command they will be ignored by the NE.

This simple approach has the advantage that all ambiguous situations are avoided and it is not necessary to implement an order or follow a certain sequence when evaluating the parameters.

Switching of interface standard – FM impact

The change of the interface standard of a port from SONET to SDH has the following impact related to Fault Management:

- all SONET alarms related to that port are cleared
- the corresponding SDH alarms are raised.

Switching of tributary mode

When changing the parameter *trbmd* – tributary mode from FIXED to ADAPTIVE the parameter *crstat* may change its value, too, depending on the current input signal structure. This change is notified using the related ED-OC12 notification.

When changing the parameter *trbmd* – tributary mode from ADAPTIVE to FIXED the parameter *crstat* may change its value, too, depending on the current setting of parameter *inputsig*. This change is notified using the related ED-OC12 notification.

Supply outgoing J0 trace value and format together

When changing the format of the outgoing J0 trace *strcwfmt*, the parameter *strcout* specifying the outgoing J0 trace is always supplied within the same TL1-command to always have a consistent set of trace format and value.

Supply outgoing J0 trace value according to format of outgoing J0

When changing the outgoing J0 trace value, the format must be according to the format parameter *strcwfmt* for the outgoing J0 trace.

Switching of interface standard – Impact on port parameters

See detailed behavior specification in [“ED-OC48: Edit OC48 port” \(5-486\)](#).

Switching of interface standard – Side effects on tributaries

See detailed behavior specification in [“ED-OC48: Edit OC48 port” \(5-486\)](#).

Switching of interface standard – notification behavior

See detailed behavior specification in [“ED-OC48: Edit OC48 port” \(5-486\)](#).

Switching of interface standard – PM impact

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Disabling of PM monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to INNI

When *portClass* is set to INNI for a port, the parameter *trbmd* shall be set to ADAPTIVE This shall be reported by an ED-OC12 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to EDGE

When *portClass* is set to EDGE for a port, the parameter *trbmd* shall be set to FIXED This shall be reported by an ED-OC12 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on *loca*, *locz* when setting *portClass* from EDGE to TRADITIONAL when port is involved in a 2F or 4F BLSR/MSSPRING protection group

For all tributaries of that port the *loca*, *locz* parameters shall be reset to their default values (empty string). This is reported by an ED-STS1 (*istd*=SONET for the port) or ED-VC3 (*istd*=SDH for the port) notification using a range over the port.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is INNI

When *portClass* has the value INNI for a port, setting of the following parameters shall be inhibited:

- *exprstrc*
- *rstimca*
- *rstimmon*

- *strcfmt*
- *strcout*
- *strewfmt*.

At the moment *portClass* is changed away from INNI the parameters are set back to their default values. This shall be reported by means of an ED-OC12 notification.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is different from INNI

When *portClass* has a value being different from INNI for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed to INNI:

- *ndetmd*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *adminCost*, *srlgList*, *link_includeID*, *neighborASTNNodeID*.

At the moment the *portClass* is changed to INNI the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is TRADITIONAL

When *portClass* has the value TRADITIONAL for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed away from TRADITIONAL: *portControl*.

At the moment the *portClass* is changed away from TRADITIONAL the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on *portControl* when changing *portClass*

When *portClass* is changed *portControl* shall be set to NORMAL.

ONNS specific behaviour - Impact on port parameter settings when *ndetmd* is set to AUTO

When *ndetmd* is set to AUTO for a port, the parameters *neighborNodeID*, *neighborPortID* or *neighborASTNNodeID* keeps their current values until automatic neighbor detection delivers new valid values.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to AUTO

When *portClass* is set to INNI and *ndetmd* is set to AUTO for a port, the parameter *pmode* shall be set to MONITORING. This shall be reported by an ED-OC12 notification for the parameter *pmode*.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to MAN

When *portClass* is set to INNI and *ndetmd* is set to MAN for a port, the parameters *rstimca* and *rstimmon* are set to DISABLE. This is reported by an ED-OC12 notification for the parameters *rstimca* and *rstimmon*.

Impact on tributary parameter settings when *portClass* is set to INNI

When *portClass* is set to INNI, the parameter *hptimmon* is set to DISABLE for all tributaries located on this port.. This is reported by ED-STS1 notifications for the parameter *hptimmon*.

Example input/output

```
ED-OC12:UNITE-NE:1-1-#-#-1-1:123456::INPUTSIG=31-33,UNEQUIPOSIG=31-33;
    UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
    UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
    "TIME=08-00-12,DATE=00-11-28:ED-OC12:1-1-#-#-1-1::inputsig=31-33,unequiposig=31-33:"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-OC3 command.

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: TCA profile exists

See definition of validation rule in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Validation rule: *inputsig* consistent with existing cross-connections

Check of the consistency of the structure of the input signal (*inputsig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent input signal

Validation rule: *unequiposig* consistent with existing cross-connections

Check of the consistency of the structure of the output signal (*unequiposig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent output signal

Validation rule: no cross-connections for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when cross-connections are still on this port.

Error code: SNVS - Status, Not in Valid State, cross-connections are still existing

Validation rule: no loopbacks for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when cross-connection loopback is still on this port.

Error code: SNVS - Status, Not in Valid State, a loopback is existing

Validation rule: no test access session for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when a tributary related to this port is used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, a test access session exists

Validation rule: no protection for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when this port is in an protection group

Error code: SNVS - Status, Not in Valid State, a protection group is existing

Validation rule: no ONNS for interface standard change

Check that the interface standard parameter (*istd*) is not changed if ONNS functionality is available.

This means:

- *portClass* must be TRADITIONAL or
- *portControl* must be LOCKOUT.

Error code: SNVS - Status, Not in Valid State, Swiss access possible

Validation rule: no path protection for *trbmd* change to ADAPTIVE

Check that *trbmd* is not set to ADAPTIVE when this port is in a path protection group.

Error code: SNVS - Status, Not in Valid State, a path protection group is existing

Validation rule: *servcond* must be enabled when timing source

Check that the *servcond* is not disabled when the port is used as a timing source.

Error code: SNVS - Status, Not in Valid State, Timing reference is assigned to this port

Validation rule: *servcond* must be enabled when DCC enabled

Check that the *servcond* is not disabled when DCC channels are still existing for this port.

Error code: SNVS - Status, Not in Valid State, DCC channels are active for this port

Validation rule: *servcond* must be enabled when *portClass*=INNI

Check that the *servcond* is not OUTOFSERVICE when *portClass*=INNI.

Error code: SNVS - Status, Not in Valid State, can not disable *servcond* for INNI ports

Validation rule: *servcond* must be disabled for facility loopback

Check that the *servcond* is not enabled when a facility loopbackp is existing for this port.

Error code: SNVS - Status, Not in Valid State, Facility Loopback is active for this port

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation rule: Supply of outgoing J0 trace

Check that an outgoing J0 trace value (*strc out*) is supplied, too, if the format of the outgoing J0 trace (*strcwfmt*) is changed.

Error code: IDNC - Input, Data Not Consistent, a new trace value must also be supplied for a trace format change.

Validation rule: transmitted path trace length

Check that the length of the outgoing J0 trace value (*strcout*) fits to the length given by outgoing J0 trace mode, i.e. write format (*strcwfmt*).

Error code: IDNC - Input, Data, Not Consistent, strcout length must match the given outgoing J0 trace mode.

Check CCB against *ptype* and *istd*

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

ONNS specific validation rule: *portClass* only settable when *xcsetup*=SWISS

Modification of the *portClass* parameter shall only be allowed when *xcsetup*=SWISS.

Error Code: SNVS - Status, Not in Valid State, Swiss not enabled

ONNS specific validation rule: Some parameters not settable for ports of *portClass* INNI

The following parameters shall not be changeable for ports with *portClass* INNI: *trbmd*.

Error Code: SNVS - Status, Not in Valid State, portClass must not be INNI

ONNS specific validation rule: Some parameters not settable for ports of *portClass* EDGE

The following parameters shall not be changeable for ports with *portClass* EDGE: *trbmd*.

Error Code: SNVS - Status, Not in Valid State, *portClass* must not be EDGE

ONNS specific validation rule: Some parameters not settable for ports of *ndetmd* AUTO

The following parameters shall not be changeable for ports with *ndetmd* AUTO: *neighborNodeID*, *neighborPortID*, *neighborASTNNodeID*.

Error Code: SNVS - Status, Not in Valid State, *ndetmd* must not be AUTO

ONNS specific validation rule: Additional parameters required when setting *ndetmd* to MAN

Values for the following parameters must be given, if *ndetmd* is changed to MAN: *neighborNodeID*, *neighborPortID*.

Error Code: IDNV - Input, Data Not Valid, additional parameters *neighborNodeID* and *neighborPortID* required

A values for the following parameter must be given, if *ndetmd* is changed to MAN: *neighborASTNNodeID*.

Error Code: IDNV - Input, Data Not Valid, additional parameter required

ONNS specific validation rule: No setting of duplicate *neighborASTNNodeID* and *neighborPortID* parameter combination

Setting of the parameters *neighborASTNNodeID* and *neighborPortID* is only possible, if the same combination of values does not already exists for a different INNI port in the system.

Error Code: IDNV - Input, Data Not Valid, duplicate neighbor port information

ONNS specific validation rule: Setting of *portClass* to INNI not possible for ports in protection groups

It shall not be allowed to change *portClass* of a port to INNI, if this port is member of a Line/MS protection scheme.

Error Code: SNVS - Status, Not in Valid State, Port must not be member of a protection group

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if no cross-connection existing

It shall not be allowed to change *portClass* to INNI, if cross-connections on that port are still existing.

Error Code: SNVS - Status, Not in Valid State,
Cross-connections still existing

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if service condition not OUTOFSERVICE

It shall not be allowed to change *portClass* to INNI, if *servcond*=OUTOFSERVICE.

Error code: SNVS - Status, Not in Valid State, port in out of service state

ONNS specific validation rule: Setting of *portControl* to NORMAL only possible, if no cross-connection loopbacks existing

It shall not be allowed to change *portControl* to NORMAL, if there are existing cross-connection loopbacks associated with the port.

Error code: SNVS - Status, Not in Valid State, loopbacks present

ONNS specific validation rule: Setting of some INNI properties only possible, if no cross-connection existing

It shall not be allowed to change one of the following parameters (provided this parameter is supported in a particular release at all) on a port with *portClass*=INNI, if cross-connections on that port are existing: *adminCost*, *link_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*, *neighborASTNNodeID*.

Error code: SNVS - Status, Not in Valid State, no XCs allowed for change of INNI parameters

ONNS specific validation rule: Setting of INNI properties only possible for INNI ports

The system allows to change the following parameters only if the port class (*portClass*) is set to INNI and the port control (*portControl*) is set to LOCKOUT: *adminCost*, *link_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*.

Error code: SNVS - Status, Not in Valid State, only allowed for INNI port in lockout state

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if no test access session active

It shall not be allowed to change *portClass* of a port to INNI when a tributary related to this port is used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, a test access session exists

ONNS specific validation rule: Setting of *portClass* away from INNI only possible, if the port is not in use

For setting *portClass* from INNI to TRADITIONAL or EDGE the following must be fulfilled:

- No cross-connection may exist on any tributary of the port
- *portControl* must be LOCKOUT

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Changing of *portClass* from INNI to EDGE or TRADITIONAL only possible, if no DCC for SCN is enabled on the port

For changing the value of the parameter *portClass* no DCC of the port must be enabled for the SCN.

Error Code: SNVS - Status, Not in Valid State, DCC on SCN may not be enabled

ONNS specific validation rule: Setting of *portClass* from EDGE to TRADITIONAL only possible, if the tributaries on the port are not in use by ONNS:

For setting *portClass* from EDGE to TRADITIONAL the following must be fulfilled:

- No cross-connections of xconcls=NN may exist on any tributary of the port
- *portControl* must be LOCKOUT

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Setting of *portClass* from TRADITIONAL to EDGE

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1+1 MSP group.

Error Code: SNVS - Status, Not in Valid State, Port must not be a 1+1 protection port

For setting portClass from TRADITIONAL to EDGE the port must not be the protection port of a 1:1 MSP group.

Error Code: SNVS - Status, Not in Valid State, Port must not be a 1:1 protection port

ONNS specific validation rule: Not allowed to change the *portClass* directly from INNI to EDGE or EDGE to INNI

It is not be allowed to change the *portClass* of a port directly from INNI to EDGE or from EDGE to INNI.

Error Code: SNVS - Status, Not in Valid State, Port Class must not be EDGE or INNI

ONNS specific validation rule: Some parameters not settable for ports of *portClass*=INNI

The following parameters shall not be changeable for ports with *portClass*=INNI: *exprstrc*, *rstimca*, *rstimmon*, *strcfmt*, *strcout*, *strcwfmt*.

Error code: SNVS - Status, Not in Valid State, J0 parameters can not be set for INNI ports

Related TL1 messages [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#)

References GR-199-CORE (ED-*rr*)



ED-OC12 notification

Output format The ED-OC12 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-OC12:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).
5. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *felpm* – Far-end Line PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *frcdus* – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *fsflpbkstat* – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).
10. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
11. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. nelpm – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
18. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
19. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

20. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter **pmrsneses** in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
21. **portClass** – Port Class
See definition of output parameter **portClass** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
22. **portControl** – Port Control
See definition of output parameter **portControl** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
23. **propagationDelay** - Propagation Delay
See definition of output parameter **propagationDelay** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter **rstimca** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter **rstimmon** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
27. **sdthr** – Signal Degrade Threshold
See definition of output parameter **degthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **servcond** – Service Condition
See definition of output parameter **servcond** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **sfthr** – Signal Failure Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sltca** – Section and Line TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **sonet** – SONET ASAP
See definition of output parameter **sonet** in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).

32. *spm* – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
34. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. *strcfwmt* – Format of outgoing J0
See definition of output parameter *strcfwmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
38. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).
39. *z0outmode* – Mode of outgoing Z0 byte insertion
See definition of output parameter *z0outmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

Example output

```
ED-OC12:UNITE-NE:1-1-#-#-1-1:123456::INPUTSIG=31-33,UNEQUIPOSIG=31-33;
  UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
  UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
  "TIME=08-00-12,DATE=00-11-28:ED-OC12:1-1-#-#-1-1::inputsig=31-33,unequiposig=31-33:"
;
```



ENT-OC12 notification

Output format The ENT-OC12 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-OC12:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).
5. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *felpm* – Far-end Line PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *frcdus* – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *fsflpbkstat* – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).
10. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
11. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. nelpm – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
18. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
19. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

20. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter **pmrsneses** in [“RTRV-STM4: Retrieve STM4 port” \(5-206\)](#).
21. **portClass** – Port Class
See definition of output parameter **portClass** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
22. **portControl** – Port Control
See definition of output parameter **portControl** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
23. **propagationDelay** - Propagation Delay
See definition of output parameter **propagationDelay** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter **rstimca** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter **rstimmon** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
27. **sdthr** – Signal Degrade Threshold
See definition of output parameter **degthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **servcond** – Service Condition
See definition of output parameter **servcond** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **sfthr** – Signal Failure Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sltca** – Section and Line TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **sonet** – SONET ASAP
See definition of output parameter **sonet** in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).

32. *spm* – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
34. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. *strcfwmt* – Format of outgoing J0
See definition of output parameter *strcfwmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
38. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).
39. *z0outmode* – Mode of outgoing Z0 byte insertion
See definition of output parameter *z0outmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

Example output

```
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ENT-OC12:1-1-#-#-1-1::
servcond=ENABLE, sdsfmode=POISSON,sdthr=-6,
brstthr=30,....,istd=SONET,inputsig=121,
unequiposig=121"
;
```



DLT-OC12 notification

Output format The DLT-OC12 notification uses the general format of a REPT DBCHG (Report Database Change) notification.
Syntax: DLT-OC12:*aid*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC12: Retrieve OC12 port” \(5-250\)](#).

Example output UNITE-NE 00-11-20 8:01:03
A 611 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-OC12:1-1-#-#-4-1
;



ED-OC12 autonomous notifications

LOS for transmission port OC12 clears	If LOS is cleared and current port mode is AUTO, then portmode is updated (new value: MON). This update is reported via ED-OC12 notification with parameter pmode.
Change of the constituent rates status list	If <i>trbmd</i> =ADAPTIVE a change of the attribute <i>crstat</i> is notified by the related ED-OC12 notification.
Change of neighbor node and neighbor port information	If <i>ndetmd</i> =AUTO a change of the attributes <i>neighborNodeID</i> , <i>neighborPortID</i> or <i>neighborASTNNodeID</i> is notified by the related ED-OC12 notification.



ED-OC48: Edit OC48 port

The ED-OC48 command is used to provision all parameters related to optical OC48 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
 Priority: 1
 Abortable: no

Input format Command Syntax: ED-OC48:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
 See definition of output parameter *aid* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. adminCost - Administrative Cost
 See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. brstintvl – Bursty Interval
 See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. brstthr – Bursty Error Threshold
 See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. exprstrc – Value of Expected J0
 See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

5. felpm – Far-end Line PM Enable
See definition of output parameter *felpm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
8. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
9. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
10. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
11. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
12. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. nelpm – Near-End Line PM Enable
See definition of output parameter *nelpm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
15. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
16. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

17. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter **pmrsneses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. **portClass** – Port Class
See definition of output parameter **portClass** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
19. **portControl** – Port Control
See definition of output parameter **portControl** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
20. **propagationDelay** - Propagation Delay
See definition of output parameter **propagationDelay** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
21. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter **rstimca** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
22. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter **rstimmon** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **sdthr** – Signal Degrade Threshold
See definition of output parameter **degthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. **servcond** – Service Condition
See definition of output parameter **servcond** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. **sfthr** – Signal Failure Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. **sltca** – Section and Line TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **sonet** – SONET ASAP
See definition of output parameter **sonet** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

29. *spm* – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
33. *strcfwmt* – Format of outgoing J0
See definition of output parameter *strcfwmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
35. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
36. *z0outmode* – Mode of outgoing Z0 byte insertion
See definition of output parameter *z0outmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

Output format If the ED-OC48 command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description The command modifies the attributes (listed in the *spec_block* parameters part of this command) of the addressed port entity according to the parameters given with this command.

The modification is reported by means of an ED-OC48 notification for port (except for parameter *istd*; see below).

Switching of interface standard – Ignore other parameters

If additional parameters beside *istd* are specified with the *ED-rr* command they will be ignored by the NE.

This simple approach has the advantage that all ambiguous situations are avoided and it is not necessary to implement an order or follow a certain sequence when evaluating the parameters.

Switching of interface standard – FM impact

The change of the interface standard of a port from SONET to SDH has the following impact related to Fault Management:

- all SONET alarms related to that port are cleared
- the corresponding SDH alarms are raised.

Switching of tributary mode

When changing the parameter *trbmd* – tributary mode from FIXED to ADAPTIVE the parameter *crstat* may change its value, too, depending on the current input signal structure. This change is notified using the related ED-OC48 notification.

When changing the parameter *trbmd* – tributary mode from ADAPTIVE to FIXED the parameter *crstat* may change its value, too, depending on the current setting of parameter *inputsig*. This change is notified using the related ED-OC48 notification.

Supply outgoing J0 trace value and format together

When changing the format of the outgoing J0 trace *strcwfmt*, the parameter *strcout* specifying the outgoing J0 trace is always supplied within the same TL1-command to always have a consistent set of trace format and value.

Supply outgoing J0 trace value according to format of outgoing J0

When changing the outgoing J0 trace value, the format must be according to the format parameter *strcwfmt* for the outgoing J0 trace.

Switching of interface standard – Impact on port parameters

The switching of *istd* should not result in an deletion and recreation of the port. NE internally there are no differences between SDH and SONET.

Switching of interface standard I:

In detail the following attributes are influenced by switching of the *istd* from SONET to SDH (see also the related RTRV-STMn command for SDH parameter description):

- *brstintvl* is set to the default value
- *brstthr* is set to the default value
- *crstat* may change according to its semantics (see description of *crstat*)
- *degthr* is set to the default value for an SDH port
- *dexcthr* is set to the default value for an SDH port
- *felpm* is mapped to *femspm* (no changes)
- *inputsig* is set to the default value
- *istd* is set to SDH
- *nelpm* is mapped to *nemspm* (no changes)
- *rstimca* is set to the default value for a SDH port
- *rstimmon* is set to the default value for a SDH port
- *sdsfmode* is set to the default value for an SDH port
- *spm* is mapped to *rspm* (no changes)
- *sonet* is mapped to *sdhpn* (no changes)
- *trbmd* is set to the default value for an SDH port
- *unequiposig* is set to its default value.

All other port parameters remain unchanged.

Switching of interface standard II:

Switching of interface standard III:

Switching of interface standard – Side effects on tributaries

The switching of *istd* should not result in an deletion and recreation of the tributaries of a port. NE internally there are no differences between SDH and SONET.

In detail the following side-effects apply to the related tributary attributes when switching the *istd* from SONET to SDH (see also the related RTRV-STMn command for SDH parameter description):

- *brstintvl* is set to the default value for a SDH tributary
- *brstthr* is set to the default value for a SDH tributary

- *pse* (PDI-P parameter) shall be set to the default value for a SDH tributary
- *sdsfmode* is set to the default value for a SDH tributary.

All other tributary parameters remain unchanged.

Switching of interface standard – Side effects on tributaries II

In addition to the list of attributes above the following side-effects apply to the related tributary attributes when switching the *istd* from SONET to SDH (see also the related RTRV-STMn command for SDH parameter description):

- *degthr* is set to the default value for an SDH tributary
- *dexcthr* is set to the default value for an SDH tributary
- *ptca* shall be set to the default value for a SDH tributary
- *tcamd* is set to the default value for a SDH tributary.

Switching of interface standard – Side effects on tributaries III

In addition to the list of attributes above the following side-effects apply to the related tributary attributes when switching the *istd* from SONET to SDH (see also the related RTRV-STMn command for SDH parameter description):

- *pmhpneses* is set to the default value for an SDH tributary
- *pmhpfeses* is set to the default value for an SDH tributary.

Switching of interface standard – notification behavior for port attributes

When changing the interface standard *istd* using the ED-OCn command all resulting parameter changes are reported by ED-STMn notifications of the related port rate. This is valid for the parameter *istd* itself as well as for all other parameters which might change as a consequence of changing the interface standard.

Switching of interface standard – notification behavior for tributary attributes

When changing the interface standard *istd* using the ED-OCn command all resulting tributary parameter changes are reported by ED-VC3 notifications.

For efficiency reasons the ED-VC3 notifications is sent out as a single notification using a range over the aid which depends on the port rate

of the associated port, i. e. the Simple_STS1NumAID field in the STS1NumAID is set to

- 1 - 3 in case of an STS1/OC3 port
- 1 - 12 in case of an STS4/OC12 port
- 1 - 48 in case of an STS16/OC48 port
- 1 - 192 in case of an STS64/OC192 port
- 1 - 768 in case of an STS256/OC768 port.

Switching of interface standard – PM impact

See Detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#) .

Disabling of PM monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to INNI

When *portClass* is set to INNI for a port, the parameter *trbmd* shall be set to ADAPTIVE This shall be reported by an ED-OC48 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to EDGE

When *portClass* is set to EDGE for a port, the parameter *trbmd* shall be set to FIXED. This shall be reported by an ED-OC48 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is INNI

When *portClass* has the value INNI for a port, setting of the following parameters will be accepted, but will have no impact until *portClass* is changed away from INNI:

- *exprstrc*
- *rstimca*
- *rstimmon*
- *strcfmt*
- *strcout*
- *strcwfmt*.

At the moment *portClass* is changed away from INNI the parameters are set back to their default values. This shall be reported by means of an ED-OC48 notification.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is different from INNI

When *portClass* has a value being different from INNI for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed to INNI:

- *ndetmd*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *adminCost*, *srlgList*, *link_includeID*, *neighborASTNNodeID*.

At the moment the *portClass* is changed to INNI the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is TRADITIONAL

When *portClass* has the value TRADITIONAL for a port, setting of the following parameters will be accepted, but will have no impact until *portClass* is changed away from TRADITIONAL: *portControl*.

At the moment the *portClass* is changed away from TRADITIONAL the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on *portControl* when changing *portClass*

When *portClass* is changed *portControl* shall be set to NORMAL.

ONNS specific behaviour - Impact on port parameter settings when *ndetmd* is set to AUTO

When *ndetmd* is set to AUTO for a port, the parameters *neighborNodeID*, *neighborPortID* or *neighborASTNNodeID* shall keep their current values until automatic neighbor detection delivers new valid values.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to AUTO

When *portClass* is set to INNI and *ndetmd* is set to AUTO for a port, the parameter *pmode* shall be set to MONITORING. This shall be reported by an ED-OC48 notification for the parameter *pmode*.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to MAN

When *portClass* is set to INNI and *ndetmd* is set to MAN for a port, the parameters *rstimca* and *rstimmon* are set to DISABLE. This is

reported by an ED-OC12 notification for the parameters *rstimca* and *rstimmon*.

ONNS specific behaviour - Impact on tributary parameter settings when *portClass* is set to INNI

When *portClass* is set to INNI, the parameter *hptimmon* is set to DISABLE for all tributaries located on this port.. This is reported by ED-STS1 notifications for the parameter *hptimmon*.

Example input/output

```
ED-OC48:UNITE-NE:1-1-#-#-1-1:123456:::INPUTSIG=74-33-84,UNEQUIPOSIG=74-33-84;
    UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
    UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
    "TIME=08-00-12,DATE=00-11-28:ED-OC48:1-1-#-#-1-1::inputsig=74-33-84,unequiposig=74-33-84:"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-OC48 command.

Validation rule: Enough bandwidth reserved for 2F protection group

Check of the tributary rate (*inputsig/unequiposig*) if the port is member of a 2f protection group. Then the assigned bandwidth is max. half of the port's bandwidth.

Error code: IDNV - Input, Data Not Valid, Assigned bandwidth exceeds half port's bandwidth

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: TCA profile exists

See definition of validation rule in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Validation rule: *inputsig* consistent with existing cross-connections

Check of the consistency of the structure of the input signal (*inputsig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent input signal

Validation rule: *unequiposig* consistent with existing cross-connections

Check of the consistency of the structure of the output signal (*unequiposig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent output signal

Validation rule: no cross-connections for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when cross-connections are still on this port.

Error code: SNVS - Status, Not in Valid State, cross-connections are still existing

Validation rule: no loopbacks for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when cross-connection loopback is still on this port.

Error code: SNVS - Status, Not in Valid State, a loopback is existing

Validation rule: no test access session for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when a tributary related to this port is used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, a test access session exists

Validation rule: no protection for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when this port is in an protection group.

Error code: SNVS - Status, Not in Valid State, a protection group is existing

Validation rule: no ONNS for interface standard change

Check that the interface standard parameter (istd) is not changed if ONNS functionality is available.

This means:

- *portClass* must be TRADITIONAL or
- *portControl* must be LOCKOUT.

Error code: SNVS - Status, Not in Valid State, Swiss access possible

Validation rule: no path protection for *trbmd* change to ADAPTIVE

Check that *trbmd* is not set to ADAPTIVE when this port is in a path protection group.

Error code: SNVS - Status, Not in Valid State, a path protection group is existing

Validation rule: *servcond* must be enabled when timing source

Check that the *servcond* is not disabled when the port is used as a timing source.

Error code: SNVS - Status, Not in Valid State, Timing reference is assigned to this port

Validation rule: *servcond* must be enabled when DCC enabled

Check that the *servcond* is not disabled when DCC channels are still existing for this port.

Error code: SNVS - Status, Not in Valid State, DCC channels are active for this port

Validation rule: *servcond* must be enabled when portClass=INNI

Check that the *servcond* is not OUTOFSERVICE when portClass=INNI.

Error code: SNVS - Status, Not in Valid State, can not disable servcond for INNI ports

Validation rule: *servcond* must be disabled for facility loopback

Check that the *servcond* is not enabled when a facility loopback is existing for this port.

Error code: SNVS - Status, Not in Valid State, Facility Loopback is active for this port

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation rule: Supply of outgoing J0 trace

Check that an outgoing J0 trace value (*strc* out) is supplied, too, if the format of the outgoing J0 trace (*strcwfmt*) is changed.

Error code: IDNC - Input, Data Not Consistent, a new trace value must also be supplied for a trace format change.

Validation rule: transmitted path trace length

Check that the length of the outgoing J0 trace value (*strcout*) fits to the length given by outgoing J0 trace mode, i.e. write format (*strcwfmt*).

Error code: IDNC - Input, Data, Not Consistent, strcout length must match the given outgoing J0 trace mode.

Check CCB against *ptype* and *istd*

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

ONNS specific validation rule: *portClass* only settable when *xcsetup*=SWISS

Modification of the *portClass* parameter shall only be allowed when *xcsetup*=SWISS.

Error Code: SNVS - Status, Not in Valid State, Swiss not enabled

ONNS specific validation rule: Some parameters not settable for ports of *portClass* INNI

The following parameters shall not be changeable for ports with *portClass* INNI: *trbmd*.

Error Code: SNVS - Status, Not in Valid State, *portClass* must not be INNI

ONNS specific validation rule: Some parameters not settable for ports of *portClass* EDGE

The following parameters shall not be changeable for ports with *portClass* EDGE: *trbmd*.

Error Code: SNVS - Status, Not in Valid State, *portClass* must not be EDGE

ONNS specific validation rule: Some parameters not settable for ports of *ndetmd* AUTO

The following parameters shall not be changeable for ports with *ndetmd* AUTO: *neighborNodeID*, *neighborPortID*, *neighborASTNNodeID*.

Error Code: SNVS - Status, Not in Valid State, *ndetmd* must not be AUTO

ONNS specific validation rule: Additional parameters required when setting *ndetmd* to MAN

Values for the following parameters must be given, if *ndetmd* is changed to MAN: *neighborNodeID*, *neighborPortID*.

Error Code: IDNV - Input, Data Not Valid, additional parameters *neighborNodeID* and *neighborPortID* required

A values for the following parameter must be given, if *ndetmd* is changed to MAN: *neighborASTNNodeID*.

Error Code: IDNV - Input, Data Not Valid, additional parameter required

ONNS specific validation rule: No setting of duplicate *neighborASTNNodeID* and *neighborPortID* parameter combination

Setting of the parameters *neighborASTNNodeID* and *neighborPortID* is only possible, if the same combination of values does not already exists for a different INNI port in the system.

Error Code: IDNV - Input, Data Not Valid, duplicate neighbor port information

ONNS specific validation rule: Setting of *portClass* to INNI not possible for ports in protection groups

It shall not be allowed to change *portClass* of a port to INNI, if this port is member of a Line/MS protection scheme.

Error Code: SNVS - Status, Not in Valid State, Port must not be member of a protection group

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if no cross-connection existing

It shall not be allowed to change *portClass* to INNI, if cross-connections on that port are still existing.

Error Code: SNVS - Status, Not in Valid State, Cross-connections still existing

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if service condition not OUTOFSERVICE

It shall not be allowed to change *portClass* to INNI, if *servcond*=OUTOFSERVICE.

Error code: SNVS - Status, Not in Valid State, port in out of service state

ONNS specific validation rule: Setting of *portControl* to NORMAL only possible, if no cross-connection loopbacks existing

It shall not be allowed to change *portControl* to NORMAL, if there are existing cross-connection loopbacks associated with the port.

Error code: SNVS - Status, Not in Valid State, loopbacks present

ONNS specific validation rule: Setting of some INNI properties only possible, if no cross-connection existing

It shall not be allowed to change one of the following parameters (provided this parameter is supported in a particular release at all) on a port with *portClass*=INNI, if cross-connections on that port are existing: *adminCost*, *link_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*.

Error code: SNVS - Status, Not in Valid State, no XCs allowed for change of iNNI parameters

ONNS specific validation rule: Setting of INNI properties only possible for INNI ports

The system allows to change the following parameters only if the port class (*portClass*) is set to INNI and the port control (*portControl*) is set to LOCKOUT: *adminCost*, *link_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*.

Error code: SNVS - Status, Not in Valid State, only allowed for INNI port in lockout state

ONNS specific validation rule: Setting of *portClass* to INNI or EDGE only possible, if no test access session active

It shall not be allowed to change *portClass* of a port to INNI or EDGE when a tributary related to this port is used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, a test access session exists

ONNS specific validation rule: Setting of *portClass* away from INNI only possible, if the port is not in use

For setting *portClass* from INNI to TRADITIONAL or EDGE the following must be fulfilled:

- No cross-connection may exist on any tributary of the port
- *portControl* must be LOCKOUT

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Changing of *portClass* from INNI to EDGE or TRADITIONAL only possible, if no DCC for SCN is enabled on the port:

For changing the value of the parameter *portClass* no DCC of the port must be enabled for the SCN.

Error Code: SNVS - Status, Not in Valid State, DCC on SCN may not be enabled

ONNS specific validation rule: Setting of *portClass* from EDGE to TRADITIONAL only possible, if the tributaries on the port are not in use by ONNS:

For setting *portClass* from EDGE to TRADITIONAL the following must be fulfilled:

- No cross-connections of xconcls=NN may exist on any tributary of the port
- *portControl* must be LOCKOUT.

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Setting of *portClass* from TRADITIONAL to EDGE

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1+1 MSP group.

Error Code: SNVS - Status, Not in Valid State, Port must not be a 1+1 protection port

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1:1 MSP group.

Error Code: SNVS - Status, Not in Valid State, Port must not be a 1:1 protection port

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 4f-BLSR group.

Error Code: SNVS - Status, Not in Valid State, Port must not be a 4f-BLSR protection port

ONNS specific validation rule: Not allowed to change the *portClass* directly from INNI to EDGE or EDGE to INNI

It is not be allowed to change the *portClass* of a port directly from INNI to EDGE or from EDGE to INNI.

Error Code: SNVS - Status, Not in Valid State, Port Class must not be EDGE or INNI

ONNS specific validation rule: Some parameters not settable for ports of *portClass*=INNI

The following parameters shall not be changeable for ports with *portClass*=INNI: *exprstrc*, *rstimca*, *rstimmon*, *strcfmt*, *strcout*, *strcwfmt*.

Error code: SNVS - Status, Not in Valid State, J0 parameters
can not be set for INNI ports

Related TL1 messages [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#)

References GR-199-CORE (ED-*rr*)



ED-OC48 notification

Output format The ED-OC48 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-OC48:*aid::spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
5. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *felpm* – Far-end Line PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *frcdus* – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *fsflpbkstat* – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
10. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
11. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. nelpm – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

20. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter **pmrsneses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
21. **portClass** – Port Class
See definition of output parameter **portClass** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
22. **portControl** – Port Control
See definition of output parameter **portControl** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
23. **propagationDelay** - Propagation Delay
See definition of output parameter **propagationDelay** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter **rstimca** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter **rstimmon** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
27. **sdthr** – Signal Degrade Threshold
See definition of output parameter **degthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **servcond** – Service Condition
See definition of output parameter **servcond** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **sfthr** – Signal Failure Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sltca** – Section and Line TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **sonet** – SONET ASAP
See definition of output parameter **sonet** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

- 32. *spm* – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 33. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 34. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 35. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 36. *strcfwmt* – Format of outgoing J0
See definition of output parameter *strcfwmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 37. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 38. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 39. *z0outmode* – Mode of outgoing Z0 byte insertion
See definition of output parameter *z0outmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

Example output

```
ED-OC48:UNITE-NE:1-1-#-#-u1-1:123456:::INPUTSIG=74-33-84,UNEQUIPOSIG=74-33-84;
UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ED-OC48:1-1-#-#-1-1::inputsig=74-33-84,unequiposig=74-33-84:"
;
```



ENT-OC48 notification

Output format The ENT-OC48 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-OC48:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
5. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *felpm* – Far-end Line PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *frcdus* – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *fsflpbkstat* – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
10. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
11. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. nelpm – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

20. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter **pmrsneses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
21. **portClass** – Port Class
See definition of output parameter **portClass** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
22. **portControl** – Port Control
See definition of output parameter **portControl** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
23. **propagationDelay** - Propagation Delay
See definition of output parameter **propagationDelay** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter **rstimca** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter **rstimmon** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
27. **sdthr** – Signal Degrade Threshold
See definition of output parameter **degthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. **servcond** – Service Condition
See definition of output parameter **servcond** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **sfthr** – Signal Failure Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sltca** – Section and Line TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **sonet** – SONET ASAP
See definition of output parameter **sonet** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

- 32. *spm* – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 33. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 34. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 35. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 36. *strcfwmt* – Format of outgoing J0
See definition of output parameter *strcfwmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 37. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 38. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 39. *z0outmode* – Mode of outgoing Z0 byte insertion
See definition of output parameter *z0outmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

Example output

```
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ENT-OC48:
1-1-#-#-1-1::servcond=ENABLE, sdsfmode=POISSON,
sdthr=-6,brstthr=30,....,istd=SONET,
inputsig=481,unequiposig=481"
;
```



DLT-OC48 notification

Output format The DLT-OC48 notification uses the general format of a REPT DBCHG (Report Database Change) notification.
Syntax: DLT-OC48:*aid*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

Example output UNITE-NE 00-11-20 8:01:03
A 611 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-OC48:1-1-#-#-4-1
;



ED-OC48 autonomous notifications

LOS for transmission port OC48 clears	If LOS is cleared and current port mode is AUTO, then portmode is updated (new value: MON). This update is reported via ED-OC48 notification with parameter <i>pmode</i> .
Change of the constituent rates status list	If <i>trbmd</i> =ADAPTIVE a change of the attribute <i>crstat</i> is notified by the related ED-OC48 notification.
Change of neighbor node and neighbor port information	If <i>ndetmd</i> =AUTO a change of the attributes <i>neighborNodeID</i> , <i>neighborPortID</i> or <i>neighborASTNNodeID</i> is notified by the related ED-OC48 notification.



ED-OC192: Edit OC192 port

The ED-OC192 command is used to provision all parameters related to an optical OC192 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
 Priority: 1
 Abortable: no

Input format Command Syntax: ED-OC192:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 See definition of output parameter *aid* in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. *adminCost* - Administrative Cost
 See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
 See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
 See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *exprstrc* – Value of Expected J0
 See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

5. fec – FEC Enable
See definition of output parameter *fec* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
6. felpm – Far-end Line PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. frcdus – Force to DUS
See definition of output parameter *frdus* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
8. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).
9. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
10. msrei – MS-REI mode
See definition of output parameter *msrei* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
11. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
12. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
13. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
14. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. nelpm – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
16. och – Optical Channel enable
See definition of output parameter *och* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

17. **pmmsfeses** – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter ***pmmsfeses*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. **pmmsneses** – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter ***pmmsneses*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. **pmode** – Port Mode
See definition of output parameter ***pmode*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
20. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter ***pmrsneses*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
21. **polynomial** - Optical Channel Scrambling Polynomial
See definition of output parameter ***polynomial*** in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
22. **portClass** – Port Class
See definition of output parameter ***portClass*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
23. **portControl** – Port Control
See definition of output parameter ***portControl*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
24. **propagationDelay** - Propagation Delay
See definition of output parameter ***propagationDelay*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
25. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter ***rstimca*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
26. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter ***rstimmon*** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter ***sdsfmode*** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

28. **sdthr** – Signal Degrade Threshold
See definition of output parameter **degthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. **servcond** – Service Condition
See definition of output parameter **servcond** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sfthr** – Signal Failure Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
31. **sltca** – Section and Line TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. **sonet** – SONET ASAP
See definition of output parameter **sonet** in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).
33. **spm** – Section PM Enable
See definition of output parameter **rspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. **srlgList** – Shared Risk Link Group Identity List
See definition of output parameter **srlgList** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
35. **strcfmt** – Format of incoming J0
See definition of output parameter **strcfmt** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
36. **strcout** – Value of outgoing J0
See definition of output parameter **strcout** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. **stcrwfmt** – Format of outgoing J0
See definition of output parameter **stcrwfmt** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
38. **trbmd** – Tributary mode
See definition of output parameter **trbmd** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
39. **unequiposig** – Unequipped Output Signal List
See definition of output parameter **unequiposig** in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).

Output format If the ED-OC192 command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

The command modifies the attributes (listed in the *spec_block* parameters part of this command) of the addressed port entity according to the parameters given with this command.

The modification is reported by means of an ED-OC192 notification for port (except for parameter *istd*; see below).

Switching of interface standard – Ignore other parameters

If additional parameters beside *istd* are specified with the *ED-rr* command they will be ignored by the NE.

This simple approach has the advantage that all ambiguous situations are avoided and it is not necessary to implement an order or follow a certain sequence when evaluating the parameters.

Switching of interface standard – FM impact

The change of the interface standard of a port from SONET to SDH has the following impact related to Fault Management:

- all SONET alarms related to that port are cleared
- the corresponding SDH alarms are raised.

Switching of tributary mode

When changing the parameter *trbmd* – tributary mode from FIXED to ADAPTIVE the parameter *crstat* may change its value, too, depending on the current input signal structure. This change is notified using the related ED-OC192 notification.

When changing the parameter *trbmd* – tributary mode from ADAPTIVE to FIXED the parameter *crstat* may change its value, too, depending on the current setting of parameter *inputsig*. This change is notified using the related ED-OC192 notification.

Supply outgoing J0 trace value and format together

When changing the format of the outgoing J0 trace *strcwfmt*, the parameter *strcout* specifying the outgoing J0 trace is always supplied within the same TL1-command to always have a consistent set of trace format and value.

Supply outgoing J0 trace value according to format of outgoing J0

When changing the outgoing J0 trace value, the format must be according to the format parameter *strcwfmt* for the outgoing J0 trace.

Switching of interface standard – Impact on port parameters

See detailed behavior specification in [“ED-OC48: Edit OC48 port” \(5-486\)](#).

Switching of interface standard – Side effects on tributaries

See detailed behavior specification in [“ED-OC48: Edit OC48 port” \(5-486\)](#).

Switching of interface standard – notification behavior

See detailed behavior specification in [“ED-OC48: Edit OC48 port” \(5-486\)](#).

Disabling of PM monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to INNI

When *portClass* is set to INNI for a port, the parameter *trbmd* shall be set to ADAPTIVE. This shall be reported by an ED-OC192 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on tributary mode setting when *portClass* is set to EDGE

When *portClass* is set to EDGE for a port, the parameter *trbmd* shall be set to FIXED. This shall be reported by an ED-OC192 notification for the parameter *trbmd*.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is INNI

When *portClass* has the value INNI for a port, setting of the following parameters shall be inhibited:

- *exprstrc*
- *rstimca*
- *rstimmon*
- *strcfmt*
- *strcout*
- *strcwfmt*.

At the moment *portClass* is changed away from INNI the parameters are set back to their default values. This shall be reported by means of an ED-OC192 notification.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is different from INNI

When *portClass* has a value being different from INNI for a port, setting of the following parameters shall be accepted, but shall have no impact until *portClass* is changed to INNI:

- *ndetmd*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *adminCost*, *srlgList*, *link_includeID*, *neighborASTNNodeID*.

At the moment the *portClass* is changed to INNI the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on port parameter settings while *portClass* is TRADITIONAL

When *portClass* has the value TRADITIONAL for a port, setting of the following parameters will be accepted, but will have no impact until *portClass* is changed away from TRADITIONAL: *portControl*.

At the moment the *portClass* is changed away from TRADITIONAL the current values of these parameters shall be considered as valid.

ONNS specific behaviour - Impact on portControl changing portClass

When *portClass* is changed *portControl* shall be set to NORMAL.

ONNS specific behaviour - Impact on port parameter settings when *ndetmd* is set to AUTO

When *ndetmd* is set to AUTO for a port, the parameters *neighborNodeID*, *neighborPortID* or *neighborASTNNodeID* shall

keep their current values until automatic neighbor detection delivers new valid values.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to AUTO

When *portClass* is set to INNI and *ndetmd* is set to AUTO for a port, the parameter *pmode* shall be set to MONITORING. This shall be reported by an ED-OC192 notification for the parameter *pmode*.

ONNS specific behaviour - Impact on port parameter settings when *portClass* is set to INNI and *ndetmd* is set to MAN

When *portClass* is set to INNI and *ndetmd* is set to MAN for a port, the parameters *rstimca* and *rstimmon* are set to DISABLE. This is reported by an ED-OC12 notification for the parameters *rstimca* and *rstimmon*.

ONNS specific behaviour - Impact on tributary parameter settings when *portClass* is set to INNI

When *portClass* is set to INNI, the parameter *hptimmon* is set to DISABLE for all tributaries located on this port.. This is reported by ED-STS1 notifications for the parameter *hptimmon*.

Example input/output

```
ED-OC192:UNITE-NE:1-1-#-#-1-1:123456::INPUTSIG=74-33-84,UNEQUIPOSIG=74-33-84;
    UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
    UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
    "TIME=08-00-12,DATE=00-11-28:ED-OC192:1-1-#-#-1-1::inputsig=74-33-84,unequiposig=74-33-84:"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-OC192 command.

Validation rule: Enough bandwidth reserved for 2F protection group

Check of the tributary rate (*inputsig/unequiposig*) if the port is member of a 2f protection group. Then the assigned bandwidth is max. half of the port's bandwidth.

Error code: IDNV - Input, Data Not Valid, Assigned bandwidth exceeds half port's bandwidth

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: TCA profile exists

See definition of validation rule in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Validation rule: *inputsig* consistent with existing cross-connections

Check of the consistency of the structure of the input signal (*inputsig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent input signal

Validation rule: *unequiposig* consistent with existing cross-connections

Check of the consistency of the structure of the output signal (*unequiposig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent output signal

Validation rule: no cross-connections for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when cross-connections are still on this port.

Error code: SNVS - Status, Not in Valid State, cross-connections are still existing

Validation rule: no loopbacks for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when cross-connection loopback is still on this port.

Error code: SNVS - Status, Not in Valid State, a loopback is existing

Validation rule: no test access session for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when a tributary related to this port is used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, a test access session exists

Validation rule: no protection for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when this port is in an protection group

Error code: SNVS - Status, Not in Valid State, a protection group is existing

Validation rule: no ONNS for interface standard change

Check that the interface standard parameter (*istd*) is not changed if ONNS functionality is available.

This means:

- *portClass* must be TRADITIONAL or
- *portControl* must be LOCKOUT.

Error code: SNVS - Status, Not in Valid State, Swiss access possible

Validation rule: no path protection for *trbmd* change to ADAPTIVE

Check that *trbmd* is not set to ADAPTIVE when this port is in a path protection group.

Error code: SNVS - Status, Not in Valid State, a path protection group is existing

Validation rule: *servcond* must be enabled when timing source

Check that the *servcond* is not disabled when the port is used as a timing source.

Error code: SNVS - Status, Not in Valid State, Timing reference is assigned to this port

Validation rule: *servcond* must be enabled when DCC enabled

Check that the *servcond* is not disabled when DCC channels are still existing for this port.

Error code: SNVS - Status, Not in Valid State, DCC channels are active for this port

Validation rule: *servcond* must be enabled when *portClass*=INNI

Check that the *servcond* is not OUTOFSERVICE when *portClass*=INNI.

Error code: SNVS - Status, Not in Valid State, can not disable servcond for INNI ports

Validation rule: *servcond* must be disabled for facility loopback

Check that the *servcond* is not enabled when a facility loopback is existing for this port.

Error code: SNVS - Status, Not in Valid State, Facility Loopback is active for this port

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation rule: Supply of outgoing J0 trace

Check that an outgoing J0 trace value (*strc* out) is supplied, too, if the format of the outgoing J0 trace (*strcwfmt*) is changed.

Error code: IDNC - Input, Data Not Consistent, a new trace value must also be supplied for a trace format change.

Validation rule: transmitted path trace length

Check that the length of the outgoing J0 trace value (*strcout*) fits to the length given by outgoing J0 trace mode, i.e. write format (*strcwfmt*).

Error code: IDNC - Input, Data, Not Consistent, strcout length must match the given outgoing J0 trace mode.

Validation rule: Change of FEC parameters only if supported by the current circuit pack

When changing one of the FEC-related parameters *fec*, *feccor* and *fectype* it will be checked, whether the currently provisioned circuit

pack supports this. If it is not supported the following error code is used:

Error code: IDNV - Input, Data Not Valid, Parameter not supported

Validation rule: Enabling of optical channel only if supported by the current circuit pack

When enabling the optical channel via parameter *och* it will be checked, whether the currently provisioned circuit pack supports this. If it is not supported the following error code is used:

Error code: IDNV - Input, Data Not Valid, Parameter not supported

Validation rule: Enabling of outband FEC only if optical channel is enabled

When enabling outband FEC (*fectype* = *OUTBAND*, *fec* = *ENABLE*) it will be checked, whether the optical channel is enabled (*och* = *ENABLE*) as well.

Error code: SNVS - Status, Not in Valid State, Optical Channel must be enabled

Check CCB against *ptype* and *istd*

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Switching FEC

See description in [“ED-STM64: Edit STM64 port” \(5-388\)](#) Detailed behavior section.

ONNS specific validation rule: *portClass* only settable when *xcsetup*=SWISS

Modification of the *portClass* parameter shall only be allowed when *xcsetup*=SWISS.

Error Code: SNVS - Status, Not in Valid State, Swiss not enabled

ONNS specific validation rule: Some parameters not settable for ports of *portClass* INNI

The following parameters shall not be changeable for ports with *portClass* INNI: *trbmd*.

Error Code: SNVS - Status, Not in Valid State, portClass must not be INNI

ONNS specific validation rule: Some parameters not settable for ports of *portClass* EDGE

The following parameters shall not be changeable for ports with *portClass* EDGE: *trbmd*.

Error Code: SNVS - Status, Not in Valid State, *portClass* must not be EDGE

ONNS specific validation rule: Some parameters not settable for ports of *ndetmd* AUTO

The following parameters shall not be changeable for ports with *ndetmd* AUTO: *neighborNodeID*, *neighborPortID*, *neighborASTNNodeID*.

Error Code: SNVS - Status, Not in Valid State, *ndetmd* must not be AUTO

ONNS specific validation rule: Additional parameters required when setting *ndetmd* to MAN

Values for the following parameters must be given, if *ndetmd* is changed to MAN: *neighborNodeID*, *neighborPortID*.

Error Code: IDNV - Input, Data Not Valid, additional parameters *neighborNodeID* and *neighborPortID* required

A values for the following parameter must be given, if *ndetmd* is changed to MAN: *neighborASTNNodeID*.

Error Code: IDNV - Input, Data Not Valid, additional parameter required

ONNS specific validation rule: No setting of duplicate *neighborASTNNodeID* and *neighborPortID* parameter combination

Setting of the parameters *neighborASTNNodeID* and *neighborPortID* is only possible, if the same combination of values does not already exists for a different INNI port in the system.

Error Code: IDNV - Input, Data Not Valid, duplicate neighbor port information

ONNS specific validation rule: Setting of *portClass* to INNI not possible for ports in protection groups

It shall not be allowed to change *portClass* of a port to INNI, if this port is member of a Line/MS protection scheme.

Error Code: SNVS - Status, Not in Valid State, Port must not be member of a protection group

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if no cross-connection existing

It shall not be allowed to change *portClass* to INNI, if cross-connections on that port are still existing.

Error Code: SNVS - Status, Not in Valid State,
Cross-connections still existing

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if service condition not OUTOFSERVICE

It shall not be allowed to change *portClass* to INNI, if *servcond*=OUTOFSERVICE.

Error code: SNVS - Status, Not in Valid State, port in out of service state

ONNS specific validation rule: Setting of *portControl* to NORMAL only possible, if no cross-connection loopbacks existing

It shall not be allowed to change *portControl* to NORMAL, if there are existing cross-connection loopbacks associated with the port.

Error code: SNVS - Status, Not in Valid State, loopbacks present

ONNS specific validation rule: Setting of some INNI properties only possible, if no cross-connection existing

It shall not be allowed to change one of the following parameters (provided this parameter is supported in a particular release at all) on a port with *portClass*=INNI, if cross-connections on that port are existing: *adminCost*, *link_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*, *neighborASTNNodeID*.

Error code: SNVS - Status, Not in Valid State, no XCs allowed for change of iNNI parameters

ONNS specific validation rule: Setting of INNI properties only possible for INNI ports

The system allows to change the following parameters only if the port class (*portClass*) is set to INNI and the port control (*portControl*) is set to LOCKOUT: *adminCost*, *link_IncludeID*, *neighborNodeID*, *neighborPortID*, *propagationDelay*, *srlgList*.

Error code: SNVS - Status, Not in Valid State, only allowed for INNI port in lockout state

ONNS specific validation rule: Setting of *portClass* to INNI only possible, if no test access session active

It shall not be allowed to change *portClass* of a port to INNI when a tributary related to this port is used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, a test access session exists

ONNS specific validation rule: Setting of *portClass* away from INNI only possible, if the port is not in use

For setting *portClass* from INNI to TRADITIONAL or EDGE the following must be fulfilled:

- No cross-connection may exist on any tributary of the port
- *portControl* must be LOCKOUT

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Changing of *portClass* from INNI to EDGE or TRADITIONAL only possible, if no DCC for SCN is enabled on the port

For changing the value of the parameter *portClass* no DCC of the port must be enabled for the SCN.

Error Code: SNVS - Status, Not in Valid State, DCC on SCN may not be enabled

ONNS specific validation rule: Setting of *portClass* from EDGE to TRADITIONAL only possible, if the tributaries on the port are not in use by ONNS

For setting *portClass* from EDGE to TRADITIONAL the following must be fulfilled:

- No cross-connections of *xconcls*=NN may exist on any tributary of the port
- *portControl* must be LOCKOUT

Error Code: SNVS - Status, Not in Valid State, Port is still in use

ONNS specific validation rule: Setting of *portClass* from TRADITIONAL to EDGE

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1+1 MSP group.

Error Code: SNVS - Status, Not in Valid State, Port must not be a 1+1 protection port

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 1:1 MSP group.

Error Code: SNVS - Status, Not in Valid State, Port must not be a 1:1 protection port

For setting *portClass* from TRADITIONAL to EDGE the port must not be the protection port of a 4f-BLSR group.

Error Code: SNVS - Status, Not in Valid State, Port must not be a 4f-BLSR protection port

ONNS specific validation rule: Not allowed to change the *portClass* directly from INNI to EDGE or EDGE to INNI

It is not be allowed to change the *portClass* of a port directly from INNI to EDGE or from EDGE to INNI.

Error Code: SNVS - Status, Not in Valid State, Port Class must not be EDGE or INNI

ONNS specific validation rule: Some parameters not settable for ports of *portClass*=INNI

The following parameters shall not be changeable for ports with *portClass*=INNI: *exprstrc*, *rstimca*, *rstimmon*, *strcfmt*, *strcout*, *strcwfmt*.

Error code: SNVS - Status, Not in Valid State, J0 parameters can not be set for INNI ports

Related TL1 messages [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#)

References GR-199-CORE (ED-*rr*)



ED-OC192 notification

Output format The ED-OC192 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-OC192:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).
5. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *fec* – FEC Enable
See definition of output parameter *fec* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
7. *felpm* – Far-end Line PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *frcdus* – Force to DUS
See definition of output parameter *frdus* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

9. fsflpbkstat – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).
11. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
12. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
13. msrei – MS-REI mode
See definition of output parameter *msrei* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
14. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. nelpm – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. och – Optical Channel enable
See definition of output parameter *och* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
20. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

21. **pmmsneses** – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter **pmmsneses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. **pmode** – Port Mode
See definition of output parameter **pmode** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. **pmrsneses** – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter **pmrsneses** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. **polynomial** - Optical Channel Scrambling Polynomial
See definition of output parameter **polynomial** in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
25. **portClass** – Port Class
See definition of output parameter **portClass** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
26. **portControl** – Port Control
See definition of output parameter **portControl** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
27. **propagationDelay** - Propagation Delay
See definition of output parameter **propagationDelay** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
28. **rstimca** – RS TIM Consequent Action Enable
See definition of output parameter **rstimca** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
29. **rstimmon** – RS TIM Monitor Enable
See definition of output parameter **rstimmon** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. **sdthr** – Signal Degrade Threshold
See definition of output parameter **degthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. **servcond** – Service Condition
See definition of output parameter **servcond** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

- 33. *sfthr* – Signal Failure Threshold
See definition of output parameter *dexcthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 34. *sltca* – Section and Line TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 35. *sonet* – SONET ASAP
See definition of output parameter *sonet* in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).
- 36. *spm* – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 37. *srlgList* – Shared Risk Link Group Identity List
See definition of output parameter *srlgList* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 38. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 39. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 40. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
- 41. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
- 42. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).

Example output

```
ED-OC192:UNITE-NE:1-1-#-#-1-1:123456:::INPUTSIG=74-33-84,UNEQUIPOSIG=74-33-84;  
    UNITE-NE 00-11-28 08:00:00  
M 123456 COMPLD  
;  
    UNITE-NE 00-11-28 08:00:30  
A 001 REPT DBCHG
```

Port
ED-OC192 notification

TLI messages - configuration management

"TIME=08-00-12,DATE=00-11-28:ED-OC192:1-1-#-#-1-
1::inputsig=74-33-84,unequiposig=74-33-84:"
;



ENT-OC192 notification

Output format The ENT-OC192 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-OC192:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).

Spec block parameters

1. *adminCost* - Administrative Cost
See definition of output parameter *adminCost* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
2. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).
5. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. *fec* – FEC Enable
See definition of output parameter *fec* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
7. *felpm* – Far-end Line PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *frcdus* – Force to DUS
See definition of output parameter *frdus* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

9. fsflpbkstat – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).
11. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
12. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
13. msrei – MS-REI mode
See definition of output parameter *msrei* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
14. ndetmd – Neighbor Detection Mode
See definition of output parameter *ndetmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
15. neighborASTNNodeID - Neighbor ASTN Node Id
See definition of output parameter *neighborASTNNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
16. neighborNodeID – Neighbor Node Id
See definition of output parameter *neighborNodeID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
17. neighborPortID – Neighbor Port Id
See definition of output parameter *neighborPortID* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. nelpm – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. och – Optical Channel enable
See definition of output parameter *och* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
20. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

21. *pmmsneses* – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. *pmode* – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. *pmrsneses* – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. *polynomial* - Optical Channel Scrambling Polynomial
See definition of output parameter *polynomial* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
25. *portClass* – Port Class
See definition of output parameter *portClass* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
26. *portControl* – Port Control
See definition of output parameter *portControl* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
27. *propagationDelay* - Propagation Delay
See definition of output parameter *propagationDelay* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
28. *rstimca* – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
29. *rstimmon* – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. *sdthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
32. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

33. **sfthr** – Signal Failure Threshold
See definition of output parameter **dexcthr** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
34. **sltca** – Section and Line TCA Profile Pointer
See definition of output parameter **rsmstca** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
35. **sonet** – SONET ASAP
See definition of output parameter **sonet** in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).
36. **spm** – Section PM Enable
See definition of output parameter **rspm** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
37. **srlgList** – Shared Risk Link Group Identity List
See definition of output parameter **srlgList** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
38. **strefmt** – Format of incoming J0
See definition of output parameter **strefmt** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
39. **strcout** – Value of outgoing J0
See definition of output parameter **strcout** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
40. **strcwfmt** – Format of outgoing J0
See definition of output parameter **strcwfmt** in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
41. **trbmd** – Tributary mode
See definition of output parameter **trbmd** in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
42. **unequiposig** – Unequipped Output Signal List
See definition of output parameter **unequiposig** in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).

Example output

```
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ENT-OC192:1-1-#-#-1-
1::servcond=ENABLE, sdsfmode=POISSON,sdthr=-
6,brstthr=30,....,istd=SONET,
inputsig=1921,unequiposig=1921"
;
```



DLT-OC192 notification

Output format The DLT-OC192 notification uses the general format of a REPT DBCHG (Report Database Change) notification.
Syntax: DLT-OC192:*aid*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC192: Retrieve OC192 port” \(5-267\)](#).

Example output

```
UNITE-NE 00-11-20 8:01:03
A 611 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-OC192:1-1-#-#-4-1"
;
```



ED-OC192 autonomous notifications

LOS for transmission port OC192 clears	If LOS is cleared and current port mode is AUTO, then portmode is updated (new value: MON). This update is reported via ED-OC192 notification with parameter <i>pmode</i> .
Change of the constituent rates status list	If <i>trbmd</i> =ADAPTIVE a change of the attribute <i>crstat</i> is notified by the related ED-OC192 notification.
Change of neighbor node and neighbor port information	If <i>ndetmd</i> =AUTO a change of the attributes <i>neighborNodeID</i> , <i>neighborPortID</i> or <i>neighborASTNNodeID</i> is notified by the related ED-OC192 notification.



ED-OC768: Edit OC768 port

The ED-OC768 command is used to provision all parameters related to an optical OC768 port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
 Priority: 1
 Abortable: no

Input format Command Syntax: ED-OC768:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
 See definition of output parameter *aid* in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#).
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. *brstintvl* – Bursty Interval
 See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
2. *brstthr* – Bursty Error Threshold
 See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *exprstrc* – Value of Expected J0
 See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
4. *fec* – FEC Enable
 See definition of output parameter *fec* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).

5. felpm – Far-end Line PM Enable
See definition of output parameter *felpm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
6. frcdus – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#).
8. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
9. nelpm – Near-End Line PM Enable
See definition of output parameter *nelpm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
10. och – Optical Channel enable
See definition of output parameter *och* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
11. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. pmmsneses – Performance Monitoring Line/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
13. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
14. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
15. rstimca – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).

16. *rstimmon* – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
18. *sdthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
19. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
20. *sfthr* – Signal Failure Threshold
See definition of output parameter *dexcthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
21. *sltca* – Section and Line TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. *sonet* – SONET ASAP
See definition of output parameter *sonet* in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#).
23. *spm* – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
26. *strcfmt* – Format of outgoing J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

27. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
28. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#).

Output format If the ED-OC768 command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

The command modifies the attributes (listed in the *spec_block* parameters part of this command) of the addressed port entity according to the parameters given with this command.

The modification is reported by means of an ED-OC768 notification for port (except for parameter *istd*; see below).

Switching of interface standard – Ignore other parameters

If additional parameters beside *istd* are specified with the *ED-rr* command they will be ignored by the NE.

This simple approach has the advantage that all ambiguous situations are avoided and it is not necessary to implement an order or follow a certain sequence when evaluating the parameters.

Switching of interface standard – FM impact

The change of the interface standard of a port from SONET to SDH has the following impact related to Fault Management:

- all SONET alarms related to that port are cleared
- the corresponding SDH alarms are raised.

Switching of tributary mode

When changing the parameter *trbmd* – tributary mode from FIXED to ADAPTIVE the parameter *crstat* may change its value, too, depending

on the current input signal structure. This change is notified using the related ED-OC768 notification.

When changing the parameter *trbmd* – tributary mode from ADAPTIVE to FIXED the parameter *crstat* may change its value, too, depending on the current setting of parameter *inputsig*. This change is notified using the related ED-OC768 notification.

Supply outgoing J0 trace value and format together

When changing the format of the outgoing J0 trace *strcwfmt*, the parameter *strcout* specifying the outgoing J0 trace is always supplied within the same TL1-command to always have a consistent set of trace format and value.

Supply outgoing J0 trace value according to format of outgoing J0

When changing the outgoing J0 trace value, the format must be according to the format parameter *strcwfmt* for the outgoing J0 trace.

Switching of interface standard – Side effects on tributaries

See detailed behavior specification in [“ED-OC48: Edit OC48 port” \(5-486\)](#).

Switching of interface standard – notification behavior

See detailed behavior specification in [“ED-OC48: Edit OC48 port” \(5-486\)](#).

Switching of interface standard – PM impact

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Disabling of PM monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Example input/output

```
ED-OC768:UNITE-NE:1-1-#-#-1-1:123456::INPUTSIG=74-33-84,UNEQUIPOSIG=74-33-84;
    UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
    UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ED-OC768:1-1-#-#-1-1::inputsig=74-33-84,unequiposig=74-33-84:"
```

;

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-OC768 command.

Validation rule: Enough bandwidth reserved for 2F protection group

Check of the tributary rate (*inputsig/unequiposig*) if the port is member of a 2f protection group. Then the assigned bandwidth is max. half of the port's bandwidth.

Error code: IDNV - Input, Data Not Valid, Assigned bandwidth exceeds half port's bandwidth

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: TCA profile exists

See definition of validation rule in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Validation rule: *inputsig* consistent with existing cross-connections

Check of the consistency of the structure of the input signal (*inputsig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent input signal

Validation rule: *unequiposig* consistent with existing cross-connections

Check of the consistency of the structure of the output signal (*unequiposig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent output signal

Validation rule: no cross-connections for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when cross-connections are still on this port.

Error code: SNVS - Status, Not in Valid State,
cross-connections are still existing

Validation rule: no loopbacks for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when loopback is still on this port.

Error code: SNVS - Status, Not in Valid State, a loopback is existing

Validation rule: no test access session for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when a tributary related to this port is used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, a test access session exists

Validation rule: no protection for *istd*, *trbmd* change

Check that *istd* is not changed or the *trbmd* is not set FIXED when this port is in an protection group.

Error code: SNVS - Status, Not in Valid State, a protection group is existing

Validation rule: no ONNS for interface standard change

Check that the interface standard parameter (*istd*) is not changed if ONNS functionality is available.

This means:

- *portClass* must be TRADITIONAL or
- *portControl* must be LOCKOUT.

Error code: SNVS - Status, Not in Valid State, Swiss access possible

Validation rule: no path protection for *trbmd* change to ADAPTIVE

Check that *trbmd* is not set to ADAPTIVE when this port is in a path protection group.

Error code: SNVS - Status, Not in Valid State, a path protection group is existing

Validation rule: *servcond* must be enabled when timing source

Check that the *servcond* is not disabled when the port is used as a timing source.

Error code: SNVS - Status, Not in Valid State, Timing reference is assigned to this port

Validation rule: *servcond* must be enabled when DCC enabled

Check that the *servcond* is not disabled when DCC channels are still existing for this port.

Error code: SNVS - Status, Not in Valid State, DCC channels are active for this port

Validation rule: *servcond* must be enabled when *portClass*=INNI

Check that the *servcond* is not OUTOFSERVICE when *portClass*=INNI.

Error Code: SNVS - Status, Not in Valid State, can not disable *servcond* for INNI ports

Validation rule: *servcond* must be disabled for facility loopback

Check that the *servcond* is not enabled when a facility loopback is existing for this port.

Error code: SNVS - Status, Not in Valid State, Facility Loopback is active for this port

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation rule: Supply of outgoing J0 trace

Check that an outgoing J0 trace value (*strc* out) is supplied, too, if the format of the outgoing J0 trace (*strcwfmt*) is changed.

Error code: IDNC - Input, Data Not Consistent, a new trace value must also be supplied for a trace format change.

Validation rule: transmitted path trace length

Check that the length of the outgoing J0 trace value (*strcout*) fits to the length given by outgoing J0 trace mode, i.e. write format (*strcwfmt*).

Error code: IDNC - Input, Data, Not Consistent, strcout length must match the given outgoing J0 trace mode.

Validation rule: Change of FEC parameters only if supported by the current circuit pack

When changing one of the FEC-related parameters *fec*, *feccor* and *fectype* it will be checked, whether the currently provisioned circuit pack supports this. If it is not supported the following error code is used:

Error code: IDNV - Input, Data Not Valid, Parameter not supported

Validation rule: Enabling of optical channel only if supported by the current circuit pack

When enabling the optical channel via parameter *och* it shall be checked, whether the currently provisioned circuit pack supports this. If it is not supported the following error code shall be used:

Error code: Input, Data Not Valid, Parameter not supported

Check CCB against *ptype* and *istd*

See definition of error response in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

Switching FEC

See description in [“ED-STM64: Edit STM64 port” \(5-388\)](#) Detailed behavior section.

ONNS specific validation rule: No setting of duplicate *neighborASTNNodeID* and *neighborPortID* parameter combination

Setting of the parameters *neighborASTNNodeID* and *neighborPortID* is only possible, if the same combination of values does not already exists for a different INNI port in the system.

Error Code: IDNV - Input, Data Not Valid, duplicate neighbor port information

Related TL1 messages [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#)

References GR-199-CORE (ED-*rr*)



ED-OC768 notification

Output format The ED-OC768 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-OC768:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#).

Spec block parameters

1. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
2. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#).
4. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
5. *fec* – FEC Enable
See definition of output parameter *fec* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
6. *felpm* – Far-end Line PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *frcdus* – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *fsflpbkstat* – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#).
10. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
11. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. nelpm – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
13. och – Optical Channel enable
See definition of output parameter *och* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
14. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
15. pmmsneses – Performance MonitoringLine/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
16. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. rstimca – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
19. rstimmon – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

20. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
21. *sdthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. *sfthr* – Signal Failure Threshold
See definition of output parameter *dexcthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. *sltca* – Section and Line TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. *sonet* – SONET ASAP
See definition of output parameter *sonet* in RTRV-OC768
26. *spm* – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#).

Example output

ED-OC768:UNITE-NE:1-1-#-#-1-1:123456:::INPUTSIG=74-33-84,UNEQUIPOSIG=74-33-84;

```
UNITE-NE 00-11-28 08:00:00
M 123456 COMPLD
;
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ED-OC768:1-1-#-#-1-
1::inputsig=74-33-84,unequiposig=74-33-84:"
;
```



ENT-OC768 notification

Output format The ENT-OC768 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-OC768:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#).

Spec block parameters

1. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
2. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
3. *crstat* – Constituent Rates Status list
See definition of output parameter *crstat* in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#).
4. *exprstrc* – Value of Expected J0
See definition of output parameter *exprstrc* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
5. *fec* – FEC Enable
See definition of output parameter *fec* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
6. *felpm* – Far-end Line PM Enable
See definition of output parameter *femspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
7. *frcdus* – Force to DUS
See definition of output parameter *frcdus* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
8. *fsflpbkstat* – Far Side Facility Loopback Status
See definition of output parameter *fsflpbkstat* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

9. inputsig – Tributary Input Signal Rate List
See definition of output parameter *inputsig* in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#).
10. istd – Interface Standard
See definition of input parameter *istd* in [“ED-STM16: Edit STM16 port” \(5-359\)](#).
11. lpbk – Loopback
See definition of output parameter *lpbk* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
12. nelpm – Near-End Line PM Enable
See definition of output parameter *nemspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
13. och – Optical Channel enable
See definition of output parameter *och* in [“RTRV-STM64: Retrieve STM64 port” \(5-228\)](#).
14. pmmsfeses – Performance Monitoring Line/MS Far-End SES Threshold
See definition of output parameter *pmmsfeses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
15. pmmsneses – Performance MonitoringLine/MS Near-End SES Threshold
See definition of output parameter *pmmsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
16. pmode – Port Mode
See definition of output parameter *pmode* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
17. pmrsneses – Performance Monitoring Section/RS Near-End SES Threshold
See definition of output parameter *pmrsneses* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
18. rstimca – RS TIM Consequent Action Enable
See definition of output parameter *rstimca* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
19. rstimmon – RS TIM Monitor Enable
See definition of output parameter *rstimmon* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).

20. *sdsfmode* – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
21. *sdthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
22. *servcond* – Service Condition
See definition of output parameter *servcond* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
23. *sfthr* – Signal Failure Threshold
See definition of output parameter *dexcthr* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
24. *sltca* – Section and Line TCA Profile Pointer
See definition of output parameter *rsmstca* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
25. *sonet* – SONET ASAP
See definition of output parameter *sonet* in RTRV-OC768
26. *spm* – Section PM Enable
See definition of output parameter *rspm* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
27. *strcfmt* – Format of incoming J0
See definition of output parameter *strcfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
28. *strcout* – Value of outgoing J0
See definition of output parameter *strcout* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
29. *strcwfmt* – Format of outgoing J0
See definition of output parameter *strcwfmt* in [“RTRV-STM16: Retrieve STM16 port” \(5-214\)](#).
30. *trbmd* – Tributary mode
See definition of output parameter *trbmd* in [“RTRV-OC48: Retrieve OC48 port” \(5-257\)](#).
31. *unequiposig* – Unequipped Output Signal List
See definition of output parameter *unequiposig* in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#).

Example output

```
UNITE-NE 00-11-28 08:00:30
A 001 REPT DBCHG
"TIME=08-00-12,DATE=00-11-28:ENT-OC768:1-1-#-#-4-1::
servcond=ENABLE, sdsfmode=POISSON,sdthr=-6,brstthr=30,
....,istd=SONET,inputsig=7681,unequiposig=7681"
;
```



DLT-OC768 notification

Output format The DLT-OC768 notification uses the general format of a REPT DBCHG (Report Database Change) notification.
Syntax: DLT-OC768:*aid*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-OC768: Retrieve OC768 port” \(5-275\)](#).

Example output

```
UNITE-NE 00-11-20 8:01:03
A 611 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-OC768:1-1-#-#-4-1";
```



ED-OC768 autonomous notifications

LOS for transmission port OC768 clears	If LOS is cleared and currently port mode is AUTO, then portmode is updated (new value: MON). This update is reported via ED-OC768 notification with parameter <i>pmode</i> .
Change of the constituent rates status list	If <i>trbmd</i> =ADAPTIVE a change of the attribute <i>crstat</i> is notified by the related ED-OC768 notification.



Tributary

Overview

Purpose The following chapter describes the commands for VC-3/STS-1 tributaries only. These tributaries are related to the optical/electrical interfaces on the OPn/EP155 packs.

SONET and SDH tributaries are supported to keep the compatibility to current generation equipment as far as possible and to be compatible with the Telcordia manager.

Contents

RTRV-VC3: Retrieve VC3 tributary	5-562
RTRV-ST51: Retrieve ST51 tributary	5-571
RTRV-ALL: Retrieve all	5-576
ED-VC3: Edit VC3 tributary	5-579
ED-ST51: Edit ST51 tributary	5-585
ED-VC3 notification	5-590
ENT-VC3 notification	5-593
DLT-VC3 notification	5-596
ED-ST51 notification	5-597
ENT-ST51 notification	5-600
DLT-ST51 notification	5-603
Autonomous notification	5-604



RTRV-VC3: Retrieve VC3 tributary

General The RTRV-VC3 command is used to retrieve all parameters related to a VC3 tributary.

Note: If a tributary AID (Access IDentifier) is specified in the RTRV-VC3 request for a slot provisioned with a GE1 pack (e.g. 1-1-#-#-1-1-1 is used), then an empty reply is returned instead of: IENE - Input, Entity Not Exists.

For GE1 the [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#) command must be used.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-VC3:*tid:aid:ctag*;

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
AID of a SDH tributary. The keyword *all* is allowed on slot, port and tributary level. The so called “dynamic parameters” shall be reported, if a *all* is used at the tributary level.
The “dynamic parameters” are:

- *ptrc, ptrcst, siglb, trailstate*.

Type: AID

Range: STS1NumAID.

3. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Important! To retrieve the dynamic parameters (*ptrc, ptrcst, siglb, trailstate*) of all tributaries use the ([“RTRV-ALL: Retrieve all” \(5-576\)](#)) command and set the parameter *dyn* to YES.

Output format In response to a valid RTRV-VC3 command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
  ...
  ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. *aid* – Access Identifier
Description: AID of the SDH tributary. The keyword *all* is not allowed on any level.
Type: AID
Range: STS1NumAID

Spec block parameters

1. *brstintvl* – Bursty Interval
Measurement period for determining bursty errors The setting of this parameter is used when *sdsfmode*=BURST.
Type: numeric value set.
Range: 2 to 10.
Default: 7.
2. *brstthr* – Bursty Error Threshold
The values are set in percent for the degradation threshold. The setting of this parameter is used when *sdsfmode*=BURST.
Type: numeric value set.
Range (as percentage): 5, 10, 15, 20, 25, 30, ... 50.
Default: 30.
3. *crslpbkrate* – Cross-connect loopback Rate
It is independent from the current interface standard and therefore both SDH and SONET values are allowed.
The parameter *crslpbkrate* is not reported if the parameter *crslpbkstat* indicates that no loopback is set.
Type: alphanumeric value set.

RTRV-VC3: Retrieve VC3 tributary

Range:

- VC3
- VC4
- VC44C
- VC416C
- VC464C
- STS1
- STS3
- STS12
- STS48
- STS192

4. *crslpbkstat* – Cross-connect loopback status

State of cross- connect loopback.

Type: alphanumeric value set.

Range:

- YES = Cross-connect loopback is provisioned
- NO (default) = No cross-connect loopback is provisioned.

5. *degthr* – Signal Degrade Threshold

The setting of this parameter are used when *sdsfmode*=POISSON

Type: numeric value set.

Range (as exponents of 10): -5; -6 (default); -7; -8; -9

6. *dexcthr* – Excessive Degrade Threshold

The setting of this parameter are used when

sdsfmode=POISSON. The values are set as exponent of 10.

Type: numeric value set.

Range (as exponent of 10) -3 (default); -4; -5.

7. *exphptrc* – Expected Path Trace (J1)

The parameter *exphptrc* specifying the expected path trace is only relevant for the path trace supervision when the path trace read format *ptrcrfmt* is set to 16 (16-byte-specific-string mode).

Type: Hexadecimal digits

Range: 16 byte string. Each byte is expressed as two hexadecimal digits (example value: 6D). The first byte value is in the range from 80 to FF. The other byte values are in the range from 00 to 7F.

Default: 89hex followed by 15 bytes 00hex.

8. feppm – Far-End Path PM Enable
It indicates whether this performance monitoring feature is enabled or disabled.
Type: alphanumeric value set.
Range:
 - ENABLE
 - DISABLE (default).
9. hptimmon – Path Trace Monitoring Enable (J1)
Description: High order path trace (J1) identifier mismatch (TIM) monitor enable.
This parameter is relevant only if the related trace read format *ptrcrfmt* is set to 16 (16-byte-specific-string mode).
Type: alphanumeric value set.
Range:
 - ENABLE
 - DISABLE (default).
10. loca – Ring A-node TID
This parameter specifies the TID of the node at which the service is added to the BLSR ring. This parameter is required for the input of tributaries to be used by ONNS on ports of *portClass* =EDGE being members in BLSR/MSSPRING protection groups. The *loca* parameter value shall be an empty string for all other tributaries.
loca is introduced specifically for use related to ONNS application.
Type: TID or empty-string.
Range: Please refer to the TID definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#) description.
Default: empty string: "". This is displayed as \" in output direction.
11. locz – Ring Z-node TID
This parameter specifies the TID of the node at which the service is dropped from the BLSR ring. This parameter is required for the output of tributaries to be used by ONNS on ports of *portClass*=EDGE being members in BLSR/MSSPRING protection groups. The *locz* parameter value shall be an empty string for all other tributaries.
locz is introduced specifically for use related to ONNS application.

RTRV-VC3: Retrieve VC3 tributary

Type: TID or empty-string.

Range: Please refer to the TID definition in the [“RTRV-HDR: Retrieve header” \(5-8\)](#) description.

Default: empty string: "". This is displayed as "" in output direction.

12. neppm – Near-End Path PM Enable

It indicates whether this performance monitoring feature is enabled or disabled.

Type: alphanumeric value set.

Range:

- ENABLE
- DISABLE (default).

13. pmhpfeses – Performance Monitoring Path Far-End SES Threshold

This parameter describes the Path Far-End SES threshold value. It indicates the number of errored blocks (SDH) or code violations (SONET) per second to declare a second as severely errored. When the interface standard is changed the current default value is not adapted automatically.

Type: numeric value set.

Range (superset of ranges for SDH and SONET): 1-64000.

Default: 2400.

14. pmhpnese – Performance Monitoring Path Near-End SES Threshold

This parameter describes the Path Near-End SES threshold value. It indicates the number of errored blocks (SDH) or code violations (SONET) per second to declare a second as severely errored. When the interface standard is changed the current default value is not adapted automatically.

Type: numeric value set.

Range (superset of ranges for SDH and SONET): 1-64000.

Default: 2400.

15. ptca – Path TCA Profile Pointer

Type: alphanumeric string.

Range: string with up to 24 characters.

Default: DEFAULT0.

16. ptrc – Path Trace (J1)

This parameter shows the value of the path trace identifier on the incoming path overhead J1 byte of a non-terminated tributary. The length depends on the value of the parameter *ptrcrfmt*. The status of this value is contained in parameter *ptrcst*. If *ptrcst* indicates NORMAL, then ptrc contains a valid value. If *ptrcst* indicates UNAVAILABLE or AIS, then no valid incoming path trace identifier could be obtained by the system, e.g. due to a signal-fail condition or intra-NE communication problems, and the output parameter ptrc is omitted from the response. For concatenated tributaries the system shall not return this parameter (see detailed behavior below).

Type: hexadecimal (each byte is expressed as two hexadecimal digits. An example of a byte is 6D).

Range:

- 1 byte for non-specific repeating byte
- 16 byte: These 16 byte shall consist of 15 byte information and the CRC7 byte
- 64 bytes: This is a pure byte stream without any restrictions.

17. ptrcrfmt – Path Trace Read Format (J1)

The read format of J1, the incoming path trace (ptrc).

Type: numeric string.

Range:

- 2: for non-specific repeating byte
- 16: for 16 byte specific string.
- 64: for 64 byte string.

Default: 2.

18. ptrcst - Status of Incoming Path Trace (J1)

This parameter shows the status of the value of the incoming path trace identifier which is available with parameter ptrc. For concatenated tributaries the system shall not return this parameter (see detailed behavior below).

Type: alphanumeric value set.

Range:

- NORMAL: ptrc contains a valid value
- UNAVAILABLE: no valid value for ptrc could be obtained by the system
- AIS: no valid value for ptrc due to an SF condition.

19. sdsfmode – Signal Degrade/Signal Fail Mode

The degraded state is detected in BURST or POISSON mode.

Type: alphanumeric value set.

Range:

- BURST (default)
- POISSON

20. siglb - Signal Label

This parameter shows the value of the signal label on the incoming path overhead C2 byte of a non-terminated VC tributary. The parameter shall not be reported if the *trailstate* parameter indicates a fail condition, i.e. has the value AIS or UNAVAILABLE. For concatenated tributaries the system shall not return this parameter (see detailed behavior below) .

Type: alphanumeric value set.

Range: 00, 01, ..., FE, FF; i.e. two hexadecimal digits.

21. tcamd – TCA mode

This parameter shows the modus of the PM thresholding.

Two thresholding methods are applicable:

- TR-only (also known as the implicit reset method)
- TR-RTR (also known as the explicit reset method).

Type: alphanumeric value set.

Range: TR, TRRTR (default).

22. tmonmd – Tributary Monitoring Mode

This parameter indicates the mode of the tributary.

Type: alphanumeric value set.

Range:

- MON = alarm monitoring is taking place on the port.
- NMON (default) = alarm monitoring is not occurring on the port.

23. trailstate - Trail State (C2)

It shall be possible to read the accepted trail value status (C2) of every VC which is terminated/monitored in the system. For concatenated tributaries the system shall not return this parameter (see detailed behavior below).

Type: alphanumeric value set.

Range:

- NORMAL: for accepted TSL which has valid payload type
- AIS: for SSF, VC-AIS, dTIM or dUNEQ
- UNAVAILABLE: for TSL which does not meet the acceptance criteria or no reporting is possible.

Default: UNAVAILABLE.

24. tribsdhpn – Tributary Alarm Severity Assignment Profile

This parameter points to a tributary ASAP profile name of type PATH for the designated AID.

Type: alphanumeric string. A hyphen (-) is additionally allowed in the name.

Range: string with a maximum of 24 characters.

Default: DEFAULT.

**Detailed behavior
description**

Applicability for VC4 and concatenated signals

The RTRV-VC3 command is also applicable to VC4 tributaries. Even though a VC4 signal is not a concatenated VC3 signal in a strict sense, from a pointer processor viewpoint it can be considered to be comprised of three VC3 signals which have the properties of a concatenated signal. Thus it is not necessary to have a separate RTRV command for VC4.

Retrieval of concatenated tributaries

It is allowed to retrieve data from concatenated tributaries and the system responds by returning all parameters which are not derived from traffic. The details can be found in the parameter description.

Concatenated tributaries are such tributaries, that are not the leftmost ones in concatenated signals, e.g. if an OC 48 port is provisioned for a fixed traffic of AU4-16c, STS-1 #1 represents the VC4-16c defined and all other STS-1s #2 to #48 do currently not represent valid substructures and thus are concatenated tributaries. The retrievable values e.g. for the STS-1s #2 to #48 are irrelevant for transmission.

Parameters derived from traffic are data like trace identifiers and signal labels which are collected from the actual input signal and thus do not exist for concatenated tributaries.

RTRV-VC3: Retrieve VC3 tributary

Example input/output

```
RTRV-VC3:LT-UNITE:1-1-#-#-3-1-1:123456;  
LT-UNITE 00-11-27 08:00:00  
M 123456 COMPLD  
"1-1-#-#-3-1-1:crslpbkstat=N0,tmonmd=NMON,  
tribsdhpn=Default,ptca=Default0,neppm=DISABLE,  
pmhpneses=30,pmhpfeses=30,degthr=-6,...,  
ptrcrfmt=1,dexcthr=-3,ptrc=00,ptrcst=NORMAL,  
sdsfmode=POISSON"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-VC3 command.

Check CCB against istd for related port**Validation rule: Check CCB against *istd***

Check whether the CCB fits to *istd* of the related port.

Error code: ICNV - Input, Command Not Valid, Interface Standard does not match.

E.g. DENY, if a command with rr=VC3 is made on a port which is provisioned as *istd*=SONET.

References

GR-199-CORE (RTRV-*rr*)



RTRV-STs1: Retrieve STs1 tributary

General The RTRV-STs1 command is used to retrieve all parameters related to the STs1 tributary.

Note: If a tributary AID (Access Identifier) is specified in the RTRV-STs1 request for a slot provisioned with a GE1 pack (e.g. 1-1-#-#-1-1-1 is used), then an empty reply is returned instead of: IENE - Input, Entity Not Exists.

For GE1 the [“RTRV-VCgTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#) command must be used.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-STs1:*tid:aid:ctag*;

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
AID of an SDH tributary. The keyword *all* is allowed on slot, port and tributary level. The so called “dynamic parameters” shall be reported, if a *all* is used at the tributary level.
The “dynamic parameters” are:

- *ptrc, ptrcst, siglb, trailstate*.

Type: AID

Range: STs1NumAID.

3. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Important! To retrieve the dynamic parameters (*ptrc, ptrcst, siglb, trailstate*) of all tributaries use the ([“RTRV-ALL: Retrieve all” \(5-576\)](#)) command and set the parameter *dyn* to YES.

RTRV-STTS1: Retrieve STS1 tributary

Output format In response to a valid RTRV-STTS1 command, the following output report is returned:

```

    sid date time
M   ctag COMPLD
    "aid[:spec_block]"
    ...
    ...
    "aid[:spec_block]"
;

```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters**Command parameters**

1. *aid* – Access Identifier
AID of the SONET tributary. The keyword *all* is not allowed on any level.
Type: AID
Range: STS1NumAID

Spec block parameters

1. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
2. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
3. *crslpbkrate* – Cross-connect loopback Rate
See definition of output parameter *crslpbkrate* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
4. *crslpbkstat* – Cross-connect loopback status
See definition of output parameter *crslpbkstat* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
5. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

RTRV-STS1: Retrieve STS1 tributary

6. **dexcthr** – Excessive Degrade Threshold
See definition of output parameter **dexcthr** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
7. **exphtpc** – Expected Path Trace (J1)
See definition of output parameter **exphtpc** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
8. **feppm** – Far-End Path PM Enable
See definition of output parameter **feppm** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
9. **loca** – Ring A-node TID
See definition of output parameter **loca** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
10. **locz** – Ring Z-node TID
See definition of output parameter **locz** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
11. **hptimmon** – Path Trace Monitoring Enable (J1)
See definition of output parameter **hptimmon** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
12. **neppm** – Near-End Path PM Enable
See definition of output parameter **neppm** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
13. **pmhpfeses** – Performance Monitoring Path Far-End SES Threshold
See definition of output parameter **pmhpfeses** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
14. **pmhpnese** – Performance Monitoring Path Near-End SES Threshold
See definition of output parameter **pmhpnese** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
15. **pse** – PDI-P Switching Enable
The PDI-P Switching Enable parameter indicates if the PDI-P contributes to the automatic path protection switch criteria.
Type: alphanumeric value set
Range:
 - ENABLE
 - DISABLE (default).

RTRV-STST1: Retrieve STS1 tributary

16. *ptca* – Path TCA Profile Pointer
See definition of output parameter *ptca* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
17. *ptrc* – Path Trace (J1)
See definition of output parameter *ptrc* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
18. *ptrcrfmt* - Path Trace Read Format (J1)
See definition of output parameter *ptrcrfmt* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
19. *ptrcst* – Status of Incoming Path Trace
See definition of output parameter *ptrcst* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
20. *sdsfmode* – Signal Degrade/Signal Fail Mode
The degraded state is detected in BURST or POISSON mode.
Type: alphanumeric value set.
Range:
 - BURST
 - POISSON (default).
21. *siglb* - Signal Label
See definition of output parameter *siglb* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
22. *tmonmd* – Tributary Monitoring Mode
See definition of output parameter *tmonmd* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
23. *trailstate* - Trail State (C2)
See definition of output parameter *trailstate* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
24. *tribsonetpn* – Tributary Alarm Severity Assignment Profile
This parameter points to a tributary ASAP profile name of type PATH for the designated AID.
Type: Alphanumeric string. A hyphen (-) is additionally allowed in the name.
Range: String with a maximum of 24 characters.
Default: DEFAULT.

Detailed behavior description

Applicability for STS3c and concatenated signals

The RTRV-STTS1 command is also applicable to STS3c tributaries. Even though a STS3c signal is not a concatenated STS1 signal in a strict sense, from a pointer processor viewpoint it can be considered to be comprised of three STS1 signals which have the properties of a concatenated signal. Thus it is not necessary to have a separate RTRV command for STS3c. Similarly, RTRV-STTS1 is also applicable to other "concatenated" signals.

Retrieval of concatenated tributaries

The rules as defined for RTRV-VC3 apply as well.

Example input/output

```
RTRV-STTS1:LT-UNITE:1-1-#-#-3-1-1:123456;  
LT-UNITE 00-11-27 08:00:00  
M 123456 COMPLD  
"1-1-#-#-3-1-1:crslpbkstat=NO,tmonmd=NMON,  
tribsonetpn=Default,ptca=Default0,feppm=DISABLE,  
pmhpnese=30,pmhpfese=30,degthr=-6,...,  
ptrcrfmt=1,dexcthr=-3,ptrc=00,ptrcst=NORMAL,  
sdsfmode=POISSON"  
;
```

Error responses

Refer to the ["RTRV-HDR: Retrieve header" \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-STTS1 command.

Check CCB against *istd* of related port

See definition of error response in ["RTRV-VC3: Retrieve VC3 tributary" \(5-562\)](#).

Related TL1 messages

["ED-STTS1: Edit STS1 tributary" \(5-585\)](#)

References

GR-199-CORE (RTRV-*rr*)



RTRV-ALL: Retrieve all

The RTRV-ALL command is used to retrieve all parameters related to the tributaries.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-ALL:*tid:aid:ctag*[::*spec_block*];

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid – Access Identifier
AID of SDH/SONET tributary. The keyword *all* is allowed on slot, port and tributary level.
Type: AID
Range: STS1NumAID
3. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameter

1. dyn - Retrieve Dynamic Parameters
This parameter controls whether dynamic parameters shall be reported with the command reply or not.
The following output parameters of a tributary are affected:
 - ptrc
 - ptrcst
 - siglb
 - trailstate.Type: alphanumeric value set
Range: YES, report dynamic parameters in the reply as well; NO, do not report dynamic parameters in the reply.
Default: NO.

Output format In response to a valid RTRV-ALL command, the following output report is returned:

```
sid date time
M ctag COMPLD
  "aid[:spec_block]"
  ...
  ...
  "aid[:spec_block]"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. *aid* – Access Identifier
AID of the SDH/SONET tributary. The keyword *all* is not allowed on any level.
Type: AID.
Range: STS1NumAID.

Spec block parameters

For the spec block parameters refer to the descriptions of the following commands [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#) and [“RTRV-ST51: Retrieve ST51 tributary” \(5-571\)](#) .

Detailed behavior description

The command retrieves the spec block parameters for the tributaries specified by the input parameter *aid*.

Example input/output

```
RTRV-ALL:LT-UNITE:1-1-#-#-ALL-ALL-ALL:123456;
LT-UNITE 00-11-27 08:00:00
M 123456 COMPLD
"1-1-#-#-3-1-1:crslpbkstat=NO,tmonmd=NMON,
tribsdhpn=Default,ptca=Default,neppm=DISABLE,
pmhpneses=30,pmhpfes=30,degthr=-6,...,
ptrcrfmt=1,dexctr=-3,ptrc=00,sdsfmode=POISSON"
"1-1-#-#-3-1-2:crslpbkstat=NO,tmonmd=NMON,
tribsonetpn=Default,ptca=Default,neppm=DISABLE,
pmhpneses=30,pmhpfes=30,degthr=-6,...,
```

```
ptrcrfmt=1,dexcthr=-3,ptrc=00,sdsfmode=POISSON"  
"1-1-#-#-3-1-3:crslpbkstat=N0,tmonmd=NMON,  
tribsonetpn=Default,ptca=Default,neppm=DISABLE,  
pmhpnases=30,pmhpfeses=30,degthr=-6,...,  
ptrcrfmt=1,dexcthr=-3,ptrc=00,sdsfmode=POISSON"  
.  
.  
.  
.  
.  
.  
.  
"1-1-#-#-3-1-192:crslpbkstat=N0,tmonmd=NMON,  
tribsonetpn=Default,ptca=Default,neppm=DISABLE,  
pmhpnases=30,pmhpfeses=30,degthr=-6,...,  
ptrcrfmt=1,dexcthr=-3,ptrc=00,sdsfmode=POISSON"  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-ALL command.

Related TL1 messages

- [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#)
- [“RTRV-ST51: Retrieve ST51 tributary” \(5-571\)](#)

References GR-199-CORE (RTRV-*rr*)



ED-VC3: Edit VC3 tributary

The ED-VC3 command is used to provision all parameters related to the tributary VC3.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: no

Input format Command Syntax: ED-VC3:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
3. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
2. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
3. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
4. *dexcthr* – Excessive Degrade Threshold
See definition of output parameter *dexcthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

5. **exphptrc** – Expected Path Trace (J1)
See definition of output parameter **exphptrc** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
6. **feppm** – Far-End Path PM Enable
See definition of output parameter **feppm** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
7. **hptimmon** – Path Trace Monitoring Enable (J1)
See definition of output parameter **hptimmon** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
8. **loca** – Ring A-node TID
See definition of output parameter **loca** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
9. **locz** – Ring Z-node TID
See definition of output parameter **locz** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
10. **neppm** – Near-End Path PM Enable
See definition of output parameter **neppm** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
11. **pmhpfses** – Performance Monitoring Path Far-End SES Threshold
See definition of output parameter **pmhpfses** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
12. **pmhpneses** – Performance Monitoring Path Near-End SES Threshold
See definition of output parameter **pmhpneses** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
13. **ptca** – Path TCA Profile Pointer
See definition of output parameter **ptca** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
14. **ptrcrfmt** – Path Trace Read Format (J1)
See definition of output parameter **ptrcrfmt** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
15. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
16. **tcamd** – TCA mode
See definition of output parameter **tcamd** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

17. tmonmd – Tributary Monitoring Mode
See definition of output parameter *tmonmd* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
18. tribsdhpn – Tributary Alarm Severity Assignment Profile
See definition of output parameter *tribsdhpn* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

Output format

If the ED-VC3 command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

The ED-VC3 command is also applicable to VC4 tributaries. Even though a VC4 signal is not a concatenated VC3 signal in a strict sense, from a pointer processor viewpoint it can be considered to be comprised of three VC3 signals which have the properties of a concatenated signal. Thus, it is not necessary to have a separate ED-VC4 command. Similarly, ED-VC3 is also applicable to VC4-4C and other “concatenated” tributaries.

Even if the command is used for a concatenated signal, it can be applied to any of the tributaries (for example, to the second tributary of the concatenated signal). However, only the parameters pertaining to the first tributary of a concatenated signal are used by the software to determine system operation. If the signal were changed from a concatenated signal to non-concatenated, then the parameters for each of the tributaries would be used by the software.

The command allows to modify all attributes listed above as input spec-block parameters. The modification is reported by means of an ED-VC3 notification for tributary.

Signal degrade/signal fail mode provisioning

If the attribute *sdsfmode* is changed then for all tributaries belonging to the same STS-12/VC4-4c group the attribute will also be changed according to value specified in the ED request.

A STS-12/VC4-4c group is composed of all tributaries whose Simple_STS1NumAID is in the range from $(k*12) + 1$ to $(k+1)*12$ with $k=0..63$. The maximal value of k is derived from the port rate.

For efficiency reasons the notifications for tributaries are sent out as a single notification (so-called group notification) using a range over the aid which depends on the port rate of the associated port and the Simple_STS1NumAID for that STS-12/VC4-4c group;

i.e. the Simple_STS1NumAID field in the STS1NumAID is set to $\langle M \rangle \&\& - \langle N \rangle$

- with M is first STS-1/AU-3 number of the STS-12/VC4-4c group,
- with N is last STS-1/AU-3 number of the STS-12/VC4-4c group.

If additional parameters besides *sdsfmode* are changed within the ED request then it is also valid to split the autonomous reporting in up to 3 notifications:

- one group notification for all tributaries with smaller Simple_STS1NumAID as the one which is specified in the ED request.
- one single notification for the tributary which is specified in the ED request.
- one group notification for all tributaries with greater Simple_STS1NumAID as the one which is specified in the ED request.

Disabling of PM monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Changing TCA mode from TR-RTR to TR-only

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Example input/output

```
ED-VC3:UNITE-NE:1-1-#-#-3-1-1:123456:::tmonmd=MON,
tribsdhpn=Default,degthr=-6,dexcthr=-3,ptrcrfmt=1,
ptca=Default0,neppm=ENABLE,pmhpneses=30,pmhpfeses=30;
  UNITE-NE 00-10-14 14:59:09
M 123456 COMPLD
;
  UNITE-NE 00-10-14 14:59:09
```

```
A 592 REPT DBCHG
"TIME=14-59-09,DATE=00-10-14:ED-VC3:1-1-#-#-3-1-1::
tmonmd=MON,tribsdhpn=Default,degthr=-6,dexcthr=-3,
ptrcrfmt=1,ptca=Default0,neppm=ENABLE,pmhpneses=30,
pmhpfeses=30:"
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-VC3 command.

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation Rule: TCA profile exists

See definition of validation rule in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Check CCB against *istd* of related port

See definition of Error responses in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

ONNS specific validation rule: *loca*, *locz* changes only allowed when *portClass*=EDGE and part of a BLSR/MS-SPRING group

Setting the *loca*, *locz* parameters away from the default value shall only be allowed when the related *portClass*=EDGE and the port is part of a BLSR/MS-SPRING protection group.

Error code: IDNV - Input, Data Not Valid, related *portClass* not EDGE or port not in BLSR/MS-SPRING group

ONNS specific validation rule: *loca*, *locz* changes only allowed when tributary already involved in a cross-connection

Setting the *loca*, *locz* parameters shall only be inhibited when the tributary is already input or output tributary of a cross-connection.

Error code: IDNV - Input, Data Not Valid, tributary already part of a cross-connection

ONNS specific validation rule: Maximum number of tributaries with *loca*, *locz* entries must not exceed 100

It shall be checked that the maximum number of tributaries with *loca*, *locz* parameters set (i.e. having a value different from the default value) does not exceed 100.

Error code: SSRE - Status, System Resources Exceeded, limit of tribs with *loca*, *locz* exceeded

ONNS specific validation rule: *hptimmon* changes to ENABLE only allowed when corresponding port is not of *portClass* INNI

Setting the *hptimmon* parameter to ENABLE shall only be allowed when the port the VC-3 is located on does not have the port class INNI.

Error Code: SNVS - Status, Not in Valid State, *portClass* must not be INNI

Related TL1 messages [“RTRV-STSI: Retrieve STSI tributary” \(5-571\)](#)

References GR-199-CORE (ED-*rr*)



ED-STS1: Edit STS1 tributary

The ED-STS1 command is used to provision all parameters related to the tributary STS1.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: no

Input format Command Syntax: ED-STS1:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STS1: Retrieve STS1 tributary” \(5-571\)](#).
3. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
2. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
3. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
4. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

5. **exphptrc** – Expected Path Trace (J1)
See definition of output parameter **exphptrc** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
6. **feppm** – Far-End Path PM Enable
See definition of output parameter **feppm** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
7. **hptimmon** – Path Trace Monitoring Enable (J1)
See definition of output parameter **hptimmon** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
8. **loca** – Ring A-node TID
See definition of output parameter **loca** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
9. **locz** – Ring Z-node TID
See definition of output parameter **locz** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
10. **neppm** – Near-End Path PM Enable
See definition of output parameter **neppm** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
11. **pmhpfses** – Performance Monitoring Path Far-End SES Threshold
See definition of output parameter **pmhpfses** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
12. **pmhpnses** – Performance Monitoring Path Near-End SES Threshold
See definition of output parameter **pmhpnses** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
13. **pse** – PDI-P Switching Enable
See definition of output parameter **pse** in [“RTRV-STIS1: Retrieve STIS1 tributary” \(5-571\)](#).
14. **ptca** – Path TCA Profile Pointer
See definition of output parameter **ptca** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
15. **ptrcrfmt** – Path Trace Read Format (J1)
See definition of output parameter **ptrcrfmt** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
16. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-STIS1: Retrieve STIS1 tributary” \(5-571\)](#).

17. tmonmd – Tributary Monitoring Mode
See definition of output parameter *tmonmd* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
18. tribsonetpn – Tributary Alarm Severity Assignment Profile
See definition of output parameter *tribsonetpn* in [“RTRV-STS1: Retrieve STS1 tributary” \(5-571\)](#).

Output format

If the ED-STS1 command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The ED-STS1 command is also applicable to STS3c and other concatenated tributaries.

Even if the command is used for a concatenated signal, it can be applied to any of the tributaries (for example, to the second tributary of the concatenated signal). However, only the parameters pertaining to the first tributary of a concatenated signal are used by the software to determine system operation. If the signal were changed from a concatenated signal to non-concatenated, then the parameters for each of the tributaries would be used by the software.

The command allows to modify all attributes listed above as input spec-block parameters. The modification is reported by means of an ED-STS1 notification for tributary.

Signal degrade/signal fail mode provisioning

Refer to the detailed behavior of the [“ED-VC3: Edit VC3 tributary” \(5-579\)](#) command for details on Signal Degrade/Signal Fail Mode Provisioning for tributaries.

Disabling of PM monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Example input/output

```
ED-STS1:UNITE-NE:1-1-#-#-3-1-1:123456:::tmonmd=MON,
tribsonetpn=Default,degthr=-6,dexctr=-3,ptrcrfmt=1,
ptca=Default0,neppm=ENABLE,pmhpneses=30,pmhpfeses=30;
    UNITE-NE 00-10-14 14:59:09
M 123456 COMPLD
;
    UNITE-NE 00-10-14 14:59:09
A 592 REPT DBCHG
"TIME=14-59-09,DATE=00-10-14:ED-STS1:1-1-#-#-3-1-1::
tmonmd=MON,tribsonetpn=Default,degthr=-6,dexctr=-3,
ptrcrfmt=1,ptca=Default0,neppm=ENABLE,pmhpneses=30,
pmhpfeses=30:"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the ED-STS1 command.

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation Rule: TCA profile exists

See definition of validation rule in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Check CCB against *istd* of related port

See definition of Error responses in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

NN specific validation rule: *loca*, *locz* changes only allowed when *portClass*=EDGE and part of a BLSR/MS-SPRING group

Setting the *loca*, *locz* parameters away from the default value shall only be allowed when the related *portClass*=EDGE and the port is part of a BLSR/MS-SPRING protection group.

Error code: IDNV - Input, Data Not Valid, related *portClass* not EDGE or port not in BLSR/MS-SPRING group

NN specific validation rule: *loca*, *locz* changes only allowed when tributary already involved in a cross-connection

Setting the *loca*, *locz* parameters shall only be inhibited when the tributary is already input or output tributary of a cross-connection.

Error code: IDNV - Input, Data Not Valid, tributary already part of a cross-connection

NN specific validation rule: Maximum number of tributaries with *loca*, *locz* entries must not exceed 100

It shall be checked that the maximum number of tributaries with *loca*, *locz* parameters set (i.e. having a value different from the default value) does not exceed 100.

Error code: SSRE - Status, System Resources Exceeded, limit of tribs with *loca*, *locz* exceeded

ONNS specific validation rule: *hptimmon* changes to ENABLE only allowed when corresponding port is not of *portClass* INNI

Setting the *hptimmon* parameter to ENABLE shall only be allowed when the port the VC-3 is located on does not have the port class INNI.

Error Code: SNVS - Status, Not in Valid State, *portClass* must not be INNI

Related TL1 messages [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#)

References GR-199-CORE (ED-*rr*)



ED-VC3 notification

Output format The ED-VC3 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-VC3:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

Spec block parameters

1. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
2. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
3. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
4. *crslpbkrate* – Cross-connect loopback Rate
See definition of output parameter *crslpbkrate* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
5. *crslpbkstat* – Cross-connect loopback Status
See definition of output parameter *crslpbkstat* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
6. *dexcthr* – Excessive Degrade Threshold
See definition of output parameter *dexcthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
7. *exphptrc* – Expected Path Trace (J1)
See definition of output parameter *exphptrc* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
8. *feppm* – Far-End Path PM Enable
See definition of output parameter *feppm* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

9. **hptimmon** – Path Trace Monitoring Enable (J1)
See definition of output parameter **hptimmon** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
10. **loca** – Ring A-node TID
See definition of output parameter **loca** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
11. **locz** – Ring Z-node TID
See definition of output parameter **locz** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
12. **neppm** – Near-End Path PM Enable
See definition of output parameter **neppm** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
13. **pmhpfeses** – Performance Monitoring Path Far-End SES Threshold
See definition of output parameter **pmhpfeses** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
14. **pmhpneses** – Performance Monitoring Path Near-End SES Threshold
See definition of output parameter **pmhpneses** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
15. **ptca** – Path TCA Profile Pointer
See definition of output parameter **ptca** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
16. **ptrcrfmt** – Path Trace Read Format (J1)
See definition of output parameter **ptrcrfmt** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
17. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
18. **tcamd** – TCA mode
See definition of output parameter **tcamd** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
19. **tmonmd** – Tributary Monitoring Mode
See definition of output parameter **tmonmd** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
20. **tribsdhpn** – Tributary Alarm Severity Assignment Profile
See definition of output parameter **tribsdhpn** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

Example output

```
ED-VC3:UNITE-NE:1-1-#-#-3-1-1:123456:::tmonmd=MON,
tribsdhpn=Default,degthr=-6,dexcthr=-3,ptrcrfmt=1,
ptca=Default0,neppm=ENABLE,pmhpnese=30,pmhpfese=30;
    UNITE-NE 00-10-14 14:59:09
M 123456 COMPLD
;
    UNITE-NE 00-10-14 14:59:09
A 592 REPT DBCHG
"TIME=14-59-09,DATE=00-10-14:ED-VC3:1-1-#-#-3-1-1::
tmonmd=MON,tribsdhpn=Default,degthr=-6,dexcthr=-3,
ptrcrfmt=1,ptca=Default0,neppm=ENABLE,pmhpnese=30,
pmhpfese=30:"
;
```



ENT-VC3 notification

Output format The ENT-VC3 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-VC3:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

Spec block parameters

1. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
2. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
3. *crslpbkstat* – Cross-connect loopback Status
See definition of output parameter *crslpbkstat* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
4. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
5. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
6. *exphptrc* – Expected Path Trace (J1)
See definition of output parameter *exphptrc* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
7. *feppm* – Far-End Path PM Enable
See definition of output parameter *feppm* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
8. *hptimmon* – Path Trace Monitoring Enable (J1)
See definition of output parameter *hptimmon* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

9. loca – Ring A-node TID
See definition of output parameter *loca* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
10. locz – Ring Z-node TID
See definition of output parameter *locz* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
11. neppm – Near-End Path PM Enable
See definition of output parameter *neppm* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
12. pmhpfeses – Performance Monitoring Path Far-End SES Threshold
See definition of output parameter *pmhpfeses* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
13. pmhpnese – Performance Monitoring Path Near-End SES Threshold
See definition of output parameter *pmhpnese* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
14. ptca – Path TCA Profile Pointer
See definition of output parameter *ptca* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
15. ptrcrfmt – Path Trace Read Format (J1)
See definition of output parameter *ptrcrfmt* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
16. sdsfmode – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
17. tcamd – TCA mode
See definition of output parameter *tcamd* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
18. tmonmd – Tributary Monitoring Mode
See definition of output parameter *tmonmd* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
19. tribsdhpn – Tributary Alarm Severity Assignment Profile
See definition of output parameter *tribsdhpn* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

Example output

```
UNITE-NE 00-10-14 14:59:09
A 592 REPT DBCHG
```

```
"TIME=14-59-09,DATE=00-10-14:ENT-VC3:1-1-#-#-3-1-1::  
tmonmd=MON,tribsdhpn=Default,...,pmhpneses=30,  
pmhpfeses=30"
```

;



DLT-VC3 notification

Output format The DLT-VC3 notification uses the general format of a REPT DBCHG (Report Database Change) notification.
Syntax: DLT-VC3:*aid*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

Example output UNITE-NE 00-11-20 8:01:03
A 612 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-VC3:1-1-#-#-4-1-1&&-
768"
;



ED-STS1 notification

Output format The ED-STS1 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-STS1:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STS1: Retrieve STS1 tributary” \(5-571\)](#).

Spec block parameters

1. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
2. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
3. *crslpbkrate* – Cross-connect loopback Rate
See definition of output parameter *crslpbkrate* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
4. *crslpbkstat* – Cross-connect loopback Status
See definition of output parameter *crslpbkstat* in [“RTRV-STS1: Retrieve STS1 tributary” \(5-571\)](#).
5. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
6. *dexcthr* – Excessive Degrade Threshold
See definition of output parameter *dexcthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
7. *exphptrc* – Expected Path Trace (J1)
See definition of output parameter *exphptrc* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
8. *feppm* – Far-End Path PM Enable
See definition of output parameter *feppm* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

9. **hptimmon** – Path Trace Monitoring Enable (J1)
See definition of output parameter **hptimmon** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
10. **loca** – Ring A-node TID
See definition of output parameter **loca** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
11. **locz** – Ring Z-node TID
See definition of output parameter **locz** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
12. **neppm** – Near-End Path PM Enable
See definition of output parameter **neppm** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
13. **pmhpfeses** – Performance Monitoring Path Far-End SES Threshold
See definition of output parameter **pmhpfeses** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
14. **pmhpneses** – Performance Monitoring Path Near-End SES Threshold
See definition of output parameter **pmhpneses** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
15. **pse** – PDI-P Switching Enable
See definition of output parameter **pse** in [“RTRV-STS1: Retrieve STS1 tributary” \(5-571\)](#).
16. **ptca** – Path TCA Profile Pointer
See definition of output parameter **ptca** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
17. **ptrcrfmt** – Path Trace Read Format (J1)
See definition of output parameter **ptrcrfmt** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
18. **sdsfmode** – Signal Degrade/Signal Fail Mode
See definition of output parameter **sdsfmode** in [“RTRV-STS1: Retrieve STS1 tributary” \(5-571\)](#).
19. **tmonmd** – Tributary Monitoring Mode
See definition of output parameter **tmonmd** in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
20. **tribsonetpn** – Tributary Alarm Severity Assignment Profile
See definition of output parameter **tribsonetpn** in [“RTRV-STS1: Retrieve STS1 tributary” \(5-571\)](#).

Example output

```
ED-STS1:UNITE-NE:1-1-#-#-3-1-1:123456:::tmonmd=MON,
tribsonetpn=Default,degthr=-6,dexcthr=-3,ptrcrfmt=1,
ptca=Default0,neppm=ENABLE,pmhpneses=30,pmhpfeses=30;
    UNITE-NE 00-10-14 14:59:09
M 123456 COMPLD
;
    UNITE-NE 00-10-14 14:59:09
A 592 REPT DBCHG
"TIME=14-59-09,DATE=00-10-14:ED-STS1:1-1-#-#-3-1-1::
tmonmd=MON,tribsonetpn=Default,degthr=-6,dexcthr=-3,
ptrcrfmt=1,ptca=Default0,neppm=ENABLE,pmhpneses=30,
pmhpfeses=30:"
;
```



ENT-STS1 notification

Output format The ENT-STS1 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-STS1:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STS1: Retrieve STS1 tributary” \(5-571\)](#).

Spec block parameters

1. *brstintvl* – Bursty Interval
See definition of output parameter *brstintvl* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
2. *brstthr* – Bursty Error Threshold
See definition of output parameter *brstthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
3. *crslpbkstat* – Cross-connect loopback Status
See definition of output parameter *crslpbkstat* in [“RTRV-STS1: Retrieve STS1 tributary” \(5-571\)](#).
4. *degthr* – Signal Degrade Threshold
See definition of output parameter *degthr* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
5. *dexcth* – Excessive Degrade Threshold
See definition of output parameter *dexcth* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
6. *exphptrc* – Expected Path Trace (J1)
See definition of output parameter *exphptrc* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
7. *feppm* – Far-End Path PM Enable
See definition of output parameter *feppm* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
8. *hptimmon* – Path Trace Monitoring Enable (J1)
See definition of output parameter *hptimmon* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).

9. loca – Ring A-node TID
See definition of output parameter *loca* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
10. locz – Ring Z-node TID
See definition of output parameter *locz* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
11. neppm – Near-End Path PM Enable
See definition of output parameter *neppm* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
12. pmhpfeses – Performance Monitoring Path Far-End SES Threshold
See definition of output parameter *pmhpfeses* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
13. pmhpnese – Performance Monitoring Path Near-End SES Threshold
See definition of output parameter *pmhpnese* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
14. pse – PDI-P Switching Enable
See definition of output parameter *pse* in [“RTRV-STS1: Retrieve STS1 tributary” \(5-571\)](#).
15. ptca – Path TCA Profile Pointer
See definition of output parameter *ptca* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
16. ptrcrfmt – Path Trace Read Format (J1)
See definition of output parameter *ptrcrfmt* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
17. sdsfmode – Signal Degrade/Signal Fail Mode
See definition of output parameter *sdsfmode* in [“RTRV-STS1: Retrieve STS1 tributary” \(5-571\)](#).
18. tmonmd – Tributary Monitoring Mode
See definition of output parameter *tmonmd* in [“RTRV-VC3: Retrieve VC3 tributary” \(5-562\)](#).
19. tribsonetpn – Tributary Alarm Severity Assignment Profile
See definition of output parameter *tribsonetpn* in [“RTRV-STS1: Retrieve STS1 tributary” \(5-571\)](#).

Example output

```
UNITE-NE 00-10-14 14:59:09
A 592 REPT DBCHG
```

```
"TIME=14-59-09,DATE=00-10-14:ENT-STS1:1-1-#-#-3-1-1::  
tmonmd=MON,tribsonetpn=Default,...,pmhpneses=30,  
pmhpfeses=30"  
;
```



DLT-STS1 notification

Output format The DLT-STS1 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax DLT-STS1:*aid*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of output parameter *aid* in [“RTRV-STS1: Retrieve STS1 tributary” \(5-571\)](#).

Example output

```
UNITE-NE 00-11-20 8:01:03
A 612 REPT DBCHG
"Time=8-00-30,DATE=00-11-20:DLT-STS1:1-1-#-#-4-1-1&&-
768"
;
```



Autonomous notification

Impact of ONNS cross-connection creation

On creation of an ONNS cross-connection (*xconcls*=NN), which involves tributaries on EDGE ports (*portClass*=EDGE) which are part of a BLSR/MS-SPRING protection group the non-empty *loca*, *locz* information of the tributaries are copied into the corresponding attributes of the cross-connection and the *loca*, *locz* parameters in the tributaries are reset to its default values.

The reset of the *loca*, *locz* parameters in the tributaries are reported by means of an ED-STS (*istd* of related port SONET) or ED-VC3 (*istd* of related port SDH) notification.





6 TL1 messages - fault management

Overview

Purpose This section contains the TL1 interface definition for the domain *fault management*.

Contents

<u>Introduction</u>	<u>6-4</u>
<u>Alarms, events, ASAPs</u>	<u>6-5</u>
<u>MDI / MDO</u>	<u>6-7</u>
<u>Alarm assignment profiles</u>	<u>6-8</u>
<u>RTRV-ASAP-PROF: Retrieve ASAP profile</u>	<u>6-9</u>
<u>RTRV-ASAP-ASGNMT: Retrieve ASAP assignment</u>	<u>6-14</u>
<u>ENT-ASAP-PROF: Enter alarm severity assignment profile</u>	<u>6-17</u>
<u>ENT-ASAP-PROF notification</u>	<u>6-19</u>
<u>ED-ASAP-PROF: Edit alarm severity assignment profile</u>	<u>6-20</u>
<u>ED-ASAP-PROF notification</u>	<u>6-24</u>
<u>DLT-ASAP-PROF: Delete alarm severity assignment profile</u>	<u>6-26</u>
<u>DLT-ASAP-PROF notification</u>	<u>6-28</u>

<u>Alarms</u>	<u>6-29</u>
<u>RTRV-ALM: Retrieve alarm</u>	<u>6-30</u>
<u>RTRV-COND: Retrieve condition</u>	<u>6-37</u>
<u>REPT ALM: Report alarm</u>	<u>6-44</u>
<u>REPT EVT: Report event</u>	<u>6-47</u>
<u>Alarm log</u>	<u>6-53</u>
<u>RTRV-LOG-ALM: Retrieve log alarm</u>	<u>6-54</u>
<u>MDI</u>	<u>6-59</u>
<u>RTRV-ALM-ENV: Retrieve alarm environment</u>	<u>6-60</u>
<u>RTRV-ATTR-ENV: Retrieve attribute environment</u>	<u>6-64</u>
<u>SET-ATTR-ENV: Set attribute environment</u>	<u>6-68</u>
<u>SET-ATTR-ENV notification</u>	<u>6-71</u>
<u>REPT-ALM-ENV: Report Alarm Environment</u>	<u>6-72</u>
<u>MDO</u>	<u>6-75</u>
<u>RTRV-ATTR-CONT: Retrieve attribute control</u>	<u>6-76</u>
<u>RTRV-ACTL-CONT: Retrieve actual condition types</u>	<u>6-80</u>
<u>RTRV-EXT-CONT: Retrieve external control</u>	<u>6-83</u>
<u>SET-ATTR-CONT: Set attribute control</u>	<u>6-86</u>
<u>SET-ATTR-CONT notification</u>	<u>6-89</u>
<u>OPR-EXT-CONT: Operate External Control</u>	<u>6-90</u>
<u>OPR-EXT-CONT notification</u>	<u>6-92</u>
<u>RLS-EXT-CONT: Release external control</u>	<u>6-93</u>
<u>RLS-EXT-CONT notification</u>	<u>6-95</u>
<u>Alarm, event, ASAP tables</u>	<u>6-96</u>
<u>ASAP Type DCN</u>	<u>6-99</u>
<u>ASAP Type ENET</u>	<u>6-100</u>
<u>ASAP Type ENV</u>	<u>6-103</u>
<u>ASAP Type EQUIP-PROT</u>	<u>6-105</u>
<u>ASAP Type EQUIP-UNPROT</u>	<u>6-109</u>
<u>ASAP Type MSSPRING-BLSR</u>	<u>6-114</u>
<u>ASAP Type MSP-APS</u>	<u>6-117</u>

<u>ASAP Type PATH</u>	<u>6-119</u>
<u>ASAP Type PATHTERM</u>	<u>6-121</u>
<u>ASAP Type PORT</u>	<u>6-123</u>
<u>ASAP Type SNCP-UPSR</u>	<u>6-126</u>
<u>ASAP Type TIMING</u>	<u>6-127</u>
<u>Entity – ASAP relation</u>	<u>6-128</u>



Introduction

Overview

Purpose This chapter presents general information necessary to understand the subsequent sections.

Contents

Alarms, events, ASAPs	6-5
MDI / MDO	6-7



Alarms, events, ASAPs

Alarms/events The system reports failures via alarms and events. An alarm/event can be persistent or transient. If it is persistent then a declaration (when the alarm will be raised) and a clear (when the alarm will be cleared) message will be sent by the NE. If it is transient only a declaration message will be sent.

Each one has a probable cause assigned. This is an identifier for the alarm/event. It will be reported via the *condtype* parameter in several commands/messages.

Alarms (conditions) with the severity Critical, Major, or Minor – will be reported via REPT ALM and can be retrieved via RTRV-ALM. Events/Alarms (conditions) with severity Warning/Not-Alarmed – will be reported via REPT EVT and can be retrieved via RTRV-COND. Alarms of environmental points will be not reported and retrieved via this commands. Refer to MDI/MDO description. The different reporting messages and retrieve commands are because of TL1 requirements.

Service affecting / non service affecting An alarm can be service affecting (sa) or non service affecting (nsa). This indicates if transmission on a path may be affected (sa) or not (nsa). It is only a well educated guess based on the limited view of a single NE.

Alarm severity Each alarm/event will be reported with a severity. The severity specifies the urgency of the alarm/event. The severity which will be sent for a specific probable cause can be configured via ASAPs.

The NE supports the following severities:

- CR – Critical (ITU / Telcordia)
- MJ – Major (ITU / Telcordia)
- MN – Minor (ITU / Telcordia)
- NA – Warning (ITU) / Not-Alarmed (Telcordia)
- NR – Non-Alarmed (ITU) / Not-Reported (Telcordia).

ASAPs Alarm Severity Assignment Profiles (ASAP) assign for each probable cause and if applicable service affecting and non service affecting independent a severity. Each ASAP parameter of an ASAP refers to a

probable cause and if applicable for service affecting or not. There are different types of ASAPs which defines the severities for different sets of probable causes. An entity which can raise an alarm/event will be assigned an ASAP which defines for the specific alarms/events of the entity the severity. For each ASAP type a default ASAP exists in the NE, which cannot be deleted. ASAPs can be created via ENT-ASAP-PROF, edited via ED-ASAP-PROF, deleted via DLT-ASAP-PROF and retrieved via RTRV-ASAP-PROF.

SONET / SDH Mode

The NE does not distinguish between SONET and SDH. For both the same alarms will be reported and only one set of severities is supported. Alarms use probable causes there applicable from the Telcordia ("SONET world") standard. For alarm description is system specific and not adapted to Telcordia standards.

For severities the notation is used like described in the TL1 standards of telcordia. For explanation the meaning in the SONET and SDH world is added.



MDI / MDO

MDI *Miscellaneous Discrete Inputs* (MDI / environmental point) are used to have some external input which can raise alarms like from a fire detector. The name and alarm description of an MDI can be configured. The general discussion for alarms/events is also true for MDIs. Only the alarms will be reported via REPT-ALM-ENV and can be retrieved via RTRV-ALM-ENV. The configuration of MDIs can be edited via SET-ATTR-ENV and retrieved via RTRV-ATTR-ENV.

MDO *Miscellaneous Discrete Outputs* (MDO / external control) are outputs which can operate equipment outside of the NE like a lamp. Each MDO has a name which can be configured. MDOs can be configured via SET-ATTR-CONT and can be retrieved via RTRV-ATTR-CONT.

MDOs can be operated in two modes: automatically and via management commands. For the automatic mode a MDO gets assigned a probable cause. If at least one alarm of this probable cause is active then the MDO will be operated. For operation with the management commands no probable cause must be assigned to the MDO. The MDO can be operated via OPR-EXT-COND and RLS-EXT-COND. The control state of a MDO can be retrieved with the RTRV-EXT-CONT command.



Alarm assignment profiles

Overview

Purpose This section comprises messages to handle alarm assignment profiles (ASAPs).

Contents

RTRV-ASAP-PROF: Retrieve ASAP profile	6-9
RTRV-ASAP-ASGNMT: Retrieve ASAP assignment	6-14
ENT-ASAP-PROF: Enter alarm severity assignment profile	6-17
ENT-ASAP-PROF notification	6-19
ED-ASAP-PROF: Edit alarm severity assignment profile	6-20
ED-ASAP-PROF notification	6-24
DLT-ASAP-PROF: Delete alarm severity assignment profile	6-26
DLT-ASAP-PROF notification	6-28



RTRV-ASAP-PROF: Retrieve ASAP profile

The RTRV-ASAP-PROF command retrieves information about one or more alarm severity assignment profile(s).

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-ASAP-PROF:*tid*::*ctag*::*pftype*[*pfname*];

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *ctag* – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. *pftype* – Profile Type
This parameter indicates the type of the ASAP (ASAP type).
Type: alphanumeric value set. A '-' is also allowed for the values
Range:
 - DCN: Data Communications Network
 - ENET: Ethernet
 - ENV: Environmental (Miscellaneous Discrete)
 - EQUIP-PROT: Equipment with Protection State Dependence
 - EQUIP-UNPROT: Equipment unprotected
 - MSSPRING-BLSR: MS-SPRING and Bilateral Switched Ring protection switch
 - MSP-APS: Automatic protection switch
 - PATH: Path MSA/NIM related
 - PATHTERM: Path Termination
 - PORT: SDH/SONET ports

RTRV-ASAP-PROF: Retrieve ASAP profile

- SNCP-UPSR: Sub-Network Connection Protection and Unidirectional Path Switched Ring
 - TIMING: System Timing.
- Default Value: There is no default value. The *pftype* does not change.

4. *pfname* – ASAP Profile Name
See output parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).

OPTION: If *pfname* is omitted, then all profile names of type *pftype* will be returned.

Output format The following example shows the successful completion of the RTRV-ASAP-PROF command by the NE if the *pfname* parameter is omitted:

```

sid date time
M ctag COMPLD
  "pftype=pftype,name=DEFAULT"
  "pftype=pftype,name=pfname"
  ...
  "pftype=pftype,name=pfname"
;
```

There may be 0 or more *pfname* lines, where each line gives the name of an ASAP of type *pftype*. Even if ENT-ASAP-PROF has never been used to create a profile for this *pftype*, RTRV-ASAP-PROF will still return one profile: DEFAULT.

Normal completion response if *pfname* is specified

The following example shows the successful completion of the RTRV-ASAP-PROF command by the NE if the *pfname* parameter is specified:

```

sid date time
M ctag COMPLD
  "pftype=pftype,name=pfname"
  "spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Important! Instead of returning an error message the RTRV-ASAP-PROF command returns success with an empty list when the user tries to retrieve non-existing profiles.

Output parameters

Command parameters

1. pftype – Profile Type
See input parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).
2. pfname – ASAP Profile Name
This parameter indicates the name of the ASAP. The ASAP name distinguishes ASAPs of the same ASAP type specified by pftype. That means the same name can be used for several ASAP types.
Type: alphanumeric character string. A hyphen (-) is additionally allowed in the name.
Range: length 1-24 characters.
For predefined ASAPs is the value of *pfname* “DEFAULT” , but it is no default name in general.

Spec block parameters

1. Alarm Severity Profile parameters
The spec block contains ASAP parameters. Each ASAP parameter defines for a probable cause (*condtype*) the assigned severity which will be reported when the alarm appears. If for one specific probable cause a service affecting (sa) or non service affecting (nsa) alarm can be reported then for each the sa-alarm and nsa-alarm an ASAP parameter exists.
The severity indicates the urgency of an alarm. The severity of a sa-alarm must be more urgent than that of a nsa-alarm for the same *condtype*.
The description of the ASAP parameters, the relation to the profile types and the default values are described in: [“Alarms, events, ASAPs” \(6-5\)](#).
All parameters have the same type and value range.
Type: alphanumeric value set.
Range:
 - CR - Critical (ITU / Telcordia)
 - MJ - Major (ITU / Telcordia)
 - MN - Minor (ITU / Telcordia)

RTRV-ASAP-PROF: Retrieve ASAP profile

- NA - Warning (ITU) / Not-Alarmed (Telcordia)
- NR - Non-Alarmed (ITU) / Not-Reported (Telcordia).

Example: Concrete ASAP parameters are *sa_eqpt* and *nsa_eqpt*. Both refers to the probable cause (*condtype*) EQPT and ASAP type EQUIPPROT. *sa_eqpt* contains the assigned severity for the service affecting alarm of probable cause EQPT and *nsa_eqpt* for the non service affecting alarm. *sa_eqpt* can have the concrete value CR and *nsa_eqpt* MN.

Detailed behavior description

For any specific profile type (*pftype*), each applicable specification block parameter will be reported.

The RTRV-ASAP-PROF command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful completion of the RTRV-ASAP-PROF command by the NE if *pfname* is omitted:

```
RTRV-ASAP-PROF:LT-UNITE-123::123456::ENV;
    LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
    "Pftype=ENV,Name=DEFAULT"
    "Pftype=ENV,Name=GTE"
;
```

The following example shows the successful completion of the RTRV-ASAP-PROF command by the NE if *pfname* and *pftype* is specified:

```
RTRV-ASAP-PROF:LT-UNITE-123::123456::ENET,GTE;
    LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
    "Pftype=ENET,Name=GTE"
    "sa_vcg_loa=MJ,nsa_vcg_loa=MN,sa_vcg_ssf=MJ,nsa_vcg_
    ssf=MN,
sa_vcg_plm=MN,nsa_vcg_plm=NA,sa_gfp_lof=CR,nsa_gfp_
    lof=MJ,sa_lan_los=CR,nsa_lan_los=MJ,sa_lan_anm=MN,nsa_
    lan_anm=NA"
;
```

Error responses The RTRV-ASAP-PROF command does not generate any special error responses. The general error responses defined in [“RTRV-HDR: Retrieve header” \(5-8\)](#) are also valid for this command.

Related TL1 messages

- [“DLT-ASAP-PROF: Delete alarm severity assignment profile” \(6-26\)](#)
- [“ED-ASAP-PROF: Edit alarm severity assignment profile” \(6-20\)](#)
- [“ENT-ASAP-PROF: Enter alarm severity assignment profile” \(6-17\)](#)
- [“RTRV-ASAP-ASGNMT: Retrieve ASAP assignment” \(6-14\)](#)



RTRV-ASAP-ASGNMT: Retrieve ASAP assignment

The RTRV-ASAP-ASGNMT command retrieves a list of AIDs that identifies all users of an ASAP of a specific type and a specific name.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
 Priority: 1
 Abortable: Yes.

Input format Command Syntax: RTRV-ASAP-ASGNMT:*tid:aid:ctag::pftype,pfname*;

Input parameters

Command parameters

1. tid – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. ctag – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. aid – Access Identifier
Identifies the entity for which and all contained entities the ASAP assignments will be retrieved. Only for a shelf and all its contained entities all ASAP assignments can be retrieved.
Type: AID.
Range: ShelfAID.
4. pftype – Profile Type
See input parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#)
5. pfname – Profile Name
See input parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).

Output format The following example shows the successful completion of the RTRV-ASAP-ASGNMT command by the NE:

```
sid date time
M ctag COMPLD
"aid_output:pftype,pfname"
(0 or more lines)
```

;

Output parameters

Command parameters

1. aid_output – Access Identifier
Access Identifier of an entity which has an ASAP pointer which points to an ASAP of *pftype*, *pfname*.
Type: AID.
Range: All AIDs of entities which contain a ASAP pointer. For entities see in the section "Entity - ASAP Relation".
Default: None.
2. pftype – Profile Type
See input parameter definition of ["RTRV-ASAP-PROF: Retrieve ASAP profile" \(6-9\)](#).
3. pfname – ASAP Profile Name
See input parameter definition of ["RTRV-ASAP-PROF: Retrieve ASAP profile" \(6-9\)](#).

Detailed behavior description

The RTRV-ASAP-ASGNMT command does not generate a REPT DBCHG message.

Behaviour: No matching profile name

If the system receives a command with a *pfname* that does not exist, then the command will successfully complete with an empty reply list. Thus no data will be returned. Note: A wrong pftype is handled by the general error response IDNV (RTRV-HDR).

Example input/output

The following example shows the successful completion of the RTRV-ASAP-ASGNMT command by the NE:

```
RTRV-ASAP-ASGNMT:LT-UNITE-123:1-1:123456::SONET,GTE;  
LT-UNITE-123 00-01-01 08:00:00  
M 123456 COMPLD  
"1-1-#-#-1-2:SONET,GTE"  
"1-1-#-#-1-3:SONET,GTE"  
"1-1-#-#-4-1:SONET,GTE"  
"1-1-#-#-4-1:SONET,GTE"  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the RTRV-ASAP-ASGNMT command.

Validation rule: Invalid *pfname*

If the system receives a command with a *pfname* DEFAULT.

Error code: IDNV - Input, Data Not Valid, pfname must not be DEFAULT.

Related TL1 messages

- [“DLT-ASAP-PROF: Delete alarm severity assignment profile” \(6-26\)](#)
- [“ED-ASAP-PROF: Edit alarm severity assignment profile” \(6-20\)](#)
- [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#)
- [“ENT-ASAP-PROF: Enter alarm severity assignment profile” \(6-17\).](#)



ENT-ASAP-PROF: Enter alarm severity assignment profile

The ENT-ASAP-PROF command is used to create a new ASAP and to define the name of the ASAP.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
 Priority: 1
 Abortable: No

Input format Command Syntax: ENT-ASAP-PROF:*tid*::*ctag*::*pftype*.*pfname*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *ctag* – Correlation Tag
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. *pftype* – Profile Type
 See input parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).
4. *pfname* – Profile Name
 See output parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).

Output format The following example shows the successful completion of the ENT-ASAP-PROF command by the NE:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description This command creates a new ASAP of ASAP type *pftype* and profile name *pfname*. All ASAP parameters defined for the specific *pftype*

will have default values; i.e. the values are derived from the actual values of the default ASAP (with name DEFAULT).

The maximum total number of ASAPs in a NE includes the predefined DEFAULT ASAPs. (Note: The maximum number of ASAPs is defined per system not per *pftype*.)

The modification is reported via the ENT-ASAP-PROF notification.

Example input/output

The following example shows the successful completion of the ENT-ASAP-PROF command by the NE:

```
ENT-ASAP-PROF:LT-UNITE-123::123456::ENET,att;  
    LT-UNITE 00-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the ENT-ASAP-PROF command.

Validation rule: Duplicate *pfname*

The *pfname* is already used for the specified *pftype*.

Error Code: IEAE - Input, Entity Already Exists, duplicate profile name

Validation rule: Maximum number of profiles

The maximum number of profiles is exceeded.

Error Code: SSRE - Status, System Resources Exceeded, limit of profiles exceeded

Related TL1 messages

- [“DLT-ASAP-PROF: Delete alarm severity assignment profile” \(6-26\)](#)
- [“ED-ASAP-PROF: Edit alarm severity assignment profile” \(6-20\)](#)
- [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#)
- [“RTRV-ASAP-ASGNMT: Retrieve ASAP assignment” \(6-14\).](#)



ENT-ASAP-PROF notification

Output format See definition of [“REPT DBCHG: Report data base change” \(5-67\)](#).
 Syntax: The ENT-ASAP-PROF notification has the following specific syntax:
 ENT-ASAP-PROF::*pftype.pfname.spec_block*

Output parameters

Command parameters

1. pftype – Profile Type
See input parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).
2. pfname – Profile Name
See input parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).

Spec block parameters

1. Alarm Severity Profile parameters
see Alarm Severity Profile parameters definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).

Example output The example shows a normal notification after an ENT-ASAP-PROF command:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:ENT-ASAP-PROF::ENET,att:sa
_vcg_loa=MJ,nsa_vcg_loa=MN,sa_vcg_ssf=MJ,nsa_vcg_
ssf=MN,sa_vcg_plm=MN,nsa_vcg_plm=NA,sa_gfp_lof=CR,nsa_
gfp_lof=MJ,sa_lan_los=CR,nsa_lan_los=MJ,sa_lan_
anm=MN,nsa_lan_anm=NA"
;
```



ED-ASAP-PROF: Edit alarm severity assignment profile

The ED-ASAP-PROF command is used to change the name or parameter values for an ASAP.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
Priority: 1
Abortable: No

Input format Command Syntax: ED-ASAP-PROF:*tid::ctag::pftype,pfname:spec_block*;

Input parameters

Command parameters

1. tid – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. ctag – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. pftype – Profile Type
See input parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).
4. pfname – Profile Name
See input parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).

Spec block parameters

1. newname – New Profile Name
This parameter specifies the new ASAP name of the ASAP specified by *pftype* and *pfname*. The name of any default ASAP can not be changed.
See definition of pfname in the input parameters section of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).
2. Alarm Severity Profile parameters
See definition of Alarm Severity Profile parameters of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).

Output format The following example shows the successful completion of the ED-ASAP-PROF command by the NE:

```
sid date time
```

```
M  ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

If *newname* is specified the ASAP name will be changed to this new profile name. The specified ASAP parameters will be updated to its new severities.

If a ASAP parameter is not specified as part of the *spec_block*, then its value remains unchanged.

The default ASAP parameter values of the profiles named DEFAULT can be modified.

The modification is reported via the ED-ASAP-PROF notification.

Note: ED-ASAP-PROF notification includes all parameters instead of only changed parameters.

Update affected entities

The new ASAP name (if specified) will be updated in all ASAP pointer attributes of other entities of the system. Notice: No REPT DBCHG message will be sent reporting this change.

Note: There will be notifications generated for the affected entities.

Example input/output

The following example shows the successful completion of the ED-ASAP-PROF command by the NE if the *pfname* will be changed:

```
ED-ASAP-PROF:LT-UNITE-123::123456:PORT,NUERNBERG:
newname=CHEMNITZ;
    LT-UNITE-123 00-01-01 08:00:00
M  123456 COMPLD
;
```

The following example shows the successful completion of the ED-ASAP-PROF command by the NE if assigned severities will be changed:

```
ED-ASAP-PROF:LT-UNITE-123::123456::PORT,NUERNBERG:sa_
los=MJ,sa_lof=MJ,sa_eber=MJ;
    LT-UNITE-123 00-01-01 08:00:00
M  123456 COMPLD
```

;

The following example shows the successful completion of the ED-ASAP-PROF command by the NE if assigned severities and the ASAP name will be changed:

```
ED-ASAP-PROF:LT-UNITE-123::123456::PORT,NUERNBERG:newname=
    CHEMNITZ,sa_los=MJ,sa_lof=MJ,sa_eber=MJ;
    LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the ED-ASAP-PROF command.

Validation rule: *pfname* does not exist

An ASAP with the name *pfname* does not exist.

Error Code: SDNC - Status, Data Not Consistent, invalid instance of profile

Validation rule: Rename of default ASAP

A new profile name is specified for a default profile.

Error Code: IDNC - Input, Data, Not Consistent, new name for default profile

Validation rule: Inconsistent severity level

An ASAP parameter value has severity level inconsistency (for example, the Non Service Affecting value of a parameter is CR and the Service Affecting value is MJ).

Error Code: IDNC - Input, Data, Not Consistent, inconsistent ASAP parameter

Validation rule: Duplicate *newname*

The *newname* is already used for the specified *pftype*.

Error Code: IEAE - Input, Entity Already Exists, duplicate profile name

Related TL1 messages

- [“DLT-ASAP-PROF: Delete alarm severity assignment profile” \(6-26\)](#)
- [“ENT-ASAP-PROF: Enter alarm severity assignment profile” \(6-17\)](#)
- [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#)
- [“RTRV-ASAP-ASGNMT: Retrieve ASAP assignment” \(6-14\)](#)



ED-ASAP-PROF notification

Output format See definition of [“REPT DBCHG: Report data base change” \(5-67\)](#).

Syntax: The ED-ASAP-PROF notification has the following specific syntax:

ED-ASAP-PROF::*pftype*,*pfname*:*spec_bloc*

Output parameters

Command parameters

1. *pftype* – Profile Type
See input parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).
2. *pfname* – Profile Name
This is the profile name. It is the previous profile name in case the profile name was changed with *newname*.

Spec block parameters

1. *newname* – New Profile Name
See definition of [“ED-ASAP-PROF: Edit alarm severity assignment profile” \(6-20\)](#).
2. Alarm Severity Profile parameters
See definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).

Example output The example shows a normal notification after an ED-ASAP-PROF command if the ASAP name was changed:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:ED-ASAP-PROF::ENET,
  NUERNBERG:newname=CHEMNITZ"
;
```

The example shows a normal notification after an ED-ASAP-PROF command if severities was changed:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:ED-ASAP-PROF::ENET,
```



```
NUERNBERG:sa_vcg_loa=MJ,nsa_vcg_loa=MN,sa_vcg_ssf=MJ,  
nsa_vcg_ssf=MN"
```

;

The example shows a normal notification after an ED-ASAP-PROF command if the ASAP name and severities was changed:

```
LT-UNITE-123 00-01-01 08:00:50
```

```
A 815 REPT DBCHG
```

```
"TIME=08-00-12,DATE=00-01-01:ED-ASAP-PROF::ENET,
```

```
NUERNBERG:newname=FUERTH,sa_vcg_loa=MJ,nsa_vcg_loa=MN,  
sa_vcg_ssf=MJ,nsa_vcg_ssf=MN"
```

;



DLT-ASAP-PROF: Delete alarm severity assignment profile

The DLT-ASAP-PROF command is used to delete an ASAP. Default ASAP's cannot be deleted.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
 Priority: 1
 Abortable: No.

Input format Command Syntax: DLT-ASAP-PROF:*tid::ctag::pftype,pfname*;

Input parameters

Command parameters

1. tid – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. ctag – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. pftype – Profile Type
See input parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).
4. pfname – Profile Name
See input parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).

Output format The following example shows the successful completion of the DLT-ASAP-PROF command by the NE:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description The DLT-ASAP-PROF command deletes the ASAP specified by pftype and pfname. A profile must not be used when it will be deleted.

The modification is reported via the DLT-ASAP-PROF notification.

Example input/output

The following example shows the successful completion of the DLT-ASAP-PROF command by the NE if the pfname will be changed:

```
DLT-ASAP-PROF:LT-UNITE-123::123456::PORT,NUERNBERG;  
    LT-UNITE-123 00-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the DLT-ASAP-PROF command.

Validation rule: *pfname* does not exist

An ASAP with the name *pfname* does not exist.

Error Code: SDNC - Status, Data Not Consistent, invalid instance of profile

Validation rule: ASAP in use

The addressed ASAP is still in use.

Error Code: SDNC - Status, Data Not Consistent, profile in use

Validation rule: *pfname* is default

The addressed ASAP is a default one which can not be deleted.

Error Code: IDNC - Input, Data, Not Consistent, default profile

Related TL1 messages

- [“ED-ASAP-PROF: Edit alarm severity assignment profile” \(6-20\)](#)
- [“ENT-ASAP-PROF: Enter alarm severity assignment profile” \(6-17\)](#)
- [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#)
- [“RTRV-ASAP-ASGNMT: Retrieve ASAP assignment” \(6-14\)](#)

□

DLT-ASAP-PROF notification

Output format See definition of [“REPT DBCHG: Report data base change” \(5-67\)](#).
Syntax: The DLT-ASAP-PROF notification has the following specific syntax:
DLT-ASAP-PROF::*pftype,pfname*

Output parameters

Command parameters

1. pftype – Profile Type
See input parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).
2. pfname – Profile Name
See input parameter definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).

Example output The following example shows a normal notification after an DLT-ASAP-PROF command:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:DLT-ASAP-PROF::
ENET,NUERNBERG"
;
```



Alarms

Overview

Purpose This section comprises messages to handle alarms.

Contents

RTRV-ALM: Retrieve alarm	6-30
RTRV-COND: Retrieve condition	6-37
REPT ALM: Report alarm	6-44
REPT EVT: Report event	6-47



RTRV-ALM: Retrieve alarm

The RTRV-ALM command messages can be initiated by the user to retrieve all active alarms with properties defined by command parameters of level critical, major or minor from a NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
 Priority: 1
 Abortable: Yes.

Input format Command Syntax:
 RTRV-ALM[-*modifier*]:*tid*::*ctag*::[*ntfcncde*],[*condtype*],[*srveff*],,,;
 The last three trailing commas are used to specify that the optional parameters *locn*, *dirn*, *tmper* as defined in GR-833 are omitted since these parameters are not supported as input parameters.

Input parameters

Command parameters

1. *modifier* – Message Modifier
 This parameter defines for which AID types the conditions will be retrieved. If the value 'ALL' is used, the specified parameter has no impact on the set of retrieved alarms delivered in the retrieve reply.
 Type: alphanumeric value set.
 Range: ALL. This requests all alarms.
 The modifier can be omitted. In this case the ALL modifier will be set implicit.
2. *tid* – Target Identifier
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. *ctag* – Correlation Tag
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. *ntfcncde* – Notification Code
 This is the alarm severity (alarm level) for which the current alarms are requested.
 Type: alphanumeric value set.
 Range: ALL, requests all alarms.
ntfcncde can be omitted. In this case ALL will be set implicit.

RTRV-ALM: Retrieve alarm

5. **condtype** – Condition Type
This parameter identifies the type of alarm indication being reported.
Type: alphanumeric value set.
Range: ALL, requests all alarms.
condtype can be omitted. In this case ALL will be set implicit.
6. **srveff** – Service Effect
This parameter identifies the service affect of alarms being reported.
Type: alphanumeric value set.
Range: ALL, requests all alarms.
srveff can be omitted. In this case ALL will be set implicit.

Output format

The following example shows the successful completion of the RTRV-ALM command by the NE:

```

sid date time
M ctag COMPLD
  "aid,aidtype:ntfcncde,condtype,srveff,ocrdat,
  ocrtm:conddescr"
  (0 or more lines of the above)
;
```

If no alarms are raised only COMPLD will be returned.

The alarms are reported one line per condition, similar to the autonomous messages conveyed by REPT ALM.

Applicable output lines are ordered by the value of occurrence date (**ocrdat**) and occurrence time (**ocrtm**), with the most recent alarm listed first.

The output parameters **sid**, **date**, **time**, and **ctag** included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid – Access Identifier
This is the address of the entity for which an alarm condition is being reported.
Type: AID.
Range: All defined AIDs are allowed. It should be a valid AID for the specified *modifier*. Refer to the definition of AIDs.
2. aidtype – Access Identifier Type
This parameter defines the AID type to which the alarm belongs.
Type: alphanumeric value set.
Range:
 - COM: Common. An alarm/event that applies to the whole NE system; for example, a processing error.
 - EQPT: An equipment-related alarm/event.
 - SYST: An alarm/event related to system timing.
 - OUTT: An alarm/event related to output timing.
 - STM1E: A facility-related alarm/event for synchronous transport mode 1 (electrical).
 - STM1: A facility-related alarm/event for synchronous transport mode 1.
 - STM4: A facility-related alarm/event for synchronous transport mode 4.
 - STM16: A facility-related alarm/event for synchronous transport mode 16.
 - STM64: A facility-related alarm/event for synchronous transport mode 64.
 - STM256: A facility-related alarm/event for synchronous transport mode 256.
 - OC3: A facility-related alarm/event at the optical carrier signal level 3.
 - OC12: A facility-related alarm/event at the optical carrier signal level 12.
 - OC48: A facility-related alarm/event at the optical carrier signal level 48.
 - OC192: A facility-related alarm/event at the optical carrier signal level 192

RTRV-ALM: Retrieve alarm

- OC768: A facility-related alarm/event at the optical carrier signal level 768.
- 1GE: A facility-related alarm/event for 1 Gigabit Ethernet.
- VC3: A facility-related alarm/event for virtual container 3.
- VCG: A facility-related alarm/event for virtual concatenation group tributary.
- VC4: A facility-related alarm/event for virtual container 4
- VC44C: A facility-related alarm/event for a signal concatenated at 4 times the VC4 rate.
- VC416C: A facility-related alarm/event for a signal concatenated at 16 times the VC4 rate.
- VC464C: A facility-related alarm/event for a signal concatenated at 64 times the VC4 rate.
- STS1: A facility-related alarm/event at synchronous transport signal level 1.
- STS3C: A facility-related alarm/event at synchronous transport signal level 3.
- STS12C: A facility-related alarm/event at synchronous transport signal level 12.
- STS48C: A facility-related alarm/event at synchronous transport signal level 48.
- STS192C: A facility-related alarm/event at synchronous transport signal level 192.

Refer to [“Alarms, events, ASAPs” \(6-5\)](#) for the relation of alarm / entity / *aidtype*.

3. conddescr – Description of the Condition

This is a textual Description of the Condition.

Type: inner string of the format:

\“<category>, <entity>, <description>, <additional text>\” or

\“<category>, <entity>, <description>, <additional text>-cleared\”

(this form is used in REPT ALM/EVT for cleared alarms)

Range:

- category: is the category
- entity: is the entity for which the alarm is reported

RTRV-ALM: Retrieve alarm

- description: is the Alarm description, the string is up to 32 characters

- additional text: additional text.

If there is no additional text, then the trailing comma may be omitted. For the values of *conddescr*, refer to [“Alarm, event, ASAP tables” \(6-96\)](#).

4. condtype – Condition Type

This parameter identifies the probable cause (type of alarm indication) being reported.

Type: alphanumeric value set.

Range: All defined probable causes. For the values of *condtypr*, refer to [“Alarm, event, ASAP tables” \(6-96\)](#).

5. ntfncnde – Notification Code

This is the alarm severity (alarm level) or if the alarm is cleared.

Type: alphanumeric value set.

Range:

- CR - Critical (ITU / Telcordia)
- MJ - Major (ITU / Telcordia)
- MN - Minor (ITU / Telcordia)
- CL - Cleared.

6. srveff – Service Effect

This parameter identifies the service affect of alarms being reported. It presents the “best guess” from a local system point of view.

Type: alphanumeric value set.

Range:

- SA: Service-Affecting alarm condition
- NSA: Non-Service-Affecting alarm condition.

RTRV-ALM: Retrieve alarm

7. ocrdat – Occurrence Date
This parameter indicates the raising / clearing date of the alarm.
Type: value set of the format MM-DD.
Range: MM represents the month, DD represents the day, leading zeros are not suppressed.
8. ocrtm – Occurrence Time
This parameter indicates the raising / clearing time of the alarm.
The accuracy should be +/- 1 second.
Type: value set of the format HH-MM-SS.
Range: HH represents the hours, MM represents the minutes, SS represents the seconds, leading zeros are not suppressed.

Detailed behavior description

RTRV-ALM retrieves all active alarms of level CR, MJ, MN.

Any alarm reported by an autonomous REPT ALM message which is active when a RTRV-ALM message is received, is included in the RTRV-ALM response message. Alarms of level NA are reported by RTRV-COND and not by RTRV-ALM.

RTRV-ALM is an on-demand version of the autonomous REPT ALM. The on-demand command only report alarms that are still set when the command is executed.

The REPT-ALM command does not generate a REPT DBCHG message.

```
RTRV-ALM:LT-UNITE-123::123456;
    LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
    "1-1-#-#-4-1,STM16:CR,LOS,SA,01-01,07-29-13:
    \"Communication-Transport, STM16 port, Loss Of Signal\"
    "1-1-#-#-1-3,STM4:MJ,LOF,SA,12-31,03-50-32:
    \"Communication-Transport, STM4 port, Loss of Frame\"
;
```

Example input/output

The following example shows the successful completion of the RTRV-ALM command by the NE if no *modifier* is specified and all alarms will be retrieved for the whole NE:

The following example shows the successful completion of the RTRV-ALM command by the NE if the alarms for a specified *aid* will be retrieved:

RTRV-ALM: Retrieve alarm

```

RTRV-ALM:LT-UNITE-123:1-1-#-#-4-1:123456;
    LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
    "1-1-#-#-4-1,STM16:CR,LOS,SA,01-01,07-29-13:
    \"Communication-Transport, STM16 port, Loss Of Signal\"";

```

The following example shows the successful completion of the RTRV-ALM command by the NE if no alarms are raised on the NE:

```

RTRV-ALM:LT-UNITE-123:1-1-#-#-3-1:123456;
    LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
;

```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the RTRV-ALM command.

Related TL1 messages

- [“ALW-MSG: Allow message” \(5-33\)](#)
- [“ENT-ASAP-PROF: Enter alarm severity assignment profile” \(6-17\)](#)
- [“ED-ASAP-PROF: Edit alarm severity assignment profile” \(6-20\)](#)
- [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#)
- [“INH-MSG: Inhibit message” \(5-31\)](#)
- [“REPT ALM: Report alarm” \(6-44\)](#)
- [“REPT-ALM-ENV: Report Alarm Environment” \(6-72\)](#)
- [“REPT EVT: Report event” \(6-47\)](#)
- [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#)
- [“RTRV-COND: Retrieve condition” \(6-37\)](#)
- [“RTRV-HDR: Retrieve header” \(5-8\)](#)

References

GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network Maintenance: NE and Transport Surveillance Messages



RTRV-COND: Retrieve condition

RTRV-COND command messages can be initiated by the user to retrieve all active alarms of level NA – Not Alarmed (Telcordia) / Warning (ITU).

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
Priority: 1
Abortable: Yes

Input format Command Syntax:
RTRV-COND[*-modifier*]:*tid*::*ctag*::[*condtype*],,,[*tmper*];
The last three trailing commas are used to specify that the optional parameters *locn*, *dirn*, *tmper* as defined in GR-833 are omitted since these parameters are not supported as input parameters.

Input parameters

Command parameters

1. *modifier* – Message Modifier
This parameter defines for which AID types the conditions will be retrieved. If the value ALL is used, the specified parameter has no impact on the set of retrieved alarms delivered in the retrieve reply.
Type: alphanumeric value set.
Range: ALL, this requests all alarms.
The modifier can be omitted. In this case the ALL modifier will be set implicit.
2. *tid* – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. *ctag* – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. *condtype* – Condition Type
See definition of *condtype* in the input parameters section of [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
5. *tmper* – Time Period
See definition in [“RTRV-PM: Retrieve performance monitoring” \(9-7\)](#) in the input parameters section.

RTRV-COND: Retrieve condition

Output format Normal completion response of successful session termination.

The following example shows the successful completion of the RTRV-COND command by the NE:

```

    sid date time
M  ctag COMPLD
    "aid,aidtype:ntfcncde,condtype,srveff,ocrdat,ocrtm
    [,,,conddescr]"
    (0 or more lines of the above)
;
```

If no alarms are raised only COMPLD will be returned.

Applicable output lines are ordered by the value of occurrence date (*ocrdat*) and occurrence time (*ocrtm*), with the most recent alarm listed first.

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

1. *aid* – Access Identifier
This is the address of the entity for which an alarm condition is being reported.
Type: AID
Range: All defined AIDs are allowed. It should be a valid AID for the specified *modifier*. Refer to the definition of AIDs.

Command parameters

1. *aidtype* – Access Identifier Type
This parameter defines the AID type to which the alarm belongs.
Type: alphanumeric value set.
Range:
 - COM: Common. An alarm/event that applies to the whole NE system; for example, a processing error.
 - EQPT: An equipment-related alarm/event.
 - ENV: An alarm/event related to an environmental point.
 - SYST: An alarm/event related to system timing.
 - OUTT: An alarm/event related to output timing.
 - STM1E: A facility-related alarm/event for synchronous transport mode 1 (electrical).

RTRV-COND: Retrieve condition

- STM1: A facility-related alarm/event for synchronous transport mode 1.
- STM4: A facility-related alarm/event for synchronous transport mode 4.
- STM16: A facility-related alarm/event for synchronous transport mode 16.
- STM64: A facility-related alarm/event for synchronous transport mode 64.
- STM256: A facility-related alarm/event for synchronous transport mode 256.
- OC3: A facility-related alarm/event at the optical carrier signal level 3.
- OC12: A facility-related alarm/event at the optical carrier signal level 12.
- OC48: A facility-related alarm/event at the optical carrier signal level 48.
- OC192: A facility-related alarm/event at the optical carrier signal level 192.
- OC768: A facility-related alarm/event at the optical carrier signal level 768.
- 1GE: A facility-related alarm/event for 1 Gigabit Ethernet.
- VC3: A facility-related alarm/event for virtual container 3.
- VCG: A facility-related alarm/event for virtual concatenation group tributary.
- VC4: A facility-related alarm/event for virtual container 4.
- VC44C: A facility-related alarm/event for a signal concatenated at 4 times the VC4 rate.
- VC416C: A facility-related alarm/event for a signal concatenated at 16 times the VC4 rate.
- VC464C: A facility-related alarm/event for a signal concatenated at 64 times the VC4 rate.
- STS1: A facility-related alarm/event at synchronous transport signal level 1.
- STS3C: A facility-related alarm/event at synchronous transport signal level 3.

RTRV-COND: Retrieve condition

- STS12C: A facility-related alarm/event at synchronous transport signal level 12.
- STS48C: A facility-related alarm/event at synchronous transport signal level 48.
- STS192C: A facility-related alarm/event at synchronous transport signal level 192.

Default: There is no default value.

2. **conddescr** – Description of the Condition
For events which belong to an ASAP profile, see definition of **conddescr** in the output parameters section of [“RTRV-ALM: Retrieve alarm” \(6-30\)](#).
For TCA see definition of **conddescr** in the Output parameters section of [“TCA notification” \(9-19\)](#).
For ABN conditions see definition of **conddescr** in the Output parameters section of [“REPT EVT: Report event” \(6-47\)](#).
3. **condtype** – Condition Type
For events which belong to an ASAP profile, see definition of **condtype** in the output parameters section of [“RTRV-ALM: Retrieve alarm” \(6-30\)](#).
For TCA see definition of **condtype** in the Output parameters section of [“TCA notification” \(9-19\)](#).
For ABN conditions see definition of **condtype** in the Output parameters section of [“REPT EVT: Report event” \(6-47\)](#).
4. **ntfcncde** – Notification Code
This is the alarm level (severity).
Type: alphanumeric value set.
Range: NA - Warning (ITU) / Not-Alarmed (Telcordia)
5. **ocrdat** – Occurrence Date
See definition of **ocrdat** in the output parameters section of [“RTRV-ALM: Retrieve alarm” \(6-30\)](#).
6. **ocrtm** – Occurrence Time
See definition of **ocrtm** in the output parameters section of [“RTRV-ALM: Retrieve alarm” \(6-30\)](#).
7. **srveff** – Service Affect
This parameter identifies the service affect of alarms being reported.
Type: alphanumeric value set.

RTRV-COND: Retrieve condition

Range:

- SA - Service affecting
- NSA - Non service affecting.

8. tmper – Time Period

See definition in [“RTRV-PM: Retrieve performance monitoring” \(9-7\)](#) in the input parameters section.

Detailed behavior description

RTRV-COND command messages can be initiated by the user to retrieve all active alarms of level NA – Not Alarmed (Telcordia) / Warning (ITU) from a NE.

RTRV-COND is closely related to REPT EVT which autonomously reports when an persistent alarm of notification code NA either sets or clears or an transient event occurs (like reporting of protection switch states). RTRV-COND retrieves the REPT EVT events that are still set. protection switching events that are reported by REPT EVT are not reported by RTRV-COND (for example, the lockout of a timing reference is not reported by RTRV-COND).

In addition to reporting all active alarms of level NA previously reported by REPT EVT, RTRV-COND retrieves those reported by other autonomous messages.

The RTRV-COND command does not generate a REPT DBCHG message.

The RTRV-COND command will also report the active TCA-events, for port or trib entities, which work in SDH mode and the user has set the TCA mode tcamd of the entity to TR-RTR. By switching to TR-RTR the TCA events are reported as a standing condition, thus the system creates a raise and clear event. If TR-only is selected the TCA events are handled as a transient condition and therefore never reported by RTRV-COND. The SONET standard supports only TR-only mode.

Example input/output

The following example shows the successful completion of the RTRV-COND command by the NE.

```
RTRV-COND:LT-UNITE-123::123456;
LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
"1-1-#-#-6-1,0C48:NA,AIS-L,NSA,01-01,07-59-59,,,,
\"Communication-Transport, 0C48 port, Alarm
```

RTRV-COND: Retrieve condition

```

Indication Signal\""
"MISC_IN3,COM:NA,MISC,NSA,01-01,07-20-15,,,,,
\"Environment, Misc Discrete,door open\""
;

```

The following example shows the successful completion of the RTRV-COND command by the NE if an *aid* is specified:

```

RTRV-COND:LT-UNITE-123:MISC_IN3:123456;
LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
"MISC_IN3,COM:NA,MISC,NSA,01-01,07-20-15,,,,,
\"Environment, Misc Discrete,door open\""
;

```

The following example shows the successful completion of the RTRV-COND command by the NE if no conditions are raised:

```

RTRV-COND:LT-UNITE-123:MISC_IN3:123456;
LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
;

```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the RTRV-ALM command.

Related TL1 messages

- [“ALW-MSG: Allow message” \(5-33\)](#)
- [“ENT-ASAP-PROF: Enter alarm severity assignment profile” \(6-17\)](#)
- [“ED-ASAP-PROF: Edit alarm severity assignment profile” \(6-20\)](#)
- [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#)
- [“INH-MSG: Inhibit message” \(5-31\)](#)
- [“REPT ALM: Report alarm” \(6-44\)](#)
- [“REPT-ALM-ENV: Report Alarm Environment” \(6-72\)](#)
- [“REPT EVT: Report event” \(6-47\)](#)
- [“RTRV-ALM: Retrieve alarm” \(6-30\)](#)

RTRV-COND: Retrieve condition

- [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#)
- [“RTRV-HDR: Retrieve header” \(5-8\)](#)

References GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network Maintenance: NE and Transport Surveillance Messages



REPT ALM: Report alarm

REPT ALM messages are generated autonomously by the NE to report an alarm that requires immediate attention by the craft at the OS. Each alarm message has an alarm severity associated with it.

Output format The general output format of the REPT ALM message is defined as follows:

```
sid date time
almcde atag REPT ALM modifier
    "aid:ntfcncde,condtype,srveff,ocrdat,ocrtm:conddescr"
    (1 or more lines of the above)
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section for the RTRV-HDR command.

Output parameters

Command parameters

1. almcde – Alarm Code
The alarm code indicates the severity of the reported alarm or if the alarm is cleared.
Type: value set
Range:
 - *C: Critical alarm
 - **: Major alarm
 - *: Minor alarm
 - A: Automatic message (nonalarm). This is used only to report a cleared alarm.
2. atag – Automatic Tag
This parameter is used for message sequencing. The number is incremented by one for each autonomous message sent by the NE.
Type: integer (3 digits).
Range: 000 – 999 Leading zeros are not suppressed.

REPT ALM: Report alarm

3. modifier – Message modifier
Refer to the definition of the *aidtype* parameter in the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
4. aid – Access Identifier
Refer to the definition of the *aid* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
5. ntfncde – Notification Code
This is the alarm severity of the reported Alarm or the clear information of a cleared Alarm.
Type: alphanumeric value set.
Range:
 - CR - Critical (ITU / Telcordia)
 - MJ - Major (ITU / Telcordia)
 - MN - Minor (ITU / Telcordia)
 - CL - Cleared.
6. condtype – Condition Type
Refer to the definition of the *condtype* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
7. srveff – Service Effect
Refer to the definition of the *srveff* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
8. ocrdat – Occurrence Date
Refer to the definition of the *ocrdat* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
9. ocrtm – Occurrence Time
Refer to the definition of the *ocrtm* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
10. conddescr – Description of the Condition
Refer to the definition of the *conddescr* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.

REPT ALM: Report alarm

Detailed behavior description

If an alarm has an severity of critical, major, or minor, then its occurrence will be reported in a REPT ALM message. An exception to this rule is an environmental alarm which is reported by a REPT ALM ENV autonomous message.

An alarm reported to the OS via the REPT ALM message has a corresponding REPT ALM clearance message that is generated when the alarm clears.

Example input/output

The following example shows an autonomous message REPT ALM for an LOS Alarm:

```
LT-UNITE-123 00-01-01 08:00:00
*C 126 REPT ALM 0C48
"1-1-#-#-3-1:CR,LOS,SA,01-01,07-29-13:\"Communication-
Transport, 0C48 port, Loss Of Signal\"";
```

The following example shows an autonomous message REPT ALM for an LOS Alarm clear:

```
LT-UNITE-123 00-01-01 08:00:00
A 127 REPT ALM 0C48
"1-1-#-#-3-1:CL,LOS,SA,01-01,07-29-13:\"Communication-
Transport, 0C48 port, Loss Of Signal-cleared\"";
```

Related TL1 messages

- [“ALW-MSG: Allow message” \(5-33\)](#)
- [“ED-ASAP-PROF: Edit alarm severity assignment profile” \(6-20\)](#)
- [“INH-MSG: Inhibit message” \(5-31\)](#)
- [“REPT-ALM-ENV: Report Alarm Environment” \(6-72\)](#)
- [“REPT EVT: Report event” \(6-47\)](#)
- [“RTRV-ALM: Retrieve alarm” \(6-30\)](#)
- [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#)
- [“RTRV-COND: Retrieve condition” \(6-37\)](#)

References

GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network Maintenance: NE and Transport Surveillance Messages



REPT EVT: Report event

REPT EVT messages are generated autonomously to report alarms of severity NA – Warning (ITU) / Not Alarmed (Telcordia). Also events like protection switches will be reported.

Output format The general format of a REPT EVT autonomous message is as follows:

```

sid date time
A atag REPT EVT modifier
  "aid:condtype,condeff,ocrdat,ocrtm,,,[thlev]
  [,tmper][:conddescr]"
  (1 or more lines of the above)
;
```

Note: The trailing comma has to be present if *thlev*, *tmper*, or both are used.

Since trailing commas to the left of a colon can be deleted, for non-TCA events, the output format is as follows:

```

sid date time
A atag REPT EVT modifier
  "aid:condtype,condeff,ocrdat,ocrtm[:conddescr]"
  (1 or more lines of the above)
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. atag – Automatic Tag
Refer to the [“REPT ALM: Report alarm” \(6-44\)](#) message.
2. modifier – Message Modifier
Refer to the definition of the *aidtype* parameter in the [“RTRV-COND: Retrieve condition” \(6-37\)](#) command.

3. aid – Access Identifier
Refer to the definition of the *aid* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
4. condeff – Condition Effect
This parameter indicates the effect of the reported event on the NE. It is used to distinguish between persistent and transient alarms/events.
Two state transitions can be distinguished for a persistent alarm/event:
 - raise transition: state change from not present to present
 - clear transition: state change from present to not present.A transient alarm/event has no 'presence' state; i.e. just the occurrence of that event/alarm is reported. ABN condition are always persistent and not transient.
Type: alphanumeric value set.
Range:
 - CL: Standing condition cleared for a persistent alarm/event.
 - SC: Standing condition raised for a persistent alarm/event
 - TC: Transient condition occurred for a transient alarms/events.Default: There is no default value.
5. conddescr – Description of the Condition
ASAP related conditions:
For events which belong to an ASAP profile, refer to the definition of the *conddescr* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
TCA related conditions:
Refer to the definition of the *conddescr* parameter in the Output parameters section of the [“TCA notification” \(9-19\)](#) chapter.
Abnormal conditions:
The general format is: category, description.
Type: inner string.

Range:

- Description for a protection group AID: - Abnormal condition, forced switch active - Abnormal condition, lockout active
- Description for a timing reference AID: - Abnormal condition, operate in hold-over - Abnormal condition, operate in free run mode
- Description for a port AID: - Abnormal condition, facility loopback active
- Description for a logical tributary AID: - Abnormal condition, cross-connect loopback active - Abnormal condition, test access session active
- Description for a system AID: - Abnormal condition, System operates in maintenance mode - Abnormal condition, Autonomous event forwarding is inhibited.

Protection Switch related Conditions:

Refer to the definition of the **conddescr** parameter in the Output parameters section of the Protection group chapter.

6. condtype – Condition Type

ASAP related conditions:

For events which belong to an ASAP profile, refer to the definition of the **condtype** parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.

TCA related condition types:

Refer to the definition of the condtype parameter in the Output parameters section of the [“TCA notification” \(9-19\)](#) chapter.

Abnormal condition types:

This parameter identifies the type of event indication being reported.

Type: inner string with the Format: ABN-<abntype>

Range:

- ABN-INHSWPR: Inhibited switch to protection (forced switch to working or lockout protection)
- ABN-INHSWWKG: Inhibited switch to working (forced switch to protection or lockout working)
- ABN-SYNC : Holdover or Free-run synchronization mode
- ABN-LPBKNETWORK: Loopback, Network

- ABN-MAINTENANCE: System operates in maintenance mode
 - ABN-INHMSG: Autonomous event forwarding from NE to EMS is inhibited for all currently established sessions
 - ABN-TESTACC: Test access session has been setup.
- Protection Switch related Condition Types:
Refer to the definition of the *condtype* parameter in the Output parameters section of the Protection group chapter.
7. ocrdat – Occurrence Date
Refer to the definition of the *ocrdat* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
 8. ocrtm – Occurrence Time
Refer to the definition of the *ocrtm* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
 9. thlev – Threshold Level
This parameter is only used for Threshold Crossing Alerts (TCAs). It reports the threshold level value which is set by ED-TCA-PROF.
The two applicable thresholding methods (tcamd) must be distinguished. For TR-only mode:
 - the raise TCA threshold value is reported.For TR-RTR mode:
 - the raise TCA threshold value is reported for the raise event
 - the reset TCA threshold value is reported for the clear event.Type: integer.
Range: >1 (1 ... 4294967295). Leading zeros will be suppressed.
 10. tmper – Time Period
This parameter reports the monitored time interval. This parameter is only used for Threshold Crossing Alerts (TCAs).
Type: value set.
Range: 15-MIN, 1-DAY.

Detailed behavior description

If an alarm is provisioned as NA – Warning (ITU) / Not Alarmed (Telcordia), then the occurrence of that alarm is reported in a REPT EVT message. REPT EVT messages also occur when any such standing alarm clears and is used to report transient conditions.

REPT EVT: Report event

A standing condition is an alarm event that has a beginning and an end. When the event begins, the standing condition is declared via an autonomous message. When the event ends, an autonomous message is sent to indicate that the event cleared.

A transient condition only results in one autonomous message – a declaration that a specific transient condition occurred.

Autonomous performance monitoring (PM) threshold crossing alert (TCA) messages are provided to the OS using the REPT EVT TL1 message.

LambdaUnite[®] MSS supports two thresholding methods:

1. TR-only (also known as the implicit reset method). Then the TCA is a transient one – it is reported when the threshold is crossed. Because it is transient, there is no report when it clears (TC only).
2. TR-RTR (also known as the explicit reset method). Then the TCA has a standing condition, this means it has a beginning and an end (SC and CL).

The severity of a TCA is not provisionable. It is always NA – warning (ITU) / not alarmed (Telcordia) which implies TCA messages are always reported via REPT EVT.

Protection switching messages are provided to the OS using the REPT EVT TL1 message.

The REPT EVT message reports updates of the protection states.

Abnormal Condition messages are provided to the OS using the REPT EVT TL1 message.

The REPT EVT message reports updates of the abnormal condition states. The abnormal condition is always a standing condition, this means it has a beginning and an end (SC and CL).

The severity of a ABN condition is not provisionable. It is always NA - warning (ITU) / not alarmed (Telcordia) which implies ABN messages are always reported via REPT EVT.

Example input/output

The following example shows an autonomous message REPT EVT for an LOS Alarm which has a severity NA assigned:

```
LT-UNITE-123 00-01-01 08:00:00
A 003 REPT EVT 0C48
```

```
"1-1-#-#-3-1:AIS-L,SC,01-01,07-59-59:\\"Communication-  
Transport, 0C48 port, Alarm Indication Signal\\"" ;
```

The following example shows an autonomous message REPT ALM for an LOS Alarm clear which has a severity NA assigned:

```
LT-UNITE-123 00-01-01 08:00:00  
A 003 REPT EVT 0C48  
"1-1-#-#-3-1:AIS-L,CL,01-01,07-59-59:\\"Communication-  
Transport, 0C48 port, Alarm Indication Signal-cleared\\"" ;
```

Note: Examples for the other types of REPT EVT e.g. TCAs and protection switches are described in other sections which describes the specifics of the area to which the events belongs to (e.g. performance monitoring, protection switching).

Related TL1 messages

- [“ALW-MSG: Allow message” \(5-33\)](#)
- [“ED-ASAP-PROF: Edit alarm severity assignment profile” \(6-20\)](#)
- [“INH-MSG: Inhibit message” \(5-31\)](#)
- [“REPT ALM: Report alarm” \(6-44\)](#)
- [“REPT-ALM-ENV: Report Alarm Environment” \(6-72\)](#)
- [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#)
- [“RTRV-COND: Retrieve condition” \(6-37\)](#)

References GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network Maintenance: NE and Transport Surveillance Messages.



Alarm log

Overview

Purpose This section comprises messages to handle alarm logs.

Contents

RTRV-LOG-ALM: Retrieve log alarm	6-54

RTRV-LOG-ALM: Retrieve log alarm

The RTRV-LOG-ALM command retrieves the alarm log.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
Priority: 1
Abortable: Yes

Input format Command Syntax:
RTRV-LOG-ALM:*tid*::*ctag*::[*startdate*],[*starttime*],[*replytype*];

Input parameters

Command parameters

1. tid – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. ctag – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. startdate – Start Date
The date for the starting point of the report. If both startdate and starttime are omitted, the entire log is retrieved. Both startdate and starttime must be specified, or both must be omitted.
Type: value set of the format YY-MM-DD.
Range: Y, M, D are digits. Leading zeros are not suppressed. YY represents the last two digits of the year, MM the month, DD the day.

RTRV-LOG-ALM: Retrieve log alarm

4. **starttime** – Start Time
 The time for the starting point of the report. If both **startdate** and **starttime** are omitted, the entire log is retrieved. Both **startdate** and **starttime** must be specified, or both must be omitted.
 Type: value set of the format HH-MM-SS.
 Range: H, M, S are digits. Leading zeros are not suppressed. HH represents the hours, MM the minutes, SS the seconds.
5. **replytype** – Type of Reply
 This parameter defines the kind of log retrieving.
 Type: alphanumeric value set.
 Range: BROWSE User Browsing. If the requested **startdate** and **starttime** is in the log, those entries and any subsequent log entries are returned. If the requested **startdate** and **starttime** is NOT in the log, the first log entry in the log with a timestamp later than the **startdate** and **starttime** plus subsequent log entries will be returned.
 DBSYNC Management system. If the requested **startdate** and **starttime** is in the log, those entries and any subsequent log entries are returned. If the requested **startdate** and **starttime** is NOT in the log, an SNVS error response is returned.
 Default: BROWSE, if the parameter is omitted.

Output format Normal completion response of successful session termination

The following example shows the successful completion of the RTRV-LOG-ALM command by the NE:

```

sid date time
M ctag COMPLD
  "aid,aidtype:[ntfcncde],condtype,[srveff],
  ocrdat,ocrtm,[condeff][:conddescr]"
  ...
  "aid,aidtype:[ntfcncde],condtype,[srveff],
  ocrdat,ocrtm,[condeff][:conddescr]"
;
```

The output parameters **sid**, **date**, **time**, and **ctag** included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid – Access Identifier
Refer to the definition of the *aid* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
2. aidtype – Access Identifier Type
Refer to the definition of the *aidtype* parameter in the [“RTRV-COND: Retrieve condition” \(6-37\)](#) command.
3. ntfncde – Notification Code
This is the alarm severity (alarm level).
Type: alphanumeric value set.
Range:
 - CR - Critical (ITU / Telcordia)
 - MJ - Major (ITU / Telcordia)
 - MN - Minor (ITU / Telcordia)
 - SC - Standing condition – Warning (ITU) / not alarmed (Telcordia)
 - CL - ClearedThe abnormal condition is always a standing condition, this means it has a beginning and an end (SC and CL). The severity of a abnormal condition is not provisionable. It is always NA - warning (ITU) / not alarmed (Telcordia) which implies ABN messages are always reported via REPT EVT.
4. condtype – Condition Type
Refer to the definition of the *condtype* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
For ABN conditions see definition of *condtype* in the Output parameters section of [“REPT EVT: Report event” \(6-47\)](#).
5. srveff – Service Effect
Refer to the definition of the *srveff* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
Abnormal condition event messages are always handled as NSA.

RTRV-LOG-ALM: Retrieve log alarm

6. *ocrdat* – Occurrence Date
Refer to the definition of the *ocrdat* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
7. *ocrtm* – Occurrence Time
Refer to the definition of the *ocrtm* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
8. *conddescr* – Description of the Condition
Refer to the definition of the *conddescr* parameter in the output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
For ABN conditions see definition of *conddescr* in the Output parameters section of [“REPT EVT: Report event” \(6-47\)](#).

Detailed behavior description

This log gives the user a history and time sequence of all of the most recent alarm detected by the system regarding equipment or facilities attached to the system.

TCAs are not stored within the alarm log.

The RTRV-LOG-ALM command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful completion of the RTRV-LOG-ALM command by the NE:

```
RTRV-LOG-ALM:LT-UNITE-123::123456::;
  LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
  "1-1-#-#-3-1,0C48:CR,LOS,SA,01-01,07-29-13:
  \"Communication-Transport, 0C48 port, LOS of Signal\"";
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the RTRV-LOG-ALM command.

Validation rule: no matching log entry

There is at least one matching log entry for the specified *startdate* and *starttime* if replytype equals DBSYNC.

RTRV-LOG-ALM: Retrieve log alarm

Error code: SNVS - Status, Not in Valid State, no matching log entry

Related TL1 messages

- [“RTRV-ALM: Retrieve alarm” \(6-30\)](#)
- [“RTRV-LOG-NTFCN: Retrieve notification Log” \(5-60\)](#)

References GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network Maintenance: NE and Transport Surveillance Messages.



MDI

Overview

Purpose This section presents information about the TL1 commands related to MDI.

Contents

RTRV-ALM-ENV: Retrieve alarm environment	6-60
RTRV-ATTR-ENV: Retrieve attribute environment	6-64
SET-ATTR-ENV: Set attribute environment	6-68
SET-ATTR-ENV notification	6-71
REPT-ALM-ENV: Report Alarm Environment	6-72



RTRV-ALM-ENV: Retrieve alarm environment

The RTRV-ALM-ENV command retrieves active environmental alarms of the severity CR, MJ, MN (Critical, Major, or Minor (ITU/Telcordia)).

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-ALM-ENV:*tid*:[*aid*]:*ctag*::[*ptfcncde*],[*almtype*];

Input parameters

Command parameters

1. *tid* – Target Identifier
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *aid* – Access Identifier
 This is the address of the MDI port entities for which an alarm condition or the configuration is being reported. If *misc_inall* is specified the information for all entities will be retrieved.
 Type: AID.
 Range: Miscellaneous_in_discreteAID.
 Default: *misc_inall* (if the *aid* is omitted).
3. *ctag* – Correlation Tag
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. *ntfcncde* – Notification Code
 Refer to the *ntfcncde* parameter definition in the input parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#)
5. *almtype* – Alarm Type
 This parameter identifies the type of alarm indication being reported.
 Type: alphanumeric value set.
 Range: MISC (default), an event that applies to the miscellaneous discrete outputs inputs.

Output format The following example shows the successful completion of the RTRV-ALM-ENV command by the NE:

RTRV-ALM-ENV: Retrieve alarm environment

```

      sid date time
M   ctag COMPLD
      "aid:ntfcncde,almttype,ocrdat,ocrtm[,almmsg]"
      (0 or more lines of the above)
;

```

If no alarms are raised only COMPLD will be returned. Applicable output lines are ordered by the value of occurrence date (ocrdat) and occurrence time (ocrtm), with the most recent alarm listed first.

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid – Access Identifier
This is the address of the entity for which an alarm condition is being reported.
Type: AID.
Range: Miscellaneous_in_discreteAID. The AID misc_inall must not appear.
2. almttype – Alarm Type
Refer to the *almttype* parameter in the input parameters section of [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#).
3. ntfcncde – Notification Code
Refer to the *ntfcncde* parameter in the output parameters section of [“RTRV-ALM: Retrieve alarm” \(6-30\)](#).
4. ocrdat – Occurrence Date
See definition of *ocrdat* in the output parameters section of [“RTRV-ALM: Retrieve alarm” \(6-30\)](#).

RTRV-ALM-ENV: Retrieve alarm environment

5. **ocrtm** – Occurrence Time
See definition of **ocrtm** in the output parameters section of [“RTRV-ALM: Retrieve alarm” \(6-30\)](#).
6. **almmsg** – Alarm Message
A string describing the alarm of the environmental point.
Note: This string is configurable by the SET-ATTR-ENV command.
Type: text string.
Range: upper and lower case, up to 32 characters.
Default: Miscellaneous Discrete.

Detailed behavior description

Any environmental alarm reported by an autonomous REPT ALM ENV message, which is active when a RTRV-ALM-ENV message is received, is included in the RTRV-ALM-ENV response message.

Environmental alarms of severity NA (warning (ITU) / not alarmed (Telcordia)) are not included in a RTRV-ALM-ENV response. They are included in the RTRV-COND response.

Example input/output

The following example shows the successful completion of the RTRV-ALM-ENV command by the NE:

```
RTRV-ALM-ENV:LT-UNITE-123::123456;
  LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
  "MISC_IN7:MJ,MISC,01-01,07-49-23,\"Miscellaneous
  Discrete #7\"
  "MISC_IN5:MN,MISC,01-01,06-32-25,\"stairway 5
  temperature\"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the RTRV-ALM-ENV command.

Related TL1 messages

- [“ALW-MSG: Allow message” \(5-33\)](#)
- [“ED-ASAP-PROF: Edit alarm severity assignment profile” \(6-20\)](#)
- [“INH-MSG: Inhibit message” \(5-31\)](#)
- [“REPT ALM: Report alarm” \(6-44\)](#)

RTRV-ALM-ENV: Retrieve alarm environment

- [“REPT-ALM-ENV: Report Alarm Environment” \(6-72\)](#)
- [“REPT EVT: Report event” \(6-47\)](#)
- [“RTRV-ALM: Retrieve alarm” \(6-30\)](#)
- [“RTRV-COND: Retrieve condition” \(6-37\)](#)
- [“SET-ATTR-ENV: Set attribute environment” \(6-68\).](#)

References GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network Maintenance: Network Element and Transport Surveillance Messages.



RTRV-ATTR-ENV: Retrieve attribute environment

The RTRV-ATTR-ENV command is used to retrieve the alarm message, name and assigned ASAP of a miscellaneous discrete input (MDI/environmental point).

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-ALM-ENV:*tid*:[*aid*]:*ctag*;

Input parameters

Command parameters

- *tid* – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
- *aid* – Access Identifier
Refer to the *aid* parameter in the input parameters section of [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#).
- *ctag* – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format The following example shows the successful completion of the RTRV-ATTR-ENV command by the NE:

```
sid date time
M ctag COMPLD
  "aid:,,envmsg,envname:pfname,envinv"
  (more lines for default AID)
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters**Command parameters**

1. aid – Access Identifier
Refer to the *aid* parameter in the output parameters section of [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#).
2. envinv – Environmental Alarm Inversion
This parameter indicates for the MDI (environmental point) whether an alarm shall be generated if the port is on or if the port is off.
Type: alphanumeric value set.
Range:
 - YES: The alarm will be inverted
 - NO: The alarm will be not inverted.
3. envmsg – Environment Message
This is the condition description which is associated with the MDI port (environmental point). This description will be sent with the alarm generated from the MDI port.
Type: inner string.
Range: a string up to 32 characters, any character except “ and \, upper and lower cases are considered.
Default: Miscellaneous Discrete #<N> with N = 1 .. 8 for the different MDI ports.
4. envname – Environmental Point Name
This is the name associated to a MDI port (environmental point). It is a description which can be retrieved by the management system. It is not to be mixed up with the envmsg parameter. The envname is just a name of the MDI port and not reported via the condition description of an alarm.
Type: inner string
Range: a string up to 26 characters, any character except “ and \, upper and lower cases considered.
Default: MDI port #n; n is the number of the port 1 ... 8.
5. pfname – Profile Name
This is the name of the ASAP that is assigned to the MDI port (environmental point). The ASAP must be of the type ENV.
Type: alphanumeric character string. A hyphen (-) is additional allowed in the name.
Range: string up to 24 characters.
Default: DEFAULT.

RTRV-ATTR-ENV: Retrieve attribute environment

Detailed behavior description

The RTRV-ATTR-ENV command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful completion of the RTRV-ATTR-ENV command by the NE:

```
RTRV-ATTR-ENV:LT-UNITE-123:misc_in3:123456;
LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
"MISC_IN3:,,\"smoke detected on detector 3\", \"smoke
detector 3\":ENV_CR,NO"
;
```

The following example shows the successful completion of the RTRV-ATTR-ENV command by the NE if all MDI's will be retrieved:

```
RTRV-ATTR-ENV:LT-UNITE-123::123456;
LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
"MISC_IN1:,,\"pump on\":ENV_NA,NO"
"MISC_IN2:,,\"smoke detected on detector 1\", \"smoke
detector 1\":ENV_CR,NO"
"MISC_IN3:,,\"smoke detected on detector 2\", \"smoke
detector 2\":ENV_CR,NO"
"MISC_IN4:,,\"smoke detected on detector 3\", \"smoke
detector 3\":ENV_CR,NO"
"MISC_IN5:,,\"smoke detected on detector 4\", \"smoke
detector 4\":ENV_CR,NO"
"MISC_IN6:,,\"fan on\", \"fan\":ENV_NA,YES"
"MISC_IN7:,,\"open door\", \"door\":DEFAULT,YES"
"MISC_IN8:,,\"open door\", \"door 2\":DEFAULT,YES"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the RTRV-ATTR-ENV command.

Related TL1 messages

- [“REPT-ALM-ENV: Report Alarm Environment” \(6-72\)](#)
- [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#)
- [“SET-ATTR-ENV: Set attribute environment” \(6-68\).](#)

MDI

TL1 messages - fault management

RTRV-ATTR-ENV: Retrieve attribute
environment

References GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network
Maintenance: Network Element and Transport Surveillance Messages.



SET-ATTR-ENV: Set attribute environment

ET-ATTR-ENV: Set Attribute Environment The SET-ATTR-ENV command can be used to set the alarm message, name and assigned ASAP of an miscellaneous discrete input (MDI/environmental point).

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
Priority: 1
Abortable: No

Input format Command Syntax: SET-ALM-ENV:*tid:aid:ctag::,almmsg,envname:spec_block*;

Input parameters

Command parameters

- tid – Target Identifier
See definition of [“RTRV-HDR: Retrieve header”](#) (5-8).
- aid – Access Identifier
Refer to the *aid* parameter in the input parameters section of [“RTRV-ALM-ENV: Retrieve alarm environment”](#) (6-60).
- ctag – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header”](#) (5-8).
- almmsg – Alarm Message
Refer to the definition of the *envmsg* parameter in [“RTRV-ATTR-ENV: Retrieve attribute environment”](#) (6-64).
- envname – Environmental Point Name
Refer to the definition of the *envname* parameter in [“RTRV-ATTR-ENV: Retrieve attribute environment”](#) (6-64).

Spec block parameters

- envinv – Environmental Alarm Inversion
Refer to the definition of the *envinv* parameter in [“RTRV-ATTR-ENV: Retrieve attribute environment”](#) (6-64).
- pname – Profile Name
Refer to the definition of the *pfname* parameter in [“RTRV-ATTR-ENV: Retrieve attribute environment”](#) (6-64).

SET-ATTR-ENV: Set attribute environment

Output format The following example shows the successful completion of the SET-ATTR-ENV command by the NE:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The SET-ATTR-ENV command updates the configuration of the almmmsg, envname, pfname of the via aid specified MDI port. The changes will be reported via a REPT DBCHG message. See definition of SET-ATTR-ENV notification.

Example input/output

The following example shows the successful completion of the SET-ATTR-ENV command by the NE:

```
SET-ATTR-ENV:LT-UNITE-123:MISC_IN7:123456::,"open
door","door":pfname=ENV_NM,envinv=YES;
LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the RTRV-ATTR-ENV command.

Validation Rule: *pfname* does not exist

An ASAP with the name pfname does not exist for an ASAP type ENV.

Error Code: IDNV - Input Data Not Valid, ASAP profile does not exist

Related TL1 messages

- [“ED-ASAP-PROF: Edit alarm severity assignment profile” \(6-20\)](#)
- [“ENT-ASAP-PROF: Enter alarm severity assignment profile” \(6-17\)](#)
- [“REPT-ALM-ENV: Report Alarm Environment” \(6-72\)](#)

SET-ATTR-ENV: Set attribute environment

- [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#)
- [“RTRV-ATTR-ENV: Retrieve attribute environment” \(6-64\).](#)

References GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network Maintenance: Network Element and Transport Surveillance Messages.



SET-ATTR-ENV notification

Output format The SET-ATTR-ENV notification has the following specific syntax:

SET-ATTR-ENV:*aid*,,*almmsg*,*envname*:*spec_block*;

Output parameters

Command parameters

- *aid* – Access Identifier
Refer to the *aid* parameter in the input parameters section of [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#).
- *almmsg* – Alarm Message
Refer to the definition of the *envmsg* parameter in [“RTRV-ATTR-ENV: Retrieve attribute environment” \(6-64\)](#).
- *envname* – Environmental Point Name
Refer to the definition of the *envname* parameter in [“RTRV-ATTR-ENV: Retrieve attribute environment” \(6-64\)](#).

Spec block parameters

- *envinv* – Environmental Alarm Inversion
Refer to the definition of the *envinv* parameter in [“RTRV-ATTR-ENV: Retrieve attribute environment” \(6-64\)](#).
- *pfname* – Profile Name
Refer to the definition of the *pfname* parameter in [“RTRV-ATTR-ENV: Retrieve attribute environment” \(6-64\)](#).

Example output The example shows a normal notification after an SET-ATTR-ENV Command:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:SET-ATTR-ENV:MISC_
IN7::,,\"open door\", \"door\":pfname=ENV_NM,envinv=YES"
;
```



REPT-ALM-ENV: Report Alarm Environment

The REPT ALM ENV autonomous messages report when environmental alarm of severity CR (critical), MJ (major), or MN (minor) either sets or clears.

Output format The general output format of the REPT ALM ENV message is defined as follows:

```
sid date time
almcde atag REPT ALM ENV
"aid:ntfcncde,almtype,ocrdat,ocrtm[,almmsg]"
(1 or more lines of the above)
;
```

Output parameters

Command parameters

1. almcde – Alarm Code
Refer to the [“REPT ALM: Report alarm” \(6-44\)](#) message.
2. atag – Automatic Tag
Refer to the [“REPT ALM: Report alarm” \(6-44\)](#) message.
3. aid – Access Identifier
Refer to the *aid* parameter in the output parameters section of [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#) command.
4. almtype – Alarm Type
Refer to the definition of the *almtype* parameter in the input parameters section of [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#) command.
5. ocrdat – Occurrence Date
See definition of *ocrdat* in the output parameters section of [“RTRV-ALM: Retrieve alarm” \(6-30\)](#).
6. ocrtm – Occurrence Time
See definition of *ocrtm* in the output parameters section of [“RTRV-ALM: Retrieve alarm” \(6-30\)](#).
7. almmsg – Alarm Message
Refer to the definition of the *almmsg* parameter in the output parameters section of [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#).

**Detailed behavior
description**

REPT ALM ENV messages will be reported if on environmental points (MDI's) an alarm of severity CR (critical), MJ (major), or MN (minor) will be raised.

An alarm reported to the OS via the REPT ALM ENV message has a corresponding REPT ALM ENV clearance message that is generated when the alarm condition clears.

An environmental alarm of severity NA (warning (ITU) / not alarmed (telcordia) will be reported by REPT EVT.

Example input/output

The following example shows a REPT ALM ENV message if an environmental alarm appears:

```
LT-UNITE-123 00-01-01 08:00:00
*C 126 REPT ALM ENV
"MISC_IN7:CR,MISC,01-01,07-29-13,\"open door\""
```

;

The following example shows a REPT ALM ENV message if an environmental alarm disappears:

```
LT-UNITE-123 00-01-01 08:00:00
A 127 REPT ALM ENV
"MISC_IN7:CL,MISC,01-01,07-29-13,\"open door\""
```

;

Related TL1 messages

- [“ALW-MSG: Allow message” \(5-33\)](#)
- [“ED-ASAP-PROF: Edit alarm severity assignment profile” \(6-20\)](#)
- [“INH-MSG: Inhibit message” \(5-31\)](#)
- [“REPT ALM: Report alarm” \(6-44\)](#)
- [“REPT EVT: Report event” \(6-47\)](#)
- [“REPT SW: Report switch” \(8-133\)](#)
- [“RTRV-ALM: Retrieve alarm” \(6-30\)](#)
- [“RTRV-ALM-ENV: Retrieve alarm environment” \(6-60\)](#)
- [“RTRV-COND: Retrieve condition” \(6-37\)](#)
- [“SET-ATTR-ENV: Set attribute environment” \(6-68\)](#)

References GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network
Maintenance: Network Element and Transport Surveillance Messages.



MDO

Overview

Purpose This section presents information about the TL1 commands related to MDO.

Contents

RTRV-ATTR-CONT: Retrieve attribute control	6-76
RTRV-ACTL-CONT: Retrieve actual condition types	6-80
RTRV-EXT-CONT: Retrieve external control	6-83
SET-ATTR-CONT: Set attribute control	6-86
SET-ATTR-CONT notification	6-89
OPR-EXT-CONT: Operate External Control	6-90
OPR-EXT-CONT notification	6-92
RLS-EXT-CONT: Release external control	6-93
RLS-EXT-CONT notification	6-95



RTRV-ATTR-CONT: Retrieve attribute control

The RTRV-ATTR-CONT command can be initiated by users to retrieve the configuration associated with an miscellaneous output control (MDO port / external discrete control). The assigned descriptions are used for information purposes when a user seeks to operate or release external miscellaneous discrete controls.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-ATTR-CONT:*tid*:[*aid*]:*ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
 This is the address of the MDO port entities on which the command operates. If misc_outall is specified the configuration of all MDO's will be retrieved.
 Type: AID
 Range: Miscellaneous_out_discreteAID
 Default: misc_outall (if the *aid* is omitted).
3. ctag – Correlation Tag
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format The following example shows the successful completion of the RTRV-ATTR-CONT command by the NE:

```
sid date time
M ctag COMPLD
  "aid:contmsg,durmode,initcstat,[asgncond]"
  ...
  "aid:contmsg,durmode,initcstat,[asgncond]"
;
```

RTRV-ATTR-CONT: Retrieve attribute
control

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid - Access Identifier
This is the address of the MDO port entity for which the configuration is retrieved or on which an operation is performed.
Type: AID.
Range: Miscellaneous_out_discreteAID. misc_outall must not be reported or used.
2. contmsg - Control Message
This is the name associated to a MDO port (environmental control). It is a description which can be retrieved by the management system.
Type: inner string.
Range: string up to 26 characters, any character except " and \, upper and lower cases considered. A empty string is allowed. The value would be \".
Default: MDO port #n. n is the number of the port 1 ... 8.
3. durmode - Duration Mode
This parameter defines in which mode the device connected to the MDO is expected to be operated. It is a fixed value because this feature will be not supported by the system. This parameter is in for compatibility reason. The system operates only continuous that means if the MDO is operated it is switched on and it is released it is switched off.
Type: alphanumeric value set.
Range: CONTS, continuous duration.

RTRV-ATTR-CONT: Retrieve attribute control

4. **initcstat - Initial Control State**
 This parameter defines the state the MDO must have in order to put the connected device in the "off"-state. For UNITE it is a fixed value because this feature will be not supported. This parameter is in for compatibility reason.
 Type: alphanumeric value set.
 Range: RLS, release.
5. **asgncond - Assigned Condition Type**
 This parameter identifies the probable cause (type of alarm indication) which is assigned to an MDO port (external control). If one or more alarm(s) of this probable cause appears then the MDO port (external control) will be switched on.
 Type: alphanumeric value set. Additionally a "-" will be allowed (not the first character).
 Range: All defined probable causes and UNDEF: if no probable cause is assigned. For the value range of *asgncond* refer to ["Alarm, event, ASAP tables" \(6-96\)](#).
 Default: UNDEF.

Detailed behavior description

The RTRV-ATTR-CONT command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful completion of the RTRV-ATTR-CONT command by the NE:

```
RTRV-ATTR-CONT:LT-UNITE-123:MISC_OUT3:123456;
LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
"MISC_OUT3:\"fan 3\",CONTS,RLS,FANF"
;
```

The following example shows the successful completion of the RTRV-ATTR-CONT command by the NE if the aid is omitted:

```
RTRV-ATTR-CONT:LT-UNITE-123::123456;
LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
"MISC_OUT2:\"sprinkler 2\",CONTS,RLS"
"MISC_OUT3:\"fan 3\",CONTS,OPER,FANF"
;
```

RTRV-ATTR-CONT: Retrieve attribute control

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the RTRV-ATTR-ENV command.

Related TL1 messages

- [“OPR-EXT-CONT: Operate External Control” \(6-90\)](#)
- [“RLS-EXT-CONT: Release external control” \(6-93\)](#)
- [“RTRV-ALM: Retrieve alarm” \(6-30\)](#)
- [“RTRV-ACTL-CONT: Retrieve actual condition types” \(6-80\)](#)

References GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network Maintenance: Network Element and Transport Surveillance Messages.



RTRV-ACTL-CONT: Retrieve actual condition types

The RTRV-ACTL-CONT command can be initiated by users to retrieve the available condition types which can be assigned to an miscellaneous output control (MDO port / external discrete control).

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
Priority: 1
Abortable: Yes.

Input format Command Syntax: RTRV-ACTL-CONT:*tid*::*ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. ctag – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format The following example shows the successful completion of the RTRV-ACTL-CONT command by the NE:

```
sid date time
M ctag COMPLD
  "pftype:condtype:condinfo"
  ...
  "pftype:condtype;condinfo"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

RTRV-ACTL-CONT: Retrieve actual condition types

Output parameters

Command parameters

1. pftype - Profile Type
See definition of [“RTRV-ASAP-PROF: Retrieve ASAP profile” \(6-9\)](#).
2. condtype – Condition Type
See definition of [“RTRV-ALM: Retrieve alarm” \(6-30\)](#).
3. condinfo - Information Of The Condition
This is a textual description of the condition.
Type: inner string of the format: \<category>, \<description>
Range: category: is the category; description: is the alarm description, the string is up to 32 characters.
For the values of category and description refer to [“Alarm, event, ASAP tables” \(6-96\)](#).

Detailed behavior description

The RTRV-ACTL-CONT command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful completion of the RTRV-ATCL-CONT command by the NE if the aid is omitted:

```
RTRV-ACTL-CONT:LT-UNITE-123::123456;
    LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
    "PORT:OCHLOF: \"Communication-Transport, 0Ch Loss of
    Frame\"""
    "PORT:PREDCMLOS: \"Communication-Transport, Pre DCM
    Signal Loss\"""
    ...
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the RTRV-ATCL command.

Related TL1 messages

- [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#)
- [“SET-ATTR-CONT: Set attribute control” \(6-86\)](#)

RTRV-ACTL-CONT: Retrieve actual
condition types

- [“OPR-EXT-CONT: Operate External Control” \(6-90\)](#)
- [“RLS-EXT-CONT: Release external control” \(6-93\)](#)
- [“RTRV-ALM: Retrieve alarm” \(6-30\).](#)



RTRV-EXT-CONT: Retrieve external control

The RTRV-EXT-CONT command instructs an NE to send the control state of MDO ports (external controls). The command can be used to audit the result of an OPR-EXT-CONT or a RLS-EXT-CONT command.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
 Priority: 1
 Abortable: Yes.

Input format Command Syntax: RTRV-EXT-CONT:*tid*:[*aid*]:*ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *aid* – Access Identifier
 Refer to the *aid* parameter in the Input parameters section of the [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#).
3. *ctag* – Correlation Tag
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format The following example shows the successful completion of the RTRV-EXT-CONT command by the NE:

```
sid date time
M ctag COMPLD
  "aid:,dur,contstate"
  ...
  "aid:,dur,contstate"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

RTRV-EXT-CONT: Retrieve external control

Output parameters**Command parameters**

1. aid – Access Identifier
Refer to the *aid* parameter in the output parameters section of [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#) command.
2. dur – Duration
Refer to the *durmode* parameter in the output parameters section of the [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#) command.
3. contstate – Control State
This is the state of the MDO (external control)
Type: alphanumeric value set.
Range:
 - OPER - Operated, that means the MDO is switched on
 - RLS - Released (default), that means the MDO is switched off.

Detailed behavior description

The RTRV-EXT-CONT command does not generate a REPT DBCHG message.

Example input/output

The following example shows the successful completion of the RTRV-EXT-CONT command by the NE:

```
RTRV-EXT-CONT:LT-UNITE-123:MISC_OUT3:123456;
LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
"MISC_OUT3: ,CONTS,RLS"
;
```

The following example shows the successful completion of the RTRV-EXT-CONT command by the NE if the aid is omitted:

```
RTRV-EXT-CONT:LT-UNITE-123::123456;
LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
"MISC_OUT1: ,CONTS,RLS"
"MISC_OUT2: ,CONTS,OPER"
"MISC_OUT3: ,CONTS,OPER"
"MISC_OUT4: ,CONTS,RLS"
```

RTRV-EXT-CONT: Retrieve external control

```
"MISC_OUT5: ,CONTS,RLS"  
"MISC_OUT6: ,CONTS,OPER"  
"MISC_OUT7: ,CONTS,RLS"  
"MISC_OUT8: ,CONTS,RLS"  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the RTRV-EXT-CONT command.

Related TL1 messages

- [“OPR-EXT-CONT: Operate External Control” \(6-90\)](#)
- [“RLS-EXT-CONT: Release external control” \(6-93\)](#).

References GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network Maintenance: Network Element and Transport Surveillance Messages.



SET-ATTR-CONT: Set attribute control

The SET-ATTR-CONT command can be initiated by users to set the description associated with an MDO port (Miscellaneous Discrete Output / external discrete control).

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
Priority: 1
Abortable: No.

Input format Command Syntax: SET-ATTR-CONT:*tid:aid:ctag::contmsg[,asgcond]*;

Input parameters

Command parameters

1. tid – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
Refer to the *aid* parameter in the Input parameters section of the [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#).
3. ctag – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. contmsg – Control Message
This is the name associated to a MDO port (environmental control).
Type: text string
Range: A string of up to 26 characters, any character except “ and \, upper and lower cases considered. An empty string is allowed. The value would be “”.
5. asgncnd – Assigned Condition Type
Refer to the *asgncnd* parameter in the output parameters section of the [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#) command. If the value is omitted, then the actual value shall not be changed.

Output format The following example shows the successful completion of the SET-ATTR-CONT command by the NE:

```
sid date time
```

SET-ATTR-CONT: Set attribute control

```
M  ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The name of a MDO via the aid specified will be updated according to the value of *contmsg*. The update will be reported via a SET-ATTR-CONT - REPT DBCHG message. Refer to the definition of the SET-ATTR-CONT notification.

Example input/output

The following example shows the successful completion of the SET-ATTR-CONT command by the NE:

```
SET-ATTR-CONT:LT-UNITE-123:MISC_OUT3:123456:,"fan
3",,FANF;
LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
;
```

The following example shows the successful completion of the SET-ATTR-CONT command by the NE if the *asgncond* parameter will be unchanged:

```
SET-ATTR-CONT:LT-UNITE-123:MISC_OUT3:123456:,"fan 3";
LT-UNITE-123 00-01-01 08:00:00
M 123456 COMPLD
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the SET-ATTR-CONT command.

Related TL1 messages

- [“RTRV-ACTL-CONT: Retrieve actual condition types” \(6-80\)](#)
- [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#)
- [“OPR-EXT-CONT: Operate External Control” \(6-90\)](#)
- [“RLS-EXT-CONT: Release external control” \(6-93\)](#).

SET-ATTR-CONT: Set attribute control

References GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network Maintenance: Network Element and Transport Surveillance Messages.



SET-ATTR-CONT notification

Output format See definition of [“REPT DBCHG: Report data base change” \(5-67\)](#).

The SET-ATTR-CONT notification has the following specific syntax:

SET-ATTR-CONT:*aid::contmsg,,asgncond*

Output parameters

Command parameters

1. *aid* – Access Identifier
Refer to the *aid* parameter in the output parameters section of the [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#).
2. *contmsg* – Control Message
Refer to the *contmsg* parameter in the output parameters section of the [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#).
3. *asgncond* – Assigned Condition Type
Refer to the *asgncond* parameter in the output parameters section of the [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#) command.

Example output The example shows a normal SET-ATTR-CONT notification:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:SET-ATTR-CONT:MISC_
OUT3::\"fan 3\",,FANF"
;
```



OPR-EXT-CONT: Operate External Control

The OPR-EXT-CONT operates a MDO port (Miscellaneous Discrete Output / external discrete control), i.e. switches on the MDO port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
Priority: 1
Abortable: No

Input format Command Syntax: OPR-EXT-CONT:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *aid* – Access Identifier
Refer to the *aid* parameter in the Input parameters section of the [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#).
3. *ctag* – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format The following example shows the successful completion of the OPR-EXT-CONT command by the NE:

```
sid date time
M ctag COMPLD
;
```

If the OPR-EXT-CONT command does not alter the existing attributes, i.e., the control referenced by the *aid* is already operated, the NE will not deny the command. The system will respond with the completion message shown above.

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

OPR-EXT-CONT: Operate External Control

Detailed behavior description

If no probable cause is assigned to the MDO port the command changes the state of the MDO specified via aid to "switched on", i.e. the MDO port will be activated.

The update will be reported via a OPR-EXT-CONT - REPT DBCHG message. Refer to the definition of the OPR-EXT-CONT notification.

Example input/output

The following example shows the successful completion of the OPR-EXT-CONT command by the NE:

```
OPR-EXT-CONT:LT-UNITE-123:MISC_OUT3:123456;  
    LT-UNITE-123 00-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the ["RTRV-HDR: Retrieve header" \(5-8\)](#) command error responses section. The error responses listed there also apply to the OPR-EXT-CONT command.

Validation: probable cause assigned to MDO port

A probable cause is assigned to the MDO port. This command will be not performed.

Error Code: SDNC - Status, Data Not Consistent, asgncond not empty

Related TL1 messages

- ["RTRV-ATTR-CONT: Retrieve attribute control" \(6-76\)](#)
- ["SET-ATTR-CONT: Set attribute control" \(6-86\)](#)
- ["RLS-EXT-CONT: Release external control" \(6-93\)](#).

References

GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network Maintenance: Network Element and Transport Surveillance Messages.



OPR-EXT-CONT notification

Output format The OPR-EXT-CONT notification has the following specific syntax:

OPR-EXT-CONT:*aid*

Output parameters

Command parameters

1. aid – Access Identifier

Refer to the *aid* parameter in the output parameters section of the [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#).

Example output The example shows a normal OPR-EXT-CONT notification:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:OPR-EXT-CONT:MISC_OUT3"
;
```



RLS-EXT-CONT: Release external control

The RLS-EXT-CONT releases a MDO port (Miscellaneous Discrete Output / external discrete control), i.e. switches off the MDO port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
 Priority: 1
 Abortable: No

Input format Command Syntax: RLS-EXT-CONT:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *aid* – Access Identifier
 Refer to the *aid* parameter in the Input parameters section of the [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#).
3. *ctag* – Correlation Tag
 See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format The following example shows the successful completion of the RLS-EXT-CONT command by the NE:

```
sid date time
M ctag COMPLD
;
```

If the RLS-EXT-CONT command does not alter the existing attributes, i.e., the control referenced by the *aid* is already released, the NE will not deny the command. The system will respond with the completion message shown above.

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

RLS-EXT-CONT: Release external control

Detailed behavior description

If no probable cause is assigned to the MDO port the command changes the state of the MDO specified via aid to "switched off", i.e. the MDO port will be deactivated.

The update will be reported via a RLS-EXT-CONT - REPT DBCHG message. Refer to the definition of the RLS-EXT-CONT notification.

Example input/output

The following example shows the successful completion of the RLS-EXT-CONT command by the NE:

```
RLS-EXT-CONT:LT-UNITE-123:MISC_OUT3:123456;  
    LT-UNITE-123 00-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the RLS-EXT-CONT command.

Validation: probable cause assigned to MDO port

A probable cause is assigned to the MDO port. This command will be not performed.

Error Code: SDNC - Status, Data Not Consistent, asgncond not empty

Related TL1 messages

- [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#)
- [“SET-ATTR-CONT: Set attribute control” \(6-86\)](#)
- [“RLS-EXT-CONT: Release external control” \(6-93\)](#)

References

GR-833-CORE, Issue 4, June 2000, OTGR Section 12.3, Network Maintenance: Network Element and Transport Surveillance Messages.



RLS-EXT-CONT notification

Output format The RLS-EXT-CONT notification has the following specific syntax:

RLS-EXT-CONT:*aid*

Output parameters

Command parameters

1. aid – Access Identifier
Refer to the *aid* parameter in the output parameters section of the [“RTRV-ATTR-CONT: Retrieve attribute control” \(6-76\)](#) command.

Example output The example shows a normal RLS-EXT-CONT notification:

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:RLS-EXT-CONT:MISC_OUT3"
;
```



Alarm, event, ASAP tables

Overview

Purpose This section describes which alarms and events in the system can occur.

For each possible alarm following will be described:

condtype

The *condtype*, it represents the probable cause.

sa/nsa

States if it is service affecting (sa) or/and non service affecting (nsa).

conddescr

The *conddescr* related to the alarm. It is of the format:

1. \"<category>, <entity>, <description>, <additional text>\"
2. \"<category>, <entity>, <description>, <additional text>-cleared\".

If there is no additional text, then the trailing comma may be omitted.

The *conddescr* has two forms for persistent alarms:

1. It is used when the alarm is raised.
2. The string: "-cleared" is appended. It is used when the alarm will be cleared. Transient alarms uses only the first form.

The description in the tables below defines the text for each part of the *conddescr*. The leading and ending ' \" ' are omitted.

ASAP Parameter

The ASAP parameter which are used in the RTRV-ASAP-PROF, ED-ASAP-PROF, ENT-ASAP-PROF commands for the specific ASAP type.

The name of service affected related ASAP parameters starts with the prefix "sa_", for non service affected one with "nsa_". The prefix can be omitted if the one probable cause reports only for service affected or non service affected.

default severity

The default alarm severity which is assigned to the ASAP parameter.

Description

A description for explanation.

modifier/aidtype

The to the alarm related *modifier* and *aidtype*.

AID

The AIDs which can be reported related to the alarms. All wildcard aids like all must not be used.

Alarm duration

It describes if the alarm is a persistent one or a transient one.

There are separate ASAP parameter for sa and nsa alarms. There applicable each parameter will be described separately together with their default values.

The Alarms will be described per ASAP type.

Please refer also to other fragments of the TL1 documentation where REPT EVT messages related to this fragment will be defined.

Remark to TCA: The alarm level of threshold crossing alarms (TCA) shall always be “not alarmed”, and it is not user provisionable. The system shall not allow the user to change any attribute of TCA alarm through ASA profile. All the attributes, such as TCA reporting enable/disable, that will affect TCA reporting shall be handled by the TCA profile.

Contents

ASAP Type DCN	6-99
ASAP Type ENET	6-100
ASAP Type ENV	6-103
ASAP Type EQUIP-PROT	6-105
ASAP Type EQUIP-UNPROT	6-109
ASAP Type MSSPRING-BLSR	6-114
ASAP Type MSP-APS	6-117
ASAP Type PATH	6-119
ASAP Type PATHTERM	6-121
ASAP Type PORT	6-123
ASAP Type SNCP-UPSR	6-126

ASAP Type TIMING	6-127
Entity – ASAP relation	6-128

ASAP Type DCN

Properties of all alarms modifier/aidtype: COM

AID: SystemAID

Alarm duration: persistent.

condtype: PARARREP

sa/nsa: nsa

conddescr: Communication-DCN, DCN, Partitioned Area Repair

ASAP parameter: *pararrep* default severity: MN.

condtype: PROVINVAL

sa/nsa: nsa

conddescr: Communication-DCN, DCN, DCN Provisioning Not Valid

ASAP parameter: *provinval* default severity: MJ.

condtype: ADDROV

sa/nsa: nsa

conddescr: Communication-DCN, DCN, Address List Overflow

ASAP parameter: *addrov* default severity: MJ.

condtype: ASTNNBRNAV

sa/nsa: nsa

conddescr: Communication-DCN, DCN, ASTN Neighbor Not Available

ASAP parameter: *astnnbrnav* default severity: MJ.

The alarm information shall also include the IP address of the affected ASTN neighbor, which has to be mapped into the *conddescr*.

□

ASAP Type ENET

Properties of all alarms Alarm duration: persistent

condtype: VCGLOA sa/nsa: sa / nsa
conddescr: Communication-Transport, VCG, Loss of Alignment
ASAP parameter: sa_vcg_loa (service affecting) default severity: CR
ASAP parameter: nsa_vcg_loa (non service affecting) default severity: MN
modifier/aidtype: VCG
AID: VCGAID.

condtype: VCGLOPC sa/nsa: sa / nsa
conddescr: Communication-Transport, VCG, Partial Transport Capacity Loss
ASAP parameter: sa_vcg_lopc (service affecting) default severity: MJ
ASAP parameter: nsa_vcg_lopc (non service affecting) default severity: MN
modifier/aidtype: VCG
AID: VCGAID.

condtype: VCGLOTC sa/nsa: sa / nsa
conddescr: Communication-Transport, VCG, Total Transport Capacity Loss
ASAP parameter: sa_vcg_lotc (service affecting) default severity: CR
ASAP parameter: nsa_vcg_lotc (non service affecting) default severity: MN
modifier/aidtype: VCG
AID: VCGAID.

condtype: VCGFOPT sa/nsa: sa / nsa
conddescr: Communication-Transport, VCG, Source End Failure of Protocol
ASAP parameter: sa_vcg_fopt (service affecting) default severity: MJ

ASAP parameter: nsa_vcg_fopt (non service affecting) default severity: MN

modifier/aidtype: VCG

AID: VCGAID.

condtype: VCGFOPR

sa/nsa: sa / nsa

conddescr: Communication-Transport, VCG, Sink End Failure of Protocol

ASAP parameter: sa_vcg_fopr (service affecting) default severity: MJ

ASAP parameter: nsa_vcg_fopr (non service affecting) default severity: MN

modifier/aidtype: VCG

AID: VCGAID.

condtype: VCGSSF

sa/nsa: sa / nsa

conddescr: Communication-Transport, VCG, Server Signal Fail

ASAP parameter: sa_vcg_ssf default severity: NR

ASAP parameter: nsa_vcg_ssf default severity: NR

modifier/aidtype: VCG

AID: VCGAID.

condtype: GFPLOF

sa/nsa: sa / nsa

conddescr: Communication-Transport, VCG, GFP Loss of Frame

ASAP parameter: sa_gfp_lof default severity: CR

ASAP parameter: nsa_gfp_lof default severity: MN

modifier/aidtype: VCG

AID: VCGAID.

condtype: LANLOS

sa/nsa: sa / nsa

conddescr: Communication-Transport, 1GE, LAN Loss of Signal

ASAP parameter: sa_lan_los default severity: CR

ASAP parameter: nsa_lan_los default severity: MN

modifier/aidtype: 1GE

AID: EPortAID.

condtype: LANANM

sa/nsa: sa / nsa

conddescr: Communication-Transport, 1GE, LAN Auto Negotiation
Mismatch

ASAP parameter: sa_lan_anm, default severity: MN

ASAP parameter: nsa_lan_anm, default severity: NA

modifier/aidtype: 1GE

AID: EPortAID.

condtype: MACVLANOVFW

sa/nsa: sa / nsa

conddescr: Communication-Transport, 1GE, max no of VLAN
instances reached

ASAP parameter: nsa_vlan_maxno, default severity: MN

modifier/aidtype: 1GE

AID: EPortAID.

Per Gigabit Ethernet card one virtual switch is available, therefore the
alarm is always raised against the first port of the card. Also the alarm
configuration is related to the first port.



ASAP Type ENV

Properties of all alarms

modifier/aidtype: ENV

AID: Miscellaneous_in_DiscreteAID

Alarm duration: persistent.

Reference ASAP Type ENV

Refer to the *envmsg* parameter in the output parameters section of the [“RTRV-ATTR-ENV: Retrieve attribute environment” \(6-64\)](#) command for string values as part of *conddescr*.

condtype: MISC_1

sa/nsa: none

conddescr: {envmsg}

ASAP parameter: environ_1

Default severity: NR

Alarm of MDI (Miscellaneous Discrete Input / environmental point).
The description can be assigned.

condtype: MISC_2

sa/nsa: none

conddescr: {envmsg}

ASAP parameter: environ_2

Default severity: NA

Alarm of MDI (Miscellaneous Discrete Input / environmental point).
The description can be assigned.

condtype: MISC_3

sa/nsa: none

conddescr: {envmsg}

ASAP parameter: environ_3

Default severity: NR

Alarm of MDI (Miscellaneous Discrete Input / environmental point).
The description can be assigned.

condtype: MISC_4

sa/nsa: none

conddescr: {envmsg}

ASAP parameter: environ_4

Default severity: NR

Alarm of MDI (Miscellaneous Discrete Input / environmental point).
The description can be assigned.

condtype: MISC_5

sa/nsa: none

conddescr: {envmsg}

ASAP parameter: environ_5

Default severity: NR

Alarm of MDI (Miscellaneous Discrete Input / environmental point).
The description can be assigned.

condtype: MISC_6

sa/nsa: none

conddescr: {envmsg}

ASAP parameter: environ_6

Default severity: NR

Alarm of MDI (Miscellaneous Discrete Input / environmental point).
The description can be assigned.

condtype: MISC_7

sa/nsa: none

conddescr: {envmsg}

ASAP parameter: environ_7

Default severity: NR

Alarm of MDI (Miscellaneous Discrete Input / environmental point).
The description can be assigned.

condtype: MISC_8

sa/nsa: none

conddescr: {envmsg}

ASAP parameter: environ_8

Default severity: NR

Alarm of MDI (Miscellaneous Discrete Input / environmental point).
The description can be assigned.



ASAP Type EQUIP-PROT

Properties of all alarms modifier/aidtype: EQPT

Alarm duration: persistent

**Reference ASAP Type
EQUIP-PROT**

Refer to the *nvmname* parameter in the output parameters section of the [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#) command for values of *cpname* as part of *conddescr*.

Refer to the *nvmqual* parameter in the output parameters section of the [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#) command for values of *cpqual* as part of *conddescr*.

condtype: EQPT

sa/nsa: sa / nsa

conddescr: Equipment, {cpname}/{cpqual}, Circuit Pack Clock Failure

ASAP parameter: sa_eqpt; default severity: CR

ASAP parameter: nsa_eqpt; default severity: MN

AID: CpAID.

condtype: CPTMP

sa/nsa: sa / nsa

conddescr: Equipment, {cpname}/{cpqual}, Unit Temperature too High

ASAP parameter: sa_cptemp; default severity: MJ

ASAP parameter: nsa_cptemp; default severity: MN

AID: CpAID.

condtype: PRCDRERR

sa/nsa: sa / nsa

conddescr: Equipment, slot, Circuit Pack Type Mismatch

ASAP parameter: sa_pcdrerr; default severity: MJ

ASAP parameter: nsa_pcdrerr; default severity: MN

AID: SlotAID.

condtype: REPLUNITMISS

sa/nsa: sa / nsa

conddescr: Equipment, slot, Circuit Pack not Present

ASAP parameter: sa_replunitmiss; default severity: CR

ASAP parameter: nsa_replunitmiss; default severity: MN

AID: SlotAID.

condtype: TXInF

sa/nsa: sa / nsa

conddescr: Equipment, {cpname}/{cpqual}, TXI Failure

ASAP parameter: sa_txif; default severity: CR

ASAP parameter: nsa_txif; default severity: MN

AID: CpAID.

Description: The n in the condtype expresses the individual TXI line for which the alarm is reported. The maximum of n depends on the card type. The condtype will be reported as: TXI1F, TXI2F.

condtype: CPFAIL

sa/nsa: sa / nsa

conddescr: Equipment, {cpname}/{cpqual}, Circuit Pack Failure

ASAP parameter: sa_cpfail; default severity: CR

ASAP parameter: nsa_cpfail; default severity: MN

AID: CpAID.

condtype: PIMISS

sa/nsa: sa / nsa

conddescr: Equipment, shelf, Power Interface not Present

ASAP parameter: sa_pimiss; default severity: MJ

ASAP parameter: nsa_pimiss; default severity: MN

AID: PowerAID.

condtype: PIEF

sa/nsa: nsa

conddescr: Equipment, shelf, Power Interface Read Failure

ASAP parameter: pief; default severity: MN

AID: PowerAID.

condtype: POWF

sa/nsa: sa / nsa

conddescr: Equipment, shelf, System Power Failure

ASAP parameter: sa_powf; default severity: MJ

ASAP parameter: nsa_powf; default severity: MN
AID: PowerAID.

condtype: ONIFW sa/nsa: nsa
conddescr: Equipment, {cpname}/{cpqual}, ONI Failure on working CTL slot
ASAP parameter: sa_onifw; default severity: MN
AID: CpAID.

condtype: ONIFP sa/nsa: nsa
conddescr: Equipment, {cpname}/{cpqual}, ONI Failure on protecting CTL slot
ASAP parameter: nsa_onifp; default severity: MN
AID: CpAID.

condtype: DCTLUNAVAIL sa/nsa: nsa
conddescr: Equipment, SYSTEM, Duplex Control not Present
ASAP parameter: nsa_dctlunavail; default severity: NR
AID: SystemAID.

condtype: BKUPMEMP sa/nsa: nsa
conddescr: Equipment, {cpname}/{cpqual}, IDE Flash Card Access Fail
ASAP parameter: nsa_bkupmemp default severity: MJ
AID: CpAID

condtype: OMMISMA sa/nsa: sa/nsa
conddescr: Equipment, Socket, Optical Module Type Mismatch
ASAP parameter: sa_ommisma default severity: CR
ASAP parameter: nsa_ommisma default severity: MN
AID: SocketAID.

condtype: OMMISS sa/nsa: sa/nsa
conddescr: Equipment, Socket, Optical Module not Present

ASAP parameter: sa_ommiss default severity: CR

ASAP parameter: nsa_ommiss default severity: MN

AID: SocketAID.

condtype: OMFAIL

sa/nsa: sa/nsa

conddescr: Equipment, Socket, Optical Module Fail

ASAP parameter: sa_omfail default severity: CR

ASAP parameter: nsa_omfail default severity: MN

AID: SocketAID.

condtype: OMUNSUP

sa/nsa: sa/nsa

conddescr: Equipment, Socket, Optical Module not supported

ASAP parameter: sa_omunsup default severity: CR

ASAP parameter: nsa_omunsup default severity: MN

AID: SocketAID.



ASAP Type EQUIP-UNPROT

Properties of all alarms modifier/aidtype: EQPT

Alarm duration: persistent

**Reference ASAP Type
EQUIP-UNPROT**

Refer to the *nvmname* parameter in the output parameters section of the [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#) command for values of *cpname* as part of *conddescr*.

Refer to the *nvmqual* parameter in the output parameters section of the [“RTRV-EQPT \(slot\): Retrieve Equipment \(slot\)” \(5-94\)](#) command for values of *cpqual* as part of *conddescr*.

condtype: CSDWF

sa/nsa: nsa

conddescr: Equipment, {cpname}/{cpqual}, Worker Clock Input Fail

ASAP parameter: nsa_csdwf; default severity: MN

AID: CpAID.

condtype: CSDPF

sa/nsa: nsa

conddescr: Equipment, {cpname}/{cpqual}, Protection Clock Input Fail

ASAP parameter: nsa_csdpf; default severity: MN

AID: CpAID.

condtype: SYNCCLK

sa/nsa: sa

conddescr: Equipment, system, NE Clock Failure

ASAP parameter: sa_syncclk; default severity: CR

AID: SystemAID.

condtype: CPDEGR

sa/nsa: nsa

conddescr: Equipment, {cpname}/{cpqual}, Unit Cooling Degraded

ASAP parameter: nsa_cpdegr; default severity: MN

AID: CpAID.

condtype: CPCOMF

sa/nsa: nsa

conddescr: Equipment, {cpname}/{cpqual}, Circuit Pack Comm Failure

ASAP parameter: nsa_cpcomf; default severity: MN

AID: CpAID.

condtype: BPEF

sa/nsa: sa

conddescr: Equipment, shelf, Backplane Read Failure

ASAP parameter: sa_bpef; default severity: MJ

AID: ShelfAID.

condtype: SYSCOMF

sa/nsa: sa

conddescr: Equipment, {cpname}/{cpqual}, Comm Channel Failure

ASAP parameter: sa_syscomf default; severity: MJ

AID: CpAID.

condtype: CTLCOMF

sa/nsa: nsa

conddescr: Equipment, {cpname}/{cpqual}, CTL Comm Failure

ASAP parameter: nsa_ctlcomf; default severity: MN

AID: CpAID.

condtype: BKUPMEMO

sa/nsa: nsa

conddescr: Processing Error, {cpname}/{cpqual}, NVM Shortage

ASAP parameter: nsa_bkupmemo; default severity: MN

AID: CpAID.

condtype: CIPWRDWN

sa/nsa: nsa

conddescr: Equipment, {cpname}/{cpqual}, CICTL Powered Down

ASAP parameter: nsa_cipwrdsn; default severity: MN

AID: CpAID.

condtype: TIMM

sa/nsa: nsa

conddescr: Equipment, {cpname}/{cpqual}, TI Mismatch

ASAP parameter: nsa_timm; default severity: MN

AID: CpAID.

condtype: TIMISS

sa/nsa: nsa

conddescr: Equipment, {cpname}/{cpqual}, TI not Present

ASAP parameter: nsa_timiss default severity: MN

AID: TimingInterfaceAID.

condtype: CIMISS

sa/nsa: nsa

conddescr: Equipment, shelf, CICTL not Present

ASAP parameter: nsa_cimiss; default severity: MN

AID: ShelfAID.

condtype: CIF

sa/nsa: nsa

conddescr: Equipment, ci-ctl, CICTL Failure

ASAP parameter: nsa_cif; default severity: MN

AID: CiCtlAID.

condtype: CICOMF

sa/nsa: nsa

conddescr: Equipment, ci-ctl, CICTL Comm Failure

ASAP parameter: nsa_cicomf; default severity: MN

AID: CiCtlAID.

condtype: FANUNITMISS

sa/nsa: sa

conddescr: Equipment, shelf, Fan Unit not Present

ASAP parameter: sa_fanunitmiss; default severity: CR

AID: ShelfAID.

condtype: FANUNITCOMF

sa/nsa: nsa

conddescr: Equipment, fan, Fan Unit Comm Failure

ASAP parameter: nsa_fanunitcomf; default severity: MN

AID: FanAID.

condtype: FANUNITF	sa/nsa: sa conddescr: Equipment, fan, Fan Unit Failure ASAP parameter: sa_fanunitf default severity: CR AID: FanAID.
condtype: FANF	sa/nsa: sa conddescr: Equipment, fan, Fan Failure ASAP parameter: sa_fanf; default severity: MJ AID: FanAID.
condtype: FEEDAF	sa/nsa: nsa conddescr: Equipment, fan, Fan Voltage Feed A Failure ASAP parameter: nsa_feedaf; default severity: MN AID: FanAID.
condtype: FEEDBF	sa/nsa: nsa conddescr: Equipment, fan, Fan Voltage Feed B Failure ASAP parameter: nsa_feedbf; default severity: MN AID: FanAID.
condtype: UPMISS	sa/nsa: nsa conddescr: Equipment, shelf, User Panel not Present ASAP parameter: nsa_upmiss; default severity: MN AID: ShelfAID.
condtype: UPCOMF	sa/nsa: nsa conddescr: Equipment, user panel, User Panel Comm Failure ASAP parameter: nsa_upcomf; default severity: MN AID: UserPanelAID.
condtype: ECIMISMA	sa/nsa: nsa conddescr: Equipment, ECI, ECI Mismatch Failure ASAP parameter: sa_ecimisma; default severity: CR

AID: EciAID.

condtype: ECICOMF

sa/nsa: nsa

conddescr: Equipment, ECI, ECI Comm Failure

ASAP parameter: nsa_ecicomf; default severity: MN

AID: EciAID.

condtype: ECIMISS

sa/nsa: sa

conddescr: Equipment, ECI, ECI not Present

ASAP parameter: sa_ecimiss; default severity: CR

AID: EciAID.



ASAP Type MSSPRING-BLSR

Properties of all alarms	modifier/aidtype: OC48, OC192, OC768, STM16, STM64, STM256. Alarm duration: persistent.
condtype: APSC	sa/nsa: nsa conddescr: Communication-Transport, MSSPRING-BLSR prot group, Inconsistent APS Codes ASAP parameter: inaps; default severity: MJ AID: SPortAID (2F: west/east port, 4F: west/east protection port).
condtype: IMAPS	sa/nsa: nsa conddescr: Communication-Transport, MSSPRING-BLSR prot group, Improper APS Codes ASAP parameter: imaps; default severity: MJ AID: SPortAID (2F: west/east port, 4F: west/east protection port).
condtype: NID-CONFL	sa/nsa: nsa conddescr: Communication-Transport, MSSPRING-BLSR prot group, Node ID Mismatch ASAP parameter: nid_confl; default severity: MJ AID: SPortAID (2F: west/east port, 4F: west/east protection port).
condtype: DKB	sa/nsa: nsa conddescr: Communication-Transport, MSSPRING-BLSR prot group, Default K-bytes ASAP parameter: dkb; default severity: MJ AID: SPortAID (2F: west/east port, 4F: west/east protection port).
condtype: RNG-PSS	sa/nsa: nsa conddescr: Communication-Transport, MSSPRING-BLSR prot group, Ring protection switch Suspended ASAP parameter: rng_pss; default severity: MJ AID: TwoFibre_ProtGrpAID, FourFibre_ProtGrpAID.

condtype: TS	sa/nsa: nsa conddescr: Communication-Transport, MSSPRING-BLSR prot group, Traffic Squelched ASAP parameter: ts; default severity: MJ AID: SPortAID (2F: west/east port, 4F: west/east worker port).
condtype: DUPL-RNG	sa/nsa: nsa conddescr: Communication-Transport, MSSPRING-BLSR prot group, Duplicate Ring Node ASAP parameter: dupl_rng; default severity: MJ AID: TwoFibre_ProtGrpAID, FourFibre_ProtGrpAID.
condtype: RNG-OPEN	sa/nsa: nsa conddescr: Communication-Transport, MSSPRING-BLSR prot group, Open Ring ASAP parameter: ropn; default severity: MJ AID: TwoFibre_ProtGrpAID, FourFibre_ProtGrpAID.
condtype: SQMAP-CONFL	sa/nsa: nsa conddescr: Communication-Transport, MSSPRING-BLSR prot group, Local Squelch Map Conflict ASAP parameter: sqmap_confl; default severity: MN AID: TwoFibre_ProtGrpAID, FourFibre_ProtGrpAID.
condtype: RNG-INC	sa/nsa: nsa conddescr: Communication-Transport, MSSPRING-BLSR prot group, Ring Incomplete ASAP parameter: rng_inc; default severity: MJ AID: TwoFibre_ProtGrpAID, FourFibre_ProtGrpAID.
condtype: RNG-URT	sa/nsa: nsa conddescr: Communication-Transport, MSSPRING-BLSR prot group, Unknown Ring Type ASAP parameter: rng_urt; default severity: NA

AID: TwoFibre_ProtGrpAID, FourFibre_ProtGrpAID.

condtype: RNG-IRPM

sa/nsa: nsa

conddescr: Communication-Transport, MSSPRING-BLSR prot group,
Inconsistent Ring Protection Mode

ASAP parameter: rng_irpm; default severity: MJ

AID: TwoFibre_ProtGrpAID, FourFibre_ProtGrpAID.

condtype: RNG-DSCVY

sa/nsa: nsa

conddescr: Communication-Transport, MSSPRING-BLSR prot group,
Ring Discovery in Progress

ASAP parameter: rng_dscvy; default severity: NA

AID: TwoFibre_ProtGrpAID, FourFibre_ProtGrpAID.

condtype: ET-PREEMPT

sa/nsa: nsa

conddescr: Communication-Transport, MSSPRING-BLSR prot group,
Extra Traffic Preempted

ASAP parameter: et_preempt; default severity: NA

AID: SPortAID (2F: west/east port, 4F: west/east protection port).



ASAP Type MSP-APS

Properties of all alarms	modifier/aidtype: OC3, OC12, OC48, OC192, OC768, STM1, STM4, STM16, STM64, STM256 AID: OnePlusOne_PrtGrpAID Alarm duration: persistent.
condtype: PAMARCH	sa/nsa: nsa conddescr: Communication-Transport, 1+1 MSP-APS prot group, Prot. Arch. Mismatch ASAP parameter: pamarch; default severity: MJ.
condtype: PAMOPER	sa/nsa: nsa conddescr: Communication-Transport, 1+1 MSP-APS prot group, Prot. Arch. Operation Mismatch ASAP parameter: pamoper; default severity: MJ.
condtype: PAMMODE	sa/nsa: nsa conddescr: Communication-Transport, 1+1 MSP-APS prot group, Prot. Arch. Mode Mismatch ASAP parameter: pammode; default severity: MJ.
condtype: PSBUNACC	sa/nsa: nsa conddescr: Communication-Transport, 1+1 MSP-APS prot group, Prot. Switch Byte Unacceptable ASAP parameter: psbunacc; default severity: MJ.
condtype: PSBINAPPR	sa/nsa: nsa conddescr: Communication-Transport, 1+1 MSP-APS prot group, Prot. Switch Byte Inappropriate ASAP parameter: psbinappr; default severity: MJ.
condtype: SCM	sa/nsa: nsa conddescr: Communication-Transport, 1+1 MSP-APS prot group, Switch Channel Mismatch

ASAP parameter: scm; default severity: MJ.

condtype: PRIM

sa/nsa: nsa

conddescr: Communication-Transport, 1+1 MSP-APS prot group,
primary section Mismatch

ASAP parameter: prim; default severity: MJ.

condtype: FESF

sa/nsa: nsa

conddescr: Communication-Transport, 1+1 MSP-APS prot group, Far
End Signal Fail

ASAP parameter: fesf; default severity: MJ.



ASAP Type PATH

Properties of all alarms

modifier/aidtype: STS1, STS3C, STS12C, STS48C, STS192C, VC3, VC4, VC44C, VC416C, VC464C.

AID: STS1NumAID

Alarm duration: persistent.

condtype: AIS-P

sa/nsa: sa / nsa

conddescr: Communication-Transport, {aidtype} path, Alarm Indication Signal

ASAP parameter: sa_ais; default severity: NR

ASAP parameter: nsa_ais; default severity: NR.

condtype: LOP-P

sa/nsa: sa / nsa

conddescr: Communication-Transport, {aidtype} path, Loss of Pointer

ASAP parameter: sa_lop; default severity: CR

ASAP parameter: nsa_lop; default severity: MN.

condtype: SRM-P

sa/nsa: sa / nsa

conddescr: Communication-Transport, {aidtype} path, Signal Rate Mismatch

ASAP parameter: sa_srm; default severity: MJ

ASAP parameter: nsa_srm; default severity: MN.

condtype: UNEQ-P

sa/nsa: sa / nsa

conddescr: Communication-Transport, {aidtype} path, Unequipped

ASAP parameter: sa_uneq; default severity: CR

ASAP parameter: nsa_uneq; default severity: MN.

condtype: TIM-P

sa/nsa: sa / nsa

conddescr: Communication-Transport, {aidtype} path, Trace Identifier Mismatch

ASAP parameter: sa_tim; default severity: CR

ASAP parameter: nsa_tim; default severity: MN.

condtype: EXC-P	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} path, Excessive Bit Error Ratio ASAP parameter: sa_exc; default severity: CR ASAP parameter: nsa_exc; default severity: MN.
condtype: DEG-P	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} path, Degraded Signal ASAP parameter: sa_deg; default severity: MJ ASAP parameter: nsa_deg; default severity: MN.
condtype: SSF-P	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} path, Server Signal Fail ASAP parameter: sa_ssf; default severity: NR ASAP parameter: nsa_ssf; default severity: NR.
condtype: RFI-P	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} path, Remote Defect Indication ASAP parameter: sa_rfi; default severity: NR ASAP parameter: nsa_rfi; default severity: NR.
condtype: PDI-P	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} path, Payload Defect Indication ASAP parameter: sa_pdi; default severity: MJ ASAP parameter: nsa_pdi; default severity: MN.



ASAP Type PATHTERM

Properties of all alarms	modifier/aidtype: STS1, VC4 AID: VCGNumAID Alarm duration: persistent.
condtype: THPSSF	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} CS, Server Signal Fail ASAP parameter: sa_thpssf; default severity: NR ASAP parameter: nsa_thpssf; default severity: NR.
condtype: THPLOP	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} CS, Loss of Pointer ASAP parameter: sa_thplop; default severity: CR ASAP parameter: nsa_thplop; default severity: MN.
condtype: THPUNEQ	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} CS, Unequipped ASAP parameter: sa_thpuneq; default severity: CR ASAP parameter: nsa_thpuneq; default severity: MN.
condtype: THPTIM	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} CS, Trace Identifier Mismatch ASAP parameter: sa_thptim; default severity: CR ASAP parameter: nsa_thptim; default severity: MN.
condtype: THPEXC	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} CS, Excessive Bit Error Ratio ASAP parameter: sa_thpexc; default severity: CR ASAP parameter: nsa_thpexc; default severity: MN.

condtype: THPDEG	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} CS, Degraded Signal ASAP parameter: sa_thpdeg; default severity: MJ ASAP parameter: nsa_thpdeg; default severity: MN.
condtype: THPRDI	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} CS, Remote Defect Indication ASAP parameter: sa_thprdi; default severity: NR ASAP parameter: nsa_thprdi; default severity: NR.
condtype: THPPLM	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} CS, Payload Mismatch ASAP parameter: sa_thpplm; default severity: CR ASAP parameter: nsa_thpplm; default severity: MN.
condtype: VCLOM	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} CS, Loss of Multiframe ASAP parameter: sa_vclom; default severity: CR ASAP parameter: nsa_vclom; default severity: MN.
condtype: VCSQM	sa/nsa: sa / nsa conddescr: Communication-Transport, {aidtype} CS, Sequence Number Mismatch ASAP parameter: sa_vcsqm; default severity: CR ASAP parameter: nsa_vcsqm; default severity: MN.



ASAP Type PORT

Properties of all alarms modifier/aidtype: OC3, OC12, OC48, OC192, OC768, STM1E, STM1, STM4, STM16, STM64, STM256

AID: SPortAID

Alarm duration: persistent.

condtype: WTU3LOF sa/nsa: sa / nsa
 conddescr: Communication-Transport, {aidtype} port, WTU3 Loss of Frame
 ASAP parameter: sa_wtu3lof; default severity: CR
 ASAP parameter: nsa_wtu3lof; default severity: MN.

condtype: OCHLOF sa/nsa: sa / nsa
 conddescr: Communication-Transport, {aidtype} port, OCh Loss of Frame
 ASAP parameter: sa_ochlof; default severity: CR
 ASAP parameter: nsa_ochlof; default severity: MN.

condtype: PREDCMLOS sa/nsa: sa / nsa
 conddescr: Communication-Transport, {aidtype} port, Pre DCM Signal Loss
 ASAP parameter: sa_predcmlos; default severity: CR
 ASAP parameter: nsa_predcmlos; default severity: MN.

condtype: POSTDCMLOS sa/nsa: sa / nsa
 conddescr: Communication-Transport, {aidtype} port, Post DCM Signal Loss
 ASAP parameter: sa_postdcmls; default severity: CR
 ASAP parameter: nsa_postdcmls; default severity: MN.

condtype: LOS sa/nsa: sa / nsa
 conddescr: Communication-Transport, {aidtype} port, Loss of Signal
 ASAP parameter: sa_los; default severity: CR

ASAP parameter: nsa_los; default severity: MN.

condtype: LOF

sa/nsa: sa / nsa

conddescr: Communication-Transport, {aidtype} port, Loss of Frame

ASAP parameter: sa_lof; default severity: CR

ASAP parameter: nsa_lof; default severity: MN.

condtype: RSTIM

sa/nsa: sa / nsa

conddescr: Communication-Transport, {aidtype} port, Trace Identifier Mismatch

ASAP parameter: sa_rstim; default severity: CR

ASAP parameter: nsa_rstim; default severity: MN.

condtype: MSEXC

sa/nsa: sa / nsa

conddescr: Communication-Transport, {aidtype} port, Excessive Bit Error Ratio

ASAP parameter: sa_msexc; default severity: CR

ASAP parameter: nsa_msexc; default severity: MN.

condtype: MSDEG

sa/nsa: sa / nsa

conddescr: Communication-Transport, {aidtype} port, Degraded Signal

ASAP parameter: sa_msdeg; default severity: MJ

ASAP parameter: nsa_msdeg; default severity: MN.

condtype: AIS-L

sa/nsa: sa / nsa

conddescr: Communication-Transport, {aidtype} port, Alarm Indication Signal

ASAP parameter: sa_aisl; default severity: CR

ASAP parameter: nsa_aisl; default severity: MN.

condtype: MSSSF

sa/nsa: sa / nsa

conddescr: Communication-Transport, {aidtype} port, Server Signal Fail

ASAP parameter: sa_msssf; default severity: NR

ASAP parameter: nsa_msssf; default severity: NR.

condtype: MSPSSF

sa/nsa: sa / nsa

conddescr: Communication-Transport, {aidtype} port, Prot. Server
Signal Fail

ASAP parameter: sa_mspssf; default severity: NR

ASAP parameter: nsa_mspssf; default severity: NR.

condtype: RFI-L

sa/nsa: sa / nsa

conddescr: Communication-Transport, {aidtype} port, Remote Defect
Indication

ASAP parameter: sa_rfil; default severity: NR

ASAP parameter: nsa_rfil; default severity: NR.

condtype: DCCRSF

sa/nsa: nsa

conddescr: Communication-Transport, {aidtype} port, DCC failure

ASAP parameter: sa_dccrsf; default severity: MJ.

condtype: LIDRSM

sa/nsa: nsa

conddescr: Communication-Transport, {aidtype} port, Protocol Version
Mismatch

ASAP parameter: nsa_lidrm, default severity: MJ.

condtype: DCCMSF

sa/nsa: nsa

conddescr: Communication-Transport, {aidtype} port, DCC failure

ASAP parameter: nsa_dccmsf; default severity: MJ.

condtype: LIDMSM

sa/nsa: nsa

conddescr: Communication-Transport, {aidtype} port, Protocol Version
Mismatch

ASAP parameter: nsa_lidmsm; default severity: MJ.



ASAP Type SNCP-UPSR

Properties of all alarms modifier/aidtype: STS1, STS3, STS12, STS48, STS192, VC3, VC4, VC44C, VC416C, VC464C

AID: STS1NumAID

Alarm duration: persistent.

condtype: PSI sa/nsa: nsa

conddescr: Communication-Transport, Path prot group, Path Switch Inhibit

ASAP parameter: psinh; default severity: NA.

condtype: FAILTOSW sa/nsa: nsa

conddescr: Communication-Transport, Path prot group, Path Switch Denial

ASAP parameter: psfail; default severity: NA.



ASAP Type TIMING

Properties of all alarms Alarm duration: persistent

condtype: SYNCRF sa/nsa: none
conddescr: Communication-Synchronisation, timing reference, Timing Reference Failure
ASAP parameter: syncrf; default severity: MJ
modifier/aidtype: SYST
AID: External_timing_ref_AID, Line_timing_ref_AID.

condtype: SYNCLOSS sa/nsa: none
conddescr: Communication-Synchronisation, system timing, Loss of Synchronisation
ASAP parameter: syncloss; default severity: MJ
modifier/aidtype: SYST
AID: SystemAID.

condtype: SYNCT4OUT sa/nsa: none
conddescr: Communication-Synchronisation, timing out, T4 quality insufficient
ASAP parameter: synct4out; default severity: MJ
modifier/aidtype: OUTT
AID: External_Timing_output_port_AID.



Entity – ASAP relation

Introduction This section describes which entity is related to which ASAP.

Entities For description of the entities see in the fragments of the TL1 message description which defines and describes the entities.
(Example: The slot entity is described in the configuration fragment.)

The entity of an alarm can be retrieved from the entity in the *condescr* in the ASAP descriptions above so it is not explicitly listed here.

If an entity has a relation to at least one ASAP does it mean that this entity will raise alarms for this entity.

Entity – ASAP relation For each ASAP type must exist one ASAP pointer for the entity. Each ASAP pointer is related to only one ASAP type. That means that for some entities more than one ASAP pointer exist.

Fragment	Entity	ASAP Type	Entity containing ASAP pointer
Administration & Security	Session	none	none
Administration & Security	NE Security Administration	none	none
Administration & Security	User Administration	none	none
Administration & Security	Security Activity Log	none	none
Configuration Management	System	EQUIP-UNPROT	System
Configuration Management	Bay	none	none
Configuration Management	Shelf	EQUIP-PROT EQUIP-UNPROT	Shelf
Configuration Management	Slot	EQUIP-PROT	Slot
Configuration Management	Circuit Pack	EQUIP-PROT EQUIP-UNPROT	CP
Configuration Management	Port (OC3, OC12, OC48, OC192, OC768, STM1, STM4, STM16, STM64, STM256)	PORT	Port
Configuration Management	Tributary (STS1, STS3C, STS12C, STS48C, STS192C, VC3, VC4, VC44C, VC416C, VC464C)	PATH	Tributary (Configuration Management)
Fault Management	Alarm Assignment Profiles	none	none
Fault Management	Alarms	none	none
Fault Management	Alarm Log	none	none

Fragment	Entity	ASAP Type	Entity containing ASAP pointer
Fault Management	MDI	ENV	MDI
Fault Management	MDO	none	none
Transmission Cross-Connect Handling	cross-connection	none	none
Transmission Cross-Connect Handling	Tributary	none	none
Transmission Cross-Connect Handling	Port	none	none
Transmission Cross-Connect Handling	User Byte – Port	none	none
Transmission Cross-Connect Handling	Ethernet Port	ENET	Ethernet Port
Transmission Cross-Connect Handling	Virtual Concatenation Group	ENET	Virtual Concatenation Group
Transmission Cross-Connect Handling	Virtual Concatenation Group Tributary (STS1, VC4)	PATHTERM	Virtual Concatenation Group Tributary
Protection	Protection Group 1+1 Equipment Protection	none	none
Protection	Protection Group 1+1 Multiplex Section / Line Protection	MSP-APS	Protection Group 1+1 Multiplex Section / Line Protection
Protection	Protection Group 2-fibre MS-SPRing / BLSR	MSSPRING-BLSR	Protection Group 2-fibre MS-SPRing / BLSR
Protection	Protection Group 4-fibre MS-SPRing / BLSR	MSSPRING-BLSR	Protection Group 4-fibre MS-SPRing / BLSR
Protection	Protection Group Path Protection	SNCP-UPSR	Protection Group Path Protection
Protection	Protection Log	none	none
Protection	Ring Map	none	none
Synchronization	System Timing	TIMING	System Timing
Synchronization	Output Timing	none	none
Synchronization	Assigned Timing Reference	TIMING	Assigned Timing Reference
Synchronization	External Timing Input	none	none
Synchronization	External Timing Output	TIMING	External Timing Output
Software & Database Management	n.a	none	none

Fragment	Entity	ASAP Type	Entity containing ASAP pointer
Data Communications Network	General DCN	DCN	General DCN
Data Communications Network	DCC Termination	none	none
Data Communications Network	LAN	none	none
Data Communications Network	OSI Network Layer	none	none
Data Communications Network	OSI Transport Layer and TARP	none	none
Data Communications Network	TCP / IP	none	none
Data Communications Network	IP Map	none	none
Data Communications Network	IP Tunnel	none	none
Data Communications Network	MAP	none	none
Performance Monitoring	none	none	none
Configuration Management	ci-ctl	EQUIP-UNPROT	System
Configuration Management	fan	EQUIP-UNPROT	System
Configuration Management	user panel	EQUIP-UNPROT	System
Configuration Management	power interface	EQUIP-PROT	CP





7 TL1 messages - transmission and cross-connect handling

Overview

- Purpose** This section contains the TL1 interface definition for the
- transmission domain
 - user byte access functionality
 - gigabit ethernet virtual switch configuration
 - gigabit ethernet port (GEn) configuration
 - virtual concatenation (Group and Tributary) configuration for GEn applications
 - remote test access function.

Contents

<u>Cross-connection</u>	<u>7-4</u>
<u>RTRV-CRS: Retrieve cross-connection</u>	<u>7-6</u>
<u>ENT-CRS: Enter cross-connection</u>	<u>7-25</u>
<u>ENT-CRS notification</u>	<u>7-44</u>
<u>ED-CRS: Edit Cross-connection</u>	<u>7-46</u>
<u>ED-CRS notification</u>	<u>7-51</u>
<u>ED-NNCRS: Edit NN cross-connection</u>	<u>7-53</u>
<u>DLT-CRS: Delete cross-connection</u>	<u>7-56</u>

<u>DLT-CRS notification</u>	<u>7-64</u>
<u>ENT-ROLL: Enter roll</u>	<u>7-65</u>
<u>CNVT-CCT: Convert cross-connection topology</u>	<u>7-72</u>
<u>Autonomous notification</u>	<u>7-86</u>
<u>Tributary</u>	<u>7-88</u>
<u>RTRV-LPBK: Retrieve loopback (here cross-connection loopback)</u>	<u>7-89</u>
<u>OPR-LPBK (here cross-connection loopback)</u>	<u>7-93</u>
<u>OPR-LPBK notification (here cross-connection loopback)</u>	<u>7-100</u>
<u>RLS-LPBK: Release loopback (here cross-connection loopback)</u>	<u>7-101</u>
<u>RLS-LPBK notification (here cross-connection loopback)</u>	<u>7-104</u>
<u>Port</u>	<u>7-105</u>
<u>RTRV-LPBK: Retrieve loopback (here facility loopback)</u>	<u>7-106</u>
<u>OPR-LPBK: Operate loopback (here facility loopback)</u>	<u>7-111</u>
<u>OPR-LPBK notification (here facility loopback)</u>	<u>7-117</u>
<u>RLS-LPBK: Release loopback (here facility loopback)</u>	<u>7-118</u>
<u>RLS-LPBK notification (here facility loopback)</u>	<u>7-122</u>
<u>UserByte port</u>	<u>7-123</u>
<u>RTRV-OW: Retrieve Orderwire and User Bytes</u>	<u>7-124</u>
<u>SET-OW: Set Orderwire and User Bytes</u>	<u>7-128</u>
<u>SET-OW notification</u>	<u>7-132</u>
<u>Autonomous notification</u>	<u>7-133</u>
<u>Virtual switch</u>	<u>7-134</u>
<u>RTRV-VRTSW: Retrieve Virtual Switch</u>	<u>7-136</u>
<u>ENT-VRTSW notification</u>	<u>7-143</u>
<u>ED-VRTSW: Edit Virtual Switch</u>	<u>7-145</u>
<u>ED-VRTSW notification</u>	<u>7-148</u>
<u>DLT-VRTSW notification</u>	<u>7-150</u>
<u>Ethernet port</u>	<u>7-151</u>

<u>RTRV-EPORT: Retrieve Ethernet port</u>	<u>7-153</u>
<u>ENT-EPORT notification</u>	<u>7-165</u>
<u>ED-EPORT: Edit Ethernet port</u>	<u>7-168</u>
<u>ED-EPORT notification</u>	<u>7-174</u>
<u>DLT-EPORT notification</u>	<u>7-176</u>
<u>Autonomous notifications</u>	<u>7-177</u>
<u>Virtual concatenation group</u>	<u>7-178</u>
<u>RTRV-VCG: Retrieve virtual concatenation group</u>	<u>7-180</u>
<u>ENT-VCG notification</u>	<u>7-190</u>
<u>ED-VCG: Edit virtual concatenation group</u>	<u>7-193</u>
<u>ED-VCG notification</u>	<u>7-201</u>
<u>DLT-VCG notification</u>	<u>7-204</u>
<u>Autonomous notifications</u>	<u>7-205</u>
<u>Virtual concatenation group tributary</u>	<u>7-206</u>
<u>RTRV-VCGTRIB: Retrieve virtual concatenation group tributary</u>	<u>7-207</u>
<u>ENT-VCGTRIB notification</u>	<u>7-221</u>
<u>ED-VCGTRIB: Edit virtual concatenation group tributary</u>	<u>7-224</u>
<u>ED-VCGTRIB notification</u>	<u>7-230</u>
<u>DLT-VCGTRIB notification</u>	<u>7-233</u>
<u>OPR-VCGTRIB: Operate virtual concatenation group tributary</u>	<u>7-234</u>
<u>Autonomous notifications</u>	<u>7-236</u>
<u>Remote Test Access</u>	<u>7-237</u>
<u>RTRV-TACC: Retrieve test access</u>	<u>7-241</u>
<u>CONN-TACC: Connect test access</u>	<u>7-246</u>
<u>CONN-TACC notification</u>	<u>7-252</u>
<u>CHG-ACCMD: Change access mode</u>	<u>7-254</u>
<u>CHG-ACCMD notification</u>	<u>7-257</u>
<u>DISC-TACC: Disconnect test access</u>	<u>7-258</u>
<u>DISC-TACC notification</u>	<u>7-260</u>



Cross-connection

Overview

Purpose The cross-connection (CRS) commands cover all type of

- creating (ENT-CRS),
- removing (DLT-CRS),
- modifying (ED-CRS) and
- retrieving (RTRV-CRS) cross-connections.

Furthermore the commands ENT-ROLL directly affect existing cross-connections by rolling the input of an existing cross-connection towards another input while keeping the output unchanged.

Cross-connections and tributaries

Physically cross-connections are transport channels between tributaries within an NE. These cross-connections are logically modelled by the entity cross-connection and include provisionable parameters which describe the behavior of these channels. Tributaries are path level units of bandwidth within ports.

These port can be

- either SDH/SONET ports belonging to OPn packs, when using cross-connection with OPn and specified via the AID SPortAID. The related tributaries are given via STS1NumAID or
- Virtual Concatenation Group ports (VCG ports) – i.e. ports related to physical GEn-ports when using cross-connection involving GEn – and specified via the AID VCGPortAID. The related VCG-tributaries are specified via VCGNumAID.

If it is not necessary to distinguish between the STS1NumAID and VCGNumAID the general AID GenTribAID is used to cover all cases.

Tributary-rate provisioning versus cross-connection-rate

For fixed-rate provisioned ports the cross-connection-rate (either the SDH-rate or its equivalent SONET-rate) must match with the tributary-rate. As an example a tributary provisioned to vc44c can be cross-connected only at a rate of vc44c (or STS12, which is equivalent) – requests with other rates will be rejected. This restriction concerning the consistency of tributary-rate and cross-connection-rate

does NOT hold in the case the port is provisioned as adaptive (which is only possible in case of a SONET-port).

Please note that the following features are not part of the current *LambdaUnite*® MSS release and are thus not specified here:

- provisioning of adjunct path-protected cross-connection (no adjunct related parameter)
- conversion of the cross-connection topology (no TL1 command CNVT-CCT)
- changing working and protection leg for path-protected cross-connections (no TL1 command OPR-WKGLEG)
- no adaptive-mode is allowed for both *in_aids* of a path-protected cross-connection.

Contents

RTRV-CRS: Retrieve cross-connection	7-6
ENT-CRS: Enter cross-connection	7-25
ENT-CRS notification	7-44
ED-CRS: Edit Cross-connection	7-46
ED-CRS notification	7-51
ED-NNCRS: Edit NN cross-connection	7-53
DLT-CRS: Delete cross-connection	7-56
DLT-CRS notification	7-64
ENT-ROLL: Enter roll	7-65
CNVT-CCT: Convert cross-connection topology	7-72
Autonomous notification	7-86



RTRV-CRS: Retrieve cross-connection

The RTRV-CRS-modifier command can be initiated by a user to retrieve information on existing cross-connections in the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1

Priority: 1

Abortable: Yes

Input format Command Syntax: RTRV-CRS-*modifier*:*tid*:[*in_aid*]:*ctag*[:*ppgname*];

Either the parameter *in_aid* or *ppgname* must be present – refer to the "Detailed behavior description" section for details.

Input parameters **Important!** Do not use *ppgname* in RTRV-CRS requests. Just use the *in_aid* parameter in RTRV-CRS requests.

Command parameters

1. modifier

This parameter indicates the cross-connection rate on which the retrieve cross-connection command acts.

A distinction of the *modifier* usage has to be made between the retrieval (RTRV-CRS-*modifier*) and the other CRS-related commands (ENT-CRS-*modifier*, DLT-CRS-*modifier*, ED-CRS-*modifier*, ENT-ROLL-*modifier*):

- The establishment (ENT-CRS-*modifier*), removal (DLT-CRS-*modifier*), modification (ED-CRS-*modifier*) or rolling (ENT-ROLL-mod) of cross-connections is independent of the provisioned port interface-standard. I.e., either the SDH-rates (VC3, VC4 etc.) or the corresponding SONET-rates (STS1, STS3 etc.) can be used as modifier and no command validation between port interface-standard and *modifier* will be performed.
- For the RTRV-CRS-*modifier* command the following holds: Again, no command validation between port interface-standard and *modifier* will be performed. The output parameter *rate*, however, is filled with the rate which was used with the RTRV-CRS-*modifier* command.

Example: if a cross-connection was entered as ENT-CRS-VC3 then a RTRV-CRS-ALL as well as a RTRV-CRS-VC3 as well as RTRV-CRS-STS1 will return this cross-connection with the *rate* parameter VC3.

Type: Alphanumeric value set.

Range:

- ALL (Note: using the all parameter has no restriction in using ranging of the *in_aid*, thus up to all 4 all-parameter (one for the *modifier*, three for the *in_aid* are allowed))
 - SDH *modifier*: VC3, VC4, VC44C, VC416C, VC464C.
 - SONET *modifier*: STS1, STS3, STS12, STS48, STS192.
2. tid – Target Identifier
Target Identifier. Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
3. in_aid – Input Access Identifier
This parameter specifies the source of the cross-connection. In case of a 1-way cross-connection the source of a cross-connection is unambiguous. In this case the cross-connection will be retrieved by the RTRV-CRS, which has the identical *in_aid*.
In case of a 2-way cross-connection the source is not defined (the source could be the *in_aid* or the *out_aid* of the cross-connection). In this case both aids (*in_aid* or *out_aid*) of the cross-connection can be used as the *in_aid* parameter of the RTRV-CRS command. The RTRV-CRS command will then return the *in_aid* – parameter used in the RTRV-CRS command as the *in_aid* of the RTRV-CRS reply.

Example:

ENT-CRS-VC4:Nename:1-1-#-#-1-1-1,1-1-#-#-2-1-1:123456:2way;

RTRV-CRS-VC4:Nename:1-1-#-#-2-1-1:123457;

M 123457 COMPLD "1-1-#-#-1-1-1,1-1-#-#-2-1-1:vc4..... ;

Type: GenTribAID.

Range: The all-parameter is accepted for the slot-, port- and trib-part of the AID. For the port the all-parameter is to be distinguished between all when referring OPn packs and GENval1 when referring the GEN.

For example the following *in_aids* are valid:

- 1-1-#-#-all-all-all specifying all tributaries and all ports in the whole shelf
- 1-1-#-#-2-1-all specifying all tributaries of the first port of the pack in slot-number=02
- 1-1-#-#-3-vall-all specifying all tributaries of the first port of the (GEn) pack in slot-number=03

4. ctag – Correlation Tag

See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

5. ppgname – Path protection group name

This parameter is a user-defined string that identifies a path protection group. This parameter is applicable to path-protected cross-connections only and is omitted for non path-protected cross-connections.

Note: Storage and retrieval of the *ppgname* is case sensitive, but the actual use of the *ppgname* to determine the corresponding protection group is case insensitive.

For details please refer to parameter *ppgname* in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Type: For details please refer to parameter *ppgname* in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Range: For details please refer to parameter *ppgname* in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Default: NULL.

Output format In response to a valid RTRV-CRS-mod command, the following output is returned:

```
sid date time
M ctag COMPLD
  "in_aid,out_aid:rate[,in_aid2]:spec_block"
  ...
  ...
  "in_aid,out_aid:rate[,in_aid2]:spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are described in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. **in_aid** – Input Access Identifier

Description: The parameter **in_aid** specifies the tributary which is the source of the cross-connection. In detail:

- In case of a 1-way cross-connection this parameter specifies the source of the cross-connection and is identical to the one used as input parameter
- In case of a 2-way cross-connection this parameter is identical to the one used as input parameter (Please refer also to the description of the input parameter **in_aid** of the [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#) command).
- In case of a path-protected cross-connection this parameter also is identical to the one used as input and may specify either the source of the working leg or the source of the protection leg – the distinction is made via the spec-block parameter **repleg** (see below). If **in_aid** specifies the working-leg part than **in_aid2** (see below) specifies the protection-leg part and vice versa.

Type: STS1NumAID (when using OPn packs) or VCGNumAID (when using GEn).

Range: n.a. (all values shall never occur as part of an output parameter).

2. **out_aid** – Output Identifier

This parameter specifies the tributary which is the sink of the cross-connection.

Type: STS1NumAID (when using OPn packs) or VCGNumAID (when using GEn).

Range: n.a. (all values shall never occur as part of an output parameter).

3. **in_aid2** – Input Access Identifier 2

This parameter is applicable to and is present for path-protected cross-connections only and specifies either the source of the protection leg or the source of the working leg.

This depends on the value of the *repleg* parameter:

- E.g. for the combination: *in_aid*=IN1, *out_aid*=OUT, *in_aid2*=IN2 and *repleg*=1WAYPSW the worker leg is given by IN1 -> OUT and the protection leg is given by IN2 -> OUT;
- for the combination: *in_aid*=IN1, *out_aid*=OUT, *in_aid2*=IN2 and *repleg*=1WAYPSP the worker leg is given by IN2 -> OUT and the protection leg is given by IN1 -> OUT.

Thus *in_aid* and *out_aid* specify one leg of the legpair of a path-protected cross-connection, while *in_aid2* and *out_aid* specify the second leg.

Type: STS1NumAID.

Note: Using VCGNumAID (when using GEn) s NOT applicable as the GEn can not be the input to a path-protected cross-connection.

Range: n.a. (all values shall never occur as part of an output parameter).

4. rate

This parameter indicates the cross-connection rate. For a detailed description please refer to the input parameter *modifier*.

Type: Alphanumeric value set

Range:

- VC3
- VC4
- VC44C
- VC416C
- VC464C
- STS1
- STS3
- STS12
- STS48
- STS192.

Spec block parameters

1. *loca* – Location-a

This parameter specifies the TID of the node at which service is added to the BLSR. This parameter is required for BLSR THROUGH, INTER-BLSR and DROP connections only. The *loca* parameter value is an empty string for ADD and non-BLSR connections.

A 2-way cross-connection is considered to be a DROP if the *out_aid* is a non BLSR tributary.

The figure in [“2-way scenario” \(7-18\)](#) depicts the 2-way scenario (the 3 NEs should be seen as part of an BLSR).

Inter Ring Cross-connections with collapsed node: Note that beside the above described THROUGH case there can be also another situation where both *loca* and *locz* are different from the empty string: If two rings are interconnected in a collapsed node then *loca* refers to the (add-node of the) ring where the signal is dropped from, and *locz* refers to the (drop-node of the) ring where the signal is added to. In such cases the cross-connection cannot be provisioned as bidirectional, thus the information is still unambiguous.

A note to the *loca2* parameter: Although *loca2* (Location-a-2) is a parameter which is used in the ENT-CRS command, *loca2* is not retrieved explicitly. This is due to the fact that for path-protected cross-connections – and only for those this *loca2* is applicable – the retrieval will be on a leg-basis and not on a leg-pair basis. In other words: If a path-protected cross-connection is retrieved two entries will be sent, one for the working leg (incl. the *loca* and *locz* parameter) and one for the protection leg (incl. the *loca* parameter and the same *locz* parameter, and in this case the *loca* returned is the *loca2* as entered when establishing the path-protected cross-connection). *loca* is also required for EXTRA TRAFFIC connections. (In contrast to incoming references from other commands to this whole chapter it is exclusively applicable for the command RTRV-CRS.). For extra traffic the value will be generated automatically and thus it is only retrievable. For information about the automatic generation of *loca* refer to the parameter *sqfa*.

Type: TID or empty string.

Range: Please refer to the TID definition in the [“RTRV-HDR: Retrieve header” \(5-8\)](#) description.

Default: empty string "";

Note: In output direction the empty string appears as \".

2. locz – Location-z

This parameter specifies the TID of the node at which service is dropped from the BLSR. This parameter is required for BLSR THROUGH, INTER-BLSR and ADD connections. The *locz* parameter value is an empty string for DROP and non-BLSR connections.

A 2-way cross-connection is considered to be a ADD if the *in_aid* is a non BLSR tributary.

Refer to the figure in [“2-way scenario” \(7-18\)](#) for further explanation.

locz is also required for EXTRA TRAFFIC connections. For extra traffic the value will be generated automatically and thus it is only retrievable. For information about the automatic generation of *locz* refer to the parameter *sqfz*.

Type: TID or empty string.

Range: Please refer to the TID definition in the [“RTRV-HDR: Retrieve header” \(5-8\)](#) description.

Default: empty string "";

Note: In output direction the empty string appears as \".

3. lpbkstat – Loopback-Status

This parameter specifies whether a cross-connection loopback exists on the input tributary or the output tributary of the cross-connection.

Type: Alphanumeric value set.

Range: YES, NO (default).

4. omode – Output Mode

This parameter specifies the output mode of the cross-connection:

- for a 1-way cross-connection the output is clearly defined by the destination (*out_aid*)
- for a 2-way cross-connection the output is defined as the source-to-destination direction (*in_aid* to *out_aid*)
- NORM: this is the normal output i.e. the signal from the *in_aid* is passed through to the *out_aid*;

- IDLE/UNEQ: this mode outputs an unequipped signal;
- AIS: this mode outputs an AIS signal.

omode and adaptive-mode: In case a SONET-port is provisioned to adaptive-mode setting the ***omode*** to IDLE/UNEQ or AIS will be lead to transmitting the corresponding signal (UNEQ or AIS) on STS1 base for all the STS1 tributary comprising the STS-N signal. Thus for an output of an STS3 cross-connection, if either AIS or IDLE/UNEQ is selected each of the 3 STS1 will output the AIS or IDLE/UNEQ signal. When switching the ***omode*** back to NORM the original STS3 cross-connection-signal will re-appear again.

omode in case of path-protected cross-connection: In case of a path-protected cross-connection the ***omode*** affects the output of the path selector and is thus not setable on a per leg base. In other words the ***omode*** insertion is done after (downstream direction) the selector function.

Type: Alphanumeric value set.

Range:

- NORM (default)
- IDLE/UNEQ
- AIS

5. repleg – Reported Leg Pair

This parameter provides compact information about the leg(s) of cross-connections and is derived, as shown in [“Derivation of repleg” \(7-18\)](#), from a combination of the following elementary parameter:

- atomic cross-connection topology
- leg status
- path-protected group working leg (if applicable i.e. being part of a protection group).

Atomic cross-connection topology:

Two atomic cross-connection topologies are supported:

- Point to point: The point to point cross-connection consists of one leg only, which is defined by its source-trib (*in_aid*) and its destination-trib (*out_aid*) and its particular transmission rate.
- path-protected: The path-protected cross-connection consists of a path protection group with two legs, a working leg and a protection leg – the declaration of working respectively protection is made when establishing the cross-connection (ENT-CRS command).

The two legs are defined by two input tributaries and one output tributary – thus one input tributary and the output tributary form the working leg while the other input tributary and the output tributary form the protection leg.

Note that:

both input tributaries must belong to ports with the same interface standard (either SONET or SDH), due to different switch criteria;

both legs must be at the same cross-connection rate.

Leg status:

The leg status indicates whether a leg is monitored and reported as a 1-way cross-connection or a leg pair i.e. a 2-way cross-connection.

- 1-way: The leg status for a path-protected cross-connection is always defined as 1-way.
- 2-way: The leg status for a (non path-protected) cross-connection is set to 2-way if all the following conditions are fulfilled:
 - there are 2 cross-connections in opposite direction between the same tributaries;
 - both of these cross-connections have the same rate (independent if the SONET or SDH rate was used when establishing i.e. VC3 is equivalent to STS1, VC4 is equivalent to STS3 etc);
 - the source and destination TIDs do match i.e. the source TID of one leg is the destination TID of the other leg and vice versa (this condition of course holds only in case of BLSR cross-connections).

Note that the criteria for a 2-way leg-pair do not depend on whether the two legs were set up at the same time, nor on whether either leg was set up as part of a 2-way cross-connection topology

Path Protection leg role:

This indicates if the leg of a path protection group is defined as the working (W) leg or the protection (P) leg.

1WAYPSW and 1WAYPSP stands for 1-way path switched working and 1-way path switched protection respectively.

In [“repleg example” \(7-19\)](#) examples show the **repleg** parameter for several cross-connection configurations including compound cross-connection.

Type: Alphanumeric value set.

Range

- 1WAY
- 2WAY
- 1WAYPSW
- 1WAYPSP.

The values 1WAYPAP and 1WAYPAW are not supported in the initial release.

6. **rtnomode – Return Output Mode**

This parameter specifies the output mode for the return direction of the cross-connection.

- for a 2-way cross-connection the return output mode is defined as the destination-to-source direction (**out_aid** to **in_aid**) For the meaning of the values please refer to **omode** description.
- for a 1-way cross-connection and path protected cross-connection this parameter is omitted.

Type: Alphanumeric value set.

Range: NORM (default), IDLE/UNEQ, AIS.

7. **rtntacstat – Return Test Access Status**

This parameter indicates whether the input tributary of the return direction (destination-to-source) of a 2-way cross-connection is cross-connected or bridged to a test access tributary of a test session. In the case of a 1-way cross-connection the parameter shall be omitted.

Type: Alphanumeric value set.

Range: YES, NO (default).

8. **rtncappl** – Return cross-connection application
This parameter is a numeric value which indicates the application for which the return cross-connection is used in the context of compound cross-connection topologies.
 - for a 1-way cross-connection this parameter is not applicable and will thus be omitted.
 - for a 2-way cross-connection the parameter is present.Type: same as **xcappl**.
Range: same as **xcappl**.
Default: The default value is 0.
9. **rtncnum** – Return cross-connection number
This parameter is a 9 digit number, identifying the cross-connection number for the return direction (destination to source i.e. **out_aid** to **in_aid**) of a 2-way cross-connection.
 - for a 1-way cross-connection this parameter is not applicable and will thus be omitted.
 - for a 2-way cross-connection the parameter is present.Type: same as **xcnum**.
Range: same as **xcnum**.
Default: The default value is 000000000.
10. **taccstat** – Test Access Status
This parameter indicates whether the input tributary of a 1-way cross-connection or the input tributary of the source-to-destination direction of a 2-way cross-connection is crossconnected or bridged to a test access tributary of a test session.
Type: Alphanumeric value set.
Range: YES, NO (default).
11. **xcappl** – cross-connection application
This parameter is a numeric value which indicates the application for which the cross-connection is used in the context of compound cross-connection topologies.
The parameter is not further processed in the NE, but only stored (when establishing or modifying the cross-connection) and returned when retrieving the cross-connection.
The numeric values are assigned to appropriate text strings (see Range below) and the manager should display these value in case of a [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

As a possible assignment proposal the following may serve:

- 0) Unknown
- 1) 1-Way Point-to-Point
- 2) 1-Way Path-Protected
- 3) 1-Way Adjunct Path-Protected
- 10) 2-Way Point-to-Point
- 20) UPSR (or SNCP Ring) Add, Drop
- 21) UPSR (or SNCP) Ring-to-Ring, Single Node Interconnection, Same NE
- 22) UPSR (or SNCP) Drop, 1-Way Broadcast
- 30) Logical Ring (or SNCP) Add, Drop
- 40) Ring Interworking, Drop-and-Continue, BLSR (or MS-SPRing) Primary Node
- 41) Ring Interworking, Drop-and-Continue, BLSR (or MS-SPRing) Primary Nodes in same NE
- 42) Ring Interworking, Dual Transmit, BLSR (or MS-SPRing) Terminating Node
- 50) Ring Interworking, Drop-and-Continue, UPSR (or SNCP Ring)
- 51) Ring Interworking, Drop-and-Continue, UPSR (or SNCP Ring) Nodes in same NE
- 60) 1-Way Broadcast -- note: this is with N greater than or equal to 2.

Type: numerical value set.

Range: {0, 1, 2,..., 255}.

Default: The default value is 0.

12. **xnum** – cross-connection number


This parameter is a 9 digit number, identifying each leg in a specific compound cross-connection. (Compound cross-connection are a composition of several atomic cross-connection in order to form complex scenarios like e.g. described in "Example input/output" section of the RTRV-CRS command like UPSR, DRI etc.).

Like the *xcap1* parameter the *xnum* parameter is not further processed in the NE, but only stored (when establishing or modifying the cross-connection) and returned when retrieving the cross-connection. It may be used by a manager to characterize

and group cross-connections belonging to complex cross-connection topology (e.g. compound cross-connections as used in ring interworking scenarios).
Type: numeric value set (9 digit).
Range: 000000000 .. 999999999.
Default: The default value is 000000000.

13. xconcls – cross-connection class
This parameter identifies, whether the cross-connection has been setup in the TRADITIONAL way by an operator via the ENT-CRS command or via the NN application as part of an ENT-PATH command. This parameter therefore also indicates who is the owner of the cross-connection and can modify or delete it.
Note: Refer to the NN TL1 catalogue for the ENT-PATH command.
Type: alphanumeric value set.
Range: TRADITIONAL, NN.

2-way scenario

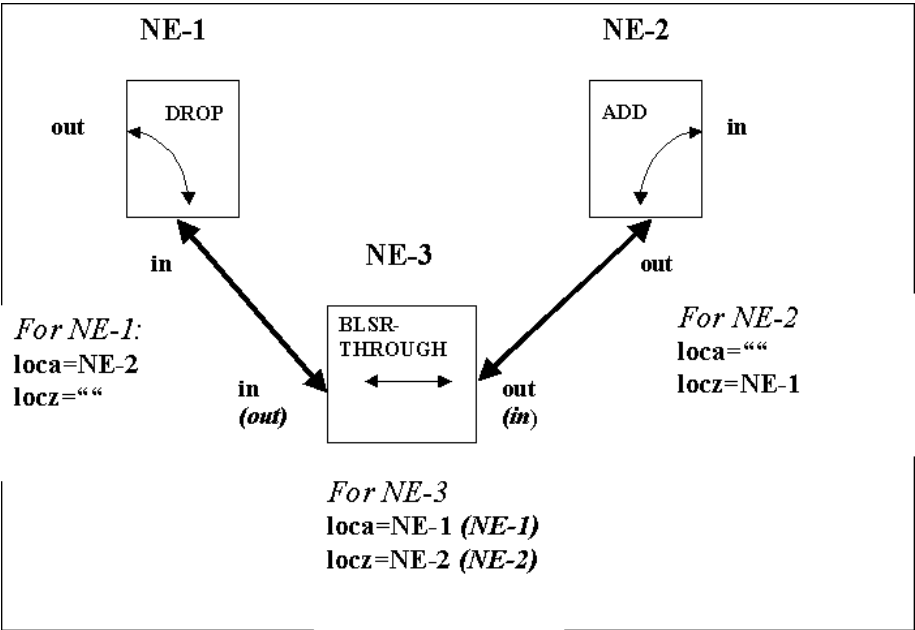


Derivation of repleg

Atomic cross-connection Topology	Path Protection Leg Role	Leg Status	Reported Legpair (<i>repleg</i>)

point-to-point	n.a.	1-way	1WAY
point-to-point	n.a.	2-way	2WAY
path-protected	W	1-way	1WAYPSW
path-protected	P	1-way	1WAYPSP

repleg example

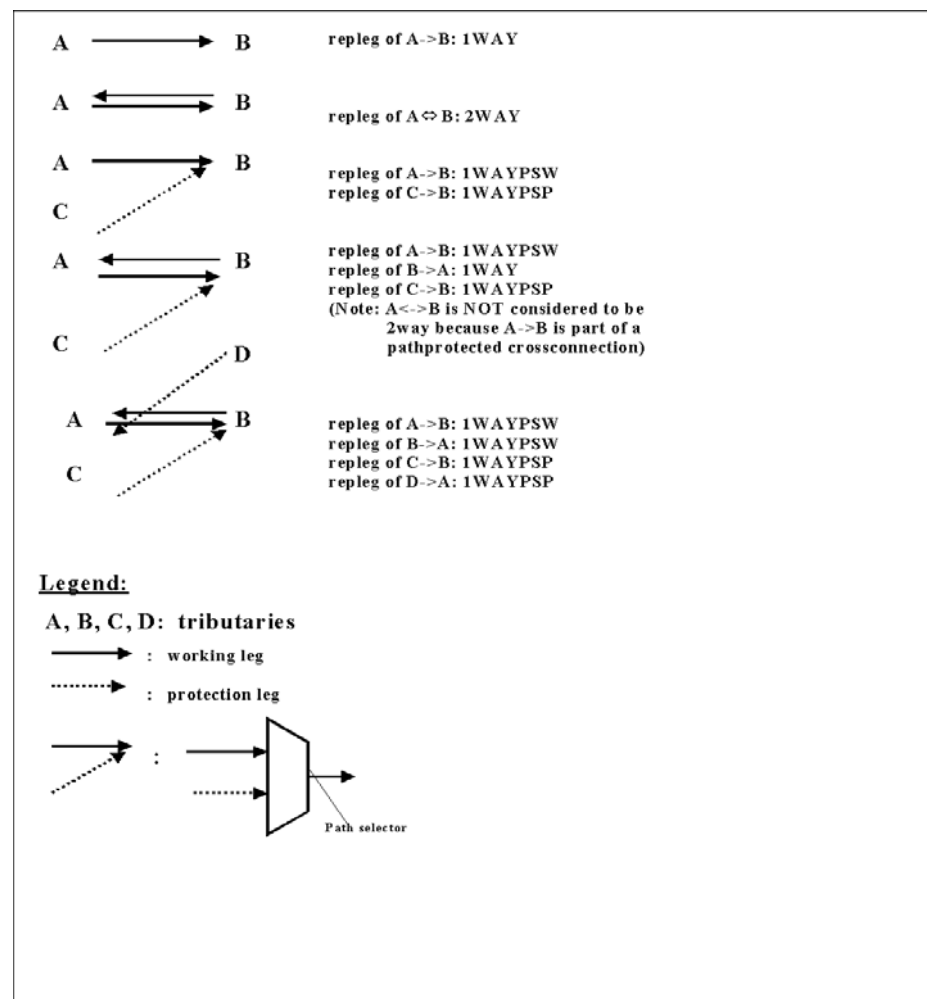

**Detailed behavior
description**

The RTRV-CRS command allows the retrieval of existing cross-connection according to the following characteristics:

- rate (via the mandatory **modifier** parameter)
- input tributary (via the optional/mandatory [in case **ppgname** is omitted] **in_aid** parameter)
- path protection group name (via the optional/mandatory [in case **in_aid** is omitted] **ppgname** parameter).

In case of a 1-way or 2-way cross-connection a single entry will be returned, in case of a path-protected cross-connection two entries will be returned (one entry for the worker-leg and the second one for the protection-leg) – see also the example-section.

Only the legs meeting the characteristics of the request will be in the reply in case of path-protected cross-connection. The NE will only add matching legs which form together with the reported legs a path-protected cross-connection topology.

For the rate and input tributary either concrete value or the ranging via all (and val1 for the port-aid in case of using the GEN) can be used.

In case the given set of input parameter does not match with existing cross-connection(s), the command is accepted BUT no information is returned i.e. the output contains the empty string "". This case happens if e.g. the rate is specified to vc4 but the **in_aid** refers to a tributary, which does not match with the boundary rules for vc4 e.g. 1-1-#-#-1-1-2.

The **ppgname** is applicable only for cross-connection which are related to a protection group of **prototype=PATHDRI**. In case **in_aid** is omitted the **ppgname** must not be omitted and the command is acting on all protection groups (of **prototype=PATHDRI**) with the specified **ppgname**.

The use of **in_aid** AND **ppgname** in one command request is not allowed; i.e. their use is mutually exclusive. If no match is found the command will complete but no output is returned (empty string).

Storage and retrieval of the **ppgname** is case sensitive, but the actual use of the **ppgname** to determine the corresponding protection group is case insensitive.

Due to the specified retrieval behavior for path-protected cross-connection, it can happen that only one leg composing the path-protected cross-connection will be in the reply.


Update affected entities

The RTRV-CRS command does not generate a REPT DBCHG message.

Example input/output

Example 1

Suppose the following compound cross-connection, as used in UPSR application, is given:

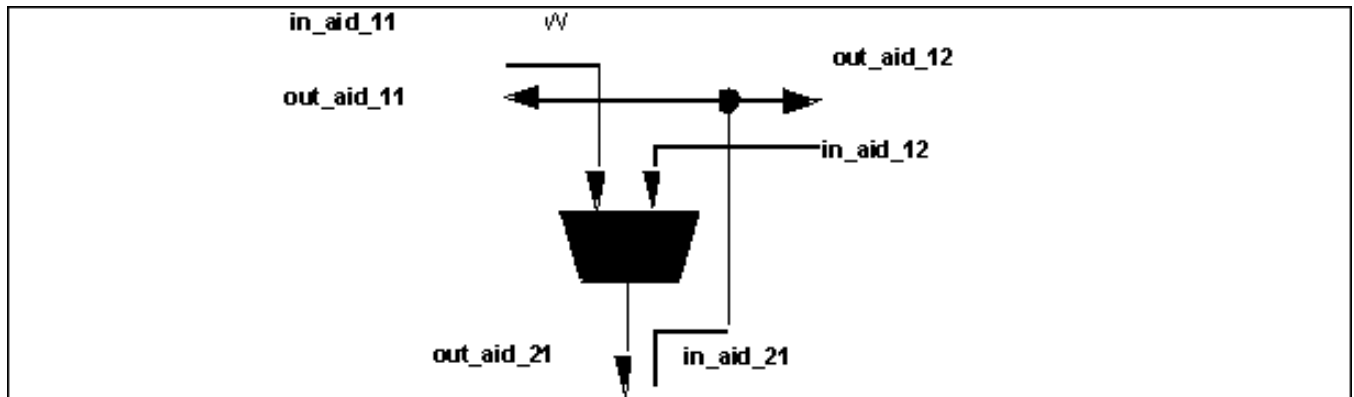

RTRV-CRS-all:UNITE-NE:1-1-#-#-all-all-all:123456; will then output (the blank lines are for better reading):

```
in_aid_11,out_aid_21:vc4,,in_aid_12:lpblstat=NO,omode=NORM,  
repleg=1WAYPSW,xcappl=20,xcnum=123456789;
```

```
in_aid_12,out_aid_21:vc4,,in_aid_11:lpblstat=NO,omode=NORM,  
repleg=1WAYPSP,xcappl=20,xcnum=123456789;
```


```
in_aid-21,out_aid_11:vc4:omode=NORM,repleg=1WAY,xcappl=20,  
xcnum=123456789;
```

```
in_aid-21,out_aid_12:vc4:omode=NORM,repleg=1WAY,xcappl=20,  
xcnum=123456789;
```

The upper 2 outputs specify the path-protected cross-connection, consisting of 2 legs. The lower 2 outputs specify the 2 legs of the bridge.

Example 2

Suppose the following compound cross-connection configuration is given:

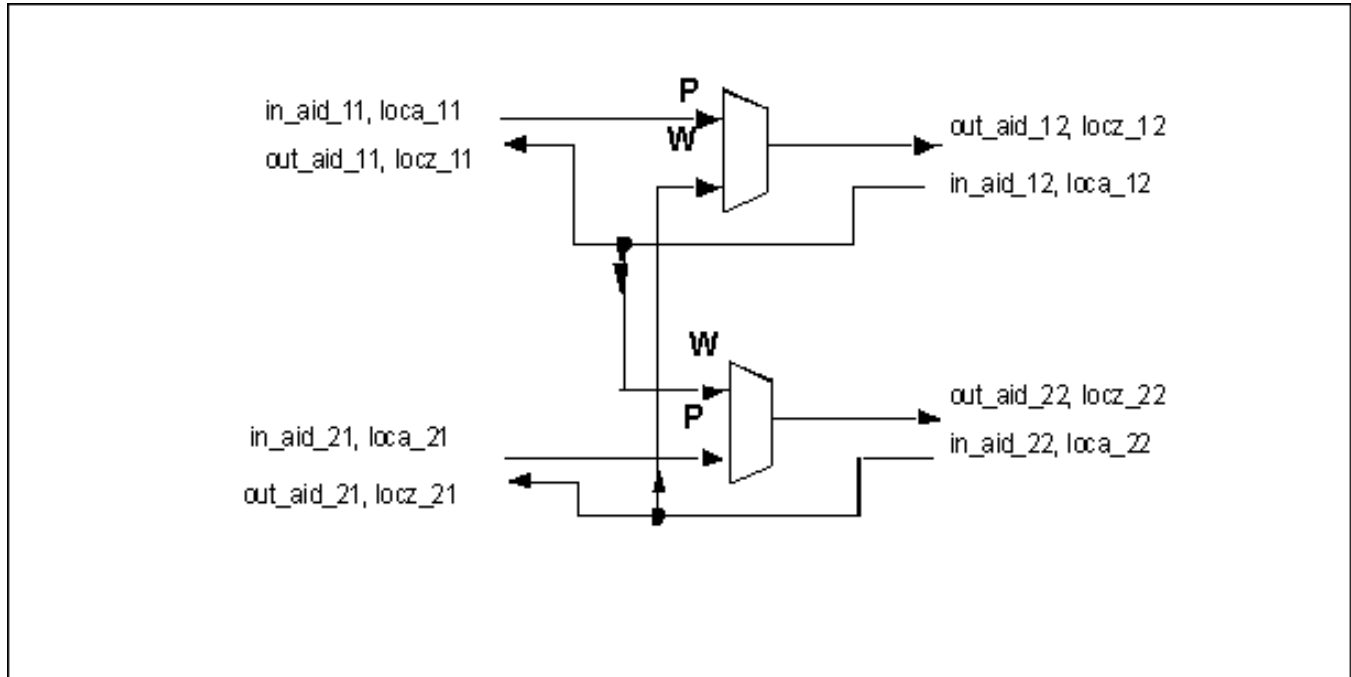

A ring interworking with drop and continue for a BLSR with primary nodes in the same NE. RTRV-CRS-all:UNITE-NE:1-1-#-#-all-all-123456; will then output (the blank lines are for better reading):

```
in_aid_11,out_aid_12:vc4,,in_aid_22:loca=loc_a11,locz=locz_12,  
lpblstat=NO,omode=NORM,repleg=1WAYPSP,xcappl=41,  
xcnum=011031111;
```

```
in_aid_22,out_aid_12:vc4,,in_aid_11:loca=22,locz_12,lpbkstat=NO,  
omode=NORM,repleg=1WAYPSW,xcappl=41,xcnum=011031111;
```

```
in_aid_12,out_aid_11:vc4:loca=loca_12,locz=locz_11,omode=NORM,  
repleg=1WAY,xcappl=41,xcnum=011031111;
```

```
in_aid_12,out_aid_22:vc4,,in_aid_21:loca=loc_a12,locz=locz_22,  
lpblstat=NO,omode=NORM,repleg=1WAYPSW,xcappl=41,  
xcnum=011031111;
```

```
in_aid_21,out_aid_22:vc4,,in_aid_12:loca=21,locz_22,lpbkstat=NO,  
omode=NORM,repleg=1WAYPSP,xcappl=41,xcnum=011031111;
```



```
in_aid_22,out_aid_21:vc4:loca=loca_22,locz=locz_21,omode=NORM,  
repleg=1WAY,xcappl=41,xcnum=011031111;
```

The first 3 outputs specify the upper part of the configuration while the last 3 outputs specify the lower part.

Example 3

Suppose no cross-connections do exist, or the input data do not match with existing cross-connections, then the output would be an empty string: "".

RTRV-CRS for a cross-connection established via ENT-CRS-VC4 with a specified in_aid:

```
RTRV-CRS-VC4:LT-UNITE-123:1-1-#-#-1-1-1:123456;  
    LT-UNITE-123 00-01-01 08:00:00  
M 123456 COMPLD  
    "1-1-#-#-1-1-1,1-1-#-#-2-1-1:VC4:lpbkstat=NO,omode=NORM,  
    repleg=2WAY,rtnomode=NORM,rtnxcappl=20,  
    rtnxcnum=123456789,xconcls=TRADITIONAL,xcappl=20,  
    xcnum=123456789"  
;
```

RTRV-CRS for a cross-connection established via ENT-PATH with a specified in_aid:

```
RTRV-CRS-VC4:LT-UNITE-123:1-1-#-#-1-1-1:123456;  
    LT-UNITE-123 00-01-01 08:00:00  
M 123456 COMPLD  
    "1-1-#-#-1-1-1,1-1-#-#-2-1-1:VC4:lpbkstat=NO,omode=NORM,  
    repleg=2WAY,rtnomode=NORM,rtnxcappl=0,rtnxcnum=000000000,  
    xconcls=NN,xcappl=0,xcnum=000000000"  
;
```

Error responses

Validation rule: *in_aid* or *ppgname* existence

RTRV command processing verifies that either *in_aid* is or *ppgname* is present.

Error code: IDNC - Input Data Not Consistent, *in_aid* or *ppgname* needed

Related TL1 messages

- [“DLT-CRS: Delete cross-connection” \(7-56\)](#)
- [“ED-CRS: Edit Cross-connection” \(7-46\)](#)
- [“ENT-CRS: Enter cross-connection” \(7-25\)](#)

References GR-199-CORE



ENT-CRS: Enter cross-connection

The ENT-CRS-**modifier** command can be initiated by a user to establish a cross-connection between tributaries in the NE.

The **modifier** in the ENT-CRS command indicates the cross-connection rate of the tributary for which the command is applied to. There is no difference if the rate is specified as a SONET rate (STS1, STS3,..) or as SDH-rate (VC3, VC4, ...) for the establishment of the cross-connection i.e. the ENT-CRS-**<sonet-rate>** yields to the same (with the exception mentioned next) physical and logical behavior as ENT-CRS-**<sdh-rate>**. No check is made if the **modifier** matches the interface-standard of the port i.e. if the port is provisioned as SONET (resp. SDH) and the **rate** is a SONET (resp. SDH) rate. The only difference between entering a cross-connection via SONET- or SDH-rate as modifier is that a RTRV-CRS-**modifier** will return the same output parameter **rate** as was used when entering the cross-connection.

The number of cross-connections from the same tributary is restricted to two i.e. bridging (1:2) is possible but no broadcast 1:N, N>2 .

See section Error response concerning not supported/allowed combinations of input/output for cross-connections.

Physical preconditions prior to establishing a cross-connection

Please note that (for the ENT-CRS command processing) it is not necessary that the packs necessary for establishing traffic (i.e. the switch and the optical-packs OPn or GEn) are physically present and operable; Instead it is sufficient that those packs are pre-/provisioned and the corresponding logical entities are created in the database of the NE.

Properties

Login Privilege: User Privilege Code (UCFC/UCAL): P3

Priority: 3

Abortable: No

Input format

Command Syntax: ENT-CRS-**modifier:tid:in_aid,out_aid:ctag::[cct][,in_aid2][:spec_block];**

Input parameters

Command parameters

1. modifier
This parameter indicates the cross-connection rate on which the ENT-CRS command acts on.
For detailed description please refer to the [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#) command.
Type: Alphanumeric value set.
Range:
 - VC3
 - VC4
 - VC44C
 - VC416C
 - VC464C
 - STS1
 - STS3
 - STS12
 - STS48
 - STS192.
2. tid – Target Identifier
Target Identifier. Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
3. in_aid – Input Access Identifier
This parameter specifies the source of the cross-connection. For a detailed description please refer to the *in_aid* input parameter in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
Type: For a detailed description please refer to the *in_aid* input parameter in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
Range: No use of the all value within the *in_aid* is allowed.
4. out_aid – Output Identifier
This parameter specifies the sink of the cross-connection. For a detailed description please refer to the *out_aid* output parameter in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
Type: For a detailed description please refer to the *out_aid* output parameter in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
Range: No use of the all value within the *out_aid* is allowed.

5. ctag – Correlation Tag
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
6. cct – cross-connection Topology
This parameter specifies the topology of the cross-connection to be established via the ENT-CRS command.
The topology defines
 - – the number of legs of the cross-connection
 - – whether both legs belong to the same tributary
 - – whether a path protection is included.The following values are possible:
 - 1WAY: the cross-connection consists of one leg given by the *in_aid* to the *out_aid*
 - 2WAY: the cross-connection consists of two legs given by the *in_aid* to the *out_aid* and the return leg given by the *out_aid* to the *in_aid*
 - 1WAYPPROT: the cross-connection consist of one leg (the worker leg) given by *in_aid* to *out_aid* and another leg (the protection leg) given by *in_aid2* to the *out_aid*. The path selector function is associated with the tributary of *out_aid*.Type: Alphanumeric value string.
Range:
 - 1WAY
 - 2WAY (default)
 - 1WAYPPROT.
7. in_aid2 – Input Access Identifier 2
This parameter is applicable to path-protected cross-connections only and specifies the source of the protection leg.
Thus *in_aid* and *out_aid* specify the working leg while *in_aid2* and *out_aid* specify the protection leg of a path-protected cross-connection. For non path-protected cross-connection the parameter *in_aid2* must be omitted.
Both input aids (*in_aid* and *in_aid2*) have to be related to ports with the same interface mode being either SDH or SONET. This is due to different switch criteria for SONET and SDH.
Type: STS1NumAID.
Note: Using VCGNumAID (when using GEn) is NOT applicable

as the GEN can not be the input to a path-protected cross-connection.

Range: No use of the all value within the *in_aid2* is allowed.

Default: None (a valid value is needed on case of a path-protected cross-connection – no default is defined).

Spec block parameters

1. **htmr** – Hold Off Timer
This parameter specifies the value of the hold-off timer for automatic protection switching. This parameter is applicable to path-protected cross-connections only and shall be omitted for non path-protected cross-connections.
For details please refer to parameter *htmr* in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. **loca** – Location-a
For a detailed description please refer to parameter *loca* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
Note that *loca* parameter is omitted for non-BLSR and BLSR-ADD cross-connection.
3. **loca2** – Location-a-2
This parameter specifies the TID associated with *in_aid2* of the protection leg of a path-protected cross-connection.
For the syntax, range and default definition please refer to *loca* in the [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#) section.
Please note that *loca-2* parameter is omitted for non-BLSR cross-connection. Please further note the remark given in the *loca* description of the [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#) section.
4. **locz** – Location-z
For a detailed description please refer to parameter *locz* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
Note that *locz* parameter is omitted for non-BLSR and BLSR-DROP cross-connection.
5. **omode** – Output Mode
For a detailed description please refer to parameter *omode* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
6. **ppgname** – Path Protection Group Name
For a detailed description please refer to parameter *ppgname* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

7. **rme – Revertive Mode Enable**
This parameter specifies whether the path protection operates in revertive-mode (rme=ENABLE) or non-revertive-mode (rme=DISABLE).
This parameter is applicable to path-protected cross-connections only and shall be omitted for non path-protected cross-connections.
For details please refer to parameter **rme** in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
8. **rtnomode – Return Output Mode**
The parameter **rtnomode** (return output mode) is only applicable for 2way cross-connection and is omitted for 1way and path-protected cross-connections.
For a detailed description please refer to parameter **rtnomode** in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
Note the default values:
 - For a 1way cross-connection the default value is NOT-APPLICABLE, but the parameter must be omitted in the ENT-CRS command.
 - For a 2way cross-connection the default value is: NORMAL.
9. **snctype – SNCP Type**
This parameter is used to specify the SNCP mode i.e. the switch criteria used for automatic protection switching. This parameter is mandatory for path-protected cross-connections and only applicable to them. The parameter shall be omitted for non path-protected cross-connections.
For details please refer to parameter **snctype** in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
10. **wtr – Wait To Restore Time**
This parameter specifies the value of the wait-to-restore time for automatic protection switching. This parameter is applicable to path-protected cross-connections only and is omitted for non path-protected cross-connections.
For details please refer to parameter **wtr** in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

11. *xcappl* – Cross-connection Application
For a detailed description please refer to parameter *xcappl* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
12. *xcnum* – Cross-connection Number
For a detailed description please refer to parameter *xcnum* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

Output format If the ENT-CRS command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are described in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

Behavior *cct=1WAY, 2WAY*

Cross-connections can be established via the ENT-CRS-mod command between tributaries of type:

- STS1-tribs: Tribs related to SDH/SONET ports (i.e. ports of OPn packs) - the AID for these tribs being specified as STS1NumAID (refer to the AID definition) or
- VCG-tribs: Tribs related to VCG-ports (i.e. (logical) ports of GEn pack - please refer to [7], [8], [9], [10] for details) - the AID for these tribs being specified as VCGNumAID (refer to the AID definition).

Between STS1-tribs cross-connection can be established for all the specified SDH/SONET rate (i.e. VC3/STS1, VC4/STS3, VC44c/STS12, VC16c/STS48, VC464c/STS192).

As soon as a VCG-trib is involved in a cross-connection (either cross-connection between VCG-tribs or between VCG-trib and STS1-trib) only the cross-connection rates STS1/VC3 for a SONET-provisioned GEn-port or STS3/VC4 for a SDH-provisioned GEn-port is allowed. This is due the implicit tributary mode for the GEn-ports, which are either fixed structured to STS1/VC3 (1,2,3 up to

21) in case of a SONET-GEN or STS3/VC4 (1,4,7 up to 19) in case of a SDH-GEN.

Behavior cct=1WAYPROT

Path-protected cross-connections can be established via the ENT-CRS-mod command between tributaries of type:

- STS1-tribs: Tribs related to SDH/SONET ports (i.e. ports of OPn packs) - the AID for these tribs being specified as STS1NumAID (refer to the AID definition) or
- VCG-tribs: Tribs related to VCG-ports (i.e. (logical) ports of GEN pack) - the AID for these tribs being specified as VCGNumAID (refer to the AID definition).

For *in_aid* and *in_aid2* only STS1-tribs are allowed.

All path protection group related parameters are only used in the context of ENT-CRS command in order to provide appropriate defaults for different applications (from operator perspective). Retrieval, Modification and reporting for these parameters is within entity protection group.

When establishing a cross-connection a entity of type cross-connection is created with the parameter values as

- specified in the ENT-CRS command.

Additionally when establishing a path-protected cross-connection a protection entity is created with the parameter values as

- specified in the ENT-CRS command,
- (for those parameter not part of ENT-CRS command) with the default-values.

Updated affected entities: General

In case of establishing a path-protected cross-connection the command creates in addition an entity of type protection group (of type PATHDRI) with

- the attributes as entered in the ENT-CRS command and
- for those attributes not given by the command by its default values.

This creation is reported by means of an ENT-PROTN-GRP notification – refer to this notification for further details.

In case the *repleg* state is changed by establishing a cross-connection an ED-CRS notification is used to notify the updated *repleg* value.

Updated affected entities: 1-way cross-connection, not resulting in a 2 way cross-connection

In case a 1-way cross-connection is established where no "equivalent return-leg" (see below) is already existing one instance of type cross-connection is created with the entered parameter. This is reported by means of an ENT-CRS notification.

An "equivalent return-leg" means: when entering a 1-way cross-connection with rate N from in_trib to out_trib a return-leg would be given by

- a 1-way cross-connection from out_trib to in_trib
- with the same rate N
- and in (case of BLSR only) the same *loca* and *locz* values

Example:

```
ENT-CRS-vc4:NName:1-1-#-#-3-4-1,1-1-#-#-7-3-1:586::1way;;
```

```
REPT DBCHG:
```

```
ENT-CRS-VC4:1-1-#-#-3-4-1,1-1-#-#-7-3-1:1WAY,:omode=NORM,  
xcappl=0,loca=\"\",locz=\"\",repleg=1WAY
```

Updated affected entities: 1-way cross-connection, resulting in a 2-way cross-connection

In case a 1-way cross-connection is established where an "equivalent return-leg" (see below) is already existing one instance of type cross-connection is created with the entered parameter and the repleg-parameter "2-way". This is reported by means of an ENT-CRS notification.

Furthermore as stated above the *repleg* status is updated for the already existing leg (i.e. in_aid, out_aid are flipped w.r.t. ENT request) and reported via an ED-CRS notification.

An "equivalent return-leg" means: when entering a 1-way cross-connection with rate N from in_trib to out_trib a return-leg would be given by

- a 1-way cross-connection from *out_trib* to *in_trib*
- with the same *rate* N
- and (in case of BLSR only) the same *loca* and *locz* values

Example (Precondition is specified in previous example):

```
ENT-CRS-vc4:NName:1-1-#-#-7-3-1,1-1-#-#-3-4-1:587::1way;;
```

REPT DBCHG:

ENT-CRS-VC4:1-1-#-#-7-3-1,1-1-#-#-3-4-1:1WAY,:omode=NORM,
xcappl=0, loca="\",locz="\",repleg=2WAY,rtnxcappl=0,
xcnum=000000000,rtnxcnum=000000000, rtnomode=NORM

REPT DBCHG:

ED-CRS-VC4:1-1-#-#-3-4-1,1-1-#-#-7-3-1::repleg=2WAY:

Note that in the considered case the ENT-CRS notification for the 2-way cross-connection contains the same information as if it would result directly from an ENT-CRS with the *cct=2WAY*, i.e. the ENT-CRS notification for a *repleg=2WAY* cross-connection is independent from the way it is created (either direct via *cct=2WAY* or via two separated 1-way cross-connections) and it thus also contains the *rtnxcappl*, *rtnxcnum*, *rtnomode* parameters.

Updated affected entities: 2-way cross-connection

In case a 2-way cross-connection is established one instance of type cross-connection is created with the entered parameter and the *repleg=2WAY*.

This is reported by means of an ENT-CRS notification.

Example:

ENT-CRS-vc4:UNITE-NE:1-1-#-#-3-1-1,1-1-#-#-2-1-7:584::2way::

REPT DBCHG:

ENT-CRS-VC4:1-1-#-#-3-1-1,1-1-#-#-2-1-7:2WAY,:omode=NORM,
xcappl=0, xcnum=000000000,rtnomode=NORM,locz="\",
repleg=2WAY,rtnxcappl=0, rtnxcnum=000000000

Updated affected entities: path-protected cross-connection

In case a path-protected cross-connection is established two instances of type cross-connection is created (one for each leg) with the entered parameters and *repleg=1WAYPSW* and *repleg=1WAYPSP*, respectively.

Furthermore one instance of type protection group is created and notified via an ENT-PROTN-GRP notification.

For details on protection group and the related notifications please refer to the protection group section.

Example (path-protected SDH cross-connection i.e. no adaptive mode for non-BLSR):

```
ENT-CRS-vc3:NameOfNE:1-1-#-#-1-1-1,1-1-#-#-34-1-  
1:123456::1WAYPPROT,1-1-#-#-2-1-1:ppgname="name1",  
rme=ENABLE,snctype=SNCI,htmr=300,wtr=10;
```

REPT DBCHG:

```
ENT-CRS-VC3:1-1-#-#-1-1-1,1-1-#-#-34-1-1:1WAYPPROT,1-1-#-#-2-  
1-1: omode=NORM,xcnum=000000000,xcappl=0,loca="",locz="",  
repleg=1WAYPSW
```

REPT DBCHG:

```
ENT-CRS-VC3:1-1-#-#-2-1-1,1-1-#-#-34-1-1:1WAYPPROT,1-1-#-#-1-  
1-1: omode=NORM,xcnum=000000000,xcappl=0,loca="",locz="",  
repleg=1WAYPSP
```

REPT DBCHG:

```
ENT-PROTN-GRP:1-1-#-#-15-1-1::PATHDRI:ppgname="name1",  
dripathpn=DEFAULT,htmr=300,protn=1-1-#-#-2-1-1,wkg=1-1-#-#-01-  
1-1,rme=ENABLE,snctype=SNCI,wtr=10,htmr=300,<CML-BLOCK>
```

For details of the CML-Block please refer to the [“ENT-PROTN-GRP notification” \(8-74\)](#) part.

ONNS specific behavior - Behavior for *xconcls*

A cross-connection which is created via ENT-CRS shall have implicitly set the *xconcls* parameter to TRADITIONAL, see [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

The only way to explicitly set the *xconcls* parameter is via the ED-NNCRS command.

ONNS specific behavior - Behaviour for tributaries belonging to EDGE ports in a BLSR/MS-SPRING group

When a cross-connection of type *xconcls*=TRADITIONAL is created where a tributary belongs to a port with *portClass*=EDGE, which is part of a BLSR/MS-SPRING group, then any *loca*, *locz* parameter with a value different from the default value shall be copied from the tributary into the corresponding *loca*, *locz* parameter of the cross-connection.

The *loca/locz* parameter in the tributary shall be reset to its default value. This shall be notified by means of an ED-STS1 (*istd*=SONET) or ED-VC3 (*istd*=SDH) notification.

Example input/output

Example 1

A non-BLSR 1-way cross-connection with rate vc4 between an OP10G (2.vc4) in slot 01 and an OP2G5 in slot 34 (3.port 3.VC4) will be established by:

```
ENT-CRS-VC4:UNITE-NE:1-1-#-#-10-1-4,1-1-#-#-34-3-  
7:123456::1WAY;  
LT-UNITE 00-11-14 12:00:00  
M 123456 COMPLD  
;
```

Example 2

A 2-way Drop-cross-connection with rate vc44c between an OP10G (2.vc4-4c) in slot10 and an OP10G in slot 17 (1.vc4-4c) will be established – the OP10G in slot10 being in the BLSR.

```
ENT-CRS-ST512:UNITE-NE:1-1-#-#-10-1-13,1-1-#-#-17-1-  
27:123456::2WAY:LOCA=NE-in-RING;  
LT-UNITE 00-11-14 12:00:00  
M 123456 COMPLD  
;
```

Example 3

A SDH path-protected cross-connection consisting of

- a working leg (1-1-#-#-10-1-1 -> 1-1-#-#-34-1-3) and
- a protection leg (1-1-#-#-11-1-1 -> 1-1-#-#-34-1-3) is established. None of the affected tributaries is in an BLSR.

The path protection is specified by

- a name (*ppgname*="Pathprot.Gr.Name.1"),
- the snctp-type (*snctype*=SNCI),
- the hold-off-timer-value (*htmr*=3000, i.e. 3 sec) and
- the wait-to-restore time (*wtr*=10, i.e. 10min).

```
ENT-CRS-ST512:UNITE-NE:1-1-#-#-10-1-1,1-1-#-#-34-1-3:  
123456::1WAYPPROT,1-1-#-#-11-1-1:ppgname="Pathprot.Gr.  
Name.1",rme=DISABLE,snctype=SNCI,htmr=3000,wtr=10;  
LT-UNITE 00-11-14 12:00:00  
M 123456 COMPLD  
;
```

Error responses

Validation rule: Entities must exist

Cross-connection command processing verifies the logical tributaries specified in the command do exist.

Error code: IENE - Input Entity Not Exists, Specified tributary/tributaries do not exist

Validation rule: Only those parameter present which are needed

Cross-connection command processing verifies according to the given context only those parameter are present which are needed for that context. This means that e.g.

- for entering a 1-way cross-connection the *rtnomode* must not be present
- for entering a non path-protected cross-connection the *ppgname*, *htmr*, *wtr*, *snctype*, *rme* parameter must not be present.

Error code: IDNV - Input Data Not Valid, Parameter(s) present which are not allowed

Validation rule: Both legs must have same rate

Cross-connection command processing verifies that each logical AID specified in the command is consistent with the cross-connection rate. Consistency implies the following condition:

The rate of a new cross-connection from an input tributary that is in use for an existing cross-connection must match the rate of that existing cross-connection.

This can happen if to an existing leg with rate *n* a further leg is tried to establish with rate *m* $\neq$ *n*.

Error code: IDNC - Input, Data, Not Consistent, Bridging rate is not compliant with existing leg

Validation rule: AID boundary and rate consistency

Cross-connection command processing verifies that each logical AID specified in the command is consistent with the cross-connection rate. Consistency implies the following condition:

- the boundary of the specified tributary is consistent with the specified rate.
- STS-1/VC-3 payloads can start at any position

- the first (STS-1 equivalent) tributary of an STS-3/VC-4 rate cross-connection must be on a $\text{mod}3 + 1$ boundary (1, 4, 7, ...).
- the first STS-1 of an STS-12/VC-4-4c rate cross-connection must be on a $\text{mod}12 + 1$ boundary (1, 13, 25, ...).
- the first STS-1 of an STS-48/VC-4-16c rate cross-connection must be on a $\text{mod}48 + 1$ boundary (1, 49, 97, ...).
- the first STS-1 of an STS-192/VC-4-64c rate cross-connection must be on a $\text{mod}192 + 1$ boundary (1, 193, 385, ...).

Error code: IDNC - Input, Data, Not Consistent, Tributary boundary is inconsistent with the indicated rate

Validation rule: Tributary provisioning and rate consistency

For fixed rate tributaries, cross-connection command processing verifies that

- if the port identified by logical input AID is provisioned to operate in the fixed signal rate mode, as determined by the tributary mode parameter, then the specified cross-connection rate is equivalent to the provisioned signal rate of the input tributary, as determined by the tributary input signal rate parameter.
- if the port identified by logical output AID is provisioned to operate in the fixed signal rate mode, as determined by the tributary mode parameter, then the specified cross-connection rate is equivalent to the provisioned signal rate of the output tributary, as determined by the tributary unequipped output signal rate parameter. Note that in both cases it does not matter if the tributary signal rate is given for the SONET- (STS3/STS12/...) or the SDH-interface standard (VC3/VC4..). As an example: It is possible to enter a cross-connection via ENT-CRS-VC4... between two tributaries related to tributary signal rates given by VC4/VC4 or by VC4/STS12 or by STS12/STS12; Thus the inputsig/unequipoisig-values for SDH (3, 4, 4c, 16c, 64c) are identical to those of SONET (1, 3, 12, 48, 192) seen from a cross-connection perspective.

Error code: IDNC - Input, Data, Not Consistent, Specified Tributary does not support the indicated rate

Note: In case of adaptive rate no consistency check is required.

Validation rule: XC pack is (pre-)provisioned

Cross-connection command processing verifies that at least one XC pack is pre-provisioned or provisioned.

Error code: SNVS - Status, Not in Valid State, XC Pack not provisioned

Validation rule: Rate must not exceed half of the port rate (2f-BSLR only)

Cross-connection command processing verifies that in case of a 2f-BLSR that the cross-connection rate does not exceed half the rate of the related port.

Note that this validation rule only applies in case of adaptive mode because for fixed-rate such a payload violation would already been denied in the context of the ED-*rr* command.

Error code: IDNC - Input, Data, Not Consistent, 2f-BSLR: rate exceeds half of the port rate

Validation rule: path-protected cross-connection has unique input AIDs

Cross-connection command processing verifies that for path-protected cross-connections the two input tributaries are unique i.e. the in_aid has to be different from in_aid2.

Error code: IDNV - Input Data Not Vaild, Both input tributaries are identical

Validation rule: path-protected cross-connection has inputs from ports with same interface standards

Cross-connection command processing denies requests to establish path-protected cross-connections where the ports of the logical input tributaries are not provisioned for the same standard, either SONET or SDH – this is due to different switching criteria.

Error code: SNVS - Status, Not in Valid State, Different interface standards for input tributaries

Validation Rule: No trib of any MSP port as in_aid (for path-protected cross-connection)

Cross-connection command processing shall verify that for path-protected cross-connections no tributary is used as *in_aid* or *in_aid2* if one of the related ports is a member of a 1+1 or 1:1 multiplex section/line protection group.

Error Code: SNVS - Status, Not in Valid State, trib of MSP
1+1/1x1 port as input-trib in pathprotected
crossconnection

Validation Rule: no multiple added XCs for MSSPRING TOP

Cross-connection command processing shall verify that for
path-protected cross-connections the output tributary and one of the
two input tributaries are not a worker tributary of an port being a
member of a BLSR/MS-SPRing protection group operating in TOP
mode (i.e. protnmode = 'SHORTENED' or 'TOPEX').

Error Code: SNVS - Status, Not in Valid State, multiple
added XCs for MSSPRING TOP

Validation rule: Supported MS-SPRing/BLSR DNI/DRI

Cross-connection command processing verifies that for path-protected
cross-connections the specified input/output tribs are an
allowed/supported combination w.r.t. BLSR/MS-SPRing DRI/DNI.

Error code: SNVS - Status, Not in Valid State, unsupported
MS - SPRing/BLSR DNI/DRI

**Validation rule: path-protected cross-connection: missing
parameters**

Cross-connection command processing shall deny requests to establish
path-protected cross-connections if one of the mandatoy parameters
htmr, *rme*, *snctype* or *wtr* is missing.

Error code: IPMS -Input, Parameter MiSSing, <parameter name>
is missing

**Validation rule: path-protected cross-connection: both inputs in
fixed-mode**

Cross-connection command processing denies requests to establish
path-protected cross-connections where both ports of the logical input
tributaries are not provisioned in fixed-mode. In other words if one or
both inputs of a path-protected cross-connections are in adaptive-mode
the command will be denied.

Error code: SNVS - Status, Not in Valid State, input
port(s)for pathprot. crossconnecton in adaptive mode

The above listed validation rule is due to MUXnb00834, which, in
short, states that adaptive-mode for path-protection cross-connection is
not supported.

Validation rule: No cross-connection loopback existing

Cross-connection command processing denies commands requesting a cross-connection to a tributary with an existing cross-connection loopback.

Error code: SNVS - Status, Not in Valid State, Tributary has existing loopback.

Note: There is no command validation concerning facility loopback i.e. the cross-connection establishing is possible even with a facility loopback present.

Validation Rule: No test access session

Cross-connection command processing shall deny commands requesting a cross-connection to a tributary which is used in a test access session either as tributary under test or as test access tributary. The denial of the cross-connection request shall be independent whether the direction of the tributary (input or output) is used in the test access session or not.

Error Code: SNVS - Status, Not in Valid State, Tributary used in test access session

With this validation rule it is not allowed to add a 1-way cross-connection at a tributary where already another 1-way cross-connection exists in the other direction. This shall avoid cross-connection topology conversions.

Validation rule: Restrict number of cross-connection using same input tributary

Cross-connection command processing verifies that the number of cross-connections originating from the same tributary is restricted to two.

Error code: SNVS - Status, Not in Valid State, Too many cross-connection originating from same tributary

Validation rule: TIDs consistent with existing cross-connection

Cross-connection command processing verifies that for each leg of the cross-connection for which the logical input AID is used in any pre-existing cross-connection that the source TID is identical to that associated with the pre-existing cross-connection. This hold for BLSR cross-connections where both legs of a bridge must originate from the same NE.

Error code: SNVS - Status, Not in Valid State, TID inconsistent with existing cross-connection.

Validation rule: Output not in use

Cross-connection command processing verifies that logical output AID is not in use as a destination for an existing cross-connection.

Error code: SNVS - Status, Not in Valid State, Output is already crossconnected

Validation rule: BLSR/MS-SPRing protection access (Extra Traffic)

Cross-connection command processing shall deny commands requesting cross-connections to the protection tributaries of a port being a member of a BLSR/MS-SPRing protection group. Exception is when the protection group has the parameter attribute protnmode = TOPEX.

Error Code: SNVS - Status, Not in Valid State, Command refers to protection tributaries of a BLSR/MS-SPRing protection and no TOPEX application

Validation rule: Corresponding loca/locz information is missing

Cross-connection command processing shall deny commands, if affected tributaries are on ports in BLSR/MSSPRING groups, but corresponding loca/locz information is missing in the command.

Error code: IDNC - Input, Data Not Consistent, Corresponding loca/locz information is missing

Validation rule: SNC Type Compliance


Cross-connection command processing verifies the following when establishing a path-protected cross-connection:

If there are any existing path protection groups that are *co-located* to the cross-connection to be established, then the SNC protection type parameter in the ENT-CRS command has the same value as the SNC protection type attribute of all of the *co-located* path protection groups.

A path protection group P is defined for this requirement to be *co-located* to a cross-connection C if any of the logical input tributaries of the cross-connections belonging to P are logical input tributaries of C – see the example below.

Error code: IDNC - Input, Data, Not Consistent, SNC Type not compliant with existing path-protected cross-connection

As an example consider the figure below: A path-protected cross-connection A, B → Out-1 may be established with the SNC-Type of e.g. SNCI; If then establishing another path-protected cross-connection A, B → Out-2, which has a common tributary (here tributary A) with the former path-protected cross-connection, the SNC-Type of this new one has to be SNCI as well.

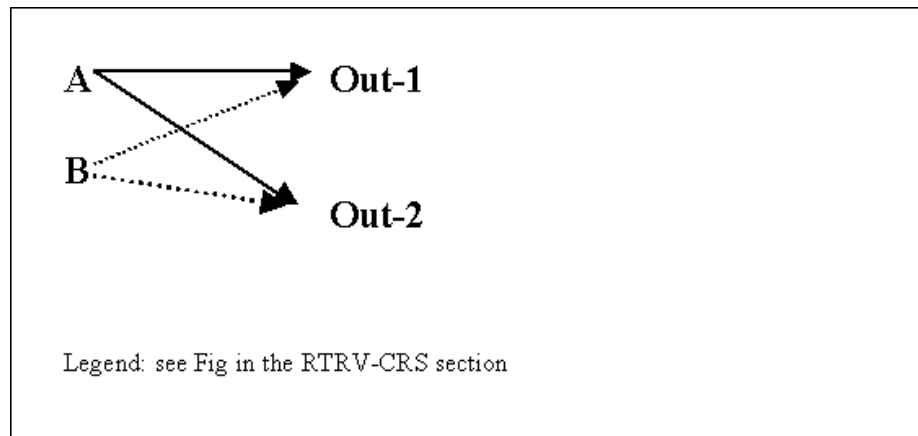

Validation rule: Rate consistency for VCG Tributaries

Cross-connection command processing shall verify that

- the specified cross-connection rate is equivalent to the signal rate of the input tributary, as determined by the tributary input signal rate parameter of the VCG port (parameter inputsig).
- the specified cross-connection rate is equivalent to the signal rate of the output tributary, as determined by the tributary unequipped output signal rate parameter of the VCG port (parameter unequipsig).

Note that in both cases it does not matter if the tributary signal rate is given for the SONET- (STS3/STS12/...) or the SDH-interface standard (VC3/VC4..). As an example: It is possible to enter a cross-connection via ENT-CRS-VC4... between two tributaries related to tributary signal rates given by VC4/VC4 or by VC4/STS12 or by STS12/STS12; Thus the signal rate values for SDH (3,4,4c,16c,64c) are identical to those of SONET (1,3,12,48,192) seen from a cross-connection perspective.

Error code: IDNC - Input Data Not Consistent, Specified Tributary does not support the indicated rate

Validation rule: No VCG-trib as *in_aid* (for path-protected cross-connection)

Cross-connection command processing verifies that for path-protected cross-connection no VCG-trib is used as *in_aid* or *in_aid2*. The case of path-protected cross-connection in conjunction with GEN only makes sense for both input-tribs (*in_aid* and *in_aid2*) being STS-tribs and the *out_aid* being VCG-trib.

Error code: IDNC - Input Data Not Consistent, VGC-trib as input-trib in pathprotected crosconnection

Validation rule: Maximum number of *ppgnames* exceeded

Cross-connection command processing verifies that for path-protected cross-connection the maximum number of ppgnames is not exceeded if a new (not already used *as ppgname* for another protection group) is specified.

Error code: SSRE - Status, System Resources Exceeded, limit of ppgnames exceeded

ONNS specific validation Rule: Tributaries must not belong to ports of *portClass* INNI

Cross-connection command processing shall verify, that all affected input and output tributaries do not belong to ports of *portClass* INNI.

Error Code: SNVS - Status, Not in Valid State, Tributaries must not be on ports of portClass INNI

Related TL1 messages

- [“DLT-CRS: Delete cross-connection” \(7-56\)](#)
- [“ED-CRS: Edit Cross-connection” \(7-46\)](#)
- [“ENT-ROLL: Enter roll” \(7-65\)](#)
- [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#)

References GR-199-CORE



ENT-CRS notification

Output format The ENT-CRS notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ENT-CRS-*modifier:in_aid,out_aid:cct,[in_aid2]:spec-block;*

Output parameters

Command parameters

1. **modifier**
See definition of input parameter *modifier* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
2. **in_aid** – Input Access Identifier
See definition of output parameter *in_aid* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
3. **out_aid** – Output Access Identifier
See definition of output parameter *out_aid* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
4. **cct** – Cross-connection Topology
See definition of input parameter *cct* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
5. **in_aid2** – Second Input Access Identifier
See definition of output parameter *in_aid2* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

Spec block parameters

1. **loca** – Location-a
See definition of output parameter *loca* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
2. **locz** – Location-z
See definition of output parameter *locz* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
3. **omode** – Output Mode
See definition of output parameter *omode* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
4. **repleg** – Reported Leg Pair
See definition of output parameter *repleg* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

5. rtnomode – Return Output Mode
See definition of output parameter *rtnomode* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
6. rtnxcappl – Return Cross-connection Application
See definition of output parameter *rtnxcappl* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
7. rtnxcnum – Return Cross-connection Number
See definition of output parameter *rtnxcnum* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
8. xcappl – Cross-connection Application
See definition of output parameter *xcappl* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
9. xcnum – Cross-connection Number
See definition of output parameter *xcnum* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
10. xconcls – cross-connection class
See definition of output parameter *xconcls* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

Example output

```
LT-UNITE-123 00-01-01 08:00:50
A 815 REPT DBCHG
"TIME=08-00-12,DATE=00-01-01:ENT-CRS-VC4:1-1-#-#-1-1-1,
1-1-#-#-2-1-1:2WAY,:lpbkstat=NO,omode=NORM,repleg=2WAY,
rtnomode=NORM,rtnxcappl=20,rtnxcnum=123456789,
xconcls=TRADITIONAL,xcappl=20,xcnum=123456789"
;
```

□

ED-CRS: Edit Cross-connection

The ED-CRS-modifier command can be initiated by a user to modify the following cross-connection parameters:

- *loca/locz* in specifying the source-/destination TID associated with *in_aid/out_aid*
- *omode* specifying the output-mode of the cross-connection
- *xcappl* specifying the cross-connection application number of the cross-connection
- *xcnum* specifying the cross-connection number of the cross-connection.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: No

Input format Command Syntax: ED-CRS-*modifier:tid:in_aid,out_aid:ctag::spec_block*;

Input parameters

Command parameters

1. *modifier*

This parameter indicates the cross-connection on which the ED-CRS command acts on.

For detailed description please refer to the [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#) command.

Type: Alphanumeric value set.

Range:

- VC3
- VC4
- VC44C
- VC416C
- VC464C
- STS1

- STS3
- STS12
- STS48
- STS192.

No all value is supported.

2. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
3. in_aid – Input Access Identifier
See definition of parameter *in_aid* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
4. out_aid – Output Access Identifier
See definition of parameter *out_aid* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
5. ctag – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Spec block parameters

1. loca – Location-a
See definition of output parameter *loca* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
2. locz – Location-z
See definition of output parameter *locz* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
3. omode – Output Mode
See definition of output parameter *omode* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
4. xcappl – cross-connection Application
See definition of output parameter *xcappl* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
5. xcnum – cross-connection Number
See definition of output parameter *xcnum* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

Output format If the ED-CRS command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
```

;

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of the [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

A cross-connection can be modified via the ED-CRS command when *xconcls*=TRADITIONAL. A privileged user may change *xconcls* to TRADITIONAL via ED-NNCRS.

The affected parameter, as listed in the *spec_block* parameters part of this command, will be updated in the corresponding cross-connection entity.

For updates in more complex scenarios the following holds: -update of *omode* of one leg for a path-protected XC will also update *omode* of the second leg – thus 2 ED-CRS notifications will be sent; -update of *locz* of one leg within a path-protected XC will also update *locz* of the second leg -update of *loca* of one leg will also update *loca* of all other XCs sharing *in_aid* as input.

Furthermore the *repleg* status will be updated to *loca/locz* change (conversion from 1-way to 2-way or vice versa).

Updated affected entities

Apart from the cross-connection entity no further entities are affected by the ED-CRS command.

Example input/output

Example: For an existing non-BLSR 1-way cross-connection with rate vc4 the omode will be set to AIS via:

```
ED-CRS-VC4:UNITE-NE:1-1-#-#-10-1-4,1-1-#-#-20-1-  
7:123456:::omode=AIS;  
LT-UNITE 00-11-14 12:00:00  
M 123456 COMPLD  
;
```

Error responses

Validation rule: Entities (tributaries) must exist

Cross-connection command processing verifies that the logical tributaries specified in the command do exist.

Error code: IENE - Input Entity Not Exists, Specified tributary/tributaries do not exist

Validation rule: Entity (cross-connection) must exist

Cross-connection command processing verifies that the specified cross-connection exists.

Error code: IENE - Input Entity Not Exists, Specified cross-connection does not exist

Validation rule: Specified rate consistent with the cross-connection rate

Cross-connection command processing verifies that the specified rate (*modifier* parameter) is compliant with the rate of the existing cross-connection.

Error code: IPNC - Input Parameter Not Consistent, Rate inconsistent with cross-connection rate

Validation rule: TID validation

Cross-connection command processing verifies that the new TID(s) (*loca* and/or *locz*) are compliant with the actual cross-connection configuration according to the following rules:

- *loca* shall be a non-empty string in case the *in_aid* is involved in a BLSR protection group
- *locz* shall be a non-empty string in case the *out_aid* is involved in a BLSR protection group
- *loca* shall be a empty string in case the *in_aid* is not involved in a BLSR protection group
- *locz* shall be a empty string in case the *out_aid* is not involved in a BLSR protection group.

Error code: IPNC - Input Parameter Not Consistent, TID not compliant with cross-connection configuration

Validation rule: Presence of spec_block parameter

Cross-connection command processing shall verify that at least one spec_block parameter is submitted with the command.

Error Code: IDNV - Input, Data Not Valid

Validation rule: Cross-connection must not be of *xconcls* NN

Cross-connection command processing shall verify, that the cross-connection is not of *xconcls* NN if other parameters than *loca* and *locz* are changed..

Error Code: SNVS - Status, Not in Valid State, Cross connection must not be of *xconcls* NN

Validation rule: *loca/locz* information only retrievable for EXTRA TRAFFIC

Cross-connection command processing shall deny commands, if affected tributaries belong to EXTRA TRAFFIC and *loca/locz* information is specified in the command. The *loca/locz* information is automatically created for EXTRA TRAFFIC by the NE.

Error Code: IDNC - Input, Data Not Consistent, It is not allowed to specify *loca/locz* for EXTRA TRAFFIC

Related TL1 messages

- [“DLT-CRS: Delete cross-connection” \(7-56\)](#)
- [“ENT-CRS: Enter cross-connection” \(7-25\)](#)
- [“ENT-ROLL: Enter roll” \(7-65\)](#)
- [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#)
- [“DLT-PATH: Delete ONNS path Connection” \(15-55\)](#)
- [“ED-NNCRS: Edit NN cross-connection” \(7-53\)](#)
- [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)

References GR-199-CORE



ED-CRS notification

Output format The ED-CRS notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: ED-CRS-*modifier*:*in_aid*,*out_aid*:[*in_aid2*]:*spec-block*;

Output parameters

Command parameters

1. *modifier*
See definition of input parameter *modifier* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
2. *in_aid* – Input Access Identifier
See definition of input parameter *in_aid* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
3. *out_aid* – Output Access Identifier
See definition of output parameter *out_aid* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
4. *in_aid2* – Second Input Access Identifier
See definition of output parameter *in_aid2* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

Spec block parameters

1. *loca* – Location-a
See definition of output parameter *loca* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
2. *locz* – Location-z
See definition of output parameter *locz* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
3. *omode* – Output Mode
See definition of output parameter *omode* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
4. *repleg* – Reported Leg Pair
See definition of output parameter *repleg* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
5. *rtntaccstat* – Return Test Access Status
See definition of output parameter *rtntaccstat* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

6. **taccstat** – Test Access Status
See definition of output parameter **taccstat** in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
7. **xcappl** – cross-connection Application
See definition of output parameter **xcappl** in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
8. **xcnum** – cross-connection Number
See definition of output parameter **xcnum** in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
Note: **rtncxappl**, **rtncxnum** and **rtncmode** are not listed because these parameters are always in the scope of one leg.
Note that in contrast to CG the ED-CRS notification is used to notify **repleg** changes - CG therefore did use the ENT-CRS notification which is not logical.
9. **xconcls** – cross-connection class
See definition of output parameter **xconcls** in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
Note: Modification can only be done by a privileged user via ED-NNCRS.

Example output Refer to the “Detailed behavior description” of [“ED-CRS: Edit Cross-connection” \(7-46\)](#).



ED-NNCRS: Edit NN cross-connection

The ED-NNCRS-modifier command can be initiated by a user to set the cross-connection class parameter (*xconcls*) to TRADITIONAL. The command is available for privileged users as a precondition to delete a cross-connection with *xconcls*=NN via DLT-CRS.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P5
Priority: 1
Abortable: No

Input format Command Syntax: ED-NNCRS-*modifier:tid:in_aid,out_aid:ctag:::spec_block*;

Input parameters

Command parameters

1. *modifier*
For detailed description of parameter *modifier* please refer to the [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#) command.
2. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
3. *in_aid* – Input Access Identifier
See definition of parameter *in_aid* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
4. *out_aid* – Output Access Identifier
See definition of parameter *out_aid* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
5. *ctag* – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Spec block parameters

1. *xconcls* – cross-connection class
This parameter identifies, whether the cross-connection has been switched explicitly on the traditional way via an ENT-CRS command or implicitly via setting up an ONNS path. It can be set to TRADITIONAL via this command.
Type: alphanumeric value set.
Range: TRADITIONAL

Output format If the ED-NNCRS command completes successfully, then the following normal completion response is returned:

```
sid date time  
M ctag COMPLD  
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of the [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

The *xconcls* parameter of a cross-connection shall be set to TRADITIONAL via the ED-NNCRS command.

The change is reported via an ED-CRS (not ED-NNCRS!) notification.

Path-protected cross-connections

If the ED-NNCRS command is applied on one leg of a path-protected cross-connection, then the cross-connection class of both legs of the path-protected cross-connection shall be changed.

2-way cross-connections

If the ED-NNCRS command is applied on one direction of a 2-way cross-connection, then only the cross-connection class of the specified direction shall be changed. The class of the other direction shall remain unchanged.

Example input/output

```
ED-NNCRS-VC4:UNITE-NE:1-1-#-#-10-1-4,1-1-#-#-20-1-  
7:123456:::xconcls=TRADITIONAL;  
LT-UNITE 00-11-14 12:00:00  
M 123456 COMPLD  
;
```

Error responses

Validation rule: Entities (tributaries) must exist

Cross-connection command processing verifies that the logical tributaries specified in the command do exist.

Error code: IENE - Input Entity Not Exists, Specified tributary/tributaries do not exist

Validation rule: Entity (cross-connection) must exist

Cross-connection command processing verifies that the specified cross-connection exists.

Error code: IENE - Input Entity Not Exists, Specified crossconnection does not exist

Validation rule: Specified rate consistent with the cross-connection rate

Cross-connection command processing verifies that the specified rate (*modifier* parameter) is compliant with the rate of the existing cross-connection.

Error code: IPNC - Input Parameter Not Consistent, Rate inconsistent with cross-connection rate

Validation rule: Cross-connection must have *xconcls* = NN

Cross- connection command processing shall verify that the specified cross-connection has set *xconcls* = NN.

Error Code: SNVS - Status, Not in Valid State, Cross connection not of class NN

Validation rule: Cross-connection not involved in Test Access Session

Cross-connection command processing shall verify that the specified cross- connection is not involved in a Test Access Session.

Error Code: SNVS - Status, Not in Valid State, Cross connection involved in Test Access Session

Related TL1 messages

- [“DLT-CRS: Delete cross-connection” \(7-56\)](#)
- [“ENT-CRS: Enter cross-connection” \(7-25\)](#)
- [“ENT-ROLL: Enter roll” \(7-65\)](#)
- [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#)



DLT-CRS: Delete cross-connection

The DLT-CRS-*modifier* command can be initiated by a user to delete a cross-connection in the NE.

The *modifier* in the DLT-CRS command indicates the cross-connection rate of the tributary for which the command is applied to.

There is no difference if the rate is specified as a SONET rate (STS1, STS3,..) or as SDH-rate (VC3, VC4,..) for the deletion of the cross-connection i.e. the DLT-CRS-*<sonet-rate>* yields to the same physical and logical behavior as DLT-CRS-*<sdh-rate>*.

No check is made if the modifier matches the interface-standard of the port i.e. if the port is provisioned as SONET (resp. SDH) and the rate is a SONET (resp. SDH) rate.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3

Priority: 1

Abortable: No

Input format Command Syntax: DLT-CRS-*modifier*:*tid*:*in_aid*,*out_aid*:*ctag*::[*cct*],[*in_aid2*];

Input parameters

Command parameters

1. *modifier*

This parameter indicates the cross-connection on which the DLT-CRS command acts on.

For detailed description please refer to the [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#) command.

Type: Alphanumeric value set

Range:

- VC3
- VC4
- VC44C
- VC416C
- VC464C

- STS1
- STS3
- STS12
- STS48
- STS192.

No use of the *all* value is allowed.

2. tid – Target Identifier
Target Identifier. Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
3. in_aid – Input Access Identifier
See definition of parameter *in_aid* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
4. out_aid – Output Access Identifier
See definition of parameter *out_aid* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
5. ctag – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
6. cct – cross-connection Topology
This parameter specifies the topology of the cross-connection to be deleted via the DLT-CRS command.
See definition of parameter *cct* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
7. in_aid2 – Input Access Identifier 2
This parameter is applicable to path-protected cross-connections only and specifies the source of the protection leg. Thus *in_aid* and *out_aid* specify the working leg while *in_aid2* and *out_aid* specify the protection leg of a path-protected cross-connection.
See definition of parameter *in_aid2* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).

Output format If the DLT-CRS command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

Cross-connection can be deleted via the DLT-CRS command when *xconcls*=TRADITIONAL.

Deletion of 2WAY cross-connections

Please note that the 2 legs of a 2-way cross-connection can be deleted either via a single DLT-CRS command (with *cct*=2WAY) or via 2 separate DLT-CRS commands (each with *cct*=1WAY). In the latter case an additional *repleg* status change will be notified via an ED-CRS notification.

When deleting a cross-connection the cross-connection entity will be deleted as well. This deletion is notified via a DLT-CRS notification.

Updated affected entities: General

In case of deleting a path-protected cross-connection the command deletes in addition the entity of type protection group being related to that path-protected cross-connection. This deletion is notified via a DLT-PROTN-GRP notification. Please refer to the [“DLT-PROTN-GRP notification” \(8-106\)](#) section for details.

In case the *repleg* state is changed by deleting a cross-connection an ED-CRS notification is used to notify the updated *repleg* value.

Updated affected entities: 1-way cross-connection, when not part of 2 way cross-connection

In case a 1-way cross-connection is deleted where no “equivalent return-leg” (see below) is already existing the affected instance of the cross-connection is deleted. This is reported by means of an DLT-CRS notification.

An “equivalent return-leg” means: for a 1-way cross-connection with rate N from in_trib to out_trib a return-leg would be given by

- a 1-way cross-connection from out_trib to in_trib
- with the same rate N
- and in (case of BLSR only) the same *loca* and *locz* values.

Example:

DLT-CRS-vc3:NameOfNE:1-1-#-#-6-1-1,1-1-#-#-1-1-1:88::1way;

REPT DBCHG

DLT-CRS-VC3:1-1-#-#-6-1-1,1-1-#-#-1-1-1:1WAY;

Updated affected entities: 1-way cross-connection, when part of a 2-way cross-connection

In case a 1-way cross-connection is deleted where an "equivalent return-leg" (see below) exists the instance of type cross-connection, which represents the leg as specified in the DLT-CRS command shall be deleted.

This is reported by means of an DLT-CRS notification.

Furthermore the altered *repleg* status is reported via an ED-CRS notification.

An "equivalent return-leg" means: when entering a 1-way cross-connection with rate N from in_trib to out_trib a return-leg would be given by

- a 1-way cross-connection from out_trib to in_trib
- with the same rate N
- and in (case of BLSR only) the same *loca* and *locz* values.

Example (Precondition: 2-way cross-connection:1-1-#-#-7-3-1 ↔ 1-1-#-#-3-4-1):

DLT-CRS-vc4:NName:1-1-#-#-7-3-1,1-1-#-#-3-4-1:587::1way;

REPT DBCHG

DLT-CRS-VC4:1-1-#-#-7-3-1,1-1-#-#-3-4-1:1WAY;

REPT DBCHG

ED-CRS-VC4:1-1-#-#-3-4-1,1-1-#-#-7-3-1::repleg=1WAY;

Updated affected entities: 2-way cross-connection

In case a 2-way cross-connection is deleted its related instance of type cross-connection will be deleted as well.

This is reported by means of an DLT-CRS notification.

Example:

DLT-CRS-vc3:NameOfNE:1-1-#-#-6-1-1,1-1-#-#-1-1-1:88::2way;

REPT DBCHG

DLT-CRS-VC3:1-1-#-#-6-1-1,1-1-#-#-1-1-1:2WAY;

Updated affected entities: path-protected cross-connection

In case a path-protected cross-connection is deleted the related instance of type cross-connection will be deleted as well. This is reported by means of one DLT-CRS notification where *in_aid*, *in_aid2* can be chosen as in the delete request or flipped.

Furthermore the related instance of protection group will be deleted as well.

This is reported by means of an DLT-PROTN-GRP notification.

For details on protection group please refer to the protection group section.

Example:

```
DLT-CRS-vc3:NameOfNE:1-1-##-1-1-1,1-1-##-15-1-1:92::1WAYPPROT,1-1-##-14-1-1;
```

```
REPT DBCHG
```


```
DLT-PROTN-GRP:1-1-##-15-1-1:PATHDRI;
```

```
REPT DBCHG
```

```
DLT-CRS-VC3:1-1-##-1-1-1,1-1-##-15-1-1:1WAYPPROT,1-1-##-14-1-1;
```

Example input/output

Suppose the following compound cross-connection as depicted below is deleted: This would require the following DLT-CRS commands:

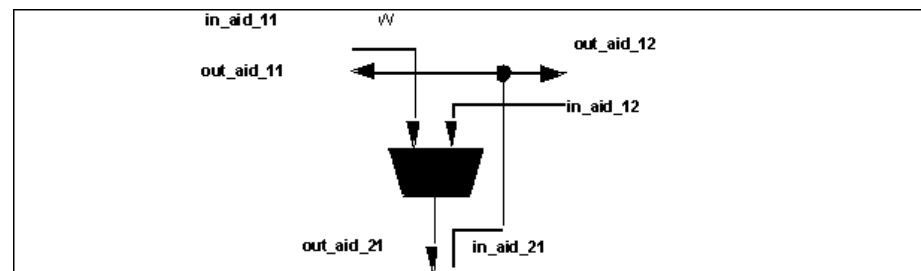

```
DLT-CRS-VC4:UNITE-NE:in_aid_11,out_aid_21:123456::  
1WAYPROT,in_aid_12;  
LT-UNITE 00-11-14 12:00:00  
M 123456 COMPLD  
;
```

```
DLT-CRS-VC4:UNITE-NE:in_aid_21,out_aid_12:123457::1way;
```

```

LT-UNITE 00-11-14 12:01:00
M 123457 COMPLD
;

DLT-CRS-VC4:UNITE-NE:in_aid_21,out_aid_11:123458::1way;
LT-UNITE 00-11-14 12:02:00
M 123458 COMPLD
;

```

The first command will delete the path-protected cross-connection, while the following two commands delete the bridge.

Error responses

Validation rule: Valid topology

Cross-connection command processing verifies that the value of the topology parameter is consistent with the atomic cross-connection topology and the leg status of the existing cross-connection in accordance with the following table. Failure to meet this criteria (Validation Response = Deny) results in command rejection.

Error code: SNVS - Status, Not in Valid State, Invalid topology

Topology in Remove cross-connection Command (TL1-parameter: <i>cc t</i>)	Topology of Existing Atomic cross-connection (internal parameter: "Atomic cross-connection topology" as described in the RTRV-CRS section in the <i>repleg</i> context)	Leg Status of Existing Atomic cross-connection (internal parameter: "Leg status" as described in the RTRV-CRS section in the <i>repleg</i> context)	Validation Response ("Accept" means that the command is replied by a COMPLD, "Deny" means, that the command is rejected with the Error Code as stated above)
1WAY	point-to-point	1-way	Accept
	point-to-point	2-way	Accept
	path-protected	1-way	Deny
2WAY	point-to-point	1-way	Deny
	point-to-point	2-way	Accept
	path-protected	1-way	Deny
1WAYPPROT	point-to-point	1-way	Deny
	point-to-point	2-way	Deny
	path-protected	1-way	Accept

This table should be understood as follows:

- 1. line: suppose a 1-way cross-connection exists with a point-to-point topology – then this cross-connection can be deleted with the DLT-CRS command including the input parameter *cct=1WAY* i.e. the command will be accepted and executed;
- 2. line: suppose a 2-way cross-connection exists with a point-to-point topology – then a DLT-CRS with *cct=1WAY* will be accepted and one leg will be deleted (the other in the return direction will still exist);
- 3. line: suppose a path-protected cross-connection exists which (also) has a leg status 1-WAY – then a DLT-CRS with *cct=1way* will be denied with the Error Code SNVS - Status, Not in Valid State, Invalid topology; to delete this cross-connection properly the last line has to be considered, where the *cct* is compliant with the atomic cross-connection topology and the leg status.

Validation rule: Entities (tributaries) must exist

Cross-connection command processing verifies the logical tributaries specified in the command do exist.

Error code: IENE - Input Entity Not Exists, Specified tributary/tributaries do not exist

Validation rule: Entity (cross-connection) must exist

Cross-connection command processing verifies that the specified cross-connection exists.

Error code: IENE - Input Entity Not Exists, Specified cross-connection does not exist

Validation rule: Valid rate

Cross-connection command processing verifies that the specified rate is equivalent to the rate of the existing cross-connection. Hereby the SONET-rates are treated identical to the SDH-rates (i.e. sts1/vc3, STS3/vc4 etc.)

Error code: IDNC - Input Data Not Consistent, Rate is inconsistent with existing cross-connection

Validation rule: No cross-connection loopback existing

Cross-connection command processing denies commands requesting a cross-connection to a tributary with an existing cross-connection loopback.

Error code: SNVS - Status, Not in Valid State, Tributary has existing loopback.

Note: As in the ENT-CRS command there is no command validation concerning facility loopback i.e. the cross-connection deletion will be possible even with a facility loopback present.

Validation Rule: No test access session

Cross-connection command processing shall deny commands requesting a cross-connection to a tributary which is used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, Tributary used in test access session

Validation Rule: Cross-connection must not be of xconcls NN

Cross-connection command processing shall verify, that the cross-connection is not of xconcls NN.

Error Code: SNVS - Status, Not in Valid State, Cross connection must not be of xconcls NN

Related TL1 messages

- [“ED-CRS: Edit Cross-connection” \(7-46\)](#)
- [“ENT-CRS: Enter cross-connection” \(7-25\)](#)
- [“ENT-ROLL: Enter roll” \(7-65\)](#)
- [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#)
- [“DLT-PATH: Delete ONNS path Connection” \(15-55\)](#)
- [“ED-NNCRS: Edit NN cross-connection” \(7-53\)](#)
- [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)

References GR-199-CORE



DLT-CRS notification

Output format The DLT-CRS notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: DLT-CRS-*modifier*:*in_aid*,*out_aid*:*cct*,[*in_aid2*];

Output parameters

Command parameters

1. *modifier*
See definition of input parameter *modifier* in [“DLT-CRS: Delete cross-connection” \(7-56\)](#).
2. *in_aid* – Input Access Identifier
See definition of input parameter *in_aid* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
3. *out_aid* – Output Access Identifier
See definition of output parameter *out_aid* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
4. *cct* – cross-connection Topology
See definition of input parameter *cct* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
5. *in_aid2* – Input Access Identifier 2
See definition of output parameter *in_aid2* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

Example output Refer to the “Detailed behavior description” in [“DLT-CRS: Delete cross-connection” \(7-56\)](#).



ENT-ROLL: Enter roll

The ENT-ROLL-*modifier* command can be initiated by a user to roll the input of a cross-connection from a given tributary to another tributary while leaving the output unchanged. The ENT-ROLL command can be modelled by a DLT-CRS (deleting the existing cross-connection) followed by a ENT-CRS (establishing the new cross-connection according to the specified new input-tributary). This also holds for path-protected cross-connections for which the input of one of the legs can be rolled via the ENT-ROLL command, while leading the output of the path selector unchanged.

The tributary to which the roll cross-connection is to be established does not need to be free of alarms/failure conditions – no check in advance will be made. The cross-connection will thus be established also in case of AIS-P, LOP-P, UNEQ etc. as is the case with a normal ENT-CRS command as well.

The *modifier* in the ENT-ROLL command indicates the cross-connection rate of the tributary for which the command is applied to. There is no difference if the rate is specified as a SONET rate (STS1, STS3,..) or as SDH-rate (VC3, VC4,..) for the deleting of the old and establishing of the new cross-connection i.e. the ENT-ROLL-*<sonet-rate>* yields to the same physical and logical behavior as ENT-ROLL-*<sdh-rate>*.

No check is made if the *modifier* matches the interface-standard of the port i.e. if the port is provisioned as SONET (resp. SDH) and the rate is a SONET (resp. SDH) rate.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
 Priority: 3
 Abortable: No

Input format Command Syntax: ENT-ROLL-*modifier:tid:in_aid,out_aid:ctag:::spec_block;*

Input parameters

Command parameters

1. modifier
This parameter indicates the cross-connection on which the ENT-ROLL command acts on.
For detailed description please refer to the [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#) command.
Type: Alphanumeric value set.
Range:
 - VC3
 - VC4
 - VC44C
 - VC416C
 - VC464C
 - STS1
 - STS3
 - STS12
 - STS48
 - STS192.No use of the all value is allowed.
2. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
3. in_aid – Input Access Identifier
This parameter specifies the source of the cross-connection. See definition of parameter *in_aid* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).
4. out_aid – Output Access Identifier
This parameter specifies the sink of the cross-connection. See definition of parameter *out_aid* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
5. ctag – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Spec block parameters

1. **newinaid** – New Input Access Identifier
This parameter specifies the source of the new cross-connection to be established after the existing one is deleted.
Type: STS1NumAID (when using OPn packs) or VCGNumAID (when using GEn).
Range: n. a.
No use of the all value within the **newinaid** is allowed.
2. **newloca** – New Location-a
This parameter specifies the new source TID if the **newinaid** is in a BLSR protection group.
See definition of **loca** parameter in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
3. **newppgname** – New Path protection group Name
This parameter specifies the name of the new path protection group. This parameter is applicable if a leg of a path-protected cross-connection is rolled – the parameter in this case is optional and if not entered the default is used. For non path-protected cross-connection this parameter does not apply and is omitted.
See definition of **ppgname** parameter in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
4. **xcappl** – cross-connection Application
This parameter indicates one of the application that are supported for a compound cross-connection topology. This parameter is optional – if not entered the default is used.
See definition of **xcappl** parameter in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
5. **xnum** – cross-connection Number
This parameter identifies each cross-connection leg in a specific compound cross-connection topology. This parameter is optional – if not entered the default is used.
See definition of **xnum** parameter in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

Output format If the ENT-Roll command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
```

;

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

Behavior

Because the ENT-ROLL can be understood as a sequence consisting of a DLT-CRS operation followed by an ENT-CRS operation there does not exist a (separate) ENT-ROLL notification. Instead a DLT-CRS notification is sent, followed by an ENT-CRS notification. Furthermore additionally an ED-CRS notification is triggered by the ENT-ROLL command, when the *repleg* status is altered. Refer also to the section [“DLT-CRS: Delete cross-connection” \(7-56\)](#) and [“ENT-CRS: Enter cross-connection” \(7-25\)](#) behavior.

Transaction behavior

For the ENT-ROLL command a validation is performed before the COMPLD is returned. This means it has to be checked if the DLT-CRS (using the validation rules as stated in the DLT-CRS section) as well as the following ENT-CRS (by using the validation rules as stated in the ENT-CRS section) can be performed successfully, BEFORE the command is executed. With this approach it is guaranteed that the command either is rejected or succeeds as a whole by executing the deletion- AND the entering-operation.

Updated affected entities: 1-way, 2-way cross-connection

Refer to the section *Detailed behavior description* of the [“ENT-CRS: Enter cross-connection” \(7-25\)](#) and [“DLT-CRS: Delete cross-connection” \(7-56\)](#) commands for the affected entities.

Updated affected entities: path-protected cross-connection

If one leg of path-protected cross-connection is rolled, the following updates takes place:

1. The path-protected cross-connection instance is deleted and this is notified via one DLT-CRS notification.
2. Two legs composing the path-protected XCs are created and this is notified via ENT-CRS notification. The initial values for the cross-connection legs are derived from:
 - the data of the deleted leg not specified in the roll request
 - the data as specified in the roll request; i.e. for the rolled leg the attributes: *loca,xcappl, xcnum*.
3. The attribute *wkg* (if worker leg is rolled) or *protn* (if protection leg is rolled) are updated (gets the value of the new input trib) for the associated path protection group. If in addition a new value for *ppgname* is specified, then the corresponding protection group is updated accordingly. These updates are reported by means of a ED-PROTN-GRP notification.

For details on protection group and the related notifications please refer to the protection group section.

Deletion of the leg non-affected by the roll command is needed, since also the *in_aid2* attribute for this leg is changed. Attribute *in_aid2* is considered as part of the key/identifier for the leg itself, and therefore the deletion and creation sequence is the only approach in order to notify the performed DB changes.

Example input/output

Example 1:

Suppose the following existing non-BLSR 1-way vc3-cross-connection

1-1-#-#-1-1-3 → 1-1-#-#-5-1-17

shall be rolled to

1-1-#-#-2-1-3 → 1-1-#-#-5-1-17

also being a non-BLSR cross-connection. This would be accomplished via:

```
ENT-ROLL-VC3:UNITE-NE:1-1-#-#-1-1-3,1-1-#-#-5-1-17:123456::newinaid=1-1-#-#-2-1-3;
LT-UNITE 00-11-14 12:00:00
M 123456 COMPLD
```

;

Example 2:

Suppose the following existing non-BLSR 1-way vc3-cross-connection:

1-1-#-#-1-1-3 → 1-1-#-#-5-1-17

shall be rolled to:

1-1-#-#-2-1-3 → 1-1-#-#-5-1-17

with the new tributary being involved in a BLSR protection group.

This would be accomplished via:

```
ENT-ROLL-VC3:UNITE-NE:1-1-#-#-1-1-3,1-1-#-#-5-1-17:123456:::newinaid=1-1-#-#-2-1-3,newloca=BLSR-pprot-name;
LT-UNITE 00-11-14 12:00:00
M 123456 COMPLD
;
```

Example 3:

Suppose the following vc4 path-protected cross-connection exists:

worker-leg: 1-1-#-#-1-1-1 → 1-1-#-#-5-1-1

protection leg: 1-1-#-#-2-1-1 → 1-1-#-#-5-1-1

The worker leg now shall be rolled towards the new in_aid:

1-1-#-#-3-1-1:

This would be accomplished via:

```
ENT-ROLL-VC4:UNITE-NE:1-1-#-#-1-1-1,1-1-#-#-5-1-1:123456:::newinaid=1-1-#-#-3-1-1;
LT-UNITE 00-11-14 12:00:00
M 123456 COMPLD
;
```

Error responses

The rolling of a crossconnection can be conceptually understood as the removal of one crossconnection leg followed by the establishment of a new crossconnection leg, with the restriction that the logical output tributary of both legs is the same. Therefore the validation rules for the ENT-ROLL command are as specified in the DLT-CRS section and the ENT-CRS.

This means that if the ENT-ROLL command would fail to meet a criteria as specified in the DLT-CRS section the same command denial would be the consequence. In an anolg way if the ENT-ROLL command would fail to meet a criteria as specified in the ENT-CRS section the same command denial would be the consequence.

Related TL1 messages

- [“DLT-CRS: Delete cross-connection” \(7-56\)](#)
- [“ED-CRS: Edit Cross-connection” \(7-46\)](#)
- [“ENT-CRS: Enter cross-connection” \(7-25\)](#)
- [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#)

References GR-199-CORE



CNVT-CCT: Convert cross-connection topology

General The CNVT-CCT-modifier command can be initiated by a user to convert between a 1-way point-to-point cross-connection and a path-protected cross-connection.

For a 1-way Point-to-Point to a path-protected conversion, the existing point-to-point cross-connection leg is converted into a single atomic path-protected cross-connection between the logical input AID of the existing point-to-point cross-connection, the specified protection logical input AID and logical output AID of the existing point-to-point cross-connection. The leg comprised of the AIDs of the existing point-to-point cross-connection shall be designated as the path protection group working leg at the time the cross-connection is converted.

If the command is applied to a 2-way cross-connection it will be split up automatically in two 1-way cross-connections. The command will be executed on the specified in_aid to out_aid direction, the reverse direction will remain unprotected. Refer also to chapter Detailed behaviour for more.

For a path-protected to a 1-way point-to-point conversion, it can be selected, which logical input AID of the existing legs (working leg or the protection leg) of the path-protected cross-connection shall stay as logical input AID of the created point-to-point cross-connection. This can be done by specifying the surviving leg of the existing path protection group as working leg at the time the cross-connection is converted.

The tributaries involved do not need to be free of alarms/failure conditions - no check in advance will be made. The cross-connection will thus be established also in case of AIS-P, LOP-P, UNEQ etc. as is the case with a normal ENT-CRS command as well.

The *modifier* in the CNVT-CCT command indicates the cross-connection rate of the tributary for which the command is applied to. The same rules as for ENT-CRS for path-protected cross-connections apply.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3

Priority: 3

Abortable: No

Input format Command Syntax: CNVT-CCT-*modifier*:*tid*:*in_aid*,*out_aid*:*ctag*::[*in_aid2*]:*spec_block*;

Input parameters

Command parameters

1. *modifier*

This parameter indicates the cross-connection on which the CNVT-CCT command acts on.

For detailed description please refer to the [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#) command.

Type: Alphanumeric value set.

Range:

- VC3
- VC4
- VC44C
- VC416C
- VC464C
- STS1
- STS3
- STS12
- STS48
- STS192.

No use of the all value is allowed.

2. *tid* – Target Identifier

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.

3. *in_aid* – Input Access Identifier

This parameter specifies

- 1-way Point-to-Point to a Ppath-protected conversion: the source of the unprotected cross-connection respectively
- Path-protected to a 1-way point-to-point conversion: the AID of the input leg which shall stay as source of the created unprotected cross-connection.

See definition of parameter *in_aid* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).

4. out_aid – Output Access Identifier
This parameter specifies the sink of the cross-connection. See definition of parameter *out_aid* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
5. ctag – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
6. in_aid2 – Input2 Access Identifier
This parameter specifies for a
 - 1-way point-to-point to a path-protected conversion: the protection input of the created path protected cross-connection
 - Path-protected to a 1-way point-to-point conversion: the AID of the input leg which shall be dropped.See definition of parameter *in_aid2* in [“ENT-CRS: Enter cross-connection” \(7-25\)](#).

Spec block parameters

1. cct – CrossConnect Topology
The parameter *cct* specifies the new cross-connection topology.
Type: Alphanumeric value set.
Range: 1WAY for one-way unprotected cross-connection;
1WAYPPROT for one-way path-protected cross-connection.
2. htmr – Hold-Off Time
See definition in output parameters section in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. newinaid – New Input Access Identifier
This parameter specifies the source aid of the new leg when converting from a point-to-point to a path-protected cross-connect. For removing the path-protection this parameter does not apply and shall be omitted.
Type: AID.
Range: STS1NumAID.
No use of the all value within the *newinaid* is allowed.

4. newloca – New Location-a
This parameter specifies the new source TID if the newinaid is in a BLSR protection group. It specifies that add node which is related to the protection leg input. **newloca** will be stored as the **loca2** parameter.
See definition of **loca** parameter in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
Only present if **in_aid2** is BLSR.
5. occt – Original CrossConnect Topology
The parameter cct specifies the original cross-connection topology.
Type: Alphanumeric value set.
Range: 1WAY for one-way unprotected cross-connection.
1WAYPPROT for one-way path-protected cross-connection.
6. ppgname – Path Protection Group Name
This parameter specifies the name of the path protection group to be established. For removing the path-protection this parameter does not apply and shall be omitted. See definition of **ppgname** parameter in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
7. rme – Protection Reversion
See definition in output parameters section in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
8. snctype – SNC Protection Type
See definition in output parameters section in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
9. wtr – Wait To Restore Time
See definition in output parameters section in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

10. *xcappl* – cross-connection Application

This parameter indicates one of the application that are supported for a compound cross-connection topology. This parameter is optional – if not entered the default is used.

See definition of *xcappl* parameter in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

11. *xnum* – cross-connection Number

This parameter identifies each cross-connection leg in a specific compound cross-connection topology. This parameter is optional - if not entered and if converting to a path-protected cross-connection the value of the previous cross-connection, respectively to a not path-protected cross-connection the value of the working leg is used.

See definition of *xnum* parameter in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).

Output format If the CNVT-CCT command completes successfully, then the following normal completion response is returned:

```
sid date time  
M ctag COMPLD  
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

Notification of cross-connection related changes

Because the CNVT-CCT can be understood as a sequence consisting of a DLT-CRS operation followed by an ENT-CRS operation, a (separate) CNVT-CCT notification does not exist. Instead a DLT-CRS notification is sent, followed by an ENT-CRS notification.

Refer also to the section detailed behavior of DLT-CRS and ENT-CRS.

Keep in mind that the attribute *in_aid2* is a part of the key / identifier for the path-protection group, and therefore the above described deletion and creation sequence is a proper approach in order to notify the performed DB changes.

The ENT-CRS notification includes already information about the changed repleg status.

Notification of protection group related changes

The ENT-CRS operation affects subsequently also the protection area, i.e. in case of entering a path-protected cross-connection a path protection group will be established. Thus two independent notification are generated: ENT-CRS notification and a ENT-PROTN-GRP notification.

The DLT-CRS operation affects subsequently also the protection area, i.e. in case of removing a path-protected cross-connection a path protection group will be deleted. Thus two independent notification are generated: DLT-CRS notification and a DLT-PROTN-GRP notification.

Transaction behavior

For the CNVT-CCT command the validation shall be performed before the COMPLD is returned. This means it has to be checked if the DLT-CRS as well as the following ENT-CRS can be performed successfully, before the entire command is executed. With this approach it shall be guaranteed that the command either is rejected or succeeds as a whole by executing the deletion- AND the entering-operation.

For the detailed validation rules refer to the chapter 'error responses' below.

Updated affected entities: 1way, 2way cross-connection, path-protected cross-connection

The establishing of a path-protection group on a possibly existing 2-way cross-connection leads to a conversion to a 1-way path-protected cross-connection plus a separate 1-way cross-connection for the return direction. A similar split-up happens when deleting one direction of a 2-way cross-connection. Therefore refer to section "Detailed behaviour description" of the DLT-CRS notification.

After deletion of a path-protection group the remaining 1-way cross-connection may have an equivalent return leg. Then both will be merged in a 2-way cross-connection. A similar merge happens when a cross-connection is established to which already an equivalent return leg is existing. Therefore refer to section "Detailed behaviour description" of the ENT-CRS notification.

Example input/output

Example 1:

Suppose the following existing non-BLSR 1way vc3-cross-connection

1-1-#-#-1-1-3 -> 1-1-#-#-5-1-17

shall be protected by the new leg

1-1-#-#-2-1-3 -> 1-1-#-#-5-1-17

also being a non-BLSR cross-connection. This would be accomplished
via:

```
CNVT-CCT-VC3:UNITE-NE:1-1-#-#-1-1-3,1-1-#-#-5-1-17:123456:::
occt=1WAY,cct=1WAYPPROT,newinaid=1-1-#-#-2-1-3,
ppgname="group018",rme=ENABLE,snctype=SNCN,htmr=100,wtr=5;
LT-UNITE 00-11-14 12:00:00
M 123456 COMPLD
;
```

Example 2:

Suppose the following existing path-protected vc3-cross-connection:

1-1-#-#-1-1-3 -> 1-1-#-#-5-1-17 working leg

1-1-#-#-2-1-3 -> 1-1-#-#-5-1-17 protection leg

shall be changed into an unprotected cross-connection via the working
leg. This would be accomplished via:

```
CNVT-CCT-VC3:UNITE-NE:1-1-#-#-1-1-3,1-1-#-#-5-1-17:123456::1-1-#-#-2-1-3:occt=1WAYPPROT,cct=1WAY;
LT-UNITE 00-11-14 12:00:00
M 123456 COMPLD
;
```

Example3:

Suppose the following existing path-protected vc3-cross-connection:

1-1-#-#-1-1-3 -> 1-1-#-#-5-1-17 working leg

1-1-#-#-2-1-3 -> 1-1-#-#-5-1-17 protection leg

shall be changed into an unprotected cross-connection via the
protection leg. This would be accomplished via:

```
CNVT-CCT-VC3:UNITE-NE:1-1-#-#-2-1-3,1-1-#-#-5-1-17:123456::1-1-#-#-1-1-3:occt=1WAYPPROT,cct=1WAY;
```



```
LT-UNITE 00-11-14 12:00:00
M 123456 COMPLD
;
```

Error responses

The CNVT-CCT procedure can be conceptually understood as a sequence consisting of a DLT-CRS operation followed by an ENT-CRS operation. Therefore some of the validation rules of DLT-CRS and ENT-CRS shall apply also here. This means also that if one of the below listed CNVT-CCT validation rules would fail to meet a criteria the same or at least a similar command denial as specified in the DLT-CRS and the ENT-CRS section will be the consequence.

Validation rules relevant for path-protection which differ:

- check of provisioned topology parameters against existing atomic topology,
- check of existence of an cross-connection via the (future respectively current) working leg.

Validation rule adaptation

In general the validation rules of DLT-CRS (as stated in the DLT-CRS section) and ENT-CRS (as stated in the ENT-CRS section) apply. However if an atomic cross-connection will remain finally unchanged then for this part no validation rule must be performed. The full list of validation rules from the DLT-CRS / ENT-CRS area is given in the following requirements.

In general the validation rules of DLT-CRS apply in case of removing a path-protection. However the check shall skip that the cross-connection of the working leg should have been removed before.

In general the validation rules of ENT-CRS apply in case of establishing a path-protection. However the check shall allow that a cross-connection via the working leg has already been set-up.

Validation rule: Entities (tributaries) must exist

Cross-connection command processing shall verify the logical tributaries specified in the command do exist.

Error Code: IENE - Input, Entity Not Exists, Specified tributary/tributaries do not exist

Note the equivalence to the related ENT-CRS and DLT-CRS validation rules.

Validation rule: Entity (cross-connection) must exist

Cross-connection command processing shall verify that the specified cross-connection exists.

Error Code: IENE - Input, Entity Not Exists, Specified crossconnection does not exist

Note the equivalence to the related ENT-CRS and DLT-CRS validation rules.

Validation rule: Topology conversion command must be consistent

The spec block parameters *occt* and *cct* must be both provided and different.

Error Code: IDNC - Input, Data, Not Consistent, no allowed topology conversion

Validation rule: Only those parameter present which are needed

Cross-connection command processing shall verify according to the given context only those parameter are present which are needed for that context.

This means that for converting to a non path-protected cross-connection the following parameter must be present:

- *in_aid2, cct, occt*

This means that for converting to a non path-protected cross-connection the following parameter must not be present:

- *htmr, newinaid, newloca, rme, snctype, wtr*

This means that for converting to a non path-protected cross-connection the following parameter may be present:

- *ppgname*

This means that for converting to a path-protected cross-connection the following parameters must be present:

- *cct, htmr, newinaid, newloca* (but only in cases of MSSPRING/BLSR, otherwise it must not be present), *occt, rme, snctype, wtr*

This means that for converting to a path-protected cross-connection the following parameter must not be present:

- *in_aid2*

This means that for converting to a path-protected cross-connection the following parameter may be present:

- *ppgname*

Error code: SNVS - Status, Not in Valid State, Parameter(s) present which are not allowed

CNVT-CCT: ppgname usage:

It is not possible for CNVT-CCT to identify the path-protection group by the *ppgname* only. It has been excluded here. Reason: at least for a CNVT-CCT command with the order to create a protection group this is not sufficient to restrict it to a single cross-connection, as the *ppgname* may not be uniquely defined and therefore this might result in actions not desired by the operator.

Validation rule: Valid rate

Cross-connection command processing shall verify that the specified rate is equivalent to the rate of the existing cross-connection. Hereby the SONET-rates are treated identical to the SDH-rates (i.e. sts1/vc3, STS3/vc4 etc.)

Error Code: IDNC - Input, Data, Not Consistent, Rate is inconsistent with existing crossconnection

Note the equivalence to the related ED-CRS validation rule.

Validation rule: Both legs must have same rate

If converting to a path-protected cross-connection then the cross-connection command processing shall verify that the parameter newinaid specified in the command is consistent with the cross-connection rate, i.e. the rate of the tributary for the new leg must match the rate of the existing cross-connection.

Error Code: IDNC - Input, Data, Not Consistent, Bridging rate is not compliant with existing leg

For simplicity also the full validation rule of ENT-CRS may be executed.

Validation rule: New tributary rate validity

If converting to a path-protected cross-connection then the cross-connection command processing shall verify that the specified cross-connection rate is equivalent to the provisioned signal rate of the new input tributary identified by *newinaid*, as determined by the tributary input signal rate parameter.

Note that it does not matter if the tributary signal rate is given for the SONET- (STS3/STS12/...) or the SDH-interface standard (VC3/VC4..).

As an example: It is possible to enter a cross-connection via ENT-CRS-VC4... between two tributaries related to tributary signal rates given by VC4/VC4 or by VC4/STS12 or by STS12/STS12; Thus the *inputsig/unequiposig*-values for SDH (3,4,4c,16c,64c) are identical to those of SONET (1,3,12,48,192) seen from a cross-connection perspective.

Error Code: IDNC - Input, Data, Not Consistent, Specified new Tributary does not support the indicated rate

For simplicity also the full validation rule of ENT-CRS may be executed.

Validation rule: path-protected cross-connection has unique input AIDs

If converting to a path-protected cross-connection then the cross-connection command processing shall verify that for path-protected cross-connections the new input tributary identified by *newinaid* is different from *in_aid*.

Error Code: IDNV - Input, Data Not Valid, Both input tributaries are identical

Note the equivalence to the related ENT-CRS validation rule.

Validation rule: path-protected cross-connection has inputs from ports with same interface standard

If converting to a path-protected cross-connection then the according validation rule of ENT-CRS shall be executed.

Error Code: SNVS - Status, Not in Valid State, Different interface standards for input tributaries

Validation rule: No trib of 1+1 port protection as newinaid (for path-protected cross-connection)

If converting to a path-protected cross-connection then the cross-connection command processing shall verify that the new tributary identified by newinaid is not a member of a 1+1 / 1:1 multiplex section/line protection group.

Error Code: SNVS - Status, Not in Valid State, trib of 1+1/1x1 port as input-trib in pathprotected crossconnection

For simplicity also the full validation rule of ENT-CRS may be executed.

Validation rule: no multiple added XCs for MSSPRING TOP

If converting to a path-protected cross-connection then the according validation rule of ENT-CRS shall be executed.

Error code: SNVS - Status, Not in Valid State, multiple added XCs for MSSPRING TOP

Validation rule: Supported MS-SPRing/BLSR DNI/DRI

If converting to a path-protected cross-connection then the according validation rule of ENT-CRS shall be executed.

Error Code: SNVS - Status, Not in Valid State, unsupported MS-SPRing/BLSR DNI/DRI

Validation rule: path-protected cross-connection: parameters missing

If converting to a pathprotected crossconnection then the according validation rule of ENT-CRS shall be executed.

Error code: IPMS -Input, Parameter MiSsing, <parameter name> missing

Validation rule: path-protected cross-connection: both inputs in fixed-mode

If converting to a path-protected cross-connection then the according validation rule of ENT-CRS shall be executed.

Error Code: SNVS - Status, Not in Valid State, input port(s)for pathprot. crossconnecton in adaptive mode

Validation rule: No cross-connection loopback existing

If executing the CNVT-CCT command in order to establish a path protection then the new leg identified by the tributary newinaid must not have an existing cross-connection loopback.

Error Code: SNVS - Status, Not in Valid State, new Tributary has existing loopback

NOTE: There is no command validation concerning facility loopback i.e. the cross-connection establishing shall be possible even with a facility loopback present.

Validation rule: Tributaries not used in a test access session when removing a path protection

If executing the CNVT-CCT command in order to remove a path protection, then the tributaries of the remaining leg identified by *in_aid* and *out_aid*, shall not be involved in a test access session in either direction.

Error Code: SNVS - Status, Not in Valid State, tributaries used in test access session

Validation rule: Restrict number of cross-connection using same input tributary

If converting to a path-protected cross-connection then the according validation rule of ENT-CRS shall be executed.

Error Code: SNVS - Status, Not in Valid State, Too many crossconnection originating from same tributary

Validation rule: BLSR/MS-SPRing protection access (Extra Traffic)

If converting to a path-protected cross-connection then the according validation rule of ENT-CRS shall be executed.

Error Code: SNVS - Status, Not in Valid State, Command refers to protection tributaries of a BLSR/MS-SPRing protection and no TOPEX application

Validation rule: SNC type compliance

If converting to a path-protected cross-connection then the according validation rule of ENT-CRS shall be executed.

Error Code: IDNC - Input, Data, Not Consistent, SNC Type not compliant with existing pathprotected crossconnection

Validation rule: No VCG-trib as in_aid (for pathprotected cross-connection)

If converting to a path-protected cross-connection then the according validation rule of ENT-CRS shall be executed.

Error Code: IDNC - Input, Data, Not Consistent, VCG-trib as input-trib in pathprotected crossconnection

Validation rule: Maximum number of *ppgnames* exceeded

If changing or entering the parameter *ppgname* then the according validation rule of ENT-CRS shall be executed.

Error Code: SSRE - Status, System Resources Exceeded, limit of ppgnames exceeded

Validation rule: Cross-connection must not be of *xconcls* NN

Cross-connection command processing shall verify, that the cross-connection is not of *xconcls* NN.

Error Code: SNVS - Status, Not in Valid State, Cross connection must not be of *xconcls* NN

Related TL1 Messages

- [“DLT-CRS: Delete cross-connection” \(7-56\)](#)
- [“ENT-CRS: Enter cross-connection” \(7-25\)](#)
- [“ED-CRS: Edit Cross-connection” \(7-46\)](#)
- [“RTRV-CRS: Retrieve cross-connection” \(7-6\).](#)



Autonomous notification

TID Change

***loca*, *locz* auto notification for service traffic**

If a source TID (*loca*) or destination TID (*locz*) is changed due to a TID change of one NE within a BLSR ring/MS-SPRing, the update is reported by means of corresponding ED-CRS notifications.

No auto notification for *loca* and *locz* change for extra traffic

For extra traffic the *loca/z* info are generated automatically, for this reason they will change after an initialization or a recovery. Too many intermediate, void changes would be detected and notified.

No notification for *sqfa* and *sqfz* change

If a source TID (*loca*) or destination TID (*locz*) is changed due to a TID change of one NE within a MS-SPRing with the *protnmode* = TOPEX, the related parameters *sqfa* and *sqfz* will change to AINVALID respectively to MINVALID for an intermediate time, depending on internal processing speed and fault conditions of the ring. Finally they will again change to other values. Due to this transient behaviour it is only suitable to make it retrievable on demand.

ONNS triggered changes

The ONNS TL1 command ENT-PATH shall lead to ENT-CRS notifications in the NEs along the route of the new path. In case of a 1+1 protected ONNS path there are also ENT-PROTN-GRP notifications in the source and destination NE of the ONNS path.

The ONNS TL1 command DLT-PATH shall lead to DLT-CRS notifications in the NEs along the route of the deleted path. In case of a 1+1 protected path there are also DLT-PROTN-GRP notifications in the source and destination NE of the ONNS path.

The ONNS TL1 command ED-PATH-ROLL

- shall lead to ENT-CRS and ENT-PROTN-GRP notifications in the two NEs where the bridge/merge function is performed
- shall lead to ENT-CRS notifications in the NEs along the new route of the path
- shall lead to DLT-CRS notifications in the NEs along the old route of the path

- shall lead to DLT-CRS and DLT-PROTN-GRP notifications in the two NEs where the bridge/selector is removed. The ONNS TL1 command ED-PATH-PROT
- shall lead to ENT-CRS notifications along the route of the new protecting path and ENT-PROTN-GRP notifications in the A and Z node when a modification from unprotected to 1+1 protected is performed
- shall lead to DLT-CRS notifications along the route of the new protecting path and DLT-PROTN-GRP notifications in the A and Z node when a modification from 1+1 protected to unprotected is performed
- shall not lead to additional host notifications when a modification from unprotected to auto-reroute or vice versa is performed.

The (non-revertive) restoration of an ONNS path shall lead to ENT-CRS notifications in the NEs along the restored route of the path, and to DLT-CRS notifications in the NEs along the route of the failed path.

The revertive restoration of an ONNS path shall lead to ENT-CRS notifications in the NEs along the restored route of the path, and to ENT-PROTN-GRP notifications in the A and Z node of the path. When the restoration reverts, it shall lead to DLT-CRS notifications in the NEs along the restored route of the path, and to DLT-PROTN-GRP notifications in the A and Z node of the path.

The ONNS TL1 command OPR-DEFRAG shall lead to

- ENT-CRS and ENT-PROTN-GRP notifications for each connection which is moved
- DLT-CRS and DLT-PROTN-GRP notifications for each connections which is moved in the two NEs between which the link is defragmented.

□

Tributary

Overview

Purpose This section contains messages related to cross-connections on tributary level.

Contents

RTRV-LPBK: Retrieve loopback (here cross-connection loopback)	7-89
OPR-LPBK (here cross-connection loopback)	7-93
OPR-LPBK notification (here cross-connection loopback)	7-100
RLS-LPBK: Release loopback (here cross-connection loopback)	7-101
RLS-LPBK notification (here cross-connection loopback)	7-104

RTRV-LPBK: Retrieve loopback (here cross-connection loopback)

The RTRV-LPBK-*modifier* command can be initiated by a user to retrieve information on cross-connection loopback(s) in the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): T1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-LPBK-*modifier*:tid:aid:ctag;

Input parameters

Command parameters

1. modifier

This parameter indicates the rate of the currently active cross-connection loopback for the specified tributary on which the RTRV-LPBK command acts on.

For the adaptive rate case this means that the *modifier* does not specify the rate (constituent signal type) of the tributary, but the cross-connection loopback rate.

Type: Alphanumeric value set

Range:

- ALL
- VC3
- VC4
- VC44C
- VC416C
- VC464C
- STS1
- STS3
- STS12

RTRV-LPBK: Retrieve loopback (here cross-connection loopback)

- STS48
 - STS192.
2. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
 3. aid – Access Identifier
This parameter specifies the tributary for which loopback information is requested to be retrieved.
Type: STS1NumAID (when using OPn packs) or VCGNumAID (when using GEn).
Range: The *all*-parameter is accepted for the slot-, port- and trib-part of the AID. For the port the *all*-parameter is to be distinguished between *all* when referring OPn packs, *vall* when referring the GEn.
For example the following *aids* are valid:
 - 1-1-#-#-all-all-all specifying all tribs for all ports in the whole shelf
 - 1-1-#-#-2-1-all specifying all tribs of the first port of the pack in slot-number=02
 - 1-1-#-#-3-vall-all specifying all tribs of all ports of the (GEn) pack in slot-number=03.
 4. ctag – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format Normal completion message

In response to a valid RTRV-LPBK-*modifier* command, the following output is returned:

```
sid date time
M ctag COMPLD
  "aid:rate:spec_block"
  ...
  ...
  "aid:rate:spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output Parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

RTRV-LPBK: Retrieve loopback (here cross-connection loopback)

Output parameters

Command parameters

1. aid – Access Identifier
This parameter specifies the tributary for which loopback information is retrieved.
Type: STS1NumAID (when using OPn packs) or VCGNumAID (when using GEn).
Range: No all-parameter are possible.
2. rate
This parameter indicates the cross-connection rate. For a detailed description please refer to parameter *rate* in [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#).
Type: Alphanumeric value set
Range:
 - VC3
 - VC4
 - VC44C
 - VC416C
 - VC464C
 - STS1
 - STS3
 - STS12
 - STS48
 - STS192.

Spec block parameters

1. crslpbkstat – cross-connection Loopback Status
This parameter specifies the current cross-connection loopback status of the considered tributary *aid*.
The value **YES** will be used in case the tributary is loop-backed. Note that the tributary does not need to be involved in a cross-connection – but can be in loopback also without cross-connection.
Note that no dedicated value is specified for the case of a non loop-backed tributary since such a tributary will no be in output.
Type: Alphanumeric value set.
Range: YES.

RTRV-LPBK: Retrieve loopback (here
cross-connection loopback)

**Detailed behavior
description**

The RTRV-LPBK command allows the retrieval of loopback information for tributaries, regardless if they are involved in cross-connections or not. Tributaries which are not involved in a cross-connection loopback are not present in the reply output.

Example Input/output**Example:**

The example shows the loopback status for the 13th trib of the pack in slot 07, which has an existing loopback:

```
RTRV-LPBK-VC3:UNITE-NE:1-1-#-#-7-1-13:123456
    sid date time
M   ctag COMPLD
    "1-1-#-#-7-1-13:STS1:crslpbkstate=YES"
;
```

Related TL1 messages

- [“OPR-LPBK \(here cross-connection loopback\)” \(7-93\)](#)
- [“RLS-LPBK: Release loopback \(here facility loopback\)” \(7-118\)](#)

References GR-199-CORE



OPR-LPBK (here cross-connection loopback)

The OPR-LPBK-*modifier* command can be initiated by a user to establish a loopback on a tributary.

In this section only the loopback on tributaries is considered.

A cross-connection loopback consists of a cross-connection from an input tributary to an output tributary of the same tributary via the cross-connection fabric. Note that this loopback is possible on any logical tributary whether there is a cross-connection for that tributary or there is no cross-connection for that tributary (in this case the tributary is said to be "idle" – thus the naming cross-connection loopback might be slightly misleading – the naming cross-connection loopback should be understood in the sense that the cross-connection fabric is involved in this command and not in the sense that an existing cross-connection is looped back) After releasing the loopback the former, pre-existing cross-connections (if any) must be automatically re-established.

For setting a loopback on an existing cross-connection the command parameter *cmdmde* has to set to FRCD, else if the tributary is *idle* the *cmdmde* shall be NORM.

The *modifier* in the OPR-LPBK command indicates the rate on which the loopback command is applied to. There is no difference if the rate is specified as a SONET rate (STS1, STS3,..) or as SDH-rate (VC3, VC4,..) i.e. the OPR-LPBK-*<sonet-rate>* yields to the same physical and logical behavior as OPR-LPBK-*<sdh-rate>*. No check is made if the *modifier* matches the interface-standard of the port i.e. if the port is provisioned as SONET (resp. SDH) and the rate is a SONET (resp. SDH) rate.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): T4
 Priority: 1
 Abortable: No.

Input format Command Syntax: OPR-LPBK-*modifier:tid:aid:ctag::,,lpbktyp[:spec_block]*;

Input parameters

Command parameters

1. modifier
This parameter indicates the tributary- respectively cross-connection-rate on which the OPR-LPBK command acts on.
For detailed description please refer to the [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#) command
Type: Alphanumeric value set
Range:
 - VC3
 - VC4
 - VC44C
 - VC416C
 - VC464C
 - STS1
 - STS3
 - STS12
 - STS48
 - STS192.No use of the all value is allowed.
2. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
3. aid – Access Identifier
This parameter specifies the tributary for which the loopback is requested. See definition of input parameter *aid* in [“RTRV-LPBK: Retrieve loopback \(here cross-connection loopback\)” \(7-89\)](#).
4. ctag – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
5. lpbktyp – Loopback Type
This parameter specifies the type of loopback to be operated. In case of a tributary loopback (either with or without cross-connection) this parameter will be set to CRS.
Type: alphanumeric value string.
Range: CRS.

Spec block parameters

1. *cmdmde* – Command Mode

This parameter specifies the command execution mode. If the tributary is involved in a cross-connection the parameter shall be set to FRCD, else if the tributary is idle (i.e. non cross-connected) *cmdmde* shall be set to NORM.

The difference is mainly that in case of an existing cross-connection (*in_aid* → *out_aid*) the counterpart (i.e. the *out_aid*) which formerly delivered traffic will be set to AIS by the loopback operation.

Type: Alphanumeric value string.

Range:

- NORM (default)
- FRCD.

Output format

If the OPR-LPBK command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

Loopback on tributaries can be switched via the OPR-LPBK command. The parameters *crslpbkstat* and *crslpbkrate* of the entity tributary are updated: – *crslpbkstat* is updated to YES, – *crslpbkrate* is updated to the entered value as given by the *modifier* parameter.

This update is reported by an ED-*rr* (*rr* being either VC3 or STS1) notification for normal tributaries and by an ED-VCGTRIB notification for virtual concatenation tributaries.

Behaviour for ONNS

Cross-connection loopbacks are only allowed when *portClass* = EDGE and *portControl* = MAINT.

Updated affected entities

Apart from the tributary entity no further entities are affected by the OPR-LPBK command.

Example:

```
OPR-LPBK-VC4:UNITE-NE:1-1-#-#-1-1-4:123456:,,,CRS;
```

```
REPT DBCHG
```

```
ED-VC3:1-1-#-#-1-1-4::crslpbkstat=YES,crslpbkrate=VC4;
```

When using the loopback possibility for VCG-tribs it is in the operators responsibility to ensure that the complete bundle of VCG-tribs (building the VCG) are looped. Otherwise parts of the traffic will be missing.

Example input/output

Example 1:

Suppose the following aid 1-1-#-#-1-1-4 is *in_aid* of a cross-connection.

The following command will set a loopback for that tributary.

```
OPR-LPBK-VC4:UNITE-NE:1-1-#-#-1-1-4:123456:,,,CRS:
cmdmde=FRCD;
    UNITE-NE 00-11-14 12:00:00
M 123456 COMPLD
;
```

Example 2:

Suppose the following aid 1-1-#-#-1-1-4 is not cross-connected.

The following command will set a loopback for that tributary.

```
OPR-LPBK-VC4:UNITE-NE:1-1-#-#-1-1-4:123456:,,,CRS;
    UNITE-NE 00-11-14 12:00:00
M 123456 COMPLD
;
```

Error responses

Validation rule: Valid rate

Loopback command processing verifies that the specified rate is equivalent to the rate of the existing cross-connection. Hereby the SONET-rates are treated identical to the SDH-rates (i.e. sts1/vc3, STS3/vc4 etc.).

Error code: IDNC - Input Data Not Consistent, Rate is inconsistent with existing cross-connection

Validation rule: Valid loopback type

Loopback command processing verifies that the parameter and *lpbktyp* match i.e. for a tributary loopback the modifier must be present, the aid must specify a tributary and the *lpbktyp* must be CRS.

Error code: IDNC - Input Data Not Consistent, Inconsistent loopback type w.r.t. aid

Validation rule: Loopback must not already exist

Loopback command processing verifies that the loopback command can not be applied to an already existing loopback.

Error code: SAOP - Status already operated, loopback already exists

Validation rule: No test access session

Loopback command processing shall deny commands requesting a loopback at a tributary which is used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, Tributary used in test access session

Validation rule: AID boundary and rate consistency

Loopback command processing verifies that the logical AID specified in the command is consistent with the modifier rate. Consistency implies the following condition:

- The boundary of the specified tributary is consistent with the specified rate.
- STS-1/VC-3 payloads can start at any position.
- The first (STS-1 equivalent) tributary of an STS-3/VC-4 rate cross-connection must be on a mod3 + 1 boundary (1, 4, 7, ...).
- The first STS-1 of an STS-12/VC-4-4c rate cross-connection must be on a mod12 + 1 boundary (1, 13, 25, ...).
- The first STS-1 of an STS-48/VC-4-16c rate cross-connection must be on a mod48 + 1 boundary (1, 49, 97, ...).
- The first STS-1 of an STS-192/VC-4-64c rate cross-connection must be on a mod192 + 1 boundary (1, 193, 385, ...).

Error code: IDNC - Input Data Not Consistent, Tributary boundary is inconsistent with the indicated rate

Validation rule: Tributary provisioning and rate consistency

For fixed rate tributaries, loopback command processing verifies that

- If the port identified by logical input AID is provisioned to operate in the fixed signal rate mode, as determined by the tributary mode parameter, then the specified modifier rate is equivalent to the provisioned signal rate of the input tributary, as determined by the tributary input signal rate parameter.
- This also holds for the output tributary, which must match the input tributary in the sense of equivalence of modifier rate with the output signal rate. Note that in both cases that SDH- and SONET tributary signal rates are treated identical (from the loopback perspective) i.e. there is no difference if the SDH values or the SONET values (for the inputsig- and unequiposig-parameters) are used for the tributary signal rate as long as those rates are compatible (i.e. vc3/sts1, vc4/sts3 etc.).

Error code: IDNC - Input Data Not Consistent, Specified Tributary does not support the indicated rate

Note: In case of adaptive rate no consistency check is required

Validation rule: cmdmde matches cross-connection non-/existence

Loopback command processing will verify that

- in case no cross-connection exists the *cmdmde* must be NORM
- in case a cross-connection exists the *cmdmde* must be FRCD.

In the other cases

- no cross-connection and *cmdmde*=FRCD and
- cross-connection and *cmdmde*=NORM a rejection takes place.

Error code: IDNC - Input Data Not Consistent, cross-connection-existence not consistent with cmdmde-value

Validation Rule: No loopbacks on tributaries below ports of portClass INNI

Loopback command processing shall verify that the tributary does not belong to a port of *portClass* INNI.

Error Code: SNVS - Status, Not in Valid State, Port must not be of portClass INNI

Validation Rule: *portcontrol* matches and tributaries occupied by ONNS

Loopback command processing shall verify that the portcontrol parameter of the associated port is LOCKOUT and no loopback is established on tributaries which belong to a cross-connections of xconcls=NN (i.e. cmdmde=FRCD is not allowed for NN cross-connections).

Error Code: IDNC - Input Data Not Consistent, tributary occupation not consistent with portcontrol value

This rule addresses loopbacks on EDGE ports.

Related TL1 messages

- [“RLS-LPBK: Release loopback \(here facility loopback\)” \(7-118\)](#)
- [“RTRV-LPBK: Retrieve loopback \(here facility loopback\)” \(7-106\)](#)

References GR-199-CORE



OPR-LPBK notification (here cross-connection loopback)

There will be no OPR-LPBK notification because the changes (for the parameter *crslpbkstat* and *crslpbkrate*) caused by an OPR-LPBK command will be notified via an ED-*rr* (*rr* either VC3 or STS1) notification for normal tributaries and by an ED-VCGTRIB notification for virtual concatenation tributaries.



RLS-LPBK: Release loopback (here cross-connection loopback)

The RLS-LPBK-*modifier* command can be initiated by a user to release a loopback on a tributary.

In this section only the loopback on tributaries are considered.

The *modifier* in the RLS-LPBK command indicates the rate on which the loopback command is applied to. There is no difference if the rate is specified as a SONET rate (STS1, STS3,..) or as SDH-rate (VC3, VC4,..) for the i.e. the RLS-LPBK-*<sonet-rate>* yields to the same physical and logical behavior as RLS-LPBK-*<sdh-rate>*. No check is made if the *modifier* matches the interface-standard of the port i.e. if the port is provisioned as SONET (resp. SDH) and the rate is a SONET (resp. SDH) rate.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): T4
Priority: 1
Abortable: No

Input format Command Syntax: RLS-LPBK-*modifier*:*tid*:*aid*:*ctag*;

Input parameters

Command parameters

1. *modifier*
See definition of parameter *modifier* in [“OPR-LPBK: Operate loopback \(here facility loopback\)” \(7-111\)](#).
2. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
3. *aid* – Access Identifier
See definition of parameter *aid* in [“OPR-LPBK: Operate loopback \(here facility loopback\)” \(7-111\)](#).
4. *ctag* – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format If the RLS-LPBK command completes successfully, then the following normal completion response is returned:

sid date time

```
M  ctag COMPLD  
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

Existing loopback on tributaries can be released via the RLS-LPBK command. The attribute *crslpbkstat* of the entity tributary shall be updated to NO.

This update is reported by an ED-*rr* (*rr* being either VC3 or STS1) notification for normal tributaries and by an ED-VCGTRIB notification for virtual concatenation tributaries.

Updated affected entities

Apart from the tributary entity no further entities are affected by the RLS-LPBK command.

Example input/output

```
RLS-LPBK-vc3:UNITE-NE:1-1-#-#-1-1-4:123456;  
    UNITE-NE 00-11-14 12:00:00  
M  123456 COMPLD  
;
```

Error responses

Validation rule: Valid rate

Loopback command processing verifies that the specified rate is equivalent to the rate of the existing loopback. Hereby the SONET-rates are treated identical to the SDH-rates (i.e. sts1/vc3, STS3/vc4 etc.).

Error code: IDNC - Input Data Not Consistent, Rate is inconsistent with existing cross-connection

Validation rule: Loopback must exist

Loopback command processing verifies that the RLS-LPBK command can not be applied to non-existing loopback.

Error code: SNVS - Status, Not in Valid State, loopback does not exist.

Tributary

*TL1 messages - transmission and cross-connect
handling*

RLS-LPBK: Release loopback (here
cross-connection loopback)

Related TL1 messages

- [“OPR-LPBK: Operate loopback \(here facility loopback\)” \(7-111\)](#)
- [“RTRV-LPBK: Retrieve loopback \(here facility loopback\)” \(7-106\)](#)

References GR-199-CORE



RLS-LPBK notification (here cross-connection loopback)

There will be no RLS-LPBK notification because the changes (for the parameter *crslpbkstat* and *crslpbkrate*) caused by an RLS-LPBK command will be notified via an ED-*rr* (*rr* being either VC3 or STS1) notification for normal tributaries and by an ED-VCGTRIB notification for virtual concatenation tributaries.



Port

Overview

Purpose This section contains messages related to cross-connections on port level.

Contents

RTRV-LPBK: Retrieve loopback (here facility loopback)	7-106
OPR-LPBK: Operate loopback (here facility loopback)	7-111
OPR-LPBK notification (here facility loopback)	7-117
RLS-LPBK: Release loopback (here facility loopback)	7-118
RLS-LPBK notification (here facility loopback)	7-122



RTRV-LPBK: Retrieve loopback (here facility loopback)

The RTRV-LPBK-*modifier* command can be initiated by a user to retrieve information on facility loopback(s) in the NE. Facility herein is identical to port – either an optical port of an OPn pack or the optical port of a GEn pack – no other ports (like timing ports, UserByte ports etc) are settable to loopback.

As long as there is loopback active on a port the abnormal LED lits.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): T1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-LPBK-*modifier:tid:aid:ctag;*

Input parameters

Command parameters

1. modifier

This parameter indicates the port rate on which the RTRV-LPBK command acts on.

(In principle this parameter is redundant, because the port-rate is implicitly given by the port-AID (*SPortAID*), but in order to align the facility loopback command with the tributary loopback command this parameter is retained.)

Type: Alphanumeric value set

Range:

- ALL
- STM1E
- STM1
- STM4
- STM16
- STM64
- STM256
- OC3
- OC12

RTRV-LPBK: Retrieve loopback (here
facility loopback)

- OC48
 - OC192
 - OC768
 - 1GE.
2. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
 3. aid – Access Identifier
This parameter specifies the port for which loopback information is requested to be retrieved.
Type: SPortAID (when using OPn packs) or EPortAID (when using GEn).
Range: The all-parameter is accepted for the slot-, port-part of the AID.
For example the following *aid* s are valid:
1-1-#-#-all-all specifying all ports in the whole shelf
1-1-#-#-2-1 specifying the first port of the pack in slot-number=02
 4. ctag – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format In response to a valid RTRV-LPBK command, the following output is returned:

```

sid date time
M ctag COMPLD
  "aid:rate:spec_block"
    ...
    ...
  "aid:rate:spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output Parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid – Access Identifier
This parameter indicates the id of the port for which the loopback state is returned.
Type: SPortAID (when using OPn packs) or EPortAID (when using GEn)
Range: No all is allowed.
2. rate
This parameter indicates the port *rate*.
Type: Alphanumeric value set
Range:
 - STM1E
 - STM1
 - STM4
 - STM16
 - STM64
 - STM256
 - OC3
 - OC12
 - OC48
 - OC192
 - OC768
 - 1GE.

Spec block parameters

1. lpbk – Loopback
This parameter specifies the current near-side loopback status of the output *aid*. A near-side loopback means that the signal on the incoming port is looped to the outgoing port.
If *lpbk*=YES then the port is (near-side) loop-backed.
If *lpbk*=NO then there is no (near-side) loopback existing for the port.
Note: At most one loopback (*lpbk* or *fsflpbkstat*) can be set to YES for the same port at the same time.
Type: Alphanumeric value set.

RTRV-LPBK: Retrieve loopback (here facility loopback)

Range:

- YES
- NO (default).

2. fsflpbkstat – Far-Side-Facility-Loopback-Status

This parameter specifies the current far-side facility loopback status of the output *aid*. A far-side loopback means that the signal on the outgoing port is looped to the incoming port – this would thus correspond to loop via an external fibre cable, connecting the out-port with the in-port.

If *fsflpbkstat*=YES then the port is (far-side) loop-backed. If *fsflpbkstat*=NO then there is no (far-side) loopback existing for the port.

Note: At most one loopback (*lpbk* or *fsflpbkstat*) can be set to YES for the same port at the same time.

Type: Alphanumeric value set.

Range:

- YES
- NO (default).

Detailed behavior description

The RTRV-LPBK command allows the retrieval of near-side and far-side loopback information for ports.

For the GEn the *lpbk* parameter is always set to NO due to the fact that the GE (EPort) only allows the far-side loopback possibility.

Example input/output

Suppose the port 1 of the pack in slot 7 has a existing near-side loopback:

```
RTRV-LPBK-ALL:UNITE-NE:1-1-#-#-7-1:123456
sid date time
M ctag COMPLD
"1-1-#-#-7-1:0C48:lpbk=YES,fsflpbkstat=NO"
;
```

Error responses

Validation rule: Modifier consistent with given port-rate

Loopback command processing verifies that the *modifier* parameter is consistent with the rate of the port (given by the input *aid* parameter).

Port
RTRV-LPBK: Retrieve loopback (here
facility loopback)

TL1 messages - transmission and cross-connect
handling

E.g. for an OP2G5 only the **modifier** values STM16 or OC48 (depending on the port's interface standard) are allowed, for an OP10 only **modifier** values STM64 or OC192 (depending on the port's interface standard) are allowed etc.

Error code: IDNC - Input Data Not Consistent, modifier is inconsistent with existing port rate.

Validation rule: Modifier consistent with given port's interface standard

Loopback command processing verifies that the **modifier** parameter is consistent with the interface standard of the port (given by the **aid** parameter). E.g. for an SDH port only the **modifier** values for STM16 or STM64 or STM256 are valid, for a SONET port only the **modifier** values OC48 or OC192 or OC768 are valid.

Error code: IDNC - Input Data Not Consistent, modifier is inconsistent with existing interface standard.

Related TL1 messages

- [“OPR-LPBK: Operate loopback \(here facility loopback\)” \(7-111\)](#)
- [“RLS-LPBK: Release loopback \(here facility loopback\)” \(7-118\)](#)

References GR-199-CORE



OPR-LPBK: Operate loopback (here facility loopback)

For the GE-pack only a far-side facility loopback for the EPort shall be allowed - an OPR-LPBK for the EPort to switch a near-side facility loopback shall be denied.

The OPR-LPBK command can be initiated by a user to establish a loopback on an OPn port in the NE.

Two types of facility loopback can be distinguished:

- a near-side facility loopback which means that signal on the in-port is looped to the out-port and
- a far-side facility loopback, which means that the signal on the out-port is looped back to the in-port.

Switching a facility loopback has no restrictions to existing cross-connections loopbacks or cross-connections, i.e. facility loopbacks are assumed to precede over already existing cross-connection loopbacks. When a facility loopback is released the previously existing cross-connection loopback(s) will show up again.

Note that as safeguard for unintentional corruption of traffic the switching of a facility loopback will only be possible if the affected port's service condition is set to out of service (*servicecond* = OUTOFSERVICE) – this can be achieved via the ED-*rr* command.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): T4
Priority: 1
Abortable: No

Input format Command Syntax: OPR-LPBK-*modifier:tid:aid:ctag::,lpbktyp*;

Input parameters

Command parameters

1. *modifier*
This parameter indicates the port rate on which the OPR-LPBK command acts on.
Type: Alphanumeric value set.
Range:
 - STM1E
 - STM1

Port
OPR-LPBK: Operate loopback (here facility
loopback)

*TL1 messages - transmission and cross-connect
handling*

- STM4
- STM16
- STM64
- STM256
- OC3
- OC12
- OC48
- OC192
- OC768
- 1GE.

No use of the all value is allowed.

2. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
3. aid – Access Identifier
This parameter specifies the port for which the loopback is requested. See definition of output parameter *aid* in RTRV-LPBK.
4. ctag – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
5. lpbktyp – Loopback Type
This parameter specifies the type of loopback to be operated. In case of a facility loopback this parameter shall be set to
 - FACILITY for a near-side facility loopback
 - FSF for a far-side facility loopback.Type: Alphanumeric value string.
Range:
 - FACILITY
 - FSF.

Output format If the OPR-LPBK command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

OPR-LPBK: Operate loopback (here facility
loopback)

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

Behavior – OPn Port

Loopback on OPn ports can be switched via the OPR-LPBK command.

The attribute *lpbk* and *fsflpbkstat* of the entity port are updated by this command:

- *lpbk* should be set to YES in case the *lpbktyp*=FACILITY
- *fsflpbkstat* should be set to YES in case the *lpbktyp*=FSF.

This update is reported by an ED-*rr* notification for an OPn port (*rr* specifying the affected port, i.e. OC<M>/ STM<N>).

Behaviour - EP155 Port

Loopback on EPn ports can be switched via the OPR-LPBK command.

The attribute *lpbk* and *fsflpbkstat* of the entity port shall be updated by this command:

- *lpbk* should be set to YES in case the *lpbktyp*=FACILITY
- *fsflpbkstat* should be set to YES in case the *lpbktyp*=FSF.

This update shall be reported by an ED-*rr* notification for an EP155 port (*rr* specifying the affected port STM1E).

In case of a EP155 protection group the command is only applicable for the ports of the worker unit. Reason: Ports of the protection card are removed by creation of the protection group.

Behavior – GE1 Port

Loopback on GE1 ports can be switched via the OPR-LPBK command.

The attribute *lpbk* and *fsflpbkstat* of the entity port are updated by this command:

- *lpbk* should be set to YES in case the *lpbktyp*=FACILITY
- *fsflpbkstat* should be set to YES in case the *lpbktyp*=FSF.

Port
OPR-LPBK: Operate loopback (here facility
loopback)

*TL1 messages - transmission and cross-connect
handling*

This update is reported by an ED-EPORT notification for a GEn port
(only *fsflpbkstat*).

Behaviour for ONNS

Facility loopbacks are not allowed when portClass = EDGE or INNI.

Behaviour FS - NS, NS - FS

Switching directly from an existing near-side loopback (far-side
loopback) to a far-side loopback (near-side loopback) shall not be
possible (i.e. shall be denied). Instead the existing loopback has to be
released prior to establish another one.

Example 1

Provisioning a near-side facility loopback:

```
OPR-LPBK-STM16:UNITE-NE:1-1-#-#-1-1:123456:,,,FACILITY;  
REPT DBCHG  
ED-STM16:1-1-#-#-1-1::lpbk=YES;
```

Example 2

Provisioning a far-side facility loopback:

```
OPR-LPBK-OC192:UNITE-NE:1-1-#-#-4-1:123456:,,,FSF;  
REPT DBCHG  
ED-OC192:1-1-#-#-4-1::fsflpbkstat=YES;
```

Updated affected entities

Apart from the port entity no further entities are affected by the
OPR-LPBK command. Updates of the port entities are reported via
ED-*rr* (OPn port) or ED-EPORT (GEn port) notifications.

Example input/output

Example:

Suppose for the port 1 of the pack in slot 01 a far-side facility
loopback shall be set:

```
OPR-LPBK-STM16:UNITE-NE:1-1-#-#-1-1:123456:,,,FSF;  
LT-UNITE 00-11-14 12:00:00  
M 123456 COMPLD  
;
```

Error responses

Validation rule: Port is out-of-service

Loopback command processing verifies that the affected port is in out-of-service state, i.e. *servicecond*=OUTOFSERVICE.

Error code: SNVS - Status, Not in Valid State, Port is not out-of-service.

Validation rule: *modifier* consistent with given port-rate

Loopback command processing verifies that the *modifier* parameter is consistent with the rate of the port (given by the *aid* parameter). E.g. for an OP2G5 only the *modifier* values STM16 or OC48 (depending on the port's interface standard) are allowed, for an OP10 only *modifier* values STM64 or OC192 (depending on the port's interface standard) are allowed etc.

Error code: IDNC - Input Data Not Consistent, modifier is inconsistent with existing port rate.

Validation rule: *modifier* consistent with given port's interface standard

Loopback command processing verifies that the *modifier* parameter is consistent with the interface standard of the port (this port given by the aid parameter). E.g. for an SDH port only the *modifier* values for STM16 or STM64 or STM256 are valid, for a SONET port only the *modifier* values OC48 or OC192 or OC768 are valid.

Error code: IDNC - Input Data Not Consistent, modifier is inconsistent with existing interface standard.

Validation rule: Loopback must not already exist

Loopback command processing verifies that the loopback command can not be applied to an already existing loopback. The request to establish a near-side (far-side) loopback will be rejected if a near-side (far-side) loopback for the effected port already exists.

Error code: SAOP - Status already operated, loopback already exists

Validation rule: For GE (EPort) only far-side loopback allowed

Loopback command processing shall verify that for an EPort only a far-side facility loopback (*lpbktyp*=FSF) can be switched.

Error code: IDNV - Input Data Not Valid, Invalid loopback for EPort

Port
OPR-LPBK: Operate loopback (here facility
loopback)

*TL1 messages - transmission and cross-connect
handling*

Validation rule: No change of loopback allowed

Switching directly from an existing near-side loopback (far-side loopback) to a far-side loopback (near-side loopback) is not possible (i.e. is denied).

Error code: SNVS - Status, Not in Valid State, Trial to change loopback type

Validation rule: No loopbacks on ports of *portClass* INNI

Loopback command processing shall verify that the port has not *portClass* INNI.

Error Code: SNVS - Status, Not in Valid State, Port must not be of portClass INNI

Related TL1 messages

- [“RLS-LPBK: Release loopback \(here facility loopback\)” \(7-118\)](#)
- [“RTRV-LPBK: Retrieve loopback \(here facility loopback\)” \(7-106\)](#)

References GR-199-CORE



OPR-LPBK notification (here facility loopback)

There will be no OPR-LPBK notification because the changes (for the parameter *lpbk* and *fsflpbkstat*) caused by an OPR-LPBK command will be notified via an ED-*rr* notification for an OPn port (*rr* specifying the affected port i.e. OC<M>/STM<N> or via an ED-EPORT notification for a GEn port (*fsflpbkstat* only).



RLS-LPBK: Release loopback (here facility loopback)

The RLS-LPBK-*modifier* command can be initiated by a user to release an existing loopback on an OPn or GEn port in the NE.

Note that the loopback type is not specified explicitly as a command parameter – instead the currently existing loopback (either a near-side or a far-side) will be released.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): T4
Priority: 1
Abortable: No

Input format Command Syntax: RLS-LPBK-*modifier*:tid:aid:ctag;

Input parameters

Command parameters

1. modifier
This parameter indicates port rate on which the RLS-LPBK command acts on. See definition of parameter *modifier* in [“OPR-LPBK: Operate loopback \(here facility loopback\)” \(7-111\)](#).
2. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
3. aid – Access Identifier
This parameter specifies the port for which the releasing of the loopback is requested. See definition of parameter *aid* in [“OPR-LPBK: Operate loopback \(here facility loopback\)” \(7-111\)](#).
4. ctag – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format If the RLS-LPBK command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```


RLS-LPBK: Release loopback (here facility
loopback)

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

Behavior – OPn Port

Existing loopback on ports can be released via the RLS-LPBK command. The attribute *lpbk* and *fsflpbkstat* of the entity port is updated by this command:

- *lpbk* should be set to NO in case the *lpbktyp*=FACILITY is released
- *fsflpbkstat* should be set to NO in case the *lpbktyp*=FSF is released.

This update is reported by a ED-*rr* notification for an OPn port (*rr* specifying the affected port i.e. OC<M>/STM<N>).

Example:

RLS-LPBK-OC48:UNITE-NE:1-1-#-#-1-1:123456;

REPT DBCHG

ED-OC48:1-1-#-#-1-1::fsflpbkstat=NO;

Behaviour - EP155 Port

Existing loopback on ports can be released via the [“RLS-LPBK: Release loopback \(here facility loopback\)” \(7-118\)](#) command.

The attribute *lpbk* and *fsflpbkstat* of the entity port shall be updated by this command:

- *lpbk* should be set to NO in case the *lpbktyp*=FACILITY is released
- *fsflpbkstat* should be set to NO in case the *lpbktyp*=FSF is released.

This update shall be reported by an ED-*rr* notification for an EP155 port (*rr* specifying the affected port STM1E).

Behavior – GE1 Port

Existing loopback on ports can be released via the RLS-LPBK command. The attribute *lpbk* and *fsflpbkstat* of the entity port is updated by this command:

- *lpbk* should be set to NO in case the *lpbktyp*=FACILITY is released
- *fsflpbkstat* should be set to NO in case the *lpbktyp*=FSF is released.

This update is reported by a ED-EPORT notification for a GEn port (only *fsflpbkstat*).

Updated affected entities

Apart from the port entity no further entities are affected by the RLS-LPBK command. Changes of the port entity are notified via ED-*rr* (OPn port) or ED-EPORT (GEn port) notifications.

Apart from the port entity no further entities are affected by the RLS-LPBK command. Changes of the port entity are notified via ED-rr for EP155 port.

Example input/output Please refer to the *Detailed behavior description* section for this command.

Error responses

Validation rule: Loopback must exist

Loopback command processing verifies that the RLS-LPBK command can not be applied to non-existing loopback. This means e.g. that a request to release a near-side (far-side) loopback while no near-side (far-side) loopback exists is rejected.

Error code: SNVS - Status, Not in Valid State, loopback does not exist.

Validation rule: *modifier* consistent with given port-rate

Loopback command processing verifies that the *modifier* parameter is consistent with the rate of the port (given by the *aid* parameter). E.g. for an OP2G5 only the *modifier* values STM16 or OC48 (depending on the port's interface standard) are allowed, for an OP10 only *modifier* values STM64 or OC192 (depending on the port's interface standard) are allowed etc.

RLS-LPBK: Release loopback (here facility
loopback)

Error code: IDNC - Input Data Not Consistent, modifier is inconsistent with existing port rate.

Validation rule: *modifier* consistent with given port's interface standard

Loopback command processing verifies that the *modifier* parameter is consistent with the interface standard of the port (given by the *aid* parameter). E.g. for an SDH port only the *modifier* values for STM16 or STM64 or STM256 are valid, for a SONET port only the *modifier* values OC48 or OC192 or OC768 are valid.

Error code: IDNC - Input Data Not Consistent, modifier is inconsistent with existing interface standard.

Related TL1 messages

- [“OPR-LPBK: Operate loopback \(here facility loopback\)” \(7-111\)](#)
- [“RTRV-LPBK: Retrieve loopback \(here facility loopback\)” \(7-106\)](#)

References GR-199-CORE



RLS-LPBK notification (here facility loopback)

There will be no RLS-LPBK notification because the changes (for the parameter *lpbk* and *fsflpbkstat*) caused by an RLS-LPBK command will be notified via an ED-*rr* notification (*rr* specifying the affected port i.e. OC<M>/STM<N>) for an OPn port or an ED-EPORT notification for a GE1port.



UserByte port

Overview

Purpose Physically the UserByte-Port is a physical transmission interface, consisting of both an input and an output, which can be used to carry traffic through channels given by the E1- or F1-Byte (located in the RSOH) or the E2-Byte (located in the MSOH). Logically an UserByte-Port is an entity within an NE which models the function of the physical UserByte-Port.

Six UserByte-Ports are available (with AIDs denoted ubio1 .. ubio6) each of which can be associated to an optical port of an OPn either to the E1- or E2- or F1-Byte. The association is always bidirectional. Four of these six UserByte-Ports (AIDs: ubio1 .. ubio4) are provisionable to either the G703- or V11-interface, while the others (AIDs: ubio5,ubio6) are fixed to V11-interface.

The association as well as this mode setting can be done via the SET-OW-command. Furthermore the SET-OW command allows to release the association (dis-association). With the RTRV-OW command the information related to an UserByte-Port can be retrieved from the NE.

Note: Throughout this section the term order-wire (OW) is retained in the command names for "historical" reasons although the name user-byte would be more appropriate, because these ports can not only be used for order-wire purposes.

Contents

RTRV-OW: Retrieve Orderwire and User Bytes	7-124
SET-OW: Set Orderwire and User Bytes	7-128
SET-OW notification	7-132
Autonomous notification	7-133



RTRV-OW: Retrieve Orderwire and User Bytes

General The RTRV-OW command can be initiated by a user to retrieve the overhead access ports and any associated optical port (OPn) in the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-OW:*tid:aid:ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
2. *aid* – Access Identifier
This parameter specifies the overhead access port.
Type: UserBytePortAID.
Range: As given by the *UserBytePortAID* definition, the value “ubioall” is supported.
3. *ctag* – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format In response to a valid RTRV-OW command, the following output is returned:

```
sid date time
M ctag COMPLD
  "aid:spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are described in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid – Access Identifier
This parameter specifies the overhead access port for which the following spec_block parameters are returned.
Type: UserBytePortAID.
Range: As given by the UserBytePortAID definition, the value "ubioall" is not allowed.

Spec block parameters

1. intfctype – Interface Type
This parameter specifies which electrical interface standard of the overhead access port is used.
Two different settings are possible:
 - electrical interface according to G.703
 - electrical interface according to V.11.Note: The overhead access ports with AIDs ubio1, .. ubio4 are configurable to either G703 or V11. The overhead access ports with AIDs ubio5, ubio6 are fixed to V11.
Type: Alphanumeric value set.
Range: G703, V11.
Default: G703 (for the overhead access ports given by the AIDs ubio1 .. ubio4); V11 (for the overhead access ports given by the AIDs ubio5, ubio6 - fixed to V11).
2. ohbyte – Overhead-Byte
This parameter specifies which of the overhead bytes is used.
Three channels are possible:
 - E1 and F1 in the RSOH (section overhead)
 - E2 in the MSOH (line overhead).Type: Alphanumeric value set.
Range: E1, F1, E2.
Default: E1.
Note: In output direction the empty string appears as "\".
3. portaid
This parameter specifies the optical port (of an OPn) with which the overhead access port (given by the output parameter aid) is associated.
The parameter value NOCONNECT is used to indicate that the port given by portaid is not associated to the overhead access port given by the parameter aid.

Type: In case an association is established: SPortAID; In case an association is no established: Alphanumeric value set (i.e. the string "NOCONNECT").

Range: In case an association is established: SPortAID (No "all" value is supported); in case an association is no established: NOCONNECT.

Default: NOCONNECT.

**Detailed behavior
description**

The RTRV-OW command retrieves the overhead access ports and any associated optical port (OPn) in the NE.

Example input/output

Example 1

Suppose the UserByte port ubio6 is associated with the port-4 of an OP2G5 in slot03 (the intfctype is fixed to V11 for ubio5 and ubio6):

```
RTRV-OW:UNITE-NE:1-1-ubio6:123456
sid date time
M ctag COMPLD
"1-1-ubio6:portaid=1-1-#-#-3-4,ohbyte=E1,intfctype=V11"
;
```

Example 2

Suppose the

- UserByte port ubio1 (V11,E1) is associated with the port-4 of an OP2G5 in slot03
- UserByte port ubio3 (G703,E2) is associated with the port-1 of an OP10G in slot07
- UserByte port ubio6 (V11,F1) is associated with the port-4 of an OP10G in slot34
- The other UserByte ports (ubio2, ubio4, ob05) are not associated:

```
RTRV-OW:UNITE-NE:1-1-ubioall:123456
sid date time
M ctag COMPLD
"1-1-ubio1:portaid=1-1-#-#-3-4,ohbyte=E1,intfctype=V11"
"1-1-ubio2:portaid=NOCONNECT,ohbyte=E1,intfctype=G703"
"1-1-ubio3:portaid=1-1-#-#-7-1,ohbyte=E2,intfctype=G703"
"1-1-ubio4:portaid=NOCONNECT,ohbyte=E1,intfctype=G703"
"1-1-ubio5:portaid=NOCONNECT,ohbyte=E1,intfctype=V11"
```


UserByte port
RTRV-OW: Retrieve Orderwire and User
Bytes

*TL1 messages - transmission and cross-connect
handling*

"1-1-ubio6:portaid=1-1-#-#-34-4,ohbyte=F1,intfctype=V11"
;

Related TL1 messages

- [“SET-OW: Set Orderwire and User Bytes” \(7-128\)](#)



SET-OW: Set Orderwire and User Bytes

General The SET-OW command associates the overhead byte (E1 or E2 or F1) on an optical port to an overhead access port or removes this association. Furthermore the port-interface (either G.703 or V.11) of the overhead access port can be specified.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
Priority: 1
Abortable: No.

Input format Command Syntax: SET-OW:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
2. *aid* – Access Identifier
The parameter *aid* specifies the overhead access port to be used for association (or removing the association).
See definition of output parameter *aid* in [“RTRV-OW: Retrieve Orderwire and User Bytes” \(7-124\)](#).
3. *ctag* – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Spec block parameters

1. *intfctype* – Interface Type
See definition of parameter *intfctype* in [“RTRV-OW: Retrieve Orderwire and User Bytes” \(7-124\)](#).
2. *ohbyte* – Overhead-Byte
See definition of parameter *ohbyte* in [“RTRV-OW: Retrieve Orderwire and User Bytes” \(7-124\)](#).
3. *portaid* – Port Access Identifier
This parameter specifies the optical/electrical port (of an OPn/EPn) of the userbyte to which the overhead access port (given by the command parameter *aid*) is associated, respectively dis-associated.

Type: In case an association is established: SPortAID; in case an association will be removed: Alphanumeric value set (i.e. the string "NOCONNECT").

Range: In case an association is established: SPortAID (No "all" value is supported); in case an association will be removed: NOCONNECT.

Default: NOCONNECT.

Output format

If the SET-OW command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are described in the Output parameter section of ["RTRV-HDR: Retrieve header" \(5-8\)](#).

Detailed behavior description

The attributes *portaid*, *ohbyte* and *intfctype* of the entity Userbyte port shall be updated by this command.

This update shall be reported by a SET-OW notification.

Example:

```
SET-OW:UNITE-NE:ubio3:123456:::portaid=1-1-#-#-5-1,ohbyte=E2,
intfctype=V11;
```

```
REPT DBCHG
```

```
SET-OW:ubio3::port_aid=1-1-#-#-5-1,ohbyte=E2,intfctype=V11;
```

Update affected entities

Apart from the Userbyte port entity no further entities are affected by the SET-OW command.

Example input/output

Example 1

Suppose the Userbyte port given by AID ubio1, to be configured to V11, shall be associated to the E1-Byte channel of the optical port of an OP10G in slot 10:

```
SET-OW:UNITE-NE:1-1-ubio1:123456:::portaid=1-1-#-#-10-1-
1,ohbyte=E1,intfctype=V11;
```

```
LT-UNITE 00-11-14 12:00:00
M 123456 COMPLD
;
```

Example 2

Suppose the association as made in Example-1 shall be removed (i.e. dis-associated):

```
SET-OW:UNITE-NE:1-1-ubio1:123456:::portaid=NOCONNECT,
ohbyte=E1,intfctype=V11;
LT-UNITE 00-11-14 12:00:00
M 123456 COMPLD
;
```

Error responses

Validation Rule: Interface type compliant with port

Command processing shall verify that setting the interface type to G.703 is only possible for the UserByte-Ports *ubio1*, .. *ubio4* (but not for *ubio5* and *ubio6*).

Error Code: IDNV - Input, Data Not Valid, Interface type not settable for specified UserByte-Port

Validation rule: No association present (when associating)

Command processing shall verify that when setting up an association no association is already present.

This means, that only a one to one relation is allowed between the specified:

- Userbyte of a SDH/SONET optical/electrical port and
- UserByte port.

Error Code: SNVS - Status, Not in Valid State, association already exists

Validation rule: Association present (when dis-associating)

Command processing shall verify that an association exists when trying to remove it.

Error Code: IENE - Input, Entity Not Exists, Specified association does not exist

Validation rule: *ohbyte* and *intfctype* values correct (when dis-associating)

Command processing shall verify in case of removing the association that the entered value for the parameters *ohbyte* and *intfctype* are identical with the current ones.

Error Code: IDNV - Input, Data Not Valid, discrepancy between entered values and current value of spec-block parameters

Validation rule: Port exists (when associating)

When setting up an association, the command processing shall verify that the specified SDH/SONET optical/electrical port exists.

Error Code: IENE - Input, Entity Not Exists, Specified port does not exist

Related TL1 messages

- [“RTRV-OW: Retrieve Orderwire and User Bytes” \(7-124\)](#)



SET-OW notification

General The SET-OW notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Command Syntax: SET-OW:*aid::spec-block*;

Output parameters

Command parameters

1. aid – Access Identifier
See definition of output parameter *aid* in [“RTRV-OW: Retrieve Orderwire and User Bytes” \(7-124\)](#).

Spec block parameters

1. intfctype – Interface Type
See definition of parameter *intfctype* in [“RTRV-OW: Retrieve Orderwire and User Bytes” \(7-124\)](#).
2. ohbyte – Overhead-Byte
See definition of parameter ohbyte in [“RTRV-OW: Retrieve Orderwire and User Bytes” \(7-124\)](#).
3. portaid – Port Access Identifier
See definition of parameter ohbyte in [“SET-OW: Set Orderwire and User Bytes” \(7-128\)](#).

Behaviour description Refer to the *Detailed behaviour description* of [“SET-OW: Set Orderwire and User Bytes” \(7-128\)](#).



Autonomous notification

Start-up with default database

The event *Start-up with default DB* causes the 6 instances of type UserByte port to be created.



Virtual switch

Overview

Purpose Starting with the entity Virtual Switch the TL1 commands for all entities of the GE1 functionality will be described in the following chapters.


These are in detail:

- Virtual switch (VRTSW)
- Ethernet port (EPORT)
- Virtual concatenation group (VCG)
- Virtual concatenation tributary (VCGTRIB).

Each GE1 circuit pack consists of the following entities as shown in the following figure. The number of EPORT and VCG instances connected to the virtual switch is fixed. The number of VCGTRIBs per VCG depends on whether operating in SDH or SONET mode. In SDH mode there are 7 VCGTRIBs of type VC4 whereas in SONET mode there are 21 VCGTRIBs of type STS1s.

Commands for the entity *Virtual switch* allow to retrieve and modify its parameters. These commands are applicable to the GE1 circuit pack which supports one virtual switch instance.

The virtual switch as part of the physical switch on the GE1 pack is created by software. It serves to group and separate traffic within the physical switch via VLAN tagging.

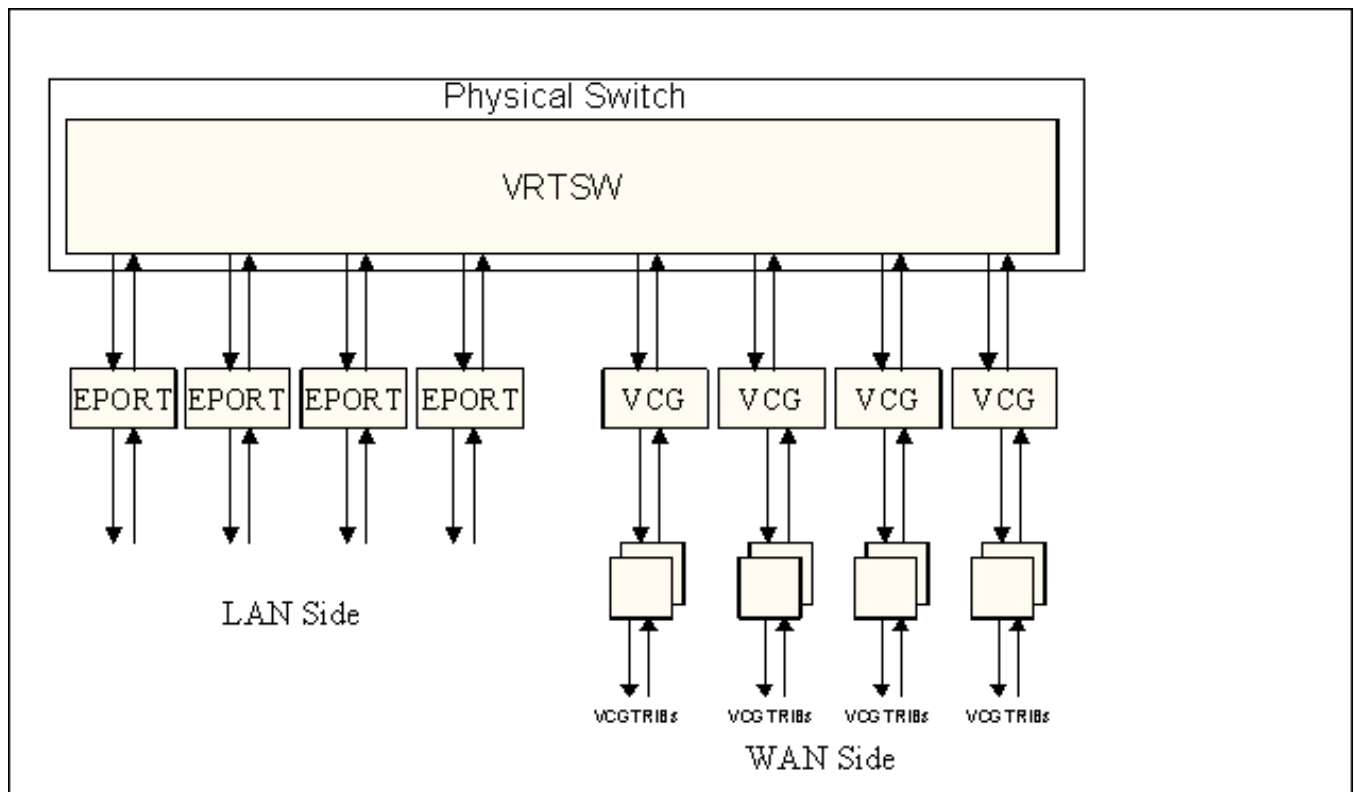

Contents

RTRV-VRTSW: Retrieve Virtual Switch	7-136
ENT-VRTSW notification	7-143
ED-VRTSW: Edit Virtual Switch	7-145
ED-VRTSW notification	7-148
DLT-VRTSW notification	7-150

RTRV-VRTSW: Retrieve Virtual Switch

The RTRV-VRTSW command retrieves the attributes of a virtual switch of a GEn pack.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-VRTSW:*tid:aid:ctag[:::spec_block]*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
2. *aid* – Access Identifier
The access identifier specifies the slot containing a GE1 pack.
Type: AID.
Range: UnivSlotAID as defined in AID structure.
The values
 - *all* and
 - *usall* for Simple_UnivSlotAIDshall be accepted.
3. *ctag* – Correlation Tag
See definition of *ctag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Spec block parameters

1. *dyn* – Retrieve Dynamic Parameters
This parameter controls whether dynamic parameters shall be reported with the command reply or not. It shall be given only when using any of the wildcard values *all* or *usall* at the appropriate positions of the input AID. For input AIDs not using *all* or *usall* this parameter shall not be allowed. This implies that with such input AIDs the dynamic parameters are always returned.

The following output parameters of a virtual switch are affected:

- *macaddr*
- *rootpriority*
- *rootmacaddr*
- *rootcost*
- *rootport*.

Type: alphanumeric value set.

Range: YES, report dynamic parameters in the reply as well. NO (default), do not report dynamic parameters in the reply.

Output format After receiving the RTRV-VRTSW command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
"aid:vrtswid:spec_block"
<this entire block is repeated for another vrtswid>
<this entire structure is repeated for another slot>
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are described in the Output parameter section of.

The output is in the form of a nested list. The primary list is based on the slot AID. For each slot AID, there is a nested list for each instance of a virtual switch giving the spec_block parameters.

Output parameters

Command parameters

1. aid – Access Identifier
This parameter specifies the slot containing a GE1 pack to be operated on.
Type: AID.
Range: UnivSlotAID as defined in AID structure with the exception of the value all and usall.
2. vrtswid - Virtual Switch Identifier

This parameter identifies the instance of the virtual switch.

- A Virtual Switch ID is unique within a single circuit pack. When creating a new Virtual Switch, the system automatically assigns a unique ID to it.
- There will be one virtual switch per physical switch, implicitly all LAN ports and all WAN ports on the physical switch are part of the single virtual switch. The ID of this virtual switch is fixed to 1. A future release may support multiple virtual switches per physical switch.

Type: integer.

Range: 1 - Currently this is the only allowed value.

Default: 1.

Spec block parameters

1. eplst – EPORT AID list

This parameter specifies a list of EPORT instances connected to the virtual switch instance as specified by *vrtswid*.

In R3 there is only one virtual switch instance to which all ports are mapped. Therefore this list is fix.

Type: AID list.

Range: A list of EPortAIDs as specified in the AID definition section with the exception of the values all and usall in the respective components of the AID, separated by an ampersand ('&')

Example: If all four EPORTs of a GE1 are mapped to one virtual switch: 1-#-#-1-1-1&1-#-#-1-1-2&1-#-#-1-1-3&1-#-#-1-1-4

2. ethertype – VLAN tag protocol ID

This parameter specifies the VLAN tag protocol ID necessary for interworking purposes.

Type: hexadecimal value.

Range: 0x0600 .. 0xFFFF.

Default: 0x8100.

3. gvrpmode – GVRP mode

The parameter *gvrpmode* allows to control the dynamic VLAN registration mode.

Type: alphanumeric value set.

Range: ENABLED, GVRP is enabled. DISABLED (default), GVRP is disabled.

4. **macaddr** – Bridge ID address
The parameter **macaddr** specifies the bridge address field of the bridge identifier.
Type: alphanumeric value set.
Range: 000000000000 to FFFFFFFF (hexadecimal value) and UNAVAILABLE, if the value can not be retrieved.
5. **rootcost** – Cost of Path to root bridge
This parameter specifies the cost of the path to the root bridge as determined by the **Spanning Tree Protocol**.
Type: alphanumeric value set.
Range: 0 to 4 294 967 295 and UNAVAILABLE if the value can not be retrieved.
6. **rootmacaddr** – Root bridge ID address
This parameter specifies the bridge identifier of the root bridge as determined by the **Spanning Tree Protocol**.
Type: alphanumeric value set.
Range: 000000000000 to FFFFFFFF (hexadecimal value) and UNAVAILABLE if the value can not be retrieved.
7. **rootport** – Root port identifier
This parameter specifies the identifier of the root port, which offers the lowest cost path from the virtual switch to the root bridge.
Type: AID or alphanumeric string.
Range: **EPortAID** or **VCGAID** as specified in the AID definition section with the exception of the values **all**, **usall** and **vall** in the respective components of the AID; UNAVAILABLE.
The value UNAVAILABLE is returned when the addressed virtual switch is currently the spanning tree root bridge. This is also the case if STP is disabled for all ports belonging to the virtual switch. The Value UNAVAILABLE is returned if the value can not be retrieved from the HW.
8. **rootpriority** – Root bridge priority
The parameter **rootpriority** specifies the priority of the root bridge as determined by the Spanning Tree Protocol.
The virtual switch defined with the lowest value for its bridge priority compared to other virtual switches in the network will be

elected as the root bridge.

Type: AID or alphanumeric string.

Range: 0 to 65535 and UNAVAILABLE if the value can not be retrieved.

Default: 32678.

9. rstpmd - Rapid Spanning Tree Protocol Mode

Type: alphanumeric value set.

10. stbrpriority – Spanning tree bridge priority

This parameter specifies the priority of the bridge to be used by the Spanning Tree Protocol.

Type: integer.

Range: 0 to 65535.

The stepping as recommended by the standard (steps of 4096 starting at 0) should be implemented by the management system. The NE will accept any value in the range described above. This has the consequence, that also the range restriction "0 to 61440" is not done by the NE.

Default: 32768.

11. stfdtm – Spanning Tree forward delay timer

The parameter *stfdtm* specifies the rSTP-related bridge forward delay timer. This parameter is relevant for both rSTP and STP.

Type: integer.

Range: 1 .. 255.

Default: 15.

12. sthellotm – Spanning Tree hello timer

The parameter *sthellotm* specifies the rSTP-related bridge hello timer. This parameter is relevant for both rSTP and STP.

Type: integer.

Range: 1 .. 225.

Default: 2.

13. *stmaxage* – Spanning Tree maximum age timer
The parameter *stmaxage* specifies the rSTP-related maximum PDU transmission delay timer. This parameter is relevant for both rSTP and STP.
Type: integer.
Range: 1 .. 255.
Default: 20.
14. *vcglst* – VCG AID list
The parameter *vcglst* specifies a list of VCG instances connected to the virtual switch instance as specified by *vrtswid*.
In R3 there is only one virtual switch instance to which all eports are mapped. Therefore this list is fix.
Type: AID list.
Range: A list of VCGAIDs as specified in the AID definition section with the exception of the values all, usall and vall in the respective components of the AID, separated by an ampersand ('&').
Example: If all four VCGs of a GE1 are mapped to one virtual switch: 1-#-#-1-1-v1&1-#-#-1-1-v2&1-#-#-1-1-v3&1-#-#-1-1-v4.

Detailed behavior description

Omit dynamic parameters if not accessible

If the system cannot access dynamic data related to the addressed slot, e.g. due to a missing or defect pack or a system-internal communication outage, the following parameters shall response the value "UNAVAILABLE":

- *macaddr*
- *rootpriority*
- *rootmacaddr*
- *rootcost*
- *rootport*.

Example input/output

```
RTRV-VRTSW:LT-UNITE:1-1-#-#-1:123456;  
LT-UNITE 02-05-15 13:31:30  
M 123456 COMPLD  
"1-1-#-#-1:1:ep1st=1-1-#-#-1-1&1-1-#-#-1-2&  
1-1-#-#-1-3&1-1-#-#-1-4,gvrpmode=ENABLE,  
macaddr=010203040506,rootcost=1234567890,
```

RTRV-VRTSW: Retrieve Virtual Switch

```
rootmacaddr=112233445566,rootport=1-1-#-#-1-v2,  
rootpriority=32678,stbrpriority=32768,stfdtm=15,  
sthellotm=2,stmaxage=20,ethertype=0x8100,  
vcglst=1-1-#-#-1-v1&1-1-#-#-1-v2&1-1-#-#-1-v3&  
1-1-#-#-1-v4"  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-EPORT command.

Related TL1 messages

- [“ED-VRTSW: Edit Virtual Switch” \(7-145\)](#)



ENT-VRTSW notification

Output format The ENT-VRTSW notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Command Syntax: ENT-VRTSW:*aid:vrtswid:spec_block*;

Output parameters

Command parameters

1. aid – Access Identifier
See definition at [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#), Output parameters.
2. vrtswid – Virtual Switch Identifier
See definition at [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#), Output parameters.

Spec block parameters

1. eplst – EPORT AID list
See definition of parameter *eplst* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
2. ethertype – VLAN tag protocol ID
See definition of parameter *ethertype* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
3. gvrpmode – GVRP mode
See definition of parameter *gvrpmode* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
4. stbrpriority – Spanning tree bridge priority
See definition of parameter *stbrpriority* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
5. stfdtm – Spanning Tree forward delay timer
See definition of parameter *stfdtm* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
6. sthellotm – Spanning Tree hello timer
See definition of parameter *sthellotm* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).

7. stmaxage – Spanning Tree maximum age timer
See definition of parameter *stmaxage* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
8. vcglst – VCG AID list
See definition of parameter *vcglst* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).

Example output

```
LT-UNITE 02-05-15 13:31:30
A 001 REPT DBCHG
"TIME=13-30-00,DATE=02-05-15:ENT-VRTSW:
1-1-#-#-1:1:ep1st=1-1-#-#-1-1&1-1-#-#-1-2&
1-1-#-#-1-3&1-1-#-#-1-4,gvrpmode=ENABLED,
stbrpriority=32768,stfdtm=15,sthellotm=2,
stmaxage=20,ethertype=0x8100,vcglst=1-1-#-#-1-v1&1-
1-#-#-1-v2&1-1-#-#-1-v3&1-1-#-#-1-v4"
;
```



ED-VRTSW: Edit Virtual Switch

The ED-VRTSW command modifies the properties of a virtual switch.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: No

Input format Command Syntax: Ed-VRTSW:*tid:aid:ctag::vrtswid:spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
2. *aid* – Access Identifier
Refer to the [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#) command for the input parameter syntax and the description of this parameter.
3. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and the description of this parameter.
4. *vrtswid* – Virtual Switch Identifier
Refer to the [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#) command Output parameters for the description of this parameter.

Spec block parameters

1. *ethertype* – VLAN tag protocol ID
See definition of parameter *ethertype* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
2. *gvrpmode* – GVRP mode
See definition of parameter *gvrpmode* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).

3. *stbrpriority* – Spanning tree bridge priority
See definition of parameter *stbrpriority* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
4. *stfdtm* – Spanning Tree forward delay timer
See definition of parameter *stfdtm* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
5. *sthellotm* – Spanning Tree hello timer
See definition of parameter *sthellotm* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
6. *stmaxage* – Spanning Tree maximum age timer
See definition of parameter *stmaxage* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).

Output format If the NE fully complies with the ED-VRTSW request, the following normal completion response shall be returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are described in the Output parameter section of.

**Detailed behavior
description**

The ED-VRTSW command generates a REPT DBCHG message.

The command modifies the attributes (listed in the spec_block parameters part of this command) of the addressed virtual switch entity according to the parameters given with this command.

The modification is reported by means of an ED-VRTSW notification.

Example input/output

```
ED-VRTSW:LT-UNITE:1-1-#-#-1:123457::1:ethertype=0x8100,
gvrpmode=DISABLED,stbrpriority=28672,stfdtm=20,
sthellotm=3,stmaxage=10;
LT-UNITE 00-11-11 11:11:00
M 123457 COMPLD
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the ED-EPORT command.

Related TL1 messages

- [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#)



ED-VRTSW notification

Output format The ED-VRTSW notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Command Syntax: ED-VRTSW:*aid:vrtswid:spec_block*;

Output parameters

Command parameters

1. aid – Access Identifier
See definition at [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#), Output parameters.
2. vrtswid – Virtual Switch Identifier
See definition at [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#), Output parameters.

Spec block parameters

1. ethertype – VLAN tag protocol ID
See definition of parameter *ethertype* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
2. gvrpmode – GVRP mode
See definition of parameter *gvrpmode* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
3. stbrpriority – Spanning tree bridge priority
See definition of parameter *stbrpriority* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
4. stfdtm – Spanning Tree forward delay timer
See definition of parameter *stfdtm* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
5. sthellotm – Spanning Tree hello timer
See definition of parameter *sthellotm* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).
6. stmaxage – Spanning Tree maximum age timer
See definition of parameter *stmaxage* in [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#).

Example output

```
LT-UNITE 00-11-11 11:11:00
A 001 REPT DBCHG
```

"TIME=11-10-30,DATE=00-11-11:ED-VRTSW:1-1-#-#-
1:1:gvrpmode=DISABLED"

;



DLT-VRTSW notification

Output format The DLT-VRTSW notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Command Syntax: DLT-VRTSW:*aid:vrtswid*;

Output parameters

Command parameters

1. aid – Access Identifier
See definition at [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#), Output parameters.
2. vrtswid – Virtual Switch Identifier
See definition at [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#), Output parameters.

Example output

```
LT-UNITE 00-11-11 11:11:00
A 001 REPT DBCHG
"TIME=11-10-30,DATE=00-11-11:DLT-VRTSW:1-1-#-#-1:1"
;
```




Ethernet port

Overview

Purpose Starting with the entity Ethernet port the TL1 commands for all entities of the GE1 functionality will be described in the following chapters. These are in detail:

- Ethernet port (EPORT)
- Virtual concatenation group (VCG)
- Virtual concatenation group tributary (VCGTRIB).

GE1 circuit pack Each GE1 circuit pack consists of 4 sets of entities, each set composed like in the following figure. The value of *n* has a range of 1 to 21.

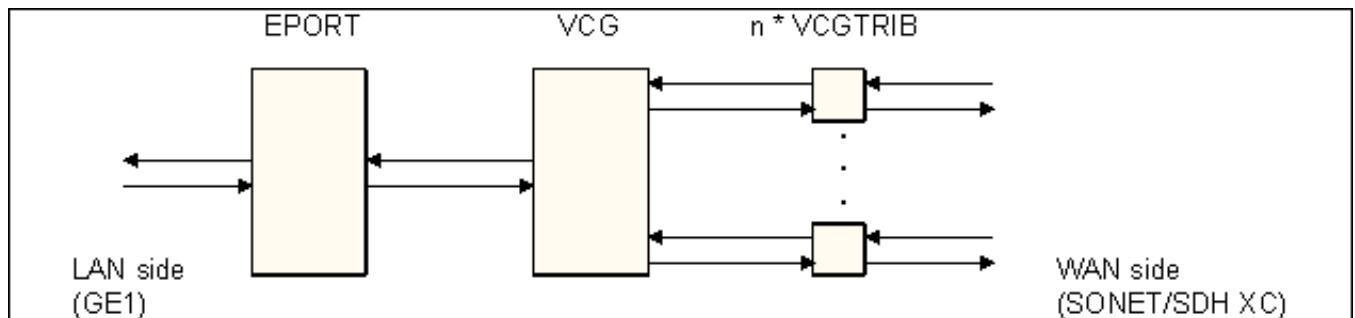

Commands for the entity ethernet port cover the parameters for

- physical link layer (layer 1) and
- data link layer (layer 2) of the LAN side of Gigabit Ethernet.

These commands are applicable to the GE1 circuit pack which has 4 LAN ports.

Those ethernet ports are mainly intended to connect several parts of a LAN via standard transmission technique like SDH or SONET.

There is no interworking with the Data Communications Network application (which uses Ethernet-LAN ports, too) used to control the NEs. The latter one is specified in another section.

Contents

RTRV-EPORT: Retrieve Ethernet port	7-153
ENT-EPORT notification	7-165
ED-EPORT: Edit Ethernet port	7-168
ED-EPORT notification	7-174
DLT-EPORT notification	7-176
Autonomous notifications	7-177



RTRV-EPORT: Retrieve Ethernet port

The RTRV-EPORT command retrieves the attributes of one or more Ethernet ports.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-EPORT-*modifier:tid:aid:ctag[:::spec_block];*

Input parameters

Command parameters

1. **modifier**
This parameter specifies the type of the ethernet port at the LAN side of the unit.
Type: alphanumeric value set.
Range: 1GE.
2. **tid – Target Identifier**
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. **aid – Access Identifier**
This parameter specifies the ethernet port to be operated on.
Type: AID
Range: EPortAID as defined in AID structure. The values
 - *all* for Simple_EPortAID and
 - *usall* for Simple_UnivSlotAIDare accepted.
4. **ctag – Correlation Tag**
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameter

1. dyn - Retrieve Dynamic Parameters

This parameter controls whether dynamic parameters shall be reported with the command reply or not. It shall be given only when using any of the wildcard values *all* or *usall* at the appropriate positions of the input AID. For input AIDs not using *all* or *usall* this parameter shall not be allowed. This implies that with such input AIDs the dynamic parameters are always returned.

The following output parameters of an ethernet port are affected:

- anegst
- fcndo
- macaddr
- rfltst
- stmd
- stpop
- stpid
- stprole
- vss
- vvidlsl.

Type: alphanumeric value set

Range: YES: Report dynamic parameters in the reply as well;

NO (default): Do not report dynamic parameters in the reply.

Output format After receiving the RTRV-EPORT command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
"aid,modifier::spec_block"
...
...
"aid,modifier::spec_block"
;
```

The output parameters *sid*, *date*, *time* and *ctag* included in the normal completion response are specified in the Output Parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid – Access Identifier
This parameter specifies the ethernet port to be operated on.
Type: AID.
Range: EPortAID as defined in AID structure with the exception of the value all.
2. modifier
This parameter specifies the type of the ethernet port at the LAN side of the unit.
Type: alphanumeric value set
Range: 1GE

Spec block parameters

1. anegst – Auto Negotiation Status
This parameter reports the result of the autonegotiation process (e.g. flow control) of this port with its link partner.
Type: alphanumeric value set.
Range:
 - ANER, for auto negotiation error
 - CFG, for configuring
 - CPL, for complete
 - UNAVAILABLE, for not available/unavailable.
2. cnprole – Customer/Network Port Role
This parameter specifies whether the addressed port is used as a customer LAN port or a network LAN port.
Type: alphanumeric value set.
Range: CUSTOMER (default), for a customer LAN port; NETWORK, for a network LAN port.
3. dftpri – Default User Priority
This parameter specifies the default user priority acc. the IEEE 802.1Q tagging scheme.
Type: alphanumeric value set.
Range:
 - HIGH
 - LOW (default).

4. dftvlan – Default VLAN Identifier
This parameter specifies the value of the VLAN identifier which is applied to frames (tagging) at LAN ingress (i.e. from LAN into the Ethernet-port). This only applies to frames carrying no VLAN identifier, yet.
Type: alphanumeric value set.
Range:
 - 1, 2, 3, ... 4092, 4093
 - UNAVAILABLE (default).To express the state UNAVAILABLE system internally the invalid VLAN ID 4094 is used.
5. enetpn – Ethernet Alarm Severity Assignment Profile Name
This parameter points to a tributary ASAP profile name of type ENET for the designated AID.
Type: alphanumeric string. A hyphen (-) is additionally allowed in the name.
Range: 1 ... 24 characters length.
Default: DEFAULT.
6. enettca – Ethernet TCA Profile Name
This parameter specifies the name of the threshold crossing alert (TCA) profile used for Ethernet ports.
Type: alphanumeric string.
Range: 1 ... 24 characters length.
Default: DEFAULT0.
7. epmode – Ethernet Port Monitoring Mode
This parameter specifies the monitoring mode of the Ethernet port. Alarms for this port will be reported if in state MON otherwise not. The configuration of epmode will change from AUTO to MON if a valid signal is applied to that port.
Type: alphanumeric value set.
Range:
 - AUTO (default), for automatic
 - MON, for monitored
 - NMON, for not monitored.
8. eppm – Ethernet Port Performance Monitoring
This parameter specifies whether the performance monitoring is enabled or disabled for this port.
Type: alphanumeric value set.

Range:

- DISABLE (default)
- ENABLE

9. fcmd – Flow Control Mode

This parameter specifies the configuration for the pause operation of this port. This parameter is applicable only if the bridge operates in backward-compatible mode (*vlantagmd* = BCMD). If not in this mode this parameter has no effect. However, changes shall be stored in the database.

Type: alphanumeric value set.

Range:

- AUTO (default), for auto-negotiate
- DISABLE, for pause mode disabled.

10. fcmdo – Flow Control Mode Operation

This parameter reports the status of the pause operation at this port. This parameter is meaningful only if the bridge operates in backward-compatible mode (*vlantagmd* = BCMD).

Type: alphanumeric value set.

Range:

- DISABLE, for Transmit and Receive Disabled
- ENABLE, for Transmit and Receive Enabled
- ENXDISR, for Transmit Enabled, Receive Disabled
- DISXENR, for Transmit Disabled, Receive Enabled
- UNAVAILABLE, for anegst equal ANER or CFG or if the value can not be retrieved.

11. fsflpbkstat – Far Side Facility Loopback Status

This parameter reports the configuration of the far-side facility loopback of this port. A far-side loopback means that the signal on the outgoing port is looped to the incoming port (Tx -> Rx). For GE1 there is only this type of facility loopback. For changing the loopback operation refer to OPR-LPBK of section Transmission and Cross-Connection Handling, Port

Type: alphanumeric value set.

Range:

- YES, for enabled loopback
- NO (default), for disabled loopback.

12. macaddr – Port MAC Address

This parameter specifies the MAC address of the port.

Type: alphanumeric value set.

Range: 000000000000 to FFFFFFFF or UNAVAILABLE if the value can not be retrieved.

13. rfltst – Remote Fault Status

This parameter reports the fault status of the remote link partner.

This parameter is meaningful only if the bridge operates in backward-compatible mode (*vlantagmd* = BCMD).

Type: alphanumeric value set.

Range:

- ANER, for auto negotiation error
- LNKFL, for link failure
- UNAVAILABLE, for not available/unavailable
- NOER, for no error
- OFFL, for offline.

14. rptmode – Repeater Mode

This parameter sets the bridge device for this LAN port into the repeater mode (promiscuous mode), valid for a point to point connection between one LAN and one WAN port. Operating in repeater mode imposes some restrictions. See detailed behaviour section. Option: This parameter is meaningful only if the bridge operates in backward-compatible mode (*vlantagmd* == BCMD).

Type: alphanumeric value set.

Range:

- ENABLE
- DISABLE (default).

15. servcond – Service Condition

This parameter specifies the service condition for this port. Some configuration possibilities like loopbacks may be dependent on the state of *servcond*.

Type: alphanumeric value set.

Range:

- INSERVICE (default)
- OUTOFSERVICE.

16. stdis – Spanning Tree Protocol Disable

This parameter allows to enable or disable the Spanning Tree Protocol for the given port. This parameter is applicable only if the port is a network port (*cnprole* = NETWORK). For customer ports (*cnprole* = CUSTOMER) this parameter has no effect. However, changes shall be stored in the database.

Type: alphanumeric value set.

Range:

- DISABLE, STP is disabled, i.e. the port is not used in the spanning tree protocol
- ENABLE (default), STP is enabled, i.e. the port is used in the spanning tree protocol.

17. stmd – Spanning Tree Protocol Mode

This parameter returns whether the normal STP according to IEEE802.1D or the rapid spanning tree protocol rSTP according to IEEE802.1w is used on the given port. This parameter is applicable only if the port is a network port (*cnprole* = NETWORK). For customer ports (*cnprole* = CUSTOMER) this parameter has no effect. However, changes shall be stored in the database.

Type: alphanumeric value set.

Range:

- 802.1D, for the normal ST
- 802.1W, for rSTP
- UNAVAILABLE if the value can not be retrieved.

Default: There is no default value.

18. stpcost – Spanning Tree Path Cost

This parameter specifies the STP-related cost of the path egressing the given port. This parameter is applicable only if the port is a network port (*cnprole* = NETWORK). For customer ports (*cnprole* = CUSTOMER) this parameter has no effect. However, changes shall be stored in the database.

Type: integer.

Range: 1 to 200000000.

Default: 20000.

19. stpid – Spanning Tree Port Identifier

The port identifier is a 16 bit parameter consisting of the port priority (high-order bits) and the port number (low-order bits). The port number is assigned by the system to a port and is not provisionable. This parameter is applicable only if the port is a network port (*cnprole* == NETWORK). For customer ports (*cnprole* == CUSTOMER) this parameter has no effect. However, changes shall be stored in the database.

Type: alphanumeric value set.

Range: 0 to 65535 and UNAVAILABLE if the value can not be retrieved.

20. stopop – Spanning Tree Protocol Operational

This parameter indicates whether the Spanning Tree Protocol is operational or not. This parameter is applicable only if the port is a network port (*cnprole* == NETWORK). For customer ports (*cnprole* == CUSTOMER) this parameter has no effect. However, changes shall be stored in the database.

Type: alphanumeric value set.

Range: YES, operational; NO, not operational, UNAVAILABLE if the value can not be retrieved.

21. stpp – Spanning Tree Port Priority

This parameter specifies the priority of the given port for the Spanning Tree Protocol. This parameter is applicable only if the port is a network port (*cnprole* = NETWORK). For customer ports (*cnprole* = CUSTOMER) this parameter has no effect. However, changes shall be stored in the database.

Type: integer.

Range: 0 to 255.

The stepping as recommended by the standard (steps of 16 starting at 0) should be implemented by the management system. The NE will accept any value in the range described above. This has the consequence, that also the range restriction "0 to 240" is not done by the NE.

Default: 128.

22. stprole – Spanning Tree Protocol Role

This parameter reports the role of the given port in rSTP. This parameter is applicable only if the port is a network port (*cnprole* = NETWORK) and operates in rSTP mode (*stmd* = 802.1W). For customer ports (*cnprole* = CUSTOMER) this parameter has no effect. However, changes shall be stored in the database.

Type: alphanumeric value set.

Range:

- ROOT, root
- DESG, designated
- ALT, alternative
- BACKUP, backup
- UNAVAILABLE if the value can not be retrieved.

23. tcamd – TCA mode

This parameter shows the modus of the PM thresholding. Two thresholding methods are applicable: TR-only. (also known as the implicit reset method), TR-RTR. (also known as the explicit reset method).

Type: alphanumeric value set.

Range: TR, TRRTR (default).

24. vrtswid – Virtual Switch Identifier

See definition at [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#), Output parameters.

Option: This parameter is reported only if the virtual switch entity exists (i.e. the VLAN tagging mode *vlantagmd* of the slot the addressed EPort belongs to is set to 802.1TAG).

25. vss – Spanning Tree Status

This parameter returns the status of the spanning tree protocol for the given port. This parameter is applicable only if the port is a network port (*cnprole* = NETWORK). For customer ports (*cnprole* = CUSTOMER) this parameter has no effect. However, changes shall be stored in the database.

The name of this parameter originally stands for VCG STP status which is somewhat misleading for an EPORT but is kept for consistency reasons with other products. (When using an EPORT as a network port it participates in STP and therefore also has status information.)

Type: alphanumeric value set.

Range:

- FWG, Forwarding
- LRG, Learning
- LIS, Listening (IEEE8102.D/STP only)
- BLK, Blocking (IEEE8102.D/STP only)
- DISF, Disabled due to a failure (IEEE8102.D/STP only)
- DISA, Disabled via provisioning
- BRK, Broken (IEEE8102.w/rSTP only)
- DCD, Discarding (IEEE8102.w/rSTP only)
- UNAVAILABLE if the value can not be retrieved.

26. **vvidls** – Valid VLAN Identifier List (static)

This parameter specifies a list of all static VLAN identifiers allowed for this port. The list shall be ampersand grouped (& and &&). The list shall be packed by the NE and the management systems as good as possible by using '&' and '&&'. The vlan identifier of an incoming frame must be a member of this static VLAN Id list or the dynamic VLAN Id list **vvidlsd**. Frames tagged by a vlan identifier not member of these lists will be discarded. The port VLAN identifier (refer to parameter **dftvlan** of RTRV-EPORT Output Parameters) is not part of this list.
Type: alphanumeric string and the character '&'.

Range:

- Value of each single member (valid VLAN identifier) in the list 1, 2, ..., 4092, 4093
- In case the list has no members (empty list) -1.

The length of the list is limited only by the usual system limitations like e.g. TL1 line length.

Default: -1.

Example 1:

vvidls=-1. The list has no members (empty list).

Example 2:

vvidls=3&5&40&&45. This list has the members 3, 5, 40, 41, 42, 43, 44 and 45.

Example 3:

vvidls=1&&4093 This list has the members 1,2, 3, ..., 4092, 4093.

27. vvidlsd - Valid VLAN Identifier List (dynamic)

This parameter gives the list of all dynamic VLAN identifiers allowed for this port as gathered autonomously via GVRP. The list is ampersand grouped (& and &&). The vlan identifier of an incoming frame must be a member of this dynamic VLAN Id list or the static VLAN Id list vvidls. Frames tagged by a vlan identifier not member of these lists will be discarded.

Option: This parameter is reported only if

- the virtual switch entity exists (i.e. the VLAN tagging mode vltagmd of the slot the addressed EPort belongs to is set to 802.1TAG) AND
- GVRP is enabled on the virtual switch (*gvrpmode* = ENABLED)
- the port is a NETWORK port (*cnprole* = NETWORK).

Type: alphanumeric string and the character '&'.

Range:

- Value of each single member (valid VLAN identifier) in the list 1, 2, ..., 4092, 4093
- In case the list has no members (empty list) -1.

If the value can not be retrieved: UNAVAILABLE

Default: There is no default value.

Example 1:

vvidlsd=-1 The list has no members (empty list).

Example 2:

vvidlsd=3&5&40&&45 This list has the members 3, 5, 40, 41, 42, 43, 44 and 45.

**Detailed behaviour
description**

The values of the following parameters are directly requested from the hardware:

- anegst
- fcmdo
- macaddr
- rfltst
- stmd
- stpop
- stpid
- stprole

- VSS
- vvidlsd.

Thus the value "UNAVAILABLE" is reported, if the CP HW is not available in the system.

Example input/output

```
RTRV-EPORT-1GE:LT-UNITE:1-1-#-#-1-1:123456;  
LT-UNITE 02-05-21 11:11:00  
M 123456 COMPLD  
"1-1-#-#-1-1,1GE::anegst=UNAVAILABLE,  
cnprole=CUSTOMER,dftpri=LOW,dftvlan=UNAVAILABLE,  
enetpn=DEFAULT,enettca=DEFAULT,epmode=AUTO,  
eppm=DISABLE,fcmd=AUTO,fcmdo=UNAVAILABLE,  
fsflpbkstat=N0,macaddr=112233445566,  
rfl1st=UNAVAILABLE,rptmode=DISABLE,rstpmde=ENABLE,  
servcond=INSERVICE,stdis=DISABLE,stmde=802.1D,  
stpcost=20000,stpp=128,stprole=ROOT,tcamd=TR,  
vrtswid=1,vvidls=-1,vvidlsd=-1"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#) command.

Related TL1 messages

- [“ED-EPORT: Edit Ethernet port” \(7-168\)](#)
- [“OPR-LPBK: Operate loopback \(here facility loopback\)” \(7-111\)](#)
- [“RTRV-LPBK: Retrieve loopback \(here facility loopback\)” \(7-106\)](#)
- [“RLS-LPBK: Release loopback \(here facility loopback\)” \(7-118\)](#)



ENT-EPORT notification

Output format The ENT-EPORT notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: The ENT-EPORT notification has following specific syntax:

ENT-EPORT-modifier:*aid::spec_block*;

Output parameters

Command parameters

1. aid – Access Identifier
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.

Spec block parameters

1. cnprole – Customer/Network Port Role
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
2. dftpri – Default User Priority
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
3. dftvlan – Default VLAN Identifier
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
4. enetpn – Ethernet Alarm Severity Assignment Profile Name
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
5. enettca – Ethernet TCA Profile Name
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
6. epmode – Ethernet Port Monitoring Mode
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
7. eppm – Ethernet Port Performance Monitoring
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.

8. fcmd – Flow Control Mode
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
9. fsflpbkstat – Far Side Facility Loopback Status
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
10. rptmode – Repeater Mode
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
11. servcond – Service Condition
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
12. stdis – Spanning Tree Protocol Disable
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
13. stpcost – Spanning Tree Path Cost
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
14. stpp – Spanning Tree Port Priority
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
15. tcamd – TCA mode
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
16. vrtswid – Virtual Switch Identifier
See definition at [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#), Output parameters.
Option: This parameter is reported only if the virtual switch entity exists (i.e. the VLAN tagging mode vltagmd of the slot the addressed EPort belongs to is set to 802.1TAG).
17. vvidls – Valid VLAN Identifier List (static)
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.

Example Output

```
LT-UNITE 00-11-11 11:11:00
A 001 REPT DBCHG
"TIME=11-10-30,DATE=00-11-11:ENT-EPORT-1GE:
1-1-#-#-2-3::cnprole=CUSTOMER,dftpri=LOW,
```



```
dftvlan=UNAVAILABLE,enetpn=DEFAULT, enettca=DEFAULT,  
epmode=AUTO,eportClass=TRADITIONAL,eportControl=NORMAL,  
eppm=DISABLE,fcmd=AUTO,fsflpbkstat=NO,rptmode=DISABLE,  
rstpmd=ENABLE,servcond=INSERVICE,stdis=DISABLE,  
stpcost=20000,stpp=128,tcamd=TR,vrtswid=1,vvidls=-1"  
;
```



ED-EPORT: Edit Ethernet port

The ED-EPORT command modifies the properties of an Ethernet port.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: No

Input format Command Syntax: ED-EPORT:*modifier:tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. **modifier**
This modifier specifies the type of the ethernet port at the LAN side.
Type: alphanumeric value set.
Range: 1GE.
2. **tid – Target Identifier**
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. **aid – Access Identifier**
Refer to the [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#) command for the description of this parameter.
4. **ctag – Correlation Tag**
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameter

1. **cnprole – Customer/Network Port Role**
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
2. **dftpri – Default User Priority**
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.

3. dftvlan – Default VLAN Identifier
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
4. enetpn – Ethernet Alarm Severity Assignment Profile Name
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
5. enettca – Ethernet TCA Profile Name
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
6. epmode – Ethernet Port Monitoring Mode
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
7. eppm – Ethernet Port Performance Monitoring
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
8. fcmd – Flow Control Mode
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
9. rptmode – Repeater Mode
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
10. servcond – Service Condition
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
11. stdis – Spanning Tree Protocol Disable
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
12. stpcost – Spanning Tree Path Cost
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
13. stpp – Spanning Tree Port Priority
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.

14. tcamd – TCA mode
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
15. vvidls – Valid VLAN Identifier List (static)
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.

Output format If the NE fully complies with the ED-EPORT request, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time* and *ctag* included in the normal completion response are specified in the Output Parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behaviour
description**

The ED-EPORT generates a REPT DBCHG message.

The command modifies the attributes (listed in the *spec_block* parameters part of this command) of the addressed port entity according to the parameters given with this command.

The modification shall be reported by means of an ED-EPORT notification.

Update affected entities

A change of the value of the parameter *rptmode* shall have the following side effects: The change from disable to enable or enable to disable shall set the parameter *dftvlan* and *vvidls* for this port to their default values.

During repeater mode operation no VLAN ingress filtering for tagged frames or classification for untagged frames is done. It is not intended to keep the VLAN settings being active before a switch to the repeater mode for later restoration.

Relation of repeater mode - *rptmode* and VLAN tagging mode - *vlantagmd* of related slot

When *vlantagmd* is set to BCMD (backward compatible mode) the value of *rptmode* is relevant. When *vlantagmd* has a value different from BCMD the value of *rptmode* is irrelevant and changes of

rptmode shall not be allowed. When switching *vlantagmd* back to BCMD the value of *rptmode* from the database becomes relevant again.

Implicit enabling/disabling of flow control when modifying *vlantagmd*

The flow control mode of EPORTs is implicitly disabled when changing the *vlantagmd* of the related slot from backward compatible mode BCMD to 802.1TAG. However, the current value of *fcmd* shall be preserved in the database. Also modifications of *fcmd* are allowed and shall be applied to the database. When changing *vlantagmd* back to BCMD the value of *fcmd* stored in the database shall become valid again.

Implicit enabling/disabling of GVRP when enabling/disabling STP for a port

When enabling/disabling STP for a network port via parameter *stdis* GVRP is implicitly enabled/disabled for this port (if enabled via parameter *gvrpmode* of the virtual switch).

Disabling of PM monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Example input/output

```
ED-EPORT-1GE:LT-UNITE:1-1-#-#-1-1:123457::epmode=NMON;  
    LT-UNITE 00-11-11 11:11:00  
M 123457 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the ED-EPORT command.

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: TCA profile exists

See definition of validation rule in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Validation rule: servcond must be disabled for facility loopback

Check that the *servcond* is not enabled when a facility loopback is existing for this port.

Error Code: SNVS - Status, Not in Valid State, Facility Loopback is active for this port

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error Code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation rule: Default VLAN ID not allowed in repeater mode

No VLAN ingress classification with dftvlan is possible during repeater mode operation. The default VLAN ID has to be the value "unavailable" during this state.

Error Code: SNVS - Status, Not in Valid State, Active Repeater Mode for this Port does not allow dftvlan to be modified

Validation rule: VLAN filtering database not allowed in repeater mode

No VLAN filtering database, extracted from the vvidls, is used during repeater mode operation. The valid VLAN list has to be an empty list during this state.

Error Code: SNVS - Status, Not in Valid State, Active Repeater Mode for this Port does not allow vvidls to be modified

Validation rule: Parameter modification not allowed in backward compatible mode

No modification of the following parameters is allowed if the VLAN tagging mode *vlantagmd* of the pack, to which the specified EPORT belongs to, is set to backward compatible mode (BCMD): *cnprole*, *stdis*, *stpp*, *stpcost*, *rstopmd*.

Error Code: SNVS - Status, Not in Valid State, Modification not allowed in Backward Compatible Mode

Validation rule: No modification of *rptmode* if *vlantagmd* = 802.1TAG

No modification of the repeater mode *rptmode* is allowed if the VLAN tagging mode *vlantagmd* of the pack, to which the specified EPORT belongs to, is set to 802.1TAG.

Error Code: SNVS - Status, Not in Valid State, Modification not allowed

Validation rule: Default VLAN ID is already assigned for this system

The default VLAN ID of a LAN port cannot have the same value as the default VLAN Id of another LAN port in the system or any other instantiated VLAN in the system, except for the value 4094.

Error Code: IDNC-Input, Data, NotConsistent, Default VLAN ID is already assigned for this System.

System is here to be seen with the granularity of a GE1 circuit pack.

Validation rule: Default VLAN ID is no allowed member of valid VLAN list for this system

The default VLAN ID of a LAN port cannot be included into the valid VLAN list of any LAN port within the system.

Error Code: IDNC-Input, Data, NotConsistent, Default VLAN ID is not an allowed member of valid VLAN list.

System is here to be seen with the granularity of a GE1 circuit pack.

Related TL1 message

- [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\).](#)



ED-EPORT notification

Output format The ED-EPORT notification uses the general format of a REPT DBCHG (Report Database Change) notification.

The ED-EPORT notification has following specific syntax:

ED-EPORT-*modifier:aid::spec_block*;

Output parameters

Command parameters

1. aid – Access Identifier
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.

Spec block parameters

1. cnprole – Customer/Network Port Role
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
2. dftpri – Default User Priority
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
3. dftvlan – Default VLAN Identifier
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
4. enetpn – Ethernet Alarm Severity Assignment Profile Name
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
5. enettca – Ethernet TCA Profile Name
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
6. epmode – Ethernet Port Monitoring Mode
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
7. eppm – Ethernet Port Performance Monitoring
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.

8. fcmd – Flow Control Mode
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
9. fsflpbkstat – Far Side Facility Loopback Status
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
10. servcond – Service Condition
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
11. stdis – Spanning Tree Protocol Disable
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
12. stpcost – Spanning Tree Path Cost
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
13. stpp – Spanning Tree Port Priority
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
14. tcamd – TCA mode
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
15. vvidls – Valid VLAN Identifier List
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.

Example output

```
LT-UNITE 00-11-11 11:11:00
A 001 REPT DBCHG
"TIME=11-10-30,DATE=00-11-11:ED-EPORT-1GE:1-1-#-#-1-
1::fcmd=DISABLE"
;
```



DLT-EPORT notification

Output format The DLT-EPORT notification uses the general format of a REPT DBCHG (Report Database Change) notification.

The DLT-EPORT notification has the following specific syntax:

DLT-EPORT:*aid*;

Output parameters

Command parameters

aid - Access Identifier

See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.

Example output

```
LT-UNITE 00-11-11 11:11:00
A 001 REPT DBCHG
"TIME=11-10-30,DATE=00-11-11:DLT-EPORT:1-1-#-#-1-1:::"
;
```



Autonomous notifications

**GE1 circuit pack is
auto-provisioned**

If a GE1 circuit pack is auto-provisioned a GE1PORT instance will be created with the given default parameter values for all GE1 ports of the circuit pack.

This change is reported via the ENT-EPORT notification.

**LOS for Gigabit Ethernet
port (LAN port) clears**

On a LAN port (Gigabit Ethernet) if a valid signal applied for a certain validation time and the port mode (epmode) is set to AUTO then the port mode shall be changed to MON. This change shall be reported via ED-EPORT notification with parameter epmode.



Virtual concatenation group

Overview

Purpose For an overview of the GE1 related entities VRTSW, EPORT, VCG and VCGTRIB see [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#).

Commands for the entity virtual concatenation group (VCG) cover the parameters for both

- the Ethernet side (WAN ports) and
- the EoS (Ethernet over SDH/SONET).

These commands are applicable to the GE1 circuit pack which has 4 WAN ports.

Note: The virtual concatenation group (VCG) and its tributaries (VCGTRIB) have some direction dependent parameters. Following the semantic for optical ports the direction indicators input and output are used.

Input direction


WAN → VCG → VCGTRIB → Cross-connect

As those tributaries have termination function this is also often called source.

Output direction

Cross-connect → VCGTRIB → VCG → WAN

As those tributaries have termination function this is also often called sink.

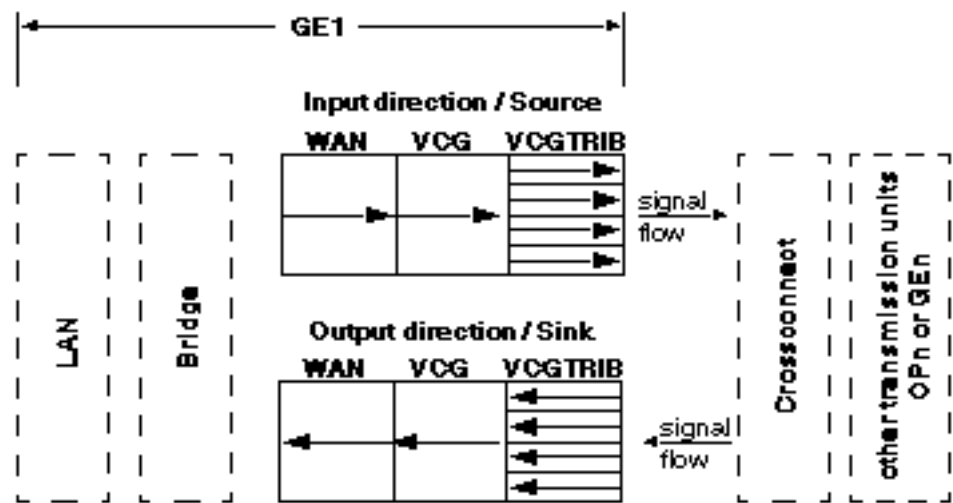

Contents

RTRV-VCG: Retrieve virtual concatenation group	7-180
ENT-VCG notification	7-190
ED-VCG: Edit virtual concatenation group	7-193
ED-VCG notification	7-201
DLT-VCG notification	7-204
Autonomous notifications	7-205



RTRV-VCG: Retrieve virtual concatenation group

The RTRV-VCG command retrieves the attributes of a virtual concatenation group.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Priority: 1
Abortable: Yes.

Input format Command Syntax: RTRV-VCG:*tid:aid:ctag*[::*spec_block*];

Input parameters

Command parameters

1. **tid** – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. **aid** – Access Identifier
This parameter specifies the virtual concatenation group (VCG) to be operated on.
Type: AID.
Range: VCGAID as defined in AID structure. The values
 - **vall** for Simple_VCGAID and
 - **usall** for Simple_UnivSlotAIDare accepted.
3. **ctag** – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameter

1. **dyn** - Retrieve Dynamic Parameters
This parameter controls whether dynamic parameters shall be reported with the command reply or not. It shall be given only when using any of the wildcard values **usall** or **vall** at the appropriate positions of the input AID. For input AIDs not using

usall or *vall* this parameter is not allowed. This implies that with such input AIDs the dynamic parameters are always returned. The following output parameters of a vcgport port are affected: *mfiv*, *macaddr*, *stmd*, *stpop*, *stpid*, *stprole*, *vss*, *vvidlsd*.

Type: alphanumeric value set.

Range:

- YES: Report dynamic parameters in the reply as well
- NO (default): Do not report dynamic parameters in the reply.

Output format If the NE fully complies with the RTRV-VCG request, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
  "aid::spec_block"
    <1 or more of the line above>
  "tribaid:mfiv,MFIV"
    <several lines, one for each tribaid belonging to aid,
    or no lines, depending on dynamic data retrieval
    mode>
    ...
    ...
  "aid::spec_block"
    <1 or more of the line above>
  "tribaid:mfiv,MFIV"
    <several lines, one for each tribaid belonging to aid,
    or no lines, depending on dynamic data retrieval
    mode>
;
```

The output parameters *sid*, *date*, *time* and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid – Access Identifier
This parameter specifies the VCG to be operated on.
Type: AID.
Range: VCGAID as defined in AID structure with the exception of the value *vall*.
2. tribaid – Tributary Access Identifier
The tributary access identifier shall specify a tributary belonging to the virtual concatenation group (VCG) given by the aid above.
Type: AID.
Range: VCGNumAID as defined in AID structure with the exception of the value all.
3. mfiv - Multiframe Indicator Value
This parameter reports the differential delay between the tributary addressed by *tribaid* (see above) and the fastest tributary of the VCG. The fastest tributary has the value zero. For each retrieve of a VCG there is a report of mfiv for all tributaries belonging to the VCG.
Type: alphanumeric value set.
Range:
 - 0, 125, 250, 375, ..., 511750, 511875 [microseconds]
 - NA
 - UNAVAILABLEIn fact the reported range for delay is 0 ... 255875 microseconds. Other values can only be reported as raw values without a delay calculation between the tributaries. UNAVAILABLE is reported when the accepted MFI contents do not meet the basic acceptance criteria (multiframe alignment not completed), or intra-NE communication with the reporting entity is disrupted. NA (Not Applicable) shall be reported under defect conditions detected by the Sn[i] termination function or the VC-n is not part of an S-n-Xv group.

Spec block parameters

1. cnprole – Customer/Network Port Role
This parameter specifies whether the addressed port is used as a customer WAN port or a network WAN port.
Type: alphanumeric value set.
Range: CUSTOMER, for a customer WAN port. NETWORK (default), for a network WAN port.
2. dftpri – Default User Priority
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
3. enetpn – Ethernet Alarm Severity Assignment Profile Name
This parameter points to a tributary ASAP profile name of type ENET for the designated AID.
Ethernet port and VCG port have the same ASAP profile named ENET.
Type: Alphanumeric string. A hyphen (-) is additionally allowed in the name.
Range: 1 ... 24 characters length.
Default: DEFAULT.
4. enettca – Ethernet TCA Profile Name
This parameter specifies the name of the threshold crossing alert (TCA) profile used for the VCG.
Type: alphanumeric string.
Range: 1 ... 24 characters length.
Default: DEFAULT0.
5. eportClass – Ethernet Port Class
This identifies the ethernet port class of the AID. *eportClass* is used to specify ethernet ports for use by NN application.
Type: alphanumeric value set.
Range: TRADITIONAL (default), EDGE .
6. eportControl – Ethernet Port Control (Ethernet Port Administrative Mode)
This identifies the administrative mode of ethernet ports of *eportClass*=EDGE. For ethernet ports of other ethernet port class this parameter shall not be relevant. *eportControl* is introduced specifically for use by NN application.
Type: alphanumeric value set.
Range: NORMAL (default), MAINT, LOCKOUT .

7. htmr – Hold-Off Time

The parameter *htmr* shall specify the hold off time for the LCAS protection. If a tributary is configured to take part on transmission for the VCG and it goes to state faulty then this tributary is taken out of transmission by LCAS after the hold off time. This time is configured on group level, i.e. all tributaries have the same value for hold-off time. This parameter only affects NE behaviour if lcasmd=ENABLED.

Type: numeric value set.

Range: 0 (default), 100, 200, ..., 9900, 10000 [milliseconds].

8. inputsig – Tributary Input Signal Rate List

This parameter reports the tributary structure of the VCG port in input direction. This will implicitly give the maximum capacity of the VCG port, too. The tributary structure depends on interface standard specified for this VCG by istd . For definition of *istd* refer to [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#) Output parameters.

Type: numeric string of the form NX

- N shall specify the count of container type X
- X shall specify the container type (or envelope).

Range:

- istd=SDH: N=7, X = 4 for VC-4
- istd=SONET: N=21, X=1 for STS-1.

Default: istd=SDH: 74; istd=SONET: 211.

9. istd – Interface Standard

This parameter specifies the interface standard of this VCG. This value is applied for both input and output direction.

Type: alphanumeric value set.

Range:

- SDH
- SONET.

Default: As derived from parameter *istddflt* specified at configuration management, section System RTRV-EQPT.

10. lcasmd – LCAS Mode

This parameter specifies the operation mode of the Link Capacity Adjustment Scheme for this VCG. This value is bi-directional.

Type: alphanumeric value set.

Range:

- DISABLE
- ENABLE (default).

11. macaddr – Port MAC Address

See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.

12. stdis – Spanning Tree Protocol Disable

This parameter allows to enable or disable the Spanning Tree Protocol for the given port. This parameter is applicable only if the port is a network port (*cnprole* = NETWORK). For customer ports (*cnprole* = CUSTOMER) this parameter has no effect. However, changes shall be stored in the database.

Type: alphanumeric value set.

Range: DISABLE, STP is disabled, i.e. the port is not used to build the spanning tree. ENABLE (default), STP is enabled, i.e. the port is used to build the spanning tree.

As VCGs are by default network ports the default value is to enable STP.

13. stmd – Spanning Tree Protocol Mode

See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.

14. stpcost – Spanning Tree Path Cost

This parameter specifies the STP-related cost of the path egressing the given port. This parameter is applicable only if the port is a network port (*cnprole* = NETWORK). For customer ports (*cnprole* = CUSTOMER) this parameter has no effect. However, changes shall be stored in the database.

Type: integer.

Range: 1 to 200000000.

Default: 20000.

The default value depends on the provisioned VCG size. As currently only a fix size of 7 VC4s or 21 STS1s corresponding to approx. 1 Gbit is supported the default value is as shown above.

15. stpid – Spanning Tree Port Identifier

See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.

16. stpop – Spanning Tree Protocol Operational

See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.

17. stpp – Spanning Tree Port Priority
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
18. stprole – Spanning Tree Protocol Role
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
19. tcamd – TCA mode
This parameter shows the modus of the PM thresholding.
Two thresholding methods are applicable: TR-only, (also known
as the implicit reset method). TR-RTR, (also known as the
explicit reset method).
Type: alphanumeric value set.
Range: TR, TRRTR.
Default: TRRTR in SDH mode; TR in SONET mode.
20. unequipoisig – Unequipped Tributary Output Signal Rate List
The parameter unequipoisig shall specify the tributary structure
and the capacity of the VCG port in output direction. As long as
there is no cross-connection applied the specified tributaries shall
be occupied by an unequipped signal. The parameter will
implicitly give the maximum capacity of the VCG port, too. The
tributary structure depends on interface standard specified for this
VCG by istd . For definition of istd refer to RTRV-VCG Output
Parameters. The signal will be immediately terminated on the
unit. So no unequipped signal is visible to the outside world.
Type: numeric string of the form NX
 - N shall specify the count of container type X
 - X shall specify the container type (or envelope).Range:
 - istd=SDH: N=7, X=4 for VC-4
 - istd=SONET: N=21, X=1 for STS-1.Default: istd=SDH: 74; istd=SONET: 211.
21. vmode – VCG Monitoring Mode
The parameter vmode shall specify the monitoring mode for
VCG. Alarms for this port will be reported if in mode MON
otherwise not. There is no automatic mode.
Type: alphanumeric value set.
Range:
 - MON, for monitored
 - NMON (default), for not monitored.

22. **vpm** – VCG Performance Monitoring
The parameter **vpm** shall specify whether the performance monitoring is enabled or disabled for this port.
Type: alphanumeric value set.
Range:
 - DISABLE (default)
 - ENABLE.
23. **vrtswid** – Virtual Switch Identifier
See definition at [“RTRV-VRTSW: Retrieve Virtual Switch” \(7-136\)](#), Output parameters.
This parameter is reported only if the virtual switch entity exists (i.e. the VLAN tagging mode **vlantagmd** of the slot the addressed EPort belongs to is set to 802.1TAG).
24. **vss** – Spanning Tree Status
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
25. **vvidls** – Valid VLAN Identifier List (static)
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
26. **vvidlsd** – Valid VLAN Identifier List (dynamic)
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
27. **wtr** – Wait To Restore Time
The parameter **wtr** shall specify the wait to restore time for the LCAS protection. If a tributary is configured to take part on transmission for the VCG and it recovers from a faulty state then this tributary is taken in again to transmission by LCAS after the wait-to-restore time. This time is configured on group level, i.e. all tributaries have the same value for the wait-to-restore time. This parameter only affects NE behaviour if **lcasmd**=ENABLED.
Type: alphanumeric value set.
Range: 0, 1, 2, ..., 59, 60 [minutes].
Default: 5.

**Detailed behavior
description**

The RTRV-VCG does not generate a REPT DBCHG message. The command retrieves all VCG parameters as described in section Output parameters.

The values of the following parameters are directly requested from the hardware:

- mfiv
- macaddr
- stmd
- stpop
- stpid
- stprole
- vss
- vvidlsd.

Example input/output

```
RTRV-VCG:LT-UNITE:1-1-#-#-2-v3:123456;
LT-UNITE 01-03-20 09:05:00
M 123456 COMPLD
"1-1-#-#-02-v3:cnprole=NETWORK,dftpri=LOW,
dftvlan=UNAVAILABLE,enetpn=DEFAULT,enettca=DEFAULT0,
htmr=0,inputsig=211,istd=SONET,lcasmd=ENABLE,
macaddr=112233445566,rstpm=ENABLE,stdis=ENABLE,
stmd=802.1W,stpcost=20000,stpp=128,stprole=DESG,
tcamd=TR,unequiposig=211,vmode=NMON,vpm=DISABLE,
vrtswid=1,vss=FWG,vvidls=-1,vvidlsd=1&24,wtr=5"
"1-1-#-#-02-v3-1:125,MFIV"
.
. for all 21 VCG members
.
"1-1-#-#-02-v3-21:250,MFIV"
;

RTRV-VCG:LT-UNITE:1-1-#-#-2-vall:123456;
LT-UNITE 01-03-20 09:05:00
M 123456 COMPLD
"1-1-#-#-02-v1:cnprole=NETWORK,dftpri=LOW,
dftvlan=UNAVAILABLE,enetpn=DEFAULT,enettca=DEFAULT0,
htmr=0,inputsig=211,istd=SONET,lcasmd=ENABLE,
rstpm=ENABLE,stdis=ENABLE,stpcost=20000,stpp=128,
tcamd=TR,unequiposig=211,vmode=NMON,vpm=DISABLE,
vrtswid=1,vvidls=-1,wtr=5"
"1-1-#-#-02-v2:cnprole=NETWORK,dftpri=LOW,
dftvlan=UNAVAILABLE,enetpn=DEFAULT,enettca=DEFAULT0,
```

```
htmr=0,inputsig=211,istd=SONET,lcasmd=ENABLE,  
rstpmd=ENABLE,stdis=ENABLE,stpcost=20000,stpp=128,  
tcamd=TR,unequiposig=211,vmode=NMON,vpm=DISABLE,  
vrtswid=1,vvidls=-1,wtr=5"  
"1-1-#-#-02-v3:cnprole=NETWORK,dftpri=LOW,  
dftvlan=UNAVAILABLE,enetpn=DEFAULT,enettca=DEFAULT0,  
htmr=0,inputsig=211,istd=SONET,lcasmd=ENABLE,  
rstpmd=ENABLE,stdis=ENABLE,stpcost=20000,stpp=128,  
tcamd=TR,unequiposig=211,vmode=NMON,vpm=DISABLE,  
vrtswid=1,vvidls=-1,wtr=5"  
"1-1-#-#-02-v4:cnprole=NETWORK,dftpri=LOW,  
dftvlan=UNAVAILABLE,enetpn=DEFAULT,enettca=DEFAULT0,  
htmr=0,inputsig=211,istd=SONET,lcasmd=ENABLE,  
rstpmd=ENABLE,stdis=ENABLE,stpcost=20000,stpp=128,  
tcamd=TR,unequiposig=211,vmode=NMON,vpm=DISABLE,  
vrtswid=1,vvidls=-1,wtr=5"  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-VCG command, too.

Related TL1 messages [“ED-VCG: Edit virtual concatenation group” \(7-193\)](#)



ENT-VCG notification

Output format The ENT-VCG notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: The ENT-VCG notification has following specific syntax:

ENT-VCG:*aid::spec_block*;

Output parameters

Command parameters

1. aid – Access Identifier
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.

Spec block parameters

1. cnprole – Customer/Network Port Role
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
2. dftpri – Default User Priority
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
3. dftvlan – Default VLAN Identifier
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
4. enetpn – Ethernet Alarm Severity Assignment Profile Name
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
5. enettca – Ethernet TCA Profile Name
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
6. eportClass – Ethernet Port Class
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
7. eportControl – Ethernet Port Control (Ethernet Port Administrative Mode)
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.

8. htmr – Hold-Off Time
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
9. inputsig – Tributary Input Signal Rate List
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
10. istd – Interface Standard
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
11. lcasmd – LCAS Mode
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
12. stdis – Spanning Tree Protocol Disable
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
13. stpcost – Spanning Tree Path Cost
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
14. stpp – Spanning Tree Port Priority
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
15. tcamd – TCA mode
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
16. unequiposig – Unequipped Tributary Output Signal Rate List
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
17. vmode – VCG Monitoring Mode
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
18. vpm – VCG Performance Monitoring
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.

19. vrtswid – Virtual Switch Identifier
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
Option: This parameter is reported only if the virtual switch entity exists (i.e. the VLAN tagging mode vltagmd of the slot the addressed VCG belongs to is set to 802.1TAG).
20. vvidls – Valid VLAN Identifier List (static)
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
21. wtr – Wait To Restore Time
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.



ED-VCG: Edit virtual concatenation group

The ED-VCG command modifies the properties of a virtual concatenation group.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Priority: 1
Abortable: No

Input format Command Syntax: **ED-VCG:tid:aid:ctag:::spec_block;**

Input parameters

Command parameters

1. tid - Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. aid - Access Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. ctag - Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameter

1. cnprole – Customer/Network Port Role
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
2. dftpri – Default User Priority
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
3. dftvlan – Default VLAN Identifier
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
4. enetpn – Ethernet Alarm Severity Assignment Profile Name
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.

5. enettca – Ethernet TCA Profile Name
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
6. eportClass – Ethernet Port Class
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
7. eportControl – Ethernet Port Control (Ethernet Port Administrative Mode)
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
8. htmr – Hold-Off Time
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
9. istd – Interface Standard
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
10. lcasmd – LCAS Mode
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
11. stdis – Spanning Tree Protocol Disable
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
12. stpcost – Spanning Tree Path Cost
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
13. stpp – Spanning Tree Port Priority
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
14. tcamd – TCA mode
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
15. vmode – VCG Monitoring Mode
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
16. vpm – VCG Performance Monitoring
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.

17. vvidls – Valid VLAN Identifier List (static)
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
18. wtr – Wait To Restore Time
See definition at [“RTRV-VCG: Retrieve virtual concatenation
group” \(7-180\)](#), Output parameters.

Output format

If the NE fully complies with the ED-VCG request, the following normal completion response shall be returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time* and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behaviour description

The ED-VCG shall generate a REPT DBCHG message.

The command shall modify the attributes (listed in the spec_block parameters part of this command) of the addressed port entity according to the parameters given with this command.

The modification shall be reported by means of an ED-VCG notification.

Mode changes

A change of *istd* shall only be possible if the VCG port has no cross-connections. A change of *istd* shall not be dependent from pending alarms or active performance monitoring for the individual tributaries.

A change of *istd* shall set default values for the parameters:

- cnprole, dftpri, dftvlan, enettca, htmr, lcasmd, stdis, stpcost, stpp, tcamd, vmode, vpm, wtr.

A change of *istd* shall set the parameter vvidls to default (empty list), if the GE pack works not in backward compatible mode (vlantagmd $\neq$ BCMD). If the GE pack works in backward compatible mode (vlantagmd = BCMD), then the parameter vvidls is not reseted to an empty list.(VRTSW does not exists, so the vvidls is set indirectly by EPORT configuration).

Update affected entities

A change of the value of the parameter lcasmd shall trigger the report of the corresponding tributary changes via a ED-VCGTRIB notification.

A change of the value of the parameter istd shall trigger the deletion of all tributaries of this VCG port and the creation of tributaries for this VCG port with the default values according the new value of *istd*. The deletion is reported by a DLT-VCGTRIB notification. The creation is reported by an ENT-VCGTRIB notification. The deletion of the objects leads to a clearance of pending alarms for these objects. The generation of objects with a different istd generates new alarms for these objects if the alarm condition is still present.

Relation of STP Disable and GVRP

Refer to the Detailed behavior of the [“ED-EPORT: Edit Ethernet port” \(7-168\)](#) command for details.

Switching of interface standard - Ignore other parameters

If additional parameters beside istd are specified with the ED-rr command they will be ignored by the NE. This simple approach has the advantage that all ambiguous situations are avoided and it is not necessary to implement an order or follow a certain sequence when evaluating the parameters.

Example for *istd* change from SONET to SDH

```
ED-VCG:LT-UNITE:1-1-#-#-2-V3:654321:::istd=SDH;
    LT-UNITE 00-11-11 11:11:00
M 654321 COMPLD
;
    LT-UNITE 00-11-11 11:11:05
A 001 REPT DBCHG
    "TIME=11-11-02,DATE=00-11-11:ED-VCG:1-1-#-#-2-V3::
    istd=SDH"
;
    LT-UNITE 00-11-11 11:11:06
A 003 REPT DBCHG
    "TIME=11-11-02,DATE=00-11-11:DLT-VCGTRIB:
    1-1-#-#-2-V3-1&&-21"
;
    LT-UNITE 00-11-11 11:11:08
A 005 REPT DBCHG
    "TIME=11-11-05,DATE=00-11-11:ENT-VCGTRIB-VC:
```


Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the ED-VCG command.

Validation Rule: cross-connection - interface standard change

Check that the interface standard is not changed if there is still a cross-connection applied to any tributary of the whole VCG port. Whole port means all tributaries of a port independent of there configured membership.

Error code: SNVS - Status, Not in Valid State,
cross-connections are still existing

Validation rule: no loopbacks for interface standard change

Check that the interface standard parameter (istd) is not changed when cross-connection loopback is still on this port.

Error code: SNVS - Status, Not in Valid State, a loopback is existing

Validation rule: no ONNS for interface standard change

Check that the interface standard parameter (istd) is not changed if ONNS functionality is available. This means that *eportClass* must be TRADITIONAL or *eportControl* must be LOCKOUT.

Error Code: SNVS - Status, Not in Valid State, Swiss access possible

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: TCA profile exists

See definition of validation rule in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Validation rule: *inputsig* consistent with existing cross-connections

Check of the consistency of the structure of the input signal (*inputsig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent input signal

Validation rule: *unequiposig* consistent with existing cross-connections

Check of the consistency of the structure of the output signal (*unequiposig*) with existing cross-connections.

Error code: SNVS - Status, Not in Valid State, inconsistent output signal

Validation Rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation rule: Parameter modification not allowed in backward compatible mode

No modification of the following parameters shall be allowed if the VLAN tagging mode *vlantagmd* of the pack, to which the specified VCG port belongs to, is set to backward compatible mode (BCMD): *cnprole*, *stdis*, *dftpri*, *dftvlan*, *stpp*, *stpcost*, *rstpmd*, *vvidls*.

Error Code: SNVS - Status, Not in Valid State, Modification not allowed in Backward Compatible Mode

Default VLAN ID is already assigned for this system

Refer to the Detailed behavior of [“ED-EPORT: Edit Ethernet port” \(7-168\)](#) for details.

Default VLAN ID is no allowed member of valid VLAN list for this system

Refer to the Detailed behavior of [“ED-EPORT: Edit Ethernet port” \(7-168\)](#) for details.

ONNS specific validation rules - *eportClass* only settable when *xcsetup*=SWISS

Modification of the *eportClass* parameter shall only be allowed when *xcsetup*=SWISS.

Error Code: SNVS - Status, Not in Valid State, Swiss not enabled

ONNS specific validation rules - Setting of *eportClass* from EDGE to TRADITIONAL only possible, if the VCG tributaries on the port are not in use by ONNS

For setting *eportClass* from EDGE to TRADITIONAL the following must be fulfilled:

1. No cross-connections with *xconcls* NN must exist on any VCG tributary of the VCG.
2. *eportControl* must be LOCKOUT

Error Code: SNVS - Status, Not in Valid State, VCG is still in use

ONNS specific validation rules - Impact on *eportControl* when setting *eportClass*

When *eportClass* is changed *eportControl* shall be set to NORMAL.

ONNS specific validation rules - Setting of *eportControl* to NORMAL only possible, if no cross-connection loopbacks existing

It shall not be allowed to change *eportControl* to NORMAL, if there are existing cross-connection loopbacks associated with the port.

Error code: SNVS - Status, Not in Valid State, loopbacks present

Related TL1 Messages

[“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#)



ED-VCG notification

Output format The ED-VCG notification uses the general format of a REPT DBCHG (Report Database Change) notification.

The ED-VCG notification has the following specific syntax:

ED-VCG:*aid::spec_block*;

Output parameters

Command parameters

1. aid – Access Identifier
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.

Spec block parameters

1. cnprole – Customer/Network Port Role
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
2. dftpri – Default User Priority
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
3. dftvlan – Default VLAN Identifier
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
4. enetpn – Ethernet Alarm Severity Assignment Profile Name
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
5. enettca – Ethernet TCA Profile Name
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
6. eportClass – Ethernet Port Class
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
7. eportControl – Ethernet Port Control (Ethernet Port Administrative Mode)
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.

8. htmr – Hold-Off Time
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
9. inputsig – Tributary Input Signal Rate List
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
10. istd – Interface Standard
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
11. lcasmd – LCAS Mode
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
12. stdis – Spanning Tree Protocol Disable
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
13. stpcost – Spanning Tree Path Cost
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
14. stpp – Spanning Tree Port Priority
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#), Output parameters.
15. tcamd – TCA mode
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
16. unequipoisig – Unequipped Tributary Output Signal Rate List
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
17. vmode – VCG Monitoring Mode
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.
18. vpm – VCG Performance Monitoring
See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.

19. vvidls – Valid VLAN Identifier List (static)
See definition at [“RTRV-EPORT: Retrieve Ethernet port” \(7-153\)](#),
Output parameters.
20. wtr – Wait To Restore Time
See definition at [“RTRV-VCG: Retrieve virtual concatenation
group” \(7-180\)](#), Output parameters.

Example output

```
LT-UNITE 00-11-11 11:11:00
A 001 REPT DBCHG
"TIME=11-10-30,DATE=00-11-11:ED-VCG:1-1-#-#-1-
V1::vmode=MON"
;
```



DLT-VCG notification

Output format The DLT-VCG notification uses the general format of a REPT DBCHG (Report Database Change) notification.

The DLT-VCG notification has the following specific syntax:

DLT-VCG:*aid*;

Output parameters

Command parameter

aid - Access Identifier

See definition at [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#), Output parameters.

Example output

```
LT-UNITE 00-11-11 11:11:00
A 001 REPT DBCHG
"TIME=11-10-30,DATE=00-11-11:DLT-VCG:1-1-#-#-1-V1"
;
```



Autonomous notifications

GE1 circuit pack is auto-provisioned

If a GE1 circuit pack is auto-provisioned a VCG instance will be created with the given default parameter values for all VCGs of the circuit pack.

This change is reported via the ENT-VCG notification.



Virtual concatenation group tributary

Overview

Purpose For an overview of the GE1 related entities EPORT, VCG and VCGTRIB see [“ENT-EQPT \(slot\): Enter equipment \(slot\)” \(5-100\)](#).

Commands for the entity virtual concatenation group tributary cover the parameters for

- standard termination as for other tributaries
- tributary related parameters of virtual concatenation.

Each virtual concatenation tributary can be configured independently.

Contents

RTRV-VCGTRIB: Retrieve virtual concatenation group tributary	7-207
ENT-VCGTRIB notification	7-221
ED-VCGTRIB: Edit virtual concatenation group tributary	7-224
ED-VCGTRIB notification	7-230
DLT-VCGTRIB notification	7-233
OPR-VCGTRIB: Operate virtual concatenation group tributary	7-234
Autonomous notifications	7-236



RTRV-VCGTRIB: Retrieve virtual concatenation group tributary

The RTRV-VCGTRIB command retrieves the attributes of a VCG tributary.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-VCGTRIB-*modifier:tid:aid:ctag[:::spec_block]*;

Input parameters

Command parameters

1. **modifier**
This parameter specifies the type of the tributary.
Type: alphanumeric value set.
Range:
 - ALL
 - STS
 - VC.
2. **tid – Target Identifier**
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. **aid – Access Identifier**
This parameter specifies VCG tributary to be operated on.
Type: AID.
Range: VCGNumAID as defined in AID structure. The values
 - *all* for Simple_VCGNumAID
 - *vall* for Simple_VCGAID
 - *usall* for Simple_UnivSlotAIDshall be accepted.
4. **ctag – Correlation Tag**
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameter

dyn - Retrieve Dynamic Parameters

This parameter controls whether dynamic parameters shall be reported with the command reply or not. It shall be given only when using any of the wildcard values all, usall or vall at the appropriate positions of the input AID. For input AIDs not using all, usall or vall this parameter shall not be allowed.

The following output parameters of a vcgtrib are affected:

- aseqno
- tseqno
- ptrc
- ptrcst
- rsiglb
- trailst.

Type: alphanumeric value set.

Range: YES: Report dynamic parameters in the reply as well; NO (default): Do not report dynamic parameters in the reply.

Output format If the NE fully complies with the RTRV-VCGTRIB request, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
  "aid::spec_block set1"
  <1 or more of the line above,
    or no lines, depending on dynamic data retrieval
mode>
  "aid,aidtype::spec_block set2"
  <1 or more of the line above>
  ...
  ...
  "aid::spec_block set1"
  <1 or more of the line above,
    or no lines, depending on dynamic data retrieval
mode>
  "aid,aidtype::spec_block set2"
  <1 or more of the line above>
;
```

The output parameters *sid*, *date*, *time* and *ctag* included in the normal completion response are specified in the Output Parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters

1. aid – Access Identifier
This parameter specifies the VCG tributary whose attributes are reported.
Type: AID.
Range: VCGNumAID as defined in AID structure with exception of value all.
2. aidtype - Access Identifier Type
This parameter specifies the type of the tributary.
Type: alphanumeric value set.
Range: STS or VC.

Spec block parameters Set 1

1. aseqno - Accepted Sequence Number
This parameter reports the accepted sequence number of the tributary. In case that the received sequence no. does not meet the basic acceptance criteria, a disrupted intra-NE communication with the reporting entity, or under defect conditions 'not available' shall be reported. If the tributary to be reported is no configured member of the VCG 'not applicable' shall be reported.
Type: alphanumeric value set.
Range:
 - 0, 1, 2, ..., 254, 255
 - NA, for not applicable
 - UNAVAILABLE, for not available/unavailable.

Although the normal accepted sequence no. is limited to 20 for 21 tributaries, the NE is not prevented to report a higher one if received (accompanied by a proper alarm).

2. tseqno - Transmitted Sequence Number

This parameter reports the transmitted sequence number of the tributary. In case of a disrupted intra-NE communication with the reporting unit 'not available' shall be reported. If the tributary to be reported is no configured member of the VCG 'not applicable' shall be reported.

Type: alphanumeric value set.

Range:

- 0, 1, 2, ..., 19, 20
- NA, for not applicable
- UNAVAILABLE, for not available/unavailable.

The actual range could be less, dependent on - different tributary type (0 ... 6 for VC-4), - configured membership, - actual membership (because of LCAS).

Spec block parameters Set 2

Mode STS | VC

Some of the spec block parameters set 2 depend on the *modifier* (for RTRV) or *aidtype* (for ED, ED Not. and ENT Not.). Those parameters are only applicable for the given mode, i.e in the other mode they shall be neither reported nor modifiable.

1. brstintvl - Bursty Interval

This parameter specifies the measurement period for degraded defect if *sdsfmode* is set to BURST. If *sdsfmode* is not set to BURST then *brstintvl* has no affect to NE behaviour.

Type: integer..

Range: 2, 3, ..., 10 [seconds].

Default: 7 [seconds].

2. brstthr - Bursty Error Threshold

This parameter specifies the degradation threshold for degraded defect if *sdsfmode* is set to BURST. If *sdsfmode* is not set to BURST then *brstthr* has no affect to NE behaviour.

Type: integer.

Range: 5, 10, 15, ... 50 [%].

Default: 30 [%].

3. **crslpbkstat** - Cross-connect Loopback Status
This parameter reports the configuration of the cross-connection loopback of this tributary. For changing the loopback operation refer to [“OPR-LPBK \(here cross-connection loopback\)” \(7-93\)](#).
Type: alphanumeric value set.
Range: YES, for enabled loopback; NO, for disabled loopback.
4. **degthr** - Signal Degrade Threshold
This parameter specifies the exponent to base 10 for building the degraded threshold level. The degraded threshold level is used for building the degraded defect if *sdsfmode* is set to POISSON. If *sdsfmode* is not set to POISSON then *degthr* has no affect to NE behaviour. For the definition of *sdsfmode* refer to the Output parameters section.
Type: integer.
Range: -5, -6, -7, -8, -9 i.e. range is 10exp-9 to 10exp-5 .
Default: -6
5. **dexcthr** - Excessive Degrade Threshold
This parameter specifies the exponent to base 10 for building the excessive threshold level. The excessive threshold level is used for building the excessive bit error defect if *sdsfmode* is set to POISSON. If *sdsfmode* is not set to POISSON then *dexcthr* has no affect to NE behaviour. For the definition of *sdsfmode* refer to the Output parameters section.
Type: integer.
Range: -3, -4, -5 i.e. range is 10exp-5 to 10exp-3 .
Default: -3.
6. **exphptrc** - Expected HP trace identifier
This parameter specifies the Expected Higher Order Path Trace Identifier (J1). The first byte value shall be in the range from 80 to FF (MSB always set to 1). The other byte values shall be in the range from 00 to 7F (MSB always set to 0). This parameter is only useful if ptrcrfmt is set to 16.
Type: hexadecimal number without a preceding 'H'.
Range: length, 32 hexadecimal digits; value, specific string acc. ITU/ETSI mode 1.
Default: 89000000000000000000000000000000.

7. feppm - Far End Path PM Enable
This parameter specifies whether the performance monitoring for the far end is enabled or disabled for this tributary.
Type: alphanumeric value set.
Range: DISABLE (default), ENABLE.
8. hptimais - HP Trace Identifier Mismatch AIS Insertion
This parameter specifies if a detected TIM will cause AIS insertion. This parameter is relevant only if the related trace read format *ptrcrfmt* is set to 16 (16-byte-specific-string mode).
Type: alphanumeric value set.
Range: DISABLE , ENABLE.
Default: The default value depends on interface standard specified by *istd* for the VCG owning this tributary. For definition of *istd* refer to [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#) Output parameters. DISABLE, if *istd*=SONET; ENABLE, if *istd*=SDH.
9. hptimmon - HP Trace Identifier Mismatch Monitor
This parameter specifies if the mode of the TIM detection. This parameter is relevant only if the related trace read format *ptrcrfmt* is set to 16 (16-byte-specific-string mode).
Type: alphanumeric value set.
Range: DISABLE (default), ENABLE.
10. inmbs - Input Membership
This parameter specifies if the tributary shall take part to the transmission of its owning VCG in input direction. The addressing scheme of the tributaries by using VCGNumAIDs is ensuring that only legal AIDs are used. So no consideration about the 'illegal' tributaries (e.g. 1-1-#-#-1-1-3 for VC-4) is necessary.
Type: alphanumeric value set.
Range: DISABLE , ENABLE.
Default: DISABLE. The VCG has as default the size 0, i.e. it has no member. So the default for the parameter above for VCGTRIB needs to be DISABLE.
11. inmbst - Input Member Status
This parameter reports the status of the tributary related to its VCG membership in input direction.
Type: alphanumeric value set.

Range:

- NA, for not applicable, i.e. the trib. is no member of the VCG
- ADD, the tributary is in the LCAS state "Wait-for-Add", "Add" or "Wait-for-ACK"
- ACTIVE, the tributary is member of the VCG and working
- DNU, the tributary is member of the VCG but taken off by LCAS (incoming failed condition for the sink tributary)
- UNAVAILABLE, for not available, i.e. the trib. is member of the VCG but the current data is not retrievable for any reason.

The state DNU can only be reported if *lcasmd* is set to ENABLE for the VCG owning this tributary. For parameter *lcasmd* refer to the Output parameters section of ["RTRV-VCG: Retrieve virtual concatenation group" \(7-180\)](#). For a detailed explanation of the ADD state in the LCAS protection scheme, please refer to SRD_DATA_Virtual_Concatenation.

12. neppm - Near End Path PM Enable

This parameter specifies whether the performance monitoring for the near end is enabled or disabled for this tributary.

Type: alphanumeric value set.

Range:

- DISABLE (default)
- ENABLE.

13. outmbs - Output Membership

This parameter specifies if the tributary shall take part to the transmission of its owning VCG in input direction.

Type: alphanumeric value set.

Range:

- DISABLE
- ENABLE.

Default: DISABLE. The VCG has as default the size 0, i.e. it has no member. So the default for the parameter above for VCGTRIB needs to be DISABLE.

14. outmbst - Output Member Status

This parameter reports the status of the tributary related to its VCG membership in output direction.

Type: alphanumeric value set.

Range:

- NA, for not applicable, i.e. the trib. is no member of the VCG
- ADD, the tributary is in the LCAS state "Wait-for-Add", "Add" or "Wait-for-ACK"
- ACTIVE, the tributary is member of the VCG and working
- FAILE, the tributary is member of the VCG but not working due to a failure condition. Includes period during "Hold-Off".
- WTR, failure condition has cleared, tributary is in wait to restore condition.
- UNAVAILABLE, for not available, i.e. the trib. is member of the VCG but the current data is not retrievable for any reason.

The state WTR can only be reported if lcasmd is set to ENABLE for the VCG owning this tributary. For parameter lcasmd refer to RTRV-VCG Output Parameters. For a detailed explanation of the ADD state in the LCAS protection scheme, please refer to SRD_DATA_Virtual_Concatenation.

15. pmhpfeses - PM HP Far End SES Threshold

This parameter specifies the Higher Order Path Far End Severely Errored Seconds Performance Monitoring Threshold for errored frames. If errored frames are crossing this threshold this will result in an SES count for the far end. The behaviour depends on interface standard specified by *istd* for the VCG owning this tributary. For definition of *istd* refer to the output parameters section of ["RTRV-VCG: Retrieve virtual concatenation group" \(7-180\)](#). If *istd* is not set to SDH then *pmhpfeses* has no affect to NE behaviour.

Type: integer.

Range: 1, 2, 3, ..., 63998, 63999, 64000, includes SDH/SONET range.

Default: 2400.

16. **pmhpneses** - PM HP Near End SES Threshold
This parameter specifies the Higher Order Path Near End Severely Errored Seconds Performance Monitoring Threshold for errored frames. If errored frames are crossing this threshold this will result in an SES count for the near end. The behaviour depends on interface standard specified by *istd* for the VCG owning this tributary. For definition of *istd* refer to the output parameters section of [“RTRV-VCG: Retrieve virtual concatenation group” \(7-180\)](#). If *istd* is not set to SDH then **pmhpneses** has no affect to NE behaviour.
Type: integer.
Range: 1, 2, 3, ..., 63998, 63999, 64000, includes SDH/SONET range.
Default: 2400.
17. **ptca** - Path TCA Profile Pointer
This parameter specifies the name of the threshold crossing alert (TCA) profile used for this tributary.
Type: alphanumeric string.
Range: 1 ... 24 characters.
Default: DEFAULT0.
18. **ptpn** - Path Terminating ASA Profile Name
This parameter points to a tributary ASAP profile name pname for the designated AID.
Type: alphanumeric string. A hyphen (-) is additionally allowed in the name.
Range: 1 ... 24 characters.
Default: DEFAULT.
19. **ptrc** - Incoming Path Trace
This parameter reports the accepted higher order path trace identifier (J1). The length depends on the value of the parameter **ptrcrfmt**. The status of this value is contained in parameter **ptrcst**. If **ptrcst** indicates NORMAL, then **ptrc** contains a valid value. If **ptrcst** indicates UNAVAILABLE or AIS, then no valid incoming path trace identifier could be obtained by the system, e.g. due to not meeting the basic acceptance criteria or intra-NE communication problems, and the output parameter **ptrc** is omitted from the response.
Type: hexadecimal.

Range: the range depends on the parameter ptrcrfmt specified in RTRV-VCGTRIB Output Parameters

- 2 hexadecimal digits, if ptrcrfmt=2
- 32 hexadecimal digits, if ptrcrfmt=16
- 128 hexadecimal digits, if ptrcrfmt=64.

20. ptrcrfmt - Path Trace Read Format

This parameter specifies the format of the path trace (J1 byte) to be received (sink).

Type: numeric string.

Range:

- 2, for non-specific repeating byte
- 16, for 16 byte specific string
- 64, for 64 byte string.

Default: 2.

21. ptrcst - Status of Incoming Path Trace

This parameter shows the status of the value of the incoming Path Trace Identifier (J1) which is available with parameter *ptrc*.

Type: alphanumeric value set.

Range:

- NORMAL, *ptrc* contains a valid value
- UNAVAILABLE, no valid value for *ptrc* could be obtained by the system
- AIS , no valid value for ptrc could be obtained due to SF condition.

22. ptrcwfmt - Path Trace Write Format

This parameter specifies the format of the path trace (J1 byte) to be sent (source).

Type: numeric string.

Range:

- 2, for non-specific repeating byte
- 16, for 16 byte specific string
- 64, for 64 byte string.

Default: 2.

23. rsiglb - Received Signal Label
This parameter reports the accepted trail signal label (C2). The parameter shall not be reported if the *trailst* parameter indicates a fail condition, i.e. has the value AIS or UNAVAILABLE.
Type: alphanumeric value set.
Range: 00, 01, ..., FE, FF, i.e. two hexadecimal digits.
24. sdsfmode - Signal Degrade/Signal Fail Mode
This parameter specifies the determination mode of degraded defect for transmission.
Type: alphanumeric value set.
Range: BURST or POISSON.
Default: The default value depends on interface standard specified by istd for the VCG owning this tributary. For definition of istd refer to RTRV-VCGRIB Output Parameters. POISSON, if *istd*=SONET BURST, if *istd*=SDH.
25. tcamd - TCA mode
This parameter is only available for SDH mode. This means the modifier must be VC. The parameter shows the modus of the PM thresholding. Two thresholding methods are applicable for SDH: TR-only (also known as the implicit reset method), TR-RTR (also known as the explicit reset method). For SONET the parameter tcamd does not exist. SONET ports only support "TR-only" mode. Thus the mode must be internally set to "TR-only".
Type: alphanumeric value set.
Range: TR, TRRTR.
Default: SDH mode: TRRTR. SONET mode: TR (internal). For SONET the parameter tcamd does not exist. SONET ports only support "TR-only" mode. Thus the mode must be internally set to "TR-only".
26. tmonmd - Tributary Monitoring Mode
This parameter specifies the monitoring mode for the tributary.
Type: alphanumeric value set.
Range: MON or NMON (default).
27. trailst - Trail Status
This parameter reports the accepted trail status value.
Type: alphanumeric string.

Range:

- AIS, for Alarm Indication Signal in case of Trail Signal Fail Condition
- UNAVAILABLE, for unavailable
- NORMAL.

28. trc - Outgoing Path Trace

This parameter specifies the path trace (J1) to be sent (source). For the 16 byte path trace format the following syntactical rule shall be applied: The first byte value shall be in the range from 80 to FF (MSB always set to 1). The other byte values shall be in the range from 00 to 7F (MSB always set to 0). This parameter is irrelevant if the format is non-specific repeating byte (ptrcfmt=2).

Type: hexadecimal number without a preceding H'.

Range: the range depends on the parameter ptrcfmt specified in RTRV-VCGTRIB Output parameters length

- 32, hexadecimal digits, if ptrcfmt=16
- 128, hexadecimal digits, if ptrcfmt=64
- value: specific string acc. ITU/ETSI mode 1, if ptrcfmt=16; 64 byte string, if ptrcfmt=64.

Default: 00. This implies also that ptrcfmt is set to 2. Refer to [18] for details.

29. tslmmon - Trail Signal Label Mismatch Monitor

This parameter specifies the mode of the TSL mismatch detection.

Type: alphanumeric value set.

Range:

- DISABLE
- ENABLE (default).

**Detailed behavior
description**

The RTRV-VCGTRIB does not generate a REPT DBCHG message. The command retrieves all port parameter as described in section Output parameters.

Dependencies

brstintvl and *brstthr* are only meaningful if *sdfsmode* is set to BURST. *degthr* and *dexcthr* are only meaningful if *sdfsmode* is set to POISSON.

Parameters which are not meaningful at the moment are reported with their default values, nevertheless.

Example input/output

```
RTRV-VCGTRIB-STS:LT-UNITE:1-1-#-#-1-V2-4:123456;
LT-UNITE 00-11-11 11:11:00
M 123456 COMPLD
"1-1-#-#-1-v2-4::aseqno=2,tseqno=2"
"1-1-#-#-1-v2-4,STS::brstintvl=7,brstthr=30,
crslbkstat=N0,degthr=-6",dexcth=-3,hptimais=ENABLE,
exhpptrc=89000000000000000000000000000000,
hptimmon=DISABLE,inmbs=DISABLE,inmbst=NA,
outmbs=DISABLE,outmbst=NA,ptpn=DEFAULT,ptrc=00,
ptrcrfmt=1,ptrcst=NORMAL,ptrcwfmt=1,rsiglb=1B,
sdsfmode=BURST,tmonmd=NMON,trailst=NORM,trc=00,
tslmmmon=ENABLE"
;

RTRV-VCGTRIB-STS:LT-UNITE:1-1-#-#-1-V2-all:123456;
LT-UNITE 00-11-11 11:11:00
M 123456 COMPLD
"1-1-#-#-1-v2-1,STS::brstintvl=7,brstthr=30,
crslbkstat=N0,degthr=-6",dexcth=-3,hptimais=ENABLE,
exhpptrc=89000000000000000000000000000000,
hptimmon=DISABLE,inmbs=DISABLE,inmbst=NA,
outmbs=DISABLE,outmbst=NA,ptpn=DEFAULT, ptrcrfmt=1,
ptrcwfmt=1,sdsfmode=BURST,tmonmd=NMON,trc=00,
tslmmmon=ENABLE"
"1-1-#-#-1-v2-3,STS::brstintvl=7,brstthr=30,
crslbkstat=N0,degthr=-6",dexcth=-3,hptimais=ENABLE,
exhpptrc=89000000000000000000000000000000,
hptimmon=DISABLE,inmbs=DISABLE,inmbst=NA,
outmbs=DISABLE,outmbst=NA,ptpn=DEFAULT,
ptrcrfmt=1,ptrcwfmt=1,sdsfmode=BURST,tmonmd=NMON,
trc=00,tslmmmon=ENABLE"
<listing all VCGTRIB's of this VCG>
"1-1-#-#-1-v2-21,STS::brstintvl=7,brstthr=30,
crslbkstat=N0,degthr=-6",dexcth=-3,hptimais=ENABLE,
exhpptrc=89000000000000000000000000000000,
hptimmon=DISABLE,inmbs=DISABLE,inmbst=NA,
outmbs=DISABLE,outmbst=NA,ptpn=DEFAULT,
ptrcrfmt=1,ptrcwfmt=1,sdsfmode=BURST,tmonmd=NMON,
```

```
trc=00,ts1mmon=ENABLE”  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-VCGTRIB command, too.

Check CCB against *istd* of related VCG

Check whether the CCB fits to *istd* of the related VCG.

Error code: ICNV - Input, Command Not Valid, Interface Standard does not match.

E.g. DENY, if a command with *modifier*=VC is made on a port which is provisioned as *istd*=SONET.

Related TL1 messages

- [“ED-VCGTRIB: Edit virtual concatenation group tributary” \(7-224\)](#)
- [“OPR-VCGTRIB: Operate virtual concatenation group tributary” \(7-234\)](#)



ENT-VCGTRIB notification

Output format The ENT-VCGTRIB notification uses the general format of a REPT DBCHG Report Database Change notification.

Syntax: The ENT-VCGTRIB notification has the following specific syntax:

ENT-VCGTRIB-modifier:*aid::spec_block*;

Output parameters

Command parameters

1. aid – Access Identifier
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
2. modifier
This parameter specifies the type of the tributary.
Type: alphanumeric value set.
Range: STS, VC.

Spec block parameters

1. brstintvl - Bursty Interval
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
2. brstthr – Bursty Error Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
3. crslpbkstat – Cross-connect Loopback Status
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
4. degthr – Signal Degrade Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
5. dexcthr – Excessive Degrade Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
6. exphtpc – Expected HP trace identifier
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.

7. feppm – Far End Path PM Enable
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
8. hptimais – HP Trace Identifier Mismatch AIS Insertion
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
9. hptimmon - HP Trace Identifier Mismatch Monitor
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
10. inmbs - Input Membership
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
11. inmbst - Input Member Status
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
12. neppm - Near End Path PM Enable
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
13. outmbs - Output Membership
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
14. outmbst - Output Member Status
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
15. pmhpfeses - PM HP Far End SES Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
16. pmhpnese - PM HP Near End SES Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
17. ptca - Path TCA Profile Pointer
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
18. ptpn - Path Terminating ASA Profile Name
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.

19. ptrcrfmt - Path Trace Read Format
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
20. ptrcwfmt - Path Trace Write Format
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
21. sdsfmode - Signal Degrade/Signal Fail Mode
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
22. tcamd - TCA mode
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
23. tmonmd - Tributary Monitoring Mode
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
24. trc - Outgoing Path Trace
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
25. tslmmon - Trail Signal Label Mismatch Monitor
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.

Example output

```
LT-UNITE 00-11-11 11:11:00
A 001 REPT DBCHG
"TIME=11-10-30,DATE=00-11-11:ENT-VCGTRIB-STS:
1-1-#-#-2-V1-4:: brstintvl=7,brstthr=30,
crslbkstat=N0,degthr=-6,dexcthr=-3,hptimais=DISABLE,
exphptrc=89000000000000000000000000000000,
hptimmon=DISABLE,inmbs=DISABLE,inmbst=NAV,
outmbs=DISABLE,outmbst=NAV,ptpn=DEFAULT,
ptrcrfmt=1,ptrcwfmt=1,sdsfmode=BURST,tmonmd=NMON,
trc=00,tslmmon=ENABLE"
;
```



ED-VCGTRIB: Edit virtual concatenation group tributary

The ED-VCGTRIB command modifies the properties of a virtual concatenation group tributary.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3

Priority: 1

Abortable: No

Input format Command Syntax: ED-VCGTRIB-*modifier:tid:aid:ctag:::spec_block;*

Input parameters

Command parameters

1. modifier
This parameter specifies the type of the tributary.
Type: alphanumeric value set.
Range: STS, VC.
2. tid - Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. aid - Access Identifier
The access identifier shall specify the VCG tributary whose attributes are to be modified.
Type: AID
Range: VCGNumAID as defined in AID structure, i.e. the value all is allowed for Simple_VCGNumAID. For Simple_VCGAID there shall be no *vall* value and for Simple_UnivSlotAID there shall be no *usall* value.
4. ctag - Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. brstintvl - Bursty Interval
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
2. brstthr - Bursty Error Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
3. degthr - Signal Degrade Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
4. dexcthr - Excessive Degrade Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
5. exphtpc - Expected HP trace identifier
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
6. feppm - Far End Path PM Enable
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
7. hptimais - HP Trace Identifier Mismatch AIS Insertion
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
8. hptimmon - HP Trace Identifier Mismatch Monitor
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
9. inmbs - Input Membership
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
10. neppm - Near End Path PM Enable
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
11. outmbs - Output Membership
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
12. pmhpfeses - PM HP Far End SES Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.

13. pmhpneses - PM HP Near End SES Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
14. ptca - Path TCA Profile Pointer
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
15. ptpn - Path Terminating ASA Profile Name
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
16. ptrcrfmt - Path Trace Read Format
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
17. ptrcwfmt - Path Trace Write Format
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
18. sdsfmode - Signal Degrade/Signal Fail Mode
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
19. tcamd - TCA mode
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
20. tmonmd - Tributary Monitoring Mode
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
21. trc - Outgoing Path Trace
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
22. tslmmon - Trail Signal Label Mismatch Monitor
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.

Output format If the NE fully complies with the ED-VCGTRIB request, the following normal completion response shall be returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time* and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behaviour description

The ED-VCGTRIB generates a REPT DBCHG message.

The command modifies the attributes (listed in the spec_block parameters part of this command) of the addressed port entity according to the parameters given with this command.

The parameters *brstintvl*, *brstthr*, *degthr* and *dexcth* shall be modifiable also if they are not meaningful at the moment. The modification is reported by means of an ED-VCGTRIB notification.

Dependencies

brstintvl and *brstthr* are only meaningful if sdfsmode is set to BURST. *degthr* and *dexcth* are only meaningful if sdfsmode is set to POISSON.

Update affected entities

A change of the value of one of the parameters *inmbs* and *outmbs* shall trigger the report of *inmbst* and *outmbst* of the corresponding VCGTRIB via an autonomous notification.

Disabling of PM monitor

See detailed behavior specification in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Threshold settings for all VCG Tributaries related to one VCG

Setting one of the parameters *brstintvl*, *brstthr*, *degthr*, *dexcth*, *sdfsmode* for one VCG Tributary causes that this parameter is set to the same value for all other VCG Tributaries related to the same VCG. The respective notifications shall be sent.

Example input/output

```
ED-VCGTRIB-VC:LT-UNITE:1-1-#-#-1-v1-1:123456:::tmonmd=NMON;  
LT-UNITE 00-11-11 11:11:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the ED-VCGTRIB command.

Validation rule: ASAP profile exists

Check of the existence of the ASAP profile.

Error code: IDNV - Input, Data Not Valid, ASAP profile does not exist

Validation rule: TCA profile exists

See definition of validation rule in [“ED-STM16: Edit STM16 port” \(5-359\)](#).

Validation rule: supply of transmitted path trace

Check that a transmit path trace (trc) is supplied, too, if the path trace mode is changed.

Error code: IDNC - Input, Data, Not Consistent, a new trc must also be supplied for a path trace mode change.

Validation rule: transmitted path trace length

Check that a length of the transmit path trace (*trc*) fits to the length given by path trace mode, i.e. write format (*ptrcwfmt*).

Error code: IDNC - Input, Data, Not Consistent, trc length must match the given path trace mode.

Validation rule: Maximum number of enabled PM monitors

Check that the number of enabled PM monitors is less than the maximum number of supported enabled PM monitors (2000) before a new PM monitor is enabled.

Error code: SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded.

Since several monitor points can be enabled/disabled within one command, the ED command may only fail if the validation rule is not met after all PM enable attributes would have been updated as specified in the corresponding ED request.

Example: The ED command requests that 1 monitor point is enabled and 1 monitor points is disabled and currently 2000 packages are enabled. This command should complete.

Validation Rule: Correct state of tributary for being added (Sink)

Check that the tributary to be added for transmission in sink direction is in the inactive state (NA, not applicable).

Error code: ICNV - Input, Command Not Valid, outmbst not NA.

For the detailed description of the LCAS protocol refer to
SRD_Data_VirtualConcatenation.

**Validation Rule: Correct state of tributary for being added
(Source)**

Check that the tributary to be added for transmission in source
direction is in the inactive state (NA, not applicable).

Error code: ICNV - Input, Command Not Valid, inmbst not NA

For the detailed description of the LCAS protocol refer to
SRD_Data_VirtualConcatenation.

Validation Rule: LCAS failure of protocol present in sink direction

Check if a tributary is going to be added for transmission under active
LCAS that no failure of the LCAS protocol is present in receive
direction.

Error code: ICNV - Input, Command Not Valid, Protocol
Failure in Receive Direction.

For the detailed description of the LCAS protocol refer to
SRD_Data_VirtualConcatenation.

**Validation Rule: LCAS failure of protocol present in source
direction**

Check if a tributary is going to be added for transmission under active
LCAS that no failure of the LCAS protocol is present in transmit
direction.

Error code: ICNV - Input, Command Not Valid, Protocol
Failure in Transmit Direction.

For the detailed description of the LCAS protocol refer to
SRD_Data_VirtualConcatenation.

Check CCB against istd of related VCG

See definition of Error responses in [“RTRV-VCGTRIB: Retrieve
virtual concatenation group tributary” \(7-207\)](#).

Related TL1 messages

- [“RTRV-VCGTRIB: Retrieve virtual concatenation group
tributary” \(7-207\)](#)
- [“OPR-VCGTRIB: Operate virtual concatenation group tributary”
\(7-234\)](#).

□

ED-VCGTRIB notification

Output format The ED-VCGTRIB notification uses the general format of a REPT DBCHG (Report Database Change) notification.

The ED-VCGTRIB notification has the following specific syntax:

ED-VCGTRIB:*aid,aidtype::spec_block*;

Output parameters

Command parameters

1. aid – Access Identifier
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
2. aidtype – Access Identifier Type
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.

Spec block parameters

1. brstintvl – Bursty Interval
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
2. brstthr – Bursty Error Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
3. crslpbkstat – Cross-connect Loopback Status
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
4. degthr - Signal Degrade Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
5. dexcthr - Excessive Degrade Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
6. exphptrc - Expected HP trace identifier
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.

7. feppm - Far End Path PM Enable
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
8. hptimais - HP Trace Identifier Mismatch AIS Insertion
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
9. hptimmon - HP Trace Identifier Mismatch Monitor
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
10. inmbs - Input Membership
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
11. inmbst - Input Member Status
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
12. neppm – Near End Path PM Enable
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
13. outmbs – Output Membership
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
14. outmbst - Output Member Status
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
15. pmhpfeses - PM HP Far End SES Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
16. pmhpnese - PM HP Near End SES Threshold
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
17. ptca - Path TCA Profile Pointer
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
18. ptpn - Path Terminating ASA Profile Name
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.

19. ptrcrfmt - Path Trace Read Format
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
20. ptrcwfmt - Path Trace Write Format
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
21. sdsfmode - Signal Degrade/Signal Fail Mode
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
22. tcamd - TCA mode
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
23. tmonmd - Tributary Monitoring Mode
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
24. trc – Outgoing Path Trace
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.
25. tslmmon - Trail Signal Label Mismatch Monitor
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.

Example output

```
LT-UNITE 00-11-11 11:11:00
A 001 REPT DBCHG
"TIME=11-10-30,DATE=00-11-11:ED-VCGTRIB:1-1-#-#-1-V1-
1,STS::outmbs=ENABLE"
;
```



DLT-VCGTRIB notification

Output format The DLT-VCGTRIB notification uses the general format of a REPT DBCHG (Report Database Change) notification.

The DLT-VCGTRIB notification has the following specific syntax:

DLT-VCGTRIB:*aid*;

Output parameters

Command parameters

1. aid – Access Identifier
See definition at [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#), Output parameters.

Example output

```
LT-UNITE 00-11-11 11:11:00
A 001 REPT DBCHG
"TIME=11-10-30,DATE=00-11-11:DLT-VCGTRIB:1-1-#-#-1-V1-
1&&-21"
;
```



OPR-VCGTRIB: Operate virtual concatenation group tributary

The OPR-VCGTRIB command allows to preempt a running wait-to-restore at a VCG tributary. The wait-to-restore status is part of the LCAS protection scheme.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
Priority: 1
Abortable: No

Input format Command Syntax: OPR-VCGTRIB-modifier:*tid:aid:ctag::sc;*

Input parameters

Command parameters

1. modifier
This parameter specifies the type of the tributary.
Type: alphanumeric value set.
Range: STS, VC
2. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. aid – Access Identifier
See definition at [“ED-VCGTRIB: Edit virtual concatenation group tributary” \(7-224\)](#), Input parameters
4. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
5. sc – switch command
The parameter *sc* specifies the switch action applied to the VCG tributary.
Type: alphanumeric value set.
Range: CLRWRT.

Output format If the NE fully complies with the OPR-VCGTRIB request, the following normal completion response shall be returned:

sid date time

```
M ctag COMPLD  
;
```

The output parameters *sid*, *date*, *time* and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behaviour
description**

The command shall preempt the wait-to-restore timer of the VCG tributary, addressed. State changes caused by this preemption are reported according an autonomous ED-VCGTRIB notification for this VCGTRIB for the parameter *inmbst*.

Example input/output

```
OPR-VCGTRIB-VC:LT-UNITE:1-1-#-#-1-v1-2:123456::CLRWTR;  
LT-UNITE 00-11-11 11:11:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the RTRV-HDR command Error responses section. The error responses listed there apply to the OPR-VCGTRIB command.

Validation Rule: wait-to-restore is not pending

Check that addressed tributary is in state wait-to-restore if parameter *sc=CLRWTR* is applied.

Error code: SNVS - Status, Not in Valid State, tributary is not in state wait-to-restore.

Related TL1 messages

- [“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” \(7-207\)](#)
- [“ED-VCGTRIB: Edit virtual concatenation group tributary” \(7-224\)](#)



Autonomous notifications

**GE1 Circuit Pack is
auto-provisioned**

If a GE1 circuit pack is auto-provisioned 7 VC4 or 21 STS1 VCGTRIB instances will be created (dependent on the attribute *istddflt*) with the given default parameter values for all VCGs of the circuit pack.

This change is reported via the ENT-VCGTRIB notification.

**Group notifications for
VCG tributaries**

Refer to the Detailed behavior of the ENT-EQPT (slot) command for details on grouped notifications for VCG tributaries.

**Incoming VCG tributary is
dropped or added**

If an incoming (sink direction) VCG tributary is dropped or added due to manual operation or a failure event, the parameter *outmbst* shall be set to the corresponding value considering the current LCAS mode. This change shall be reported via the ED-VCGTRIB notification with the parameter *outmbst*.

**Outgoing VCG tributary is
dropped or added**

If an outgoing (source direction) VCG tributary is dropped or added due to manual operation or a failure event, the parameter *inmbst* shall be set to the corresponding value considering the current LCAS mode. This change shall be reported via the ED-VCGTRIB notification with the parameter *inmbst*.



Remote Test Access

Overview

Purpose Test access consists of a set of non-intrusive operations (“monitoring” modes) and intrusive operations (“split modes”) that aid users in turning up facilities and in fault sectionalization of existing service circuits.

Basic user capabilities in test access include:

- assigning available tributary(ies) as “test access tributary(ies)”, whose line interface(s) will be connected by the user to the external testing system. These test access tributaries are assigned and released as part of establishing or disconnecting test access sessions.
- establishing test access cross-connections from tributaries to be tested to the test access tributary(ies) that either monitor or “split” connections for testing purposes.
- retrieving information about test access connections present on the system.
- releasing test access connections and test tributaries, upon which the system automatically restores any pre-existing cross-connections that were affected.

The architecture and nomenclature depicted below help to explain how test access is defined and used.

The E-Tributary and F-Tributary are the tributaries under test. The E and F tributaries are the ends of a one-way or two-way cross-connection, with the dashed lines indicating the signal traveling through the system. The signal path from the E-end to the F-end is referred to as the “A” direction; the opposite direction as the “B” direction. If there is only a one-way cross-connection, the signal travels in the A direction. If an idle (un-cross-connected) tributary is the focus of test access, it is always the E-end.

The following table shows the supported test access modes.

Two groups of test access modes are defined:

- single test access tributary modes

- dual test access tributary modes.

Mode	Description	Group
MONE	Monitor E-end mode of test access. This test access mode monitors the E end of an idle tributary or a leg of a cross-connection.	Single
MONF	Monitor F-end mode of test access. This test access mode monitors the F-end of a two-way cross-connection.	Single
MONEF	Monitor E-end and F-end mode of test access. This test access mode monitors (E end and F end) both directions of a 2WAY cross-connection.	Dual
SPLTE	Split access E-end mode of test access. This test access mode splits the connection between the E end and F end of a 1WAY cross-connection or a leg of 2WAY cross-connection. Can also be used in an idle tributary.	Single
SPLTF	Split access F-end mode of test access. This test access mode splits the E-end and F-end connection of a two-way cross-connection to allow testing at the F-end.	Single
SPLTEF	Split E-end and F-end mode of test access. This test access mode splits both directions of a 2WAY cross-connection to allow testing at both the E end and F end.	Dual

Mode	Description	Group
SPLTA	Split access “A” direction mode of test access. This test access mode splits the connection between the E and F tributaries of a one-way or two-way cross-connection to allow testing in the “A” direction.	Single
SPLTB	Split access “B” direction mode of test access. This test access mode splits the E-end and F-end connection of a two-way cross-connection to allow testing in the “B” direction.	Single
SPLTAB	Split access A and B directions mode of test access. This test access mode splits both directions of a two-way cross-connection to allow testing in both the A and B directions.	Dual
TERME	Terminated test access mode. This test access mode splits the signal, sending the input to the testing system and injecting AU-AIS/AIS-P toward the path selector to allow monitoring the incoming signal of the leg that is not currently carrying service traffic without the risk that the path selector will switch away from the service-carrying leg.	Single

Contents

RTRV-TACC: Retrieve test access	7-241
CONN-TACC: Connect test access	7-246

CONN-TACC notification	7-252
CHG-ACCMD: Change access mode	7-254
CHG-ACCMD notification	7-257
DISC-TACC: Disconnect test access	7-258
DISC-TACC notification	7-260

RTRV-TACC: Retrieve test access

General The RTRV-TACC command is used to retrieve the test access-related information on one or all of the test tributaries in the NE. Only the primary test tributary is retrieved.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): T1
Priority: 1
Abortable: Yes

Input format Command Syntax: RTRV-TACC-*modifier*:*tid*:*aid*:*ctag*;

Input parameters

Command parameters

1. *modifier*

This parameter indicates the cross-connection rate on which the retrieve test access command is to act.

A distinction of the modifier usage has to be made between the retrieval (RTRV-TACC-*modifier*) and the other test access related commands (CONN-TACC-*modifier*, DISC-TACC-*modifier*, CHG-ACCMD-*modifier*):

- The establishment (CONN-TACC-*modifier*), removal (DISC-TACC-*modifier*) or modification (CHG-ACCMD-*modifier*) of test access sessions is independent of the provisioned port interface-standard. I.e., either the SDH-rates (VC3, VC4 etc.) or the corresponding SONET-rates (STS1, STS3 etc.) can be used as modifier and no command validation between port interface-standard and modifier will be performed.
- For the RTRV-TACC-*modifier* command the following holds: Again, no command validation between port interface-standard and modifier will be performed. The output parameter *rate*, however, is filled with the *rate* which was used with the CONN-TACC-*modifier* command.

Type: alphanumeric value set.

Range:

- ALL
 - SDH modifier: VC3, VC4, VC44C, VC416C, VC464C
 - SONET modifier: STS1, STS3, STS12, STS48, STS192.
2. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
 3. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format In response to a valid RTRV-TACC command, the following output report shall be returned:

```
sid date time
M ctag COMPLD
"tatrib1:rate[:spec_block]"
...
...
"tatrib1:rate[:spec_block]"
;
```

The output parameters *sid*, *date*, *time* and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

The NE returns the following normal completion response for a successful RTRV-TACC command if no test access activity is found on the specified tributaries in the system:

```
sid date time
M ctag COMPLD
;
```

This output format is only valid if 'all' is used in the *aid*. Otherwise the validation rule leads to an error message.

Output parameters

Command parameters

1. **tatrib1** – primary Test Access Tributary
AID of the primary test access tributary. The keyword "all" is not allowed on any level.
Type: AID.
Range: STS1NumAID.
2. **rate** – Test Access rate
This parameter specifies the rate of the signal that is being tested.
Type: alphanumeric value set.
Range: VC3, VC4, VC44C, VC416C, VC464C, STS1, STS3, STS12, STS48, STS192.

Spec block parameters

1. **eomode** – output mode of the E-tributary
This parameter is only present if the test session is created on a 2-way cross-connection. The parameter is omitted for test sessions on 1-way cross-connections or on idle E-tributaries.
Type: alphanumeric value set.
Range:
 - **NORM**: this is the normal output i.e. the signal from the F-tributary is passed through to the E-tributary
 - **AIS**: this mode outputs an AIS signal.Default:
 - **NORM**, if the referring Ttest mode does not disconnect the output of the original cross-connection to this tributary
 - **AIS**, in all other case.
2. **etrib** – AID of the E-tributary
AID of the E-tributary for the test session.
Type: AID.
Range: GenTribAID.
3. **fomode** – output mode of the F-tributary
This parameter is only present if the test session is created on a 1-way or 2-way cross-connection. The parameter is omitted for test sessions on idle E-tributaries.
Type: alphanumeric value set.

Range:

- NORM: this is the normal output i.e. the signal from the E-tributary is passed through to the F-tributary
- AIS: this mode outputs an AIS signal.

Default:

- NORM, if the referring test mode does not disconnect the output of the original cross-connection to this tributary
- AIS, in all other cases.

4. fttrib – AID of the F-tributary

AID of the F-tributary for the test session. If there is no cross-connection at the E-tributary, this parameter is omitted.

Type: AID.

Range: GenTribAID.

5. tatrib2 – secondary Test Access Tributary

AID of the secondary Test Access Tributary. In the case of test access modes with single test tributary the parameter is omitted.

Type: AID.

Range: STS1NumAID.

6. tstmdc – Test Access Mode

Example input/output

```
RTRV-TACC-ST:LT-UNITE:1-1-#-#-3-1-1:123456;  
LT-UNITE 02-10-01 08:00:00  
M 123456 COMPLD  
"1-1-#-#-3-1-1:STS1:TSTMDC=MONEF,TATRIB2=1-1-#-#-4-1-  
1,ETRIB=1-1-#-#-6-1-1,EOMODE=NORM,FTRIB=1-1-#-#-7-1-  
1,FOMODE=NORM"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the RTRV-TACC command.

Validation Rule: Tributary is not assigned as a test tributary

If the aid is not assigned as a test tributary and 'all' is not used in the aid, the following error message shall be returned:

Error Code: SNVS - Status, Not in Valid State, tributary not assigned as a test tributary

Related TL1 messages

- [“CONN-TACC: Connect test access” \(7-246\)](#)
- [“CHG-ACCMD: Change access mode” \(7-254\)](#)
- [“DISC-TACC: Disconnect test access” \(7-258\)](#)
- [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#)



CONN-TACC: Connect test access

General The CONN-TACC command is used to initiate a Test Access session and to connect the Test Access tributaries.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): T4
Priority: 1
Abortable: No

Input format Command Syntax: CONN-TACC-*modifier:tid:tatrib1:ctag:::spec_block;*

Input parameters

Command parameters

1. modifier
This parameter indicates the cross-connection rate on which the connect test access command is to act.
Type: alphanumeric value set.
Range:
 - SDH modifier: VC3, VC4, VC44C, VC416C, VC464C
 - SONET modifier: STS1, STS3, STS12, STS48, STS192.
2. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. tatrib1 - primary Test Access tributary
AID of the primary Test Access tributary. The keyword “all” shall not be allowed on any level.
Type: AID.
Range: STS1NumAID.
4. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. etrib – AID of the E-tributary
Refer to the [“RTRV-TACC: Retrieve test access” \(7-241\)](#)
command for the output parameter syntax and description.
2. ftrib – AID of the F-tributary
Refer to the [“RTRV-TACC: Retrieve test access” \(7-241\)](#)
command for the output parameter syntax and description.
3. tatrib2 – secondary Test Access Tributary
Refer to the [“RTRV-TACC: Retrieve test access” \(7-241\)](#)
command for the output parameter syntax and description.
4. tstmde – Test Access Mode
Type: alphanumeric value set.
Range:
 - MONE: Monitor E-end mode of test access. This test access mode monitors the E end of an idle tributary or a leg of a cross-connection.
 - MONF: Monitor F-end mode of test access. This test access mode monitors the F-end of a two-way cross-connection.
 - MONEF: Monitor E-end and F-end mode of test access. This test access mode monitors (E end and F end) both directions of a 2WAY cross-connection.

Output format The NE returns the following normal completion response to a successful CONN-TACC command if there are no failure conditions to report:

```
sid date time  
M ctag COMPLD  
;
```

Detailed behavior description

The CONN-TACC command shall be used to establish a test access(es) connection to a tributary or tributaries in the NE.

If the test access session is established as MONE or MONF, the primary test tributary is used. If the test access session is established as MONEF, the primary test tributary is designated for accessing E-end incoming signal and the secondary test tributary is designated for accessing F-end incoming signal.

If there is no connection on E-end tributary, the F-end tributary AID parameter is omitted.

If there are one or more cross-connections established on E tributary, the F-end tributary AID parameter is required to be entered.

In addition to the CONN-TACC notification an ED-CRS notification is sent to report the changed parameter values *taccstat* and *rtntaccstat*.

Example input/output

```
CONN-TACC-STS1:LT-UNITE:1-1-#-#-4-1-1:123456:::ETRIB=1-1-#-#-15-1-1,FTRIB=1-1-#-#-16-1-1,TSTMDE=MONE;  
LT-UNITE 02-10-01 16:39:52  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the CONN-TACC command.

Validation rule: Missing F tributary

If the NE receives a CONN-TACC command in which there are one or more cross-connection established on the E tributary and *ftrib* is not specified, the following error response is returned:

Error Code: IDNV - Input, Data Not Valid, missing F tributary

Validation rule: E tributary and F tributary not cross-connected

If the NE receives a CONN-TACC command with an F tributary specified and there is no cross-connection between the E and the F tributaries, the following error response is returned:

Error Code: IDNV - Input, Data Not Valid, E and F tributaries not cross-connected

Validation rule: MONF or MONEF test access mode not allowed on a 1WAY cross-connection from E to F tributary

If the NE receives a CONN-TACC command with MONF or MONEF as test access mode when there is a 1WAY cross-connection on E to F tributaries, the following error response is returned:

Error Code: IDNV - Input, Data Not Valid, invalid test access mode

Validation rule: Cross-connection exists on the test tributary

If the NE receives a CONN-TACC command with a test tributary that has an existing cross-connection, the following error response is returned:

Error Code: IEAE - Input, Entity Already Exists,
cross-connection exists on test tributary

Validation rule: Test tributary already connected

If the NE receives a CONN-TACC command with a test tributary that has an existing test access connection (to E and/or F tributary(s)) or if the CONN-TACC command is executed again with same or different attributes on the same test tributary, the following error response is returned:

Error Code: IEAE - Input, Entity Already Exists, test
access connection exists

Validation rule: Test tributary or E or F tributary in a loopback

If the NE receives a CONN-TACC command with a test tributary or E or F tributary currently in a loopback, the following error response is returned:

Error Code: SNVS - Status, Not in Valid State, tributary
has existing loopback

Validation rule: Secondary test tributary not needed for MONE test modes

If the NE receives a CONN-TACC command with a secondary test tributary value for a MONE test access mode, the following error response is returned:

Error Code: INUP - Input, Non-null Unimplemented Parameter,
secondary test tributary not allowed

Validation rule: Tributaries must exist

If the NE receives a CONN-TACC command with a test tributary or E or F tributary that does not exist, the following error response is returned:

Error Code: IENE - Input, Entity Not Exists, Specified
tributary/tributaries do not exist

Validation rule: AID boundary and rate consistency

If the NE receives a CONN-TACC command with a test tributary or E or F tributary that is not consistent with the test access rate, the following error response is returned:

Error Code: IDNC - Input, Data, Not Consistent, Tributary boundary is inconsistent with the indicated rate

Consistency implies the following condition:

- The boundary of the specified tributary is consistent with the specified rate
- STS-1/VC-3 payloads can start at any position
- The first (STS-1 equivalent) tributary of an STS-3/VC-4 rate crossconnection must be on a mod3 + 1 boundary (1, 4, 7, ...)
- The first STS-1 of an STS-12/VC-4-4c rate crossconnection must be on a mod12 + 1 boundary (1, 13, 25, ...)
- The first STS-1 of an STS-48/VC-4-16c rate crossconnection must be on a mod48 + 1 boundary (1, 49, 97, ...)
- The first STS-1 of an STS-192/VC-4-64c rate crossconnection must be on a mod192 + 1 boundary (1, 193, 385, ...).

Validation rule: XC pack is (pre-)provisioned

If the NE receives a CONN-TACC command while no XC pack is pre-provisioned or provisioned, the following error response is returned:

Error Code: SNVS - Status, Not in Valid State, XC Pack not provisioned

Validation rule: Circuit pack not provisioned

If the NE receives a CONN-TACC command with a circuit pack specified by the test tributary AID or E- or F-tributary AID that is not provisioned, the following error response is returned:

Error Code: SNVS - Status, Not in Valid State, circuit packs not provisioned

Validation rule: Port used for MSSPRING/BLSR

If the NE receives a CONN-TACC command with a test access tributary on a port which is used in a MSSPRING/BLSR protection group, the following error response is returned:

Error Code: SNVS - Status, Not in Valid State, port used for MSSPRING/BLSR

Validation rule: Port used for Linear MSP

If the NE receives a CONN-TACC command with a test access tributary on a port which is used in a Linear MSP protection group, the following error response is returned:

Error Code: SNVS - Status, Not in Valid State, port used for Linear MSP

Validation rule: Inconsistent tributary rate

If the NE receives a CONN-TACC command which does not match the connection rate of the connection between E and F, the following error response is returned:

Error Code: IPNC - Input, Parameter Not Consistent, Rate inconsistent with crossconnection rate

Validation rule: Port used for ONNS application

If the NE receives a CONN-TACC command with a test access tributary or a E or F tributary on a port with portClass other than TRADITIONAL the following error response is returned:

Error Code: SNVS - Status, Not in Valid State, port used for NN application

Validation rule: All tributaries must be different

If the NE receives a CONN-TACC command where two or more of the specified tributaries (test access tributaries, E or F tributary) are identical, the following error response is returned:

Error Code: IDNV - Input, Data Not Valid, all tributaries must be different

Related TL1 messages

- [“RTRV-TACC: Retrieve test access” \(7-241\)](#)
- [“CHG-ACCMD: Change access mode” \(7-254\)](#)
- [“DISC-TACC: Disconnect test access” \(7-258\)](#)
- [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#)



CONN-TACC notification

Output format The CONN-TACC notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

The CONN-TACC notification has the following specific syntax:
CONN-TACC-*modifier:tatrib1::spec_block*;

Output parameters

Command parameters

1. modifier
See definition of input parameter *modifier* in [“CONN-TACC: Connect test access” \(7-246\)](#).
2. atrib1 – primary Test Access Tributary
See definition of input parameter *tatrib1* in [“CONN-TACC: Connect test access” \(7-246\)](#).

Spec block parameters

1. etrib – AID of the E-tributary
Refer to the [“RTRV-TACC: Retrieve test access” \(7-241\)](#) command for the output parameter syntax and description.
2. ftrib – AID of the F-tributary
Refer to the [“RTRV-TACC: Retrieve test access” \(7-241\)](#) command for the output parameter syntax and description.
3. atrib2 – secondary Test Access Tributary
Refer to the [“RTRV-TACC: Retrieve test access” \(7-241\)](#) command for the output parameter syntax and description.
4. tstmde – Test Access Mode
See definition of input parameter tstmde in [“CONN-TACC: Connect test access” \(7-246\)](#).

Example input/output

```
CONN-TACC-STs1:LT-UNITE:1-1-#-#-4-1-1:123456:::ETRIB=1-1-#-#-15-1-1,FTRIB=1-1-#-#-16-1-1,TSTMDE=MONE;
  LT-UNITE 02-10-01 16:39:52
M 123456 COMPLD
;
  LT-UNITE 02-10-01 16:40:22
A 001 REPT DBCHG
```

"TIME=16-40-04,DATE=02-10-01:CONN-TACC-STS1:1-1-#-#-4-1
-1::ETRIB=1-1-#-#-15-1-1,FTRIB=1-1-#-#-16-1-
1,TSTMDE=MONE:"

;



CHG-ACCMD: Change access mode

General The CHG-ACCMD command shall be used to change the test access mode of a test session in the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): T4
Priority: 1
Abortable: No

Input format Command Syntax: CHG-ACCMD-*modifier:tid:tatrib1:ctag:::spec_block;*

Input parameters

Command parameters

1. modifier
Refer to the [“CONN-TACC: Connect test access” \(7-246\)](#) command for the input parameter syntax and description.
2. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. tatrib1 – primary Test Access tributary
Refer to the [“CONN-TACC: Connect test access” \(7-246\)](#) command for the input parameter syntax and description.
4. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

1. tstmde – Test Access Mode
Refer to the [“RTRV-TACC: Retrieve test access” \(7-241\)](#) command for the input parameter syntax and description.

Output format The NE returns the following normal completion response to a successful CHG-ACCMD command if there are no failure conditions to report:

```
sid date time
M ctag COMPLD
```


;

**Detailed behaviour
description**

The function of the CHG-ACCMD command is to change the test access mode without terminating the test access session.

The test access mode changes are restricted to test modes belonging to the same group. (See the definition of the groups in the general description.) It is not allowed to change the mode from single to dual test tributary modes or from dual to single test tributary modes.

Example input/output

```
CHG-ACCMD-ST51:LT-UNITE:1-1-#-#-6-1-1:123456::TSTMDE=SPLTA;  
LT-UNITE 02-10-01 19:17:53  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the CHG-ACCMD command.

Validation rule: No test access session on the test tributary

If the NE receives a CHG-ACCMD command when there is no test access session set up on the test tributary specified, the following error response is returned:

Error Code: SNVS - Status, Not in Valid State, no test access session on the test tributary

Validation rule: Invalid test access mode change request

If the NE receives a CHG-ACCMD command with a test access mode which is not a member of the same group, the following error response is returned:

Error Code: SNVS - Status, Not in Valid State, invalid test access mode

Validation rule: Inconsistent tributary rate

If the NE receives an CHG-ACCMD command which does not match the test access connection rate, the following error response is returned:

Error Code: IPNC - Input, Parameter Not Consistent, Rate inconsistent with crossconnection rate

Related TL1 messages

- [“CONN-TACC: Connect test access” \(7-246\)](#)
- [“RTRV-TACC: Retrieve test access” \(7-241\)](#)
- [“DISC-TACC: Disconnect test access” \(7-258\)](#)
- [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#)



CHG-ACCMD notification

Output format The CHG-ACCMD notification uses the general format of a REPT DBCHG (Report Database Change) notification.

The CHG-ACCMD notification shall have following specific syntax:
CHG-ACCMD-*modifier:tatrib1::spec_block*;

Output parameters

Command parameters

1. modifier
See definition of input parameter *modifier* in [“CONN-TACC: Connect test access” \(7-246\)](#).
2. tatrib1 – primary Test Access tributary
See definition of input parameter *tatrib1* in [“CONN-TACC: Connect test access” \(7-246\)](#).

Spec block parameters

1. eomode – output mode of the E-tributary
Refer to the [“RTRV-TACC: Retrieve test access” \(7-241\)](#) command for the output parameter syntax and description.
2. fomode – output mode of the F-tributary
Refer to the [“RTRV-TACC: Retrieve test access” \(7-241\)](#) command for the output parameter syntax and description.
3. tstmde – Test Access Mode
Refer to the [“RTRV-TACC: Retrieve test access” \(7-241\)](#) command for the output parameter syntax and description.

Example input/output

```
CHG-ACCMD-STS1:LT-UNITE:1-1-#-#-6-1-1:123456:::
TSTMDE=SPLTA;
  LT-UNITE 02-10-01 19:17:53
M 123456 COMPLD
;
  LT-UNITE 02-10-01 19:18:22
A 001 REPT DBCHG
"TIME=19-18-05,DATE=02-10-01:CHG-ACCMD-STS1:
1-1-#-#-4-1-1::TSTMDE=SPLTA:"
;
```



DISC-TACC: Disconnect test access

General The DISC-TACC command is used to remove the test access connection and terminate the test access session on the test access tributary in the NE.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): T4
Priority: 1
Abortable: No

Input format Command Syntax: DISC-TACC-*modifier:tid:tatrib1:ctag*;

Input parameters

Command parameters

1. modifier
Refer to the [“CONN-TACC: Connect test access” \(7-246\)](#) command for the input parameter syntax and description.
2. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. tatrib1 – primary Test Access tributary
Refer to the [“CONN-TACC: Connect test access” \(7-246\)](#) command for the input parameter syntax and description.
4. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Output format The NE returns the following normal completion response to a successful DISC-TACC command if there are no failure conditions to report:

```
sid date time
M ctag COMPLD
;
```

**Detailed behaviour
description**

The DISC-TACC command is used to terminate a test access session. All s to the test access tributaries will be removed and the cross-connections between the E and F tributaries are reestablished.

In addition to the DISC-TACC Notification an ED-CRS notification is sent to report the changed parameter values *taccstat* and *rintaccstat*.

Example input/output

```
DISC-TACC-STS1:LT-UNITE:1-1-#-#-4-1-1:123456;  
    LT-UNITE 02-10-01 17:15:08  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the DISC-TACC command.

Validation Rule: No test access session on the test tributary

If the NE receives a DISC-TACC command when there is no test access session set up on the test tributary specified, the following error response is returned:

Error Code: SNVS - Status, Not in Valid State, no test access session on the test tributary

Validation Rule: Inconsistent tributary rate

If the NE receives an DISC-TACC command which does not match the test access connection rate, the following error response is returned:

Error Code: IPNC - Input, Parameter Not Consistent, Rate inconsistent with crossconnection rate

Related TL1 messages

- [“CONN-TACC: Connect test access” \(7-246\)](#)
- [“CHG-ACCMD: Change access mode” \(7-254\)](#)
- [“RTRV-TACC: Retrieve test access” \(7-241\)](#)
- [“RTRV-CRS: Retrieve cross-connection” \(7-6\)](#)



DISC-TACC notification

Output format The DISC-TACC notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

The DISC-TACC notification has the following specific syntax:
DISC-TACC-*modifier:tatrib1::spec_block*;

Output parameters

Command parameters

1. modifier
See definition of input parameter *modifier* in [“CONN-TACC: Connect test access” \(7-246\)](#).
2. atrib1 – primary Test Access tributary
See definition of input parameter *tatrib1* in [“CONN-TACC: Connect test access” \(7-246\)](#).

Spec block parameters

1. etrib – AID of the E-tributary
Refer to the [“RTRV-TACC: Retrieve test access” \(7-241\)](#) command for the output parameter syntax and description.
2. ftrib – AID of the F-tributary
Refer to the [“RTRV-TACC: Retrieve test access” \(7-241\)](#) command for the output parameter syntax and description.
3. atrib2 – secondary Test Access Tributary
Refer to the [“RTRV-TACC: Retrieve test access” \(7-241\)](#) command for the output parameter syntax and description.

Example input/output

```
DISC-TACC-STs1:LT-UNITE:1-1-#-#-4-1-1:123456;
  LT-UNITE 02-10-01 17:15:08
M 123456 COMPLD
;
  LT-UNITE 02-10-01 17:15:38
A 001 REPT DBCHG
"TIME=17-15-20,DATE=02-10-01:DISC-TACC-STs1:1-1-#-#-4-1-1:: ETRIB=1-1-#-#-15-1-1,FTRIB=1-1-#-#-16-1-1:"
;
```





8 TL1 messages - protection

Overview

Purpose This chapter contains the TL1 interface definition for the domain “protection”.

Contents

<u>Protection group</u>	<u>8-3</u>
<u>Introduction to protection groups</u>	<u>8-5</u>
<u>RTRV-PROTN-GRP: Retrieve protection group</u>	<u>8-13</u>
<u>ENT-PROTN-GRP: Enter protection group</u>	<u>8-56</u>
<u>ENT-PROTN-GRP notification</u>	<u>8-74</u>
<u>ED-PROTN-GRP: Edit protection group</u>	<u>8-80</u>
<u>ED-PROTN-GRP notification</u>	<u>8-92</u>
<u>DLT-PROTN-GRP: Delete protection group</u>	<u>8-97</u>
<u>DLT-PROTN-GRP notification</u>	<u>8-106</u>
<u>OPR-PROTNSW: Operate protection switch</u>	<u>8-109</u>
<u>RLS-PROTNSW: Release protection switch</u>	<u>8-125</u>
<u>REPT SW: Report switch</u>	<u>8-133</u>
<u>Protection switch notification</u>	<u>8-135</u>
<u>Autonomous notifications</u>	<u>8-147</u>
<u>Protection log</u>	<u>8-149</u>

<u>RTRV-LOG-PROTNSW: Retrieve log protection switch</u>	<u>8-150</u>
<u>Autonomous notifications</u>	<u>8-156</u>
<u>Ring map</u>	<u>8-157</u>
<u>RTRV-MAP-RING: Retrieve map ring</u>	<u>8-158</u>
<u>ED-MAP-RING: Edit map ring</u>	<u>8-165</u>
<u>SET-MAP-RING: Set map ring</u>	<u>8-168</u>
<u>SET-MAP-RING: notification</u>	<u>8-170</u>
<u>ED-FETID: Edit Far End Target Identifier</u>	<u>8-171</u>
<u>ED-FETID notification</u>	<u>8-174</u>



Protection group

Overview

Purpose The protection group commands covers all types of protections within the system. The following protection group types can be distinguished:

- 1+1 equipment protection group
- 1+1 multiplex section/line protection group
- 2-fibre MS-SPRing/BLSR protection group
- 4-fibre MS-SPRing/BLSR protection group
- Path protection group.

Dedicated subsections corresponding to these protection group types will cover the specific behavior. If such a separation is not made, the description is valid for all protection group types. In addition common properties are also described in a dedicated General section.

Three operation modes can be distinguished for a 4-fibre MS-SPRing/BLSR protection group:

1. 2-sided node: An east side (protection and worker) and a west side (protection and worker) is provisioned for that group. Therefore, four ports are members within that protection group.
2. 1-sided node: Only one side is provisioned for the protection group. That can be either the east or the west side. Therefore, two ports are members within that protection group. This mode is used in context of an open 4-fiber ring w.r.t. end node in that chain.
3. Asymmetric node: Both protection ports are members of the protection group and only one or zero worker ports are assigned externally.

All attributes/parameters specifying east/or west side properties are optional and will be omitted if the corresponding side is not provisioned in case of an 1-sided node.

Note: 1-sided node (open ring) is not supported in R1. As indication if and when this feature is supported use the following criteria (supported if criteria is met): Ports can be added/removed to/from one side of the protection group (conversion from 1-side node to 2-side

node and vice versa). Be aware to differentiate that scenario from switching from an asymmetric node to a non-asymmetric and vice versa. The combination of a 1-sided and asymmetric node is not allowed..

Contents

Introduction to protection groups	8-5
RTRV-PROTN-GRP: Retrieve protection group	8-13
ENT-PROTN-GRP: Enter protection group	8-56
ENT-PROTN-GRP notification	8-74
ED-PROTN-GRP: Edit protection group	8-80
ED-PROTN-GRP notification	8-92
DLT-PROTN-GRP: Delete protection group	8-97
DLT-PROTN-GRP notification	8-106
OPR-PROTNSW: Operate protection switch	8-109
RLS-PROTNSW: Release protection switch	8-125
REPT SW: Report switch	8-133
Protection switch notification	8-135
Autonomous notifications	8-147



Introduction to protection groups

General information

The following section presents an overview of all attributes of the different protection types and their use within the different commands. The information is derived from the corresponding sections describing the commands and notifications.

Note: The following tables are specifying the superset of operations, notifications and attributes for protection groups. They do not consider any release information. Please check in the corresponding sections, in which release the functionality is supported.

1+1 equipment protection group

Entity table for 1+1 equipment protection group (EQPTSWFBR and EQPTCTL)

Attribute	Opr	Not	Class	Note
aid – protection group AID	RTRV	ENT DLT PROTNSW	input	(1)
protype – Protection Type	RTRV	ENT DLT PROTNSW	input	
wkg – Worker Unit	RTRV	ENT PROTNSW	input	(2)
protn – Protection Unit	RTRV	ENT PROTNSW	input	(2)
actunit – Active Unit State	RTRV	PROTNSW	state	(3)
swreq – Switch Request State	RTRV	PROTNSW	state	(3)
protnsiglvl – Protection Fault Status	RTRV		state	
wkgsiglvl – Worker Fault Status	RTRV		state	

Entity table for EP155 Equipment Protection Group (EQPTEP155)

Attribute	Opr	Not	Class	Note
aid – protection group AID	RTRV, ENT, DLT	ENT, DLT, PROTNSW	input	(1)
protype – Protection Type	RTRV, ENT, DLT	ENT, DLT, PROTNSW	input	
wkg – Worker Unit	RTRV, ENT	ENT, PROTNSW	input	(2)
protn – Protection Unit	RTRV, ENT	ENT, PROTNSW	input	(2)
actunit – Active Unit State	RTRV	PROTNSW	state	(3)

Attribute	Opr	Not	Class	Note
swreq – Switch Request State	RTRV	PROTNSW	state	(3)
protnsiglvl – Protection Fault Status	RTRV		state	
wkgsiglvl – Worker Fault Status	RTRV		state	

Note 1: protection switch events reported via REPT EVT message will use protection group aid for identification purpose.

Note 2: protection switch events reported via REPT SW message will use worker/protection unit aid for identification purpose.

Note 3: updated either via protection switch commands (OPR-PROTNSW, RLS-PROTNSW) or autonomous switch events.

Note 4: switching and controller equipment protection group is created/deleted as part of equipment provisioning.

Multiplex section/line protection group

Entity table for 1+1 / 1:1 multiplex section/line protection group.

Attribute	Opr	Not	Class	Note
aid – protection group AID	RTRV ENT ED DLT	ENT ED DLT	input user	(1)
protype – Protection Type	RTRV ENT ED DLT	ENT ED DLT PROTNSW	input	
wkg – Worker Port	RTRV ENT ED DLT	ENT PROTNSW	input user	(2)
protn – Protection Port	RTRV ENT ED	ENT PROTNSW	input user	(2)
apspn – MSP-APS ASAP Pointer	RTRV ED	ENT ED	user	
rme – Protection Reversion	RTRV ENT ED	ENT ED	user	
wtr – Wait To Restore Time	RTRV ED	ENT ED	user	
protocol – APS Protocol	RTRV ENT ED	ENT ED	user	
dcclmsprotmd – DCC Line/MS Protection Mode	RTRV ED	ENT ED	user	
dccrsprotmd – DCC Sect/RS Protection Mode	RTRV ED	ENT ED	user	
pgrate – protection group Rate	RTRV	PROTNSW	user	

Attribute	Opr	Not	Class	Note
actunit – Active Unit State	RTRV	PROTNSW	state	(3)
swreq – Switch Request State	RTRV	PROTNSW	state	(3)
protnsiglvl – Protection Fault Status	RTRV		state	
wkgsiglvl – Worker Fault Status	RTRV		state	
actunitfe – Far-End Incoming Requested Selection	RTRV		state	
actunitne – Near-End Outgoing Requested Selection	RTRV		state	
aps – Far-End Incoming APS	RTRV		state	
apsout – Near-End Outgoing APS	RTRV		state	

Note 1: AID field 'transmission protection group ID' of protection group can be specified as part of ENT-PROTN-GRP command.

Note 2: Member port can be used as alias for identification of protection group entity.

Note 3: Updated either via protection switch commands (OPR-PROTNSW, RLS-PROTNSW) or autonomous switch events.

2-fibre BLSR/MS-SPRing protection group

Entity table for 2-fibre BLSR/MS-SPRing protection group.

Attribute	Opr	Not	Class	Note
aid – protection group AID	RTRV ENT ED DLT	ENT ED DLT	input user	(1)
protype – Protection Type	RTRV ENT ED DLT	ENT ED DLT PROTNSW	input	
rid – Ring Identification	RTRV ENT ED DLT	ENT ED	input user	(4)
east – East Port	RTRV ENT ED DLT	ENT PROTNSW	input user	(2)
west – West Port	RTRV ENT ED DLT	ENT PROTNSW	input user	(2)
blsrpn – MSSPRING-BLSR ASAP Pointer	RTRV ED	ENT ED	user	
wtr – Wait To Restore Time	RTRV ED	ENT ED	user	

Attribute	Opr	Not	Class	Note
pgrate – protection group Rate	RTRV	PROTNSW	user	
eswreq – East Switch Request State	RTRV	PROTNSW	state	(3)
wswreq – West Switch Request State	RTRV	PROTNSW	state	(3)
ringndst – Ring Node APS State	RTRV		state	
eapschst – Incoming East APS Channel Status	RTRV		state	
wapschst – Incoming West APS Channel Status	RTRV		state	
eapsdnid – Incoming East APS Destination Node Id	RTRV		state	
wapsdnid – Incoming West APS Destination Node Id	RTRV		state	
eapspntr – Incoming East APS Protection Path	RTRV		state	
wapspntr – Incoming West APS Protection Path	RTRV		state	
eapssnid – Incoming East APS Source Node Id	RTRV		state	
wapssnid – Incoming West APS Source Node Id	RTRV		state	
eapssw – Incoming East APS Switch Priority	RTRV		state	
wapssw – Incoming West APS Switch Priority	RTRV		state	
elprotnsw – East Last protection switch Attempt	RTRV		state	
wlprotnsw – West Last protection switch Attempt	RTRV		state	

Note 1: AID field 'transmission protection group ID' of protection group can be specified as part of ENT-PROTN-GRP command.

Note 2: Member port can be used as alias for identification of protection group entity.

Note 3: Updated either via protection switch commands (OPR-PROTNSW, RLS-PROTNSW) or autonomous switch events.

Note 4: Parameter is called *newrid* in the context of ED-PROTN-GRP command.

4-fibre BLSR/MS-SPRing protection group

Entity table for 4-fibre BLSR/MS-SPRing protection group.

Attribute	Opr	Not	Class	Note
aid – protection group AID	RTRV ENT ED DLT	ENT ED DLT	input user	(1)
protype – Protection Type	RTRV ENT ED DLT	ENT ED DLT PROTNSW	input	
rid – Ring Identification	RTRV ENT ED DLT	ENT ED	input user	(4)
eastwkg – East Worker Port	RTRV ENT ED	ENT ED PROTNSW	input user	(2)(5)
westwkg – West Worker Port	RTRV ENT ED	ENT ED PROTNSW	input user	(2)(5)
eastprotn – East Protection Port	RTRV ENT ED	ENT ED PROTNSW	input user	(2)(5)
westprotn – East Protection Port	RTRV ENT ED	ENT ED PROTNSW	input user	(2)(5)
blsrpn – MSSPRING-BLSR ASAP Pointer	RTRV ED	ENT ED	user	
wtr – Wait To Restore Time	RTRV ED	ENT ED	user	
swtr – Span Wait To Restore Time	RTRV ED	ENT ED	user	
protnmode – protection switch Mode	RTRV ENT ED	ENT ED	user	
pgrate – protection group Rate	RTRV	PROTNSW	user	
eswreq – East Switch Request State	RTRV	PROTNSW	state	(3)
wsreq – West Switch Request State	RTRV	PROTNSW	state	(3)
eactunit – East Active Unit State	RTRV	PROTNSW	state	(3)
wactunit – West Active Unit State	RTRV	PROTNSW	state	(3)
ringndst – Ring Node APS State	RTRV		state	
eapschst – Incoming East APS Channel Status	RTRV		state	

Attribute	Opr	Not	Class	Note
wapschst – Incoming West APS Channel Status	RTRV		state	
eapsdnid – Incoming East APS Destination Node Id	RTRV		state	
wapsdnid – Incoming West APS Destination Node Id	RTRV		state	
eapsprotn – Incoming East APS Protection Path	RTRV		state	
wapsprotn – Incoming West APS Protection Path	RTRV		state	
eapssnid – Incoming East APS Source Node Id	RTRV		state	
wapssnid – Incoming West APS Source Node Id	RTRV		state	
eapssw – Incoming East APS Switch Priority	RTRV		state	
wapssw – Incoming West APS Switch Priority	RTRV		state	
elprotnsw – East Last protection switch Attempt	RTRV		state	
wlprotnsw – West Last protection switch Attempt	RTRV		state	

Note 1: AID field 'transmission protection group ID' of protection group can be specified as part of ENT-PROTN-GRP command.

Note 2: Member port can be used as alias for identification of protection group entity.

Note 3: Updated either via protection switch commands (OPR-PROTNSW, RLS-PROTNSW) or autonomous switch events.

Note 4: Parameter is called *newrid* in the context of ED-PROTN-GRP command.

Note 5: Port can be used as user parameter in ED-PROTN-GRP in case of adding/removing one side to/from the protection group (conversion from 1-side node to 2-side node and vice versa). It can also be used to convert a 2-side node to an asymmetric node and vice versa.

Path protection group Entity table for path protection group

Attribute	Opr	Not	Class	Note
aid – protection group AID	RTRV ED DLT	ENT ED DLT	input	
protype – Protection Type	RTRV ED DLT	ENT ED DLT	input	
ppgname – Path protection group Name	RTRV ENT ED	ENT ED	input user	(1)(2)
wkg – Worker Tributary	RTRV ENT	ENT ED	user	(1)
protn – Protection Tributary	RTRV ENT	ENT ED	user	(1)
dripathpn – SNCP-UPSR ASAP Pointer	RTRV ED	ENT ED	user	
rme – Protection Reversion	RTRV ENT ED	ENT ED	user	(1)
wtr – Wait To Restore Time	RTRV ENT ED	ENT ED	user	(1)
htmr – Hold-Off Time	RTRV ENT ED	ENT ED	user	(1)
snctype – SNC Protection Type	RTRV ENT ED	ENT ED	user	(1)
outtribaid – Output Tributary AID	RTRV ENT	PROTNSW	user	(1) (4)
cst – Constituent Signal Type	RTRV	PROTNSW	user	(1) (4)
actunit – Active Unit State	RTRV	PROTNSW	state	(3) (4)
swreq – Switch Request State	RTRV	PROTNSW	state	(3) (4)
actunitaid – Active Unit State AID	RTRV		state	(3) (4)
protnsiglvl – Protection Fault Status	RTRV		state	(4)
wkgsiglvl – Worker Fault Status	RTRV		state	(4)

Note 1: Initial value has to be specified as part of ENT-CRS/ENT-ROLL command.

Note 2: Parameter is called *newppgname* in the context of ED-PROTN-GRP command.

Note 3: Updated either via protection switch commands
(OPR-PROTNSW, RLS-PROTNSW) or autonomous switch events.



RTRV-PROTN-GRP: Retrieve protection group

The RTRV-PROTN-GRP command retrieves protection group information for all existing protection group entities. The command can be used to retrieve also sets of protection groups by using ranges. The general format can be used to retrieve protection group information for different protection group types.

Input parameters for RTRV-PROTN-GRP identify the type of protection group that is of interest and also a specific member (or perhaps a range of members) of that protection group. If the specified member does not belong to a protection group, then the command returns COMPLD, but contains no information about the protection group. This means that the AID is unprotected.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
Priority: 1
Abortable: Yes

Input format

1+1 equipment protection group

Command Syntax: RTRV-PROTN-GRP:*tid:aid:ctag::prototype*;

multiplex section/line protection group

Command Syntax: RTRV-PROTN-GRP:*tid:aid:ctag::prototype*;

2-/4-fibre MS-SPRing/BLSR protection group

Command Syntax: RTRV-PROTN-GRP:*tid:[aid]:ctag::prototype,[rid]*;

Path protection group

Command Syntax: RTRV-PROTN-GRP:*tid:[aid]:ctag::prototype, , [ppgname]*;

The second comma in front of *ppgname* is needed since *rid* is omitted.

Important! The TL1 command RTRV-PROTN-PPG which retrieves all used path protection group names is not supported. Therefore its difficult to get an overview about all already used/defined protection group names. The operator can use the TL1 command RTRV-PROTN-GRP and use bay-shelf-#-#-all-all-all as value for the input parameter aid in order to derive all

path protection groups (see *aid* - Access Identifier in [“Command parameters \(path protection group\)” \(8-16\)](#)). Then he gets the used path protection group names per protection group in the command reply.

Input parameters

Command parameters (1+1 Equipment protection group)

1. tid – Target Identifier
See definition in input parameters section in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
Description: The parameter specifies the aid of 1+1 equipment protection group.
Type: AID
Range: bay-shelf-eall (range over SwitchAndTmgProtGrpAID) or SwitchAndTmgProtGrpAID (for one protection group instance) or CtlProtGroupAID (for controller protection group instance) or EP155ProtGroupAID (for EP155 protection group instance).
Default: No default
3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. prototype – Protection Type
The parameter specifies the type of the 1+1 equipment protection group for retrieving the information.
Type: alphanumeric value set.
Range:
 - ALL for all equipment protection groups/ restrictions by the used AID;
 - EQPTSWFBR for switching protection group instance;
 - EQPTCTL for controller protection group instance;
 - EQPTEP155 for EP155 protection group instance.

Command parameters (multiplex section/line protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
This parameter specifies the aid of a 1+1 multiplex section/line protection group or the aid of a 1:1 multiplex section/line protection group (only R3.0 and later) or an port aid being a member of the group.
Type: AID
Range: *bay-shelf*-oall (ranged over OnePlusOne_ProtGrpAID) or OnePlusOne_ProtGrpAID (not ranged) or NByOne_ProtGrpAID (not ranged) or SPortAID (not ranged)
3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. prototype – Protection Type
This parameter specifies the architecture (type) of the protection group. The value for the 1+1 line/MS protection group is 1+1. The value for the 1:1 line/MS protection group is 1xNOPT (only R3.0 and later)
Type: value set
Range: 1+1 or 1xNOPT

Command parameters (2-/4-fibre MS-SPRing/BLSR protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
This parameter specifies the aid of a MS-SPRing/BLSR protection group or an port aid being a member of the group.
Option: If *rid* is specified, then *aid* can be omitted.
Type: AID
Range: *bay-shelf*-tall (ranged over TwoFibre_ProtGrpAID) or bay-shelf-fall (ranged over FourFibre_ProtGrpAID) or TwoFibre_ProtGrpAID (not ranged) or FourFibre_ProtGrpAID (not ranged) or SPortAID (not ranged).

3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. prototype – Protection Type
This parameter specifies the protection group type for which the information is retrieved.
Type: alphanumeric value set
Range: 2F or 4F
5. rid – Ring Identification
See definition in output parameters section in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
Option: If *aid* is specified, then *rid* can be omitted.

Command parameters (path protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
This parameter specifies a path protection group aid or an input tributary aid being a member of the group in combination with *ppgname*.
Option: If ppgname is specified, then *aid* can be omitted or used as an input tributary aid.
Type: AID
Range: bay-shelf-#-#-all-all-all (ranged over Path_ProtGrpAID) or Path_ProtGrpAID (not ranged) or bay-shelf-#-#-all-all-all (ranged over input STS1NumAID) or STS1NumAID (not ranged) or bay-shelf-#-#-all-all-all (ranged over input VCGNumAID) or VCGNumAID (not ranged).
3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).

4. **prototype** – Protection Type
This parameter specifies the protection group type for which the information is retrieved.
Type: alphanumeric value set
Range: PATHDRI
5. **ppgname** – Path protection group Name
The parameter shall specify the path protection group name. Storage and retrieval of the ppgname shall be case sensitive, but actual use of the ppgname to determine the corresponding protection group is case insensitive.
Option: If *aid* is specified, then *ppgname* can be omitted.
If an input value is specified for *ppgname* and none is specified for *aid*, then RTRV-PROTN-GRP operates on all protection groups of type PATHDRI that have the specified path protection group name.
If input values are specified for *aid* and *ppgname* then RTRV-PROTN-GRP operates on all protection groups of type PATHDRI that have the specified *aid*, *ppgname* pair.
The command will complete successfully if there is no protection group described by *aid*, *ppgname*, but no data will be returned.
Type: text string
Range: 1 to 24 characters

Output format After receiving the RTRV-PROTN-GRP command, the following normal completion response is returned in case of EQPTSWFBR, EQPTCTL, EQPTEP155, 1+1, 2F, 4F protection groups :

```
sid date time
M ctag COMPLD
  "aid:[spec_block]"
  ...
  ...
  "aid:[spec_block]"
;
```

After receiving the RTRV-PROTN-GRP command, the following normal completion response is returned in case of PATHDRI protection group:

```
sid date time
M ctag COMPLD
  "aid:[spec_block]"
```

```
"outtribaid,CML:<CML block>"
.
.
"outtribaid,CML:<CML block>"
...
...
"aid:[spec_block]"
"outtribaid,CML:<CML block>"
.
.
"outtribaid,CML:<CML block>"
;
```

Both completion formats have a common generic format for the third and the following lines. This generic format is: "aid[, CML]:[spec_block]" Nevertheless it was decided to specify them differently to express that – spec block may be either the spec block for the protection group parameters or the spec block for the CML parameters – aid may be either the protection group aid or the output tributary aid

If no protection group entity exists matching the specified values of the input parameters *aid*, *rid*, *ppgname* then the following response is returned:

```
sid date time
M ctag COMPLD
;
```

Output parameters

Command parameters (1+1 Equipment protection group)

1. aid – Access Identifier

This parameter specifies the AID of the 1+1 protection equipment group.

Type: AID

Range: SwitchAndTmgProtGrpAID for switching protection group instance; CtlProtGroupAID for controller protection group instance; EP155ProtGroupAID for EP155 protection group instance

Command parameters (multiplex section/line protection group)

1. aid – Access Identifier
This parameter specifies the aid of a 1+1 multiplex section/line protection group or the aid of a 1:1 multiplex section/line protection group (only R3.0 and later).
Type: AID
Range: OnePlusOne_ProtGrpAID or NByOne_ProtGrpAID

Command parameters (2-fibre MS-SPRing/BLSR protection group)

1. aid – Access Identifier
This parameter specifies the AID of the 2 fibre MS-SPRing/BLSR protection group.
Type: AID
Range: TwoFibre_ProtGrpAID
Default: No default

Command parameters (4-fibre MS-SPRing/BLSR protection group)

1. aid – Access Identifier
This parameter specifies the AID of the 4 fibre MS-SPRing/BLSR protection group.
Type: AID
Range: FourFibre_ProtGrpAID

Command parameters (Path protection group)

1. aid – Access Identifier
This parameter specifies the AID of the path protection group.
Type: AID
Range: Path_ProtGrpAID
2. outtribaid – Output Tributary Access Identifier
This parameter specifies the output tributary AID for a constituent signal within the protection group. One value is returned for each constituent signal together with the corresponding CML (Constituent Member List) block.
Type: AID
Range: GenTribAID

Spec block parameters (1+1 Equipment protection group)

1. actunit – Active Unit State
This parameter specifies which unit is currently selected within the protection group as active unit.
The value WKG specifies that the worker unit is active.
The value PROTN specifies that the protection unit is active.
Type: alphanumeric value set
Range: WKG, PROTN
Default: For switching protection group instance: The first provisioned/auto-created circuit pack shall be the default active unit. For controller protection group instance: the active controller unit at the moment of creation of the CTL protection group. For EP155 protection group instance: The worker shall be the default active unit.
2. protn – Protection Unit
The parameter specifies the protection circuit pack AID being a member of the 1+1 equipment protection group.
Type: AID
Default: For switching protection group instance: CpAID related to slot 10. For controller protection group instance: CpAID related to slot 31. For EP155 protection group instance: - If no cross-connections are assigned to one of the two EP155 cards, the user can choose it by the ENT-PROT-GRP command Default protection unit shall be the right card. - If cross-connections are assigned to one of the cards, the other card must become the protection unit. This means that the creation (ENT-PROTN-GRP) shall be rejected, if the user selects the card with cross-connections as protection card.
3. protnsiglvl – Protection Fault Status
This parameter specifies the current fault status w.r.t. the protection unit as used by the protection state machine.
The value EF (Equipment Failed) is used if an equipment defect used as switch criteria is currently present for the protection unit.
The value NONE is used if no such defect is currently present.
Type: alphanumeric value set
Range: EF, NONE
Default: NONE

4. prototype – Protection Type
 This parameter specifies the type of the protection group.
 Type: alphanumeric value set
 Range: EQPTSWFBR for switching protection group instance;
 EQPTCTL for controller protection group instance; EQPTEP155
 for EP155 protection group instance.
5. swreq – Switch Request State
 This parameter specifies the current switch request state of the
 protection state machine.
 The value EQPTFAILED (Equipment Failed) is used if an
 equipment failed condition is the current state.
 The value FS (Forced Switch) is used if a forced switch is the
 current state.
 The value MS (Manual Switch) is used if a manual switch is the
 current state.
 The value NR (No Request) is used if no request is the current
 state.
 Type: alphanumeric value set
 Range: EQPTFAILED, FS, MS, NR for switch fabric protection
 and EP155 protection; EQPTFAILED, MS, NR for controller
 protection.
 Default: NR
6. wkg – Worker Unit
 This parameter specifies the worker circuit pack AID being a
 member of the 1+1 equipment protection group.
 Type: AID
 Range: CpAID
 Default: For switching protection group instance: CpAID related
 to slot 9. For controller protection group instance: CpAID related
 to slot 11. For EP155 protection group instance: - If no
 cross-connections are assigned to one of the two EP155 cards,
 the user can choose it by the ENT-PROT-GRP command Default

worker unit shall be the left card. - If cross-connections are assigned to one of the cards, this card must become the worker unit. This means that the creation (ENT-PROTN-GRP) shall be rejected, if the user selects the card with no cross-connections as worker card.

7. wkgsiglvl – Worker Fault Status

This parameter specifies the current fault status w.r.t. worker unit as used by the protection state machine.

The value EF (Equipment Failed) is used if an equipment defect used as switch criteria is currently present for the worker unit.

The value NONE is used if no such defect is currently present.

Type: alphanumeric value set

Range: EF, NONE

Default: NONE; i.e. the default is the value 'NONE'

Spec block parameters (multiplex section/line protection group)

1. actunit – Active Unit State

This parameter specifies which port is currently selected within the protection group as active port.

The value WKG specifies that the worker port is active.

The value PROTN specifies that the protection port is active.

Type: alphanumeric value set

Range: WKG, PROTN

Default: WKG

2. actunitfe – Far-End Incoming Requested Selection

This parameter is derived from the incoming K1 [5..8] overhead byte.

The value WKG is used if accepted K byte value is equal to 0.

The value PRTON is used if the accepted K byte value is equal to 1.

The value UNAVAILABLE is used if an SF condition is active for the protection line.

The value NONE shall be used if there is no request from the far end for 1+1 optimized (only R3.0 and later)

The value INV (InValid) is used in all other cases.

Type: alphanumeric value set

Range: WKG, PROTN, UNAVAILABLE, NONE, INV

Default: WKG

3. actunitne – Near-End Outgoing Requested Selection
This parameter is derived from the sent K1 [5..8] overhead byte.
The value WKG is used if sent K byte value is equal to 0.
The value PRTON is used if the sent K byte value is equal to 1.
Type: alphanumeric value set
Range: WKG, PROTN
Default: WKG
4. aps – Far-End Incoming APS
This parameter is derived from the incoming K1 [1..4] overhead byte.
It indicates the type of request as follows:
 - DNR: Do Not Revert
 - EXER: Exercise
 - INV: Invalid (unused codes)
 - UNAVAILABLE: Not Available (SF condition pending for protection line)
 - FS: Forced Switch
 - LO: Lockout of Protection
 - MS: Manual Switch
 - NR: No Request
 - RR: Reverse Request
 - SF-H: Signal Fail High
 - SF-L: Signal Fail Low
 - SD-H: Signal Degrade High
 - SD-L: Signal Degrade Low
 - WTR: Wait to restore (for MSP 1+1, MSP 1:1) / Wait to rename (for MSP 1+1 Optimized).The APS code "WTR" has a different meaning depending on the protection type which shall be visible to the user. However, in the standards only "Wait to restore" is defined independent of the protection type.
Type: alphanumeric value set.
Range: DNR, EXER, INV, NA, FS, LO , MS, NR, RR, SF-H, SF-L, SD-L, SD-H, WTR
Default: NR
5. apout – Near-End Outgoing APS
This parameter is derived from the sent K1 [1..4] overhead byte.

It indicates the type of request as follows:

- DNR: Do Not Revert
- FS: Forced Switch
- LO: Lockout of Protection
- MS: Manual Switch
- NR: No Request
- RR: Reverse Request
- SF-H: Signal Fail High
- SF-L: Signal Fail Low
- SD-H: Signal Degrade High
- SD-L: Signal Degrade Low
- WTR: Wait to restore (only used if protection group is revertive).

Type: alphanumeric value set

Range: DNR, FS, LO , MS, NR, RR, SF-H, SF-L, SD-H, SF-L, WTR

Default: NR

6. apspn – MSP-APS ASAP Pointer

This parameter specifies the value for the ASAP (alarm severity assignment profile) name of type MSP-APS (Multiplex Section Protection – Automatic protection switching).

Type: alphanumeric string

Range: 1-24 characters including character '-'.

Default: DEFAULT

7. dcclmsprotmd – DCC Line/MS Protection Mode

The parameter shall specify, whether the line/MS dcc channel is switched as part of the line/MS protection group. The value ENABLE shall be used, if dcc channel is switched as part of line/MS protection group; otherwise the value DISABLED shall be used.

Type: alphanumeric value set 3;

Range: ENABLE, DISABLE

Default: DISABLE

8. dccsrprotmd – DCC Sect/RS Protection Mode
The parameter shall specify, whether the section/RS dcc channel is switched as part of the line/MS protection group. The value ENABLE shall be used, if dcc channel is switched as part of line/MS protection group; otherwise the value DISABLED shall be used.
Type: alphanumeric value set
Range: ENABLE, DISABLE
Default: DISABLE
9. pgrate – protection group Rate
This parameter is derived from the interface rate of the ports within the protection group. It indicates the same value as for the two ports.
Type: alphanumeric value set
Range: OC3, OC12, OC48, OC192, OC768, STM1, STM4, STM16, STM64, STM256
Default: The default value is the interface rate of the worker port.
10. protn – Protection Unit
This parameter specifies the protection port AID being a member of the line protection/ MS protection group.
Type: AID
Range: SPortAID
11. protnsiglvl – Protection Fault Status
This parameter specifies the current fault status w.r.t. port as used by the protection state machine.
The value SF (Signal Fail) is used if a defect defined as signal fail condition is currently present for the protection port.
The value SD (Signal Degrade) is used if a defect defined as signal degraded condition is currently present for the protection port.
The value NONE is used if no such defect is currently present.
Type: alphanumeric value set
Range: SF, SD, NONE
Default: NONE
12. protocol – APS Protocol
This parameter specifies the protocol used by the protection state machine. The value 1+1_UNI is used for 1+1 unidirectional switching. The value 1xN_BIDIR is used for 1:1 bidirectional switching (N=1) (only R3.0 and later). The value 1+1_OPTM is used for 1+1 optimized, bidirectional switching (only R3.0 and

later). The value 1+1_BIDIR is used for 1+1 bidirectional switching (only R4.0 and later).

Type: alphanumeric value set

Range: 1+1_UNI, 1xN_BIDIR, 1+1_OPTIt can also be used to convert a 2-side node to an asymmetric node and vice versa.

In mind the 'N' in 1xN_BIDIR is considered to be always equal '1'. The value 1+1_OPTM implicitly specifies bidirectional operation mode.

Default: 1+1_UNI, in case of prototype = 1+1; 1xN_BIDIR, in case of prototype = 1xNOPT (i.e. protection type 1:1).

13. prototype – Protection Type

This parameter specifies the type of the protection group. The value for the 1+1 line/MS protection group shall be 1+1. The value for the 1:1 line/MS protection group shall be 1xNOPT (only R3.0 and later).

In mind the 'N' in 1xNOPT is considered to be always equal '1'.

Type: value set

Range: 1+1 or 1xNOPT.

Default: 1+1

14. rme – Protection Reversion

The parameter specifies, whether revertive or non-revertive mode is used as operation mode of the protection group. The value ENABLE shall be used if the protection group operates in revertive mode. The value DISABLE shall be used if the protection group operates in non-revertive mode.

Type: alphanumeric value set

Range: DISABLE in case of prototype = 1+1; ENABLE in case of prototype = 1xNOPT.

Default: DISABLE, in case of prototype = 1+1; ENABLE, in case of prototype = 1xNOPT (i.e. protection type 1:1)

The **protocol** = OPTM can only be chosen in case of **prototype** = 1+1, thus default is DISABLE then.

15. ssi – Secondary Section Indication

The parameter shall indicate the 'Secondary Section' (line).

Type: AID

Range: WKG, PROTN; WKG denotes working section 1, PROTN denotes working section 2 according ITU-T G.841 Annex B.

Default: PROTN

16. swreq – Switch Request State

This parameter specifies the current switch request state of the protection state machine.

It shall have the following values:

- DNR: Do Not Revert
- FS: Forced Switch
- LO: Lockout of Protection
- MS: Manual Switch
- SF: Signal Fail
- SD: Signal Degrade
- WTR: Wait to restore (only used if protection group is revertive)
- FOP: Failure Of Protocol
- NR: No Request.

Type: alphanumeric value set

Range: DNR, FS, LO , MS, SF, SD, WTR, FOP, NR

Default: NR

17. wkg – Worker Unit

This parameter specifies the worker port AID being a member of the 1+1 line/MS protection group.

Type: AID

Range: SPortAID

18. wkgsiglvl – Worker Fault Status

This parameter specifies the current fault status w.r.t. port as used by the protection state machine.

The value SF (Signal Fail) is used if a defect defined as signal fail condition is currently present for the worker port.

The value SD (Signal Degrade) is used if a defect defined as

signal degraded condition is currently present for the worker port.
The value NONE issued if no such defect is currently present.
Type: alphanumeric value set.
Range: SF, SD, NONE.
Default: NONE.

19. wtr – Wait To Restore Time / Wait to Rename Time
The parameter shall specify the 'wait to restore' time used by the protection state machine operating in revertive mode (MSP1+1, MSP1:1). In case of MSP 1+1 Optimized the same parameter shall be used for the 'wait to rename' time.
Type: numeric string [minute]
Range: 0 - 60
Default: 5.

Spec block parameters (2-fibre MS-SPRing/BLSR protection group)

1. ard – Automatic Ring Discovery
If this parameter is enabled, the automatic ring discovery algorithm will assign nodeID values to each node in the ring and construct the necessary ring map information. All nodes in the ring must be Lucent. If disabled, the user will assign the NodeID value manually with ED-MAP-RING and supply the ring map information to each node on the ring for the BLSR protocol to operate. It is necessary to activate this user-provisioned information with SET-MAP-RING. Until all nodes on the ring have the same ring map, nodes will have most likely an outstanding NodeID mismatch alarm active.
Type: alphanumeric string.
Range: ENABLE, DISABLE.
Default: ENABLE.
2. blsrpn – MSSPRING-BLSR ASAP Pointer
This parameter specifies the value for the ASAP (alarm severity assignment profile) name of type MSSPRING-BLSR.
Type: alphanumeric string
Range: 1-24 characters including character '-'.
Default: DEFAULT
3. eapschst – Incoming East APS Channel Status
This parameter is derived from the incoming K2 [6..8] overhead byte of the east port.

It indicates the status as follows:

- IDLE: Idle
- BRIDGED: Bridged
- BANDS: Bridged & Switched
- XTRFC: Extra Traffic on protection channels
- NOTUSED: Not Used – Reserved for future use
- RDIL: RDI-L/MS-RDI (Remote Defect Indication -Line/Multiplex Section)
- AISL: AIS-L/MS-AIS (Alarm Indication Signal – Line/Multiplex Section)

Type: alphanumeric value set

Range: IDLE, BRIDGED, BANDS, XTRFC, NOTUSED, RDIL, AISL

Default: IDLE

4. eapsdnid – Incoming East APS Destination Node Id
This parameter is derived from the incoming K1 [5..8] overhead byte of the east port. It specifies the node ID for which the K1 byte is destined.
The value UNAVAILABLE is used in case of an pending SF condition.
Type: alphanumeric value set
Range: 0-15 or UNAVAILABLE
Default: 0
5. eapsprotn – Incoming East APS Protection Path
This parameter is derived from the incoming K2 overhead byte of the east port.
It indicates the protection path as follows:
 - 0: short path code (S)
 - 1: long path code (L)The value UNAVAILABLE is used in case of an pending SF condition.
Type: alphanumeric value set
Range: 0, 1, UNAVAILABLE
Default: 0

6. eapssnid – Incoming East APS Source Node Id
This parameter is derived from the incoming K2 [1..4] overhead byte of the east port. It specifies the node ID which sourced the K1 byte.
The value UNAVAILABLE is used in case of an pending SF condition.
Range: 0-15 or UNAVAILABLE
Default: 0
7. eapssw – Incoming East APS Switch Priority
This parameter is derived from the incoming K1 [1..4] overhead byte of the east port.
It indicates the switch priority/bridge request code as follows:
 - LPS: Lockout of Protection Span
 - FSS: Forced Switch Span (4F only)
 - FSR: Forced Switch Ring
 - SFS: Signal Fail Span (4F only)
 - SFR: Signal Fail Ring
 - SDP: Signal Degrade Protection (4F only)
 - SDS: Signal Degrade Span (4F only)
 - SDR: Signal Degrade Ring
 - MSS: Manual Switch Span (4F only)
 - MSR: Manual Switch Ring
 - WTR: Wait to Restore
 - EXERS: Exerciser Span (4F only)
 - EXERR: Exerciser Ring
 - RRS: Reverse Request Span
 - RRR: Reverse Request Ring
 - NR: No Request.The value UNAVAILABLE is used in case of an pending SF condition.
Range: LPS, FSS, FSR, SFS, SFR, SDP, SDS, SDR, MSS, MSR, WTR, EXERS, EXERR, RRS, RRR, NR, UNAVAILABLE.
Default: NR.

8. east – East Port
This parameter specifies the port being a member in the role of the east port for a 2-fibre MS-SPRing/BLSR protection group.
Type: AID
Range: SPortAID
9. elprotnsw – East Last protection switch Attempt
This parameter specifies, whether the last switch request for the east side succeeded or not.
The values have the following semantics:
 - SUCCESS: last request did succeed
 - DENY: last request was denied due a validation rule
 - FAILURE: last request could not be completed because far end node did not response with proper K-byte.Type: alphanumeric value set.
Range: SUCCESS, DENY, FAILURE
Default: SUCCESS.
10. eswreq – East Switch Request State
This parameter specifies the active switch request state of the protection state machine for the east side. If the east side is an associated side of a switching node, the value will be derived from the request currently associated with the concerned side, and accepted in the protocol as highest or coexisting priority. For all other cases, the value shall be 'NR'.
It has the following values:
 - LPS: Lockout of Protection Span
 - FSR: Forced Switch of Service to Protection – Ring
 - SFR: Signal Fail – Ring
 - SDR: Signal Degrade – Ring
 - MSR: Manual Switch of Service to Protection – Ring
 - WTR: Wait to Restore
 - NR: No Request.Type: alphanumeric value set.
Range LPS, FSR, SFR, SDR, MSR, WTR, NR.
Default: NR.

11. pgrate – protection group Rate
This parameter is derived from the interface rate of the ports within the protection group. It indicates the same value as for the two ports.
Type: alphanumeric value set.
Range: OC48, OC192, OC768, STM16, STM64, STM256
Default: The default value shall be the interface rate of the east port.
12. prototype – Protection Type
This parameter specifies the type of the protection group. The value for the 2-fibre MS-SPRing/BLSR protection group is 2F.
Type: alphanumeric value set.
Range: 2F.
13. rid – Ring Identification
This parameter specifies the ring identification name. Storage and retrieval of the *rid* is case sensitive, but actual use of the rid to determine the corresponding protection group is case insensitive. The parameter is used as an alias to identify exactly one MS-SPRing/BLSR protection group of any type. Therefore the value shall be unique for all protection groups of type 2F or 4F within the NE.
Type: text string of chars allowed for TID strings.
Range: 1 to 15 characters.
Default: NONE.
14. ringndst – Ring Node APS State
This parameter specifies the ring node APS state.
It shall have the following values under normal conditions:
IDLE, SWITCHING, PASSTHROUGH
It shall have in addition the following values if protection state machine is suspended: SUSPENDED-IDLE, SUSPENDED-SWITCHING, SUSPENDED-PASSTHROUGH
Type: alphanumeric value set.
Range: IDLE, SWITCHING, PASSTHROUGH, SUSPENDED-IDLE, SUSPENDED-SWITCHING, SUSPENDED-PASSTHROUGH.
Default: SUSPENDED-IDLE.
15. wapschst – Incoming West APS Channel Status
This parameter is derived from the incoming K2 [6..8] overhead byte of the west port.

It indicates the status as follows:

- IDLE: Idle BRIDGED Bridged
- BANDS: Bridged & Switched
- XTRFC: Extra Traffic on protection channels
- NOTUSED: Not Used – Reserved for future use
- RDIL: RDI-L/MS-RDI (Remote Defect Indication – Line/Multiplex Section).
- AISL: AIS-L/MS-AIS (Alarm Indication Signal – Line/Multiplex Section).

Type: alphanumeric value set.

Range: IDLE, BRIDGED, BANDS, XTRFC, NOTUSED, RDIL, AISL.

Default: IDLE.

16. wapsdnid – Incoming West APS Destination Node Id

This parameter is derived from the incoming K1 [5..8] overhead byte of the west port. It specifies the node ID for which the K1 byte is destined. The value UNAVAILABLE is used in case of an pending SF condition.

Type: alphanumeric string.

Range: 0-15 or UNAVAILABLE.

Default: 0.

17. wapsprotn – Incoming West APS Protection Path

This parameter is derived from the incoming K2 overhead byte of the west port.

It indicates the protection path as follows:

- 0: short path code (S)
- 1: long path code (L)

The value UNAVAILABLE is used in case of an pending SF condition.

Type: alphanumeric value set.

Range: 0, 1, UNAVAILABLE.

Default: 0.

18. wapssnid – Incoming West APS Source Node Id

This parameter is derived from the incoming K2 [1..4] overhead byte of the west port. It specifies the node ID which sourced the K1 byte. The value UNAVAILABLE is used in case of an pending SF condition.

Type: alphanumeric string.

Range: 0-15 or UNAVAILABLE.

Default: 0.

19. wapssw – Incoming West APS Switch Priority

This parameter is derived from the incoming K1 [1..4] overhead byte of the west port.

It indicates the switch priority/bridge request code as follows:

- LPS: Lockout of Protection Span
- FSS: Forced Switch Span (4F only)
- FSR: Forced Switch Ring
- SFS: Signal Fail Span (4F only)
- SFR: Signal Fail Ring
- SDP: Signal Degrade Protection (4F only)
- SDS: Signal Degrade Span (4F only)
- SDR: Signal Degrade Ring
- MSS: Manual Switch Span (4F only)
- MSR: Manual Switch Ring
- WTR: Wait to Restore
- EXERS: Exerciser Span (4F only)
- EXERR: Exerciser Ring
- RRS: Reverse Request Span
- RRR: Reverse Request Ring
- NR: No Request.

The value UNAVAILABLE is used in case of an pending SF condition.

Type: alphanumeric value set.

Range: LPS, FSS, FSR, SFS, SFR, SDP, SDS, SDR, MSS, MSR, WTR, EXERS, EXERR, RRS, RRR, NR, UNAVAILABLE.

Default: NR.

20. west – West Port

This parameter specifies the port being a member in the role of the west port for a 2-fibre MS-SPRing/BLSR protection group.

Type: AID.

Range: SPortAID.

Default: None.

21. wlprotnsw – West Last protection switch Attempt

This parameter specifies, whether the last switch request for the west side succeeded or not.

The values have the following semantics:

- SUCCESS: last request did succeed
- DENY: last request was denied due a validation rule
- FAILURE: last request could not be completed because far end node did not response with proper K-byte.

Type: alphanumeric value set.

Range: SUCCESS, DENY, FAILURE

Default: SUCCESS.

22. wswreq – West Switch Request State

This parameter specifies the active switch request state of the protection state machine for the east side. If the east side is an associated side of a switching node, the value is derived from the request currently associated with the concerned side, and accepted in the protocol as highest or coexisting priority. For all other cases, the value shall be 'NR'.

It have the following values:

- LPS: Lockout of Protection Span
- FSR: Forced Switch of Service to Protection – Ring
- SFR: Signal Fail – Ring
- SDR: Signal Degrade – Ring
- MSR: Manual Switch of Service to Protection – Ring

- WTR: Wait to Restore
 - NR: No Request.
- Type: alphanumeric value set.
Range LPS, FSR, SFR, SDR, MSR, WTR, NR.
Default: NR.

23. wtr – Wait To Restore Time

This parameter specifies the wait to restore time for ring switches used by the protection state machine operating in revertive mode. The protection operates in revertive mode if the wait-to-restore time is in the range 0-12. The protection operates in non-revertive mode if the wait-to-restore time has the value 99 representing the infinite value.

Note: If *wtr* time is set to infinite, the switch request state shall be WTR until a higher request occurs.

Type: numeric string [minute].
Range: 0 – 12 in 1 minute increments and 99.
Default: 5.

Spec block parameters (4-fibre MS-SPRing/BLSR protection group)

1. ard – Automatic Ring Discovery

If this parameter is enabled, the automatic ring discovery algorithm will assign nodeID values to each node in the ring and construct the necessary ring map information. All nodes in the ring must be Lucent. If disabled, the user will assign the NodeID value and supply the ring map information to each node on the ring for the BLSR protocol to operate. Until all nodes on the ring have the same ring map, nodes will have most likely an outstanding NodeID mismatch alarm active.

Type: alphanumeric string.
Range: ENABLE, DISABLE.
Default: ENABLE.

2. blsrpn – MSSPRING-BLSR ASAP Pointer

This parameter specifies the value for the ASAP (alarm severity assignment profile) name of type MSSPRING-BLSR.

Type: alphanumeric string.
Range: 1-24 characters including character '-'.
Default: DEFAULT.

3. **eactunit** - East Active Unit State

The parameter shall specify whether the traffic associated with the east worker port is physically running over the east worker port (i.e. value WKG is used in that case) or over a protection port (i.e. value PROTN is used in that case). The protection port can be the east protection port in case of span switch or the west protection port in case of a loopback switch. The value of the parameter is derived from the internal handled active line state of the service port and the active line state of the protection ports.

eactunit = WKG: active line state of east worker port is active.

eactunit = PROTN: active line state of east worker port is standby.

Type: alphanumeric value set.

Range: WKG, PROTN.

Default: WKG.

4. **eapschst** – Incoming East APS Channel Status

This parameter is derived from the incoming K2 [6..8] overhead byte of the east port.

It indicates the status as follows:

- IDLE: Idle
- BRIDGED: Bridged
- BANDS: Bridged & Switched
- XTRFC: Extra Traffic on protection channels
- NOTUSED: Not Used – Reserved for future use
- RDIL: RDI-L/MS-RDI (Remote Defect Indication -Line/MultiplexSection)
- AISL: AIS-L/MS-AIS (Alarm Indication Signal – Line/Multiplex Section)
- in case of **protnmode** = TOPEX (only R3.0 and R3.1): ACT command to ACT to complete the Switch.

Type: alphanumeric value set.

Range: IDLE, BRIDGED, BANDS, XTRFC, NOTUSED, ACT, RDIL, AISL.

Default: IDLE.

5. eapstdnid – Incoming East APS Destination Node Id
This parameter is derived from the incoming K1 [5..8] overhead byte of the east port. It specifies the node ID for which the K1 byte is destined.
The value UNAVAILABLE is used in case of an pending SF condition.
Type: alphanumeric string.
Range: 0-15 or UNAVAILABLE.
Default: 0.
6. eapsprotn – Incoming East APS Protection Path
This parameter is derived from the incoming K2 overhead byte of the east port.
It indicates the protection path as follows:
 - 0: short path code (S)
 - 1: long path code (L)The value UNAVAILABLE is used in case of an pending SF condition.
Type: alphanumeric value set.
Range: 0, 1, UNAVAILABLE.
Default: 0.
7. eapssnid – Incoming East APS Source Node Id
This parameter is derived from the incoming K2 [1..4] overhead byte of the east port. It specifies the node ID which sourced the K1 byte.
The value UNAVAILABLE is used in case of an pending SF condition.
Type: alphanumeric string.
Range: 0-15 or UNAVAILABLE.
Default: 0.
8. eapssw – Incoming East APS Switch Priority
This parameter is derived from the incoming K1 [1..4] overhead byte of the east port.
It indicates the switch priority/bridge request code as follows:
 - LPS: Lockout of Protection Span
 - FSS: Forced Switch Span (4F only)
 - FSR: Forced Switch Ring
 - SFS: Signal Fail Span (4F only)
 - SFR: Signal Fail Ring

- SDP: Signal Degrade Protection (4F only)
- SDS: Signal Degrade Span (4F only)
- SDR: Signal Degrade Ring
- MSS: Manual Switch Span (4F only)
- MSR: Manual Switch Ring
- WTR: Wait to Restore
- EXERS: Exerciser Span (4F only)
- EXERR: Exerciser Ring
- RRS: Reverse Request Span
- RRR: Reverse Request Ring
- NR: No Request.

The value UNAVAILABLE is used in case of an pending SF condition.

The bridge request LPS and SFP (Signal Fail Protection) share a common code value. Therefore they cannot be distinguished. The value 'LPS' will be used in that context.

Type: alphanumeric value set.

Range: LPS, FSS, FSR, SFS, SFR, SDP, SDS, SDR, MSS, MSR, WTR, EXERS, EXERR, RRS, RRR, NR, UNAVAILABLE.

Default: NR.

9. eastprotn - East Protection Port

This parameter shall specifies the port being a member in the role of the east protection port for a 4-fibre MS-SPRing/BLSR protection group.

Type: AID

Range: SPortAID

10. eastwkg - East Worker Port

This parameter specifies the port being a member in the role of the east worker port for a 4-fibre MS-SPRing/BLSR protection group.

Type: In case of an asymmetric ring: alphanumeric string; in all other cases: AID.

Range: In case of an asymmetric ring: ASYMMETRIC; in all other cases: SPortAID.

11. elprotnsw – East Last protection switch Attempt

This parameter specifies, whether the last switch request for the east side succeeded or not.

The values have the following semantics:

- SUCCESS: last request did succeed
- DENY: last request was denied due a validation rule
- FAILURE: last request could not be completed because far end node did not response with proper K-byte.

Type: alphanumeric value set.

Range: SUCCESS, DENY, FAILURE.

Default: SUCCESS.

12. eswreq - East Switch Request State

This parameter specifies the active switch request state of the protection state machine for the east side. If the east side is an associated side of a switching node, the value shall be derived from the request currently associated with the concerned side, and accepted in the protocol as highest or coexisting priority. For all other cases, the value shall be 'NR'.

It has the following values:

- LPS: Lockout of Protection Span
- FSS: Forced Switch of Service to Protection - Span
- FSR: Forced Switch of Service to Protection - Ring
- SFS: Signal Fail - Span
- SFR: Signal Fail - Ring
- SDS: Signal Degrade - Span
- SDR: Signal Degrade - Ring
- SDP : Signal Degrade - Protection
- MSS: Manual Switch of Service to Protection - Span
- MSR: Manual Switch of Service to Protection - Ring
- WTR: Wait to Restore
- NR: No Request.

Type: alphanumeric value set.

Range: LPS, FSS, FSR, SFS, SFR, SDS, SDR, SDP, MSS, MSR, WTR, NR The bridge request LPS and SFP (Signal Fail Protection) share a common code value. Therefore they cannot be distinguished. The value 'LPS' will be used in that context.

Default: NR.

13. pgrate – protection group rate
This parameter is derived from the interface rate of the ports within the protection group. It indicates the same value as for the four ports.
Type: alphanumeric value set.
Range: OC192, STM64.
Default: The default value shall be the interface rate of the east port.
14. protmode - Protection Switch Mode
The parameter specifies the protection switch mode. The value LOOPBACK shall be used for the classical ring application. The value SHORTENED shall be used for transmission delay sensitive applications. The value TOPEX (only R3.0 and ^R3.1) shall be used for the so called transoceanic application, which allows extra traffic, improves restorability and improves delay as well as in SHORTENED mode.
In case of a ring switch ... LOOPBACK performs the bridge and switch function in that nodes which are most close to the failed span. SHORTENED performs the bridge function at the add node respectively the switch function at the drop node of each ring circuit. It is an application only similar to the transoceanic protocol. TOPEX allows, compared to SHORTENED mode, additionally the traffic restoration of not affected spans. It is the transoceanic protocol application.
Type: alphanumeric value set.
Range: LOOPBACK, SHORTENED.
Default: LOOPBACK.
15. prototype – Protection Type
This parameter specifies the type of the protection group. The value for the 4-fibre MS-SPRing/BLSR protection group is 4F.
Type: alphanumeric value set.
Range: 4F.
16. rid – Ring Identification
This parameter specifies the ring identification name. Storage and retrieval of the *rid* is case sensitive, but actual use of the rid to determine the corresponding protection group is case insensitive. The parameter is used as an alias to identify exactly one MS-SPRing/BLSR protection group of any type. Therefore the

value shall be unique for all protection groups of type 2F or 4F within the NE.

Type: text string of chars allowed for TID strings.

Range: 1 to 15 characters.

Default: NONE

17. ringndst – Ring Node APS State

This parameter specifies the ring node APS state.

It shall have the following values under normal conditions:

IDLE, SWITCHING, PASSTHROUGH

It shall have in addition the following values if protection state machine is suspended: SUSPENDED-IDLE, SUSPENDED-SWITCHING, SUSPENDED-PASSTHROUGH.

Type: alphanumeric value set.

Range: IDLE, SWITCHING, PASSTHROUGH, SUSPENDED-IDLE, SUSPENDED-SWITCHING, SUSPENDED-PASSTHROUGH.

Default: SUSPENDED-IDLE.

18. swtr - Span Wait To Restore Time

The parameter specifies the wait to restore time for span switches used by the protection state machine operating in revertive mode.

The protection shall operate in revertive mode if the wait-to-restore time is in the range 0-12. The protection shall operate in non-revertive mode if the wait-to-restore time has the value 99 representing the infinite value.

Note: If *wtr* time is set to infinite, the switch request state shall be WTR until a higher request occurs.

Type: numeric string [minute].

Range: 0 - 12 in 1 minute increments and 99.

Default: 5.

19. wactunit - West Active Unit State

The parameter specifies whether the traffic associated with the west worker port is physically running over the west worker port (i.e. value WKG is used in that case) or over a protection port (i.e. value PROTN is used in that case). The protection port can be the west protection port in case of span switch or the east protection port in case of a loopback switch. The value of the parameter is derived from the internal handled active line state of the service port and the active line state of the protection ports.
wactunit = WKG: active line state of west worker port is active

wactunit = PROTN: active line state of west worker port is standby.

Type: alphanumeric value set.

Range: WKG, PROTN.

Default: WKG.

20. wapschst – Incoming West APS Channel Status

This parameter is derived from the incoming K2 [6..8] overhead byte of the west port.

It indicates the status as follows:

- IDLE: Idle
- BRIDGED: Bridged
- BANDS: Bridged & Switched
- XTRFC: Extra Traffic on protection channels
- NOTUSED: Not Used – Reserved for future use
- RDIL: RDI-L/MS-RDI (Remote Defect Indication – Line/Multiplex Section)
- AISL: AIS-L/MS-AIS (Alarm Indication Signal – Line/Multiplex Section)
- in case of *protnmode* = TOPEX (only R3.0 and R3.1): ACT command to ACT to complete the Switch.

Type: alphanumeric value set.

Range: IDLE, BRIDGED, BANDS, XTRFC, NOTUSED, ACT, RDIL, AISL.

Default: IDLE.

21. wapsdnid – Incoming West APS Destination Node Id

This parameter is derived from the incoming K1 [5..8] overhead byte of the west port. It specifies the node ID for which the K1 byte is destined. The value UNAVAILABLE is used in case of an pending SF condition.

Type: alphanumeric string.

Range: 0-15 or UNAVAILABLE.

Default: 0.

22. wapsprotn – Incoming West APS Protection Path

This parameter is derived from the incoming K2 overhead byte of the west port.

It indicates the protection path as follows:

- 0: short path code (S)
- 1: long path code (L)

The value UNAVAILABLE is used in case of an pending SF condition.

Type: alphanumeric value set.

Range: 0, 1, UNAVAILABLE.

Default: 0.

23. wapssnid – Incoming West APS Source Node Id

This parameter is derived from the incoming K2 [1..4] overhead byte of the west port. It specifies the node ID which sourced the K1 byte. The value UNAVAILABLE is used in case of an pending SF condition.

Type: alphanumeric string.

Range: 0-15 or UNAVAILABLE.

Default: 0.

24. wapssw – Incoming West APS Switch Priority

This parameter is derived from the incoming K1 [1..4] overhead byte of the west port.

It indicates the switch priority/bridge request code as follows:

- LPS: Lockout of Protection Span
- FSS: Forced Switch Span
- FSR: Forced Switch Ring
- SFS: Signal Fail Span
- SFR: Signal Fail Ring
- SDP: Signal Degrade Protection
- SDS: Signal Degrade Span
- SDR: Signal Degrade Ring
- MSS: Manual Switch Span
- MSR: Manual Switch Ring
- WTR: Wait to Restore
- EXERS: Exerciser Span
- EXERR: Exerciser Ring
- RRS: Reverse Request Span

- RRR: Reverse Request Ring
- NR: No Request

The value UNAVAILABLE is used in case of an pending SF condition.

The bridge request LPS and SFP (Signal Fail Protection) share a common code value. Therefore they cannot be distinguished. The value 'LPS' will be used in that context.

Type: alphanumeric value set.

Range: LPS, FSS, FSR, SFS, SFR, SDP, SDS, SDR, MSS, MSR, WTR, EXERS, EXERR, RRS, RRR, NR, UNAVAILABLE.

Default: NR.

25. westprotn - West Protection Port

This parameter specifies the port being a member in the role of the west protection port for a 4-fibre MS-SPRing/BLSR protection group.

Type: AID

Range: SPortAID

26. westwkg - West Worker Port

This parameter specifies the port being a member in the role of the west worker port for a 4-fibre MS-SPRing/BLSR protection group

Type: In case of an asymmetric ring: alphanumeric string; in all other cases: AID

Range: In case of an asymmetric ring: ASYMMETRIC; in all other cases: SPortAID.

27. wlprotnsw – West Last protection switch Attempt

This parameter specifies, whether the last switch request for the west side succeeded or not.

The values have the following semantics:

- SUCCESS: last request did succeed
- DENY: last request was denied due a validation rule
- FAILURE: last request could not be completed because far end node did not response with proper K-byte

Type: alphanumeric value set.

Range: SUCCESS, DENY, FAILURE.

Default: SUCCESS.

28. wswreq – West Switch Request State

This parameter specifies the active switch request state of the protection state machine for the east side. If the east side is an associated side of a switching node, the value is derived from the request currently associated with the concerned side, and accepted in the protocol as highest or coexisting priority. For all other cases, the value shall be 'NR'.

It have the following values:

- LPS: Lockout of Protection Span
- FSS: Forced Switch of Service to Protection - Span
- FSR: Forced Switch of Service to Protection – Ring
- SFS: Signal Fail – Span
- SFR: Signal Fail – Ring
- SDS: Signal Degrade – Span
- SDR: Signal Degrade – Ring
- SDP: Signal Degrade - Protection
- MSS: Manual Switch of Service to Protection - Span
- MSR: Manual Switch of Service to Protection – Ring
- WTR: Wait to Restore
- NR: No Request.

Type: alphanumeric value set.

Range LPS, FSS, FSR, SFS, SFR, SDS, SDR, SDP, MSS, MSR, WTR, NR The bridge request LPS and SFP (Signal Fail Protection) share a common code value. Therefore they cannot be distinguished. The value 'LPS' will be used in that context.

Default: NR.

29. wtr – Wait To Restore Time

This parameter specifies the wait to restore time for ring switches used by the protection state machine operating in revertive mode. The protection operates in revertive mode if the wait-to-restore time is in the range 0-12. The protection operates in non-revertive mode if the wait-to-restore time has the value 99 representing the infinite value.

Note: If wtr time is set to infinite, the switch request state shall be WTR until a higher request occurs.

Type: numeric string [minute].

Range: 0 – 12 in 1 minute increments and 99.

Default: 5.

Spec block parameters (path protection group)

1. dripathpn – SNCP-UPSR ASAP Pointer
This parameter specifies the value for the ASAP (alarm severity assignment profile) name of type SNCP-UPSR.
Type: alphanumeric string.
Range: 1-24 characters including character '-'.
Default: DEFAULT.
2. htmr – Hold-Off Time
This parameter specifies the hold-off time for automatic protection switching used by the protection state machine.
Type: numeric string [ms].
Range: 0 .. 99 msec in 1 msec steps and 100 .. 10000 msec in 100 msec steps.
3. ppgname – Path protection group Name
This parameter specifies the path protection group name. Storage and retrieval of the *ppgname* is case sensitive, but actual use of the *ppgname* to determine the corresponding protection group is case insensitive.
Type: text string.
Range: 0 to 24 characters.
Default: empty string
4. protn – Protection Tributary
This parameter specifies the protection input tributary AID being a member of the path protection group.
Type: AID.
Range: STS1NumAID.
5. prototype – Protection Type
This parameter specifies the type of the protection group. The value for the path protection group is PATHDRI.
Type: alphanumeric value set.
Range: PATHDRI.
Default: PATHDRI.

6. rme – Protection Reversion
 This parameter specifies, whether revertive or non-revertive mode is used as operation mode of the protection group.
 The value ENABLE is used if the protection operates in revertive mode.
 The value DISABLE is used if the protection operates in non-revertive mode.
 Type: alphanumeric value set.
 Range: ENABLE, DISABLE.
7. snctype – SNC Protection Type
 This parameter specifies the type of the path protection w.r.t. switch criteria used by the protection state machine.
 The value SNCI (Inherent) is used if server signal fail is used as switch criteria.
 The value SNCN (Non-Intrusive) is used if server signal fail and defects supervised by a non-intrusive path monitor are used as switch criteria
 The value NA is used if one of the tributary inputs is related to a port operating in SONET mode.
 Type: alphanumeric value set.
 Range: SNCI, SNCN, NA.
8. wkg – Worker Tributary
 This parameter specifies the worker input tributary AID being a member of the path protection group.
 Type: AID.
 Range: STS1NumAID.
9. wtr – Wait To Restore Time
 This parameter specifies the wait to restore time used by the protection state machine operating in revertive mode.
 Type: numeric string [minute].
 Range: 0 – 60.

CML Block parameters (path protection group)

The CML (Constituent Member List) block is only used in the context of the path protection group. One block will be returned for each constituent signal within the protection group.

1. actunit – Active Unit State
 This parameter specifies which input tributary is currently selected within the protection group as active input.
 The value WKG specifies that the worker tributary is active.
 The value PROTN specifies that the protection tributary is active.
 Type: alphanumeric value set.
 Range: WKG, PROTN.
 Default: WKG.
2. actunitaid – Active Unit State AID
 This parameter specifies the input tributary AID of the constituent signal which is currently selected within the protection group as active input for the dedicated constituent tributary output (see parameter outtribaid).
 Type: AID.
 Range: STS1NumAID.
 Default: AID of the worker tributary.
3. cst – Constituent Signal Type
 This parameter specifies the rate of the constituent signal within the path protection group.
 Type: alphanumeric value set.
 Range: STS1, STS3C, STS12C, STS48C, STS192C, VC3, VC4, VC44C, VC416C, VC464C.
 Default: The default value is derived from the tributary input signal rate list in case of fixed mode.
4. protnsiglvl – Protection Fault Status
 This parameter specifies the current fault status w.r.t. tributary as used by the protection state machine.
 The value SF (Signal Fail) is used if a defect defined as signal fail condition is currently present for the protection tributary.
 The value SD (Signal Degrade) is used if a defect defined as signal degrade condition is currently present for the protection tributary.
 The value NONE is used if no such defect is currently present.
 Type: alphanumeric value set.
 Range: SF, SD, NONE.
 Default: NONE.

5. swreq – Switch Request State
This parameter specifies the current switch request state of the protection state machines.
It have the following values:
 - LO: Lockout of Protection
 - FS: Forced Switch
 - MS: Manual Switch
 - SF: Signal Fail
 - SD: Signal Degrade
 - WTR: Wait to restore (only used if protection group is revertive)
 - NR: No Request.Type: alphanumeric value set.
Range: LO ,FS, MS, SF, SD , WTR, NR.
Default: NR.
6. wkgsiglvl – Worker Fault Status
This parameter specifies the current fault status w.r.t. tributary as used by the protection state machine.
The value SF (Signal Fail) is used if a defect defined as signal fail condition is currently present for the worker tributary.
The value SD (Signal Degrade) is used if a defect defined as signal degrade condition is currently present for the worker tributary.
The value NONE is used if no such defect is currently present.
Type: alphanumeric value set.
Range: SF, SD, NONE.
Default: NONE.

Example input/output

1+1 Equipment Protection Group

The following example retrieves 1+1 equipment protection group information:

```
RTRV-PROTN-GRP:LT-UNITE:1-1-estgrp:123456::EQPTSWFBR;  
LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
"1-1-estgrp:protype=EQPTSWFBR,wkg=1-1-#-#-xcw-  
cp,protn=1-1-#-#-xcp-cp,actunit=  
WKG,protnsiglvl=NONE,wkgsiglvl=NONE,swreq=NR"
```


;

Multiplex section/line protection group (1+1)

The following example retrieves 1+1 multiplex section/line protection group information:

```
RTRV-PROTN-GRP:LT-UNITE:1-1-o001:123456::1+1;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
    "1-1-o01:protype=1+1,wkg=1-1-#-#-13-1,  
    protn=1-1-#-#-14-1,wtr=5,apspn=DEFAULT,  
    dcclmsprotmd=DISABLE,dccsrprotmd=DISABLE,  
    protocol=1+1_UNI,rme= DISABLE,swreq=NR,  
    actunit=WKG,actunitfe=WKG,actunitne=WKG,aps=NR,  
    apsout=NR,pgrate=OC192,wkgsiglvl=NONE,protnsiglvl=NONE"  
;
```

The following example retrieves 1+1 optimized multiplex section/line protection group information:

```
RTRV-PROTN-GRP:LT-UNITE:1-1-o001:123456::1+1;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
    "1-1-o001:protype=1+1,wkg=1-1-#-#-13-1,protn=  
    1-1-#-#-14-1,wtr=5,apspn=DEFAULT,  
    dcclmsprotmd=DISABLE,dccsrprotmd=DISABLE,  
    protocol=OPTM,rme=DISABLE,swreq=NR,ssi=WKG,  
    actunit=WKG,actunitfe=NONE, actunitne=WKG,aps=NR,  
    apsout=NR,pgrate=STM64,wkgsiglvl=NONE,  
    protnsiglvl=NONE"  
;
```

Multiplex Section/Line protection group (1:1)

The following example retrieves 1:1 multiplex section/line protection group information:

```
RTRV-PROTN-GRP:LT-UNITE:1-1-n001:123456::1x1;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
    "1-1-n001:protype=1xNOPT,wkg=1-1-#-#-13-1,  
    protn=1-1-#-#-14-1,wtr=5,apspn=DEFAULT,  
    dcclmsprotmd=DISABLE,dccsrprotmd=DISABLE,  
    protocol=BIDIR,rme= ENABLE,swreq=NR,actunit=WKG,
```

```
actunitfe=WKG,actunitne=WKG,aps=NR,apsout=NR,  
pgrate=STM64,wkgsiglvl=NONE,protnsiglvl=NONE"  
;
```

2 fibre MS-SPRing/BLSR protection group

The following example retrieves 2F MS-SPRing/BLSR protection group information:

```
RTRV-PROTN-GRP:LT-UNITE:1-1-t001:123456::2F;  
LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
"1-1-t001:prototype=2F,east=1-1-#-#-13-1,  
west=1-1-#-#-14-1,rid="denver",wtr=5,  
blsrpn=DEFAULT,eswreq=NR,wsreq=NR,pgrate=0C192,  
eapschst=IDLE,eapsdnid=0, eapsprotn=0,eapssnid=0,  
eapssw=NR,elprotnsw=SUCCESS,ringndst=IDLE,  
wapschst=IDLE, wapsdnid=0,wapsprotn=0,wapssnid=0,  
wapssw=NR,wlprotnsw=SUCCESS"
```

4 fibre MS-SPRing/BLSR protection group

The following example retrieves 4F MS-SPRing/BLSR protection group information:

```
RTRV-PROTN-GRP:LT-UNITE:1-1-f001:123456::4F;  
LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
"1-1-f001:prototype=4F,eastwkg=1-1-#-#-13-1,  
eastprotn=1-1-#-#-15-1,westwkg=1-1-#-#-14-1,  
westwkg=1-1-#-#-16-1,rid="denver",  
protnmode=LOOPBACK,swtr=5,wtr=5, blsrpn=DEFAULT,  
eswreq=NR,eactunit=WKG,wsreq=NR,wactunit=WKG,  
pgrate=0C192,eapschst=IDLE,eapsdnid=0,eapsprotn=0,  
eapssnid=0,eapssw=NR,elprotnsw=SUCCESS,  
ringndst=IDLE,wapschst=IDLE, wapsdnid=0,wapsprotn=0,  
wapssnid=0,wapssw=NR,wlprotnsw=SUCCESS"  
;
```

Path protection group

Constituent Member List – Path protection group Examples: To help understand a PATHDRI examples that will be given below, it will be helpful to summarize some facts pertaining to DRIs. The first output line for a PATHDRI gives information about the DRI as a entity.

The following output line gives information about the constituent members. Even for a fixed rate path DRI, there will be two output lines. The constituent member that is described by the second line will have a rate equal to the DRI's rate.

A path DRI has two input legs, one referred to as the working leg and the other as the protection leg. It is possible for RTRV-PROTN-GRP to indicate some constituent members have been selected from the working leg while others have been selected from the protection leg. To determine whether or not all constituent members have been selected from the same leg, it is necessary to look at the **actunitaid** for each constituent member and determine if they are from the same leg.

Constituent Member List – Path protection group example for fixed mode :

```
RTRV-PROTN-GRP:LT-UNITE:1-1-#-#-10-1-25:123456::PATHDRI;  
  LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
  "1-1-#-#-10-1-25:prototype=PATHDRI,wkg=1-1-#-#-08-1-25,  
  protn=1-1-#-#-06-1-1,ppgname=\"group018\",htmr=100,  
  wtr=5,dripathp=path2,rme=DISABLE,snctype=NA"  
  "1-1-#-#-10-1-25,CML:cst=STS12C,swreq=NR,actunit=WKG,  
  actunitaid=1-1-#-#-08-1-25,wkgsiglvl=NONE,  
  protnsiglvl=NONE"  
;
```

Constituent Member List – Path protection group example for pipe mode: The examples shows an STS12 pipe with 10 constituent members.

Note: This is for a future release.

```
RTRV-PROTN-GRP:LT-UNITE:1-1-#-#-10-1-25:123456::PATHDRI;  
  LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
  "1-1-#-#-10-1-25: prototype=PATHDRI,htmr=100,rme=ENABLE,  
  dripathp=path2,wkg=1-1-#-#-08-1-25,  
  protn=1-1-#-#-06-1-1,snctype=NA, ..."  
  "1-1-#-#-10-1-25,CML:cst=STS1,swreq=NR,actunit=WKG,  
  actunitaid=1-1-#-#-08-1-25,wkgsiglvl=NONE,  
  protnsiglvl=NONE"  
  "1-1-#-#-10-1-26,CML:cst=STS1,swreq=NR,actunit=PROTN,
```

```
actunitaid=1-1-#-#-06-1-2,wkgsiglvl=SF,  
protnsiglvl=NONE"  
"1-1-#-#-10-1-27,CML:cst=STS1,swreq=NR,actunit=WKG,  
actunitaid=1-1-#-#-08-1-27,wkgsiglvl=NONE,  
protnsiglvl=NONE"  
"1-1-#-#-10-1-28,CML:cst=STS3C,swreq=SF,actunit=PROTN,  
actunitaid=1-1-#-#-06-1-4,wkgsiglvl=SF,protnsiglvl=NONE"  
"1-1-#-#-10-1-31,CML:cst=STS1,swreq=SD,actunit=PROTN,  
actunitaid=1-1-#-#-06-1-7,wkgsiglvl=SD,protnsiglvl=NONE"  
"1-1-#-#-10-1-32,CML:cst=STS1,swreq=NR,actunit=WKG,  
actunitaid=1-1-#-#-08-1-32,wkgsiglvl=NONE,  
protnsiglvl=NONE"  
"1-1-#-#-10-1-33,CML:cst=STS1,swreq=NR,actunit=WKG,  
actunitaid=1-1-#-#-08-1-33,wkgsiglvl=NONE,  
protnsiglvl=NONE"  
"1-1-#-#-10-1-34,CML:cst=STS1,swreq=NR,actunit=WKG,  
actunitaid=1-1-#-#-08-1-34,wkgsiglvl=NONE,  
protnsiglvl=NONE"  
"1-1-#-#-10-1-35,CML:cst=STS1,swreq=NR,actunit=PROTN,  
actunitaid=1-1-#-#-06-1-11,wkgsiglvl=NONE,  
protnsiglvl=NONE"  
"1-1-#-#-10-1-36,CML:cst=STS1,swreq=NR,actunit=WKG,  
actunitaid=1-1-#-#-08-1-36,wkgsiglvl=NONE,  
protnsiglvl=NONE"  
;
```

Error responses (general)

Validation rule: consistent *aid* and *protype*

If a range is specified for *aid* and *protype* is not consistent with that AID (for example, an AID of 1-1-fall and a protype value of 2F), then the following error response is returned.

Error code: IDNV - Input, Data Not Valid, inconsistent aid and protype

**Error responses (2-/4-fibre
MS-SPRing/BLSR
protection group)**

Validation rule: consistent *aid* and *rid*

If both an aid and an rid are specified as input parameters and they are inconsistent, then the following error response is returned

Error code: IDNV - Input, Data Not Valid, inconsistent aid and rid

Validation rule: *aid* range and *rid*

Validation rule: If a range is specified for aid and an rid is also specified as input parameters, then the following error response is returned:

Error code: IDNV - Input, Data Not Valid, no aid range in combination with rid

Related TL1 messages

- [“ENT-PROTN-GRP: Enter protection group” \(8-56\)](#)
- [“ED-PROTN-GRP: Edit protection group” \(8-80\)](#)
- [“DLT-PROTN-GRP: Delete protection group” \(8-97\)](#)
- [“OPR-PROTNSW: Operate protection switch” \(8-109\)](#)
- [“RLS-PROTNSW: Release protection switch” \(8-125\)](#)



ENT-PROTN-GRP: Enter protection group

Protection groups are used in protection switching. A protection group is made up of one or more working (service) entities and a protection entity. In addition to the entities that comprise the protection group, the protection group has parameters that affect the characteristics of the protection group, such as whether or not the protection switching is revertive.

The ENT-PROTN-GRP command allows one to create a user-provisioned association of optical interface ports which is used in protection. Protection groups also determine the set of tributaries from and to which the user can provision cross-connections. If a circuit pack contains more than one optical port, the user can provision the type of protection for each port independently of the other ports. Unprotected operation is supported for optical interface ports that are not in a protection group.

When creating a protection group, the following must be true (only a subset of the validation rules is described here – see corresponding error response section):

- the individual ports must not already be in another protection group.
- there are no existing cross-connections on the ports.
- each port in a protection group must be on a different circuit pack.

Some types of protection groups are created automatically by the system or with another stimuli. ENT-PROTN-GRP cannot be used to create the following types of protection groups:

- switching equipment protection (created as part of slot assignment or pack auto-creation)
- controller equipment protection (created as part of slot assignment or pack auto-creation)
- path protection group (created as part of ENT-CRS for path-protected cross-connection).

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M4
Priority: 1

Abortable: No

Input format Command Syntax: ENT-PROTN-GRP:*tid::ctag::prototype:spec_block*;

Input parameters The command ENT-PROTN-GRP is only for the EP155 equipment protection applicable.

Command parameters (EP155 equipment protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. prototype – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
The command ENT-PROTN-GRP is only applicable for EP155 equipment protection groups. Therefore the value range is restricted for this command to: - EQPTEP155.

Command parameters (multiplex section/line protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. prototype – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (2-/4-fibre MS-SPRing/BLSR protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. prototype – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (EP155 equipment protection group)

1. pgid – protection group Id
This parameter specifies the protection group Id as component of the protection group AID (AID field *TransProtGrpID*). For values less than 100, the leading zeros are optional. For example, either 007 or 7 is acceptable. If the user omits the leading zeros, the system will add them.
Type: numeric string
Range: 01 .. 99
2. protn – Protection Unit
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. wkg – Worker Unit
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (multiplex section/line protection group)

1. pgid – protection group Id
This parameter specifies the protection group Id as component of the protection group AID (AID field *TransProtGrpID*). For values less than 100, the leading zeros are optional. For example, either 007 or 7 is acceptable. If the user omits the leading zeros, the system will add them.
Type: numeric string
Range: 1 999
2. protn – Protection Unit
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

ENT-PROTN-GRP: Enter protection group

3. protocol – APS Protocol
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. rme – Protection Reversion
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. wkg – Worker Unit
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (2-fibre MS-SPRing/BLSR protection group)

1. ard – Automatic Ring Discovery
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. east – East Port
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. pgid – protection group Id
See definition in 1+1 ENT-PROTN-GRP.
4. rid – Ring Identification
Option: The parameter is a mandatory parameter.
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. west – West Port
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (4-fibre MS-SPRing/BLSR protection group)

1. ard – Automatic Ring Discovery
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. eastprotn – East Protection Port
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. eastwkg – East Worker Port
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

ENT-PROTN-GRP: Enter protection group

4. pgid – protection group Id
See definition in 1+1 ENT-PROTN-GRP.
5. protnmode – Protection Switch Mode
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
6. rid – Ring Identification
Option: The parameter is a mandatory parameter.
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
7. westprotn – West Protection Port
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
8. westwkg – West Worker Port
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Output format After receiving the ENT-PROTN-GRP command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

Output parameters See [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Output parameters section for a normal completion response.

Detailed behavior description

EP155 equipment protection group

The command establishes/creates a protection group of type as specified by means of parameter prototype. If prototype equals 'EQPTEP155', then one instance of EP155 protection group will be created. The creation of the protection group shall be reported by means of an ENT-PROTN-GRP notification. The initial protection state information is reported via protection switch notification.

Port impact due to EP155 protection group - port deletion

All ports related to the protection card of the protection group shall be deleted. This deletion shall be reported by means of: A set of

DLT-STM1E notifications if the protection port is an SDH port. The deletion of the objects leads to a clearance of pending alarms for these objects.

Port impact due to EP155 protection group - PM impact due to port deletion

PM monitoring for the deleted ports shall be stopped and current and history bins shall be deleted.

Tributary impact due to EP155 protection group - tributary deletion

All tributaries related to the protection port of the protection group shall be deleted. This deletion shall be reported by means of: A set of DLT-VC3 notifications if the protection port is an SDH port.

The number of tributaries to be deleted shall be derived from the port rate. The deletion of the objects leads to a clearance of pending alarms for these objects.

Tributary impact due to EP155 protection group - group notification

The notifications for the affected tributaries shall be a group notification. See definition in detailed behaviour description section of ENT-EQPT.

PM impact due to tributary deletion

PM monitoring for the deleted tributaries shall be stopped and current and history bins shall be deleted.

1+1, 2F protection group

The command establishes/creates a protection group of type as specified by means of parameter *prototype*. If prototype equals '1+1', then one instance of 1+1 MS/line protection group will be created. If prototype equals '2F', then one instance of type 2-fibre MS-SPRing/BLSR protection group will be created.

The creation of the protection group is reported by means of an ENT-PROTN-GRP notification. The initial protection state information is reported via protection switch notification.

4 F protection group

The command establishes/creates a protection group of type as specified by means of parameter *prototype*. If prototype equals 4F', then one instance of type 4 fibre MS-SPRing/BLSR protection group will be created.

ENT-PROTN-GRP: Enter protection group

If east side parameters (worker and protection) and west side (worker and protection) is specified in the command request, then a 2-sided MS-SPRing/BLSR protection group shall be created.

The creation of the protection group is reported by means of an ENT-PROTN-GRP notification. The initial protection state information is reported via protection switch notification.

Tributary impact due to MSP group - tributary deletion of MSP 1+1 protected connections

All tributaries related to the protection port of the protection group are deleted if a MSP 1+1 is entered:

- a set of DLT-VC3 notifications if the protection port is an SDH port
- a set of DLT-STS1 notifications if the protection port is an SONET port

The number of tributaries to be deleted are derived from the port rate.

The deletion of the objects leads to a clearance of pending alarms for these objects.

Tributary impact due to MSP group - group notification

The notifications for the affected tributaries shall be a group notification. See definition in detailed behaviour description section of ENT-EQPT.

Tributary impact due to MSP group - PM impact due to tributary deletion

PM monitoring for the deleted tributaries is stopped and current and history bins are deleted.

Example input/output

Equipment protection group

The following example creates equipment protection group information:

```
ENT-PROTN-GRP:LT-UNITE::123456::EQPTEP155:wkg=1-1-#-#-21-
CP protn=1-1-#-#-22-CP,pgid=01;
LT-UNITE 98-01-01 08:00:00
M 123456 COMPLD
;
```

ENT-PROTN-GRP: Enter protection group

Multiplex section/line protection group 1+1

The following example creates 1+1 multiplex section/line protection group information:

```
ENT-PROTN-GRP:LT-UNITE::123456::1+1:wkg=1-1-#-#-13-
    1,protn=1-1-#-#-14-1,
pgid=001;
    LT-UNITE 98-01-01 08:00:00
M 123456 COMPLD
;
```

2 fibre MS-SPRing/BLSR protection group

The following example shows the use of ENT-PROTN-GRP command to create a 2F protection group:

```
ENT-PROTN-GRP:LT-UNITE::123456::2F: east=1-1-#-#-10-
    1,west=1-1-#-#-08-1,pgid=003,rid="denver21";
    LT-UNITE 98-01-01 08:00:00
M 123456 COMPLD
;
```

4 fibre MS-SPRing/BLSR protection group

The following example shows the use of ENT-PROTN-GRP command to create a 4F protection group:

```
ENT-PROTN-GRP:LT-UNITE::123456::4F: eastwkg=1-1-#-#-10-1,
    eastprotn=1-1-#-#-11-1,westwkg=1-1-#-#-08-1,westprotn=1-
    1-#-#-09-1,pgid=003,rid="denver21";
    LT-UNITE 98-01-01 08:00:00
M 123456 COMPLD
;
```

Error responses (EP155 equipment protection group)

Validation rule: XC are assigned to both EP155 packs

The creation of the EP155 Equipment Protection group shall be rejected, if XC exists on both EP155 pack.

Error Code: SNVS - Status, Not in Valid State, XC are assigned to both EP155 packs.

Validation rule: XC are assigned to proposed protection EP155 pack

The creation of the EP155 Equipment Protection group shall be rejected, if XC exists on the EP155 pack, which was specified as protection pack by the command.

Error Code: SNVS - Status, Not in Valid State, XC are assigned to the protection EP155 pack

Validation rule: Transparent DCC connections

Check of transparent DCC connections involving the circuit pack to be proposed as protection pack.

Error code: SNVS - Status, Not in Valid State, transparent DCC connections are existing at protection pack

Validation rule: Not used as timing reference

Check of that none of the ports of the proposed protection circuit pack is used as timing reference

Error code: SNVS - Status, Not in Valid State, at least one port of the protection pack is used as timing reference

Validation rule: Not used for OW

Check of that no connection to a OW port of the proposed protection circuit pack exists.

Error code: SNVS - Status, Not in Valid State, connection to OW port of the protection pack exists

Validation rule: No XC loopbacks allowed

Check of XC loopbacks involving the circuit pack to be proposed as protection pack.

Error code: SNVS - Status, Not in Valid State, XC loopbacks still exist at the protection pack

Validation rule: No facility loopbacks allowed

Check of facility loopbacks involving the circuit pack to be proposed as protection pack.

Error code: SNVS - Status, Not in Valid State, facility loopbacks still exist at the protection pack

Validation rule: No test access session

Tributaries related to the circuit pack to be proposed as protection pack must not be used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, Tributary used in test access session

Validation rule: No port in *portClass* INNI

The creation of the EP155 Equipment Protection group shall be rejected, if at least one of the affected ports in in port class INNI.

Error Code: SNVS - Status, Not in Valid State, port class must not be INNI

Validation rule: No port in *portClass* EDGE

The creation of the EP155 Equipment Protection group shall be rejected, if at least one of the affected ports in in port class EDGE.

Error Code: SNVS - Status, Not in Valid State, port class must not be EDGE

Error responses (general)

Validation rule: port on different packs

Each port, being a member within the protection group, shall be located on different circuit packs.

Error code: SNVS - Status, Not in Valid State, ports must be on different circuit packs.

Validation rule: common interface type

Each port being a member within the protection group, shall have the same interface standard i.e. all ports shall either operate in SONET mode or in SDH mode.

Error code: SNVS - Status, Not in Valid State, ports have different interface types.

Validation rule: port is only in one group

Each port shall be not a member of an already provisioned protection group.

Error code: SNVS - Status, Not in Valid State, port is already used in another protection group.

ENT-PROTN-GRP: Enter protection group

Validation rule: supported port rate

The port rate shall be supported for the specified protection type

Error code: SNVS - Status, Not in Valid State, port rate not supported for this protection type.

Value Range: See value range definition for the attribute *pgrate* in the [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#) output section w.r.t. supported port rates for the different protection types.

Validation rule: value range

See value range definition for the attribute *pgrate* in the [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#) output section w.r.t. supported port rates for the different protection types.

Validation rule: common port rate

Each port being a member within the protection group, shall have the same port rate.

Error code: SNVS - Status, Not in Valid State, ports have different port rates.

Validation rule: no XC loopbacks on tribs

There exist no cross-connection loopbacks on tributaries related to the specified ports

Error code: SNVS - Status, Not in Valid State, tributary is used in cross-connection loopback

Validation rule: No test access session

Tributaries related to the specified ports must not be used in a test access session either as tributary under test or as test access tributary.

Error Code: SNVS - Status, Not in Valid State, Tributary used in test access session

Validation rule: XC pack is (pre-)provisioned

There shall be at least one XC pack pre-provisioned or provisioned.

Error code: SNVS - Status, Not in Valid State, XC Pack not provisioned

Validation rule: unique pgid

The specified *pgid* is not already used by an already existing protection group AID of the same protection type.

Error code: SDNC - Status, Data Not Consistent, pgid is already used by another protection group of the same type.

**Error responses (multiplex
section/line protection
group)**

Validation rule: no timing reference on protection port

Protection port shall not be assigned to a timing reference.

Error code: SNVS - Status, Not in Valid State, protection port is assigned to a line timing reference.

Validation rule: no out-of-service state on protection port

Protection port shall not have the value 'OUTOFSERVICE' for the attribute *servcond*.

Error code: SNVS - Status, Not in Valid State, protection port is out-of-service.

Validation rule: no timing reference on other port of protection unit

No other port of unit related to the protection port shall not be assigned to a timing reference.

Error code: SNVS - Status, Not in Valid State, other port of protection unit is assigned to a line timing reference.

Validation rule: No MSP 1:1 protection for bitrate STM-256

The system shall reject an ENT command for the architecture 1:1 (prototype = 1xNOPT), if the port bitrate is STM-256.

Error Code: IDNC - Input, Data, Not Consistent, This MSP protection type not supported for a port with the indicated rate

Validation rule: No MSP 1+1 optimized protection for SONET

The system shall reject an ENT command for the architecture 1+1 (prototype = 1+1) if it is combined with the operation parameter value 'optimized' (protocol =1+1_OPTM) and if the port mode is SONET.

Error code: IDNC - Input, Data Not Consistent, MSP 1+1_optimized not supported for SONET mode

Validation rule: No MSP 1:1 protection for SONET

The system shall reject an ENT command for the architecture 1:1 (protype = 1xNOPT), if the port mode is SONET.

Error Code: IDNC - Input, Data, Not Consistent, No MSP protection supported for SONET mode

Validation rule: MSP type 1:1 is never non-revertive

The system shall reject an ENT command for the architecture 1:1 (protype = 1xNOPT), if it is combined with the operation mode 'non-revertive' (rme=disabled).

Error Code: IDNC - Input, Data, Not Consistent, MSP Protection Type 1x1 is always revertive

Validation rule: MSP type 1+1 unidirectional and revertive is not supported

The system shall reject an ENT command for the architecture 1+1 (protype = 1+1), if it is combined with unidirectional operation (protocol = 1+1_UNI) and the operation mode 'revertive' (rme=enabled)

Error Code: IDNC - Input, Data, Not Consistent, revertive mode not supported for MSP Protection Type 1+1 unidirectional

Validation rule: only MSP 1+1 can be optimized

The system shall reject an ENT command for any architecture beside 1+1 (protype = 1+1) if it is combined with the operation parameter value 'optimized'.

Error Code: IDNC - Input, Data, Not Consistent, Optimized exists only with 1+1 Protection Type

Validation rule: No MSP 1+1 optimized for bitrate STM-256

The system shall reject an ENT command for the architecture 1+1 (protype = 1+1), if combined with the parameter protocol=OPTM and the port bitrate STM-256.

Error Code: IDNC - Input, Data, Not Consistent, This MSP protection type not supported for a port with the indicated rate

Validation rule: No XC on protection tribs

There shall exist no cross-connections on protection tributaries related to the specified ports.

ENT-PROTN-GRP: Enter protection group

Error Code: SNVS - Status, Not in Valid State, protection tributary is used in cross-connection

Validation rule: No MSP 1+1 bidirectional and non-revertive on other than STM-64

The system shall reject an ENT command for the architecture 1+1 (prototype = 1+1), if combined with the parameter protocol=1+1_BIDIR and a port bitrate other than STM-64.

Error Code: IDNC - Input, Data Not Consistent, This MSP protection type not supported for a port with the indicated rate

Validation rule: MSP type 1+1_optimized is never revertive

The system shall reject an ENT command for the architecture 1+1 (prototype = 1+1) if it is combined with the operation parameter value 'optimized' and with the operation mode 'revertive' (rme=enab.).

Error Code: IDNC - Input, Data, Not Consistent, MSP 1+1_Optimized is always non-revertive

Validation rule: supported *portClass*

Ports must not be of *portClass* INNI

Error Code: SNVS - Status, Not in Valid State, portClass must not be INNI

Validation rule: no EDGE protection port for 1+1 MSP

In case of a 1+1 MSP group the specified protection port shall not be of portClass EDGE

Error Code: SNVS - Status, Not in Valid State, portClass may not be EDGE

Validation rule: no EDGE protection port for 1:1 MSP

In case of a 1:1 MSP group the specified protection port shall not be of portClass EDGE.

Error Code: SNVS - Status, Not in Valid State, portClass may not be EDGE

**Error responses (2-fibre
MS-SPRing/BLSR
protection group)**

Validation rule: unique *rid*

The specified *rid* shall not be already used by an already existing protection group of type 2F, 4F.

Error code: IDNV - Input, Data Not Valid, rid is already used by another protection group

Validation rule: dcc enabled

If the parameter ard (automatic ring discovery) is not DISABLED, for each side at least one dcc channel (section/dcc-r or line/dcc-m) shall be enabled.

Error code: SNVS - Status, Not in Valid State, no dcc channel enabled

Validation rule: trib bandwidth is not greater as service bandwidth

The service bandwidth shall be greater as the provisioned tributary rates (input or output) for all ports; i.e. VC-4-16c/STS-48c shall not be provisioned as tributary rate for STM-16/OC-48 ports or VC-4-64c/STS-192c shall not be provisioned as tributary rate for STM-64/OC-192 ports

Error code: SNVS - Status, Not in Valid State, tributary rate not supported for protection with this port rate.

Validation rule: supported *portClass*

Ports must not be of *portClass* INNI

Error Code: SNVS - Status, Not in Valid State, portClass must not be INNI

Validation rule: no XC on tribs

There shall exist no cross-connections on tributaries related to the specified ports.

Error Code: SNVS - Status, Not in Valid State, tributary is used in cross-connection

**Error responses (4-fibre
MS-SPRing/BLSR
protection group)**

Validation rule: unique *rid*

The specified *rid* shall not be already used by an already existing protection group of type 2F, 4F.

Error code: IDNV - Input, Data Not Valid, rid is already used by another protection group

Validation rule: dcc enabled

If the parameter *ard* (automatic ring discovery) is ENABLED, for each worker port at least one dcc channel (section/dcc-r or line/dcc-m) shall be enabled.

Error code: SNVS - Status, Not in Valid State, no dcc channel enabled

Validation rule: no timing reference on protection port

Protection port shall not be assigned to a timing reference.

Error code: SNVS - Status, Not in Valid State, protection port is assigned to a line timing reference.

Validation rule: no out-of-service state on protection port

Protection port shall not have the value 'OUTOFSERVICE' for the attribute *servcond*.

Error code: SNVS - Status, Not in Valid State, protection port is out-of-service.

Validation rule: no timing reference on other port of protection unit

No other port of unit related to the protection port shall not be assigned to a timing reference.

Error code: SNVS - Status, Not in Valid State, other port of protection unit is assigned to a line timing reference.

Validation rule: SDH ports for TOP

If *protnmode* equals 'SHORTENED' (TOP), then all specified member ports shall have the interface standard SDH.

Error code: SNVS - Status, Not in Valid State, SONET port not allowed for TOP

Validation rule: complete side information

The parameters *eastwkg*, *eastprotn*, *westwkg*, *westprotn* must be present in the request.

Error code: IDNV - Input, Data Not Valid, side information is not complete

Validation rule: supported *portClass*

Ports must not be of *portClass* INNI

Error Code: SNVS - Status, Not in Valid State, *portClass* must not be INNI

Protection ports must not be of *portClass* EDGE

Error Code: SNVS - Status, Not in Valid State, *portClass* of protection port must not be EDGE

Validation rule: supported *portClass* for TOP

If *protnmode* equals SHORTENED or TOPEX (both are TOP), then none of the specified member ports shall have the *portClass* EDGE.

Error code: SNVS - Status, Not in Valid State, *portClass* must not be EDGE for TOP

Validation rule: asymmetric ring only with manual ring provisioning

An asymmetric ring only is allowed in case of manually providing the ring map information by setting the parameter *ard* to DISABLE.

Error Code: SNVS - Status, Not in Valid State, automatic ring discovery enabled

Validation rule: no XC on tribs

There shall exist no cross-connections on tributaries related to the specified ports.

Error Code: SNVS - Status, Not in Valid State, tributary is used in cross-connection

Related TL1 messages

- [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#)
- [“ENT-CRS: Enter cross-connection” \(7-25\)](#)
- [“ED-PROTN-GRP: Edit protection group” \(8-80\)](#)
- [“DLT-PROTN-GRP: Delete protection group” \(8-97\)](#)

ENT-PROTN-GRP: Enter protection group

- [“OPR-PROTNSW: Operate protection switch” \(8-109\)](#)
- [“RLS-PROTNSW: Release protection switch” \(8-125\)](#)
- [“ED-MAP-RING: Edit map ring” \(8-165\)](#)
- [“SET-MAP-RING: Set map ring” \(8-168\).](#)



ENT-PROTN-GRP notification

Output format The ENT-PROTN-GRP notification uses the general format of a REPT DBCHG (Report Database Change) notification.

The following syntax is used for 1+1 equipment, 1+1/1:1 multiplex section/line, 2-/4-fibre MS-SPRing/BLSR, path protection group.

Syntax: ENT-PROTN-GRP:*aid:prototype:spec_block*;

Output parameters

Command parameters (1+1 Equipment protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. prototype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (multiplex section/line protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. prototype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (2-fibre MS-SPRing/BLSR protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. prototype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (4-fibre MS-SPRing/BLSR protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. prototype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (Path protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. prototype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (1+1 Equipment protection group)

1. protn – Protection Unit
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. wkg – Worker Unit
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (multiplex section/line protection group)

1. apspn – MSP-APS ASAP Pointer
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. dclmsprotmd – DCC Line/MS Protection Mode
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. dccsrprotmd – DCC Sect/RS Protection Mode
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. protn – Protection Unit
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. protocol – APS Protocol
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

6. rme – Protection Reversion
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
7. wkg – Worker Unit
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
8. wtr – Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (2-fibre MS-SPRing/BLSR protection group)

1. ard – Automatic Ring Discovery
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. blsrpn – MSSPRING-BLSR ASAP Pointer
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. east – East Port
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. rid – Ring Identification
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. west – West Port
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
6. wtr – Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (4-fibre MS-SPRing/BLSR protection group)

1. ard – Automatic Ring Discovery
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. blsrpn – MSSPRING-BLSR ASAP Pointer
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

3. eastprotn – East Protection Port
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. eastwkg – East Worker Port
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. protnmode – Protection Switch Mode
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
6. rid – Ring Identification
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
7. swtr – Span Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
8. westprotn – West Protection Port
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
9. westwkg – West Worker Port
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
10. wtr – Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (Path protection group)

1. dripathpn – SNCP-UPSR ASAP Pointer
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. htmr – Hold-Off Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. ppgname – Path protection group Name
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. protn – Protection Tributary
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

5. rme – Protection Reversion
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
6. snctype – SNC Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
7. wkg – Worker Tributary
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
8. wtr – Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Example output

1+1 Equipment Protection Group

The following example reports the creation of an 1+1 equipment protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
  "TIME=15-00-00,DATE=00-11-03:ENT-PROTN-GRP:
  1-1-estgrp:EQPTSWFBR:wkg=1-1-#-#-xcw-cp,
  protn=1-1-#-#-xcp-cp"
;
```

Multiplex section/line protection group 1+1

The following example reports the creation of an 1+1 multiplex section/line protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
  "TIME=15-00-00,DATE=00-11-03:ENT-PROTN-GRP:
  1-1-o01:1+1:wkg=1-1-#-#-13-1,protn=1-1-#-#-14-1,
  wtr=5,apspn=DEFAULT, dcclmsprotmd=DISABLE,
  dccsrsprotmd=DISABLE,protocol=1+1_UNI,rme=DISABLE"
;
```

2 fibre MS-SPRing/BLSR protection group

The following example reports the creation of a 2 fibre MS-SPRing/BLSR protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
"TIME=15-00-00,DATE=00-11-03:ENT-PROTN-GRP:
1-1-t001:2F: east=1-1-#-#-13-1,west=1-1-#-#-14-1,
rid=\"denver\",wtr=5,blsrpn=DEFAULT"
;
```

4 fibre MS-SPRing/BLSR protection group

The following example reports the creation of a 4 fibre MS-SPRing/BLSR protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
"TIME=15-00-00,DATE=00-11-03:ENT-PROTN-GRP:
1-1-f001:4F: eastwkg=1-1-#-#-13-1,
eastprotn=1-1-#-#-15-1,westwkg=1-1-#-#-14-1,
westwkg=1-1-#-#-16-1,rid=\"denver\",
protnmode=LOOPBACK,swtr=5,wtr=5,blsrpn=DEFAULT"
;
```

Path protection group

The following example reports the creation of a path protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
"TIME=15-00-00,DATE=00-11-03:ENT-PROTN-GRP:
1-1-#-#-10-1-25:PATHDRI:wkg=1-1-#-#-08-1-25,
protn=1-1-#-#-06-1-1,ppgname=\"group018\",
htmr=100,wtr=5,dripathp=path2,rme=DISABLE,
snctype=NA"
;
```



ED-PROTN-GRP: Edit protection group

The ED-PROTN-GRP command allows one to modify parameter/attributes related to an already existing protection group instance of any protection group type.

Note: Manual protection switching is done by means of commands OPR-PROTNSW, RLS-PROTNSW.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M4
Priority: 1
Abortable: No

Input format

Multiplex section/line protection group

Command Syntax: ED-PROTN-GRP:*tid:aid:ctag::prototype:spec_block;*

2-/4-fibre MS-SPRing/BLSR protection group

Command Syntax: ED-PROTN-GRP:*tid:[aid]:ctag::prototype,[rid]:spec_block;*

Path protection group

Command Syntax: ED-PROTN-GRP:*tid:[aid]:ctag::prototype,[ppgname]:spec_block;*

Input parameters

Command parameters (multiplex section/line protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
This parameter specifies the aid of a 1+1 multiplex section/line protection group or the aid of a 1:1 multiplex section/line protection group (only R3.0 and later) or an port aid being a member of the group.
Type: AID
Range: OnePlusOne_ProtGrpAID (not ranged) or NByOne_ProtGrpAID (not ranged) or SPortAID (not ranged).

3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. protype – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#). The command parameter protype is used for additional identification beside the aid, it is not usable to change the value of *protype*.

Command parameters (2-/4-fibre MS-SPRing/BLSR protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
This parameter specifies the aid of a MS-SPRing/BLSR protection group or an port aid being a member of the group.
Option: If *rid* is specified, then *aid* can be omitted.
Type: AID.
Range: TwoFibre_ProtGrpAID (not ranged) or FourFibre_ProtGrpAID (not ranged) or SPortAID (not ranged).
3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. protype – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. rid – Ring Identification
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
Option: If *aid* is specified, then *rid* can be omitted.

Command parameters (path protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
This parameter specifies a path protection group aid or an input tributary aid being a member of the group in combination with *ppgname*.
Option: If *ppgname* is specified, then *aid* can be omitted or used as an input tributary aid.
Type: AID.
Range: Path_ProtGrpAID or STS1NumAID or VCGNumAID.
3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. prototype – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. ppgname – Path protection group Name
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
Option: If the specified *aid* is a path protection group aid (which is equal to the output tributary aid), then *ppgname* can be omitted. If the specified aid is an input tributary aid, then *ppgname* must be specified to be unique. If an input value is specified for *ppgname* and none is specified for *aid*, then command operates on all protection groups that have the specified path protection group name. If input values are specified for *aid* and *ppgname* then the command operates on all protection groups that have the specified *aid*, *ppgname* pair. The command will complete successfully if there is no protection group described by *aid*, *ppgname*.

Spec block parameters (multiplex section/line protection group)

1. apspn – MSP-APS ASAP Pointer
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. dclmsprotmd – DCC Line/MS Protection Mode
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

3. dccsrprotmd – DCC Sect/RS Protection Mode
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. wtr – Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (2-fibre MS-SPRing/BLSR protection group)

1. ard – Automatic Ring Discovery
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. blsrpn – MSSPRING-BLSR ASAP Pointer
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. newrid – New Ring Identification
See definition of parameter *rid* [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. wtr – Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (4-fibre MS-SPRing/BLSR protection group)

1. ard – Automatic Ring Discovery
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. blsrpn – MSSPRING-BLSR ASAP Pointer
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. newrid – New Ring Identification
See definition of parameter *rid* [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. protnmde – Protection Switch Mode
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

5. swtr – Span Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
6. wtr – Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (path protection group)

1. dripathpn – SNCP-UPSR ASAP Pointer
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. htmr – Hold-Off Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. newppgname – New Path protection group Name
See definition of parameter *ppgname* [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. rme – Protection Reversion
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. snctype – SNC Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
6. wtr – Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Output format After receiving the ED-PROTN-GRP command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

Output parameters See [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Output parameters section for a normal completion response.

Detailed behavior description The command modifies attributes for the existing protection group instances identified by *aid*, *rid*, *ppgname* of type as specified by

means of parameter *prototype*. The corresponding attribute of the protection group instance is updated with the value as specified in command block.

The command parameter *newrid* causes an update of the attribute *rid*. The command parameter *newppgname* causes an update of the attribute *ppgname*.

The update of the attributes is reported by means of an ED-PROTN-GRP notification.

Multiplex section/Line protection group

Beside changing the specified attribute value, the modification shall also have the side effects as described by means of the following scenario:

1. Change of Protection Mode. An update for the attributes protocol, *rme* may cause an update of attribute *swreq*. The update is reported by means of a protection switch notification.

DCC protection as part of 1+1 multiplex section/line protection

If DCC protection is enabled for section/rs dcc channels (value of *dccrsprotmd* equals ENABLE), then following updates for DCC channels shall be done.

1. The protection mode (attribute *dccprottp*) of the dcc channel of type 'SECTION' associated with the worker port shall be set to '1+1' protected. This update shall be reported by means of a ED-FECOM notification for the changed attribute.

If DCC protection is disabled for section/rs dcc channels (value of *dccrsprotmd* equals DISABLE), then following updates for DCC channels shall be done.

1. The protection mode (attribute *dccprottp*) of the dcc channel of type 'SECTION' associated with the worker port shall be set to '0X1' unprotected. This update shall be reported by means of a ED-FECOM notification for the changed attribute.

If DCC protection is enabled for line/ms dcc channels (value of *dclmsprotmd* equals ENABLE), then following updates for DCC channels shall be done.

1. The protection mode (attribute *dccprottp*) of the dcc channel of type 'LINE' associated with the worker port shall be set to '1+1' protected. This update shall be reported by means of a ED-FECOM notification for the changed attribute.

If DCC protection is disabled for line/ms dcc channels (value of `dcclmsprotmd` equals `DISABLE`), then following update for DCC channels shall be done.

1. The protection mode (attribute `dccprottp`) of the dcc channel of type 'LINE' associated with the worker port shall be set to '0X1' unprotected. This update shall be reported by means of a ED-FECOM notification for the changed attribute.

Path protection group

The command modifies certain attributes for existing protection group instances identified by *aid*, *ppgname* of type 'PATHDRI'.

Beside changing the specified attribute value, the modification shall also have the side effects as described by means of the following scenario:

1. Change of Protection Type: An update for the attribute *snctype* causes an update of the same attribute for all protection group instances sharing one or both inputs of the protection group which was identified by means of the command input. The additional modification for these protection group instances is reported by means of additional ED-PROTN-GRP notifications.

Example input/output

Multiplex section/line protection group 1+1

The following example assigns a wait-to-restore time of 8 minutes to the protection group named 1-1-o011 which is of type 1+1:

```
ED-PROTN-GRP:LT-UNITE:1-1-o011:123456::1+1:wtr=8;
    LT-UNITE 98-01-01 08:00:00
M 123456 COMPLD
;
```

2 fibre MS-SPRing/BLSR protection group

The following example assigns a wait-to-restore time of 10 minutes to the two fiber protection group that is identified by ring id *denver21*. It also renames the ring id to *dallas3*:

```
ED-PROTN-GRP:LT-UNITE::123456::2F,"denver21":
newrid="dallas3",wtr=10;
    LT-UNITE 98-01-01 08:00:00
M 123456 COMPLD
;
```

4 fibre MS-SPRing/BLSR protection group

The following example assigns a wait-to-restore time of 10 minutes to the four fiber protection group that is identified by ring id *denver21*.

It also renames the ring id to *dallas3*:

```
ED-PROTN-GRP:LT-UNITE::123456::4F,"denver21":  
newrid="dallas3",wtr=10;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

Path protection group

The following example assigns a holdoff time of 100 msec to the path protection group that is identified by path protection group name *denver21*. It also renames the path protection group name to *dallas3*:

```
ED-PROTN-GRP:LT-UNITE::123456::PATHDRI,, "denver21":  
newppgname="dallas3",htmr=10;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses (Multiplex section/Line protection group)

Validation rule: dcc protection side is enabled

The dcc channel (section/line) of the protection side shall be disabled if corresponding dcc protection is enabled (section/line).

Error Code: SNVS - Status, Not in Valid State, protection
dcc channel is enabled

Validation rule: dcc protection: working side is disabled

The dcc channel (section/line) of the working side shall be enabled if corresponding dcc protection is enabled (section/line).

Error Code: SNVS - Status, Not in Valid State, working dcc
channel is disabled

Validation rule: dcc protection: protection side is active

The system shall reject the disabling of the dcc protection, if the protection side of dcc protection is the active one.

Error Code: SNVS - Status, Not in Valid State, dcc
protection side carries traffic

Validation rule: MSP type 1:1 is never non-revertive

The system shall reject an ED command for the architecture 1:1 (prototype = 1xNOPT), if it is combined with the operation mode 'non-revertive' (rme=disabled).

Error Code: IDNC - Input, Data, Not Consistent, MSP
Protection Type 1x1 is always revertive

Validation rule: MSP type 1+1 unidirectional and revertive is not supported

The system shall reject an ED command for the architecture 1+1 (prototype = 1+1), if it is combined with unidirectional operation (protocol = 1+1_UNI) and the operation mode 'revertive' (rme=enabled)

Error Code: IDNC - Input, Data, Not Consistent, revertive
mode not supported for MSP Protection Type 1+1
unidirectional

Validation rule: No MSP 1:1 protection for SONET

The system shall reject an ED command for the architecture 1:1 (prototype = 1xNOPT), if the port mode is SONET.

Error Code: IDNC - Input, Data, Not Consistent, No MSP
protection supported for SONET mode

Validation rule: no change between MSP type 1+1_optimized and other MSP types

The system shall reject an ED command to change the operation parameter from any valid value to the value 'optimized'. The system shall reject an ED command to change the operation parameter from the value 'optimized' to any other value.

Error Code: SNVS - Status, Not in Valid State, This Change
of Protection Architecture not allowed, deprovision first

Validation rule: MSP type 1+1_optimized is never revertive

The system shall reject an ED command to change the operation mode parameter rme if the current operation mode is 'optimized'.

Error Code: IDNC - Input, Data, Not Consistent, MSP
1+1_Optimized is always non-revertive

Validation rule: MSP type 1:1 bidirectional is never revertive

The system shall reject an ED command to change the operation mode parameter *rme* if the current operation mode is '1+1_BIDIR'.

Error Code: IDNC - Input, Data Not Consistent, MSP 1+1_BIDIR is always non-revertive

Validation rule: Transparent DCC for DCC Line/MS protection mode

The LINE DCC channel of protecting port shall not be used in a transparent DCC cross-connection if DCC Line/MS Protection Mode - *dcclmsprotmd* - will be set to ENABLED.

Error Code: SNVS - Status, Not in Valid State, DCC channel used in transparent DCC cross connection

Validation rule: Transparent DCC for DCC Sect/RS protection mode

The SECTION DCC channel of protecting port shall not be used in a transparent DCC cross-connection if DCC Sect/RS Protection Mode - *dcslrsprotmd* - will be set to ENABLED.

Error Code: SNVS - Status, Not in Valid State, DCC channel used in transparent DCC cross connection

**Error responses (2-fibre
MS-SPRing/BLSR
protection group)**

Validation rule: unique rid

The specified *newrid* is not already used by an already existing protection group of type 2F, 4F.

Error code: IDNV - Input, Data Not Valid, rid is already used by another protection group

Validation rule: consistent aid and rid

If both an *aid* and an *rid* are specified as input parameters and they are inconsistent, then the following error response is returned

Error code: IDNV - Input, Data Not Valid, inconsistent aid and rid

**Error responses (4-fibre
MS-SPRing/BLSR
protection group)**

Validation rule: unique *rid*

The specified *newrid* is not already used by an already existing protection group of type 2F, 4F.

Error code: IDNV - Input, Data Not Valid, rid is already used by another protection group

Validation rule: consistent *aid* and *rid*

If both an aid and an rid are specified as input parameters and they are inconsistent, then the following error response is returned

Error code: IDNV - Input, Data Not Valid, inconsistent aid and rid

Validation rule: no multiple added XCs for TOP

If *protnmode* is changed to SHORTENED and there exists a path protection group having one trib of worker port as output (so-called multiple added XC) then the following error response is returned.

Error code: SNVS - Status, Not in Valid State, multiple added XCs for TOP

Validation rule: SDH ports for TOP

If *protnmode* is changed to SHORTENED then all member ports shall have the interface standard SDH.

Error code: SNVS - Status, Not in Valid State, SONET port not allowed for TOP

Validation rule: Idle ring node for protocol conversion

If *protnmode* is changed then ringndst shall be 'IDLE' or 'SUSPENDED-IDLE'.

Error code: SNVS - Status, Not in Valid State, node not in idle state.

Validation rule: supported *portClass* for TOP

If *protnmode* equals SHORTENED or TOPEX (both are TOP), then none of the specified member ports shall have the *portClass* EDGE.

Error code: SNVS - Status, Not in Valid State, portClass must not be EDGE for TOP

Validation rule: Asymmetric ring only with manual ring provisioning

An asymmetric ring only is allowed in case of manually providing the ring map information by setting the parameter `ard` to `DISABLE`.

Error Code: SNVS - Status, Not in Valid State, automatic ring discovery enabled

Error responses (path protection group)

Validation rule: Maximum number of ppgnames exceeded

The new *ppgname* shall not exceed the maximum number of 768 ppgnames (i.e. is already in use for 768 other path protection groups).

Error code: SSRE - Status, System Resources Exceeded, limit of ppgnames exceeded

Related TL1 messages

- [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#)
- [“ENT-PROTN-GRP: Enter protection group” \(8-56\)](#)
- [“DLT-PROTN-GRP: Delete protection group” \(8-97\)](#)
- [“OPR-PROTNSW: Operate protection switch” \(8-109\)](#)
- [“RLS-PROTNSW: Release protection switch” \(8-125\)](#)



ED-PROTN-GRP notification

Output format The ED-PROTN-GRP notification shall use the general format of a REPT DBCHG (Report Database Change) notification. The following syntax is used for 1+1 multiplex section/line, 2-/4-fibre MS-SPRing/BLSR, path protection group.

Syntax: ED-PROTN-GRP:*aid:prototype:spec_block*;

Output parameters

Command parameters (multiplex section/line protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. prototype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (2-fibre MS-SPRing/BLSR protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. prototype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (4-fibre MS-SPRing/BLSR protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. prototype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (Path protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. protype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (multiplex section/line protection group)

1. apspn – MSP-APS ASAP Pointer
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. dclmsprotmd – DCC Line/MS Protection Mode
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. dccsrprotmd – DCC Sect/RS Protection Mode
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. protocol – APS Protocol
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. rme – Protection Reversion
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
6. wtr – Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (2-fibre MS-SPRing/BLSR protection group)

1. ard – Automatic Ring Discovery
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. blsrpn – MSSPRING-BLSR ASAP Pointer
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

3. newrid – New Ring Identification
See definition of *rid* [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. wtr – Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (4-fibre MS-SPRing/BLSR protection group)

1. ard – Automatic Ring Discovery
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. blsrpn – MSSPRING-BLSR ASAP Pointer
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. newrid – New Ring Identification
See definition of *rid* [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. protmode – Protection Switch Mode
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. swtr – Span Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
6. wtr – Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Spec block parameters (Path protection group)

1. dripathpn – SNCP-UPSR ASAP Pointer
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. htmr – Hold-Off Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. newppgname – New Path Protection Group Name
See definition of *ppgname* [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

4. protn - Protection Tributary
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. rme – Protection Reversion
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
6. snctype – SNC Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
7. wkg – Worker Tributary
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
8. wtr – Wait To Restore Time
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Example output

Multiplex section/line protection group (1+1)

The following example reports the modification of wait-to restore timer for an 1+1 multiplex section/line protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
  "TIME=15-00-00,DATE=00-11-03:ED-PROTN-GRP:1-1-
  o001:1+1:wtr=8"
;
```

2 fibre MS-SPRing/BLSR protection group

The following example reports the modification of wait-to-restore time and ring id for a two fiber protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
  "TIME=15-00-00,DATE=00-11-03:ED-PROTN-GRP:1-1-
  t001:2F:newrid=\"dallas3\",wtr=10"
;
```

4 fibre MS-SPRing/BLSR protection group

The following example reports the modification of wait-to-restore time and ring id for a four fiber protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
  "TIME=15-00-00,DATE=00-11-03:ED-PROTN-GRP:1-1-
  f001:4F:newrid=\"dallas3\",wtr=10"
;
```

Path protection group

The following example reports the modification of hold off time and path protection group name for a path protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
  "TIME=15-00-00,DATE=00-11-03:ED-PROTN-GRP:1-1-#-#-10-1-
  25:PATHDRI:newppgname=\"dallas3\",htmr=10"
;
```



DLT-PROTN-GRP: Delete protection group

The DLT-PROTN-GRP command allows to delete protection groups which were previously created via ENT-PROTN-GRP.

Some types of protection groups are deleted in the context with another stimuli. DLT-PROTN-GRP cannot be used to delete the following types of protection groups:

- switching and controller equipment protection group (deleted as part of delete circuit pack)
- path protection group (deleted as part of DLT-CRS for path-protected XC).

Properties

Login Privilege: User Privilege Code (UCFC/UCAL): M4

Priority: 1

Abortable: No

Input format

EP155 equipment protection group

The command DLT-PROTN-GRP is only for the EP155 equipment protection applicable.

Command Syntax: DLT-PROTN-GRP:*tid:aid:ctag::prototype*;

Multiplex section/line protection group

Command Syntax: DLT-PROTN-GRP:*tid:aid:ctag::prototype*;

2-/4-fibre MS-SPRing/BLSR protection group

Command Syntax: DLT-PROTN-GRP:*tid:[aid]:ctag::prototype, [rid]*;

Input parameters

Command parameters (EP155 equipment protection group)

1. *tid* – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *aid* – Access Identifier
This parameter specifies the aid of the equipment protection group.
Type: AID
Range: EP155ProtGrpAID

3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. prototype – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (multiplex section/line protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
This parameter specifies the aid of a 1+1 multiplex section/line protection group or the aid of a 1:1 multiplex section/line protection group (only R3.0 and later) or an port aid being a member of the group.
Type: AID
Range: OnePlusOne_ProtGrpAID (not ranged) or NByOne_ProtGrpAID (not ranged) or SPortAID (not ranged)
3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. prototype – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (2-/4-fibre MS-SPRing/BLSR protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
This parameter specifies the aid of a MS-SPRing/BLSR protection group or an port aid being a member of the group.
Option: If *rid* is specified, then *aid* can be omitted.
Type: AID
Range: TwoFibre_ProtGrpAID (not ranged) or FourFibre_ProtGrpAID (not ranged) or SPortAID (not ranged).
3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).

4. *prototype* – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. *rid* – Ring Identification
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
Option: If *aid* is specified, then *rid* can be omitted.

Output format After receiving the DLT-PROTN-GRP command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

Output parameters See [“RTRV-HDR: Retrieve header” \(5-8\)](#) command OUTPUT PARAMETERS section for a normal completion response.

Detailed behavior description

1+1, 2F protection group

The command removes/deletes the protection group of type as specified by means of parameter *prototype*. If *prototype* equals '1+1', then one instance of 1+1 MS/line protection group is deleted. If *prototype* equals '2F', then one instance of type 2-fibre MS-SPRing/BLSR protection group will be deleted.

The deletion of the protection group is reported by means of an DLT-PROTN-GRP notification.

4F protection group

The command removes/deletes the protection group of type as specified by means of parameter *prototype*. If *prototype* equals 4F', then one instance of type 4 fibre MS-SPRing/BLSR protection group shall be deleted.

The deletion of the protection group is reported by means of an DLT-PROTN-GRP notification.

Multiplex section/Line protection group - DCC protection as part of 1+1 multiplex section/line protection

If DCC protection is enabled for section/rs dcc channels (value of dccsrsprotmd equals ENABLE), then following updates for DCC channels shall be done.

1. The dcc channel of type 'SECTION' associated with the protection port shall be created. This update shall be reported by means of a ENT-FECOM notification.
2. The protection mode (attribute dccprottp) of the dcc channel of type 'SECTION' associated with the worker port shall be set to '0X1' unprotected. This update shall be reported by means of a ENT-FECOM notification for the changed attribute.

If DCC protection is enabled for line/ms dcc channels (value of dclmsprotmd equals ENABLE), then following updates for DCC channels shall be done.

1. The dcc channel of type 'LINE' associated with the protection port shall be created. This update shall be reported by means of a ENT-FECOM notification.
2. The protection mode (attribute dccprottp) of the dcc channel of type 'LINE' associated with the worker port shall be set to '0X1' unprotected. This update shall be reported by means of a ENT-FECOM notification for the changed attribute.

Multiplex section/Line protection group - tributary impact due to 1+1 protection group - port redefinition due to 1+1 MSP protection group deletion

Tributaries signal rates of the protection port shall be set to default values (parameters inputsig, unequipsig), because they had been deleted at the enter time of the MSP 1+1 protection group.

As a side effect, the value of parameter crstat may also change if the port is operating in fixed mode

The update of the mentioned parameters shall be reported by means of:

- a ED-STM<n> notification if the protection port is an SDH port
- a ED-OC<n> notification if the protection port is an SONET port

The value for <n> is derived from the port rate.

Multiplex section/Line protection group - tributary impact due to 1+1 protection group - tributary creation due to 1+1 MSP protection group deletion

Tributaries related to the protection port of the protection group shall be recreated with default values, because they had been deleted at the enter time of the MSP 1+1 protection group.

This creation shall be reported by means of:

- a set of ENT-VC3 notifications if the protection port is an SDH port
- a set of ENT-STS1 notifications if the protection port is an SONET port

The number of tributaries to be created shall be derived from the port rate.

The notifications for the affected tributaries shall be a group notification. See definition in detailed behaviour description section of ENT-EQPT.

2/4 fibre MS-SPRING/BLSR protection group

If the related ports are of portClass=EDGE any existing information in the loca, locz parameters of the related tributaries shall be deleted (i.e. set to the default value). This shall be reported by means of an ED-STS1 (istd=SONET) or ED-VC3 (istd=SDH) notification.

EP155 equipment protection group - 1+1 equipment protection group

The command shall remove/delete the protection group of type as specified by means of parameter prototype. If prototype equals 'EQPTEP155', then one instance of EP155 equipment protection group shall be deleted.

The deletion of the protection group shall be reported by means of an DLT-PROTN-GRP notification.

EP155 equipment protection group - port impact due to EP155 protection group deletion

Ports related to the protection card of the protection group shall be recreated with default values, because they had been deleted at the enter time of the protection group.

This creation shall be reported by means of a set of ENT-STM1E notifications.

EP155 equipment protection group - tributary creation due to EP155 protection group deletion

Tributaries related to the protection card of the protection group shall be recreated with default values, because they had been deleted at the enter time of the protection group.

This creation shall be reported by means of a set of ENT-VC3 notifications if the protection port is an SDH port.

The number of tributaries to be created shall be derived from the port rate.

The notifications for the affected tributaries shall be a group notification. See definition in detailed behaviour description section of ENT-EQPT.

Example input/output

Equipment protection group

The following example deletes EP155 equipment protection group:

```
DLT-PROTN-GRP:LT-UNITE:1-1-eep01:123456::EQPTEP155;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

Multiplex section/line protection group 1+1

The following example deletes 1+1 multiplex section/line protection group:

```
DLT-PROTN-GRP:LT-UNITE:1-1-o001:1+1:123456::1+1;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

2 fibre MS-SPRing/BLSR protection group

The following example deletes 2F MS-SPRing/BLSR protection group:

```
DLT-PROTN-GRP:LT-UNITE:1-1-t001:123456::2F;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

4 fibre MS-SPRing/BLSR protection group

The following example deletes 4F MS-SPRing/BLSR protection group:

```
DLT-PROTN-GRP:LT-UNITE:1-1-f001:123456::4F;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses (EP155 equipment protection group)

Validation rule: protection unit is active

If the protecting unit is the active unit , then the following error response shall be returned.

Error Code: SNVS - Status, Not in Valid State, protection unit is activ

Error responses (general)

Validation rule: no XC loopback on tribs

There exists no cross-connection loopbacks on tributaries related to ports being a member of the specified protection group.

Error code: SNVS - Status, Not in Valid State, tributary is used in cross-connection loopback

Validation rule: no test access session active

Tributaries related to ports being a member of the specified protection group must not be used in a test access session either as tributaries under test or as test access tributaries.

Error Code: SNVS - Status, Not in Valid State, tributary used in test access session

Error responses (2-fibre MS-SPRing/BLSR protection group)

Validation rule: consistent aid and rid

If both an aid and an rid are specified as input parameters and they are inconsistent, then the following error response is returned.

Error code: IDNV - Input, Data Not Valid, inconsistent aid and rid

Validation rule: no XC on tribs

There shall exist no cross-connections on tributaries related to ports being a member of the specified protection group.

Error Code: SNVS - Status, Not in Valid State, tributary is used in cross-connection

**Error responses (4-fibre
MS-SPRing/BLSR
protection group)**

Validation rule: consistent aid and rid

If both an aid and an rid are specified as input parameters and they are inconsistent, then the following error response is returned.

Error code: IDNV - Input, Data Not Valid, inconsistent aid and rid

Validation rule: no XC on tribs

There shall exist no cross-connections on tributaries related to ports being a member of the specified protection group.

Error Code: SNVS - Status, Not in Valid State, tributary is used in cross-connection

**Error responses (MS/Line
Protection Group)**

Validation rule: no XC on protection tribs

There shall exist no cross-connections on protection tributaries related to ports being a member of the specified protection group.

Error code: NVS - Status, Not in Valid State, protection tributary is used in cross-connection

Related TL1 messages

- [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#)
- [“ED-PROTN-GRP: Edit protection group” \(8-80\)](#)
- [“ENT-PROTN-GRP: Enter protection group” \(8-56\)](#)

DLT-PROTN-GRP: Delete protection group

- [“DLT-CRS: Delete cross-connection” \(7-56\)](#)
- [“OPR-PROTNSW: Operate protection switch” \(8-109\)](#)
- [“RLS-PROTNSW: Release protection switch” \(8-125\)](#)



DLT-PROTN-GRP notification

Output format The DLT-PROTN-GRP notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Command Syntax: DLT-PROTN-GRP:*aid:prototype*;

Output parameters

Command parameters (1+1 equipment protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. prototype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (multiplex section/line protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. prototype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (2-fibre MS-SPRing/BLSR protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. prototype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (4-fibre MS-SPRing/BLSR protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. prototype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (Path protection group)

1. aid – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. prototype – Protection Type
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Example output

1+1 Equipment protection group

The following example reports the deletion of an 1+1 equipment protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
  "TIME=15-00-00,DATE=00-11-03:DLT-PROTN-GRP:1-1-
  estgrp:EQPTSWFBR"
;
```

Multiplex section/line protection group (1+1)

The following example reports the deletion of an 1+1 multiplex section/line protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
  "TIME=15-00-00,DATE=00-11-03:DLT-PROTN-GRP:1-1-
  o001:1+1"
;
```

2 fibre MS-SPRing/BLSR protection group

The following example reports the deletion of an 2F MS-SPRing/BLSR protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
  "TIME=15-00-00,DATE=00-11-03:DLT-PROTN-GRP:1-1-t001:2F"
;
```

4 fibre MS-SPRing/BLSR protection group

The following example reports the deletion of an 4F MS-SPRing/BLSR protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
"TIME=15-00-00,DATE=00-11-03:DLT-PROTN-GRP:1-1-f001:4F"
;
```

Path protection group

The following example reports the deletion of a path protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
"TIME=15-00-00,DATE=00-11-03:DLT-PROTN-GRP:1-1-#-#-10-1
-25:PATHDRI"
;
```



OPR-PROTNSW: Operate protection switch

The OPR-PROTNSW command allows to switch one or more existing protection group instances of any protection group type. Different identification methods are supported for the different protection types.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M4
Priority: 1
Abortable: No

Input format

1+1 equipment group

Command Syntax: OPR-PROTNSW:*tid:aid:ctag::prototype:spec_block*;

Multiplex section/line protection group

Command Syntax: OPR-PROTNSW:*tid:aid:ctag::prototype:spec_block*;

2-/4-fibre MS-SPRing/BLSR protection group

Command Syntax: OPR-PROTNSW:*tid:[aid]:ctag::prototype,[rid]:spec_block*;

Path protection group

Command Syntax: OPR-PROTNSW:*tid:[aid]:ctag::prototype,[ppgname]:spec_block*;

Important! The use of *ppgname* as input parameter with alias function is not yet supported. Address path-protected cross-connections individually via *Navis*[®] Optical EMS/*WaveStar*[®] CIT GUI using their AIDs.

Input parameters

Command parameters (1+1 equipment protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. prototype – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (multiplex section/line protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
This parameter specifies the aid of a 1+1 multiplex section/line protection group or the aid of a 1:1 multiplex section/line protection group (only R3.0 and later) or an port aid being a member of the group.
Type: AID
Range: OnePlusOne_ProtGrpAID (not ranged) or NByOne_ProtGrpAID (not ranged) or SPortAID (not ranged).
3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. prototype – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (2-/4-fibre MS-SPRing/BLSR protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
This parameter specifies the aid of a MS-SPRing/BLSR protection group or an port aid being a member of the group.
Option: If *rid* is specified, then *aid* can be omitted.
Type: AID
Range: TwoFibre_ProtGrpAID (not ranged) or FourFibre_ProtGrpAID (not ranged) or SPortAID (not ranged)
3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).

4. **protype** – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. **rid** – Ring Identification
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
Option: If **aid** is specified, then **rid** can be omitted.

Command parameters (Path protection group)

1. **tid** – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. **aid** – Access Identifier
This parameter specifies a path protection group aid or an input tributary aid being a member of the group in combination with **ppgname**.
Type: AID
Range: Path_ProtGrpAID (not ranged) or bay-shelf-#-#-all-all-all (ranged over input STS1NumAID) or STS1NumAID (not ranged) bay-shelf-#-#-all-all-all (ranged over input VCGNumAID) or VCGNumAID (not ranged).
Option: If ppgname is specified, then **aid** can be omitted or used as an input tributary aid.
3. **protype** – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. **ppgname** – Path protection group Name
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
Option: If **aid** is specified, then **ppgname** can be omitted. If an input value is specified for **ppgname** and none is specified for **aid**, then the command operates on all protection groups that have the specified path protection group name. If input values are specified for **aid** and **ppgname** then the command operates on all protection groups that have the specified **aid**, **ppgname** pair. The command will complete successfully if there is no protection group described by **aid**, **ppgname**; i.e. the NE sends a COMPL but no switching will take place.

Spec block parameters (1+1 equipment protection group)

See detailed behavior description w.r.t. allowed switch commands; i.e. allowed value combinations for parameters *dest*, *sc*.

1. dest – Destination
This parameter specifies the destination of the switch command; i.e. which side shall be active in terms of the member role within the protection group after the switch has been executed.
The following values are supported:
 - WKG: Worker
 - PROTN: ProtectionType: alphanumeric value set
Range: WKG, PROTN
2. sc – Switch Command
This parameter specifies the switch command to be executed by the protection state machine.
The following values are supported:
 - FRCD: Forced Switch
 - MAN: Manual Switch.Type: alphanumeric value set
Range: FRCD, MAN (for switching protection group instance); MAN (for controller protection group instance); FRCD, MAN (for EP155 protection group instance).

Spec block parameters (multiplex section/line protection group)

See detailed behavior description w.r.t. allowed switch commands; i.e. allowed value combinations for parameters *dest*, *sc*.

1. dest – Destination
This parameter specifies the destination of the switch command; i.e. to which side the switch command shall applied to.

The following values are supported:

- WKG: Worker
- PROTN: Protection

The parameter will not be taken into consideration, if a LOCKOUT switch command is performed. Details see behaviour description.

Type: alphanumeric value set.

Range: WKG, PROTN.

2. sc – Switch Command

This parameter specifies the switch command to be executed by the protection state machine.

The following values are supported:

- LOCKOUT: Lockout
- FRCD: Forced Switch
- MAN: Manual Switch

Type: alphanumeric value set

Range: LOCKOUT, FRCD, MAN

Spec block parameters (2-fibre MS-SPRing/BLSR protection group)

See detailed behavior description w.r.t. allowed switch commands; i.e. allowed value combinations for parameters *dest*, *destside*, *sc*, swtype.

1. dest – Destination

This parameter specifies the destination of the switch command.

The following values are supported: PROTN, Protection.

Type: alphanumeric value set.

Range: PROTN.

2. destside – Destination Side

This parameter specifies the destination side to which the switch command shall be applied; i.e.

- it is EAST for the east ring side
- it is WEST for the west ring side.

Type: alphanumeric value set.

Range: EAST, WEST.

3. sc – Switch Command

This parameter specifies the switch command to be executed by the protection state machine.

The following values are supported:

- LOCKOUT: Lockout
- FRCD: Forced Switch
- MAN: Manual Switch.

Type: alphanumeric value set.

Range: LOCKOUT, FRCD, MAN.

4. swtype – Switch Type

This parameter specifies what type of protection switching is used for the MS-SPRing/BLSR protection group. The value RING is used for loopback switching. The value SPAN can be used in case of span switching.

Type: alphanumeric value set.

Range: RING, SPAN.

Spec block parameters (4-fibre MS-SPRing/BLSR protection group)

See detailed behavior description w.r.t. allowed switch commands; i.e. allowed value combinations for parameters *dest*, *destside*, *sc*, swtype.

1. dest – Destination

This parameter specifies the destination of the switch command. The following values are supported: PROTN, Protection.

Type: alphanumeric value set

Range: PROTN

2. destside – Destination Side

This parameter specifies the destination side to which the switch command shall be applied; i.e.

- it is EAST for the east ring side
- it is WEST for the west ring side.

Type: alphanumeric value set.

Range: EAST, WEST.

3. sc – Switch Command

This parameter specifies the switch command to be executed by the protection state machine.

The following values are supported:

- LOCKOUT: Lockout
- FRCD: Forced Switch
- MAN: Manual Switch

Type: alphanumeric value set.

Range: LOCKOUT, FRCD, MAN.

4. swtype – Switch Type

This parameter specifies what type of protection switching is used for the MS-SPRing/BLSR protection group. The value RING shall be used for loopback switching (i.e. service route is looped back onto the protection route in the direction opposite the failure). The value SPAN shall be used in case of span switching (i.e. all traffic being carried on the worker span between an adjacent pair of nodes is switched to the protection span, between the same pair of nodes and on the same side of the ring).

Type: alphanumeric value set.

Range: RING, SPAN.

Spec block parameters (path protection group)

See detailed behavior description w.r.t. allowed switch commands; i.e. allowed value combinations for parameters *dest*, *sc*.

1. dest – Destination

This parameter specifies the destination of the switch command; i.e. to which side the switch command is applied to.

The following values are supported:

- WKG: Worker
- PROTN: Protection.

Type: alphanumeric value set.

Range: WKG, PROTN

2. sc – Switch Command

This parameter specifies the switch command to be executed by the protection state machine.

The following values are supported:

- LOCKOUT:Lockout
- FRCD: Forced Switch
- MAN: Manual Switch.

Type: alphanumeric value set.

Range: LOCKOUT, FRCD, MAN.

Output format	After receiving the OPR-PROTNSW command, the following normal completion response is returned: <pre>sid date time M ctag COMPLD ;</pre>
Detailed behavior description	The command switches the identified protection group. The switch command is processed according to the state machine behavior for the different protection group types. As consequence, the values of the following attributes of the state machine may be updated: EQPTSWFBR: <i>actunit, swreq</i> EQPTCTL: <i>actunit, swreq</i> EQPTEP155: <i>actunit, swreq</i> 1+1/1:1: <i>actunit, swreq</i> 2F: <i>eswreq, wswreq</i> 4F: <i>eactunit, eswreq, wactunit, wswreq,</i> PATHDRI: <i>actunit, actunitaid, swreq</i> The update of the attributes is reported by means of a protection switch notification for the corresponding protection group type. Identification of path protection groups A set of path protection groups is identified by a path protection group name (<i>ppgname</i>). If an input tributary AID (<i>aid</i>) is specified in addition to the <i>ppgname</i>, then the command operates on the subset of protection groups that share both of these parameters. Specifying the destination parameter (<i>dest</i>) as WKG (PROTN) causes all members of the <i>aid, ppgname</i> set to switch to working (protection).

For PATHDRI, the protection switch applies to all constituents of the identified tributary. For this case, the following table summarizes the use of path protection group names as related to OPR-PROTNSW.

aid	ppgname	dest (note 2)	comment
not used	ppgname	WKG or PROTN	operation applies to all tributaries that are group members of the ppgname (note 1)
grp member (input) logical tributary AID	ppgname	WKG or PROTN	operation applies to all tributaries that are group members of the aid, ppgname subset (note 1)
path prot grp id (output logical tributary AID)	not used	WKG or PROTN	normal, non-aliasing target identification (note 1, note 2)

Note 1: group members are defined to be the working and protection input logical tributaries of the path protection group.

Note 2: the output logical tributary aid of an adjunct path-protected cross-connection is not a path prot grp id, only the output of a path-protected cross-connection is.

Allowed/Supported switch commands for 1+1 Equipment Protection

The following table shows the allowed/supported value combinations for the parameters *sc*, *dest* w.r.t. OPR-PROTNSW for 1+1 equipment protection group.

sc	dest
FRCD	WKG
FRCD	PROTN
MAN	WKG
MAN	PROTN

Note 1: please keep in mind, that for the controller protection group instance *sc*=MAN is only applicable.

Behaviour description for multiplex section/line protection

The destination parameter dest shall not been taken in consideration, if a LOCKOUT command is performed.

This means for the different MSP types:

- 1:1/1+1 : allways the protection side is locked out and the working side carries the traffic. (By this (PROTN) was specified in the tables)
- 1+1 optimized: The actual protection state is frozen. The actual inactive side is locked out. (To make it also consistent to the other MSPs also (PROTN) was specified in the table).

Allowed/Supported switch commands for 1:1 MSP Protection SDH

The following table shall show the allowed/supported value combinations for the parameters sc, dest, destside, swtype dest w.r.t. OPR-PROTNSW for 1:1 Multiplex Section/Line protection group for SDH mode:

sc	dest
FRCD	WKG
FRCD	PROTN
MAN	PROTN
LOCKOUT	(PROTN)

Allowed/Supported switch commands for 1+1 MSP Protection

The following table shall show the allowed/supported value combinations for the parameters sc, dest w.r.t. OPR-PROTNSW for 1+1 Multiplex Section/Line protection group:

sc	dest
FRCD	WKG
FRCD	PROTN
MAN	WKG
MAN	PROTN
LOCKOUT	(PROTN)

Allowed/Supported switch commands for 1+1 Optimized MSP

The following table shall show the allowed/supported value combinations for the parameters *sc*, *dest* w.r.t. OPR-PROTNSW for 1+1 optimized Multiplex Section protection group:

sc	dest
FRCD	WKG
FRCD	PROTN
LOCKOUT	(PROTN)

Allowed/Supported switch commands for 2-fibre MS-SPRing/BLSR

The following table shows the allowed/supported value combinations for the parameters *sc*, *dest*, *destside*, *swtype* w.r.t. OPR-PROTNSW for 2-fibre MS-SPRing/BLSR protection groups.

Case	sc	dest	destside	swtype
LP-S	LOCKOUT	PROTN	EAST or WEST	SPAN
FS-R	FRCD	not used/ omitted	EAST or WEST	RING
MS-R	MAN	not used/ omitted	EAST or WEST	RING

Allowed/Supported switch commands for 4-fibre MS-SPRing/BLSR

The following table shall show the allowed/supported value combinations for the parameters *sc*, *dest*, *destside*, *swtype* w.r.t. OPR-PROTNSW for 4-fibre MS-SPRing/BLSR protection groups.

Case	sc	dest	destside	swtype
LP-S	LOCKOUT	PROTN	EAST or WEST	SPAN
FS-R	FRCD	not used/ omitted	EAST or WEST	RING
FS-S	FRCD	not used/ omitted	EAST or WEST	SPAN

Case	sc	dest	destside	swtype
MS-R	MAN	not used/ omitted	EAST or WEST	RING
MS-S	MAN	not used/ omitted	EAST or WEST	SPAN

Allowed/Supported switch commands for path protection group

The following table shows the allowed/supported value combinations for the parameters *sc*, *dest* w.r.t. OPR-PROTNSW for path protection groups.

Dependency of allowed/supported switch request were simplified in order to:

- comply with new GR-1400 (01/99)
- harmonize with 1+1 Multiplex section/Line protection group.

sc	dest
LOCKOUT	PROTN
FRCD	WKG
FRCD	PROTN
MAN	WKG
MAN	PROTN

Example input/output

1+1 Equipment protection group

The following example shows an successful 'manual switch to protection' command for a 1+1 equipment protection group:

```
OPR-PROTNSW:LT-UNITE:1-1-estgrp:123456::EQPTSWFBR:
sc=MAN,dest=PROTN;
    LT-UNITE 98-01-01 08:00:00
M 123456 COMPLD
;
```

Multiplex section/line protection group 1+1

The following example shows an successful 'forced switch to worker' command for a 1+1 multiplex section/line protection group:

```
OPR-PROTNSW:LT-UNITE:1-1-o001:123456::1+1:sc=FRCD,
```

```
dest=WKG;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

Multiplex section/line protection group 1:1 (SDH)

The following example shows an successful 'manual switch to protection' command for a 1:1 multiplex section/line protection group:

```
OPR-PROTNSW:LT-UNITE:1-1-o001:123456::1xNOPT:sc=MAN,  
dest=PROTN;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

Multiplex section/line protection group 1:1 optimized

The following example shows an successful lockout command for a 1+1 optimized multiplex section/line protection group: Please keep in mind, that the *dest* parameter is not taken in consideration:

```
OPR-PROTNSW:LT-UNITE:1-1-o001:123456::1+1:sc=LOCKOUT,  
dest=PROTN;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

2 fibre MS-SPRing/BLSR protection group

The following example shows an successful 'manual ring switch' command for the east side of a 2F MS-SPRing/BLSR protection group:

```
OPR-PROTNSW:LT-UNITE:1-1-t001:123456::2F:sc=MAN,  
swtype=RING,destside=EAST;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

4 fibre MS-SPRing/BLSR protection group

The following example shows an successful 'manual span switch' command for the west side of a 4F MS-SPRing/BLSR protection group:

```
OPR-PROTNSW:LT-UNITE:1-1-f001:123456::4F:sc=MAN,  
swtype=SPAN,destside=WEST;
```

```
LT-UNITE 98-01-01 08:00:00
M 123456 COMPLD
;
```

Path protection group

The following example shows an successful 'lockout of protection' command for a path protection group:

```
OPR-PROTNSW:LT-UNITE:1-1-#-#-10-1-25:123456::PATHDRI:
sc=LOCKOUT,dest=PROTN;
LT-UNITE 98-01-01 08:00:00
M 123456 COMPLD
;
```

Error responses (general)

Validation rule: complete switch command

The switch command (combination of *sc*, *dest*, *destside*, *sctype*) shall be complete; i.e. all needed parameters shall be present.

Error code: IDNV - Input, Data Not Valid, incomplete switch command

Validation rule: supported switch command

The switch command (combination of *sc*, *dest*, *destside*, *sctype*) shall be supported by the specified protection group type.

Error code: IDNV - Input, Data Not Valid, invalid switch command

Validation rule: allowed switch command in that state

The specified switch command shall be allowed in the actual protection state.

Error code: SNVS - Status, Not in Valid State, switch command not allowed for actual protection state.

Validation rule: consistent aid and prototype

The specified *aid* shall be consistent with the specified *prototype*.

Error code: IDNV - Input, Data Not Valid, inconsistent aid and prototype

**Error responses (1+1
Equipment protection
group)**

Validation rule: clock not in warming-up status (Switching Protection Group)

The clock of the destination as requested in the manual switch command shall not be in the 'warming-up' state.

Error code: SNVS - Status, Not in Valid State, clock of destination XC is in warming-up state

**Error responses (MS/Line
protection group)**

Validation rule: succeeding switch command

The switch command is executed by the protection state machine running on the XC pack.

Error code: SPFA - Status, Protection unit FAiled

Validation rule: MSP type 1:1 does not allow manual switch requests to worker

The system shall reject an OPR command to select the worker port as active port (actunit=WKR) if the current protection architecture is 1:1 (protype = 1x1). This applies only to manual switch requests.

Error code: SNVS - Status, Not in Valid State, Manual Switch to Worker for Protection Type 1x1 not allowed

Validation rule: MSP type 1+1_optimized does not allow manual switch commands

The system shall reject an OPR command for manual switch requests if the operation is 'optimized'.

Error code: SNVS - Status, Not in Valid State, Manual Switch for Protection Type 1+1_Optimized not allowed

**Error responses (2-/4-fibre
MS-SPRing/BLSR
protection group)**

Validation rule: consistent *aid* and *rid*

If both an aid and an rid are specified as input parameters and they are inconsistent, then the following error response is returned

Error code: IDNV - Input, Data Not Valid, inconsistent aid and rid

Validation rule: succeeding switch command

The switch command shall be executed by the protection state machine running on the XC pack.

Error code: SPFA - Status, Protection unit FAiled

Validation rule: APS switch time constraint

The switch command shall be executed by the protection state machine using the APS within time constraints

Error code: SPFA - Status, Protection unit FAiled, APS did not succeed.

Error responses (Path protection group)

Validation rule: succeeding switch command

The switch command shall be executed by the protection state machine running on the XC pack.

Error code: SPFA - Status, Protection unit FAiled

Related TL1 messages

- [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#)
- [“ED-PROTN-GRP: Edit protection group” \(8-80\)](#)
- [“ENT-PROTN-GRP: Enter protection group” \(8-56\)](#)
- [“ENT-CRS: Enter cross-connection” \(7-25\)](#)
- [“RLS-PROTNSW: Release protection switch” \(8-125\).](#)



RLS-PROTNSW: Release protection switch

The RLS-PROTNSW command allows to clear protection switch requests for one or more existing protection group instances of any protection group type. Different identification methods are supported for the different protection types.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M4
Priority: 1
Abortable: No

Input format

1+1 equipment group

Command Syntax: RLS-PROTNSW:*tid:aid:ctag::prototype:spec_block*;

Multiplex section/line protection group

Command Syntax: RLS-PROTNSW:*tid:aid:ctag::prototype:spec_block*;

2-/4-fibre MS-SPRing/BLSR protection group

Command Syntax: RLS-PROTNSW:*tid:[aid]:ctag::prototype,[rid]:spec_block*;

Path protection group

Command Syntax: RLS-PROTNSW:*tid:[aid]:ctag::prototype,[ppgname]:spec_block*;

Important! The use of *ppgname* as input parameter with alias function is not yet supported. Address path-protected cross-connections individually via *Navis*[®] Optical EMS/*WaveStar*[®] CIT GUI using their AIDs.

Input parameters

Command parameters (1+1 equipment protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. prototype – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (multiplex section/line protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
This parameter specifies the aid of a 1+1 multiplex section/line protection group or the aid of a 1:1 multiplex section/line protection group (only R3.0 and later) or an port aid being a member of the group.
Type: AID.
Range: OnePlusOne_ProtGrpAID (not ranged) or SPortAID
NByOne_ProtGrpAID (not ranged) or SPortAID (not ranged).
3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. prototype – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Command parameters (2-/4-fibre MS-SPRing/BLSR protection group)

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. aid – Access Identifier
This parameter specifies the aid of a MS-SPRing/BLSR protection group or an port aid being a member of the group.
Option: If *rid* is specified, then *aid* can be omitted.
Type: AID.
Range: TwoFibre_ProtGrpAID (not ranged) or FourFibre_ProtGrpAID (not ranged) or SPortAID (not ranged)
3. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).

4. *prototype* – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
5. *rid* – Ring Identification
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
Option: If *aid* is specified, then *rid* can be omitted.

Command parameters (Path protection group)

1. *tid* – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *aid* – Access Identifier
See definition in input parameters section in [“OPR-PROTNSW: Operate protection switch” \(8-109\)](#).
3. *prototype* – Protection Type
See definition in input parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
4. *ppgname* – Path protection group Name
Option: If *aid* is specified, then *ppgname* can be omitted. If an input value is specified for *ppgname* and none is specified for *aid*, then the command operates on all protection groups that have the specified path protection group name. If input values are specified for *aid* and *ppgname* then the command operates on all protection groups that have the specified *aid*, *ppgname* pair.
The command will complete successfully if there is no protection group described by *aid*, *ppgname*.

Spec block parameters (1+1 Equipment, multiplex section/line, Path protection group)

1. *sc* – Switch Command
This parameter specifies the clear command to be executed by the protection state machine.
Type: alphanumeric value set
Range: CLEAR
Option: If the parameter is omitted the default switch command will be executed.

Spec block parameters (2/4-fibre MS-SPRing/BLSR protection group)

1. *destside* – Destination Side

This parameter specifies the destination side to which the switch command shall be applied; i.e.

- it is EAST for the east ring side
- it is WEST for the west ring side

Type: alphanumeric value set

Range: EAST, WEST

2. sc – Switch Command

This parameter specifies the clear command to be executed by the protection state machine.

Type: alphanumeric value set

Range: CLEAR

Option: If the parameter is omitted the default switch command will be executed.

Output format After receiving the RLS-PROTNSW command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

Detailed behavior description

The command clears the protection switch of the identified protection groups. The clear command is processed according to the state machine behavior for the different protection group types. As consequence, the values of the following attributes of the state machine may be updated:

EQPTSWFBR: *actunit*, *swreq*

EQPTCTL: *swreq*

EQPTEP155: *actunit*, *swreq*

1+1/1:1: *actunit*, *swreq*

2F: *eswreq*, *wswreq*

4F: *eactunit*, *eswreq*, *wactunit*, *wswreq*,

PATHDRI: *actunit*, *actunitaid*, *swreq*

The update of the attributes is reported by means of a protection switch notification for the corresponding protection group type.

Identification of path protection groups

A set of path protection groups is identified by a path protection group name (*ppgname*). If an input tributary AID (*aid*) is specified in addition to the *ppgname*, then the command operates on the subset of protection groups that share both of these parameters.

For PATHDRI, the protection switch applies to all constituents of the identified tributary. For this case, the following table summarizes the use of path protection group names as related to RLS-PROTNSW.

aid	ppgname	comment
not used	ppgname	operation applies to all tributaries that are group members of the ppgname (note 1)
grp member (input) logical tributary AID	ppgname	operation applies to all tributaries that are group members of the aid, ppgname subset
path prot grp id (output logical tributary AID)	not used	normal, non-aliasing target identification

Note 1: group members are defined to be the working and protection input logical tributaries of the path protection group.

Example input/output

1+1 Equipment Protection Group

The following example shows an successful clear command for a 1+1 equipment protection group:

```
RLS-PROTNSW:LT-UNITE:1-1-estgrp:123456::EQPTSWFBR;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

Multiplex section/line protection group (1+1)

The following example shows an successful clear command for a 1+1 multiplex section/line protection group:

```
RLS-PROTNSW:LT-UNITE:1-1-o110:123456::1+1;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

2 fibre MS-SPRing/BLSR protection group

The following example shows an successful 'clear' command for the east side of a 2F MS-SPRing/BLSR protection group:

```
RLS-PROTNSW:LT-UNITE:1-1-t001:123456::2F:sc=CLEAR,  
destdside=EAST;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

4 fibre MS-SPRing/BLSR protection group

The following example shows an successful 'clear' command for the west side of a 4F MS-SPRing/BLSR protection group:

```
RLS-PROTNSW:LT-UNITE:1-1-f001:123456::4F:sc=CLEAR,  
destdside=WEST;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

Path protection group

The following example shows an successful clear command for a path protection group:

```
RLS-PROTNSW:LT-UNITE:1-1-#-#-10-1-25:123456::PATHDRI;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses (general)

Validation rule: consistent *aid* and *prototype*

The specified *aid* shall be consistent with the specified *prototype*.

Error code: IDNV - Input, Data Not Valid, inconsistent aid and prototype

Error responses (multiplex section/line protection group)

Validation rule: succeeding switch command

The switch command shall be executed by the protection state machine running on the XC pack.

Error code: SPFA Status, Protection unit Failed

Error responses (2-/4-fibre MS-SPRing/BLSR protection group)

Validation rule: consistent aid and rid

If both an aid and an rid are specified as input parameters and they are inconsistent, then the following error response is returned

Error code: IDNV - Input, Data Not Valid, inconsistent aid and rid

Validation rule: succeeding switch command

The switch command shall be executed by the protection state machine running on the XC pack.

Error code: SPFA - Status, Protection unit Failed

Error responses (Path protection group)

Validation rule: succeeding switch command

The switch command shall be executed by the protection state machine running on the XC pack.

Error code: SPFA - Status, Protection unit Failed

Related TL1 messages

- [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#)
- [“ED-PROTN-GRP: Edit protection group” \(8-80\)](#)

RLS-PROTNSW: Release protection switch

- [“ENT-PROTN-GRP: Enter protection group” \(8-56\)](#)
- [“ENT-CRS: Enter cross-connection” \(7-25\)](#)
- [“OPR-PROTNSW: Operate protection switch” \(8-109\)](#)



REPT SW: Report switch

REPT SW messages are generated autonomously to report equipment protection switches of a duplex equipment unit pair. These equipment pairs are referred to as 1+1 equipment protection groups. The message indicates the equipment/circuit pack that was placed in the active state.

Output format The general format of a REPT SW message is as follows:

```

tid date time
A atag REPT SW
  "actid,stbyid"
;
```

Output parameters

Command parameters

1. atag – AutomaticTag
This parameter specifies the message sequence number. The number is incremented by one for each autonomous message generated by the NE. Leading zeros are not suppressed.
Type: numeric string
Range: 000 .. 999
2. actid – Active Identifier
This parameter specifies the circuit pack AID which is active within the 1+1 equipment protection group.
Type: AID
Range: CpAID
3. stbyid - Standby Identifier
This parameter specifies the circuit pack AID which is standby (non-active) within the 1+1 equipment protection group.
Type: AID
Range: CpAID

Example input/output The following example shows a switch report (with *stbyid* parameter):

```

LT-UNITE 99-01-10 08:12:00
A 001 REPT SW
  "1-1-#-#-xcp-cp,1-1-#-#-xcw-cp"
```

Protection group
REPT SW: Report switch

TL1 messages - protection

;

Related TL1 messages

- [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#)
- [“OPR-PROTNSW: Operate protection switch” \(8-109\)](#)
- [“RLS-PROTNSW: Release protection switch” \(8-125\)](#)

References GR-833-CORE



Protection switch notification

Output format

General

The protection switch notification shall use the general format of a REPT EVT notification.

The protection switch notification shall use the general format of a REPT SW notification for reporting of state changes for actunit attribute changes for 1+1 equipment protection group.

The following syntax is used for: 1+1 equipment, 1+1 multiplex section/line, 1:1 multiplex section/line, 2-/4-fibre MS-SPRing/BLSR, path protection group.

Command Syntax: REPT EVT *modifier*
aid:condtype,condeff,ocrdat,ocrtm:conddescr;

1+1 equipment protection group

The following syntax is used in addition to REPT EVT for 1+1 equipment protection group.

Command Syntax: REPT SW *actid, stbyid;*

REPT SW is generated if the *actunit* (active unit state) attribute is changed due to an automatic switch or a switch command. REPT EVT is generated if *swreq* (switch request state) attribute is changed due to an automatic switch or a switch command.

Note: If *actunit* and *swreq* is changed due to an automatic switch or a switch command, one REPT SW and one REPT EVT is generated.

Output parameters

Command parameters (1+1 equipment protection group, REPT EVT)

1. *modifier* – Modifier
This parameter specifies the value 'COM' as an event that applies to the whole NE.
Type: alphanumeric value set.
Range: COM.
2. *aid* – Access Identifier
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

3. condtype – Condition Type
This parameter specifies/identifies the type of event indication being reported. The value GP (General Purpose) is used for all 1+1 equipment protection switch events.
Type: alphanumeric value set.
Range: GP.
4. condeff – Condition Effect
This parameter indicates the effect of the reported event on the NE. The value TC – (Transient Condition) is used for all protection switch events.
Type: alphanumeric value set.
Range: TC.
5. ocrdat – Occurrence Date
This parameter indicates the date of the switch event being reported.
Type: value set of format MM-DD.
Range: M, D are digits. Leading zeros are not suppressed. MM represents month, DD the day.
6. ocrtm – Occurrence Time
This parameter indicates the time of the switch event being reported.
Type: value set of format HH-MM-SS.
Range: H, M, S are digits. Leading zeros are not suppressed. HH represents hours, MM minutes, SS seconds.
7. conddescr – Condition Description
This parameter provides additional information w.r.t. the protection event.
The string value depends on the actual switch request state as follows
 - *swreq: conddescr*
 - EQPTFAILED: \”Protection switch, EQPT, Equipment failed”\
 - FS: \”Protection switch, EQPT, Forced switch”\
 - MS: \”Protection switch, EQPT, Manual switch”\
 - NR: \”Protection switch, EQPT, No request”\Type: inner string.
Range: See above. Note: For protection type EQPTCTL swreq=FS or conddescr =\”Protection switch, EQPT, Forced switch” is not applicable.

Initial PROTNSW:

The system evaluates the current fault information at the protection group creation time. Based on that, the system calculates and reports the switch request state. The value will be either 'NR' or 'EQPTFAILED' .

Command parameters (1+1 equipment protection group, REPT SW)

1. actid – Active Unit AID
This parameter specifies the circuit pack AID of the newly selected/active unit within the protection group.
Type: AID.
Range: circuit pack AID.
Initial PROTNSW.
The system evaluates the current fault information and the current active unit at the protection group creation time. Based on that, the system calculates and reports the selected active unit.
2. stbyid – Standby Unit AID
This parameter specifies the circuit pack AID of the standby unit within the protection group.
Type: AID.
Range: circuit pack AID.
Initial PROTNSW.
The system evaluates the current fault information and the current active unit at the protection group creation time. Based on that, the system calculates and reports the standby unit.

Command parameters (multiplex section/line protection group, REPT EVT)

1. modifier – Modifier
See definition of parameter *pgrate* [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. aid – Access Identifier
This parameter specifies the port AID being a member of the protection group.

It is derived from the active unit state as follows:

- a. current value of *actunit*, *aid* value
- b. WKG, worker port aid
- c. PROTN, protection port aid

Type: AID

Range: SPortAID

Initial PROTNSW:

The worker port AID is used in the initial protection switch notification.

3. condtype – Condition Type

This parameter identifies the type of event indication being reported. The value GP (General Purpose) is used independent for the operation mode if the active unit state has not changed. If active unit state has changed and operation mode is revertive, the following values is used: The value WKSWPR-2 is used if service is switched to the protection section/line. The value WKSWBK is used if service is switched to the worker section/line.

If active unit has changed and operation mode is non-revertive, the value PS is used.

Type: alphanumeric value set.

Range: GP, WKSWPR-2, WKSWBK, PS

Initial PROTNSW:

The value 'GP' is used in the initial protection switch notification.

4. condeff – Condition Effect

See definition of [“REPT EVT: Report event” \(6-47\)](#).

5. ocrdat – Occurrence Date

See definition of [“REPT EVT: Report event” \(6-47\)](#).

6. ocrtm – Occurrence Time

See definition of [“REPT EVT: Report event” \(6-47\)](#).

7. conddescr – Condition Description

This parameter provides additional information w.r.t. the protection event. The string value depends on the actual switch request state as follows:

- *swreq: conddescr*
- LO: \”Protection switch, {rr} port, Lockout switch,, 1+1/1:1\”

- FS: \"Protection switch, {rr} port, Forced switch,, 1+1/1:1\"
- FOP: \"Protection switch, {rr} port, FOP,, 1+1/1:1\"
- SF: \"Protection switch, {rr} port, SF,, 1+1/1:1\"
- SD: \"Protection switch, {rr} port, SD,, 1+1/1:1\"
- MS: \"Protection switch, {rr} port, Manual switch,, 1+1/1:1\"
- WTR: \"Protection switch, {rr} port, WTR,, 1+1/1:1\"
- DNR: \"Protection switch, {rr} port, DNR,, 1+1/1:1\"
- NR: \"Protection switch, {rr} port, No request,, 1+1/1:1\"

The value for variable *rr* is derived from the port rate within the protection group.

See value range definition for the attribute *pgrate* in the [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#) output section w.r.t. supported port rates for the different protection types.

Type: inner string.

Range: See description above.

Initial PROTNSW:

The value 'NR' is used for *swreq* in the initial protection switch notification.

Command parameters (2-fibre MS-SPRing/BLSR protection group, REPT EVT)

Protection switch events are reported separately for each side within the protection group. The *aid* parameter can be used in order to identify the side for which the switch event is reported.

1. modifier – Modifier

See definition of parameter *pgrate* in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

2. aid – Access Identifier

This parameter specifies for which ring side the corresponding switch request is active; it shall either specify the east port AID or the west port AID within the protection group.

Type: AID.

Range: SPortAID.

3. condtype – Condition Type
This parameter identifies the type of event indication being reported. The value WKSWPR-2 is used if service is switched to the protection route. The value WKSWBK is used if service is switched to the worker route. The value GP (General Purpose) is used if the active route has not changed.
Type: alphanumeric value set.
Range: GP, WKSWPR-2, WKSWBK
Initial PROTNW: The value **WKSWBK** is used in the initial protection switch notification.
4. condeff – Condition Effect
See definition of [“REPT EVT: Report event” \(6-47\)](#).
5. ocrdat – Occurrence Date
See definition of [“REPT EVT: Report event” \(6-47\)](#).
6. ocrtm – Occurrence Time
See definition of [“REPT EVT: Report event” \(6-47\)](#).
7. conddescr – Condition Description
This parameter provides additional information w.r.t. the protection event. The string value depends on the actual swreq as follows:
 - **swreq: conddescr**
 - LPS: \”Protection switch, {rr} port, Lockout switch, LPS, 2F”\
 - FSR: \”Protection switch, {rr} port, Forced switch, FSR, 2F”\
 - SFR: \”Protection switch, {rr} port, Signal fail, SFR, 2F”\
 - SDR: \”Protection switch, {rr} port, Signal degrade, SDR, 2F”\
 - MSR: \”Protection switch, {rr} port, Manual switch, MSR, 2F”\
 - WTR: \”Protection switch, {rr} port, Wait to restore, WTR, 2F”\
 - RRS: \”Protection switch, {rr} port, Reverse request, RRS, 2F”\

- RRR: \”Protection switch, {rr} port, Reverse request, RRR, 2F”\

- NR: \”Protection switch, {rr} port, No request, NR, 2F”\

The value for variable *rr* is derived from the port rate within the protection group. See value range definition for the attribute *pgrate* in the [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#) output section w.r.t. supported port rates for the different protection types.

Type: inner string

Range: See description above.

Initial PROTN SW: The value 'NR' is used for *swreq* in the initial protection switch notification.

Command parameters (4-fibre MS-SPRing/BLSR protection group, REPT EVT)

Protection switch events are reported separately for each side within the protection group. The aid parameter can be used in order to identify the side for which the switch event is reported.

1. modifier – Modifier

See definition of parameter *pgrate* in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

2. aid – Access Identifier

This parameter specifies the port AID being a member of the protection group.

It is derived from the active unit state for each side (east or west) as follows:

- a. current value of *actunit*, *aid* value
- b. WKG, worker port aid
- c. PROTN, protection port aid

The attributes switch request state and active unite state may be updated in the context of a switch event. Actual means the value of the parameter after the switch has occurred.

Type: AID.

Range: SPortAID.

Initial PROTN SW: The worker port AID is used in the initial protection switch notification.

3. condtype – Condition Type
This parameter identifies the type of event indication being reported. The value WKSWPR-ep is used if service is switched to east protection span.
The value WKSWBK-wp is used if service is switched to west protection span. The value WKSWBK shall be used if service is switched to working. The value GP (General Purpose) shall be used if the active route/span has not changed.
Type: alphanumeric value set.
Range: GP, WKSWPR-ep, WKSWPR-wp, WKSWBK
Initial PROTNSW: The value **WKSWBK** is used in the initial protection switch notification.
4. condeff – Condition Effect
See definition of [“REPT EVT: Report event” \(6-47\)](#).
5. ocrdat – Occurrence Date
See definition of [“REPT EVT: Report event” \(6-47\)](#).
6. ocrtm – Occurrence Time
See definition of [“REPT EVT: Report event” \(6-47\)](#).
7. conddescr – Condition Description
This parameter provides additional information w.r.t. the protection event. The string value depends on the actual swreq as follows:
 - *swreq: condescr*
 - LPS: \”Protection switch, {rr} port, Lockout switch, LPS, 4F”\
 - FSS: \”Protection switch, {rr} port, Forced switch, FSS, 4F”\
 - FSR: \”Protection switch, {rr} port, Forced switch, FSR, 4F”\
 - SFS: \”Protection switch, {rr} port, Signal fail, SFS, 4F”\
 - SFR: \”Protection switch, {rr} port, Signal fail, SFR, 4F”\
 - SDS: \”Protection switch, {rr} port, Signal degrade SDS, 4F”\
 - SDR: \”Protection switch, {rr} port, Signal degrade, SDR, 4F”\
 - MSS: \”Protection switch, {rr} port, Manual switch, MSS, 4F”\

- MSR: \"Protection switch, {rr} port, Manual switch, MSR, 4F\"\\
- WTR: \"Protection switch, {rr} port, Wait to restore, WTR, 4F\"\\
- RRS: \"Protection switch, {rr} port, Reverse request, RRS, 4F\"\\
- RRR: \"Protection switch, {rr} port, Reverse request, RRR, 4F\"\\
- NR: \"Protection switch, {rr} port, No request, NR, 4F\"\\

The value for variable *rr* is derived from the port rate within the protection group.

See value range definition for the attribute *pgrate* in the [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#) output section w.r.t. supported port rates for the different protection types.

Type: inner string.

Range: See Description.

Initial PROTNSW: The value 'NR' is used for *swreq* in the initial protection switch notification.

Command parameters (Path protection group, REPT EVT)

1. modifier – Modifier
See definition of parameter *cst* in output parameters section in [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
2. aid – Access Identifier
This parameter specifies for the output tributary AID of the constituent path selector AID being a member of the path protection group.
Note: If path protection group consists only of one constituent path selector, the output tributary AID is equal to the path protection group AID.
Type: AID.
Range: GenTribAID.
3. condtype – Condition Type
This parameter specifies the type of event indication being reported. The value GP (General Purpose) is used if the active unit state has not changed.
If active unit state has changed, the following values are used:
The value WKSWPR-2 is used if service is switched to the protection tributary. The value WKSWBK is used if service is

switched to the worker tributary.

Type: alphanumeric value set.

Range: GP, WKSWPR-2, WKSWBK.

Initial PROTNSW: The value 'GP' is used in the initial protection switch notification.

4. condeff – Condition Effect

See definition of [“REPT EVT: Report event” \(6-47\)](#).

5. ocrdat – Occurrence Date

See definition of [“REPT EVT: Report event” \(6-47\)](#).

6. ocrtm – Occurrence Time

See definition of [“REPT EVT: Report event” \(6-47\)](#).

7. conddescr – Condition Description

This parameter provides additional information w.r.t. the protection event. The string value depends on the actual switch request state as follows:

- *swreq: conddescr*
- LO: \”Protection switch, {rr} CS, Lockout switch”\
- FS: \”Protection switch, {rr} CS, Forced switch”\
- SF: \”Protection switch, {rr} CS, SF”\
- SD: \”Protection switch, {rr} CS, SD”\
- MS: \”Protection switch, {rr} CS, Manual switch”\
- WTR: \”Protection switch, {rr} CS, WTR”\
- NR: \”Protection switch, {rr} CS, No request”\

The value for variable *rr* is derived from the constituent signal type; i.e. it has the following values: STS1, STS3C, STS12C, STS48C, STS192C, VC3, VC4, VC44C, VC416C, VC464C.

Type: inner string.

Range: See description above.

Initial PROTNSW: The value 'NR' is used for *swreq* in the initial protection switch notification.

Example output

1+1 Equipment protection group

The following example reports a manual switch to protection circuit pack for 1+1 equipment protection group:

```
LT-UNITE 99-01-10 08:12:00
```

```
A 001 REPT SW
    "1-1-#-#-xcp-cp,1-1-#-#-xcw-cp"
;
    LT-UNITE 98-01-10 08:12:00
A 002 REPT EVT COM
    "1-1-estgrp:GP,TC,01-10,08-12-00:\Protection Switch,
    EQPT, Manual switch\\""
;
```

Multiplex section/line protection group (1+1 and 1:1)

The following example reports a lockout switch for a 1+1 multiplex section/line protection group:

```
    LT-UNITE 98-01-10 08:12:00
A 015 REPT EVT OC3
    "1-1-#-#-10-2:WKSWBK,TC,01-10,08-12-00:\Protection
    Switch, OC3 port, Lockout switch,, 1+1/1x1\\""
;
```

2 fibre MS-SPRing/BLSR protection group

The following example reports a manual ring switch of the east side for a 2F MS-SPRing/BLSR protection group:

```
    LT-UNITE 98-01-10 08:12:00
A 015 REPT EVT OC48
    "1-1-#-#-10-2:WKSWPR-2,TC,01-10,08-12-00:\Protection
    Switch, OC48 port, Manual switch, MSR, 2F\\""
;
```

4 fibre MS-SPRing/BLSR protection group

The following example reports a manual span switch of the east side for a 4F MS-SPRing/BLSR protection group:

```
    LT-UNITE 98-01-10 08:12:00
A 015 REPT EVT OC192
    "1-1-#-#-10-1:WKSWPR-2,TC,01-10,08-12-00:\Protection
    Switch, OC192 port, Manual switch, MSS, 4F\\""
;
```

Path protection group

The following example reports a autonomous switch to protection for a 1+1 path protection group:

```
    LT-UNITE 98-01-10 08:12:00
```

```
A 015 REPT EVT STS1
  "1-1-#-#-10-1-25:WKS WPR-2,TC,01-10,08-12-00:
  \"Protection Switch, STS1 CS, SF\"";
```



Autonomous notifications

1+1 equipment protection group

If the second switch circuit pack is auto created, the 1+1 switch equipment protection group entity shall be created. This entity creation shall be reported by means of ENT-PROTN-GRP notification.

Auto creation of the second switch circuit pack

If the second switch circuit pack is auto created, the 1+1 switch equipment protection group entity is created. This shall be reported by means of ENT-PROTN-GRP notification for 1+1 equipment protection group. The initial protection state shall be reported by means of a protection switch notification for the 1+1 equipment protection group.

Protection switch

A protection switch notification (i.e. protection state change) is triggered by means equipment fail condition change as specified for the corresponding protection state machine.

Deletion of the second switch circuit pack

If the second switch circuit pack is deleted, the 1+1 switch equipment protection group entity shall be deleted. This entity deletion shall be reported by means of DLT-PROTN-GRP notification.

Deletion of the second controller circuit pack

If the second switch circuit pack is deleted, the 1+1 switch equipment protection group entity shall be deleted. This entity deletion is reported by means of DLT-PROTN-GRP notification for the 1+1 protection group.

Multiplex section/Line protection group

Protection switch and related events

A protection switch notification (i.e. protection state change) is triggered by means of

- fault condition change
- wait to restore timer expiry
- switch command received via APS message as specified for the corresponding protection state machine.

A protection switch notification shall be triggered upon a change of the Secondary Section Identifier (spec block parameter 'ssi'). This

applies to MSP 1+1 optimized only. This requirement gives additionally to other requirements a further trigger for the autonomous notification for a MSP protection group. It does not require necessarily a separate notification beside other notifications of the same MSP protection group at the same time.

2-/4-fibre MS-SPRing/BLSR protection group

Protection switch

A protection switch notification (i.e. protection state change) is triggered by means of

- fault condition change
- wait to restore timer expiry
- switch command received via APS message as specified for the corresponding protection state machine.

Path protection group

Protection switch

A protection switch notification (i.e. protection state change) is triggered by means of

- fault condition change
- wait to restore timer expiry as specified for the corresponding protection state machine.



Protection log

Overview

Purpose Each NE stores protection switch events in a protection log. The NE administrates the log autonomously. Therefore only a retrieve operation is defined for log the entity.

Contents

RTRV-LOG-PROTNSW: Retrieve log protection switch	8-150
Autonomous notifications	8-156



RTRV-LOG-PROTNSW: Retrieve log protection switch

The RTRV-LOG-PROTNSW command retrieves the protection switch log. This log gives a complete time-ordered list of switching activity which has occurred at the NE covering all different protection groups, system timing reference, station clock output timing reference and system clock.

The protection switch log is a circular buffer that should hold at least 500 entries.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
Priority: 1
Abortable: Yes.

Input format Command Syntax:
RTRV-LOG-PROTNSW:*tid::ctag::[startdate],[starttime],[replytype]*;

Input parameters

Command parameters

1. tid – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. ctag – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. startdate – Start Date
This parameter specifies a date used as filter criteria in order to determine the set of switch events being returned.
See description of parameter *replytype* for more precise semantics definition.
Type: value set of format YY-MM-DD
Range: Y, M, D are digits. Leading zeros are not suppressed. YY represents the year, MM represents month, DD the day.

4. starttime – Start Time
This parameter specifies a time used as filter criteria in order to determine the set of switch events being returned.
See description of parameter *replytype* for more precise semantics definition.
Type: value set of format HH-MM-SS
Range: H, M, S are digits. Leading zeros are not suppressed. HH represents hours, MM minutes, SS seconds.
5. replytype – Type of Reply
This parameter specifies, how the entries in the reply are determined. The value BROWSE is used in case of user browsing. The value DBSYNC is used in case of data synchronization with management system.
BROWSE semantics: If the requested *startdate* and *starttime* is in the log, those entries with matching timestamp and any subsequent log entries shall be returned. If the requested *startdate* and *starttime* is NOT in the log, the first log entry in the log with a timestamp later than the *startdate* and *starttime* plus subsequent log entries shall be returned.
DBSYNC semantics: If the requested *startdate* and *starttime* is in the log (i.e. a matching timestamp was found), those entries and any subsequent log entries shall be returned. If the requested *startdate* and *starttime* is NOT in the log (i.e. a no matching timestamp was found), an SNVS error response shall be returned.
Type: alphanumeric value set.
Range: BROWSE, DBSYNC.
Default: BROWSE.

Output format The returned log entries are ordered ascending according to their timestamp. After receiving the RTRV-LOG-PROTNSW command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
"aid,aidtype:EVT,condtype,condeff,ocrdat,ocrtm
[:\"conddescr\"]"
    <0 or more of the line above>
"aid:SW,,,ocrdat,ocrtm"
    <0 or more of the line above>
    <0 or more repetitions of this entire block>
```

;

The output parameters of the log entry are derived/correspond from/to the parameters in the protection switch notification. The parameter definition will reference to the corresponding parameter in the protection switch notification section. Log entry parameters are not splitted within this section w.r.t. protection type. Therefore the protection type has to be considered in order to look-up the proper definition.

Output parameters

Command parameters

1. aid – Access Identifier
See definition [“REPT EVT: Report event” \(6-47\)](#). [“REPT SW: Report switch” \(8-133\)](#) for the different protection switch notifications.
2. aidtype – Access Identifier Type
See definition of parameter *modifier* [“REPT EVT: Report event” \(6-47\)](#) for the different protection switch notifications.
3. condtype – Condition Type
See definition [“REPT EVT: Report event” \(6-47\)](#) for the different protection switch notifications.
4. condeff – Condition Effect
See definition [“REPT EVT: Report event” \(6-47\)](#).
 - a. orcdate – Occurrence Date
See definition [“REPT EVT: Report event” \(6-47\)](#), [“REPT SW: Report switch” \(8-133\)](#).
 - b. orctime – Occurrence Time
See definition [“REPT EVT: Report event” \(6-47\)](#), [“REPT SW: Report switch” \(8-133\)](#).
5. conddescr – Condition Description
See definition of parameter [“REPT EVT: Report event” \(6-47\)](#) for the different protection switch notifications.

Detailed behavior description

If both *startdate* and *starttime* are omitted, the entire log is retrieved. Both *startdate* and *starttime* must be specified, or both must be omitted. If *replytype* is specified, then *startdate* and *starttime* are present.

The log shows the same information as it could be derived from looking on the protection switches reported by means of REPT EVT and REPT SW.

Note: In case of a 1+1 equipment protection switching causing one REPT SW notification and one REPT EVT notification, then two entries are reported in the retrieve log reply. But w.r.t. to log capacity, this is counted as only one event.

Example input/output

1+1 Equipment protection group

The following example retrieves a manual switch to protection circuit pack for 1+1 equipment protection group:

```
RTRV-LOG-PROTNSW:LT-UNITE::123456;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
    "1-1-#-#-xcp-cp:SW,,,01-10,08-12-00"  
    "1-1-estgrp,COM:EVT,GP,TC,01-10,08-12-00:\Protection  
    Switch, EQPT, Manual switch\""  
;
```

Multiplex section/line protection group (1+1 and 1:1)

The following example retrieves a lockout switch for a 1+1 multiplex section/line protection group:

```
RTRV-LOG-PROTNSW:LT-UNITE::123456;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
    "1-1-#-#-10-2,OC3:EVT,WKSWBK,TC,01-10,08-12-  
    00:\Protection Switch, OC3 port, Lockout switch,,  
    1+1/1x1\""  
;
```

2 fibre MS-SPRing/BLSR protection group

The following example retrieves a manual ring switch of the east side for a 2F MS-SPRing/BLSR protection group:

```
RTRV-LOG-PROTNSW:LT-UNITE::123456;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
    "1-1-#-#-10-2,OC48:EVT,WKSWPR-2,TC,01-10,08-12-  
    00:\Protection Switch, OC48 port, Manual switch, MSR,  
    2F\""
```

;

4 fibre MS-SPRing/BLSR protection group

The following example retrieves a manual ring switch of the east side for a 4F MS-SPRing/BLSR protection group:

```
RTRV-LOG-PROTNSW:LT-UNITE::123456;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
    "1-1-#-#-10-1,OC192:EVT,WKSWPR-2,TC,01-10,08-12-  
    00:\\"Protection Switch, OC192 port, Manual switch, MSS,  
    4F\\"" ;
```

Path protection group

The following example retrieves an autonomous switch to protection for a 1+1 path protection group:

```
RTRV-LOG-PROTNSW:LT-UNITE::123456;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
    "1-1-#-#-10-1-25,STS1:EVT,WKSWPR-2,TC,01-10,08-12-  
    00:\\"Protection Switch, STS1 CS, SF\\"" ;
```

System clock

The following example retrieves a switch event for clock mode protection type:

```
RTRV-LOG-PROTNSW:LT-UNITE::123456;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD  
    "SYSTEM,SYST:EVT,HLDVRSYNC,TC,11-09,12-00-  
    00,,,\\"Protection switch,clock mode,Forced Holdover\\"" ;
```

System timing reference

The following example retrieves a switch event for system timing reference protection type:

```
RTRV-LOG-PROTNSW:LT-UNITE::123456;  
    LT-UNITE 98-01-01 08:00:00  
M 123456 COMPLD
```



```
"EXTREF1,SYST:EVT,PS,TC,11-09,12-00-00,,,:"Protection  
switch,sync reference,Manual switch\""
```

;

Station timing reference

The following example retrieves a switch event for output timing reference protection type:

```
RTRV-LOG-PROTNSW:LT-UNITE::123456;
```

```
LT-UNITE 98-01-01 08:00:00
```

```
M 123456 COMPLD
```

```
"LINE2,OUTT:EVT,INHSWPR,SC,11-09,12-00-00,,,:
```

```
\\"Protection switch,output reference,Lockout\\""
```

;

Error responses

Validation rule: matching log entry

There is at least one matching log entry for the specified *startdate* and *starttime* if replytype equals DBSYNC.

Error code: SNVS - Status, Not in Valid State, no matching log entry

Related TL1 messages

- [“REPT EVT: Report event” \(6-47\)](#)
- [“REPT SW: Report switch” \(8-133\)](#)
- [“RTRV-LOG-ALM: Retrieve log alarm” \(6-54\)](#)
- [“RTRV-LOG-NTFCN: Retrieve notification Log” \(5-60\)](#)

References GR-833-CORE



Autonomous notifications

**System start-up with
default DB**

The system will start-up with an empty protection log as part of the default DB.

**System start-up after DB
transformation**

The system will start-up with an empty protection log after a database transformation has taken place in context of an SW upgrade.



Ring map

Overview

Purpose Each NE within a 2-/4fibre MS-SPRing/BLSR ring will maintain a ring map entity for each MS-SPRing/BLSR protection group entity. The ring map either will be discovered automatically by the NEs (default) or manually be entered by the user (see also parameter and in [“ENT-PROTN-GRP: Enter protection group” \(8-56\)](#)).

The ring map consists of:

- the nodes within the ring
- the links connecting the nodes.

If the automatic ring discovery is disabled and the ring map is entered manually, the links connecting the nodes may not be retrievable. The ring map can be edited manually with ED-MAP-RING and is then stored in volatile memory. With SET-MAP-RING, the new ring map is written to NVM and activated.

Contents

RTRV-MAP-RING: Retrieve map ring	8-158
ED-MAP-RING: Edit map ring	8-165
SET-MAP-RING: Set map ring	8-168
SET-MAP-RING: notification	8-170
ED-FETID: Edit Far End Target Identifier	8-171
ED-FETID notification	8-174



RTRV-MAP-RING: Retrieve map ring

The RTRV-MAP-RING command retrieves the ring map for one MS-SPRing/BLSR protection group.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
 Priority: 1
 Abortable: Yes.

Input format Command Syntax: RTRV-MAP-RING:*tid*:[*aid*]:*ctag*::[*rid*],[*mapsrc*];

Important! To make sure that the complete ring map information will be given the RTRV-RING-MAP command should always be issued against the UNITE NE within the ring.

Input parameters

Command parameters

1. *tid* – Target Identifier
 See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *aid* – Access Identifier
 This parameter specifies the aid of a MS-SPRing/BLSR protection group or an port aid being a member of the group.
 Option: If *rid* is specified, then *aid* can be omitted.
 Type: AID.
 Range: TwoFibre_ProtGrpAID (not ranged) or FourFibre_ProtGrpAID (not ranged) or SPortAID (not ranged)
3. *ctag* – Correlation Tag
 See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).

RTRV-MAP-RING: Retrieve map ring

4. rid – Ring Identification

See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).

Option: If *aid* is specified, then *rid* can be omitted.

5. mapsrc – Map source

This parameter specifies, how the ring map is derived. The value DCCEI is used if the ring map is derived via the DCF function. The value NVMRING is used if the ring map is derived from non-volatile memory as used by the MS-SPRing/BLSR protection group. The value MANUAL shall be used, if the ring map data which was manually populated by the user and stored in RAM shall be shown.

Note: If NVMRING is specified and there is a valid and complete ringmap in NVM, it will be reported. Otherwise, nothing will be reported.

Type: alphanumeric value set.

Range: DCCEI, NVMRING, MANUAL.

Default: DCCEI.

Output format

After receiving the RTRV-MAP-RING command, the following normal completion response is returned:

```

    sid date time
M  ctag COMPLD
    "aid:rid,localnid:spec_block"
    ...
    ...
    "aid:rid,localnid:spec_block"
;
```

Output parameters

Command parameters

1. aid – Access Identifier
This parameter specifies the aid of 2F-/4F MS-SPRing/BLSR protection.
Type: AID
Range: TwoFibre_ProtGrpAID or FourFibre_ProtGrpAID
2. rid – Ring Identification
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
3. localnid – Local Node ID
This parameter specifies the local node ID of the NE receiving the retrieve request (i.e. the node which has been addressed within RTRV-MAP-Ring command) as used by the MS-SPRing/BLSR APS protocol.
Type: numeric string
Range: 0 .. 15

Spec block parameters

1. nid – Node ID
This parameter specifies the node ID of the NE within the ring as used by the MS-SPRing/BLSR APS protocol. It shall correspond to the first TID in the *linkid* block.
Type: numeric string
Range: 0 .. 15
2. linkId – Link Identifier
This parameter specifies a link connecting two NEs within the ring. It has the following format:
linkid=“{*nename*,[*port*],*direction*},{*nename*,[*port*],*direction*}\”
The first value set of *nename*.*port*, *direction* corresponds to the NE as indicated by parameter *nid*.
The second value set of *nename*.*port*, *direction* corresponds to the NE reachable via the link.
The port and direction may be omitted, if the value mapsrc is MANUAL.
Type: inner string
Range: see parameter description for *nename*.*port*, *direction*
3. nename – NE Name
See definition of parameter *tid* [“RTRV-HDR: Retrieve header” \(5-8\)](#).

RTRV-MAP-RING: Retrieve map ring


4. port – port AID
This parameter specifies the port being a member within the 2-/4-fibre MS-SPRing/BLSR protection group.
Type: AID, in case *nename* denotes the local NE; AID string, in case *nename* denotes another NE in the ring.
Range: SPortAID, in case of an AID; up to 20 characters otherwise
Option: The parameter may be omitted if unknown due to link failure.
5. direction – Direction
This parameter specifies the side role of the corresponding port within the protection group. The value E is used for the east side. The value W is used for the west side.
Type: alphanumeric value set
Range: E, W
Option: The parameter may be omitted if unknown due to link failure.
6. continuity – Link Continuity Status
This parameter specifies the link continuity status of a port. The following values are supported:
 - UP – The link is working.
 - DOWN – The link has failed.
 - OPEN – The link is non-existent, as in an open ring.
 - UNKNOWN – The link ID has not been established.
 - ISOLATED – The link is in an isolated part of a segmented ring.
 Type: alphanumeric value set.
Range: UP, DOWN, OPEN, UNKNOWN, ISOLATED.
7. net – Network Entity Title
This parameter specifies the NSAP (Network Service Access Point) with the last byte (SEL byte – see NSAP format) set to 00 (hex) for the node with TID as specified for the first *nename* within *linkid* list.
Type: Hexadecimal digit string
Range: 40 characters

Detailed behavior description

For open rings, the output starts at the end with the lower *nid* value and continuous to the other end. For closed rings, the output starts at

the node with the lowest *nid* value and continues in the direction of the first node's east neighbor.


Example input/output Ring map for an open ring – example 1

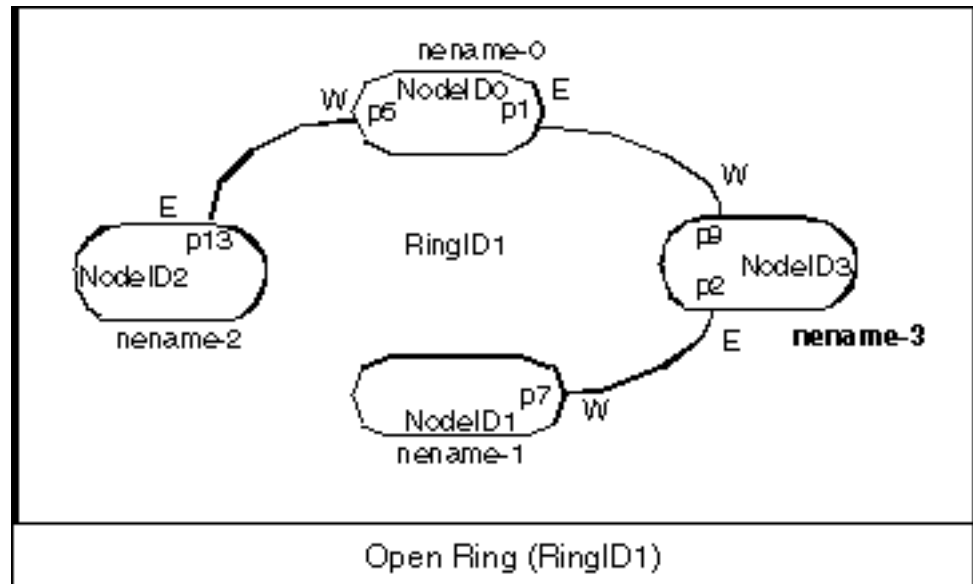

RTRV-MAP-RING for example 1:

```
RTRV-MAP-RING:NENAME-1:1-1-f01:123456;
    NENAME-1 98-01-01 08:00:00
M 123456 COMPLD
"1-1-f01:\\"RingID1\\",1:nid=1,linkid=\\"{nename-1,
1-1-#-#-4-7,W},{nename-3,1-1-#-#-2-2,E}\\",
continuity=UP,
net=39840F800000000000000000000000000000000000000000a100"
"1-1-f01:\\"RingID1\\",1:nid=3,linkid=\\"{nename-3,
1-1-#-#-3-9,W},{nename-0,1-1-#-#-1-1,E}\\",
continuity=UP,
net=39840F8000000000000000000000000000000000000000a300"
"1-1-f01:\\"RingID1\\",1:nid=0,linkid=\\"{nename-0,
1-2-#-#-2-5,W},{nename-2,1-2-#-#-1-13,E}\\",
continuity=UP,
net=39840F8000000000000000000000000000000000000000a000"
"1-1-f01:\\"RingID1\\",1:nid=2,linkid=\\"{nename-2,,},
{nename-1,,}\\",continuity=OPEN,
net=39840F8000000000000000000000000000000000000000a200"
;
```


Ring map for an closed ring – example 2

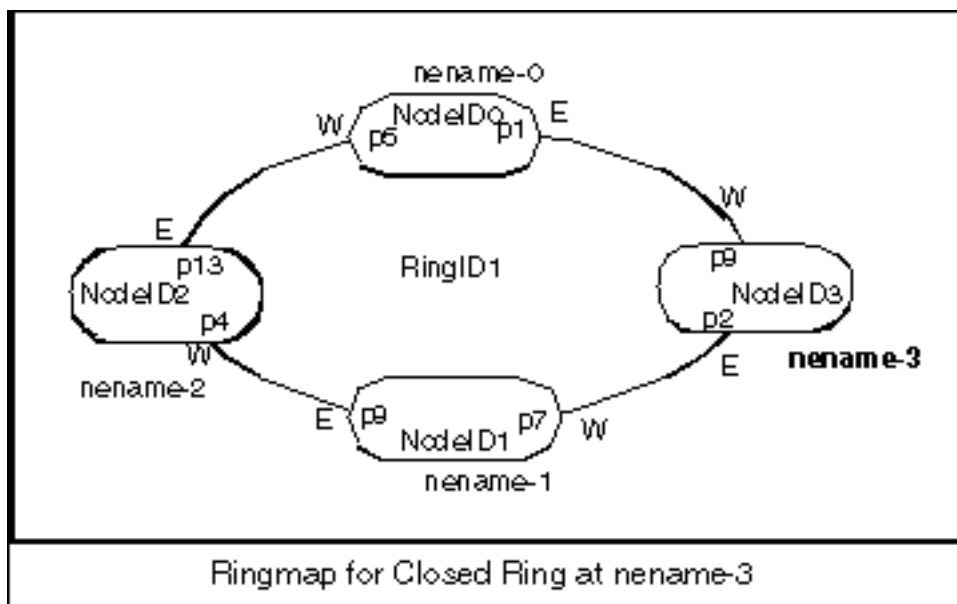

RTRV-MAP-RING for example 2:

```
RTRV-MAP-RING:NENENAME-3::123456:\\"RingID1\\";
NENENAME-3 98-01-01 08:00:
M 123456 COMPLD
    "1-1-f01:\\\"RingID1\\\",3:NID=0,linkid=\\\"{nename-0,
    1-1-#-#-4-1,E},{nename-3,1-1-#-#-2-9,W}\\\" ,
    continuity=UP,
    net=39840F800000000000000000000000000000000000000000a000"
    "1-1-f01:\\\"RingID1\\\",3:NID=3,linkid=\\\"{nename-3,
    1-1-#-#-3-2,E},{nename-1,1-1-#-#-1-7,W}\\\" ,
    continuity=UP,
    net=39840F8000000000000000000000000000000000000000a300"
    "1-1-f01:\\\"RingID1\\\",3:NID=1,linkid=\\\"{nename-1,
    1-1-#-#-4-9,E},{nename-2,1-1-#-#-3-1,W}\\\" ,
    continuity=UP,
    net=39840F8000000000000000000000000000000000000000a100"
    "1-1-f01:\\\"RingID1\\\",3:NID=2,linkid=\\\"{nename-2,
    1-1-#-#-2-13,E},{nename-0,1-1-#-#-1-1,W}\\\" ,
    continuity=UP,
    net=39840F8000000000000000000000000000000000000000a200"
;
```

RTRV-MAP-RING: Retrieve map ring

RTRV-MAP-RING for example 3

```

RTRV-MAP-RING:NENAME-3::123456:"RingID1",MANUAL;
  NENAME-3 98-01-01 08:00:
M 123456 COMPLD
  "1-1-f01:"RingID1",3:NID=0,linkid="{nename-0,,},
  {nename-3,1-1-f01-ww-tr2-1,W}",continuity=UNKNOWN"
  "1-1-f01:"RingID1",3:NID=3,linkid="{nename-3,
  1-1-f01-ew-tr3-1,E},{nename-1,,}",continuity=UNKNOWN"
  "1-1-f01:"RingID1",3:NID=1,linkid="{nename-1,,},
  {nename-2,,}",continuity=UNKNOWN"
  "1-1-f01:"RingID1",3:NID=2,linkid="{nename-2,,},
  {nename-0,,}",continuity=UNKNOWN"
;

```

Related TL1 messages

- [“ENT-ULSDCC-L3: Create a further OSI node” \(12-67\)](#)§
- [“RTRV-MAP-NEIGHBOR: Retrieve map neighbor” \(12-121\)](#)
- [“RTRV-MAP-NETWORK: Retrieve network map” \(12-126\)](#)
- [“ED-MAP-RING: Edit map ring” \(8-165\)](#)
- [“SET-MAP-RING: Set map ring” \(8-168\)](#)
- [“ENT-PROTN-GRP: Enter protection group” \(8-56\)](#)

References GR-199-CORE



ED-MAP-RING: Edit map ring

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
 Priority: 1
 Abortable: No.

Input format Command Syntax: ED-MAP-RING:*tid*:*[aid]*:*ctag*::*[rid]*,*spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *aid* – Access Identifier
 See definition in input parameters section [“RTRV-MAP-RING: Retrieve map ring” \(8-158\)](#).
3. *ctag* – Correlation Tag
 See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. *rid* – Ring Identification
 See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
 Option: If *aid* is specified, then *rid* can be omitted. If *rid* is omitted, the *aid* parameter is used to select a ring. The values of *aid* and *rid* must not both be omitted.

Spec block parameters

1. *localnid* – Local Node ID
 See definition in output parameters section [“RTRV-MAP-RING: Retrieve map ring” \(8-158\)](#).
 Option: The operator is responsible of the uniqueness of the value in the ring.
2. *ringdir* – Ring Direction
 This parameter indicates whether the local node’s east or west provisioned or hardwired direction port is connected to the next node in the ring map.
 Type: alphanumeric string.
 Range: E.

3. **rnids – Ring Node Identifiers**
This is an ampersand-separated list with a maximum of 16 entries, where each entry is an integer between 0 and 15. The first entry shall be the lowest numbered node ID on the ring. Each subsequent value is the node ID of the next node on the ring. Each permitted value may only be used once in the list. The number of values defines the number of nodes on the ring. If the number of nodes specified is smaller than previously specified, those unspecified entries in the ring map are set to the default value.
Type: string.
Range: All permutations of a subset of {0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15} separated by a '&'.
4. **rtids – Ring Node Target Identifiers**
This is an ampersand-separated list with a maximum of 16 entries, where each entry is a valid TID. Each entry in the list is the TID corresponding to the entry in that position of the rnids list. Similarly, if the size of the ring map decreases from the previous ED-MAP-RING command, those unspecified TID entries in the ring map are set to the default value. The number of values for rnids and rtids must be equal.
Option: If *aid* is specified, then *rid* can be omitted.
Type: string.
Range: 16 ampersand-separated TIDs.
Default: None (empty).

Output format After receiving the ED-MAP-RING command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

Output parameters See definition in output parameters section in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description For open rings, the output shall start at the end with the lower *nid* value and shall continue to the other end. For closed rings, the output shall start at the node with the lowest *nid* value and shall continue in the direction of the first node's east neighbor.

Example input/output

The following is an example of the ED-MAP-RING command. Manually, node numbers 3 for NENAME-1, 14 for NENAME-2 and 8 for NENAME-3 are assigned:

```
ED-MAP-RING:NENAME-1::123456::RingID:rnids=3&14&8,  
rtids=NENAME-1&NENAME-2&NENAME-3;  
    NENAME-1 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

Related TL1 messages

- [“ED-FETID: Edit Far End Target Identifier” \(8-171\)](#)§
- [“ED-PROTN-GRP: Edit protection group” \(8-80\)](#)
- [“ENT-PROTN-GRP: Enter protection group” \(8-56\)](#)
- [“RTRV-MAP-RING: Retrieve map ring” \(8-158\)](#)
- [“SET-MAP-RING: Set map ring” \(8-168\)](#).

References GR-199-CORE



SET-MAP-RING: Set map ring

The SET-MAP-RING command writes the transitional, manually provisioned ring map to NVM for use by the MS-SPRing/BLSR protection group.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
 Priority: 1
 Abortable: No

Input format Command Syntax: SET-MAP-RING:*tid*:[*aid*]:*ctag*::[*rid*];

Input parameters

Command parameters

1. *tid* – Target Identifier
 See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *aid* – Access Identifier
 See definition in input parameters section [“RTRV-MAP-RING: Retrieve map ring” \(8-158\)](#).
3. *ctag* – Correlation Tag
 See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. *rid* – Ring Identification
 See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
 Option: If *aid* is specified, then *rid* can be omitted.

Output format After receiving the SET-MAP-RING command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

Output parameters See definition in output parameters section in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The SET-MAP-RING command is used to move the transitional manually provisioned ring map to NVM for use by the BLSR port protection group. This command will be denied if automatic ring discovery is enabled.

The SET-MAP-RING command is also denied if the list does not contain the local node, if the list does not contain at least 2 nodes, or if duplicate nid values appear in the list. The SET-MAP-RING command generates a REPT DBCHG message.

Example input/output

The following is an example of a SET-MAP-RING command:

```
SET-MAP-RING:NENAME-1::123456::rid1;  
    NENAME-1 98-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Validation rule: Automatic ring discovery to be disabled

If the automatic ring discovery is enabled, the following error response shall be returned:

Error Code: SNVS - Status, Not Valid State

Related TL1 messages

- [“ED-FETID: Edit Far End Target Identifier” \(8-171\)](#)§
- [“ED-MAP-RING: Edit map ring” \(8-165\)](#)
- [“ED-PROTN-GRP: Edit protection group” \(8-80\)](#)
- [“ENT-PROTN-GRP: Enter protection group” \(8-56\)](#)

References

GR-199-CORE



SET-MAP-RING: notification

Output format The SET-MAP-RING notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

Command Syntax: SET-MAP-RING:*aid*;

Output parameters

Command parameters

1. tid – Target Identifier
See definition in input parameters section [“SET-MAP-RING: Set map ring” \(8-168\)](#).
2. aid – Access Identifier
See definition in input parameters section [“SET-MAP-RING: Set map ring” \(8-168\)](#).
3. rid – Ring Identification
See definition in input parameters section [“SET-MAP-RING: Set map ring” \(8-168\)](#).

Example input/output The following example reports the creation of a ring map in LT-UNITE's NVM:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
  "TIME=15-00-00,DATE=00-11-03:SET-MAP-RING:rid1"
;
```



ED-FETID: Edit Far End Target Identifier

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S3
Priority: 1
Abortable: No

Input format Command Syntax: ED-FETID:*tid*:[*aid*]:*ctag*::[*rid*],*spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *aid* – Access Identifier
See definition in input parameters section [“RTRV-MAP-RING: Retrieve map ring” \(8-158\)](#).
3. *ctag* – Correlation Tag
See definition in input parameters section [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. *rid* – Ring Identification
See definition in output parameters section [“RTRV-PROTN-GRP: Retrieve protection group” \(8-13\)](#).
Option: If *aid* is specified, then *rid* can be omitted. If *rid* is omitted, the *aid* parameter is used to select a ring. The values of *aid* and *rid* must not both be omitted.

Spec block parameters

1. oldtid – Old Target Identifier
This parameter is the previous TID of a remote node on the ring which may be associated with one or more local cross-connections.
Type: identifier, in addition the special character underscore ("_") and the password characters are allowed.
Range: 1 to 20 characters.
Default: LUCENT-UNITE-NE.
2. newtid – New Target Identifier
The newtid parameter is the previous TID of a remote node on the ring which may be associated with one or more local cross-connections.
Type: identifier, in addition the special character underscore ("_") and the password characters are allowed.
Range: 1 to 20 characters.
Default: LUCENT-UNITE-NE.

Output format After receiving the ED-MAP-RING command, the following normal completion response shall be returned:

```
sid date time
M ctag COMPLD
;
```

Output parameters See definition in output parameters section in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description The ED-FETID command is used to update the TID of a remote node on the ring which may be associated with one or more local cross-connections. The command can only be applied when automatic ring discovery is disabled. The network provider would then have to issue this command to every node on the ring. The ED-FETID command generates a REPT-DBCHG message.

Example input/output The following is an example of the ED-FETID command:

```
ED-FETID:NENAME-1::123456::RingID:oldtid=NENAME-
2,newtid=NENAME-3;
NENAME-1 98-01-01 08:00:00
M 123456 COMPLD
;
```

Error responses

Validation rule: Automatic ring discovery to be disabled

If the automatic ring discovery is enabled, the following error response shall be returned:

Error Code: SNVS - Status, Not Valid State

Related TL1 messages

- [“ED-MAP-RING: Edit map ring” \(8-165\)](#)
- [“RTRV-MAP-RING: Retrieve map ring” \(8-158\)](#)
- [“SET-MAP-RING: Set map ring” \(8-168\)](#).

References GR-199-CORE



ED-FETID notification

Output format The SET-MAP-RING notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

Command Syntax: ED-FETID:*tid*:[*aid*]:*ctag*::[*rid*],*spec_block*;

Output parameters

Command parameters

1. tid – Target Identifier
See definition in input parameters section [“ED-FETID: Edit Far End Target Identifier” \(8-171\)](#).
2. aid – Access Identifier
See definition in input parameters section [“ED-FETID: Edit Far End Target Identifier” \(8-171\)](#).
3. rid – Ring Identification
See definition in input parameters section [“ED-FETID: Edit Far End Target Identifier” \(8-171\)](#).

Spec block parameters

1. oldtid – Old Target Identifier
See definition in input parameters section [“ED-FETID: Edit Far End Target Identifier” \(8-171\)](#).
2. newtid – New Target Identifier
See definition in input parameters section [“ED-FETID: Edit Far End Target Identifier” \(8-171\)](#).

Example input/output The following example reports the change of a TID in an NE’s ring map for a 4 fibre MS-SPRing/BLSR protection group:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
  "TIME=15-00-00,DATE=00-11-03:ED-FETID:RingID:oldtid=NE_
  1,newtid=NE_2"
;
```





9 TL1 messages - performance monitoring

Overview

Purpose This section contains the TL1 interface definition for the domain “performance monitoring”.

Contents

<u>PM register/bin</u>	<u>9-2</u>
<u>PM parameters</u>	<u>9-3</u>
<u>RTRV-PM: Retrieve performance monitoring</u>	<u>9-7</u>
<u>RTRV-EPM: Ethernet performance monitoring</u>	<u>9-15</u>
<u>TCA notification</u>	<u>9-19</u>
<u>TCA Profile</u>	<u>9-22</u>
<u>TCA Profile</u>	<u>9-23</u>
<u>RTRV-TCA-PROF: Retrieve TCA Profile</u>	<u>9-25</u>
<u>ENT-TCA-PROF: Enter TCA Profile</u>	<u>9-60</u>
<u>ENT-TCA-PROF notification</u>	<u>9-63</u>
<u>ED-TCA-PROF: Edit TCA profile</u>	<u>9-81</u>
<u>ED-TCA-PROF notification</u>	<u>9-101</u>
<u>DLT-TCA-PROF: Delete TCA Profile</u>	<u>9-119</u>
<u>DLT-TCA-PROF notification</u>	<u>9-122</u>
<u>System Start-up with Default DB</u>	<u>9-123</u>



PM register/bin

Overview

Purpose This section contains the TL1 interface definitions listed below.

Contents

PM parameters	9-3
RTRV-PM: Retrieve performance monitoring	9-7
RTRV-EPM: Ethernet performance monitoring	9-15
TCA notification	9-19



PM parameters

PM parameter overview

This section gives an overview of all PM parameters and the associated TCA profiles. Overview tables are given for the entities supporting of PM parameters:

- SONET ports/tribs
- SDH ports/tribs
- Ethernet ports.

Each table consists of the following rows:

- PM parameter short name (as defined in the *montype* parameter)
- PM parameter long name
- associated TCA profile type (as defined in the *pftype* parameter).

Note: If thresholding is not applicable for a PM parameter, the value 'None' is specified as associated profile type.

SONET PM parameter table

Short name	Long name	Profile type
CVS	Code Violation Section	SECTION-LINE
ESS	Errored Second Section	SECTION-LINE
SESS	Severely Errored Second Section	SECTION-LINE
SEFS-S	Severely Errored Framing Second Section	SECTION-LINE
LOSS-S	LOS Second Section	None
CVL	Code Violation Line	SECTION-LINE
ESL	Errored Second Line	SECTION-LINE
SESL	Severely Errored Second Line	SECTION-LINE
UASL	Unavailable Second Line	SECTION-LINE
FECC-L	Forward Error Correction Corrected Line	SECTION-LINE
AISS-L	AIS Second Line	None
FC-L	Failure Count Line	None
CV-LFE	Code Violation Line Far End	SECTION-LINE
ES-LFE	Errored Second Line Far End	SECTION-LINE
SES-LFE	Severely Errored Second Line Far End	SECTION-LINE

Short name	Long name	Profile type
UAS-LFE	Unavailable Second Line Far End	SECTION-LINE
FC-LFE	Failure Count Line Far End	None
CVP	Code Violation Path	PATH
ESP	Errored Second Path	PATH
SESP	Severely Errored Second Path	PATH
UASP	Unavailable Second Path	PATH
FC-P	Failure Count Path	None
CV-PFE	Code Violation Path Far End	PATH
ES-PFE	Errored Second Path Far End	PATH
SES-PFE	Severely Errored Path Line Far End	PATH
UAS-PFE	Unavailable Second Path Far End	PATH
FC-PFE	Failure Count Path Far End	None

SDH PM parameter table

Short Name	Long Name	Profile Type
RS-N-ES	RS Near End Errored Second	RS-MS
RS-N-SES	RS Near End Severely Errored Second	RS-MS
RS-N-BBE	RS Near End Background Block Error	RS-MS
RS-N-UAS	RS Near Unavailable Second	RS-MS
MS-N-ES	MS Near End Errored Second	RS-MS
MS-N-SES	MS Near End Severely Errored Second	RS-MS
MS-N-BBE	MS Near End Background Block Error	RS-MS
MS-N-UAS	MS Near Unavailable Second	RS-MS
MS-N-FECC	MS Near End Forward Error Correction Corrected	RS-MS
MS-F-ES	MS Far End Errored Second	RS-MS
MS-F-SES	MS Far End Severely Errored Second	RS-MS
MS-F-BBE	MS Far End Background Block Error	RS-MS
MS-F-UAS	MS Far Unavailable Second	RS-MS
VC-N-ES	VC Near Unavailable Second	HOVC
VC-N-SES	VC Near End Errored Second	HOVC

Short Name	Long Name	Profile Type
VC-N-BBE	VC Near End Severely Errored Second	HOVC
VC-N-UAS	VC Near End Background Block Error	HOVC
VC-F-ES	VC Far End Errored Second	HOVC
VC-F-SES	VC Far End Severely Errored Second	HOVC
VC-F-BBE	VC Far End Background Block Error	HOVC
VC-F-UAS	VC Far Unavailable Second	HOVC

Ethernet PM parameter table

Short Name	Long Name	Profile Type
CBR	Count (number) of MegaBytes (10e6 octets) Received	None
CBS	Count (number) of MegaBytes (10e6 octets) Sent	None
PDE	number of Errored Packets Dropped	ENET

Details for PM parameters with no thresholding

Below those PM parameters are described which do not support thresholding. All other parameters which support thresholding are described in the Output Parameters section of RTRV-TCA-PROF.

SONET PM parameters

1. qhaissl
Description: 15-minute AISS-L bin for OC-n.
Type: integer
Range: 0-900
2. dayaissl
Description: Day AISS-L bin for OC-n.
Type: integer
Range: 0-86400
3. qhlosss
Description: 15-minute LOSS-S bin for OC-n.
Type: integer
Range: 0-900

4. daylosss
Description: Day LOSS-S bin for OC-n.
Type: integer
Range: 0-86400
5. qhfcl
Description: 15-minute FC-L and FC-LFE bin for OC-n lines
Type: integer
Range: 0-900
6. dayfcl
Description: Day FC-L and FC-LFE bin for OC-n lines
Type: integer
Range: 0-86400
7. qhfcp
Description: 15-minute FC-P and FC-PFE bin for STS1 and STS1-xC (x=3, 12, 48, 192) tributaries
Type: integer
Range: 0-900
8. dayfcp
Description: Day FC-P and FC-PFE bin for STS1 and STS1-xC (x=3, 12, 48, 192) tributaries
Type: integer
Range: 0-86400

Ethernet PM parameters

1. qhcbr
Description: 15-minute CBR for a Ethernet port
Type: integer
Range: 0-110000
2. daycbr
Description: Day CBR for a Ethernet port.
Type: integer
Range: 0-10560000
3. qhcbs
Description: 15-minute CBS for a Ethernet port
Type: integer
Range: 0-110000
4. daycbs
Description: Day CBS for a Ethernet port.
Type: integer
Range: 0-10560000



RTRV-PM: Retrieve performance monitoring

The RTRV-PM command is initiated by a user to request the NE to send the current and/or historical Performance Monitoring (PM) data associated with one or more facilities. For each value in the *montype* parameter of the RTRV-PM Input parameters section PM counter values will be stored in the current 15-minute period, the 32 previous 15-minute periods (past 8 hours worth of data), current day, and previous day periods.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): PM1
Priority: 1
Abortable: Yes.

Input format Command Syntax:
RTRV-PM-*modifier:tid:aid:ctag::[montype], [monlev], [locn],,tmper,*
[mondatt], [montm];

Input parameters

Command parameters

1. **modifier**
This parameter indicates the port type or tributary on which the RTRV-PM command is to act on.
Type: alphanumeric value set
Range: The following values are for SONET only: STS1, STS3C, STS12C, STS48C, STS192C, OC3, OC12, OC48, OC192, OC768.
The following values are for SDH only: VC3, VC4, VC44C, VC416C, VC464C, STM1, STM4, STM16, STM64, STM256.
2. **tid – Target Identifier**
See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

3. aid – Access Identifier

Type: AID

Range: For STM<N> and OC<N> modifiers only: SPortAID.

For VC3, VC4, VC44C, VC416C, VC464C, STS1, STS3C, STS12C, STS48C and STS192C modifiers only: STS1NumAID.

And for VC4 and STS1 modifiers also: VCGNumAID.

Range is supported up to shelf level or system level; i.e.

ALL-ALL-#-#-ALL-ALL (on port level).

ALL-ALL-#-#-ALL-ALL-ALL (on tributary level).

4. ctag – Correlation Tag

See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

5. montype – Monitored parameter type

This is the monitored parameter type for which data is requested.

If the value is omitted, this parameter defaults to ALL.

Type: value set

Range: The following values are for all OC<N> modifiers only:

CVS, ESS, SESS, SEFS-S, LOSS-S, CVL, ESL, SESL, UASL, AISS-L, FC-L, CV-LFE, ES-LFE, SES-LFE, UAS-LFE, FC-LFE.

The following values are also for OC192 and OC768 modifiers only: FECC-L.

The following values are for STS1 (path) and are also applicable to STS3C, STS12C, STS48C and STS192C modifiers only: CVP, ESP, SESP, UASP, FC-P, CV-PFE, ES-PFE, SES-PFE, UAS-PFE, FC-PFE.

The following values are for all STM<N> modifiers only:

RS-N-ES, RS-N-SES, RS-N-BBE, RS-N-UAS, MS-N-ES, MS-N-SES, MS-N-BBE, MS-N-UAS, MS-F-ES, MS-F-SES, MS-F-BBE, MS-F-UAS.

The following values also are for STM64 and STM256 modifiers only: MS-N-FECC.

The following values are for VC3, VC4, VC44C, VC416C and VC464C modifiers only: VC-N-ES, VC-N-SES, VC-N-BBE, VC-N-UAS, VC-F-ES, VC-F-SES, VC-F-BBE, VC-F-UAS.

The following value is also allowed for all input modifiers: ALL.

Default: ALL.

6. monlev – Monitored Level

This parameter provides the level for the monitored PM parameter. The parameter is only evaluated if the value of *montype* parameter is ALL.

Type: value set.

Range:

- 1-UP: Means the NE will report, non-zero data only.
- 0-UP: Means the NE will report zero and all positive data. If *monlev* is 0-UP, AID ranging must be below slot level.

Default: 1-UP.

7. locn – Location

Location for which the PM data is monitored. The parameter value is only considered if the *montype* value is ALL; otherwise it is ignored for the calculation of the command reply (i.e has no impact on the command).

Type: value set.

Range:

- NEND: Near-End PM data is requested.
- FEND: Far-End PM data is requested.
- ALL: All near-end and far-end data is requested. It applies only to input direction.

Default: ALL.

8. tmper – Time Period

This requests PM data for a specified time interval.

Type: value set.

Range:

- 15-MIN: This requests PM data in 15-minute intervals
- 1-DAY: This requests daily PM data.

9. mondat – Monitored Date

This requests the beginning date of the interval for which the PM data is to be reported. For both values of tmper parameter, the maximum allowable range of valid dates includes the current and previous one day.

Type: value set.

Range:

- MM-DD: Month-Day. A leading zero (first M or first D) is optional and may be omitted.
- ALL: Current and previous day.

Default: Current date

10. montm – Monitored Time

This parameter specifies the beginning time of day of the requested PM period that was set by ***tmper*** parameter. The user is able to specify a monitored time in three modes:

- a. A monitored time interval (i.e., from hour-minutes to hour-minutes: HOD-MOH&&THOD-TMOH).
- b. A single time interval (i.e., the hour and minutes for the appropriate 15 minute data: HOD-MOH).
- c. All applicable beginning times for the given ***mondatt*** value (i.e., all).

Where HOD-MOH represents the start of the requested PM retrieval period (hours and minutes) and THOD-TMOH represents the end of the requested PM retrieval period. The value ALL must be used if the ***mondatt*** value provided is ALL.
Type: character string.

Range:

- HOD-MOH: This specifies the beginning time of day of the requested PM period that was set by ***tmper*** parameter. This parameter may be omitted or have one of the following values: Hour Of Day- Minute Of Hour, where HOD ranges from 0 to 23 and MOH is 0, 15, 30 and 45. A leading zero is optional. For example, 00 means 0.
- THOD-TMOH: To Hour Of Day-To Minute Of Hour, where THOD ranges from 0 to 23 and TMOH is 0, 15, 30 and 45. A leading zero is optional. For example, 00 means 0. Parameter grouping is used when specifying THOD-TMOH. For example, 08-15&&09-00 specifies the HOD-MOH and THOD-TMOH of 08-15 and 09-00, respectively. THOD-TMOH of \$\$-\$\$ indicates the current Hour Of Day-Minute Of Hour. THOD-TMOH of ##-## indicates the previous 15-min interval.
- ALL: All applicable beginning times for the given ***mondatt*** value.

If the ***tmper*** value is 1-DAY, the ***montm*** parameter will not be used.

Default:

If THOD-TMOH is not specified, only the PM data for the retrieval period specified by HOD-MOH will be retrieved.

If HOD-MOH is omitted, the PM period for the current time will be reported.

Output format If the NE fully complies with the RTRV-PM request, the following normal completion response is returned:

```
      sid date time
M  ctag COMPLD
    "aid:montype,monval,[validity],[tca],[locn],,tmper,
    [mondat],[montm]"
    . . . . .
    . . . . .
    . . . . .
;
```

Note: The trailing comma has to be present even if the optional parameter is not supported for a dedicated release.

The output parameters *sid*, *date*, *time* and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Normal completion message – empty reply

If there is no PM data stored within the NE, then the following response is returned:

```
      sid date time
M  ctag COMPLD
;
```

Output parameters

1. aid – Access Identifier
Description: Access identifier.
Type: AID
Range: For STM<N> and OC<N> modifiers only: SPortAID.
For VC3, VC4, VC44C, VC416C, VC464C, STS1, STS3C, STS12C, STS48C and STS192C modifiers only: STS1NumAID.
And for VC4 and STS1 modifiers also: VCGNumAID
2. montype – Monitored Parameter Type
See montype in the input parameters section.

3. monval – Monitored Value

This parameter specifies the measured value of the parameter specified in montype.

Type: integer.

Range: 0-4294967295

The specified range is the maximal range taking all PM parameters into consideration. Specific PM parameters may have a smaller range.

W.r.t. value range for the specific PM parameters see

- Output Parameters section in RTRV-TCA-PROF (if thresholding is applicable for that parameter)
- PM parameter introduction section (if thresholding is not applicable for that parameter).

4. validity – validity indicator

This parameter indicates the validity of the PM data.

Type: integer.

Range: 1: valid; (omitted): non-valid.

5. tca – Threshold Crossing Alert

Type: value set.

Range: tca, indicates that for the affected interval a tca alarm is/was active. If the value is omitted, it indicates that no tca alarm is/was active in the affected interval.

6. locn – Location

Location for which the PM data is monitored.

Type: value set.

Range:

- NEND: Near-End PM data is requested
- FEND: Far-End PM data is requested.

7. tmper – Time Period

See in the input parameters section.

8. mondat – Monitored Date
This parameter specifies the beginning date of the interval for which the PM data is reported. The parameter can be omitted in case of current date.
Type: value set.
Range: MM-DD: Month-Day
Default: Current date
9. montm – Monitored Time
This parameter specifies the beginning time of day for the reported pm register. The parameter is optional and may be omitted for the reporting of current bins (registers).
Type: character string.
Range: HOD-MOH: HOD ranges from 0 to 23; MOH is 0, 15, 30 and 45. A leading zero is optional. For example, 00 means 0.

Example input/output

The following example shows the successful completion of a RTRV-PM command by the NE for a VC3:

```
RTRV-PM-vc3:UNITE-NE:1-1-#-#-5-1-27:123456::vc-f-es,1-  
up,,,15-min ,,  
00-00&&08-00;  
UNITE-NE 00-01-01 08:00:00  
M 123456 COMPLD  
"1-1-#-#-5-1-27:vc-f-es,17,,tca,,,15-min,,00-00"  
"1-1-#-#-5-1-27:vc-f-es,10,,tca,,,15-min,,00-15"  
.  
.  
.  
"1-1-#-#-5-1-27:vc-f-es,15,,tca,,,15-min,,08-00"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-PM command. See also subsection ‘Partial Completion on RTRV Commands’ w.r.t. handling of internal error (e.g. communication to XC320 fails) for a subset of replies.

Related TL1 messages

- [“RTRV-EPM: Ethernet performance monitoring” \(9-15\)](#)
- [“DLT-TCA-PROF: Delete TCA Profile” \(9-119\)](#)
- [“ED-TCA-PROF: Edit TCA profile” \(9-81\)](#)

RTRV-PM: Retrieve performance monitoring

- [“ENT-TCA-PROF: Enter TCA Profile” \(9-60\)](#)
- [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#)

References GR-833-CORE



RTRV-EPM: Ethernet performance monitoring

The RTRV-EPM command is initiated by a user to request the NE to send the current and/or historical Performance Monitoring (PM) data associated with one or more Ethernet ports. For each value in the ***emontype*** parameter of the RTRV-EPM Input Parameters section PM counter values will be stored in the current 15-minute period, the 32 previous 15-minute periods (past 8 hours worth of data), current day, and previous day periods.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): PM1
 Priority: 1
 Abortable: Yes.

Input format Command Syntax:
 RTRV-EPM-***modifier***:***tid***:***aid***:***ctag***::[***emontype***], [***monlev***],***tmper***,
 [***mondatt***], [***montm***];

Input parameters

Command parameters

1. **modifier**
 This parameter indicates the Ethernet port on which the RTRV-EPM command is to act on.
 Type: alphanumeric value set
 Range: ENET.
2. **tid – Target Identifier**
 See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. **aid – Access Identifier**
 Type: AID.
 Range: EPortAID, VCGAID.
 Range is supported up to shelf level or system level; i.e.
 ALL-ALL-#-#-ALL-ALL (range over EPortAID)
 ALL-ALL-#-#-ALL-vALL (range over VCGAID).
4. **ctag – Correlation Tag**
 See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#) in the input parameters section.

5. emontype – Monitored parameter type
This is the monitored parameter type for which data is requested.
If the value is omitted, this parameter defaults to ALL.
Type: value set.
Range: CBR, CBS, PDE.
The following value is for input monitored type only: ALL.
Default: ALL.
6. monlev – Monitored Level
See definition in [“RTRV-PM: Retrieve performance monitoring” \(9-7\)](#) in the input parameters section.
7. tmper – Time Period
See definition in [“RTRV-PM: Retrieve performance monitoring” \(9-7\)](#) in the input parameters section.
8. mondat – Monitored Date
See definition in [“RTRV-PM: Retrieve performance monitoring” \(9-7\)](#) in the input parameters section.
9. montm – Monitored Time
See definition in [“RTRV-PM: Retrieve performance monitoring” \(9-7\)](#) in the input parameters section.

Output format

Normal completion message

If the NE fully complies with the RTRV-PM request, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
  "aid,aidtype:emontype,monval,[validity],[tca],tmper,
  [mondat],[montm]"
;
```

The output parameters *sid*, *date*, *time* and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Normal completion message – empty reply

If there is no PM data stored within the NE, then the following response is returned:

```
sid date time
```

M ctag COMPLD
;

Output parameters

1. aid – Access Identifier
Description: Access identifier.
Type: AID.
Range: EPortAID, VCGAID.
2. aidtype - Aid type
Type: value set.
Range: ENET
3. emontype – Monitored parameter type
See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#) in the input parameters section.
4. monval – Monitored Value
This parameter contains the measured value of the parameter specified in *montype*.
Type: integer.
Range: 0-4294967295
The specified range is the maximal range taking all PM parameters into consideration. Specific PM parameters may have a smaller range.
W.r.t. value range for the specific PM parameters see
 - PM parameter introduction section (if thresholding is not applicable for that parameter).
5. validity – validity indicator
See definition in [“RTRV-PM: Retrieve performance monitoring” \(9-7\)](#) in the output parameters section.
6. tca – Threshold Crossing Alert
See definition in [“RTRV-PM: Retrieve performance monitoring” \(9-7\)](#) in the output parameters section.
7. tmper – Time Period
See definition in [“RTRV-PM: Retrieve performance monitoring” \(9-7\)](#) in the input parameters section.

8. mondat – Monitored Date
See definition in [“RTRV-PM: Retrieve performance monitoring” \(9-7\)](#) in the output parameters section.
9. montm – Monitored Time
See definition in [“RTRV-PM: Retrieve performance monitoring” \(9-7\)](#) in the output parameters section.

Example input/output

The following example shows the successful completion of a RTRV-EPM command by the NE:

```
RTRV-EPM-ENET:UNITE-NE:1-1-#-#-01-1:123456::PDE,,  
15-MIN,01-01,08-00;  
UNITE-NE 00-01-01 08:00:00  
M 123456 COMPLD  
"1-1-#-#-01-1,ENET:PDE,2,,,15-MIN,01-01,08-00"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there also apply to the RTRV-EPM command.

Related TL1 messages

- [“RTRV-PM: Retrieve performance monitoring” \(9-7\)](#)
- [“DLT-TCA-PROF: Delete TCA Profile” \(9-119\)](#)
- [“ED-TCA-PROF: Edit TCA profile” \(9-81\)](#)
- [“ENT-TCA-PROF: Enter TCA Profile” \(9-60\)](#)
- [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#)

References

GR-833-CORE



TCA notification

Output format The Threshold Crossing Alert (TCA) notification shall use the general format of a REPT EVT notification.

Command syntax: REPT EVT *modifier*

aid:condtype,condeff,ocrdat,ocrtm,,,,thlev,tmper:conddescr

Output parameter

1. modifier
2. aid – Access Identifier
Type: AID
Range:
 - for STM<N> and OC<N> ports: SPortAID
 - for STS/VC tribs: STS1NumAID
 - for VCGtribs: VCGNumAID
 - for Ethernet ports: EPortAID VCGAID.
3. condeff – Condition Effect
See definition in section Output parameters of [“REPT EVT: Report event” \(6-47\)](#).
4. conddescr – Description Of The Condition
The general format is: category, entity, description, additional text. If there is no additional text, then the trailing comma may be omitted.
Type: inner string
Range:
 - For STM<N> and OC<N>: Quality of service, {rr} port, TCA where rr is equal to the port rate
 - For VC3, VC4, VC44C, VC416C, VC464C, STS1, STS3C, STS12C, STS48C and STS192C: Quality of service, {rr} CS, TCA where rr is equal to the signal rate
 - For terminated VC4 and STS1signals: Quality of service, {rr} CS, TCA where rr is equal to the Constituent Signal (CS) rate
 - For GE port: Quality of service, GE, TCA
 - For VCG port: Quality of service, VCG, TCA.

5. condtype – Condition Type
This parameter identifies the type of event indication being reported.
Type: inner string with the Format: T-<montype>.
Range:
The following values are for all OC signals: T-CVS, T-ESS, T-SESS, T-SEFS-S, T-CVL, T-ESL, T-SESL, T-UASL, T-CV-LFE, T-ES-LFE, T-SES-LFE, T-UAS-LFE.
The following values are also for OC192 and OC768 signals: T-FECC-L.
The following values are for STS1 (path) and are also applicable to STS3C, STS12C, STS48C and STS192C tributaries: T-CVP, T-ESP, T-SESP, T-UASP, T-CV-PFE, T-ES-PFE, T-SES-PFE, T-UAS-PFE.
The following values are for all STM signals: T-RS-N-ES, T-RS-N-SES, T-RS-N-BBE, T-RS-N-UAS, T-MS-N-ES, T-MS-N-SES, T-MS-N-BBE, T-MS-N-UAS, T-MS-F-ES, T-MS-F-SES, T-MS-F-BBE, T-MS-F-UAS.
The following values also are for STM64 and STM256 signals: T-MS-N-FECC.
The following values are for VC3, VC4, VC44C, VC416C and VC464C tributaries: T-VC-N-ES, T-VC-N-SES, T-VC-N-BBE, T-VC-N-UAS, T-VC-F-ES, T-VC-F-SES, T-VC-F-BBE, T-VC-F-UAS.
For ENET signals: T-PDE.
6. ocrdat – Occurrence Date
Refer to the definition of the **ocrdat** parameter in the Output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
7. ocrtm – Occurrence Time
Refer to the definition of the **ocrtm** parameter in the Output parameters section of the [“RTRV-ALM: Retrieve alarm” \(6-30\)](#) command.
8. thlev – Threshold Level
See definition in [“REPT EVT: Report event” \(6-47\)](#).
9. tmper – Time Period
See definition in [“REPT EVT: Report event” \(6-47\)](#).

Example input/output

TCA alarm for an STS-1 SES of slot 14 for port 3 STS-12 (24h register):

```
UNITE-NE 00-01-01 08:00:50
A 009 REPT EVT STS1
"1-1-#-#-14-3-2:T-SESP,TC,01-10,08-00-49,,,,,250,1-
DAY:\\"Quality of service, STS1 CS, TCA\\""
;
```



TCA Profile

Overview

Purpose This section contains the TL1 interlave definitions listed below.

Contents

TCA Profile	9-23
RTRV-TCA-PROF: Retrieve TCA Profile	9-25
ENT-TCA-PROF: Enter TCA Profile	9-60
ENT-TCA-PROF notification	9-63
ED-TCA-PROF: Edit TCA profile	9-81
ED-TCA-PROF notification	9-101
DLT-TCA-PROF: Delete TCA Profile	9-119
DLT-TCA-PROF notification	9-122
System Start-up with Default DB	9-123



TCA Profile

General The threshold settings for the different PM parameters supporting thresholding is provisionable by means of TCA profiles. The profiles of a certain type contains all pm parameters related to a certain entity supporting enabling/disabling of performance monitoring. Therefore the following profiles types are defined:

- SECTION-LINE - used/referenced by SONET port entities
- RS-MS - used/referenced by SDH port entities
- PATH - used/referenced by SONET tributary entities
- HO-VC - used/referenced by SDH tributary entities
- ENET - used/referenced by Ethernet port entities.

All threshold data of one certain profile type is sometimes also called a profile image. This term may be used in other TCA profiles commands as parameter name. It is then used as an alias for all PM thresholds parameters of the corresponding profile type.

TCA supression can be provisioned by means of setting the corresponding profile parameter to zero.

The system supports two default sets of profiles for each type of TCA profile. One set of default profiles shall contain zero threshold value for each parameter in the profile. Another set of default profiles contains real non-zero threshold value for each parameter in the profile. The name of the zero threshold value default profile shall be "Default0" and the name of the non-zero threshold value default profile shall be "Default".

The number of TCA profiles are limited to a specific number per profile type. This number also includes the system default profiles.

The maximum numbers are for:

- 80 for PATH SDH and PATH SONET together
- 30 for RSMS SDH and section/line SONET together
- 10 for ENET.

The user is able to change the threshold values of the non-zero default profile, but will not be allowed to change its name. The user is not allowed to change the name or the threshold values of the zero default profile.

All the profile pointers are pointed to zero threshold value default profiles when the ports are provisioned. That is, thresholding is not performed as a default. All the profile pointers are pointed to non-zero threshold value default profiles when thresholding is to be performed.

Threshold parameters names are defined using the following pattern:

<bintype>[rtr]<montype><port/trib rate/porttype> with:

- bintype = day (for 24h) or qh (for 15 Min)
- [rtr] = rtr is inserted if the clear threshold is mentioned
- montype = montype as defined in RTRV-PM command
- portrate = oc3, oc12, oc48, oc192, oc768 or stm1, stm4, stm16, stm64, stm256
- trib rate = sts1, sts3c, sts12c, sts48c, sts192c or vc3, vc4, vc44c, vc416c, vc464c
- porttype = ge, vcg.



RTRV-TCA-PROF: Retrieve TCA Profile

General The RTRV-TCA-PROF command allows the user to retrieve either a list of profile names that have been created for a specific profile type or the contents of a profile whose type and name are given in this command. The system supports two default sets of profiles called "DEFAULT" and "DEFAULT0".

Properties Login Privilege: User Privilege Code (UCFC/UCAL): PM1
Priority: 1
Abortable: Yes.

Input format Command Syntax:
RTRV-TCA-PROF:*tid::ctag::pftype*;

Input parameters

Command parameters

1. **tid** – Target Identifier
See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. **ctag** – Correlation Tag
See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. **pftype** – Profile Type
This indicates the type of PM TCA profile for the selected facility.
Type: value set.
Range: SECTION-LINE, RS-MS, HOVC, PATH, ENET.
4. **pfname** – Profile Name
This indicates the name of the PM TCA profile which was already established by the command ENT-TCA-PROF. If this field is NULL, the output will only consist of a list of all profile names for the specific profile type that was requested. If a valid profile name is inserted in this field, the output will display the parameters within the profile with their values. A *pfname* value will always uniquely identify an existing profile for a specified *pftype* value. NULL means, that the Profile Name is omitted.
Type: alphanumeric string.

Range: This is an alphanumeric character string with a maximum of 24 characters.

Default: If this field is NULL, the output will only consist of a list of all profile names for the specific profile type that was requested.

Output format If the system receives this command and the profile name is NULL, the following response is returned:

```
sid date time
M ctag COMPLD
  "pftype:pfname"
  "pftype:pfname"
  "pftype:pfname"
  . . . . .
  . . . . .
;
```

If the system receives this command with a valid profile name, the following response is returned:

```
sid date time
M ctag COMPLD
  "pftype,pfname:spec_block"
;
```

The output parameters *sid*, *date*, *time* and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Command parameters - general profile

1. pftype – Profile Type
See definition in input parameter section.

Command parameters - profile parameters of type SECTION-LINE

1. qhcvsoc3
15-minute CV-S bin for OC-3.
Type: integer
Range: 0-57599100
Default: 140.
2. daycvsoc3
Day CV-S bin for OC-3.
Type: integer
Range: 0-4294967295
Default: 1344.
3. qhcvsoc12
15-minute CV-S bin for OC-12.
Type: integer
Range: 0-57599100
Default: 560.
4. daycvsoc12
Day CV-S bin for OC-12.
Type: integer
Range: 0-4294967295
Default: 5376.
5. qhcvsoc48
15-minute CV-S bin for OC-48.
Type: integer
Range: 0-57599100
Default: 2240.
6. daycvsoc48
Day CV-S bin for OC-48.
Type: integer
Range: 0-4294967295
Default: 21504.
7. qhcvsoc192
15-minute CV-S bin for OC-192.
Type: integer
Range: 0-57599100
Default: 8960.

RTRV-TCA-PROF: Retrieve TCA Profile

8. daycvsoc192
Day CV-S bin for OC-192.
Type: integer
Range: 0-4294967295
Default: 86016.
9. qhcvsoc768
15-minute CV-S bin for OC-768.
Type: integer
Range: 0-57599100
Default: 35840.
10. daycvsoc768
Day CV-S bin for OC-768.
Type: integer
Range: 0-4294967295
Default: 344064.
11. qhess
15-minute ES-S bin.
Type: integer
Range: 0-900
Default: 25.
12. dayess
Day ES-S bin.
Type: integer
Range: 0-86400
Default: 250.
13. qhsess
15-minute SES-S bin.
Type: integer
Range: 0-810
Default: 10.
14. daysess
Day ES-S bin.
Type: integer
Range: 0-77760
Default: 40.

15. qhsefss
15-minute SEFS-S bin.
Type: integer
Range: 0-900
Default: 5.
16. daysefss
Day SEFS-S bin.
Type: integer
Range: 0-86400
Default: 10.
17. qhcvloc3
15-minute CV-L and CV-LFE bin for OC-3.
Type: integer
Range: 0-172799100
Default: 140.
18. daycvloc3
Day CV-L bin and CV-LFE for OC-3.
Type: integer
Range: 0-4294967295
Default: 1344.
19. qhcvloc12
15-minute CV-L and CV-LFE bin for OC-12.
Type: integer
Range: 0-691199100
Default: 560.
20. daycvloc12
Day CV-L bin and CV-LFE for OC-12.
Type: integer
Range: 0-4294967295
Default: 5376.
21. qhcvloc48
15-minute CV-L and CV-LFE bin for OC-48.
Type: integer
Range: 0-4294967295
Default: 2240.

- 22. daycvloc48
Day CV-L and CV-LFE bin for OC-48.
Type: integer
Range: 0-4294967295
Default: 21504.
- 23. qhcvloc192
15-minute CV-L and CV-LFE bin for OC-192.
Type: integer
Range: 0-4294967295
Default: 8960.
- 24. daycvloc192
Day CV-L and CV-LFE bin for OC-192.
Type: integer
Range: 0-4294967295
Default: 86016.
- 25. qhcvloc768
15-minute CV-L and CV-LFE bin for OC-768.
Type: integer
Range: 0-4294967295
Default: 35840.
- 26. daycvloc768
Day CV-L and CV-LFE bin for OC-768.
Type: integer
Range: 0-4294967295
Default: 344064.
- 27. qhesl
15-minute ES-L and ES-LFE bin.
Type: integer
Range: 0-900
Default: 25.
- 28. dayesl
Day ES-L and ES-LFE bin.
Type: integer
Range: 0-86400
Default: 250.

29. qhfeccloc192
15-minute FECC-L bin for OC-192.
Type: integer
Range: 0 - 4294967295
Default: 5184.
30. dayfeccloc192
Day FECC-L bin for OC-192.
Type: integer
Range: 0 - 4294967295
Default: 497644.
31. qhfeccloc768
15-minute FECC-L bin for OC-768.
Type: integer
Range: 0 - 4294967295
Default: 20736.
32. dayfeccloc768
Day FECC-L bin for OC-768.
Type: integer
Range: 0 - 4294967295
Default: 1990656.
33. qhsesl
15-minute SES-L and SES-LFE bin.
Type: integer
Range: 0-810
Default: 10.
34. daysesl
Day SES-L and SES-LFE bin.
Type: integer
Range: 0-77760
Default: 40.

35. qhuasl
15-minute UAS-L and UAS-LFE bin.
Type: integer
Range: 0-900
Default: 10.
36. dayuasl
Day UAS-L and UAS-LFE bin.
Type: integer
Range: 0-86400
Default: 10.

Command parameters - profile parameters of type RS-MS

1. qhrsnbbe
15-minute RS_N_BBE bin.
Type: integer
Range: 0-7199100
Default: 9000.
2. daysrbbe
Day RS_N_BBE bin.
Type: integer
Range: 0-691113600
Default: 48000.
3. qhrsnes
15-minute RS_N_ES bin.
Type: integer
Range: 0-900
Default: 180.
4. daysnes
Day RS_N_ES bin.
Type: integer
Range: 0-86400
Default: 1500.
5. qhrsnes
15-minute RS_N_SES bin.
Type: integer
Range: 0-810
Default: 15.

6. daysnses
Day RS_N_SES bin.
Type: integer
Range: 0-77760
Default: 20.
7. qhrsnuas
15-minute RS_N_UAS bin.
Type: integer
Range: 0-900
Default: 15.
8. daysnuas
Day RS_N_UAS bin.
Type: integer
Range: 0-86400
Default: 20.
9. qhmsbbestm1
15-min MS_N_BBE and MS_F_BBE for stm1 bin.
Type: integer
Range: 0-172799100
Default: 228000.
10. daysbbestm1
Day MS_N_BBE and MS_F_BBE for stm1 bin.
Type: integer
Range: 0-4294967295
Default: 432000.
11. qhmsbbestm4
15-min MS_N_BBE and MS_F_BBE for stm4 bin.
Type: integer
Range: 0-691199100
Default: 912000.
12. daysbbestm4
Day MS_N_BBE and MS_F_BBE for stm4 bin.
Type: integer
Range: 00-4294967295
Default: 1728000.

13. qhmsbbestm16
15-min MS_N_BBE and MS_F_BBE for stm16 bin.
Type: integer
Range: 0-2764799100
Default: 3648000.
14. daymsbbestm16
Day MS_N_BBE and MS_F_BBE for stm16 bin.
Type: integer
Range: 0-4294967295
Default: 6912000.
15. qhmsbbestm64
15-min MS_N_BBE and MS_F_BBE for stm64 bin.
Type: integer
Range: 0-4294967295
Default: 14592000.
16. daymsbbestm64
Day MS_N_BBE and MS_F_BBE for stm64 bin.
Type: integer
Range: 0-4294967295
Default: 27648000.
17. qhmsbbestm256
15-min MS_N_BBE and MS_F_BBE for stm256 bin.
Type: integer
Range: 0-4294967295
Default: 58368000.
18. daymsbbestm256
Day MS_N_BBE and MS_F_BBE for stm256 bin.
Type: integer
Range: 0-4294967295
Default: 110592000.
19. qhmsses
15-minute MS_N_ES and MS_F_ES bin.
Type: integer
Range: 0-900
Default: 50.

20. daymses
Day MS_N_ES and MS_F_ES bin.
Type: integer
Range: 0-86400
Default: 150.
21. qhmsnfecdstm64
15-minute MS-N-FECC bin forSTM-64.
Type: integer
Range: 0 - 4294967295
Default: 5184.
22. daymsnfecdstm64
Day MS-N-FECC bin forSTM-64.
Type: integer
Range: 0 - 4294967295
Default: 49764.
23. qhmsnfecdstm256
15-minute MS-N-FECC bin forSTM-256.
Type: integer
Range: 0 - 4294967295
Default: 20736.
24. daymsnfecdstm256
Day MS-N-FECC bin forSTM-256.
Type: integer
Range: 0 - 4294967295
Default: 1990656.
25. qhmsses
15-minute MS_N_SES and MS_F_SES bin.
Type: integer
Range: 0-810
Default: 10.
26. daymsses
Day MS_N_SES and MS_F_SES bin.
Type: integer
Range: 0-77760
Default: 15.

27. qhmsuas
15-min MS_N_UAS and MS_F_UAS for stm64 bin.
Type: integer
Range: 0-900
Default: 15.
28. daymsuas
Day MS_N_UAS and MS_F_UAS for stm64 bin.
Type: integer
Range: 0-86400
Default: 20.

Command parameters - reset profile parameters of type RS-MS

1. qhrtrrsnbbe
15-minute reset threshold for RS_N_BBE bin.
Type: integer
Range: 0-7199100
Default: 200.
2. dayrtrrsnbbe
Day reset threshold for RS_N_BBE bin.
Type: integer
Range: 0-691113600
Default: 4800.
3. qhrtrrsnes
15-minute reset threshold for RS_N_ES bin.
Type: integer
Range: 0-900
Default: 20.
4. dayrtrrsnes
Day reset threshold for RS_N_ES bin.
Type: integer
Range: 0-86400
Default: 150.
5. qhrtrrsnes
15-minute reset threshold for RS_N_SES bin.
Type: integer
Range: 0-810
Default: 0.

6. dayrtrrsnses
Day reset threshold for RS_N_SES bin.
Type: integer
Range: 0-77760
Default: 0.
7. qhrtrrsnuas
15-minute reset threshold for RS_N_UAS bin.
Type: integer
Range: 0-900
Default: 0.
8. dayrtrrsnuas
Day reset threshold for RS_N_UAS bin.
Type: integer
Range: 0-86400
Default: 0.
9. qhrtrmsbbestm1
15-min MS_N_BBE and MS_F_BBE for stm1 bin.
Type: integer
Range: 0-172799100
Default: 2400.
10. dayrtrmsbbestm1
Day reset threshold for MS_N_BBE and MS_F_BBE for stm1 bin.
Type: integer
Range: 0-4294967295
Default: 43200.
11. qhrtrmsbbestm4
15-min MS_N_BBE and MS_F_BBE for stm4 bin.
Type: integer
Range: 0-691199100
Default: 9600.
12. dayrtrmsbbestm4
Day reset threshold for MS_N_BBE and MS_F_BBE for stm4 bin.
Type: integer
Range: 0-4294967295
Default: 172800.

13. qhrtrmsbbestm16
15-min MS_N_BBE and MS_F_BBE for stm16 bin.
Type: integer
Range: 0-2764799100
Default: 38400.
14. dayrtrmsbbestm16
Day reset threshold for MS_N_BBE and MS_F_BBE for stm16 bin.
Type: integer
Range: 0-4294967295
Default: 691200.
15. qhrtrmsbbestm64
15-min MS_N_BBE and MS_F_BBE for stm64 bin.
Type: integer
Range: 0-4294967295
Default: 153600.
16. dayrtrmsbbestm64
Day reset threshold for MS_N_BBE and MS_F_BBE for stm64 bin.
Type: integer
Range: 0-4294967295
Default: 2764800.
17. qhrtrmsbbestm256
15-min MS_N_BBE and MS_F_BBE for stm256 bin.
Type: integer
Range: 0-4294967295
Default: 614400.
18. dayrtrmsbbestm256
Day reset threshold for MS_N_BBE and MS_F_BBE for stm256 bin.
Type: integer
Range: 0-4294967295
Default: 11059200.
19. qhrtrmses
15-minute reset threshold for MS_N_ES and MS_F_ES bin.
Type: integer
Range: 0-900
Default: 5.

20. daytrmses
Day reset threshold for MS_N_ES and MS_F_ES bin.
Type: integer
Range: 0-86400
Default: 15.
21. qhrtrmsnfecscstm64
15-minute reset threshold for MS-N-FECC bin forSTM-64.
Type: integer
Range: 0 - 4294967295
Default: 0.
22. daytrmsnfecscstm64
Day reset threshold for MS-N-FECC bin forSTM-64.
Type: integer
Range: 0 - 4294967295
Default: 0.
23. qhrtrmsnfecscstm256
15-minute reset threshold for MS-N-FECC bin forSTM-256.
Type: integer
Range: 0 - 4294967295
Default: 0.
24. daytrmsnfecscstm256
Day reset threshold for MS-N-FECC bin forSTM-256.
Type: integer
Range: 0 - 4294967295
Default: 0.
25. qhrtrmses
15-minute reset threshold for MS_N_SES and MS_F_SES bin.
Type: integer
Range: 0-810
Default: 0.
26. daytrmses
Day reset threshold for MS_N_SES and MS_F_SES bin.
Type: integer
Range: 0-77760
Default: 0.

27. qhrtrmsuas
15-min reset threshold for MS_N_UAS and MS_F_UAS.
Type: integer
Range: 0-900
Default: 0.
28. daytrmsuas
Day reset threshold for MS_N_UAS and MS_F_UAS.
Type: integer
Range: 0-86400
Default: 0.

Command parameters - profile parameters of type HO-VC

1. qhvcbbev3
15-minute VC_N_BBE and VC_F_BBE for VC3 bin.
Type: integer
Range: 0-7199100
Default: 36000.
2. dayvcbbev3
Day VC_N_BBE and VC_F_BBE for VC3 bin.
Type: integer
Range: 0-691113600
Default: 48000.
3. qhvcbbev4
15-minute VC_N_BBE and VC_F_BBE for VC4 bin.
Type: integer
Range: 0-7199100
Default: 36000.
4. dayvcbbev4
Day VC_N_BBE and VC_F_BBE for VC4 bin.
Type: integer
Range: 0-691113600
Default: 48000.
5. qhvcbbev44c
15-minute VC_N_BBE and VC_F_BBE for VC44C bin.
Type: integer
Range: 0-7199100
Default: 36000.

6. dayvcbbbev44c
Day VC_N_BBE and VC_F_BBE for VC44C bin.
Type: integer
Range: 0-691113600
Default: 48000.
7. qhvcbbbev416c
15-minute VC_N_BBE and VC_F_BBE for VC416C bin.
Type: integer
Range: 0-7199100
Default: 36000.
8. dayvcbbbev416c
Day VC_N_BBE and VC_F_BBE for VC416C bin.
Type: integer
Range: 0-691113600
Default: 48000.
9. qhvcbbbev464c
15-minute VC_N_BBE and VC_F_BBE for VC464C bin.
Type: integer
Range: 0-7199100
Default: 36000.
10. dayvcbbbev464c
Day VC_N_BBE and VC_F_BBE for VC464C bin.
Type: integer
Range: 0-691113600
Default: 48000.
11. qhvcsv3
15-minute VC_N_ES and VC_F_ES VC3 bin.
Type: integer
Range: 0-900
Default: 150.
12. dayvcsv3
Day VC_N_ES and VC_F_ES VC3 bin.
Type: integer
Range: 0-86400
Default: 600.

13. qhvcesvc4
15-minute VC_N_ES and VC_F_ES for VC4 bin.
Type: integer
Range: 0-900
Default: 180.
14. dayvcesvc4
Day VC_N_ES and VC_F_ES for VC4 bin.
Type: integer
Range: 0-86400
Default: 1500.
15. qhvcesvc44c
15-minute VC_N_ES and VC_F_ES for VC4-4C bin.
Type: integer
Range: 0-900
Default: 180.
16. dayvcesvc44c
Day VC_N_ES and VC_F_ES for VC4-4C bin.
Type: integer
Range: 0-86400
Default: 1500.
17. qhvcesvc416c
15-minute VC_N_ES and VC_F_ES for VC4-16C bin.
Type: integer
Range: 0-900
Default: 180.
18. dayvcesvc416c
Day VC_N_ES and VC_F_ES for VC4-16C bin.
Type: integer
Range: 0-86400
Default: 1500.
19. qhvcesvc464c
15-minute VC_N_ES and VC_F_ES for VC4-64C bin.
Type: integer
Range: 0-900
Default: 180.

20. dayvcsv464c
Day VC_N_ES and VC_F_ES for VC4-64C bin.
Type: integer
Range: 0-86400
Default: 1500.
21. qhvcsesvc3
15-minute VC_N_SES and VC_F_SES for VC3 bin.
Type: integer
Range: 0-810
Default: 15.
22. dayvcsv3
Day VC_N_SES and VC_F_SES for VC3 bin.
Type: integer
Range: 0-77760
Default: 20.
23. qhvcsesvc4
15-minute VC_N_SES and VC_F_SES for VC4 bin.
Type: integer
Range: 0-810
Default: 15.
24. dayvcsv4
Day VC_N_SES and VC_F_SES for VC4 bin.
Type: integer
Range: 0-77760
Default: 20.
25. qhvcsesvc44c
15-minute VC_N_SES and VC_F_SES for VC44C bin.
Type: integer
Range: 0-810
Default: 15.
26. dayvcsv44c
Day VC_N_SES and VC_F_SES for VC44C bin.
Range: 0-77760
Default: 20.
27. qhvcsesvc416c
15-minute VC_N_SES and VC_F_SES for VC416C bin.
Type: integer
Range: 0-810
Default: 15.

- 28. dayvcsevc416c
Day VC_N_SES and VC_F_SES for VC416C bin.
Type: integer
Range: 0-77760
Default: 20.
- 29. qhvcsevc464c
15-minute VC_N_SES and VC_F_SES for VC464C bin.
Type: integer
Range: 0-810
Default: 15.
- 30. dayvcsevc464c
Day VC_N_SES and VC_F_SES for VC464C bin.
Type: integer
Range: 0-77760
Default: 20.
- 31. qhvcuasvc3
15-minute VC_N_UAS and VC_F_UAS for VC3 bin.
Type: integer
Range: 0-900
Default: 15.
- 32. dayvcuasvc3
Day VC_N_UAS and VC_F_UAS for VC3 bin.
Type: integer
Range: 0-86400
Default: 20.
- 33. qhvcuasvc4
15-minute VC_N_UAS and VC_F_UAS for VC4 bin.
Type: integer
Range: 0-900
Default: 15.
- 34. dayvcuasvc4
Day VC_N_UAS and VC_F_UAS for VC4 bin.
Type: integer
Range: 0-86400
Default: 20.

35. qhvcuasvc44c
15-minute VC_N_UAS and VC_F_UAS for VC44C bin.
Type: integer
Range: 0-900
Default: 15.
36. dayvcuasvc44c
Day VC_N_UAS and VC_F_UAS for VC44C bin.
Type: integer
Range: 0-86400
Default: 20.
37. qhvcuasvc416c
15-minute VC_N_UAS and VC_F_UAS for VC416C bin.
Type: integer
Range: 0-900
Default: 15.
38. dayvcuasvc416c
Day VC_N_UAS and VC_F_UAS for VC416C bin.
Type: integer
Range: 0-86400
Default: 20.
39. qhvcuasvc464c
15-minute VC_N_UAS and VC_F_UAS for VC464C bin.
Type: integer
Range: 0-900
Default: 15.
40. dayvcuasvc464c
Day VC_N_UAS and VC_F_UAS for VC464C bin.
Type: integer
Range: 0-86400
Default: 20.
41. qhpjcpos
15-minute positive PJC bin.
Type: integer
Range: 0-1800000
Default: 30.

- 42. daypjcpo
Day positive PJC bin.
Type: integer
Range: 0-172800000
Default: 2880.
- 43. qhpjcneg
15-minute negative PJC bin.
Type: integer
Range: 0-1800000
Default: 30.
- 44. daypjcneg
Day negative PJC bin.
Type: integer
Range: 0-172800000
Default: 2880.

Command parameters - reset profile parameters of type HO-VC

- 1. qhrtrvcbbbev3
15-minute reset threshold for VC_N_BBE and VC_F_BBE for VC3 bin.
Type: integer
Range: 0-7199100
Default: 200.
- 2. dayrtrvcbbbev3
Day reset threshold for VC_N_BBE and VC_F_BBE for VC3 bin.
Type: integer
Range: 0-691113600
Default: 4800.
- 3. qhrtrvcbbbev4
15-minute reset threshold for VC_N_BBE and VC_F_BBE for VC4 bin.
Type: integer
Range: 0-7199100
Default: 200.

4. dayrtrvcbbevc4
Day reset threshold for VC_N_BBE and VC_F_BBE for VC4 bin.
Type: integer
Range: 0-691113600
Default: 4800.
5. qhrtrvcbbevc44c
15-minute reset threshold for VC_N_BBE and VC_F_BBE for VC44C bin.
Type: integer
Range: 0-7199100
Default: 200.
6. dayrtrvcbbevc44c
Day reset threshold for VC_N_BBE and VC_F_BBE for VC44C bin.
Type: integer
Range: 0-691113600
Default: 4800.
7. qhrtrvcbbevc416c
15-minute reset threshold for VC_N_BBE and VC_F_BBE for VC416C bin.
Type: integer
Range: 0-7199100
Default: 200.
8. dayrtrvcbbevc416c
Day reset threshold for VC_N_BBE and VC_F_BBE for VC416C bin.
Type: integer
Range: 0-691113600
Default: 4800.
9. qhrtrvcbbevc464c
15-minute reset threshold for VC_N_BBE and VC_F_BBE for VC464C bin.
Type: integer
Range: 0-7199100
Default: 200.

10. dayrtrvcbbevc464c
dayrtrvcbbevc464c
Type: integer
Range: 0-691113600
Default: 4800.
11. qhrtrvcsvc3
15-minute reset threshold for VC_N_ES and VC_F_ES VC3 bin.
Type: integer
Range: 0-900
Default: 10.
12. dayrtrvcsvc3
Day reset threshold for VC_N_ES and VC_F_ES VC3 bin.
Type: integer
Range: 0-86400
Default: 60.
13. qhrtrvcsvc4
15-minute reset threshold for VC_N_ES and VC_F_ES for VC4 bin.
Type: integer
Range: 0-900
Default: 20.
14. dayrtrvcsvc4
Day reset threshold for VC_N_ES and VC_F_ES for VC4 bin.
Type: integer
Range: 0-86400
Default: 150.
15. qhrtrvcsvc44c
15-minute reset threshold for VC_N_ES and VC_F_ES for VC4-4C bin.
Type: integer
Range: 0-900
Default: 20.
16. dayrtrvcsvc44c
Day reset threshold for VC_N_ES and VC_F_ES for VC4-4C bin.
Type: integer
Range: 0-86400
Default: 150.

17. qhrtrvcsvc416c
15-minute reset threshold for VC_N_ES and VC_F_ES for VC4-16C bin.
Type: integer
Range: 0-900
Default: 20.
18. dayrtrvcsvc416c
Day reset threshold for VC_N_ES and VC_F_ES for VC4-16C bin.
Type: integer
Range: 0-86400
Default: 150.
19. qhrtrvcsvc464c
15-minute reset threshold for VC_N_ES and VC_F_ES for VC4-64C bin.
Type: integer
Range: 0-900
Default: 20.
20. dayrtrvcsvc464c
Day reset threshold for VC_N_ES and VC_F_ES for VC4-64C bin.
Type: integer
Range: 0-86400
Default: 150.
21. qhrtrvcsvc3
15-minute reset threshold for VC_N_SES and VC_F_SES for VC3 bin.
Type: integer
Range: 0-810
Default: 0.
22. dayrtrvcsvc3
Day reset threshold for VC_N_SES and VC_F_SES for VC3 bin.
Type: integer
Range: 0-77760
Default: 0.

- 23. qhrtrvcseSvc4
15-minute reset threshold for VC_N_SES and VC_F_SES for VC4 bin.
Type: integer
Range: 0-810
Default: 0.
- 24. dayrtrvcseSvc4
Day reset threshold for VC_N_SES and VC_F_SES for VC4 bin.
Type: integer
Range: 0-77760
Default: 0.
- 25. qhrtrvcseSvc44c
15-minute reset threshold for VC_N_SES and VC_F_SES for VC44C bin.
Type: integer
Range: 0-810
Default: 0.
- 26. dayrtrvcseSvc44c
Day reset threshold for VC_N_SES and VC_F_SES for VC44C bin.
Type: integer
Range: 0-77760
Default: 0.
- 27. qhrtrvcseSvc416c
15-minute reset threshold for VC_N_SES and VC_F_SES for VC416C bin.
Type: integer
Range: 0-810
Default: 0.
- 28. dayrtrvcseSvc416c
Day reset threshold for VC_N_SES and VC_F_SES for VC416C bin.
Type: integer
Range: 0-77760
Default: 0.

29. qhrtrvcsv464c
15-minute reset threshold for VC_N_SES and VC_F_SES for VC464C bin.
Type: integer
Range: 0-810
Default: 0.
30. dayrtrvcsv464c
Day reset threshold for VC_N_SES and VC_F_SES for VC464C bin.
Type: integer
Range: 0-77760
Default: 0.
31. qhrtrvcuavc3
15-minute reset threshold for VC_N_UAS and VC_F_UAS for VC3 bin.
Type: integer
Range: 0-900
Default: 0.
32. dayrtrvcuavc3
Day reset threshold for VC_N_UAS and VC_F_UAS for VC3 bin.
Type: integer
Range: 0-86400
Default: 0.
33. qhrtrvcuavc4
15-minute reset threshold for VC_N_UAS and VC_F_UAS for VC4 bin.
Type: integer
Range: 0-900
Default: 0.
34. dayrtrvcuavc4
Day reset threshold for VC_N_UAS and VC_F_UAS for VC4 bin.
Type: integer
Range: 0-86400
Default: 0.

- 35. qhrtrvcuasvc44c
15-minute reset threshold for VC_N_UAS and VC_F_UAS for VC44C bin.
Type: integer
Range: 0-900
Default: 0.
- 36. dayrtrvcuasvc44c
Day reset threshold for VC_N_UAS and VC_F_UAS for VC44C bin.
Type: integer
Range: 0-86400
Default: 0.
- 37. qhrtrvcuasvc416c
15-minute reset threshold for VC_N_UAS and VC_F_UAS for VC416C bin.
Type: integer
Range: 0-900
Default: 0.
- 38. dayrtrvcuasvc416c
Day reset threshold for VC_N_UAS and VC_F_UAS for VC416C bin.
Type: integer
Range: 0-86400
Default: 0.
- 39. qhrtrvcuasvc464c
15-minute reset threshold for VC_N_UAS and VC_F_UAS for VC464C bin.
Type: integer
Range: 0-900
Default: 0.
- 40. dayrtrvcuasvc464c
Day reset threshold for VC_N_UAS and VC_F_UAS for VC464C bin.
Type: integer
Range: 0-86400
Default: 0.

41. qhrtrpjcpo
15-minute reset threshold for positive PJC bin.
Type: integer
Range: 0-1800000
Default: 0.
42. dayrtrpjcpo
Day reset threshold for positive PJC bin.
Type: integer
Range: 0-172800000
Default: 0.
43. qhrtrpjcneg
15-minute reset threshold for negative PJC bin.
Type: integer
Range: 0-1800000
Default: 0.
44. dayrtrpjcneg
Day reset threshold for negative PJC bin.
Type: integer
Range: 0-172800000
Default: 0.

Command parameters - profile parameters of type PATH

1. qhcvpsts1
15-minute CV-P and CV-PFE bin for STS1.
Type: integer
Range: 0-57599100
Default: 15.
2. daycvpsts1
Day CV-P and CV-PFE bin for STS1.
Type: integer
Range: 0-4294967295
Default: 125.
3. qhcvpsts3c
15-minute CV-P and CV-PFE bin for STS3C.
Type: integer
Range: 0-57599100
Default: 25.

4. daycvpsts3c
Day CV-P and CV-PFE bin for STS3C.
Type: integer
Range: 4294967295
Default: 250.
5. qhcvpsts12c
15-minute CV-P and CV-PFE bin for STS12C.
Type: integer
Range: 0-57599100
Default: 75.
6. daycvpsts12c
Day CV-P and CV-PFE bin for STS12C.
Type: integer
Range: 4294967295
Default: 750.
7. qhcvpsts48c
15-minute CV-P and CV-PFE bin for STS48C.
Type: integer
Range: 0-57599100
Default: 300.
8. daycvpsts48c
Day CV-P and CV-PFE bin for STS48C.
Type: integer
Range: 4294967295
Default: 3000.
9. qhcvpsts192c
Day CV-P and CV-PFE bin for STS192C.
Type: integer
Range: 0-57599100
Default: 1200.
10. daycvpsts192c
Day CV-P and CV-PFE bin for STS192C.
Type: integer
Range: 0-4294967295
Default: 12000.

11. qhespsts1
15-minute ES-P and ES-PFE bin for STS1.
Type: integer
Range: 0-900
Default: 12.
12. dayespsts1
Day ES-P and ES-PFE bin for STS1.
Type: integer
Range: 0-86400
Default: 100.
13. qhespsts3c
15-minute ES-P and ES-PFE bin for STS3C.
Type: integer
Range: 0-900
Default: 20.
14. dayespsts3c
Day ES-P and ES-PFE bin for STS3C.
Type: integer
Range: 0-86400
Default: 200.
15. qhespsts12c
15-minute ES-P and ES-PFE bin for STS12C.
Type: integer
Range: 0-900
Default: 60.
16. dayespsts12c
Day ES-P and ES-PFE bin for STS12C.
Type: integer
Range: 0-86400
Default: 600.
17. qhespsts48c
15-minute ES-P and ES-PFE bin for STS48C.
Type: integer
Range: 0-900
Default: 240.

18. dayespsts48c
Day ES-P and ES-PFE bin for STS48C.
Type: integer
Range: 0-86400
Default: 2400.
19. qhespsts192c
Day ES-P and ES-PFE bin for STS192C.
Type: integer
Range: 0-900
Default: 240.
20. dayespsts192c
Day ES-P and ES-PFE bin for STS192C.
Type: integer
Range: 0-86400
Default: 9600.
21. qhsesp
15-minute SES-P and SES-PFE bin.
Type: integer
Range: 0-810
Default: 3.
22. daysesp
Day SES-P and SES-PFE bin.
Type: integer
Range: 0-77760
Default: 7.
23. qhuasp
15-minute UAS-P and UAS-PFE bin.
Type: integer
Range: 0-900
Default: 10.
24. dayuasp
Day UAS-P and UAS-PFE bin.
Type: integer
Range: 0-86400
Default: 10.

25. qhppjcgen
15-minute PPJC-PGen bin.
Type: integer
Range: 0-1800000
Default: 30.
26. dayppjcgen
Day PPJC-PGen bin.
Range: 0-172800000
Default: 2880.
27. qhnpjcgen
15-minute NPJC-PGen bin.
Type: integer
Range: 0-1800000
Default: 30.
28. daynpjcgen
Day NPJC-PGen bin.
Type: integer
Range: 0-172800000
Default: 2880.
29. qhppjcgdet
15-minute PPJC-PDet bin.
Type: integer
Range: 0-1800000
Default: 30.
30. dayppjcdet
Day PPJC-PDet bin.
Type: integer
Range: 0-172800000
Default: 2880.
31. qhnpjcdet
15-minute NPJC-PDet bin.
Type: integer
Range: 0-1800000
Default: 30.
32. daynpjcdet
Day NPJC-PDet bin.
Type: integer
Range: 0-172800000
Default: 2880.

Command parameters - profile parameters of type ENET

1. qhpdege
15-minute PDE bin for GE.
Type: integer
Range: 0-183000000
Default: 187500.
2. daypdege
Day PDE bin for GE.
Type: integer
Range: 0-4294967295
Default: 9000000.
3. qhpdevcg
15-minute PDE bin for VCG.
Type: integer
Range: 0-183000000
Default: 10.
4. daypdevcg
Day PDE bin for VCG.
Type: integer
Range: 0-4294967295
Default: 50.

Command parameters - reset profile parameters of type ENET

1. qhrtrpdege
15-minute reset threshold for PDE bin for GE.
Type: integer
Range: 0-183000000
Default: 937500.
2. dayrtrpdege
Day reset threshold for PDE bin for GE.
Type: integer
Range: 0-4294967295
Default: 4500000.

3. qhrtrpdevcg
15-minute reset threshold for PDE bin for VCG.
Type: integer
Range: 0-183000000
Default: 2.
4. dayrtrpdevcg
Day reset threshold for PDE bin for VCG.
Type: integer
Range: 0-4294967295
Default: 5.

Example input/output

The following example shows the successful completion of a RTRV-TCA-PROF command by the NE:

```
RTRV-TCA-PROF:UNITE-NE::123456::section-line;  
UNITE-NE 00-01-01 08:00:00  
M 123456 COMPLD  
"SECTION-LINE:DEFAULT"  
"SECTION-LINE:DEFAULT0"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-TCA-PROF command.

Validation rule: profile name does not exist

If the profile name specified does not exist.

Error code: IDNV - Input, Data Not Valid, TCA profile does not exist

Related TL1 messages

- [“DLT-TCA-PROF: Delete TCA Profile” \(9-119\)](#)
- [“ED-TCA-PROF: Edit TCA profile” \(9-81\)](#)
- [“ENT-TCA-PROF: Enter TCA Profile” \(9-60\)](#)

References

GR-833-CORE



ENT-TCA-PROF: Enter TCA Profile

The ENT-TCA-PROF command allows the user to create a new Performance Monitoring (PM) Threshold Crossing Alert (TCA) profile with a specific name. The system supports two default sets of profiles called "Default" and "Default0." When a new profile is created, all the threshold values shall be copied from the "Default" profile.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): PM3
Priority: 1
Abortable: Yes

Input format Command Syntax:
ENT-TCA-PROF:*tid::ctag::pftype,pfname*;

Input parameters

Command parameters

1. tid – Target Identifier
See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. ctag – Correlation Tag
See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. pftype – Profile Type
This indicates the type of PM TCA profile for the selected facility.
Type: value set.
Range: SECTION-LINE, RS-MS, HOVC, PATH
4. pfname – Profile Name
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Output format If the NE fully complies with the ENT-TCA-PROF request, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```


Output parameters	The output parameters <i>sid</i> , <i>date</i> , <i>time</i> and <i>ctag</i> included in the normal completion response are specified in the Output parameter section of “RTRV-HDR: Retrieve header” (5-8) .
Detailed behaviour description	The command shall establish/create a new TCA profile of type as specified by means of parameter pftype. The name of the new TCA profile corresponds to the parameter pfname. The creation of the new TCA profile shall be reported by means of an ENT-TCA-PROF notification.
Example input/output	The following example shows the successful completion of a ENT-TCA-PROF command by the NE: <pre>ENT-TCA-PROF:UNITE-NE::123456::section-line,DTAG; UNITE-NE 00-01-01 08:00:00 M 123456 COMPLD ;</pre>
Error responses	Refer to the “RTRV-HDR: Retrieve header” (5-8) command Error responses section. Validation rule: Maximum number of TCA profiles reached If the maximum number of TCA profiles reached, the error message shall be generated. Error code: SSRE - Status, System Resources Exceeded, limit of profiles exceeded Validation rule: profile name already exists If the system receives a new profile name that already exists for that profile type, the following error response is returned. Error code: IEAE - Input, Entity Already Exists, duplicate profile name
Related TL1 messages	• “RTRV-TCA-PROF: Retrieve TCA Profile” (9-25) • “DLT-TCA-PROF: Delete TCA Profile” (9-119) • “ED-TCA-PROF: Edit TCA profile” (9-81)

References GR-833-CORE



ENT-TCA-PROF notification

Output format The ENT-TCA-PROF notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

Command syntax: ENT-TCA-PROF::*pftype,pfname:spec_block*;

Output parameters

Command parameters

1. pftype – Profile Type
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. pfname – Profile Name
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - profile parameters of type SECTION-LINE

1. qhcvsoc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. daycvsoc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhcvsoc12
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. daycvsoc12
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhcvsoc48
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. daycvsoc48
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhcvsoc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

8. daycvsoc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhcvsoc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. daycvsoc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhess
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. dayess
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
13. qhsess
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. daysess
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhsefss
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. daysefss
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhcvloc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. daycvloc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhcvloc12
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

20. daycvloc12
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhcvloc48
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. daycvloc48
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhcvloc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. daycvloc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
25. qhcvloc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. daycvloc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhesl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. dayesl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
29. qhfeccloc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
30. dayfeccloc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
31. qhfeccloc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

- 32. dayfeccloc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
- 33. qhsesl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
- 34. daysesl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
- 35. qhuasl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
- 36. dayuasl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - profile parameters of type RS-MS

- 1. qhrsnbbe
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
- 2. daysrsnbbe
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
- 3. qhrsnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
- 4. daysrsnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
- 5. qhrsnses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
- 6. daysrsnses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
- 7. qhrsnuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

8. daysnuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhmsbbestm1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. daysbbestm1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhmsbbestm4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. daysbbestm4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
13. qhmsbbestm16
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. daysbbestm16
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhmsbbestm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. daysbbestm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhmsbbestm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. daysbbestm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhmses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

20. daymses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhmsnfeccstm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. daymsnfeccstm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhmsnfeccstm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. daymsnfeccstm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
25. qhmsses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. daymsses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhmssuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. daymsuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - reset profile parameters of type RS-MS

1. qhrtrrsnbbe
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. dayrtrrsnbbe
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhrtrrsnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

4. daytrrsnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhrtrrsnses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. daytrrsnses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhrtrrsnuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. daytrrsnuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhrtrmsbbsbm1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. daytrmsbbsbm1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhrtrmsbbsbm4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. daytrmsbbsbm4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
13. qhrtrmsbbsbm16
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. daytrmsbbsbm16
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhrtrmsbbsbm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

16. daytrmsbbestm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhrtrmsbbestm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. daytrmsbbestm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhrtrmses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. daytrmses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhrtrmsnfecscstm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. daytrmsnfecscstm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhrtrmsnfecscstm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. daytrmsnfecscstm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
25. qhrtrmses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. daytrmses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

27. qhrtrmsuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. dayrtrmsuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - profile parameters of type HO-VC

1. qhvcbbbev3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. dayvcbbbev3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhvcbbbev4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. dayvcbbbev4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhvcbbbev44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. dayvcbbbev44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhvcbbbev416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. dayvcbbbev416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhvcbbbev464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. dayvcbbbev464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

11. qhvcesvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. dayvcesvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
13. qhvcesvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. dayvcesvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhvcesvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. dayvcesvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhvcesvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. dayvcesvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhvcesvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. dayvcesvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhvcsesvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. dayvcsesvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

23. qhvcsesvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. dayvcsesvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
25. qhvcsesvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. dayvcsesvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhvcsesvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. dayvcsesvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
29. qhvcsesvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
30. dayvcsesvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
31. qhvcuasvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
32. dayvcuasvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
33. qhvcuasvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
34. dayvcuasvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

35. qhvcuasvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
36. dayvcuasvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
37. qhvcuasvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
38. dayvcuasvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
39. qhvcuasvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
40. dayvcuasvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - reset profile parameters of type HO-VC

1. qhrtrvcbbbev3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. dayrtrvcbbbev3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhrtrvcbbbev4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. dayrtrvcbbbev4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhrtrvcbbbev44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. dayrtrvcbbbev44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

7. qhrtrvcbbbev416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. dayrtrvcbbbev416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhrtrvcbbbev464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. dayrtrvcbbbev464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhrtrvcsv3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. dayrtrvcsv3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
13. qhrtrvcsv4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. dayrtrvcsv4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhrtrvcsv44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. dayrtrvcsv44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhrtrvcsv416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. dayrtrvcsv416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

19. qhrtrvcsvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. dayrtrvcsvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhrtrvcsvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. dayrtrvcsvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhrtrvcsvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. dayrtrvcsvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
25. qhrtrvcsvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. dayrtrvcsvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhrtrvcsvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. dayrtrvcsvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
29. qhrtrvcsvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
30. dayrtrvcsvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

31. qhrtrvcuasvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
32. dayrtrvcuasvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
33. qhrtrvcuasvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
34. dayrtrvcuasvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
35. qhrtrvcuasvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
36. dayrtrvcuasvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
37. qhrtrvcuasvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
38. dayrtrvcuasvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
39. qhrtrvcuasvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
40. dayrtrvcuasvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - profile parameters of type PATH

1. qhcvpsts1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. daycvpsts1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

3. qhcvpsts3c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. daycvpsts3c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhcvpsts12c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. daycvpsts12c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhcvpsts48c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. daycvpsts48c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhcvpsts192c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. daycvpsts192c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhespsts1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. dayespsts1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
13. qhespsts3c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. dayespsts3c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

15. qhespsts12c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. dayespsts12c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhespsts48c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. dayespsts48c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhespsts192c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. dayespsts192c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhsesp
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. daysesp
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhuasp
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. dayuasp
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - profile parameters of type ENET

1. qhpdege
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. daypdege
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

3. qhpdevcg
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. daypdevcg
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - reset profile parameters of type ENET

1. qhrtrpdege
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. daytrpdege
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhrtrpdevcg
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. daytrpdevcg
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Example output The following example reports the creation of the TCA profile DTAG:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
    "TIME=15-00-00,DATE=00-11-03:ENT-TCA-PROF::RS-MS,DTAG:
qhrsnes=10,qhrsnbbe=6"
;
```



ED-TCA-PROF: Edit TCA profile

General The ED-TCA-PROF command allows the user to modify the existing performance monitoring threshold crossing alert (TCA) profile contents or the profile name. The system default profile names (Default and Default0) cannot be changed. For a general description of TCA profiles, refer to the RTRV-TCA-PROF command.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): PM3
Priority: 1
Abortable: No

Input format Command Syntax: ED-TCA-PROF:*tid::ctag::pftype,pfname:spec_block;*

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *ctag* – Correlation Tag
See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. *pftype* – Profile Type
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. *pfname* – Profile Name
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameter

1. *newname*
This parameter allows a new name to be assigned to the already established profile.
Type: alphanumeric string.
Range: This is a alphanumeric character string with a maximum of 24 characters. Empty string is not allowed.

**Spec block parameters - profile parameters of type
SECTION-LINE**

1. qhcvsoc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile”
\(9-25\)](#).
2. daycvsoc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile”
\(9-25\)](#).
3. qhcvsoc12
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile”
\(9-25\)](#).
4. daycvsoc12
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile”
\(9-25\)](#).
5. qhcvsoc48
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile”
\(9-25\)](#).
6. daycvsoc48
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile”
\(9-25\)](#).
7. qhcvsoc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile”
\(9-25\)](#).
8. daycvsoc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile”
\(9-25\)](#).
9. qhcvsoc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile”
\(9-25\)](#).
10. daycvsoc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile”
\(9-25\)](#).
11. qhess
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile”
\(9-25\)](#).
12. dayess
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile”
\(9-25\)](#).

13. qhsess
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. daysess
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhsefss
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. daysefss
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhcvloc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. daycvloc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhcvloc12
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. daycvloc12
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhcvloc48
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. daycvloc48
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhcvloc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. daycvloc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

25. qhcvloc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. daycvloc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhesl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. dayesl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
29. qhfeccloc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
30. dayfeccloc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
31. qhfeccloc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
32. dayfeccloc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
33. qhsesl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
34. daysesl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
35. qhuasl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
36. dayuasl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - profile parameters of type RS-MS

1. qhrsnbbe
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. daysnbbe
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhrsnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. daysnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhrsnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. daysnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhrsnuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. daysnuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhmsbbestm1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. daymsbbestm1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhmsbbestm4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. daymsbbestm4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

13. qhmsbbestm16
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. daymsbbestm16
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhmsbbestm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. daymsbbestm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhmsbbestm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. daymsbbestm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhmses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. daymses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhmsnfecstm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. daymsnfecstm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhmsnfecstm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. daymsnfecstm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

25. qhmsses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. daymsses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhmsuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. daymsuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - reset profile parameters of type RS-MS

1. qhrtrrsnbbe
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. dayrtrrsnbbe
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhrtrrsnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. dayrtrrsnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhrtrrsnses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. dayrtrrsnses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhrtrrsnuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. dayrtrrsnuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

9. qhrtrmsbbestm1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. daytrmsbbestm1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhrtrmsbbestm4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. daytrmsbbestm4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
13. qhrtrmsbbestm16
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. daytrmsbbestm16
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhrtrmsbbestm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. daytrmsbbestm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhrtrmsbbestm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. daytrmsbbestm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhrtrmses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. daytrmses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

21. qhrtrmsnfecstm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. daytrmsnfecstm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhrtrmsnfecstm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. daytrmsnfecstm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
25. qhrtrmsse
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. daytrmsse
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhrtrmsuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. daytrmsuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - profile parameters of type HO-VC

1. qhvcbbev3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. dayvcbbev3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhvcbbev4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. dayvcbbev4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

5. qhvcbbevc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. dayvcbbbevc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhvcbbevc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. dayvcbbbevc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhvcbbevc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. dayvcbbbevc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhvcesvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. dayvcsvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
13. qhvcesvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. dayvcsvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhvcesvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. dayvcsvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

17. qhvcsvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. dayvcsvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhvcsvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. dayvcsvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhvcsesvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. dayvcsesvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhvcsesvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. dayvcsesvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
25. qhvcsesvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. dayvcsesvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhvcsesvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. dayvcsesvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

29. qhvcseSvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
30. dayvcseSvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
31. qhvcuAsvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
32. dayvcuAsvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
33. qhvcuAsvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
34. dayvcuAsvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
35. qhvcuAsvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
36. dayvcuAsvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
37. qhvcuAsvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
38. dayvcuAsvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
39. qhvcuAsvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
40. dayvcuAsvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - reset profile parameters of type HO-VC

1. qhrtrvcbbevc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. dayrtrvcbbevc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhrtrvcbbevc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. dayrtrvcbbevc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhrtrvcbbevc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. dayrtrvcbbevc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhrtrvcbbevc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. dayrtrvcbbevc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhrtrvcbbevc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. dayrtrvcbbevc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhrtrvcsvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. dayrtrvcsvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

13. qhrtrvcsvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. dayrtrvcsvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhrtrvcsvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. dayrtrvcsvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhrtrvcsvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. dayrtrvcsvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhrtrvcsvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. dayrtrvcsvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhrtrvcsvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. dayrtrvcsvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhrtrvcsvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. dayrtrvcsvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

25. qhrtrvcsv44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. dayrtrvcsv44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhrtrvcsv416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. dayrtrvcsv416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
29. qhrtrvcsv464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
30. dayrtrvcsv464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
31. qhrtrvcu43c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
32. dayrtrvcu43c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
33. qhrtrvcu44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
34. dayrtrvcu44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
35. qhrtrvcu44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
36. dayrtrvcu44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

37. qhrtrvcuasvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
38. dayrtrvcuasvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
39. qhrtrvcuasvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
40. dayrtrvcuasvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - profile parameters of type PATH

1. qhcvpsts1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. daycvpsts1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhcvpsts3c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. daycvpsts3c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhcvpsts12c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. daycvpsts12c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhcvpsts48c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. daycvpsts48c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

9. qhcvpsts192c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. daycvpsts192c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhespsts1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. dayespsts1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
13. qhespsts3c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. dayespsts3c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhespsts12c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. dayespsts12c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhespsts48c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. dayespsts48c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhespsts192c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. dayespsts192c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

21. qhsesp
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. daysesp
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhuasp
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. dayuasp
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - profile parameters of type ENET

1. qhpdege
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. daypdege
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhpdevcg
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. daypdevcg
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - reset profile parameters of type ENET

1. qhrtrpdege
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. dayrtrpdege
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhrtrpdevcg
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. dayrtrpdevcg
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Output format If the NE fully complies with the ED-TCA-PROF request, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

Output parameters The output parameters *sid*, *date*, *time* and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behaviour
description**

TCA Profile modification

The command shall modify the existing performance monitoring Threshold Crossing Alert (TCA) profile content or the profile name.

The modification of the TCA profile shall be reported by means of an ED-TCA-PROF notification.

Example input/output The following example shows the successful completion of a ED-TCA-PROF command by the NE:

```
ED-TCA-PROF:UNITE-NE::123456::rs-ms,ATT:qhrrsnes=10,qhrrsnbbe=6;
UNITE-NE 00-01-01 08:00:00
M 123456 COMPLD
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the ED-TCA-PROF command.

Validation rule: profile name does not exist

If the profile name specified does not exist.

Error code: IDNV - Input, Data Not Valid, profile name does not exist

Validation rule: profile name already exists

If the system receives a new profile name that already exists for that profile type, the following error response is returned.

Error code: IEAE - Input, Entity Already Exists, duplicate profile name

Validation rule: rename default profile name

If a user tries to change the system default profile name (Default / Default0), the following error response is returned.

Error code: IDNC - Input, Data Not Consistent, new name for default profile

Validation rule: value change of default profile Default0

If a user tries to change values of the system default profile "Default0", the following error response is returned.

Error code: IDNC - Input, Data Not Consistent, value change not allowed for profile Default0

Related TL1 messages

- [“DLT-TCA-PROF: Delete TCA Profile” \(9-119\)](#)
- [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#)
- [“ENT-TCA-PROF: Enter TCA Profile” \(9-60\)](#)

References GR-833-CORE



ED-TCA-PROF notification

Output format The ED-TCA-PROF notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

Command syntax: ED-TCA-PROF::*pftype,pfname:spec_block*

Output parameter

Command parameters

1. pftype – Profile Type
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. pfname – Profile Name
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameter

1. newname
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - profile parameters of type SECTION-LINE

1. qhcvsoc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. daycvsoc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhcvsoc12
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. daycvsoc12
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhcvsoc48
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

6. daycvsoc48
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhcvsoc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. daycvsoc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhcvsoc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. daycvsoc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhess
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. dayess
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
13. qhsess
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. daysess
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhsefss
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. daysefss
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhcvloc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

18. daycvloc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhcvloc12
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. daycvloc12
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhcvloc48
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. daycvloc48
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhcvloc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. daycvloc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
25. qhcvloc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. daycvloc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhesl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. dayesl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
29. qhfecclloc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

30. dayfecclloc192
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
31. qhfecclloc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
32. dayfecclloc768
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
33. qhsesl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
34. daysesl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
35. qhuasl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
36. dayuasl
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - profile parameters of type RS-MS

1. qhrsnbbe
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. daysrsnbbe
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhrsnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. daysrsnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhrsnses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

6. daysnses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhrsnuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. daysnuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhmsbbestm1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. daymsbbestm1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhmsbbestm4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. daymsbbestm4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
13. qhmsbbestm16
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. daymsbbestm16
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhmsbbestm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. daymsbbestm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhmsbbestm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

18. daymsbbestm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhmsses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. daymses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhmsnfecstm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. daymsnfecstm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhmsnfecstm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. daymsnfecstm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
25. qhmsses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. daymsses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhmssuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. daymsuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - reset profile parameters of type RS-MS

1. qhrtrrsnbbe
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. dayrtrrsnbbe
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhrtrrsnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. dayrtrrsnes
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhrtrrsnses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. dayrtrrsnses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhrtrrsnuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. dayrtrrsnuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhrtrmsbbestm1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. dayrtrmsbbestm1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhrtrmsbbestm4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. dayrtrmsbbestm4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

13. qhrtrmsbbestm16
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. daytrmsbbestm16
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhrtrmsbbestm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. daytrmsbbestm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhrtrmsbbestm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. daytrmsbbestm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhrtrmses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. daytrmses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhrtrmsnfecdstm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. daytrmsnfecdstm64
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhrtrmsnfecdstm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. daytrmsnfecdstm256
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

25. qhrtrmsses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. daytrmsses
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhrtrmsuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. daytrmsuas
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - profile parameters of type HO-VC

1. qhvcbbevc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. dayvcbbevc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhvcbbevc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. dayvcbbevc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhvcbbevc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. dayvcbbevc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhvcbbevc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. dayvcbbevc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

9. qhvcbbevc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. dayvcbbevc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhvcesvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. dayvcesvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
13. qhvcesvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. dayvcesvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhvcesvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. dayvcesvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhvcesvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. dayvcesvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhvcesvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. dayvcesvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

21. qhvcsesvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. dayvcsesvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhvcsesvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. dayvcsesvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
25. qhvcsesvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. dayvcsesvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhvcsesvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. dayvcsesvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
29. qhvcsesvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
30. dayvcsesvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
31. qhvcuasvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
32. dayvcuasvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

33. qhvcuasvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
34. dayvcuasvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
35. qhvcuasvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
36. dayvcuasvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
37. qhvcuasvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
38. dayvcuasvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
39. qhvcuasvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
40. dayvcuasvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - reset profile parameters of type HO-VC

1. qhrtrvcbbbev3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. dayrtrvcbbbev3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhrtrvcbbbev4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. dayrtrvcbbbev4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

5. qhrtrvcbbbev44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. dayrtrvcbbbev44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhrtrvcbbbev416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. dayrtrvcbbbev416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhrtrvcbbbev464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. dayrtrvcbbbev464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhrtrvcsv3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. dayrtrvcsv3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
13. qhrtrvcsv4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. dayrtrvcsv4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhrtrvcsv44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. dayrtrvcsv44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

17. qhrtrvcsvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. dayrtrvcsvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhrtrvcsvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. dayrtrvcsvc464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhrtrvcsvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. dayrtrvcsvc3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhrtrvcsvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. dayrtrvcsvc4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
25. qhrtrvcsvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
26. dayrtrvcsvc44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
27. qhrtrvcsvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
28. dayrtrvcsvc416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

29. qhrtrvcsv464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
30. dayrtrvcsv464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
31. qhrtrvcu4sv3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
32. dayrtrvcu4sv3
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
33. qhrtrvcu4sv4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
34. dayrtrvcu4sv4
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
35. qhrtrvcu4sv44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
36. dayrtrvcu4sv44c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
37. qhrtrvcu4sv416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
38. dayrtrvcu4sv416c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
39. qhrtrvcu4sv464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
40. dayrtrvcu4sv464c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec block parameters - profile parameters of type PATH

1. qhcvpsts1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. daycvpsts1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhcvpsts3c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. daycvpsts3c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
5. qhcvpsts12c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
6. daycvpsts12c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
7. qhcvpsts48c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
8. daycvpsts48c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
9. qhcvpsts192c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
10. daycvpsts192c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
11. qhespsts1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
12. dayespsts1
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

13. qhespsts3c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
14. dayespsts3c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
15. qhespsts12c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
16. dayespsts12c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
17. qhespsts48c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
18. dayespsts48c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
19. qhespsts192c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
20. dayespsts192c
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
21. qhsesp
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
22. daysesp
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
23. qhuasp
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
24. dayuasp
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec parameters - profile parameters of type ENET

1. qhpdege
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. daypdege
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhpdevcg
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. daypdevcg
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Spec parameters - reset profile parameters of type ENET

1. qhrtrpdege
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. dayrtrpdege
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
3. qhrtrpdevcg
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. dayrtrpdevcg
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Example output The following example shows the successful completion of a ED-TCA-PROF command by the NE:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
  "TIME=15-00-00,DATE=00-11-03:ED-TCA-PROF::RS-MS,DTAG:
  qhrsnes=10,qhrsnbbe=6"
;
```



DLT-TCA-PROF: Delete TCA Profile

General The DLT-TCA-PROF command can be initiated by users to remove a Performance Monitoring (PM) threshold profile from the system memory. The system supports two default sets of profiles called "Default" and "Default0." The system default profiles cannot be deleted.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): PM3
Priority: 1
Abortable: No

Input format Command Syntax: DLT-TCA-PROF:*tid::ctag::pftype,pfname*;

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *ctag* – Correlation Tag
See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. *pftype* – Profile Type
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
4. *pfname* – Profile Name
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Output format If the NE fully complies with the DLT-TCA-PROF request, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

Output parameters The output parameters *sid*, *date*, *time* and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behaviour
description**

TCA Profile deletion

The command shall delete the existing performance monitoring Threshold Crossing Alert (TCA) profile.

The deletion of the TCA profile shall be reported by means of an DLT-TCA-PROF notification.

Example input/output

The following example shows the successful completion of a DLT-TCA-PROF command by the NE:

```
DLT-TCA-PROF:UNITE-NE::123456::section-line,att;  
    UNITE-NE 00-01-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the DLT-TCA-PROF command.

Validation rule: profile name does not exist

If the profile name specified does not exist

Error code: IDNV - Input, Data Not Valid, profile name does not exist

Validation rule: deleting assigned profile

If a user requests to delete a profile name and there are ports or tributaries in the system that are provisioned to use the given profile for thresholding, the following error response is returned.

Error code: SNVS - Status, Not in Valid State , TCA profile assigned

Validation rule: deleting the system default profile

If a user requests to delete the system default profiles (Default and Default0), the following error response is returned.

Error code: IDNC - Input, Data Not Consistent, default profile

Related TL1 messages

- [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#)
- [“ENT-TCA-PROF: Enter TCA Profile” \(9-60\)](#)
- [“ED-TCA-PROF: Edit TCA profile” \(9-81\).](#)

References GR-833-CORE



DLT-TCA-PROF notification

Output format The DLT-TCA-PROF notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

Command syntax: DLT-TCA-PROF::*pftype,pfname*

Output parameters

Command parameters

1. pftype – Profile Type
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).
2. pfname – Profile Name
See definition in [“RTRV-TCA-PROF: Retrieve TCA Profile” \(9-25\)](#).

Example output The following example shows the successful completion of a DLT-TCA-PROF command by the NE:

```
LT-UNITE 00-11-03 15:00:00
A 000 REPT DBCHG
  "TIME=15-00-00,DATE=00-11-03:DLT-TCA-PROF::RS-MS,DTAG"
;
```



System Start-up with Default DB

General The system shall create during start-up with default DB two TCA profiles per supported profile type with profile name "DEFAULT" and "DEFAULT0". The values for profile "DEFAULT" shall be as specified in corresponding default requirements for each profile parameter. The values for profile "DEFAULT0" shall be '0' for each profile parameter.





10 TL1 messages - synchronization

Overview

Purpose This section contains the TL1 commands related to the synchronization management. The synchronization commands covers types of assigning, modifying or removing and retrieving system timing attributes. Furthermore they are initiating switch requests and releasing requests.

It contains following commands and levels.

- RTRV-SYNCN
 - System Timing
 - Output Timing
 - Assigned Timing Reference
 - External Timing Input
 - External Timing Output
- SET-SYNCN
 - System Timing
 - Assigned Timing Reference
 - External Timing Input
 - External Timing Output
- OPR-SYNCNSW
- RLS-SYNCNSW.

For the system, the choice between SONET and SDH is determined by the system synchronization characteristic. The system synchronization characteristic may only be adjustable in the MCOND state. If the system synchronization characteristic is SONET, all SONET related parameter and settings are valid. All SSM messages, based on the SDH market are handled as being invalid. If the system synchronization characteristic is SDH, all SDH related parameter and settings are valid. All SSM messages, based on the SONET market are handled as being invalid.

The values of a number of parameters will be distinguished from the system synchronization characteristic. The parameter *syncrtc* in RTRV-EQPT and ED-EQPT determines whether the system synchronization characteristic, and therewith the NE, is in SDH or in SONET mode.

Contents

RTRV-SYCN: Retrieve synchronization	10-3
SET-SYCN: Set synchronization	10-19
SET-SYCN notification	10-27
OPR-SYCN: Operate synchronization switch	10-31
RLS-SYCN: Release synchronization switch	10-37
Protection switch notification	10-41
Autonomous notifications	10-46



RTRV-SYNCN: Retrieve synchronization

The command displays the provisioning and operational information of the synchronization attributes as set by the SET-SYNCN command and after initial system start-up. It also displays the status of the external timing reference input and output ports.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
 Priority: 1
 Abortable: Yes

Input format Command Syntax: RTRV-SYNCN:*tid*[:*aid*]:*ctag*;

Input parameters

Command parameters

1. *tid* – target identifier
 See definition of *tid* – *target identifier* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *aid* – access identifier
 This parameter is used to identify the timing related settings. The AID separates the parameter in system timing related parameter, output timing related parameters, parameters related to assigned timing references and parameters for external timing input and external timing output. The *all* AID retrieves all retrievable parameters for synchronization. If the AID is omitted, the outputs for the whole synchronization area are given.

Type: AID

Range:

- SystemAID
- Timing_Output_AID
- External_timing_ref_AID
- Line_timing_ref_AID
- External_Timing_input_port_AID

- External_Timing_output_port_AID
 - all.
- Default: all.
3. ctag – correlation tag
See definition of *ctag – correlation tag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output format After receiving the RTRV-SYCN command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
  "aid:spec_block"
    ...
    ...
  "aid:spec_block"
;
```

Output parameters

Command parameters

1. aid – access identifier
This parameter specifies the timing related settings.
Type: AID
Range:
 - SystemAID
 - Timing_Output_AID
 - External_timing_ref_AID
 - Line_timing_ref_AID
 - External_Timing_input_port_AID
 - External_Timing_output_port_AID
 Default: Not applicable.

Spec block parameters

1. System Timing
 - a. active_ref – active timing reference status

This parameter displays the active timing reference, which the system clock is currently using for locked mode of system timing. If no timing reference is assigned or all references are failed the AID value EXTREF1 is returned.

Type: AID

Range: External_timing_ref_AID, Line_timing_ref_AID

Default: EXTREF1.

b. `clkmod` – clock mode

This parameter specifies the provisioned operational mode of the system timing.

In the `clockmod == FREE-RUNNING` mode the system clock process uses the internal oscillator as reference. In the `clockmod == LOCKED` mode the system clock process uses the input signal from the system.

Type: Alphanumeric value set.

Range: FREE-RUNNING, LOCKED.

Default: FREE-RUNNING.

c. `clkmod_stat` – system clock mode status

This parameter specifies the state of the system clock. The range is depending on the system synchronization characteristic.

NORMAL: This operational mode indicates either the NE derives timing from the internal oscillator when `clockmod == FREE-RUNNING`, or the system timing is locked to a timing reference signal when `clockmod == LOCKED` and the reference is derived from one of the timing input signals. Refer to ***clkmod*** parameter.

AUTONOMOUS-HOLDOVER: This state indicates that all references are failed and no higher priority request is present.

FORCED-HOLDOVER: This operational mode is caused by a Clock Backup Request.

FAST-START: This operational mode indicates for fast pull-in of the clock when recovering from holdover (for SONET only).

The values AUTONOMOUS-HOLDOVER, FORCED-HOLDOVER and FAST-START are only possible when `clockmod == LOCKED`.

Type: Alphanumeric value set.

Range:

SONET: NORMAL, AUTONOMOUS-HOLDOVER,
FORCED-HOLDOVER, FAST-START.

SDH: NORMAL, AUTONOMOUS-HOLDOVER,
FORCED-HOLDOVER.

Default: NORMAL

d. refsw_stat – reference switch status

The System Timing Reference Switch Request State is a state of the system timing.

The value FORCED means, the system enters the Forced Switch state upon the initiation and successful completion of the Forced Switch command. While in the Forced Switch state the system may not switch the active timing reference, neither automatically nor by means of the Forced Switch or Manual Switch command.

The value MANUAL means, the system enters the Manual Switch state upon the initiation and successful completion of the Manual Switch command. While in the Manual Switch state the system may switch the active timing reference automatically if required for protection switching.

The parameter NO-REQUEST indicates, this is the routine-operation quiet state in which no external command activities are occurring. The system enters this state upon initial start-up, and following a clear command, or the clearing of an automatic switch.

Type: Alphanumeric value set.

Range: MANUAL, FORCED, NO-REQUEST.

Default: NO-REQUEST.

e. stratum_level – stratum level status

This parameter provides information about the level of the system clock. The parameter is depending from the system synchronization characteristic.

Type: Alphanumeric value set

Range:

SONET: 3

SDH: SEC

Default:

SONET: 3

SDH: SEC.

f. syncmsg – system synchronization status messaging mode

This parameter is used to ENABLE or DISABLE the SSM protocol.

The parameter provisions the automatic reference selection process to use the incoming QLs in QL-enabled mode or to ignore them in QL-disabled mode. In case of DISABLE, for SDH all output SSMs shall be set to DNU, for SONET all output SSMs shall be set to STU.

Type: Alphanumeric value set.

Range: ENABLE, DISABLE.

Default: ENABLE.

g. sysql_stat – system quality level status

This parameter indicates the overall system timing quality level status. If the system configured as SONET then the SONET related values are indicated and if the system configured as SDH the SDH related values are indicated.

Type: Alphanumeric value set.

Range:

SONET: PRS, STU, ST2, ST3, DUS

SDH: PRC, SSUL, SSUT, SEC, DNU.

Default:

SONET: DUS

SDH: DNU.

h. timing – ASAP name

This parameter specifies the name of the ASAP (Alarm Severity Assignment Profile) that is assigned to timing.

Type: Alphanumeric value set.

Range: PFNAME (alphanumeric string with 1... 24 characters). A hyphen (-) is additionally allowed in the name.

Default: Default

i. wtr – wait to restore

This parameter specifies the provisioned wait to restore timer used for all timing ports for revertive switching. This is the amount of time it takes to switch from lower priority to higher priority references. The value range depends from the system synchronization characteristic.

Type: Alphanumeric value set.

Range:

SONET: 0SEC, 20SEC, 0...60MIN (1 minute steps), 99 (infinite).

SDH: 0SEC, 0...60MIN (1 minute steps); the values "0SEC" and "0MIN" can be used for SONET and SDH to provision a zero wait to restore time.

Default:

SONET: 20SEC

SDH: 5MIN

j. wu_stat – warm up status

This parameter is an attribute of the timing pack hardware design.

At initial start up of the system and at replacing of the active or standby timing function the system is in warm-up state. DNU/DUS is transmitted during this state on all ports. The clock would be expected to warm up for a temporary period of time before transition to NORMAL.

Type: Alphanumeric value set.

Range: NORMAL, WARMING-UP.

Default: NORMAL.

2. Output Timing (instance only valid for SDH)

a. active_oref_stat – active output timing reference status

This parameter displays the current selected timing reference of the timing link switch for the external output.

Type: AID.

Range: Line_timing_ref_AID.

Default: LINE1.

b. orefswr_stat – output timing reference switch request status

This parameter indicates the output timing reference switch request state.

The value MANUAL means, a manual switch is active to the external timing output. The value FORCED means, a forced switch is active to the external timing output. The value NO-REQUEST means, no external command activities are occurring at the external timing output.

Type: Alphanumeric value set.

Range: MANUAL, FORCED, NO-REQUEST.

Default: NO-REQUEST.

3. Assigned Timing Reference

a. extout_pri – timing output reference priority

This parameter specifies the priority assignment of the timing link switch of the external output timing. This parameter is only for SDH and for line timing references.

The greater the number the lower the priority. The number "1" indicates the highest priority. The priority "0" means not assigned for external output.

Type: Numeric value set.

Range: 0 (means DISABLED), 1, 2, 3, 4, 5, 6.

Default: 0 (means DISABLED).

b. inql – assigned timing reference quality value

This parameter displays the input synchronization message for each port of the timing link switch provisioning of the system timing and of the output timing. In the output timing context the values for SDH are valid only. In case of invalid SSM, the value DNU or DUS is displayed. The value range depends from the system synchronization characteristic.

Type: Alphanumeric value set.

Range: SONET: PRS, STU, ST2, ST3, DUS

SDH: PRC, SSUT, SSUL, SEC, DNU.

Default: Not applicable.

c. inql_stat – input quality status

This parameter indicates the synchronization messaging quality level status for the specified timing reference.

The parameter describes the validity of the incoming quality level and take the following values: VALID, when the QL is a valid SSM and stable, INVALID, when the QL is not a valid SSM, or unstable, NOT-SUPPORTED, when SSM reception is not supported on that interface (such as 2MHz), NOT-APPLICABLE, when no port is assigned to the current timing reference or the assigned timing reference experiences a reference fail.

Type: Alphanumeric value set.

Range: VALID, INVALID, NOT-SUPPORTED, NOT-APPLICABLE.

Default: NOT-APPLICABLE.

d. ql_prov – quality provisioned

This parameter defines the quality for the specified timing reference to a fixed SSM value. It is the provisioned quality level sync message value that will be received on timing references.

This parameter is related to all assigned timing references (both external timing references and line timing references) and overrides what is received for the respective timing reference. The AUTO value implies sync message support. The AUTO value is rejected if SSM is not supported for the assigned timing reference (i.e. for DS1 SF). The value range depends from the system synchronization characteristic. Per default shall be:

AUTO – for STM-N/OC-N line, 2Mbit/s framed or DS1 ESF with SSM,

SSUT – for 2MHz, 2Mbit/s unframed or framed without SSM

STU – for DS1 SF or DS1 ESF without SSM

Type: Alphanumeric value set.

Range:

SONET: AUTO, PRS, STU, ST2, ST3

SDH: AUTO, PRC, SSUL, SSUT, SEC.

Default:

SONET: AUTO (External_timing_ref_AID, Line_timing_ref_AID)

SDH: AUTO (Line_timing_ref_AID) SSUT (External_timing_ref_AID).

e. ref_lock – timing reference lockout status

This parameter displays the timing reference lockout state to the specified timing reference. It is the input status for each port of the timing link switch provisioning of the system timing.

The value LOCKOUT means, the assigned reference has been locked out by the user, and cannot be used as a timing reference signal until the lockout is cleared.

Type: Alphanumeric value set.

Range: LOCKOUT, NO-LOCKOUT.

Default: NO-LOCKOUT.

f. ref_stat – assigned timing reference signal status

The Assigned Timing Reference Signal Status is a status of each timing reference.

The status NORMAL means, the timing reference is available and operating normally without faults. The status FAILED means, the timing reference is failed. The status WAIT-TO-RESTORE means, the wait to restore timer is active before transition to NORMAL. The status NOT-CONNECTED means, there is no timing reference signal connected to the timing port.

Type: Alphanumeric value set.

Range: NORMAL, FAILED, WAIT-TO-RESTORE, NOT-CONNECTED.

Default: NOT-CONNECTED.

- g. sclkref_lockstat – station clock output timing reference lockout state
This parameter indicates the assigned station clock output timing reference lockout state. This parameter is only for SDH and for line timing references.
Type: Alphanumeric value set.
Range: LOCKOUT, NO-LOCKOUT.
Default: NO-LOCKOUT.
- h. syncref_pri – system timing reference priority
This parameter defines the priority for assigned timing references.
When multiple input references have been given the same priority value, it implies non-revertive switching between the associated references. Otherwise, it implies revertive switching to the reference with the highest assigned priority. When the QL-control is disabled, the selection process is controlled by signal status and port priority. The greater the number, the lower the priority. Priority "0" means not assigned.
Type: Numeric value set.
Range: 0 (means DISABLE), 1, 2, 3, 4, 5, 6, 7, 8.
Default: 0 (means DISABLE).
- i. timing – ASAP name
See definition in [“RTRV-SYCN: Retrieve synchronization” \(10-3\)](#) section system timing of this parameter.
- j. tpmode – timing port mode monitoring

This parameter specifies the monitoring status of the timing port. If the timing port is in the MONITORED mode and the reference is in FAILED status alarms are active for this port. The value NOT-MONITORED means that alarm monitoring is not occurring on the port.

Type: Alphanumeric value set.

Range: MONITORED, NOT-MONITORED.

Default: NOT-MONITORED.

- k. tpql_in – incoming SSM value of the timing port
 This parameter indicates the QL value for the timing port. The value range depends on the system synchronization characteristic.
 The parameter describes the incoming SSM and takes the following values:
 PRS – Stratum-1 Traceable STU – Synchronized
 Traceability Unknown
 ST2 – Stratum-2
 ST3 – Stratum-3
 DUS/DNU – Don't Use for Synchronization
 PRC – Primary Reference Clock
 SSUT – Synchronization Supply Unit Transit node
 SSUL – Synchronization Supply Unit Local node
 SEC – SDH Equipment Clock
 SSMn – other SSM values with invalid state (for SDH)
 UNSTABLE – value is unstable
 NONE – SSM value not supported by hardware
 Type: Alphanumeric value set.
 Range:
 SONET: PRS (0001), STU (0000), ST2 (0111), ST3 (1010), DUS (1111), NONE
 SDH: PRC (0010), SSUT (0100), SSUL (1000), SEC (1011), DNU (1111), SSM0 (0000), SSM1 (0001), SSM3 (0011), SSM5 (0101), SSM6 (0110), SSM7 (0111), SSM9 (1001), SSM10 (1010), SSM12 (1100), SSM13 (1101), SSM14 (1110), UNSTABLE, NONE.
 Default: Not applicable.
- l. tref_aid – timing reference assigned port AID
 This parameter specifies the port AID of the assigned timing reference AID.

The parameter is rejected, if the timing reference already assigned to a timing port, or if the reference does not support SSM and timing port is provisioned AUTO, or if the unit which delivers the reference is not present or pre-provisioned. It is not possible to assign more than one reference from a unit. It is not possible to un-assign units from which a reference is assigned to a timing port. It is also not possible to assign a reference from a protection port in a protection group. The value NOT-CONNECTED means no reference is assigned to current timing port.

Type: AID.

Range: External_Timing_input_port_AID, SPortAID, NOT-CONNECTED.

Default: NOT-CONNECTED.

4. External Timing Input

a. ext_if – external input signal format

This parameter specifies the format of the external timing input.

The value range depends on the system synchronization characteristic. The external timing input format can be set at both external timing inputs individually. The reference is rejected, if the reference does not support SSM and the timing port is provisioned AUTO.

Type: Alphanumeric value set.

Range:

SONET: SF, ESF

SDH: 2MHz, 2Mbit-unframed, 2Mbit-framed.

Default:

SONET: ESF

SDH: 2MHz.

b. ext_isa – external input sa bit location

This parameter defines the external input Sa bit location. It is only valid for the external timing input format “2Mbit/s” framed; i.e. for ports with format unequal to “2Mbit/s framed” the parameter value is retrievable, but it has no impact on the ports transmission behavior.

The location of the Sa bit is can be set at both external timing inputs individually. One of the Sa4 to Sa8 bits of the 2Mbit/s sub-multiframe is allocated for Synchronization Status Messages (SSM).

Type: Alphanumeric value set.

Range: SA4, SA5, SA6, SA7, SA8.

Default: SA4.

c. ext_issm – external input ssm support

This parameter specifies if the SSM mode is supported or not on the external timing input port.

The parameter is valid depending from the system synchronization characteristic, for SDH 2Mbit/s framed and for SONET DS1 ESF; i.e. for ports with format unequal to “2Mbit/s framed” or “DS1 ES” the parameter value is retrievable, but it has no impact on the ports transmission behavior. The parameter is adjustable individually to both external timing input ports.

Type: Alphanumeric value set.

Range: SUPPORTED, NOT-SUPPORTED.

Default: SUPPORTED.

5. External Timing Output

a. ext_equ – cable equalization

This parameter specifies the timing output cable equalization to adjust the specified timing reference output signal power.

This parameter is valid only for DS1 (SONET).

This parameter is rejected for all input interfaces except DS1. The values are represented by percentage (3.0dB=100%; 2.4dB=80%; 1.8dB=60%; 1.2dB=40%; 0.6dB=20%).

Type: Numeric value set.

Range: 20, 40, 60, 80, 100.

Default: 20.

b. ext_of – external output signal format

This parameter specifies the external output signal format. The value range depends from the system synchronization characteristic.

Type: Alphanumeric value set.

Range:

SONET: SF, ESF

SDH: 2MHz, 2Mbit-unframed, 2Mbit-framed.

Default:

SONET: ESF

SDH: 2MHz.

c. ext_osa – external output sa bit location

This parameter defines the external output Sa bit location. This parameter is only valid for external timing output format “2Mbit/s framed”; i.e. for ports with format unequal to “2Mbit/s framed” the parameter value is retrievable, but it has no impact on the ports transmission behavior.

Type: Alphanumeric value set.

Range: SA4, SA5, SA6, SA7, SA8.

Default: SA4.

d. ext_out_sig_stat – external output signal status

This parameter indicates the external output signal status.

The value NORMAL indicates when the output timing signal is enabled and providing a correctly synchronized output timing signal. The value DISABLED indicates when the output timing signal has been disabled by means of user provisioning. The value UNACCEPTABLE indicates when the output timing signal is enabled but the timing output does not provide a suitable timing reference signal. This is caused by failed reference into the timing output process or references rejected based on threshold AIS criteria.

Type: Alphanumeric value set

Range: NORMAL, DISABLED, UNACCEPTABLE.

Default: DISABLED.

e. extout_en – external timing output enabling/disabling

This parameter specifies whether the external timing output is enabled or disabled.

Type: Alphanumeric value set.

Range: ENABLE, DISABLE.

Default: DISABLE.

f. extout_prov – external timing output selection

This parameter specifies the operation mode of the external output timing.

The value SETG means the system clock. The value TLS means the output. For SONET both values are fixed to the respective external timing output. The value range depends on the system synchronization characteristic.

Type: Alphanumeric value set.

Range:

SONET: LINE1 [fix for output 1], LINE2 [fix for output 2]

SDH: SETG, TLS.

Default: SONET: LINE1 [fix for output 1], LINE2 [fix for output 2]
SDH: SETG.

- g. extout_ssm – external timing output AIS mode
This parameter specifies which value will be send when the signal level is below the quality acceptance level or when **frcdus** is enabled. The parameter is valid depending from the system synchronization characteristic, for SDH 2Mbit/s framed and for SONET DS1 ESF; i.e. for ports with format unequal to “2Mbit/s framed” or “DS1 ESF” the parameter value is retrievable, but it has no impact on the ports transmission behavior.
The value AISMODE means AIS is inserted in the external timing output signal. The value QLMODE means DUS is inserted in the external timing output signal.
Type: Alphanumeric value set.
Range: AISMODE, QLMODE.
Default: QLMODE.
- h. frcdus – forced DNU/DUS
This parameter specifies the synchronization messaging forced DNU/DUS enable or disable for the timing output port. DUS applies to SONET and DNU applies to SDH. This is only valid for '2Mbit/s framed' and 'DS1 ESF'; i.e. for ports with format unequal to “2Mbit/s framed” or “DS1 ESF” the parameter value is retrievable, but it has no impact on the ports transmission behavior.
Type: Alphanumeric value set.
Range: ENABLE, DISABLE.
Default: DISABLE.
- i. loopdelay – timing regenerator loop delay
This parameter indicates the delay in the SASE/BITS loop operation. The values are represented by seconds in steps of 1 seconds per loop.
Type: Numeric value set.
Range: 0...60 (1 seconds steps).
Default: 10.
- j. ql_out – quality of the external timing output port
This parameter indicates the quality value on the signal for the timing output port.
Type: Alphanumeric value set.

Range:

SONET: PRS, STU, ST2, ST3, DUS

SDH: PRC, SSUL, SSUT, SEC, DNU.

Default: Not applicable.

- k. qlout_tais – acceptance quality level for output threshold AIS

This parameter is the provisioned quality acceptance level for external timing output. When the incoming message is below this level, AIS or DUS (depending from the *extout_ssm* value) will be inserted into the external timing output. The value range depends from the system synchronization characteristic.

Type: Alphanumeric value set.

Range:

SONET: PRS, STU, ST2, ST3

SDH: PRC, SSUT, SSUL, SEC.

Default:

SONET: ST3

SDH: SEC.

- l. regen_loop – timing regenerator loop

This parameter specifies the avoiding of loops over the SASE/BITS clocks.

When this parameter is set to ENABLED, the synchronization message DUS will be inserted in the traffic output port associated with the traffic input port used as source for the station clock. The parameter is selectable for both external timing outputs individually.

Type: Alphanumeric value set.

Range:

SONET: DISABLE, ENABLE

SDH: DISABLE, EXTREF1, EXTREF2, BOTH.

Default:

SONET: ENABLE

SDH: DISABLE.

- m. timing – ASAP name

See definition in [“RTRV-SYCN: Retrieve synchronization” \(10-3\)](#) section system timing of this parameter.

Detailed behavior description

The RTRV-SYCN command retrieves the output parameters values for the specified input AID as described in [“RTRV-SYCN: Retrieve synchronization” \(10-3\)](#) output parameters section.

Example input/output

The following is an example of the RTRV-SYCN command:

```
RTRV-SYCN:LT-UNITE:extrefall:123456;  
LT-UNITE 00-11-13 12:00:00  
M 123456 COMPLD  
"EXTREF1:tref_aid=EXTTMG0,syncref_pri=2,ref_  
stat=NORMAL,  
ref_lock=NO-LOCKOUT,inql=SSUT,inql_stat=NOT-SUPPORTED"  
"EXTREF2:tref_aid=EXTTMG1,syncref_pri=3,ref_  
stat=NORMAL,  
ref_lock=NO-LOCKOUT,inql=SSUT,inql_stat=NOT-SUPPORTED"  
;
```

Related TL1 messages

- [“SET-SYCN: Set synchronization” \(10-19\)](#)
- [“OPR-SYCN: Operate synchronization switch” \(10-31\)](#)
- [“RLS-SYCN: Release synchronization switch” \(10-37\)](#)



SET-SYNCN: Set synchronization

The SET-SYNCN command is used to provision system timing clock mode, assign timing references, and external input and output timing port attributes. The command is used not only to assign system timing attributes but also to modify or remove them.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
 Priority: 1
 Abortable: No.

Input format Command Syntax: SET-SYNCN:*tid:aid:ctag:::spec_block*;

Input parameters

Command parameters

1. *tid* – target identifier
 See definition of *tid – target identifier* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *aid* – access identifier
 This parameter specifies the timing related settings. The AID separates the parameter in system timing related parameter, parameters related to assigned timing references and parameters for port provisioning. The values all or *someprefix* all are not allowed in this context.
 Type: AID
 Range: SystemAID, External_timing_ref_AID, Line_timing_ref_AID, External_Timing_input_port_AID, External_Timing_output_port_AID
 Default: Not applicable.
3. *ctag* – correlation tag
 See definition of *ctag – correlation tag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Spec block parameters

1. System Timing
 - a. *clkmod* – clock mode

- See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section System Timing of this parameter.
- b. syncmsg – system synchronization status messaging mode
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section System Timing of this parameter.
 - c. timing – ASAP name
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section System Timing of this parameter.
 - d. wtr – wait to restore
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section System Timing of this parameter.
2. Assigned Timing Reference
- a. extout_pri – timing output reference priority
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section Assigned Timing Reference of this parameter.
 - b. ql_prov – quality provisioned
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section Assigned Timing Reference of this parameter.
 - c. syncref_pri – system timing reference priority
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section Assigned Timing Reference of this parameter.
 - d. timing – ASAP name
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section System Timing of this parameter.
 - e. tpmode – timing port mode monitoring
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section Assigned Timing Reference of this parameter.
 - f. tref_aid – timing reference assigned port AID
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section Assigned Timing Reference of this parameter.
3. External Timing Input
- a. ext_if – external input signal format
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Input of this parameter.
 - b. ext_isa – external input sa bit location

See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Input of this parameter.

- c. ext_issm – external input ssm support
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Input of this parameter.

4. External Timing Output

- a. ext_equ – cable equalization
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- b. ext_of – external output signal format
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- c. ext_osa – external output sa bit location
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- d. extout_en – external output enabling/disabling
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- e. extout_prov – external timing output selection
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- f. extout_ssm – external timing output AIS mode
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- g. frcdus – forced DNU/DUS
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- h. loopdelay – timing regenerator loop delay
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- i. qlout_tais – acceptance quality level for output threshold AIS
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- j. regen_loop – timing regenerator loop
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- k. timing – ASAP name

See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section System Timing of this parameter.

Output format After receiving the SET-SYNCN command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

After successful receiving the SET-SYNCN command a REPT DBCHG database change notification is returned. This notification consists the same parameter as per delivered by the command. Notifications are sent whenever a user-provisionable parameter has been changed.

When the system receives a SET-SYNCN command with changing of the clock mode, a REPT EVT report event notification is returned.

If the system receives a SET-SYNCN command with changing of the active timing reference, a REPT EVT report event notification is returned.

It is not possible to assign a reference from a protection port in a protection group.

If the system synchronization characteristic is SONET and the SSM is invalid the value DUS shall be displayed for QL values.

It is possible to provision a QL acceptance level to the external timing output. If the system quality below this acceptance QL level and QL control is enabled and the external timing output is enabled then an AIS signal or DUS, depending on settings of parameter *extout_ssm*, shall be substituted in the output.

If the system timing QL mode is DISABLED for SDH all output SSMs shall be set to DNU, for SONET all output SSMs shall be set to STU.

If the system synchronization characteristic is SDH and the external timing input format is either 2MHz or 2Mbit/s unframed or 2Mbit/s

framed without SSM then the assigned timing reference status shall be default SSUT. If the system synchronization characteristic is SONET and the external timing input format is either SF or ESF without SSM then the assigned timing reference status shall be default STU. The value AUTO shall be rejected if SSM is not supported for the assigned timing reference.

It is possible to provision the automatic reference selection process to use the incoming QLs in QL-enabled mode. The input with the highest quality level is selected. If there is more than one input with the same highest quality level, then the input with the highest port priority is selected. In QL-disabled mode the reference selection is working by priority provisioning. It is possible to assign the same priority to multiple inputs. In this case, it implies non revertive switching between the associated references.

A MS-SPRing/BLSR span or MSP pair is handled as one transport port, so also counts as one reference signal. If one of the sections of the pair do not support SSM, the reported QL status is NOT-SUPPORTED.

If the timing port is in the NOT-MONITORED mode then no Timing Link Fail alarm will be active when reference is in FAILED status or no Timing Link Unequipped alarm will be active when the reference is in NOT-CONNECTED state.

Example input/output

The following is an example of the SET-SYNCN command for System Timing:

```
SET-SYNCN:LT-UNITE:system:123456:::clkmod=LOCKED,wtr=1MIN;
  LT-UNITE 00-11-14 12:00:00
M 123456 COMPLD
;
```

The following is an example of the SET-SYNCN command for Assigned Timing Reference:

```
SET-SYNCN:LT-UNITE:extref1:123456:::tref_aid=EXTTMG0,
ql_prov=SSUL;
  LT-UNITE 00-11-14 12:00:00
M 123456 COMPLD
;
```

The following is an example of the SET-SYNCN command for External Timing Input:

```
SET-SYNCN:LT-UNITE:exttmg1:123456:::ext_if=2MHZ;
    LT-UNITE 00-11-14 12:00:00
M 123456 COMPLD
;
```

The following is an example of the SET-SYNCN command for External Timing Output:

```
SET-SYNCN:LT-UNITE:exttmg0_out:123456:::ext_of=2MHZ,extout
    _en=ENABLE;
    LT-UNITE 00-11-14 12:00:00
M 123456 COMPLD
;
```

Error responses

Validation rule: Timing reference already assigned

If a timing reference already assigned to a timing port or circuit pack the system responds with:

Error code: SDNC - Status, Data Not Consistent, reference already assigned

Validation rule: One timing port for a circuit pack

If a second port of a circuit pack is assigned to a timing reference the system responds with:

Error code: SDNC - Status, Data Not Consistent, other port already assigned

Validation rule: No out-of-service state for timing port

If an 'out of service' port (i.e. the port attribute *servcond* has the value 'OUTOFSERVICE') is assigned to a timing reference the system responds with:

Error code: SDNC - Status, Data Not Consistent, port is out-of-service

A port must be in the out-of-service before any port loop can be switched. Therefore it is sufficient to request for a timing reference assignment, that a port is not in the out-of-service state in order to prevent timing loops caused by port loops; i.e. a port that is not in out-of-service state will not have a switched port loop.

Validation rule: Timing reference from a protection port in a protection group

If a timing reference shall be assigned from a protection port in a protection group the system responds with:

Error code: SDNC - Status, Data Not Consistent, reference in protection group

Validation rule: Port is already assigned to another timing reference

Ports can be assigned only one. If a port already assigned to a timing reference the system responds with:

Error code: SDNC - Status, Data Not Consistent, port already assigned

Validation rule: Command rejection if quality evaluation disabled

If the quality mode disabled the setting to forced DUS/DNU or the setting the quality output threshold AIS shall be rejected and the system responds with:

Error code: SDNC - Status, Data Not Consistent, quality evaluation disabled

Validation rule: SSM not supported

SSM support shall be rejected for invalid input or output format types and the system responds with:

Error code: IDNV - Input, Data Not Valid, SSM not supported for this format

Validation rule: Format not supported for forced DNU/DUS

DNU/DUS provisioning shall be rejected for invalid output format types and the system responds with:

Error code: IDNV - Input, Data Not Valid, forced DUS not supported for this format

Validation rule: Input / Output format not supported for Sa bit settings

Sa bit location setting is rejected for invalid input or output format types and the system responds with:

Error code: IDNV - Input, Data Not Valid, Sa bit location not supported

Validation rule: SSM not supported if timing port provisioned AUTO

If a timing port provisioned AUTO and the reference which is being assigned does not support SSM, the assignment request is rejected and the system responds with:

Error code: IDNV - Input, Data Not Valid, SSM not supported for provisioned QL

Validation rule: Output type not supported for AIS mode

If the AIS mode provisioned to a not supported output type then the system responds with:

Error code: IDNV - Input, Data Not Valid, AIS mode not valid

Validation rule: Cable equalization not supported

If the cable equalization provisioned to a not supported output type or if the system synchronization characteristic is SDH then the system responds with:

Error code: IDNV - Input, Data Not Valid, cable equalization not supported

Validation rule: Timing clock mode inconsistent

If the NE receives a command with FREE-RUNNING provisioning while the clock mode switch request state is forced holdover, the following error response is returned:

Error code: SNVS, Not in Valid State, timing clock mode inconsistent

Validation rule: Regenerator loops with SETG as timing output

If the output timing source selection is set to SETG and the timing regenerator loop is provisioned, then the system responds with:

Error code: IDNV - Input, Data Not Valid, no regen loop with SETG as timing output

Related TL1 messages

- [“RTRV-SYCN: Retrieve synchronization” \(10-3\)](#)
- [“OPR-SYCN: Operate synchronization switch” \(10-31\)](#)
- [“RLS-SYCN: Release synchronization switch” \(10-37\)](#)

References GR-833-CORE

SET-SYNCN notification

Output format Syntax: The SET-SYNCN notification has the following specific syntax:

SET-SYNCN:*aid::spec_block*

Output parameters

Command parameters

1. aid – access identifier
See definition in [“SET-SYNCN: Set synchronization” \(10-19\)](#) of aid – access identifier

Spec block parameters

1. System Timing
 - a. clkmod – clock mode
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section System Timing of this parameter.
 - b. syncmsg – system synchronization status messaging mode
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section System Timing of this parameter.
 - c. timing – ASAP name
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section System Timing of this parameter.
 - d. wtr – wait to restore
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section System Timing of this parameter.
2. Assigned Timing Reference
 - a. extout_pri – timing output reference priority
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section Assigned Timing Reference of this parameter.
 - b. ql_prov – quality provisioned
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section Assigned Timing Reference of this parameter.
 - c. syncref_pri – system timing reference priority
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section Assigned Timing Reference of this parameter.
 - d. timing – ASAP name

- See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section System Timing of this parameter.
- e. tpmode – timing port mode monitoring
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section Assigned Timing Reference of this parameter.
 - f. tref_aid – timing reference assigned port AID
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section Assigned Timing Reference of this parameter.
3. External Timing Input
- a. ext_if – external input signal format
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Input of this parameter.
 - b. ext_isa – external input sa bit location
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Input of this parameter.
 - c. ext_issm – external input ssm support
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Input of this parameter.
4. External Timing Output
- a. ext_equ – cable equalization
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
 - b. ext_of – external output signal format
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
 - c. ext_osa – external output sa bit location
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
 - d. extout_en – external output enabling/disabling
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
 - e. extout_prov – external timing output selection
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
 - f. extout_ssm – external timing output AIS mode
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.

- g. frcdus – forced DNU/DUS
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- h. loopdelay – timing regenerator loop delay
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- i. qlout_tais – acceptance quality level for output threshold AIS
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- j. regen_loop – timing regenerator loop
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section External Timing Output of this parameter.
- k. timing – ASAP name
See definition in [“RTRV-SYNCN: Retrieve synchronization” \(10-3\)](#) section System Timing of this parameter.

Example output

The following is an example of the SET-SYNCN notification for System Timing:

```
LT-UNITE 00-11-16 12:00:00
A 000 REPT DBCHG
"TIME=12-00-00,DATE=00-11-16:SET-SYNCN:SYSTEM::wtr=2MIN"
;
```

The following is an example of the SET-SYNCN notification for Assigned Timing Reference:

```
LT-UNITE 00-11-16 12:00:00
A 000 REPT DBCHG
"TIME=12-00-00,DATE=00-11-16:SET-SYNCN:LINE2::ql_
prov=PRC"
;
```

The following is an example of the SET-SYNCN notification for External Timing Input:

```
LT-UNITE 00-11-16 12:00:00
A 000 REPT DBCHG
"TIME=12-00-00,DATE=00-11-16:SET-SYNCN:EXTTMG0::ext_
isa=SA5,
ext_if=2MBIT-FRAMED"
```

;

The following is an example of the SET-SYNCN notification for External Timing Output:

```
LT-UNITE 00-11-16 12:00:00
A 000 REPT DBCHG
"TIME=12-00-00,DATE=00-11-16:SET-SYNCN:EXTTMG1_OUT::q1_
out=SEC,
extout_ssm=AISMODE"
;
```



OPR-SYNCNSW: Operate synchronization switch

The OPR-SYNCNSW command can be initiated by user to request the NE to operate manual or forced synchronization reference protection switch or external timing output protection switch (for SDH only), to lockout synchronization reference or external output timing (for SDH only) switching or to request a change from the provisioned synchronization mode to forced holdover state.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M4
Priority: 1
Abortable: No

Input format Command Syntax: OPR-SYNCNSW-*modifier*:*tid*::*ctag*::*sc*[,*dest*];

Input parameters

Command parameters

1. *modifier* – modifier
This parameter indicates the management system on which the switch request acts.
The *modifier* REF specifies the assigned timing reference switch. The *modifier* MOD specifies the clock mode switch of the system clock. The *modifier* OUTREF specifies the external timing output switch (for SDH only).
Type: Alphanumeric value set
Range:
 - REF
 - MOD
 - OUTREF
 Default: Not applicable.
2. *tid* – target identifier
See definition of this parameter in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. *ctag* – correlation tag
See definition of this parameter in [“RTRV-HDR: Retrieve header” \(5-8\)](#).

4. sc – switch command

This parameter defines the type of switch action that is initiated on the timing reference or mode.

The following values are valid depending on parameter ***modifier***.

- ***modifier*** REF: LOCKOUT – The reference which is addressed by the ***dest*** parameter, will be locked out by the user and cannot be used as a timing reference signal until the lockout is cleared. FRCD – A forced switch is initiated. It forces selection of the specified reference determined by the ***dest*** parameter. MAN – A manual switch is initiated to the specified reference determined by the ***dest*** parameter. CLRWTR – The wait to restore period of the reference which is addressed by the ***dest*** parameter will be terminated. The signal status will return to normal.
- ***modifier*** MOD: FRCD – A forced switch is initiated. It forces system timing from the locked mode to the holdover mode (Clock Backup Request).
- ***modifier*** OUTREF (for SDH only): LOCKOUT – The reference which is addressed by the ***dest*** parameter, will be locked out by the user and cannot be used for external timing output until the lockout is cleared. FRCD – A forced switch for external timing output is initiated. It forces selection of the specified reference determined by the ***dest*** parameter. MAN – A manual switch for the external timing output is initiated to the specified reference determined by the ***dest*** parameter.

LOCKOUT has the highest priority, followed by FRCD, then MAN.

Type: Alphanumeric value set.

Range:

- LOCKOUT
- FRCD
- MAN
- CLRWTR.

Default: Not applicable.

5. dest – destination

This parameter specifies the assigned timing reference identifier destination. This is the list of timing references available to the system clock or to the timing link switch of the external output timing. This parameter is valid and required for the REF and OUTREF modifiers.

Type: AID

Range:

- **modifier** REF: External_timing_ref_AID, Line_timing_ref_AID
 - **modifier** OUTREF (for SDH only): Line_timing_ref_AID
- Default: Not applicable.

Output format

After receiving the OPR-SYNCNSW command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output Parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

The OPR-SYNCNSW command generates no REPT DBCHG Report Database Change notification. The OPR-SYNCNSW command returns a REPT EVT Report Event notification in consequence of a protection switch notification.

Clock backup request

Forced Holdover: The forced switch of system clock to holdover external request causes the system clock to be switched to holdover regardless of the state of the timing references. The following parameter is affected by the clock mode switch request Forced Holdover: – clkmod_stat = FORCED-HOLDOVER.

System timing reference or output timing switch request

Forced Switch: The forced switch to timing reference external switch request causes the system to be switched to the selected timing reference regardless of the state of that timing reference. While in the Forced Switch state the system may not switch the active timing

reference, neither automatically nor by means of the Forced Switch or Manual Switch command.

Manual Switch: The manual switch to timing reference external request causes the system to be switched to the selected timing reference. The system leaves the Manual Switch state by means of the Clear, Lockout or Forced Switch commands. While in the Manual Switch state the system may switch the active timing reference automatically if required for protection switching, the system leaves the Manual Switch state due to automatic switching.

Lockout: The Lockout of reference external request is provided to allow manual disabling of individual references. While in the Lockout state the system may not switch the active timing reference to the reference, which is locked out.

The following parameters are affected by the system timing reference switch request:

- active_ref = [External_timing_ref_AID, Line_timing_ref_AID]
- refsw_stat = [FORCED, MANUAL]
- ref_lock = LOCKOUT
- ref_stat = NORMAL.

The following parameters are affected by the external output timing switch request:

- active_oref_stat = Line_timing_ref_AID
- orefswr_stat = [FORCED, MANUAL]
- sclkref_lockstat = LOCKOUT.

Example input/output

The following is an example of the OPR-SYNCNSW command for System Timing with *modifier* MOD:

```
OPR-SYNCNSW-MOD:LT-UNITE::123456::FRCD;  
    LT-UNITE 00-11-09 12:00:00  
M 123456 COMPLD  
;
```

The following is an example of the OPR-SYNCNSW command for System Timing with *modifier* REF:

```
OPR-SYNCNSW-REF:LT-UNITE::123456::MAN,EXTREF1;  
    LT-UNITE 00-11-09 12:00:00  
M 123456 COMPLD
```

;

The following is an example of the OPR-SYNCNSW command for Output Timing with *modifier* OUTREF:

```
OPR-SYNCNSW-OUTREF:LT-UNITE::123456::LOCKOUT,LINE3;  
    LT-UNITE 00-11-09 12:00:00  
M 123456 COMPLD  
;
```

Error responses See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section for general validation rules.

Validation rule: Parameter *sc* or *dest* is missing

If the system receives a OPR-SYNCNSW command with modifiers REF or OUTREF and one of the parameters *sc* or *dest* are missing, the system responds with:

Error code: SNVS - Status, Not in Valid State, parameter required

Validation rule: Invalid switch command

If the system receives a command with a *sc* value that is not supported, the system responds with:

Error code: IDNV - Input, Data Not Valid, invalid *sc*

Validation rule: Reference switching during lockout or disabled state

If the system receives a switch command to reference which is locked out or disabled, the system responds with:

Error code: SNVS - Status, Not in Valid State, reference unavailable

Validation rule: Clear wait to restore timer not applicable

If the system receives a clear request for a wait to restore timer while the reference is not in wait to restore state, the system responds with:

Error code: SNVS - Status, Not in Valid State, clear request impossible

Validation rule: Parameter not supported for modifier

If the system receives a OPR-SYNCNSW command with *modifier* MOD together with not supported parameter *dest*, the system responds with:

Error code: IDNV - Input, Data Not Valid, parameter not required

Validation rule: Clock backup switch request when clock mode is free running

If the system receives a OPR-SYNCNSW command with *modifier* MOD while the provisioned synchronization mode is free running, the system responds with:

Error code: SSRD - Status, Switch Request Denied, clock mode inconsistent

Validation rule: No change of the request state, request not practicable

If the system receives a switch command that results in no change to the switch request state or the active unit state, the system responds with:

Error code: SNVS - Status, Not in Valid State, request not practicable

Validation rule: Forced or manual switch request while reference is in forced state

If the system receives a manual or forced switch request to a reference which is already in forced state, the system responds with:

Error code: SNVS - Status, Not in Valid State, request not practicable

Related TL1 messages

- [“RLS-SYNCNSW: Release synchronization switch” \(10-37\)](#)
- [“SET-SYCN: Set synchronization” \(10-19\)](#)
- [“RTRV-SYCN: Retrieve synchronization” \(10-3\)](#)

References GR-833-CORE



RLS-SYNCNSW: Release synchronization switch

The RLS-SYNCNSW command can be initiated by user to request the management system to release (clear) any existing lockout, forced or manual timing reference switching or external output timing switch or to release the forced request on the timing mode so that it will return to the provisioned locked mode from the holdover mode.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M4
Priority: 1
Abortable: No.

Input format Command Syntax: RLS-SYNCNSW-*modifier*:*tid*::*ctag*::[*dest*];

Input parameters

Command parameters

1. *modifier* – modifier
See definition of *modifier – modifier* in [“OPR-SYNCNSW: Operate synchronization switch ” \(10-31\)](#).
2. *tid* – target identifier
See definition of *tid – target identifier* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
3. *ctag* – correlation tag
See definition of *ctag – correlation tag* in [“RTRV-HDR: Retrieve header” \(5-8\)](#).
4. *dest* – destination
See definition of *dest – destination* in [“OPR-SYNCNSW: Operate synchronization switch ” \(10-31\)](#).
When the parameter *dest* is omitted with *modifier* REF or OUTREF the system clears a manual or forced timing reference or external output timing switch request state.

Output format After receiving the RLS-SYNCNSW command, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output Parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

The RLS-SYNCNSW command generates no REPT DBCHG Report Database Change notification. The RLS-SYNCNSW command returns a REPT EVT Report Event notification in consequence of a protection switch notification.

Clear clock backup request

The system clock leaves the Forced Holdover state by means of the RLS-SYNCNSW command with *modifier* MOD without parameter. The Clear Mode Switch request removes any active external request and does not affect the state of the automatic protection switching based on synchronization reference failure. The following parameter is affected by release of the clock mode switch Forced Holdover: –
clkmod_stat = NORMAL.

Clear system timing reference or output timing switch request

The Clear Reference Switch command removes any active external request as is clear the Lockout, Forced Switch and Manual Switch conditions. The Clear Reference Switch command does not affect the state of the automatic protection switching based on synchronization reference failure, except for its effect on Wait to Restore. The Clear Reference Switch invokes the management system to terminate the wait to restore period for the specified timing reference and may be used to clear Wait to Restore. The signal status will revert to NORMAL.

Forced Switch: The system leaves the Forced Switch state by means of the OPR-SYNCNSW command with *sc* value LOCKOUT, or RLS-SYNCNSW command.

Manual Switch: The system leaves the Manual Switch state by means of the OPR-SYNCNSW command with *sc* value LOCKOUT, or OPR-SYNCNSW command with *sc* value FRCD, or RLS-SYNCNSW command.

Lockout: The system leaves the Lockout state by means of the RLS-SYNCNSW command. The following parameters are affected by release of the system timing reference switch:

- active_ref = [External_timing_ref_AID, Line_timing_ref_AID]
- refsw_stat = NO-REQUEST
- ref_lock = NO-LOCKOUT
- ref_stat = NORMAL

The following parameters are affected by release of the external output timing switch request:

- active_oref_stat = Line_timing_ref_AID
- orefswr_stat = NO-REQUEST
- sclkref_lockstat = NO-LOCKOUT

Example input/output

The following is an example of the RLS-SYNCNSW command for System Timing with *modifier* MOD:

```
RLS-SYNCNSW-MOD:LT-UNITE::123456::;  
    LT-UNITE 00-11-09 12:00:00  
M 123456 COMPLD  
;
```

The following is an example of the RLS-SYNCNSW command for System Timing with *modifier* REF:

```
RLS-SYNCNSW-REF:LT-UNITE::123456::EXTREF1;  
    LT-UNITE 00-11-09 12:00:00  
M 123456 COMPLD  
;
```

The following is an example of the RLS-SYNCNSW command for Output Timing with *modifier* OUTREF:

```
RLS-SYNCNSW-OUTREF:LT-UNITE::123456::;  
    LT-UNITE 00-11-09 12:00:00  
M 123456 COMPLD  
;
```

Error responses

See definition in [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section for general validation rules and in [“OPR-SYNCNSW: Operate synchronization switch ” \(10-31\)](#) command error responses section for specific validation rules.

Related TL1 messages

- [“OPR-SYNCNSW: Operate synchronization switch” \(10-31\)](#)
- [“SET-SYCN: Set synchronization” \(10-19\)](#)
- [“RTRV-SYCN: Retrieve synchronization” \(10-3\)](#)

References GR-833-CORE



Protection switch notification

Output format Syntax: The REPT EVT notification has following specific syntax:
 REPT EVT *modifier aid:condtype,condeff,ocrdat,ocrtm,,,conddescr*

Output parameters

System timing

1. Clock Mode Protection Type
 - a. modifier – message modifier
 This parameter indicates on which entity the report event belongs.
 Type: Alphanumeric value set.
 Range: SYST (means System Timing).
 - b. aid – access identifier
 This parameter indicates on which AID the report event belongs.
 Type: Alphanumeric value set.
 Range: SYSTEM
 - c. condtype – condition type
 This parameter specifies the type of event being reported.
 Type: alphanumeric value set.
 Range: See [Table 10-1, “Range of condtype \(clock mode protection type\)” \(10-42\)](#).
 Default: none
 - d. conddescr – description of the condition
 This parameter is a textual description of the condition.
 Type: inner string.
 Range: See [Table 10-2, “Range of conddescr \(clock mode protection type\)” \(10-42\)](#).
2. Timing Reference Protection Type
 - a. modifier – message modifier
 See definition above.
 - b. aid – access identifier
 This parameter indicates on which AID the report event belongs. The values all or *someprefix* all are not allowed in this context.
 Type: Alphanumeric value set.
 Range: External_timing_ref_AID, Line_timing_ref_AID

- c. **condtype** – condition type
This parameter specifies the type of event being reported.
Type: alphanumeric value set.
Range: See [Table 10-3, “Range of condtype \(timing reference protection type\)” \(10-42\)](#).
- d. **conddescr** – description of the condition
This parameter is a textual description of the condition.
Type: inner string.
Range: See [Table 10-4, “Range of conddescr \(timing reference protection type\)” \(10-43\)](#).

Table 10-1 Range of condtype (clock mode protection type)

Selection State	Attribute	Condtype
free running	clkmod = FREE-RUNNING clkmod_stat = NORMAL	FRNGSYNC
forced holdover	clkmod = LOCKED clkmod_stat = FORCED-HOLDOVER	HLDOVRSYNC
autonomous holdover	clkmod = LOCKED clkmod_stat = AUTONOMOUS-HOLDOVER	HLDOVRSYNC
locked	clkmod = LOCKED clkmod_stat = NORMAL	SYNCCLK

Table 10-2 Range of conddescr (clock mode protection type)

Selection State	Conddescr
free running	Protection switch, clock mode, Freerunning
forced holdover	Protection switch, clock mode, Forced Holdover
autonomous holdover	Protection switch, clock mode, Holdover
locked	Protection switch, clock mode, Locked

Table 10-3 Range of condtype (timing reference protection type)

Selection State / Lockout State	Attribute	Condtype
manual	refsw_stat = MANUAL	PS
forced	refsw_stat = FORCED	PS
no request	refsw_stat = NO-REQUEST	PS
lockout	ref_lock = LOCKOUT	INHSWPR
no lockout	ref_lock = NO-LOCKOUT	INHSWPR

Table 10-4 Range of conddescr (timing reference protection type)

Selection State / Lockout State	Conddescr
manual	Protection switch, sync reference, Manual switch
forced	Protection switch, sync reference, Forced switch
no request	Protection switch, sync reference, No Request
lockout	Protection switch, sync reference, Lockout
no lockout	Protection switch, sync reference, No Lockout

Output timing (only for SDH)**1. Output Timing Reference Protection Type**

- a. modifier – message modifier
This parameter indicates on which entity the report event belongs.
Type: Alphanumeric value set.
Range: OUTT (means Output Timing).
- b. aid – access identifier
This parameter indicates on which AID the report event belongs. The values all or *someprefix* all are not allowed in this context.
Type: Alphanumeric value set.
Range: Line_timing_ref_AID.
- c. condtype – condition type
This parameter specifies the type of event being reported.
Type: alphanumeric value set.
Range: See [Table 10-5, “Range of condtype \(Output timing reference protection type\)” \(10-43\)](#).
- d. conddescr – description of the condition
This parameter is a textual description of the condition.
Type: inner string
Range: See [Table 10-6, “Range of conddescr \(Output timing reference protection type\)” \(10-44\)](#).

Table 10-5 Range of condtype (Output timing reference protection type)

Selection State / Lockout State	Attribute	Condtype
manual	orefswr_stat = MANUAL	PS
forced	orefswr_stat = FORCED	PS

Table 10-5 Range of condtype (Output timing reference protection type) (continued)

Selection State / Lockout State	Attribute	Condtype
no request	orefswr_stat = NO-REQUEST	PS
lockout	sclkref_lockstat = LOCKOUT	INHSWPR
no lockout	sclkref_lockstat = NO-LOCKOUT	INHSWPR

Table 10-6 Range of conddescr (Output timing reference protection type)

Selection State / Lockout State	Conddescr
manual	Protection switch,output reference, Manual switch
forced	Protection switch,output reference, Forced switch
no request	Protection switch,output reference, No Request
lockout	Protection switch,output reference, Lockout
no lockout	Protection switch,output reference, No Lockout

Example output The following is an example of a protection switch notification for clock mode protection type:

```
LT-UNITE 00-11-09 12:00:00
A 000 REPT EVT SYST
"SYSTEM:HLD0VRSYNC,TC,11-09,12-00-00,,,:\"Protection
switch,clock mode,Forced Holdover\"";
```

The following is an example of a protection switch notification for timing reference protection type:

```
LT-UNITE 00-11-09 12:00:00
A 000 REPT EVT SYST
"EXTREF1:PS,TC,11-09,12-00-00,,,:\"Protection
switch,sync reference,Manual switch\"";
```

The following is an example of a protection switch notification for output timing reference protection type:

```
LT-UNITE 00-11-09 12:00:00
A 000 REPT EVT OUTT
"LINE2:INHSWPR,SC,11-09,12-00-00,,,:\"Protection
switch,output reference,Lockout\"";
```

;



Autonomous notifications

System initialization with default values

After first system initialization for all parameters the described default values are valid and no timing reference is assigned. No database change notification will be returned during database auto creation.

System initialization after system synchronization characteristic change

It is possible to change the system synchronization characteristic later on. For this case, the system will behave as a new created node. All assigned timing references are un-assigned before and after changing in the MCOND state the system will start-up with the default values. No database change notification will be returned after changing the system synchronization characteristic and reset to default values.

Autonomous clock switch

If the provisioned clockmod = LOCKED and a failure of all timing references active, the system switches in autonomous-holdover state and return a report event and a report alarm notification to the management system. If at least one fault-free timing reference is available, the system switches back to the locked state autonomously. The following parameter are affected by the autonomous clock mode switch: clkmod_stat = [AUTONOMOUS-HOLDOVER, NORMAL].

Autonomous reference switch for system timing

The autonomous reference switching is initiated by the failure of a reference. The autonomous reference switching results also after a SSM change of the active reference or of any of the standby references. The choice for the next active timing reference primarily depends on provisioned QL values if QL mode is enabled and subsequent on provisioned priorities for each reference. In consequence of identical QL values and priorities the system supports non-revertive switching. The autonomous reference switch returns a protection switch notification for System Timing. The following parameter are affected by the autonomous timing reference switch: active_ref = [External_timing_ref_AID, Line_timing_ref_AID].

Autonomous reference switch for output timing (only for SDH)

The autonomous reference switching is initiated by the failure of a reference. The autonomous reference switching might also switch after a SSM change. The choice for the next active timing reference is primarily depending on provisioned QL values if QL mode is enabled and subsequent on provisioned priorities for each reference. In consequence of similar QL values and priorities the system supports non-revertive switching. The autonomous reference switch returns a protection switch notification for Output Timing. The following

parameter are affected by the autonomous timing reference switch:
active_oref_stat = Line_timing_ref_AID.

Synchronization instances

The following instances are created during system initialization:

- one system timing entity
- one output timing entity (only for SDH)
- two timing reference entities for external timing input
- six timing reference entities for line timing for

SDH only:

- one external timing output port entity

for SONET only:

- two external timing output port entities.





11 TL1 messages - software & database management

Overview

Purpose This section contains the TL1 interface definition for the domain *software and database management*.

Background information: In the Non Volatile Memory (NVM) of the NE, there are two regions: current and previous. Each region contains a software generic (code and static data) and a database.

The properties of the databases and the software generics can be retrieved by RTRV-PRMTR-DATA and RTRV-PRMTR-SFTWR.

The restore option of CPY-MEM is used to copy a database from a remote file store into previous NVM and then to install it as the working database. The backup option of CPY-MEM is used to copy the database that is in current NVM to a remote file store.

The download option of CPY-MEM is used to download new generics to previous NVM. Installation via APPLY causes the contents of previous NVM to be installed. Following installation, a "pointer" is changed so that what is identified as current NVM contains the currently executing generic and previous NVM contains the previous generic.

Contents

RTRV-PRMTR-DATA: Retrieve parameter data	11-3

RTRV-PRMTR-SFTWR: Retrieve parameter software	11-13
CPY-MEM: Copy memory	11-20
CPY-NEM Notification	11-31
COPY-RFILE: Copy remote file	11-33
REPT EVT FXFR: Report Event FXFR	11-39
APPLY: Apply software generic	11-42
APPLY notification	11-46



RTRV-PRMTR-DATA: Retrieve parameter data

The RTRV-PRMTR-DATA command retrieves information about the databases being in NVM. It identifies the databases' release numbers and provides also other information such as their states.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
 Priority: 2
 Abortable: No

Input format Command Syntax: RTRV-PRMTR-DATA:*tid::ctag::[amount]*;

Input parameters

Command parameters

1. tid- Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. amount – Amount Of Data To Return
 This parameter specifies whether the current generic or previous generic or both shall be returned. If a value is omitted, then the current (active) generic is returned.
 Type: alphanumeric value set.
 Range: CURRENT (default), PREVIOUS, ALL.
 Default: CURRENT.

Output format The following normal completion response is returned, if the RTRV-PRMTR-DATA request completes successfully:

```
sid date time
M ctag COMPLD
  "nvm:spec_block"
  ...
  ...
  "nvm:spec_block"
```

;

Output parameters

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Output parameters section for a normal completion response. The output parameters listed there also apply to the RTRV-PRMTR-DATA command. Additional parameters that specifically apply to this command are defined in the following:

1. nvm – Non Volatile Memory Identifier

This parameter specifies the region of non volatile memory data (current or previous).

Type: Value set.

Range:

- NVM-A: for current NVM Data
- NVM-B: for previous NVM-Data.

Default: Only current NVM data is reported except for *amount* having been specified to ALL.

Spec block parameters

This parameter provides information about the stored database. It contains the parameters *release*, *size*, *backuptime*, *restoretime*, *backupfile*, *restorefile*, *priorbackuptime*, *priorbackupfile*, *priorrestoretime*, *priorrestorefile*, *state*, *tid* and *serialnumber*.

When software is being downloaded to previous NVM, the database parameters for NVM-B do not need initialization because they still reflect information pertaining to the currently executing generic.

During installation, the following parameters are omitted (initialized to a blank field) for NVM-A:

backuptime, *restoretime*, *backupfile*, *restorefile*, *priorbackuptime*, *priorrestoretime*, *priorbackupfile*, *priorrestorefile*.

When a backup is performed for the database in current NVM, the values of *restoretime*, *restorefile*, *priorbackuptime*, *priorbackupfile* shall not be modified.

1. release – Release Number

This parameter represents the release number contained in the file. The parameter will be omitted if state is 'INITIAL'.

Type: value set of the form x.y.z

Range: x, y, z are integer numbers from 00 to 99 in two-digit form, that means leading zeros are not suppressed. x shall not be 00.

2. size – Size Of Allocated NVM

This parameter indicates the allocated NVM size in bytes.

It is not dynamically updated within the generic until data migration or software upgrade which may change the budget of NVM space used for database files.

Type: numeric string

Range: 0 to 999999999

Default: In case the software generic on the NVM is empty, the value 0 is reported.

3. backuptime

This parameter provides time and date when the last backup to a remote file store has been finished. It is omitted if the system has never been backed up.

The NE updates *backuptime* at the OS just before file transfer starts and then update the value of current NVM's *backuptime* when the backup finishes.

This implies the value of *backuptime* contained in backupfile at the OS will represent a slightly earlier time than the value contained in current NVM's database.

backuptime is updated whether or not the file transfer was successful.

Type: value set of the format: YY-MM-DD HH-MM-SS.

Range: Y, M, D are numbers in two-digit format (i.e. leading zeros are not suppressed). YY represents the last two digits of the year, MM the month, DD the day of the month. H, M, S are numbers in two-digit format (i.e. leading zeros are not suppressed). HH represents the hour, MM the minutes, SS the seconds.

4. *restoretime*

This parameter reflects the time and date when the last restore from a remote file store has been finished. It is omitted, if the system has never been restored.

When a backup is performed for the database in current NVM, the values of *restoretime* (in current NVM, previous NVM) are not modified.

Only database files at the current or previous NVMs shall have values for *restoretime*.

Type: value set of the format: YY-MM-DD HH-MM-SS

Range: Y, M, D are numbers in two-digit format (i.e. leading zeros are not suppressed). YY represents the last two digits of the year, MM the month, DD the day of the month. H, M, S are numbers in two-digit format (i.e. leading zeros are not suppressed). HH represents the hour, MM the minutes, SS the seconds.

5. *backupfile*

This parameter indicates the remote location where the last backup is stored. Omitted if never backed up.

The NE will update *backupfile* before the file transfer starts. Thus, both the source (current NVM) and the destination (Navis[®] Optical EMS or WaveStar[®] CIT) will have the same value for *backupfile*.

Type: text string.

Range: The parameter has one of the following formats:

- *"CIT,filename"*
- *"EMS,filename"*
- *"FTTD",FTP URL"*

The syntax contained in *filename* should be consistent with the file system. For a DOS file system, back slashes (\) should be used. For a UNIX file-system, forward slashes (/) should be used. Because a (\) is interpreted as the escape character, it will be represented in the output reply as a double backslash (\\).

The FTP URL must be in the format:

ftp://[<login>[:<password>]@]<host>[:<port>]/<file_name>

- <login>: default value: "anonymous"
- <password>: default for <login> "anonymous" is "" (empty). For security reasons, the <password> portion of the FTP file format must be masked prior to generating any autonomous messages.

- <host>: the <host> portion is an internet address of the form a.b.c.d with a, b, c and d in the range of 0..255.
- <port>: this is the port number of the FTP server, given when deviating from the standard port number 21.
- <file_name>: the complete path name of the file.

6. restorefile

This parameter reflects the remote location where the last restore came from. Omitted if never restored.

When a backup is performed for the database in current NVM, the values of *restorefile* (in current NVM, previous NVM, the destination) will not be modified.

restorefile is updated whether or not the file transfer was successful.

Type: text string.

Range: *restorefile* has one of the following formats:

- "*CITfilename*"
- "*EMSfilename*"
- "*FTTD,FTP URL*"

The syntax contained in *filename* should be consistent with the file system. For a DOS file system, back slashes (\) should be used. For a UNIX file-system, forward slashes (/) should be used. Because a (\) is interpreted as the escape character, it will be represented in the output as a double backslash (\\).

The FTP URL must be in the format:

ftp://[<login>[:<password>]@]<host>[:<port>]/<file_name>

- <login>: default value: "anonymous"
- <password>: default for <login> "anonymous" is "" (empty). For security reasons, the <password> portion of the FTP file format must be masked prior to generating any autonomous messages.
- <host>: the <host> portion is an internet address of the form a.b.c.d with a, b, c and d in the range of 0..255.
- <port>: this is the port number of the FTP server, given when deviating from the standard port number 21.
- <file_name>: the complete path name of the file.

7. priorbackuptime

This parameter gives the time and date when the next-to-last backup to a remote file store finished. It is omitted, if there is no next-to-last-backup.

When a backup is performed for the database in current NVM, the values of *priorbackuptime* (in current NVM, previous NVM, the destination) will not be modified.

Type: value set of the format: YY-MM-DD HH-MM-SS

Range: Y, M, D are numbers in two-digit format (i.e. leading zeros are not suppressed). YY represents the last two digits of the year, MM the month, DD the day of the month. H, M, S are numbers in two-digit format (i.e. leading zeros are not suppressed). HH represents the hour, MM the minutes, SS the seconds.

Default: n. a.

8. priorrestoretime

This parameter specifies the time and date when the next-to-last restore from a remote file store finished. It is omitted, if there is no next-to-last restore.

Type: value set of the format: YY-MM-DD HH-MM-SS.

Range: Y, M, D are numbers in two-digit format (i.e. leading zeros are not suppressed). YY represents the last two digits of the year, MM the month, DD the day of the month. H, M, S are numbers in two-digit format (i.e. leading zeros are not suppressed). HH represents the hour, MM the minutes, SS the seconds.

9. priorbackupfile

This parameter indicates the remote location where the next-to-last backup is stored. It is omitted, if there is no next-to-last backup.

When a backup is performed for the database in current NVM, the values of *priorbackupfile* (in current NVM, previous NVM, the destination) will not be modified.

Type: text string

Range: *priorbackupfile* has one of the following formats:

- *"CIT,filename"*
- *"EMS,filename"*
- *"FTTD",FTP URL"*

The syntax contained in *filename* should be consistent with the file system. For a DOS file system, back slashes (\) should be used. For a UNIX file system, forward slashes (/) should be used. Because a (\) is interpreted as the escape character, it will be represented in the output reply as a double backslash (\\).

The FTP URL must be in the format:

ftp://[<login>[:<password>]@]<host>[:<port>]/<file_name>

- <login>: default value: "anonymous"
- <password>: default for <login> "anonymous" is "" (empty). For security reasons, the <password> portion of the FTP file format must be masked prior to generating any autonomous messages.
- <host>: the <host> portion is an internet address of the form a.b.c.d with a, b, c and d in the range of 0..255.
- <port>: this is the port number of the FTP server, given when deviating from the standard port number 21.
- <file_name>: the complete path name of the file.

10. priorrestorefile

This parameter reflects the remote location where the next-to-last restore came from. It is omitted, if there is no next-to-last restore.

Type: text string

Range: *priorrestorefile* has one of the following formats:

- *"CIT,filename"*
- *"EMS,filename"*
- *"FTTD",FTP URL"*

The syntax contained in *filename* should be consistent with the file system. For a DOS file system, back slashes (\) should be used. For a UNIX file-system, forward slashes (/) should be used. Because a (\) is interpreted as the escape character, it will be represented in the output reply as a double backslash (\\).

The FTP URL must be in the format:

ftp://[<login>[:<password>]@]<host>[:<port>]/<file_name>

- <login>: default value: "anonymous"
- <password>: default for <login> "anonymous" is "" (empty). For security reasons, the <password> portion of the FTP file format must be masked prior to generating any autonomous messages.
- <host>: the <host> portion is an internet address of the form a.b.c.d with a, b, c and d in the range of 0..255.
- <port>: this is the port number of the FTP server, given when deviating from the standard port number 21.
- <file_name>: the complete path name of the file.

11. state – State of the Database

This parameter describes the state of the database per NVM region:

- CORRUPT (current, previous): Unavailable for invocation or execution.(e.g. corrupted check sum)
- DOWNLOADED (previous): Applies to the previous bin of database. Database just downloaded or ready for installation.
- INITIAL (current): Nothing in NVM.
- INITIAL (previous): Nothing in previous partition of NVM.
- INPROGRESS (current): Backup or restore in progress.
- INPROGRESS (previous): Restore is in progress.
- PREVIOUS (previous): A previously active database.
- RUNNING (current): The currently active database.

The normal database states of current NVM are: RUNNING and INPROGRESS. Most of the time its state is equal to RUNNING, signifying that it contains a copy of the database that is currently in use. When a backup or a restore makes the NVM inaccessible, current NVM will have a database state of INPROGRESS.

The normal database states of previous NVM are: PREVIOUS and INPROGRESS. Most of the time its state is equal to PREVIOUS, signifying that it contains a copy of the database that was used with the previous generic. When a restore makes the NVM inaccessible, previous NVM will have a database state of INPROGRESS.

If an NVM has never contained a database, then the

RTRV-PRMTR-DATA output for that NVM will consist of *state* INITIAL and size 0.

If an NVM is failed or missing, then RTRV-PRMTR-DATA will report only the state output variable for that NVM. *state* will have the value CORRUPT.

Type: alphanumeric value set.

Range: CORRUPT, DOWNLOADED, INITIAL, INPROGRESS, PREVIOUS, RUNNING.

Default: INITIAL

12. tid – target identifier

This parameter gives the TID that was stored in this NVM. The parameter will be omitted if state is INITIAL.

This parameter is not evaluated in the NE. *serialnumber* will be used to check whether database belongs to correct NE.

See [“RTRV-HDR: Retrieve header” \(5-8\)](#) for allowable tid values and details.

13. serialnumber – serial number

This parameter gives the NE serial number from the database control information showing to which NE the database belongs to. Comparing this serial number with the actual NE serial number from the backplane EEPROM may help troubleshooting when being in maintenance mode. The parameter will be omitted if state is INITIAL.

Type: alphanumeric value set.

Range: 12 times the space character or the 12 byte serial number of electronic label.

Default: 12 times the space character.

Example input/output

In the following example for the RTRV-PRMTR-DATA command, current NVM contains a copy of the RUNNING database. The database was last backed up at 9:00 and the backup was to WaveStar® CIT:

```
RTRV-PRMTR-DATA:LT-UNITE::123456;  
LT-UNITE 00-11-01 09:45:28  
M 123456 COMPLD  
"NVM-A:release=01.02.04,size=8234567,backuptime=  
00-11-01 09-00-00,backupfile=\"CIT,\\data\\00_11_01B  
\\",priorbackuptime=00-11-01 08-00-00,priorbackupfile=  
\"CIT,\\data\\00_11_01A\\",state=running,tid=LT-UNITE,  
serialnumber=01NB12345678"
```

;

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command’s error responses section. The error responses listed there apply also to the RTRV-PRMTR-DATA command.

Related TL1 messages

- [“APPLY: Apply software generic” \(11-42\)](#)
- [“CPY-MEM: Copy memory” \(11-20\)](#)
- [“RTRV-PRMTR-SFTWR: Retrieve parameter software” \(11-13\)](#)



RTRV-PRMTR-SFTWR: Retrieve parameter software

The RTRV-PRMTR-SFTWR command retrieves information about the software generics being in NVM. It identifies the generics' release number and provides also other information such as its state.

RTRV-PRMTR-SFTWR can be used to determine what generic is currently executing. It can also be used to determine what generic was previously executing. If a generic was downloaded but not installed, then the output describes the downloaded generic instead of the previously executing generic.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
Priority: 2
Abortable: No

Input format Command Syntax: RTRV-PRMTR-SFTWR:*tid*::*ctag*::[*amount*];

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. *amount* – Amount Of Data To Return
Refer to the [“RTRV-PRMTR-DATA: Retrieve parameter data” \(11-3\)](#) command for the input parameter syntax and description of this parameter.

Output format If the NE fully complies with the RTRV-PRMTR-SFTWR command and the *amount* request is specified to all, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
  "nvm:spec_block"
  . . .
```

```
...  
"nvm:spec_block"  
;
```

Output parameters Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command output parameters section for a normal completion response. The output parameters listed there also apply to the RTRV-PRMTR-SFTWR command. Additional parameters that specifically apply to this command are defined in the following:

1. **nvm** – non volatile memory identifier
This parameter specifies the version of NVM software (current or previous).
Type: value set.
Range: NVM-A for Current NVM-Software, NVM-B for Previous NVM-Software.
Default: Only current NVM software is reported except for *amount* having been specified to ALL.

Spec block parameters

This parameter provides information about the stored software. It contains the parameters *release*, *size*, *supplier*, *type*, *delivered*, *installed*, *path*, *state*.

1. **release** – Release Number
This parameter represents the software release number contained in the file.
Type: value set of the form x.y.z
Range: x, y, z are integer numbers from 00 to 99 in two-digit form, that means a leading zeros are not suppressed. x shall not be 00.
Default: 01.00.00.
2. **size** – Program Size
This parameter indicates the software generic size in bytes.
Type: numeric string.
Range: 0 to 999999999.
Default: In case the software generic on the NVM is empty, the value 0 is reported.

3. supplier
This parameter provides the supplier of generic.
Type: value set.
Range: 0 to 128 characters
Default: Lucent..
4. type – System Type
This parameter specifies the type of system.
Type: value set
Range: WaveStar_UNITE
Default: WaveStar_UNITE.
5. delivered
This parameter specifies the time and date when the download finished.
Type: value set of the format: YY-MM-DD HH-MM-SS.
Range: Y, M, D are numbers in two-digit format (i.e. leading zeros are not suppressed). YY represents the last two digits of the year, MM the month, DD the day of the month. H, M, S are numbers in two-digit format (i.e. leading zeros are not suppressed). HH represents the hour, MM the minutes, SS the seconds.
Default: 00-01-01 00-00-00.
6. installed
This parameter specifies date and time when the installation started.
Type: value set of the format: YY-MM-DD HH-MM-SS
Range: Y, M, D are numbers in two-digit format (i.e. leading zeros are not suppressed). YY represents the last two digits of the year, MM the month, DD the day of the month. H, M, S are numbers in two-digit format (i.e. leading zeros are not suppressed). HH represents the hour, MM the minutes, SS the seconds.
Default: 00-01-01 00-00-00.
7. path
This parameter specifies the location in a remote file system from where the SW Generic has been downloaded. In the case of a factory installed SW generic the parameter shall have the value "LUCENT".
Type: text string.

Range: The path parameter has one of the following formats (see description for details):

- "CIT,psel,ssel,tsel,nsap,filename"
- "EMS,psel,ssel,tsel,nsap,filename"
- "FTTD,psel,ssel,tsel,nsap,FTP URL"
- "LUCENT"

The sizes for *psel*, *ssel*, *tsel*, *nsap* are as follows:

- *psel* (path selector): 0-4 bytes (0-8 hex characters)
- *ssel* (section selector): 0-4 bytes (0-8 hex characters)
- *tsel* (transport selector): 0-16 bytes (0-32 hex characters)
- *nsap* (network service access point): 20 bytes (40 hex characters).

There can only be an even number of hex characters since they are generated from bytes and each byte corresponds to 2 hex characters.

From MSB (Most Significant Byte) to LSB (Least Significant Byte), these bytes are (the number in parenthesis equals the number of bytes): IDP(3), DFI(1), ORG(3), RES(2), RD(2), AREA(2), SYS(6), SEL(1). The SEL field of the *nsap* is also called the NSEL.

The syntax contained in *filename* should be consistent with the file system. For a DOS file system, back slashes (\) should be used. For a UNIX file-system, forward slashes (/) should be used. Because a (\) is interpreted as the escape character, it will be represented in the RTRV-PRMTR-SFTWR output as a double backslash (\\).

When the WaveStar® CIT is used to enter a file name for download backup, or restore, the craft is not required to enter a double backslash; the WaveStar® CIT software will enter the extra backslash into the TL1 CPY-MEM command.

For FT-TD *psel*, *ssel*, *tsel* and *nsap* of the GNE is reported. The FTP URL contains the CIT or EMS and the filename.

The FTP URL must be in the format:

ftp://[<login>[:<password>]@]<host>[:<port>]/<file_name>

- <login>: default value: "anonymous"
- <password>: default for <login> "anonymous" is "" (empty). For security reasons, the <password> portion of the FTP file format must be masked prior to generating any autonomous messages.

- <host>: the <host> portion is an internet address of the form a.b.c.d with a, b, c and d in the range of 0..255.
- <port>: this is the port number of the FTP server, given when deviating from the standard port number 21.
- <file_name>: the complete path name of the file.

8. state

This parameter describes the state of the generic per NVM region:

state (NVM):description

- CORRUPT (current, previous): Unavailable for invocation or execution.(e.g. corrupted check sum)
- DOWNLOADED (previous): Applies to the previous bin of database. Database just downloaded or ready for installation.
- INITIAL (current): Nothing in NVM.
- INITIAL (previous): Nothing in previous partition of NVM.
- INPROGRESS (current): Backup or restore in progress.
- INPROGRESS (previous): Restore is in progress.
- PREVIOUS (previous): A previously active database.
- RUNNING (current): The currently active database.

The normal (as contrasted with CORRUPT) states of current NVM are: RUNNING and INPROGRESS. The state is usually equal to RUNNING, signifying that it contains a copy of the generic that is currently executing. When an installation is in progress, current NVM will have a state of INPROGRESS.

The normal states of previous NVM are: PREVIOUS, DOWNLOADED and INPROGRESS. INPROGRESS means that a download is in progress. When the download terminates successfully, the state transitions to generic is installed, the NVM pointer is adjusted, and the NVM partition then identified as previous NVM will have the state set to PREVIOUS.

If an NVM has never contained a software generic, then the RTRV-PRMTR-SFTWR output for that NVM will consist of State=INITIAL.

If an NVM is corrupt, failed or missing, the RTRV-PRMTR-SFTWR output for that NVM will consist only of a single line

Example input/output In the following example for the RTRV-PRMTR-SFTWR command, current NVM has a copy of the executing program (normal condition), and previous NVM has a copy of the previous generic. Also, it was assumed, that the *WaveStar*[®] CIT is DOS based and *Navis*[®] Optical EMS UNIX based. This was done to illustrate the different formats for path. Notice that the current and previous NVM indicate the same number for free (and also unavailable) space since current and previous information is stored in the same physical NVM.

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error responses section. The error responses listed there also apply to the RTRV-PRMTR-SFTWR command.

365-374-099
Issue a, March 2003

Related TL1 messages

- [“APPLY: Apply software generic” \(11-42\)](#)
- [“CPY-MEM: Copy memory” \(11-20\)](#)
- [“RTRV-PRMTR-DATA: Retrieve parameter data” \(11-3\)](#)



CPY-MEM: Copy memory

The CPY-MEM command can be used to initiate a file transfer to/from an NE. The file transfer is intended to

- download a new software generics to the NE, or
- to backup the NE's database, or
- to restore the NE's database.

The actual file transfer can use one of the following file transfer applications:

- FTAM
- FTP
- FT-TD (file transfer translation device).

and is determined by the use of the from and to parameters.

CPY-MEM utilizing the Transport Service Bridge (TSB) is not supported.

Note: The support of a certain file transfer application is release specific and additionally dependent on the network configuration (e.g. when one GNE is configured to be a FT-TD, FT-TD can be used for file transfers to/from remote NEs).

Properties Login privilege
 User Privilege Code (UCFC/UCAL): S4
 Priority: 2
 Abortable: No

Input format Command Syntax: CPY-MEM:*tid::ctag::from,[src],to,[dst],class*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

3. from – from memory type

This parameter specifies the memory where the data is being transferred from.

Type: text string.

Range:

- "PRI" , PRImary NVM of the NE. Although there is no secondary NVM, PRI is used for compatibility reasons
- "CIT,*psel*,*ssel*,*tsel*,*sap*" , CIT means Craft Interface Terminal (WaveStar[®] CIT)
- "EMS,*psel*,*ssel*,*tsel*,*nsap*" , EMS means Element Management System (Navis[®] Optical EMS)
- "FTTD, *psel*, *ssel*, *tsel*, *nsap*" FTTD (file transfer translation device)

sel, *ssel*, *tsel*, and *nsap* are part of the from (and to) parameter and specify NSAP and selectors of the WaveStar[®] CIT or Navis[®] Optical EMS or the GNE in case of FTTD. The sizes of *sel*, *ssel*, *tsel*, and *nsap* are as follows: *psel* (path selector): 0-4 bytes (0-8 hex characters); *ssel* (session selector): 0-4 bytes (0-8 hex characters); *tsel* (transport selector): 0-16 bytes (0-32 hex characters); *nsap* (network service access point): 20 bytes (40 hex characters).

There can only be an even number of hex characters since they are generated from bytes and each byte corresponds to 2 hex characters.

4. src – source

This parameter reflects the source where the database or software is being transferred from. It is omitted if *class*=BACKUP.

Type: text string

Range: 1 to 128 characters, format is a valid complete directory name , or an FTP URL on the system (Navis[®] Optical EMS or WaveStar[®] CIT) from which the file is transferred.

Because backslash (\) is the TL1 escape character, to include a backslash as part of a directory name, it must be entered as a double backslash. A double backslash counts as only one character. Craft personnel will not have to type the double backslash for the GUI. The second backslash is automatically generated.

The FTP URL must be in the format:

ftp://[<login>[:<password>]@]<host>[:<port>]/<file_name>

- <login>: default value: "anonymous"
- <password>: default for <login> "anonymous" is "" (empty). For security reasons, the <password> portion of the FTP file format must be masked prior to generating any autonomous messages.
- <host>: the <host> portion is an internet address of the form a.b.c.d with a, b, c and d in the range of 0..255.
- <port>: this is the port number of the FTP server, given when deviating from the standard port number 21.
- <file_name>: the complete path name of the file.

Examples of valid file names are: "d:\bwm\data\file1.dat" or "/bwm/generic/01_02_15.prog".

5. to – to memory type

This parameter specifies the memory where the data is being transferred to.

Type: text string.

Range:

- "PRI" , PRImary NVM of the NE. Although there is no secondary NVM, PRI is used for compatibility reasons
- "CIT,*psel*,*ssel*,*tsel*,*sap*" , CIT means Craft Interface Terminal (WaveStar® CIT)
- "EMS,*psel*,*ssel*,*tsel*,*nsap*" , EMS means Element Management System (Navis® Optical EMS)
- "FTTD, *psel*, *ssel*, *tsel*, *nsap*", FTTD (file transfer translation device).

sel, *ssel*, *tsel*, and *nsap* are part of the from (and to) parameter and specify NSAP and selectors of the WaveStar® CIT or Navis® Optical EMS or the GNE in case of FTTD.

The sizes of *sel*, *ssel*, *tsel*, and *nsap* are as follows: *psel* (path selector): 0-4 bytes (0-8 hex characters); *ssel* (session selector): 0-4 bytes (0-8 hex characters); *tsel* (transport selector): 0-16 bytes (0-32 hex characters); *nsap* (network service access point): 20 bytes (40 hex characters).

There can only be an even number of hex characters since they are generated from bytes and each byte corresponds to 2 hex characters.

6. **dst** – destination directory name
This parameter reflects the destination where the database is being transferred to.
It is omitted if **class=DOWNLOAD** or **class=RESTORE**.
See parameter **src**. Those requirements also apply to this parameter **dst**.
7. **class** – Class Of The Copy
This parameter specifies the class of the copy:
 - **DOWNLOAD**: download the program
 - **BACKUP**: copy the database to a backup location
 - **RESTORE**: restore the database from a backup location.
 Type: alphanumeric value set.
Range: DOWNLOAD, BACKUP, RESTORE.

Output format If the NE fully complies with the CPY-MEM command, then the NE sends the following normal completion response after the copy has been completed:

```

      sid date time
M  ctag COMPLD
;
```

Output parameters Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command output parameters section for a normal completion response. The output parameters listed there also apply to the CPY-MEM command.

Detailed behavior description

Generation of REPT DBCHG message

The CPY-MEM command generates a REPT DBCHG message.

Program download capability

The CPY-MEM command can be used to download software generics. The DOWNLOAD option of CPY-MEM is used to download new generics which are stored in the previous region of NVM.

A directory or URL is specified for the source (see **src** parameter).

Installation via APPLY causes the contents of previous NVM to be installed. Following installation, a “pointer” is changed so that what is

identified as current NVM contains the currently executing generic and previous NVM contains the previous generic.

Backup capability

The BACKUP option of the CPY-MEM command can be used to backup the database from the current region of NVM to a destination which is located at the *WaveStar*® CIT or *Navis*® Optical EMS.

A directory or URL is specified for the destination (see *dst* parameter).

Restore capability

The RESTORE option of the CPY-MEM command can be used to restore the database from a source at the *WaveStar*® CIT or *Navis*® Optical EMS.

A directory or URL must be specified for the source (see *src* parameter).

The database is copied from a file store into previous region of NVM and then installed as the working database.

There are two phases to database restoration: copying the database from the source (e.g. the *WaveStar*® CIT) to NVM and then installing the database from NVM to working memory. The first phase takes much longer than the second.

Restore causes database installation

If CPY-MEM is used to restore a database to NVM, the NE will return COMPLD before the CTL controller reset.

The automatic installation of the database for a RESTORE is in contrast with the manual installation (via APPLY) of software required after a DOWNLOAD.

After the database has been installed to working memory, the working database contains provisioning that was in the restoration directory.

File transfer requires a checksum

A file that is transferred via the CPY-MEM command should contain one or more checksums to help validate that the file has not been corrupted.

Restore uses previous NVM

When CPY-MEM is used to restore a database, the previous region of NVM is used as an intermediate storage.

This minimizes the effect of copying to NVM since the current region of NVM is still available for database updates. Also, if communications fail during the copy to previous NVM, the current database is still available.

Provisioned vs. actual configuration

After a database restoration, if there is a discrepancy between the actual and provisioned CPs, then an alarm will be issued telling the craft about the discrepancy, but the NVM will not be altered automatically.

Example of discrepancy: The hardware indicates that an OC-48 pack is in slot 6, while the provisioned values in NVM indicate that a OC-192 pack should be in that slot. A CP mismatch alarm will be raised.

Example input/output

The following examples show input and output of CPY-MEM commands.

The following example shows a CPY-MEM request that downloads a new generic from the *Navis*[®] Optical EMS to PRI. To cause *prgm* to execute, the APPLY command must be used.

```

CPY-MEM:LT-UNITE::123456::"EMS,02,04,02,
39840F80000000000000000000008006A19784500","/unite/
release1/prgm","PRI",,DOWNLOAD;
      LT-UNITE 00-11-01 08:00:00
M 123456 COMPLD
:

```

The following example shows a CPY-MEM request that backs up the database in NVM to the *WaveStar*[®] CIT and stores it in a directory named data in a location named 00_11_01.

```

CPY-MEM:LT-UNITE::123456::"PRI",,"CIT,01,01,03,
39840F800000000000000000000000008006A13244500","\\data
\\00_11_01",BACKUP;
      LT-UNITE 00-11-02 08:00:00
M 123456 COMPLD
;

```

The following example shows a CPY-MEM command that restores the database from the *WaveStar*® CIT:

CPY-MEM:LT-UNITE::123456::"CIT,01,01,03,

```
CPY-MEM:LT-UNITE::123456:: "FTTD,01,01,03,  
39840F80000000000000000000008006A132445500",,"PRI",  
"ftp://johndoe:passwd@ftphost.company.com/directory  
/00_11_01",DOWNLOAD;  
    LT-UNITE 00-11-02 08:00:00  
M 123456 COMPLD  
;
```

The following parameter combinations are allowed based on the file transfer application:

	class	from	src	to	dst
FTAM	DOWNLOAD	"CIT,psel,ssel,tset,nsap"; "EMS,psel,ssel,tset,nsap"	<dir>	"PRI"	-
	BACKUP	"PRI"	-	"CIT,psel,ssel,tset,nsap"; "EMS,psel,ssel,tset,nsap"	<dir>
	RESTORE	"CIT,psel,ssel,tset,nsap"; "EMS,psel,ssel,tset,nsap"	<dir>	"PRI"	-
FT-TD	DOWNLOAD	"FTTD,psel,ssel,tset,nsap"	<URL>	"PRI"	-
	BACKUP	"PRI"	-	"FTTD,psel,ssel,tset,nsap";	<URL>
	RESTORE	"FTTD,psel,ssel,tset,nsap"	<URL>	"PRI"	-

Validation rule: Invalid file or directory name

If the command failed due to

- an invalid directory or
- an invalid source file or
- file store not found or
- file access denied,

the system responds with:

Error code: SDNC - Status, Data not consistent, invalid file or directory

Validation rule: Source product type does not match network product type

If a product type of the source does not match the product type of the NE, the system responds with:

Error code: SDNC - Status, Data not consistent

Validation rule: Insufficient file space

If the command failed due to insufficient file space, the system responds with:

Error code: ENEQ - Equipage, Not Equipped, insufficient file space

Validation rule: NVM size sufficient for database with NN objects

The system shall verify that the installed NVM has a capacity > 256 Mbytes during an attempt to restore a database containing NN objects. Otherwise the following error shall be reported:

Error Code: SNVS - Status, Not in Valid State, NVM size not sufficient.

Validation rule: Product mismatch

If the command failed due to a product mismatch in a retrieved file (file does not belong to NE type), the system responds with:

Error code: SRAC - Status, Requested Access Configuration invalid, retrieved file NE mismatch

Validation rule: Temporary exhaustion of resources

If the system is experiencing temporary exhaustion of allocated resources because

- all resources are busy or
- a CPY-MEM request is issued and a previous CPY-MEM has not finished or a resource is busy for other reasons,

the system responds with:

Error code: SARB - Status, All Resources Busy

Validation rule: External communication failure

If the command failed due to an external communications failure, the system responds with:

Error code: SROF - Status, Requested Operation Failed, external communications failure

The following list identifies conditions that will cause an SROF error response as given above:

- FTAM error
- External communication failure
- Unsuccessful file transfer

Validation rule: Transferred file is deemed invalid

If the transferred file is deemed invalid for miscellaneous reasons such as incorrect checksum, invalid control information, etc., the system responds with:

Error code: SROF - Status, Requested Operation Failed, unsuccessful file transfer

Validation rule: Generic not available

If the command failed because the generic is not available, the system responds with:

Error code: ENSG - Equipage, Not Software Generic, generic not available

The following condition will cause this ENSG error response:

- Not a software generic file.

Validation rule: Directory not accessible

If a directory is specified that cannot be found or cannot be accessed due to improper privileges, the system responds with:

Error code: IENE - Input, Entity Not Exists

Validation rule: Deemed source file

If a source file is deemed invalid for miscellaneous reasons such as incorrect checksum, invalid control information, etc., the system responds with:

Error code: SNVS - Status, Not in Valid State

Validation rule: Directory/URL not specified

If CPY-MEM specifies a DOWNLOAD or RESTORE and no directory/URL is specified in *src* or if it specifies a BACKUP and no directory/URL is specified in *dst*, then the following error response is given:

Error code: ICNV - Input, Command Not Valid, file must be specified

Validation rule: Additional directory/URL specified

If CPY-MEM specifies a DOWNLOAD or RESTORE and *dst* is not empty, or if it specifies a BACKUP and *src* is not empty:

Error code: SDNC - Status, Data Not Consistent

Related TL1 messages

- [“APPLY: Apply software generic” \(11-42\)](#)
- [“RTRV-PRMTR-DATA: Retrieve parameter data” \(11-3\)](#)
- [“RTRV-PRMTR-SFTWR: Retrieve parameter software” \(11-13\)](#)

- [“RTRV-NE: Retrieve NE” \(12-5\)](#)
- [“ED-NE: Edit NE” \(12-8\)](#)



CPY-NEM Notification

Output format The output parameters *sid*, *date*, *time*, and *atag* are described in the REPT DBCHG notification.

Command Syntax: CPY-MEM::*from*,[*src*],*to*,[*dst*],*class*;

Output parameters

Command parameters

1. from - from memory type
Refer to the [“CPY-MEM: Copy memory” \(11-20\)](#) for the description of this parameter.
2. src – source
See definition of input parameter *src* in [“CPY-MEM: Copy memory” \(11-20\)](#).
3. to – to memory type
See definition of input parameter *to* in [“CPY-MEM: Copy memory” \(11-20\)](#).
4. dst – destination directory name
See definition of input parameter *dst* in [“CPY-MEM: Copy memory” \(11-20\)](#).
5. class – Class Of The Copy
See definition of input parameter *class* in [“CPY-MEM: Copy memory” \(11-20\)](#).

Example output The following is an example for a CPY-MEM notification after a software download:

```

LT-UNITE 00-11-01 15:00:00
A 000 REPT DBCHG
"TIME=15-00-00,DATE=00-11-03:CPY-MEM::\"EMS,02,04,
02,39840F800000000000000000000000008006A19784500\", \"
/unite/release1/prgm\", \"PRI\", ,DOWNLOAD\"
:

```

The following is an example for a CPY-MEM notification after a DB restore (before the NE resets):

LT-UNITE 00-11-01 15:00:00
A 000 REPT DBCHG

☐

COPY-RFILE: Copy remote file

The COPY-RFILE command can be used to initiate remotely a file transfer to/from an NE. The file transfer is intended to download a new software generics to the NE.

The actual file transfer can use the following file transfer applications:

- FTAM
- FTP
- FT-TD (file transfer translation device).

Note: The support of a certain file transfer application is release specific and additionally dependent on the network configuration (e.g. when one GNE is configured to be a FT-TD, FT-TD can be used for file transfers to/from remote NEs).

Properties User Privilege Code (UCFC/UCAL): S4
 Priority: 2
 Abortable: No.

Input format Command Syntax: CPY-RFILE:*tid::ctag:::spec_block*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.

Spec block parameters

- type – type and direction of the file transfer

This parameter specifies the type and direction of the file transfer:

- SWDL: SW Download (
- RFR: Remote File Restore, restore the database from a backup location
- RFBU: Remote File Backup, copy the database to a backup location

At the moment only SWDL is supported.

Type: alphanumeric value set.

Range: SWDL.

- **src** – the source of the file
src is the source where the database (*xfertype*=RFR) or software (*xfertype*=SWDL) is being transferred from. It is omitted if *xfertype*=RFBU.

Type: text string;

Range: 1 to 128 characters, format is a FTP URL or FTAM URL address on the system (EMS or CIT) from which the file is transferred

The FTP URL must be in the format:

ftp://[<login>[:<password>]@]<host>[:<port>]/<path_name>

- <login>: default value: "anonymous"
- <password>: default for <login> "anonymous" is "" (empty). For security reasons, the <password> portion of the FTP file format must be masked prior to generating any autonomous messages.
- <host>: the <host> portion is an internet address of the form a.b.c.d with a, b, c and d in the range of 0..255.
- <port>: this is the port number of the FTP server, given when deviating from the standard port number 21.
- <path_name>: The complete path name, where the files are located.

The FTAM URL must be in the format:

ftam://[<nsap_address>]/<path_name>

- <nsap_address>: network service access point address of the host, which consists of 20 bytes (40 hex characters)
- <path_name>: The complete path name, where the files are located.

Examples of valid path name are: "/bwm/generic/01_02_15",
 "C:\\Program Files\\Lucent Technologies\\WaveStar"

- **dest** – destination of the file
dest is the destination where the database is being transferred to. It is omitted if xfer type=SWDL. See parameter *src*. Those requirements also apply to this parameter *dest*.
- **ovwrt**
 This parameter indicates whether or not the files should overwrite an existing file located at the destination.
 Type: alphanumeric value set.
 Range: YES (default(- Overwrite existing file of same directory location and filename. NO - Do not overwrite file, fail the file transfer if file already exists.
- **fttd** – file transfer translation device
 This parameter specifies the file transfer translation device (FTTD).
 Type: text string.
 Range: 1 to 128 characters, format is a FTTD gateway address. The FTTD address must be in the format:
 - fttd://<nsap_address>
 <nsap_address>: network service access point address of the host, which consists of 20 bytes (40 hex characters). There can only be an even number of hex characters since they are generated from bytes and each byte corresponds to 2 hex characters.

Output format The NE sends the following normal completion response just prior to initiating the requested file transfer:

```

sid date time
M ctag COMPLD
;
```

Output parameters Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command output parameters section for a normal completion response. The output parameters listed there also apply to the CPOY-RFILE command.

Detailed behavior description

Program download capability

The COPY-RFILE command can be used to download software generics. The DOWNLOAD option of COPY-RFILE is used to

download new generics which are stored in the previous region of NVM. A directory or URL shall be specified for the source (see srcurl parameter).

When the COPY-RFILE command is received by the NE, a confirmation or rejection must be returned immediately. The NE must ensure it recognizes the file/s it will be downloading and, when applicable, that there is enough space to store, uncompress, and install the file/s. So, the initial response will indicate the NEs imminent actions.

As an FTP client, the network element will use the information included in the TL1 command to establish an FTP session with Transport Element Activation Manager, being the FTP server.

Installation via APPLY causes the contents of previous NVM to be installed. Following installation, a "pointer" is changed so that what is identified as current NVM contains the currently executing generic and previous NVM contains the previous generic.

File transfer requires a checksum

A file that is transferred via the COPY-RFILE command should contain one or more checksums to help validate that the file has not been corrupted.

Example input/output

The following examples show input and output of COPY-RFILE commands: The following example shows a COPY-RFILE request that downloads a new generic from the manager to NVM of the NE by FTP with the help of a FTTP device. To cause prgm to execute, the APPLY command must be used.

```
COPY-RFILE:LT-UNITE::123456:::TYPE=SWDL,
SRC="ftp://user:pwd@128.218.128.281:21/vender/
model/release1",
FTTD="fttd://39840f80000000000000000000000000601D0D50E01d",
OVWRT=YES;
    LT-UNITE 00-11-01 08:00:00
M 123456 COMPLD
;
```

The following example shows a COPY-RFILE request that downloads a new generic from the manager to NVM of the NE by FTAM. To cause prgm to execute, the APPLY command must be used.

```
COPY-RFILE:LT-UNITE::123456:::TYPE=SWDL,
```

```
SRC="ftam://39840F8000000000000000000000000010a4fab861d/  
C:\\Program Files\\Lucent Technologies\\WaveStar CIT\\  
generics\\susi030042",OVWRT=YES;  
    LT-UNITE 00-11-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error response section. The error responses listed there also apply to the COPY-RFILE command. Additional error responses that specifically apply to this command are defined in the following:

Validation rule: Input parameters not specified

If any one or more of the input parameter values are not valid, the system responds with:

Error code: IDNV - Input, Data Not Valid

Validation rule: Insufficient file space

If the command failed due to insufficient file space, the system responds with:

Error code: ENEQ - Equipage, Not Equipped, insufficient file space

Validation rule: Product mismatch

If the command failed due to a product mismatch in a retrieved file (file does not belong to NE type), the system responds with:

Error code: SRAC - Status, Requested Access Configuration invalid, retrieved file NE mismatch

Validation rule: Temporary exhaustion of resources

If the system is experiencing temporary exhaustion of allocated resources because

- all resources are busy or
- a CPY-MEM request is issued and a previous CPY-MEM has not finished or a resource is busy for other reasons,

the system responds with:

Error code: SARB - Status, All Resources Busy

Validation rule: Directory/URL not specified

If COPY-RFILE specifies a SWDL and no directory/URL is specified by *src*, then the following error response is given:

Error code: ICNV - Input, Command Not Valid, file must be specified

Validation rule: FT-TD device not specified

If COPY-RFILE used FTP for SWDL no FT-TD device (nsap) is specified by *fttd*, then the following error response is given:

Error code: ICNV - Input, Command Not Valid, FT-TD must be specified

Validation rule: Additional directory/URL specified

If COPY-RFILE specifies a SWDL and *dst* is not empty:

Error code: SDNC - Status, Data Not Consistent

Related TL1 messages

- [“APPLY: Apply software generic” \(11-42\)](#)
- [“RTRV-PRMTR-DATA: Retrieve parameter data” \(11-3\)](#)
- [“RTRV-PRMTR-SFTWR: Retrieve parameter software” \(11-13\)](#)
- [“RTRV-NE: Retrieve NE” \(12-5\)](#)
- [“ED-NE: Edit NE” \(12-8\)](#)



REPT EVT FXFR: Report Event FXFR

REPT EVT FXFR is an autonomous message that is used to report remote file transfer activities.

Output format The general format of a REPT EVT FXFR autonomous message is as follows:

```
sid date time
A atag REPT EVT FXFR
  "filename,fxfr_status[,fxfr_rslt][,bytes_xfrd]";
```

Output parameters

Command parameters

1. atag – Automatic Tag
Refer to the [“REPT ALM: Report alarm” \(6-44\)](#) message.
2. filename
This parameter identifies the name of the file transferred.
Type: text string.
Range: 1 to 128 characters.
3. fxfr_status
This parameter indicates the file transfer status.
Type: alphanumeric value set.
Range:
 - START, indicates file transfer has started
 - IP, indicates file transfer is In-Progress; optional
 - COMPLD, indicates file transfer has completed.
4. fxfr_rslt
This parameter indicates success or failure of the file transfer.
This parameter is only displayed when the file transfer has completed (that is., *fxfr_status* is COMPLD).
Type: alphanumeric value set.

Range:

- SUCCESS, indicates successful file transfer
- FAILURE, indicates failed file transfer.

5. fxfr_xfrd

Number of bytes transferred for IP and total number of bytes for COMPLD.

Type: alphanumeric value set.

Detailed behavior description

After the initial response to the COPY-RFILE command by the NE, the autonomous message must be used to communicate any kind of event. So, if the connection or file transfer fails, the autonomous message must be sent with a failure indication. Once the file has been completely downloaded, the autonomous message must then be sent with a successful indication.

Reasons of transmit failure - external communication failure

If the command failed due to an external communications failure.

The following list identifies conditions that will cause an SROF error response as given above:

- External communication failure
- Unsuccessful file transfer.

Reasons of transmit failure - transferred file is invalid

If the transferred file is deemed invalid for miscellaneous reasons such as incorrect checksum, invalid control information, etc., the system shall respond with fxfr_rslt=FAILURE.

Reasons of transmit failure - Generic not available

If the command failed because the generic is not available, the system shall respond with fxfr_rslt=FAILURE. The following condition will cause this ENSG error response: Not a software generic file.

Reasons of transmit failure - Directory not accessible

If a directory is specified that cannot be found or cannot be accessed due to improper privileges, the system shall respond with fxfr_rslt=FAILURE.

Reasons of transmit failure - Product mismatch

If the command failed due to a product mismatch in a retrieved file (file does not belong to NE type), the system shall respond with fxfr_rslt=FAILURE.

Example input/output The following example shows an autonomous message REPT EVT FXFR for starting a file transfer :

```
LT-UNITE-123 00-01-01 08:00:00
A 003 REPT EVT FXFR
"/UNITE/release4,START,8051"
;

LT-UNITE-123 00-01-01 08:00:00
A 003 REPT EVT FXFR
"/UNITE/release4,IP,2000"
;

LT-UNITE-123 00-01-01 08:00:00
A 003 REPT EVT FXFR
"/UNITE/release4,COMPLD,SUCCESS,8051"
;
```

Related TL1 messages

- [“APPLY: Apply software generic” \(11-42\)](#)
- [“COPY-RFILE: Copy remote file” \(11-33\)](#)
- [“RTRV-PRMTR-DATA: Retrieve parameter data” \(11-3\)](#)
- [“RTRV-PRMTR-SFTWR: Retrieve parameter software” \(11-13\)](#)
- [“RTRV-NE: Retrieve NE” \(12-5\)](#)
- [“ED-NE: Edit NE” \(12-8\)](#)



APPLY: Apply software generic

The APPLY command can be used to install a copy of a software generic stored in the NE, overwriting the currently executing software. Installation of the software causes the system to reset.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S4
Priority: 2
Abortable: No

Input format Command Syntax: `APPLY:tid::ctag::[,qualifier];`
The two commas before *qualifier* are kept for compatibility reasons for products, for which scheduling of an APPLY command is possible.

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
3. qualifier
Description: The *qualifier*’s parameters are INSTALL and PREVIOUS.
 - INSTALL causes the software download to be installed. This is the default action if no value is specified for *qualifier*. Prior to installation, the software state must be equal to DOWNLOADED. The software state can be retrieved by RTRV-PRMTR-SFTWR.
 - PREVIOUS forces the generic that is in previous NVM to be installed, even if it has been previously installed.
 Type: alphanumeric value set.
Range: INSTALL, PREVIOUS.
Default: INSTALL.

Output format If the NE fully complies with the APPLY command successfully, then the following completion response is given:

```
sid date time
M ctag COMPLD
/* New software generic installation in progress */
;
```

Detailed behavior description

Installation of a previous generic

The software state, as indicated by the RTRV-PRMTR-SFTWR command, is DOWNLOADED if the generic has been downloaded but not yet successfully installed.

If a generic has been previously installed, then it has a state equal to PREVIOUS.

For a software generic of state equal to PREVIOUS, the APPLY command will be denied unless *qualifier* has the value PREVIOUS.

This helps to prevent an inadvertent second APPLY from replacing the currently executing generic with the previous one.

The PREVIOUS option for APPLY is intended for use as a manual back out and is limited to either of the following cases:

- the previous generic and the current database are compatible
- the previous generic and the previous database are compatible.

Compatibility is ensured by comparison of serial numbers. If the previous generic is incompatible with both databases then the APPLY command will not be successful.

APPLY being denied during installation

If an installation is already in progress, then another request for an installation will be denied.

Generation of REPT DBCHG message

The APPLY command generates a REPT DBCHG message. This message will be generated before the command causes the system to be reset.

Installation recorded in history log

The initiation of an installation is recorded in history log.

Reactions after installation completed

When a NE receives an APPLY command and as a result successfully installs a new software generic, the NE loses any command messages that were pending and all alarms are cleared. All performance monitoring bins are cleared, and any conditions are cleared.

Example input/output

The following example shows an APPLY command requesting installation of a new generic:

```
APPLY:LT-UNITE::123456;  
    LT-UNITE 00-11-01 09:45:28  
M 123456 COMPLD  
    /* New Software generic installation in progress */  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command error response section. The error responses listed there also apply to the APPLY command. Additional error responses that specifically apply to this command are defined in the following:

Validation rule: Temporary system exhaustion

If the system is experiencing temporary exhaustion of allocated resources, the system responds with:

Error code: SARB - Status, All Resources Busy, system limit exceeded

Validation rule: APPLY already in progress

If an APPLY request is issued and an installation is already in progress or a resource is busy for other reasons, the system responds with:

Error code: SARB - Status, All Resources Busy

Validation rule: Non-Hardware system difficulties

If the command cannot be completed due to system difficulties other than hardware or equipment, the system responds with:

Error code: SROF - Status, Requested Operation Failed

The following list identifies conditions that will cause an SROF error response:

- Install failure

Validation rule: Generic not available

If the command failed because the generic is not available, the following error response is returned:

Error code: ENSG - Equipage, Not Software Generic, generic not available

Validation rule: APPLY applied on corrupted software

If an APPLY request is entered and an uncorrupted copy of software does not reside in the NE, then the following error response is given:

Error code: SROF - Status, Requested Operation Failed, other system failure

Validation rule: Second APPLY on same software

If an APPLY request is entered and the software copy has been previously installed (that is, its state is PREVIOUS), then the following error response is given:

Error code: SNVS - Status, Not in Valid State

To force the installation, *qualifier* should be set to PREVIOUS.

Validation rule: File inappropriate

If the type of file is inappropriate for installation to the NE, then the following error response is given:

Error code: SDNC - Status, Data Not Consistent

Related TL1 messages

- [“CPY-MEM: Copy memory” \(11-20\)](#)
- [“RTRV-PRMTR-DATA: Retrieve parameter data” \(11-3\)](#)
- [“RTRV-PRMTR-SFTWR: Retrieve parameter software” \(11-13\)](#)



APPLY notification

Syntax The APPLY notification has the following specific syntax:

Command Syntax: APPLY:,,*qualifier*;

The output parameters sid, date, time, and atag are described in the REPT DBCHG notification.

Output parameters

Command parameters

1. *qualifier*

See definition of *qualifier* in [“APPLY: Apply software generic” \(11-42\)](#).

Example output

The following is an example for an APPLY notification using the *qualifier* INSTALL:

```
LT-UNITE 00-11-01 15:00:00
A 000 REPT DBCHG
"TIME=15-00-00,DATE=00-11-03:APPLY:,,INSTALL"
;
```





12 TL1 messages - data communications network

Overview

Purpose This section contains the TL1 interface definition for the domain *data communications network*.

Contents

<u>General DCN parameters</u>	<u>12-4</u>
<u>RTRV-NE: Retrieve NE</u>	<u>12-5</u>
<u>ED-NE: Edit NE</u>	<u>12-8</u>
<u>ED-NE notification</u>	<u>12-11</u>
<u>DCC terminations</u>	<u>12-12</u>
<u>RTRV-FECOM: Retrieve DCC related parameters</u>	<u>12-13</u>
<u>ENT-FECOM: Enter DCC channel related parameters</u>	<u>12-18</u>
<u>ED-FECOM notification</u>	<u>12-26</u>
<u>ENT-FECOM notification</u>	<u>12-28</u>
<u>DLT-FECOM notification</u>	<u>12-30</u>
<u>Transparent DCC cross-connection</u>	<u>12-31</u>
<u>RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection</u>	<u>12-32</u>
<u>ENT-CRS-FECOM: Enter transparent DCC cross-connection</u>	<u>12-36</u>

<u>ENT-CRS-FECOM notification</u>	<u>12-39</u>
<u>DLT-CRS-FECOM: Delete transparent DCC cross-connection</u>	<u>12-40</u>
<u>DLT-CRS-FECOM notification</u>	<u>12-43</u>
<u>LAN</u>	<u>12-44</u>
<u>RTRV-FECOM-LAN: Retrieve LAN channel related parameters</u>	<u>12-45</u>
<u>ENT-FECOM-LAN: Enter LAN related parameters</u>	<u>12-50</u>
<u>ENT-FECOM-LAN notification</u>	<u>12-57</u>
<u>Autonomous notification</u>	<u>12-59</u>
<u>OSI network layer</u>	<u>12-60</u>
<u>RTRV-ULSDCC-L3: Retrieve layer 3 related parameters</u>	<u>12-61</u>
<u>ENT-ULSDCC-L3: Create a further OSI node</u>	<u>12-67</u>
<u>ENT-ULSDCC-L3 Notification</u>	<u>12-72</u>
<u>ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.</u>	<u>12-74</u>
<u>ED-ULSDCC-L3 notification</u>	<u>12-79</u>
<u>DLT-ULSDCC-L3: Delete a node ID other than node-1</u>	<u>12-81</u>
<u>DLT-ULSDCC-L3 Notification</u>	<u>12-84</u>
<u>Autonomous notification</u>	<u>12-85</u>
<u>OSI transport layer and TARP</u>	<u>12-86</u>
<u>RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters</u>	<u>12-87</u>
<u>ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks</u>	<u>12-91</u>
<u>ENT-ULSDCC-L4 notification</u>	<u>12-96</u>
<u>DLT-ULSDCC-L4: Delete TARP manual adjacent NSAP address in layer 4 of the specified OSI stack</u>	<u>12-98</u>
<u>DLT-ULSDCC-L4 notification</u>	<u>12-100</u>
<u>TCP/IP parameters</u>	<u>12-101</u>
<u>RTRV-ULS: Retrieve upper layer stack</u>	<u>12-102</u>
<u>ENT-ULS: Enter upper layer stack</u>	<u>12-105</u>

<u>ENT-ULS Notification</u>	<u>12-108</u>
<u>IP Map</u>	<u>12-109</u>
<u>RTRV-IP-MAP: Retrieve TCP/IP map</u>	<u>12-110</u>
<u>ENT-IP-MAP: Enter TCP/IP map</u>	<u>12-113</u>
<u>ENT-IP-MAP Notification</u>	<u>12-116</u>
<u>DLT-IP-MAP: Delete TCP/IP map</u>	<u>12-117</u>
<u>DLT-IP-MAP notification</u>	<u>12-119</u>
<u>MAPs</u>	<u>12-120</u>
<u>RTRV-MAP-NEIGHBOR: Retrieve map neighbor</u>	<u>12-121</u>
<u>RTRV-MAP-NETWORK: Retrieve network map</u>	<u>12-126</u>
<u>RTRV-SCN-NEIGHBOR: Retrieve SCN neighbor</u>	<u>12-132</u>



General DCN parameters

Overview

Purpose This section describes TL1 messages for DCN which have effects on system wide DCN configurations.

Contents

RTRV-NE: Retrieve NE	12-5
ED-NE: Edit NE	12-8
ED-NE notification	12-11



RTRV-NE: Retrieve NE

The RTRV-NE command retrieves DCN attributes associated with the NE at the system level but not associated with any particular facility or equipment unit.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
 Priority: 1
 Abortable: Yes.

Input format Command Syntax: RTRV-NE:*tid*::*ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
 Description: Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
 Description: Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
 Type: CTAG.

Output format If the RTRV-NE request is successful, the following normal completion message is returned:

```

sid date time
M ctag COMPLD
":spec_block"
. . .
. . .
. . .
":spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters

Spec block parameters

1. ftamftpgw - File Transfer Translation Device (FT-TD) function
This parameter is used to enable or disable the File Transfer Translation Device (FT-TD) function.
Type: Value set.
Range: ENABLE, DISABLE (default).
2. tl1tcpipgw – TL1 Translation Device (T-TD) function
This parameter is used to enable or disable the TL1 Translation Device (T-TD) function.
Type: Value set.
Range: ENABLE, DISABLE (default).
3. dcnpn – DCN ASAP Profile Name
This parameter specifies the name of the current ASAP profile used for DCN alarms.
Type: Alphanumeric string. A hyphen (-) is additionally allowed in the name.
Range: up to 24 characters.
Default: DEFAULT.

Detailed behavior description

The command retrieves system parameters as described in the Output parameter section.

Example input/output

The following example shows the result of a RTRV-NE command:

```
RTRV-NE:LT-UNITE::123456;  
LT-UNITE 00-11-01 08:00:00  
M 123456 COMPLD  
":ftamftpgw=DISABLE"  
":tl1tcpipgw=DISABLE"  
":tunstat=DISABLE"  
":dcnpn=DEFAULT"  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-NE command.

Related TL1 messages [“ED-NE: Edit NE” \(12-8\)](#)



ED-NE: Edit NE

The ED-NE command is used to activate or de-activate DCN functions associated with the NE at the system level, e.g. the IP tunneling function or the TL1 Translation Device (T-TD) function.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S3
Priority: 1
Abortable: No.

Input format Command Syntax: ED-NE:*tid*::*ctag*:::*spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition of *tid* in [“RTRV-NE: Retrieve NE” \(12-5\)](#).
2. *ctag* – Correlation Tag
See definition of *ctag* in [“RTRV-NE: Retrieve NE” \(12-5\)](#).

Spec block parameters

1. *ftamftpgw* – File Transfer Translation Device (FT-TD) function
See definition of *ftamftpgw* in [“RTRV-NE: Retrieve NE” \(12-5\)](#).
2. *tl1tcpipgw* – TL1 Translation Device (T-TD) function
See definition of *tl1tcpipgw* in [“RTRV-NE: Retrieve NE” \(12-5\)](#).
3. *dcnnpn* – DCN ASAP Profile Name
See definition of *dcnnpn* in [“RTRV-NE: Retrieve NE” \(12-5\)](#).

Output format If the ED-NE command completes successfully, then the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#) .

Detailed behavior description

The command activates or de-activate the DCN function associated with the parameters specified in the *spec_block* section.

Disabling *ftamftpgw*

When the parameter *ftamftpgw* is set to DISABLE existing file transfers via FT-TD will be aborted.

Example input/output

The following example shows the result of an ED-NE command, where IP tunneling is enabled:

```
ED-NE:LT-UNITE::123456:::tunstat=ENABLE;  
    LT-UNITE 00-11-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-NE command.

Validation Rule: Check for correct IP configuration

The request to ENABLE *ftamftpgw*, *tl1tcpipgw* or *tunstat* is only allowed if there is already a valid IP configuration (IP address of LAN1, subnet mask of LAN1, default router) provisioned for the system.

Error code: SNVS - Status, Not in Valid State, incomplete IP configuration

For the specific checks refer to

- ENT-FECOM-LAN, parameter ip_lanstat
- ENT-FECOM-LAN, parameter ip_snm
- ENT-ULS, parameter ip_drad

Validation Rule: Check for correct TARP configuration

The request to ENABLE *tl1tcpipgw* shall only be allowed if TARP originator, propagator and responder roles are enabled for node 1.

Error code: SNVS - Status, Not in Valid State, TARP not enabled

Related TL1 messages

- [“RTRV-NE: Retrieve NE” \(12-5\)](#)
- [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#)
- [“ENT-FECOM-LAN: Enter LAN related parameters” \(12-50\)](#)



ED-NE notification

Output format The ED-NE notification has the following specific syntax:

ED-NE::*spec_block*

The output parameters *sid*, *date*, *time*, and *atag* are described in the REPT DBCHG notification.

Output parameters

1. ftamftpgw – File Transfer Translation Device (FT-TD) function
See definition of *ftamftpgw* in [“RTRV-NE: Retrieve NE” \(12-5\)](#).
2. tl1tcpipgw – TL1 Translation Device (T-TD) function
See definition of *tl1tcpipgw* in [“RTRV-NE: Retrieve NE” \(12-5\)](#).
3. dcnpn – DCN ASAP Profile Name
See definition of *dcnpn* in [“RTRV-NE: Retrieve NE” \(12-5\)](#).

Example output The following is an example ED-NE notification in case the *tunstat* function has been enabled:

```
LT-UNITE 00-11-01 15:00:00
A 000 REPT DBCHG
"TIME=15-00-00,DATE=00-11-03:ED-NE:::tunstat=ENABLE"
;
```

□

DCC terminations

Overview

Purpose This section describes TL1 commands for section RS-DCC and Line MS-DCC: provisioning, modification and status retrieval.

Contents

RTRV-FECOM: Retrieve DCC related parameters	12-13
ENT-FECOM: Enter DCC channel related parameters	12-18
ED-FECOM notification	12-26
ENT-FECOM notification	12-28
DLT-FECOM notification	12-30



RTRV-FECOM: Retrieve DCC related parameters

The RTRV-FECOM command can be initiated by a user to retrieve parameters of Data Communication Channels (DCC) and its attachment to specific OSI nodes.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
Priority: 1
Abortable: Yes.

Input format Command Syntax:
RTRV - FECOM:*tid::ctag::[port],[dcctype],[networktype]*;

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
3. port – DCC port
This parameter indicates the port AID of a circuit pack which is used together with *dcctype* to identify the DCC channel.
Type: AID.
Range: SPortAID.
Default: If this field is omitted, the report will include the DCC parameters of all transmission ports belonging to the NE.

4. **dcctype**
This parameter specifies whether the LINE/MS or SECTION/RS DCC parameters of the *port* shall be reported by the command.
Type: Alphanumeric value set.
Range: LINE, SECTION.
Default: If this parameter is omitted, LINE and SECTION DCC parameters will be considered for the output.
5. **networktype – Network Type**
This parameter specifies whether the MCN or SCN related DCC parameters of the port shall be reported by the command.
Type: Alphanumeric value set.
Range: MCN, SCN.
Default: If this parameter is omitted, MCN and SCN related parameters will be considered for the output.

Output format If the RTRV-FECOM is successful, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
"port,dcctype:spec_block"
...
...
...
"port,dcctype:spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#) .

Output parameters

Command parameters

1. **port**
See definition of *port* in input parameters sections of [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#).
2. **dcctype**
See definition *dcctype* in input parameters sections of [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#).

Spec block parameters

1. dccprottp
This parameter reports the protection type of the DCC channel.
0X1 means the port is not involved in a protection group or DCC protection switching is disabled. 1+1 means DCC protection switching is enabled: In these case only the active worker line is shown.
Type: Alphanumeric value set.
Range: 0X1 (default), 1+1.
2. dccstat
This parameter indicates whether MCN communication over the DCC channel is enabled or if it is used in a transparent DCC cross C-connection.
Type: Alphanumeric value set.
Range: DISABLE, ENABLE (default), TRANSPARENT.
Note: Output responses with dccstat=DISABLE will only sent when scn_dccstat=ENABLE, see also Detailed behaviour description below.
3. lapdmode
This parameter indicates the type of LAPD service. Modes are AITS and UITS. Starting with R2.0 this parameter is also used to determine the service for the LinkID protocol.
If dccstat = TRANSPARENT, scn_dccstat = TRANSPARENT, or scn_dccstat = ENABLE this parameter has no meaning and will not be reported.
Type: Alphanumeric value set..
Range:
 - UITS (default)
 - AITS.
4. lapdrl
This parameter indicates the LAPD role. This parameter is also used to determine the service for the LinkID protocol. If **dccstat** = TRANSPARENT, **scn_dccstat** = TRANSPARENT, or **scn_dccstat** = ENABLE this parameter has no meaning and will not be reported.
Type: Alphanumeric value set.
Range:
 - USER-SIDE (default)
 - NETWORK-SIDE.

5. osinode
Assignment of a DCC channel to an MCN node in the NE. The parameter is omitted when *dccstat* = ENABLE.
An NE can have up to 8 instances of the OSI stack. Node-1 is default and has a NSAP. Nodes 2-8 have a NET and no SEL (NSAP = NET + SEL, for NET: SEL=00). Nodes 2-8 can be created and configured, see command ENT-ULSDCC-L3.
Type: AID.
Range: osinode{1-8}
6. scn_dccstat
This parameter indicates whether the DCC channel is used for communication over the SCN or is involved in a transparent DCC cross-connection.
Type: Alphanumeric value set.
Range: DISABLE (default), ENABLE, TRANSPARENT.
Note: Output responses with *scn_dccstat*=DISABLE will only sent when *dccstat*=ENABLE, see also Detailed behaviour description below.

Detailed behavior description

The command retrieves the system parameter as described in the Output Parameter Section. Output responses will only be delivered for DCC channels with *dccstat*=ENABLED or *dccstat*=TRANSPARENT or *scn_dccstat*=ENABLED or *scn_dccstat*=TRANSPARENT.

This means valid combinations for *dccstat* and *scn_dccstat* are:

- TRANSPARENT - TRANSPARENT
- ENABLE - DISABLE
- DISABLE - ENABLE.

The command shall not be able to retrieve DCC characteristics parameters from the protecting port of a 1+1 MSP group, if DCC protection switching is enabled.

Example input/output

The following example shows the result of RTRV-FECOM:

```
RTRV-FECOM:NE-UNITE::123456::1-1-#-#-5-all,line;
NE-UNITE 00-12-24 11:00:00
M 123456 COMPLD
"1-1-#-#-5-1,LINE:dccstat=ENABLE,lapdmode=UITS,
osinode=osinode1,dccprottp=0X1,"
;
```

The following example shows the result of RTRV-FECOM for a port which is used by the SCN:

```
RTRV-FECOM:NE-UNITE::123456::1-1-#-#-5-all,line;  
NE-UNITE 00-12-24 11:00:00  
M 123456 COMPLD  
"1-1-#-#-5-1,LINE:dccstat=DISABLE,dccprottp=0X1,scn_  
dccstat=ENABLE"  
;
```

The following example shows the result of RTRV-FECOM for a port which is involved in a transparent DCC cross-connection:

```
RTRV-FECOM:NE-UNITE::123456::1-1-#-#-5-all,line;  
NE-UNITE 00-12-24 11:00:00  
M 123456 COMPLD  
"1-1-#-#-5-1,LINE:dccstat=TRANSPARENT,dccprottp=0X1,scn_  
_dccstat=TRANSPARENT"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-FECOM command.

Related TL1 messages

- [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#)
[“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#)



ENT-FECOM: Enter DCC channel related parameters

The ENT-FECOM command allows to enable or disable a DCC channel for a specific OSI node or the SCN node. It can also be used to modify the the type of LAPD service of an existing DCC channel.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S3

Priority: 1

Abortable: No.

Input format Command Syntax: ENT-FECOM:*tid*::*ctag*::*port*[*dcctype*]:[*spec_block*];

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
3. *port*
This parameter indicates the port AID of a circuit pack which is used together with *dcctype* to identify the DCC channel.
Type: AID.
Range: SPortAID; the keyword all is not allowed.
4. *dcctype*
This parameter specifies whether the LINE/MS or SECTION/RS DCC of the *port* is affected by the command.
Type: Alphanumeric value set
Range:
 - LINE
 - SECTION (default).

Spec block parameters

1. *dcstat*
This parameter indicates whether communication over the DCC channel is enabled or disabled.
Type: Alphanumeric value set.

ENT-FECOM: Enter DCC channel related parameters

Range:

- ENABLE
- DISABLE (default).

Note: One and only one of the parameters *dcn_stat* or *scn_dccstat* must be present and set to ENABLED when any other spec_block parameter is changed.

2. lapdmode

See definition of *lapdmode* in [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#)

3. lapdrl

See definition of *lapdrl* in [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#).

4. osinode

Assignment of a DCC channel to an MCN node in the NE. This parameter must be supplied when dcc_stat = ENABLED and not the default osinode1 shall be used, in all other cases it shall be omitted.

An NE can have up to 8 instances of the OSI stack. Node-1 is default and has a NSAP. Nodes 2-8 have a NET and no SEL (NSAP = NET + SEL, for NET: SEL=00). Nodes 2-8 can be created and configured, see [“ENT-ULSDCC-L3: Create a further OSI node” \(12-67\)](#).

Type: AID.

Range: osinode{1-8}

Default: osinode1.

5. scn_dccstat

This parameter indicates whether the DCC channel is used for communication over the SCN.

Type: Alphanumeric value set.

Range: ENABLE, DISABLE (default).

Note: One and only one of the parameters *dcn_stat* or *scn_dccstat* must be present and set to ENABLED when any other spec_block parameter is changed.

Output format

If the ENT-FECOM is successful, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output Parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#) .

**Detailed behavior
description**

The ENT-FECOM command can assign a DCC channel to a specified node and enable or disable it. Furthermore the type of LAPD service can be set respectively modified for UITS (default) or AITS.

The update is reported by means of ED-FECOM notification.

It seems to be odd that an ENT command leads to an ED notification. The rationale behind that is as follows: ENT-FECOM has edit semantics, but it wasn't going to be changed into an ED command due to backward compatibility to CG. The notification behavior was, however, clean-up. Additional DLT-FECOM, ENT-FECOM notification are defined to notify the deletion/creation of DCC channels upon CP deletion/creation or MSP DCC slaving enabled/disabled.

Note: If *scn_node* is set to ENABLED, the channel is implicitly assigned to the SCN node. The re-assignment of a dedicated DCC channel from an osinode to the scnnode or vice versa shall not be supported within one command execution.

A re-assignment from osinode to scnnode means: Set from *dccstat*=ENABLE, *osinode*=osinode{1, ..., 8} to *dccstat*=DISABLE, *scn_dccstat*=ENABLE.

A re-assignment from scnnode to osinode means: Set from *scn_dccstat*=ENABLE to *dccstat*=ENABLE, *osinode*=osinode{1, ..., 8}, *scn_dccstat*=DISABLE.

The re-assignment can be achieved in two steps:

- disable the channel for the old node
- enable the channel for a new node.

When *dccstat* is set from DISABLED to ENABLED, the system applies the default values for all spec block parameters except *scn_dccstat* which are not specified in the command.

In contrast to the general pre-provisioning concept, it is not possible to change any parameter when not one of *dccstat* or *scn_dccstat* is set to ENABLED.

ENT-FECOM: Enter DCC channel related parameters

Example input/output

The following example shows the result of ENT-FECOM:

```
ENT-FECOM:NE-UNITE::123456::1-1-#-#-5-1,
line:dccstat=enable,lapdmode=AITS,osinode=osinode5;
  LT-UNITE 00-12-24 12:00:00
M 123456 COMPLD
;
```

The following example shows the result of ENT-FECOM command which enables a DCC channel for the SCN:

```
ENT-FECOM:NE-UNITE::123456::1-1-#-#-5-1,line:scn_
  dccstat=ENABLE;
  LT-UNITE 00-12-24 12:00:00
M 123456 COMPLD
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the ENT-FECOM command.

Validation rule for enabled DCC channels

The command is rejected when any other parameter than *dccstat* is changed and *dccstat* is not set to ENABLED with the command.

Error code: SNVS - Status, Not in Valid State

Validation rule for single occurrence of *dccstat* or *scn_dccstat* parameter

The command will be rejected when more than one parameter of *dccstat* or *scn_dccstat* is present in the command.

Error Code: IDNC - Input, Data Not Consistent, only *dccstat* or *scn_dccstat* allowed

Validation rule for implicit status changes of *dccstat*, *scn_dccstat*

The command shall be rejected when there is an implicit status change of a channel assignment: When *dccstat* is ENABLE it is not allowed to set *scn_dccstat*=ENABLE, or when *scn_dccstat* is ENABLE it is not allowed to set *dccstat*=ENABLE.

Error Code: SNVS - Status, Not in Valid State, implicit channel re-assignment

Validation rule for parameter osinode

The command shall be rejected when *dccstat* is set to ENABLED and *osinode* is not in the created state. This means a value for parameter *osinode* other than osinode1 is used in the command, which was not used for creation of a node via ENT-ULSDCC-L3 before.

Error code: ENEQ - Equipage, Not Equipped osinode

Validation rule for max number of DCC channels for MS/RS-DCC reached

Nodes 2-8 can support only up to 16 DCC interfaces. So it should be checked that nodes 2-8 each have not more than 16 DCCs enabled.

Error code: SSRE - System Resources Exceeded, allowed limit of DCC channels exceeded

Validation rule if more than 64 DCC channels are assigned to node-1

Node-1 can support up to 64 DCC interfaces. So it should be checked that the max number of 64 DCC interfaces for node-1 (osinode1) is not exceeded.

Error code: SSRE - System Resources Exceeded, allowed limit of DCC channels exceeded

Validation rule for DCC Protection

A port cannot be specified when it is protecting part of a 1+1 MSP group and DCC protection switching is enabled.

Error Code: SNVS - Not in Valid State, part of 1+1 MSP protection

When DCC protection switching is enabled, the RS/MS DCC channel objects of the protection port are deleted and not available.

Disabling of RS-DCC/MS-DCC shall be rejected when RS-DCC/MS-DCC protection dcc is enabled.

Error Code: SNVS - Not in Valid State, DCC protection available

Validation rule for 2 fiber BLSR/MS-SPRING

DCC-disabling on a port of a 2-fiber BLSR/MS-SPRING protection group will be denied if no other DCC channel is available on that port.

Error code: SNVS - Not in Valid State, DCC needed for
BLSR/MS-SPRING

Validation rule for 4 fiber BLSR/MS-SPRING

DCC-disabling on the port of the worker line of a 4-fiber
BLSR/MS-SPRING protection group will be denied if no other DCC
channel is available on that port.

Error code: SNVS - Not in Valid State, DCC needed for
BLSR/MS-SPRING

Validation rule for service condition

Enable DCC termination is not possible if port is in out-of-service
state.

Error code: SDNC - Status, Data Not Consistent, port is
out-of-service

Validation rule for transparent DCC cross-connection

The DCC channel shall not be ENABLED or DISABLED if it is used
in a transparent DCC cross-connection. *dccstat* and *scn_dccstat* cannot
be changed until the existing transparent DCC cross-connection is
deleted.

Error Code: SNVS - Status, Not in Valid State, DCC channel
used in transparent DCC cross connection

**Validation rule for independent use of DCC channel for MCN or
SCN**

The command shall be rejected when *dccstat*=ENABLED and
scn_dccstat=ENABLED.

Error Code: SNVS - Status, Not in Valid State, DCC channel
can not be assigned to MCN and SCN at the same time

**Validation rule: Maximum number of channels assigned to MCN
and SCN**

The system can support up to 64 DCC interfaces. It shall be checked
that the max number of 64 DCC interfaces for MCN or SCN (i.e.
dccstat=ENABLED or *scn_dccstat*=ENABLED) is not exceeded.

Error code: SSRE - Status, System Resources Exceeded,
overall limit of DCC channels exceeded

SCN specific validation rule - for provisioned SCN IP address

The command shall be rejected when *scn_dccstat*=ENABLED and no IP address has been configured for the SCN via ENT-ULS (*ip_ad_astn*).

Error code: SNVS - Status, Not in Valid State, no SCN IP address provisioned

SCN specific validation rule - for combination of osinode parameter with *scn_dccstat*

The command shall be rejected when *scn_dccstat*=ENABLED and a value for parameter *osinode* is supplied.

Error Code: SDNC - Status, Data Not Consistent, invalid combination of *osinode* parameter with *dccstat*, *scn_dccstat*

SCN specific validation rule - for consistency of input parameters with *portClass* INNI

The command shall be rejected, if *scn_dccstat*=ENABLED and the port is not of *portClass* INNI.

Error Code: IDNV - Input, Data Not Valid, *portClass* must be INNI

SCN specific validation rule - for invalid input parameters

The command shall be rejected, if *scn_dccstat*=ENABLED and a value for *lapdmode* or a value for *lapdrl* is given.

Error Code: IDNV - Input, Data Not Valid, provisioning of *lapdmode* and *lapdrl* not possible

SCN specific validation rule - to prevent that both DCCs of a port are assigned to the SCN

The command shall be rejected, if it is tried to set *scn_dccstat*=ENABLED for a specific port and *dcctype* and for the same port *scn_dccstat* is already ENABLED for the other *dcctype*.

Error Code: IDNV - Input, Data Not Valid, not possible to assign both channels to SCN

SCN specific validation rule - to prevent that both DCCs of a port are assigned to the MCN, when *portClass* = INNI

The command shall be rejected, if *portClass*=INNI for port and it is tried to set *dccstat*=ENABLED for a specific port and *dcctype* and for the same port *dccstat* is already ENABLED for the other *dcctype*.

ENT-FECOM: Enter DCC channel related parameters

Error Code: IDNV - Input, Data Not Valid, not possible for NNI port to assign both channels to MCN

SCN specific validation rule: Maximum number of channels assigned to SCN

The scnnode can support up to 64 DCC interfaces. It shall be checked that the max number of 64 DCC interfaces for scnnode (i.e. *scn_dccstat*=ENABLED) is not exceeded.

Error code: SSRE - System Resources Exceeded, allowed limit of SCN DCC channels exceeded

Related TL1 messages

- [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#)
- [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#)
- [“ENT-CRS-FECOM: Enter transparent DCC cross-connection” \(12-36\)](#)
- [“DLT-CRS-FECOM: Delete transparent DCC cross-connection” \(12-40\)](#)



ED-FECOM notification

Output format The ED-FECOM notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

The ED-FECOM notification has the following specific syntax:

ED-FECOM::*port,dcctype:spec_block*

Output parameters

Command parameters

1. port
See definition of *port* in [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#).
2. dcctype
See definition of *dcctype* in [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#).

Spec block parameters

1. dccprottp
See definition of *dccprottp* in [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#).
2. dccstat
See definition of *dccstat* in [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#).
Note: The default value of DISABLED is used when a DCC channel is created, this will be reported via the ENT-FECOM notification, or when a transparent DCC cross-connection is deleted, this will be reported via the ED-FECOM notification. The value TRANSPARENT is reported when a transparent DCC cross-connection is created. In this case all other spec_block parameters does not have any effect on operation of the system if reported. The other spec_block parameters does have only operational effect if the value is ENABLED.
3. lapdmode
See definition of *lapdmode* in [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#).
4. lapdrl
See definition of *lapdrl* in [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#).

5. osinode
See definition of *osinode* in [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#).
6. scn_dccstat
See definition of *scn_dccstat* in [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#).

Example output

```
NE-UNITE 00-11-03 01:00:00
A 000 REPT DBCHG
"TIME=01-00-00,DATE=00-12-13:ED-FECOM::1-1-#-#-5-3,
line:dccprottp=0X1"
;
```



ENT-FECOM notification

Output format The ENT-FECOM notification shall use the general format of a REPT DBCHG (Report Database Change) notification. Note: In contrast to RTRV-FECOM this notification will also be sent when dccstat=DISABLE, which is the default value after creation of a DCC channel.

The ENT-FECOM notification has the following specific syntax:

ENT-FECOM::*port,dcctype:spec_block*

Output parameters

Command parameters

1. port
See definition of *port* in [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#).
2. dcctype
See definition of *dcctype* in [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#).

Spec block parameters

1. dccprottp
See definition of *dccprottp* in [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#).
2. dccstat
See definition of *dccstat* in [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#).
3. lapdmode
See definition of *lapdmode* in [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#).
4. lapdrl
See definition of *lapdrl* in [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#).
5. osinode
See definition of *osinode* in [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#).
6. scn_dccstat
See definition of *scn_dccstat* in [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#).

Example output

```
NE-UNITE 00-11-03 01:00:00
A 000 REPT DBCHG
"TIME=01-00-00,DATE=00-12-13:ENT-FECOM::1-1-#-#-5-2,
line:dccprottp=0X1,dccstat=DISABLE,lapdmode=UITS,
osinode=osinode1"
;
```



DLT-FECOM notification

Output format The DLT-FECOM notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

The DLT-FECOM notification has the following specific syntax:

DLT-FECOM::*port*,*dcctype*:*spec_block*

Output parameters

Command parameters

1. *port*
See definition of *port* in [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#).
2. *dcctype*
See definition of *dcctype* in [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#).

Spec block parameters

1. *osinode*
See definition of *osinode* in [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#).

Example output

```
NE-UNITE 01-01-08 01:10:11
A 000 REPT DBCHG
"TIME=01-01-09,DATE=00-00-13:DLT-FECOM::1-1-#-#-5-
1,LINE:osinode1"
;
```



Transparent DCC cross-connection

Overview

Purpose Transparent DCC cross-connections allows to cross-connect DCC channels (either DCC-R or DCC-M) of an OPn/EPn on the XC320 or XC640 without adding/dropping them to/from the OHI bus to/from the CTL/DCF. As such there is no processing on the DCF for those channels a transparent DCC cross-connection allows to transparently pass-through certain DCC channel without any processing by the system. The transparent DCC cross-connections are complete independent from the transmission cross C-connection. The transparent DCC cross-connections are always bidirectional. The system supports up to 25 bidirectional transparent DCC cross-connections.

Contents

<u>RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection</u>	<u>12-32</u>
<u>ENT-CRS-FECOM: Enter transparent DCC cross-connection</u>	<u>12-36</u>
<u>ENT-CRS-FECOM notification</u>	<u>12-39</u>
<u>DLT-CRS-FECOM: Delete transparent DCC cross-connection</u>	<u>12-40</u>
<u>DLT-CRS-FECOM notification</u>	<u>12-43</u>



RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection

The RTRV-CRS-FECOM can be initiated by the users to retrieve the established transparent DCC cross-connections.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M1
Priority: 1
Abortable: Yes.

Input format Command Syntax: RTRV-CRS-FECOM:*tid*:[*port_aid*][,*dcctype*]:*ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
3. *port_aid* – DCC port
This parameter indicates the port AID of a circuit pack which is used together with *dcctype* to identify the DCC channel which is involved in a transparent DCC cross-connection. If this field is omitted, the report will include the DCC parameters of all ports belonging to the NE and being provisioned with transparent DCC.
Type: AID
Range: SPortAID, the keyword “all” shall be allowed on slot and port level.
4. *dcctype*
This parameter specifies whether the LINE/MS or SECTION/RS transparent DCC cross-connection parameters of the OPn port shall be reported by the command. If this parameter is omitted, LINE and SECTION DCC parameters will be considered for the output.
Type: alphanumeric value set
Range: LINE, SECTION.

Output format In response to a valid RTRV-CRS-FECOM command, the following output is returned:

```
sid date time
M ctag COMPLD
  "port_aid1,port_aid2,dcctype"
  . . . . .
  "port_aid1,port_aid2,dcctype"
;
```

The output will not be sorted.

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#) .

Important! The NE responses partially with duplicate lines, if the user retrieves transparent DCC connections by specifying an AID range. The NE lists every port with transparent DCC connections in this AID range. Thus, if both connected DCC ports are in the range, the connection is listed two times. The duplicate lines should be ignored.

Output parameters

Command parameters

1. port_aid1 – DCC port 1
This parameter indicates one (first) optical port AID of an OPn circuit pack which is used together with dcctype to identify the DCC channel which is involved in a transparent DCC cross-connection.
Type: AID
Range: SPortAID. The keyword "all" shall be allowed not.
2. port_aid2 – DCC port 2
This parameter indicates one (second) optical port AID of an OPn circuit pack which is used together with dcctype to identify the DCC channel which is involved in a transparent DCC cross-connection.
Type: AID.
Range: SPortAID. The keyword "all" shall be allowed not.
3. dcctype
This parameter specifies whether the LINE/MS or SECTION/RS transparent DCC cross-connection parameters of the OPn port is reported by the command.
Type: alphanumeric value set.
Range: LINE, SECTION.

Detailed behavior description

The System supports only bidirectional transparent DCC cross-connections. Each reported transparent DCC cross-connection is bidirectional.

The command reports all transparent DCC cross-connections. That means only DCC channels are shown with *dccstat* = TRANSPARENT or *scn_dccstat* = TRANSPARENT.

Each transparent DCC cross-connection will reported only once also if it will be addressed in case of AID range twice (range will go over both involved ports).

Update affected entities

The RTRV-CRS-FECOM command does not generate a REPT DBCHG message.

Example input/output The following example shows a RTRV-CRS-FECOM command where two transparent DCC cross-connections are reported one for *dcctype* = SECTION and one for *dcctype* = LINE:

```
RTRV-CRS-FECOM:LUCENT-UNITE-NE:1-1-#-#-2-1:12345;  
NE-UNITE 00-12-24 11:00:00  
M 123456 COMPLD  
"1-1-#-#-1-1,1-1-#-#-2-1,LINE"  
"1-1-#-#-1-1,1-1-#-#-2-1,SECTION"  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-CRS-FECOM command.

Related TL1 messages

- [“ENT-CRS-FECOM: Enter transparent DCC cross-connection” \(12-36\)](#)
- [“DLT-CRS-FECOM: Delete transparent DCC cross-connection” \(12-40\)](#)
- [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#)
- [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#)



ENT-CRS-FECOM: Enter transparent DCC cross-connection

The ENT-CRS-FECOM can be initiated by the users to establish a transparent DCC cross-connection.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
Priority: 3
Abortable: No.

Input format Command Syntax: ENT-CRS-FECOM:*tid:port_aid1,port_aid2,dcctype:ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
3. port_aid1 – DCC port 1
Refer to the [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#) command for input parameter syntax and description of this parameter.
4. port_aid2 – DCC port 2
Refer to the [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#) command for input parameter syntax and description of this parameter.
5. dcctype
Refer to the [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#) command for input parameter syntax and description of this parameter.

Output format In response to a valid ENT-CRS-FECOM command, the following output shall be returned:

sid date time

```
M  ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#) .

Detailed behavior description

The ENT-CRS-FECOM command establishes a transparent DCC cross-connection. The transparent DCC cross-connection will be established between *port_aid1* and *port_aid2* for the specified *dcctype*. The System supports only bidirectional transparent DCC cross-connections.

Update affected entities

The established bidirectional transparent DCC cross-connection will be reported via ENT-CRS-FECOM notification reporting the established transparent DCC cross-connection.

The update of the *dccstat* parameter of the two involved DCC channels will be reported via ED-FECOM notification for each port reporting the changed *dccstat* = TRANSPARENT and *scn_dccstat* = TRANSPARENT.

Example input/output

The following example shows ENT-CRS-FECOM commands where two transparent DCC cross-connections are established one for *dcctype* = SECTION and one for *dcctype* = LINE:

```
ENT-CRS-FECOM:NE-UNITE:1-1-#-#-1-1,1-1-#-#-2-1,LINE:12345;
NE-UNITE 00-12-24 12:00:00
M 123456 COMPLD
;
ENT-CRS-FECOM:NE-UNITE:1-1-#-#-1-1,1-1-#-#-2-1,SECTION:12345;
NE-UNITE 00-12-24 12:00:00
M 123456 COMPLD
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the ENT-CRS-FECOM command.

Validation rule: Different Port AIDs

The AIDs of *port_aid1* and *port_aid2* must specify different ports.

Error Code: IDNC - Input, Data Not Consistent, port_aid1
and port_aid2 not different

Validation Rule: Maximum of DCC CCs exceeded

The maximum number of 25 bidirectional transparent DCC
cross-connections is exceeded.

Error Code: SSRE - Status, System Resources Exceeded, limit
of transparent DCC Cross Connectins exceeded

Validation Rule: DCC channels enabled

One of the DCC channels is already enabled for DCC overhead
processing.

Error Code: SNVS - Status, Not in Valid State, DCC channel
already enabled

Validation Rule: DCC protection

One of the DCC channels is occupied the MSP/APS protection of
DCC channels.

Error Code: SNVS - Status, Not in Valid State, DCC channel
occupied by MSP/APS DCC protection

Related TL1 messages

- [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#)
- [“DLT-CRS-FECOM: Delete transparent DCC cross-connection” \(12-40\)](#)
- [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#)
- [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#)



ENT-CRS-FECOM notification

General The ENT-CRS-FECOM notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

Command syntax: ENT-CRS-FECOM:*port_aid1,port_aid2,dcctype*

Output parameters

Command parameters

1. port_aid1 – DCC port 1
Refer to the [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#) command for notification parameter syntax and description of this parameter.
2. port_aid2 – DCC port 2
Refer to the [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#) command for notification parameter syntax and description of this parameter.
3. dcctype
Refer to the [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#) command for notification parameter syntax and description of this parameter.

Example output The following example shows ENT-CRS-FECOM notifications reporting established transparent DCC cross-connections:

```

UNITE-NE 00-12-24 12:00:00
A 000 REPT DBCHG
  "TIME=12:00:00,DATE=00-12-24:ENT-CRS-FECOM:1-1-#-#-1-
  1,1-1-#-2-1,LINE"
;
UNITE-NE 00-12-24 12:00:00
A 000 REPT DBCHG
  "TIME=12:00:00,DATE=00-12-24:ENT-CRS-FECOM:1-1-#-#-1-
  1,1-1-#-2-1,SECTION"
;

```

□

DLT-CRS-FECOM: Delete transparent DCC cross-connection

The DLT-CRS-FECOM can be initiated by the users to delete a transparent DCC cross-connection.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): M3
Priority: 3
Abortable: No.

Input format Command Syntax: DLT-CRS-FECOM:*tid:port_aid1,port_aid2,dcctype:ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
3. port_aid1 – DCC port 1
Refer to the [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#) command for input parameter syntax and description of this parameter.
4. port_aid2 – DCC port 2
Refer to the [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#) command for input parameter syntax and description of this parameter.
5. dcctype
Refer to the [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#) command for input parameter syntax and description of this parameter.

Output format In response to a valid DLT-CRS-FECOM command, the following output shall be returned:

```
sid date time  
M ctag COMPLD
```

;

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

**Detailed behavior
description**

The DLT-CRS-FECOM command deletes a transparent DCC cross-connection specified by *port_aid1*, *port_aid2* and *dcctype*.

The system supports only bidirectional transparent DCC cross-connections.

Update affected entities

The deletion of the transparent DCC cross-connection will be reported via DLT-CRS-FECOM notification reporting the deleted transparent DCC cross-connection.

The update of the *dcstat* parameter of the two involved ports will be reported via ED-FECOM notification for each port reporting the changed *dcstat* = DISABLED and *scn_dcstat* = DISABLED.

Example input/output

The following example shows DLT-CRS-FECOM commands there two transparent DCC cross-connections are deleted one for *dcctype* = SECTION and one for *dcctype* = LINE:

```
DLT-CRS-FECOM:NE-UNITE:1-1-#-#-1-1,1-1-#-#-2-1,LINE:12345;  
    NE-UNITE 00-12-24 12:00:00  
M 123456 COMPLD  
;  
DLT-CRS-FECOM:NE-UNITE:1-1-#-#-1-1,1-1-#-#-2-  
1,SECTION:12345;  
    NE-UNITE 00-12-24 12:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the RTRV-HDR command ERROR RESPONSES section. The error responses listed there apply to the DLT-CRS-FECOM command.

Validation Rule: Entity (transparent DCC cross-connection) must exist

The specified transparent DCC cross-connection must exist on both specified ports.

Error Code: IENE - Input Entity Not Exists, Specified
Transparent DCC Cross Connection does not exist

Related TL1 messages

- [“ENT-CRS-FECOM: Enter transparent DCC cross-connection” \(12-36\)](#)
- [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#)
- [“RTRV-FECOM: Retrieve DCC related parameters” \(12-13\)](#)
- [“ENT-FECOM: Enter DCC channel related parameters” \(12-18\)](#)



DLT-CRS-FECOM notification

Output format The DLT-CRS-FECOM notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

Command syntax: DLT-CRS-FECOM:*port_aid1,port_aid2,dcctype*

Output parameters

Command parameters

1. port_aid1 – DCC port 1
Refer to the [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#) command for notification parameter syntax and description of this parameter.
2. port_aid2 – DCC port 2
Refer to the [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#) command for notification parameter syntax and description of this parameter.
3. dcctype
Refer to the [“RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection” \(12-32\)](#) command for notification parameter syntax and description of this parameter.

Example output The following example shows DLT-CRS-FECOM notifications reporting the deletion of transparent DCC cross-connections:

```

UNITE-NE 00-12-24 12:00:00
A 000 REPT DBCHG
"TIME=12:00:00,DATE=00-12-24:DLT-CRS-FECOM::
1-1-#-#-1-1,1-1-#-2-1,LINE"
;
UNITE-NE 00-12-24 12:00:00
A 000 REPT DBCHG
"TIME=12:00:00,DATE=00-12-24:DLT-CRS-FECOM::
1-1-#-#-1-1,1-1-#-2-1,SECTION"
;
```



LAN

Overview

Purpose This section describes TL1 commands applicable to the LAN for *WaveStar*[®] CIT respectively *Navis*[®] Optical EMS access.

Contents

RTRV-FECOM-LAN: Retrieve LAN channel related parameters	12-45
ENT-FECOM-LAN: Enter LAN related parameters	12-50
ENT-FECOM-LAN notification	12-57
Autonomous notification	12-59



RTRV-FECOM-LAN: Retrieve LAN channel related parameters

The RTRV-FECOM-LAN command can be initiated by users to retrieve the provisioned state of the LAN ports (LAN1, LAN2 and LAN3).

Properties Priority: S1
Abortable: Yes

Input format Command Syntax: RTRV-FECOM-LAN:*tid*:[*aid*]:*ctag*;

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition of [“RTRV-HDR: Retrieve header” \(5-8\)](#).
2. *aid* – Access Identifier
This parameter indicates the LAN port AID.
Type: AID.
Range: LanPort AID.
Default: If this field is omitted, the report will display the status of all lan ports belonging to the *tid*.
3. *ctag* – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.

Output format If the RTRV-FECOM-LAN is successful, the following normal completion response is returned:

```

sid date time
M ctag COMPLD
  "aid:spec_block"
  ...
  "aid:spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output Parameter section for the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command.

RTRV-FECOM-LAN: Retrieve LAN channel
related parameters

Output parameters

Command parameters

1. aid – Target Identifier
This parameter indicates the LAN port AID. The value *lanall* is not allowed.
Type: AID.
Range: LanPort AID.

Spec block parameters

1. ip_ad - IP Address
This parameter indicates the assigned IP address for the LAN interface. The IP-address includes both, a router address and a HOST address. The HOST address that will be used for FTP depends on the LAN interface where the related TCP connection request originates.
The CIT is expected to use the HOST address of LAN1. The *Navis*[®] Optical EMS is expected to use the HOST address of LAN2 (or LAN3 in later releases).
Type: 32-bit IPv4 address: Four dot separated numeric strings OR empty string The empty string value is used as indication for an invalid/undefined IP address.
Range: For first numeric string: 0 .. 223; for second to fourth numeric string: 0 .. 255
Default: For LAN1, LAN2 and LAN3: empty string.
2. ip_lanstat - IP-LAN Status
This parameter indicates whether IP communication over the external LAN channel is enabled or disabled. Note: Enabling has no effect if *lanstat* is disabled for that interface.
Type: Alphanumeric value set
Range: ENABLE or DISABLE for LAN1, LAN2, LAN3
Default: DISABLE for LAN1, LAN2, LAN3.
3. ip_snm - IP Subnet Mask
This parameter indicates the assigned IP subnet mask (32-bit IPv4) for the LAN interface. The full IP-address is needed as host-address. Each LAN needs its own IP-address and IP-mask, indicating that all IP-addresses that match the prefix (Unmasked part) are grouped as the subnet-ID for this LAN-subnet.

RTRV-FECOM-LAN: Retrieve LAN channel
related parameters

Type: 32-bit IPv4 address: Four dot separated numeric strings or empty string. The empty string value is used as indication for an invalid/undefined IP subnet mask.

Range: For each numeric string: 0 .. 255.

Default: For LAN1, LAN2 and LAN3: empty string.

4. isis_stat – (I) IS-IS Status

This parameter indicates whether (integrated) IS-IS is enabled or disabled on the LAN port specified by the input *aid*.

Note: Enabling has no effect if lanstat is disabled for that interface.

Type: Alphanumeric value set.

Range: ENABLE (default), DISABLE.

5. lanrpri – LAN Designated Router Priority

This parameter sets the relative priority for the node in the election for designated router on this LAN. There is a separate election for each separate LAN to which the node is connected. A higher value indicates a higher probability to be selected as designated router. A designated router is selected per area (between the nodes on that LAN with the same area address) and for the Level-2 nodes on the LAN.

Note: When osinode=scnnode modification of this parameter has no effect.

Type: numeric string.

Range: 1 – 127.

Default: 64.

6. lanstat – LAN Status

This parameter indicates whether physical communication over the external channel is enabled or disabled.

Note: Disabling of an interface also affects usage of protocols over this interface, see *lan_stat* and *osi_stat*.

Type: Alphanumeric value set.

Range: ENABLE for lan1; ENABLE, DISABLE for lan2, lan3:

Default: ENABLE for lan1, lan2, lan3.

7. lantlss – LAN TARP Storm Suppression

This parameter indicates the enhanced TARP propagation rules that suppress TARP LAN storms.

Note: When osinode=scnnode modification of this parameter has no effect.

Type: Alphanumeric value set.

RTRV-FECOM-LAN: Retrieve LAN channel
related parameters

Range:

- ENABLE (default)
- DISABLE.

8. osinode

Assignment of LAN port to an OSI-node or the SCN node in the NE. A UNITE NE can have up to 8 instances of the OSI stack and has one SCN node. Node-1 is the default and has a NSAP. Nodes 2-8 have a NET and no SEL (NSAP = NET + SEL, for NET: SEL=00). Node 1 is always present, the SCN node is created when the ASTN IP address is configured. Node 2-8 can be created and configured, see command ENT-ULSDCC-L3.

Type: AID.

Range: For LAN1: osinode1 (fixed value).

For LAN2 and LAN3: osinode{1-8} | scnnode.

Note: If this parameter is set to scnnode lanstat and ip_lanstat must be ENABLED.

Default: osinode1.

9. osi_lanstat - OSI LAN Status

This parameter indicates whether OSI communication over the external channel is enabled or disabled.

Note: When osinode=scnnode modification of this parameter has no effect.

Type: Alphanumeric value set.

Range: ENABLE for LAN1, LAN2, LAN3

Default: ENABLE for LAN1, LAN2, LAN3.

**Detailed behavior
description**

The command retrieves system parameter as described in the Output parameter section.

Example input/output

The following example shows the result of RTRV-FECOM-LAN:

```
RTRV-FECOM-LAN:NE-UNITE:1-1-lan1:123456;
NE-UNITE 00-12-24 11:01:00
M 123456 COMPLD
"1-1-lan1:ip_lanstat=ENABLE,ip_ad=135.248.206.72,
ip_snm=255.255.0.0,lanstat=ENABLE,lanrpri=64,
lantlss=ENABLE,osinode=osinode1,osi_lanstat=ENABLE"
;
```

RTRV-FECOM-LAN: Retrieve LAN channel
related parameters

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-FECOM-LAN command.

Related TL1 messages

- [“ENT-FECOM-LAN: Enter LAN related parameters” \(12-50\)](#)



ENT-FECOM-LAN: Enter LAN related parameters

The ENT-FECOM-LAN command allows manually enable or disable IP or OSI on this LAN and set related parameters. It can also be used to modify parameters when IP or OSI is enabled.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S4
 Priority: 1
 Abortable: No.

Input format Command Syntax: ENT-FECOM_LAN:*tid:aid:ctag:::[spec_block]*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. aid – Access Identifier
 This parameter indicates the LAN port AID.
 Type: AID.
 Range: LanPort AID with one exception: the keyword `lanall` is not allowed.
3. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.

Spec block parameters

If a LAN interface is being changed, all parameters not set explicitly in the command line will remain the actual values, except the parameter `osinode`, which shall be changed to the default value if the parameter is omitted.

1. ip_ad – IP Address
 This parameter indicates the assigned IP address for the LAN interface.
 The IP-address includes both, a router address and a HOST address. The HOST address that will be used for FTP depends on the LAN interface where the related TCP connection request originates.

ENT-FECOM-LAN: Enter LAN related parameters

Note: Setting of *ip_ad* comes only into effect when *ip_lanstat* is ENABLE and must be consistent with *ip_snm* (see also validation rules).

Type: 32-bit IPv4 address: Four dot separated numeric strings.

Range: For first numeric string: 0 .. 223 For second to fourth numeric string: 0 .. 255.

2. *ip_lanstat* – IP-LAN Status

See definition of *ip_lanstat* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).

3. *ip_snm* – IP Mask

See definition of *ip_snm* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).

Note: Setting of *ip_snm* comes only into effect when *ip_lanstat* is ENABLE and must be consistent with *ip_ad* (see also validation rules).

4. *isis_stat* – (I) IS-IS Status

See definition of *isis_stat* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).

5. *lanrpri* – LAN Designated Router Priority

See definition of *lanrpri* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).

6. *lanstat* – LAN Status

See definition of *lanstat* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).

7. *lantlss* – LAN TARP Storm Suppression

See definition of *lantlss* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).

8. *osinode*

See definition of *osinode* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).

The parameter *osinode* is mandatory. This means, that the parameter will be changed to the default value if it is not specified.

9. *osi_lanstat* – OSI LAN Status

See definition of *osi_lanstat* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).

ENT-FECOM-LAN: Enter LAN related parameters

Output format	If the ENT-FECOM-LAN is successful, the following normal completion response is returned: <pre> sid date time M ctag COMPLD ; </pre> The output parameters <i>sid</i>, <i>date</i>, <i>time</i>, and <i>ctag</i> included in the normal completion response are specified in the Output parameter section of “RTRV-HDR: Retrieve header” (5-8) .
Detailed behavior description	The command set the condition of a LAN interface respectively or modify concerning parameters. Result should be an update of the parameters for the specified LAN interface as set in the spec_block of the command line. The update is reported by means of ENT-FECOM-LAN notification. Modification of the parameters <i>ip_ad</i>, <i>ip_snm</i>, <i>lantlss</i> leads to a reset of the DCF controller. Setting lanstat to disabled shall implicitly set the following parameters to disabled: • <i>osi_lanstat</i> • <i>ip_lanstat</i> • <i>isis_stat</i>.
Example input/output	The following example shows the result of ENT-FECOM-LAN: <pre> ENT-FECOM-LAN:NE-UNITE:1-1-lan2:123456::: ip_lanstat=enable,ip_ad=135.248.206.64, ip_snm=255.255.0.0,lanstat=enable,osinode=osinode8; NE-UNITE 00-12-23 11:59:00 M 123456 COMPLD ; </pre>
Error responses	Refer to the “RTRV-HDR: Retrieve header” (5-8) command Error responses section. The error responses listed there apply to the ENT-FECOM-LAN command.

ENT-FECOM-LAN: Enter LAN related parameters

Validation rule for parameter osinode

The command shall be rejected when a OSI node is not in a created state. This means a value for parameter osinode is used in the command, which is different from osinode1 or scnnode and was not used for creation of a node via ENT-ULSDCC-L3 before.

Error code: ENEQ - Equipage, Not Equiped osinode

Validation rule: Can't disable LAN1

If it is tried to set *lanstat*, or *osi_lanstat* to DISABLE for LAN1, the command will be rejected.

Error code: SNVS - Status, Not in Valid State, LAN1 can not be disabled

Validation rule: Can't enable *lanstat* when *ip_lanstat* and *osi_lanstat* are DISABLED

If it is tried to set *lanstat*=ENABLE for a specific LAN, while both *osi_lanstat* and *ip_lanstat* are set to DISABLE for the same LAN, the command will be rejected.

Error code: IDNC - Input, Data, Not Consistent

Validation rule: Can't enable *ip_lanstat* and/or *osi_lanstat* when *lanstat* is disabled

If it is tried to set *osi_lanstat*=ENABLE and/or *ip_lanstat*=ENABLE without setting *lanstat*=ENABLE and *lanstat* is currently disabled, then the command will be rejected.

Error Code: IDNC - Input, Data, Not Consistent

Validation rule: Check IP configuration

If it is tried to set *ip_lanstat* to ENABLE for a LAN (LAN1, LAN2, LAN3) without a valid IP address *ip_ad* and subnetwork mask *ip_snm*, the command shall be denied. Valid means:

- any 32 bit IPv4 address in the range of 0.0.0.0 to 255.255.255.255.

Error code: SNVS - Status, Not in Valid State, invalid IP configuration

ENT-FECOM-LAN: Enter LAN related parameters

The validation rule does not cover the configuration rules for IP networks. These rules may be different for each network. In many networks the following rules are applicable:

- `ip_ad` must not be a multicast group address or reserved special case address, i.e. in the range of 0.0.0.0 to 223.255.255.255.
- `ip_snm` shall be in a format of one or more '1' bits, followed by zero or more '0' bits (i.e. all '1' are near the most significant bit, all '0' are near the least significant bit).

Additionally the following constraints between `ip_ad` and `ip_snm` must be true:

- $(ip\_ad \text{ AND } ip\_snm)$ shall not be equal to 0. This means that the Subnet ID shall not be 0.
- $((ip\_ad \text{ AND } ip\_snm) \text{ OR NOT } ip\_snm)$ shall not be equal to 255.255.255.255. This means that the Subnet ID shall not consist of all 1s.
- $(ip\_ad \text{ AND NOT } ip\_snm)$ shall not be equal to 0. This means that the Host ID shall not be 0.
- $((ip\_ad \text{ AND NOT } ip\_snm) \text{ OR IP\_mask})$ shall not be equal to 255.255.255.255. This means that the Host ID shall not consist of all 1s.
- $(ip\_ad \text{ AND } 255.0.0.0)$ shall not be equal to 127.0.0.0. This means that the IP address shall not be the (reserved) loopback address.

The AND, OR, NOT operations above are meant as bitwise logical operations on all 32 bits of *ip_ad*, *ip_snm*.

Validation rule: only *osinode1*, *scnnode* supports IP

If it is tried to set *ip_lanstat* to ENABLE while the LAN port is assigned to OSI node 2...8, the command shall be rejected.

Error code: SNVS - Status, Not in Valid State, Assigned Node not allowed for IP

Validation rule: Assignmet of OsiNode without IP support

If it is tried to (re-)assign a LAN port to OsiNode2 til OsiNode8, then *ip_lanstat* must be set to disabled.

Error Code: SNVS - Status, Not in Valid State, Assigned Node not allowed for IP

ENT-FECOM-LAN: Enter LAN related parameters

Validation rule: only osinode1 for LAN 1

If it is tried to assign another osinode as osinode1 for LAN1, the command shall be rejected.

Error code: IDNV - Input Data not Valid, osinode cannot be changed for LAN1

Validation rule: check of the maintenance condition

The system must be in maintenance condition (MCOND=YES) for change of:

- ip_ad
- ip_snm.

The system must be in normal operation state (MCOND=NO) for change of:

- isis_stat
- osi_lanstat
- lanstat
- lantlss
- lanrpri.

Note: ip_ *lanstat* and osinode is independent of the maintenance condition.

Error Code: SNVS - Status, Not in Valid State

Validation rule: IP disabling while T-TD or FTTD is enabled

If it is tried to set *ip_lanstat* to DISABLE on all LAN ports while either *tl1tcpipgw* or *ftamftpgw* is set to ENABLE, the command shall be rejected.

Error Code: SNVS - Status, Not in Valid State, cannot disable IP on all LAN ports while T-TD or FTTD is enabled

Validation rule: Can't assign LAN to *scnnode* when no ASTN IP address is provisioned

Setting *osinode*=*scnnode* shall only be allowed when a valid ASTN IP address is provisioned (see ip_ad_astn in ENT/RTRV-ULS) and the SwiSS application is enabled (xcsetup=NN in ED/RTRV-EQPT).

Error Code: SNVS - Status, Not in Valid State, no SCN IP address provisioned

ENT-FECOM-LAN: Enter LAN related parameters

Validation rule: Can't assign LAN to SCN Node when T-TD or FTTD is enabled and no other LAN port with IP configuration is available

Setting *osinode*=scnnode for LAN2 or LAN3 while T-TD or FTTD is enabled shall not be allowed if there is no other LAN port with valid IP configuration which is assigned to *osinode1*.

Error Code: SNVS - Status, Not in Valid State, no other LAN port with IP enabled for T-TD or FTTD available

Validation rule: Can't assign same IP address to several LANs

Setting the IP address of a LAN shall be rejected if this IP address is already assigned to another LAN of the NE.

Error Code: IDNC - Input, Data, Not Consistent

Related TL1 messages

- [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#)



ENT-FECOM-LAN notification

Output format The ENT-FECOM-LAN notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: The ENT-FECOM-LAN notification has the following specific syntax:

ENT-FECOM-LAN:*aid*::*spec_block*

Output parameters

Command parameters

1. *aid* – Access Identifier
See definition of *aid* in [“ENT-FECOM-LAN: Enter LAN related parameters” \(12-50\)](#).

Spec block parameters

1. *ip_ad* – IP Address
See definition of *ip_ad* in [“ENT-FECOM-LAN: Enter LAN related parameters” \(12-50\)](#).
2. *ip_lanstat* – IP-LAN Status
See definition of *ip_lanstat* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).
3. *ip_snm* – IP Mask
See definition of *ip_snm* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).
4. *isis_stat* – (I) IS-IS Status
See definition of *isis_stat* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).
5. *lanrpri* – LAN Router Priority
See definition of *lanrpri* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).
6. *lanstat* – LAN Status
See definition of *lanstat* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).

7. osinode
See definition of *osinode* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).
8. osi_lanstat – OSI LAN Status
See definition of *osi_lanstat* in [“RTRV-FECOM-LAN: Retrieve LAN channel related parameters” \(12-45\)](#).

Example output

```
NE-UNITE 00-11-03 01:59:00
A 000 REPT DBCHG
"TIME=02-00-59,DATE=00-12-23:ENT-FECOM-LAN:1-1-lan2
::ip_lanstat=ENABLE,ip_ad=135.248.206.64,
ip_snm=255.255.0.0,lanstat=ENABLE,lanrpri=64,
lantlss=ENABLE,osinode=osinode5"
;
```



Autonomous notification

**Start-up with default
database**

The event "Start-up with default DB" causes that the three LAN instances with AIDs lan1, lan2, lan3 are created. No notifications shall be sent.



OSI network layer

Overview

Purpose This section describes TL1 commands applicable to layer 3 of the OSI stack.

Contents

RTRV-ULSDCC-L3: Retrieve layer 3 related parameters	12-61
ENT-ULSDCC-L3: Create a further OSI node	12-67
ENT-ULSDCC-L3 Notification	12-72
ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.	12-74
ED-ULSDCC-L3 notification	12-79
DLT-ULSDCC-L3: Delete a node ID other than node-1	12-81
DLT-ULSDCC-L3 Notification	12-84
Autonomous notification	12-85



RTRV-ULSDCC-L3: Retrieve layer 3 related parameters

The RTRV-ULSDCC-L3 command is used to retrieve the layer 3 parameters of the OSI nodes or the SCN node. Up to 8 independent OSI nodes can exist in an NE: Node-1 has an NSAP and is created by default. Node 2-8 have each a Network Entity Title (NET). NSAP = NET + SEL . Node 2-8 can be created and deleted, see commands ENT-ULSDCC-L3, DLT-ULSDCC-L3. The SCN node is created when an ASTN IP address is defined (see ENT-ULS), for this node the command retrieves only the NSAP parameter used by I-ISIS. For OSI nodes the parameters of the NSAP field, IS level, IS domain, RA prefix and RA destination node are retrieved.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
Priority: 1
Abortable: Yes.

Input format Command Syntax: RTRV-ULSDCC-L3:*tid::ctag[:osinode];*

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
3. osinode
A *LambdaUnite*[®] MSS NE can have up to 8 instances of the OSI stack and one SCN node. Node-1 is default. Node 2-8 can be created and configured, see command ENT-ULSDCC-L3. The SCN node is created when an ASTN IP address is defined, see ENT-ULS.
Type AID.
Range: OSI_node_AID | SCN_node_AID.
Default: If this field is omitted then the command shall provide output for all nodes which are created.

Output format If the RTRV-ULSDCC-L3 is successful, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
  "osinode:spec_block"
  ...
  "osinode:spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#) .

Output parameters

Command parameters

1. osinode
See definition of input parameter *osinode* in RTRV-ULSDCC-L3
The value *osinodeall* is not allowed as output parameter.

Spec block parameters

1. l3afi – NSAP/NET Authority and Format Identifier
This parameter sets or retrieves the format for the rest of the address.
Type: hexadecimal number.
Range: 10 – 99
Default: 39. This value identifies the iso_dcc format.
2. l3idi – NSAP/NET initial Domain Identifier
This parameter consists of two values:
 - a 3 semi-octet (3-digit hexadecimal) IDI part to specify the country code indicating the registration authority responsible for the allocation and assignment of the NSAP address.
 - a 1 semi-octet (1-digit hexadecimal) IDI pad part. The parameter is used for set and retrieve values.Type: hexadecimal number.
Range: 0000 – FFFF
Default:
SONET: IDI = 840; IDI pad = F
SDH: IDI = 000; IDI pad = 0.

RTRV-ULSDCC-L3: Retrieve layer 3 related parameters

3. l3dfi – NSAP/NET DSP Format Identifier
This parameter (2-digit hex) NSAP is used to set or retrieve the format for the rest of the address.
Type: hexadecimal number.
Range: 00 – FF.
Default: 80. This value represents the SONET DSP format.
4. l3org – NSAP/NET Organization Identifier
This parameter of NSAP is used to set or retrieve the NSP (allocated Company Code).
Type: hexadecimal number.
Range: 000000 – FFFFFFFF.
Default: 000000.
5. l3res – NSAP/NET Reserved
This NSAP part currently has not been assigned a specific purpose.
Type: hexadecimal number.
Range: 0000 – FFFF.
Default: 0000.
6. l3rd – NSAP/NET Routing Domain
This parameter of NSAP is used to set or retrieve a unique routing domain within an administrative domain. A standard for use has not been defined until now.
Type: hexadecimal number.
Range: 0000 – FFFF.
Default: 0000.
7. l3area – NSAP/NET Area Identifier
This parameter of NSAP is used to set or retrieve the area. So NEs can be identified in the same area.
Type: hexadecimal number.
Range: 0000 – FFFF.
Default: 0000.
8. l3sys – NSAP/NET System Identifier
This system parameter of the NSAP is set by the Equipment Manufacturer. The value is fix and globally unique among all NEs. For values of NSAP/NET system parameter see chapter Default below.
Type: hexadecimal number.
Range: 000000000000 – FFFFFFFFFFFFFFFF

Default:

- Node-1: IEEE-MAC address of LAN1
- Node-2: IEEE-MAC address of LAN1 +1
- Node-3: IEEE-MAC address of LAN1 +2
- Node-4: IEEE-MAC address of LAN1 +3
- Node-5: IEEE-MAC address of LAN1 +4
- Node-6: IEEE-MAC address of LAN1 +5
- Node-7: IEEE-MAC address of LAN1 +6
- Node-8: IEEE-MAC address of LAN1 +7
- scnode: IEEE-MAC address of LAN1 +8

9. l3sel – NSAP Selector

This parameter serves to differentiate multiple access points (NSAPs) for the same NE (node-1). The values cannot be set manually. The NET addresses of node 2-8 have *l3sel*=00.

Type: hexadecimal number.

Range: 00 – FF. Values:

- 1D: For TP4 PDUs, when TP4 runs over CLNP, Also used for SDH supporting NEs
- 00: For NET, used for exchanging PDUs in the ES-IS and IS-IS routing exchange protocols
- 04: For NSAP of CLNP PDUs, encapsulated IP packets
- AF: For TARP PDUs, when TARP is run over CLNP.

Default: 1D, see NET addresses of node 2-8 are reported as NSAP with *l3sel*=00.

10. l3isisnl – Layer 3 IS Level

This parameter indicates the network router type: ES-IS (level1, value L1), IS-IS (level2, value L2) and partition repair capability (value3).

Note: This parameter is not reported when output parameter *osinode*=scnode.

Type: alphanumeric string.

RTRV-ULSDCC-L3: Retrieve layer 3 related parameters

Range:

- L1: this means level1, IS-IS, only allowed when parameter *l3radesnode*=0
- L12: this means level2, IS-IS which contains also level1, ES-IS
- L12PRC : this means partition repair capable (PRC) and contains also level1 and level2.

Default: L1.

11. *l3domain* – Layer3 IS Domain

Per node in a NE, a domain group must be specified. This will be done with this parameter which can be set and retrieved. All nodes in the NE with the same domain-number are interconnected and can communicate without the need for inter-domain routing via RA-PREFIX.

Note: This parameter is not reported when output parameter *osinode*=scnnode.

Type: alphanumeric string.

Range:

- 1 for *osinode1*
- 1 – 2 for *osinode2* to *osinode8*.

Default: 1.

12. *l3raprefix* – Layer3 Reachable Address Prefix

This value specifies an area address or a part of an area address representing an area address group. This parameter is needed when nodes in different routing domains (see *l3domain*) must communicate. The node must forward then CLNP PDUs to the RA-Destination-Node if the destination NSAPs of CLNP PDUs match with the PA-Prefix.

Note: This parameter is not reported when output parameter *osinode*=scnnode.

Type: hexadecimal number.

Range:

- NONE,
- a string of 1 to 13 bytes: first byte (most significant): 10 – 99; rest: 0000 – FFFF.

The value represents an area address or a part of an area address beginning with AFL.

Default: empty string.

13. l3radesnode – Layer3 Reachable Address Destination Node

This parameter is in combination with parameter l3raprefix necessary. The value represents the destination node in the same NE. An internal connection over a domain-boundary is established between this node and the RA-Destination-Node, with IS-IS disabled over that connection.

Note: This parameter is not reported when output parameter *osinode*=scnnode.

Type: AID and digit value.

Range:

- 0, osinode{2-8} for osinode1
- 0, osinode1 for osinode2 to osinode 8.

Value 0 indicates that functionality of RA-Prefix is disabled.

Default: 0.

**Detailed behavior
description**

The command retrieves system parameter as described in the Output parameter section.

Example input/output

The following example shows the result of RTRV-ULSDCC-L3:

```
RTRV-ULSDCC-L3:NE-UNITE::123456::osinode1;  
NE-UNITE 00-12-24 11:01:59  
M 123456 COMPLD  
"osinode1:L3AFI=39,L3IDI=840F,L3DFI=80,  
L3ORG=100100,L3res=0000,L3RD=0000,L3AREA=0000,  
L3SYS=08006A112345,L3SEL=1D,L3ISISNL=L12PRC,  
L3DOMAIN=1,L3RADESNODE=0"  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-ULSDCC-L3 command.

Related TL1 messages

- [“ENT-ULSDCC-L3: Create a further OSI node” \(12-67\)](#)
- [“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” \(12-74\)](#)
- [“DLT-ULSDCC-L3: Delete a node ID other than node-1” \(12-81\)](#)



ENT-ULSDCC-L3: Create a further OSI node

The ENT-ULSDCC-L3 command is used to create a new OSI node. Up to 8 independent OSI instances can exist in a NE: Node-1 has a NSAP and the nodes 2-8 have each a Network Entity Title (NET). NSAP = NET + SEL Node-1 with AID osinode1 is created by start up of the UNITE NE as default. Node 2-8 can be created and configured with this command by entering an osinode AID which is not used until now, a NET area address and an IS-IS Level. Parameter in the SYSTEM field of the NET are predefined. Further parameter for configuration can be set like IS domain, RA prefix and RA destination node.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S4
Priority: 1
Abortable: No.

Input format Command Syntax: ENT-ULSDCC-L3:*tid::ctag::osinode:spec_block*;

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
3. osinode
A *LambdaUnite*® MSS NE can have up to 8 instances of the OSI stack. Node-1 (osinode1) is default. Node 2-8 (osinode{2-8}) can be created and configured.
Type: AID.
Range: osinode{2-8}.

Spec block parameters

1. l3afi – NSAP/NET Authority and Format Identifier
See definition of *l3afi* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
2. l3idi – NSAP/NET initial Domain Identifier
See definition of *l3idi* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
3. l3dfi – NSAP/NET DSP Format Identifier
See definition of *l3dfi* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
4. l3org – NSAP/NET Organization Identifier
See definition of *l3org* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
5. l3res – NSAP/NET Reserved
See definition of *l3res* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
6. l3rd – NSAP/NET Routing Domain
See definition of *l3rd* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
7. l3area – NSAP/NET Area Identifier
See definition of *l3area* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
8. l3isisnl – Layer 3 IS Level
See definition of *l3isisnl* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
9. l3domain – Layer3 IS Domain
See definition of *l3domain* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
10. l3raprefix – Layer3 Reachable Address Prefix
See definition of *l3raprefix* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
11. l3radesnode – Layer3 Reachable Address Destination Node
See definition of *l3radesnode* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).

Output format If the ENT-ULSDCC-L3 is successful, the following normal completion response is returned:

ENT-ULSDCC-L3: Create a further OSI node

```

        sid date time
M  ctag COMPLD
;

```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output Parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The command creates a new OSI node as specified in the command line. The command leads to a reset of the DCF controller and disconnection of management communication. The update shall be reported by means of ENT-ULSDCC-L3 notification.

Example input/output

The following example shows the result of ENT-ULSDCC-L3:

```

ENT-ULSDCC-L3:NE-UNITE::4744843::osinode8:l3afi=39,
l3idi=840F,l3dfi=80,l3org=100100,l3res=0000,l3rd=0020,
l3area=4711,l3isinl=L12,l3domain=2;
        NE-UNITE 01-01-15 11:59:02
M  4744843 COMPLD
;

```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the ENT-ULSDCC-L3 command.

Validation rule: OSI Node is Already Created

If the command is used with a value for parameter osinode which is already used for a creation of a OSI node, the command shall be rejected. This means the operation shall be rejected when the node ID is already in the created state.

Error code: IEAE - Entity Data Already Exists, osinode

Validation rule: Address area value – RA-Prefix value

If a new RA-Prefix matches with the concerning part of the new area address the provisioning of the new NSAP area address must be rejected.

Error code: IDNV - Input Data not Valid, NSAP Area Address matches with RA-Prefix

Validation rule: RA-prefix value – Address area value

If a RA-Prefix will be initiated and the value matches with the concerning part of the NSAP Area Address of this node the command must be rejected. The prefix should be specific enough, so that it matches not with NSAPs in both domains.

Error code: IDNV - Input Data not Valid, RA-Prefix matches with the NSAP Area Address

Validation rule: l3radesnode value must be different from osinode

The command will be rejected when parameter *l3radesnode* is equal to the *osinode* parameter of the node.

Error code: IDNV - Input Data not Valid, equal node IDs

Validation rule: l3radesnode must be in the created state

If the destination node (l3radesnode parameter) is not in the created state, the command must be rejected.

Error code: SNVS - Status, Not in Valid State, l3radesnode not in created state

Validation rule: consistency of l3radesnode with l3raprefix

If the value for the RA Destination Node (l3radesnode parameter) is equal to 0 while the value of the RA Prefix (l3raprefix parameter) is not NONE the command must be rejected.

Error code: IDNV - Input Data not Valid, l3raprefix and l3radesnode inconsistent

Validation rule: l3radesnode value and l3isisnl value

The l3isisnl parameter value L1 (Level1) is only allowed when the entered l3radesnode=0

Error code: IDNV - Input Data not Valid, constraint l3radesnode

Validation rule: only one single node in a separate domain supported

The command shall be rejected when l3domain has an other value than 1 and there is already an other osinode which has a value other than 1 for l3domain.

Error code: IDNV - Input Data not Valid, only a single node in separate domain supported

ENT-ULSDCC-L3: Create a further OSI
node

**Validation Rule: consistency l3domain with l3radesnode for
nodes 2 to 8**

The command shall be rejected when l3domain for osinode2 to
osinode8 has a value of 1 and l3radesnode is not equal to 0.

Error code: IDNV - Input Data not Valid, inconsistency
l3domain with l3radesnode

Related TL1 messages

- [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters”
\(12-61\)](#)



ENT-ULSDCC-L3 Notification

The ENT-ULSDCC-L3 command effects a communication SW-reset (protocol stack) and the management connection is lost. Therefore it cannot be guaranteed that a notification could be returned as described below.

Output format The ENT-ULSDCC-L3 notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

The ENT-ULSDCC-L3 notification has following specific syntax:

ENT-ULSDCC-L3::*osinode:spec_block*

Output parameters

Command parameters

1. *osinode*
See definition of *osinode* in [“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” \(12-74\)](#).

Spec block parameters

1. *l3afi* – NSAP/NET Authority and Format Identifier
See definition of *l3afi* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
2. *l3idi* – NSAP/NET initial Domain Identifier
See definition of *l3idi* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
3. *l3dfi* – NSAP/NET DSP Format Identifier
See definition of *l3dfi* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
4. *l3org* – NSAP/NET Organization Identifier
See definition of *l3org* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
5. *l3res* – NSAP/NET Reserved
See definition of *l3res* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
6. *l3rd* – NSAP/NET Routing Domain
See definition of *l3rd* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).

7. l3area – NSAP/NET Area Identifier
See definition of *l3area* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
8. l3isisnl – Layer 3 IS Level
See definition of *l3isisnl* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
9. l3domain – Layer3 IS Domain
See definition of *l3domain* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
10. l3raprefix – Layer3 Reachable Address Prefix
See definition of *l3raprefix* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
11. l3radesnode – Layer3 Reachable Address Destination Node
See definition of *l3radesnode* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).

Example output

```
NE-UNITE 01-01-13 01:57:42
A 000 REPT DBCHG
"TIME=01-47-43,DATE=01-01-13:ENT-ULSDCC-L3::
osinode7:l3afi=39,l3idi=850F,l3dfi=80,l3org=100100,
l3res=0000,l3rd=0020,l3area=4711,l3isisnl=L12,
l3domain=2,l3raprefix=3984,l3radesnode=osinode1"
;
```



ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.

The ED-ULSDCC-L3 command is used to set respectively modify values of layer 3 parameter in existing respectively created OSI stacks. Parameter in the area address field of NSAP respectively NET are to set respectively modify. Parameter in the SYSTEM field and SEL field of NSAP respectively NET are predefined. Further layer 3 parameter to set/modify are IS level, IS domain, RA prefix and RA destination node.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S4
Priority: 1
Abortable: No.

Input format Command Syntax: ED-ULSDCC-L3:*tid::ctag::osinode*:[*spec_block*];

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
3. osinode
A *LambdaUnite*[®] MSS NE can have up to 8 instances of the OSI stack. Node-1 is created by start up of the *LambdaUnite*[®] MSS NE as default. Node 2-8 can be created and configured, see command [“ENT-ULSDCC-L3: Create a further OSI node” \(12-67\)](#).
Type: AID.
Range: osinode{1-8}.

ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.

Spec block parameters

1. l3afi – NSAP/NET Authority and Format Identifier
See definition of *l3afi* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
2. l3idi – NSAP/NET initial Domain Identifier
See definition of *l3idi* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
3. l3dfi – NSAP/NET DSP Format Identifier
See definition of *l3dfi* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
4. l3org – NSAP/NET Organization Identifier
See definition of *l3org* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
5. l3res – NSAP/NET Reserved
See definition of *l3res* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
6. l3rd – NSAP/NET Routing Domain
See definition of *l3rd* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
7. l3area – NSAP/NET Area Identifier
See definition of *l3area* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
8. l3isisnl – Layer 3 IS Level
See definition of *l3isisnl* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
9. l3domain – Layer3 IS Domain
See definition of *l3domain* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
10. l3raprefix – Layer3 Reachable Address Prefix
See definition of *l3raprefix* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
11. l3radesnode – Layer3 Reachable Address Destination Node
See definition of *l3radesnode* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).

Output format

If the ED-ULSDCC-L3 is successful, the following normal completion response is returned:

```
sid date time  
M ctag COMPLD  
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output Parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#) .

**Detailed behavior
description**

The command sets or modifies the parameter of layer 3 in a node as specified in the spec_block of the command line. Result should be an update of the OSI stack.

Modification of any of the parameters *l3domain*, *l3afi*, *l3idi*, *l3dfi*, *l3org*, *l3res*, *l3rd*, *l3area*, *l3isisnl* leads to a reset of the DCF controller and disconnection of management communication.

The update is reported by means of ED-ULSDCC-L3 notification.

Example input/output

The following example shows the result of ED-ULSDCC-L3:

```
ED-ULSDCC-L3:NE-UNITE::4744843::osinode8:l3afi=39,l  
3idi=840F,l3dfi=80,l3org=100100,l3res=0000,l3rd=0020,  
l3area=4711,l3isisnl=L12,l3domain=2;  
NE-UNITE 01-01-15 11:59:02  
M 4744843 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the ENT-ULSDCC-L3 command.

Validation rule: osinode must be in the created state

The osinode parameter for which changes should be applied must be in the created state, i.e. the value must be either osinode1 or the node must be successfully created via ENT-ULSDCC-L3.

Error code: SNVS - Status, Not in Valid State, osinode not in created state

Validation rule: Address area value – RA-prefix value

If an Address Area value will be changed and an existing RA-Prefix matches with the concerning part of the new Area Address the provisioning of the new NSAP Area Address must be rejected.

ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.

Error code: IDNV - Input Data not Valid, NSAP Area Address matches with RA-Prefix

Validation rule: RA-prefix value – Address area value

If a RA-Prefix will be changed respectively initiated and the value matches with the concerning part of the NSAP Area Address of this node the command must be rejected. The prefix should be specific enough, so that it matches not with NSAPs in both domains.

Error code: IDNV - Input Data not Valid, RA-Prefix matches with the NSAP Area Address

Validation rule: *l3radesnode* value must be different from *osinode*

The command will be rejected when parameter *l3radesnode* is equal to the *osinode* parameter of the node.

Error code: IDNV - Input Data not Valid, equal node IDs

Validation rule: *l3domain* value must be different for current node and *l3radesnode*

If the value for the Domain Group (*l3domain* parameter) is equal for this node and the destination node (*l3radesnode* parameter) the command must be rejected.

Error code: IDNV - Input Data not Valid, equal *l3domain*

Validation rule: *l3radesnode* value and *l3isisnl* value

The *l3isisnl* parameter value L1 (Level1) is only allowed when *l3radesnode*=0

Error code: IDNV - Input Data not Valid, constraint *l3radesnode*

Validation rule: consistency of *l3radesnode* with *l3raprefix*

If the value for the RA Destination Node (*l3radesnode* parameter) is equal to 0 while the value of the RA Prefix (*l3raprefix* parameter) is not NONE the command must be rejected.

Error code: IDNV - Input Data not Valid, *l3prefix* and *l3radesnode* inconsistent

Validation rule: *l3domain* can not be changed for *osinode1*

If *osinode*=*osinode1* *l3domain* changes should be rejected.

Error code: IDNV - Input Data not Valid, can't change *l3domain* for *osinode1*

Validation rule: only one single node in a separate domain supported

The command shall be rejected when l3domain has an other value than 1 and there is already an other osinode which has a value other than 1 for l3domain.

Error code: IDNV - Input Data not Valid, only a single node in separate domain supported

Validation rule: consistency l3domain with l3radesnode for nodes 2 to 8

The command shall be rejected when l3domain for osinode2 to osinode8 has a value of 1 and l3radesnode is not equal to 0.

Error code: IDNV - Input Data not Valid, inconsistency l3domain with l3radesnode

Validation rule: l3radesnode must be in the created state

If the destination node (l3radesnode parameter) is not in the created state, the command must be rejected.

Error code: SNVS - Status, Not in Valid State, l3radesnode not in created stat

Related TL1 messages

- [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#)
- [“ENT-ULSDCC-L3: Create a further OSI node” \(12-67\)](#)
- [“DLT-ULSDCC-L3: Delete a node ID other than node-1” \(12-81\)](#)



ED-ULSDCC-L3 notification

The ED-ULSDCC-L3 command effects a communication SW-reset (protocol stack) and the management connection is lost. Therefore it cannot be guaranteed that a notification could be returned as described below.

Output format The ENT-ULSDCC-L3 notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

The ED-ULSDCC-L3 notification has the following specific syntax:

ED-ULSDCC-L3::*osinode:spec_block*

Output parameters

Command parameters

1. *osinode*
See definition of *osinode* in [“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” \(12-74\)](#).

Spec block parameters

1. *l3afi* – NSAP/NET Authority and Format Identifier
See definition of *l3afi* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
2. *l3idi* – NSAP/NET initial Domain Identifier
See definition of *l3idi* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
3. *l3dfi* – NSAP/NET DSP Format Identifier
See definition of *l3dfi* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
4. *l3org* -NSAP/NET Organization Identifier
See definition of *l3org* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
5. *l3res* – NSAP/NET Reserved
See definition of *l3res* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
6. *l3rd* – NSAP/NET Routing Domain
See definition of *l3rd* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).

7. l3area – NSAP/NET Area Identifier
See definition of *l3area* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
8. l3isisnl – Layer 3 IS Level
See definition of *l3isisnl* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
9. l3domain – Layer3 IS Domain
See definition of *l3domain* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
10. l3raprefix – Layer3 Reachable Address Prefix
See definition of *l3raprefix* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).
11. l3radesnode – Layer3 Reachable Address Destination Node
See definition of *l3radesnode* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).

Example output

```
NE-UNITE 01-01-13 01:57:42
A 000 REPT DBCHG
"TIME=01-47-43,DATE=01-01-13:ED-ULSDCC-L3::osinode8:
l3afi=39,l3idi=840F,l3dfi=80,l3org=100100,l3res=0000,
l3rd=0020,l3area=4711,l3isisnl=L12,l3domain=2,
l3raprefix=,l3radesnode=0"
;
```



DLT-ULSDCC-L3: Delete a node ID other than node-1

The DLT-ULSDCC-L3 command is used to delete a node ID (osinode) in a UNITE NE which was created via ENT-ULSDCC-L3.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S3
 Priority: 1
 Abortable: No.

Input format Command Syntax: DLT-ULSDCC-L3:*tid*::*ctag*::*osinode*;

Input parameters

Command parameters

1. tid - Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. ctag - Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
3. osinode
 A *LambdaUnite*[®] MSS NE has up to 8 instances of the OSI stack. Node-1 (osinode1) is default. Node 2-8 (osinode{2-8}) can be created and configured and deleted.
 Type: AID
 Range: osinode{2-8}.

Output format If the DLT-ULSDCC-L3 is successful, the following normal completion response shall be returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output Parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#) .

**Detailed behavior
description**

The command deletes a node ID (AID value of parameter osinode) at a NE. Only node IDs created via ENT-ULSDCC-L3 command can be deleted. The result should be an update of the OSI stack.

The command leads to a reset of the DCF controller and disconnection of management communication.

The update shall be reported by means of DLT-ULSDCC-L3 notification.

Example input/output

The following example shows the result of DLT-ULSDCC-L3:

```
DLT-ULSDCC-L3:NE-UNITE::0962415::osinode2;  
    NE-UNITE 01-02-15 09:11:51  
M 4744843 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the DLT-ULSDCC-L3 command.

Validation rule: Reject deletion when node is assigned to LAN or DCC

The command shall be rejected when a node is disabled to which DCC and/or LAN channel are assigned (via ENT-FECOM/ENT-FECOM-LAN).

Error code: SNVS - Not in Valid State, DCC/LAN channels assigned

Validation rule: Reject deletion when node is used as RA destination node by OSI node 1

The command shall be rejected when a node is used as RA destination node by OSI node 1 (l3radesnode = 0).

Error code: SNVS - Not in Valid State, node in use as RA destination node

Validation rule: osinode must be in the created state

The osinode parameter for which changes should be applied must be in the created state, i.e. the value must be either osinode1 or the node must be successfully created via ENT-ULSDCC-L3.

Error code: SNVS - Status, Not in Valid State, osinode not in created state

DLT-ULSDCC-L3: Delete a node ID other than node-1

Related TL1 messages

- [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#)
- [“ENT-ULSDCC-L3: Create a further OSI node” \(12-67\)](#)
- [“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” \(12-74\)](#)



DLT-ULSDCC-L3 Notification

Output format The DLT-ULSDCC-L3 notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

The DLT-ULSDCC-L3 notification shall have following specific syntax:

DLT-ULSDCC-L3::*osinode*

Output parameters

Command parameters

1. *osinode*

See definition of *osinode* in [“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” \(12-74\)](#).

Example output

```
NE-UNITE 01-02-15 09:18:27
A 000 REPT DBCHG
"TIME=09-27-36,DATE=01-02-15:DLT-ULSDCC-L3::osinode8"
;
```



Autonomous notification

**Start-up with default
database**

The event "Start-up with default DB" causes that the OSI node 1 with AID osinode1 is created.



OSI transport layer and TARP

Overview

Purpose This section describes TL1 commands applicable to layer 4 of the OSI stacks.

Contents

<u>RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters</u>	<u>12-87</u>
<u>ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks</u>	<u>12-91</u>
<u>ENT-ULSDCC-L4 notification</u>	<u>12-96</u>
<u>DLT-ULSDCC-L4: Delete TARP manual adjacent NSAP address in layer 4 of the specified OSI stack</u>	<u>12-98</u>
<u>DLT-ULSDCC-L4 notification</u>	<u>12-100</u>



RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters

The RTRV-ULSDCC-L4 command is used to retrieve layer 4 parameters of the OSI stacks. Layer 4 include some TARP parameter which can be modified and the TARP Manual Adjacencies parameter which can be provided, modified or deleted.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
 Priority: 1
 Abortable: Yes.

Input format Command Syntax: RTRV-ULSDCC-L4:*tid*::*ctag*[::*osinode*];

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.

Output format If the RTRV-ULSDCC-L4 is successful, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
  "osinode:spec_block"
    ...
  "osinode:spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Manual adjacencies If more than one manual adjacency is defined for one osinode, they appears on separate output lines.

Example:

```
sid date time
M ctag COMPLD
"osinode1:<other spec_block parameters>"
"osinode1:l4ajnsap=39840F80000000000000000000000001
23456789ABC00"
"osinode1:l4ajnsap=39840F80000000000000000000000002
3456789ABCD00"
;
```

Output parameters

Spec block parameters

1. l4etof - TARP origination
This parameter only valid for node-1. It is used to enable or disable TARP Origination function and is valid for all interfaces of a node.
Type: Alphanumeric value set.
Range: ENABLE, DISABLE.
Default: ENABLE (for osinode1), DISABLE (for osinode2-8, fixed).
2. l4etpf – TARP propagation
This parameter is used to enable or disable TARP Propagation function for a node.
Type: Alphanumeric value set.
Range:
 - ENABLE (default)
 - DISABLE.
3. l4etrf – TARP responder
This parameter is only valid for node-1. It is used to enable or disable TARP responder function
Type: Alphanumeric value set
Range:
 - ENABLE
 - DISABLE.
Default: For node-1: ENABLE DISABLE (fixed for nodes 2-8).

4. l4ajnsap – TARP Manual Adjacency List
This parameter specifies the NSAP address portion of an entry in the TARP Manual Adjacent NE list. Up to two addresses are possible for each node in a *LambdaUnite*[®] MSS NE.
Type: hexadecimal number or alphanumeric value set.
Range: NONE, 20 octet (40-digit hex) long address.
The NSAP address / NET is composed of the following components:
 - l4ajafi 10 – 99
 - l4ajidi 0000 – FFFF
 - l4dfi 00 – FF
 - l4alorg 000000 – FFFFFFFF
 - l4ajres 0000 – FFFF
 - l4jrd 0000 – FFFF
 - l4jarea 0000 – FFFF
 - l4ajsys 000000000000 – FFFFFFFFFFFFFFFF
 - SEL 00 The last byte indicates the selector and is not to set.
Note: For more details see description of ENT-ULSDCC-L3.
Default: NONE (no TARP manual adjacencies).

Detailed behavior description The command retrieves system parameter as described in the Output parameter section.

Example input/output The following example shows the result of RTRV-ULSDCC-L4:

```
RTRV-ULSDCC-L4:NE-UNITE::456789::osinode1;
NE-UNITE 01-17-01 18:11:01
M 456789 COMPLD
"OSINODE1:l4etof=DISABLE,l4etpf=ENABLE,l4etrf=ENABLE,
l4ajnsap=39840F800000000000000000000000123456789ABC00"
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-ULSDCC-L4 command.

OSI transport layer and TARP
RTRV-ULSDCC-L4: Retrieve OSI layer 4
related parameters

TL1 messages - data communications network

Related TL1 messages

- [“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks” \(12-91\)](#)
- [“DLT-ULSDCC-L4: Delete TARP manual adjacent NSAP address in layer 4 of the specified OSI stack” \(12-98\)](#)



ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks

Among other Layer 4 covers the TARP functionality. The parameter of this command for *LambdaUnite*[®] MSS NEs are only related to the TARP.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S4
Priority: 1
Abortable: No.

Input format Command Syntax: ENT-ULSDCC-L4:*tid::ctag::osinode*:*[spec_block]*;

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
3. osinode
See definition of *osinode* in [“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” \(12-74\)](#).

Spec block parameters

1. l4etof – TARP origination
See definition of *l4etof* in [“RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters” \(12-87\)](#).
2. l4etpf – TARP propagation
See definition of *l4etpf* in [“RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters” \(12-87\)](#).
3. l4etrfr – TARP responder
See definition of *l4etrfr* in [“RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters” \(12-87\)](#).

4. 14ajafi – TARP Man. Adjacency: NET Authority and Format Identifier
This parameter of NSAP is used to set or retrieves the format for the rest of the address.
Type: hexadecimal number.
Range: 10 – 99.
Default: Value of authority and format identifier part of NET of node defined by parameter *osinode*.
5. 14ajidi – TARP Man. Adjacency: NET initial Domain Identifier
This NSAP part consists two values:
 - a 3 semi-octet (3-digit hexadecimal) IDI part to specify the country code indicating the registration authority responsible for the allocation and assignment of the NSAP address.
 - a 1 semi-octet (1-digit hexadecimal) IDI pad part.The parameter is used for set and retrieve values.
Type: hexadecimal number.
Range: 0000 – FFFF.
Default: Value of initial domain identifier part of NET of node defined by parameter *osinode*.
6. 14ajdfi – TARP Man. Adjacency: NET DSP Format Identifier
The purpose of this 1 octet (2-digit hex) NSAP part is to set or retrieve the format for the rest of the address.
Type: hexadecimal number.
Range: 00 – FF.
Default: Value of DSP format identifier part of NET of node defined by parameter *osinode*.
7. 14ajorg – TARP Man. Adjacency: NET Organization Identifier
This parameter of NSAP is used to set or retrieve the NSP (allocated company code).
Type: hexadecimal number.
Range: 000000 – FFFFFFFF.
Default: Value of organization part of NET of node defined by parameter *osinode*.
8. 14ajres -TARP Man. Adjacency: NET Reserved
This NSAP part currently has not been assigned a specific purpose.
Type: hexadecimal number.
Range: 0000 – FFFF.
Default: Value of reserved part of NET of node defined by parameter *osinode*.

9. l4ajrd – TARP Man. Adjacency: NET Routing Domain
This parameter of NSAP is used to set or retrieve a unique routing domain within an administrative domain. A standard for use has not been defined until now.
Type: hexadecimal number.
Range: 0000 – FFFF.
Default: Value of routing domain part of NET of node defined by parameter *osinode*.
10. l4ajarea – TARP Man. Adjacency: NET Area Identifier
This parameter of NSAP is used to set or retrieve the area. So NEs can be identified in the same area.
Type: hexadecimal number.
Range: 0000 – FFFF.
Default: Value of area part of NET of node defined by parameter *osinode*.
11. l4ajsys – TARP Man. Adjacency: NET System Identifier
This system parameter of the NSAP is set by the Equipment Manufacturer. The value is fix and globally unique among all NEs. For values of NSAP/NET system parameter.
Type: hexadecimal number.
Range: 000000000000 – FFFFFFFF.

Output format If the ENT-ULSDCC-L4 is successful, the following normal completion response is returned:

```
sid date time  
M ctag COMPLD  
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output Parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#) .

**Detailed behavior
description**

The command sets respectively modifies layer 4 parameter for a node as specified in the spec_block of the command line. Result should be an update of the OSI stack.

Modification of any of the parameters *l4etof*, *l4etpf*, *l4etrf* leads to a reset of the DCF controller and disconnection of management communication.

The update is reported by means of ENT-ULSDCC-L4 notification.

Up to two TARP manual adjacencies are possible for each node in an *LambdaUnite*[®] MSS NE. One manual adjacency is added with each command request.

In order to update/modify an already provisioned manual adjacency, the following command sequence must be applied:

1. delete the manual adjacency to be modified by means of DLT-ULSDCC-L4
2. add the manual adjacency with the new values by means of ENT-ULSDCC-L4.

Example input/output

The following example shows the result of ENT-ULSDCC-L4:

```
ENT-ULSDCC-L4:NE-UNITE::4744843::osinode1:l4ajafi=39,  
l4ajidi=840F,l4ajdfi=80,l4ajorg=100100,l4ajres=0000,  
l4ajrd=0020,l4ajarea=4711,l4ajsys=08006A112345;  
NE-UNITE 01-01-18 10:09:52  
M 4744843 COMPLD  
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the ENT-ULSDCC-L4 command.

Validation rule: TARP origination only valid for node-1

The parameter *l4etof* can only be set to ENABLE for osinode1. When trying to ENABLE *l4etof* for osinode2-8 the command should be rejected.

Error code: IDRG - Input Data Range Error, *osinode*

Validation rule: TARP responder only valid for node-1

The parameter *l4etrf* can only be set to ENABLE for osinode1. When trying to ENABLE *l4etrf* for osinode2-8 the command should be rejected.

Error code: IDRG - Input Data Range Error, *osinode*

Validation rule: Not allowed to disable TARP when T-TD is enabled

The parameters *l4etof*, *l4etpf*, *l4etrf* for osinode1 can not be disabled when T-TD is enabled (see [“ED-NE: Edit NE” \(12-8\) tlltcpipgw](#)). The command should be rejected in this case.

Error code: SNVS - Status, Not in Valid State, T-TD enabled.

Validation rule: Can't disable TARP propagation while LAN TARP storm suppression is enabled

If it is tried to set l4etpf=DISABLE while lantlss=ENABLE (see RTRV-FECOM-LAN) the command shall be denied.

Error code: INVS - Status, Not in Valid State, TARP propagation can not be disabled

Validation rule: l4ajsys must be supplied

The parameter *l4ajsys* must be supplied when manual adjacencies are configured, i.e. when any of the other NET parameters *l4ajafi*, *l4ajidi*, *l4ajdfi*, *l4ajorg*, *l4ajrd*, *l4ajarea* is present, otherwise the command should be rejected.

Error code: IDNC - Input Data Not Consistent

Validation rule: l4ajsys per osinode must be different

Each manual adjacency for one osinode must have a different value for the parameter *l4ajsys*, i.e. all pairs of *osinode/l4ajsys* must be unique in the system.

Error code: IDNV - Input, Data Not Valid, l4ajsys/osinode not unique

Related TL1 messages

- [“RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters” \(12-87\)](#)
- [“DLT-ULSDCC-L4: Delete TARP manual adjacent NSAP address in layer 4 of the specified OSI stack” \(12-98\)](#)



ENT-ULSDCC-L4 notification

Output format The ENT-ULSDCC-L4 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

Syntax: The ENT-ULSDCC-L4 notification has the following specific syntax:

ENT-ULSDCC-L4::*osinode:spec_block*

Output parameters

Command parameters

1. *osinode*
See definition of *osinode* in [“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” \(12-74\)](#) .

Spec block parameters

1. *l4etof* – TARP origination
See definition of *l4etof* in [“RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters” \(12-87\)](#).
2. *l4etpf* – TARP propagation
See definition of *l4etpf* in [“RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters” \(12-87\)](#).
3. *l4etrf* – TARP responder
See definition of *l4etrf* in [“RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters” \(12-87\)](#).
4. *l4ajafi* – TARP Man. Adjacency: NET Authority and Format Identifier
See definition of *l4ajafi* in [“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks” \(12-91\)](#).
5. *l4ajidi* – TARP Man. Adjacency: NET initial Domain Identifier
See definition of *l4ajidi* in [“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks” \(12-91\)](#).
6. *l4ajdfi* – TARP Man. Adjacency: NET DSP Format Identifier
See definition of *l4ajdfi* in [“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks” \(12-91\)](#).
7. *l4ajorg* – TARP Man. Adjacency: NET Organization Identifier
See definition of *l4ajorg* in [“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks” \(12-91\)](#).

8. l4ajres – TARP Man. Adjacency: NET Reserved
See definition of *l4ajres* in [“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks” \(12-91\)](#).
9. l4ajrd – TARP Man. Adjacency: NET Routing Domain
See definition of *l4ajrd* in [“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks” \(12-91\)](#).
10. l4ajarea – TARP Man. Adjacency: NET Area Identifier
See definition of *l4ajarea* in [“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks” \(12-91\)](#).
11. l4ajsys – TARP Man. Adjacency: NET System Identifier
See definition of *l4ajsys* in [“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks” \(12-91\)](#).

Example output

```
NE-UNITE 01-01-19 04:29:01
A 000 REPT DBCHG
"TIME=04-29-00,DATE=01-01-19:ENT-ULSDCC-L4::
osinode1:l4etof=DISABLE,l4etpf=ENABLE,l4etrf=DISABLE,
l4ajafi=39,l4ajidi=0,l4ajdfi=80,l4ajorg=100100,
l4ajres=0000,l4ajrd=0020,l4ajarena=4711,
l4ajsys=08006A112345"
;
```



DLT-ULSDCC-L4: Delete TARP manual adjacent NSAP address in layer 4 of the specified OSI stack

The DLT-ULSDCC-L4 command is used to delete one TARP manual adjacent NSAP address in the specified OSI node. The address to be deleted is specified by the system ID in the *spec_block* part of the command line.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S3
 Priority: 1
 Abortable: No.

Input format Command Syntax: DLT-ULSDCC-L4:*tid::ctag::osinode:[spec_block]*;

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
3. osinode
 See definition of *osinode* in [“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” \(12-74\)](#).

Spec block parameters

1. l4ajsys – New Manual Adjacency: NET System Identifier
 See definition of *l4ajsys* in [“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks” \(12-91\)](#).

Output format If the DLT-ULSDCC-L4 is successful, the following normal completion response is returned:

```
sid date time
M ctag COMPLD
;
```


OSI transport layer and TARP
DLT-ULSDCC-L4: Delete TARP manual
adjacent NSAP address in layer 4 of the
specified OSI stack

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#) .

**Detailed behavior
description**

The command deletes one NSAP address from the TARP Manual Adjacency list in layer 4 of a OSI stack. Result should be an update of the OSI stack. Multiple Manual Adjacent NEs are deleted using multiple occurrences of the DLT-ULSDCC-L4 command.

The update is reported by means of DLT-ULSDCC-L4 notification.

Example input/output

The following example shows the result of DLT-ULSDCC-L4:

```
DLT-ULSDCC-L4:NE-UNITE::4744843::osinode1:
14ajsys=08006A112345;
    NE-UNITE 01-01-19 10:09:52
M 4744843 COMPLD
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the DLT-ULSDCC-L4 command.

Validation rule: Check for existing TARP manual adjacent NSAP

The removal of a TARP manual adjacency shall only be allowed if an entry with the specified TARP manual adjacent NSAP exists for the *osinode*.

Error Code: SNVS - Status, Not in Valid State, unknown TARP Manual Adjacent NSAP

Related TL1 messages

- [“RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters” \(12-87\)](#)
- [“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks” \(12-91\)](#)



DLT-ULSDCC-L4 notification

Output format The DLT-ULSDCC-L4 notification uses the general format of a REPT DBCHG (Report Database Change) notification.

The DLT-ULSDCC-L4 notification has the following specific syntax:

DLT-ULSDCC-L4::*osinode:spec_block*

Output parameters

Command parameters

1. *osinode*
See definition of *osinode* in [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#).

Spec block parameters

1. *l4ajsys* – New Manual Adjacency: NET System Identifier
See definition of *l4ajsys* in [“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks” \(12-91\)](#).

Example output

```
NE-UNITE 01-01-19 04:29:01
A 000 REPT DBCHG
"TIME=04-29-00,DATE=01-01-19:DLT-ULSDCC-L4::
osinode1:l4ajsys=08006A112345"
;
```



TCP/IP parameters

Overview

Purpose This section describes TL1 commands applicable to the TCP/IP stack.

Contents

RTRV-ULS: Retrieve upper layer stack	12-102
ENT-ULS: Enter upper layer stack	12-105
ENT-ULS Notification	12-108



RTRV-ULS: Retrieve upper layer stack

The RTRV-ULS command is used to retrieve global parameters of the TCP/IP stack.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
 Priority: 1
 Abortable: Yes.

Input format Command Syntax: **RTRV-ULS:tid::ctag;**

Input parameters

Command parameters

1. tid – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.

Output format If the RTRV-ULS request is successful, the following normal completion message shall be returned:

```

sid date time
M ctag COMPLD
  "spec_block"
.      .      .
.      .      .
.      .      .
  "spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#) .

Output parameters

1. ip_ad_astn – IP Address of ASTN
This parameter shall be used to set or retrieve the router ID for the SCN and the ONNS node.
Note: As a consequence, if ip_ad_astn is not configured the whole SWISS application can not be enabled. See also parameter xcsetup in RTRV/ED-EQPT (system).
Type: Four dot separated numeric strings OR empty string.
The empty string value is used as indication for an undefined IP address.
Range: Each numeric string: 0 .. 255.
Default: empty string.
2. ip_drad – IP Default Router Address
This parameter shall be used to set or retrieve the IP default router address (IPv4) to which the host points to, needed for the T-TD functionality.
Type: Four dot separated numeric strings OR empty string The empty string value is used as indication for an invalid/undefined IP address.
Range: Each numeric string: 0 .. 255.
Default: empty string.
3. ip_drlan – IP Default Router LAN port AID
This parameter specifies with which LAN port the default router is associated.
Type: AID.
Range: LanPortAID. The value lanall is not allowed.
Default: 1-1-lan1.

RTRV-ULS: Retrieve upper layer stack

4. lv_port – T-TD Length Value Port
This parameter shall be used to set or retrieve the port number over which the T-TD function is accessible using the Length Value encoding method.
Type: Numeric string
Range: Each numeric string: 0 .. 65535.
Default: 3081.
5. raw_port – T-TD Raw Mode Port
This parameter shall be used to set or retrieve the port AID of number over which the T-TD function is accessible using raw-mode encoding.
Type: Numeric string
Range: Each numeric string: 0 .. 65535.
Default: 3082.

Detailed behavior description

The command retrieves system parameters as described in the Output parameter section.

Example input/output

The following example shows the result of a RTRV-ULS command:

```
RTRV-ULS:LT-UNITE::123456;
    LT-UNITE 00-11-01 08:00:00
M 123456 COMPLD
    "ip_ad_astn=127.93.94.10"
    "ip_drad=198.84.65.20"
    "ip_drlan=1-1-lan1"
    "lv_port=3081"
    "raw_port=3082"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-NE command.

Related TL1 Messages

[“ENT-ULS: Enter upper layer stack” \(12-105\)](#)



ENT-ULS: Enter upper layer stack

The ENT-ULS command is used to provision parameters of the TCP/IP stack.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S4
Priority: 1
Abortable: No.

Input format Command Syntax: ENT-ULS:*tid::ctag:::spec_block*;

Input parameters

Command parameters

1. *tid* – Target Identifier
See definition of *tid* in RTRV-ULS.
2. *ctag* – Correlation Tag
See definition of *ctag* in RTRV-ULS.

Spec block parameters

1. *ip_ad_astn* – IP Address of ASTN
This parameter shall be used to set the router ID for the SCN and the SNN node.
Note: The provisioning of this IP address is ONLY ALLOWED ONCE.
Type: Four dot separated numeric strings.
Range: 0.0.0.0 ... 223.255.255.255 with the exception of 0.0.0.0.
2. *ip_drad* – IP Default Router Address
This parameter shall be used to set or retrieve the IP default router address (IPv4) to which the host points to, needed for the T-TD functionality.
Type: Four dot separated numeric strings.
Range: Each numeric string: 0 .. 255.
3. *ip_drlan* – IP Default Router LAN port AID
See definition of *ip_drlan* in [“RTRV-ULS: Retrieve upper layer stack” \(12-102\)](#).

4. `lv_port` – T-TD Length Value Port
See definition of *lv_port* in [“RTRV-ULS: Retrieve upper layer stack” \(12-102\)](#).
5. `raw_port` – T-TD Raw Mode Port
See definition of *raw_port* in [“RTRV-ULS: Retrieve upper layer stack” \(12-102\)](#).

Output format If the ENT-ULS request is successful, the following normal completion message shall be returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Detailed behavior description

The command sets the parameters as specified for the input spec_block parameters.

Reset: Modification of any of the parameters *ip_ad_astn*, *lv_port*, *raw_port* leads to a reset of the DCF controller and disconnection of management communications.

Example input/output

The following example shows the result of an ENT-ULS command, which modifies the port number used for T-TD length value encoding:

```
ENT-ULS:LT-UNITE::123456:::lv_port=7777;
LT-UNITE 00-11-01 08:00:00
M 123456 COMPLD
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the ENT-ULS command.

Validation rule: no TCP port number change with enabled T-TD function

T-TD related port numbers cannot be changed as long as T-TD function is enabled.

ENT-ULS: Enter upper layer stack

Error Code: SNVS - Status, Not in Valid State, port numbers cannot be changed when T-TD is enabled

Validation rule: check for correct IP configuration

The ENT-ULS command shall only be allowed if there is already a valid IP configuration (ip_ad - IP address of LAN, ip_snm - subnet mask of LAN) provisioned for the LAN port specified by ip_drlan.

Error Code: SNVS - Status, Not in Valid State, incomplete IP configuration

Validation rule: check for correct configured Default Router LAN Port

The system do not allow to change the default router address (ip_drad) as long as there is no default router LAN port (ip_drlan) specified which has a valid IP Address (ip_ad) and IP Subnet Mask (ip_snm) configured.

Error Code: SNVS - Status, Not in Valid State, default router LAN port not configured

Validation rule: check for correct OSI node configuration

The system shall not allow to set *ip_drlan* (IP Default Router LAN) as long as this LAN port is not assigned to OSI node 1(see ENT-FECOM-LAN).

Error Code: SNVS - Status, Not in Valid State, wrong IP configuration.

Validation rule: check that raw_port and lv_port are unequal

The ENT-ULS command shall be refused, if the two port parameters *raw_port* and *lv_port* are set to equal values.

Error Code: IDNC - Input, Data Not Consistent, raw_port and lv_port must be unequal

Validation rule: check of the maintenance condition

System must be in MCOND for change of *ip_ad_astn*.

Error Code: SNVS - Status, Not in Valid State, not in Maintenance Condition

Related TL1 messages

- [“RTRV-ULS: Retrieve upper layer stack” \(12-102\)](#)



ENT-ULS Notification

Output format The ENT-ULS notification shall use the general format of a REPT DBCHG (Report Database Change) notification.

The ENT-ULS notification shall have following specific syntax:

ENT-ULS::*spec_block*

The output parameters *sid*, *date*, *time*, and *ctag* are described in the REPT DBCHG notification.

Output parameters

1. ip_ad_astn – IP Address of ASTN
See definition of *ip_ad_astn* in [“ENT-ULS: Enter upper layer stack” \(12-105\)](#).
2. ip_drad – IP Default Router Address
See definition of *ip_drad* in [“ENT-ULS: Enter upper layer stack” \(12-105\)](#).
3. ip_drlan – IP Default Router LAN port AID
See definition of *ip_drlan* in [“RTRV-ULS: Retrieve upper layer stack” \(12-102\)](#).
4. lv_port – T-TD Length Value Port
See definition of *lv_port* in [“RTRV-ULS: Retrieve upper layer stack” \(12-102\)](#).
5. raw_port – T-TD Raw Mode Port
See definition of *raw_port* in [“RTRV-ULS: Retrieve upper layer stack” \(12-102\)](#).

Example output The following is an example ENT-ULS notification in case the lv_port parameter was changed:

```
LT-UNITE 00-11-01 15:00:00
A 000 REPT DBCHG
"TIME=15-00-00,DATE=00-11-03:ENT-ULS::lv_port=7777"
;
```



IP Map

Overview

- Purpose** This section describes commands dealing with the IP map:
- the IP map provides T-TD access to the NE via one of the LANs that is assigned to node 1. Only managers registered in the IP map are allowed to access the NE via TCP/IP.
 - historically, the application context identifier for TL1 over OSI connections has been used to tailor the characteristics of the TL1 session (e.g. which events are reported using TL1 notifications) to the calling manager.
 - ADM40G bases the characteristics of a TL1 session on the user name passed in the ACT-USER command rather than the application context identifier.
 - still, for backwards compatibility, the feature of having the application context identifier being determined by the address of the calling manager is required on the T-TD.

Contents

<u>RTRV-IP-MAP: Retrieve TCP/IP map</u>	<u>12-110</u>
<u>ENT-IP-MAP: Enter TCP/IP map</u>	<u>12-113</u>
<u>ENT-IP-MAP Notification</u>	<u>12-116</u>
<u>DLT-IP-MAP: Delete TCP/IP map</u>	<u>12-117</u>
<u>DLT-IP-MAP notification</u>	<u>12-119</u>

RTRV-IP-MAP: Retrieve TCP/IP map

The RTRV-IP-MAP command retrieves the entries from the IP map.

The IP map describes the correlation of manager IP addresses to application contexts. Only managers which are entered in this map are allowed to access the NE via TCP/IP (T-TD function). The *tl1tcpipgw* parameter in the RTRV-NE command indicates whether or not the mapping feature is enabled.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
Priority: 1
Abortable: Yes.

Input format Command Syntax: **RTRV-IP-MAP:tid::ctag;**

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.
2. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for input parameter syntax and description of this parameter.

Output format If the RTRV-IP-MAP request is successful, the following normal completion message shall be returned:

```
sid date time
M ctag COMPLD
"system::spec_block"
...
"system::spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command.

Output parameters

1. system – system AID
This parameter shall denote the system AID of the NE.
Type: AID
Range: system (default).
2. ip – IP Address
This parameter shall be used to set or retrieve the IP address(es) of the manager(s) of the NE.
Type: IPv4 address: four dot separated numeric strings.
Values: IPv4 address: Each numeric string: 0 .. 255. Number of entries: Mmaximum of 20 entries allowed.
Default: null.
3. acid – Application Context ID
This parameter shall be used to set or retrieve the application context ID to be assigned to a particular manager IP address.
Type: Alphanumeric string of length 0 .. 23.
Range: TL1MAINTENANCE, TL1MEMORYADMINISTRATION, TL1TEST, TL1OTHER1, TL1PEERCOMM.
Default: TL1PEERCOMM.
Although acid is a mandatory parameter it will not be evaluated in the NE. The parameter is present for backward compatibility.

Detailed behavior description

The command shall retrieve the spec_block parameters as described in the Output parameter section.

Sorting: If several managers are entered, the system shall respond with one line per *ip* parameter and sort the output according the *ip* parameter.

Example input/output

The following example shows the result of a RTRV-IP-MAP command with one manager entered:

```
RTRV-IP-MAP:LT-UNITE::123456;  
LT-UNITE 00-11-01 08:00:00  
M 123456 COMPLD  
"system::ip=198.78.46.8,acid=TL1MAINTENANCE"  
"system::ip=198.78.46.13,acid=TL1TEST"  
;
```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-NE-IP-MAP command.

Related TL1 Messages

- [“DLT-IP-MAP: Delete TCP/IP map” \(12-117\)](#)
- [“ENT-IP-MAP: Enter TCP/IP map” \(12-113\)](#)



ENT-IP-MAP: Enter TCP/IP map

The ENT-IP-MAP can be used to create entries in the IP map.

The ENT-IP-MAP command allows to enter a manager IP address and its application context ID to provide T-TD access to the NE via one of the LANs assigned to node 1. To map multiple managers the command has to be executed for each manager. The *tl1tcpipgw* parameter in the ED-NE command enables or disables the mapping feature.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S3
Priority: 1
Abortable: No.

Input format Command Syntax: **ENT-IP-MAP:tid::ctag:::spec_block;**

Input parameters

Command parameters

1. tid – Target Identifier
See definition of *tid* in [“RTRV-IP-MAP: Retrieve TCP/IP map” \(12-110\)](#).
2. ctag – Correlation Tag
See definition of *ctag* in [“RTRV-IP-MAP: Retrieve TCP/IP map” \(12-110\)](#).

Spec block parameters

1. ip – IP address
See definition of *ip* in [“RTRV-IP-MAP: Retrieve TCP/IP map” \(12-110\)](#).
This parameter is mandatory.
2. acid – Application Context ID
See definition of *acid* in [“RTRV-IP-MAP: Retrieve TCP/IP map” \(12-110\)](#).
This parameter is optional. If the parameter is omitted the default value is used (new entry) or the existing value is left unchanged (existing entry).

ENT-IP-MAP: Enter TCP/IP map

Output format	If the ENT-IP-MAP request is successful, the following normal completion message shall be returned: <pre> sid date time M ctag COMPLD ; </pre> The output parameters <i>sid</i>, <i>date</i>, <i>time</i>, and <i>ctag</i> included in the normal completion response are specified in the Output Parameter section of “RTRV-HDR: Retrieve header” (5-8) .
Detailed behavior description	The command shall set the parameters as specified for the input spec_block parameters.
Example input/output	The following example shows the result of an ENT-IP-MAP command: <pre> ENT-IP-MAP:LT-UNITE::123456:::acid=TL1MEMORYADMINISTRATION, ip=198.78.46.8; LT-UNITE 00-11-01 08:00:00 M 123456 COMPLD ; </pre>
Error responses	Refer to the “RTRV-HDR: Retrieve header” (5-8) command Error responses section. The error responses listed there apply to the ENT-IP-MAP command. Validation rule: Check for correct IP configuration The adding of an entry to the IP map shall only be allowed if there is already a valid IP configuration (ip_ad - IP address of LAN, ip_snm - subnet mask of LAN) provisioned for at least one LAN port. Error code: SNVS - Status, Not in Valid State, incomplete IP configuration Validation rule: Check for duplicate entries The adding of an entry to the IP map shall not be allowed, if the IP address is already contained in one of the existing entries. Error Code: IDNV - Input, Data Not Valid, duplicate IP Map entry

ENT-IP-MAP: Enter TCP/IP map

Related TL1 messages

- [“RTRV-IP-MAP: Retrieve TCP/IP map” \(12-110\)](#)
- [“DLT-IP-MAP: Delete TCP/IP map” \(12-117\)](#)



ENT-IP-MAP Notification

Output format The ENT-IP-MAP command shall not generate a REPT DBCHG notification. This is due to a potential security hazard: any listening manager who receives this notification could otherwise fake its own IP address to get access to the T-TD.



DLT-IP-MAP: Delete TCP/IP map

The DLT-IP-MAP can be used to delete one entry in the TCP/IP application context ID map which was created via ENT-IP-MAP. The `tl1tcpipgw` parameter in the ED-NE command enables or disables the mapping feature.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S3
 Priority: 1
 Abortable: No.

Input format Command Syntax: **DLT-IP-MAP:***tid::ctag:::spec_block*;

Input Parameters

Command parameters

1. `tid` – Target Identifier
 See definition of *tid* in [“RTRV-IP-MAP: Retrieve TCP/IP map” \(12-110\)](#).
2. `ctag` – Correlation Tag
 See definition of *ctag* in [“RTRV-IP-MAP: Retrieve TCP/IP map” \(12-110\)](#).

Spec block Parameters

1. `ip` – IP address
 This parameter is optional. If it is omitted the mapping is not changed and a normal COMPLD message shall be returned.

Output format If the DLT-IP-MAP request is successful, the following normal completion message shall be returned:

```
sid date time
M ctag COMPLD
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#) .

DLT-IP-MAP: Delete TCP/IP map

Detailed behavior description

The command shall delete the mapping entry if the ip parameter was specified and could be found in the TCP/IP application context ID mapping.

Example input/output

The following example shows the result of an DLT-IP-MAP command:

```
DLT-IP-MAP:LT-UNITE::123456:::ip=198.78.46.8;  
    LT-UNITE 00-11-01 08:00:00  
M 123456 COMPLD  
;
```

Error responses

Refer to the RTRV-HDR command ERROR RESPONSES section. The error responses listed there apply to the DLT-IP-MAP command.

Validation rule: Check for known IP address

The removal of an entry from the IP map shall only be allowed if entries with the specified IP address are used within the IP map.

Error code: SNVS - Status, Not in Valid State, unknown IP address within MAP

Related TL1 Messages

- [“RTRV-IP-MAP: Retrieve TCP/IP map” \(12-110\)](#)
- [“ENT-IP-MAP: Enter TCP/IP map” \(12-113\)](#).



DLT-IP-MAP notification

Output format The DLT-IP-MAP command shall not generate a REPT DBCHG notification. This is due to a potential security hazard: any listening manager who receives this notification could otherwise fake its own IP address to get access to the T-TD.



MAPs

Overview

Purpose This section describes TL1 commands applicable to Maps.

Contents

RTRV-MAP-NEIGHBOR: Retrieve map neighbor	12-121
RTRV-MAP-NETWORK: Retrieve network map	12-126
RTRV-SCN-NEIGHBOR: Retrieve SCN neighbor	12-132

RTRV-MAP-NEIGHBOR: Retrieve map neighbor

The RTRV-MAP-NEIGHBOR command will retrieve a list of all immediate OSI neighbors to the local NE (node or NE). This can include other NEs, as well as neighbors on the LAN, such as the *WaveStar*® CIT.

A neighbor entry will not appear in the report for channels allocated to the SCN_node_AID.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
Priority: 1
Abortable: Yes.

Input format Command Syntax: RTRV-MAP-NEIGHBOR:*tid*::*ctag*;

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
Type: TID
2. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
Type: CTAG

Output format If the RTRV-MAP-NEIGHBOR request is successful, the following normal completion message is returned:

```

sid date time
M ctag COMPLD
  "[rate]:thru[,lpaid]:spec_block"
  ...
  "[rate]:thru[,lpaid]:spec_block"
;
```

Ordering of output lines: Output is sorted in ascending order first by *lpaid*.

RTRV-MAP-NEIGHBOR: Retrieve map
neighbor

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#) .

Output parameters

Command parameters

1. rate – DCC Port Rate

This parameter is only available for a DCC neighbor and provides the optical port rate as used in RTRV-*rr*.

Type: value set

Range:

- STM1
- STM4
- STM16
- STM64
- STM256
- OC3
- OC12
- OC48
- OC192
- OC768.

Default: n/a – as determined by the port type.

2. thru – Connected Through

This parameter specifies the type of connectivity between the NE and its neighbor.

Type: value set.

Range: DCC, LAN.

Default: n/a – as determined by the type of connection.

3. lpaid – Local Port AID

This parameter provides the SPortAID of the optical port in case thru=DCC or the LanPortAID in case thru=LAN.

Type: AID.

Range: SPortAID in case thru=DCC or LanPortAID in case thru=LAN as defined in section AID Structure.

RTRV-MAP-NEIGHBOR: Retrieve map
neighbor

Spec block parameters

1. nsap – Network Service Access Point
This field defines the ASAP of the neighbor.
Type: 20 byte octet string in 40 digit hex representation.
Range: The NSAP address/NET is composed of the following components:
 - l3idp (l3afi and l3idi)
 - l3dfi,
 - l3org,
 - l3res,
 - l3rd,
 - l3area,
 - l3sys,
 - l3se.lSee [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#) for details.
2. npaid – Neighbor Port AID
This parameter is only available for DCC neighbors and provides the port AID of the optical port of the OSI neighbor. (Peer of *lpaid*)
Since the neighbor NE might have a different AID structure it is interpreted as a string.
Type: AID string.
Range: up to 20 characters-
3. tid – Neighbor TID
This parameter is only available for DCC neighbors. It provides the TID value of the neighbor NE.
Type: TID
Range: Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for legal values and a general description of TIDs.
4. dcctype – DCC Type
This parameter is only available for DCC neighbors. It specifies whether the values displayed in the *spec_block* refer to the MS/LINE or RS/SECTION DCC.
Type: value set.

RTRV-MAP-NEIGHBOR: Retrieve map
neighbor

Range:

- SECTION
- LINE

Default: n/a – depends on DCC channel type for which *spec_block* parameters are reported.

Detailed behavior description

The command retrieves per NE information about all neighbors which are physically connected to the local NE via DCC or LAN and about details of the connection as specified in the output command and *spec_block* parameters.

If there is a link failure between the local NE and its neighboring NE, or if the DCC is disabled, the neighbor NE entry will not appear in the report.

The command will not retrieve the neighborhood between the internal osinodes of the NE. This is only relevant for the network level design and RTRV-MAP-NETWORK can be used for it.

A neighbor node entry shall not appear in the report for DCC channels allocated to the SCN_node_AID. A neighbor node entry shall not appear in the report for LANs allocated to the SCN_node_AID.

This command does not generate a REPT DBCHG notification.

Example input/output

The following example shows the result of a RTRV-MAP-NEIGHBOR command for an NE which has all DCCs (RS/MS) enabled for the port on an OP40 and the *WaveStar*® CIT LAN:

```
RTRV-MAP-NEIGHBOR:LT-UNITE::123456;
LT-UNITE 00-11-01 15:00:00
M 123456 COMPLD
"STM256:DCC,1-1-#-#-1-1:
nsap=39840F80000000000000000000000000a400,
npaid=1-1-#-#-1-1,tid=LT-UNITE2,dcctype=SECTION"
"STM256:DCC,1-1-#-#-1-1:
nsap=39840F80000000000000000000000000a400,
npaid=1-1-#-#-1-1,tid=LT-UNITE2,dcctype=LINE"
;
```

Error responses

Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-MAP-NEIGHBOR command.

RTRV-MAP-NEIGHBOR: Retrieve map
neighbor

Related TL1 messages

- [“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” \(12-74\)](#)
- [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#)
- [“RTRV-MAP-NETWORK: Retrieve network map” \(12-126\)](#)



RTRV-MAP-NETWORK: Retrieve network map

The RTRV-MAP-NETWORK command will retrieve a list of OSI nodes, reachable from the local NE (NE). This can include other NEs, other nodes on the local NE, as well as neighbors on the LAN, such as the *WaveStar*® CIT.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
 Priority: 1
 Abortable: Yes.

Input format Command Syntax: RTRV-MAP-NETWORK:*tid:aid:ctag[:level2]*;

Input parameters

Command parameters

1. *tid* – Target Identifier
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
 Type: TID.
2. *aid* – Access Identifier
 This parameter specifies the osinode for which the OSI nodes is retrieved. The value *osinodeall* is not allowed.
 Type: AID.
 Range: OSI_node_AID | SCN_node_AID. The value *osinodeall* is not allowed.
3. *ctag* – Correlation Tag
 Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
 Type: CTAG.
4. *level2* – IS Routing Level
 If set to N(o), report will list only the nodes in the local level 1 area of this node.
 If set to Y(es), report will list the nodes in the level 2 sub-domain (when *aid* specifies a level 2 node).

RTRV-MAP-NETWORK: Retrieve network

map

Note: For nodes where level 2 routing is not supported, the output will be empty when *level2*=Y.

Note: The previous note implies that level2 shall be set to N, if info for osinode=scnnode is requested.

Type: value set.

Range:

- N (default)
- Y.

Output format If the RTRV-MAP-NETWORK request is successful, the following normal completion message is returned:

```
sid date time
M ctag COMPLD
"spec_block"
...
"spec_block"
;
```

The output parameters *sid*, *date*, *time*, and *ctag* included in the normal completion response are specified in the Output Parameter section of [“RTRV-HDR: Retrieve header” \(5-8\)](#).

Output parameters**Spec block parameters**

1. level1 – Level 1 Router
This parameter specifies whether reachable node is level 1 router.
Type: value set
Range:
 - Y (es)
 - N (o).
2. level2 – Level 2 Router
This parameter specifies whether reachable node is level 2 router.
Type: value set
Range:
 - Y (es)
 - N (o).

RTRV-MAP-NETWORK: Retrieve network
map

3. ip_ad1 - IP Address 1

This parameter shall be used to retrieve the IPv4 address of a reachable SCN node or LAN interface in the network map. This output parameter is only available when input aid is of type SCN_node_AID.

Note: The IP address can be a host address or one of up to two LAN interfaces addresses. There is no order or semantics (i.e. whether IP address belongs to SCN node or LAN interface) specified for ip_ad1, ip_ad2, ip_ad3.

Type: Four dot separated numeric strings or empty string.

Range: Each numeric string: 0 .. 255 or empty string.

Note: The empty string is reported when the IP address can not be retrieved. In output direction it is represented as \"\".

4. ip_ad2 – IP Address 2

This parameter is used to retrieve the IPv4 address of a reachable SCN node or LAN interface in the network map. This output parameter is only available when input aid is of type SCN_node_AID.

Note: The IP address can be a host address or one of up to two LAN interfaces addresses. There is no order or semantics (i.e. whether IP address belongs to SCN node or LAN interface) specified for ip_ad1, ip_ad2, ip_ad3.

Type: Four dot separated numeric strings or empty string.

Range: Each numeric string: 0 .. 255 or empty string.

Note: The empty string is reported when the IP address can not be retrieved. In output direction it is represented as \"\".

5. ip_ad3 – IP Address 3

This parameter is used to retrieve the IPv4 address of a reachable SCN node or LAN interface in the network map. This output parameter is only available when input aid is of type SCN_node_AID.

Note: The IP address can be a host address or one of up to two LAN interfaces addresses. There is no order or semantics (i.e. whether IP address belongs to SCN node or LAN interface) specified for ip_ad1, ip_ad2, ip_ad3.

Type: Four dot separated numeric strings or empty string.

Range: Each numeric string: 0 .. 255 or empty string.

Note: The empty string is reported when the IP address can not be retrieved. In output direction it is represented as \"\".

RTRV-MAP-NETWORK: Retrieve network

map

6. ip_sid – SID

This parameter shall be used to display the SID of a reachable SCN node in the network map. This output parameter is only available when input aid is of type SCN_node_AID.

Note: Since the SID (MAC address) is unique it might be used to detect misconfigurations of duplicate IP addresses.

Type: hexadecimal number.

Range: 000000000000 - FFFFFFFF.

7. net – Network Entity Title

This field is the Network Entity Title (NET) of one reachable OSI node. The NET is the same as the NSAP with the last byte set to 00 (hex).

This output parameter is only available when input aid is of type OSI_node_AID.

Type: 20 byte octet string in 40 digit hex representation.

Range: The NET is composed of the following components:

- l3idp (l3afi and l3idi)
- l3dfi,
- l3org,
- l3res,
- l3rd,
- l3area,
- l3sys,
- l3sel = 00 (hex).

See [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#) for details.

8. tid – Target Identifier

This parameter specifies the TID of the local NE is only reported for entries of the local NE.

Type: TID

Range: Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for legal values and a general description of TIDs.

Detailed behavior description

The RTRV-MAP-NETWORK command retrieves per node a list of OSI or SCN nodes (depending on the input aid), reachable from the local network element (NE) via the OSI or SCN stack(s). This can include other network elements, other nodes of the local NE, as well as other systems on the LAN, such as the . WaveStar® CIT.

RTRV-MAP-NETWORK: Retrieve network

map

In contrast to RTRV-MAP-NEIGHBOR or RTRV-SCN-NEIGHBOR, which retrieve info about physical neighbors and properties of the physical connection, this command shall retrieve info with respect to (I)IS-IS routing.

If the node specified by aid is provisioned as level 2 and level2=Y, the report shall list the level 2 nodes across the level 2 subdomain and the nodes in the local level 1 area of the selected node. The output parameters level1 and level2 contain the correct level 1, 2 indication.

If level2=N, the report shall list only the nodes in the local level 1 area of the selected node (including the default level 2 node and other level 2 nodes in the local level 1 area). The output parameters level1 and level2 are meaningless.

The local OSI system is also listed in the report.

This command does not generate a REPT DBCHG notification.

Example input/output

The following example shows the result of a RTRV-MAP-NETWORK command for an input aid of type OSI_node_AID:

```
RTRV-MAP-NETWORK:LT-UNITE:osinode1:123456;
    LT-UNITE 00-11-01 15:00:00
M 123456 COMPLD
    "tid=LT-UNITE,
    net=39840F80000000000000000000000000aa00,
    level1=Y,level2=Y"
    "net=39840F80000000000000000000000000a100,1
    level1=Y,level2=Y"
    "net=39840F80000000000000000000000000a200,
    level1=Y,level2=Y"
    "net=39840F80000000000000000000000000a500,
    level1=Y,level2=Y"
    "net=39840F80000000000000000000000000a600,
    level1=Y,level2=Y"
    "net=39840F80000000000000000000000000a700,
    level1=Y,level2=Y"
    "net=39840F800000000000000000010000000000a800,
    level1=Y,level2=N"
;
```

The following example shows the result of a RTRV-MAP-NETWORK command for an input aid of type SCN_node_AID:

RTRV-MAP-NETWORK: Retrieve network

map

```

RTRV-MAP-NETWORK:LT-UNITE:scnnode:123456;
  LT-UNITE 00-11-01 15:00:00
M 123456 COMPLD
  "tid=LT-UNITE,ip_ad1=192.168.200.1,ip_sid=123456789012,
  level1=Y,level2=N"
  "ip_ad1=192.168.200.8,ip_ad2=\"\",ip_ad3=\"\",
  ip_sid=123456789012,level1=Y,level2=N"
  "ip_ad1=192.168.200.17,ip_ad2=\"\",ip_ad3=\"\",
  ip_sid=123456789123,level1=Y,level2=N"
  "ip_ad1=192.168.200.23,ip_ad2=192.168.200.26,
  ip_ad3=192.168.200.29,ip_sid=123456789576,level1=Y,
  level2=N"
;

```

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-MAP-NETWORK command.

Validation rule: osinode must be in the created state

The osinode parameter for which the network map should be retrieved must be in the created state, i.e. the value must be either osinode1 or the node must be successfully created via ENT-ULSDCC-L3.

Error code: SNVS - Status, Not in Valid State, osinode not in created state

Validation rule: level2 parameter must not be present when osinode=scnnode

If the osinode parameter for which the network map should be retrieved is the *scnnode* the input parameter level2 is not allowed.

Error Code: IDNC- Input, Data Not Consistent, level2 not allowed for scnnode

Related TL1 messages

- [“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” \(12-74\)](#)
- [“RTRV-ULSDCC-L3: Retrieve layer 3 related parameters” \(12-61\)](#)
- [“RTRV-MAP-NEIGHBOR: Retrieve map neighbor” \(12-121\)](#)
- [“RTRV-SCN-NEIGHBOR: Retrieve SCN neighbor” \(12-132\)](#)



RTRV-SCN-NEIGHBOR: Retrieve SCN neighbor

The RTRV-SCN-NEIGHBOR command retrieves entries from the routing table of the SCN stack.

Note that the information on neighbors given in the RTRV-SCN-NEIGHBOR command is related to the SCN, i.e. to the control plane of ONNS, whereas the neighbor information given in the RTRV-rr commands relates to the transmission plane of ONNS. In general the information given in RTRV-SCN-NEIGHBOR includes DCC and (ISIS) LAN neighbors which are assigned to the SCN.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): S1
Priority: 1
Abortable: Yes.

Input format Command Syntax: RTRV-SCN-NEIGHBOR:*tid::ctag::;*

Input parameters

Command parameters

1. tid – Target Identifier
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
Type: TID.
2. ctag – Correlation Tag
Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command for the input parameter syntax and description of this parameter.
Type: CTAG.

Output format If the RTRV-SCN-NEIGHBOR request is successful, the following normal completion message shall be returned:

```
sid date time
M ctag COMPLD
"[rate]:thru[,lpaid]:spec_block"
...
"[rate]:thru[,lpaid]:spec_block"
;
```

RTRV-SCN-NEIGHBOR: Retrieve SCN
neighbor

Output parameters

Command parameters

1. rate – DCC Port Rate

This parameter is only available for an SCN neighbor on DCC and provides the port rate as used in RTRV-rr.

Type: value set.

Range:

- STM1
- STM1E
- STM4
- STM16
- STM64
- STM256
- OC3
- OC12
- OC48
- OC192
- OC768

Default: n/a – as determined by the port type.

2. thru – Connected Through

The type of connectivity between the NE and its SCN neighbor.

Type: value set

Range: DCC, LAN.

Default: n/a – as determined by the type of connection.

3. lpaid – Local Port AID

This parameter provides the SPortAID of the optical port in case thru=DCC or the LanPortAID in case thru=LAN.

Type: AID

Range: SPortAID in case thru=DCC or LanPortAID in case thru=LAN as defined in section AID Structure.

Note: Since LAN1 can not be assigned to the SCN it will never appear in the output.

RTRV-SCN-NEIGHBOR: Retrieve SCN
neighbor

Spec block parameters

1. dcctype
This parameter specifies, whether MS(LINE)-DCC or RS(SECTION)-DCC is used for IP communication with the neighbor. This parameter is only available when thru=DCC.
Type: alphanumeric value set
Range: SECTION, LINE
2. neighbor_ip – Neighbor IP Address
This parameter shall be used to retrieve the IPv4 address of the LAN or DCC neighbor.
Type: Four dot separated numeric strings or empty string.
Range: Each numeric string: 0 .. 255 or empty string.
Note: The empty string is shown when the IP address can not be retrieved. In output direction the empty string is represented as \".
3. neighbor_sid – Neighbor SID
This parameter shall be used to display the SID of the neighbor.
Note: Since the SID (MAC address) is unique it might be used to detect misconfigurations of duplicate IP addresses.
Type: hexadecimal number.
Range: 000000000000 - FFFFFFFF.

Detailed behavior description

The command shall retrieve the *spec_block* parameters as described in the Output parameter section.

Behaviour if no neighbors present

An empty spec block shall be returned, if no neighbors are present.

Example input/output

The following example shows the result of a RTRV-SCN-NEIGHBOR command:

```
RTRV-SCN-NEIGHBOR:LT-UNITE::123456::;
LT-UNITE 00-11-01 08:00:00
M 123456 COMPLD
"0C48:DCC,1-1-#-#-1-1:dcctype=LINE,neighbor_
ip=192.168.200.1,neighbor_sid=123456789012"
...
":LAN,lan2: neighbor_ip=192.168.200.4,neighbor_
sid=123456789024"
;
```

RTRV-SCN-NEIGHBOR: Retrieve SCN
neighbor

Error responses Refer to the [“RTRV-HDR: Retrieve header” \(5-8\)](#) command Error responses section. The error responses listed there apply to the RTRV-SCN-NEIGHBOR command.





13 Error codes

Overview

Purpose The following table lists the error codes.



List of error codes

Errorcode	Meaning (validation rule)	Related to command ...
EATN - Status, incorrect equipage, unrecognized CP for this slot	check whether CP is acceptable	“ENT-EQPT (slot): Enter equipment (slot)” (5-100) , “ED-EQPT (slot): Edit equipment (slot)” (5-109)
	check exchangeability rules for XC-packs	“ED-EQPT (slot): Edit equipment (slot)” (5-109)
	check exchangeability rules for optical packs	
EATN - Status, incorrect equipage, unrecognized module for this socket	check whether module is acceptable	“ENT-EQPT (Socket): Enter equipment” (5-143) , “ED-EQPT (Socket): Edit equipment” (5-147)
	check exchangeability rules for optical modules	“ED-EQPT (Socket): Edit equipment” (5-147)
ENEQ - Equipage, Not Equipped, insufficient file space	insufficient file space	“CPY-MEM: Copy memory” (11-20)
ENEQ - Equipage, Not Equiped osinode	validation rule for parameter osinode	“ENT-FECOM-LAN: Enter LAN related parameters” (12-50) , “ENT-FECOM: Enter DCC channel related parameters” (12-18)
ENSG - Equipage, Not Software Generic, generic not available	generic not available	“APPLY: Apply software generic” (11-42) , “CPY-MEM: Copy memory” (11-20)
ICNV - Input, Command Not Valid, file must be specified	directory/URL not specified	“CPY-MEM: Copy memory” (11-20)
ICNV - Input, Command Not Valid, inmbst not NA	correct state of tributary for being added (source)	“ED-VCGTRIB: Edit virtual concatenation group tributary” (7-224)

Errorcode	Meaning (validation rule)	Related to command ...
ICNV - Input, Command Not Valid, Interface Standard does not match	check CCB against <i>ptype</i> and <i>istd</i>	“RTRV-STM1E: Retrieve STM1E port” (5-192) , “ED-STM1E: Edit STM1E port” (5-285) , “RTRV-STM1: Retrieve STM1 port” (5-199) , “RTRV-STM4: Retrieve STM4 port” (5-206) , “RTRV-STM16: Retrieve STM16 port” (5-214) , “RTRV-STM64: Retrieve STM64 port” (5-228) , “RTRV-STM256: Retrieve STM256 port” (5-237) , “RTRV-OC3: Retrieve OC3 port” (5-243) , “RTRV-OC12: Retrieve OC12 port” (5-250) , “RTRV-OC48: Retrieve OC48 port” (5-257) , “RTRV-OC192: Retrieve OC192 port” (5-267) , “RTRV-OC768: Retrieve OC768 port” (5-275) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
	check CCB against istd	“RTRV-VC3: Retrieve VC3 tributary” (5-562)
	check CCB against istd of related VCG	“RTRV-VCGTRIB: Retrieve virtual concatenation group tributary” (7-207)
ICNV - Input, Command Not Valid, outmbst not NA	correct state of tributary for being added (Sink)	“ED-VCGTRIB: Edit virtual concatenation group tributary” (7-224)

Errorcode	Meaning (validation rule)	Related to command ...
ICNV - Input, Command Not Valid, Protocol Failure in Receive Direction	LCAS failure of protocol present in sink direction	“ED-VCGTRIB: Edit virtual concatenation group tributary” (7-224)
ICNV - Input, Command Not Valid, Protocol Failure in Transmit Direction	LCAS failure of protocol present in source direction	
ICNV - Input, Command Not Valid, session already established	login on established session	“ACT-USER: Activate user” (4-4)
IDNC - Input, Data Not Consistent	disabling of superusers	“ED-USER-SECU: Edit user security” (4-40)
	l4ajsys must be supplied	“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks ” (12-91)
	Can't enable lanstat when ip_lanstat and osi_lanstat are disabled	“ENT-FECOM-LAN: Enter LAN related parameters” (12-50)
	Can't enable ip_lanstat and/or osi_lanstat when lanstat is disabled	
	Can't assign same IP address to several LANs	
IDNC - Input Data Not Consistent, 2f-BSLR: rate exceeds half of the port rate	rate must not exceed half of the port rate (2f-BSLR only)	“ENT-CRS: Enter cross-connection” (7-25)

Errorcode	Meaning (validation rule)	Related to command ...
IDNC - Input, Data Not Consistent, a new trace value must also be supplied for a trace format change	supply of outgoing J0 trace	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
IDNC - Input, Data, Not Consistent, a new trc must also be supplied for a path trace mode change	supply of transmitted path trace	“ED-VCGTRIB: Edit virtual concatenation group tributary” (7-224)
IDNC - Input Data Not Consistent, Bridging rate is not compliant with exisisting leg	both legs must have same rate	“ENT-CRS: Enter cross-connection” (7-25) , “CNVT-CCT: Convert cross-connection topology” (7-72)
IDNC - Input, Data Not Consistent, Corresponding loca/locz information is missing	Corresponding loca/locz information is missing	“ENT-CRS: Enter cross-connection” (7-25)
IDNC - Input Data Not Consistent, cross-connection-existence not consistent with cmdmde-value	cmdmde matches cross-connection non-/existence	“OPR-LPBK (here cross-connection loopback)” (7-93)
IDNC - Input, Data, Not Consistent, default profile	pfname is default	“DLT-ASAP-PROF: Delete alarm severity assignment profile” (6-26)
	deleting the system default profile	“DLT-TCA-PROF: Delete TCA Profile” (9-119)

Errorcode	Meaning (validation rule)	Related to command ...
IDNC-Input, Data, Not Consistent, Default VLAN ID is already assigned for this System	default VLAN ID is already assigned for this system	“ED-EPORT: Edit Ethernet port” (7-168)
IDNC-Input, Data, Not Consistent, Default VLAN ID is not an allowed member of valid VLAN list	default VLAN ID is no allowed member of valid VLAN list	
IDNC - Input Data Not Consistent, in_aid or ppgname needed	in_aid or ppgname existence	“RTRV-CRS: Retrieve cross-connection” (7-6)
IDNC - Input Data Not Consistent, inconsistent ASAP parameter	inconsistent severity level	“ED-ASAP-PROF: Edit alarm severity assignment profile” (6-20)
IDNC - Input Data Not Consistent, Inconsistent loopback type w.r.t. aid	valid loopback type	“OPR-LPBK (here cross-connection loopback)” (7-93)
IDNC - Input, Data Not Consistent, It is not allowed to specify loca/locz for EXTRA TRAFFIC	loca/locz information only retrievable for EXTRA TRAFFIC	“ENT-CRS: Enter cross-connection” (7-25)
IDNC- Input, Data Not Consistent, level2 not allowed for scnnode	level2 parameter must not be present when <i>osinode</i> =scnnode	“RTRV-MAP-NETWORK: Retrieve network map” (12-126)
IDNC - Input Data Not Consistent, modifier is inconsistent with existing interface standard	modifier consistent with given port's interface standard	“RTRV-LPBK: Retrieve loopback (here facility loopback)” (7-106) , “OPR-LPBK: Operate loopback (here facility loopback)” (7-111) , “RLS-LPBK: Release loopback (here facility loopback)” (7-118)
IDNC - Input Data Not Consistent, modifier is inconsistent with existing port rate	modifier consistent with given port-rate	

Errorcode	Meaning (validation rule)	Related to command ...
IDNC - Input, Data, Not Consistent, MSP 1+1_Optimized is always non-revertive	MSP type 1+1_optimized is never revertive	“ENT-PROTN-GRP: Enter protection group” (8-56) , “ED-PROTN-GRP: Edit protection group” (8-80)
IDNC - Input, Data, Not Consistent, MSP 1+1_optimized not supported for SONET mode	No MSP 1+1 optimized protection for SONET	
IDNC - Input, Data, Not Consistent, MSP Protection Type 1x1 is always revertive	MSP type 1:1 is never non-revertive	
IDNC - Input Data Not Consistent, new name for default profile	rename of default ASAP	“ED-ASAP-PROF: Edit alarm severity assignment profile” (6-20)
	rename default profile name	“ED-TCA-PROF: Edit TCA profile” (9-81)
IDNC - Input, Data, Not Consistent, no allowed topology conversion	Topology conversion command must be consistent	“CNVT-CCT: Convert cross-connection topology” (7-72)
IDNC - Input, Data, Not Consistent, No MSP protection supported for SONET mode	No MSP 1:1 protection for SONET	, “ED-PROTN-GRP: Edit protection group” (8-80)
IDNC - Input Data Not Consistent, not own uid	not the own uid specified	“CANC-USER: Cancel user” (4-11)
IDNC - Input, Data Not Consistent, only dccstat or scn_dccstat allowed	single occurrence of dccstat or scn_dccstat parameter	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
IDNC - Input, Data, Not Consistent, Optimized exists only with 1+1 Protection Type	only MSP 1+1 can be optimized	“ENT-PROTN-GRP: Enter protection group” (8-56)
IDNC - Input, Data Not Consistent, port_aid1 and port_aid2 not different	different Port AIDs	“ENT-CRS-FECOM: Enter transparent DCC cross-connection” (12-36)

Errorcode	Meaning (validation rule)	Related to command ...
IDNC - Input, Data, Not Consistent, protection mode supported for 4F applications only	TOPEX and SHORTENED applicable with prototype=4F only	“ENT-PROTN-GRP: Enter protection group” (8-56)
IDNC - Input Data Not Consistent, Rate is inconsistent with existing cross-connection	valid rate	“DLT-CRS: Delete cross-connection” (7-56) , “OPR-LPBK (here cross-connection loopback)” (7-93) , “RLS-LPBK: Release loopback (here cross-connection loopback)” (7-101) , “CNVT-CCT: Convert cross-connection topology” (7-72)
IDNC - Input, Data, Not Consistent, revertive mode not supported for MSP Protection Type 1+1 unidirectional	MSP type 1+1 unidirectional and revertive is not supported	“ENT-PROTN-GRP: Enter protection group” (8-56) , “ED-PROTN-GRP: Edit protection group” (8-80)
IDNC - Input Data Not Consistent, SNC Type not compliant with existing path-protected cross-connection	SNC type compliance	“ENT-CRS: Enter cross-connection” (7-25) , “CNVT-CCT: Convert cross-connection topology” (7-72)
IDNC - Input Data Not Consistent, Specified Tributary does not support the indicated rate	rate consistency for VCG tributaries	“ENT-CRS: Enter cross-connection” (7-25)
	tributary provisioning and rate consistency	“ENT-CRS: Enter cross-connection” (7-25) , “OPR-LPBK (here cross-connection loopback)” (7-93)
IDNC - Input, Data, Not Consistent, Specified new Tributary does not support the indicated rate	New Tributary rate validity	“CNVT-CCT: Convert cross-connection topology” (7-72)

Errorcode	Meaning (validation rule)	Related to command ...
IDNC - Input, Data, Not Consistent, strcout length must match the given outgoing J0 trace mode.	transmitted path trace length	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
IDNC - Input, Data, Not Consistent, This MSP protection type not supported for a port with the indicated rate	No MSP 1:1 protection for bitrate STM-256	“ENT-PROTN-GRP: Enter protection group” (8-56)
	No MSP 1+1 bidirectional and non-revertive on other than STM-64	“ENT-PROTN-GRP: Enter protection group” (8-56)
IDNC - Input, Data, Not Consistent, TOP supported only for 4F applications only	TOP applicable with prototype=4F only	“ED-PROTN-GRP: Edit protection group” (8-80)
IDNC - Input, Data, Not Consistent, trc length must match the given path trace mode	transmitted path trace length	“ED-VCGTRIB: Edit virtual concatenation group tributary” (7-224)
IDNC - Input Data Not Consistent, Tributary boundary is inconsistent with the indicated rate	AID boundary and rate consistency	“ENT-CRS: Enter cross-connection” (7-25) , “OPR-LPBK (here cross-connection loopback)” (7-93) ,
IDNC - Input Data Not Consistent, tributary occupation not consistent with portcontrol value	portcontrol matches tributary occupied by NN	“OPR-LPBK (here cross-connection loopback)” (7-93)

Errorcode	Meaning (validation rule)	Related to command ...
IDNC - Input, Data Not Consistent, value change not allowed for profile Default0	Value change of default profile Default0	“ED-TCA-PROF: Edit TCA profile” (9-81)
IDNC - Input Data Not Consistent, VGC-trib as input-trib in path-protected cross-connection	no VCG-trib as in_aid (for path-protected cross-connection)	“ENT-CRS: Enter cross-connection” (7-25) , “CNVT-CCT: Convert cross-connection topology” (7-72)
IDNV - Input, Data Not Valid	input parameters not specified	“CPY-MEM: Copy memory” (11-20)
	invalid uid/or pid	“ACT-USER: Activate user” (4-4)
	disabled user ID	
	expired password and unsuccessful change of password	
	presence of spec_block parameter	“ED-CRS: Edit Cross-connection” (7-46)
IDNV - Input, Data Not Valid, additional parameter required	additional parameters required when setting <i>ndetmd</i> to MAN	“ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) ,
IDNV - Input, Data Not Valid, additional parameters neighborNodeID and neighborPortID required		“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)

Errorcode	Meaning (validation rule)	Related to command ...
IDNV - Input, Data Not Valid, AIS mode not valid	output type not supported for AIS mode	“SET-SYNCN: Set synchronization” (10-19)
IDNV - Input, Data Not Valid, ASAP profile does not exist	check for ASAP profile existence	“ED-EQPT (shelf): Edit equipment (shelf)” (5-89) , “ED-EQPT (slot): Edit equipment (slot)” (5-109) , “ED-EQPT (Socket): Edit equipment” (5-147) (
	pfname does not exist	“SET-ATTR-ENV: Set attribute environment” (6-68)
	validate ASAP profile	“ED-EQPT (CP): Edit equipment (circuit pack)” (5-177)
	ASAP profile exists	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541) , “ED-VC3: Edit VC3 tributary” (5-579) , “ED-ST51: Edit ST51 tributary” (5-585) , “ED-EPORT: Edit Ethernet port” (7-168) , “ED-VCG: Edit virtual concatenation group” (7-193) , “ED-VCGTRIB: Edit virtual concatenation group tributary” (7-224)

Errorcode	Meaning (validation rule)	Related to command ...
IDNV - Input, Data Not Valid, Assigned bandwidth exceeds half port's bandwidth	enough bandwidth reserved for 2F protection group	“ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
IDNV - Input, Data Not Valid. Attempting to delete an administrator login. Two administrator user logins are required at all times	attempt to delete administrator's uid	“DLT-USER-SECU: Delete user security” (4-55)
IDNV - Input Data Not Valid, Both input tributaries are identical	path-protected cross-connection has unique input AIDs	“ENT-CRS: Enter cross-connection” (7-25) , “CNVT-CCT: Convert cross-connection topology” (7-72)
IDNV - Input, Data Not Valid, cable equalization not supported	cable equalization not supported	“SET-SYCN: Set synchronization” (10-19)
IDNV - Input Data not Valid, can't change l3domain for osinode1	l3domain can not be changed for osinode1	“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” (12-74)
IDNV - Input Data not Valid, constraint l3radesnode	l3radesnode value and l3isisnl Value	“ENT-ULSDCC-L3: Create a further OSI node” (12-67) , “ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” (12-74)

Errorcode	Meaning (validation rule)	Related to command ...
IDNV - Input, Data Not Valid, duplicate neighbor port information	No setting of duplicate neighborASTNNodeIDand neighborPortIDparameter combination	“ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) “ED-OC768: Edit OC768 port” (5-541)
IDNC - Input, Data Not Consistent, It is not allowed to specify loca/locz for EXTRA TRAFFIC	loca/locz information only retrievable for EXTRA TRAFFIC	“ED-CRS: Edit Cross-connection” (7-46)
IDNV - Input, Data Not Valid, profile name does not exist	profile name does not exist	“ED-TCA-PROF: Edit TCA profile” (9-81) , “DLT-TCA-PROF: Delete TCA Profile” (9-119)
IDNV - Input, Data Not Valid, profile name does not exist	profile name does not exist	“RTRV-TCA-PROF: Retrieve TCA Profile” (9-25)
IDNV - Input, Data Not Valid, profile type does not exist	profile type does not exist	“ENT-TCA-PROF: Enter TCA Profile” (9-60)
IDNV - Input, Data Not Valid, default profiles cannot be deleted	deleting the system default profile	“DLT-TCA-PROF: Delete TCA Profile” (9-119)
IDNV - Input, Data Not Valid, discrepancy between entered values and current value of spec-block parameters	ohbyte and intfctype values correct (when dis-associating)	“SET-OW: Set Orderwire and User Bytes” (7-128)
IDNV - Input, Data Not Valid, duplicate IP Map entry.	Check for duplicate entries	“ENT-IP-MAP: Enter TCP/IP map” (12-113)

Errorcode	Meaning (validation rule)	Related to command ...
IDNV - Input, Data Not Valid, duplicate UID	entering user's own or existing uid	“ENT-USER-SECU: Enter user security” (4-33)
	newuid has the same value of an existing uid	“ED-USER-SECU: Edit user security” (4-40)
IDNV - Input, Data Not Valid, E and F tributaries not cross-connected	E tributary and F tributary not cross-connected	“CONN-TACC: Connect test access” (7-246)
IDNV - Input Data not Valid, equal l3domain	l3domain value must be different for current node and l3radesnode1	“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” (12-74)
IDNV - Input Data not Valid, equal node IDs	l3radesnode value must be different from osinode	“ENT-ULSDCC-L3: Create a further OSI node” (12-67), “ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” (12-74)
IDNV - Input, Data Not Valid, forced DUS not supported for this format	format not supported for forced DNU/DUS	“SET-SYNCR: Set synchronization” (10-19)
IDNV - Input, Data Not Valid, incompatible <i>screen</i> , <i>uidclass</i> parameters	compatibility screen, uidclass parameter	“ENT-USER-SECU: Enter user security” (4-33)
IDNV - Input, Data Not Valid, incomplete switch command	complete switch command	“OPR-PROTNSW: Operate protection switch” (8-109)
IDNV - Input, Data Not Valid, inconsistent <i>aid</i> and <i>monlev</i>	aid range and monlev	“RTRV-PM: Retrieve performance monitoring” (9-7),
IDNV - Input, Data Not Valid, inconsistent aid and prototype	consistent aid and prototype	“RTRV-PROTN-GRP: Retrieve protection group” (8-13), “OPR-PROTNSW: Operate protection switch” (8-109), “RLS-PROTNSW: Release protection switch” (8-125)

Errorcode	Meaning (validation rule)	Related to command ...
IDNV - Input, Data Not Valid, inconsistent aid and rid	consistent aid and rid	“RTRV-PROTN-GRP: Retrieve protection group” (8-13) , “OPR-PROTNSW: Operate protection switch” (8-109) , “RLS-PROTNSW: Release protection switch” (8-125) , “ED-PROTN-GRP: Edit protection group” (8-80) , “DLT-PROTN-GRP: Delete protection group” (8-97)
IDNV - Input Data not Valid, inconsistency l3domain with l3radesnode	consistency l3domain with l3radesnode for nodes 2 to 8	“ENT-ULSDCC-L3: Create a further OSI node” (12-67) , “ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” (12-74)
IDNV - Input, Data Not Valid, incorrect date/time format	incorrect date/time format	“ED-DAT: Edit date and time” (5-70)
IDNV - Input, Data Not Valid, incorrect new_pid	missing or invalid or syntactically incorrect new_pid	“ED-PID: Edit password identifier” (4-50)
IDNV - Input, Data Not Valid, Interface type not settable for specified UserByte-Port	interface type compliant with port	“SET-OW: Set Orderwire and User Bytes” (7-128)
IDNV - Input Data Not Valid, invalid <i>atagseg</i>	valid atagseg	“RTRV-AO: Retrieve Autonomous Output” (5-56)
IDNV - Input Data Not Valid, Invalid loopback for EPort	for GE (EPort) only far-side loopback allowed	“OPR-LPBK: Operate loopback (here facility loopback)” (7-111)
IDNV - Input, Data Not Valid, invalid profile type or name	invalid profile type or name	“ENT-TCA-PROF: Enter TCA Profile” (9-60) , “ED-TCA-PROF: Edit TCA profile” (9-81) , “DLT-TCA-PROF: Delete TCA Profile” (9-119)
IDNV - Input, Data Not Valid, invalid sc	invalid switch command	“OPR-SYNCNSW: Operate synchronization switch ” (10-31)

Errorcode	Meaning (validation rule)	Related to command ...
IDNV - Input, Data Not Valid, invalid switch command	supported switch command	“OPR-PROTNSW: Operate protection switch” (8-109)
IDNV - Input, Data Not Valid, invalid test access mode	MONF or MONEF test access mode not allowed on a 1WAY cross-connection from E to F tributary	“CONN-TACC: Connect test access” (7-246)
IDNV - Input, Data Not Valid, invalid UID	invalid uid	“ED-USER-SECU: Edit user security” (4-40) , “DLT-USER-SECU: Delete user security” (4-55) , “RTRV-USER-SECU: Retrieve user security” (4-24)
IDNV - Input, Data Not Valid, invalid UPC	invalid upc	“ED-USER-SECU: Edit user security” (4-40) , “ENT-USER-SECU: Enter user security” (4-33)
IDNV - Input Data not Valid, l3prefix and l3radesnode inconsistent	consistency of l3radesnode with l3raprefix	“ENT-ULSDCC-L3: Create a further OSI node” (12-67) , “ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” (12-74)
IDNV - Input, Data Not Valid, l4ajsys/osinode not unique	l4ajsys per osinode must be different	“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks ” (12-91)
IDNV - Input, Data Not Valid, missing F tributary	Missing F tributary	“CONN-TACC: Connect test access” (7-246)
IDNV - Input, Data Not Valid, newuid for non superuser	newuid defined for non superuser uid	“ED-USER-SECU: Edit user security” (4-40)
IDNV - Input, Data Not Valid, no aid range in combination with rid	aid range and rid	“RTRV-PROTN-GRP: Retrieve protection group” (8-13)
IDNV - Input, Data Not Valid, no regen loop with SETG as timing output	regenerator loops with SETG as timing output	“SET-SYNCN: Set synchronization” (10-19)

Errorcode	Meaning (validation rule)	Related to command ...
IDNV - Input, Data Not Valid, not possible for NNI port to assign both channels to MCN.	prevent that both DCCs of a port are assigned to the MCN, when portClass = INNI	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
IDNV - Input, Data Not Valid, not possible to assign both channels to SCN	prevent that both DCCs of a port are assigned to the SCN	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
IDNV - Input Data not Valid, NSAP Area Address matches with RA-Prefix	Address Area Value – RA-Prefix Value	“ENT-ULSDCC-L3: Create a further OSI node” (12-67) , “ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” (12-74)
IDNV - Input Data not Valid, only a single node in separate domain supported	only one single node in a separate domain supported	“ENT-ULSDCC-L3: Create a further OSI node” (12-67) , “ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” (12-74)
IDNV - Input Data not Valid, osinode cannot be changed for LAN1	only osinode1 for LAN 1	“ENT-FECOM-LAN: Enter LAN related parameters” (12-50)
IDNV - Input RA-Prefix matches with the NSAP Area Address	RA-Prefix Value – Address Area Value	“ENT-ULSDCC-L3: Create a further OSI node” (12-67) , “ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” (12-74)
IDNV - Input, Data Not Valid, parameter not required	parameter not supported for modifier	“OPR-SYNCNSW: Operate synchronization switch ” (10-31)
IDNV - Input, Data Not Valid, Parameter not supported	change of FEC parameters only if supported by the current circuit pack	“ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
	enabling of optical channel only if supported by the current circuit pack	

Errorcode	Meaning (validation rule)	Related to command ...
IDNV - Input Data Not Valid, Parameter(s) out of allowed value range	all parameter are specified with allowed values	“ENT-CRS: Enter cross-connection” (7-25)
IDNV - Input Data Not Valid, Parameter(s) present which are not allowed	only those parameter present which are needed	
IDNV - Input, Data Not Valid, profile name already exists for the type	profile name already exists	“ED-TCA-PROF: Edit TCA profile” (9-81)
IDNV - Input, Data Not Valid, profile name already exists for this profile type	TCA profile already exist	“ENT-TCA-PROF: Enter TCA Profile” (9-60)
IDNV - Input, Data Not Valid, profile name does not exist	profile name does not exist	“DLT-TCA-PROF: Delete TCA Profile” (9-119)
IDNV - Input, Data Not Valid, profile name does not exist	profile name does not exist	“RTRV-TCA-PROF: Retrieve TCA Profile” (9-25)
IDNV - Input, Data Not Valid, profile type does not exist	profile type does not exist	
IDNV - Input, Data Not Valid, portClass must be INNI	consistency of input parameters with portClass INNI	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
IDNV - Input, Data Not Valid, provisioning of lapdmode and lapdrl not possible	invalid input parameters	
IDNV - Input, Data Not Valid, related portClass not EDGE or port not in BLSR/MS-SPRING group	loca, locz changes only allowed when portClass=EDGE and part of a BLSR/MS-SPRING group	“ED-VC3: Edit VC3 tributary” (5-579) , “ED-ST51: Edit STS1 tributary” (5-585)

Errorcode	Meaning (validation rule)	Related to command ...
IDNV - Input, Data Not Valid, rid is already used by another protection group	unique rid	“ENT-PROTN-GRP: Enter protection group” (8-56) , “ED-PROTN-GRP: Edit protection group” (8-80)
IDNV - Input, Data Not Valid, Sa bit location not supported	input / output format not supported for Sa bit settings	“SET-SYNCN: Set synchronization” (10-19)
IDNV - Input, Data Not Valid, screen value was not set by security administrator	screen value not allowed for uid	“ED-USER: Edit user” (4-47)
IDNV - Input, Data Not Valid, side information is not complete	complete side information	“ENT-PROTN-GRP: Enter protection group” (8-56)
IDNV - Input, Data Not Valid, sid is already used by another BLSR/MS-SPRing Node	uniqueness of TID within ringmaps	“SET-SID: Set SID” (5-74)
IDNV - Input, Data Not Valid, side information is not complete	complete side information	“ENT-PROTN-GRP: Enter protection group” (8-56)
IDNV - Input, Data Not Valid, Slot still provisioned	slot must not be provisioned	“ENT-EQPT (slot): Enter equipment (slot)” (5-100)
IDNV - Input, Data Not Valid, Socket still provisioned	socket must not be provisioned	“ENT-EQPT (Socket): Enter equipment” (5-143)
IDNV - Input, Data Not Valid, SSM not supported for provisioned QL	SSM not supported if timing port provisioned AUTO	“SET-SYNCN: Set synchronization” (10-19)
IDNV - Input, Data Not Valid, SSM not supported for this format	SSM not supported	
IDNV - Input, Data Not Valid, switch capacity cannot be decreased	Validation rule: No decrease of maximum switch capacity	“ED-EQPT (system): Edit equipment (system)” (5-49)

Errorcode	Meaning (validation rule)	Related to command ...
IDNV - Input, Data Not Valid, TCA profile does not exist	TCA profile exists	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541) , “ED-VC3: Edit VC3 tributary” (5-579) , “ED-STS1: Edit STS1 tributary” (5-585) , “ED-EPORT: Edit Ethernet port” (7-168) , “ED-VCG: Edit virtual concatenation group” (7-193) , “ED-STM1E: Edit STM1E port” (5-285) , “ED-VCGTRIB: Edit virtual concatenation group tributary” (7-224)
IDNV - Input, Data Not Valid, tributary already part of a cross-connection	<i>loca</i> , <i>locz</i> changes only allowed when tributary already involved in a cross-connection	“ED-VC3: Edit VC3 tributary” (5-579) , “ED-STS1: Edit STS1 tributary” (5-585)
IDNV - Input, Data Not Valid, uid must not be the own uid	uid must not be the own uid	“CANC-USER-SECU: Cancel user security” (4-13)
IDNV - Input, Data Not Valid, uid not in NE data base	uid not in NE data base	
IDNV - Input, Data Not Valid, wrong old_pid	invalid old_pid	“ED-PID: Edit password identifier” (4-50)

Errorcode	Meaning (validation rule)	Related to command ...
IDRG - Input Data Range Error, <i>osinode</i>	TARP origination only valid for node-1	“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks ” (12-91)
	TARP responder only valid for node-1	
IDRG - Input, Data Range Error, threshold value is out of range	IDRG-range error	“ED-TCA-PROF: Edit TCA profile” (9-81)
IEAE - Input, Entity Already Exists, duplicate profile name	duplicate pfname	“ENT-ASAP-PROF: Enter alarm severity assignment profile” (6-17)
	duplicate newname	“ED-ASAP-PROF: Edit alarm severity assignment profile” (6-20)
	profile name already exists	“ENT-TCA-PROF: Enter TCA Profile” (9-60) , “ED-TCA-PROF: Edit TCA profile” (9-81)
IEAE - Input, Entity Already Exists, cross-connection exists on test tributary	Cross-connection exists on the test tributary	“CONN-TACC: Connect test access” (7-246)
IEAE - Input, Entity Data Already Exists, <i>osinode</i>	OSI node is already created	“ENT-ULSDCC-L3: Create a further OSI node” (12-67)
IEAE - Input, Entity Already Exists, test access connection exists	Test tributary already connected	“CONN-TACC: Connect test access” (7-246)
IENE - Input, Entity Not Exists	reject request for protection CTL slot	“ENT-EQPT (slot): Enter equipment (slot)” (5-100) , “DLT-EQPT (slot): Delete equipment (slot)” (5-117) , ,
	directory not accessible	“CPY-MEM: Copy memory” (11-20)
IENE - Input, Entity Not Exists, cannot change system default profile	Changing default profile name	“ED-TCA-PROF: Edit TCA profile” (9-81)
IENE - Input, Entity Not Exist, profile does not exist	no matching profile name	“RTRV-ASAP-ASGNMT: Retrieve ASAP assignment” (6-14)

Errorcode	Meaning (validation rule)	Related to command ...
IENE - Input, Entity Not Exists, Specified association does not exist	association present (when dis-associating)	“SET-OW: Set Orderwire and User Bytes” (7-128)
IENE - Input Entity Not Exists, Specified cross-connection does not exist	entity (cross-connection) must exist	“ED-NNCRS: Edit NN cross-connection” (7-53) , “ED-CRS: Edit Cross-connection” (7-46) , “DLT-CRS: Delete cross-connection” (7-56) , “CNVT-CCT: Convert cross-connection topology” (7-72)
IENE - Input, Entity Not Exists, Specified port does not exist	Port exists (when associating)	“SET-OW: Set Orderwire and User Bytes” (7-128)
IENE - Input Entity Not Exists, Specified Transparent DCC Cross Connection does not exist	entity (transparent DCC cross-connection) must exist	“DLT-CRS-FECOM: Delete transparent DCC cross-connection” (12-40)
IENE - Input Entity Not Exists, Specified tributary/tributaries do not exist	entities must exist	“ENT-CRS: Enter cross-connection” (7-25)
	entities (tributaries) must exist	“ED-NNCRS: Edit NN cross-connection” (7-53) , “ED-CRS: Edit Cross-connection” (7-46) , “DLT-CRS: Delete cross-connection” (7-56) , “CNVT-CCT: Convert cross-connection topology” (7-72) ,, “CONN-TACC: Connect test access” (7-246)
INUP - Input, Non-null Unimplemented Parameter, secondary test tributary not allowed	Secondary test tributary not needed for MONE test modes	“CONN-TACC: Connect test access” (7-246)
IPMS -Input, Parameter Missing	pathprotected crossconnection: parameters missing	“CNVT-CCT: Convert cross-connection topology” (7-72)

Errorcode	Meaning (validation rule)	Related to command ...
IPNC - Input Parameter Not Consistent, Rate inconsistent with cross-connection rate	specified rate consistent with the cross-connection rate	“ED-NNCRS: Edit NN cross-connection” (7-53) , “ED-CRS: Edit Cross-connection” (7-46)
	Inconsistent tributary rate	“CONN-TACC: Connect test access” (7-246) , “CHG-ACCMD: Change access mode” (7-254) , “DISC-TACC: Disconnect test access” (7-258)
IPNC - Input Parameter Not Consistent, TID not compliant with cross-connection configuration	TID validation	“ED-CRS: Edit Cross-connection” (7-46)
PICC - Privilege, Illegal Command Code, invalid user class	user class	“RTRV-AO: Retrieve Autonomous Output” (5-56)
SAOP - Status already operated, loopback already exists	loopback must not already exist	“OPR-LPBK (here cross-connection loopback)” (7-93) “OPR-LPBK: Operate loopback (here facility loopback)” (7-111)
SARB - Status, All Resources Busy	maximum logins exceeded	“ACT-USER: Activate user” (4-4)
	temporary exhaustion of resources	“CPY-MEM: Copy memory” (11-20)
	APPLY already in progress	“APPLY: Apply software generic” (11-42)
SARB - Status, All Resources Busy, system limit exceeded	temporary system exhaustion	“APPLY: Apply software generic” (11-42)
SDNC - Status, Data Not Consistent	file inappropriate	“APPLY: Apply software generic” (11-42)
	source product type does not match network product type	“CPY-MEM: Copy memory” (11-20)
	additional directory/URL specified	

Errorcode	Meaning (validation rule)	Related to command ...
SDNC - Status, Data Not Consistent, asgncond not empty	probable cause assigned to MDO port	“OPR-EXT-CONT: Operate External Control” (6-90) , “RLS-EXT-CONT: Release external control” (6-93)
SDNC - Status, Data Not Consistent, invalid ASAP parameter	ASAP parameter does not exist	“ED-ASAP-PROF: Edit alarm severity assignment profile” (6-20)
SDNC - Status, Data Not Consistent, invalid combination of osinode parameter with dccstat, scn_dccstat	combination of osinode parameter with scn_dccstat	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
SDNC - Status, Data not consistent, invalid file or directory	invalid file or directory name	“CPY-MEM: Copy memory” (11-20)
SDNC - Status, Data Not Consistent, invalid instance of profile	pfname does not exist	“ED-ASAP-PROF: Edit alarm severity assignment profile” (6-20) , “DLT-ASAP-PROF: Delete alarm severity assignment profile” (6-26)
SDNC - Status, Data Not Consistent, other port already assigned	one timing port for a circuit pack	“SET-SYNCHN: Set synchronization” (10-19)
SDNC - Status, Data Not Consistent, pgid is already used by another protection group of the same type	unique pgid	“ENT-PROTN-GRP: Enter protection group” (8-56)
SDNC - Status, Data Not Consistent, port already assigned	port is already assigned to another timing reference	“SET-SYNCHN: Set synchronization” (10-19)
SDNC - Status, Data Not Consistent, port is out-of-service	no out-of-service state for timing port for service condition	
		“ENT-FECOM: Enter DCC channel related parameters” (12-18)

Errorcode	Meaning (validation rule)	Related to command ...
SDNC - Status, Data Not Consistent, profile in use	ASAP in use	“DLT-ASAP-PROF: Delete alarm severity assignment profile” (6-26)
SDNC - Status, Data Not Consistent, quality evaluation disabled	command rejection if quality evaluation disabled	“SET-SYCN: Set synchronization” (10-19)
SDNC - Status, Data Not Consistent, reference already assigned	timing reference already assigned	
SDNC - Status, Data Not Consistent, reference in protection group	timing reference from a protection port in a protection group	
SLEM - Status, List Exceeds Maximum UIDs	maximum number of uids reached	“ENT-USER-SECU: Enter user security” (4-33)
SNVS - Status, Not in Valid State	automatic ring discovery to be disabled	“SET-MAP-RING: Set map ring” (8-168) , “ED-FETID: Edit Far End Target Identifier” (8-171)
	deemed source file	“CPY-MEM: Copy memory” (11-20)
	second APPLY on same software	“APPLY: Apply software generic” (11-42)
	validation rule for enabled DCC channels	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
SNVS - Status, Not in Valid State, Active Repeater Mode for this Port does not allow dftvlan to be modified	default VLAN ID not allowed in Repeater Mode	“ED-EPORT: Edit Ethernet port” (7-168)
SNVS - Status, Not in Valid State, Active Repeater Mode for this Port does not allow vvidls to be modified	VLAN filtering database not allowed in Repeater Mode	
SNVS - Status, Not in Valid State, Assigned Node not allowed for IP	only osinode1 supports IP	“ENT-FECOM-LAN: Enter LAN related parameters” (12-50)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, association already exists	no association present (when associating)	“SET-OW: Set Orderwire and User Bytes” (7-128)
SNVS - Status, Not in Valid State, a loopback is existing	no loopbacks for istd change	“ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417)
	no loopbacks for interface standard change	“ED-VCG: Edit virtual concatenation group” (7-193)
	no loopbacks for <i>istd</i> , <i>trbmd</i> change	“ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
SNVS - Status, Not in Valid State, a protection group is existing	no protection for istd change	“ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417)
	no protection groups allowed	“DLT-EQPT (slot): Delete equipment (slot)” (5-117)
SNVS - Status, Not in Valid State, a protection group is existing	no protection for <i>istd</i> , <i>trbmd</i> change	“ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, a path protection group is existing	no path protection for <i>trbmd</i> change to ADAPTIVE	
SNVS - Status, Not in Valid State, at least one port used as timing reference	not used as timing reference	“DLT-EQPT (slot): Delete equipment (slot)” (5-117) , “DLT-EQPT (Socket): Delete equipment” (5-156)
SNVS - Status, Not in Valid State, at least one port of the protection pack is used as timing reference		“ENT-PROTN-GRP: Enter protection group” (8-56)
SNVS - Status, Not in Valid State, a test access session exists	no test access session for <i>istd</i> , <i>trbmd</i> change	“ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
	Setting of <i>portClass</i> to INNI only possible, if no test access session active	
	Setting of <i>portClass</i> to INNI only possible, if no test access session active	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417)
SNVS - Status, Not in Valid State, automatic ring discovery enabled	asymmetric ring only with manual ring provisioning	“ENT-PROTN-GRP: Enter protection group” (8-56) , “ED-PROTN-GRP: Edit protection group” (8-80)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, can not disable servcond for INNI ports	servcond must enabled when <i>portClass</i> =INNI	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
SNVS - Status, Not in Valid State, cannot disable IP on all LAN ports while T-TD or FTTD is enabled	IP disabling while T-TD or FTTD is enabled	“ENT-FECOM-LAN: Enter LAN related parameters” (12-50)
SNVS - Status, Not in Valid State, circuit packs not provisioned	Circuit Pack not provisioned	“CONN-TACC: Connect test access” (7-246)
SNVS - Status, Not in Valid State, clear request impossible	clear wait to restore timer not applicable	“OPR-SYNCNSW: Operate synchronization switch ” (10-31)
SNVS - Status, Not in Valid State, clock of destination XC is in warming-up state	clock not in warming-up status (Switching Protection Group)	“OPR-PROTNSW: Operate protection switch” (8-109)
SNVS - Status, Not in Valid State, Command refers to protection tributaries of a BLSR/MS-SPRing protection and no TOPEX application	BLSR/MS-SPRing protection access (Extra Traffic)	“ENT-CRS: Enter cross-connection” (7-25) , “CNVT-CCT: Convert cross-connection topology” (7-72)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, connection to OW port exists	not used for OW	“DLT-EQPT (slot): Delete equipment (slot)” (5-117) , “DLT-EQPT (Socket): Delete equipment” (5-156) (
SNVS - Status, Not in Valid State, connection to OW port of the protection pack exists		“ENT-PROTN-GRP: Enter protection group” (8-56)
SNVS - Status, Not in Valid State, cross-connections are still existing	no cross-connection allowed	“DLT-EQPT (slot): Delete equipment (slot)” (5-117) , “DLT-EQPT (Socket): Delete equipment” (5-156) (
	no cross-connections for <i>istd</i> change	“ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417)
	no cross-connections for <i>istd</i> , <i>trbmd</i> change	“ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
	cross-connection - interface standard change	“ED-VCG: Edit virtual concatenation group” (7-193)
SNVS - Status, Not in Valid State, Cross connection involved in Test Access Session	Cross-connection not involved in Test Access Session	“ED-NNCRS: Edit NN cross-connection” (7-53)
SNVS - Status, Not in Valid State, Cross connection not of class NN	Cross-connection must have xconcls=NN	

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, Cross connection must not be of xconcls NN	Cross connection must not be of xconcls NN	“ED-CRS: Edit Cross-connection” (7-46) , “DLT-CRS: Delete cross-connection” (7-56) , “CNVT-CCT: Convert cross-connection topology” (7-72) ,
SNVS - Status, Not in Valid State, Cross-connections still existing	setting of portClass to INNI only possible, if no cross-connection existing	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
SNVS - Status, Not in Valid State, DCC channels are active for this port	servcond must be enabled when DCC enabled	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, DCC channel already enabled	DCC channels enabled	“ENT-CRS-FECOM: Enter transparent DCC cross-connection” (12-36)
SNVS - Status, Not in Valid State, DCC channel occupied by MSP/APS DCC protection	DCC protection	
SNVS - Status, Not in Valid State, DCC channel can not be assigned to MCN and SCN at the same time	independent use of DCC channel for MCN or SCN	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
SNVS - Status, Not in Valid State, DCC channel used in transparent DCC cross connection	Transparent DCC for DCC Line/MS Protection Mode	“ED-PROTN-GRP: Edit protection group” (8-80)
	Transparent DCC for DCC Sect/RS Protection Mode	
	Transparent DCC cross-connection	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
SNVS - Not in Valid State, DCC/LAN channels assigned	reject deletion when node is assigned to LAN or DCC	“DLT-ULSDCC-L3: Delete a node ID other than node-1” (12-81)
SNVS - Not in Valid State, DCC on SCN may not be enabled	changing of portClass only possible, if no DCC for SCN in enabled on the port	“ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514)
SNVS - Status, Not in Valid State, dcc protection side carries traffic	dcc protection: protection side is activ	“ENT-PROTN-GRP: Enter protection group” (8-56)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Not in Valid State, DCC needed for BLSR/MS-SPRING	for 2/4 fiber BLSR/MS-SPRING	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
SNVS - Not in Valid State, DCC protection available	DCC Protection	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
SNVS - Status, Not in Valid State, default router LAN port not configured	check for correct configured Default Router LAN Port	“ENT-ULS: Enter upper layer stack” (12-105)
SNVS - Status, Not in Valid State, Different interface standards for input tributaries	path-protected cross-connection has inputs from ports with same interface standards	“ENT-CRS: Enter cross-connection” (7-25) , “CNVT-CCT: Convert cross-connection topology” (7-72)
SNVS - Status, Not in Valid State, extra traffic cross-connections are still existing	No cross-connections allowed when leaving TOPEX	“ED-PROTN-GRP: Edit protection group” (8-80) , “DLT-PROTN-GRP: Delete protection group” (8-97)
SNVS Status, Not in Valid State, facility loopbacks still exist	no facility loopbacks allowed	“DLT-EQPT (slot): Delete equipment (slot)” (5-117) , “DLT-EQPT (Socket): Delete equipment” (5-156) (
SNVS - Status, Not in Valid State, facility loopbacks still exist at the protection pack		“ENT-PROTN-GRP: Enter protection group” (8-56)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, Facility Loopback is active for this port	<i>servcond</i> must be disabled for facility loopback	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541) , “ED-EPORT: Edit Ethernet port” (7-168)
SNVS - Status, Not in Valid State, implicit channel re-assignment	implicit status changes of dccstat, scn_dccstat	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
SNVS - Status, Not in Valid State, incompatibility istddflt and trbmddflt	compatibility istddflt and trbmddflt	“ED-EQPT (system): Edit equipment (system)” (5-49)
SNVS - Status, Not in Valid State, incomplete IP configuration	check for correct IP configuration	“ED-NE: Edit NE” (12-8) , “ENT-IP-MAP: Enter TCP/IP map” (12-113) , “ENT-ULS: Enter upper layer stack” (12-105)
	compatibility xcsetup and IP configuration for SCN	“ED-EQPT (system): Edit equipment (system)” (5-49)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, inconsistent input signal	inputsig consistent with existing cross-connections	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541) , “ED-VCG: Edit virtual concatenation group” (7-193)
SNVS - Status, Not in Valid State, inconsistent output signal	unequipoisig consistent with existing cross-connections	
SNVS - Status, Not in Valid State, input port(s)for pathprot. crossconnecton in adaptive mode	pathprotected cross-connection: both inputs in fixed-mode	“ENT-CRS: Enter cross-connection” (7-25) , “CNVT-CCT: Convert cross-connection topology” (7-72)
SNVS - Status, Not in Valid State, invalid IP configuration	check IP configuration	“ENT-FECOM-LAN: Enter LAN related parameters” (12-50)
SNVS - Status, Not in Valid State, invalid test access mode	Invalid test access mode change request	“CHG-ACCMD: Change access mode” (7-254)
SNVS - Status, Not in Valid State, Invalid topology	valid topology	“DLT-CRS: Delete cross-connection” (7-56)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, J0 parameters can not be set for INNI ports	some parameters not setable for ports of <i>portClass</i> =INNI	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
SNVS - Status, Not in Valid State, l3radesnode not in created state	l3radesnode must be in the created state	“ENT-ULSDCC-L3: Create a further OSI node” (12-67) , “ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” (12-74)
SNVS - Status, Not in Valid State, LAN1 can not be disabled	can’t disable LAN1	“ENT-FECOM-LAN: Enter LAN related parameters” (12-50)
SNVS - Status, Not in Valid State, loopback does not exist	loopback must exist	“RLS-LPBK: Release loopback (here cross-connection loopback)” (7-101) - tributary, “RLS-LPBK: Release loopback (here facility loopback)” (7-118) - port

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, loopbacks present	setting of <i>portControl</i> to NORMAL only possible if no cross-connection loopbacks existing	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541) “ED-VCG: Edit virtual concatenation group” (7-193)
SNVS - Status, Not in Valid State, maintenance condition	check whether system is maintenance condition	“ENT-EQPT (slot): Enter equipment (slot)” (5-100) , “ED-EQPT (slot): Edit equipment (slot)” (5-109) , “DLT-EQPT (slot): Delete equipment (slot)” (5-117) , “ENT-EQPT (Socket): Enter equipment” (5-143) , “ED-EQPT (Socket): Edit equipment” (5-147) , “DLT-EQPT (Socket): Delete equipment” (5-156)
SNVS - Status, Not in Valid State, Manual Switch to Worker for Protection Type 1x1 not allowed	MSP type 1:1 does not allow manual switch requests to worker	“OPR-PROTNSW: Operate protection switch” (8-109)
SNVS - Status, Not in Valid State, Manual Switch for Protection Type 1+1_Optimized not allowed	MSP type 1+1_optimized does not allow manual switch commands	

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, Modification not allowed	No Modification of rptmode if vlantagmd = 802.1TAG	“ED-EPORT: Edit Ethernet port” (7-168)
SNVS - Status, Not in Valid State, Modification not allowed in Backward Compatible Mode	Parameter modification not allowed in backward compatible mode	“ED-VCG: Edit virtual concatenation group” (7-193) , “ED-EPORT: Edit Ethernet port” (7-168) ,
SNVS - Status, Not in Valid State, multiple added XCs for MSSPRING TOP	no multiple added XCs for MSSPRING TOP	“ENT-CRS: Enter cross-connection” (7-25) , “CNVT-CCT: Convert cross-connection topology” (7-72) , “ED-PROTN-GRP: Edit protection group” (8-80)
	no multiple added XCs for TOP	“ED-PROTN-GRP: Edit protection group” (8-80)
SNVS - Status, Not in Valid State, MS-DCC may not be enabled	changing of <i>portClass</i> only possible, if MS-DCC is not enabled on the port	“ED-STM1E: Edit STM1E port” (5-285) , , , , “ED-STM256: Edit STM256 port” (5-417) , , , , “ED-OC768: Edit OC768 port” (5-541)
SNVS - Status, Not in Valid State, new Tributary has existing loopback	No crossconnection loopback existing	, “CNVT-CCT: Convert cross-connection topology” (7-72)
SNVS - Status, Not in Valid State, new tributary used in test access session	Tributary not used in a test access session	

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, ndetmd must not be AUTO	Some parameters not settable for ports of <i>ndetmd</i> AUTO	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
SNVS - Status, Not in Valid State, no dcc channel enabled	dcc enabled	“ENT-PROTN-GRP: Enter protection group” (8-56)
SNVS - Not in Valid State, node in use as RA destination node	reject deletion when node is used as RA destination node by OSI node 1	“DLT-ULSDCC-L3: Delete a node ID other than node-1” (12-81)
SNVS - Status, Not in Valid State, node not in idle state	idle ring node for protocol conversion	“ED-PROTN-GRP: Edit protection group” (8-80)
SNVS Status, Not in Valid State, no matching log entry	no matching log entry	“RTRV-LOG-NTFCN: Retrieve notification Log” (5-60) , “RTRV-LOG-ALM: Retrieve log alarm” (6-54) , “RTRV-LOG-PROTNSW: Retrieve log protection switch” (8-150)
SNVS - Status, Not in Valid State, no other LAN port with IP enabled for T-TD or FTTD available	can't assign LAN to SCN Node when T-TD or FTTD is enabled and no other LAN port with IP configuration is available	“ENT-FECOM-LAN: Enter LAN related parameters” (12-50)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, no SCN IP address provisioned	for provisioned SCN IP address	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
	can't assign LAN to scnode when no ASTN IP address is provisioned	“ENT-FECOM-LAN: Enter LAN related parameters” (12-50)
SNVS - Status, Not in Valid State, no Swiss capable HW	compatibility xcsetup and HW configuration	“ED-EQPT (system): Edit equipment (system)” (5-49)
SNVS - Status, Not in Valid State, no test access session on the test tributary	No test access session on the test tributary	“CHG-ACCMD: Change access mode” (7-254) , “DISC-TACC: Disconnect test access” (7-258)
SNVS - Status, Not in Valid State, not in Maintenance Condition	check of the maintenance condition	“ED-EQPT (system): Edit equipment (system)” (5-49) , “SET-SID: Set SID” (5-74) , “ENT-FECOM-LAN: Enter LAN related parameters” (12-50) , “ENT-ULS: Enter upper layer stack” (12-105)
SNVS - Status, Not in Valid State, no XCs allowed for change of INNI parameters	setting of some INNI properties only possible, if no cross-connection existing	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514)
SNVS - Status, Not in Valid State, NVM size not sufficient	Compatibility xcsetup and NVM size	“ED-EQPT (system): Edit equipment (system)” (5-49)
SNVS - Status, Not in Valid State, Optical Channel must be enabled	enabling of outband FEC only if optical channel is enabled	“ED-STM64: Edit STM64 port” (5-388) , “ED-OC192: Edit OC192 port” (5-514) ,

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, osinode not in created state	osinode must be in the created state	“ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack.” (12-74) , “DLT-ULSDCC-L3: Delete a node ID other than node-1” (12-81) , “RTRV-MAP-NETWORK: Retrieve network map” (12-126)
SNVS - Status, Not in Valid State, other port of protection unit is assigned to a line timing reference	no timing reference on other port of protection unit	“ENT-PROTN-GRP: Enter protection group” (8-56)
SNVS - Status, Not in Valid State, Output is already crossconnected	output not in use	“ENT-CRS: Enter cross-connection” (7-25)
SNVS - Status, Not in Valid State, parameter required	parameter sc or dest is missing	“OPR-SYNCNSW: Operate synchronization switch ” (10-31)
SNVS - Status, Not in Valid State, Parameter(s) present which are not allowed	Only those parameter present which are needed	“CNVT-CCT: Convert cross-connection topology” (7-72)
SNVS - Not in Valid State, part of 1+1 MSP protection	DCC Protection	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
SNVS - Status, Not in Valid State, portClass of protection port must not be EDGE	supported portClass: protection ports must not be of portClass EDGE	“ENT-PROTN-GRP: Enter protection group” (8-56)
SNVS - Status, Not in Valid State, portClass must not be EDGE	Some parameters not settable for ports of <i>portClass</i> EDGE	“ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514)
	No port in portClass EDGE	“ENT-PROTN-GRP: Enter protection group” (8-56)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, portClass must not be EDGE for TOP	setting of <i>portClass</i> for TOP	“ED-STM64: Edit STM64 port” (5-388) , “ENT-PROTN-GRP: Enter protection group” (8-56) , “ED-PROTN-GRP: Edit protection group” (8-80)
SNVS - Status, Not in Valid State, Port Class must not be EDGE or INNI	Not allowed to change the <i>portClass</i> directly from INNI to EDGE or EDGE to INNI	“ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM16: Edit STM16 port” (5-359) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514)
SNVS - Status, Not in Valid State, portClass must not be INNI	Some parameters not settable for ports of <i>portClass</i> INNI	“ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
	supported <i>portClass</i>	“ENT-PROTN-GRP: Enter protection group” (8-56)
	hptimmonchanges to ENABLE only allowed when corresponding port is not of portClass INNI	“ED-VC3: Edit VC3 tributary” (5-579) , “ED-STS1: Edit STS1 tributary” (5-585)
	No port in portClass INNI	“ENT-PROTN-GRP: Enter protection group” (8-56)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, portClass may not be EDGE	no EDGE protection port for 1+1 MSP	“ENT-PROTN-GRP: Enter protection group” (8-56)
SNVS - Status, Not in Valid State, Port in out of service state	setting of <i>portClass</i> to INNI only possible, if service condition not OUTOFSERVICE	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514)
SNVS - Status, Not in Valid State, Port is not out-of-service	port is out-of-service	“OPR-LPBK: Operate loopback (here facility loopback)” (7-111)
SNVS - Status, Not in Valid State, Port is still in use	setting of <i>portClass</i> away from INNI only possible, if the port is not in use	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
	setting of <i>portClass</i> from EDGE to TRADITIONAL only possible, if the tributaries on the port are not in use by SNN	
SNVS - Status, Not in Valid State, Port is still in use by ONNS	check if related port is not in use by ONNS	“DLT-EQPT (slot): Delete equipment (slot)” (5-117) , “DLT-EQPT (Socket): Delete equipment” (5-156)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, Port must not be a 1+1 protection port	setting of <i>portClass</i> from TRADITIONAL to EDGE	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)
SNVS - Status, Not in Valid State, Port must not be a 1:1 protection port		“ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514)
SNVS - Status, Not in Valid State, Port must not be member of a protection group	setting of <i>portClass</i> to INNI not possible for ports in protection groups	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, Port must not be of portClass INNI	No loopbacks on tributaries below ports of <i>portClass</i> INNI	“OPR-LPBK (here cross-connection loopback)” (7-93) , “OPR-LPBK: Operate loopback (here facility loopback)” (7-111)
SNVS - Status, Not in Valid State, port numbers cannot be changed when T-TD is enabled	no TCP port number change with enabled T-TD function	“ENT-ULS: Enter upper layer stack” (12-105)
SNVS - Status, Not in Valid State, port used for NN application	Port used for NN application	“CONN-TACC: Connect test access” (7-246)
SNVS - Status, Not in Valid State, ports must be on different circuit packs	port on different packs	“ENT-PROTN-GRP: Enter protection group” (8-56)
SNVS - Status, Not in Valid State, ports have different interface types	common interface type	
SNVS - Status, Not in Valid State, port is already used in another protection group	port is only in one group	
SNVS - Status, Not in Valid State, port rate not supported for this protection type	supported port rate	
SNVS - Status, Not in Valid State, ports have different port rates	common port rate	
SNVS - Status, Not in Valid State, protection port is assigned to a line timing reference	no timing reference on protection port	
SNVS - Status, Not in Valid State, protection port is out-of-service	no out-of-service state on protection port	

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, port used for Linear MSP	port used for Linear MSP	“CONN-TACC: Connect test access” (7-246)
SNVS - Status, Not in Valid State, port used for MSSPRING/BLSR	port used for MSSPRING/BLSR	
SNVS - Status, Not in Valid State, protection dcc channel is enabled	dcc protection side is enabled	“ED-PROTN-GRP: Edit protection group” (8-80)
SNVS - Status, Not in Valid State, protection group still exist	no protection groups allowed	“DLT-EQPT (slot): Delete equipment (slot)” (5-117) , “DLT-EQPT (Socket): Delete equipment” (5-156)
SNVS - Status, Not in Valid State, protection tributary is used in cross-connection	No XC on protection tribs	“ENT-PROTN-GRP: Enter protection group” (8-56)
SNVS - Status, Not in Valid State, protection unit is activ	protection unit is active	“DLT-PROTN-GRP: Delete protection group” (8-97)
SNVS - Status, Not in Valid State, reference unavailable	reference switching during lockout or disabled state	“OPR-SYNCNSW: Operate synchronization switch ” (10-31)
SNVS - Status, Not in Valid State, request not practicable	no change of the request state, request not practicable forced or manual switch request while reference is in forced state	
SNVS - Status, Not in Valid State, resources in use by Swiss	setting xcsetup back to TRADITIONAL	“ED-EQPT (system): Edit equipment (system)” (5-49)
SNVS - Status, Not in Valid State, SONET port not allowed for TOP	SDH ports for TOP	“ENT-PROTN-GRP: Enter protection group” (8-56) , “ED-PROTN-GRP: Edit protection group” (8-80)
SNVS - Status, Not in Valid State, static VLAN configuration not cleared	check whether VLAN lists are empty	“ED-EQPT (CP): Edit equipment (circuit pack)” (5-177)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, Swiss access possible	no ONNS for interface standard change	“ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-VCG: Edit virtual concatenation group” (7-193)
SNVS - Status, Not in Valid State, Swiss not enabled	<i>portClass</i> only settable when xcsetup=SWISS	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541) , “ED-VCG: Edit virtual concatenation group” (7-193)
	do not accept NN TL1 commands when xcsetup=TRADITIONAL	“ED-EQPT (system): Edit equipment (system)” (5-49)
SNVS - Status, Not in Valid State, switch capacity below provisioned XC CP switch capacity	Switch capacity according XC CP	“ED-EQPT (system): Edit equipment (system)” (5-49)
SNVS - Status, Not in Valid State, switch command not allowed for actual protection state	allowed switch command in that state	“OPR-PROTNSW: Operate protection switch” (8-109)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, TARP not enabled	check for correct TARP configuration	“ED-NE: Edit NE” (12-8)
SNVS - Status, Not in Valid State, TARP propagation can not be disabled	Can’t disable TARP propagation while LAN TARP Storm Suppression is enabled	“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks ” (12-91)
SNVS - Status, Not in Valid State, TCA profile assigned	modifying the name of an active profile	“ED-TCA-PROF: Edit TCA profile” (9-81) , “DLT-TCA-PROF: Delete TCA Profile” (9-119)
SNVS - Status, Not in Valid State, Test Access not allowed on bridged cross connections	not allowed for bridged cross connections	“CONN-TACC: Connect test access” (7-246)
SNVS - Status, Not in Valid State, Test Access not allowed with path protected tributaries	Not allowed for path protected tributaries	
SNVS - Status, Not in Valid State, the CP is not plugged out	CP must be plugged out	“DLT-EQPT (slot): Delete equipment (slot)” (5-117)
SNVS - Status, Not in Valid State, the Module is not plugged out	module must be plugged out	“DLT-EQPT (Socket): Delete equipment” (5-156)
SNVS - Status, Not in Valid State, This Change of Protection Architecture not allowed, deprovision first	no change between MSP type 1+1_optimized and other MSP types	“ED-PROTN-GRP: Edit protection group” (8-80)
SNVS - Status, Not in Valid State, TID inconsistent with existing cross-connection	TIDs consistent with existing cross-connection	“ENT-CRS: Enter cross-connection” (7-25)
SNVS - Status, Not in Valid State, timing clock mode inconsistent	timing clock mode inconsistent	“SET-SYCN: Set synchronization” (10-19)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, Timing reference is assigned to this port	servcond must be enabled when timing source	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541) ,
SNVS - Status, Not in Valid State, Too many cross-connection originating from same tributary	restrict number of cross-connection using same input tributary	“ENT-CRS: Enter cross-connection” (7-25) , “CNVT-CCT: Convert cross-connection topology” (7-72)
SNVS - Status, Not in Valid State, transparent DCC connections are existing at protection pack	Transparent DCC connections	“ENT-PROTN-GRP: Enter protection group” (8-56)
SNVS - Status, Not in Valid State, transparent DCC connections are still existing	no transparent DCC connections	“DLT-EQPT (slot): Delete equipment (slot)” (5-117) , “DLT-EQPT (Socket): Delete equipment” (5-156) (
SNVS - Status, Not in Valid State, Trial to change loopback type	no change of loopback allowed	“OPR-LPBK: Operate loopback (here facility loopback)” (7-111)
SNVS - Status, Not in Valid State, Tributary has existing loopback	no cross-connection loopback existing	“ENT-CRS: Enter cross-connection” (7-25) , “DLT-CRS: Delete cross-connection” (7-56) , “CONN-TACC: Connect test access” (7-246)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, tributary is not in state wait-to-restore	wait-to-restore is not pending	“OPR-VCGTRIB: Operate virtual concatenation group tributary” (7-234)
SNVS - Status, Not in Valid State, tributary is used in cross-connection loopback	no XC loopbacks on tribs	“ENT-PROTN-GRP: Enter protection group” (8-56) , “DLT-PROTN-GRP: Delete protection group” (8-97)
SNVS - Status, Not in Valid State, tributary is used in cross-connection	no XC on tribs	“ENT-PROTN-GRP: Enter protection group” (8-56) , “DLT-PROTN-GRP: Delete protection group” (8-97)
SNVS - Status, Not in Valid State, tributary not assigned as a test tributary	Tributary is not assigned as a test tributary	“RTRV-TACC: Retrieve test access” (7-241)
SNVS - Status, Not in Valid State, trib of 1+1/1x1 port as input-trib in pathprotected crossconnection	No trib of 1+1 port protection as newinaid (for path-protected cross-connection)	“CNVT-CCT: Convert cross-connection topology” (7-72)
SNVS - Status, Not in Valid State, trib of MSP 1+1/1x1 port as input-trib in pathprotected crossconnection	No trib of any MSP port as in_aid (for path-protected cross-connection)	“ENT-CRS: Enter cross-connection” (7-25)
SNVS - Status, Not in Valid State, Tributaries must not be on ports of portClass INNI	Tributaries must not belong to ports of portClass INNI	
SNVS - Status, Not in Valid State, tributary rate not supported for protection with this port rate	trib bandwidth is not greater as service bandwidth	“ENT-PROTN-GRP: Enter protection group” (8-56)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, Tributary used in test access session	No test access session	“ENT-CRS: Enter cross-connection” (7-25) , , “OPR-LPBK (here cross-connection loopback)” (7-93) , “ENT-PROTN-GRP: Enter protection group” (8-56) , “DLT-PROTN-GRP: Delete protection group” (8-97) , “DLT-EQPT (Socket): Delete equipment” (5-156)
SNVS - Status, Not in Valid State, T-TD enabled	not allowed to disable TARP when T-TD is enabled	“ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks ” (12-91)
SNVS - Status, Not in Valid State, unknown IP address within MAP	check for known IP address	“DLT-IP-MAP: Delete TCP/IP map” (12-117)
SNVS - Status, Not in Valid State, unknown TARP Manual Adjacent NSAP	Check for Existing TARP Manual Adjacent NSAP	“DLT-ULSDCC-L4: Delete TARP manual adjacent NSAP address in layer 4 of the specified OSI stack” (12-98)
SNVS - Status, Not in Valid State, unsupported MS - SPRing/BLSR DNI/DRI	supported MS-SPRing/BLSR DNI/DRI	“ENT-CRS: Enter cross-connection” (7-25) , “CNVT-CCT: Convert cross-connection topology” (7-72)
SNVS - Status, Not in Valid State, VCG is still in use	Setting of eportClass from EDGE to TRADITIONAL only possible, if the VCG tributaries on the port are not in use by NN	“ED-VCG: Edit virtual concatenation group” (7-193)
SNVS - Status, Not in Valid State, working dcc channel is disabled	dcc protection: working side is disabled	“ED-PROTN-GRP: Edit protection group” (8-80)
SNVS - Status, Not in Valid State, wrong IP configuration	Check for correct OSI node configuration	“ENT-ULS: Enter upper layer stack” (12-105)
SNVS - Status, Not in Valid State, XC are assigned to both EP155 packs	XC are assigned to both EP155 packs	“ENT-PROTN-GRP: Enter protection group” (8-56)

Errorcode	Meaning (validation rule)	Related to command ...
SNVS - Status, Not in Valid State, XC are assigned to the protection EP155 pack	XC are assigned to proposed protection EP155 pack	“ENT-PROTN-GRP: Enter protection group” (8-56)
SNVS - Status, Not in Valid State, XC loopbacks still exist	no XC loopbacks allowed	“DLT-EQPT (slot): Delete equipment (slot)” (5-117) , “DLT-EQPT (Socket): Delete equipment” (5-156) (
SNVS - Status, Not in Valid State, XC loopbacks still exist at the protection pack.		“ENT-PROTN-GRP: Enter protection group” (8-56)
SNVS - Status, Not in Valid State, XC Pack not provisioned	XC pack is (pre-)provisioned	“ENT-CRS: Enter cross-connection” (7-25) , “ENT-PROTN-GRP: Enter protection group” (8-56) , “CONN-TACC: Connect test access” (7-246)
SNVS - Status, Not in Valid State, xcsetup must be TRADITIONAL	Check of xcsetup for ip_ad_astn change	“ENT-ULS: Enter upper layer stack” (12-105)
SPFA - Status, Protection unit Failed	succeeding switch command	“OPR-PROTNSW: Operate protection switch” (8-109) , “RLS-PROTNSW: Release protection switch” (8-125)
SPFA - Status, Protection unit Failed, APS did not succeed	APS switch time constraint	“OPR-PROTNSW: Operate protection switch” (8-109)
SRAC - Status, Requested Access Configuration invalid, retrieved file NE mismatch	product mismatch	“CPY-MEM: Copy memory” (11-20)
SR0F - Status, Requested Operation Failed	non-hardware system difficulties	“APPLY: Apply software generic” (11-42)
SR0F - Status, Requested Operation Failed, other system failure	APPLY applied on corrupted software	

Errorcode	Meaning (validation rule)	Related to command ...
SROF - Status, Requested Operation Failed, external communications failure	external communication failure	“CPY-MEM: Copy memory” (11-20)
SROF - Status, Requested Operation Failed, unsuccessful file transfer	transferred file is deemed invalid	
SRQN - Status, invalid request, uid not logged in	user with uid not logged in	“CANC-USER-SECU: Cancel user security” (4-13)
SSRD - Status, Switch Request Denied, clock mode inconsistent	clock backup switch request when clock mode is free running	“OPR-SYNCNSW: Operate synchronization switch ” (10-31)
SSRE - Status, System Resources Exceeded, allowed limit of DCC channels exceeded	validation rule for max number of DCC channels for MS/RS-DCC reached	“ENT-FECOM: Enter DCC channel related parameters” (12-18)
	validation rule if more than 64 DCC channels are assigned to node-1	
SSRE - System Resources Exceeded, allowed limit of SCN DCC channels exceeded	maximum number of channels assigned to SCN	“ENT-FECOM: Enter DCC channel related parameters” (12-18)

Errorcode	Meaning (validation rule)	Related to command ...
SSRE - Status, System Resources Exceeded, limit of PM monitors exceeded	maximum number of enabled PM monitors	“ED-STM1E: Edit STM1E port” (5-285) , “ED-STM1: Edit STM1 port” (5-309) , “ED-STM4: Edit STM4 port” (5-334) , “ED-STM16: Edit STM16 port” (5-359) , “ED-STM64: Edit STM64 port” (5-388) , “ED-STM256: Edit STM256 port” (5-417) , “ED-OC3: Edit OC3 port” (5-436) , “ED-OC12: Edit OC12 port” (5-461) , “ED-OC48: Edit OC48 port” (5-486) , “ED-OC192: Edit OC192 port” (5-514) , “ED-OC768: Edit OC768 port” (5-541) , “ED-VC3: Edit VC3 tributary” (5-579) , “ED-STS1: Edit STS1 tributary” (5-585) , “ED-EPORT: Edit Ethernet port” (7-168) , “ED-VCG: Edit virtual concatenation group” (7-193) , “ED-VCGTRIB: Edit virtual concatenation group tributary” (7-224)
SSRE - Status, System Resources Exceeded, limit of ppgnames exceeded	maximum number of <i>ppgnames</i> exceeded	“ENT-CRS: Enter cross-connection” (7-25) , “ED-PROTN-GRP: Edit protection group” (8-80) , “CNVT-CCT: Convert cross-connection topology” (7-72)
SSRE - Status, System Resources Exceeded, limit of profiles exceeded	maximum number of profiles	“ENT-ASAP-PROF: Enter alarm severity assignment profile” (6-17)
	maximum number of TCA profiles reached	“ENT-TCA-PROF: Enter TCA Profile” (9-60)
SSRE - Status, System Resources Exceeded, limit of transparent DCC Cross Connectins exceeded	maximum of DCC CCs exceeded	“ENT-CRS-FECOM: Enter transparent DCC cross-connection” (12-36)

Errorcode	Meaning (validation rule)	Related to command ...
SSRE - Status, System Resources Exceeded, limit of tribs with loca, locz exceeded	maximum number of tributaries with loca, locz entries must not exceed 100	“ED-VC3: Edit VC3 tributary” (5-579) , “ED-STS1: Edit STS1 tributary” (5-585)
SSRE - Status, System Resources Exceeded, max. no. of profiles reached	Maximum number of TCA profiles reached	“ENT-TCA-PROF: Enter TCA Profile” (9-60)
SSRE - System Resources Exceeded, overall limit of DCC channels exceeded	Maximum number of channels assigned to MCN and SCN	“ENT-FECOM: Enter DCC channel related parameters” (12-18)





14 User privilege codes

Overview

Purpose The following table lists the user privilege codes



List of user privilege codes

TL1 command	User privilege code (UCFC/UCAL)
ACT-USER: Activate user	Any
ALW-MSG: Allow message	M3§
APPLY: Apply software generic	S4
CANC-USER: Cancel user	Any
CANC-USER-SECU: Cancel user security	S5
CPY-MEM: Copy memory	S4
DLT-ASAP-PROF: Delete ASAP profile	M3
DLT-CRS: Delete Cross-connection	P3
DLT-CRS-FECOM: Delete transparent DCC cross-connection	M3
DLT-EQPT (slot): Delete equipment (slot)	P3
DLT-EQPT (Socket): Delete equipment	
DLT-IP-MAP: Delete TCP/IP map	S3
DLT-PROTN-GRP: Delete protection group	M4
DLT-TCA-PROF: Delete TCA Profile	PM3
DLT-ULSDCC-L3: Delete a node ID other than node-1	S3
DLT-ULSDCC-L4: Delete TARP manual adjacent NSAP address in layer 4 of the specified OSI stack	
DLT-USER-SECU: Delete user security	S5
ED-ASAP-PROF: Edit alarm severity assignment profile	M3
ED-CRS: Edit Cross-connection	P3
ED-DAT: Edit date and time	S4
ED-EPORT: Edit Ethernet port	P3
ED-EQPT (CP): Edit equipment (circuit pack)	
ED-EQPT (shelf): Edit Equipment (shelf)	
ED-EQPT (slot): Edit Equipment (slot)	
ED-EQPT (Socket): Edit equipment	
ED-EQPT (system): Edit Equipment (system)	

TL1 command	User privilege code (UCFC/UCAL)
ED-FETID: Edit Far End Target Identifier	S3
ED-MAP-RING: Edit map ring	M3
ED-NE: Edit NE	S3
ED-NE-SECU: Edit NE security	S5
ED-NNCRS: Edit NN cross connection	P5
ED-OC3: Edit OC3 port	P3
ED-OC12: Edit OC12 port	
ED-OC48: Edit OC48 port	
ED-OC192: Edit OC192 port	
ED-OC768: Edit OC768 port	
ED-PID: Edit password identifier	S1
ED-PROTN-GRP: Edit protection group	M4
ED-STATE-EQPT (system): Edit equipment state	
ED-STM1: Edit STM1 port	P3
ED-STM1E: Edit STM1E port	
ED-STM4: Edit STM4 port	
ED-STM16: Edit STM16 port	
ED-STM64: Edit STM64 port	
ED-STM256: Edit STM256 port	
ED-STS1: Edit STS1 tributary	
ED-TCA-PROF: Edit TCA Profile	PM3
ED-ULSDCC-L3: Enter layer 3 related parameters of the OSI stack	S4
ED-USER: Edit user	S1
ED-USER-SECU: Edit user security	S5
ED-VC3: Edit VC3 tributary	P3
ED-VCG: Edit virtual concatenation group	
ED-VCGTRIB: Edit virtual concatenation group tributary	
ED-VRTSW: Edit Virtual Switch	
ENT-ASAP-PROF: Enter alarm severity assignment profile	M3
ENT-CRS: Enter cross-connection	P3

TL1 command	User privilege code (UCFC/UCAL)
ENT-CRS-FECOM: Enter transparent DCC cross-connection	M3
ENT-EQPT (slot): Enter Equipment (slot)	P3
ENT-EQPT (Socket): Enter equipment	
ENT-FECOM: Enter DCC channel related parameters	S3
ENT-FECOM-LAN: Enter LAN related parameters	S4
ENT-IP-MAP: Enter TCP/IP map	S3
ENT-PROTN-GRP: Enter protection group	M4
ENT-ROLL: Enter roll	P3
ENT-TCA-PROF: Enter TCA Profile	PM3
ENT-ULS: Enter upper layer stack	S4
ENT-ULSDCC-L3: Create a further OSI node	
ENT-ULSDCC-L4: Enter layer 4 related parameters of the OSI stacks	
ENT-USER-SECU: Enter user security	S5
INIT-EQPT (slot): Initialize equipment (slot)	M4
INH-MSG: Inhibit message	M3
INIT-REG: Initialize Register	PM3
INIT-SYS: Initialize System	S4
OPR-EXT-CONT: Operate External Control	M3
OPR-LPBK: Operate loopback	T4
OPR-PROTNSW: Operate protection switch	M4
OPR-SYNCNSW: Operate synchronization switch	
OPR-VCGTRIB: Operate virtual concatenation group tributary	M3
RLS-EXT-CONT: Release external control	M3
RLS-LPBK: Release loopback	T4
RLS-PROTNSW: Release protection switch	M4
RLS-SYNCNSW: Release synchronization switch	
RTRV-ALL: Retrieve all	P1
RTRV-ACTLCP: Retrieve acceptable circuit pack list	
RTRV-ACTL-CONT	M1
RTRV-ALM: Retrieve alarm	

TL1 command	User privilege code (UCFC/UCAL)
RTRV-ALM-ENV: Retrieve alarm environment	
RTRV-AO: Retrieve Autonomous Output	S1
RTRV-ASAP-ASGNMT: Retrieve ASAP assignment	M1
RTRV-ASAP-PROF: Retrieve ASAP profile	
RTRV-ATTR-CONT: Retrieve attribute control	
RTRV-ATTR-ENV: Retrieve attribute environment	
RTRV-ATTR-MSG: Retrieve attribute message	
RTRV-COND: Retrieve condition	
RTRV-CRS: Retrieve cross-connection	P1
RTRV-CRS-FECOM: Retrieve transparent DCC cross-connection	M1
RTRV-EPORT: Retrieve Ethernet port	P1
RTRV-EQPT (bay): Retrieve Equipment (bay)	
RTRV-EQPT (CP): Retrieve equipment (circuit pack)	
RTRV-EQPT (shelf): Retrieve Equipment (shelf)	
RTRV-EQPT (slot): Retrieve Equipment (slot)	
RTRV-EQPT (Socket): Retrieve equipment	
RTRV-EQPT (system): Retrieve Equipment (system)	
RTRV-EPM: Ethernet performance monitoring	PM1
RTRV-EXT-CONT: Retrieve external control	M1
RTRV-FECOM: Retrieve DCC related parameters	
RTRV-FECOM-LAN: Retrieve LAN channel related parameters	S1
RTRV-HDR: Retrieve header	Any
RTRV-IP-MAP: Retrieve TCP/IP map	S1
RTRV-LOG-ALM: Retrieve log alarm	
RTRV-LOG-NNEVT: Retrieve NN Event Log	
RTRV-LOG-NTFCN: Retrieve notification Log	
RTRV-LOG-PROTNSW: Retrieve log protection switch	
RTRV-LPBK Retrieve loopback	T1
RTRV-MAP-NEIGHBOR: Retrieve map neighbor	S1
RTRV-MAP-NETWORK: Retrieve network map	

TL1 command	User privilege code (UCFC/UCAL)
RTRV-MAP-RING: Retrieve map ring	M1
RTRV-NE: Retrieve NE	S1
RTRV-NE-SECU: Retrieve NE security	
RTRV-OC3: Retrieve OC-3 port	P1
RTRV-OC12: Retrieve OC-12 port	
RTRV-OC48: Retrieve OC-48 port	
RTRV-OC192: Retrieve OC-192 port	
RTRV-OC768: Retrieve OC-768 port	
RTRV-OW: Retrieve Orderwire and User Bytes	M1
RTRV-PM: Retrieve performance monitoring	PM1
RTRV-PRMTR-DATA: Retrieve parameter data	S1
RTRV-PRMTR-SFTWR: Retrieve parameter software	
RTRV-PROTN-GRP: Retrieve protection group	M1
RTRV-SCN-NEIGHBOR: Retrieve SCN neighbor	S1
RTRV-STATE-EQPT (CP): Retrieve equipment state (circuit pack)	M1
RTRV-STATE-EQPT (slot): Retrieve equipment state (slot)	
RTRV-STATE-EQPT (Socket): Retrieve equipment state	
RTRV-STATE-EQPT (system): Retrieve equipment state	
RTRV-STM1: Retrieve STM-1 port	P1
RTRV-STM1E: Retrieve STM1E port	
RTRV-STM4: Retrieve STM-4 port	
RTRV-STM16: Retrieve STM-16 port	
RTRV-STM64: Retrieve STM-64 port	
RTRV-STM256: Retrieve STM-256 port	
RTRV-STS1: Retrieve STS1 tributary	
RTRV-SYNCN: Retrieve synchronization	
RTRV-TCA-PROF: Retrieve TCA profile	PM1
RTRV-ULS: Retrieve upper layer stack	S1
RTRV-ULSDCC-L3: Retrieve layer 3 related parameters	S1
RTRV-ULSDCC-L4: Retrieve OSI layer 4 related parameters	

TL1 command	User privilege code (UCFC/UCAL)
RTRV-USER: Retrieve user	S2
RTRV-USER-SECU: Retrieve user security	S4
RTRV-VC3: Retrieve VC3 tributary	P1
RTRV-VCG: Retrieve virtual concatenation group	
RTRV-VCGTRIB: Retrieve virtual concatenation group tributary	
RTRV-VRTSW: Retrieve Virtual Switch	
SET-ATTR-CONT: Set attribute control	M3
SET-ATTR-ENV: Set attribute environment	
SET-MAP-RING: Set map ring	
SET-OW: Set Orderwire and User Bytes	M3
SET-SID: Set SID	S4
SET-SYNCN: Set synchronization	M3





15 Optical network navigation system (ONNS)

Overview

Purpose This chapter contains detailed information about the TL1 commands related to the so-called Optical Network Navigation System (ONNS) feature.

The ONNS system component name is often shortened to SNN or NN.

Contents

RTRV-PATH: Retrieve ONNS path connection data	15-3
ED-PATH: Edit ONNS connection paths	15-18
ENT-PATH-protClass: Enter ONNS path connection	15-35
DLT-PATH: Delete ONNS path Connection	15-55
RTRV-NNCNFG: Retrieve ONNS configuration data	15-67
ED-NNCNFG: Edit ONNS configuration data	15-72
RTRV-NTDR: Retrieve ONNS data repository	15-75
RTRV-NNDR: Retrieve ONNS Data information	15-88
REPT-NNCHG: Report ONNS data repository changes	15-104
REPT-PTHCHG: Report path change	15-107
REPT-PTHEVT: Report ONNS Path Events	15-121
REPT-NNEVT: Report ONNS internal events	15-129

ED-SYNCDATA: Edit synchronization data	15-133
OPR-DEFRAG: Perform link defragmentation on an ONNS port	15-137
RTRV-PREDEFRAG: Perform pre link defragmentation analysis on an ONNS port	15-141
AUD: Execute audit on various types of ONNS data and return the result of audit	15-146
RTRV-AudLog: Retrieve the last audit result on various types of ONNS data	15-151
Connection status relation to path states	15-156
Path state definitions	15-159
List of error codes	15-161



RTRV-PATH: Retrieve ONNS path connection data

Overview The RTRV-PATH command requests information on an ONNS path which begins in the source node to which the message was addressed. The ONNS source node determines the status of the connection from the information stored in the Network Navigator databases.

The query must be directed to the source node. Querying an existing ONNS path by its **ConnectionID** or **ConnAlias** alone will return the status on all paths associated with the **ConnectionID**. The query response includes a status message like Connected and OK (CON&OK), the list of network element nodes that the path utilizes, and the list of constraint parameters for the connection.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Abortable: No.

Input format A user defined connection alias (an alternate name) may be optionally specified with the RTRV-PATH command. The alias is specified in the spec block as ConnAlias="....." (upto 83 printable ASCII characters+NULL; excluded are the following characters: colon, semicolon, double-quotes, comma). If no **connAlias** is specified, the **connID** is used as the key. If both **connAlias** and **connID** are specified then **connID** is used as the key. If neither is specified the command is denied.

Command Syntax:

RTRV - PATH:*srcTid*:*[srcAid]*:*ctag*::*[servID]*:*[connID]**[specBlock]*;

Input parameters

Command parameters

1. srcTid
Target Identifier of the source node is the logical name of the Host NE. ONNS uses the same *tid* used by Host NE.
The *src_tid* parameter is a case insensitive ASCII character string of up to 20 characters. The allowed ASCII characters are the letters “A” through “Z” and “a” through “z”, the numbers “0” through “9”, and the special characters “+” “.” “_” “/” and “-” (hyphen).
2. srcAid
Source node ONNS application access identifier of the ONNS controller OS command interface port: *snn*.
3. ctag – Correlation Tag
This parameter is included in the command by the TL1 user and is repeated by the network element in the response to allow the TL1 user to associate the command and response messages. The *ctag* parameter is also a connection request identifier that maps to the ReqID assigned by the Management system for the connection request.
The *ctag* parameter is a character strings of up to 6 ASCII characters. The allowed ASCII character string is comprised of alphanumeric characters beginning with a letter, or decimal numerals (a decimal numeral is a string of decimal digits with an optional non-trailing “.”).
4. srvID – Service Identifier
This parameter is a logical tag for the group of connections associated with a service defined by the Service Manager system (or other management entity).
The *srvID* parameter is an integer value range = 1 - 20,000,000. Only one srvID is accepted. ALL is not supported.
5. connID – Connection ID for an existing ONNS optical path connection service
This parameter reports only the connections originating at the specified source node. *ConnID* is formed from the *SrcNodeIP* and IngressPort# and an index #x where LambdaUNITE uses bay =1= shelf.

Values: **connID** or **ALL**: **ALL** retrieves all connection records.
The **connID** parameter is a character strings of up to 35 ASCII
characters. See the **connID** parameter description in the
[“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)
Output parameters section.

6. specBlock

Values: DetailRoute=OFF (default), DetailRoute=ON
DetailRoute=ON will return the portID / trib information from all
nodes in each path of the **connID** specified in the second block
of the response message. DetailRoute is ignored if connID=ALL.
connAlias specifies a user defined string as an alternate name for
the connection instead of **connID**.

Output format If the RTRV-PATH <connID> request completes successfully with a
normal NCDR record, then the following normal completion response
is returned:

```
srcTid date time
M ctag COMPLD
"ConnID=connID,PathID=pathID1,ConnAlias=connAlias,:
srcNIP,srcInPortID,-X-,srcOutPortID,:
node1-IP,node1-InPortID,-X-,node1-OutPortID,:
node2IP,node2InPortID,-X-,node2OutPortID,:
node3IP,node3InPortID,-X-,node3OutPortID,:
Node72IP, , , ,NO_REPLY:
.....
node7IP,node7InPortID,-X-,node7OutPortID,:
destNIP,destInPortID,-X-,destOutPortID,"
"ConnID=connID,PathID=pathID2,ConnAlias=connAlias,:
srcNIP,srcInPortID,-X-,srcOutPortID,:
node6IP,node6InPortID,-X-,node6OutPortID,:
node8IP,node8InPortID,-X-,node8OutPortID,:
node9IP,node9InPortID,-X-,node9OutPortID,:
node55IP,node55InPortID, ,node55OutPortID,:
destNIP,destInPortID,-X-,destOutPortID,"
;
```

If the RTRV-PATH request with **connID** = ALL completes
successfully, then the following normal completion response is
returned:

```
srcTid date time
M ctag RTRV
  "ConnectionID1_dataRecord"
  ...
  "ConnectionID4_dataRecord"
srcTid date time
M ctag RTRV
  "ConnectionID5_dataRecord"
>
srcTid date time
M ctag COMPLD
  "ConnectionID6_dataRecord"
  ...
  "ConnectionID11_dataRecord"
;
```

The RTRV PATH <connID=ALL> command will send a maximum of 8 connection records per block. On all large output message blocks but the last, the continuation RTRV completion code is used and the semicolon(;) is replaced with a (>) terminator. Then on the last record block, the COMPLD completion code is used with the final semicolon (;) data block terminator. [D] Note: This RTRV PATH <ALL> command can produce large amounts of data. This will require proper sizing of the receive buffer of the OS system.

Output parameters

1. srcTid – Source Node Identifier
This parameter is the currently active name of the NE to which the command is addressed.
Refer to the Input parameters above for the values of this parameter.
2. date
This parameter is set to the date when the output message is generate: YYYY-MM-DD where YYYY=2000-2099, MM=01-12, DD=01-31.
3. time
This parameter is set to the time when the output message is generated: HH:MM:SS where HH=00-23,MM=00-59, SS=00-59.

4. ctag – Correlation Tag
See the parameter description in the Input parameters section above.
5. completioncode
Standard TL1 completion code result: **COMPLD**, for success; RTRV, for data continuation.
6. connID
See the parameter description in the Input parameters section above.
7. connAlias
This is user defined connection alias string, up to 83 characters long printable ASCII string.
8. connStatus
This parameter is the overall status of the connection **connID** which may be different than the status of an individual **pathID** in that connection.
ConnStatus = **pst** (PrimaryState)& **sst** (SecondaryState)& **tst** (TertiaryState). Up to two of the allowed values are simultaneously permitted as a sst parameter. The two values must be separated by an ampersand ("&"). Status values are 7 characters or less.
pst values:
 - CON: Connected
 - DLT: Deleted
 - NOCON: Not Connected
 - UNKNOWN: Conn state unknown.**sst & tst** values
 - OK: Conn good
 - FAILED: Conn failed
 - SETUP: Conn SetUp occurring
 - TRDOWN: Conn teardown occurring
 - NO-IN: Conn failed, signal in bad
 - RSTOR: path restore occurring
 - RSTRD: Conn restored
 - RSTRFL: Conn restore failed
 - DLT-FL: Delete operation Failed

- UNKNOWN: Conn state unknown
- WTORSTR: Waiting to restore path
- PREMPT: Path pre-empted
- SETUPFL: Connection SetUp Failed
- FL-NVM: Not saved in NVM.

Example: ConnStatus - CON&FAILED.

9. pdir – Path Direction Topology - path direction.
Uni-direction A-Z (1WAY) or Bi-direction - (2WAY).
Values:
 - 1WAY: (default) path from source to destination shall be uni-directional.
 - 2WAY: path from source to destination shall be bi-directional.
10. protectionClass
This parameter defines the type of restoration protection assigned to the path connection during path setup.
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Output parameters section.
11. bandwidth - Requested bandwidth/signalRate
Link **signalRate** is equal to or greater than the minimum cross-connect rate **minXCrate** of the port_type (SNN only).
Values: STS1, STS3, STS12 STS48, STS192, STS768.
12. srvID - Service Identifier
srvID is a logical tag for the group of connections associated with a service defined by the Service Manager system.
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
13. nodeListUsage1
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input Parameters section.
14. nodeList1
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input Parameters section.
15. nodeListUsage2
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input Parameters section.

16. nodeList2
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input Parameters section.
17. srlgExcludeList
List of the SRLG_ID’s used to establish the connection path and constrain the link selection process.
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input Parameters section.
18. specBlock1
Returns values entered in the input *specBlock* of the original ENT-PATH command and any values entered in the RTRV-PATH in its specBlock.
See the parameter description in the Spec block section below.
19. srcNID
ONNS source node Network Signaling IP Access identifier (nid).
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
20. srcPortID
ONNS Source node in port: port identifier (srcPortId).
Value: {srcPortID}
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
21. destNID
ONNS destination node Network IP Access identifier (nid).
See the parameter description in the [“ED-PATH: Edit ONNS connection paths” \(15-18\)](#) Input parameters section.
22. destPortID
ONNS Destination node outPort: port identifier (destPortID).
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
23. brDestNID
ONNS bridged Y path destination node Network Signaling IP Access identifier (nid) - (only supported for Unprotected connections.) The following required *brDestPortID* field contains the destination node egress *connPoint* number that connects the

destination node to the gateway switch or edge router, for bi-directional connections are in the following field.

Values: *{nnn.mmm.ppp.qqq}*. IP Access identifier format is 12 numeric character IP address with "." separator. If the following required **brDestPortID** field is not supplied, this field is ignored.

24. brDestPortID - bridged Y path destination optical **connPoint** identifier

brDestPortID includes Bay/Frame#, Shelf#, Slot / Pack#, Port#, trib# of destination node egress port. SNN assume a bidirectional port pair.

Values: The **connPoint** number parameter **portID** is formed from 5 values {1-[1]-[1-39]-[1-16]-[1-128]} (such as bay-shelf-slot-port-trib, 1-1-32-8-128), where the 5 items represent the bay 1, shelf 1, module 32, port location 8, tributary 128 with "-" separator. -trib is required for SNN ports.

25. pathID1

The **pathID** of the specific path to be reported.

See the parameter description in the ["ENT-PATH-protClass: Enter ONNS path connection" \(15-35\)](#) Output parameters section.

26. pathState1

Path State1 = **pst** (PathState)& **sst** (SecondaryState) [& **tst**]. Up to two of the allowed values are simultaneously permitted as a sst parameter. The two values must be separated by an ampersand ("&").

pst values:

- CON: Connected
- NOCON: Not Connected
- DLT: Deleted.

sst & **tst** values

- OK: Conn good
- FAILED: Conn failed
- SETUP: Conn SetUp occurring
- TRDOWN: Conn teardown occurring
- NO-IN: Conn failed, signal in bad
- RSTOR: path restore occurring
- RSTRD: Conn restored
- RSTRFL: Conn restore failed

- DLT-FL: Delete operation Failed
- UNKNOWN: Conn state unknown
- WTORSTR: Waiting to restore path
- SETUPFL: Connection SetUp Failed
- RVRTFL: Conn revert failed

Example: PathStatus - NOCON&PREMPTD.

Status values are 7 characters or less. Some states listed in this list will only occur within a DLT-PATH command response or in a REPT-PTHCHG / PTHEVT notification.

27. pNodeList1

The path node list contains the comma separated list of nodes that the path *pathID1* traverses in A-Z order from the source node. List values are ampersand separated.

Values: *{nnn.mmm.ppp.qqq}& ... &{nodeIDx}* . IP Access identifier format is 12 numeric character ip address with "." separator.

28. pathID2

The 2nd PathID of the specific *connectionID* queried.

See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)Output parameters section.

29. pathState2

Path State = *ps1* (PathState)& *ss1* (SecondaryState) [*& ss2*’].

See the *pathState1* parameters description in the Output parameters section above.

30. pNodeList2

The path node list contains the comma separated list of nodes that the path *pathID2* traverses in A-Z order from the source node. List values are ampersand separated.

Values: *{nnn.mmm.ppp.qqq}& ... &{nodeIDx}* . IP Access identifier format is 12 numeric character ip address with "." separator.

Spec block parameters

1. connMode

The connection mode (connMode) determines ONNS treatment of the failed path after an auto-reroute restoration. When *connMode* is set in an ED-PATH-PROT command with reqType=setProt, it determines the new restoration mode of the

connection. The ED-PATH operation may add a new path to the connection in the case of N1PLUS1 or delete a path when a connection goes from N1PLUS1 to UNPROT.

Ex.connMode=NON-REVERTIVE causes path setup to be auto-reroute non-revertive.

Values:

- UNPROT: converts a auto connection to a unprotected
- N1PLUS1: Network 1+1 protected connection.
- NON-REVERTIVE: Auto-reroute non-revertive.
- YCONN: Y-connection.

2. detailRoute

DetailRoute is ignored if connID=ALL. **DetailRoute**=ON will return the portID/ tribID information from all nodes in each path of the **connID** specified in separate response messages.

The "DetailedRoute Output Parameters" description see below.

Detailed route output parameters

1. detailPath record

detailPath record for the connection **connID** requested. Multiple detailPath records may exist for a connection.

2. connID

Connection ID for an existing ONNS path connection service.

See the **connID** parameter syntax and description in the ["RTRV-PATH: Retrieve ONNS path connection data" \(15-3\)](#)

Input parameters section.

3. pathID

The PathID of the specific path to be reported.

See the **pathID** parameter description in the ["ENT-PATH-protClass: Enter ONNS path connection" \(15-35\)](#) Output parameters section.

4. xcon record

An xcon record exists for each node in the path.

5. nodeID

ONNS node Network IP Access identifier (nodeID).

See the **srcNID** parameter description in the ["ENT-PATH-protClass: Enter ONNS path connection" \(15-35\)](#) Input parameters section.

6. connPtID1
ONNS *connPt* identifier (connPtID 1) for the ingress RX connPt of the cross-connection.
See the *srcPortID* parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
7. connPtID2
ONNS connPt identifier (connPtID2) for the egress TX connPt of the cross-connection.
See the *srcPortID* parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
8. detailRouteStatus
This parameter indicates the status of a node and/or its cross-connection.

Example output

The following is an example shows a successful execution of the RTRV-PATH command:

```
LT-ONNS9 2001-01-01 08:00:00
M 113456 COMPLD
"ConnID=135.13.196.203&1-6-5-3-1&1,ConnStatus=CON&OK,
1WAY,UNPROT,STS48,ConnAlias=AEXP-NY-BOS-ckt,
MaxDelay=155,SrvID=13514823,Exclude=135.13.42.3&
135.213.242.123& 135.13.198.22,, , ,
RstrPriority=1,,SrcNID=135.13.196.203:1-6-5-3-1,
DestNID=135.13.242.103:1-2-5-5-1:
PathID=135.13.196.203-432165,State=CON&OK,
NodeList=135.13.196.203&135.13.196.123&135.13.42.3&
135.13.242.103"
;
```

If the RTRV-PATH ALL request completes successfully with an empty NCDR, then the following normal completion response is returned:

```
srcTid date time
M ctag COMPLD
;
```

The following example shows the successful completion of a RTRV-PATH command with the Path DetailRoute=ON by the NE.

```
LT-ONNS-9 2002-06-04 08:00:00
M 14345 COMPLD
"ConnID=135.14.196.203&1-6-5-3-1&1,
PathID=135.14.196.203-32165,:
135.14.196.203,1-6-5-3-1,-X-,1-2-4-3-1,:
135.13.196.123,1-1-5-3-1,-X-,1-2-2-3-1,:
135.13.42.63,1-1-3-1-1,-X-,1-1-4-4-1,:
135.13.18.23,1-1-4-4-1,-X-,1-2-1-3-1,:
135.13.242.103,1-1-2-7-1,-X-,1-2-5-1-1,"
;
```

Error responses

ONNS System Not Available, MAINT mode (SNAM)

If the source node NE receives a RTRV-PATH command when ONNS System / ConnectionMgr is not ready / or Connection Data Repository is unavailable, then the following error response is returned:

Error code: E200 - Status, Not Available, MAINT mode
\",srcNodeIP

Retrieve DR query - RTRV-mod ALL fails to complete

The source node NE receives a RTRV-PATH (NNDR/NTDR) command and the output response aborts or fails before the data transfer has been completed, then the following error response is returned:

Error code: E210 -Output Response Failed while Sending

Note: Multiple connection records (with completion code RTRV) may have been successfully transmitted before this message terminates the transfer.

Path *connectionID* non-existant (ICNE)

If the Source Node ONN receives a RTRV-PATH command when the specified connection path does not exist, then the following error response is returned:

Error code: E220 - Input, ConnectionID Non-Existent

Invalid service ID

If the source node NE receives a RTRV-PATH command with an invalid ServiceID (*srvID*) parameter value, then one of the following error responses is returned:

Error code: E030 - Syntax, Parameter Data Invalid,
invalid_parameter=srvID

Invalid command

If an unrecognized or unsupported command is received, then one of the following error responses is returned:

Error code: E235 - Input, Invalid CoMmand, Command not found
or recognized

Error code: E238 - Syntax, Invalid Command too Long

Syntax, Invalid punctuation

If a command is received that contains incorrect punctuation, then one of the following error responses is returned:

Error code: E240 - Syntax, InValid Punctuation

Syntax invalid or unimplemented parameter

If a command is received that contains an empty field that requires a parameter, or if a parameter input is not an allowed value for the field, then one of the following error responses is returned:

Error code: E246 - Syntax, Parameter Name Invalid,
invalid_parameter=fieldName

Error code: E030 - Syntax, Parameter Data Invalid,
invalid_parameter=fieldName

Error code: E040 - Syntax, Data Not Consistent

Error code: E037 - Null ConnID and empty or null ConnAlias

Error code: E221 - REPLY_DENIED_NO_CONNALIAS, Input,
connAlias Non Existant

Invalid target identifier

If a command is received with an invalid Target Identifier, then one of the following error responses is returned:

Error code: E250 - Input, Invalid TArget Identifier

Error code: E805 - Input, Missing Target Identifier (TID)

Invalid access identifier

If a command is received with an invalid access identifier, then one of the following error response is returned:

Error code: E260 - Input, Invalid ACcess identifier

Error code: E800 - Input, Missing Access Identifier (AID)

Invalid correlation tag (CTAG) or RequestID

If a command is received with an invalid correlation tag, then one of the following error responses is returned:

Error code: E265 - Input, Invalid Correlation Tag

Error code: E266 - Input, Missing Correlation Tag

Status, Connection Resource Busy (SCRB)

If the Source Node ONNS receives an ED-PATH or DLT-PATH command when the specified connection path has another connection operation pending, then the following error response is returned:

Error code: E110 - Status, Connection Resource Busy, ONNS Path operation in progress

Status, All Resources Busy (SARB)

Status, All Resources Busy, If a command can not be completed due to insufficient processing resources or the *SNNmode* = MAINT, then one of the following error responses is returned:

Error code: E280 - Status, All Resources Busy, (the command can not be completed due to insufficient processing resources)

Error code: E281 - Status, Insufficient Processing Resources

Status, Requested Operation Failed (SROF)

If a command can not be completed due an internal hardware or software failure, then the following error response is returned:

Error code: E290 - Status, Requested Operation Failed

Related TL1 messages

- [“ED-PATH: Edit ONNS connection paths” \(15-18\)](#)
- [“DLT-PATH: Delete ONNS path Connection” \(15-55\)](#)
- [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)
- [“REPT-PTHEVT: Report ONNS Path Events” \(15-121\)](#)
- [“REPT-PTHCHG: Report path change” \(15-107\)](#)
- [“REPT-NNCHG: Report ONNS data repository changes” \(15-104\)](#)
- [“ED-NNCNFG: Edit ONNS configuration data” \(15-72\)](#)

- [“RTRV-NNCFG: Retrieve ONNS configuration data” \(15-67\)](#)
- [“RTRV-NNDR: Retrieve ONNS Data information” \(15-88\)](#)
- [“RTRV-NTDR: Retrieve ONNS data repository” \(15-75\)](#)
- [“REPT-NNEVT: Report ONNS internal events” \(15-129\)](#)



ED-PATH: Edit ONNS connection paths

Overview	The ED-PATH -mod command is used to modify properties or configuration of one or more transmission connection(s) between two NEs in the network. The ED-PATH-PROT command is used to change a connection parameter or modify the protectionClass of a connection. ED-PATH-ROLL command is used to modify a connection / path location.
Properties	Login Privilege: User Privilege Code (UCFC/UCAL): P3 Abortable: No
Input format	Command Syntax: ED-PATH-PROT :<i>srcTid:srcAid:ctag::[srvID]:reqType, [connID],[pathID]::[nodeListUsage1, nodeList1]: [srlgExcludeList],[linkIncludeID][:specBlock];</i> Command Syntax: ED-PATH-ROLL :<i>srcTid:srcAid:ctag::[srvID]:reqType, [connID],[pathID]:[maxDelay]::[nodeListUsage1,nodeList1]: [srlgExcludeList],[linkIncludeID][:specBlock];</i> Command Syntax: ED-PATH :<i>srcTid:srcAid:ctag::[srvID]:[connID]: [ConnAlias=connAlias],newconnAlias=newconnAlias;</i>
Input parameters	he ED-PATH-mod command does not affect the bandwidth of the connection that was determined when the original connection was set up.

Command parameters

1. mod
Command modifier that specifies the type of light path operation that will be performed. The input parameters may change with each variation of the command to suit the requirements of that command. Not all fields apply to all commands, see section Input format above.
2. srcTid – Target Identifier of the source NE node
ONNS uses the same *tid* used by the Host NE.
Refer to the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command for the input parameter syntax and description of this parameter.
3. srcAid
ONNS application access identifier: *snn*.
Refer to the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command for the input parameter syntax and description of this parameter.
4. ctag – Correlation Tag
The ctag parameter is included in the command by the TL1 user and is repeated by the NE in the response to allow the TL1 user to associate the command and response messages. The correlation tag parameter is also a connection request identifier that maps to the ReqID assigned by the management system for the connection request.
Refer to the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command for the input parameter syntax and description of this parameter.
5. srvID – Service Identifier
This parameter is a logical tag for the group of connections associated with a service defined by the Network Management system (or other management entity).
The *srvID* parameter is a 4 byte integer. See the srvID parameter allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters description.

6. reqType – Request Type (ED-PATH-PROT command)
This parameter indicates the operation that is to be performed on the connection specified.
reqType default = **setParam**, a valid **ConnectionID** in this field will set the restoration priority of the specified **ConnectionID** to the value in the specBlock. ONNS selects the path using existing connection constraints.
Parameter format is:
 - :setParam,ConnectionID
 - :setProt,ConnectionIDValues
 - **setParam** modifies the value of rstrPriority of the connection to the value specified in the spec block.
 - **setProt** converts the connection specified by its connID to a new protection type specified by the connMode parameter in the specBlock
7. reqType – Request Type (ED-PATH-ROLL command)
This parameter indicates the operation that is to be performed on the connection specified.
reqType default = **rollPath**, a valid **ConnectionID** in this field will create a new path and then roll the connection to the new path.
Parameter format is :rollPath,ConnectionID.
Values
 - **rollPath** is used to add a bridged / merge path to an existing connection and then rolls to the new path
8. connID
ConnectionID for an existing ONNS optical path connection service.
See the **connID** parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
9. pathID
The PathID of the specific path to be modified.
See the **pathID** parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

10. maxDelay
Maximum transport delay through all nodes in the path connection. The propagation delay time needed for a signal to traverse from source node to destination node over the light path is not greater than <n> milliseconds.
Values: 0 (default) - 65535; 0 is used to select NoDelayLimit.
Used only in ED-PATH-ROLL
11. nodeList Usage1
ONNS uses the list of nodes included in the **nodeList1** array block in a manner specified by the **nodeListUsage1** variable. Exclusion node list below applies to new path only when the requested command requires to set up a new path such as in modifying a protection type to a network 1+1 connection, or in rolling to new path.
Values:
 - **explicit**: node list below contains the NE nodes of the lightpath in the explicit order they are to be used.
 - **exclude**: nodes in the nodeList below must all be excluded from the lightpath created.
12. nodeList1
explicit include - List of intermediate nodes that specify the light path in the exact node order specified in the input. Source and destination nodes are assumed to be included implicitly. The node IP address values are ampersand separated as shown here:
nid1([&nid2& ...&nidX&]) where X = 5.
exclude - List of nodes that must all be excluded from the light path. The node IP address values are ampersand separated as shown here: nid1([&nid2& ...&nidX&]) where X = 15.
Values: **nid** ([&nidX])*; the **nid** parameter is the IP address of the node, in the following format: {nnn.mmm.ppp.qqq}. List values are ampersand separated. The array of NE nodes in **nodeList1** that will be included or excluded based on the **nodeListUsage1** field. A non-existent nodeIP will be ignored in an Exclude nodeList A non-existent nodeIP will cause setup failure in an explicit nodeList.
13. srlgExcludeList - list of Shared Risk Link Group (SRLG) Identifiers that are to be used to exclude links from the connection path(s) being created. SRLG identifiers are properties of links between ONNS nodes. List values are ampersand separated. A maximum of 10 SRLG_ID's may be specified.

SRLG Exclude List applies to new path only when the requested command requires to set up a new path such as in modifying a protection type to a Network 1+1 connection, or in rolling to new path.

Values: 1 - 65535.

14. linkIncludeID

This is a list of connection constraint link properties such as LinkIncludeID's that must be valid to included the link in the connection path(s) created. LinkIncludeID is a link connection property that can be used to group and classify links. Link Include ID applies to new path only when the requested command requires to set up a new path such as in modifying a protection type to a Network 1+1 connection, or in rolling to new path.

See the *LinkIncludeID* parameter allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)

Input parameters description.

Values: 1 - 65535

Spec block parameters

1. rstrPriority

This parameter describes the restoration pre-emptibility of the Connection. A connection with a priority level 7 can be pre-empted by all restorations or connection requests except those that are also at rstrPriority=7. Restoration pre-emption occurs when the priority value of the restoring connection is lower than priority of the connection being pre-empted.

Values: 0 (default) - 7. 0 = locked, the locked connection is unaffected by restoration. *rstrPriority* = 0 is the highest restoration priority.

2. connMode

The connection mode (connMode) determines NN treatment of the failed path after an auto-reroute restoration.

When ConnMode is set in an ED-PATH-PROT command with reqType=setProt, it determines the new restoration mode of the connection. The ED-PATH operation may add a new path to the connection in the case of N1PLUS1 or delete a path when a connection goes from N1PLUS1 to UNPROT.

Ex.ConnMode=NONREVERTIVE causes path to be modified to be Auto-reroute non-revertive.

Values:

- UNPROT: converts a auto connection to a unprotected
- N1PLUS1: Network 1+1 protected connection
- NONREVERTIVE: Auto-reroute non-revertive
- REVERTIVE: Auto-reroute revertive.

Not all **connMode** values are allowed for all ED-PATH-mod commands. Modifying protection type to/from Y-connection is not allowed. Rolling a network 1+1 connection or Y-connection is not allowed.

3. connAlias

This parameter specifies a user defined string as an alternate name for the connection. Once defined, the connAlias can be used as an alternate key in subsequent commands.

Values: The string consists of upto 83 printable ASCII characters+NULL. The following characters cannot be used in the string: colon, semicolon, comma, double quotes.

4. newconnAlias

This parameter specifies a new user defined string that will replace the existing **connAlias**.

Values: The string consists of upto 83 printable ASCII characters+NULL. The following characters cannot be used in the string: colon, semicolon, comma, double quotes.

Output format

Normal system response to ED-PATH-PROT when changing protectionClass:

```
srcTid date time
M ctag COMPLD
"ConnID=connID,ConnStatus=connStatus,pdir,
protectionClass,bandwidth,ConnAlias=connAlias,
MaxDelay=dd,[SrvID=srvID],[nodeListUsagel=
nodeList1],,[SrlgExclude=srlgExcludeList],
IncludeID=0,connMode=NON-REVERTIVE&rstrPriority=3,
SrcNID=srcNID,srcPortID,DestNID=destNID,destPortID:
PathID=pathID1,State=pst1&sst1&tst1,
NodeList=pNodeList1:
PathID=pathID2,State=pst2&sst2&tst2,
NodeList=pNodeList2"
;
```

Normal ED-PATH-PROT system response when setting restoration priority:

```

srcTid date time
M ctag COMPLD
"ConnID=connID,ConnStatus=connStatus,pdir,
protectionClass,bandwidth,ConnAlias=connAlias,
MaxDelay=dd,[SrvID=srvID],[nodeListUsage1=
nodeList1],,[SrlgExclude=srlgExcludeList],
IncludeID=linkIncludeID,rstrPriority=3,
SrcNID=srcNID,srcPortID,DestNID=destNID,destPortID:
PathID=pathID1,State=pst1&sst1&tst1,
NodeList=pNodeList1:
PathID=pathID2,State=pst2&sst2&tst2,
NodeList=pNodeList2"
;

```

Normal system response to ED-PATH when replacing the user defined connection alias:

```

srcTid date time
M ctag COMPLD
"ConnID=connID,ConnStatus=connStatus,pdir,
protectionClass,bandwidth,ConnAlias=connAlias,
MaxDelay=dd,[SrvID=srvID],[nodeListUsage1=nodeList1],,
[SrlgExclude=srlgExcludeList],[IncludeID=
linkIncludeID],,SrcNID=srcNID,srcPortID,DestNID=
destNID,destPortID:
PathID=pathID1,State=pst1&sst1&tst1,NodeList=
pNodeList1:
[PathID=pathID2,State=pst2&sst2&tst2,NodeList=
pNodeList2]"

```

Normal system response to ED-PATH-ROLL:

```

srcTid date time
M ctag COMPLD
"ConnID=connID,ConnAlias=connAlias,ConnStatus=
connStatus,pdir,protectionClass,bandwidth,ConnAlias=
connAlias,MaxDelay=dd,[SrvID=srvID],[nodeListUsage1=
nodeList1],,[SrlgExclude=srlgExcludeList],IncludeID=
linkIncludeID,rstrPriority=3,,SrcNID=srcNID,
srcPortID,DestNID=destNID,destPortID:

```

```
PathID=pathID1,State=pst1&sst1&tst1,NodeList=pNodeList1:
PathID=pathID2,State=pst2&sst2&tst2,NodeList=pNodeList2"
;
```

Output parameters

The details of the output parameters *srcTid*, *ctag*, *reqType*, *nodeListUsage1*, *nodeList1* and their syntax and allowed values are included in the Input parameters section of the ED-PATH command.

1. *srcTid* – Source Node Identifier
This parameter is the currently active name of the NE to which the command is addressed.
Refer to the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command for the values of this parameter.
2. *date*
This parameter is set to the date when the output message is generated: YYYY-MM-DD where YYYY=2000-2099, MM=01-12, DD=01-31.
3. *time*
This parameter is set to the time when the output message is generated: HH:MM:SS where HH=00-23, MM=00-59, SS=00-59.
4. *ctag* – Correlation Tag
This parameter is included in the command by the user and is repeated by the NE in the response to allow the TL1 user to associate the command and response messages.
See the allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
5. *completion code*
Standard TL1 completion code result: **COMPLD**, for success.
6. *connID*
Connection ID for an existing ONNS optical connection service.
See the *connID* parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
7. *connAlias*
User defined connection alias string. Up to 83 characters long printable ASCII string.

8. connStatus - pst & sst & tst'

This parameter is the overall status of the connection connID which may be different than the status of an individual pathID in that connection.

ConnStatus = *pst* (PrimaryState) & *sst* (SecondaryState) & *tst* (TertiaryState). Up to two of the allowed values are simultaneously permitted as a *sst* parameter. The two values must be separated by an ampersand ("&"). Status values are 7 characters or less.

pst values:

- CON: Connected
- NOCON: Not Connected

sst and *tst* values

- OK: Conn good
- FAILED: Conn failed
- SETUP: Conn SetUp occurring
- TRDOWN: Conn Delete in progress
- NO-IN: Conn failed, signal in bad
- SETUPFL: Connection SetUp Failed
- DLT-FL: Delete operation Failed
- PREMPD: Conn Pre-empted
- FL-NVM: Not saved in NVM

Example: ConnStatus - CON&FAILED

9. pdir – Path Direction Topology

See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

10. protection Class

This parameter defines the type of restoration protection assigned to the path connection. *protectionClass* determines the restoration protection operation that ONNS will perform on the connection in the event of path failure.

Values:

- UNPROT - Unprotected
- AUTONR - Auto-Rerouting, Non-Revertive
- N1PLUS1 - 1+1 Network Protection
- AUTORV - Auto-Rerouting, Revertive.

11. bandwidth
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
12. maxDelay
Maximum transport propagation delay through all nodes in the path. Returns values in input *maxDelay*.
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
13. srvID
This is a tag for the group of connections associated with a service defined by the Network Management system.
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
14. nodeList Usage1
See the parameter description in the Input parameters section above.
15. nodeList1
See the parameter description in the Input parameters section above.
16. nodeListUsage2
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
17. nodeList2
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
18. srlgExcludeList
List of the SRLG_ID's used to establish the connection path and constrain the link selection process. List values are ampersand separated.
See the parameter description in the Input parameters section above.
19. linkIncludeID

A connection constraint link property such as *LinkIncludeID* that must be valid to included the link in the connection path(s) created.

- ***LinkIncludeID*** is a link connection property that can be used to group and classify links

- ***VpnID*** is a special case of this associative property.

See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.

20. specBlock1

See the specBlock description in the Input parameters section above.

21. srcNID

ONNS source node Network Signaling IP Access identifier (srcNID). See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.

22. srcPortID

ONNS Source node ingress port: connPoint identifier (srcPortID)
Value: {srcPortID}

See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.

23. destNID

ONNS destination node Network Signaling IP Access identifier (destNID). See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.

24. destPortID

ONNS destination node out_port: optical connPoint identifier:
{destPortID}

See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.

25. pathID1

The ***pathID*** of the specific lightPath that was modified.

Currently, the ***pathID*** is formed from the

srcNodeSigIPaddr+index#

See the parameter allowed values in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

26. pathState1

PathState1 = *pst* (PathState)& *sst* (SecondaryState) [& *sts* (TertiaryState)]. Up to two of the allowed values are simultaneously permitted as a sst parameter. The two values must be separated by an ampersand ("&").

pst values:

- CON: Connected
- NOCON: Not Connected
- DLT: Deleted

sst values

- OK: Conn good
- FAILED: Conn failed
- SETUP: Conn SetUp occurring
- TRDOWN: Path Delete in progress
- NO-IN: Conn failed, signal in bad
- SETUPFL: Path SetUp Failed
- PREMPD: Path Pre-empted
- DLT-FL: Delete operation Failed.

Example: PathStatus - NOCON&FAILED.

27. pNodeList1

The path node list contains the comma separated list of nodes that the path *pathID1* traverses in A-Z order from the source node. List values are ampersand separated.

Values: {*nnn.mmm.ppp.qqq*}& ... &{*nodeIDx*} . IP Access identifier format is 12 numeric character ip address with "." separator.

28. pathID2

The PathID2 of the specific connectionID modified. Optional field that is present if the connection has two paths.

See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

29. pathState2

Additional textual results information for pathID2, Path State2 = ***pst2*** (PathState) & ***sst2*** (SecondaryState) & ***tst2***.

See the *pathState1*, *sst* parameter description above.

30. pNodeList2

The path node list2 contains the comma separated list of nodes that the path pathID2 traverses in A-Z order from the source node. List values are ampersand separated.

Values: ***{nnn.mmm.ppp.qqq}& ... &{nodeIDx}*** . IP Access identifier format is 12 numeric character ip address with "." separator.

Example input/output Output example with a ***protectionClass*** change:

```
LT-ONNS-256 2002-01-01 08:00:00
M 123456 COMPLD
"ConnID=135.14.196.23&1-5-13-4-1&1,ConnStatus=CON&OK,
2WAY,AUTORV,STS48,ConnAlias=AmericanExp-NY-BOS-ckt,
MaxDelay=44,SrvID=12354,,,IncludeID=0,rstrPriority=5,
SrcNID=135.14.196.23,1-5-13-4-1,
DestNID=135.13.196.123,1-2-5-5-1:
PathID=135.14.196.23-43516,State=CON&OK,
NodeList=135.14.196.23&135.13.42.3&135.14.242.133&
135.13.42.15:PathID=135.14.196.23-43231,State=CON&OK,
NodeList=135.14.196.23&135.13.22.3&135.13.24.3&
135.13.44.93&135.13.196.123"
;
```

Output example with a parameter change:

```
LT-ONNS-256 2002-06-01 08:00:00
M 123456 COMPLD
"ConnID=135.14.196.23&1-5-13-4-1&1,ConnStatus=CON&OK,
2WAY,AUTORV,STS48,MaxDelay=44,SrvID=1.2.3.4-5,Exclude=
135.13.42.3,,SrlgExclude=10&24&83&18, IncludeID=0,
rstrPriority=5,SrcNID=135.14.196.23,1-5-13-4-1,
DestNID=135.13.196.123,1-2-5-5-1&1-2-5-5-1:
PathID=135.14.196.23-43516,State=CON&OK,
NodeList=135.14.196.23&135.13.42.3&135.14.242.133&
135.13.42.15:PathID=135.14.196.23-43231,State=CON&OK,
NodeList=135.14.196.23&135.13.22.3&135.13.24.3&
```

```
135.13.44.93&135.13.196.123"
;
```

The following is an example shows a successful execution of the ED-PATH-ROLL command:

```
LT-ONNS-256 2002-09-01 08:00:00
M 123459 COMPLD
"ConnID=135.14.196.23&1-5-3-2-49&2,ConnStatus=CON&OK,
2WAY,AUTONR,STS48,ConnAlias=AmericanExp-NY-BOS-ckt,
MaxDelay=65,SrvID=1351465478,Exclude=135.13.42.13&
135.213.242.103& 135.13.198.22,,SrlgExclude=65&73&83&19,
IncludeID=39,rstrPriority=5,SrcNID=135.14.196.23,
1-5-3-2-49,DestNID=135.13.196.123,1-2-5-2-1:
PathID=135.14.196.23-54326,State=CON&OK,
NodeList=135.14.196.23&135.13.42.3&135.14.242.133&
135.13.196.123:PathID=135.14.196.23-43876,State=DLT,
NodeList=135.14.196.23&135.13.42.153&135.13.242.133&
135.13.196.12"
;
```

Output example with old and new *connAlias* (ED-PATH):

```
LT-ONNS-256 2003-02-11 16:34:13
M 3 COMPLD
"ConnID=192.168.20.1&1-1-1-1-1&1,ConnStatus=CON&OK,
1WAY,AUTONR,STS3,ConnAlias=newname,
MaxDelay=60,,,,IncludeID=0,,,
SrcNID=192.168.20.1,1-1-1-1-1,DestNID=192.168.20.2,
1-1-1-1-1:PathID=192.168.20.1-1,State=CON&OK,
NodeList=192.168.20.1&192.168.20.3&192.168.20.2:
PathID=0.0.0.0-0,State=NOCON,
NodeList=192.168.20.1&192.168.20.5&192.168.20.2"
;
```

Error responses

Refer to the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command Error responses section. The error responses listed there also apply to the ED-PATH-mod command.

Insufficient network resources

Error code: E001 - Insufficient Network Resources in the Topology DR

Destination un-reachable (DUCF)

If the destination is un-reachable by the ED-PATH-PROT command, then one following error response is returned.

Error code: E010 - Destination Un-reachable - Connection setup Failed

The following list identifies conditions that will cause similar error responses or one of the other ENT-PATH path setup failure messages:

Error code: E011 - Resource Selection or Reservation Failure + errorData(NodeID=nodeIP)

Error code: E012 - Status, XConn Failure caused path setup failure + errorData

Error code: E013 - Status, Signaling Communication link Failure (or abort) caused path setup failure + errorData(NodeID=nodeIP)

Error code: E014 - Status, XConn Timeout Failure caused path setup failure+ errorData

Error code: E015 - Status, NN Timeout Failure caused path setup failure + errorData(NodeID=nodeIP)

Error code: E016 - Status, Host interface TimeOut Failure caused path setup failure + errorData (NodeID=nodeIP)

Error code: E017 - Status, Signaling Timeout +(NodeID=nodeIP)

Error code: E018 - Status, Edge Port Used up + errorData

Error code: E019 - Status, Existing Non-NN XConn + errorData

Error code: E022 - Status, Path Setup Failure caused by signal transmission failure at egress node + errorData

Maximum delay errors on calculated path

he maximum transport delay exceeded error response is shown below.

Error code: E020 - Maximum Transport Delay Exceeded on calculated path

ED-PATH request denied - Parameter invalid

The following list identifies conditions that will cause similar error responses:

Error code: E030 - Syntax, Parameter Data Invalid,
invalid_parameter=fieldName

Error code: E032 - Input, Source nodeIP address is invalid

Error code: E033 - Input, Node List has Invalid / unknown IP
address

Error code: E036 - Input, Invalid New ConnAlias

Error code: E037 - Input, Neither ConnID nor ConnAlias
Specified

ED-PATH-PROT request / operation errors

The following list identifies conditions that will cause similar error
responses:

Error code: E110 - Status, Connection Resource Busy, ONNS
Path operation in progress

Error code: E335 - Status, Connection Operation Failed

Error code: E336 - Status, Connection already has two paths

ED-PATH-ROLL Error Responses

If the network element receives an ED-PATH-ROLL command where
the pathID parameter value does not exist, then one of the following
error response is returned:

Error code: E350 - Status, Path Roll Failed

Error code: E351 - Status, Path Operation not Allowed on
connection in Restoration queue

***ConnectionID* does not exist**

If the NE receives an ED-PATH-PROT command where the portID
parameter value is not valid, then the following error response is
returned:

Error code: E220 - Input, ConnectionID Non-Existent

Similar response:

Error code: E351 - Status, Path Operation not Allowed on
connection in Restoration Queue

Port related problems

If the NE receives an ED-PATH-MODIFY command where the
pathID parameter value is not valid, then one of the following error
responses is returned:

Error code: E082 - Status, NNI connPoint / port Unavailable

The following list identifies conditions that will cause similar error responses:

Error code: E080 - Input, Invalid ConnPt / PortId + errorData (portID)

Error code: E081. - Input, Invalid EDGE portID + errorData (nodeIP&portID)

Error code: E083. - Status, NNI connPoint in Use, XConn or reservation exists + errorData (nodeIP&portID)

Error code: E084 - Status, Host XConn on ConnPoint + errorData (nodeIP&portID)

PathID parameter data is not valid

If the NE receives an ED-PATH command where the pathID parameter value or data is not valid, then the following error response is returned:

Error code: E090 - Status, Path Database Out of sync + errorData (pathID)

Related TL1 messages

- [“DLT-PATH: Delete ONNS path Connection” \(15-55\)](#)
- [“ED-NNCNFG: Edit ONNS configuration data” \(15-72\)](#)
- [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)
- [“REPT-PTHCHG: Report path change” \(15-107\)](#)
- [“REPT-PTHEVT: Report ONNS Path Events” \(15-121\)](#)
- [“RTRV-NNCNFG: Retrieve ONNS configuration data” \(15-67\)](#)
- [“RTRV-NNDR: Retrieve ONNS Data information” \(15-88\)](#)
- [“RTRV-NTDR: Retrieve ONNS data repository” \(15-75\)](#)
- [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#)
- [“REPT-NNCHG: Report ONNS data repository changes” \(15-104\)](#)
- [“REPT-NEVT: Report ONNS internal events” \(15-129\)](#)
- [“ED-NNCNFG: Edit ONNS configuration data” \(15-72\)](#)



ENT-PATH-protClass: Enter ONNS path connection

Overview The ENT-PATH -protClass command is used to establish one or more optical transmission path(s) between two valid client routers or non-NN NE nodes in the network that are attached to Host NE EDGE ports.

ENT-PATH creates an optical connection with specified connection bandwidth between two client devices connected to the optical network using ONNS ports / tribs on ONNS controlled Host NE nodes.

The *protClass* of the ENT-PATH command indicates what type of protection should be provided with the light path(s) to be established.

The path setup commands are:

- ENT-PATH-UNPROT
- ENT-PATH-N1PLUS1
- ENT-PATH-YCONN
- ENT-PATH-AUTO.

ENT-PATH-UNPROT sets up an unprotected path from *SrcNode* to *DestNode*. This is a basic ONNS connection with no ONNS protection response to failure except a REPT-PTHEVT.

ENT-PATH-AUTO sets up an Auto-rerouting protected path. This is a ONNS non-revertive auto-rerouting connection that ONNS will restore using ONNS mesh restoration techniques. The failed path will be bridged with a new path that satisfies all constraints applied to the connection. The connection will be verified that it meets the SLA, and the failed path will be torn down. Link resources of the failed path will be returned to the available resource pool, unless the connection is revertive.

ENT-PATH-N1PLUS1 sets up both paths of a network 1+1 protected path. ONNS sets up two node disjoint and (if applicable) SRLG-diverse paths through the network that share a common ingress(/egress) port (/connPoint) on the source NE node and a common egress (/ingress) port (/connPoint) on the destination NE node.

ENT-PATH-YCONN sets up both paths of a bridged Y-connection from one source NE node to two different destination NE nodes.

ONNS sets up two node disjoint and (if applicable) SRLG-diverse paths through the network that share a common ingress(/egress) port (/connPoint) on the source NE node, but terminating at two different destination NE nodes with its own egress(/ingress) port (/connPoint).

Properties Login Privilege: User Privilege Code: Administrator (UCFC/UCAL):
P3

Abortable: No

Input format Command Syntax:
ENT - PATH - UNPROT :*srcTid:[srcAid]:ctag::[srvID]:pdir:
bandwidth:maxDelay:srcNID:srcPortID:destNID:
destPortID:[nodeListUsage1,nodeList1]:[srlgExcludeList],
[linkInclude][::specBlock];*

Command Syntax: ENT - PATH - AUTO :*srcTid:[srcAid]:ctag:[srvID]:pdir:
bandwidth:maxDelay:srcNID: srcPortID:destNID:destPortID:
[nodeListUsage1,nodeList1]: [srlgExcludeList] ,[linkInclude]
[::specBlock];*

Command Syntax:
ENT - PATH - N1PLUS1 :*srcTid:[srcAid]:ctag:[srvID]:pdir:
bandwidth:maxDelay:srcNID: srcPortID:destNID:destPortID:
[nodeListUsage1,nodeList1]: [srlgExcludeList],[linkInclude]:
[nodeListUsage2,nodeList2] [::specBlock];*

Command Syntax:
ENT - PATH - YCONN :*srcTid:[srcAid]:ctag:[srvID]:pdir:
bandwidth:maxDelay:srcNID: srcPortID:destNID,brDestNID:
destPortID,brDestPortID:[nodeListUsage1,nodeList1]:
[srlgExcludeList],[linkInclude]:[nodeListUsage2,nodeList2]
[::specBlock];*

Input parameters

Command parameters

1. -protClass
This parameter specifies the type of protection this path will have when created by ENT-PATH.
The input parameters may change with each variation of the command to suit the requirements of that specific command.
UNPROT: path from source to destination is un-protected.
AUTO: path from source to destination is a non - revertive

auto-reroute path connection in case of a path failure, unless the `connMode` is set = `revertive`.

`N1PLUS1`: paths from source to destination is set up as a network 1+1 connection.

`YCONN`: paths from the same source to two different destinations are set up as a bridged connection.

2. `srcTid` – Target Identifier of the source node
This parameter is the unique NE identifier for ONNS and ONNS entity. NN uses the same tid used by the Host NE.
Values: The `srcTid` parameter is a case insensitive ASCII character string of up to 20 characters. The allowed ASCII characters are the letters “A” through “Z” and “a” through “z”, the numbers “0” through “9”, and the special characters “+” “.” “_” “/” and “-” (hyphen).
3. `srcAid`
Source node ONNS application access identifier `srcAid` of the ONNS controller OS command interface port: *snn*.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
4. `ctag` – Correlation Tag
This parameter is included in the command by the TL1 user and is repeated by the NE in the response to allow the TL1 user to associate the command and response messages. The Correlation Tag parameter is also a connection request identifier that maps to the `ReqID` assigned by the Management system for the connection request.
The *ctag* parameter is a character strings of up to 6 ASCII characters. The allowed ASCII character string is comprised of alphanumeric characters beginning with a letter, or decimal numerals (a decimal numeral is a string of decimal digits with an optional non-trailing “.”).
5. `srvID` – Service Identifier
This parameter is a logical tag for the group of connections associated with a service defined by the network management system (or other management entity).
The *srvID* parameter is a character string of up to 20 / 32 ASCII characters. The allowed ASCII character string is comprised of alphanumeric characters. See *srcTid* allowed values above. Only one *srvID* accepted. ALL is not supported.

6. pdir – Path Direction Topology
 - 1WAY path from source to destination shall be uni-directional
 - 2WAY: path from source to destination shall be bi-directional.
7. bandwidth – Requested bandwidth / connection signalRate
SNN Link signal_rate is equal to or greater than the minimum cross connect rate (min_XCrate) of the port_type. ONNS adapts to SDH formats automatically if the ingress port is SDH.
Values: STS1, STS3, STS12, STS48, STS192, STM1, STM4, STM16, STM64
8. maxDelay
Maximum transport delay through all nodes in the path connection. The propagation delay time needed for a signal to traverse from source node to destination node over the path is not greater than <n> milliseconds.
Values: 0 (default) - 65535. 0 is used to select NoDelayLimit.
9. srcNID – NN source node Network Signaling IP Access identifier (nid)
The following portID field contains the associated Ingress connPoint number that connects the source node to the edge / gateway switch or client router for Bi-directional connections.
Values: *.{nnn.mmm.ppp.qqq}* . IP Access identifier format is a 12 numeric character IP address with "." separator.
10. srcPortID
NN Source node srcPortID: optical **connPoint** identifier (*portID*) includes Bay/Frame#, Shelf#, Slot/Pack#, Port#, trib# of the source node ingress **connPoint** (receive side from client). SNN assume a bidirectional port pair.
Values: {srcPortID}&{outPortID}
The **connPoint** parameter *portID* is formed from 5 values {1-[1]-[1-39]-[1-8]-[1-128]} (such as bay-shelf-slot-port-trib, 1-1-32-8-128), where the 5 items represent the bay 1, shelf 1, module 32, port location 8, tributary 128 with "-" separator. -trib is required for SNN ports.

11. destNID

NN destination node Network Signaling IP Access identifier (nid). The following **destPortID** field contains the associated egress **connPoint** number that connects the destination node to the edge / gateway switch or client router, for bi-directional connections.

Range: **{nnn.mmm.ppp.qqq}** - IP Access identifier format is a 12 numeric character ip address with "." separator.

12. destPortID

NN Destination node out_port: optical **connPoint** identifier (destPortID) includes Bay/Frame#, Shelf#, Slot/Pack#, Port#, trib# of the destination node egress **connPoint** (transmit port to client). SNN assume a bidirectional port pair.

Values: {destPortID},{inPortID}

The **connPoint** parameter **portID** is formed from 5 values {1-[1]-[1-39]-[1-16]-[1-128]} (such as bay-shelf-slot-port-trib, 1-1-32-8-128), where the 5 items represent the bay 1, shelf 1, module 321, port location 8, tributary 128 with "-" separator. -trib is required for SNN ports.

13. brDestNID

ONNS bridged Y path destination node Network Signaling IP Access identifier (nid) - (only supported for Unprotected connections.) The following required brDestPortID field contains the destination node egress connPoint number that connects the destination node to the gateway switch or edge router for Bi-directional connections are in the following field. This parameter is only used with the ENT-PATH-YCONN command. Values: **{nnn.mmm.ppp.qqq}**. IP Access identifier format is 12 numeric character IP address with "." separator. If the following required **brDestPortID** field is not supplied, this field is ignored.

14. brDestPortID - bridged Y path destination optical connPoint identifier

This parameter includes Bay/Frame#, Shelf#, Slot / Pack#, Port#, trib# of destination node egress port. SNN assume a bidirectional port pair. This parameter is only used with the ENT-PATH-YCONN command.

Values: The connPoint number parameter portID is formed from 5 values {1-[1]-[1-39]-[1-16]-[1-128]} (such as bay-shelf-slot-port-trib, 1-1-32-8-128), where the 5 items represent the bay 1, shelf 1, module 32, port location 8, tributary 128 with "-" separator. -trib is required for SNN ports.

15. **nodeListUsage1**

NN uses the list of nodes included in the **nodeList1** array block in a manner specified by the **nodeListUsage1** variable. Both **nodeListUsage1** & **nodeList1** fields must be entered to be valid. An exclusion list below applies to all paths created (as in a Network 1+1). A non-existent nodeIP will be ignored in an Exclude nodelist. A non-existent nodeIP will cause setup failure in an explicit nodelist.

Values:

- **explicit:** node list below contains the intermediate NE nodes of the path in the explicit order they are to be used. (An empty list will force a direct path from source to destination.)
- **exclude:** nodes in the nodeList below must all be excluded from the path created. In the case when the protClass is either yconn or n1plus1, the nodes in the nodeList below also apply to the second or restoration path.

16. **nodeList1**

explicit include - List of intermediate nodes that specify the light path in the exact node order specified in the input. Source and destination nodes are assumed to be included implicitly. The node IP address values are ampersand separated as shown here:

nid1([&nid2& ...&nidX&]) where X = 8.

exclude - List of nodes that must all be excluded from the light path. The node IP address values are ampersand separated as shown here: nid1([&nid2& ...&nidX&]) where X = 15.

If user specifies empty **exclude** nodeList, the connection should use in-direct path from source node to destination node (i.e., at least one intermediate node is needed). If user specifies empty **explicit** nodeList, the connection should use a direct path from source to destination node (i.e., no intermediate node is allowed).

Values: **nid** ([&nidX]*); the **nid** parameter is the IP address of the node, in the following format: {nnn.mmm.ppp.qqq}. List values are ampersand separated.

If an explicit **nodeList** is an empty (null) list, ONNS will force a

direct path from source to destination for the first path. The array of NE nodes in **nodeList1** that will be included or excluded based on the **nodeListUsage1** field. A non-existent nodeIP will be ignored in an Exclude nodelist and will cause setup failure in an Explicit nodelist.

17. srlgExcludeList

The list of Shared Risk Link Group (SRLG) identifiers that are to be used to exclude links from the connection path(s) being created. **srlgID** (or Shared_Risk_LinkGrpID) identifiers are properties of links between ONNS nodes.

Values: srlgID's are unique global domain-wide hexadecimal numeric codes (two byte integer). SRLG value range = 1 - 65535. Zero or an empty field indicates no constraint are applied. A maximum of 10 srlgID's may be specified. List values are ampersand separated.

18. link IncludeID

A connection constraint link property such as LinkIncludeID's that must be valid to include the link in the connection path(s) created:

- **LinkIncludeID** is a link connection property that can be used to group and classify links.
- **VpnID** is a special case of this associative property.
Values: 1 - 65535. Zero or an empty field indicates no VPN constraint is applied.

19. nodeList Usage2

NN uses the list of nodes included in the **nodeList2** array block in a manner specified by the **nodeListUsage2** variable. A non-existent nodeIP will be ignored in an Exclude nodeList. A non-existent nodeIP will cause setup failure in an Explicit nodeList. This parameter is only used with the ENT-PATH-N1PLUS1 and ENT-PATH-YCONN commands.

Values:

- **explicit**: node list below contains the nodes of the path in the explicit order they are to be used.

20. nodeList2

explicit include - List of intermediate nodes that specify the light path in the exact node order specified in the input. Source and destination nodes are assumed to be included implicitly. The node IP address values are ampersand separated as shown here:

nid1([&nid2& ...&nidX&]) where X = 8.

If user specifies empty Exclude nodeList, the connection should use in-direct path from source node to destination node (i.e., at least one intermediate node is needed).

If user specifies empty Explicit nodeList, the connection should use a direct path from source to destination node (i.e., no intermediate node is allowed).

This list is only used with the ENT-PATH-N1PLUS1 and ENT-PATH-YCONN commands.

Values: **nid1** ([&**nidX**])*; the **nid** parameter is the IP address of the node, in the following format: {**nnn.mmm.ppp.qqq**}. List values are ampersand separated.

If this field is omitted, in the explicit case, ONNS will make the 2nd path node-disjoint with respect to 1st path. If an explicit nodeList is an empty (null) list, ONNS will force a direct path from source to destination for this path. The array of nodes in **nodeList2** that will be included based on the **nodeListUsage2** field.

If the preceding required **nodeListUsage2** field is not supplied, this field is ignored.

Spec block parameters

1. connMode

This parameter determines ONNS treatment of the failed path after an auto-reroute restoration. Ex.ConnMode=REVERTIVE causes path setup to be auto-reroute revertive. This parameter is used only with the ENT-PATH-AUTO command.

Values:

- NON-REVERTIVE: default
- REVERTIVE; Auto-reroute revertive.

If **connMode** is omitted, the ENT- PATH-AUTO command will be non-revertive by default.

2. rstrPriority

This parameter describes the restoration pre-emptibility of the Connection. A connection with a priority level 7 can be pre-empted by all restorations or connection requests except those that are also at rstrPriority = 7. Restoration pre-emption occurs when the priority value of the restoring connection is lower than

priority value of a UNPROT connection being pre-empted. No pre-emption on 1+1 connections.

Values: 0 - 7, Default = 0 = locked, the locked connection is unaffected by restoration or new connection requests. 0 is the highest restoration priority.

3. connAlias

This parameter specifies a user defined string as an alternate name for the connection. Once defined, the connAlias can be used as an alternate key in subsequent commands.

Values: The string consists of upto 83 printable ASCII characters+NULL. The following characters cannot be used in the string: colon, semicolon, comma, double quotes.

Output format

If the ENT-PATH (-AUTO/-UNPROT) request completes successfully, the following normal completion response is returned:

```
srcTid date time
M ctag COMPLD
"ConnID=connID,ConnStatus=connStatus,pdir,protectionClass,
bandwidth,
MaxDelay=maxDelay,[SrvID=srvID],Exclude=Node5IP&Node6IP,,
[SrlgExclude=srg1&srg2&...&srg8],IncludeID=0,[SpecBlock],,
SrcNID=srcNID,srcPortID,DestNID=destNID,destPortID:
PathID=pathID1,State=pst1&sst1&tst1,NodeList=pNodeList1"
;
```

If the ED-PATH-N1PLUS1 request completes successfully, the following normal completion response is returned:

```
srcTid date time
M ctag COMPLD
"ConnID=connID,ConnStatus=connStatus,pdir,protectionClass,
bandwidth,ConnAlias=connAlias,
MaxDelay=dd,[SrvID=srvID],[nodeListUsage1=nodeList1],
[nodeListUsage2=nodeList2],SrlgExclude=SRG1&SRG2&SRG3&SRG23,
IncludeID=vpnID,[SpecBlock],,
SrcNID=srcNID,srcPortID,DestNID=destNID,destPortID:
PathID=pathID1,State=pst1&sst1&tst1,NodeList=pNodeList1:
PathID=pathID2,State=pst2&sst2&tst2,NodeList=pNodeList2"
;
```


If the ENT-PATH-YCONN request completes successfully, the following normal completion response is returned:

```
srcTid date time
M ctag COMPLD
"ConnID=connID,ConnStatus=connStatus,pdir,
protectionClass,bandwidth,ConnAlias=connAlias,
MaxDelay=dd,[SrvID=srvID],[nodeListUsage1=
nodeList1],[nodeListUsage2=nodeList2],
SrlgExclude=SRG1&SRG2&SRG3&SRG23,IncludeID=vpnID,
[SpecBlock],,SrcNID=srcNID,srcPortID,DestNID=destNID,
destPortID,brDestNID=brDestNID,brDestPortID:
PathID=pathID1,State=pst1&sst1&tst1,NodeList=pNodeList1:
PathID=pathID2,State=pst2&sst2&tst2,NodeList=pNodeList2"
;
```

Output parameters

The details of the output parameters *srcTid*, *ctag*, *[srvID]*, *pdir*, *bandwidth*, *maxDelay*, *nodeListUsage1*, *nodeList1*, *nodeListUsage2*, *nodeList2*, *srcNID :portID*, *destNID:portID* and their syntax and allowed values are included in the Input parameters section of the ENT-PATH command.

1. *srcTid* – Source Node Identifier
This parameter is the currently active name of the NE to which the command is addressed.
Refer to the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command for the values of this parameter.
2. *date*
This parameter is set to the date when the output message is generate: YYYY-MM-DD where YYYY=2000-2099, MM=01-12, DD=01-31.
3. *time*
This parameter is set to the time when the output message is generated: HH:MM:SS where HH=00-23,MM=00-59, SS=00-59.
4. *ctag* – Correlation Tag
This parameter is included in the command by the user and is repeated by the NE in the response to allow the TL1 user to associate the command and response messages.
See the allowed values in the Input parameters section above.
5. completion code
Standard TL1 completion code result: **COMPLD**, for success.

6. connID

Connection ID for the newly created ONNS optical path connection service. Contains *SrcNodeIP* and *IngressPort#*.

Format: *mmm.nnn.ooo.ppp&bay -shelf-slot-port-trib&index*, where UNITE uses bay =1= shelf

The **connID** parameter is a character strings of up to 35 ASCII characters. The allowed ASCII character string is comprised of alphanumeric characters and the special characters "&" "."(period) and "-" (hyphen).

7. connAlias

A user defined connection alias string, up to 83 characters long printable ASCII string.

8. connStatus

This parameter is the overall status of the connection **connID** which may be different than the status of an individual pathID in that connection.

ConnStatus = *pst* (PrimaryState)& *sst* (SecondaryState)&*tst* (TertiaryState). Up to two of the allowed values are simultaneously permitted as a *sst* / *tst* parameter. The two values must be separated by an ampersand ("&"). Status values are 7 characters or less.

pst values:

- CON: Connected
- NOCON: Not Connected
- DLT: Deleted

sst & tst values

- OK: Conn good
- FAILED: Conn failed
- SETUP: Conn SetUp occurring
- NO-IN: Conn failed, signal in bad
- SETUPFL: Connection SetUp Failed
- FL-NVM: Not saved in NVM
- RSTRD: restored
- WTORSTR: waiting to restore
- RSTRFL: restoration failed
- DLT-FL: delete failed
- WTORV: waiting for WTR timer

- TRDOWN: tear down occurring
 - PREMPD: pre-empted
- Example: ConnStatus - CON&OK
9. pdir – Path Direction Topology
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
 10. protClass
This parameter defines the type of restoration protection assigned to the path connection.
See the parameter description in the Input parameters section above.
 11. bandwidth - Requested connection bandwidth
See the parameter description in the Input parameters section above.
 12. maxDelay
Maximum transport propagation delay through all nodes in the path. Returns values in input maxDelay.
See the parameter description in the Input parameters section above.
 13. srvID
This is a tag for the group of connections associated with a service defined by the network management system.
See the parameter description in the Input parameters section above.
 14. nodeList Usage1
See the parameter description in the Input parameters section above.
 15. nodeList1
See the parameter description in the Input parameters section above.
 16. nodeList Usage2
See the parameter description in the Input parameters section above.
 17. nodeList2
See the parameter description in the Input parameters section above.

18. srlgExcludeList
List of the srlgID's used to establish the connection path and constrain the link selection process. A maximum of 8 SRLG_ID's may be specified.
See the parameter description in the Input parameters section above.
19. linkIncludeID
A connection constraint link property such as LinkIncludeID's that must be valid to include the link in the connection path(s) created.
See the parameter description in the Input parameters section above.
20. specBlock
See the parameter description in the Input parameters section above.
21. srcNID
ONNS source node Network Signaling IP Access identifier (*srcNID*). See the parameter description in the Input parameters section above.
22. srcPortID
NN Source node ingress port: optical connPoint identifier.
See the parameter description in the Input parameters section above.
23. destNID
NN destination node Network Signaling IP Access identifier.
See the parameter description in the Input parameters section above.
24. destPortID
NN destination node out_port: optical connPoint identifier.
See the parameter description in the Input parameters section above.
25. pathID1
The *pathID* of the specific path that was created. Currently, the *pathID* is formed from the *srcNodeSigIPaddr+index#*.
Values: The *pathID* parameter is a character strings of up to 20 ASCII characters. The allowed ASCII character string is comprised of alphanumeric characters. Format is {*nnn.mmm.ppp.qqq&xxxx*}.

26. pathState1

Additional textual results information for *pathID1*, and / or *pathStatus*.

PathStatus = *pst1* (PathState)& *sst1* (SecondaryState)[& *tst1* (TertiaryState)]. Up to two of the allowed values are simultaneously permitted as a sst / tst parameter. The two values must be separated by an ampersand ("&"). Status values are 7 characters or less.

pst values:

- CON: Connected
- NOCON: Not Connected
- DLT: Deleted.

sst & *tst* values

- OK: Conn good
- FAILED: Conn failed
- SETUP: Conn SetUp occurring
- NO-IN: Conn failed, signal in bad
- SETUPFL: Connection SetUp Failed
- FL-NVM: Not saved in NVM
- RSTRD: restored
- WTORSTR: waiting to restore
- RSTRFL: restoration failed
- DLTFLL: delete failed
- WTORV: waiting for WTR timer
- TRDOWN: tear down occurring
- PREMPD: pre-empted.

Example: PathStatus - ConnStatus - CON&OK&WTORV

27. pNodeList1

The path node list contains the comma separated list of nodes that the path *pathID1* traverses in A-Z order from the source node. List values are ampersand separated.

Values: {*nnn.mmm.ppp.qqq*}& ... &{*nodeIDx*} . IP Access identifier format is 12 numeric character ip address with "." separator.

28. pathID2

The **pathID2** of the second path that was created on the specific **connID**. Optional field that is present if the connection has two paths.

See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

29. pathState2

Additional textual results information for **pathID2**, such as status, Path State2 = **pst2** (PathState) & **sst2** (SecondaryState) & **tst2**. See the **pathState1** parameter description above.

30. pNodeList2

The path node list contains the comma separated list of nodes that the path **pathID2** traverses in A-Z order from the source node. List values are ampersand separated.

Values: **{nnn.mmm.ppp.qqq}& ... &{nodeIDx}** . IP Access identifier format is 12 numeric character ip address with "." separator.

31. brDestNID

ONNS bridged Y path destination node Network Signaling IP Access identifier (nid) - (only supported for Unprotected connections.) The following required brDestPortID field contains the destination node egress connPoint number that connects the destination node to the gateway switch or edge router for Bi-directional connections are in the following field.

Values: **{nnn.mmm.ppp.qqq}**. IP Access identifier format is 12 numeric character IP address with "." separator. If the following required **brDestPortID** field is not supplied, this field is ignored.

32. brDestPortID

The bridged Y path destination optical connPoint identifier includes Bay/Frame#, Shelf#, Slot / Pack#, Port#, trib# of destination node egress port. SNN assume a bidirectional port pair.

Values: The **connPoint** number parameter portID is formed from 5 values {1-[1]-[1-39]-[1-16]-[1-128]} (such as bay-shelf-slot-port-trib, 1-1-32-8-128), where the 5 items represent the bay 1, shelf 1, module 32, port location 8, tributary 128 with "-" separator. -trib is required for SNN ports.

Example output The following is an example shows a successful execution of the ENT-PATH-UNPROT command:

```
LT-NN-789 2002-07-18 08:00:00
M 653456 COMPLD
"ConnID=135.13.196.203&1-5-13-4-1&1,ConnStatus=CON&OK,
1WAY,UNPROT,STS48,ConnAlias=AmericanExp-NY-BOS-ckt,
MaxDelay=105,SrvID=1351591,Exclude=135.13.42.3&
135.213.242.103&135.13.198.22,,SrlgExclude=33&49&64,
IncludeID=5,RstrPriority=3,,SrcNID=135.13.196.203,
1-5-13-4-1,DestNID=135.13.196.123,1-2-5-5-1:
PathID=135.13.196.203-43216,State=CON&OK,
NodeList=135.13.196.203&135.13.42.23&135.213.242.133&
135.13.196.123"
;
```

The following example shows a successful completion of ENT-PATH-AUTO command for a bi-directional path setup with three nodes in the node exclusion list. The response contains the list of nodes traversed by the new path.

```
LT-NN-789 2002-09-18 08:00:00
M 973456 COMPLD
"ConnID=135.13.196.203&1-5-13-4-1&1,ConnStatus=CON&OK,
2WAY,AUTONRV,STS48,ConnAlias=AmericanExp-NY-BOS-ckt,
MaxDelay=65,SrvID=1352463,Exclude=135.13.42.3&
135.13.52.103&135.13.18.22,,SrlgExclude=17&35&89,
IncludeID=0,ConnMode=REVERTIVE&RstrPriority=1,,
SrcNID=135.13.196.203,1-5-13-4-1,DestNID=135.13.196.123,
1-2-5-5-1&1-2-5-5-1:
PathID=135.13.196.203-43216,State=CON&OK,
NodeList=135.13.196.203&135.13.42.3,135.213.242.133&
135.13.196.223:
PathID=135.13.196.203-43231,State=NOCON,
NodeList=135.13.196.203&135.13.22.3&135.13.24.3&
135.13.44.93&135.13.196.123"
;
```

The example shows a successful completion of ENT-PATH-N1PLUS1 command for a bi-directional path setup with three nodes in the exclusion list. The response contains the list of nodes traversed by the new paths:

```
LT-NN-789 2002-09-18 08:00:00
M 93456 COMPLD
"ConnID=135.13.196.203&1-5-13-4-1&1,ConnStatus=CON&OK,
2WAY,N1PLUS1,STS48,ConnAlias=AmericanExp-NY-BOS-ckt,
MaxDelay=65,SrvID=1351315,Exclude=135.13.42.3&
135.213.242.103&135.13.198.22,,
SrlgExclude=6&17&35&89,IncludeID=10,,,
SrcNID=135.13.196.203,1-5-13-4-1,DestNID=135.13.196.123,
1-2-5-5-1&1-2-5-5-1:
PathID=135.13.196.203-43216,State=CON&OK,
NodeList=135.13.196.203&135.13.42.3&135.213.242.133&
135.13.196.123:
PathID=135.13.196.203-43231,State=CON&OK,
NodeList=135.13.196.203&135.13.22.3&135.13.24.3&
135.13.44.93&135.13.196.123"
;
```

The example shows a successful completion of ENT-PATH-YCONN command for a bi-directional path setup with three nodes in the exclusion list. The response contains the list of nodes traversed by the new paths:

```
LT-NN-789 2002-09-18 08:00:00
M 93456 COMPLD
"ConnID=135.13.196.203&1-5-13-4-1&1,ConnStatus=CON&OK,
2WAY,YCONN,STS48,ConnAlias=AmericanExp-NY-BOS-ckt,
MaxDelay=65,SrvID=1351315,Exclude=135.13.42.3&
135.213.242.103&135.13.198.22,,SrlgExclude=6&17&35&89,
IncludeID=10,,,
SrcNID=135.13.196.203,1-5-13-4-1,DestNID=135.13.196.123,
1-2-5-5-1,brDestNID=135.13.196.234,1-3-4-4-2:
PathID=135.13.196.203-43216,State=CON&OK,
NodeList=135.13.196.203&135.13.42.3&135.213.242.133&
135.13.196.123:
PathID=135.13.196.203-43231,State=CON&OK,
NodeList=135.13.196.203&135.13.22.3&135.13.24.3&
135.13.44.93&135.13.196.234"
;
```

Error responses

Insufficient network resources (ISNR)

Error code: E001 - Insufficient Network Resources in the
Topology DR

Destination un-reachable (DUCF)

If the destination is un-reachable by the ENT-PATH-UNPROT
command, then one of the following error responses is returned.

Error code: E010 - Destination Un-reachable - Connection
setup Failed

The following list identifies conditions that will cause a connection
setup Failure error responses:

Error code: E011 - Resource Selection or Reservation Failure

Error code: E012 - Status, XConn Failure caused path setup
failure + errorData

Error code: E013 - Status, Signaling Communication link
Failure (or abort) caused path setup failure + errorData

Error code: E014 - Status, XConn Timeout + errorData

Error code: E015 - Status, NN Timeout Failure + errorData

Error code: E016 - Status, Host interface TimeOut +
errorData

Error code: E017 - Status, Signaling Timeout caused path
setup failure + errorData

Error code: E018 - Status, Edge Port Used + errorData

Error code: E019 - Status, Existing NonNN XConn + errorData

Error code: E022 - Status, Path Setup Failure, caused by
signal transmission failure at egress node + errorData

errorData is output with the following format unless otherwise
specified above: NodeID=nodeIP&ConnPt=connPt1[&ConnPt2]

Maximum Transport Delay Exceeded (MTDE)

If the max delay is determined by the original connection setup
maximum delay input parameter, then the following error response is
returned:

Error code: E020 - Maximum Transport Delay Exceeded

Syntax, Parameter Data Invalid (SPDI)

If a request parameter of the command ENT-PATH-AUTO is invalid, then one of the following error responses is returned:

Error code: E030 - Syntax, Parameter Data Invalid,
invalid_parameter=fieldName

Error code: E032 - Input, Source nodeIP address is invalid

Error code: E033 - Input, Node List has Invalid / unknown IP
address

Error code: E035 - This connection Alias Already Exists

Syntax, Data Not Consistent (SDNC)

Error code: E040 - Syntax, Data Not Consistent

SNN PortID parameter value is not valid (IIEP)

If the NE receives an ENT-PATH-modifier command where the *portID* parameter value is not valid, then one of the following error response is returned:

Error code: E081 - Input, Invalid EDGE portID

The following list identifies conditions that will cause an Port error response:

Error code: E080- Input, Invalid ConnPt / PortId + errorData
(nodeIP&portID)

Error code: E082 - Status, NNI connPoint / port Unavailable
+ errorData (nodeIP&portID)

Error code: E084 - Status, Host XConn on ConnPoint +
errorData (nodeIP&portID)

PathID parameter data is not valid (SPDO)

If the NE receives an ENT-PATH command where the pathID parameter value or data is not valid, then the following error response is returned

Error code: E090 - Status, Pathid Data Out of sync

Cross-connect Connect Failure

If the network element receives an ENT-PATH command, but when the request is failed due to cross-connect connect failure at a node during path setup, one of the the following error response is returned:

Error code: E160 - XConn Connect Failure, Port does not exist or is TRADITIONAL

Error code: E161 - XConn Connect Failure, Unexpected topology or related cross connect

Error code: E162 - XConn Connect Failure, Cross connect already exists

Error code: E163 - XConn Connect Failure, Input tributary standard interface mismatch

Related TL1 messages

- [“DLT-PATH: Delete ONNS path Connection” \(15-55\)](#)
- [“ED-PATH: Edit ONNS connection paths” \(15-18\)](#)
- [“REPT-PTHCHG: Report path change” \(15-107\)](#)
- [“REPT-PTHEVT: Report ONNS Path Events” \(15-121\)](#)
- [“RTRV-NNCNFG: Retrieve ONNS configuration data” \(15-67\)](#)
- [“RTRV-NNDR: Retrieve ONNS Data information” \(15-88\)](#)
- [“RTRV-NTDR: Retrieve ONNS data repository” \(15-75\)](#)
- [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#)
- [“ED-NNCNFG: Edit ONNS configuration data” \(15-72\)](#)



DLT-PATH: Delete ONNS path Connection

Overview The DLT-PATH command deletes all paths associated with a connection ID **connID** or alternatively specified by its **connAlias**. The ONNS connection must begin at the node to which the message was addressed. The NEs along the path controlled by ONNS shall remove the local cross-connection and return resources to the available pool.

ONNS Delete Path removes a single path from an existing ONNS controlled connection in the network. In some protection cases, deleting a path may cause the creation of a new path by automatic restoration, such as in the case of a failed standby path of a network 1+1 connection. Failure to restore the connection shall place the connection on the restoration queue.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Abortable: No

Input format Command Syntax of DLT-PATH to delete a path from a connection:
DLT-PATH:*srcTid*[:*srcAid*]:*ctag*::*srvID*][:*connID*][:*pathID*][:*specBlock*];

A user defined connection alias (an alternate name) may be optionally specified with the DEL-PATH command. The alias is specified in the spec block as ConnAlias="....." (upto 83 printable ASCII characters+NULL; excluded are the following characters: colon, semicolon, double-quotes, comma). If no **connAlias** is specified, the **connID** is used as the key. If both **connAlias** and **connID** are specified then **connID** is used as the key. If neither of the two is specified the command is denied. The **connAlias** is returned as an output parameter in the response along with all the other parameters. If it not defined, a NULL is returned.

Input parameters

Command parameters

1. srcTid – Target Identifier of the source node
This parameter is the logical name of the Host NE. ONNS uses the same tid used by the Host NE.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. srcAid
Source node ONNS application access identifier srcAid of the ONNS controller OS command interface port: *snn*
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
3. ctag – Correlation Tag
This parameter is included in the command by the TL1 user and is repeated by the network element in the response to allow the TL1 user to associate the command and response messages. The *ctag* parameter is a connection request identifier that maps to the ReqID assigned by the Service Manager system for the connection request.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section. It should be a unique value for each new command.
4. srvID – Service Identifier
This parameter is a logical tag for the group of connections associated with a service defined by the network management system or by the UNI interface (or other management entity).
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
Only one *srvID* accepted. ALL is not supported.
5. connID – Connection ID for an existing ONNS path connection service.
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section. Only one *connID* accepted. ALL is not supported.
6. pathID - The PathID of the specific path to be modified.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
Only one *pathID* accepted.

Spec block parameters**1. connAlias**

This parameter specifies a user defined string as an alternate name for the connection instead of **connID**.

Values: The string consists of upto 83 printable ASCII characters+NULL. The following characters cannot be used in the string: colon, semi-colon, comma, double quotes.

Output format Normal system response to DLT-PATH for an unprotected or auto reroute connection:

```
srcTid date time
M ctag COMPLD
"ConnID=connIDxx,ConnStatus=DLT,pdir,protectionClass,
bandwidth,,ConnAlias=connAlias,MaxDelay=ddd,[SrvID=srvID],
[nodeListUsage1=nodeList1],SrcNID=srcNID,srcPortID,
DestNID=destNID,destPortID:
PathID=pathIDx,State=DLT"
;
```

Normal system response to DLT-PATH for a multi-path connection sharing the same source and destination nodes (Network 1+1 connection):

```
srcTid date time
M ctag COMPLD
"ConnID=connID,ConnStatus=DLT,pdir,protectionClass,
bandwidth,,ConnAlias=connAlias,MaxDelay=ddd,
[SrvID=srvID],[nodeListUsage1=nodeList1],
[nodeListUsage2=nodeList2],
SrcNID=srcNID,srcPortID,DestNID=destNID,destPortID:
PathID=pathID1,State=DLT:
PathID=pathID2,State=DLT"
;
```

Normal system response to DLT-PATH for an Y-Connection (sharing the same source node but with different destination nodes):

```
srcTid date time
M ctag COMPLD
"ConnID=connID,ConnStatus=CON&OK,pdir,protectionClass,
bandwidth,,ConnAlias=connAlias,MaxDelay=ddd,
[SrvID=srvID],[nodeListUsage1=nodeList1],
```

```
[nodeListUsage2=nodeList2],,,SrcNID=srcNID,srcPortID,
DestNID=destNID,destPortID,brDestNID=brDestNID,
brDestPortID:PathID=pathID1,State=DLT:
PathID=pathID2,State=DLT"
;
```

Normal system response to DLT-PATH for an single path delete from an failed mesh revertive connection:

```
srcTid date time
M ctag COMPLD
"ConnID=connID,ConnStatus=CON&OK,pdir,AUTONR,bandwidth,,
ConnAlias=connAlias,MaxDelay=ddd,[SrvID=srvID],
[nodeListUsage1=nodeList1],conMode=NON-REVERTIVE,,
SrcNID=srcNID,srcPortID,DestNID=destNID,destPortID:
PathID=pathID1,State=CON&OK,NodeList=pNodeList1:
PathID=pathID2,State=DLT"
;
```

Output parameters

1. srcTid – Source Node Identifier
This parameter is the currently active name of the NE to which the command is addressed.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. date
This parameter is set to the date when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
3. time
This parameter is set to the time when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

4. ctag – Correlation Tag
This parameter is included in the command by the user and is repeated by the NE in the response to allow the TL1 user to associate the command and response messages.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
5. completion code
Standard TL1 completion code result: COMPLD, for successful delete.
6. connID
ConnectionID for an existing ONNS path connection service.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
7. connAlias
This parameter is a user defined connection alias string.
Values: up to 83 characters long printable ASCII string.
8. connStatus
This parameter is the overall status of the connection *connID* which may be different than the status of an individual *pathID* in that connection.
ConnStatus = *pst* (PrimaryState)& *sst* (SecondaryState) [&*sst*. (Tertiary State)]
pst values:
 - CON: Connected
 - DLT: Deleted
 - NOCON: Not Connected*sst* and *tst* values
 - FAILED: Conn failed
 - TRDOWN: Conn teardown occurring
 - DLT-FL: Delete operation Failed
 - UNKNOWN: Conn state unknownExample: ConnStatus - CON&UNKNOWN.
9. pdir - Path Direction Topology (pdir) - path direction
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

10. protection Class - Path protection class
This parameter defines the type of restoration protection assigned to the path connection during path setup.
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Output parameters section.
11. bandwidth - requested bandwidth
Link signalRate is equal to or greater than the minimum cross-connect rate *minXCrate* of the port type.
Values: STS1, STS3, STS12, STS48, STS192, STS768
12. srvID
This parameter is a logical tag for the group of connections associated with a service defined by the network management system or by the UNI interface (or other management entity).
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
13. nodeList Usage1
See the *nodeListUsage1* description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input Parameters section. Returns the values in input *nodeListUsage1*.
14. nodeList1
Returns values in input *nodeList1*.
See the *nodeList1* description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input Parameters section.
15. nodeList Usage2
See the *nodeListUsage2* description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input Parameters section. Returns the values in input *nodeListUsage2*.
16. nodeList2
Returns values in input *nodeList*.
See the *nodeList* description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input Parameters section.
17. specBlock
Named-parameter spec block. Returns values entered in the input specBlock of the original DLT-PATH command.
See the parameter description in the Input parameter section above.

18. srcNID
ONNS source node Network IP Access identifier.
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)Input parameter section.
19. srcPortID
ONNS Source node inPort: port identifier (*srcPortID*).
Value: {srcPortID}
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)Input parameter section.
20. destNID
ONNS destination node Network IP Access identifier (nid).
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)Input parameter section.
21. brDestNID
ONNS bridged Y path destination node Network Signaling IP Access identifier (nid) - (only supported for Unprotected connections.) The following required *brDestPortID* field contains the destination node egress *connPoint* number that connects the destination node to the gateway switch or edge router, and an optional ingress connPoint number for bi-directional connections are in the following field.
Values: {*nnn.mmm.ppp.qqq*}. IP Access identifier format is 12 numeric character IP address with “.” separator. If the following required *brDestPortID* field is not supplied, this field is ignored.
22. destPortID
ONNS Destination node outPort.
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)Input parameter section.
23. brDestPortID - bridged Y path destination optical connPoint identifier
This parameter includes Bay/Frame#, Shelf#, Slot / Pack#, Port#, trib# of destination node egress port.
Values: The connPoint number parameter portID is formed from 5 values {1-[1-[1-39]-[1-16]-[1-128]]} (such as bay-shelf-slot-port-trib, 1-1-32-8-128), where the 5 items represent the bay 1, shelf 1, module 32, port location 8, tributary 128 with “-” separator.
-trib is required for SNN ports.

24. pathID1
The **pathID** of the specific light path to be deleted.
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameter section.
25. pathState1
Path Status = **pst1** (PathState1)& **sst1** (SecondaryState)& **tst1**.
Path state for **pathID1** as shown.
See the **pathState1**, **pst1**, **sst1**, **tst1** parameters description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section. Example: Path Status - DLT
26. pathID2
The **pathID2** of the specific connectionID deleted.
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Output parameters section.
27. pathState2
Path State = **pst2** (PathState)& **sst2** (SecondaryState) & **tst2**.
See the **pathState1**, **sst1** parameters description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
28. operation InfoText
Operation results text information / description: additional free format message text details for each operation.

Example input/output

The following example shows the successful completion of an unprotected connection deletion:

```
LT-ONNS-789 2002-07-01 08:00:00
M 433456 COMPLD
"ConnID=192.1.165.12&1-6-5-3-1&1,ConnStatus=DLT,1WAY,
UNPROT,STS48,ConnAlias=AEXP-NY-BOS-ckt,
MaxDelay=99,135.7.9.2-46,Exclude=135.13.42.3&
135.213.242.103&135.13.198.22,,SrcNID=192.1.165.12,
1-6-5-3-1,DestNID=125.19.43.6,1-2-12-2-1:
PathID=192.1.165.12-432161,State=DLT"
;
```

The following example shows the successful completion of a DLT-PATH command for deleting a network 1+1 connection:

```
LT_SNN_789 2002-07-01 08:00:00
M 993456 COMPLD
```

```

"ConnID=192.1.165.12&1-6-5-3-1&1,ConnStatus=DLT,1WAY,
UNPROT,STS48,ConnAlias=AEXP-NY-BOS-ckt,MaxDelay=99,
135.7.9.2-111,Exclude=135.213.173.142&135.213.242.103&
135.13.198.22,,,
SrcNID=192.1.165.12,1-6-5-3-48,DestNID=125.19.43.6,
1-2-12-2-25:
PathID=192.1.165.12-432161,State=DLT:
PathID=192.1.165.12-452465,State=DLT"
;

```

The following example shows the result of the DLT-PATH command to delete a network 1+1 path and reports status of the connection and the remaining path after the path has been deleted:

```

LA-LT256 2002-01-01 08:00:00
M 123456 COMPLD
"ConnID=192.1.165.12&1-6-5-3-1&1,ConnStatus=DLT,
1WAY,UNPROT,STS48,ConnAlias=AEXP-NY-BOS-ckt,
MaxDelay=99,135.6.7.8-1,Exclude=135.213.173.142&
135.213.242.103&135.13.198.22,,,ConnMode=UNPROT,
SrcNID=135.14.165.123,1-6-5-3-13,DestNID=125.19.43.6,
1-2-12-2-13:
PathID=135.14.165.123-452465,State=CON&OK,
NodeList=135.14.165.123&135.13.45.7&135.13.22.3&
135.13.2.37&135.13.196.92,
PathID=135.14.165.123-43216,State=DLT"
;

```

Output example for deleting a failed path from a mesh revertive connection:

```

LA-LT256 2002-01-01 08:00:00
M 123456 COMPLD
"ConnID=192.1.165.12&1-6-5-3-1&1,ConnStatus=DLT,
1WAY,UNPROT,STS48,ConnAlias=AEXP-NY-BOS-ckt,
MaxDelay=99,135.7.9.4-68,Exclude=135.213.173.142&
135.213.242.103&135.13.198.22,,,ConnMode=NON-REVERTIVE,
SrcNID=135.14.165.123,1-6-5-3-125,DestNID=125.19.43.6,
1-2-12-2-13:PathID=135.14.165.123-452465,State=CON&OK,
NodeList=135.14.165.123&135.13.45.7&135.13.22.3&
135.13.2.37&135.13.196.92,PathID=135.14.165.123-43216,
State=DLT"

```

;

Error responses

Path *ConnectionID* does not exist

If the Source Node ONNS receives a DLT-PATH command when the specified connection path does not exist, then the following error response is returned:

Error code: E220 - Input, ConnectionID Non-Existent

Status, Connection Resource Busy (SCRB)

If the Source Node ONNS receives a DLT-PATH command when the specified connection path has another connection operation pending, then the following error response is returned:

Error code: E110 - Status, Connection Resource Busy, delete operation in progress

Connection deletion, one or more paths were not deleted

If the NE receives a DLT-PATH command when more than one path is associated with the connection in the connID, ONNS shall delete all paths. If one of the paths specified by the connID is not deleted for any reason, ONNS shall not remove the connection connID from the ONNS data repositories. When the source node NE fails to delete the connection that has multiple paths associated with it, the following error response is returned if the deletion operation does not remove all associated paths:

Error code: E120 - Status, Multiple Paths Failed to deleted on this ConnID

Connection deletion, One path is not deleted

If the NE receives a DLT-PATH command when more than one path is associated with the connection in the *connID*, ONNS shall delete all paths. If one of the paths specified by the *connID* is not deleted for any reason, the following error response is returned if the deletion operation removes one path but not all associated paths:

Error code: E125 - Status, One Path Failed to deleted

Error code: E126 - Status, Path Failed to delete due to Signaling communication link failure

Connection deletion, path associated with the specified *connectionID* was not deleted

If the NE receives a DLT-PATH command to delete the connection *connID*, ONNS shall delete the path and remove the connection from the ONNS data repository. If the path specified by the *connID* is not deleted for any reason, ONNS shall not remove the connection *connID* from the ONNS data repository, and the following error response is returned:

Error code: E130 - Status, Path Not Deleted, connection deletion not completed

Error code: E013 - Status, Signaling Communication link Failure (or abort) caused path operation failure

Path connection pathID does not exist

If the Source Node ONNS receives a DLT-PATH command when the specified connection path does not exist, then the following error response is returned:

Error code: E140 - Input, PathID Non-Existant

Path associated with the specified *connectionID* was not deleted

If the NE receives an DLT-PATH command when more than one path is associated with the connection in the *connID*, ONNS shall delete the path specified by pathID-x. If one of the paths specified by the *connID* is not deleted for any reason, ONNS shall not remove the connection *connID* from the ONNS data repositories, and the following error response is returned:

Error code: E150 - Status, Path Deletion Failed, path deletion was not completed

Cross-connect disconnect failure error

If the NE receives an DLT-PATH command, but when the request is failed due to cross-connect disconnect failure at a node during path teardown, then ONNS shall not remove the connection *connID* from the ONNS data repositories, and the following error response is returned

Error code: E164 - XConn Disconnect Failure, Port does not exist or is TRADITIONAL

Related TL1 messages

- [“ED-PATH: Edit ONNS connection paths” \(15-18\)](#)
- [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)
- [“REPT-PTHCHG: Report path change” \(15-107\)](#)
- [“REPT-PTHEVT: Report ONNS Path Events” \(15-121\)](#)
- [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#)
- [“RTRV-NNDR: Retrieve ONNS Data information” \(15-88\)](#)
- [“RTRV-NTDR: Retrieve ONNS data repository” \(15-75\)](#)
- [“RTRV-NNCNFG: Retrieve ONNS configuration data” \(15-67\)](#)
- [“ED-NNCNFG: Edit ONNS configuration data” \(15-72\)](#)



RTRV-NNCNFG: Retrieve ONNS configuration data

Overview The RTRV-NNCNFG command retrieves ONNS system configuration parameters (fixed and user-provisionable). It also retrieves ONNS software version information. The data is retrieved from the ONNS system configuration data repository.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Abortable: No

Input format Command Syntax: RTRV-NNCNFG:*srcTid*[:*srcAid*]:*ctag*;

Input parameters

Command parameters

1. *srcTid* – Source Target Identifier.
The TID of the NE to which the command is addressed.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
NN uses the same tid used by the Host NE.
2. *srcAid*
ONNS application access identifier: *snn*.
3. *ctag* – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section. It should be a unique value for each new command.

Output format If the RTRV-NNCNFG request completes successfully, then the following normal completion response is returned:

```
srcTid date time
M ctag COMPLD
  "specBlock"
  "Reported Configuration Parameter List:
  reportedList"
;
```

Output parameters Each parameter will appear on a separate line.

1. srcTid – Source Node Target Identifier
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. date
This parameter is set to the date when the output message is generated. See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
3. time
This parameter is set to the time when the output message is generated. See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
4. ctag – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
5. completion code
Standard TL1 completion code result: **COMPLD**, for success;
DENY, for failure.

Spec block parameters

1. PathSetup RetryMax
Determines how many retries NN makes after the initial path setup.
Range: 0 - 5, default =1
2. PathRestore RetryMax
Determines how many retries NN makes during the path restoration
Range: 0 - 5, default =1
3. WaitToRevertTimer
Determines how long an original path must be steadily OK before it is made active again through tear-down of the restoration path. Applies only to auto-reroute revertive connections.
Range: 60 - 1800 seconds (default = 300 seconds).

4. LBA_UpdateTimer
LinkBundleAvailability Update Timer determines the maximum interval for LSA distribution of bandwidth availability changes which have not exceeded threshold.
Range: 1 - 25 minutes, default =15
5. LBA_Threshold
The LinkBundle Availability threshold determines the percent change in bandwidth availability necessary to trigger an immediate LSA distribution.
Range: 10 - 65 %, default =50%
6. LB_UsageThreshold
The LinkBundle usage threshold determines the percent link bundle usage that triggers cost escalation on the bundle.
Range: 50 - 95 %, default =70%
7. MaxExplicitNodeList
This parameter determines the maximum number of intermediate nodes that will be accepted in the ENT-PATH explicit node list.
Range: 8.
8. MaxExcludeNodeList
Determines the maximum number of nodes that will be accepted in the ENT-PATH exclude *nodeList*.
Range: 15.
9. MaxSrlgList
Determines the maximum number of SRLG values that will be accepted in the ENT-PATH *srlgExclude nodeList*.
Range: 10.
10. MaxNotifications Logged
Maximum number of notifications logged in the PTHCHG notification log.
Range: 100-800 (default = 400).
11. DefaultRstrPriority
Determines the connection restoration priority default to be used if a value is not specified in the ENT-PATH command.
Range: 0 - 7 (default = 0, highest priority).
12. PathRstrTimer
Path Restoration Queue timer, sets the time between checks to restore from the queue.
Range: 90 - 700 seconds, default =300

Reported configuration parameters

1. TID - Node Target Identifier
2. NN_SWVersion
ONNS software version number.
Values: x.y.z where x=release, y= point release, z=development
integration release
3. NN_BldVersion
ONNS Build version and date, for example: 047-042803.
Values: xxx-mm-dd-yy:hh:mm where xxx = build number,
mmddyy = date.
4. NN_BldInfo
Version of path calculation engine. NEtype. NN_SWVersion.
Operating system.
Values: ORPx.y, LU-NNx.y.z, Chorus
5. NN_Operation Mode
Synchronous ONNS (SONET/SDH): SNN
6. NN_HostName
Host name of the Host NE.
Values: LambdaUnite.
7. NN_SysMode
NNSystem Mode status describes the operational state of ONNS.
Values: INIT, MAINT, RUNNING.
8. NN_SigIPaddress
Signaling IP address of the SCN.
See the *srcNID* parameter description in the [“ENT-PATH-
protClass: Enter ONNS path connection” \(15-35\)](#) Input
parameters section.

Example input/output

The following is an example shows a successful execution of the RTRV-NNCNFG command:

```
LT-ONNS-A 2001-11-01 08:00:00
M 123456 COMPLD
"PathSetupRetryMax = 1,
PathRestoreRetryMax = 1,
WaitToRevertTimer = 300 seconds,
LBA_UpdateTimer = 10,
LBA_Threshold = 50 %,
LB_UsageThreshold = 70 %,
```

```
MaxExplicitNodeList = 8,  
MaxExcludeNodeList = 15,  
MaxSRLG_List = 10,  
MaxNotificationsLogged = 400,  
DefaultRstrPriority = 0,  
DefaultConnPriority = 0,  
PathRstrTimer = 300 seconds,  
RPM_MonTimer = 15 seconds,  
RPM_WaitTimer = 2 seconds"  
"Reported Configuration Parameter List:  
TID=LT-ONNS-A,  
NN_SWVersion = 2.1.1,  
NN_BldVersion = 047-042803,  
NN_BldInfo = ORP2.1, LU-NN2.1.1, Chorus,  
NN_OperationalMode = SNN,  
NN_HostName = LambdaUnite,  
NN_SystemMode = RUNNING,  
NN_SigIpAddress = 192.168.43.12,  
NN_UiIpAddress = 135.165.242.98,  
NN_UniIpAddress = 0.0.0.0"  
;
```

Error responses The error codes defined in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command Error responses section also apply to the RTRV-NNCNFG command.

Related TL1 messages

- [“REPT-NNCHG: Report ONNS data repository changes” \(15-104\)](#)
- [“ED-NNCNFG: Edit ONNS configuration data” \(15-72\)](#)



ED-NNCNFG: Edit ONNS configuration data

Overview The ED-NNCNFG command modifies the values of certain ONNS System Configuration parameters. Not all configuration parameters can be modified. The time when changes become effective depends on the individual parameter.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P4
Abortable: No

Input format Command Syntax: ED-NNCNFG:*srcTid*[:*srcAid*]:*ctag*::*specBlock*;

Input parameters

Command parameters

1. *srcTid* – Source Target Identifier
The TID of the NE to which the command is addressed.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
NN uses the same *tid* used by the Host NE.
2. *srcAid*
ONNS application access identifier: *snn*.
3. *ctag* – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.

Spec block parameters

1. WaitToRevertTimer
Determines how long an original path must be steadily OK before it is made active again through tear-down of the restoration path. Applies only to auto-reroute revertive connections.
Range: 60 - 1800 seconds, default =300 seconds
2. DefaultRstrPriority
Determines the connection restoration priority default to be used if a value is not specified in the ENT-PATH command.
Range: 0 - 7, default =0 (highest priority)

Output format If the ED-NNCNFG request completes successfully, then the following normal completion response is returned:

```
srcTid date time
M ctag COMPLD
"specBlock"
;
```

Output parameters

Parameters which were not modified will not be included in the output. Each modified parameter will appear on a separate line.

1. srcTid – Source Node Target Identifier
This parameter is the TID of the NE.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. date
This parameter is set to the date when the output message is generated. See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
3. time
This parameter is set to the time when the output message is generated. See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
4. ctag – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
5. completionCode
Standard TL1 completion code result: **COMPLD**, for success;
DENY, for failure.

Spec block parameters

See Spec block parameters above.

Example input/output

The following example demonstrates the usage of the ED-NNCNFG command for provisioning the system configuration of the wait to revert timer to 60 seconds:

```
ED-NNCNFG:LT-ONNS-A:onn:123456::waitToRevertTimer=60;
LT-ONNS-A 2002-08-01 08:00:24
M 123456 COMPLD
"waitToRevertTimer=60"
```

;

The following example demonstrates the usage of the ED-NNCNFG command for provisioning the system configuration of the default connection restoration priority to 5:

```
ED-NNCNFG:LT-ONNS-A:onn:123456::defaultRstrPriority=5;  
    LT-ONNS-A 2002-08-01 08:00:24  
M 123456 COMPLD  
    "defaultRstrPriority=5"  
;
```

The following example demonstrates the usage of the ED-NNCNFG command for the provisioning of multiple ONNS system configuration parameters:

```
ED-NNCNFG:LT-ONNS-A:onn:123456::waitToRevertTimer=120,  
defaultRstrPriority=4;  
    LT-ONNS-A 2002-08-01 08:00:24  
M 123456 COMPLD  
    "waitToRevertTimer=120,  
    defaultRstrPriority=4"  
;
```

Error responses The error codes defined in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command Error responses section also apply to the ED-NNCNFG command.

Command parameter invalid

If the NE receives an ED-NNCNFG command with an invalid specific block input named parameter, then one of the following error responses is returned:

Error code: E030 - Syntax, Parameter Data Invalid,
invalid_parameter=fieldName

Error code: E246 - Syntax, Parameter Name Invalid,
invalid_parameter=fieldName

Related TL1 messages

- [“RTRV-NNCNFG: Retrieve ONNS configuration data” \(15-67\)](#)
- [“REPT-NNCHG: Report ONNS data repository changes” \(15-104\)](#)



RTRV-NTDR: Retrieve ONNS data repository

Overview The RTRV-NTDR command retrieves information stored in the NTDR data repository that is in RAM Memory. The RTRV-NTDR command operates on the current, active-memory-resident, ONNS data. The NVM data from NNDM is used during initialization to recover the ONNS local NTDR data repository. Data from other ONNS nodes is acquired by the flooding and exchange of LSA's.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Abortable: No

Input format Command Syntax:
RTRV-NTDR:*srcTid*:[*srcAid*]:*ctag*:*dataType*[,*componentID*];

Input parameters

Command parameters

1. *srcTid* – Target Identifier.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. *srcAid*
ONNS application access identifier: *snn*.
3. *ctag* – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
4. *dataType*
This parameter indicates the data input parameter type of the *componentID* in the next field. ALL is supported in this field and requires no *componentID* in the next field. Each *dataType* is an ascii string. The input parameters in the next field may change with each *dataType* to suit the requirements of the requested *dataType*.

Values:

- ALL: retrieve all Neighbor Nodal data repository in RAM. (default)
- LSAIP: next field will contain a ASTN node ID and the LSA in NTDR related to the ASTN node ID will be returned
- NBRIP: next field will contain a Neighbor Node IP address. Not valid without a matching appropriate value in the **componentID** field except for **dataType** = ALL

5. componentID

This parameter allows the user to specify a portion of the data repository, such as an ASTN node ID for a neighbor LSA. Network topology data repository records for the specified componentID will be returned.

When **dataType** = LSAIP, any ASTN node ID of a node in the ONNS domain can be specified in the **componentID** field to get the LSA of that node.

When **dataType** = NBRIP, any ASTN node ID of a neighbor node can be specified in the **componentID** field to get the part of the LSA corresponding to links between that neighbor node and this node.

Values:

- for LSAIP - ASTN node ID for the network node to get that node's LSA when LSAIP dataType is specified
- for NBRIP - ASTN node ID for the neighbor node to get all linkBundles between the two nodes when NBRIP dataType is specified.

ComponentID field is omitted for **dataType** = ALL.

Output format If the RTRV-NTDR request completes successfully, then the following normal completion response is returned:

```
srcTid date time
M ctag RTRV
"nndrID,ALL,srcNodeASTNNodeID,NumberOfLSAs=LSA_Count"
"LSAheaderID1:Link_Header_record1-1:
LinkBundle DataRecords"
...
"LSAheaderID4:Link_Header_record4-1:
LinkBundle DataRecords,
Link_Header_record4-2:
```



```
LinkBundle DataRecords"
>
srcTid date time
M ctag COMPLD
"LSAheaderID5:Link_Header_record5-1:
LinkBundle DataRecords,
Link_Header_record5-2:
LinkBundle DataRecords"
...
"LSAheaderID9:Link_Header_record9-1:
LinkBundle DataRecords"
;
```

Output format for the RTRV-NTDR command for dataType=LSAIP:

```
LT-ONN61 2002-01-14 09:45:28
M 123456 COMPLD
"NTDR,LSAIP=origNodeASTNNodeID,srcNodeASTNNodeID,
NumberOfLSAs=LSA_Count"
"LSAAdvertisedRouter=origNodeASTNNodeID,
LinkCount=linkCount1,nodeTid,UIIPAddr=nodeUI_IPAddr,
SIGIPAddr=nodeIPAddr:LinkId=origNodeASTNNodeID&
neighborASTNNodeID1,BundleCount=bundleCount1:
BundleID=bundleID1,Delay=delay1,Cost=adminCost1,
SRLG=srg1&srg2&srg3,IncludeId=vpnID10,
AtMinRate=minXCrate1,TotalBandwidth=totalBandwidth1,
AvailBandwidth=availableBandwidth1,
AtMaxRate=maxXCrate1,AvailBandwidth=availableBW_
MaxXCrate1,
BundleID=bundleID3,Delay=delay3,Cost=adminCost3,
SRLG=srg1&srg2&srg3,IncludeId=vpnID30,
AtMinRate=minXCrate3,TotalBandwidth=totalBandwidth3,
AvailBandwidth=availableBandwidth3,
AtMaxRate=maxXCrate3,AvailBandwidth=availableBW_
MaxXCrate3,
LinkId=origNodeASTNNodeID&neighborASTNNodeID9,
BundleCount=bundleCount9:BundleID=bundleID9,Delay=delay9,
Cost=adminCost9,SRLG=srg1&srg2&srg3,IncludeId=vpnID90,
.....
LinkId=origNodeASTNNodeID&neighborASTNNodeID2,
BundleCount=bundleCount2:
BundleID=bundleID2,Delay=delay2,Cost=adminCost2,
SRLG=srg1&srg2&srg3,IncludeId=vpnID20,
```

```
AtMinRate=minXCrate2,TotalBandwidth=totalBandwidth2,  
AvailBandwidth= availableBandwidth2,  
AtMaxRate=maxXCrate2,AvailBandwidth=availableBW_  
MaxXCrate2,  
BundleID=bundleID7,Delay=delay7,Cost=adminCost7,  
SRLG=srg1&srg2&srg3,IncludeId=vpnID70,  
AtMinRate=minXCrate7,TotalBandwidth=totalBandwidth7,  
AvailBandwidth=availableBandwidth7,  
AtMaxRate=maxXCrate7,AvailBandwidth=availableBW_  
MaxXCrate3"
```

;

Output format for the RTRV-NTDR command with dataType=NBRIIP

```
LT-ONN61 2002-01-14 09:45:28  
M 123456 COMPLD  
"NTDR,NBRIIP=neighborASTNNodeID,srcNodeASTNNodeID,  
NumberOfLSAs=LSA_Count"  
"LSAAdvertisedRouter=srcNodeASTNNodeID,LinkCount=  
linkCount,nodeTid1,UIipAddr=nodeUI_IPAddr1,  
SIGipAddr=nodeIPAddr1:  
LinkId=srcNodeASTNNodeID&neighborASTNNodeID,  
BundleCount=bundleCount:  
BundleID=bundleID1,Delay=delay1,Cost=adminCost1,  
SRLG=srg11&srg21&srg31,IncludeId=vpnID10,  
AtMinRate=minXCrate1,TotalBandwidth=totalBandwidth1,  
AvailBandwidth=availableBandwidth1,  
AtMaxRate=maxXCrate1,AvailBandwidth=  
availableBW_MaxXCrate1,  
.....  
BundleID=bundleID4,Delay=delay4,Cost=adminCost4,  
SRLG=srg14&srg24&srg34,IncludeId=vpnID40,  
AtMinRate=minXCrate4,TotalBandwidth=totalBandwidth4,  
AvailBandwidth=availableBandwidth4,  
AtMaxRate=maxXCrate4,AvailBandwidth=  
availableBW_MaxXCrate4,BundleID=bundleID3,  
Delay=delay3,Cost=adminCost3,SRLG=srg13&srg23&srg33,  
IncludeId=vpnID30,AtMinRate=minXCrate3,  
TotalBandwidth=totalBandwidth3,  
AvailBandwidth= availableBandwidth3,  
AtMaxRate=maxXCrate3,AvailBandwidth=  
availableBW_MaxXCrate3"  
"LSAAdvertisedRouter=neighborASTNNodeID,
```

```
LinkCount=linkCount,nodeTid2,UIIpAddr=nodeUI_IPAddr2,  
SIGipAddr=nodeIPAddr2:  
LinkId=neighborASTNNodeID&srcNodeASTNNodeID,  
BundleCount=bundleCount:  
BundleID=bundleID1,Delay=delay1,Cost=adminCost1,  
SRLG=srg11&srg21&srg31,IncludeId=vpnID10,  
AtMinRate=minXCrate1>TotalBandwidth=totalBandwidth1,  
AvailBandwidth=availableBandwidth1,  
AtMaxRate=maxXCrate1,AvailBandwidth=  
availableBW_MaxXCrate1,  
.....  
BundleID=bundleID4,Delay=delay4,Cost=adminCost4,  
SRLG=srg14&srg24&srg34,IncludeId=vpnID40,  
AtMinRate=minXCrate4>TotalBandwidth=totalBandwidth4,  
AvailBandwidth= availableBandwidth4,  
AtMaxRate=maxXCrate4,AvailBandwidth=  
availableBW_MaxXCrate4,  
BundleID=bundleID3,Delay=delay3,Cost=adminCost3,  
SRLG=srg13&srg23&srg33,IncludeId=vpnID30,  
AtMinRate=minXCrate3>TotalBandwidth=totalBandwidth3,  
AvailBandwidth= availableBandwidth3,  
AtMaxRate=maxXCrate3,AvailBandwidth=  
availableBW_MaxXCrate3”  
;
```

Output parameters

The output parameters *srcTid*, *date*, *time*, and *ctag* and their syntax are included in the Output parameters section of the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command.

1. *srcTid* – Target Identifier
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. *date* - Report date
This parameter is set to the date when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

3. time - Report time
This parameter is set to the time when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
4. ctag – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
5. completionCode
Standard TL1 completion code result: **COMPLD**, for success; **RTRV**, for data continuation.
6. nndrID
NN Data Repository **dataID** to be returned: NTDR, Network Topology data repository in RAM.
7. dataType
This parameter indicates the data input parameter type of the **componentID** in the next field. Refer to the Input parameters section above for the input parameter syntax and description of this parameter.
Values:
 - ALL, indicates that all records in NTDR are returned (default)
 - LSAIP, next field will contain any Network Node ASTN node ID
 - NBRIP, next field will contain a Neighbor ASTN node ID.
8. componentID
This parameter allows the user to specify a portion of the data repository. Refer to the Input parameters section above for the input parameter syntax and description of this parameter.
9. srcNodeASTNNodeID
This parameter is the ASTN node ID of the ONNS node replying to this command.
Values: **{nnn.mmm.ppp.qqq}** - ASTN node ID format is 12 numeric character IP address like with “.” separator.

10. NumberOfLSAs

This parameter indicates the number of LSA records in the report. Also equals number of NE nodes in the network for dataType=ALL.

Values: NumberOfLSAs records: 0 - 200

11. LSAheaderRecord_1 LSAheaderRecord_n

Network Topology Data Repository records.

See the Specific LSA_Record output parameters below for the detailed descriptions of record parameters.

LSA_Record output parameters

1. LSAheader Record

2. LSAAdvertisedRouter

This parameter is the ASTN node ID of the node advertising this LSA data record.

Values: *{nnn.mmm.ppp.qqq}* - ASTN node ID format is 12 numeric character IP address with "." separator.

3. LinkCount

Multiple LSA_Links are send in one LSA record (all LSA_links from Node A).

4. nodeTid

NE host node Target Identifier for the node controlling this LSA data record.

Refer to the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section for the *srcTid* parameter description.

5. UIIpAddr

OS Management LAN / User Interface (UI) IP address for the node advertising this LSA data record.

Values: *{nnn.mmm.ppp.qqq}* - IP address format is 12 numeric character IP address with "." separator.

6. SIGipAddr

The signaling IP address of node advertising this LSA data record.

Values: *{nnn.mmm.ppp.qqq}* - IP address format is 12 numeric character IP address with "." separator.

7. LinkHeader.....

Multiple LSA_Link_Header records follow.

8. LinkID
LinkID is the originating ASTN nodeID plus the Neighbor ASTN nodeID (which is the ASTN node ID of the NE port at the other end of the optical link) that uniquely identifies the link.
Values: *{nnn.mmm.yyy.zzz}& {nnn.mmm.ppp.qqq}* - ASTN node ID format is a 12 numeric character IP address like with "." separator.
9. BundleCount
Multiple bundles are send in one LSA record (all bundles from Node A to Node B.) The **bundleCount** field determines the number of linkBundle data records included in the LSA.
10. LinkBundleData Record
Multiple LinkBundle data records follow, and the number of records is determined by the **BundleCount** field.
Values: BundleCount records follow
11. BundleID - optical link group identifier
This parameter is a unique numeric ID assigned to the link bundle on this node.
Values: This parameter is a numeric value unique to the specific node.
12. Delay
Propagation delay through the port connection between the pair of ports on the path. The time needed for a signal to traverse from this node to the neighbor node.
Values: transport delay in milliseconds default: 1 millisecs Range: 0 - 255 millisecs (integer) [D] 100km = 0.45 millisecs.
13. Cost
Administrative Cost of the port connection when used in a connection path.
Range: 1 - 255, default =1
14. SRLG - Shared Risk Link Group
The User can provision 3 different shared risk link groups (SRLG) SRLG's are exclusion constraints. They are unique global domain-wide numeric codes.
Range: 1 - 65535. Default = 0, SRLG is not provisioned.
See the allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.

15. IncludeID - Link_IncludeID identifier
VPN_IDs are inclusion constraints.
Range: 1 - 65535, default = 0 means no VPN.
16. AtMinRate
This parameter includes the minimum cross-connect rate of the *portType*.
Values: STS1, STS3, STS12, STS48, STS192
17. TotalBandwidth
This parameter is a numeric value indicating the total bandwidth in this linkBundle.
Range: 0 - 65535
18. AvailBandwidth (for AtMinRate)
This parameter is a numeric value indicating the total available bandwidth in this linkBundle at the AtMinRate.
Values: numeric, 0 - 65535
19. AtMaxRate
This parameter is the maximum cross-connect rate that is available in the *linkGroup*.
Values: STS1, STS3, STS12, STS48, STS192.
20. Avail Bandwidth (for AtMaxRate)
This parameter is a numeric value indicating the total available bandwidth in this linkGroup at the maximum XC rate.
Values: numeric value, 0 - 65535.

Example output Example output for the RTRV-NTDR command by Neighbor ASTN node ID:

```
LT-ONNS61 2001-01-14 09:45:28
M 123456 COMPLD
"NTDR,NBRIP=135.13.44.86,135.13.44.61,NumberOfLSAs=2"
"LSAAdvertisedRouter=135.13.44.61,LinkCount=1,
LT-ONNS61,UIpAddr=135.3.9.61,SIGipAddr=135.18.64.79:
LinkId=135.13.44.61&135.13.3.86,BundleCount=3:
BundleId=1,Delay=10,Cost=1,SRLG=0&0&0,IncludeId=0,
AtMinRate=STS1,TotalBandwidth=288,AvailBandwidth=48,
AtMaxRate=STS48,AvailBandwidth=1,
BundleId=2,Delay=10,Cost=10,SRLG=0&0&0,IncludeId=30,
AtMinRate=STS1,TotalBandwidth=192,AvailBandwidth=48,
AtMaxRate=STS48,AvailBandwidth=1,
BundleId=4,Delay=20,Cost=5,SRLG=0&0&0,IncludeId=0,
```

```
AtMinRate=STS1,TotalBandwidth=384,AvailBandwidth=336,  
AtMaxRate=STS192,AvailBandwidth=1"  
"LSAAdvertisedRouter=135.13.44.86,LinkCount=1,  
LT-ONNS45,UIipAddr=135.3.9.45,SIGipAddr=135.18.64.83:  
LinkId=135.13.44.86&135.13.3.61,BundleCount=3:  
BundleId=2,Delay=10,Cost=1,SRLG=0&0&0,IncludeId=0,  
AtMinRate=STS1,TotalBandwidth=288,AvailBandwidth=0,  
AtMaxRate=STS48,AvailBandwidth=0"  
BundleId=4,Delay=10,Cost=10,SRLG=0&0&0,IncludeId=30,  
AtMinRate=STS1,TotalBandwidth=192,AvailBandwidth=96,  
AtMaxRate=STS48,AvailBandwidth=2,  
BundleId=15,Delay=20,Cost=5,SRLG=0&0&0,IncludeId=0,  
AtMinRate=STS1,TotalBandwidth=384,AvailBandwidth=336,  
AtMaxRate=STS192,AvailBandwidth=1"  
;
```

**Example NTDR output for the RTRV-NTDR command with ALL or
an ASTN node ID:**

```
LT-ONNS-61 2002-07-14 09:45:28  
M 123456 RTRV  
"NTDR,ALL,135.13.44.61,NumberOfLSAs=3"  
"LSAAdvertisedRouter=135.13.44.61,LinkCount=3,  
LT-ONNS-61,UIipAddr=135.3.9.61,SIGipAddr=135.22.19.55:  
LinkId=135.13.44.61&135.13.3.111,BundleCount=1:  
BundleId=4,Delay=10,Cost=10,SRLG=10&26&322,  
IncludeID=0,AtMinRate=STS1,TotalBandwidth=96,  
AvailBandwidth=96,AtMaxRate=STS48,AvailBandwidth=2,  
LinkId=135.13.44.61&135.13.3.113,BundleCount=2:  
BundleId=1,Delay=10,Cost=6,SRLG=101&29&3272,  
IncludeID=0,AtMinRate=STS1,TotalBandwidth=48,  
AvailBandwidth=48,AtMaxRate=STS48,AvailBandwidth=1,  
BundleId=2,Delay=10,Cost=4,SRLG=20&69&272,  
IncludeID=0,AtMinRate=STS1,TotalBandwidth=48,  
AvailBandwidth=48,AtMaxRate=STS48,AvailBandwidth=1,  
LinkId=135.13.44.61&135.13.3.21,BundleCount=1:  
BundleId=3,Delay=10,Cost=1,SRLG=30&9&2272,  
IncludeID=0,AtMinRate=STS1,TotalBandwidth=48,  
AvailBandwidth=0,AtMaxRate=STS48,AvailBandwidth=0"  
>  
LT-ONNS-61 2002-01-14 09:45:29  
M 123456 RTRV
```



```
"LSAAdvertisedRouter=135.13.3.21,LinkCount=3,
LT-ONNS221,UIpAddr=135.3.9.21,SIGipAddr=135.22.19.56:
LinkId=135.13.3.21&135.13.144.221,BundleCount=1:
BundleId=23,Delay=10,Cost=10,SRLG=40&2&472,
IncludeID=0,AtMinRate=STS1,TotalBandwidth=96,
AvailBandwidth=96,AtMaxRate=STS48,AvailBandwidth=2,
LinkId=135.13.3.21&135.13.14.216,BundleCount=1:
BundleId=1,Delay=10,Cost=12,SRLG=50&39&72,
IncludeID=0,AtMinRate=STS1,TotalBandwidth=96,
AvailBandwidth=96,AtMaxRate=STS48,AvailBandwidth=2,
LinkId=135.13.3.21&135.13.44.61 ,BundleCount=1:
BundleId=35,Delay=10,Cost=1,SRLG=30&9&2272,
IncludeID=0,AtMinRate=STS1,TotalBandwidth=48,
AvailBandwidth=0,AtMaxRate=STS48,AvailBandwidth=0"
>
....
LT-ONNS-61 2002-01-14 09:45:30
M 123456 COMPLD
"LSAAdvertisedRouter=135.13.3.113,LinkCount=2,
LT-ONNS13,UIpAddr=135.3.9.13,SIGipAddr=135.22.19.57:
LinkId=135.13.3.113&135.13.44.61,BundleCount=2:
BundleId=31,Delay=10,Cost=6,SRLG=101&29&3272,
IncludeID=0,AtMinRate=STS1,TotalBandwidth=48,
AvailBandwidth=48,AtMaxRate=STS48,AvailBandwidth=1,
BundleId=32,Delay=10,Cost=4,SRLG=20&69&272,
IncludeID=0,AtMinRate=STS1,TotalBandwidth=48,
AvailBandwidth=48,AtMaxRate=STS48,AvailBandwidth=1,
LinkId=135.13.3.113&135.13.144.221,BundleCount=1:
BundleId=33,Delay=10,Cost=10,SRLG=40&2&472,
IncludeID=0,AtMinRate=STS1,TotalBandwidth=96,
AvailBandwidth=96,AtMaxRate=STS48,AvailBandwidth=2"
:
```

Example output for the RTRV-NTDR command by LSAIP address:

```
LT-ONNS-165 2001-01-14 09:45:28
M 123456 COMPLD
"NTDR,LSAIP=135.13.44.61,135.13.44.165,NumberOfLSAs=1"
"LSAAdvertisedRouter=135.13.44.61,LinkCount=3,
LT-ONNS61,UIpAddr=135.3.9.61,
SIGipAddr=135.25.18.77:LinkId=135.13.44.61&
135.13.3.111,BundleCount=1:BundleId=4,Delay=10,
Cost=10,SRLG=10&26&322,IncludeId=0,AtMinRate=STS48,
```

```
TotalBandwidth=2,AvailBandwidth=2,AtMaxRate=STS48,
AvailBandwidth=2,
LinkId=135.13.44.61&135.13.3.113,BundleCount=2:
BundleId=1,Delay=10,Cost=6,SRLG=101&29&3272,
IncludeId=0,AtMinRate=STS48,TotalBandwidth=1,
AvailBandwidth=1,AtMaxRate=STS48,AvailBandwidth=1,
BundleId=2,Delay=10,Cost=4,SRLG=20&69&272,
IncludeId=0,AtMinRate=STS48,TotalBandwidth=1,
AvailBandwidth=1,AtMaxRate=STS48,AvailBandwidth=1,
LinkId=135.13.44.61&135.13.3.21,BundleCount=1:
BundleId=3,Delay=10,Cost=1,SRLG=SRLG=30&9&2272,
IncludeId=0,AtMinRate=STS48,TotalBandwidth=1,
AvailBandwidth=0,AtMaxRate=STS48,AvailBandwidth=0"
;
```

Error responses The error codes defined in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command Error responses section also apply to the RTRV-NTDR command.

Invalid *dataType* or *componentID* parameter (IDTI)

If the RTRV-NTDR command is received with an invalid *dataType* or *componentID* parameter value, then the following error response is returned:

Error code: E400 - Input, *DataType* Invalid

The following condition will cause an IDNV error response:

Error code: E030 - Syntax, Parameter Data Invalid,
invalid_parameter=Component

Invalid *componentID* parameter

If the RTRV-NTDR command is received with an invalid *componentID* parameter value, then one of the following error responses is returned:

Error code: E511 - Input, Invalid IP address

Related TL1 messages

- [“DLT-PATH: Delete ONNS path Connection” \(15-55\)](#)
- [“ED-PATH: Edit ONNS connection paths” \(15-18\)](#)
- [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)

- [“REPT-PTHCHG: Report path change” \(15-107\)](#)
- [“REPT-PTHEVT: Report ONNS Path Events” \(15-121\)](#)
- [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#)
- [“RTRV-NNCNFG: Retrieve ONNS configuration data” \(15-67\)](#)
- [“RTRV-NNDR: Retrieve ONNS Data information” \(15-88\)](#)
- [“REPT-NNEVT: Report ONNS internal events” \(15-129\)](#)



RTRV-NNDR: Retrieve ONNS Data information

Overview The RTRV-NNDR command retrieves information stored in the NNDR data repository that is in RAM Memory. The RTRV-NNDR command operates on the current, active-memory-resident, ONNS data. The NVM data is used during initialization to recover the ONNS data repositories.

ONNS responds to a RTRV-NNDR request to retrieve its Neighbor Nodal DR (NNDR) by sending a report of the contents of the data repository. The command RTRV-NNDR with dataType=ALL shall cause the ONNS node to send all information in the NNDR data repository. When the Neighbor Nodal data repository is retrieved, each TL1 response message contains multiple PortID records. If dataType = ALL, there is no **componentID**. If dataType = PORT and a componentID = portID are specified as input parameters in RTRV-NNDR, the NNDR data repository records relating to that **PortID** shall be returned.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Abortable: No

Input format Command Syntax:
RTRV-NNDR:*srcTid*:[*srcAid*]:*ctag*::*dataType*[,*componentID*];

Input parameters

Command parameters

1. srcTid – Target Identifier.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. srcAid
ONNS application access identifier: *snn*
3. ctag – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.

4. **dataType**

This parameter indicates the data input parameter type of the **ComponentID** in the next field. The input parameters in the next field may change with each dataType to suit the requirements of the requested DataType. ALL is supported in this field and requires no **ComponentID** in the next field.

Values:

- **ALL**: retrieves the entire (NNDR) Neighbor Nodal data repository in RAM (default).
- **PORT**: next field will contain a portID and the NNDR port data will be returned.
- **NBRIP**: next field will contain a neighbor ASTN node ID. All ports in NNDR related to link groups to that node will be returned.
- **PORTUSAGE**: to request port data for all ports with specified **portClass**.

5. **Component ID**

This parameter allows the user to specify a portion of the Neighbor Nodal data repository, such as **portID** to return the data for a single port or such as a neighbor ASTN node ID for all NNI ports to a neighbor node to retrieve data for all ports in all link bundles between this node and the node with neighbor ASTN node ID.

Values:

- **portID**: Standard portID format
- **neighborASTNNodeID**: ASTN nodeID of a neighbor node
- **portClass**: portClass that is to be returned, such as EDGE or INNI.

Output format If the RTRV-NNDR request completes successfully, then the following normal completion response is returned:

```
srcTid date time
M ctag RTRV
  "NNDR_HeaderRecord"
  "PortRecord_1"
  ...
  "PortRecord_4"
>
```

```

srcTid date time
M ctag COMPLD
  "PortRecord_5"
  ...
  "PortRecord_8"
;

```

The RTRV-NNDR command will send a maximum of 4 port records per block. On all messages but the last, a RTRV completion code is used and the semicolon(;) is replaced with a (>) terminator. Then, on the last record block, the COMPLD completion code is used with the final semicolon (;) terminator.

If the RTRV-NNDR request completes successfully, then the following normal RTRV-NNDR Output Format with Retrieve_NNDR expanded data records are returned.

```

srcTid date time
M ctag RTRV
  "NNDR,ALL,srcNodeASTNNodeID,NumberOfRecords=portCount"
  "PR:PortStatusRecord1,PortAttributeRecord1
  [TR:TribPathRecord_1[:TribPathRecord_1b]]
  ...
  "[TR:TribPathRecord_n[:TribPathRecord_nb]]"
"
.....
.....
"PR:PortStatusRecord4,PortAttributeRecord4
[TR:TribPathRecord_1[:TribPathRecord_1b]]
[TR:TribPathRecord_2[:TribPathRecord_2b]]
[TR:TribPathRecord_3[:TribPathRecord_3b]]
[TR:TribPathRecord_4[:TribPathRecord_4b]]
>
srcTid date time
M ctag COMPLD
  "PortStatusRecord5,PortAttributeRecord5
  [TR:TribPathRecord_1[:TribPathRecord_1b]]
  ...
  [TR:TribPathRecord_n[:TribPathRecord_nb]]"
.....
.....
"PR:PortStatusRecord8,PortAttributeRecord8
[TR:TribPathRecord_1[:TribPathRecord_1b]]

```

```
[TR:TribPathRecord_2[:TribPathRecord_2b]]  
[TR:TribPathRecord_3[:TribPathRecord_3b]]  
[TR:TribPathRecord_4[:TribPathRecord_4b]]  
[TR:TribPathRecord_5[:TribPathRecord_5b]]"
```

Output parameters

The output parameters *srcTid*, *date*, *time*, and *ctag* and their syntax are included in the Output parameters section of the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command.

1. *srcTid* – Target Identifier
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. *date* - Report date
This parameter is set to the date when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
3. *time* - Report time
This parameter is set to the time when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
4. *ctag* – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
5. completion code
Standard TL1 completion code result: **COMPLD**, for success;
DENY for failure; RTRV, for data continuation.
6. *ndrID*
ONNS Data Repository *dataID* to be returned: NNDR, Neighbor Nodal data repository in RAM.
7. *dataType*
This parameter indicates the data input parameter type of the *componentID* in the next field. Refer to the Input parameters section above for the input parameter syntax and description of this parameter.

Values:

- ALL, indicates that all records in NNDR are returned (default)
- PORT, to request a single port
- NBRIP, to request all port data in link bundles to that node
- PORTUSAGE, to request port data for all ports with specified *portClass*.

8. componentID

This parameter allows the user to specify a portion of the data repository, such as *portID* to return data for a single port.

Values:

- PortID: to request a single port
- neighborASTNNodeID: neighbor ASTN node ID
- portClass: portClass that is to be returned, such as EDGE or INNI.

9. srcNodeASTNNodeID

The ASTN node ID of the originating ONNS node.

Values: *{nnn.mmm.ppp.qqq}* - ASTN node ID format is 12 numeric character with "." separator, like an IP address.

10. NumberOfRecords

This parameter indicates the number of records returned in this query.

Values: number of NNDR records 0 - 1000

11. PortRecord - Data Repository port records

See the Specific NNDR_Record output parameters below for the detailed descriptions of record parameters.

NNDR_Record output parameters

1. portID
This optical port identifier includes Bay/Frame#, Shelf#, Slot/Pack#, Port# where the 4 items of the portID represent the bay 1, shelf 1, module 1-39 port location 1-16.
Values: The port number parameter portID is a value based on bay-shelf-slot-port where the 4 items represent the bay 1, shelf 1, module 1-39, port location 1-16, with "-" separator.
{1-[1]-[1-39]-[1-16]} (such as 1-1-3-8)
2. portClass
The *portClass* of INNI indicates that the bandwidth on these ports is managed by NN. UNI or EDGE ports are unmanaged, but used as the source or destination external ports of a connection. NON-NN ports are not normally included in the ONNS data repository (exception: connections with EDGE port exist).
Values:
 - INNI, ONNS managed internal NE port (default)
 - EDGE, external port to other networks used for NN source or destination port.
 - NA, traditional (non-NN) port
3. pdir - Port Direction Topology - port directionality
Values:
 - TX: directional TX port
 - RX: -directional RX port
4. neighborNodeID
This parameter is the ASTN node ID of the NE port at the other end of the optical link.
Values: *{nnn.mmm.ppp.qqq}* - ASTN node ID format is 12 numeric character with "." separator, like an IP address. 0.0.0.0 indicates that the neighbor ASTN node is unknown.
5. neighborPortID
See the *portID* parameter description in the Input parameters section above. 0-0-0-0 indicates that the neighbor port is unknown.
6. lineSigStatus
Line Signal Status indicates the fault status of the line signal on a port.

Values:

- GOOD
- BAD
- UNKNOWN.

7. portEqptState
This parameter indicates the fault status of the Port Equipment.
Values: OK, FAILED (on Equipment failure), UNKNOWN.
8. portConnSigStatus
This parameter indicates the fault status of the line signal on a port. (Duplicate of lineSigStatus - to be removed).
Values: OK, FAILED, UNKNOWN.
9. portAdminMode
This attribute determines the mode of operation of this port.
MAINT indicates the port is in Maintenance mode.
Values: NORMAL, MAINT.
10. PortAttributeRecord
Port Attribute record line of the port record output. The next fields are included in the segment of the record.
11. portRate
This parameter is the bandwidth / portRate of the port.
Values:
 - STS1, STS3, STS12, STS48, STS192
12. propagationDelay
Propagation delay through the port connection between the pair of ports on the path. The time needed for a signal to traverse from this node to the neighbor node.
Values: <n> transport delay in milliseconds. Range: 0 - 255 millisecs (integer) [D] 222km = 1 millisecs. Default: 0 millisecs
13. Cost
Administrative Cost of the port connection when used in a connection path.
Range: 1 - 255, default =1

14. SRLG - Shared Risk Link Group Identifier list
The User can provision 3 different shared risk link groups (SRLG). SRLG_ID's are exclusion constraints.
Values: range = 1 - 65535, default = 0, not provisioned
See the *srlgExcludeList* parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
15. IncludeID
IncludeID identifier. VPN_ID's are inclusion constraints.
Values: 1 - 65535. default: = 0 means no VPN_ID.
16. XCRate (minXCrate)
minXCrate / signal rate granularity used to provision a port into trib's.
Values: STS1, STS3, STS12, STS48, STS192
17. XCRate (maxXCrate)
maxXCrate / signal rate used to provision a port into trib's.
Values: STS1, STS3, STS12, STS48, STS192
18. BundleID - optical Link Bundle identifier
This parameter is a unique numeric ID assigned to the link bundle on this node, for EDGE ports: BundleID= 0.
19. TribPathRecord_n
Tributary path record line of the port record output. Multiple trib path records appear here with the following 8 data fields for each trib / connPoint. The next fields are included in the segment of the record
20. tribIDn
The tributary ID of the *connPoint* whose *pathID* and cross-connect information is included below.
Values: tribID = 1-n
21. PathIDn
The PathID of the transmit or receive path that was allocated. If the pathID = 0.0.0.0-0, then the port has a non-NN connection on it.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.

22. **connPtAn**
This port's **connPoint** of the cross-connected **connPoint** pair on the path.
Values: The value is formed from 5 values. {1-[1]-[1-39]-[1-16]-[1-128]} (such as bay-shelf-slot-port-trib, 1-1-32-8-128), where the 5 items represent the bay 1, shelf 1, module 32, port location 8, tributary 128 with "-" separator.
23. -X- Separator for better readability
24. **connPtBn**
The cross-connected **connPoint** of the cross-connected **connPoint** pair on the path.
See the parameter description in the Input parameters section above.
25. **RsvStatusn**
ConnPoint reserved status indicates that the **connPt** has been allocated to a path by NN. When **rsvStatus**=0 and **xcStatus**=1, this is a Host NE initiated cross-connect. Reserved (by ONNS) = 1; Unreserved = 0
26. **XCStatusn**
Cross-connect status indicates whether the xconn operation was successful: Success=1, Failed=0.
When **rsvStatus**=0 and **xcStatus**=1, this is a Host NE initiated cross-connect.
27. **tribWidthn**
This parameter is the tributary width expressed as nSTS1's.
Values: STS1, STS3, STS12, STS48, STS192.
28. **TribPathRecord_nb**
Tributary Path_nb record line for edge ports is used when a connection has 2 paths, and is part of the port record output (optional for EDGE ports only).
29. **tribIDnb**
The tributary ID of the **connPoint** whose **pathID** and cross-connect information is included (optional for EDGE ports only): range = 1-n.

30. PathIDnb
The **PathID** of the bridged path that was allocated. (optional for EDGE ports only). If the pathID = 0.0.0.0-0, then the trib has a non-NN connection on it.
See the **pathID** description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
31. connPtAnb
This port's **connPoint** of the cross-connected **connPt** pair on the path. (optional for EDGE ports only).
See the **connPtA1** description in the Input parameters section above.
32. - X - Separator for better readability (optional for EDGE ports only).
33. connPtBnb
The cross-connected **connPoint** of the cross-connected **connPt** pair on the path. (optional for EDGE ports only).
See the **connPtA1** description in the Input parameters section above.
34. XCStatusnb
Cross-connect status indicates whether the xconn operation was successful. (EDGE ports only): Success=1, Failed=0.
35. tribWidthnb
This parameter is the tributary width expressed as nSTS1's. (optional for EDGE ports only).
Values: STS1, STS3, STS12, STS48 or STS192.

Example output

Example NNDR output for the RTRV-NNDR command with a INNI portID:

```
LT-ONNS-319 2002-01-14 09:45:28
M 123456 COMPLD
"NNDR,PORT=1-1-4-3,172.41.18.0,NumberOfRecords=1"
1-1-3-4,INNI,TX,172.41.19.1&1-1-1-2,,OK,OK,,NORMAL,,
STS48,MON,10,Cost=1,SRLG=0&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=39"
:1,172.3.19.0-1011,1-1-3-4-1,-X-,1-1-2-1-1,
RsvStatus=1,XcStatus=1,STS12,OK
:13,172.3.19.0-1251,1-1-3-4-13,-X-,1-1-6-1-49,
RsvStatus=1,XcStatus=1,STS12,OK
:25,172.3.19.65-51,1-1-3-4-25,-X-,1-1-3-1-7,
```

```
RsvStatus=1,XcStatus=1,STS3,OK"
:28,172.3.19.53-91,1-1-3-4-28,-X-,1-1-3-4-4,
RsvStatus=1,XcStatus=1,STS3,OK"
"1-1-3-4,INNI,RX,172.41.19.1&1-1-1-2,,OK,OK,,NORMAL,,
STS48,MON,10,Cost=1,,SRLG=0&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=39"
:1,172.3.19.0-1011,1-1-3-4-1,-X-,1-1-2-1-1,
RsvStatus=1,XcStatus=1,STS48,OK"
:13,172.3.19.0-1251,1-1-3-4-13,-X-,1-1-6-1-49,
RsvStatus=1,XcStatus=1,STS48,OK"
:25,172.3.19.65-51,1-1-3-4-25,-X-,1-1-3-1-7,
RsvStatus=1,XcStatus=1,STS3,OK"
:28,172.3.19.53-91,1-1-3-4-28,-X-,1-1-3-4-4,
RsvStatus=1,XcStatus=1,STS3,OK"
;
```

**Example NNDR output for the RTRV-NNDR command with a EDGE
portID:**

```
LT-ONNS-319 2002-01-14 09:45:28
M 123456 COMPLD
"NNDR,PORT=1-1-3-4,172.3.19.0,NumberOfRecords=1"
"1-1-3-4,EDGE,TX,192.41.19.1&1-1-1-2,,OK,OK,,NORMAL,,
STS48,MON,10,Cost=1,,SRLG=0&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=0
:1,172.3.19.0-211,1-1-3-4-1,-X-,1-1-2-1-1,
RsvStatus=1,XcStatus=1,STS48,OK
:1,172.3.19.0-1011,1-1-3-4-1,-X-,1-1-3-2-1,
RsvStatus=1,XcStatus=1,STS48,OK"
"1-1-3-4,EDGE,RX,192.41.19.1&1-1-1-2,,OK,UNKNOWN,,
NORMAL,,STS48,MON,10,Cost=1,,SRLG=0&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=0"
:1,172.3.19.0-211,1-1-3-4-1,-X-,1-1-2-1-1,
RsvStatus=1,XcStatus=1,STS48,OK
:1,172.3.19.0-1011,1-1-3-4-1,-X-,1-1-3-2-1,
RsvStatus=1,XcStatus=1,STS48,OK"
;
```

**Example NNDR output for the RTRV-NNDR command with a
neighbor ASTN node ID:**

```
LT-ONNS-319 2002-01-14 09:45:28
```

```
M 123456 COMPLD
"NNDR,NBRIP=172.3.19.69,172.3.19.109,
NumberOfRecords=8,""1-1-3-1,INNI,TX,172.3.19.69&
1-2-5-1,,OK,UNKNOWN,,NORMAL,,STS192,MON,10,Cost=1,,
SRLG=5&7&0,IncludeID=0,XCRate=STS1&STS192,
BundleID=11,"":1,182.63.219.10-219,1-1-3-1-1,
-X-,1-1-6-1-1,RsvStatus=1,XcStatus=1, STS48,OK"
:49,192.168.7.12-9,1-1-3-1-49,-X-,1-1-5-1-1,
RsvStatus=1,XcStatus=1, STS48,OK"
:1-1-3-1,INNI,RX,172.3.19.69&1-2-5-1,,OK,OK,,NORMAL,,
STS192,MON,10,Cost=1,,SRLG=5&7&0,IncludeID=0,
XCRate=STS1&STS192,BundleID=11,
:1,182.63.219.10-219,1-1-3-1-1,-X-,1-1-6-1-1,
RsvStatus=1,XcStatus=1,STS48,OK"
:49,192.168.7.12-9,1-1-3-1-49,-X-,1-1-5-1-1,
RsvStatus=1,XcStatus=1,STS48,OK"
.....
"1-1-6-1,INNI,TX,172.3.19.69&1-1-1-4,,OK,FAILED,,
NORMAL,,STS192,TRANS,10,Cost=1,,SRLG=5&7&0,
IncludeID=0,XCRate=STS1&STS192,BundleID=9,
:1,182.63.219.10-219,1-1-6-1-1,-X-,1-1-3-1-1,
RsvStatus=1,XcStatus=1,STS48, OK"
:49,192.168.3.5-54,1-1-6-1-49,-X-,1-1-5-1-49,
RsvStatus=1,XcStatus=1,STS48, OK"
:1-1-6-1,INNI,RX,172.3.19.69&1-1-1-4,,OK,UNKNOWN,,
NORMAL,,STS192,TRANS,10,Cost=1,,SRLG=5&7&0,
IncludeID=0,XCRate=STS1&STS192,BundleID=9"
:1,182.63.219.10-219,1-1-6-1-1,-X-,1-1-3-1-1,
RsvStatus=1,XcStatus=1,STS48, OK"
:49,192.168.3.5-54,1-1-6-1-49,-X-,1-1-5-1-49,
RsvStatus=1,XcStatus=1,STS48, OK"
;
```

The next example shows the output for the RTRV-NNDR command with ALL. The RTRV-NNDR command will send a maximum of 4 bi-directional port records per block:

```
LT-ONNS-39 2002-01-14 09:45:28
M 12345 COMPLD
"NNDR,ALL,172.3.19.0,NumberOfRecords=16"
"1-1-1-1,INNI,TX,192.41.19.1&1-1-1-2,,OK,OK,,NORMAL,,
STS48,TRANS,100,Cost=1,,SRLG=0&0&0,IncludeID=0,
```

```
XCRate=STS1&STS48,BundleID=3
:1,172.3.19.0-1011,1-1-1-1-1,-X-,1-1-2-1-1,RsvStatus=1,
XcStatus=1,STS48,OK"
"1-1-1-1,INNI,RX,192.41.19.1&1-1-1-2,,OK,UNKNOWN,,
NORMAL,,STS48,TRANS,100,Cost=1,,SRLG=0&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=3"
"1-1-1-2,INNI,TX,172.3.19.1&1-1-1-1,,FAILED,UNKNOWN,,
NORMAL,,STS48,TRANS,100,Cost=1,,SRLG=0&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=3"
"1-1-1-2,INNI,RX,172.3.19.1&1-1-1-1,,OK,OK,,NORMAL,,
STS48,TRANS,100,cost=4,,SRLG=0&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=3"
:1,192.3.19.0-1199,1-1-1-2-1,-X-,1-1-2-2-1,RsvStatus=1,
XcStatus=1,STS48,OK"
"1-1-1-3,INNI,TX,172.3.19.1&1-1-3-4,,OK,OK,,NORMAL,,
STS48,TRANS,100,Cost=1,,SRLG=0&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=3"
:1,172.3.19.0-1065,1-1-1-3-1,-X-,1-1-4-1-1,
RsvStatus=1,XcStatus=1,STS48,OK"
"1-1-1-3,INNI,RX,172.3.19.1&1-1-3-4,,OK,FAILED,,
NORMAL,,STS48,TRANS,100,Cost=1,,SRLG=0&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=3"
:1,172.3.19.0-1065,1-1-1-3-1,-X-,1-1-4-1-1,RsvStatus=1,
XcStatus=1,STS48,OK"
"1-1-1-4,INNI,TX,172.3.19.1&1-1-1-3,,OK,UNKNOWN,,
NORMAL,,STS48,TRANS,100,Cost=1,,SRLG=0&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=3"
"1-1-1-4,INNI,RX,0.0.0.0&1-1-1-1,,OK,UNKNOWN,,NORMAL,,
STS48,TRANS,100,Cost=1,,SRLG=0&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=3"
"1-1-2-1,EDGE,TX,0.0.0.0&1-1-1-1,,OK,UNKNOWN,,NORMAL,,
STS48,MON,100,Cost=1,,SRLG=0&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=0"
"1-1-2-1,EDGE,RX,0.0.0.0&1-1-1-1,,OK,OK,,NORMAL,,
STS48,MON,100,Cost=1,,SRLG=0&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=0"
:1,172.3.19.0-1011,1-1-2-1-1,-X-,1-1-1-1-1,RsvStatus=1,
XcStatus=1,STS48,OK"
"1-1-3-2,INNI,TX,0.0.0.0&1-1-1-1,,OK,OK,,NORMAL,,
STS48,MON,100,Cost=1,,SRLG=99&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=93"
```



```
:1,192.3.19.0-1199,1-1-1-2-2,-X-,1-1-1-2-1,RsvStatus=0,
XcStatus=1,STS48,OK"
"1-1-3-2,INNI,RX,0.0.0.0&1-1-1-1,,OK,UNKNOWN,,NORMAL,,
STS48,MON,100,Cost=1,,SRLG=99&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=93"
"1-1-4-1,EDGE,TX,0.0.0.0&1-1-1-1,,OK,FAILED,,NORMAL,,
STS48,MON,100,Cost=1,,SRLG=67&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=0
:1,172.3.19.0-1065,1-1-4-1-1,-X-,1-1-1-3-1,RsvStatus=1,
XcStatus=1,STS48,OK"
"1-1-4-1,EDGE,RX,0.0.0.0&1-1-1-1,,OK,OK,,NORMAL,,
STS48,MON,100,Cost=1,,SRLG=67&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=0
:1,172.3.19.0-1065,1-1-4-1-1,-X-,1-1-1-3-1,RsvStatus=1,
XcStatus=1,STS48,OK"
"1-1-4-2,EDGE,TX,0.0.0.0&1-1-1-1,,FAILED,OK,,NORMAL,,
STS48,MON,100,Cost=1,,SRLG=67&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=0"
"1-1-4-2,EDGE,RX,0.0.0.0&1-1-1-1,,FAILED,OK,,NORMAL,,
STS48,MON,100,Cost=1,,SRLG=67&0&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=0"
;
```

**Example NNDR output for the RTRV-NNDR command with a
PORTUSAGE data type:**

```
LT-ONNS-39 2002-01-14 09:45:28
M 123456 COMPLD
"NNDR,PORTUSAGE=UNI,172.3.19.0,NumberOfRecords=4"
"1-1-3-1,UNI,TX,0.0.0.0&1-1-1-1,,OK,UNKNOWN,,NORMAL,,
STS192,MON,10,Cost=1,,SRLG=3&33&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=0"
:1,182.63.219.10-219,1-1-1-3-1,-X-,1-1-6-1-
1,RsvStatus=1,
XcStatus=1,STS12, OK"
:49,182.63.219.10-599,1-1-1-3-49,-X-,1-1-5-2-
1,RsvStatus=1,
XcStatus=1,STS48,OK"
"1-1-3-1,UNI,RX,0.0.0.0&1-1-1-1,,OK,NO-IN,,NORMAL,,
STS192,MON,10,Cost=1,PPC=0x1,SRLG=3&33&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=0"
:1,182.63.219.10-219,1-1-1-3-1,-X-,1-1-6-1-
1,RsvStatus=1,
```

```
XcStatus =1,STS12,OK"
:49,182.63.219.10-599,1-1-1-3-49,-X-,1-1-5-2-
1,RsvStatus=1,
XcStatus=1,STS48, OK"
"1-1-6-1,UNI,TX,172.3.19.2&1-1-1-4,,OK,OK,,NORMAL,,
STS192,TRANS,10,Cost=1,,SRLG=12&34&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=0
:1,182.63.219.10-219,1-1-1-6-1,-X-,1-1-3-1-
1,RsvStatus=1,
XcStatus=1,STS12, OK"
"1-1-6-1,UNI,RX,172.3.19.2&1-1-1-4,,OK,UNKNOWN,,NORMAL,,
STS192,TRANS,10,Cost=1,,SRLG=12&34&0,IncludeID=0,
XCRate=STS1&STS48,BundleID=0
:1,182.63.219.10-219,1-1-1-6-1,-X-,1-1-3-1-
1,RsvStatus=1,
XcStatus=1,STS12, OK"
;
```

Error responses The error codes defined in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command Error responses section also apply to the RTRV-NTDR command.

Invalid *dataType* parameter

If the RTRV-NNDR command is received with an invalid *dataType* parameter value, then the following error response is returned:

Error code: E400 - Input, *DataType* Invalid

The following list identifies conditions that will cause an SPDI error response:

Error code: E030 - Syntax, Parameter Data Invalid,
invalid_parameter=dataType

Invalid *PortID* or *componentID* parameter

If the RTRV-NNDR command is received with an invalid *PortID* parameter value, then the following error response is returned:

Error code: E410 - Input, Invalid *PortID*

Related TL1 messages

- [“DLT-PATH: Delete ONNS path Connection” \(15-55\)](#)
- [“ED-PATH: Edit ONNS connection paths” \(15-18\)](#)

- [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)
- [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#)
- [“RTRV-NTDR: Retrieve ONNS data repository” \(15-75\)](#)
- [“REPT-PTHCHG: Report path change” \(15-107\)](#)
- [“REPT-PTHEVT: Report ONNS Path Events” \(15-121\)](#)
- [“REPT-NNEVT: Report ONNS internal events” \(15-129\)](#)
- [“REPT-NNCHG: Report ONNS data repository changes” \(15-104\)](#)
- [“RTRV-NNCNFG: Retrieve ONNS configuration data” \(15-67\)](#)



REPT-NNCHG: Report ONNS data repository changes

Overview The REPT NNCHG notification message reports NNDR bandwidth availability changes which trigger distribution of a new Link State Advertisement (LSA).

Output format The REPT NNCHG autonomous message is used to notify the management OS of changes to Neighbor Nodal Data Repository. The generic format of a REPT NNCHG message is as follows with the update management block (umb) and the common data block (comBlock).

```
srcTid rpt-date rpt-time
A atag REPT NNCHG
  "umb:comBlock"
;
```

EXPANDED OUTPUT FORMAT:

The general format of a REPT NNCHG autonomous notification message is expanded as follows:

```
srcTid rpt-date rpt-time
A atag REPT NNCHG
  "DATE=ocrDate,TIME=ocrTime:srcNodeID:srcAid:msgCode
  :dataSrcID,,\"
\" eventText \",[eventData]"
;
```

Output parameters

1. srcTid – Source Node Identifier
This parameter is the currently active name of the NE that generated the notification report.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. rpt-date - Report date
This parameter is set to the date when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

3. rpt-time - Report time
This parameter is set to the time when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
4. atag – Automatic Tag
This parameter is used for message sequencing. The number is incremented by one for each autonomous message sent by the NE.
See the parameter description in the [“REPT-PTHCHG: Report path change” \(15-107\)](#) Output parameters section.
5. Update Management Block: ocrDate - Occurrence Date
Date when the change occurred.
See the parameter description in the [“REPT-PTHCHG: Report path change” \(15-107\)](#) Output parameters section.
6. Update Management Block: ocrTime - Occurrence Time
Time when the change occurred.
See the parameter description in the [“REPT-PTHCHG: Report path change” \(15-107\)](#) Output parameters section.
7. Common Block: srcNodeID
This parameter is the node ID of the NE reporting this change.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
8. Common Block: srcAid
This is the ONNS application access identifier: SNN
9. Common Block: msgCode
A message code which identifies the reported change. Cxxx = Comment code number.
10. Common Block: dataSrcID
The data repository or software package reporting the change: NNDR for the Network Neighbor Data Repository.
Value: NNDR.
11. Common Block: eventText
Free format text, up to 80 characters.
12. Common Block: eventData
Event Data, as name-value pairs.

Example output The following is an example of the REPT NNCHG message for an ONNS Neighbor Nodal Data Repository change resulting from a LBA update caused by a Link threshold crossing and causing a LSA update in NTDM:

```
LT-ONNS-101 2002-08-01 08:02:37
A 004593 REPT NNCHG
"DATE=2002-08-01,TIME=08-02-00:178.223.45.172:
SNN:C050:NNDR,,\" Bandwidth availability threshold
crossing occurred, LBA update sent \",TC=50,,
NeighborNodeIP=178.23.145.12"
;
```

The following is an example of the REPT NNCHG message for an Neighbor Nodal Data Repository LBA update due to timer expiration, which causes an LSA distribution:

```
LT-ONNS-007 2002-08-01 08:02:05
A 010152 REPT NNCHG
"DATE=2002-08-01,TIME=08-02-00:178.223.45.172:
SNN:C060:NNDR,,\" LBAavailability update timer expired,
LBA update sent \",TMR=15"
;
```

Related TL1 messages

- [“REPT-PTHCHG: Report path change” \(15-107\)](#)
- [“REPT-PTHEVT: Report ONNS Path Events” \(15-121\)](#)
- [“REPT-NNEVT: Report ONNS internal events” \(15-129\)](#)
- [“RTRV-NNDR: Retrieve ONNS Data information” \(15-88\)](#)
- [“RTRV-NTDR: Retrieve ONNS data repository” \(15-75\)](#)



REPT-PTHCHG: Report path change

Overview The REPT PTHCHG notification message reports specific changes in the ONNS system data repositories. Changes can be caused by a user's TL1 path command or by an autonomous internally-generated connection changes such as path restoration.

If the data repository change occurs as a result of a TL1 ent-path or dlt-path or ed-path-prot/roll command, then a REPT PTHCHG message is transmitted to all users provisioned to receive REPT PTHCHG messages, including the user that issued the command. Therefore, a management OS must expect to receive data repository change messages for changes it caused as well as those made by a CIT user. The REPT PTHCHG CCB field will indicate the TL1 command that caused the connection change.

Only the connection objects (connID and pathID's) generated by the TL1 path setup commands are returned in a REPT PTHCHG message. All of the supporting objects (such as cross-connections that are reported by the host NE) which are autonomously created due to the original connection object's creation are not reported in a ONNS REPT PTHCHG notification message. The Host NEs are responsible for sending REPT-DBCHG's for each xcon along the path of the connection.

The primary pathState (pst), secondary state (sst) and optional tertiary state (tst) parameters of a connection and path appear in the REPT PTHCHG message just as reported in the connection record that is returned in a TL1 command response. If a path or connection's state is changed by a TL1 command, the pst, sst and tst parameters that are returned in the REPT PTHCHG message are the actual pst, sst and tst parameters of the connection object after the state change has occurred. When reporting a path restoration change, the state included in the REPT PTHCHG message is the **ConnStatus** at the time that the message is sent. The REPT PTHCHG message associated with a connection always contains the entire connection record and includes path Direction (pdir). If a connection object's configuration changes autonomously, the *pst*, *sst* and *tst* parameters of the REPT PTHCHG are the actual pst, sst, and tst parameters of the connection object after the configuration change has occurred. If a connection status or path state changes autonomously, the new state of the ingress (and local egress) paths are returned in a single REPT PTHEVT message.

he user defined connection alias, if defined, is returned with the event report along with other parameters. If no *connAlias* is defined, then a NULL is returned.

Output format The specific format of a REPT PTHCHG notification message from a delete-path command is as follows:

```
srcTid rpt-date rpt-time
A atag REPT PTHCHG
"DATE=ocrDate,TIME=ocrTime:CCB=DLT-PATH:srcNodeIP:
srcAid:msgCode,\"eventText\",eventData"
"ConnID=connID,ConnStatus=pst&sst&tst,pdir,
protectionClass,bandwidth,ConnAlias=connAlias,
MaxDelay=maxDelay,[SrvID=srvID],[nodeListUsage1=nodeList1],
[nodeListUsage2=nodeList2],[SrlgExclude=srlgExcludeList,
IncludeID=linkIncludeID,[specBlock1],[reserved],
SrcNID=srcNID,srcPortID,DestNID=destNID,destPortID
[,brDestNID=brDestNID,brDestPortID]:
PathID=pathID1,State=DLT[:
PathID=pathID2,State=DLT]"
;
```

A REPT PTHCHG autonomous message contains event information and the current connection configuration data. The format of a REPT PTHCHG autonomous path notification message with CCB=PATH. is as follows:

```
srcTid rpt-date rpt-time
A atag REPT PTHCHG
"DATE=ocrDate,TIME=ocrTime:CCB=PATH:srcNodeIP:srcAid:
msgCode:\" eventText \":eventData"
"ConnID=connID,ConnStatus=pst&sst&tst,pdir,protectionClass,
bandwidth,ConnAlias=connAlias,MaxDelay=maxDelay,
[SrvID=srvID],[nodeListUsage1=nodeList1],
[nodeListUsage2=nodeList2],[SrlgExclude=srlgExcludeList],
IncludeID=linkIncludeID,[specBlock1],[reserved],
SrcNID=srcNID,srcPortID,DestNID=destNID,destPortID,
brDestNID=brDestNID,brDestPortID]:
PathID=pathID1,State=pst&sst&tst,NodeList=srcNode&
nodeIP1&nodeIP2&...&destNode[:
PathID=pathID2,State=pst2&sst2&tst2,
NodeList=srcNodeIP&...&destNodeIP]"
;
```


The general format of a REPT PTHCHG notification message from a UNI ENT-PATH command is as follows:

```
srcTid rpt-date rpt-time
A atag REPT PTHCHG
"DATE=ocrDate,TIME=ocrTime:CCB=ENT-PATH-AUTO:srcNodeIP:
srcAid=msgCode:\" eventText \":eventData"
"ConnID=connID,ConnStatus=pst&sst&tst,pdir,
protectionClass,bandwidth,ConnAlias=connAlias,
MaxDelay=maxDelay,[SrvID=srvID],[nodeListUsagel=
nodeList1],,[SrlgExclude=srlgExclude List],IncludeID=
linkIncludeID,[specBlock1],[reserved],
SrcNID=srcNID,srcPortID,DestNID=destNID,destPortI,
brDestNID=brDestNID,brDestPortID]:
PathID=pathID1,State=pst&sst&tst,NodeList=srcNode&
nodeIP1&nodeIP2&...&destNode[:
PathID=pathID2,State=pst2&sst2&tst2,NodeList=srcNodeIP
&... &destNodeIP]"["UNIconnID=uniConnID:uniCsrcTNA,
uniCportID:uniCdestTNA,uniCdestPortID:
```

Output parameters

Output parameters for REPT PTHCHG for connection path related changes in ONNS.

1. srcTid – Source Node Identifier
This parameter is the currently active name of the NE that generated the notification report.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. rpt-date - Report date
This parameter is set to the date when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
3. rpt-time - Report time
This parameter is set to the time when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

4. atag – Automatic Tag
This parameter is used for message sequencing. The number is incremented by one for each new autonomous message sent by this NE.
Values: numeric character strings of up to 6 ASCII characters: 000000-999999
5. ocrDate - Occurrence Date
Date when the change occurred.
Values: .YYYY-MM-DD where YYYY=2000-2099, MM=01-12, DD=01-31
6. ocrTime - Occurrence Time
Time when the change occurred.
Values: HH-MM-SS where HH=0-23, MM=00-59, SS=00-59.
7. [comBlock] or [CB]- CCB Common Block
This block contains the position-defined parameters of the TL1 command causing this REPT-PTHCHG except the parameters that are part of the connection record and the status values *pst* and *sst*. The format is ***ccb=TL1cmd:srcNodeIP:src_aid:msgCode,\"eventText\",eventData.***
Values: Parameters are the same as those in the TL1 command that caused this report and are as follows:
:srcNodeIP:src_aid:msgCode, \"eventText\" = text description of the NN event; *eventData* = the ONNS event data. With autonomous *ccb= PATH*, format is:
ccb=PATH:srcNodeIP:src_aid: msgCode,\"eventText\",eventData.
8. [CB] ccb - Command Code Block
This parameter represents the TL1 path command causing the change. This confirmation indicates an NN managed path change was stored in the Host NVM. CCB = TL1cmd is specified when the change is directly caused by a user TL1 command. CCB = PATH is specified when the change is not directly caused by a user input TL1 path command.
Values:
 - ENT-PATH[-modifier]
 - ED-PATH[-modifier]
 - DLT-PATH
 - PATH - used for a connection / path change due to restoration.

9. [CB] srcNodeIP - source node ID, when ccb=PATH
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
10. [CB] srcAid
Access identifier of the source node restoration controller ONN command interface port.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
11. [CB] msgCode
Message Code or Status code indicates known or suspected cause or reason for the event, change, or condition: Cxxx = Comment code number.
12. [CB] eventText
This field records an event description message: free format text.
13. [CB] eventData
Event Data as named-parameter=value pairs: additional free format event data.
14. connID
ConnectionID for an existing ONN optical path connection service.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
15. connStatus
Connection status is the overall status of the connection connID which may be different than the status of an individual pathID in that connection. connStatus = pst&sst[&tst].
Values: pst, sst, tst
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
16. connAlias
This is an user defined connection alias string, up to 83 characters long printable ASCII string.
17. pdir - Path Direction Topology (pdir)
Uni-direction A-Z (1WAY) or bi-direction - (2WAY).
Values:
 - 1WAY, (default) Light path from source to destination is uni-directional
 - 2WAY, Light path from source to destination is bi-directional

18. protectionClass

This parameter defines the type of restoration protection assigned to the path connection.

Values:

- UNPROT, Unprotected
- AUTONR, Auto-rerouting, non-revertive
- N1PLUS1, 1+1 Network protection
- AUTORV, Auto-rerouting, revertive
- YCONN, Y-connection.

19. bandwidth

Connection bandwidth includes the bandwidth expressed in terms of STSn.

Values: STS1, STS3, STS12, STS48, STS192, STS768

20. maxDelay

Maximum path transport delay through all nodes in the connection path. Returns connection limit value. 0 is used to select NoDelayLimit.

21. srvID - Service identifier

This parameter is a logical tag for the group of connections associated with a service defined by the service manager system. See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.

22. nodeListUsage1

See the *nodeListUsage1* description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section. Returns the values in input *nodeListUsage1*.

23. nodeList1

See the *nodeList1* description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.

24. nodeListUsage2

See the *nodeListUsage2* description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section. Returns the values in input *nodeListUsage2*.

25. nodeList2

See the *nodeList* description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.

26. **srlgExcludeList**
List of the **SRLG_ID**'s used to establish the connection path and constrain the link selection process.
See the **srlgExcludeList** description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
27. **linkInclude**
A connection constraint link property such as **LinkIncludeID**'s that must be valid to included the link in the connection path(s) created. **linkIncludeID** is a link connection property that can be used to group and classify links. **VpnID** is a special case of this associative property.
See the **linkIncludeID** description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
28. **specBlock1**
See the **specBlock1** description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
29. **srcNID** - NN source node Network IP Access identifier (nid).
See the **srcNID** description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
30. **srcPortID**
NN Source node inPort: optical port identifier.
See the **srcPortID** description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
31. **destNID** - ONNS destination node Network IP Access identifier (nid)
See the **destNID** description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
32. **destPortID**
ONNS destination node outPort: optical port identifier.
See the **destPortID** description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
33. **brDestNID**
ONNS bridged Y path destination node Network Signaling IP Access identifier (nid) - (only supported for Unprotected connections). The following required **brDestPortID** field contains the destination node egress **connPoint** number that connects the

destination node to the gateway switch or edge router, for Bi-directional connections are in the following field.

Values: *{nnn.mmm.ppp.qqq}*. IP Access identifier format is 12 numeric character IP address with "." separator. If the following required brDestPortID field is not supplied, this field is ignored.

34. brDestPortID

This identifier includes Bay/Frame#, Shelf#, Slot / Pack#, Port#, trib# of destination node egress port. SNN assume a bidirectional port pair.

Values: *{brDestPortID}*. The *connPoint* number parameter portID is formed from 5 values {1-[1]-[1-39]-[1-16]-[1-128]} (such as bay-shelf-slot-port-trib, 1-1-32-8-128), where the 5 items represent the bay 1, shelf 1, module 32, port location 8, tributary 128 with "-" separator. -trib is required for SNN ports.

35. pathID1

This parameter represents the PathID of the specific path that was modified.

See the *pathID1* description in the ["RTRV-PATH: Retrieve ONNS path connection data" \(15-3\)](#) Output parameters section.

36. pathState1

Textual status/results information for pathID1 as shown below:
Path State1 = *pst* (PathState)& *sst* (SecondaryState) [& *tst*]. Up to two of the allowed values are simultaneously permitted as a sst parameter. The two values must be separated by an ampersand ("&").

pst values:

- CON: Connected
- DLT: Deleted
- NOCON: Not Connected

sst & *tst* values

- OK: path good
- FAILED: path failed
- SETUP: Conn SetUp occurring
- TRDOWN: Conn teardown occurring
- FLT: Fault
- NO-IN: path failed, no signal in
- RSTOR: path restore occurring

- RSTRD: path restored
- RSTRFL: Conn restore failed
- DLT-FL: Delete operation Failed
- UNKNOWN: Conn state unknown
- WTORSTR: Waiting to restore path
- SETUPFL: Connection SetUp Failed
- RVRTFL: Conn revert failed
- FL-NVM: Not saved in NVM.

Example: ConnStatus - CON&OK

37. pNodeList1

The path node list contains the comma separated list of nodes that the path **pathID1** traverses in A-Z order from the source node.

See the **NodeList** description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

38. pathID2

The PathID2 of the specific **connectionID** changed. Optional field that is present if the connection has two paths.

See the **pathID** description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

39. pathState2

Primary State of the path with the 2nd pathID Secondary State - of the 2nd pathID (Optional field).

See **path1_state**, **sst1** above. See also the **pathState** description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

40. pNodeList2

The path node list contains the comma separated list of nodes that the path pathID1 traverses in A-Z order from the source node.

See the **NodeList** description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

Output operation results parameters

1. reqType
This parameter indicates the modify operation that was performed on the specific connID.
See the parameter description in the [“ED-PATH: Edit ONNS connection paths” \(15-18\)](#) Input parameters section.
2. msgCode
Message Code or Status code indicates a known result: Mxxx = Status code number; Fnnn = Failure code number.
3. resultInfoText
Results text information / description: additional free format message text details for each operation.
4. modPathID
The PathID of the specific connectionID that was modified.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

Example output The following notification examples detail specific situations and the corresponding message codes used in the REPT PTHCHG notification to alert the OS system of the occurrence.

The following is an example of the REPT PTHCHG message for a input TL1 ENT-PATH-UNPROT command that has been saved in the ONNS NVM connection data repository:

```
LT-ONNS101 2002-07-01 08:00:00
A 01135 REPT PTHCHG
"DATE=ocrDate,TIME=ocrTime:CCB=ENT-PATH-UNPROT:
125.114.48.12:SNN:C001:\ " New UNPROT Connection
Saved in NN NVM \": "
"ConnID=125.14.48.2&1-1-3-4-1&1,ConnStatus=CON&OK,2WAY,
UNPROT,STS48,connAlias=AEXP-NY-BOS-ckt,MaxDelay=65,
SrvID=135.2.5.4-37,Exclude=135.13.42.3&135.213.242.103&
135.13.198.22,,,IncludeID=0,,,SrcNID=125.14.48.2,
1-1-3-4-1&1-1-3-4-1,DestNID=125.9.43.6,1-2-1-2-1&1-2-1-
2-1:
PathID=125.14.48.2-28123,State=CON&OK,
NodeList=125.14.48.2&nodeIP1&nodeIP2&...
&78.22.3.17&125.19.43.6"
;
```


The following is an example of the REPT PTHCHG message for a input ED-PATH-PROT or ED-PATH-ROLL change that has been saved in the ONNS NVM connection data repository:

```
LT-ONNS101 2002-07-01 08:00:00
A 0013495 REPT PTHCHG
"DATE=ocrDate,TIME=ocrTime:CCB=ED-PATH-PROT:
125.114.48.12:SNN:C008:\" Edited N1PLUS1 Connection
Saved in NVM \":RstrPriority=0"
"ConnID=125.114.48.12&1-1-23-4-13&1,ConnStatus=CON&OK,
1WAY,N1PLUS1,STS12,connAlias=AEXP-NY-BOS-ckt,
MaxDelay=99,SrvID=125.4.3.6-75,Exclude=135.13.42.3&
135.213.242.103&135.13.198.22,,SrlgExclude=401&319&1024,
IncludeID=0,rstrPriority=0,,
SrcNID=125.114.48.12,1-1-23-4-13,DestNID=125.19.43.6,
1-1-12-2-25&1-2-12-2-25:
PathID=125.114.48.12-12123,State=CON&OK,
NodeList=125.114.48.12&nodeIP1&nodeIP2&...&125.19.43.6:
PathID=125.114.48.12-11013,State=CON&OK,
NodeList=125.114.48.12&nodeIP4&nodeIP5&...&125.19.43.6"
;
```

The following is an example of the REPT PTHCHG message for a DLT-PATH or ED-PATH command that has been saved in the ONNS NVM connection data repository:

```
LT-ONNS111 2002-07-01 08:00:45
A 002478 REPT PTHCHG
"DATE=ocrDate,TIME=ocrTime:CCB=DLT-PATH::SNN:C013:
\" N1PLUS1 Connection Removed from NN NVM \":
"ConnID=125.114.48.12&1-1-3-4-1&1,ConnStatus=DLT,1WAY,
N1PLUS1,STS12,connAlias=AEXP-NY-BOS-ckt,MaxDelay=99,
SrvID=135.2.5.4-39,Exclude=135.13.42.3&
135.213.242.103&135.13.198.22,,SrlgExclude=401&319&1024,
IncludeID=0,RstrPriority=0,,SrcNID=125.114.48.12,
1-1-23-4-13,DestNID=125.19.43.6,1-1-12-2-25:
PathID=125.114.48.12-29123,State=DLT:
PathID=125.114.48.12-29128,State=DLT"
;
```

The following is an example of the REPT PTHCHG message for a path restoration change that has been saved in the ONNS NVM

connection data repository. An auto-rerouting connection has failed and has been restored. This REPT PTHCHG is sent after the restoration result is in NVM, and while the failed path is being torn down:

```

LT-ONNS101 2002-07-01 08:00:00
A 00134 REPT PTHCHG
"DATE=ocrDate,TIME=ocrTime:CCB=PATH:
125.114.48.12:SNN:C015:\" Connection restored and
Saved in NVM \":\"
"ConnID=125.114.48.12&1-1-3-4-1&1,ConnStatus=CON&OK,2WAY,
AUTONR,STS192,connAlias=AEXP-NY-BOS-ckt,
MaxDelay=199,,,SrlgExclude=630&820&720,IncludeID=0,
RstrPriority=3,,SrcNID=125.114.48.12,1-1-3-4-1,
DestNID=125.6.19.43,1-1-14-2-1:
PathID=125.114.48.12-12123,State=CON&OK,
NodeList=125.114.48.12&nodeIP1&nodeIP2&...&125.6.19.43:
PathID=125.114.48.12-11013,State=CON&TRDOWN,
NodeList=125.114.48.12&nodeIP4&nodeIP5&...&125.6.19.43"
;

```

The following is an example of the REPT PTHCHG message for an ONNS PATH delete after a path restoration that has been saved in the ONNS NVM connection data repository:

```

LT-ONNS111 2002-05-01 08:00:45
A 002478 REPT PTHCHG
"DATE=ocrDate,TIME=ocrTime:CCB=PATH:
125.114.48.1:SNN:C020:\" Failed Path Deleted and
Removed from NN NVM \":\"
"ConnID=125.114.48.12&1-1-3-3-1&1,ConnStatus=CON&OK,
2WAY,AUTONR,STS192,connAlias=AEXP-NY-BOS-ckt,
MaxDelay=199,,,SrlgExclude=11&1024&401,,
ConnMode=REVERTIVE&RstrPriority=3,,
SrcNID=125.114.48.12,1-1-3-3-1,DestNID=135.65.67.245,
1-1-23-1-1:
PathID=125.114.48.12-12123,State=CON&OK,
NodeList=125.114.48.12&nodeIP1&nodeIP2&...&125.6.19.43:
PathID=125.114.48.12-224123,State=DLT"
;

```

The following is an example of the REPT PTHCHG message for a path restoration change that has been saved in the ONNS NVM connection data repository. An auto-rerouting connection has failed and has been restored:

```
LT-ONNS101 2002-07-01 08:00:00
A 00134 REPT PTHCHG
"DATE=ocrDate,TIME=ocrTime:CCB=PATH:125.114.48.12
:SNN:C0125:\ " AUTONRV Connection restored and
Saved in NN NVM \": "
"ConnID=125.114.48.12&1-1-3-4-1&1,ConnStatus=CON&OK,
2WAY,AUTONRV,STS192,connAlias=AEXP-NY-BOS-ckt,
MaxDelay=199,,,SrlgExclude=11&1024&401,IncludeID=0,
ConnMode=NON-REVERTIVE,,
SrcNID=125.114.48.12,1-1-3-4-1,DestNID=135.65.67.245,
1-1-23-1-1:
PathID=125.114.48.12-12123,State=CON&OK,
NodeList=125.114.48.12&nodeIP1&nodeIP2&...
&135.65.67.245:
PathID=125.114.48.12-11013,State=CON&FAILED,
NodeList=125.114.48.12&nodeIP4&nodeIP5&...
&135.65.67.245:
PathID=125.114.48.12-16793,State=NOCON&AVAIL,
NodeList=125.114.48.12&nodeIP46&nodeIP51&...
&135.65.67.245"
```

The following is an example of the REPT PTHCHG message for an ENT PATH after a connection has been setup, and ONNS is waiting for a signal confirmation from the egress ports:

```
LT-ONNS111 2002-07-01 08:00:45
A 002478 REPT PTHCHG
"DATE=ocrDate,TIME=ocrTime:CCB=PATH:
125.114.48.1:SNN:C200:\ " Connection Setup completed
and Waiting for signal confirmation of egress port \
":eventData"
"ConnID=125.14.48.2&1-1-6-3-1&1,ConnStatus=CON&SETUP,
2WAY,AUTONR,STS192,connAlias=AEXP-NY-BOS-ckt,
MaxDelay=199,,,SrlgExclude=11&1024&401,,
ConnMode=REVERTIVE&RstrPriority=2,,
SrcNID=125.14.48.2,1-1-6-3-1,DestNID=135.6.67.5,
1-1-3-1-1:
PathID=125.14.48.2-12123,State=CON&SETUP,"
```

NodeList=125.14.48.2&nodeIP1&nodeIP2&...&135.22.3.17
&135.6.67.5"

PathID=125.14.48.2-28123,State=NOCON,
NodeList=125.14.48.2&nodeIP6&nodeIP7&...&
135.22.53.7&135.6.67.5"

;

Related TL1 messages

- [“RTRV-NNCNFG: Retrieve ONNS configuration data” \(15-67\)](#)
- [“REPT-PTHEVT: Report ONNS Path Events” \(15-121\)](#)
- [“RTRV-NNDR: Retrieve ONNS Data information” \(15-88\)](#)
- [“RTRV-NTDR: Retrieve ONNS data repository” \(15-75\)](#)
- [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#)
- [“REPT-NNCHG: Report ONNS data repository changes” \(15-104\)](#)
- [“REPT-NNEVT: Report ONNS internal events” \(15-129\)](#)
- [“DLT-PATH: Delete ONNS path Connection” \(15-55\)](#)
- [“ED-PATH: Edit ONNS connection paths” \(15-18\)](#)
- [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)
- [“ED-NNCNFG: Edit ONNS configuration data” \(15-72\)](#)



REPT-PTHEVT: Report ONNS Path Events

Overview REPT PTHEVT notification messages are generated autonomously by ONNS to report network connection status changes, and path state change events.

ONNS reports events to NMS when certain network connection state changes occur or path state events that relate to connections originating from this node. In general, destination nodes report client port alarms as a path fault event via the signaling network to the controlling source node. The source node will verify the fault state by checking the ingress signal states. Then ONNS shall send up a REPT PTHEVT: failed_path notification message indicating that the optical path has failed, and then ONNS begins the rerouting process to create a new optical path if one is required by the provisioned restoration service. ONNS reports events to the Network Management users that are provisioned to receive the ONNS PTHCHG's. Message provisioning occurs via the Host NE's ED-USER-SECU command.

Output format The REPT PTHEVT notification has two output formats described below, since the data reported varies with the source of events (ONNS). REPT PTHEVT notification reports on path and connection state information / changes.

General format of REPT PTHEVT autonomous notification output:

```
srcTid rpt-date rpt-time
A atag REPT PTHEVT
  "DATE=ocrDate,TIME=ocrTime:srcNodeIP:srcAid:msgCode
  ::condType,condeff:condDescr:\" eventText \":eventData"
  "ConnID=connID,ConnStatus=pst&sst[&tst],
  ConnAlias=connAlias,
  PathID=pathID,State=pst&sst[&tst]"
  ["errorMsgCode:\" ErrorText String \":[errorData]"
;
```

Output parameters The output parameters included in the normal notification message are specified for parameters unique to the REPT PTHEVT notification.

1. srcTid – Source Node Identifier
This parameter is the currently active name of the NE that generated the notification report.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. rpt-date - Report date
This parameter is set to the date when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
3. rpt-time - Report time
This parameter is set to the time when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
4. atag – Automatic Tag
This parameter is used for message sequencing. The number is incremented by one for each new autonomous message sent by this NN.
Values: numeric character strings of up to 6 ASCII characters: 000000-999999.
5. ocrDate - Occurrence Date
Date when the change occurred.
Values: .YYYY-MM-DD where YYYY=2000-2099, MM=01-12, DD=01-31.
6. ocrTime - Occurrence Time
Time when the change occurred.
Values: HH-MM-SS where HH=0-23, MM=00-59, SS=00-59.
7. comBlock (CB:) - Common Block.
This common data block contains the message-dependent parameters. The object information must be specified in the Common Block for data repository changes not caused by a command.
8. (CB:): srcNodeIP
Source node IP address identifier of the NE reporting this event.
See the parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.

9. (CB:): srcAid
Access identifier of the source node restoration controller ONN command interface port.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
10. (CB:): msgCode
Message Code or Status code indicates a cause if known or suspected cause or reason for the event, change, or condition:
Fnnn = Failure code number. Sxxx = Status code number.
11. (CB:): condType - Condition Type
This is a cryptic description of the condition (condDescr), for example, condType might be LOS and condDescr Communications, NN port, Loss Of Signal.
Values:
 - CLR: Path condition cleared
 - PFL: Path Failure
 - LOS: Loss of Signal
 - PEF: Port Equip Failure
 - PEV: Generic Path event.
12. (CB:): condDescr - Description of the condition
The general format is: category, entity, description, additional text. If there is no additional text, then the trailing comma may be omitted.
[D] For some path switching events, **condDescr** is: category, entity, protType, description / additional text, where protType can be N1PLUS1, UNPROT, AUTONR, AUTORV, YCONN.
category values:
 - TRAN: Transmission
 - RESTR: Restoration
 - PRTST: Port_stateentity values:
 - PATH: path connection
 - CONN: End to end connection
 - XCON: NE cross-connection
 - IPORT: Ingress port

ProtType values

- UNPROT: Unprotected path
- N1PLUS1: Netwrk1+1 protected path
- AUTONR: Auto-rerouted protection path, non-revertive
- AUTORV: Auto-rerouted protection path, revertive
- YCONN: Y-Connection.

Description code:

- FAILED: path failure
- FAULT: path fault
- CLEAR: Path problem cleared
- RSTRFL: Conn restore failed
- WARNING: Path Warning

13. (CB:): eventText

This field records an event description message: free format text.

14. (CB:): eventData

Event Data as named-parameter=value pairs: additional free format event data.

15. connID

ConnectionID for an existing ONN optical path connection service.

See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.

16. connStatus

connStatus = pst&sst(&tst). Connection status is the overall status of the connection connID which may be different than the status of an individual pathID in that connection.

See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

17. connAlias

This is an user defined connection alias string, up to 83 characters long printable ASCII string.

18. pathID

See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

19. pathState

Primary Connection Path State. PathState is formed by *pst* (PathState) & *sst* (SecondaryState) [& *tst*] (TertiaryState) Up to two of the allowed values are simultaneously permitted as a sst / tst parameter. The two values must be separated by an ampersand ("&").

pst values:

- CON: Connected
- DLT: Deleted
- NOCON: Not Connected

sst and *tst* values

- OK: path good
- FAILED: path failed
- SETUP: Conn SetUp occurring
- TRDOWN: Conn teardown occurring
- FLT: Fault
- NO-IN: path failed, no signal in
- WTORSTR: Waiting to restore path
- RSTRD: path restored
- RSTRFL: Conn restore failed
- DLT-FL: Delete operation Failed
- UNKNOWN: Conn state unknown.

Example: ConnStatus - CON&FAILED

20. pathID2

The PathID2 of the specific connectionID changed. Optional field that is present if the connection has two paths.

See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

21. pathState2

Primary State of the path with the 2nd pathID. Secondary State - of the 2nd pathID (optional field).

See pathState1, pst1, sst1 above. Also see the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

22. pNodeList2
The path node list contains the comma separated list of nodes that the path pathID1 traverses in A-Z order from the source node. (optional field).
See the *NodeList* parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
23. errorMsgCode
Error Message Code or Status code indicates a known result. (optional field). Exxx = Failure Error code number.
24. errorText
Error text description for the ENT-PATH error responses (optional field): additional free format error message text.
25. errorData
Error Data as named-parameter=value pairs for an ENT-PATH error response (optional field): additional free format error data.

Example output

The following REPT PTHEVT autonomous notification message illustrates how an unprotected path connection fault shall be reported. The REPT PTHEVT autonomous message declares the occurrence of a path failure on pathID XXXXXX on connection *connID*, and describes the state of the path.

```
WS-LT-ONNS-M 2002-08-01 08:00:00
A 00313 REPT PTHEVT
"DATE=2002-08-01,TIME=07-59-59:135.13.16.45:snn:
F102::PFL:TRAN,CONN,AUTONR,FAILED:\" Connection Failed,
Restoration In Progress \":\"
\"ConnID=135.13.196.45&1-1-4-2-1&1,ConnStatus=CON&Failed:
ConnAlias=AEXP-NY-BOS-ckt,
PathID=135.13.196.45-987654,State=CON&FAILED\"
;
```

The following REPT PTHEVT autonomous message reports that the LOS cleared. If the connection has two paths, the pathID and data from both paths is included:

```
WS-LT-ONNS-A 2002-07-01 08:11:05
A 01104 REPT PTHEVT
"DATE=2002-08-01,TIME=07-59-59:135.13.19.45:snn:S101::
```

```

CLR:TRAN,CONN,UNPROT,CLEAR:\ Unprotected path is OK
\":
"ConnID=135.13.196.45&1-1-4-2-1&1,
ConnAlias=AEXP-NY-BOS-ckt,ConnStatus=CON&OK:
PathID=135.13.196.45-987654,State=CON&OK"
;

```

The following REPT PTHEVT message reports a path optimization is available:

```

WS-LT-ONNS-Z 2002-07-11 08:12:00
A 01524 REPT PTHEVT
"DATE=2002-08-01,TIME=07-59-59:135.13.96.145:snn:S151::
OPT,TC:REARRG,CONN,AUTONR, OPTIMIZ:\ New lower
cost(shorter) path is now available \":]"
"ConnID=135.13.196.45&1-1-4-2-1&1,ConnStatus=CON&OK,
newNodeList"ConnAlias=AEXP-NY-BOS-ckt,
;

```

The following REPT PTHEVT message reports a path switch such as a 1+1 network connection:

```

WS-LT-ONNS-Z 2002-07-11 08:12:00
A 01524 REPT PTHEVT
"DATE=2002-08-01,TIME=07-59-59:135.13.96.145:
sonn:S201::PSW,TC:TRAN,PATH,N1PLUS1,SWITCH:
\ Network 1+1 connection switched to standby
path \":]"
"ConnID=135.13.196.45&1-1-4-2-1&1,
ConnStatus=CON&OK:ConnAlias=AEXP-NY-BOS-ckt,
PathID=135.13.196.45-987654,State=CON&OK"
;

```

The following is an example of the REPT PTHEVT message for an ONNS State change on a path fault:

```

LT-ONNS-11 2002-07-01 08:00:45
A 002478 REPT PTHEVT
"DATE=2002-08-01,TIME=07-59-59:125.114.48.12:snn:
S351::PMF,TC:RESTR,PATH,AUTORV,WARNING:\ Path
Monitoring process failed \":eventData"
"ConnID=125.114.48.12&1-1-6-3-1&1&1,
ConnStatus=CON&OK&RSTRD:ConnAlias=AEXP-NY-BOS-ckt,

```

PathID=125.114.48.12-224123,State=CON&FAILED”
;

Related TL1 messages

- [“RTRV-NNCFG: Retrieve ONNS configuration data” \(15-67\)](#)
- [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#)
- [“RTRV-NNDR: Retrieve ONNS Data information” \(15-88\)](#)
- [“RTRV-NTDR: Retrieve ONNS data repository” \(15-75\)](#)
- [“REPT-PTHCHG: Report path change” \(15-107\)](#)
- [“REPT-NNCHG: Report ONNS data repository changes” \(15-104\)](#)
- [“DLT-PATH: Delete ONNS path Connection” \(15-55\)](#)
- [“ED-PATH: Edit ONNS connection paths” \(15-18\)](#)
- [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)



REPT-NNEVT: Report ONNS internal events

Overview REPT NNEVT notification messages are generated autonomously to report internal ONNS events and status changes such as signaling session failures, internal communication problems, and NVM errors.

Output format The generic format of a REPT NNEVT autonomous notification message is as follows with the update management block (umb) and the common data block (comBlock):

```
srcTid rpt-date rpt-time
A atag REPT NNEVT
  "umb:comBlock"
;
```

Expanded output format The general format of a REPT NNEVT autonomous notification message is expanded as follows:

```
srcTid rpt-date rpt-time
A atag REPT NNEVT
  "DATE=ocrDate,TIME=ocrTime:srcNodeID:srcAid:
  msgCode:dataSrcID:condType, condeff:condDescr,
  \" eventText \",[eventData]"
;
```

Output parameters

1. srcTid – Source Node Identifier
This parameter is the TID of the NE reporting this event.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. rpt-date - Report date
This parameter shows the date when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.

3. rpt-time - Report time
This parameter shows the time when the output message is generated.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Output parameters section.
4. atag – Automatic Tag
This parameter is used for message sequencing. The number is incremented by one for each new autonomous message sent by the NE.
See the parameter description in the [“REPT-PTHCHG: Report path change” \(15-107\)](#) Output parameters section.
5. umb - Update Management Block
This parameter contains the following fields
 - ocrDate - Occurrence DATE
Date when the event occurred.
 - ocrTime - Occurrence TIME
Time when the event occurred.See the parameter description in the [“REPT-PTHCHG: Report path change” \(15-107\)](#) Output parameters section.
6. comBlock - Common Block
This common data block contains the message-dependent parameters.
This parameter contains the following fields:
 - srcNodeIP
Node ID of the NE reporting this event.
See the *src_nid* parameter description in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
 - srcAid
ONNS application access identifier: SNN
 - msgCode
This code identifies the reason for the event: Fnnn = Failure code number; Sxxx = Status code number.
 - dataSrcID (mandatory field)
The software package originating the event: NNDM (Network Neighbor Data Mgmt), NNSYS (for ONNS System Pkg), NN-SIG (for Signaling Pkg), CONN (for Connection Data Mgmt), H-INTF (for Host Interface Pkg).
 - condType - Condition Type

Values: GEV (General Event), SCF (Sig Comm Failure), NVF (NVM Failure), HBO (Host Buffer overflow), TMO (TimeOut expired), SCE (Signaling Comm Established).

- condDescr - Description of the condition
The general format is: category, entity, description.
Category values: SIGSES = SIG session; COMM = Communications; STATUS = Event Status
Entity values: NVM, SYSTEM, DCNPORT
Description code: FAILED = status failure; OK = status okay; ERROR = error condition.
- eventText
Free format text, up to 80 characters.
- eventData
Event data, as name value pairs.

Example output The following REPT NNEVT autonomous message illustrates how an ONNS failure event is reported for signaling communication loss.

```
LT-WS-ONNS-007 2002-08-01 08:00:00
A 00359 REPT NNEVT
"DATE=2002-08-01,TIME=07-59-59:135.13.196.45:
SNN:F401:NN-SIG:SCF: SIGSES,DCNPORT,ERROR,
\" SIG Communications Loss \",
NBRID=neighborNodeID"
;
```

An ONNS clearing event notification is sent when a failure condition has been repaired or cleared. The following event indicates successful establishment of a signaling communication session. Some ONNS failures do not have clearing notifications:

```
LT-WS-ONNS-007 2002-08-01 08:00:00
A 00359 REPT NNEVT
"DATE=2002-08-01,TIME=07-59-59:135.13.196.45:
SNN:S451:NN-SIG:SCE:SIGSES, DCNPORT,OK,
\" SIG Communication Session Established \",
NBRID=198.168.224.37"
;
```

Related TL1 messages

- [“REPT-PTHCHG: Report path change” \(15-107\)](#)
- [“REPT-PTHEVT: Report ONNS Path Events” \(15-121\)](#)
- [“REPT-NNCHG: Report ONNS data repository changes” \(15-104\)](#)
- [“DLT-PATH: Delete ONNS path Connection” \(15-55\)](#)
- [“ED-PATH: Edit ONNS connection paths” \(15-18\)](#)
- [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#)



ED-SYNCDATA: Edit synchronization data

Overview The ED-SyncData-mod command is used to have ONNS data to be synchronized based on the result of audit operation. AUD-mod command is assumed to precede this data-sync request. The modifier of the ED-SyncData-mod command indicates the scope of data to be synchronized.

ED-SyncData-LOCAL performs synchronization on ONNS data with the master data from local host NE. They are cross-connect map and port objects. Data-sync shall always be preceded by data-audit operation. Changes to ONNS data are made only if there is any discrepancy found via data-audit.

For mismatched port object cases, the following updates are made to NN data:

- port object exists only in NN data, but not in host NE data → the corresponding port object is removed from NN data
- port object exists only in host NE data, but not in NN data → the corresponding port object is added to NN data.

For mismatched cross-connect cases, the following updates are made to NN data:

- NN owned cross-connect exists only in NN data, but not in host NE → the corresponding NN cross-connect and its associated path information are removed from NN data
- NN owned cross-connect exists only in host NE data, but not in NN data → the corresponding NN cross-connect is added to NN data with a dummy *pathID*
- non-NN owned cross-connect exists only in NN data, but not in host NE → the corresponding cross-connect is removed from NN data
- non-NN owned cross-connect exists only in host NE data, but not in NN data → the corresponding cross-connect is added to NN data with non-NN ownership.

NN responds to the request in two steps: first, the result of data-audit with all the mismatched cases, and then a indication of the successfulness of the data-sync operation.

[D] The dummy pathID is an ID assigned by local node as a result of local data-sync operation (see ED-SyncData-LOCAL command for details). It should be in pathID format and unique.

The ED-SyncData command generates a REPT-PTHCHG message.

Properties Login Privilege Code (UCFC/UCAL): P3.

Abortable: No.

Input format Command syntax of ED-SyncData-LOCAL: ED-SyncData-LOCAL:*srcTid:srcAid:ctag*;

Syntax of the ED-SyncData-PATH command to modify ONNS path ID with valid path ID in local ONNS path data such as SIG and NNDM. (Note that the CONN data repository is not affected.) Old path ID may be a dummy ID assigned as a result of local ONNS data synchronization (refer ED-SyncData-LOCAL command). New path ID must be valid and could be obtained as a result of path neighbor data audit (refer AUD-PATHNBR command).

Input parameters

Command parameters

1. srcTid – Target Identifier
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. ctag – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
3. srcAid
ONNS application access identifier: *snn*
4. oldPathID – Old Path Identifier
See the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Output parameter section for the allowed values for the *pathID* parameter.
5. newPathID – New Path Identifier
See the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Output parameter section for the allowed values for the *pathID* parameter.

Output format The output parameters *srcTid*, *date*, *time*, and *ctag* and their syntax are included in the Output parameters section of the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command.

NN should respond to the request in two steps: first, if completed successfully, the result of data-audit with all the mismatched cases, and then a indication of the successfulness of the data-sync operation. The output format for the result of data-audit should be the same as the one for the response to AUD command.

If the synchronization of ONNS data completes successfully, then the following normal completion response is returned:

```
srcTid date time
M ctag COMPLD
;
```

Output parameters

Command parameters

1. *srcTid* – Source Node Identifier
This parameter is the currently active name of the NE to which the command is addressed.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. *date*
This parameter is set to the date when the output message is generated.
YYYY-MM-DD where YYYY=2000-2099, MM=01-12, DD=01-31.
3. *time*
This parameter is set to the time when the output message is generated.
HH:MM:SS where HH=00-23, MM=00-59, SS=00-59.
4. *ctag* – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
5. completion code
Standard TL1 completion code result: COMPLD, for success; DENY, for failure.

Example input/output The following example shows a successful completion of a ED-SyncData command for local data synchronization operation by the NE:

```
LT-ONNS-789 2003-01-01 08:00:00
M 123456 COMPLD
;
```

Related TL1 messages

- [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#)
- [“AUD: Execute audit on various types of ONNS data and return the result of audit” \(15-146\)](#)
- [“RTRV-AudLog: Retrieve the last audit result on various types of ONNS data” \(15-151\)](#)



OPR-DEFRAG: Perform link defragmentation on an ONNS port

Overview This command is issued by an operator to actually commence a defrag operation on a port. The command causes the receiving node to start the defrag operation as specified by the scope field.

The sequence of operations that will be followed is first computed and then each action is carried out as an atomic operation.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P3
Abortable: No.

Input format Command syntax: OPR-DEFRAG:*srcTid*[:*srcAid*]:*ctag*::*scope*:*targetID*;

Input parameters

Command parameters

1. *srcTid* – Target Identifier
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. *ctag* – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
3. *srcAid*
Source node access identifier of the ONNS controller OS command interface port.*snn*
4. *scope*
See description in [“RTRV-PREDEFRAG: Perform pre link defragmentation analysis on an ONNS port” \(15-141\)](#).
5. *targetID*
See description in [“RTRV-PREDEFRAG: Perform pre link defragmentation analysis on an ONNS port” \(15-141\)](#).

Output format The output parameters *src_tid*, *date*, *time*, and *ctag* and their syntax are included in the Output parameters section of the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command.

If the OPR-DEFRAG request completes successfully, the following normal completion response is returned:

```
src-Tid date time
M ctag COMPLD
;
```

[D]: Note that a status report of the level of fragmentation for that port or link can always be obtained by doing a rtrv-predefrag query.

Output parameters

Command parameters

1. srcTid – Source Node Identifier
This parameter is the currently active name of the NE to which the command is addressed.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. date
This parameter is set to the date when the output message is generated.
YYYY-MM-DD where YYYY=2000-2099, MM=01-12, DD=01-31.
3. time
This parameter is set to the time when the output message is generated.
HH:MM:SS where HH=00-23, MM=00-59, SS=00-59.
4. ctag – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
5. completion code
Standard TL1 completion code result: COMPLD, for success; DENY, for failure.

Example input/output

The following example shows a successful completion of a OPR-DEFRAG command. NN001:snn:ed01::PORT,1-1-2-1;

```
NN001 2002-01-12 01:03:16
M COMPLD
;
```

Error responses

The operate defrag command would normally return with a successful completion message indicating that all the slot rearrangements that it

decided to perform were done. However, in some cases the command could return un-successfully with a DENY message. The reason for DENY could be invalid parameter, collision, interruption or hw/sw/system failure.

A DENY message does not necessarily mean that defrag did not get done. It only means that everything that could have been done, as proposed in the pre-defrag analysis, did not get done. In all of these cases the command could fail at the outset or return with the operation partially completed. The broad reasons are treated below:

- **Invalid Parameters:** The command is denied because of an invalid parameter.
- **Collision or Communication:** The port or line may be in a failed state. Or, the node on the far end of the fiber is also performing a defrag on the same fiber. Or, the far end node does not respond. In this case the operate defrag returns without any action performed.
- **interruption:** The operate defrag started execution but got interrupted in the middle due to a higher priority task involving the same resources (time-slots). The invocation of a restoration, path-setup or deletion could do this. In most of these cases the Link Defrag operation stops cleanly and returns with a partially completed command. However, within the partially completed command, whichever connection it was trying to move, will either get moved completely or not at all (atomically). The connections that have already been moved will remain unaffected - since those have only improved the system state. The operator can do a pre-defrag to see what the current state is.
- **HW/SW Failure:** In the rare case that a catastrophic failure occurs (local node crashes, remote node crashes, the fiber gets cut) while a defrag operation is in progress, the operation will return with a DENY message and an error code specifying the type of failure. There could be situations in which the defrag operation gets interrupted or terminated such that it was not able to cleanly complete the particular connection move (bridge and merge on the local or remote end of the connection) that it was involved in. In these cases it is possible that a dangling bridge and merge cross connection is left on either the local or the remote end. When this happens, an additional value is returned as part of the qualifier, that is the pathID of the connection move

that was left incomplete. The operator can use this pathid to clean up any cross connects left in an undesired state. The operator do a rtrv-nndr, to see that there are two XCs associated with that single pathID. They should verify with the neighbor NE and delete the unnecessary XC.

The qualifier return with the failure distinguishes between the two types. In case of a real failure, an additional value is returned as part of the qualifier, that is the pathid of the connection move that was left incomplete. The operator can use this pathid to clean up any cross connects left in an undesired state.

The following error codes apply to the OPR-DEFRAG command:

- E410 (IIPi) Input, Invalid PortId
- E610 (COAN) Conflicting Action at Neighbor Node
- E611 (LBMF) Local Bridge and Merge Failure, [pathid]
- E612 (LXCF) Local Cross Connect Release Failure, [pathid]
- E613 (RBMF) Remote Bridge and Merge Failure, [pathid]
- E614 (RXCF) Remote Cross Connect Release Failure, [pathid]
- E615 (LDPD) Path Being Deleted
- E616 (NNRP) No Neighbor Response, [pathid]
- E617 (PLFS) Port or Line in Failed State
- E618 (PLOS) Port in Lock-Out State.

Related TL1 messages

- [“RTRV-PREDEFRAG: Perform pre link defragmentation analysis on an ONNS port” \(15-141\)](#)



RTRV-PREDEFRAG: Perform pre link defragmentation analysis on an ONNS port

Overview This command is used by an operator in preparation for doing a defrag operation on a port. (this will be extended in the future to cover defrag between multiple ports in link connecting two nodes.)

The command causes the receiving node to do an analysis of the level of fragmentation that currently exists on the specified port or link. An analysis is performed of how much usable bandwidth will be gained if defragmentation were to be done, and the time slot structure as it would be following a defragmentation operation is computed. Note that all this is done in an analysis mode. No real defragmentation is done until a subsequent “operate defrag” command is issued. The rtrv-predefrag command causes the network element to send the results of the defrag analysis in a status report back to the management system in a TL1 response.

Properties Login Privilege: User Privilege Code (UCFC/UCAL): P1
Abortable: No.

Input format Command syntax: RTRV-PREDEFRAG:*src-Tid*[:*src-Aid*]:*ctag*::*scope*:*targetID*;

Input parameters

Command parameters

1. *src-Tid* – Target Identifier
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. *ctag* – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
3. *src-Aid*
Source node access identifier of the ONN restoration controller command interface port. *srcAid* is required for this cmd in ONN. See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.

4. scope
This parameter specifies the scope of the defrag operation: intra port or inter port (intra link).
Values
 - port: specifies the defrag is intra-fiber operation on a specific port. In this case **targetID** specifies the local port id same as the **portAid**. The corresponding neighbor node and neighbor port-id can be deduced from the **targetID**.
5. targetID
This parameter specifies either the **Aid** of the port on the local node that is to be defragmented.
Values:
 - Port Aid, if scope=port.

Output format The output parameters **src_tid**, **date**, **time**, and **ctag** and their syntax are included in the Output parameters section.

If the RTRV-PREDEFRAG request completes successfully, the following normal completion response is returned for the case when scope=port:

```
src-Tid date time
M ctag COMPLD
PreLDGrouping=Num&NaM&....
PostLDGrouping=Num&Num&...
Gain=NSTSn&..
;
```

Output parameters

Command parameters

1. src-Tid – Source Node Identifier
This parameter is the currently active name of the NE to which the command is addressed.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. date
This parameter is set to the date when the output message is generated.
YYYY-MM-DD where YYYY=2000-2099, MM=01-12, DD=01-31.

3. time
This parameter is set to the time when the output message is generated.
HH:MM:SS where HH=00-23,MM=00-59, SS=00-59.
4. ctag – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
5. completioncode
Standard TL1 completion code result: COMPLD, for success; DENY, for failure.
6. PreLDGrouping
An ordered & separated string of numbers indicating the availability or unavailability of a group of time slots of different rates. The unit of measure is STS1. Availability is indicated by “a” and unavailability (used) by “u”. Thus 1u3 indicates that one STS3c slot is used up, and 2a indicates that two STS1 slots are available. Notice that the available timeslots are always specified in terms of the number of STS1s. Hence, the “1” at the end is understood and not included to conserve space.
Example for an OC12 port:
PreLDGrouping=1u3&2a&1u1&1u3&1u1,2a, indicates one used STS3c, two available STS1, one used STS1, one used STS3c, 1 used STS1, two available STS1.
The size of the output string will vary depending on whether the port is OC3, OC12, OC48, OC192, OC768 and also on the distribution of the used/available time slots. For an OC192 port, the output string would indicate the OC48c, OC12c, OC3c and STS1 slots used up and the remaining unused STS1 slots.

7. PostLDGrouping

An ordered string formatted the same way as the **PreLinkDefragGrouping** string, indicating the time slot structure once the defrag operation is completed.

Example for the above case of the OC12 port, the

PostLDGrouping=2u3&2u1&4a, indicating that two STS3c slots are used, two STS1 are used and four STS1 slots are available. Thus another STS3c can be accommodated.

8. Gain

This parameter indicates whether the defrag will result in an improvement or not. "0" indicates no improvement, a non-zero value indicates improvement. The improvement is represented as a string composed of one or more of the following substrings: "STS3C", "STS12C", "STS1", "STS48C", "STS192". Each substring has a numeric string preceding it indicating the number of timeslots of that type that will be available once defrag is performed.

In the above example: Gain=1STS3C. Gain will be an & separated list if there are multiple gains. E.g:

2STS1&3STS3C&1STS12C would mean that 2 STS1, 3 STS3C and 1 STS12C connections could be accommodated on that port once the defrag is done. Note only the available timeslots are included in the response.

Example input/output

The following example shows a successful completion of a RTRV-PREDEFRAG command: **NN001:snn:ed01::PORT,1-1-2-1;**

```
NN001 2002-01-12 01:03:16
M ctag COMPLD
PreLDGrouping=1u3&2a&1u1&1u3&1u1&2a
PostLDGrouping=2u3&2u1&4a
Gain=1STS3C
;
```

Error responses

There are some generic error messages like SROF, which will be used for LD cmds also. Refer to ["RTRV-PATH: Retrieve ONNS path connection data" \(15-3\)](#) for a description. Additional error code for this command is: E410 (IIPi) Input, Invalid PortId.

RTRV-PREDEFRAG: Perform pre link
defragmentation analysis on an ONNS port

Optical network navigation system (ONNS)

Related TL1 messages

- [“OPR-DEFRAG: Perform link defragmentation on an ONNS port” \(15-137\)](#)



AUD: Execute audit on various types of ONNS data and return the result of audit

Overview The AUD-mod command requests ONNS data to be compared either with local host NE or with the rest of network for audit. Any discrepancies in data shall be notified as a result in the response. The audit results provide users with information to perform synchronization (either manually or automatically by NN) to improve overall integrity of NN data.

The targeted NN data for audit process are cross-connect map, port object, and path data. The modifier of the AUD-mod command indicates the scope of data to be checked.

The versions of the RTRV-AuditData-mod are AUD-LOCAL, and for the next releases AUD-PATHNBR, and AUD-CONN; all have the same syntax.

AUD-LOCAL triggers local data-audit that is to identify any differences in local NN data from host NE data with respect to port object and cross-connect map. Depending on the result, if any discrepancies found, user can ED-SyncData-LOCAL command to request automated data synchronization process by ONNS.

Properties Login Privilege Code is assigned by host NE system.
Abortable: No

Input format Command Syntax of AUD-LOCAL: AUD-LOCAL:*srcTid:srcAid:ctag*;

Input parameters

Command parameters

1. srcTid – Target Identifier
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. ctag – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
3. srcAid
ONNS application access identifier: *snn*

Output format The output parameters *srcTid*, *date*, *time*, and *ctag* and their syntax are included in the Output parameters section of the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command.

If the AUD-LOCAL request completes successfully, the following normal completion response is returned:

```
srcTid date time
M ctag COMPLD
  "ExtraPortIDs=1portID,2portID,...,N1portID"
  "MissingPortIDs=1portID,2portID,...,N2portID"
  "ExtraNNXcons=1connPtID1,-X-,1connPtID2,1bandwidth,
  1pathID:2connPtID1,-X-,2connPtID2,2bandwidth,2pathID
  :...
  :N3connPtID1,-X-,N3connPtID2,N3bandwidth,N3pathID"
  "MissingNNXcons=1connPtID1,-X-,1connPtID2,1bandwidth
  :2connPtID1,-X-,2connPtID2,2bandwidth
  :...
  :N4connPtID1,-X-,N4connPtID2,N4bandwidth"
  "ExtraNonNNXcons=1connPtID1,-X-,1connPtID2,1bandwidth
  :...
  :N5connPtID1,-X-,N5connPtID2,N5bandwidth"
  "MissingNonNNXcons=1connPtID1,-X-,1connPtID2,1bandwidth
  :...
  :N6connPtID1,-X-,N6connPtID2,N6bandwidth"
;
```

The output shows any mismatched port objects and mismatched cross-connect information in comparing NN data and host NE data.

For mismatched port objects, the cases may occur are as follows:

- port object exists only in NN data, but not in host NE data (ExtraPortIDs)
- port object exists only in host NE data, but not in NN data (MissingPortIDs).

For mismatched cross-connect information, the cases may occur are as follows:

- NN owned cross-connect exists only in NN data, but not in host NE (ExtraNNXcons)
- NN owned cross-connect exists only in host NE data, but not in NN data (MissingNNXcons)

- non-NN owned cross-connect exists only in NN data, but not in host NE (ExtraNonNNXcons)
- non-NN owned cross-connect exists only in host NE data, but not in NN data (MissingNonNNXcons).

Output parameters

Command parameters

The output parameters *srcTid*, *date*, *time*, and *ctag* and their syntax are included in the Output parameters section of the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command.

1. *srcTid* – Source Node Identifier
This parameter is the currently active name of the NE to which the command is addressed.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. *date*
This parameter is set to the date when the output message is generated.
YYYY-MM-DD where YYYY=2000-2099, MM=01-12, DD=01-31.
3. *time*
This parameter is set to the time when the output message is generated.
HH:MM:SS where HH=00-23, MM=00-59, SS=00-59.
4. *ctag* – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
5. *completioncode*
Standard TL1 completion code result: COMPLD, for success; DENY, for failure.
6. *pathID*
The PathID of the specific path to be reported.
See the *pathID* parameter allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Output parameters section.

7. localpathID
The PathID of the specific path to be reported.
See the parameter allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Output parameters section.
8. nbrpathID
The PathID of the specific path to be reported.
See the parameter allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Output parameters section.
9. nodeID - ONNS node Network IP Access identifier
nodeID is not changeable and may be different from signaling network IP address.
Values: {*nnn.mmm.ppp.qqq*}. ONNS node access identifier format is a 12 numeric character with “.” separator.
10. bandwidth - requested bandwidth / connection signalRate
SNN Link **signalRate** is equal to or greater than the minimum cross-connect rate (*minXCrate*) of the port typ. ONNS adapts to SDH formats automatically if the ingress port is SDH.
Values: STS1, STS3, STS12, STS48, STS192.
11. connPtID1
ONNS connPt identifier for the ingress RX connPt of the cross-connection.
See the parameter allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
12. connPtID2
ONNS connPt identifier for the egress TX connPt of the cross-connection.
See the parameter allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.

Example input/output

The following example shows a successful completion of a AUD command for local ONNS data audit operation by the NE. If no data is out-of-sync, the command AUD-LOCAL:LT-ONNS-789:snn:123456; produces the result shown below:

```
LT-ONNS-789 2003-01-01 08:00:00
M 123456 COMPLD
;
```

The following example shows a successful completion of a AUD command for local ONNS data audit operation by the NE. The

command AUD-LOCAL:LT-ONNS-789:snn:123456; produces the result shown below:

```
LT-ONNS-789 2003-01-01 08:00:00
M 123456 COMPLD
"ExtraPortIDs=1-1-20-3-5"
"MissingPortIDs=none"
"ExtraNNXcons=1-6-5-3-1,-X-,1-2-4-3-1,sts48,
135.13.196.203-43216:1-1-4-4-1,-X-,1-2-1-3-1,
sts12,135.13.18.23-12345"
"MissingNNXcons=1-1-8-10-2,-X-,1-1-3-3-4,sts48"
"ExtraNonNNXcons=none"
"MissingNonNNXcons=none"
;
```

Error responses The error codes defined in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command Error responses section also apply to the AUD command.

Related TL1 messages

- [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#)
- [“ED-SYNCDATA: Edit synchronization data” \(15-133\)](#)
- [“RTRV-AudLog: Retrieve the last audit result on various types of ONNS data” \(15-151\)](#)



RTRV-AudLog: Retrieve the last audit result on various types of ONNS data

Overview This command is used to request information about the last audit result on ONNS data that is stored. Note that this command does not perform the audit operation. See [“AUD: Execute audit on various types of ONNS data and return the result of audit” \(15-146\)](#) command for the details of audit operation.

The modifier of the RTRV-AudLog-mod command indicates the scope of data that audit operation was performed on.

The versions of the command are RTRV-AudLog-LOCAL, and for future releases RTRV-AudLog-PATHNBR and RTRV-AudLog-CONN; all have the same syntax.

RTRV-AudLog-LOCAL retrieves the last audit result based on comparison of ONNS data with the master data from local host NE. They are mismatched cross-connects and port objects between two sets of data.

Properties User Privilege Code (UCFC/UCAL): P1.

Abortable: No

Input format Command Syntax of RTRV-AudLog-LOCAL: RTRV-AudLog-LOCAL:*srcTid:srcAid:ctag*;

Input parameters

Command parameters

1. *srcTid* – Target Identifier
Target identifier of the source node is the logical name of the Host NE. ONNS uses the same tid used by the Host NE.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. *ctag* – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
3. *srcAid*
ONNS application access identifier: *snn*.

Output format The output parameters *srcTid*, *date*, *time*, and *ctag* and their syntax are included in the Output parameters section of the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command.

If the RTRV-AudLog-LOCAL request completes successfully, the following normal completion response is returned:

```
srcTid date time
M ctag COMPLD
"ExtraPortIDs=1portID,2portID,...,N1portID"
"MissingPortIDs=1portID,2portID,...,N2portID"
"ExtraNNXcons=1connPtID1,-X-,1connPtID2,1bandwidth,1pathID
:2connPtID1,-X-,2connPtID2,2bandwidth,2pathID
:...
:N3connPtID1,-X-,N3connPtID2,N3bandwidth,N3pathID"
"MissingNNXcons=1connPtID1,-X-,1connPtID2,1bandwidth
:2connPtID1,-X-,2connPtID2,2bandwidth
:...
:N4connPtID1,-X-,N4connPtID2,N4bandwidth"
"ExtraNonNNXcons=1connPtID1,-X-,1connPtID2,1bandwidth
:...
:N5connPtID1,-X-,N5connPtID2,N5bandwidth"
"MissingNonNNXcons=1connPtID1,-X-,1connPtID2,1bandwidth
:...
:N6connPtID1,-X-,N6connPtID2,N6bandwidth"
;
```

The cases in the response represent the mismatched port objects or mismatched cross-connect information as follows:

- ExtraPortIDs - port object exists only in NN data, but not in host NE data
- MissingPortIDs - port object exists only in host NE data, but not in NN data
- ExtraNNXcons - NN owned cross-connect exists only in NN data, but not in host NE
- MissingNNXcons - NN owned cross-connect exists only in host NE data, but not in NN data
- ExtraNonNNXcons - non-NN owned cross-connect exists only in NN data, but not in host NE
- MissingNonNNXcons - non-NN owned cross-connect exists only in host NE data, but not in NN data.

[D] The symbol (-X-) indicates that a cross connection is present between the connPtIDs on an output line. See Aud-LOCAL for the details of audit operation.

Output parameters

Command parameters

The output parameters *srcTid*, *date*, *time*, and *ctag* and their syntax are included in the Output parameters section of the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command.

1. *srcTid* – Source Node Identifier
This parameter is the currently active name of the NE to which the command is addressed.
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
2. *date*
This parameter is set to the date when the output message is generated.
YYYY-MM-DD where YYYY=2000-2099, MM=01-12, DD=01-31.
3. *time*
This parameter is set to the time when the output message is generated.
HH:MM:SS where HH=00-23,MM=00-59, SS=00-59.
4. *ctag* – Correlation Tag
See the parameter description in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) Input parameters section.
5. completion code
Standard TL1 completion code result: COMPLD, for success; DENY, for failure.
6. *pathID*
The PathID of the specific path to be reported.
See the *pathID* parameter allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Output parameters section.
7. *localpathID*
The PathID of the specific path to be reported.
See the parameter allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Output parameters section.

8. nbrpathID
The PathID of the specific path to be reported.
See the parameter allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Output parameters section.
9. nodeID - ONNS node Network IP Access identifier
{nnn.mmm.ppp.qqq} ONNS node access identifier format is a 12 numeric character with “.” separator.
10. bandwidth - Requested bandwidth / connection *signalRate*
SNN Link *signalRate* is equal to or greater than the minimum cross-connect rate (minXCrate) of the port typ. ONNS adapts to SDH formats automatically if the ingress port is SDH.
Values: STS1, STS3, STS12, STS48, STS192.
11. connPtID1
ONNS connPt identifier for the ingress RX connPt of the cross-connection.
See the *srcPortID* parameter allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.
12. connPtID2
ONNS connPt identifier for the egress TX connPt of the cross-connection.
See the *srcPortID* parameter allowed values in the [“ENT-PATH-protClass: Enter ONNS path connection” \(15-35\)](#) Input parameters section.

Example output

The following example shows a successful completion of a RTRV-AudLog command for local ONNS data audit operation by the NE. If no data is out-of-sync, the command RTRV-AudLog-LOCAL:LT-ONNS-789:snn:123456; produces the result shown below:

```
LT-ONNS-789 2003-01-01 08:00:00
M 123456 COMPLD
;
```

The following example shows a successful completion of a RTRV-AudLog command for local ONNS data audit operation by the NE. The command RTRV-AudLog-LOCAL:LT-ONNS-789:snn:123456; produces the result shown below:

```
LT-ONNS-789 2003-01-01 08:00:00
M 123456 COMPLD
```

```
"ExtraPortIDs=1-1-20-3-5"  
"MissingPortIDs=none"  
"ExtraNNXcons=1-6-5-3-1,-X-,1-2-4-3-1,sts48,  
135.13.196.203-43216:1-1-4-4-1,-X-,1-2-1-3-1,  
sts12,135.13.18.23-12345"  
"MissingNNXcons=1-1-8-10-2,-X-,1-1-3-3-4,sts48"  
"ExtraNonNNXcons=none"  
"MissingNonNNXcons=none"  
;
```

[D] The symbol (-X-) indicates that a cross connection is present between the connPtIDs on an output line.

```
LT-ONNS-789 2003-01-01 08:00:00  
M 123456 COMPLD  
"PathOnlyinCONN=none"  
"PathNotInCONN=135.14.196.203-32165"  
;
```

Error responses The error codes defined in the [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#) command Error responses section also apply to the RTRV-AudLog command.

Related TL1 messages

- [“RTRV-PATH: Retrieve ONNS path connection data” \(15-3\)](#)
- [“ED-SYNCDATA: Edit synchronization data” \(15-133\)](#)
- [“AUD: Execute audit on various types of ONNS data and return the result of audit” \(15-146\)](#)



Connection status relation to path states

Overview The *connStatus* values are reported in the TL1 response messages to Path setup commands, REPT-PTHCHG and REPT-PTHEVT notifications, and RTRV-PATH. Status and state values are composed of a pst (PrimaryState) & sst (SecondaryState) & tst (TertiaryState). Up to two of the allowed values are simultaneously permitted as a sst/tst parameter. All values must be separated by an ampersand ("&"). Status or state values are 7 characters or less. The following tables show some of the known combination for connections & path.

NN connection state changes and transitional states are generally not reported unless it is part of a RTRV-PATH ALL command response or a direct query on a connection that is changing at the time of the query such as while a connection is being deleted after a restoration. Path failure events such as an unprotected connection failure (or NO-IN fault) will be reported via a REPT-PTHEVT.

Connection Status	ConnStatus code	Scenario	State Type
Connected & OK	CON & OK	Normal Connection Status	ES
Connected & Failed	CON & FAILED	Connection failure	ES
Connected & No Input	CON & NO-IN	No Input, source or destination (Initial setup)	ES
Connected & Failed & Restore failed	CON & FAILED & RSTRFL	Restoration attempt failed / connection going to the Restoration Queue	TS
Connection Deleting	CON & TRDOWN	Connection Delete (In Progress)	TS
Connection Delete	DLT	Connection Deleted	FR
Connection Delete Failed	CON & DLT-FL	Conn Delete Failed, path not deleted	ES

Connection Status	ConnStatus code	Scenario	State Type
Connected & OK & Restored	CON & OK & RSTRD	Auto-Reroute Revertive Connection Status (after initial restoration)	ES
Not Connected & Set Up in Progress	NOCON & SETUP	Initial connection setup in progress	TS
Not Connected & Pre-empted	NOCON & PREMPTD	Connection has been disconnected from original path	TS
Connected & OK & Waiting to Revert	CON & OK & WTORV	AUTORV Path ready, waiting for WTR (wait-to-revert) timer to revert to original path	TS
Not Connected & Waiting to Restore	NOCON & WTORSTR	Preempted path removed & Connection has been added to the Restoration Queue.	ES / RQ
Connected & Failed & Waiting to Restore	CON & FAILED & WTORSTR	Auto Connection failed & has been added to the Restoration Queue.	ES / RQ
Connected & Set Up Complete	CON & SETUP	Initial connection setup completed, waiting for light	TS
Not Connected & Set Up Failed	NOCON & SETUPFL	Initial connection setup failed	FR
Not Connected	NOCON	Connection has been disconnected from original path by maintenance operation	TS
Connected & OK & NVM write failed	CON & OK & FL-NVM	Normal Connection Status, but NVM write failed	ES

Connection Status	ConnStatus code	Scenario	State Type
Connection Delete & NVM write failed	DLT & FL-NVM	Connection Deleted & NVM write failed	ES

ES = stable active End State, FR = Final Report state (indicates that the connection is no longer active), TS = Transient state, F = Future, RQ=Restoration Queue. Transient states may be (future).



Path state definitions

Overview The state values are reported in the TL1 response messages to Path setup commands, REPT-PTHCHG and REPT-PTHEVT notifications, and RTRV-PATH. Status and state values are composed of a pst (PrimaryState) & sst (SecondaryState) & tst (TertiaryState). Up to two of the allowed values are simultaneously permitted as a sst/tst parameter. All values must be separated by an ampersand ("&"). Status and state values are 7 characters or less. The following tables show some of the known combination for connections & path.

ONNS connection state changes and transitional states are generally not reported unless it is part of a RTRV-PATH ALL command response or a direct query on a connection that is changing at the time of the query such as while a connection is being deleted after a restoration. Path failure events such as an unprotected connection failure (or NO-IN fault) will be reported via a REPT-PTHEVT.

Path State	PathState code	Scenario	State Type
Connected & OK	CON & OK	Normal Path Status	ES
Connected & Failed	CON & FAILED	Path failure	ES
Connected & Teardown occurring	CON & TRDOWN	Path Delete in progress	TS
Deleted	DLT	Path Delete complete	FR
Connected & No Input	CON & NO-IN	No Input, source or destination, during initial setup	ES/TS
Connected & OK & Restored	CON & OK & RSTRD	Auto Reroute Revertive Restoration Path Status	ES
Not Connected & Setting Up	NOCON & SETUP	Initial connection setup in progress	TS
Path connected, delete failed	DLT & FAILED	Path delete failed	ES

Path State	PathState code	Scenario	State Type
Not Connected & Pre-empted by higher priority restoration	NOCON & PREMPD	Path has been disconnected from original EDGE port and will be re-used on another restored connection.	TS
Connected & OK & Waiting to Revert	CON & OK & WTORV	AUTORV Path ready, waiting for WTR (wait-to-revert) timer to revert to original path	TS
Not Connected	NOCON	Pre-calculated restore path available for use	ES
Connected & Setup complete, waiting for light	CON & SETUP	Initial connection setup completed, waiting for light confirmation from the egress node	TS
Connected, Failed & Waiting to Restore	CON & FAILED & WTORSTR	Restoration attempt failed and will be restored when a new path is available.	ES
Set Up Failed	NOCON & SETUPFL	Initial connection setup failed	ES

ES = stable active End State, FR = Final Report state (indicates that the connection is no longer active), TS = Transient state, F = Future, RQ=Restoration Queue. Transient states may be (future).



List of error codes

Error code	Meaning (validation rule)	Related to command ...
Destination Un-reachable - Connection setup Failed	Destination un-reachable	“ED-PATH: Edit ONNS connection paths” (15-18) , “ENT-PATH-protClass: Enter ONNS path connection” (15-35)
Input, ConnectionID Non-Existent	ConnectionID does not exist	“ED-PATH: Edit ONNS connection paths” (15-18)
	Path ConnectionID does not exist	“DLT-PATH: Delete ONNS path Connection” (15-55) , “RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Input, Data Invalid, New PathID	Invalid newPathID	“ED-SYNCDATA: Edit synchronization data” (15-133)
Input, Data Invalid Old PathID	Invalid oldPathID	
Input, DataType Invalid	Invalid dataType or componentID parameter	“RTRV-NNDR: Retrieve ONNS Data information” (15-88) , “RTRV-NTDR: Retrieve ONNS data repository” (15-75)
Input, Invalid ACcess identifier	Invalid Access Identifier	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Input, Invalid CoMmand, Command not found or recognized	Invalid Command	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Input, Invalid ConnPt / PortID	Port related problems	“ED-PATH: Edit ONNS connection paths” (15-18) , “ENT-PATH-protClass: Enter ONNS path connection” (15-35)
Input, Invalid Correlation Tag	Invalid correlation tag (CTAG) or RequestID	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Input, Invalid EDGE portID	SNN PortID parameter value is not valid	“ENT-PATH-protClass: Enter ONNS path connection” (15-35) , “ED-PATH: Edit ONNS connection paths” (15-18)

Error code	Meaning (validation rule)	Related to command ...
Input, Invalid New ConnAlias	ED-PATH request denied - Parameter invalid	“ED-PATH: Edit ONNS connection paths” (15-18)
Input, Invalid IP address	Invalid componentID parameter	“RTRV-NTDR: Retrieve ONNS data repository” (15-75)
Input, Invalid PortID	Invalid PortID or componentID parameter	“RTRV-NNDR: Retrieve ONNS Data information” (15-88)
Input, Invalid Target Identifier	Invalid target identifier	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Input, Missing Access Identifier (AID)	Invalid access identifier	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Input, Missing Correlation Tag	Invalid correlation tag (CTAG) or RequestID	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Input, Missing Target Identifier code (TID)	Invalid Target Identifier	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Input, Neither ConnID nor ConnAlias Specified	ED-PATH request denied - Parameter invalid	“ED-PATH: Edit ONNS connection paths” (15-18)
Input, Node List has Invalid / unknown IP address	Parameter data invalid	, “ENT-PATH-protClass: Enter ONNS path connection” (15-35) “ED-PATH: Edit ONNS connection paths” (15-18)
Input, Parameter Missing, missing <parameter>	Missing oldPathID or newPathID	“ED-SYNCDATA: Edit synchronization data” (15-133)
Input, PathID Non-Existant	Path connection pathID does not exist	“DLT-PATH: Delete ONNS path Connection” (15-55) , “RTRV-NNDR: Retrieve ONNS Data information” (15-88)
Input, Path Non-Existant	Path non-exists for the specified connection ID	
Input, Source nodeIP address is invalid	Syntax, parameter data invalid	“ENT-PATH-protClass: Enter ONNS path connection” (15-35) , “ED-PATH: Edit ONNS connection paths” (15-18)
InSufficient Network Resources in the Topology DR	Insufficient network resources	“ENT-PATH-protClass: Enter ONNS path connection” (15-35) , “ED-PATH: Edit ONNS connection paths” (15-18)

Error code	Meaning (validation rule)	Related to command ...
Maximum Transport Delay Exceeded on calculated path	Maximum transport delay exceeded on calculated path	“ED-PATH: Edit ONNS connection paths” (15-18) , “ENT-PATH-protClass: Enter ONNS path connection” (15-35)
Null ConnID and empty or null ConnAlias	Syntax invalid or unimplemented parameter	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Output Response Failed while Sending	Retrieve DR query - RTRV-mod ALL fails to complete	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
REPLY_DENIED_NO_CONNALIAS, Input, connAlias Non Existant	Syntax invalid or unimplemented parameter	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Resource Selection or Reservation Failure	Destination un-reachable	“ED-PATH: Edit ONNS connection paths” (15-18) , “ENT-PATH-protClass: Enter ONNS path connection” (15-35)
Status, All Resources Busy, (the command can not be completed due to insufficient processing resources)	Status, all resources busy	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Status, Connection already has two paths	ED-PATH-PROT request / operation errors	“ED-PATH: Edit ONNS connection paths” (15-18)
Status, Connection Operation Failed		
Status, Connection Resource Busy, delete operation in progress	Status, Connection Resource Busy	“DLT-PATH: Delete ONNS path Connection” (15-55)
Status, Connection Resource Busy, ONNS Path operation in progress		“RTRV-PATH: Retrieve ONNS path connection data” (15-3) , “ED-PATH: Edit ONNS connection paths” (15-18)
Status, Edge Port Used	Destination un-reachable	“ED-PATH: Edit ONNS connection paths” (15-18)
Status, Existing Non-NN XConn		
Status, Host interface TimeOut		“ENT-PATH-protClass: Enter ONNS path connection” (15-35)

Error code	Meaning (validation rule)	Related to command ...
Status, Host XConn on ConnPoint	Port related problems	“ED-PATH: Edit ONNS connection paths” (15-18)
	SNN PortID parameter value is not valid	“ENT-PATH-protClass: Enter ONNS path connection” (15-35)
Status, Insufficient Processing Resources	All Resources Busy	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Status, Host interface Timeout Failure caused path setup failure	Destination un-reachable	“ED-PATH: Edit ONNS connection paths” (15-18)
Status, NN Timeout Failure caused path setup failure		
Status, Multiple Paths Failed to deleted on this ConnID	Connection deletion, one or more paths were not deleted	“DLT-PATH: Delete ONNS path Connection” (15-55)
Status, NN Timeout Failure	Destination un-reachable	“ENT-PATH-protClass: Enter ONNS path connection” (15-35)
Status, Not Available, MAINT mode \”,srcNodeIP	ONNS System Not Available, MAINT mode	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Status, NNI connPoint in Use, XConn or reservation exists	Port related problems	“ED-PATH: Edit ONNS connection paths” (15-18)
Status, NNI connPoint / port Unavailable	SNN PortID parameter value is not valid	“ENT-PATH-protClass: Enter ONNS path connection” (15-35) , “ED-PATH: Edit ONNS connection paths” (15-18)
Status, One Path Failed to deleted	Connection deletion, One path is not deleted	“DLT-PATH: Delete ONNS path Connection” (15-55)
Status, Path Failed to delete due to Signaling communication link failure		
Status, Path Database Out of sync	PathID parameter data is not valid	“ED-PATH: Edit ONNS connection paths” (15-18)
Status, Path Setup Failure, caused by signal transmission failure at egress node	Destination un-reachable (DUCF)	“ENT-PATH-protClass: Enter ONNS path connection” (15-35) , “ED-PATH: Edit ONNS connection paths” (15-18)

Error code	Meaning (validation rule)	Related to command ...
Status, Pathid Data Out of sync	PathID parameter data is not valid	“ENT-PATH-protClass: Enter ONNS path connection” (15-35)
Status, Path Deletion Failed, path deletion was not completed	Path associated with the specified connectionID was not deleted	“DLT-PATH: Delete ONNS path Connection” (15-55)
Status, Path Not Deleted, connection deletion not completed	Connection deletion, path associated with the specified connectionID was not deleted	“DLT-PATH: Delete ONNS path Connection” (15-55)
Status, Signaling Communication link Failure (or abort) caused path operation failure		
Status, Path Roll Failed	ED-PATH-ROLL Error Responses	“ED-PATH: Edit ONNS connection paths” (15-18)
Status, Path Operation not Allowed on connection in Restoration queue		
Status, Path Setup Failure caused by signal transmission failure at egress node	Destination un-reachable	, “ENT-PATH-protClass: Enter ONNS path connection” (15-35) “ED-PATH: Edit ONNS connection paths” (15-18)
Status, Requested Operation Failed	Requested operation failed	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Status, Signaling Communication link Failure (or abort) caused path setup failure	Destination un-reachable	“ED-PATH: Edit ONNS connection paths” (15-18) , “ENT-PATH-protClass: Enter ONNS path connection” (15-35)
Status, Signaling Timeout caused path setup failure		
Status, XConn Failure caused path setup failure		
Status, XConn Timeout Failure caused path setup failure		“ED-PATH: Edit ONNS connection paths” (15-18)
Syntax, Data Not Consistent	Syntax invalid or unimplemented parameter	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Syntax, Data Not Consistent \”,errorData	Syntax, Data Not Consistent	“ENT-PATH-protClass: Enter ONNS path connection” (15-35)

Error code	Meaning (validation rule)	Related to command ...
Syntax, Invalid Command too Long	Invalid command	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Syntax, InValid Punctuation	Syntax, Invalid punctuation	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Syntax, Parameter Data Invalid, invalid_parameter=Component	Invalid <i>dataType</i> or <i>componentID</i> parameter	“RTRV-NTDR: Retrieve ONNS data repository” (15-75)
Syntax, Parameter Data Invalid, invalid_parameter=dataType	Invalid dataTypeparameter	“RTRV-NNDR: Retrieve ONNS Data information” (15-88)
Syntax, Parameter Data Invalid, invalid_parameter=fieldName	Command parameter invalid	“ED-NNCNFG: Edit ONNS configuration data” (15-72) , “ED-PATH: Edit ONNS connection paths” (15-18) , “ENT-PATH-protClass: Enter ONNS path connection” (15-35)
	Syntax invalid or unimplemented parameter	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Syntax, Parameter Data Invalid, invalid_parameter=srvID	Invalid service ID	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
Syntax, Parameter Name Invalid, invalid_parameter=fieldName	Syntax invalid or unimplemented parameter	“RTRV-PATH: Retrieve ONNS path connection data” (15-3)
	Command parameter invalid	“ED-NNCNFG: Edit ONNS configuration data” (15-72)
This connection Alias Already Exists	Syntax, Parameter Data Invalid (SPDI)	“ENT-PATH-protClass: Enter ONNS path connection” (15-35)

Error code	Meaning (validation rule)	Related to command ...
XConn Connect Failure, Port does not exist or is TRADITIONAL	Cross-connect Connect Failure	“ENT-PATH-protClass: Enter ONNS path connection” (15-35)
XConn Connect Failure, Unexpected topology or related cross connect		
XConn Connect Failure, Cross connect already exists		
XConn Connect Failure, Input tributary standard mismatch		
XConn Disconnect Failure, Port does not exist or is TRADITIONAL	Cross-connect disconnect failure error	“DLT-PATH: Delete ONNS path Connection” (15-55)





16 Amendments

Overview

Purpose This chapter provides information about the amendments.

The amendments are divided in

- general amendments
- TL1 related amendments

where the TL1 related amendments will never show up if CIT GUI (Graphical) is used.

The syntax of the amendment number (e.g. Amendment 2.0 -nb12345) is as follows:

- first part: the amendment is known since this release
- second part: internal number.



General amendments

Overview

Purpose This section lists the general amendments.

Contents

Configuration management	16-3
ONNS	16-5
Protection (BLSR/S-SPRing, DRI/DNI,APS/MSP, UPSR/SNCP)	16-7
Equipment protection	16-11
Fault/Alarm management	16-12
Area DCN/DCC management	16-13
Security management	16-14
Gigabit Ethernet	16-15



Configuration management

Amendment 3.0.1 -nb17428 Wrong error response for port mode change with existing loopback

If the interface standard mode of an optical port is tried to be changed during loopback is existing the system responses with following error code:

Status already operated, loopback already exists

The expected response would be:

Not in Valid State, a loopback is existing

Workaround: The operator can verify that the interface standard has not been changed by pressing the refresh-button on the CIT screen.

Amendment 3.0.1 -nb19693 Unallowed changes of cross-connection parameters while remote test access sessions are provisioned are not rejected properly

If the operator attempts to change the interface standard or tributary mode while a test access session for this cross-connection is active then a slightly wrong error message will be returned.

Amendment 3.0.1 -nb18907 Preprovisioning of working or protection controller should be denied

Against the specification the system does not refuse a pre-provisioning of working (CTLW) or protection controller (CTLP). If the operator performs the command ENT-EQPT >SLOT<“ CTLW ”for working or “CTLP ” for protection controller), the system completes the preprovisioning instead of rejecting it with the expected error response:

IDNV -Input, Data Not Valid

By this preprovisioning with a later insertion of a not matching CTL can be performed. But after a reboot the provisioning info is updated to the correct value.

Workaround: Do not use pre-provisioning functionality for controller packs.

Amendment 3.0.1 -nb03284 IDNV TL1 error code without parameter name

A simple parameter problem within a TL1 command (e.g. parameter out of range) will result in an anonymous IDNV error, without mentioning the affected parameter:

```
IDNV /*Input, Data Not Valid */
```

In most cases the TL1 commands are hidden behind the GUI (of e.g. CIT or EMS), which does those checks up-front or does not allow to enter wrong values.

Amendment 1.0 -nb07245

Vague error code when changing a port's signal rate with existing cross-connections

When changing the input or output signal rate of a port while a cross-connection exists on the tributary, whose structure shall be changed, the error code:

```
SNVS /*Status, Not in Valid State */
```

instead of:

```
SNVS /*Status, Not in Valid State, inconsistent input  
signal */
```

is returned.

Workaround: The operator should check, if this could be the reason for the command rejection.



ONNS

Amendment 3.0.1 -nb18983 Wrong error response when cross connect unit XC320/B can not be deleted while NE is part of an ONNS network

If the NE is part of an ONNS network and the user tries to delete the cross connect unit XC320/B, the system responses with following error code:

SR0F -Status, Requested Operation Failed

The expected response would be:

SNVS -Status, Not in Valid State

Workaround: The operator should check, if this could be the reason for the command rejection.

Amendment 3.0.1 -nb19107 Wrong error response when activation of ONNS fails

If activation of ONNS for an NE fails due to wrong equipped units (e.g. XC320 instead of XC320/B), the system responses with following error code:

SNVS/*Status, Not in Valid State, Modification not allowed
*/

The expected response would be:

SNVS/*Status, Not in Valid State, no Swiss capable HW */

Workaround: The operator should verify if there is any not ONNS capable unit equipped.

Amendment 3.0.1 -nb17756 Wrong error code when interface unit can not be deleted while in use by ONNS

If an optical or electrical interface unit, which is part of an ONNS network, and the port control is not set to “LOCKOUT”, should be deleted from the NE database, the following TL1 error message will be displayed.

SNVS -Status, Not in Valid State

The expected error message would be:

SNVS -Status, Not in Valid State, Port is still in use by
ONNS

Amendment 3.0.1 -nb18226 Incomplete error code when maximum number of tributaries with loca and locz information exceeded

The maximum number of tributaries with location a (loca), location z (locz) information is limited to 100. If this limit is exceeded the following error message is displayed:

SSRE,Status, System Resources Exceeded, allowed limit exceeded

The expected error message would be:

SSRE, Status, System Resources Exceeded,limit of tribs with loca, locz exceeded



Protection (BLSR/S-SPRing, DRI/DNI,APS/MSP, UPSR/SNCP)

Amendment 3.0.1 -nb19408

Incorrect establishments of cross connections are not rejected properly

If the operator attempts to establish a cross-connection in an improper system state such as:

- access to extra traffic (BLSR/MS-SPRing)
- access to VCG tributaries for path protected cross-connections.

then a slightly wrong error code will be returned.

Amendment 3.0.1 -nb20146

Improper creation and deletion of BLSR/S-SPRing while Remote Test Access active is rejected wrongly

In this rainy day scenario the operator is informed to have a cross-connection provisioned instead of the fact that a test session is active which hinders BLSR/MSSPRING creation/deletion attempts.

Workaround: The operator should check, if this could be the reason for the command rejection.

Amendment 3.0.1 -nb20234

An MSP deletion while a Remote Test Access session is active will be rejected with a wrong error code

The operator gets the hint that a cross connection is still established instead of the hint that a test session is still active.

Workaround: The operator should check, if this could be the reason for the command rejection.

Amendment 3.0.1 -nb17590

Wrong error code for creation of a BLSR/MS-SPRing protection group

The error reply when creating a new BLSR/MS-SPRing protection group (TL1 command ENT-PROTN-GRP) is wrong if the specified ports have different port rates: The expected response would be:

Status,Not in Valid State, ports have different port rates

The system responses:

Status,Not in Valid State, ports have different interface types

Workaround: The operator should check, if this could be the reason for the command rejection.

Amendment 3.0.1 -nb18022 MSP: Wrong Error Response for Enable of DCC switching

The error response when it is tried to enable MSP slaved DCC switching and the DCC channel (section/line) of the working side is not yet enabled (TL1 command ED-PROTN-GRP) does not follow the specification. The system responses:

SNVS -Status, Not in Valid State, no dcc channel enabled

The expected response would be:

SNVS -Status, Not in Valid State, working dcc channel disabled.

Workaround: The operator should check, if this could be the reason for the command rejection.

Amendment 3.0.1 -nb18544 MSP 1:1 Wrong error code for Forced Switch to protection with SF

The error response when it is tried to perform a forced switch for an MSP 1:1 to protection side, which has a Signal Fail condition (TL1 command OPR-PROTN-SW) does not follow the specification. The system responses:

SPFA -Status, Protection unit FAiled

The expected response would be:

SNVS -Status, Not in Valid State, switch command not allowed for actual protection state

Workaround: The operator should check, if this could be the reason for the command rejection.

Amendment 3.0.1 -nb17992 Wrong error response for set up of 1+1 optimized SP protection for SONET ports

The error response if the operator tries to set up an 1+1 optimized MSP protection group for SONET ports (TL1 command ENT-PROTN-GRP), what is not supported by LambdaUnite does not follow the specification. The system responses:

IDNC -Input, Data Not Consistent, No MSP protection supported for SONET mode

The expected response would be:

IDNC -Input, Data Not Consistent, MSP 1+1_optimized not supported for SONET mode

Workaround: The operator should check, if this could be the reason for the command rejection.

Amendment 3.0.1 -nb18021

Wrong error response for changing the interface standard to SONET for an MSP 1+1 Optimized port

The error response for changing the interface standard to SONET for an MSP 1+1 Optimized port (TL1 command ED-rr , where rr means all port rates:STM1,STM4,...) does not follow the specification. If the operator tries to change the interface standard (parameter "istd ") from SDH to SONET and the specified port is in an MSP 1+1 Optimized relation (working or protection port), a wrong error code is reported. The expected response would be:

SNVS -Status, Not in Valid State, a protection group is existing

The system responses:

SROF -Status, Requested Operation Failed

Workaround: The operator should check, if this could be the reason for the command rejection.

Amendment 3.0.1 -nb18746

Wrong error responses for converting an one-way cross connection to a not allowed path protected cross-connection

The error response when converting an one-way cross-connection to a not allowed path-protected cross-connection (TL1 command CNVT-CCT) does not follow the specification: If in_aid (source of the unprotected cross connection) and/or newinaid (source of the new leg) is specifying a port in adaptive mode, the system responds:

IENE -Input, Entity Not Exists

The expected response would be:

SNVS -Status, Not in Valid State, input port(s) for pathprot. crossconnecton in adaptive mode

If the cross-connection is not allowed in combination with MS-SPRing/ BLSR, the system responds:

IENE -Input, Entity Not Exists

The expected response would be:

SNVS -Status, Not in Valid State, unsupported
MS-SPRing/BLSR DNI/DRI

Workaround: The operator should check, if this could be the reason for the command rejection.

Amendment 3.0.1 -nb18164 Wrong error responses for converting an one-way cross-connection to a path-protected cross-connection with wrong SNC-type

The error response when converting an one-way cross-connection to a path-protected cross-connection (TL1 command CNVT-CCT) does not follow the specification: If the operator specifies Not Applicable as SNC-type (snctype=NA) for an SDH cross-connection the system responds:

IDNV -Input, Data Not Valid

The expected response would be:

IDNC -Input, Data, Not Consistent, SNC Type not compliant with existing crossconnection

Workaround: The operator should check, if this could be the reason for the command rejection.

Amendment 3.0.1 -nb18970 "Wait to Restore" will be displayed instead of "Wait to Rename" for MSP Optimized on the CIT screen

In the CIT menu "View Protection " for the card switch status of MSP 1+1 Optimized, "Wait to Restore" will be displayed instead of "Wait to Rename".

For info: MSP 1+1 Optimized protection schemes have no switch back functionality. The actually worker line is called "Primary " and the actual protection line is called "Secondary ". Therefore it will be renamed a short time after a protection switch occurs.

Workaround: The user should know about this behavior.



Equipment protection

Amendment 3.0.1 -nb18848 Wrong error code when it is tried to perform a manual switch to a side with equipment faults

The error response when the operator tries to perform a manual switch to a side, which has a equipment fail condition (TL1 command OPR-PROTNSW) does not follow the specification. The system responds:

SARB -Status, All Resources Busy, system limit exceeded

The expected response would be:

SNVS -Status, Not in Valid State, switch command not allowed for actual protection state

Workaround: The operator should check, if this could be the reason for the command rejection.



Fault/Alarm management

Amendment 3.0.1 -nb15432 Retrieve Alarm Log returns error message instead of empty list

The BROWSE mode for the command Retrieve Log Alarm RTRV-LOG-ALM does not work as specified. If there are no alarm entries in the specified interval the system returns with the error code

```
SNVS /*Status, Not in Valid State, no matching log entry
*/
```

Instead of this an empty log with a COMPLD message should be returned.

Amendment 3.0.1 -nb15498 Retrieve Notification Log returns error message instead of empty list

The BROWSE mode for the command Retrieve Log Notification RTRV- LOG-NTFCN does not work as specified. If there are no alarm entries in the specified interval the system returns with the error code

```
SNVS /*Status,Not in Valid State, no matching log entry */
```

Instead of this an empty log with a COMPLD message should be returned.



Area DCN/DCC management

Amendment 3.0.1 -nb17090 No specific error message when 64 DCC channel limit is reached

When the maximum number of available DCC channels is reached, the supplied error message does not distinguish the possible reasons and always replies with:

SSRE, System Resources Exceeded, allowed limit of DCC channels exceeded.

There is no distinction if the number of

- SCN (Signaling Communication Network) assignments or
- MCN (Management Communication Network) assignments or
- a combination of both.

is exceeded.



Security management

Amendment 3.0.1 -nb08645 No common notification registration for database changes and state changes

Registration for one of the both notification types does not automatically register for the other type too.



Gigabit Ethernet

Amendment 3.0.1 -nb18315 The TL1 command Retrieve Virtual Switch RTRV-VRTSW returns additional parameter

The response to the TL1 command Retrieve Virtual Switch RTRV-VRTSW does not follow the specification. The NE response includes the parameter "rootport" with the value "UNAVAILABLE", if the Gigabit Ethernet card is not plugged in. The specification requests, that the parameter shall be omitted.

Workaround: The operator should ignore the parameter.



TL1 amendments

Overview

Purpose This section lists the amendments related to the TL1 commands.

Contents

Configuration management	16-17
Synchronization management	16-20
ONNS	16-22
Protection (BLSR/S-SPRing, DRI/DNI,APS/MSP, UPSR/SNCP)	16-23
Equipment protection	16-30
Fault/Alarm management	16-31
Remote test access	16-35
DCN/DCC management	16-37
Security management	16-39
Gigabit Ethernet	16-40
Performance monitoring	16-41



Configuration management

Amendment 3.0.1 - nb17552 The TL1 command RTRV-ALL for STM1E ports returns not suitable parameter

The response to the TL1 command RTRV-ALL does not follow the specification for STM1E ports. The NE response includes the not suitable parameter *opwl* (optical wavelength) with the value 0 for STM1E ports.

Workaround: This parameter should be ignored.

Amendment 3.0.1 - nb18341 RTRV-VC3/STS1: Dynamic parameters are not reported, when ALL AID is used

Against the specification the TL1 command RTRV- VC3/STS1 do not report the so called dynamic parameters, if the user requests to retrieve the tributary information of all tributaries of one card by one command. In order to do this the user must specify a so called ALL tributary AID. An example of the ALL tributary AID is:
1-1-#-#-1-1-ALL.

The following dynamic parameters are affected: *ptrc*, *ptrcst*, *siglb*, *trailstate*.

Workaround: The operator should use the RTRV-ALL command and set the *dyn* parameter to YES to retrieve the so called *dynamical* information with one command.

Amendment 3.0.1 - nb13872 RTRV-ASAP-ASGNMT returns empty reply for an non-existing profile

The RTRV-ASAP-ASGNMT returns an empty reply if the specified profile does not exists. It should return the following error code:

IENE /*Input, Entity Not Exist, profile does not exist */

Amendment 2.0 - nb14052 Wrong error codes for loopback function

Some error codes related to commands for the loopback function are wrong:

1. RTRV-LPBK command with modifier inconsistent to port rate is accepted, but should be denied with: Input,Data,Not Consistent,modifier is inconsistent with existing port rate.
2. RTRV-LPBK command with modifier inconsistent to the interface standard of the port is accepted, but should be denied with: Input,Data,Not Consistent,modifier is inconsistent with existing interface standard.
3. OPR-LPBK and RLS-LPBK commands with modifier inconsistent to the interface standard of the port are denied with wrong error code: Input,Command Not Valid,Interface Standard does not match but should be denied with: Input,Data,Not Consistent,modifier is inconsistent with existing interface standard.

Workaround: The operator should check, which constraint is not met if the command is rejected.

Amendment 2.0 - hz02476 Unexpected blank line in ACT-USER reply

The NE response for the ACT-USER command contains a blank line () in the normal completion message in front of the terminator (i.e. ';'').

Workaround: Ignore blank line.

Amendment 2.0 - nb11158 RTRV-OC<n>/-STM<n> command denied instead of replying empty list

If the operator uses a RTRV-OC<n>/-STM<n> request with

- port aid has not an ALL value within the slot field and an ALL value in the port field
- there are no OC<n> or STM<n> ports (i.e. the modifier in the command request does not match the provisioned interface standard).

then the NE rejects that RTRV request. It should just return an empty reply.

Workaround: Use the error reply as indication, that no ports are existing matching the AID filter. In addition the operator could use the

value ALL instead of OC<n> or STM<n> if wildcard (ALL) are used in the port AID.

Amendment 1.0 - nb06908 Wrong error code when tried to change TID/SID in normal mode

When it is tried to change the TID/SID of the system while it is not in maintenance mode the error code SNVS -Status,Not in Valid State is shown instead of SNVS -Status,Not in Valid State,not in Maintenance Condition.

Workaround: The operator should check , if this could be the reason for the command rejection.

Amendment 1.0 - nb08505 'usall' wildcard in AID value is denied for RTRV-LPBK (port)

A RTRV-LPBK command is denied, if the operator uses the value *usall* for the slot field within the AID parameter. But this value should be supported to browse only the universal slots.

Workaround: The operator should use the value *all* instead of *usall* in the RTRV request. This produces the same result as if the *usall* has been used.

Amendment 1.0 - nb08205 'usall' wildcard does not work with RTRV-EQPT(cp) and RTRV-STATE-EQPT(cp)

When using the *usall* wildcard in a CP-AID (i.e.1-1-#-#-usall-cp) with the RTRV-EQPT(cp) or RTRV-STATE-EQPT command the system responds with an empty reply instead of the expected output.

Workaround: Use the *all* wildcard instead (Example:1-1-#-#-all-cp).



Synchronization management

- Amendment 2.0 - nb10316** **Wrong error code for SET-SYNCN command with parameter *extout_prov***
- If the NE is provisioned as SONET synchronization node, the two station clock outputs are always fix connected to line1/line2. Thus the parameter *extout_prov* cannot be changed. If the operator issues a SET-SYNCN command with a wrong *extout_prov* parameter value, a wrong error code is replied: IDNV /*Input,Data Not Valid */ .
- Expected error code: IDNV /*Invalid,Data Not Valid,invalid extout_prov */
- Workaround:** The operator should check, if this could be the reason for the command rejection.
-
- Amendment 1.0 - nb08514** **Condition type parameter is sometimes missing in REPT EVT**
- The protection switch notification (TL1 message REPT EVT) does sometimes not contain a value for the parameter *condtype*. This happens if the system clock mode change to the value LOCKED.
- Workaround:** Operator should use RTRV-SYNCN command to get actual state attribute values.
-
- Amendment 1.0 - nb08515** **Sometimes wrong condition type parameter value are reported in REPT EVT**
- The protection switch notification (TL1 message REPT EVT) does sometimes contain a wrong value for the parameter *condtype*. This happens if the system clock mode changes to the value HOLDOVER.
- Workaround:** Operator should use RTRV-SYNCN command to get actual state attribute values.
-
- Amendment 1.0 - nb07705** **Wrong error code for the switch command for station clock output**

The error reply for the OPR-SYNCNSW-OUTREF (switch command for station clock output) is wrong in the following error scenarios:

1. Parameter *sc* (source) or *dest* (destination) is missing. Replied error code: INUP /*Input,Non-null Unimplemented Parameter */ instead of SNVS /*Status,Not in Valid State,parameter required */
2. Invalid switch command. Replied error code: IDNV /*Input,Data Not Valid */instead of IDNV /*Input,Data Not Valid,invalid sc*/

Workaround: The operator should check, if this could be the reason for the command rejection.



ONNS

**Amendment 3.0.1 -
nb18835****NE replies with a database change notification, although no
parameter has been changed**

If the operator changes the class of a cross-connection type to TRADITIONAL, where the class has this value already, a data base change notification (REPT DBCHG) is sent by the NE besides the expected normal completion message, although no database change occurred in the NE.

Workaround: Ignore this “REPT DBCHG ” message.



Protection (BLSR/S-SPRing, DRI/DNI,APS/MSP, UPSR/SNCP)

Amendment 3.0.1 - nb17570

Wrong error responses for Operate Protection Switch

The error response to the OPR-PROTNSW command for a 2-/4-fibre BLSR/MS-SPRing protection group does not follow the specification:

1. If the operator enters an incomplete switch command the system responds: Input,Non-null Unimplemented Parameter. The expected response would be: Input,Data Not Valid,incomplete switch command
2. If the operator enters an inconsistent *aid* and *protype* the system responds Input,Invalid Access identifier,incorrect syntax. The expected response would be: Input,Data Not Valid,inconsistent aid and protype
3. If the operator enters an inconsistent *aid* and *rid* (2-/4-fibre MS-SPRing/BLSR): The system responds: Input,Invalid Access identifier,incorrect syntax. The expected response would be: Input,Data Not Valid,inconsistent aid and rid

Workaround: The operator should check, which constraint is not met if the command is rejected.

Amendment 3.0.1 - nb 18762

MSP 1+1 accept incomplete Operate Protection Switch commands

For MSP 1+1 incomplete Operate Protection Switch commands are accepted:

- Operate Protection Switch command with parameter source *sc=lockout* and without parameter destination *dest* is accepted. This is not a real problem, because the *dest* is redundant information.
- Operate Protection Switch command with parameter destination *dest=wkq* should not be accepted without the source information. The resultant state Manual Switch is not worse because it does not prevent further automatic switching.

Amendment 3.0.1 - nb18025/nb18076

Wrong error responses for MSP 1+1 optimized protection switch

The error response for a protection switch of an MSP 1+1 optimized protection group (TL1 command OPR-PROTNSW) does not follow the specification.

1. In case of an manual protection switch the system responses: SNVS -Status,Not in Valid State,switch command not allowed for actual protection state. The expected response would be: SNVS -Status,Not in Valid State,Manual Switch for Protection Type 1+1_Optimized not allowed.
2. In the case the switch command is incomplete the system responses: SNVS -Status,Not in Valid State. The expected response in this case would be: IDNV -Input,Data Not Valid,incomplete switch command

Workaround: The operator should check, which constraint is not met if the command is rejected.

**Amendment 3.0.1 -
nb18024**

Wrong error response for changing operation mode from non-revertive to revertive for an MSP 1+1 optimized

The error response for changing operation mode from non-revertive to revertive for an MSP 1+1 optimized (TL1 command ED-PROTN-GRP) does not follow the specification. If the operator tries to change operation mode from non-revertive to revertive for an MSP 1+1 optimized, a wrong error code is reported. The expected response would be: IDNC -Input,Data Not Consistent,MSP 1+1_Optimized is always non-revertiv. The system responses: INUP -Input,Non-null Unimplemented Parameter

Workaround: The operator should check, if this could be the reason for the command rejection.

**Amendment 3.0.1 -
nb18164-2**

Wrong error responses for convert cross-connection

The error response to the TL1 command CNVT- CCT does not follow the specification:

1. If the operator specifies original cross-connection (xc) topology as One Way occt=1WAY and new cross-connection topology as One Way cct=1WAY for an existing 1WAY cross-connection the system responds: SNVS -Status, Not in Valid State. The expected response would be: IDNC -Input,Data,no allowed topology conversion
2. If the operator specifies an *in_aid* and an *out_aid*, which do not form a cross-connection the system responds: IENE -Input, Entity Not Exists. The expected response would be: IENE -Input, Entity Not Exists, Specified crossconnection does not exist
3. If the operator applies CNVT-CCT- VC4 on an existing vc3 cross-connection the system responds IENE -Input, Entity Not Exists. The expected response would be: IDNC -Input,Data,Not Consistent, Rate is inconsistent with existing crossconnection
4. If the operator specifies original cross-connection (xc) topology as One Way Protection occt=1WAYPPROT and new cross-connection topology as One Way cct=1WAY for an existing 1WAY cross-connection the system responds: IENE -Input, Entity Not Exists. The expected response would be: IDNC -Input,Data,no allowed topology conversion
5. If the operator forgets to specify new cross-connection topology *cct* the system responds: SROF -Status,Requested Operation Failed. The expected response would be: IPMS -Input, Parameter MiSsing, <parameter name> missing
6. If the operator specifies parameter *inaid* equal parameter *newinaid* the system responds: IENE -Input,Entity Not Exists. The expected response would be: IDNV -Input,Data Not Valid,Both input tributaries are identical
7. If the operator specifies with *inaid* an SDH tributary and with *newinaid* an SONET tributary the system responds: IENE -Input,Entity Not Exists. The expected response would be: SNVS -Status,Not in Valid State,Different interface standards for input tributaries

8. If the operator specifies with *inaid* a vc3 tributary and with *newinaid* a vc4 tributary the system responds: IENE
-Input,Entity Not Exists. The expected response would be:
IDNC -Input,Data,Not Consistent,Specified new
Tributary does not support the indicated rate
9. If the operator specifies a tributary, which does not exist, because of the used substructure the system responds: IENE
-Input,Entity Not Exists. The expected response would be:
IENE -Input,Entity Not Exists,Specified
tributary/tributaries do not exist
10. If the operator tries to convert an unprotected connection to a protected connection and specifies the not allowed parameter *in_aid2*, then the system responds: IENE -Input,Entity Not Exists. The expected response would be: SNVS -Status,Not in Valid State,Parameter(s) present which are not allowed
11. If the operator tries to convert a protected connection to an unprotected connection and specifies not allowed parameters, then the system responds: IENE -Input,Entity Not Exists. The expected response would be: SNVS -Status,Not in Valid State,Parameter(s) present which are not allowed
12. If the operator forgets to specify the wait-to-restore time *wtr* the system responds: INUP -Input,Non-null Unimplemented Parameter. The expected response would be: IPMS
-Input,Parameter MiSsing, <parameter name> is missing

Workaround: The operator should check, which constraint is not met if the command is rejected.

**Amendment 3.0.1 -
nb17501**

ENT-CRS behavior, if mandatory parameters are missing

The TL1 command ENT-CRS does not follow the specification:

1. If the user tries to setup a path-protected cross-connection and does not specify one of the mandatory parameters *htmr*, *rme* or *wtr* a misleading error code is returned: INUP -Input,Non Implemented Parameter is provided. The expected response would be: IPMS -Input,Parameter MiSsing, <parameter name> is missing
2. If the mandatory parameter *snctyp* is not specified then the command succeeds with the default of *snctyp* =NA.

Workaround: The operator should check, which constraint is not met if the command is rejected.

Amendment 3.0.1 - nb20624 Unallowed changes of cross-connection parameters while remote test access sessions are provisioned are not properly rejected

If the operator attempts to change the interface standard or tributary mode while a test access session for this cross connection is active then a slightly wrong error message will be returned. The system responds:

```
SNVS /* Status, Not in Valid State, cross-connections are  
still existing */
```

The expected response would be:

```
SNVS - Status, Not in Valid State, a test access session  
exists
```

Amendment 3.0.1 - nb20623 Wrong error code for ENT-CRS

If the operator attempts to establish cross-connection in an improper system state such as:

- access to extra traffic (BLSR/MS-SPRing) in non-TOPEX scenarios
- access to VCG tributaries for path protected cross connections

then a slightly wrong error code will be returned.

Amendment 3.0.1 - nb18714 RTRV-PROTN-GRP should be denied when EQP GRP does not exist

The response after RTRV-PROTN-GRP for any non-existing EQP GRP is COMPLD but should have been denied with error code: IENE -Input,Entity Not Exist.

Amendment 2.0 - nb17572 Wrong error code for RLS-PROTNSW (2F/4F) command

The error reply for the RLS-PROTNSW command for a 2-/4-fibre BLSR/ MS-SPRing protection group is wrong in the following error scenarios:

1. inconsistent *aid* and *protype* replied error code: Input,Invalid ACcess identifier,incorrect syntaxinstead of Input,Data Not Valid,inconsistent aid and protype
2. inconsistent *aid* and *rid* (2-/4-fibre MS-SPRing/BLSR) replied error code: Input,Invalid ACcess identifier,incorrect syntax instead of Input,Data Not Valid,inconsistent aid and rid

Workaround: The operator should check, which constraint is not met if the command is rejected.

Amendment 2.0 - nb09151 RTRV-CRS with ppgname as input parameter does not work

The TL1 command RTRV-CRS does allow to use *ppgname* (path protection group name) as input parameter to retrieve a set of path protected cross-connections. The replied set should contain all path-protected cross-connections where the associated path protection group has the specified *ppgname* value of the RTRV request. The NE will reply all cross-connections provisioned within the NE.

Workaround: None, i.e. do not use *ppgname* in RTRV-CRS request. Just use *in_aid* parameter in RTRV-CRS requests.

Amendment 2.0 - nb11243 Wrong error code for RTRV-PROTN-GRP command

The error reply for the RTRV-PROTN-GRP command for protection group is wrong if the specified *protype* is inconsistent to specified *aid*. Replied error code: IDNV /*Input,Data Not Valid */. Expected error code: IDNV /*Input,Data Not Valid,inconsistent aid and protype */

Workaround: The operator should check, if this could be the reason for the command rejection.

Amendment 1.0 - nb07561 Incomplete continuity information in retrieved ring map

With the retrieval of the ring map also link status information should have been provided. This information should have been determined by the ring protection switch function inferred from the K-byte messages, whereas a span protection switch state would not be reflected in the map.

The following values are currently defined:

- LINK_UP for a working link
- LINK_DOWN for a failed link
- LINK_OPEN for a non-existent link as in an open ring
- LINK_UNKNOWN as initial default state prior to establishing LinkID, also used for all links when the map is retrieved from NVM
- LINK_ISOLATED for a link in an isolated part of a segmented ring.

Only LINK_ISOLATED is currently supported, in all other cases LINK_UP is returned. However, the values currently not supported can also be derived from other K-byte information and defect information retrievable from the system or do not have relevance at the moment (LINK_OPEN).

Workaround: Evaluate received K-byte information together with ring map if a local view on the ring state is necessary.

Amendment 1.0 - nb07738

Value BROWSE does not work for parameter replytype in RTRV-LOG-PROTNSW

The value BROWSE for the parameter *replytyp* in RTRV-LOG-PROTNSW request does not work; i.e. no protection switch events are returned although they are stored within that log. Thus the operator cannot use *startdate* and *starttime* as filter criteria for this log retrieval.

Workaround: The operator should not use the reply type parameter in the RTRV request; i.e. omit this optional parameter. Then he will get all protection switch events stored in the log properly.

□

Equipment protection

**Amendment 3.0.1 -
nb18823****1+1 EP155 protection: Wrong error responses for Operate
Protection Switch OPR-PROTNSW**

The error response to the TL1 command OPR-PROTNSW of an 1+1 EP155 protection does not follow the specification. If the user tries to perform a manual switch to a EP155, which is in equipment fail condition the system responds: SARB -Status, All Resources Busy, system limit exceeded. The expected response would be: SNVS -Status,Not in Valid State,switch command not allowed for actual protection state

Workaround: The operator should check, if this could be the reason for the command rejection.



Fault/Alarm management

**Amendment 3.0.1 -
nb19072****The TL1 command RTRV-LOG-ERROR is not available**

The TL1 command RTRV-LOG-ERROR is not supported for LambdaUnite NE 's.

**Amendment 3.0.1 -
nb20283****Changes of tributary output modes for test access sessions are not notified**

Changing test modes of a remote test access session does not generate change notification for *eomode* or *fomode*, but the value really changes. However the retrieval of this test access session delivers the correct values.

**Amendment 3.0.1 -
nb19358****Slightly wrong error codes will be displayed for improper remote test access provisioning**

In case of improper remote test access provisioning (system conditions do not fit) the operator is informed by slightly wrong error codes. The following scenarios are affected:

- MONF, MONEF not allowed for unidirectional cross connections
- Test tributary already in use
- Pack with E-tributary not provisioned
- Cross-connection rate incompatible with test access rate
- Non-existing tributaries involved
- AID does not match to cross-connection rate
- XC pack not provisioned
- Test access not allowed for path protected cross-connections.

**Amendment 3.0.1 -
nb19367****Unallowed modifications of remote test access session are not rejected properly**

If an operator attempts to change an existing test access session by:

- using wrong tributary rate within the referring TL1 command, or
- trying to convert a single test access tributary session into a dual one

then the operator gets slightly wrong error responses.

- Amendment 3.0.1 - nb19369** **Deletion of a remote test access session with an incorrect tributary rate is improperly rejected**
- If the operator attempts to delete a remote test access session using a wrong tributary rate then a slightly wrong error message will be returned.
- Amendment 3.0.1 - nb19569** **Establishment of remote test access for bridged cross-connections is not rejected properly**
- If an operator attempts to create a remote test access session on a cross-connection which is bridged (broadcast) then the operator gets a wrong error message.
- Amendment 3.0.1 - nb20039** **Test access status retrieval is not rejected if selected test access tributary has no active test session**
- Invoking a test access status retrieval for a tributary or a set of tributaries (by using wild cards) returns an empty list instead of the specified rejection.
- Amendment 3.0.1 - nb20159** **Output mode of test access sessions also reported for E-tributaries if not applicable for the test access mode**
- If the operator creates a test access session on an unidirectional cross-connection then the parameter *eomode* (output mode for E-Tributaries) is also reported although this makes no sense.
- Workaround:** Ignore the *eomode* value for test access sessions on an unidirectional cross-connection.
- Amendment 3.0.1 - nb17315** **RTRV-ASAP-ASGNMT returns empty reply for a non existing ASAP**
- The RTRV-ASAP-ASGNMT command returns an empty reply, if the user requests assignments for a non existing ASAP profile. The expected response would be: IENE -Input,Entity Not Exist,profile does not exist.
- Amendment 2.1 - nb13138** **Wrong error code for editing the alarm severity assignment profile**
- The error reply for editing the alarm severity assignment profile (TL1 command ED-ASAP-PROF) is wrong if the specified probable cause

parameter is unknown for specified profile type replied error code:
INUP /*Input,Non-null Unimplemented Parameter */. Expected
error code: SDNC /*Status,Data Not Consistent,invalid ASAP
parameter */

Workaround: The operator should check, if this could be the reason
for the command rejection.

Amendment 1.0 - nb07694

**Inconsistently wrong error codes when assigning non-existent
ASAP**

When trying to assign a not existing ASAP to an entity the operator
gets the following messages for the entity:

system: SDNC /*Status,Data Not Consistent,invalid ASAP
parameter.*/

slot: SROF /*Status,Requested Operation Failed */

shelf: SROF /*Status,Requested Operation Failed */

CP: SROF /*Status,Requested Operation Failed */ or IDNV
/*Input,Data Not Valid */

Port: SDNC /*Status,Data Not Consistent,invalid ASAP
parameter.*/

Trib.: SDNC /*Status,Data Not Consistent,invalid ASAP
parameter.*/

While the correct answer should be for all entities: IDNV
{/*Input,Data Not Valid,ASAP profile does not exist */}

Workaround: The operator should check, if this could be the reason
for the command rejection.

Amendment 1.0 - nb07802

**Replytype DBSYNC not supported for TL1 command
RTRV-LOG-ALM**

If the TL1 command RTRV-LOG-ALM with *replytype*=DBSYNC is
executed for a date and time for which no entry is found in the log,
then the command is COMPLD with no responses, instead DENY'ed
with SNVS - no matching log entry. This version of the command
was intended to be used with managers for a faster database
resynchronization but is currently not used by CIT/EMS/ Telcordia.

Amendment 1.0 - hz01774

**Retrieve-ASAP-Profilename (RTRV-ASAP-PROF) succeeds for
invalid profile names**

Instead of returning an error message the RTRV-ASAP-PROF command returns success with an empty list when the operator tries to retrieve non-existing profiles.



Remote test access

Amendment 4.0 - nb21704**Establishment of remote test access for bridged cross connections are not properly rejected**

If an operator attempts to create a remote test access session on a cross-connection which is bridged (broadcast) then the operator gets a wrong error message:

```
/* Status, Not in Valid State, Too many crossconnection  
originating from same tributary */
```

The correct error message should be:

```
/* SNVS - Status, Not in Valid State, Test Access not  
allowed on bridged cross connections */
```

Amendment 4.0 - nb22425**RTRV-TACC delivers duplicated entry**

The retrieval of remote test access session information may contain duplicate but consistent responses if multiple sessions are queried at once.

Workaround: The operator should ignore duplicate entries.

Amendment 4.0 - nb20634**Changes of tributary output modes of test access sessions are not notified**

Changing test modes of remote test access session does not generate change notification for *eomode* or *fomode* if the value really changes. However the retrieval of this test access session is correct.

Amendment 4.0 - nb23083**An unallowed modification of a remote test access session is not rejected properly**

If an operator attempts to change an existing test access session by using wrong tributary rate within the referring TL1 command, then the operator gets slightly wrong error responses. This is only visible at cut-through as remote test access is not supported by CIT/EMS/OMS.

Amendment 3.1 - nb23084**Wrong error code for CONN-TACC**

In case of improper remote test access provisioning (system conditions do not fit) the operator is informed by slightly wrong error codes. Affected are following scenarios:

- **MONF, MONEF not allowed for unidirectional cross-connections**
/* Input, Data, Not Consistent */
instead of
/* Status, Not in Valid State, invalid test access mode */
- **test tributary already in use**
/* Status, Not in Valid State, Too many crossconnection originating from same tributary */
instead of
/* Input, Entity Already Exists, test access connection exists */
- **pack with E-tributary not provisioned**
/* Input, Entity Not Exists, Specified tributary/tributaries do not exist
instead of
/* Status, Not in Valid State, circuit packs not provisioned */
- **cross-connection rate incompatible with test access rate.**
* Input Data Not Consistent, Specified Tributary does not support the indicated rate */
instead of
/* Input, Parameter Not Consistent, Rate inconsistent with crossconnection rate */



DCN/DCC management

Amendment 3.0.1 - nb21562

No specific error message when 64 DCC channel limit reached

When the maximum number of available DCC channels is reached, the supplied error message does not distinguish the possible reasons and always replies with: SSRE, System Resources Exceeded, allowed limit of DCC channels exceeded

In case the maximum number is exceeded due to SCN assignments, expected message is: SSRE, System Resources Exceeded, allowed limit of SCN DCC channels exceeded

In case the maximum number is exceeded due to combined MCN+SCN assignments, expected message is: SSRE, System Resources Exceeded, overall limit of DCC channels exceeded

Amendment 3.0.1 - nb16742

Wrong error code for ENT-FECOM-LAN command

The error reply for the ENT-FECOM-LAN (Enter Far-End Communications for LAN) TL1 command can be misleading, if the operator specifies a wrong parameter value. In that cases the expected error code is: IDNV /*Input,Data Not Valid,invalid <parameter name>/*. The actual error code is: IDNV /*Input,Non-null Unimplemented Parameter */

Workaround: The operator should check, which parameter value is invalid, if the command is rejected.

Amendment 3.0.1 - nb18048

TL1 command “Retrieve Transparent DCC Cross Connection ” displayed duplicate lines

The response to the TL1 command RTRV-CRS-FECOM does not follow the specification. The NE responses partially with duplicate lines, if the operator retrieves transparent DCC connections by specifying an AID range. The NE lists every port with transparent DCC connections in this AID range. Thus, if both connected DCC ports are in the range, the connection is listed two times.

Workaround: The operator should ignore the duplicate lines.

Amendment 2.1 - nb12234

Wrong error code for RTRV-MAP-NETWORK with osinode not created

If the operator tries to execute RTRV-MAP-NETWORK while the specified *osinode* is not in created state, the system responds with the unspecific error code: SROF -Status,Requested Operation Failed. The expected error code is: SNVS -Status,Not in Valid State,osinode not in created state

Workaround: The operator should check, if this could be the reason for the command rejection.

Amendment 4.0 - nb22400

Disabling *osi_lanstat* for SCN completes although change is ignored

When trying to disable the *osi_lanstat* for a LAN assigned to SCN node the command completes successfully. But internally the change of *osi_lanstat* was just ignored and the *osi_lanstat* is still enabled.



Security management

Amendment 1.0 - nb08615 Incorrect error messages for CANC-USER-SECU

The error response messages for CANC-USER-SECU are incorrect in the case of:

- User Id not in the NE database The following response is returned: IDNV /*Input,Data Not Valid*/. The correct error response would be: IDNV /*Input,Data Not Valid,uid not in NE data base*/
- User not logged in the following response is returned: IDNV /*Input,Data Not Valid*/. The correct error response would be: SRQN /*Status,invalid request,uid not logged in.*/

Workaround: The operator should check, which constraint is not met if the command is rejected.

Amendment 1.0 - nb06960 Wrong error codes for security related commands (ED/ENT-USER- SECU)

1. When an operator attempts to login with a disabled user ID (e.g. because login has expired) the error code PICC -Privilege,Illegal Command Code is shown instead of IDNV -Input,Data Not Valid.
2. When it is tried to change the user privilege code (UPC) to an invalid value (e.g. create an user by a non-superuser) the error code IDNV -Input,Data Not Valid is shown instead of IDNV -Input,Data Not Valid,Invalid UPC.
3. When it is tried to change security parameters for a non-existing UID the error code IDNV -Input,Data Not Valid is shown instead of IDNV -Input,Data Not Valid,Invalid UID.
4. When it is tried to create a new user with an already existing UID the error code SDNC -Status, Data Not Consistent, invalid instance of entity is shown instead of IDNV -Input,Data Not Valid,duplicate UID.
5. When it is tried to create new user with incompatible *uidclass* and screen parameters the error code IDNV -Input,Data Not Valid is shown instead of IDNV -Input,Data Not Valid,incompatible screen,uidclass parameter.

Workaround: The operator should check, which constraint is not met if the command is rejected.



Gigabit Ethernet

Amendment 3.0.1 - nb18202

Dynamic parameters are not reported, if card missing

Against the specification the commands RTRV-EPORT and RTRV-VCG do not report the so called dynamic parameters, if the circuit pack is not available in the system.

The following dynamic parameters of an ethernet port are affected:
angst, fcmdo, macaddr, rflst, stmd, stpop, stpid, stprole, vss, vvidlsd.

The following dynamic parameters of a VGG port are affected: *mfiv, macaddr, stmd, stpop, stpid, stprole, vss, vvidlsd.*

Workaround: When the circuit pack is plugged in, then the dynamic parameters are reported.



Performance monitoring

Amendment 4.0 - nb22262 System wide retrieval of Entities assigned to a Threshold Crossing Alert (TCA) Profile not supported

If a customer wants to retrieve the TCA profile assignment on system level, the RTRV-rr command for each entity has to be used. No query on profile type and name level is supported.

Workaround: Use RTRV-rr command and evaluate individual TCA profile pointer settings.





Index

- A** ACT-USER, [4-4](#)
ALW-MSG, [5-33](#)
AUD (ONNS), [15-146](#)
-
- B** BackplaneAID, [2-24](#)
BayAID, [2-21](#)
-
- C** CANC-USER, [4-11](#)
CANC-USER-SECU, [4-13](#)
CHG-ACCMD, [7-254](#)
CiCtlAID, [2-26](#)
CNVT-CCT, [7-72](#)
Compound AID, [2-16](#)
CONN-TACC, [7-246](#)
COPY-RFILE, [11-33](#)
CpAID, [2-32](#)
CPY-MEM, [11-20](#)
-
- D** DISC-TACC, [7-258](#)
DLT-CRS, [7-56](#)
DLT-CRS-FECOM, [12-40](#),
[12-43](#)
DLT-EQPT (slot), [5-117](#)
DLT-EQPT (Socket), [5-156](#)
DLT-IP-MAP, [12-117](#)
DLT-PATH (ONNS), [15-55](#)
DLT-PROTN-GRP, [8-97](#)
DLT-TCA-PROF, [9-119](#)
DLT-ULSDCC-L3, [12-81](#)
DLT-ULSDCC-L4, [12-98](#)
DLT-USER-SECU, [4-55](#)
-
- E** ED-ASAP-PROF, [6-20](#)
ED-CRS, [7-46](#)
ED-DAT, [5-70](#)
ED-EPORT, [7-168](#)
ED-EQPT (CP), [5-177](#)
ED-EQPT (shelf), [5-89](#)
ED-EQPT (slot), [5-109](#)
ED-EQPT (Socket), [5-147](#)
ED-EQPT (system), [5-49](#)
ED-FETID, [8-171](#)
ED-MAP-RING, [8-165](#)
ED-NE, [12-8](#)
ED-NE-SECU, [4-20](#)
ED-NNCNFG (ONNS),
[15-72](#)
ED-NNCRS, [7-53](#)
ED-OC12, [5-461](#)
ED-OC192, [5-514](#)
ED-OC3, [5-436](#)
ED-OC48, [5-486](#)
ED-OC768, [5-541](#)
ED-PATH (ONNS), [15-18](#)
ED-PID, [4-50](#)
ED-PROTN-GRP, [8-80](#)
ED-STATE-EQPT (system),
[5-42](#)
ED-STM1, [5-309](#)
ED-STM16, [5-359](#)
ED-STM1E, [5-285](#)
ED-STM256, [5-417](#)
ED-STM4, [5-334](#)
ED-STM64, [5-388](#)
ED-STS1, [5-585](#)
ED-SYNCDATA (ONNS),
[15-133](#)
ED-TCA-PROF, [9-81](#)
ED-ULSDCC-L3, [12-74](#)
ED-USER, [4-47](#)
ED-USER-SECU, [4-40](#)
ED-VC3, [5-579](#)
ED-VCG, [7-193](#)
ED-VRTSW, [7-145](#)
ENT-CRS, [7-25](#)
ENT-CRS-FECOM, [12-36](#)
-

ENT-EQPT (slot), [5-100](#)

ENT-FECOM, [12-18](#)

ENT-FECOM-LAN, [12-50](#)

ENT-IP-MAP, [12-113](#)

ENT-PATH (ONNS), [15-35](#)

ENT-PROTN-GRP, [8-56](#)

ENT-ROLL, [7-65](#)

ENT-TCA-PROF, [9-60](#)

ENT-ULSDCC-L3, [12-67](#)

ENT-ULSDCC-L4, [12-91](#)

ENT-USER-SECU, [4-33](#)

EPortAID, [2-36](#)

External_Timing_input_port_AID, [2-10](#)

External_Timing_output_port_AID, [2-10](#)

External_timing_ref_AID, [2-10](#)

F FanAID, [2-22](#)

FourFibre_ProtGrpAID, [2-41](#)

G GenTribAID, [2-40](#)

I

INH-MSG, [5-31](#)

INIT-EQPT (slot), [5-129](#)

INIT-SYS, [5-78](#)

L LanPortAID, [2-28](#)

Line_timing_ref_AID, [2-10](#)

N NByOne_ProtGrpAID, [2-41](#)

O OnePlusOne_ProtGrpAID, [2-41](#)

OPR-DEFRAG (ONNS), [15-137](#)

OPR-EXT-CONT, [6-90](#)

OPR-LPBK, [7-93](#), [7-111](#)

OPR-PROTNSW, [8-109](#)

OPR-SYNCNSW, [10-31](#)

OSI_node_AID, [2-11](#)

P PowerAID, [2-23](#)

ProtGrpAID, [2-41](#)

R REPT ALM, [6-44](#)

REPT DBCHG, [5-67](#)

REPT EVT, [6-47](#)

REPT SW, [8-133](#)

REPT-ALM-ENV, [6-72](#)

REPT-EVT-FXFR, [11-39](#)

REPT-NNCHG (ONNS), [15-104](#)

REPT-NNEVT (ONNS), [15-129](#)

REPT-PTHCHG (ONNS), [15-107](#)

REPT-PTHEVT (ONNS), [15-121](#)

RLS-EXT-CONT, [6-93](#)

RLS-LPBK, [7-101](#), [7-118](#)

RLS-PROTNSW, [8-125](#)

RLS-SYNCNSW, [10-37](#)

RTRV-ACTL-CONT, [6-80](#)

RTRV-ACTLCP, [5-35](#)

RTRV-ALL, [5-282](#), [5-576](#)

RTRV-ALM, [6-30](#)

RTRV-ALM-ENV, [6-60](#)

RTRV-AO, [5-56](#)

RTRV-ASAP-ASGNMT, [6-14](#)

RTRV-ASAP-PROF, [6-9](#)

RTRV-ATTR-CONT, [6-76](#)

RTRV-ATTR-ENV, [6-64](#)

RTRV-ATTR-MSG, [5-28](#)

RTRV-AUDLOG (ONNS), [15-151](#)

RTRV-COND, [6-37](#)

RTRV-CRS, [7-6](#)

RTRV-CRS-FECOM, [12-32](#)

RTRV-EPM, [9-15](#)

RTRV-EPORT, [7-153](#)

RTRV-EQPT (bay), [5-82](#)

RTRV-EQPT (CP), [5-169](#)

RTRV-EQPT (shelf), [5-86](#)

RTRV-EQPT (slot), [5-94](#)

RTRV-EQPT (Socket), [5-135](#)

RTRV-EQPT (system), [5-45](#)

RTRV-EXT-CONT, [6-83](#)

RTRV-FECOM, [12-13](#)

RTRV-FECOM-LAN, [12-45](#)

RTRV-HDR, [5-8](#)

RTRV-IP-MAP, [12-110](#)

RTRV-LOG-ALM, [6-54](#)

RTRV-LOG-NNEVT, [5-64](#)

RTRV-LOG-NTFCN, [5-60](#)

RTRV-LOG-PROTNSW, [8-150](#)

[RTRV-LPBK, 7-89, 7-106](#)
[RTRV-MAP-NEIGHBOR, 12-121](#)
[RTRV-MAP-NETWORK, 12-126](#)
[RTRV-MAP-RING, 8-158](#)
[RTRV-NE, 12-5](#)
[RTRV-NE-SECU, 4-17](#)
[RTRV-NNCNFG \(ONNS\), 15-67](#)
[RTRV-NNDR \(ONNS\), 15-88](#)
[RTRV-NTDR \(ONNS\), 15-75](#)
[RTRV-OC12, 5-250](#)
[RTRV-OC192, 5-267](#)
[RTRV-OC3, 5-243](#)
[RTRV-OC48, 5-257](#)
[RTRV-OC768, 5-275](#)
[RTRV-OW, 7-124](#)
[RTRV-PATH \(ONNS\), 15-3](#)
[RTRV-PM, 9-7](#)
[RTRV-PREDEFRAG \(ONNS\), 15-141](#)
[RTRV-PRMTR-DATA, 11-3](#)
[RTRV-PRMTR-SFTWR, 11-13](#)
[RTRV-PROTN-GRP, 8-13](#)
[RTRV-STATE-EQPT \(CP\), 5-184](#)
[RTRV-STATE-EQPT \(slot\), 5-125](#)
[RTRV-STATE-EQPT \(Socket\), 5-162](#)
[RTRV-STATE-EQPT \(system\), 5-38](#)

[RTRV-STM1, 5-199](#)
[RTRV-STM16, 5-214](#)
[RTRV-STM1E, 5-192](#)
[RTRV-STM256, 5-237](#)
[RTRV-STM4, 5-206](#)
[RTRV-STM64, 5-228](#)
[RTRV-STS1, 5-571](#)
[RTRV-SYNCN, 10-3](#)
[RTRV-TACC, 7-241](#)
[RTRV-TCA-PROF, 9-25](#)
[RTRV-ULS, 12-102](#)
[RTRV-ULSDCC-L3, 12-61](#)
[RTRV-ULSDCC-L4, 12-87](#)
[RTRV-USER, 4-31](#)
[RTRV-USER-SECU, 4-24](#)
[RTRV-VC3, 5-562](#)
[RTRV-VCG, 7-180](#)
[RTRV-VCGTRIB, 7-207](#)
[RTRV-VRTSW, 7-136](#)

S [SCN-node_AID, 2-12](#)
[Sequence constraint, 1-16](#)
[SET-ATTR-CONT, 6-86](#)
[SET-ATTR-ENV, 6-68](#)
[Set-MAP-RING, 8-168](#)
[SET-OW, 7-128](#)
[SET-SID, 5-74](#)
[SET-SYNCN, 10-19](#)
[ShelfAID, 2-21](#)
[Simple_BackplaneAID, 2-24](#)
[Simple_CiCtlAID, 2-26](#)
[Simple_CpAID, 2-32](#)

[Simple_CtlProtGroupAID, 2-44, 2-45](#)
[Simple_CTLSlotAID, 2-30](#)
[Simple_EPortAID, 2-36](#)
[Simple_FanAID, 2-22](#)
[Simple_GenTribAID, 2-40](#)
[Simple_GenTribPortAID, 2-40](#)
[Simple_LanPortAID, 2-28](#)
[Simple_PowerAID, 2-23](#)
[Simple_ProtGrpAID, 2-41](#)
[Simple_ShelfAID, 2-21](#)
[Simple_SlotAIDOP40, 2-30](#)
[Simple_SPortAID, 2-34](#)
[Simple_STS1NumAID, 2-38](#)
[Simple_TimingInterfaceAID, 2-29](#)
[Simple_UnivSlotAID, 2-30](#)
[Simple_UserBytePortAID, 2-27](#)
[Simple_UserPanelAID, 2-25](#)
[Simple_VCGAID, 2-37](#)
[Simple_VCGNumAID, 2-39](#)
[Simple_XCSlotAID, 2-30](#)
[SlotAID, 2-30, 2-30](#)
[SlotAIDOP40, 2-30](#)
[SPortAID, 2-34](#)
[State, 1-11](#)
[STS1NumAID, 2-38](#)

T [TimingInterfaceAID, 2-29](#)
[Timing_Output_AID, 2-10](#)

Transition, [1-11](#)

TransProtGrpID, [2-41](#)

TwoFibre_ProtGrpAID,
[2-41](#)

.....
U UnivSlotAID, [2-30](#)

UserBytePortAID, [2-27](#)

UserPanelAID, [2-25](#)
.....

V VCGAID, [2-37](#)

VCGNumAID, [2-39](#)
.....

X XCSlotAID, [2-30](#)