

10-BUTTON, PUSHBUTTON DIAL, DESK TELEPHONES WITH BUSY LAMP FIELD GENERAL DESCRIPTION

	CONTENTS	PAGE
1. GENERAL DESCRIPTION		1
MODEL 2835** () 42		2
MODEL 2835** () 46		3
MODEL 2835** () 76		3
2. INSTALLATION		3
3. MAINTENANCE		3
4. SPEAKERPHONE		3
5. BUTTON CONVERSIONS		3
6. BUZZER INSTALLATION		3
7. DESIGNATION TABS		5
8. GROUNDING PUSHBUTTON		5
9. DISABLING HOOKSWITCH RESTORATION		5
10. CONNECTING 174B CALL ANNOUNCER		7
11. BUSY LAMP FIELD		7

1. GENERAL DESCRIPTION

1.01 This document covers the 10-button, pushbutton dial, desk telephone with the busy lamp field. (See Figure 1.) A general description plus information peculiar to 10-button, pushbutton dial, desk telephones with the busy lamp field is included.

1.02 Whenever this section is reissued, reason for reissue will be listed in this paragraph.

1.03 For additional information, refer to Section 50-835-104, Replacement Parts, and to Section 50-835-105, Circuit Labels. For information on



AW 82-370

Figure 1: 10-Button, Pushbutton Dial, Desk Telephone

installation, maintenance, and components or equipment, consult related documents of the ITT Telephone Apparatus Practices Manual.

1.04 The Model 2835 desk telephones are 10-button, pushbutton dial, antisidetone type units that operate efficiently over a wide range of loop resistances and line impedances. These telephones are designed for use with key telephone systems, such as the ITT 1A2 System, where several telephones have access to the same lines, CO trunks, or intercom lines. All models include a busy lamp field with lamps for 24 stations. Each telephone is equipped with a 100-conductor mounting cord terminated in two 50-pin (25-pair) Amphenol-type connectors. One connector is dedicated to the busy lamp field.

1.05 The Model 2835 desk telephones are identified by a code number stamped in ink on the bottom of the base plate. Refer to ordering information in Table A for an explanation of each code number.

TABLE A
ORDERING INFORMATION – TELEPHONES

CODE NUMBERS									
TELEPHONE CODE NUMBERS ARE FORMED IN SIX STEPS AS FOLLOWS:									
(1) Type of Instrument (See Part 1)	2835	15	O	BA	42	M			
(2) Color (See Part 2)									
(3) Version (See Part 3)									
(4) Ringer (See Part 4)									
(5) Special Feature (See Part 5)									
(6) Dial (See Part 6)									
PART 1 TYPE OF INSTRUMENT									
CODE	DESCRIPTION	COLOR OFFERED	VERSION OFFERED	RINGER OFFERED	FEATURE OFFERED	DIAL OFFERED			
2835	10-Button, Pushbutton Dial, Desk Telephone w/Busy Lamp Field	00, 05, 13, 15, 44, and 45 (Available On All Models)	O	BA, LR	42, 46, 76	M, R			
REFER TO INDIVIDUAL UNIT DESCRIPTION FOR COMPLETE DESCRIPTION OF FEATURE COMBINATIONS									
PART 2 COLORS		PART 3 VERSIONS		PART 4 RINGERS		PART 5 SPECIAL FEATURES		PART 6 DIALS	
CODE	COLORS	CODE	VERSIONS	CODE	RINGERS	CODE	SPECIAL FEATURES	CODE	DIALS
00	Black	O	Conventional	LR	Less Ringer	42	Equipped To Operate With External Speakerphone	M	Metropolitan (Letters & Numerals) Regular (Numerals Only)
05	Moss Green			BA	Straight Line	46	42 Combined With Operator Recall Button	R	
13	Beige			76		42 Combined With Automatic Exclusion And Release Button			
15	White								
44	Light Ash								
45	Cocoa Brown								

AW 82-383

1.06 Nine pushbutton keys on the telephone are used for line, trunk, or intercom lines. The red key on the far left is used as a hold key and allows any selected line or trunk to be placed in a hold condition. All remaining keys may be used as line keys or may be wired as either intercom lines or signal keys.

1.07 A signal lamp beneath each of the nine line keys indicates status of the associated line. (See Table B.)

1.08 All 10-button desk telephones are equipped with a hookswitch restoration feature that restores any operated line key when the hookswitch is operated.

1.09 Variations in the Model 2835 series telephones are briefly described below. Circuit label drawings for these models are contained in Section 50-835-105.

MODEL 2835 () 42**

1.10 The Model 2835** () 42 is a standard 10-button, pushbutton dial, desk type, key telephone that includes a busy lamp field and is equipped to operate with an external speakerphone. A set of dial assembly contacts disconnects the handsfree speaker during dialing; also, hookswitch assembly contacts provide on/off control of the handsfree equipment.

TABLE B
LINE KEY SIGNALS

CONDITION	LAMP INDICATION
Idle	Lamp Extinguished
Busy	Lamp Lit
Hold	Lamp Winking
Call Incoming	Lamp Flashing

AW 81-96

MODEL 2835** () 46

1.11 The Model 2835** () 46 is the same as the Model 2835** () 42 with the addition of an operator recall button. This button, containing normally closed contacts, can be used to recall the operator if the hookswitch restoration feature is used.

MODEL 2835** () 76

1.12 The Model 2835** () 76 is the same as the Model 2835** () 42 with the addition of an automatic exclusion (privacy) circuit with a release button. This release button contains normally open contacts. Where this feature is used, all telephones in the key system must contain the exclusion circuit and a release button.

2. INSTALLATION

2.01 Since these telephones are equipped with a connector-terminated mounting cord, installation consists of inserting the connectors into the jacks at the station connecting block and pressing to engage. For specific wiring information, refer to the appropriate circuit label in Section 50-835-105. Cable connections for 10-button telephones with feature codes 42 and 46 are listed in Table C. Cable connections for 10-button telephones with feature code 76 that differ from those listed in Table C are listed in Table D. For general installation information and installation of repair parts, refer to the applicable section of the ITT Telephone Apparatus Practices Manual.

3. MAINTENANCE

3.01 For general maintenance information, refer to the maintenance section of the ITT Telephone Apparatus Practices Manual. For a pictorial view and parts list, refer to Section 50-835-104.

4. SPEAKERPHONE

4.01 An external speakerphone may be installed on 10-button telephones. Most speakerphones provide the following additional features:

- (a) Handsfree telephone operation. (Handsfree talking and dialing.)
- (b) On-hook dialing.
- (c) Automatic switching from speakerphone to handset operation.
- (d) Transmitter muting for private conversation.
- (e) Visual indication when system is in use.
- (f) Cutoff of common ringer or other signaling devices when desired.

5. BUTTON CONVERSIONS

5.01 Any line key may be converted to signaling mode by removing the slotted head pin from the plunger shank. The slotted head pin is removed by turning clockwise. (On earlier models of the 10-button telephone the pin is removed by turning counterclockwise.)

6. BUZZER INSTALLATION

6.01 A buzzer may be installed as the signaling device of a telephone receiving an intercom call. The buzzer may be either installed on the dial mounting bracket or mounted externally. For telephones with feature codes 42 and 46, buzzer leads must be connected to the OR-YL and YL-OR leads inside the telephone. These leads are spare and can be found taped and stored inside the telephone. For telephones with feature code 76, a lamp ground lead is used instead of the OR-YL lead (provided the proper station cross-connections are made). Buzzers selected for this use must operate at 18 VAC, 60 Hz. (See Feature 2.)

TABLE C
CABLE CONNECTIONS FOR 10-BUTTON
TELEPHONES
(FEATURE CODES 42 AND 46)

LINES 1 THROUGH 5				LINES 6 THROUGH 9			
TELEPHONE TERMINAL	LEAD COLOR	LEAD DESIG.	CONNECTOR TERMINAL	TELEPHONE TERMINAL	LEAD COLOR	LEAD DESIG.	CONNECTOR TERMINAL
Line 1 (Blue Plug)	WH-BL	T	26	Line 6 (White Plug)	YL-BL	T	41
	BL-WH	R	1		BL-YL	R	16
	WH-OR	A	27		BN-BK	A or S	14
	WH-GN	LG	28		YL-GN	LG	43
	GN-WH	L	3		GN-YL	L	18
Line 2 (Orange Plug)	WH-BN	T	29	Line 7 (Red Plug)	YL-BN	T	44
	BN-WH	R	4		BN-YL	R	19
	WH-SL	A or S	30		BL-BK	A or S	11
	RD-BL	LG	31		VI-BL	LG	46
	BL-RD	L	6		BL-VI	L	21
Line 3 (Green Plug)	RD-OR	T	32	Line 8 (Black Plug)	VI-OR	T	47
	OR-RD	R	7		OR-VI	R	22
	RD-GN	A or S	33		GN-RD	A or S	8
	RD-BN	LG	34		VI-BN	LG, P3 or 1R	49
	BN-RD	L	9		BN-VI	L, P4 or 1T	24
Line 4 (Ivory Plug)	RD-SL	T	35	Line 9 (Yellow Plug)	VI-SL	T	50
	SL-RD	R	10		SL-VI	R	25
	BK-BL	A or S	36		SL-WH	A or S	5
	BK-OR	LG	37		VI-GN	LG or T1	48
	OR-BK	L	12		GN-VI	L or R1	23
Line 5 (Slate Plug)	BK-GN	T	38	10	OR-WH	A1	2
	GN-BK	R	13	G	YL-SL	B or B1	45
	BK-BN	A or S	39	A	SL-YL	R or R1	20
	BK-SL	LG	40	15	YL-OR	BL, AG or Spare	42
	SL-BK	L	15	6	OR-YL	SG, LK or Spare	17

NOTES:

1. All lamp ground leads are common.
2. Lead designations P3, P4, LK, T1, R1, AG and A1 are for speakerphone connections.
3. The YL-OR and OR-YL leads are spare leads and are taped and stored inside the telephone.
4. The designation S indicates that the lead provides an individual signal ground.

AW 82-113

TABLE D
SPECIAL CABLE CONNECTIONS FOR
10-BUTTON TELEPHONES (FEATURE CODE 76)

TELEPHONE TERMINAL	LEAD COLOR	LEAD DESIG.	CONNECTOR TERMINAL
Line 6 (White Plug)	WH-RD	A or S	14
Line 7 (Red Plug)	RD-WH	A or S	11
Line 8 (Black Plug)	BL-SL	A or S	8
Line 9 (Yellow Plug)	SL-BL	A or S	5
17	OR-YL	-24 VDC	17

NOTE:

1. This table lists those connections that differ from the connections for feature codes 42 and 46 telephones shown in Table C.

AW 82-491

6.02 A buzzer may also be used in place of the ringer. A 105 VAC buzzer must be provided. The ringer leads are removed and replaced by the buzzer leads.

7. DESIGNATION TABS

7.01 Designation tabs are included with each telephone. These tabs are installed by removing the cap from each key, placing the tab in the cap, and reinstalling the cap. The caps are removed by squeezing the sides and lifting. Note that locking surfaces are located on each of the caps and keys. These locking surfaces must properly align when reinstalling.

8. GROUNDING PUSHBUTTON

8.01 Modifications are made to line 9 of the telephone if a grounding pushbutton is required. A grounding pushbutton is required in some PABX applications for transferring calls, originating calls during a power failure, or other special functions. To convert line 9 to a grounding pushbutton, the following modifications should be made:

- (a) Modify button to non-locking operation by removing interlock pin from line 9 plunger.
- (b) Ground is provided on the WH-SL (A1) lead by the key system. (No cross-connect is necessary for this lead.)
- (c) Cross-connect from the SL-WH lead to the PABX connection for the desired function.


9. DISABLING HOOKSWITCH RESTORATION

9.01 The hookswitch restoration feature used in multibutton telephones allows a station user to preselect a line key and then remove the handset to initiate a call. When the handset is returned to the cradle or the hookswitch is operated (hookswitch flash), the line key will be restored. To disable the hookswitch restoration feature, the following steps are taken:

- (a) Remove telephone faceplate.
- (b) Remove plastic trip arm by pulling up at the point directly above its mounting shaft.
- (c) Remove torsion spring by sliding it off the mounting shaft.
- (d) Reinstall telephone faceplate.

9.02 To enable the hookswitch restoration feature, the following steps are taken: (See Figure 3.)

- (a) Remove telephone faceplate.
- (b) Install torsion spring by sliding it onto the mounting shaft and hooking one end between the mounting shaft and the hookswitch operating arm.
- (c) Install plastic trip arm by placing the notch in the trip arm on the end of the torsion spring (opposite the end hooked behind the operating arm) and pressing the trip arm onto the mounting shaft.
- (d) When the hookswitch is operated, the plastic trip arm should engage with the latch arm.
- (e) Reinstall telephone faceplate.

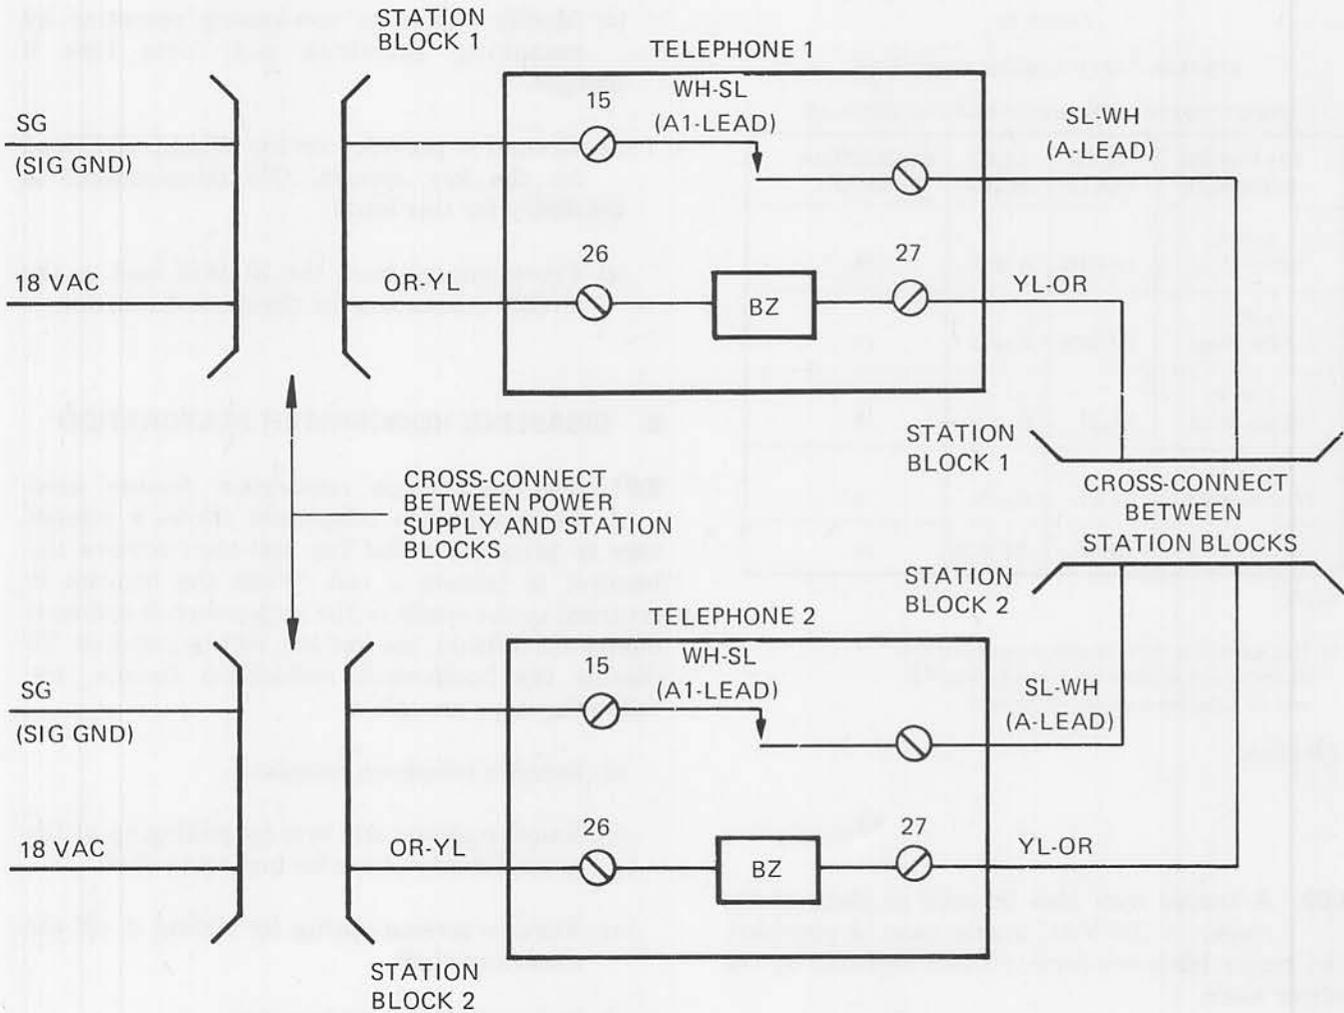

NOTES:

1. THE ARRANGEMENT SHOWN IS USING LINE 9 OF A TELEPHONE WITH FEATURE CODES 42 AND 46 AS AN EXAMPLE. IF ANOTHER LINE IS USED, SUBSTITUTE THE APPROPRIATE A1 AND A-LEADS FOR THAT LINE.
2. IN THE 10-BUTTON TELEPHONE W/BLF, GROUND IS CONNECTED TO TERMINAL 15 (WH-SL LEAD). NO CROSS-CONNECT IS NECESSARY FOR THIS LEAD.
3. FOR TELEPHONES WITH FEATURE CODE 76, A LAMP GROUND LEAD IS USED INSTEAD OF THE OR-YL LEAD (PROVIDED THE PROPER STATION CROSS-CONNECTIONS ARE MADE).

AW 82-494

Figure 2: Circuit Diagram For Signal Buzzer

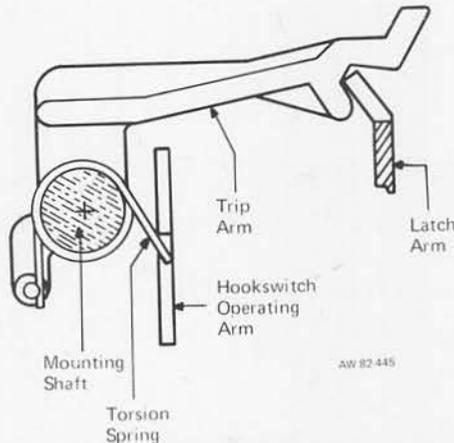


Figure 3: Installation of Trip Arm and Torsion Spring

9.03 Whenever the hookswitch restoration feature is disabled, it may become necessary to shorten or lengthen the spring connected to the operating arm to insure proper hookswitch operation. Proper operation requires the cradle to be fully depressed by the weight of the handset and return to the full up position when the handset is off-hook.

9.04 Earlier models of multibutton telephones may not provide the preselect function with the hookswitch restoration feature. These models include an adjustment screw on the latch arm rather than the plastic trip arm or torsion spring. To disable hookswitch restoration in these telephones, the following steps are taken:

- (a) Remove telephone faceplate and housing.
- (b) Turn the screw in the latch arm approximately five turns counterclockwise.
- (c) Reinstall telephone faceplate and housing.

10. CONNECTING 174B CALL ANNOUNCER

10.01 A 174B call announcer is used to provide tone and voice signaling to, and handsfree answerback from, an intercom station. The 174B call announcer connects to 10-button telephones as follows:

- (a) Connect BK (-24 VDC) lead of call announcer together with VI-BL lead of telephone to terminal 17 of terminal board.
- (b) Connect YL (GND) lead of call announcer together with YL-OR lead of telephone to terminal 27 of terminal board.

(c) Connect RD (CA RST) lead of call announcer together with VI-BN lead of telephone to terminal 21 of terminal board.

(d) Connect GN (CA RT) lead of call announcer together with VI-GN lead of telephone to terminal 13 of terminal board. (The VI-GN lead must be moved from RR on the network.)

11. BUSY LAMP FIELD

11.01 The busy lamp field used in connection with 10-button telephones provides lamps to indicate the status of up to 24 lines. This allows a visual inspection of the busy lamp field to determine those lines in use. All telephones to be monitored on the busy lamp field must be modified by installing two diodes within the telephone. (Refer to the appropriate circuit label in Section 50-835-105.)

11.02 Three numeral templates are provided with the busy lamp field. A fourth template is provided blank to allow any number desired to be indicated in the busy lamp field. (Refer to Table E for the busy lamp field leads associated with each of the numeral templates.)

11.03 Three components of the busy lamp field telephone are packed separately. The lamp separator, numeral template, and tinted plate must be assembled as follows: (See Figure 4.)

- (a) Remove the telephone faceplate.
- (b) Position the aluminum lamp separator as shown and install over the lamp strip.
- (c) Loosen the two screws of the lamp strip.
- (d) Select the appropriate numeral template and fold along dotted lines.
- (e) Install the numeral template over the lamps and lamp separator and insert the slotted ends under the two screws of the lamp strip.
- (f) Tighten the two screws of the lamp strip.
- (g) Install telephone faceplate. (Not Shown)
- (h) Insert the tinted plate in the display slot of the faceplate. (Not Shown)

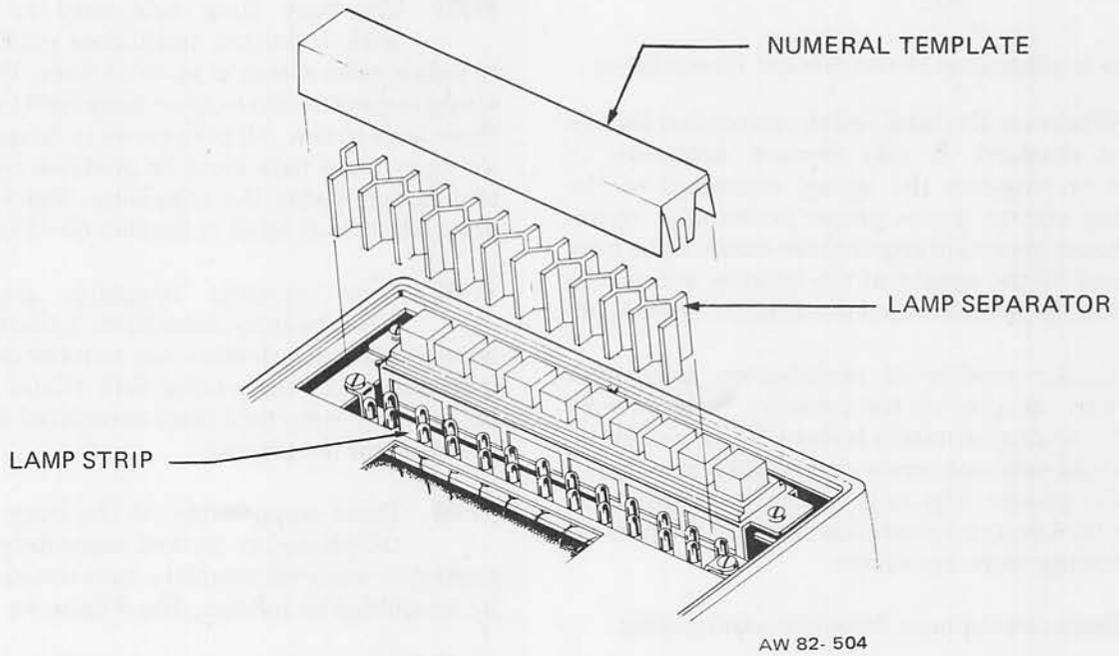


Figure 4: Installation of Lamp Separator and Numeral Template

TABLE E
BUSY LAMP FIELD LEADS

WIRE COLOR	AMPHENOL PIN. NO.	TEMPLATE #182161-101	TEMPLATE #182160-101	TEMPLATE #182159-101	WIRE COLOR	AMPHENOL PIN. NO.	TEMPLATE #182161-101	TEMPLATE #182160-101	TEMPLATE #182159-101
WH-BL BL-WH	26 1	18 VAC 12	18 VAC 32	18 VAC 44	BK-BN BN-BK	39 14	— 18	— 25	— 36
WH-OR OR-WH	27 2	— 24	— 34	— 47	BK-SL SL-BK	40 15	— 5	— 4	— 25
WH-GN GN-WH	28 3	— 11	— 31	— 43	YL-BL BL-YL	41 16	— 17	— 24	— 35
WH-BN BN-WH	29 4	— 23	— 33	— 46	YL-OR OR-YL	42 17	— 4	— 3	— 24
WH-SL SL-WH	30 5	— 10	— 9	— 42	YL-GN GN-YL	43 18	— 16	— 23	— 34
RD-BL BL-RD	31 6	— 22	— 29	— 45	YL-BN BN-YL	44 19	— 3	— 2	— 23
RD-OR OR-RD	32 7	— 9	— 8	— 29	YL-SL SL-YL	45 20	— 15	— 22	— 33
RD-GN GN-RD	33 8	— 21	— 28	— 39	VI-BL BL-VI	46 21	— 2	— 1	— 22
RD-BN BN-RD	34 9	— 8	— 7	— 28	VI-OR OR-VI	47 22	— 14	— 21	— 32
RD-SL SL-RD	35 10	— 20	— 27	— 38	VI-GN GN-VI	48 23	— 1	— 0	— 20
BK-BL BL-BK	36 11	— 7	— 6	— 27	VI-BN BN-VI	49 24	— 13	— 20	— 30
BK-OR OR-BK	37 12	— 19	— 26	— 37	VI-SL SL-VI	50 25	— —	— —	— —
BK-GN GN-BK	38 13	— 6	— 5	— 26					

AW 82-521