



Communication Server 2100

Commercial Systems Feature Description Manual

Document status: Standard
Document version: 17.02
Document date: 20 October 2006

Copyright © 2006, Nortel Networks
All Rights Reserved.

The information in this document is sourced in Canada, the United States of America, and the United Kingdom.

This is the Way, This is Nortel, Nortel, the Nortel logo, the globemark design, and the NORTEL NETWORKS corporate logo, are trademarks of Nortel Networks. All other trademarks are the property of their respective owners. All rights reserved.

Contents

New in this release	11
Features 11	
Multiple time zone (MTZ) enhancements 11	
Other changes 11	
Reference titles updated 11	
About this document	13
Introduction	15
Axxxx features	25
A00003653 - Line Option for IPCM Phones 25	
A00004007 - Group Paging for GIAC Enhancement 43	
A00004009 - ESDN CLASS Feature Enhancements 53	
A00004115 - CARID Enhancement for Spectrum Peripheral Module 60	
A00004391 - ACD Agent Expansion from 9,999 to 30,000 Agents 67	
A00007250 - ACDMIS over TCP 85	
A00009120 – Multiple time zone (MTZ) enhancements 94	
Description 94	
Hardware requirements 94	
Limitations and restrictions 95	
Interactions 95	
Datafill 95	
Service Orders 97	
Operational Measurements 97	
Logs 97	
User interface 99	
Billing 99	
ADxxxx features	101
AD0068 - DLM Takeover 101	
AD0069 - DLM Maintenance Enhancements 102	
AD0070 - IVD Facility Maintenance Enhancements 104	
AD0251 - MADO User Self Test 106	
AD0303 - IVD Maintenance with Relay Port Card 108	
AD0304 - Remote DLM Software 110	

AD0305 - PM for Remote DLM/DLM Maintenance Card	112
AD0307 - M3000 Table Control	113
AD0340 - M3000 Line Display Hooks	119
AD0465 - M3000 Call Progress Indication II	121
AD0468 - M3000 and Delta II Service Orders	125
AD0469 - RMM for Remote DLM	128
AD0640 - RSC-DLM Basic	131
AD0641 - RDLM ESA	135
AD0732 - M3000 Screen Updates and Feature Calling	141
AD0757 - MMI Software Interface for Cabinetized Meridian SL-100	144
AD0897 - M2317 Updates and Feature Interactions	147
AD0898 - DLM PM Upgrade	151
AD0901 - ESA REX Test for RDLM	153
AD0902 - RSC-DLM ESA and Intraswitching	157
AD1288 - Aries Table Control and CPI	162
AD1289 - Aries XPM Software	167
AD1670 - Aries Digital Set Interface Processor Firmware	169
AD1671 - Aries Data Firmware	170
AD1782 - Aries Service Orders	173
AD1785 - Aries Feature Operation and Displays	175
AD1802 - MSN N00 Dialing	179
AD1946 - MSN Travel Card Number Database	188
AD1979 - MADO Support of Smartcom II VI	190
AD2066 - Monitor Terminal Activity	204
AD2146 - Personal Identification Numbers	205
AD2175 - Feature Group D ANI Delivery	213
AD2185 - MSN Travel Card Call Processing	219
AD2186 - Private Speed Calling and Hotline Dialing	224
AD2468 - NSS ANI Delivery	232
AD2472 - NSS-DBCP Base	240
AD2491 - Automatic Set Relocation Table Control	244
AD2492 - Automatic Set Relocation Feature Process	250
AD2493 - Automatic Set Relocation XPM Interaction	261
AD2854 - NSS Validated Account Codes and Authcode Last Dialing Plan	263
AD2856 - NSS-DBCP Travel Card Number Validation	268
AD3064 - Attendant Consoles on IPEs	269
AD3092 - Broadcast Table Control Enhancements	270
AD3093 - Broadcast Fan-Out Nodal Setup	271
AD3257 - Power Call Processing Architecture Enhancements	274
AD3259 - Broadcast Interworking/Feature Interactions	277
AD3285 - NAS RLT IBN ISUP Trunk Interactions	278
AD3286 - NAS RLT AC Special Function Key	283
AD3287 - NAS RLT Table Control and ISUP Messaging	286

AD3288 - Remote Trunk ID Display at AC	297
AD3366 - Power Feature Enhancements and Maintenance	299
AD3417 - XSM System Monitor Maintenance Interface	303
AD3418 - XSM System Monitor SLLNK Interface	307
AD3419 - Broadcast Loading for IPEs and DLMs	311
AD3468 - Replace Dialed Digits II	313
AD3493 - Enhanced DLM PM Diagnostics	316
AD3513 - Layer 2 OMs for D-channel Backup	320
AD3879 - Power - Nx64 Wideband Optionality	322
AD4550 - FCC DID Answer Supervision Compliance	325
AD7654 - Dialable Wideband CALLP Matrix-to-Crossthreads Additions	327
AD7655 - Digital Set Support of 64 kbps Sync Data	329
AD7656 - Line Side T1 IPE Interface Card	331
AD7658 - Fast Transfer for Digital Sets	333
AD7664 - MAGISTRAND SS7 Wideband Feature Robustification	338
AD7674 - Auto Recovery DLMs/IPEs	340
AD8418 - Attendant Console End-to-End Signaling over PRI	343
AD8419 - Secure Set Feature Support for Meridian SL-100	346
AD8420 - Software Activation of M2008 Handsfree	348
AD8422 - Multiple Station Message Waiting Indicators	349
AD8425 - Meridian SL-100 Changes to Support DBCP ANI Validation	353
AD9343 - NPA FREECALL Expansion for NSS	362
AD9693 - CCM: Trunk Member Display	365
AD9694 - Call Forward Indication	366
AD9695 - CCM: Automated Datafill for IPE Line Cards	368
AD9697 - CCM: NAS RLT Enhancements	370
AD9698 - CCM: CFB/CFD Per Key Destination	371
AD9699 - LINE 117/125 Log Enhancements	372
AD9701 - CNA: M2616CT and ATA Support	375
AD9702 - CNA: CFB/CFD Per Key Destination	377
AD9706 - XPM: Trunk Member Display	378
AD9708 - XPM: M2616CT and ATA Support	380
AD9711 - TL: M2616CT and ATA Support	382
AD9714 - MSL: NAS RLT Enhancements	383
AD9716 - Answer Supervision Throttling for DID Calls	385
AD9718 - MSL: Automated Datafill and Resource Allocation for the IPE	387
AD9719 - MSL: M2616CT and ATA Support	390
AD9720 - MSL: CFB/CFD Per Key Destination	391
AD9724 - IPE: Automated Datafill and Resource Allocation for IPE	393
AD9725 - MSL: VCDR Removal	395
AD9730 - CCM: VCDR Removal	396
AD9731 - TL: VCDR Removal	397
AD9753 - CCM: M2616CT and ATA Support	398

AD9783 - CNA: VCDR Removal 400

AD9817 - SHR: VCDR Removal 401

AGxxxx features
403

AG0621 - PAD Provisioning Software 403

AXxxxx features
405

AX0374 - CLASS on IPE 405

AX0376 - SMDR Per Use Billing for Features 408

AX0377 - MAT GUI and Cabletron Development 438

AX0378 - MSL: Carrier System ID Log Enhancements 441

AX0380 - MSL: Call Park Enhancement - SYSPARK 444

AX0382 - SNMP Enhancements for MAT and Spectrum 447

AX0383 - TL: Carrier System ID Log Enhancements 449

AX0384 - CCM: Call Waiting Enhancements 452

AX0386 - CCM: Message Waiting LCD Activation 455

AX0388 - CCM: COT and SCF on M2000 Sets 456

AX0390 - CCM: SMDR Per Use Billing for Features 458

AX0427 - MSL: MSMWI for IBN CLASS Sets 461

AX0428 - CCM: MSMWI for IBN CLASS Sets 466

AX0487 - SHR: Carrier System ID Log Enhancements 468

AX0687 - MSL: Call Waiting Enhancements 470

AX0843 - MSL: Message Waiting LCD Activation 473

AX0912 - CNA: NI-2 User Access Development 474

AX0913 - CCM: Flexible LEN 478

AX0914 - CCM: Call Forward Time of Day 480

AX0923 - CCM: SOC for LINE 117 and LINE 125 Enhancements 482

AX0940 - XPM: NI-2 User Access Development 485

AX0941 - XPM: Call Join 487

AX0942 - XPM: Flexible LEN 487

AX0946 - MSL: Call Forward Time of Day 489

AX0947 - MSL: Flexible LEN 498

AX1160 - MSL: Call Join 502

AX1221 - CCM: IVD Decouple 507

AX1223 - CCM: NI-2 User Re-architecture 508

AX1227 - CCM: NI-2 User Side Development - Phase II 509

AX1228 - CCM: Name Display Character Extension 520

AX1232 - TL: Virtual Office Worker 521

AX1233 - CCM: Virtual Office Worker 523

AX1234 - CCM: Authcode Enhancements 524

AX1236 - MSL: Virtual Office Worker 528

AX1238 - MSL: NT3X68 Tone Cards Consolidation 548

AX1240 - MSL: Name Display Character Extension 550

AX1245 - XPM: NI-2 User Side Development - Phase II 554

AMxxxx features**555**

AM0032 - XPEC Call Processing - Phase I	555
AM0033 - IPE PM Maintenance - Phase II	556
AM0034 - IPE Downloading	559
AM0035 - CC/IPE Feature Regression	560
AM0036 - IPE Service Orders/Query Commands	576
AM0037 - IPE PM Maintenance - Phase I	577
AM0038 - XPM Support of IPEs	582
AM0039 - IPE Lines Table Control	583
AM0040 - XPE Lines Maintenance - Phase I	589
AM0041 - IPE PM Table Control/Call Processing	592
AM0042 - XPEC Monitor	596
AM0043 - XPEC Message Translation	600
AM0044 - XPEC Maintenance - Phase I	601
AM0103 - XPEC Firmware	604
AM0117 - M2006 Single-line Digital Set Support	605
AM0125 - IPE PM Maintenance - Phase III	607
AM0126 - IPE Lines Maintenance - Phase II	609
AM0127 - IPE Link Diagnostics	612
AM0128 - Analog Lines on Intelligent Peripheral Equipment (IPE)	615
AM0129 - XPEC Message Interface - Phase II	620
AM0130 - XPEC Call Processing - Phase II	623
AM0131 - XPM IPE Interface Optimization	625
AM0132 - Overload Control for IPEs	627
AM0133 - IPE on RCC	631
AM0134 - DTSR Audits for IPEs	635
AM0135 - PMDEBUG Interface to XPEC Monitor	636
AM0140 - XPEC Self Test and Diagnostics Firmware	639
AM0145 - Collecting PIN Digits in a Centrex Dialing Plan	645
AM0164 - Meridian TeleCenter	647

BCxxxx features**649**

BC1523 - IVD Maintenance	649
BC1524 - IVD Call Processing	653
BC1525 - IVD Table Control - Phase I	658
BC1535 - MADO Profile	661
BC1536 - IVD Call Processing Audits	663
BC1537 - IVD Data Call Processing	665
BC1538 - IVD Service Orders	667
BC1548 - IVD CP Features	671
BC1558 - Digital Set Diagnostics	688

BFxxxx features**691**

BF0625 - IVD LGC Requirements	691

BF0632 - MADO T-link Firmware	693
BF0808 - DLM Software for Meridian Digital Sets	695
BF0817 - Meridian LGC Maintenance	696
BF0818 - CADA Keyboard Dialing	698
BF0828 - DLM-PSTS Firmware	707

BVxxxx features	715

BV2056 - IVD BAD Port Administration	715

A5xxxx features	717

A59006982 - Real-time SMDR over EIU	717
A59006994 - Music on Transfer	722
A59007002 - AAB Enhancement	729
A59007055 - Meridian Digital Telephone Flash Download	732
A59007068 - Meridian Digital Telephone DN Download	734
A59007097 - Meridian Digital Telephone Provisioning and Softkey Configuration	736
A59007106 - Meridian Digital Telephone Key Based Access Expansion Module	739
A59007115 - Meridian Digital Telephones Display Based Access Expansion Module	740
A59007124 - Meridian Digital Telephones Group Listening and Password Reset	742
A59007133 - Enhanced IPE Controller	744
A59007614 - SNMP Enhancements for Optivity Telephony Manager	748
A59009240 - PRI on RCC2 for Meridian SL-100	756
A59011306 - Meridian Cabinet Network Interface (MCNI)	764
A59013044 - Meridian Digital Telephone (M3900 Series) Desktop Enhancements	766
A59019794 - SMDI ID Override	770
A59023539 - M3900 Release 3 Enhancements	773
A59024197 - Call Forward Enhancements Part I: CFXQUERY CI Tool	780
A59024197A - Call Forward Enhancements Part II: CHANGECFX CI Command	783
A59019809 - LDAP Syncing for Meridian SL-100	785
A59025160 - RLT on PRI Enhancement	790
A59028416 - Individual Multiple Appearance Directory (MADN) Hold	793
A59028425 - QHASU Enhancements	797
A59028432 - Identifying Group Intercom (GIC) Members	801
A59029642 - Internet Telephony Gateway (ITG) for Meridian SL-100	803
A59036861 - Mark Non-IVD LENS	811
A59036868 - Query Busy Lamp Field	815
A59036875 - Large Scale Message Waiting Indication Reset	818
A59037865 - Local Ten-Digit Display	836

Pxxxx/Sxxxx features**839**

PAF00037210 - Echo Cancellation on PRI and PTS Trunks 839

S60352150 - Buzz Tone Duration 847

S10479659 - Meridian SL-100 Calling Number Delivery for Public Network 851

New in this release

The following sections detail what's new in *Communication Server 2100 Commercial Systems Feature Description Manual* (555-4031-801) for release 9.0 (SE09)

- ["Features" \(page 11\)](#)
- ["Other changes" \(page 11\)](#)

Features

See the following section for information about feature changes:

- ["Multiple time zone \(MTZ\) enhancements " \(page 11\)](#)

Multiple time zone (MTZ) enhancements

The Multiple time zone (MTZ) enhancements feature extends the functions of the framework for multiple time zones and Daylight Savings Time (DST). The Multiple time zone (MTZ) enhancements feature affects the following section:

- ["A00009120 – Multiple time zone \(MTZ\) enhancements" \(page 94\)](#)

Other changes

See the following section for information about changes that are not feature-related.

Reference titles updated

Some document references in *Communication Server 2100 Commercial Systems Feature Description Manual* (555-4031-801) have new titles. This version of *Communication Server 2100 Commercial Systems Feature Description Manual* (555-4031-801) reflects these changes.

About this document

When to use this document

This document contains description information about the Meridian SL-100/Communication Server 2100 features in the SE09 base load and optional groupings.

How this document is organized

The feature descriptions in this document are sorted in order of the feature number and are grouped into chapters based on the first letter(s) of the feature number. The introduction section contains cross-reference tables that show the features sorted by the functional group and the feature number. The following sections are included for each feature:

- Description
- Hardware requirements
- Restrictions and limitations
- Interactions
- Datafill
- Service orders
- Operational measurements
- Logs
- User interface
- Billing

How to check the version and issue of this document

The version and issue of the document are indicated by numbers (for example, 01.01).

The first two digits indicate the version. The version number increases each time the document is updated to support a new software release. For example, the first release of a document is 01.01. In the next software release cycle, the first release of the same document is 02.01.

The second two digits indicate the issue. The issue number increases each time the document is revised, but re-released in the same software release cycle. For example, the second release of a document in the same software release cycle is 01.02.

ATTENTION

To determine whether you have the latest version of this document and how documentation for your product is organized, check the release information in the *Communication Server 2100 Commercial Systems Master Index of Publications* (555-4031-001).

References for this document

Refer to the following documents for more information about the features described in this document:

- *Communication Server 2100 Commercial Systems Translations Guide* (555-4001-350)
- *Communication Server 2100 Commercial Systems Service Order Reference Manual* (555-4031-808)
- *Communication Server 2100 Commercial Systems Operational Measurements Reference Manual* (555-4031-814)
- *Communication Server 2100 Commercial Systems Log Report Reference Manual* (555-4031-840)
- *Communication Server 2100 Commercial Systems Data Schema Reference Manual* (555-4031-851)
- *Communication Server 2100 M3900 Meridian Digital Telephones Reference Guide* (555-4001-136)
- *Communication Server 2100 Commercial Systems Office Parameters Reference Manual* (555-4031-855)
- *Communication Server 2100 Application Planning Guide* (555-4001-108)
- *Communication Server 2100 Commercial Systems Master Index of Publications* (555-4031-001)
- *Using Meridian SL-100 Features on the 802.11 Wireless LAN Portable Handsets* (555-3001-851)
- *802.11 Wireless IP Gateway for Meridian SL-100* (555-3001-206)
- *Communication Server 2100 Getting Started with Optivity Telephony Manager User Guide* (555-4001-316)

Introduction

The features in this document are sorted in order of the feature number. "[Meridian SL-100 features, sorted by feature number](#)" (page 15) lists Meridian SL-100 specific features available in SE06. Refer to the individual feature descriptions following this introductory section for feature information.

Note: Many of the features in MSL10 and MSL11 have features associated with them in the lower software layers. These features are documented in the description section of this manual, but are not listed in the following tables. For example, feature AX0947, MSL: Flexible LEN, has two other features associated with it at the CCM (common) and XPM (extended peripheral module) layers.

Meridian SL-100 features, sorted by feature number

Feature number	Feature name	Functional group	Functionality
AD0068	DLM Takeover	MSL IVD	MSL Digital Phones M2000 Basic
AD0069	DLM Maintenance Enhancements	MSL IVD	MSL Digital Phones M2000 Basic
AD0070	IVD Facility Maintenance Enhancements	MSL IVD	MSL Digital Phones M2000 Basic
AD0303	IVD Maintenance With Relay Port Card	MSL IVD	MSL Digital Phones M2000 Basic
AD0304	Remote DLM Software		
AD0305	PM for Remote DLM/DLM Maint Card	MSL IVD	MSL Digital Phones M2000 Basic
AD0307	M3000 Table Control	MSL IVD	MSL Digital Phones M3000
AD0340	M3000 Line Display Hooks	MSL IVD	MSL Digital Phones M3000
AD0465	M3000 Call Progress Indication II	MSL IVD	MSL Digital Phones M3000
AD0468	M3000 and Delta II Service Orders	MSL IVD	MSL Digital Phones M2000 Basic

Feature number	Feature name	Functional group	Functionality
AD0469	RMM for Remote DLM	MSL IVD	MSL Remote DLM with M2000
AD0640	RSC-DLM Basic	MSL IVD	MSL RSC DLM Meridian Digital Sets
AD0641	RDLM ESA	MSL IVD	MSL Remote DLM with ESA
AD0732	M3000 Screen Updates and Feature Calling	MSL IVD	MSL Digital Phones M3000
AD0757	MMI Software Interface for Cabinetized Meridian SL-100	MSL BASE	MSL-100 Cabinetized Software
AD0897	M2317 Updates and Feature Interactions	MSL IVD	MSL Digital Phones M2000 Display
AD0898	DLM PM Upgrade	MSL IVD	MSL Digital Phones M2000 Basic
AD0901	ESA REX Test for RDLM	MSL IVD	MSL Remote DLM with M2000
AD0902	RSC-DLM ESA and Intraswitching	MSL IVD	MSL RSC DLM with ESA
AD1288	ARIES Table Control and CPI	MSL IVD	MSL Digital Phones M2000 Basic
AD1289	Aries XPM Software	MSL IVD	MSL Digital Phones M2000 Basic
AD1670	Aries Digital Set Interface Processor Firmware	MSL IVD	MSL Digital Phones M2000 Basic
AD1671	Aries Data Firmware	MSL IVD	MSL Digital Phones M2000 Basic
AD1782	Aries Service Orders	MSL IVD	MSL Digital Phones M2000 Basic
AD1785	Aries Feature Operation and Displays	MSL IVD	MSL Digital Phones M2000 Basic
AD1802	MSN N00 Dialing	MSL NSS	MSL 700/800/900 Services
AD1946	MSN Travel Card Number Database	MSL NSS	MSL Travel Card Services
AD1979	MADO Support of Smartcom III Version 1.0	MSL IVD	MSL Digital Phones M2000 Basic
AD2066	Monitor User Activity	MSL BASE	MSL Monitor-MAP Terminal Activity
AD2146	Personal Identification Numbers	MSL NSS	MSL Enhanced Tandem Services
AD2175	Feature Group D ANI Delivery	MSL NSS	MSL Enhanced Tandem Services

Feature number	Feature name	Functional group	Functionality
AD2185	MSN Travel Card Call Processing	MSL NSS	MSL Travel Card Services
AD2186	Private Speed Calling and Hotline Dialing	MSL NSS	MSL Enhanced Tandem Services
AD2468	NSS ANI Delivery	MSL NSS	MSL Enhanced Tandem Services
AD2472	NSS-DBCP Base	MSL NSS	MSL NSS Database Control Point
AD2491	Automatic Set Relocation Table Control		
AD2492	Automatic Set Relocation Feature Process		
AD2493	Automatic Set Relocation XPM Interaction		
AD2854	NSS Validated Account Codes and Authcode Last Dialing Plan	MSL NSS	MSL Enhanced Tandem Services
AD2856	NSS-DBCP Travel Card Number Validation	MSL NSS	MSL NSS Travel Card Number Validation
AD3064	Attendant Consoles on IPEs	MSL IVD	MSL Extended Peripheral Equipment
AD3092	Broadcast Table Control Enhancements	MSL WBAND	MSL ISUP Broadcast Fan Out
AD3093	Broadcast Fan-out Nodal Setup	MSL WBAND	MSL ISUP Broadcast Fan Out
AD3257	Power Call Processing Architecture Enhancements	MSL WBAND	MSL ISUP Broadcast Fan Out
AD3259	Broadcast Interworking/Feature Interactions	MSL WBAND	MSL ISUP Broadcast Fan Out
AD3285	NAS RLT IBN ISUP Trunk Interactions	MSL STATION FEATURES	MSL ISUP NAS RLT
AD3286	NAS RLT AC Special Function Key	MSL STATION FEATURES	MSL ISUP NAS RLT
AD3287	NAS RLT Table Control and ISUP Messaging	MSL STATION FEATURES	MSL ISUP NAS RLT
AD3288	Remote Trunk ID Display at AC	MSL STATION FEATURES	MSL ISUP NAS RLT
AD3366	Power Feature Enhancements and Maintenance Support	MSL WBAND	MSL ISUP Broadcast Fan Out

Feature number	Feature name	Functional group	Functionality
AD3417	XSM System Monitor Maintenance Interface		
AD3418	XSM System Monitor SLLNK Interface		
AD3419	Broadcast Loading for IPEs and DLMS		
AD3468	Replace Dialed Digits II	MSL NSS	MSL NSS N00 DBCP Process
AD3493	Enhance DLM PM Diagnostics	MSL IVD	MSL Digital Phones M2000 Basic
AD3513	Layer 2 OMs for D-Channel Backup	MSLD ISDN	MSLD Primary Rate Access
AD3879	Power - Nx64 Wideband Optionality	MSL WBAND	MSL Nx64 Wideband Flex Bandwidth
AD4550	FCC DID Answer Supervision Compliance	MSL BASE	MSL FCC DID Answer Supervision
AD7655	Digital Set Support of 64 kbps Sync Data	MSL IVD	MSL Digital 64 kbps Sync
AD7656	Line Side T1 IPE Interface Card		
AD7658	Fast Transfer on Digital Sets	MSL STATIO N FEATURES	MSL Fast Transfer Digital Sets
AD7664	MAGISTRAND SS7 Wideband Feature Robustification		
AD7674	Auto Recovery DLM/IPEs	MSL IVD	MSL Auto Recovery DLM/IPEs
AD8418	Attendant Console End-to-End Signaling	MSL STATIO N FEATURES	MSL Attendant Console End-to-End Signaling
AD8419	Secure Feature Set	MSL STATIO N FEATURES	MSL Secure Set Support
AD8420	M2008 Handsfree Support	MSL IVD	MSL M2008 Handsfree
AD8422	Multiple Message Waiting Indication	MSL STATIO N FEATURES	MSL Multiple Station Message Indication
AD8425	DBCP ANI Validation	MSL NSS	MSL NSS N00 DBCP Process
AD9343	NPA FREECALL Expansion for NSS	MSL BASE	MSL NPA FREECALL Expansion for NSS
AD9693	Trunk Member Display	MSL BASE	MSL Trunk Mem Display
AD9694	Call Forward Indication	MSL STATIO N FEATURES	MSL Call FWD Indication

Feature number	Feature name	Functional group	Functionality
AD9699	LINE 117/125 Log Enhancements	MSL BASE	MSL SL-100 Cabinetized Software
AD9714	NAS RLT Enhancements	MSL STATION FEATURES	MSL NAS RLT Enhance
AD9716	Answer Supervision Throttling for DID Calls	MSL BASE	MSL Sup Throttle DID
AD9718	Automated Datafill for IPE Line Cards	MSL IVD	MSL Auto Data IPE Line
AD9719	M2616CT and ATA Support	MSL IVD	MSL M2616CT Dig Term
AD9720	CFB/CFD Per Key Destination	MSL IVD	MSL CFB/CFD Per Key
AD9725	VCDR Removal	MSL NSS	MSL NSS Billing Platform
AG0621	PAD Provisioning Software	MSL BASE	MSL Pad Provisioning
AM0032	XPEC Call Processing - Phase II	MSL IVD	MSL Extended Peripheral Equipment (EPE)
AM0033	IPE PM Maintenance - Phase II	MSL IVD	MSL EPE
AM0034	IPE Downloading	MSL IVD	MSL EPE
AM0035	CC/IPE Feature Regression	MSL IVD	MSL EPE
AM0036	IPE Service Orders/Query Commands	MSL IVD	MSL EPE
AM0037	IPE PM Maintenance - Phase I	MSL IVD	MSL EPE
AM0038	XPM Support of IPEs	MSL IVD	MSL EPE
AM0039	IPE Lines Table Control	MSL IVD	MSL EPE
AM0040	XPE Lines Maintenance - Phase I	MSL IVD	MSL EPE
AM0041	IPE PM Table Control/Call Processing	MSL IVD	MSL EPE
AM0042	XPEC Monitor	MSL IVD	MSL EPE
AM0043	XPEC Message Translation	MSL IVD	MSL EPE
AM0044	XPEC Maintenance - Phase I	MSL IVD	MSL EPE
AM0103	XPEC Firmware	MSL IVD	MSL EPE
AM0117	M2006 Single-Line Digital Set Support	MSL IVD	MSL Digital Phones M2000 Basic
AM0125	IPE PM Maintenance - Phase III	MSL IVD	MSL EPE

Feature number	Feature name	Functional group	Functionality
AM0126	IPE Lines Maintenance - Phase II	MSL IVD	MSL EPE
AM0127	XPE Link Diagnostics	MSL IVD	MSL EPE
AM0128	Analog Lines on IPE	MSL IVD	MSL EPE
AM0129	XPEC Message Interface - Phase II	MSL IVD	MSL EPE
AM0130	XPEC Call Processing - Phase II	MSL IVD	MSL EPE
AM0131	XPM IPE Interface Optimization	MSL IVD	MSL EPE
AM0132	Overload Control for IPEs	MSL IVD	MSL EPE
AM0133	IPE on RCC	MSL IVD	MSL EPE
AM0134	DTSR Audits for IPEs	MSL IVD	MSL EPE
AM0135	PMDEBUG Interface to XPEC Monitor	MSL IVD	MSL EPE
AM0140	XPEC Self Test and Diagnostics Firmware	MSL IVD	MSL EPE
AM0145	NSS: PIN Collection on Centrex Originations	MSL NSS	MSL Enhanced Tandem Services
AM0164	Meridian Telecenter	MSL IVD	MSL Meridian Telecenter
AX0374	CLASS on IPE	MSL CLASS OPT	MSL CLASS on IPE
AX0376	SMDR Per Use Billing or Features	MSL CLASS OPT	MSL SMDR Per Use
AX0377	MAT GUI and Cabletron Development		
AX0378	Carrier System ID Log Enhancements	MSL BASE	MSL Carrier ID Log
AX0380	Call Park Enhancement - SYSPARK	MSL STATIO N FEATURES	MSL Callpark Auto DN
AX0382	SNMP Enhancements for MAT and Spectrum		
AX0427	MSMWI for IBN CLASS Sets	MSL IVD	MSL MSMWI for 2500 Sets
AX0687	Call Waiting Enhancements	MSL IVD	MSL CWT Enhance
AX0843	Message Waiting LCD Activation	MSL STATIO N FEATURES	MSL MW LCD Activation
AX0946	Call Forward Time of Day	MSL STATIO N FEATURES	MSL Call Forward TOD

Feature number	Feature name	Functional group	Functionality
AX0947	Flexible LEN	MSL IVD	MSL Flex LEN on IPE
AX1160	Call Join	MSL STATION FEATURES	MSL Call Join
AX1236	Virtual Office Worker	MSL STATION FEATURES	MSL Virtual Office Worker
AX1238	NT3X68 Tone Cards Consolidation		
AX1240	Name Display Character Extension	MSL STATION FEATURES	MSL Name Display Character Extension
BC1523	IVD Maintenance	MSL IVD	MSL Digital Phones M2000 Basic
BC1524	IVD Call Processing	MSL IVD	MSL Digital Phones M2000 Basic
BC1525	IVD Table Control - Phase I	MSL IVD	MSL Digital Phones M2000 Basic
BC1535	MADO Profile	MSL IVD	MSL Digital Phones M2000 Basic
BC1536	IVD Call Processing Audits	MSL IVD	MSL Digital Phones M2000 Basic
BC1537	IVD Data Call Processing	MSL IVD	MSL Digital Phones M2000 Basic
BC1538	IVD Service Orders	MSL IVD	MSL Digital Phones M2000 Basic
BC1548	IVD CP Features	MSL IVD	MSL Digital Phones M2000 Basic
BC1558	Digital Set Diagnostics	MSL IVD	MSL Digital Phones M2000 Basic
BF0625	IVD LGC Requirements	MSL IVD	MSL Digital Phones M2000 Basic
BF0632	MADO T-Link F/W	MSL IVD	MSL Digital Phones M2000 Basic
BF0808	DLM SW for Meridian Digital Sets	MSL IVD	MSL Digital Phones M2000 Basic
BF0817	Meridian LGC Maintenance	MSL IVD	MSL Digital Phones M2000 Basic
BF0818	CADA KBD	MSL IVD	MSL Digital Phones M2000 Basic
BF0828	DLM-PSTS Firmware	MSL IVD	MSL Digital Phones M2000 Basic

Feature number	Feature name	Functional group	Functionality
BV2056	IVD BAD Port Administration	MSL IVD	MSL Digital Phones M2000 Basic
A59006982	Real-time SMDR Over EIU	MSL EIU OPT	MSL Rltime Billing over EIU
A59006994	Music On Transfer	MSL STATIO N FEATURES	MSL Music on Transfer
A59007002	AAB Enhancement	MSL STATIO N FEATURES	MSL AAB Enhancement
A59007055	Meridian Digital Telephone Flash Download	MSL IVD	MSL Desktop Evolution
A59007068	Meridian Digital Telephone DN Download	MSL IVD	MSL Desktop Evolution
A59007097	Meridian Digital Telephone Provisioning and Soft Key Configuration	MSL IVD	MSL Desktop Evolution
A59007106	Meridian Digital Telephone Key Based Access Expansion Module	MSL IVD	MSL Desktop Evolution
A59007115	Meridian Digital Telephone Display Based Access Expansion Module	MSL IVD	MSL Desktop Evolution
A59007124	Meridian Digital Telephone Group Listening and Password Reset	MSL IVD	MSL Desktop Evolution
A59007133	Enhanced IPE Controller	MSL BASE	MSL Enhncd IPE Cntroller
A59007614	SNMP Enhancements for Optivity Telephony Manager for MSL-100	MSL BASE	MSL SNMP Enhmt Optivity Telephony Manager for MSL-100
A59009240	PRI on RCC2 for Meridian SL-100	MSL ISDN PRI OPT	MSL PRI on RSC-S
A59011306	Meridian Cabinet Network Interface (MCNI)		
A59013044	Meridian Digital Telephone (M3900 Series) Desktop Enhancements	MSL IVD	MSL Desktop Evolution
A59019794	SMDI ID Override	MSL	SMDI ID Override
A59023539	M3900 Release 3 Enhancements		
A59024197	Call Forward Enhancements Part I: CFXQUERY CI Tool		

Feature number	Feature name	Functional group	Functionality
A59024197A	Call Forward Enhancements Part II: CHANGECEF CI Command		
A59019809	LDAP Syncing for Meridian SL-100		
A59025160	RLT on PRI Enhancement		
A59028416	Individual MADN (Multiple Appearance Directory) Hold		
A59028425	QHASU Enhancements		
A59028432	Identifying Group Intercom (GIC) Members		
A59029642	Internet Telephony Gateway (ITG) for Meridian SL-100		
A59036861	Mark Non-IVD LENS		
A59036868	Query Busy Lamp Field		
A59036875	Large Scale Message Waiting Indication Reset		
A59037865	Local Ten-Digit Display		
S60352150	Buzz Tone Duration		
S10479659	Meridian SL-100 Calling Number Delivery for Public Network		

Axxxx features

A00003653 - Line Option for IPCM Phones

Description

The IP Client Manager (IPCM) is a UNISTim telephone gateway that hosts several models of IP phones in a Communication Server 2100 or Meridian SL-100 network.

ATTENTION

For a detailed description of the IP Client Manager, see the "Gateways" chapter of the *Communication Server 2100 Product Guide*.

Prior to this feature, technicians provisioned IP phones as M5216 sets on the switch using the M5216 Line Class Code (LCC). However, there was no indication in the core of a line being an IPCM line (for example, as in a QLEN or QDN output).

The Line Option for IPCM Phones feature delivers the IPCLIENT line option. This option distinguishes lines with actual M5216 phones from IPCM lines that have UNISTim phones. The Line Option for IPCM Phones feature provides the ability to use SERVORD to provision the IPCLIENT option to indicate that a line with the M5216 LCC is an IPCM line.

You can assign or remove the IPCLIENT option from a line using the following SERVORD commands:

- NEW
- NEWACD
- ADO
- EST
- ADD
- DEO

In addition, the COPYSET, CKLN and CHF commands are supported.

End users have the ability to "hot-desk" from IPCM phone to IPCM phone. However, hot-desking may not occur that frequently and there may be a phone that is the end-user's primary phone. Therefore, when IPCLIENT is entered as an option, the system prompts the technician for the primary set type. The available options are as follows:

- I2001
- I2002
- I2004
- SOFTCLIENT
- OTHER

Lines assigned the IPCLIENT option are indicated as IP clients in the output of query commands such as QLEN, QDN, QLENWRK, QDNWRK and QCUST.

The count of M5216 lines with the IPCLIENT option assigned appears in the COUNTALL OPT output. For DMSMON and ALMSTAT line output and COUNTALL output by Line Class Code, IPCM lines continue to be counted as M5216 lines.

Hardware requirements

Line Option for IPCM Phones has no hardware requirements.

Limitations and restrictions

You can assign the IPCLIENT option only to a line with the M5216 Line Class Code on key 1.

This feature does not provide the ability to speedily apply the IPCLIENT option to IPCM lines provisioned prior to SE07. Applying the option after an upgrade requires manual intervention or a SERVORD batch process.

Interactions

The IPCLIENT option modifies how the QDN, QLEN, QDNWRK and QLENWRK commands display information. This section describes the changes and also provides examples of how the QCUST and COUNTALL commands display the option.

QDN and QLEN

When querying lines with the IPCLIENT using the QDN and QLEN commands, the option appears on the Line Class Code line of the commands' output. The option and primary set type appear immediately after the Line Class Code. The option also appears in the OPTIONS section. As the examples in the figures below show, the option does not appear in any particular position in the Options section.

"QDN example with IP Client option" (page 27) shows what the system displays when entering the QDN command with IPCLIENT option (and M522 option).

"QLEN example with IP Client option" (page 28) shows what the system displays when entering the QLEN command with IPCLIENT option.

QDN example with IP Client option

```
>QDN 9975880
-----
DN:          9975880
TYPE: SINGLE PARTY LINE
SNPA: 214   SIG: N/A   LNATTIDX: N/A
LINE EQUIPMENT NUMBER:      IPCM 00 0 00 00
LINE CLASS CODE: M5216 SET IPCLIENT I2004 WITH TWO M522 ADDONS
KEY: 1
CUSTGRP:      BNRRCH SUBGRP: 0 NCOS: 0 RING: Y
CARDCODE: RDTEBS GND: N PADGRP: PKNIL BNV: NL MNO: Y
PM NODE NUMBER      :      70
PM TERMINAL NUMBER  :      1
OPTIONS:
3WC CWI IPCLIENT I2004 NAME PUBLIC JON DEAUX
AUTODISP Y $ CFU N $ I $ CWT Y Y N $
-----
```

QLEN example with IP Client option

```

>QLEN IPCM 00 0 00 09
-----
LEN:      IPCM 00 0 00 09
TYPE: SINGLE PARTY LINE
SNPA: 214
DIRECTORY NUMBER:      9975889
LINE CLASS CODE: M5216 SET IPCLIENT I2002
CUSTGRP:      BNRRCH SUBGRP: 0 NCOS: 0 RING: Y
CARDCODE: RDTEBS GND: N PADGRP: PKNIL BNV: NL MNO: Y
PM NODE NUMBER      :      70
PM TERMINAL NUMBER  :      10
OPTIONS:
3WC CWI IPCLIENT I2002 NAME PUBLIC JON DEAUX
AUTODISP Y $ CFU N $ I $ CWT Y Y N $

KEY      DN
---      --
1        DN          2149975889

KEY      FEATURE
---      -
1        AUTODISP N $
4        3WC
5        CFU N      $ I $
6        CWT Y Y N $
-----

```

QDNWRK and QLENWRK

QDNWRK and QLENWRK display an inventory of lines with attributes that match the given output. To display only the IPCM line, enter M5216 in response to the Line Class Code prompt and IPCLIENT in response to the option prompt. IPCLIENT will appear in both the LINE CLASS CODE line and the OPTIONS section in the output.

"QDNWRK example (Sheet 1 of 2)" (page 29) and "QDNWRK example (Sheet 2 of 2)" (page 30) show a QDNWRK example.

QDNWRK example (Sheet 1 of 2)

```

>QDNWRK
DIRECTORY_NUMBER_RANGE: ALL
>
AGENT OR LINE CLASS CODE: NLCC
>M5216
OPTION:
>IPCLIENT
SUMMARY OR DETAIL: S
>D
COMMAND AS ENTERED
QDNWRK ALL M5216 IPCLIENT $ ALL D
ENTER Y TO CONFIRM, N TO REJECT OR E TO EDIT
>Y
REPORT ON WORKING DIRECTORY NUMBERS
      LCC          M5216 OPTION IPCLIENT
-----
DN:          9975733
TYPE: SINGLE PARTY LINE
SNPA: 214   SIG: N/A   LNATTIDX: N/A
LINE EQUIPMENT NUMBER: IPCM 00 0 00 01
LINE CLASS CODE: M5216 IPCLIENT I2002
KEY: 2
CUSTGRP:          BNRRCH SUBGRP: 0 NCOS: 0 RING: Y
CARD CODE: 6X21AC GND: N PADGRP: NPDGP BNV: NL MNO: Y
PM NODE NUMBER   : 76
PM TERMINAL NUMBER : 2
OPTIONS:
IPCLIENT I2002 3WC CWI NAME PUBLIC JIM DEAUX
AUTODISP Y $ CFU N $ I $ CWT Y Y N $
-----
-----

```

QDNWRK example (Sheet 2 of 2)

```

DN:          9975880
TYPE: SINGLE PARTY LINE
SNPA: 214   SIG: N/A   LNATTIDX: N/A
LINE EQUIPMENT NUMBER:      IPCM  00 0 00 00
LINE CLASS CODE:  M5216 IPCLIENT I2004 WITH TWO M522 ADDONS
KEY:  1
CUSTGRP:          BNRRCH SUBGRP: 0  NCOS: 0  RING: Y
CARDCODE:  RDTEBS   GND: N  PADGRP: PKNIL  BNV: NL MNO: Y
PM NODE NUMBER      :      70
PM TERMINAL NUMBER  :      1
OPTIONS:
3WC CWI IPCLIENT I2004 NAME PUBLIC JANE DEAUX
AUTODISP Y $ CFU N $ I $ CWT Y Y N $
-----
TOTAL COUNT OF WORKING DN: 2

```

"QLENWRK example (Sheet 1 of 2)" (page 30) and "QLEN49WRK example (Sheet 2 of 2)" (page 31) show a QLENWRK example.

QLENWRK example (Sheet 1 of 2)

```

>QLENWRK
LINE_MODULE_RANGE: ALL
>
LINE_DRAWER_RANGE: ALL
>
AGENT OR LINE CLASS CODE: NLCC
>M5216
OPTION:
>IPCLIENT
SUMMARY OR DETAIL: S
>D
COMMAND AS ENTERED
QLENWRK ALL ALL M5216 IPCLIENT D
ENTER Y TO CONFIRM, N TO REJECT OR E TO EDIT
>Y
WARNING : Queries of all LENS or a large range of LENS
          may run for 30 minutes or more before producing any output
Please confirm ("YES", "Y", "NO", or "N"):
>Y
REPORT ON WORKING LINE EQUIPMENT NUMBERS
DRAWERS ALL
LCC          M5216 OPTION IPCLIENT

```

QLEN49WRK example (Sheet 2 of 2)

```

LEN: IPCM 00 0 00 11
TYPE: SINGLE PARTY LINE
DN 2149975880 LCC M5216 SET IPCLIENT I2004 WITH TWO M522 ADDONS SIG N/A
LNATTIDX N/A
CUSTGRP:          BNRRCH SUBGRP: 0 NCOS: 0 RING: Y
CARDCODE: 6X21AC GND: N PADGRP: NPDGP BNV: NL MNO: Y
PM NODE NUMBER    : 76
PM TERMINAL NUMBER : 2
OPTIONS:
3WC CWI IPCLIENT I2004 NAME PUBLIC JANE DEAUX AUTODISP Y $ CFU N $ I $ CWT Y
Y N $
-----

LEN: IPCM 00 0 00 00
TYPE: SINGLE PARTY LINE
DN 2149975880 LCC M5216 SET IPCLIENT I2001 SIG N/A LNATTIDX N/A
CUSTGRP:          BNRRCH SUBGRP: 0 NCOS: 0 RING: Y
CARDCODE: RDTEBS GND: N PADGRP: PKNIL BNV: NL MNO: Y
PM NODE NUMBER    : 70
PM TERMINAL NUMBER : 1
OPTIONS:
IPCLIENT I2001
-----

LEN: IPCM 00 0 00 02
TYPE: SINGLE PARTY LINE
DN 2149975882 LCC M5216 SET IPCLIENT SOFTCLIENT SIG N/A LNATTIDX N/A
CUSTGRP:          BNRRCH SUBGRP: 0 NCOS: 0 RING: Y
CARDCODE: RDTEBS GND: N PADGRP: PKNIL BNV: NL MNO: Y
PM NODE NUMBER    : 70
PM TERMINAL NUMBER : 3
OPTIONS:
3WC CWI NAME PUBLIC JOE DEAUX CFU N $ I $ CWT Y Y N $ IPCLIENT SOFTCLIENT
-----

LEN: IPCM 00 0 00 03
TYPE: SINGLE PARTY LINE
DN 2149975883 LCC M5216 SET IPCLIENT OTHER SIG N/A LNATTIDX N/A
CUSTGRP:          BNRRCH SUBGRP: 0 NCOS: 0 RING: Y
CARDCODE: RDTEBS GND: N PADGRP: PKNIL BNV: NL MNO: Y
PM NODE NUMBER    : 70
PM TERMINAL NUMBER : 4
OPTIONS:
3WC IPCLIENT OTHER CFU N $ I $ CWT Y Y N $
-----

TOTAL: 4

```

QCUST

In QCUST, the IPCLIENT option and primary set type refinement are listed in the KSET line feature record (identified by the 10 at the beginning of the output line).

"QCUST example" (page 32) shows a QCUST example

QCUST example

```
>QCUST LEN IPCM 01 0 08 06
0 55 Y 4 Y N
99
18 ISDN
18 CIP
18 DSN CIP
18 CIP2050
18 CIPMISC
18 CIPEXP
18 CIPMADN
99
19 PUBLIC 0
19 PRIVATE 1
19 NV 2
19 SV 3
19 RCHNET 4
19 RTPNET 5
19 CARLNET 6
19 PALNET 7
19 SCAINET 8
99
1 IPCM 01 0 00 11 M5216 NPDGP 6X21AC N
4 M522 2 $
5 1 9975880 BNRRCH 0 0 214 Y
9 CWT 3WC CWI AUTODISP CFX $
10 1 NAME PUBLIC JON_DEAUX
10 1 AUTODISP N $
10 4 3WC
10 1 IPCLIENT I2004 $
10 5 CFUIF CFU N N N $
10 6 CWT Y Y N $
99
@
```

COUNTALL

COUNTALL compiles line option assignment statistics and/or LCC counts for the switch office. The COUNTALL output by line option for IPCLIENT is displayed like other line options. Only M5216 lines are shown as having the IPCLIENT option.

"COUNTALL example" (page 33) shows an example of COUNTALL by line option output.

COUNTALL example

```

>countall
-----
OPT or LCC stats:
>opt
Approx office size = 22792 lines
  AAB not supported
  AAK not supported
  ACB TOTAL LINES= 1
    PSET lines: 1
    .
    .
    .
  INSPECT not supported
  INT TOTAL LINES= 0
  INTPIC not supported
  IPTELSET not supported
  IPCLIENT TOTAL LINES= 30
    M5216 lines: 30
  IRR TOTAL LINES= 0
  ISA not supported
  ISADEACT not supported
  ISDNAMA not supported
  ISOLATE not supported
    .
    .
    .
-----
COUNTALL done

```

Datafill

The Line Option for IPCM Phones feature modifies the KSETFEAT table. Refer to Table KSETFEAT in the *Communication Server 2100 Commercial Systems Data Schema Reference Manual* (555-4001-851) for further information about the Data Schema changes.

"New or modified tables" (page 33) shows the modified table.

New or modified tables

Table Name	New, Changed or Deleted	Table Control (New/Old/Unchanged)
KSETFEAT	Changed	Unchanged

"Table field descriptions" (page 34) shows fields/OIDs for Table KSETFEAT.

Table field descriptions

Field	New or Changed	Subfield or refinement	Entry	Explanation and action
FEATURE	Changed	Adds a new option.	IPCLIENT	Set feature with primary set type refinement which could be one of the following: • I2001 • I2002 • I2004 • SOFTCLIENT • OTHER

Datafill example

"SOFTCLIENT datafill example" (page 34) shows a sample datafill for Table KSETFEAT using SOFTCLIENT as the primary set type refinement.

SOFTCLIENT datafill example

```
TABLE: KSETFEAT
>lis
TOP
FEATKEY FEATURE KVAR
-----
IPCM 00 0 00 00 1 IPCLIENT IPCLIENT SOFTCLIENT$
```

Service Orders

You assign the IPCLIENT option to an IPCM line using the following SERVORD commands:

- NEW
- NEWACD
- ADO
- EST
- ADD

You can remove the IPCLIENT option by entering the DEO command.

The COPYSET, CLKN and CHF commands can also be used against the IPCLIENT option.

The following sections show examples of SERVORD commands referencing the IPCLIENT option.

NEW

The NEW command establishes service for all non hunt lines (see "[NEW IPCLIENT option SERVORD configuration example \(Sheet 1 of 2\)](#)" (page 36) and "[NEW IPCLIENT option SERVORD configuration example \(Sheet 2 of 2\)](#)" (page 37)).

NEW IPCLIENT option SERVORD configuration example (Sheet 1 of 2)

```
>NEW
SONUMBER:      NOW    3   9 15 PM
>
DN:
>9975890
LCC_ACC:
>M5216
GROUP:
>BNRRCH
SUBGRP:
>0
NCOS:
>0
SNPA:
>214
KEY:
>1
RINGING:
>Y
LTG:
>0
LEN_OR_LTID:
>IPCM 00 0 00 10
OPTKEY:
>1
OPTION:
>IPCLIENT
PRIM_SET_TYPE:
>I2004
OPTKEY:
>$
COMMAND AS ENTERED:
NEW NOW 3 9 15 PM 9975890 M5216 BNRRCH 0 0 214 1 Y 0 IPCM 00 0 00 10
(1 IPCLIENT I2004) $
```


NEW IPCLIENT option SERVORD configuration example (Sheet 2 of 2)

```

ENTER Y TO CONFIRM,N TO REJECT OR E TO EDIT
>Y
MACHINES ARE OUT OF SYNC, SERVICE ORDERS NOT ALLOWED
JOURNAL FILE IS INACTIVE, SERVICE ORDERS NOT ALLOWED
SHOULD ORDER BE DONE ANYWAY? (Y OR N)

Unprompted:

NEW $ 9975890 M5216 BNRRCH 0 0 214 1 Y 0 IPCM 00 0 00 10 1 IPCLIENT I2004

```

NEWACD

The NEWACD command establishes initial service for a new Automatic Call Distribution (ACD) business set (see ["NEWACD IPCLIENT option SERVORD configuration example \(Sheet 1 of 2\)"](#) (page 37) and ["NEWACD IPCLIENT option SERVORD configuration example \(Sheet 2 of 2\)"](#) (page 38)).

NEWACD IPCLIENT option SERVORD configuration example (Sheet 1 of 2)

```

>NEWACD
SONUMBER:      NOW    3   9 15 PM
>
DN:
>9975890
ACDSETTYPE:
>AGENT
LCC:
>M5216
GROUP:
>BNRRCH
SUBGRP:
>0
NCOS:
>0
SNPA:
>214
LATANAME:
>NILLATA
LEN_OR_LTID:
>IPCM 00 0 00 10
ACDGROUP:
>SCAIGRP1
ACDSGRP:
>1
IDNUM:
>Y
POSID:
>5890
TEMPLATE:
>AGENTTEMP

```

NEWACD IPCLIENT option SERVORD configuration example (Sheet 2 of 2)

```

>$
OPTKEY:
>1
OPTION
>IPCLIENT
PRIM_SET_TYPE
>I2004
OPTKEY:
>$
COMMAND AS ENTERED:
NEWACD NOW 3 9 15 PM 9975890 AGENT M5216 BNRRCH 0 0 214 NILLATA IPCM 00 0
00 10 SCAIGRP1 1 Y 5890 ( AGENTTEMP) $ ( 1 IPCLIENT I2004 ) $
ENTER Y TO CONFIRM,N TO REJECT OR E TO EDIT
>y
MACHINES ARE OUT OF SYNC, SERVICE ORDERS NOT ALLOWED
JOURNAL FILE IS INACTIVE, SERVICE ORDERS NOT ALLOWED
SHOULD ORDER BE DONE ANYWAY? (Y OR N)

Unprompted:

NEWACD $ 9975890 AGENT M5216 BNRRCH 0 0 214 NILLATA IPCM 00 0 00 10 SCAIGRP1
1 Y 5890 AGENTTEMP $ 1 IPCLIENT I2004 $ Y Y

```

ADO

The ADO command add options to individual lines and hunt group members (see ["ADO IPCLIENT option SERVORD configuration example" \(page 38\)](#)).

ADO IPCLIENT option SERVORD configuration example

```

>ADO
SONUMBER:      NOW    3 10 27 PM
>
DN_OR_LEN:
>9975890
OPTKEY:
>1
OPTION:
>IPCLIENT
PRIM_SET_TYPE:
>I2004
OPTKEY:
>$
COMMAND AS ENTERED:
ADO NOW 3 10 27 PM 9975890 ( 1 IPCLIENT I2004) $
ENTER Y TO CONFIRM,N TO REJECT OR E TO EDIT
>y
JOURNAL FILE IS INACTIVE, SERVICE ORDERS NOT ALLOWED
SHOULD ORDER BE DONE ANYWAY? (Y OR N)
>y

Unprompted:

ADO $ 9975890 1 IPCLIENT I2004 $ Y Y

```

DEO

The DEO command deletes options from individual lines and hunt group members (see ["DEO IPCLIENT option SERVORD configuration example" \(page 39\)](#)).

DEO IPCLIENT option SERVORD configuration example

```

>DEO
SONUMBER:      NOW    3 10 29 PM
>
DN_OR_LEN:
>9975890
OPTKEY:
>1
OPTION:
>IPCLIENT
OPTKEY:
>$
COMMAND AS ENTERED:
DEO NOW 3 10 29 PM 9975890 ( 1 IPCLIENT ) $
ENTER Y TO CONFIRM,N TO REJECT OR E TO EDIT
>Y
MACHINES ARE OUT OF SYNC, SERVICE ORDERS NOT ALLOWED
JOURNAL FILE IS INACTIVE, SERVICE ORDERS NOT ALLOWED
SHOULD ORDER BE DONE ANYWAY? (Y OR N)
>Y

Unprompted:

DEO $ 9975890 1 IPCLIENT $ Y Y

```

EST

The EST command establishes hunt groups (see ["EST IPCLIENT option SERVORD configuration example \(Sheet 1 of 2\)" \(page 39\)](#) and ["EST IPCLIENT option SERVORD configuration example \(Sheet 2 of 2\)" \(page 40\)](#)).

EST IPCLIENT option SERVORD configuration example (Sheet 1 of 2)

```

>EST
SONUMBER:      NOW    3  9 24 AM
>
GROUPTYPE:
>MLH
PILOT_DN:
>9975890

```

EST IPCLIENT option SERVORD configuration example (Sheet 2 of 2)

```

LCC:
>M5216
GROUP:
>BNRRCH
SUBGRP:
>0
NCOS:
>0
SNPA:
>214
KEY:
>1
RINGING:
>Y
PILOT_LEN:
>IPCM 00 0 0 10
MEM_LEN:
>$
OPTION:
>IPCLIENT
PRIM_SET_TYPE:
>I2004
GROUPSIZE:
>3
COMMAND AS ENTERED:
EST NOW 3 9 24 AM MLH 9975890 M5216 BNRRCH 0 0 214 1 Y IPCM 00 0 00 10 $
IPCLIENT I2004 3
ENTER Y TO CONFIRM,N TO REJECT OR E TO EDIT
>Y
MACHINES ARE OUT OF SYNC, SERVICE ORDERS NOT ALLOWED
JOURNAL FILE IS INACTIVE, SERVICE ORDERS NOT ALLOWED
SHOULD ORDER BE DONE ANYWAY? (Y OR N)
>Y
WARNING - MNO (MANUAL OVERRIDE) FIELD HAS BEEN SET TO Y
>
Unprompted:
EST $ MLH 9975890 M5216 BNRRCH 0 0 214 1 Y IPCM 00 0 00 10 $ IPCLIENT I2004 3 Y Y

```

ADD

The ADD command adds hunt group members. Only DNH, DLH and MLH type groups are supported. In addition, tuple HNT_SO_SIMPLIFICATION must be set to "Y" in Table OFCOPT and tuple PROMPT_HUNT_MEM_LCC must be set to "Y" in Table OFCVAR for the Line_Class prompt to appear (see ["ADD IPCLIENT option SERVORD configuration example" \(page 41\)](#)).

ADD IPCLIENT option SERVORD configuration example

```

>ADD
SONUMBER:      NOW    3   9  24 AM
>
GROUPTYPE:      MLH
>
LINK_LEN: IPCM  00 0 00 10  1
>
KEY:
>1
MEM_LEN:
>IPCM 00 0 00 09
LINE_CLASS:
>M5216
KEY:
>1
MEM_LEN:
>$
OPTION:
>IPCLIENT
PRIM_SET_TYPE:
>SOFTCLIENT
GROUPSIZE:
>2
COMMAND AS ENTERED:
ADD NOW 3 9 24 AM MLH IPCM 00 0 00 10 1 ( IPCM 00 0 00 09 M5216 1 ) $ IPCLIENT
SOFTCLIENT 2
ENTER Y TO CONFIRM,N TO REJECT OR E TO EDIT
>Y
MACHINES ARE OUT OF SYNC, SERVICE ORDERS NOT ALLOWED
JOURNAL FILE IS INACTIVE, SERVICE ORDERS NOT ALLOWED
SHOULD ORDER BE DONE ANYWAY? (Y OR N)
>Y
WARNING - MNO (MANUAL OVERRIDE) FIELD HAS BEEN SET TO Y
Unprompted:
ADD $ MLH IPCM 00 0 00 10 1 IPCM 00 0 00 09 M5216 1 $ IPCLIENT SOFTCLIENT 2 Y Y

```

CHF

The CHF command changes feature data for options on a line. You can change the primary set type with the CHF command (see "[CHF IPCLIENT option SERVORD configuration example](#)" (page 42)).

CHF IPCLIENT option SERVORD configuration example

```

>CHF
SONUMBER:      NOW   3 10 29 PM
>
DN_OR_LEN:
>9975890
OPTKEY:
>1
OPTION:
>IPCLIENT
PRIM_SET_TYPE:
>I2002
OPTKEY:
>$
COMMAND AS ENTERED:
CHF NOW 3 10 29 PM 9975890 ( 1 IPCLIENT I2002 ) $
ENTER Y TO CONFIRM,N TO REJECT OR E TO EDIT
>Y
MACHINES ARE OUT OF SYNC, SERVICE ORDERS NOT ALLOWED
JOURNAL FILE IS INACTIVE, SERVICE ORDERS NOT ALLOWED
SHOULD ORDER BE DONE ANYWAY? (Y OR N)
>Y

Unprompted:

CHF $ 9975890 1 IPCLIENT I2002 $ Y Y

```

Redundant Feature capability

This option supports the Redundant Feature capability. For Redundant Feature support, tuples SO_ALLOW_REDUNDANT_FEATURE and SO_ALLOW_REDUNDANT_FEATURE_CHF must be set to "Y" in Table OFCVAR.

By having the Redundant Feature capability, the IPCLIENT option can be assigned to a line using the ADO command that already has the option assigned. If the ADO command includes a different primary set type, the command works like the CHF command.

Using the CHF command to attempt to change the Primary Set Type on a line that does not have IPCLIENT assigned has the same affect as assigning the option with the ADO command.

With the Redundant Feature capability, deleting the IPCLIENT option from a line without the option assigned using the DEO command will not cause an error.

Operational Measurements

Line Option for IPCM Phones does not affect Operational Measurements.

Logs

Line Option for IPCM Phones does not does not affect logs.

User interface

Line Option for IPCM Phones does not does change the user interface.

Billing

Line Option for IPCM Phones does not affect billing.

A00004007 - Group Paging for GIAC Enhancement**Description**

Group Intercom All Call (GIAC) allows a member of a Group Intercom (GIC) to page selected members (determined by datafill) of the GIC group simultaneously.

GIAC currently requires four keystrokes to create a two-way voice communication with a maximum group size of 30 members.

The Group Paging for GIAC Enhancement feature modifies the existing functionality of the GIAC feature to

- add the capability to assign one key for paging which saves the originator three keystrokes (the originator previously had to press four keystrokes).
- create a one-way communication path for broadcasting the originator's message, rather than the existing two-way conference style.
- expand of the maximum member group size to 99 users (plus the originator).

Force answer will be applied to idle sets. When the originator presses the GIACPG key, all of the 99 users will hear the broadcast on their internal speakers, unless they are already on the phone at the time of paging. Sets in use will receive a notification buzz or tone to inform the user that the set has received a new page.

This feature will be implemented through A00004007 and is available on the SE07 load. The functionality of this feature will be enabled by controlled Software Optionality Control (SOC) of type Control SOC. This utility controls the activation or use of the options. The new SOC will be registered with the name "*Enh Group Int Paging*" with SOC ID: MDC00077.

"Software Optionality Control" (page 44) provides SOC information for Group Paging for GIAC Enhancement.

Software Optionality Control

SOC option name:	Enh Group Int Paging
SOC option title:	Yes
SOC option control type:	state
New SOC option?	Yes
SOC option order code	MDC00077
Option defined in DRU:	CCM layer
Affected products:	all DMS-100 switches

When the SOC Right to Use (RTU) is set to Yes and the SOC status is ON, the administrator will be able to page with the options above, by first having the datafill configured using the existing SERVORD commands, such as ADO. GIAC Paging can be removed with the DEO command. Examples of using these commands are presented in the "Interactions" (page 45) section in this feature description.

SERVORD will have an additional prompt as shown in "Datafilling one-way GIAC paging" (page 46). When the SOC is activated, the GIAC key that is assigned, will have the paging capability. If the SOC is in IDLE state, (which is the state other than ON), SERVORD datafill will go to completion. The feature will not be available and a message will be display during the SERVORD datafill process.

When the GIAC feature is initiated, paging is established and each terminator is placed on a port. The originator then broadcasts through a one-way connection. A non-paging style of GIAC can be programmed on another key. Members will hear the broadcast until the originator hangs up or until they disconnect. The originator has the capability of paging up to 99 members of their GIC group.

GIAC paging option is assigned using SERVORD commands (one possible command is ADO), and can be removed with the DEO command. The presence of GIAC paging is displayed as a Y field in the KSETFEAT tuple example ("KSETFEAT tuple (with GIAC Paging in bold)" (page 49)) and commands QLEN ("QLEN shows a second Y at the end of the GIAC to indicate paging" (page 48)) and QGRP ("GIAC GROUP shows new field PAGING from QGRP output" (page 49)).

Hardware requirements

This feature works on the following group of phone sets with an internal speaker:

- M2000
- M5000
- M3900

Limitations and restrictions

Once upgraded to SE07, GIAC Paging will have the necessary functions to accommodate all sites. To enable the GIAC Paging functionality, SOC MDC00077 must be in the ON state. Datafill of GIAC Paging, however, does not require the SOC to be turned on.

There are no changes in option compatibilities between the GIAC feature and other options.

Interactions

"[Datafilling one-way GIAC paging](#)" (page 46) is a sample of datafilling a one-way GIAC paging. New datafill is in bold.

Datafilling one-way GIAC paging

```

2003/10/03 10:46 RSNMLD07BD BUILT ON TUE. 30/SEP/2003 11:41:43
>servord
SO:
>ado
SONUMBER:  NOW  3 10 6 PM
>$
DN_OR_LEN:
>2149975123
OPTKEY:
>7
OPTION:
>gic
GICNAME:
>khui
GICMEMNO:
>13
GICSMDR:
>n
GICNOMSB: N
>n
OPTKEY:
>7
OPTION:
GIAC
GIAC_NO:
>1
ORIG:
>y
PAGING:
Y
OPTKEY:
>$
COMMAND AS ENTERED:
ADO NOW 3 10 6 PM 2149975123 ( 7 GIC KHUI 13 N N ) ( 7 GIAC Y 1 Y ) $
ENTER Y TO CONFIRM,N TO REJECT OR E TO EDIT
>yy
MACHINES ARE OUT OF SYNC, SERVICE ORDERS NOT ALLOWED
JOURNAL FILE IS INACTIVE, SERVICE ORDERS NOT ALLOWED

```

This feature involves the introduction of a new option for GIAC and part of the variable in the ADO command in SERVORD. This option enables the one-way paging. An answer Y will enable the PAGING. The example in ["ADO syntax with GIAC using SERVORD" \(page 46\)](#) shows the changes for Group Paging for GIAC Enhancement in bold text.

ADO syntax with GIAC using SERVORD

```

SO:
> ADO NOW 3 10 6 PM 2149975123 ( 7 GIC KHUI 13 N N ) ( 7 GIAC 1 Y Y ) $
COMMAND AS ENTERED:
ADO NOW 3 10 6 PM 2149975123 ( 7 GIC KHUI 13 N N ) ( 7 GIAC 1 Y Y ) $
ENTER Y TO CONFIRM,N TO REJECT OR E TO EDIT
>yy

```

GIAC Paging indicating field in Table KSETFEAT

Once the GIAC paging is configured, the QLEN will report its presence by having the second Y to indicate GIAC paging. An example of this is shown in "QLEN shows a second Y at the end of the GIAC to indicate paging" (page 48) with the changes in bold text.

QLEN shows a second Y at the end of the GIAC to indicate paging

```

>QLEN 2149975123
-----
LEN:      LCM2  00 0 07 27
TYPE: SINGLE PARTY LINE
SNPA: 214
DIRECTORY NUMBER:      9975123
LINE CLASS CODE: M5208 SET
CUSTGRP:      BNRRCH  SUBGRP: 0  NCOS: 0  RING: Y
CARDCODE: 6X21AC      GND: N  PADGRP: NPDGP  BNV: NL MNO: Y
PM NODE NUMBER      :      41
PM TERMINAL NUMBER :      252
DNGRPS OPTIONS:
NETNAME: PUBLIC
ADDRESS:      NNNNNNNNNN
NETNAME: RCHNET
NAME:      BNRRCH
ADDRESS:      DDD243NNNN
OPTIONS:
NAME PUBLIC DMITRY 3WC GIC KHUI 13 N N
CNF C06 CWT Y Y N 1 2 3

KEY      DN
---      --
1      DN      2149975123
2      DN      8158653123
3      DN      9196577123
7      GIC      13      KHUI

KEY      FEATURE
---      -
4      3WC
5      CNF C06
6      CWT Y Y N 1 2 3
7      GIAC      1 Y Y
-----

```

Once the GIAC paging is configured, the QGRP can show PAGING for that member as shown in "GIAC GROUP shows new field PAGING from QGRP output" (page 49) (with the new changes in bold).

GIAC GROUP shows new field PAGING from QGRP output

```

>QGRP GIAC LCM2  00 0 07 27 7

GIAC GROUP
-----

LCM2  00 0 15 27      KEY 7      MEMBER 14 PAGING
IPE2  02 0 08 28      KEY 4      MEMBER 17 PAGING
LCM2  00 0 07 27      KEY 7      MEMBER 13 PAGING
LCM2  00 0 00 31      KEY 7      MEMBER 15 PAGING

THE NUMBER OF MEMBERS IN THE GIAC GROUP "1" IS 4

```

Datafill

"[New or modified tables](#)" (page 49) shows the new, changed or modified tables.

New or modified tables

Table Name	New, Changed or Deleted	Table Control (New/Old/Unchanged)
KSETFEAT	Changed	Unchanged

Group Paging for GIAC Enhancement modifies the KSETFEAT (Keyset Features) table. The Table KSETFEAT feature GIAC includes a new subfield or refinement, PAGING, with entry choices of Y or N.

Datafill example

"[KSETFEAT tuple \(with GIAC Paging in bold\)](#)" (page 49) shows an example of a KSETFEAT tuple that contains the GIAC Paging option.

KSETFEAT tuple (with GIAC Paging in bold)

```

LCM2  00 0 07 27 7      GIAC      GIAC      1 Y Y

```

To establish that datafill, use the example in "[Establish initial GIAC Paging using SERVORD command ADO to datafill Table KSETFEAT](#)" (page 50) of SERVORD command ADO to datafill for Table KSETFEAT feature GIAC. The text in bold font is new.

Establish initial GIAC Paging using SERVORD command ADO to datafill Table KSETFEAT

```

>servord
SO:
>ado
SONUMBER:      NOW    3 10  6 PM
>$
DN_OR_LEN:
>2149975123
OPTKEY:
>7
OPTION:
>gic
GICNAME:
>khui
GICMEMNO:
>13
GICSMR:
>n
GICNOMSB: N
>n
OPTKEY:
>7
OPTION:
GIAC
GIAC_NO:
>1
ORIG:
>y
PAGING:
Y
OPTKEY:
>$
COMMAND AS ENTERED:
ADO NOW 3 10 6 PM 2149975123 ( 7 GIC KHUI 13 N N ) ( 7 GIAC 1 Y Y ) $
ENTER Y TO CONFIRM,N TO REJECT OR E TO EDIT
>y

```

The following table lists the datafill for Table KSETFEAT feature GIAC.

KSETFEAT Feature GIAC - field descriptions

Field	Subfield or refinement	Entry	Explanation and action
FEATKEY		see subfields	<i>KSET feature key</i> This field consists of subfields LEN, KEY, and FEAT.
	LEN	see subfields	<i>Line Equipment Number</i> This field defines the physical location of the equipment that is connected to a specific telephone line. Because field LEN is common to more than 60 tables, it is documented in a single section to avoid unnecessary

Field	Subfield or refinement	Entry	Explanation and action
			duplication. Refer to section "Common entry field LEN" for a complete description of field LEN and associated subfields.
	KEY	1 to 69	<i>Physical key</i> Enter the number associated with the physical key to which the feature is being assigned. For M2317 digital telephones, only keys 1 to 11 can be assigned.
	FEAT	GIAC	<i>Feature</i> Enter GIAC for the Group Intercom All Call feature.
FEATURE		GIAC	<i>Feature</i> Enter GIAC.
KVAR		see subfields	<i>Key variable area</i> This field consists of subfields GIAC_NO, ORIG, and PAGING.
	GIAC_NO	0 to 4095	<i>Group intercom all call number</i> Enter the number of the GIAC group to which the GIC member belongs. Group members are assigned arbitrarily by the enterprise's switch administrator. If a GIAC number is assigned a GIAC group number that was previously unassigned, a notice is displayed, indicating that a new group has been added.
	ORIG	Y or N	<i>Originate</i> Enter Y (yes) if the station is allowed to initiate feature GIAC. Otherwise, enter N (no).
	PAGING	Y or N	<i>Paging</i> Establish original paging. Enter Y (yes) to configure GIAC paging. Otherwise, enter N (no).

Service Orders

"Meridian Digital Centrex feature assignment requirements" (page 52) shows the Meridian Digital Centrex feature assignment requirements.

Meridian Digital Centrex feature assignment requirements

Feature	500 2500	MDC SET	ISDN SET	MDC set ISDN set relationship							
				S E T	S U B S E T	K E Y	D N	D E D K E Y	L A M P	C O D E	D I S P L A Y
GIAC	N	Y					x		x	x	

This activity introduces the Paging prompt to the existing GIAC feature. It is not a new command; it is only an additional prompt for the option. See the "Interactions" (page 45) section in this feature description for examples of how the prompts appear when datafilling one-way GIAC paging.

"System prompts for GIAC option" (page 52) shows possible values for the paging field prompt.

System prompts for GIAC option

Prompt	Valid input	Description	Areas affected by prompt
Paging	[y]	[y] stands for yes	If the user inputs "y", GIAC paging will be enabled. If the user inputs "n", paging is not enabled.
	[n]	[n] stands for no	

The following functions apply to this option:

- set functionality: no (option is essentially just a tag)
- subset functionality: no
- DN functionality: no
- key functionality: yes

"MAP outputs with associated meanings and actions" (page 53) shows the GIAC Paging Prompt Response (MAP outputs)

MAP outputs with associated meanings and actions

Command
The following prompt will appear at the SERVORD's prompt when enabling GIAC Paging with character y, while SOC for GIAC Paging is in IDLE state The SOC for GIAC Paging is not ON, please turn it on.
Meaning: When the SOC is IDLE and the Paging prompt (y) is submitted through SERVORD, the message The SOC for GIAC Paging is not ON, please turn it on. will be displayed. It is to remind the technician to enable SOC in order to use the true functionality. Otherwise, SERVORD will go to completion without the actual GIAC Paging functionality.
System or user actions: System will continue as normal. SERVORD command will go completion. GIAC Paging functionality will not be available until the technician enables the SOC.

Operational Measurements

Group Paging for GIAC Enhancement does not affect Operational Measurements.

Logs

Group Paging for GIAC Enhancement does not affect logs.

User interface

Group Paging for GIAC Enhancement does not change the user interface.

Billing

Group Paging for GIAC Enhancement does not affect billing.

A00004009 - ESDN CLASS Feature Enhancements

Description

Secondary Directory Number (SDN), also known as Teen Service, currently allows for the assignment of multiple Directory Numbers (DNs) to a single Line Equipment Number (LEN). Distinctive ringing is provided to enable subscribers to differentiate between calls terminating to the different DNs. Enhanced Secondary Directory Number (ESDN) adds the capability to assign separate options to each SDN associated with the Primary Directory Number (PDN). It also adds the capability to originate calls from the SDN.

The current ESDN feature set contains the following feature options: AINDN, CFW, COT, INTPIC, IRR, LPIC, MWT, PIC, PORT, and SCMP (COT and MWT were added by this feature). See ["Feature glossary" \(page 59\)](#) for a description of these and other acronyms that appear in this feature description.

A message is displayed when one of these feature options is added to an ESDN and the SOC is inactive, stating that its functionality is dependent on the status of the SOC. When multiple enhanced feature options are added to the ESDN line at one time, a message is displayed only for the first feature option in the list.

ESDN CLASS Feature Enhancements allows the following two existing feature options to be assigned to ESDN lines (these features were previously restricted from being added to an ESDN):

- Customer Originated Trace (COT)
- Message Waiting (MWT)

Message Waiting (MWT)

Message Waiting allows a subscriber to be alerted by a lamp or stutter dial tone when a message has been left for that subscriber (usually on a voicemail system). MWT is enabled for assignment to ESDN through removal of the current provisioning restriction.

The Class Message Waiting Indicator (CMWI) form of notification is the primary MWT notification used. Both stuttered dial tone (as selected during SERVORD session) and the Message Waiting lamp are used in conjunction with each other to determine if a line has a message queued against it.

The stuttered dial tone is presented for each individual ESDN that has a message queued against it, and occurs after the subscriber accesses the ESDN line. The stuttered dial tone is applied to the PDN when either the PDN or any ESDN has a message queued against it, and occurs when the PDN goes off hook. The stuttered dial tone is turned off for an ESDN on an individual basis, when a given ESDN has retrieved all of its messages. The stuttered dial tone is turned off for the PDN when there are no messages queued for any of the ESDNs and PDN.

The lamp is presented on the set when any of the ESDNs or PDN has a message queued against it. The lamp is extinguished when there are no messages queued against any of the ESDNs and PDN.

The feature behavior described above is dependent on the line in question having MWT assigned to it. Only a line with MWT assigned directly to it is factored into the determination to apply or remove the stuttered dial tone and the lamp.

The exception to this processing is in the event the ESDN SOC state is IDLE. In this case, only the state of the PDN determines whether to turn the stuttered dial tone and the lamp on or off. The MWT functionality for the ESDNs is suppressed by the presence of the IDLE ESDN SOC state.

Also supported are the alternate MWT notification types:

- Stuttered Dial Tone (STD)
- Periodic Ring Notification (PRN)
- Message Waiting Lamp (MWL)

The MWL_STD notification type will not be supported due to its incompatibility with IBN/RES sets.

Customer Originated Trace (COT)

Removal of the SERVORD restrictions allows COT to be enabled for assignment to an ESDN.

To activate COT for ESDN, go off hook and then dial the SDNID feature access code. Then dial the four-digit ESDN ID, and then finally dial the COT feature access code. Doing so after a call has been received on the ESDN line, allows the trace log to be displayed, showing the call information based on the ESDN agent and the calling DN.

If the ESDN SOC is IDLE, dialing the COT feature access code will result in no trace being presented.

Software Optionalty Control (SOC)

The new SOC is named "EnhTeen Svc (ESDN)" and is introduced as a RES SOC in the CCM layer. This SOC controls the use of the new ESDN feature set.

The newly available feature options are assignable within SERVORD independent of the state of the SOC. If, at provisioning time in SERVORD, one of the newly available feature options is provisioned but the SOC is inactive, a message is presented to indicate that the feature option will function only if the SOC is turned on. If multiple enhanced feature options are provisioned through SERVORD at the same time, the message will be displayed only for the first feature option in the list.

All of the feature options being enabled for ESDN by this feature are controlled by the new SOC. If the SOC state is IDLE, then these feature options will not be allowed to complete call processing. If the SOC state is ON, these feature options will function to completion. In either SOC state, the feature options are allowed to be assigned to the ESDN through SERVORD, accompanied by a message indicating that the function of the feature option is dependent on the SOC state being ON.

Note: The message will only be displayed if the SOC state is IDLE.

Aside from these changes, there are no new commands, prompts, dependencies, or incompatibilities introduced with this feature activity.

With the addition of these feature options to ESDN, the tuples in table IBNLINES will show these options as a part of the ESDN tuple whenever they have been assigned to a specific ESDN.

"[Software Optionality Control](#)" (page 56) provides SOC information for the ESDN CLASS Feature Enhancements feature.

Software Optionality Control

SOC option name:	RES00103
SOC option title:	Enh Teen Svc (ESDN)
SOC option control type:	state
New SOC option?	Yes
SOC option order code	RES00103
Option defined in DRU:	CCM layer
Affected products:	SL-100, NA100

Hardware requirements

ESDN CLASS Feature Enhancements requires the same hardware as is needed to support ESDN lines. In addition, where the ESDN lines are configured, the MWT and COT feature options must be supported.

For example, the MWL notification type of MWT requires specific line cards such as the 6x19aa and 6x20aa line cards to function correctly.

Software requirements or dependencies

CCM20, RES00017

Limitations and restrictions

The CWT/CWI and CFCW features are not supported with this feature.

The MWL_STD notification type of MWT is not supported, because it is not compatible with IBN/RES sets

This feature activity A00004009 is limited to the Meridian SL-100 market (ESDN SOC RES00103).

Interactions

There are new interactions being introduced by way of enabling the feature options to ESDN. For example, the interaction with Message Waiting (MWT) will change since MWT is now supported on ESDN through this feature activity.

Datafill

The COT feature option will appear on an ESDN tuple in Table IBNLINES:

COT feature option on ESDN tuple in Table IBNLINES

```
LCM0 00 0 11 24 1 DT STN IBN 9975193 BNRRCH 0 0 214 (COT) $
```

The MWT feature option will appear on an ESDN tuple in Table IBNFEAT:

MWT feature option on ESDN tuple in Table IBNFEAT

```
LCM0 00 0 11 24 1 MWT MWT CMWI N N
```

Service Orders

A message is displayed when one of these feature options is added to an ESDN while the SOC is inactive, stating that its functionality is dependent on the status of the SOC. In the event that multiple enhanced feature options are being added to the ESDN line at one time, a message is displayed only for the first feature option in the list.

The tuples in Table IBNLINES will now show options COT and MWT as a part of the ESDN tuple whenever they are assigned to a specific ESDN.

The following example shows how to add COT to an ESDN in SERVORD.

Adding COT to an ESDN

```

>servord
>ado
SONUMBER:      NOW    3 12 17 PM
>$
DN_OR_LEN:
>9975193
OPTION:
>COT
>$
OPTION:
>$
COMMAND AS ENTERED:
ADO NOW 3 12 17 PM 9975193 ( COT ) $
>y
MACHINES ARE OUT OF SYNC, SERVICE ORDERS NOT ALLOWED
JOURNAL FILE IS INACTIVE, SERVICE ORDERS NOT ALLOWED
SHOULD ORDER BE DONE ANYWAY? (Y OR N)
>y

```

The following example shows how to add MWT to an ESDN in SERVORD.

Adding MWT to an ESDN

```

>servord
>ado
SONUMBER: NOW    3 12 17 PM
>
DN_OR_LEN:
>9975193
OPTION:
>MWT
NOTICE:
>cmwi
CMWISTD:
>y
CMWIRING:
>y
STATUS:
>act
CAR:
>n
CRX:
>n
OPTION:
>$
COMMAND AS ENTERED:
ADO NOW 3 12 17 PM 9975193 ( COT ) $
ENTER Y TO CONFIRM, NO TO REJECT OR E TO EDIT
>y
MACHINES ARE OUT OF SYNC, SERVICE ORDERS NOT ALLOWED
JOURNAL FILE IS INACTIVE, SERVICE ORDERS NOT ALLOWED
SHOULD ORDER BE DONE ANYWAY? (Y OR N)
>y

```

Operational Measurements

ESDN CLASS Feature Enhancements does not affect Operational Measurements.

Logs

ESDN CLASS Feature Enhancements does not affect logs.

User interface

ESDN CLASS Feature Enhancements does not change the user interface.

Billing

ESDN CLASS Feature Enhancements does not affect billing.

Feature Glossary

The following table lists the current ESDN feature options and other acronyms that appear in this feature description and describes them.

Feature glossary

Term	Description
AINDN	Advance Intelligent Network DN
CFW	Call Forward
COT	Customer Originated Trace
CPE	Customer Premises Equipment
DN	Directory Number
DTM	Denied Termination
ESDN	Enhanced Secondary Directory Number
IBN	Integrated Business Network
INTPIC	International Primary Carrier
IRR	Inhibit Ring Reminder
LPIC	Intra LATA PIC
MGRT	Migrate
MWT	Message Waiting
PIC	PRIMARY Inter LATA Carrier
PORT	Number Portability
SCMP	Series Completion
SDN	Secondary Directory Number
SDNI	Secondary Directory Number Identification
SOC	Software Optionality Control

A00004115 - CARID Enhancement for Spectrum Peripheral Module Description

The MSL08 release introduced the Carrier System ID Log Enhancements feature (AX0378) which introduced the Carrier Identification (CARID) command to the MAP CI CARRIER level. This ability displays datafillable administrative information by creating a table called CARID. The administrative information is retrieved from Table CARID and allows a technician to quickly retrieve trunk and trouble reporting information. This feature also appends the datafillable administrative information to specific DS1 carrier logs. A blank line is appended to the carrier logs for all layers of this feature. Only the MSL layer overwrites the blank line with the specific carrier information. For more information, see ["AX0378 - MSL: Carrier System ID Log Enhancements"](#) (page 441).

Previously, Table CARID only provided the ability to append customer-generated information about carriers that subtend to the following peripherals:

- Digital Trunk Controller (DTC)
- Digital Trunk Controller-ISDN (DTC-I)
- Line Trunk Controller (LTC)
- Line Trunk Controller-ISDN (LTC-I)
- Remote Switching Center (RCC)
- Remote Cluster Controller 2 (RCC2)
- Subscriber Carrier Module-100 Access (SMA)
- Subscriber Carrier Module-100 Access, Second Version (SMA2)

The CARID Enhancement for Spectrum Peripheral Module (SPM) feature builds on this capability to enable Table CARID to include information about the Spectrum Peripheral Module.

With the introduction of this feature in SE07, technicians have the means to define miscellaneous data against individual T1s. For example, when a Spectrum Peripheral Module is interfacing to an OPTera, or similar SNET equipment, which allows a DS3 to be brought down to 28 T1s, each T1 can be terminated to a different location. Once a T1 states changes to SYSB, the system generates a CARR log. Within the log, Table CARID text is added describing the event that caused the system to generate such a log.

["Table CARID before SE07"](#) (page 61) shows an example of how Table CARID looked previously, whereas ["Table CARID after SE07"](#) (page 61) shows an example of Table CARID after the introduction of the CARID Enhancement for Spectrum Peripheral Module feature.

Table CARID before SE07

```

>table carid
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
TABLE: CARID
>ran
  1 CARRKEY          CARID_KEY_AREA
  2 CARRCHAR          FIFTY_FIVE_CHAR_VECTOR
LOGICAL TUPLE TYPE: CARID_LOGICAL_TUPLE
>ran 1
  1 CARRKEY          CARID_KEY_AREA
TYPE IS CARID_KEY_AREA MULTIPLE WITH
    CARIDPM          {DTC,DTCI,LTC,LTCI,RCC,RCC2,SMA,SMA2}
    CARIDPM_NUM       {0 TO 255}
    CARIDPM_CARR      {0 TO 53}
    CARIDENTRY_NUM    {CARID,MISC1,MISC2,MISC3,MISC4}

```

Table CARID after SE07

```

>table carid
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
TABLE: CARID
>ran
  1 CARRKEY          CARID_KEY_AREA
  2 CARRCHAR          FIFTY_FIVE_CHAR_VECTOR
LOGICAL TUPLE TYPE: CARID_LOGICAL_TUPLE
>ran 1
  1 CARRKEY          CARID_KEY_AREA
TYPE IS CARID_KEY_AREA MULTIPLE WITH
    CARIDPM          {DTC,DTCI,LTC,LTCI,RCC,RCC2,SMA,SMA2,SPM}
    CARIDPM_NUM       {0 TO 255}
    CARIDPM_CARR      {0 TO 185}
    CARIDENTRY_NUM    {CARID,MISC1,MISC2,MISC3,MISC4}

```

Sample MAP displays

CARID Enhancement for Spectrum Peripheral Module provides additional information at the SPM carrier level of the MAP to allow for CARID information. "Before SE07: mapci;mtc;trks;carrier;post spm 0 1" (page 62) shows what appears on the MAP display before this feature, when a technician enters the following:

```
>mapci;mtc;trks;carrier;post spm 0 1
```

Before SE07: mapci;mtc;trks;carrier;post spm 0 1

```

      CM      MS      IOD      Net      PM      CCS      Lns      Trks      Ext      APPL
      .      .      .      LOAD      PMLOAD      .      .      1C..      .      .
                                     *C*
POST      CLASS      ML      OS      ALRM      SYSB      MANB      UNEQ      OFFL      CBSY      PBSY      INSV
0 Quit      TRUNKS      13      0      3      0      0      0      44      0      0      116
2 Post_      REMOTE      0      0      0      0      0      0      2      0      2      21
3           TIMING      0      0      0      0      0      0      0      0      0      2
4           HSCARR      2      0      0      0      0      0      16      0      0      75
5 Loop_      OC3S
6 Tst_      N CLASS      SITE      SPM      RM      OC3S      CKT      STATE      TR      MA
7 Bsy_      0 HSCARR      HOST      0      0      0      1      INSV      .S      ..
8 RTS_      SIZE OF POSTED SET : 1
9 Offl_
10
11 Disp_
12 Next
13           POST:
14 Detail_
15 ListAlm_
16
17 Perfmon_
18
      TERMA
Time 15:17 >

```

"In SE07: mapci;mtc;trks;carrier;post spm 0 1" (page 63) shows what appears on the MAP display with this feature enabled, when a technician enters the following:

```
>mapci;mtc;trks;carrier;post spm 0 1
```

In SE07: mapci;mtc;trks;carrier;post spm 0 1

CM	MS	IOD	Net	PM	CCS	Lns	Trks	Ext	APPL		
.	.	.	LOAD	PMLOAD	.	.	1C..	.	.		
C											
POST	CLASS	ML	OS	ALRM	SYSB	MANB	UNEQ	OFFL	CBSY	PBSY	INSV
0 Quit	TRUNKS	13	0	3	0	0	0	44	0	0	116
2 Post_	REMOTE	0	0	0	0	0	0	2	0	2	21
3	TIMING	0	0	0	0	0	0	0	0	0	2
4	HSCARR	2	0	0	0	0	0	16	0	0	75
5 Loop_	OC3S										
6 Tst_	N CLASS	SITE	SPM	RM	OC3S	CKT	STATE	TR	MA		
7 Bsy_	0 HSCARR	HOST	0	0	0	1	INSV	.S	..		
8 RTS_	SIZE OF POSTED SET	:	1								
9 Offl_											
10											
11 Disp_											
12 Next											
13	POST:										
14 Detail_											
15 ListAlm_											
16											
17 Perfmon_											
18 CarID_											
TERMA											
Time	15:17	>									

Therefore, in SE07 a technician can also enter the CARID command for an SPM (see ["CARID command for an SPM MAP display"](#) (page 64)).

CARID command for an SPM MAP display

```

CM      MS      IOD      Net      PM      CCS      Lns      Trks      Ext      APPL
.       .       .       LOAD    PMLOAD    .       .       1G..    .       .

POST      CLASS    ML    OS  ALRM  SYSB  MANB  UNEQ  OFFL  CBSY  PBSY  INSV
0 Quit    TRUNKS   13    0    3    0    0    0    44    0    0   116
2 Post_   REMOTE    0    0    0    0    0    0    2    0    2   21
3         TIMING    0    0    0    0    0    0    0    0    0    2
4         HSCARR    2    0    0    0    0    0    16    0    0   75
5 Loop_   STS3L
6 Tst_    N  CLASS  SITE  SPM  RM  OC3S  STS3L  CKT  STATE  TR  MA
7 Bsy_    0  HSCARR  HOST   0  0    0    0    3  INSV   .. ..
8 RTS_    SIZE OF POSTED SET : 1
9 Offl_
10
11 Disp_
12 Next
13        POST:
14 Detail_
15 ListAlm_
16
17 Perfmon_
18 CarID_
   TERMA
Time 15:17 >carid 0

```

Table CARID example

This section shows an example of Table CARID when a technician enters the following:

```

>table carid
TABLE: CARID
>format pack<
line length>: 76 columns can be output per line.
<pack mode>: Pack mode is ON.
<indent column>: Indented lines will begin in column 1.
<first column>: The first column of output is column 1.
>list 6
CARRKEY CARRCHAR
-----
SPM 0 3 CARID TRUNK_GROUP_A_T1_FT_COLLINS
SPM 0 3 MISC1 DSX_LOCATION_3_JACK_4
SPM 0 3 MISC2 USWEST_TROUBLE_REPAIR_800_444_5555
SPM 0 3 MISC3 USWEST_FT_COLLINS_CO_555_6666
SPM 0 3 MISC4 FC_LOG_122_123
SPM 0 4 CARID TEST_SPM_0_4
>quit all

```

Then, if a technician enters the carid 0 command, the information in "MAP display example when entering carid 0" (page 65) displays on the MAP.

MAP display example when entering carid 0

CM	MS	IOD	Net	PM	CCS	Lns	Trks	Ext	APPL			
.	.	.	LOAD	PMLOAD	.	.	1G..	.	.			
POST		CLASS	ML	OS	ALRM	SYSB	MANB	UNEQ	OFFL	CBSY	PBSY	INSV
0 Quit		TRUNKS	13	0	3	0	0	0	44	0	0	116
2 Post_		REMOTE	0	0	0	0	0	0	2	0	2	21
3		TIMING	0	0	0	0	0	0	0	0	0	2
4		HSCARR	2	0	0	0	0	0	16	0	0	75
5 Loop_		STS3L										
6 Tst_		N CLASS	SITE	SPM	RM	OC3S	STS3L	CKT	STATE	TR	MA	
7 Bsy_		0 HSCARR	HOST	0	0	0	0	3	INSV	..	..	
8 RTS_		SIZE OF POSTED SET	:	1								
9 Offl_		carid 0										
10		CARID=	TRUNK_GROUP_A_T1_FT_COLLINS									
11 Disp_		MISC1=	DSX_LOCATION_3_JACK_4									
12 Next		MISC2=	USWEST_TROUBLE_REPAIR_800_444_5555									
13		MISC3=	USWEST_FT_COLLINS_CO_555_6666									
14 Detail_		MISC4=	FC_LOG_122_123									
15 ListAlm_												
16												
17 Perfmon_												
18 CarID_												
		TERMA										
Time	15:17	>										

Hardware requirements

CARID Enhancement for Spectrum Peripheral Module has no hardware requirements.

Limitations and restrictions

CARID Enhancement for Spectrum Peripheral Module has no additional limitations or restrictions than those associated with the Carrier System ID Log Enhancements feature. However, the SPM is now a supported peripheral. For more information, see "Limitations and restrictions" (page 443).

Interactions

CARID Enhancement for Spectrum Peripheral Module has no functionality interactions.

Datafill

CARID Enhancement for Spectrum Peripheral Module does not change how a technician datafills Table CARID. For more information, see ["Datafill" \(page 443\)](#).

Service Orders

CARID Enhancement for Spectrum Peripheral Module does not affect SERVORD.

Operational Measurements

CARID Enhancement for Spectrum Peripheral Module does not affect Operational Measurements.

Logs

With the CARID Enhancement for Spectrum Peripheral Module feature, the following logs have an extra line appended to the bottom of the log to display the carrier information if datafilled in Table CARID for the SPM and carrier:

- CARR300
- CARR310
- CARR500
- CARR511
- CARR512
- ISDN105
- ISDN110
- ISDN111
- ISDN112

For more information about logs, see the *Communication Server 2100 Commercial Systems Log Report Reference Manual* (555-4031-840).

User interface

CARID Enhancement for Spectrum Peripheral Module does not change the user interface.

Billing

CARID Enhancement for Spectrum Peripheral Module does not affect billing.

A00004391 - ACD Agent Expansion from 9,999 to 30,000 Agents

Description

This feature extends the provisional number of Automatic Call Distribution (ACD) agents on a single Meridian SL-100 switch from 9,999 to 30,000 agents.

This feature increases only the switch-wide maximum number of ACD agents, and not the number of ACD groups per switch or the number of ACD agents per group.

Usage-based Software Optionality Control (SOC) controls the activation of this feature. The level of SOC purchased determines the number of agents that can be provisioned (with a maximum number of 30,000 agents).

The value of Office Parameter Maximum Number of Automatic Call Distribution Agents Per Switch, (MAX_NUM_ACD_AGENTS_PER_SWITCH) which can be found in Table OFCOPT, determines the maximum number of ACD agents that can be provisioned in a DMS-100 or Meridian SL-100 switch. This number may currently be set in the range of 0 to 9999. This feature increases the range of this office parameter to 0 to 30000.

Other factors which contribute to the current maximum of 9,999 ACD agents per switch include the ACD agent position ID (POSID) and login ID (LOGINID). The POSID is defined by SERVORD when a new ACD agent is created, and LOGINIDs are defined in Tables ACDLOGIN and ACDENLOG.

The POSID and LOGINID are both four-digit values with a range of 0001 to 9999. Though neither POSID nor LOGINID is directly correlated to the number of agents in the switch, it would be impractical to have more than 9,999 agents if the POSID and LOGINID remain limited to four digits. Therefore, this feature increases the ranges of POSID and LOGINID from 0001-9999 to 0001-30000.

Hardware requirements

There are no additional hardware requirements for this feature.

Limitations and restrictions

The following limitations and restrictions apply to feature ACD Agent Expansion from 9,999 to 30,000 Agents.

- Once an ACD group is converted to a five-digit login, all of the agents in that group will be required to login using five digits. Pre-existing four-digit login IDs can be used by dialing a leading zero.
- Once an ACD group is converted to five-digit login, it cannot be converted back to four-digit login.

- Login IDs 00001 through 09999 can be used by any ACD agent in the switch. If the agent's group is using four-digit login (as defined in Table ACDGRP), the agent will dial the last four digits only. If the agent's group is using five-digit login, the agent must dial all five digits.
- Login IDs 10000 through 30000 can only be used by agents in groups which use five-digit login.
- Although five-digit login is optional per ACD group, it should be noted that five-digit login will be required as soon as the login IDs 00001 through 09999 are exhausted. At that point, the next agent added must use a five-digit login ID. This means that the entire group to which this agent belongs must be converted to five-digit login. The other agents in the group can continue to use their previous login IDs, but they must now include a leading zero when logging in.
- Individual ACD agents cannot be moved between two ACD groups which do not use the same number of login digits. Field IDSIZE in Table ACDGRP must match for an agent to be moved from group to group by any means.

Interactions

Load Management/Remote Load Management allows ACD agents to be moved from one ACD group to another. This activity restricts movement of agents between groups which do not use the same number of login digits. Field IDSIZE in Table ACDGRP must match or the agent movement will not be allowed.

Datafill

"[New or modified tables](#)" (page 68) shows the new, changed or modified tables.

New or modified tables

Table Name	New, Changed or Deleted	Table Control (New/Old/Unchanged)
ACDGRP	Changed	Unchanged
KSETLINE	Changed	Unchanged
KSETFEAT	Changed	Unchanged
IBNFEAT	Changed	Unchanged
ACDLOGIN	Changed	Unchanged
ACDENLOG	Changed	Unchanged

Table ACDGRP

ACD Group Info (Table ACDGRP), an existing table, defines ACD groups. A new field, IDSIZE, specifies the number of login digits to be used by all agents in the group. IDSIZE can be set to a value of 4 or 5 (with a default value of 4). When login IDs 00001 to 09999 are exhausted, the next agent must use a five-digit login ID. This means the agent's entire ACD group must be converted to five-digit login. When IDSIZE equals 4, all agents in the ACD group must log in using a four-digit login ID. Similarly, when IDSIZE equals 5, all agents in the ACD group must log in using a five-digit login ID. The following table lists new or changed fields for Table ACDGRP.

Table field descriptions for Table ACDGRP

Field	New or changed	Subfield or refinement	Entry	Explanation and action
IDSIZE	NEW	NONE	4 or 5	Size of the Login ID in number of digits

During a One Night Process (ONP) from a load that does not include this feature to one that does, IDSIZE will be defaulted to "4" for all ACDGRP tuples.

To convert on ACD group from a four-digit login to a five-digit login, field IDSIZE in Table ACDGRP must be changed to a 5. No other switch based changes are required. All agents in that ACD group must be notified to begin using the five-digit login. Existing agents can continue using their old four-digit login ID by adding a zero before at before the existing login number. For example, an agent using a login ID of 1234 would now use 01234.

New agents added to an ACD group already using a five-digit login ID, can use any available ID within the range of 00001 to 300000. Availability depends on existing datafill in Table ACDLOGIN and/or ACDENLOG.

"[Example tuples from Table ACDGRP](#)" (page 70) shows sample datafill for Table ACDGRP. In this example, group ACDTEST1 is using five-digit login IDs while the other two groups are using four-digit login IDs.

The following table lists new or changed fields for Table KSETLINE.

Table field descriptions for Table KSETLINE

Field	New or changed	Subfield or refinement	Entry	Explanation and action
POSID	CHANGED	NONE	Five-digit number between 00001 and 30000	ACD Position ID associated with the INCALLS key

Dump and restore impact The change to the field POSID results in an upgrade impact to Table KSETLINE. The reformat procedures prefix a digit 0 to all ACD Position IDs upgraded during ONP.

The following figure shows sample datafill for Table KSETLINE (note the five-digit POSIDs which are in bold type).

Example tuples from Table KSETLINE

KSETKEY FORMAT		DNRESULT	
KSFMTID		KSFMTARE	

HOST 05 0 00 06 1	ACD Y	7502338	
	CGA 2	0 909	
INCALLS	CGAACD3 1 Y	00332	
		(3WC)(MSB)(ACDNR)\$	
	MBS		
HOST 05 1 00 06 1	ACD Y	7502339	
	CGA 2	0 909	
INCALLS	CGAACD4 1 Y	00443	
		(MSB)(ACDNR)\$	
	MBS		
SRCM 04 0 01 01 1	ACD Y	7502331	
	CGA 2	0 909	
INCALLS	CGAACD1 1 Y	00112	
		(PRK)(MSB)(ACDNR)\$	
	MBS		

Table KSETFEAT

Key Set Feature Information (KSETFEAT) table is an existing table that defines SUPR feature data when assigned to a keyset feature key. This feature changes the field POSID, which is the ACD Position ID associated with the supervisor feature, from a four-digit to a five-digit number. Existing four-digit POSIDs are now padded with a leading 0 during ONP.

This feature makes field changes to KSETFEAT tuples that meet the following criteria:

- FEATURE = SUPR
- IDNUM = Y

The maximum value for POSID is now 30000.

The following table lists new or changed fields for Table KSETFEAT.

Table field descriptions for Table KSETFEAT

Field	New or changed	Subfield or refinement	Entry	Explanation and action
POSID	CHANGED	NONE	Five-digit number between 00001 and 30000	ACD Position ID associated with the SUPR key

The following figure shows sample datafill for Table KSETFEAT (note the five-digit POSIDs which are in bold type).

Example tuples from Table KSETFEAT

FEATKEY		FEATURE		KVAR	
HOST 00 0 19 02 1	SUPR	SUPR	ACDTEST2	1 Y	01111
HOST 00 1 08 01 1	SUPR	SUPR	ACDTEST2	1 Y	02222
HOST 01 0 00 14 1	SUPR	SUPR	CGAACD5	1 Y	05555
HOST 01 1 01 24 1	SUPR	SUPR	CGAACD2	1 Y	07777
HOST 05 1 00 06 1	SUPR	SUPR	CGAACD4	1 Y	04444

Dump and restore impact The change to the field POSID results in an upgrade impact to Table KSETFEAT. The reformat procedures prefix a digit 0 to all SUPR Position IDs upgraded during ONP.

Table IBNFEAT

The IBN Line Feature Information table (Table IBNFEAT) is an existing table that defines ACD and SUPR feature data when assigned to IBN sets. This feature changes the POSID field (the ACD position ID associated with the ACD or SUPR options on the set). The POSID field is changed from a four-digit to a five-digit number. Existing four-digit POSIDs are padded with a leading 0 during ONP. This change is made for IBNFEAT tuples that meet the following criteria:

- FEATURE = ACD or SUPR
- IDNUM = Y

The following table lists new or changed fields for Table IBNFEAT.

Table field descriptions for Table IBNFEAT

Field	New or changed	Subfield or refinement	Entry	Explanation and action
POSID	CHANGED	NONE	Five-digit number between 00001 and 30000	ACD Position ID associated with the ACD or SUPR option

"Example tuples from Table IBNFEAT" (page 73) shows sample datafill for Table IBNFEAT (note the five-digit POSIDs which are in bold type).

Example tuples from Table IBNFEAT

LEN DNNO	DF	FEATURE	DATA
HOST 01 1 02 00 0 (ACDNR)\$	ACD	ACD	CGAACD2 1 Y 00020
HOST 05 1 01 05 0 \$	ACD	ACD	ACDTEST1 1 Y 05115
HOST 05 1 01 05 0	SUPR	SUPR	ACDTEST1 1 Y 05225

Dump and restore impact The change to the field POSID results in an upgrade impact to Table IBNFEAT. The reformat procedures prefix a digit 0 to all ACD Position IDs upgraded during ONP.

Table ACDLOGIN

The ACD Login table (Table ACDLOGIN) is an existing table that maps ACD Login IDs to a corresponding password, if needed. This table also maps Customer groups to the corresponding ACD Login ID, if requested. This table is indexed by Login ID.

This table is expanded from supporting a maximum of 9,999 tuples to support up to 30,000 tuples. To accomplish this the LOGINID field is expanded from a four-digit to a five-digit value. The following table shows Table ACDLOGIN size.

Table ACDLOGIN size

Abbreviated table name	Minimum tuples	Maximum tuples	Memory
ACDLOGIN	0	30,000	Memory is allocated dynamically through the use of SEGSTOR in blocks of 512. Two words of protected store are needed per tuple.

The following table lists new or changed fields for Table ACDLOGIN.

Table field descriptions for Table ACDLOGIN

Field	New or changed	Subfield or refinement	Entry	Explanation and action
LOGINID	CHANGED	NONE	Five-digit number between 00001 and 30,000	The range of ACD Login ID is expanded to accommodate 30,000 Login IDs.

"[Example tuples from Table ACDLOGIN](#)" (page 74) shows sample datafill for Table ACDLOGIN (note the five-digit POSIDs which are in bold type).

Example tuples from Table ACDLOGIN

LOGINID CUSTGRP PSWD OPTIONS

```

00551 Y CGA N (VARWRAP 100) $
01001 N N $
01002 Y IBNTST Y 1234 $
01003 Y IBNTST Y 1234 (VARWRAP 60) (PAQ 1) $
02001 N N $
02002 Y COMKODAK Y 1234 $
02003 Y COMKODAK Y 1234 (VARWRAP 60) (PAQ 1) $
04120 Y CGA N (VARWRAP 100) $

```

Dump and restore impact The change to the field LOGINID results in an upgrade impact to Table ACDLOGIN. The reformat procedures prefix a digit 0 to all ACD Position IDs upgraded during ONP.

Table ACDENLOG

The ACD Enhanced Login table (Table ACDENLOG) is an existing table that allows multiple customer groups the full range of Login IDs for their ACD agents. This table is indexed by a two-part key, made up of the Partition Number (PARTNO) and Login ID (LOGINID). The table format is the same as table ACDLOGIN with one additional field, ACTIVATE.

Table ACDENLOG supports up to 1024 partitions. The maximum number of LOGINIDs per partition is expanded by this feature from 9,999 to 30,000. This expansion requires that the LOGINID field be expanded from a four-digit value to a five-digit value. Existing four-digit LOGINIDs are padded with a leading zero during ONP. The following table shows the tuple range for Table ACDENLOG.

Table ACDENLOG size

Abbreviated table name	Minimum tuples	Maximum tuples	Memory
ACDENLOG	0	30,000	Memory is allocated dynamically through the use of SEGSTOR in blocks of 512. Two words of protected store are needed per tuple.

The following table lists new or changed fields for Table ACDLENLOG.

Table field descriptions for Table ACDENLOG

Field	New or changed	Subfield or refinement	Entry	Explanation and action
LOGINID	CHANGED	NONE	Five-digit number between 00001 and 30000	The range of ACD Login ID is expanded to accommodate 30,000 Login IDs.

The following figure shows sample datafill for Table ACDENLOG (note the five-digit POSIDs which are in bold type).

Example tuples from Table ACDENLOG

```

PARTNO LOGINID ACTIVATE CUSTGRP PSWD OPTIONS
-----
121 00551 N Y CGA N (VARWRAP 100) $
121 01001 N N N $
124 00551 N Y IBNTST Y 1234 $
125 01003 N Y IBNTST Y 1234 (VARWRAP 60) (PAQ 1) $
131 02001 N N N $
133 02002 N Y COMKODAK Y 1234 $
205 02002 N Y COMKODAK Y 1234 (VARWRAP 60) (PAQ 1) $
212 04120 N Y CGA N (VARWRAP 100) $

```

Dump and restore impact The change to the field LOGINID results in an upgrade impact to Table ACDENLOG. The reformat procedures prefix a digit 0 to all ACD Position IDs upgraded during ONP.

Service Orders

No new Service Order commands, LCCs or options are introduced.

When the ACD option is added to a line using commands ADO, NEW, or NEWACD, or when ACD option data is changed, using the CHF command, POSID is one of the prompts offered by SERVORD. The valid input value for POSID is changed from a four-digit number between 0001 and 9999 to a five-digit value between 00001 and 30000.

Note: The POSID prompt is applicable to SERVORD commands ADO, NEW, NEWACD, and CHF only when they are used to manipulate the data associated with the ACD or SUPR line option.

The following figures show an example of adding the ACD option to an existing business set using the ADO command. When the system prompts for POSID, the user must now provide a five-digit value between 00001 and 30000, rather than a four-digit value, as previously.

Example of the ADO command in prompt mode

```

SO:
>ado
SONUMBER:  NOW  3 11 6 AM
>
DN_OR_LEN:
>6218000
OPTKEY:
>1
OPTION:
>acd
ACDGROUP:
>acctest1
ACDSGRP:
>0
IDNUM:
>y
POSID:
>00018
OPTKEY:
>$
COMMAND AS ENTERED:
ADO NOW 3 11 6 AM 6218000 ( 1 ACD ACDTEST1 0 Y 0009 ( ) ) $
ENTER Y TO CONFIRM,N TO REJECT OR E TO EDIT
>y

```

Example of the ADO command in non-prompt mode

```

SO:
>ado $ 6218000 1 acd acctest1 0 y 00018 $

```

The ADO, NEW, NEWACD, and CHF commands also offer the POSID prompt when used to manipulate ACD data. The effect of this change is identical to the preceding ADO examples. POSID must now be input as a five-digit value.

Valid inputs for system prompt POSID are shown in the following table.

Table ACDLOGIN size

Prompt	Valid input	Description	Areas affected by prompt
POSID	00001 to 30000	ACD agent position ID	Affects SERVORD commands ADO, NEW, NEWACD and CHF when used to manipulate ACD option data.

Office Parameters

The following table shows the new, changed or modified parameters.

New/modified office/subnet parameters

Parm Table	Parameter name	New, Changed, Deleted, or Relocated	Domain (CM or Subnet Management)
OFCOPT	MAX_NUMBER_ACD_AGENTS_PER_SWITCH	CHANGED	CM

Office parameter MAX_NUM_ACD_AGENTS_PER_SWITCH specifies the maximum number of ACD agent positions that the operating company can assign on the switching unit. The range of this parameter is increased from 9999 to a maximum value of 300000 (30,000 agents). A new value for this parameter can now only be assigned by changing the limit of the feature SOC.

There is no memory impact to this Office Parameter.

The following table shows range information for parameter MAX_NUMBER_ACD_AGENTS_PER_SWITCH.

Range information

Minimum	Maximum	Default
0	30000	0

Operational Measurements

ACD Agent Expansion from 9,999 to 30,000 Agents does not affect Operational Measurements.

Logs

ACD Agent Expansion from 9,999 to 30,000 Agents does not affect logs.

User interface

The following section describes the User Interface changes that result from the introduction of the ACD Agent Expansion from 9,999 to 30,000 Agents feature. ACDDEBUG and ACDSHOW are Command Interface (CI) tools that are changed by this feature.

Command: ACDDEBUG

The following table shows the type, target, and availability of the command ACDDEBUG.

Command ACDDEBUG

Command type	Command target	Command availability
NON-MENU	All	RES

ACDDEBUG is a CI tool that displays ACD data structures in both dynamic and static environments. The available commands are:

- QUERY - allows display of ACD data structures
- CPIDTOAGT - displays LEN and DN for entered line cpid or CLLI and member number for an entered trunk cpid
- QUIT - quits from ACDDEBUG environment

The QUERY command uses a four-digit Position ID as an index in order to display ACD agent data. This feature extends the command so that the data structures of an ACD agent with a five-digit position will be displayed.

The following table shows ACDDEBUG command parameters and variables.

ACDDEBUG parameters and variables

Command	Parameters and variables	Description
QUERY AGENTDATA	ALL	Displays all agent data on the switch.
	GROUP	Displays agent data in a particular ACDGROUP.
	POSID	Displays agent data for a particular Position ID. The value of Position ID must be five digits.

ACDDEBUG responses The following figure shows CI outputs with associated meanings and actions for Command ACDDEBUG.

CI outputs with associated meanings and actions

Wrong type: <ACD_posid?> {1 TO 30,000}

Enter: <ACD_posid?> [<Form?>]

Meaning: The user has input an invalid position ID.

System or user actions: Input a valid position ID from 1 to 30,000.

The following table includes usage examples for the ACDDEBUG query command

Usage examples for ACDDEBUG Query command

Description of task	Display the ACD agent data
Command	QUERY agentdata posid 12300
Map response:	<pre> ACD GROUP NUMBER 5 ("ACDTEST1") - - ACD AGENT DATA Protected Data - Index 22 Address 59443834 Incalls Cp_id: HOST 01 0 06 04 DN 6136212200 KEY 1 Agent Position ID: 12300 SCAI agent: NO Unprotected Data - Index 22 Address 4EC906E0 ECM_ASSOCIATED: N ECM_USER_DATA_PTR: FFFF0000 ECM_IDX_IN_AGT_LIST: -515 ECM_NETNODEID: 4261281277 Agent Login ID: 11300 Agent Login Partition NO.: 0 Status: ACDIDLE Not Ready Active: N </pre>

Command: ACDSHOW

The following table shows the type, target, and availability of the command ACDSHOW.

Command ACDSHOW

Command type	Command target	Command availability
NON-MENU	All	RES

ACDSHOW is a CI tool that displays specific information concerning a current ACD configuration such as the a list of agent positions in an ACD group and agent information for a given user login ID. The ACDSHOW commands previously used a four-digit position ID as an index in order to display information concerning an ACD configuration. This feature extends the command so that the information of an ACD agent with a five-digit position can now be displayed.

The following table shows available ACDSHOW commands.

Available ACDSHOW commands

ACDSHOW		
ACDDNS	HELP	QUIT
ACDSHOW	LOADMGMT	STATUS
ADMINGROUP	LOGINID	SUPERVISOR
AGTPOS	MODE	TABENTRY
AUDIOGROUP	NSAUDGRP	THRESHOLD
COUNTS	NSROUTE	THROUTE
GROUPINFO	OVFLROUTE	VALIDAUDIO
GROUPNAME	PASSWORD	VALIDROUTES
FIAUDGRP	FOAUDGRP	CLRROUTE
RENQTOUT	RENQRTE	RENQAUD

The following table shows command syntax for changed parameters for the ACDSHOW command.

ACDSHOW command parameters and variables

Command	Parameters and variables	Description
AGTPOS	ALL	Displays all agent data on the switch.
	GROUP	Displays agent data in a particular ACDGROUP.
	POSID	Displays agent data for a particular Position ID. The value of Position ID must be five digits.
	LEN	Displays agent data for a particular LEN.
	DN	Displays agent data for a particular DN.
	CLLI	Displays agent data for a particular CLLI.
LOGINID	ID	Displays agent data for a particular ID.

ACDSHOW responses The following figure shows CI outputs with associated meanings and actions.

CI outputs with associated meanings and actions

Wrong type: <ACD_posid?> {1 TO 30,000}

Enter: <ACD_posid?> [<Form?>]

Meaning: The user has input an invalid position ID.

System or user actions: Input a valid position ID from 1 to 30,000

The following table includes usage examples for the ACDSHOW AGTPOS command.

Usage examples for ACDSHOW AGTPOS command

Description of task	Show ACD information by ACD agent positionID
Command	AGTPOS POSID 12300
Map response	Agent: HOST 01 0 06 04 DN 6136212200 KEY 1 Agent Login ID: 11300 Status: IDLE Loginid Partition: 0

The following table includes usage examples for the ACDSHOW LOGINID command.

Usage examples for ACDSHOW LOGINID command

Description of task	Show ACD information by ACD agent positionID
Command	LOGINID 11300 brief ibntst
Map response	Agent Position ID: 12300 Agent Login ID: 11300 Status: IDLE Loginid_Partition: 000
Command	LOGINID 11300 brief ibntst
Map response:	Agent Position ID: 12300 Agent Login ID: 11300 Status: IDLE Loginid_Partition: 000 Agent: HOST 01 0 06 04 DN 6136212200 KEY 1 ACD Group: ACDTEST1 ACD Subgroup: 0 SCAI Agent: NO

Software Optionality Control (SOC)

This feature is controlled by a standard usage-based SOC. The usage limit defines the maximum number of ACD agents in the switch. The office parameter MAX_NUM_ACD_AGENTS_PER_SWITCH is automatically updated to match the SOC usage limit anytime the SOC usage limit is changed (increased or decreased).

The default usage limit is 0 ACD agents. During ONP from previous loads, the SOC usage limit is set to match the value of office parameter MAX_NUM_ACD_AGENTS_PER_SWITCH. Therefore, there is no impact to existing customers who do not purchase this SOC.

The other aspects of this feature (including the five-digit login optionality, ability to use login IDs between 10000 and 30000, and mandatory use of five-digit POSIDs) are not controlled in any way by the SOC.

The following table provides SOC information for feature ACD Agent Expansion from 9,999 to 30,000 agents

Software Optionality Control

Item	Description
SOC option name:	ACD00101
SOC option title:	ACD Agent Expansion
SOC option control type:	Usage
New SOC option?	Yes
SOC option order code	00037650
Option defined in DRU:	CCM layer
Affected products:	NA100, SL100

Billing

ACD Agent Expansion from 9,999 to 30,000 Agents does not affect billing.

Intelligent Call Management (ICM)

ICM is a product that connects a host computer to a Meridian SL-100. ICM defines a switch-to-computer message set and a computer to switch message set that enables services to a telephone subscriber. Call event messages are sent from the switch to the host computer.

Whereas call control messages, are sent from the host computer to the switch. Specific ICM call event messages or ICM call control message can contain a "position ID" parameter and/or "loginID" parameter. Currently, the "position ID" parameter and the "loginID" parameter in ICM messages handle only 4 four digits.

This feature enables the switch to send ICM call event messages to the host computer with a five-digit "position ID" parameter and/or a five-digit "loginID" parameter. This activity will also allow call control ICM messages sent from the host computer to the switch to have a five-digit "position ID" parameter or five-digit "loginID" parameter. Once the call control message is received on the switch, the five-digit "position ID" or five-digit "loginID" is checked for validity.

A00007250 - ACDMIS over TCP

Description

The Automatic Call Distribution Management Information System (ACDMIS) over Transmission Control Protocol (TCP) feature provides additional ACD messaging about ACD events that are occurring on the Meridian SL-100/Communication Server 2100 to a Downstream Processor (DSP).

The ACDMIS link is a messaging interface provided by the Meridian SL-100/Communication Server 2100 to the host Management Information System computer (or Downstream Processor). The information carried across the messaging link allows Automatic Call Distribution applications running on the Meridian SL-100/Communication Server 2100 to communicate with Management Information System applications running on the host computer. The two-way information flow allows the switch and the host computer to provide enhanced services to an Automatic Call Distribution customer (for example, a call center can receive average call holding times and Agent statistics to be able to better allocate resources).


Previous to this feature, ACDMIS connectivity between the Meridian SL-100/Communication Server 2100 and the Downstream Processor was implemented using an X.25 link through a Multi-Protocol Controller (MPC) card in the Input-Output Controller (IOC) module using the X.25 protocol. The ACDMIS over TCP feature enables the transport of ACDMIS messaging over TCP/IP to a Downstream Processor. The TCP/IP transport method is an additional option to the X.25 transport method. The transport mechanism used, either TCP/IP or MPC X.25, is transparent to any application using the ACDMIS link to communicate with the host computer.

The IP/TCP transport interfaces with the Ethernet network through one of the following:


- Ethernet Interface Unit (EIU)
- Ethernet port that resides on the Call Agent card of the Communication Server 2100

Meridian SL-100 configuration


The Meridian SL-100 implements the TCP/IP transport through an Ethernet Interface Unit located in the FiberLink Interface Shelf (FLIS). ["ACDMIS over TCP on the Meridian SL-100" \(page 86\)](#) shows a Meridian SL-100 example configuration of ACDMIS over TCP.

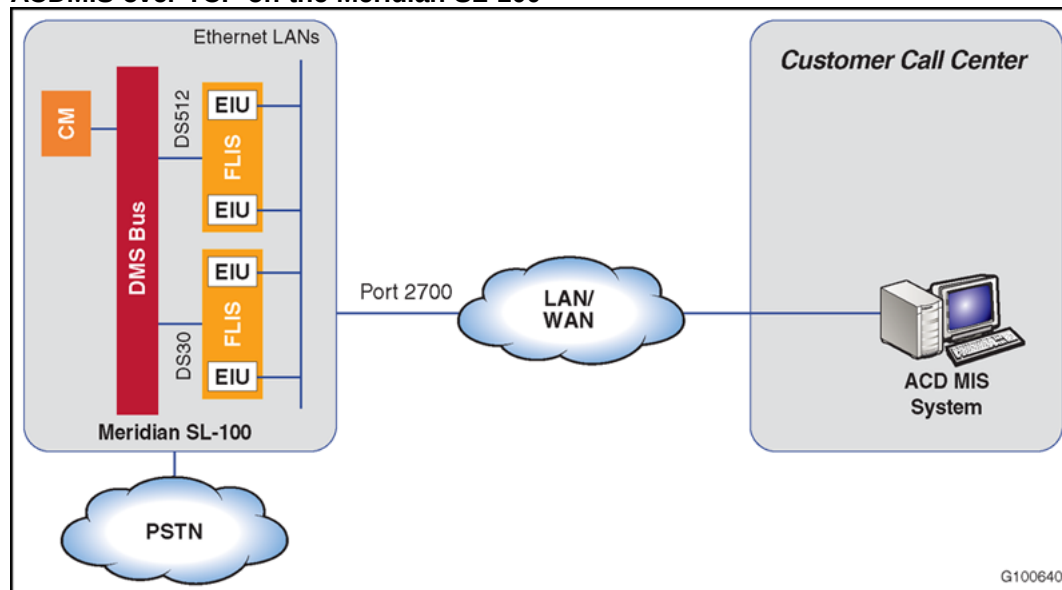ACDMIS over TCP on the Meridian SL-100**Communication Server 2100 configuration**

The Communication Server implements the TCP/IP transport through an Ethernet port on the Call Agent card. ["ACDMIS over TCP on the Communication Server 2100"](#) (page 86) shows a Communication Server 2100 example configuration of ACDMIS over TCP.

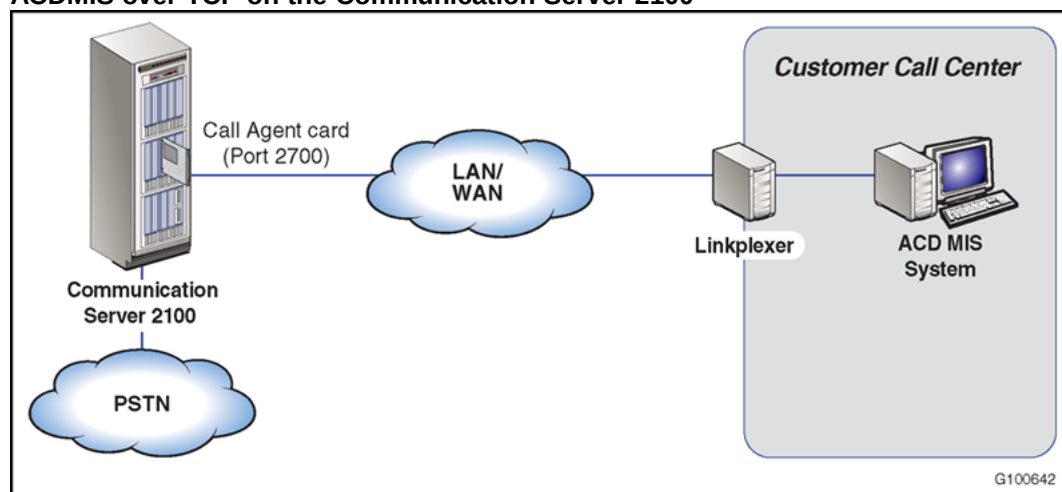ACDMIS over TCP on the Communication Server 2100**TCP/IP transport**

TCP and X.25 ACDMIS message components ["TCP/IP and X.25 ACDMIS message comparison"](#) (page 87) compares the TCP/IP and X.25 Automatic Call Distribution Management Information System message structures.

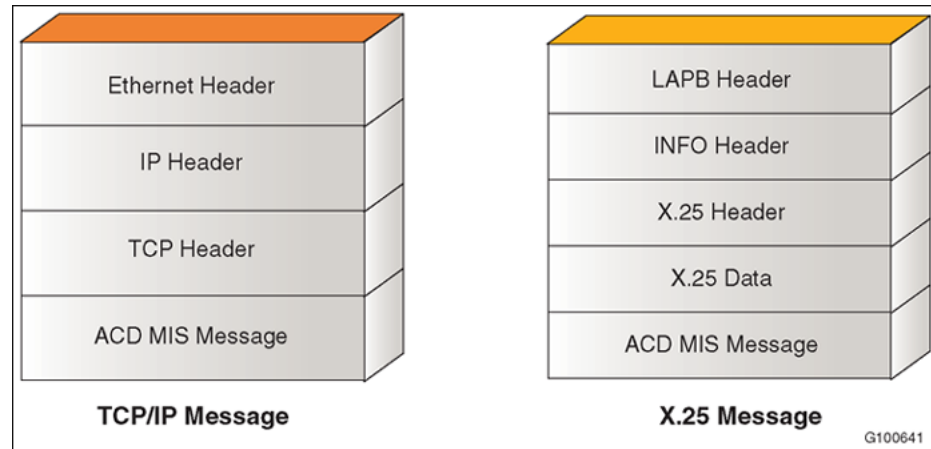TCP/IP and X25 ACDMIS message comparison

TCP connection checking The ACDMIS over TCP feature modifies the ACDMISPL table to include a LNKSEL type of either X.25 or TCP that is associated with each datafilled pool. The LNKSEL field for a TCP connection contains the following subfields:

- TCP designation
- remote ACD system's IP address
- an alternative ACD system IP address
- a user ID
- a login password

For more information about table control changes associated with Table ACDMISPL, see ["Datafill" \(page 90\)](#).

Prior to establishing a TCP connection, the switch crosschecks the incoming remote ACD system's IP address against those addresses that are datafilled in Table ACDMISPL. The incoming remote ACD system's IP address must match either the IP address or alternative IP address datafilled under the LNKSEL field for a given pool in Table ACDMISPL. The system allows only one ACDMIS link/session per datafilled pool.


If the incoming remote ACD system's IP address is verified, the events to establish a TCP connection proceed, otherwise the system will not allow the connection.

Establishing a TCP connection Establishing the base TCP connection is the function of the existing base TCP/IP layers which are not impacted by this feature. The following paragraphs are for informational purposes only and are not the result of the work being done by this feature.

To establish a connection, TCP uses a three-way handshake. The Meridian SL-100/Communication Server 2100 waits passively for the handshake that the remote host Downstream Processor application initiates.

The remote host application needs the IP address and port number of the Meridian SL-100/Communication Server 2100 in order to establish a connection. Initially, a SYN segment is sent by the host computer application requesting a connection to the Meridian SL-100/ Communication Server 2100. The Meridian SL-100/ Communication Server 2100 then sends an acknowledgement, along with the SYN segment to the ACDMIS subscriber to indicate that it is ready to establish a session. The subscriber's host computer then sends an acknowledgement. Once the Meridian SL-100/ Communication Server 2100 receives the acknowledgement, the connection is fully established as shown in "[Sequence of messages in a three-way handshake](#)" (page 88).

Sequence of messages in a three-way handshake

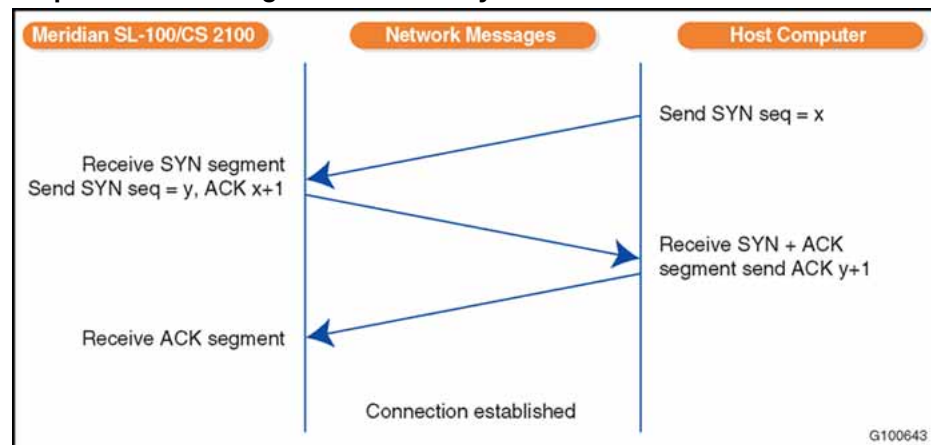


Establishing an ACDMIS session When establishing the ACDMIS session, the remote ACDMIS system must initiate a nosLogon message that it sends to the Meridian SL-100/Communication Server 2100. The nosLogon message contains the following arguments: Protocol version; Userid; Password; and Profile. The ACDMIS over TCP feature requires that the Userid and Password sent in the nosLogon message match the Userid and Password that has been datafilled in Table ACDMISPL for a given pool.

Other standard existing Downstream Processor Control messaging (that is, dspRequestInit, dspStartTransfer etc.) are used to establish and setup the ACDMIS session once the base TCP connection is made.

Terminating TCP connection Terminating the base TCP connection is a function of the existing base TCP/IP layers which are not impacted by this feature. The following paragraphs are for informational purposes only and are not the result of the work being done by this feature.

To close the TCP connection, the remote application sends the FIN segment as shown in "Sequence of messages in terminating TCP connection" (page 89). The Meridian SL-100/Communication Server 2100 acknowledges the FIN segment and then acknowledges that no more data is available. Once the remote host application closes the connection, TCP refuses to accept more data from the remote host application. The Meridian SL-100/Communication Server 2100 then sends a FIN segment. When both directions have been closed, the system deletes the connection.

Sequence of messages in terminating TCP connection

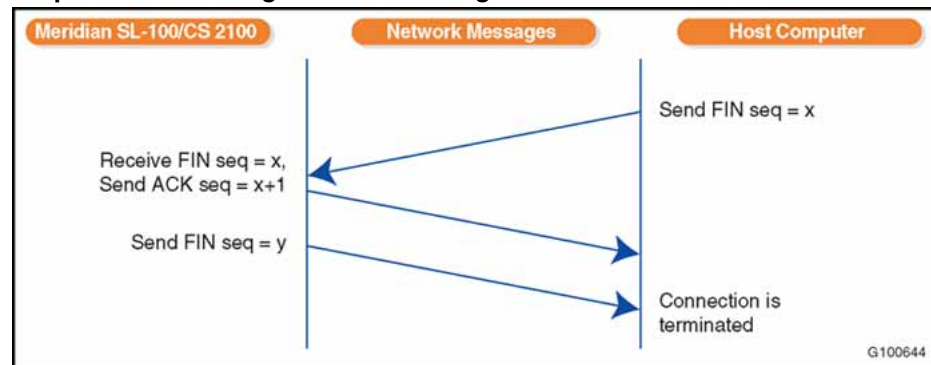

TCP connection reliability TCP connection reliability is a function of the existing base TCP/IP layers which are not impacted by this feature. The following paragraphs are for informational purposes only and are not the result of the work being done by this feature.

TCP has a "Keep Alive" option that consists of an out-of-band packet which the system sends during idle conditions. This is mainly used to detect connection failures. The default delay is 45 seconds, before the system sends the Keep Alive packet. The Keep Alive timer value is configurable between five and 60 seconds by the user application using the TLI mechanism. An acknowledgement must be received from the peer or TCP retransmits the Keep Alive packet three times with the delay equal to the maximum of the round-trip timeout or 10 seconds. If the peer does not respond, the system closes the connection.

Hardware requirements

The X.25 protocol is available on the Meridian SL-100 using the Multi-Protocol Controller (MPC 1x89AA/BA) card. The Multi-Protocol Controller is a downloadable input/output device that resides on a Meridian SL-100 I/O Controller (IOC) shelf. The Multi-Protocol Controller has two

programmable data communication links. The Multi-Protocol Controller provides real-time savings in the Computing Module (CM) by performing low-level data communications functions.

The TCP/IP transport uses the existing TLI interface to provide connectivity between the Meridian SL-100/Communication Server 2100 and a Downstream Processor. The Meridian SL-100 achieves Local Area Network (LAN) connectivity through an Ethernet Interface Unit or, in the case of a Communication Server 2100, the Call Agent card. The ACDMIS over TCP feature uses port 2700 for incoming and outgoing message traffic. Messages originating from the Downstream Processor are routed through the network and terminate on the Ethernet Interface Unit/Call Agent card which forwards the messages to the destination port (2700) on the switch. For some hardware configurations, internet routers can be used between the Meridian SL-100/Communication Server 2100 and the Downstream Processor.

Software requirements

The ACDMIS over TCP feature enhances existing ACDMIS software to handle the following items:

- TCP/IP transport
- Table control mechanism to support TCP/IP transport
- Operational Measurements and logs specific to TCP/IP transport

Limitations and restrictions

The ACDMIS over TCP feature has the following restrictions:

- The maximum number of TCP/IP connections to a single Meridian SL-100/Communication Server 2100 is 96.
- The number of ACDMIS TCP/IP links per single Meridian SL-100/Communication Server 2100 is limited to 60.

Interactions

The ACDMIS over TCP feature has no functionality interactions.

Datafill

Table ACDMISPL defines the relationship between the ACDMIS pool and the transport type, X.25 or TCP/IP. The ACDMIS over TCP feature introduces a new field, LNKSEL, to Table ACDMISPL. The LNKSEL field is datafillable with either X25 or TCP with the TCP designation having additional refinements. These refinements include an IP address that refers to the remote Downstream Processor, an alternative IP address for the remote Downstream Processor, a UserID and a Password. The LNKSEL

field serves the dual purpose of defining which remote IP addresses are allowed access to the Meridian SL-100/ Communication Server 2100, as well as defining the relationship between the pool and session link.

"ACDMISPL field descriptions" (page 91) describes the fields in Table ACDMISPL.

ACDMISPL field descriptions

Field	New or Changed	Subfield or Refinement	Entry	Description
POOL		N/A		ACD Pool Name.
PASSWORD		N/A		Pool Password.
PROTOCOL		N/A		ACD MIS Protocol Version.
OUTEVENT		N/A	10 to 200	Message Buffers.
BUNDLING		N/A	Y or N	Message Bundling.
LNKSEL	New	N/A	X25 or TCP	Indicates whether this pool will use X.25 or TCP transport.
X25	New	N/A	N/A	If X25 is selected, no additional refinements are needed as existing X.25 tables and datafill are used.
TCP	New	IP_ADDR	IP address	If TCP is selected, an additional refinement is required to indicate the remote system's IP address.
	New	ALT_IP_ADDR	IP address	Refinement to allow an alternative or "back up" IP address for the remote system.
	New	USER_ID	Alphanumeric ≥ 5 and ≤ 8 characters	Mandatory refinement which the system uses to verify the Userid field of the nosLogon message.
	New	LOGIN_PASSWORD	Alphanumeric ≥ 5 and ≤ 16 characters	Mandatory refinement which the system uses to verify the Password field of the nosLogon message.

Additional ACDMISPL - LNKSEL field information

The TCP refinement to the LNKSEL field allows datafilling of an alternative IP address (ALT_IP_ADDR) to be used as a back up. If there is no alternative IP address, the ALT_IP_ADDR subfield must be datafilled with

the same IP address used for the IP_ADDR subfield. Only one link is allowed per ACD pool; therefore, only one IP address per ACD pool is allowed to be active at any given time.

The TCP refinement to the LNKSEL field includes the mandatory refinements USER_ID and LOGIN_PASSWD that are used for login validation in conjunction with the nosLogon message that is sent by the Downstream Processor.

LNKSEL field datafill changes from X.25 to TCP/IP or TCP/IP to X.25 require that the ACDMIS link be brought down and can require datafill changes to X.25-related tables as needed.

Table ACDMISPL enhancement example

The following example shows the two transport methods available in Table ACDMISPL:

```
TABLE: ACDM
POOL PASS PROTOCOLOUTEVENTBUND LNKSEL
-----
POOL01 POOL01 BCS43 110 N X25
POOL02 POOL02 BCS43 110 N TCP 47 245 5 247 246 6 3USER2 PASS2
```

Table ACDMISPL datafill example for TCP transport

The following example shows TCP/IP transport defined in Table ACDMISPL:

```
POOL:
>ACDPOOL
PASSWORD:
>PASSWD1
PROTOCOL:
>BCS35
OUTEVENT: 200
>110
BUNDLING:
>N
LNKSEL:
>TCP
IP_ADDR:
>47 245 5 2
ALT_IP_ADDR:
>47 246 6 3
USER_ID:
>USER2
LOGIN_PASSWD:
>PASS2
TUPLE TO BE ADDED:
ACDPOOL PASSWD1 BCS35 110 N TCP 47 245 5 2 47 246 6 3 USER2
PASS2
ENTER Y TO CONFIRM, N TO REJECT OR E TO EDIT.
```


Table ACDMISPL datafill example for X.25 transport

The following example shows X.25 transport defined in Table ACDMISPL:

```
POOL:
>ACDPOOL
PASSWORD:
>PASSWD1
PROTOCOL:
>BCS35
OUTEVENT: 200
>110
BUNDLING:
>N
LNKSEL:
>X25
TUPLE TO BE ADDED:
ACDPOOL PASSWD1 BCS35 110 N X25
ENTER Y TO CONFIRM, N TO REJECT OR E TO EDIT.
```

Service Orders

The ACDMIS over TCP feature does not affect SERVORD.

Operational Measurements

The ACDMIS over TCP feature does not create any new Operational Measurements (OMs). However, the ACDMISPL OM Group is updated/pegged as necessary when using the TCP transport mechanism.

ACDMISPL OM Group

The ACDMISPL OM Group is not impacted by this feature. The following is provided for informational purposes only. The OM group ACDMISPL monitors the ACDMIS output message buffer and provides buffer usage and peg count registers for messages lost or transmitted. The following is a brief description of the ACDMISPL OM registers:

MISLOST - Pegs the number of valid Management Information System event messages that fail to enter the outgoing message buffer, because the buffer is full. The message is subsequently discarded, no retransmission is attempted and further buffering is offered.

MISQUSAG - Records the number of messages waiting to be retransmitted in the outgoing message buffer every 100 seconds. Under normal traffic conditions, MISQUSAG should be zero, since all messages are dispatched as soon as they enter the outgoing message buffer.

MISTRANS - Pegs the number of valid outgoing messages that are transferred successfully to the Management Information System Downstream Processor. The register counts each call event, return_result or initialization message the system transmits.

Logs

The ACDMIS over TCP feature does not affect logs. Existing ACDMIS logs are used for this feature.

User interface

The ACDMIS over TCP feature does not change the user interface.

Billing

The ACDMIS over TCP feature does not affect billing.

A00009120 – Multiple time zone (MTZ) enhancements**Description**

The Multiple time zone (MTZ) enhancements feature extends the functions of the framework for multiple time zones and Daylight Savings Time (DST) to the following

- Time of Day (TOD) routing
- Selected Malicious Call Trace (MCT) logs

Line features and logs are currently based on the switch or call-server time. The MTZ enhancements feature obtains offsets from the switch time and calculates the local time for TOD routing and select MCT logs.

Time of Day routing

When MTZ exists, TOD routing can route a call based on the TOD even if MTZ and DST are present.

When TOD routing occurs, a time is scheduled to route the call. The MTZ enhancements feature checks if MTZ exists. If MTZ exists, the time given by the user on the individual line is converted from the user's time zone to the CM clock time. Then the call is scheduled to route based on the converted time. If MTZ does not exist, the previously existing TOD routing behavior is used.

The TOD system is based on the datafill of five tables. See ["Datafill" \(page 95\)](#) for more information.

Selected Malicious Call Trace (MCT) logs

The MTZ enhancements feature modifies four logs. See ["Logs" \(page 97\)](#) for more information.

Hardware requirements

The MTZ enhancements feature requires no additional hardware.

Limitations and restrictions

The MTZ enhancements feature has the following limitations and restrictions:

- MTZ enhancements are not supported if the MTZ option is not on the subscriber's line
- The feature is supported only on IBN/RES and M5216 KSET sets.
- MTZ is supported only by the LINE125, LINE126, MCT103, and MCT105 logs.
- The new field Local Time is present in all LINE125, LINE126, MCT103, and MCT105 logs irrespective of whether the subscriber is in a different time zone than the call server. In these cases, the local time is the same as the switch time.

The limitations and restrictions of the framework for MTZ and DST also apply. This means that the information in table MULTITZ, including time offsets and start and end points for DST, must be entered manually each year.

Interactions

The MTZ enhancements feature interacts with the existing MTZ features and the MTZ support for CICM lines feature.

Datafill

The TOD system is based on the datafill of the DAYTYPES, TODHEAD, DAYOWEEK, DAYOYEAR, and TIMEODAY tables. ["Tables used for Time of Day system" \(page 95\)](#) describes these tables.

Tables used for Time of Day system

Table name	New or Changed
DAYTYPES	This table defines the DAYTYPES (such as weekday, weekend, midweek) used by the other tables.
TODHEAD	This table defines the name (TODNAME) and the DAYTYPE for the TOD system entry.
DAYOWEEK	This table is used to map the day of the week into a DAYTYPE.
DAYOYEAR	This table is used to map the specified day of year into the DAYTYPE. This table overrides the entry in DAYOWEEK based on the TODNAME.
TIMEOYEAR	The first four tables exist only to allow access to the TIMEODAY table. This table defines the actual result for the time, DAYTYPE, and TODNAME.

To achieve TOD routing, the user must datafill one of the routing tables; IBNRT(X), OFR(X), RTEREF of HNPACONT, or FNPACONT. "[Datafill for routing tables](#)" (page 96) describes the datafill for these routing tables.

Datafill for routing tables

Table fields	Definitions	Datafill
RTE	Route Ref Index	{0-1023}
IBNRTESEL/RTESEL	Route Selector	CND (Conditional Route)
CNDSEL	Conditional Selector	TOD (Time of Day)
TODNAME	TOD Name Datafilled in the TODHEAD table	TOD name
TIMES	ibn_time_range (results of TOD system will be resolved into this type)	{0-15}
RTETYPE	CND_RTE_TYPE	{ST,T,SK}
{RTEREF, TABNAME-index,, SKIPNUM}	Route Ref Index Routing Table Name Number of Routes to skip	{0-1023} {Routing tables} {0-7}
INDEX	Route ref index	{0-1023}

An example of TOD route datafill is as follows:

Example of TOD route datafill

```

Table IBNRTE/OFRT

RTE: 1005

IBNRTESEL: CND

CNDSEL: TOD

TODNAME: CGATOD
TIMES: 1

RTETYPE: T

TABNAME: OFRT

INDEX: 100

>list
RTE                                RTELIST

                                OPTIONS
-----
1005      ( CND   TOD CGATOD      2 T   OFRT 100)$$

```

Service Orders

The MTZ enhancements feature does not affect SERVORD.

Operational Measurements

The MTZ enhancements feature does not affect operational measurements.

Logs

The MTZ enhancements feature modifies the following logs:

- LINE125
- LINE126
- MCT103
- MCT105

A new field, LOCAL TIME, is added to each of the modified logs. LOCAL TIME displays the local time for the subscriber line, which is based on the switch time modified by the value in table MULTITM if assigned to that line.

This feature does not affect when or where the logs are output.

Note: Table MULTITM contains information regarding the time difference based on the time zone and DST data.

The log report format for LINE125 is:

```
LINE125 mmmdd hh:mm:ss ssdd INFO
TRACE_ON_MALICIOUS_CALL_INI...
len DN dn INCOMING TRUNK = CKT trkid
CALLID = callid
CALLING NUMBER = dn
SOURCE = source
LOCAL TIME = <Time>
```

An example of log report LINE125 is as follows:

```
LINE125 APR01 12:00:00 2112 INFO
TRACE_ON_MALICIOUS_CALL_INITIATED
HOST 00 0 19 20 DN 2557811999
INCOMING TRUNK = CKT ICCAMA 15
CALLID = 123456
CALLING NUMBER = 2149975015
SOURCE = CALLING NUMBER
LOCAL TIME = 10:00:00
```

The format for log report LINE126 is:

```
LINE126 mmmdd hh:mm:ss ssdd INFO
TRACE_ON_MALICIOUS_CALL_ INITIATED
len DN dn
CALLING LINE = LEN len DN dn onitxt
CALLID = callid
LOCAL TIME = <Time>
```

An example of log report LINE126 is as follows:

```
LINE126 APR01 12:00:00 2112 INFO
TRACE_ON_MALICIOUS_CALL_INITIATED
HOST 00 0 19 20 DN 2557811999
CALLING LINE = LEN HOST 05 1 15 16 DN 7812001
CALLID = 123456
LOCAL TIME = 10:00:00
```

The log report format for MCT103 is:

```
MCT103 mmmdd hh:mm:ss ssdd INFO
TRACE_ONMALICIOUS_CALL_ACTIVATED
CALLING_PARTY : <cli> <originating agent>
CALLED_PARTY : <full number><terminating agent>
```

```
CALLING_PARTY_CATEGORY : <cpc>
LOCAL TIME = <Time>
```

An example of log report MCT103 is as follows:

```
MCT103 APR01 12:00:00 2112 INFO
TRACE_ON_MALICIOUS_CALL_ACTIVATED
CALLING_PARTY : CKT ICATUPTRUNK 1
CALLED_PARTY : 2762345 LEN HOST 00 0 01 10
CALLING_PARTY_CATEGORY : 16
LOCAL TIME = 10:00:00
```

The log report format for MCT105 is:

```
MCT105 mmmdd hh:mm:ss ssdd INFO
TRACE_ONMALICIOUS_CALL_ACTIVATED
CALLING_PARTY : <fully number> CKT <originating agent>
CALLED_PARTY : <fully number> CKT <terminating agent>
LOCAL TIME = <Time>
```

An example of log report MCT105 follows:

```
MCT105 APR01 12:00:00 2112 INFO
TRACE_ON_MALICIOUS_CALL_ACTIVATED
CALLING_PARTY : 9717718745 CKT ICATUPTRUNK 1
CALLED_PARTY : 2762345 CKT ICATUPTRUNK 12
LOCAL TIME = 10:00:00
```

User interface

The MTZ enhancements feature does not change the user interface.

Billing

The MTZ enhancements feature does not affect billing.

ADxxxx features

AD0068 - DLM Takeover

Description

A Digital Line Module (DLM) is composed of two processors that normally share the call processing load. This software feature allows DLM units to operate independently of each other (with both in-service) and to manage both units' lines when only one of the units is in-service.

Note: The DLM is manufacture discontinued (MDed) in software release MSL09. It is replaced with the Intelligent Peripheral Equipment (IPE). Manufacture discontinue means a product is no longer manufactured or sold, but it is supported.

Hardware requirements

This feature requires that a DLM be connected between the Meridian Integrated Voice and Data (IVD) sets and the line group controller/line trunk controller (LGC/LTC). The 1W2 or better release of parallel-serial time switch (PSTS) hardware is also required (including the NT8X49 processor board and NT8X46 connection memory board). The DLM has two working units with a minimum of two DS-30 links to the host LGC (one link for each unit). At least one IVD Port Card connects to each unit with IVD sets attached.

Due to the increased size of the LGC code needed to handle the DLM/IVD sets the following upgrades must occur:

- XPM Memory Cards
- Universal Processor Card (NTMX77AA)

Limitations and restrictions

This feature requires the 1W2 or better PSTS firmware release.

Interactions

The following list shows the interactions between DLM Takeover and other functions.

- AD0069 - DLM Maintenance Enhancements
- AD0070 - IVD Facility Maintenance Enhancements

- BC1523 - IVD Maintenance
- BC1524 - IVD Call Processing
- BC1525 - IVD Table Control
- BC1534 - IVD Maintenance Introduction
- BC1535 - MADO Profile
- BC1536 - IVD Call Processing Audits
- BC1537 - IVD Data Call Processing
- BC1548 - IVD CP Features
- BC1558 - Digital Set Diagnostics
- BF0625 - IVD LTC Requirements
- BF0632 - MADO T-Link F/W
- BF0818 - CADO KBD
- BF0828 - DLM-PSTS Firmware

Datafill

DLM Takeover does not affect data schema tables or office parameters.

Service Orders

DLM Takeover does not affect SERVORD.

Operational Measurements

DLM Takeover does not affect Operational Measurements.

Logs

DLM Takeover does not affect logs.

User interface

DLM Takeover does not change the user interface.

Billing

DLM Takeover does not affect billing.

AD0069 - DLM Maintenance Enhancements

Description

The Digital Line Module (DLM) is a peripheral that handles Meridian Integrated Voice and Data (IVD) telephones on the Meridian SL-100 switch. This software feature consists of four aspects related to the DLM:

- Logs generated by the Meridian SL-100 switch that refer to DLMS

- Operational Measurements kept by the Meridian SL-100 switch affected by DLMs
- PM DLM level of the MAP workstation including the display, the command syntax, and the command functionality
- Meridian Asynchronous Data Option (MADO), which is downloaded during a Return To Service (RTS) sequence

Note: The DLM and the MADO are manufacture discontinued (MDed) in software release MSL09. Manufacture discontinued means that a product is no longer manufactured or sold, but it is supported. The Intelligent Peripheral Equipment (IPE) replaces the DLM.

Hardware requirements

DLM Maintenance Enhancements has no hardware requirements.

Limitations and restrictions

DLM Maintenance Enhancements has no limitations or restrictions.

Interactions

When a MADO is datafilled in the table DPROFILE, and is brought to an InSv state for the first time, the Central Control (CC) sends a copy of the MADO profile to the Parallel Space Time Switch (PSTS) in the DLM. In turn, the PSTS sends the profile to the MADO. Copies of the profiles are kept by the PSTS as a backup to the copy sent to the MADO itself. If the DLM loses power, however, the copy of the profile in the PSTS is lost. Therefore, when the DLM is returned to service, the PSTS does not have the profile it had before the DLM stopped functioning.

Datafill

DLM Maintenance Enhancements does not affect data schema tables or office parameters.

Service Orders

DLM Maintenance Enhancements does not affect SERVORD.

Operational Measurements

DLM Maintenance Enhancements does not affect Operational Measurements.

Logs

DLM Maintenance Enhancements does not affect logs.

User interface

DLM Maintenance Enhancements does not change the user interface.

Billing

DLM Maintenance Enhancements does not affect billing.

AD0070 - IVD Facility Maintenance Enhancements**Description**

This feature provides maintenance to the facility side of the Meridian Integrated Voice and Data (IVD) product such as:

- Integrated Voice and Data Port Card (IVDPC)
- Subscriber loop
- Meridian 2000 series set
- Meridian Asynchronous Data Option (MADO)

Note: The MADO is manufacture discontinued (MDed) in software release MSL07. Manufacture discontinued means a product is no longer manufactured or sold, but it is supported.

Facility maintenance commands include:

- short and extended diagnostics
- Meridian asynchronous data option test
- Station ringer test
- Automatic line tests
- MAP commands include:
 - POST
 - BUSY
 - RTS
 - CKTLOC
 - HOLD
 - NEXTP
 - NEXTH
 - CKTTST

This feature provides the following commands:

- TSTRING
- TONEGEN
- RLSCON
- EQUIP

- CONNECT
- SUSTATE
- LOOPBACK
- BERT
- BERTTIME
- TSTRING
- LTPMAN

Hardware requirements

To configure Meridian 2000 series terminals on the Meridian SL-100, use the Digital Line Module (DLM) or the Intelligent Peripheral Equipment (IPE). In addition, a Parallel-Serial Time Switch (PSTS) card must be present. The Meridian 2000 series sets are then connected to the Integrated Voice/Data Line Cards (IVDLC), with a maximum of 16 voice sets per card (each equipped with an optional data adapter).

Note: The DLM is manufacture discontinued (MDed) in software release MSL09. Manufacture discontinued means a product is no longer manufactured or sold, but it is supported. The IPE replaces the DLM.

Limitations and restrictions

IVD Facility Maintenance Enhancements has no limitations or restrictions.

Interactions

IVD Facility Maintenance Enhancements has no functionality interactions.

Datafill

IVD Facility Maintenance Enhancements does not affect data schema tables or office parameters.

Service Orders

IVD Facility Maintenance Enhancements does not affect SERVORD.

Operational Measurements

IVD Facility Maintenance Enhancements does not affect Operational Measurements.

Logs

IVD Facility Maintenance Enhancements does not affect logs.

User interface

IVD Facility Maintenance Enhancements does not change the user interface.

Billing

IVD Facility Maintenance Enhancements does not affect billing.

AD0251 - MADO User Self Test**Description**

This software provides the means for activating the Meridian Asynchronous Data Option (MADO) Self Test on an Integrated Voice and Data (IVD) MADO card from the voice line of the set being tested.

The MADO Self Test runs a series of tests in the MADO firmware. These tests include a RAM & ROM Test, a Sanity Test and various loopback tests to the Universal Asynchronous Receiver Transmitter (UART) and X12 chips. Unlike other data product offerings, the MADO option is completely enclosed within the set, and does not have visible features such as power or test indicator lamps for function status.

This feature permits:

- A service representative to test the MADO option at installation time, even when there is no terminal present.
- A user to test the MADO option when problems arise with keyboard functionality.

Hardware requirements

The following items are necessary for MADO operation on an Meridian SL-100:

- A Meridian M2000 series set (in which the MADO resides)
- A Digital Line Module (DLM-NT8X45) is connected between the Meridian IVD sets, the Line Group Controller (LGC) and the Line Trunk Controller (LTC). Parallel Serial Time Switch (PSTS) hardware is also required including the NT8X49 processor board and the NT8X46 connection memory board.
- At least one IVD Port Card (IVDPC-NT8X47) is connected to the DLM unit with IVD sets attached
- LGC/LTC is upgraded with a NT6X47 MP Memory Card, a NT6X46AB SP Memory Card and two (2) NT6X45AC Processor Cards

Limitations and restrictions

The following restrictions apply:

- No originations or terminations are allowed on either the voice line of the test or the data line of the set while the test is in progress.
- The test is initiated from the voice line, not the data line.

- The test not be initiated from a voice line that currently has another feature running. For example, adding the self test as the second leg of a three-way call is not permitted.
- The test can be terminated, while in process, by depressing the HOLD key. Both lines are automatically released.
- The test must be accessed from a Meridian set with the MADO option.

Interactions

The MADO Self Test needs the following features to function properly:

- BC1523 - IVD Maintenance (Maintenance and diagnostics)
- BC1524 - IVD Call Processing
- BC1537 - IVD Data Call Processing
- BC1548 - IVD CP Features
- BF0625 - IVD LTG Requirements
- BF0625 - IVD LTG Requirements
- BF0817 - Meridian LGC Maintenance

Features that can be initiated from the other valid DN's of the set are permitted during the test. The set is also allowed feature interaction such as ring-again recall and call waiting. New calls are received on the other DN. No other feature is started from the voice or data line used in the test while a test is in process.

Datafill

The following changes are necessary to implement the MADO User Self Test feature. The feature is activated using a customer datafillable access code that requires that the feature to be visible in the table control man-machine interface.

IBNXLA

Field Name	Status	Range of Values	Semantic of Field
FEATURE	changed	MADO	For MADO Self Test feature

Service Orders

MADO User Self Test does not affect SERVORD.

Operational Measurements

MADO User Self Test does not affect Operational Measurements.

Logs

MADO User Self Test does not affect logs.

User interface

MADO User Self Test does not change the user interface.

Billing

MADO User Self Test does not affect billing.

AD0303 - IVD Maintenance with Relay Port Card

Description

The initial release of the 8X47 Digital Port Card provided no relays or looparound capability. The facility maintenance diagnostics in BCS21 was unable to distinguish between port card faults, facility faults, and set faults.

This software feature provides the enhanced DPC (8X47BA), when used in conjunction with the 8X55 Digital Port Maintenance Card (DPMC) distinguishes between the fault types.

The specific faults that can be detected are:

- Short Circuit
- Open Circuit
- Excessive Voltage on Loop
- DPC Power Source Defective

Self tests on the DPMC and tests performed during activation of a DPC loopback detect the following faults:

- DPMC not present
- DPMC inaccessible
- Failure of DPMC circuitry (control logic, relay drivers, facility sensors, 30V sensor, 10V sensors, 30V DPMC power source, DSIC)
- Excessive Voltage through DPMC

The DPMC provides relay drivers (to drive the relays on the enhanced DPCs), voltage and current sensors and two DSICs for set emulation. The relays are operated to provide access to the DPMC from a given line on an enhanced DPC. The sensors are used to measure the voltage and current on the subscriber loop, thus detecting short circuits, open circuits, and foreign voltages.

The two DSICs are used to perform looparound tests to verify the operation of the given DLIC port on the enhanced DPC. The DPMC also provides the capability to test its sensors, DSIC emulation circuits, and measurement circuitry against the onboard power supply and a simulated short circuit.

Only one DPMC per DLM is allowed. Each DPMC can diagnose one port at a time. Therefore, it is possible that a diagnostic may fail with the result "DPMC in use by another line on the DLM" when another diagnostic for some other line on the same DLM is currently using the DPMC. The system instructs you to perform the test again.

Hardware requirements

To configure Meridian 2000 and 3000 series sets on an Meridian SL-100, the line module must be a Digital Line Module (DLM-7X49). In addition to the 6X51 and 6X52 processor and Digroup Control Cards, the DLM includes the 8X46 Parallel-Serial Time Switch and the 8X49 Digital Set Interface Processor. The Meridian 2000 and 3000 series sets can then be connected to (Enhanced) Digital Port Cards (DPCs 8X47BA), with a maximum of 16 voice sets per card (each of which optionally can be equipped with a Meridian Asynchronous Data Option).

In order to use the 8X55 Digital Maintenance Card (DPMC), the BA release of the DPC (8X47BA) must be used.

Limitations and restrictions

Only one DPMC can be installed on a given DLM and only one line on the DLM can use the DPMC at any given time.

Interactions

The following features are needed for this software to function properly:

- BC1523 - IVD Maintenance
- BC1524 - IVD Call Processing
- BC1525 - IVD Table Control
- BC1536 - IVD Call Processing Audits
- BC1537 - IVD Data Call Processing
- BC1548 - IVD CP Features
- BF0625 - IVD LTG Requirements
- BF0632 - MADA T-Link F/W
- BF0817 - Meridian LGC Maintenance
- BF0818 - MADA KBD
- BV1309 - DU Profile Downloading

Datafill

IVD Maintenance with Relay Port Card does not affect data schema tables or office parameters.

Service Orders

IVD Maintenance with Relay Port Card does not affect SERVORD.

Operational Measurements

IVD Maintenance with Relay Port Card does not affect Operational Measurements.

Logs

IVD Maintenance with Relay Port Card does not affect logs.

User interface

IVD Maintenance with Relay Port Card does not change the user interface.

Billing


IVD Maintenance with Relay Port Card does not affect billing.

AD0304 - Remote DLM Software

Description

This feature allows software for the Line Concentrating Module (LCM) processor card in the Digital Line Module (DLM) to support the features and functions of a Remote DLM (RDLM). The RDLM provides Integrated Voice/Data (IVD) service up to 150 miles (241.3 km) from the switching network.

An RDLM supports all call processing and maintenance features supported by a host-located DLM. This support includes all call interaction and diagnostics. "[RDLM DMS interface](#)" ([page 111](#)) illustrates the RDLM Digital Multiplex System (DMS) interface.

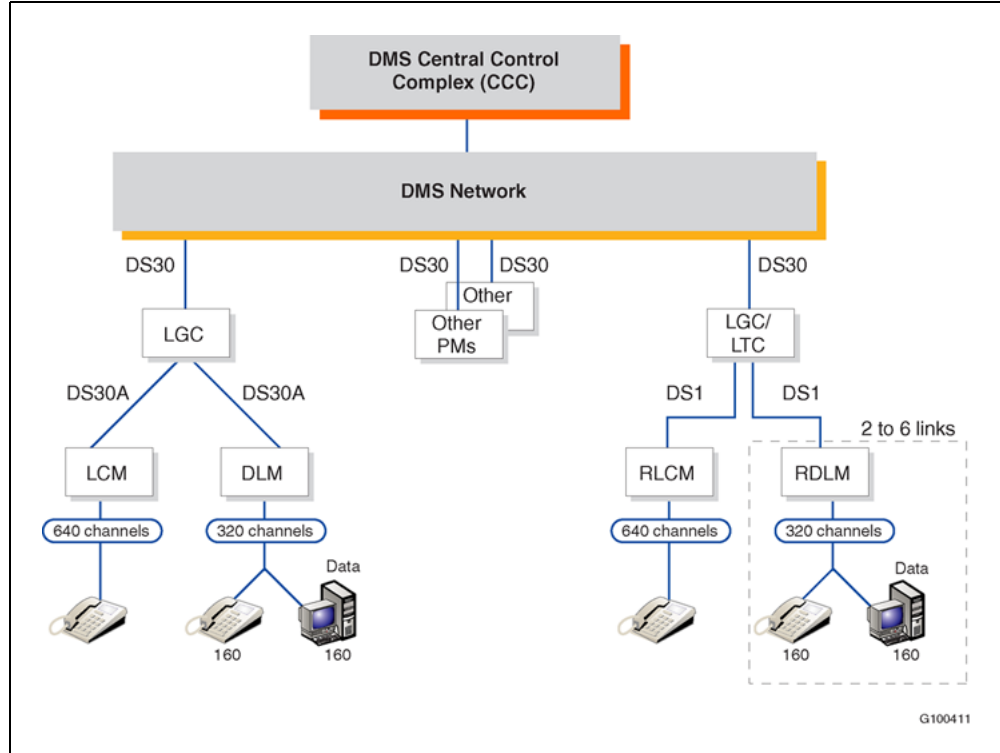RDLM DMS interface

This feature only provides support for the DS-1 interface cards and the Link Control Cards within the Remote Interface and Maintenance (RIM) module.

Hardware requirements

This feature requires a physical RDLM.

Limitations and restrictions

This feature is only available when used with a properly equipped physical remote DLM.

Interactions

This feature interacts with feature AD0305, PM Maintenance for Remote DLMs.

Datafill

Remote DLM Software does not affect data schema tables or office parameters.

Service Orders

Remote DLM Software does not affect SERVORD.

Operational Measurements

Remote DLM Software does not affect Operational Measurements.

Logs

Remote DLM Software does not affect logs.

User interface

Remote DLM Software does not change the user interface.

Billing

Remote DLM Software does not affect billing.

AD0305 - PM for Remote DLM/DLM Maintenance Card

Description

This feature provides the Peripheral Module Maintenance code for Remote Digital Line Modules (RDLMs). The Digital Line Module (DLM) is a peripheral created to handle the Meridian Integrated Voice and Data (IVD) telephones on the Meridian SL-100. A remote DLM performs the same functions as a DLM at distances from 50 feet (15.2 m) to 150 miles (241.3 km) away from the host.

The connection between the RDLM and the Line Trunk Controller (LTC) or the Line Group Controller (LGC) at the host is made through two to six DS1 links. The connection can also be made to an Remote Switching Center (RSC), which is an LTC/LGC-like peripheral placed in a remote location.

The following areas are affected by the implementation of this feature:

- Table control - Must be able to datafill an RDLM in table DLMINV.
- Card lists - The names and positions of the cards on the RDLM must be displayed given a fault.
- Logs - The site of the RDLM is displayed along with the frame and bay, when an RDLM is referenced in a log. No new logs are added.
- MMI - The site of the RDLM is displayed when an RDLM is posted.
- Tests - New tests are added for performing diagnostics on the host interface equipment (DS1 Cards and Link Control Cards).

Hardware requirements

PM for Remote DLM/DLM Maintenance Card has no hardware requirements.

Limitations and restrictions

PM for Remote DLM/DLM Maintenance Card has no limitations or restrictions.

Interactions

This feature is an enhancement of the PM maintenance software supporting host DLMS. It does not affect anything that already exists; the enhancements are only used if an RDLM is present on the Meridian SL-100.

Datafill

There are three new fields added to the DLMINV table. These fields indicate:

- The DS1 links assigned to the RDLM
- If the RDLM supports the intraswitched calls
- If the RDLM is equipped for emergency stand alone

Service Orders

PM for Remote DLM/DLM Maintenance Card does not affect SERVORD.

Operational Measurements

PM for Remote DLM/DLM Maintenance Card does not affect Operational Measurements.

Logs

PM for Remote DLM/DLM Maintenance Card does not affect logs.

User interface

PM for Remote DLM/DLM Maintenance Card does not change the user interface.

Billing

PM for Remote DLM/DLM Maintenance Card does not affect billing.

AD0307 - M3000 Table Control**Description**

This feature provides table control and the data structure necessary to support the Meridian M3000 set and the Meridian 2317 set on the Meridian SL-100.

The features available to the Meridian 3000 are consistent with the Meridian 2000 series with the following exceptions:

- The M3000 set has six-port conference available, rather than the Three Way Calling (3WC) feature.
- Malicious Call Hold (MCH) is not available in the softkeys of the M3000 set, but is assignable as a code access feature.
- Automatic Dialing (AUD) is not available in the softkeys of the M3000 set, rather the direction of the M3000 set takes the place of the AUD feature.

Meridian M3000 series

The Meridian 3000 digital telephone set, also called the Integrated Voice and Data (IVD) set, provides a standard feature handset, a speaker for voice and tone alerting, and a touch sensitive screen with no hard keys. The Meridian 3000 series offers the user simultaneous voice and data capabilities.

Support of the M3000 set does not require any new customer tables. The set joins the Meridian list in the tables IVDINV, KSETLINE, and KSETFEAT. Table IVDINV is used for configuration information for the new M3000 sets and Meridian Asynchronous Data Option (MADO). Tables KSETLINE and KSETFEAT are still used for line and feature appearances.

The format used for the M3000 set and the MADO in table IVDINV contains configuration information as follows:

- the LEN to which the set is assigned
- the Meridian set type (M3000 or MADO)

The M3000 series set contains keys ranging from 1 to 37. The features are assigned to a key number for the purpose of table control. Keys 1 through 6 are the only keys to which a directory number is assigned. Keys 7 through 19 are assigned the features associated with them. Keys 20 through 37 are reserved for future use.

Keys 7 through 19 are assigned as follows:

M3000 key assignment

Key number	Feature
7	Call Pickup
8	Message Waiting
9	Speed Call
10	Call Forwarding
11	Conference Calling (six-port)
12	Call Waiting
13	Call Transfer
14	Ring Again
15	Privacy Release
16	Make Set Busy
17	Call Park
18	Executive Busy Override
19	Automatic Answerback

M2317 set series

The Meridian M2317 set, also known as the Delta II set, provides a standard feature headset, a two-line display, handsfree capability, 11 hard keys and five softkeys. Directories and features are assigned to these keys. The five softkeys are only assigned to features.

When the M2317 set is idle, the time and date appear on the two-line display. The user makes a call by touching the directory number key, lifting the handset, or touching the handsfree feature. The digits dialed appear on the two-line display.

Support of the M2317 set does not require any new customer tables. The sets join the M3000 and the other Meridian IVD line in tables IVDINV, KSETLINE, and KSETFEAT. Table IVDINV is used for configuration information for new M2317 sets and MADO. Tables KSETLINE and KSETFEAT are used for line and feature appearances on all IVD sets.

Feature types

The features assigned to the Meridian sets in table KSETFEAT are grouped into categories called Set Features. These features are associated with all DN appearances on the set.

- **Set feature:** A set feature is assigned to a vacant key on the set.
 - For M3000 set: A vacant key on the M3000 set refers to a softkey that is not assigned. Features are not assigned to keys 2-6 as these keys are reserved for DNs and intercom. The primary directory number is assigned to key 1. The softkeys on the M3000 set are accessed from a touch sensitive screen. A feature that has a key associated with it on the set, is not assigned to any key.
 - For M2317 set: A vacant key on the M2317 set refers to a hard or softkey that is not assigned. Features requiring a separate key are assigned to keys 2 through 20. Keys 2 through 11 are considered hard keys and are accessed by depressing the appropriate key. Keys 12 through 20 are associated with the five softkeys. The softkeys take on different features based on the call state of the set.
- **Subset features:** A subset feature is a specified subset of a DN on the set.
- **Key features:** These features are assigned to a vacant key on the set and are independent of any DN appearances. There can be more than one appearances of these feature keys on a single set.
- **Directory Number features:** These features do not require a separate key on the set and are associated with an individual DN appearance on the set. These features are assigned to as many of the set's DN appearances as desired.

- Code Access features: Some set features (SCS, SCL, SCU, PRK, DCPK, EBO, CNF, MCH) and some subset features (CPU, CFX) can be assigned as code access features. When assigned as code access features, they do not require a separate key on the set. The DN feature AAB can also be assigned as a code access feature. The feature is activated by dialing the access code for the specific feature (if the call state is other than idle - ringing, busy, active call - then the access code must be preceded by depression of either the CNF or CTR key to generate a flash).

Set features

Feature	M3000 key	M2317 key
Call Transfer (CTR)	13	18
6-Way Conference (CNF)	11	17
Call Park (PRK)	17	12
Executive Busy Override (EBO)	18	2-11
Speed Call Long (SCL)	18	2-11
Speed Call Short (SCS)	9	15
Speed Call User (SCU)	9	15
Make Set Busy (MSB)	16	2-11
Ring Again (RAG)	14	19
Privacy Release (PRL)	15	20
Directed Call Park (DCP)	code access	2-11 or code access
3-Way Calling (3WC)	code access	2-11
Malicious Call Hold (MCH)	code access	2

Subset feature

Feature	M3000 key	M2317 key
CPU	7	13

Feature	M3000 key	M2317 key
CFX	10	16
CWT	12	2-11

Key features

Feature	M3000 key	M2317 key
AUD	Replaced by dialing	2-11
ICM	2-6	2-11

Directory number features

Feature
Automatic Line
Special Billing
Denied Incoming
Subscriber Line Usage
Line Study
Calling Line Identification
Do Not Disturb
Private Business Line (not assigned to PDN)
Random Make Busy
Requested Suspension
Stop Hunt
Security Code
Automatic Answerback
Message Waiting

Hardware requirements

In order to configure Meridian series terminals, as well as 2000 series terminals, on a Meridian SL-100, the line module used must be a Digital Line Module (DLM). The DLM consists of the following cards:

- 6X53 power card
- 6X51 DLM processor card
- 6X52 Digroup Control card
- 8X49 Parallel Serial Time Switch (PSTS) processor card
- 8X46 PSTS card

- 1 to 5 8X47 Digital Port Cards (DPCs)

The Meridian set is connected to the new Digital Port Card (DPC). The DPC is a 32-port line card, with 16 voice and 16 data ports. The even numbered ports (0, 2, ...30) are the voice ports and the odd-numbered ports (1, 3 ...) are the data ports.

Limitations and restrictions

The features available to the Meridian set user are consistent with those available on p-phones and Data Units. One exception is that the EXT option is not available.

The features available to the Meridian 3000 are consistent with the Meridian 2000 series with the following exceptions:

- The M3000 set has six-port conference available, rather than the Three Way Calling (3WC) feature.
- The time and date are displayed on the screen of the touch set when the set is idle.
- Malicious Call Hold (MCH) is not available in the softkeys of the M3000 set, but is assignable as a code access feature.
- Automatic Dialing (AUD) is not available in the softkeys of the M3000 set, rather the direction of the M3000 set takes the place of the AUD feature.

When assigning LENS to the DLM, the user is restricted to entering only 0 to 9 in the drawer (or line subgroup) position of the LEN.

When assigning a Meridian voice set to a LEN number, the set is only added to an even numbered LEN.

Interactions

M3000 Table Control has no functionality interactions.

Datafill

The Meridian 2317 and 3000 series are datafilled in table IVDINV and table KSETFEAT. Table IVDINV is modified to accept new set types, M3000 and M2317. Table KSETFEAT is modified to allow the M3000 set to accept keys up to 19 when assigning features to the set. For the M2317 set, the table only accepts keys up to key 20 when assigning features to the set. It is also modified to check that the softkey features are associated with the proper keys and that the softkeys are only assigned their associated features.

Service Orders

M3000 Table Control does not affect SERVORD.

Operational Measurements

M3000 Table Control does not affect Operational Measurements.

Logs

M3000 Table Control does not affect logs.

User interface

M3000 Table Control does not change the user interface.

Billing

M3000 Table Control does not affect billing.

AD0340 - M3000 Line Display Hooks**Description**

This feature provides the Line Group Controller (LGC) requirements of call information to the Meridian 3000 telephone.

Meridian 3000

The Meridian 3000 digital telephone offers the user simultaneous voice and data capabilities.

The M3000 series voice set provides a standard feature handset, a speaker for voice and tone alerting, and a touch sensitive screen with no hard keys. All the telephone operations are done by touching the softkeys on the screen. The set has a built in handsfree unit and contains the Touch Asynchronous Data Option (TADO). The TADO is necessary for data transmission and consists of a single file-installable printed circuit board that mounts within the housing of the Meridian 3000 series voice set

When the M3000 series set is idle, the screen displays time and date. The user makes a call by touching the screen Directory Number (DN) icons, or lifting the handset, or touching the handsfree feature. The set then displays another screen. The display on the screen is context dependent. The digits dialed are displayed to the user.

The M3000 series set contains keys ranging from 1 to 37. Even though the set only has software defined keys, the features are assigned to a key number for the purpose of table control. Keys 1 through 6 are the only keys to which a DN is assigned. When defining keys 7 to 20 on the M3000

set, these keys are only assigned the features that are associated with them as shown in the following table. Keys 21 through 37 are reserved for future expansion.

Assigned keys and features

Key Number	Feature
7	Call Pickup
8	Message Waiting
9	Speed Calling
10	Call Forwarding
11	Conference Calling (6 Port)
12	Call Waiting
13	Call Transfer
14	Ring Again
15	Privacy Release
16	Make Set Busy
17	Call Park
18	Override
19	Automatic Answerback
20	Display Key

P-phone 2-Line Display

The display P-phone is a standard P-phone with a 32-character alphanumeric Liquid Crystal Display (LCD). This display is divided into two lines, each 16 characters in length. As a general rule, the upper display line is used for displaying the calling party information; the lower display line is used to echo the digits dialed.

Display M3000 versus P-phone

The following are the display differences between the M3000 and the P-phone

- For the M3000 set, if more than 30 digits are entered, the display wraps around and overwrites the digits.
- The M3000 has 30-character lines available for calling/called number display.
- The P-phone has two 16-character lines for calling/called number display.
- Both sets' dialed digits echo left to right.

- For P-phones, when more than 16 digits are entered, the most significant digits are shifted left and up to the top of the display line, truncating the most significant digits of the top (calling number) display line.

Hardware requirements

M3000 Line Display Hooks has no hardware requirements.

Limitations and restrictions

M3000 Line Display Hooks has no limitations or restrictions.

Interactions

This feature requires that regression is performed to verify that the implementation did not affect current operations.

Datafill

M3000 Line Display Hooks does not affect data schema tables or office parameters.

Service Orders

M3000 Line Display Hooks does not affect SERVORD.

Operational Measurements

M3000 Line Display Hooks does not affect Operational Measurements.

Logs

M3000 Line Display Hooks does not affect logs.

User interface

M3000 Line Display Hooks does not change the user interface.

Billing

M3000 Line Display Hooks does not affect billing.

AD0465 - M3000 Call Progress Indication II**Description**

This feature is the second phase of the M3000 Call Progress Indication (CPI), which provides the CC hooks necessary to enable CPI on the M3000 set.

Meridian 3000

The Meridian 3000 digital telephone set offers the user simultaneous voice and data capabilities.

The M3000 series voice set provides a standard feature handset, a speaker for voice and tone alerting, and a touch sensitive screen with no hard keys. All the telephone operations are done by touching the softkeys on the screen. The set has a built in handsfree unit and contains the Touch Asynchronous Data Option (TADO). The TADO is necessary for data transmission and consists of a single file-installable printed circuit board that mounts within the housing of the Meridian 3000 series voice set

When the M3000 series set is idle, the screen displays time and date. The user makes a call by touching the screen Directory Number (DN) icons, or lifting the handset, or touching the handsfree feature. The set then displays another screen. The display seen on the screen is context dependent. The digits dialed are displayed to the user.

The M3000 series set contains keys ranging from 1 to 37. Even though the set only has software defined keys, the features are assigned to a key number for the purpose of table control. Keys 1 through 6 are the only keys to which a DN is assigned. When defining keys 7 to 20 on the M3000 set, these keys are only assigned the features that are associated with them as shown in the following table. Keys 21 through 37 are reserved for future expansion.

Assigned Keys and Features

Key Number	Feature
7	Call Pickup
8	Message Waiting
9	Speed Calling
10	Call Forwarding
11	Conference Calling (6 Port)
12	Call Waiting
13	Call Transfer
14	Ring Again
15	Privacy Release
16	Make Set Busy
17	Call Park
18	Override
19	Automatic Answerback
20	Display Key

M3000 Digital Telephone Set

The following softkeys are supported on the M3000 set:

- Call Forward (FORWARD)
- Call Park (PARK)
- Call Pickup (PICK UP)
- Call Waiting (CONNECT)
- Call Transfer (TRANSFER)
- Make Set Busy (MAKE BUSY)
- Conference 6 (CONFERENCE)
- Message Waiting (MESSAGE)
- Privacy Release (PRIVACY OFF)
- Busy Override (JOIN BUSY CALL)
- Ring Again (RING AGAIN)
- Speed Call/User (CODE CALL)
- Auto Answerback (AUTO ANSWER)
- Switch Parties (SWITCH)
- Complete Call Transfer (JOIN PARTIES)
- Complete Conference (JOIN PARTIES)
- Hold the Call (HOLD)

New softkey features

Feature	Screen Text
Predial	Make a Call
Last Number Redial	Last#
Save the Number	Save#
Display Dialpad	Dial
Redial Saved Number	Saved#
Directory Dialing	Directory
Touch Services	Touch Profile
Reset Elapsed Time	Timer

M3000 Call States

The M3000 supports the following call processing states. These states are named according to Meridian 1 feature names.

- IDLE: On-hook

- DIALTONE: ready to transmit dialed digits (voice)
- INTERCOM DIALTONE: ready to transmit digits for a group intercom call (voice)
- DIALING: transmitting dialed digits (voice)
- BUSY: called park off-hook (voice)
- REORDER: called party is unavailable (voice)
- RINGBACK: called party is ringing (voice)
- ERWT_CBQ: initial set of routes not available, set gets expensive route warning tone (voice)
- ESTABLISHED: connection made (voice)
- INTERCOM ESTABLISHED: connection established in a group intercom call (voice)
- CONF/XFER DIALTONE: special dialtone
- CONF/XFER DIALING: ready to transmit digits on CONF/XFER call (voice)
- CONF/XFER REORDER: after special dialtone, called party is unavailable (voice)
- XFER RINGBACK: ringing called party for XFER (voice)
- CONF RINGBACK: ringing called party for CONF (voice)
- CONSULTATION: the third party has answered the call (voice)
- CONSULTATION HOLD: the user is talking to the original the party and consulting is on hold (voice)
- ESTABLISHED HOLD: call held by another party (voice)

Hardware requirements

This feature requires that a Digital Line Module (DLM) be connected between the M3000 sets and the LGC/LTC.

The LGC requires the following new XPM memory cards:

- NT6X47AB MP Memory Card
- NT6X46AB SP Memory Card
- two NT6X45AC Processor Cards

Limitations and restrictions

The following limitations and restrictions apply to M3000 Call Progress Indication II:

- the Speed Calling softkey

- the Call Park softkey
- the Call Forwarding softkey
- The time and date display is not supported. The time is displayed in the right hand corner of the screen, but it is not updated to the correct time.
- The Ring Again key is supported for calls to busy lines, but not for calls to busy trunks.
- the Message Waiting softkey

Interactions

M3000 Call Progress Indication II has no functionality interactions.

Datafill

M3000 Call Progress Indication II does not affect data schema tables or office parameters.

Service Orders

M3000 Call Progress Indication II does not affect SERVORD.

Operational Measurements

M3000 Call Progress Indication II does not affect Operational Measurements.

Logs

M3000 Call Progress Indication II does not affect logs.

User interface

M3000 Call Progress Indication II does not change the user interface.

Billing

M3000 Call Progress Indication II does not affect billing.

AD0468 - M3000 and Delta II Service Orders**Description**

This feature expands the MSL-100 Service Order capabilities for the Meridian Integrated Voice and Data (IVD) by adding the Meridian 3000 and 2317 touch sets to Service Orders.

This feature provides users with an efficient method of maintaining the Meridian 3000 and 2317 touch sets within the database.

Commands are provided to:

- add and delete subscribers in the database
- add or delete options for subscribers

- suspend or restore service
- query the information about a subscriber

In addition, this feature adds the M3000 and M2317 sets to the Database Line Query Functions.

Service Order Capabilities

Service Orders provide users with a means of performing operations such as the adding or deleting of subscriber entries, the adding or deleting of options such as Call Forwarding (CFW), or the suspension or restoration of subscriber services.

The Service Order System is implemented as an input and verification system handling various phone types, including the Meridian IVD sets. Each Service Order has a Service Order number associated with it. All the information required in the Service Order is entered only once with the data being distributed to the required tables after passing extensive verification. The Service Order System is implemented as an input and verification system handling various phone types, including the Meridian IVD sets.

Service Orders are used to:

- establish/discontinue service
- assign/cancel Directory Numbers (DN), Line Options and features
- establish/delete hunt groups

In addition to Service Orders, information about the subscriber line can be obtained using the Database Line Queries available to the user.

These line queries include:

- QHU
- QHA
- QHASU
- QLOAD
- QLENWRK
- QLEN
- QDNSU
- QDNWRK
- QDN

Hardware requirements

To configure the Meridian 2000 and 3000 terminals on a Meridian SL-100, use the Digital Line Module (DLM). The DLM consists of the following cards:

- NT6X53 Power Card
- NT6X51 DLM Processor Card
- NT6X52 Digroup Control Card
- NT8X49 Parallel-Serial Time Switch (PSTS) Processor Card
- NT8X46 PSTS Card 1 to 5 NT8X47 Digital Port Cards (DPCs)
- one to five NT8X47 Digital Port Cards (DPCs)

The Meridian 2000 and 3000 series sets are connected to DPCs (NT8X47 card) with a maximum of 16 voice sets per card (each of which can be equipped with an optional data adapter).

Limitations and restrictions

The command PLP (plug up - place on trouble intercept) is not used for the M2317 sets, other IVD sets, or electronic business sets (p-phones).

When assigning Line Equipment Numbers (LENs) to the DLM, the user is restricted to entering 0 to 9.

Interactions

This feature is an extension of existing p-phone/Meridian IVD Service Orders; thus the operation of Service Orders for p-phones, data-units, M5000 series (repackaged p-phone), and the Meridian IVD M2000 series sets are not affected.

Datafill

M3000 and Delta II Service Orders does not affect data schema tables or office parameters.

Service Orders

M3000 and Delta II Service Orders does not affect SERVORD.

Operational Measurements

M3000 and Delta II Service Orders does not affect Operational Measurements.

Logs

M3000 and Delta II Service Orders does not affect logs.

User interface

M3000 and Delta II Service Orders does not change the user interface.

Billing

M3000 and Delta II Service Orders does not affect billing.

AD0469 - RMM for Remote DLM**Description**

This feature provides the necessary software to support the Remote Maintenance Module (RMM) when configured within an RDLM.

The standard 6X13 RMM is a single shelf peripheral that provides the same operational support to the Remote Office as the Maintenance Trunk Module (MTM) provides to the Central Office. The RMM for RDLM (7X53) is co-located with the RDLM and uses DS-30A links for communication with the RDLM. Although the RMM is a peripheral, it is located within the RDLM Remote Interface and Maintenance module (RIM) shelf, which it shares with the LCC cards and the DS1 interface cards, known as the Host Interface Equipment (HIE). The RMM is a P-side node to the RDLM.


Two DS-30A links are used to connect the RMM to an RDLM. Each DS-30A link consists of 32 channels: channel 0 is used for messaging; channels 1-15 and 17-32 carry PCM information; and channel 16 is not used. In the RDLM configuration, the RMM occupies only one half of a shelf; the Host Interface Equipment (HIE) occupies the other half. This arrangement is called the Remote Interface and Maintenance (RIM) shelf.

The following commands are available to perform maintenance functions on the Remote Maintenance Module:

- BSY
- RTS
- POST
- NEXT
- LOADPM
- QUERYPM
- TRNSL
- OFFL
- TST
- DISP

"RIM shelf layout and card complement" (page 129) shows the RIM shelf configuration.

RIM shelf layout and card complement

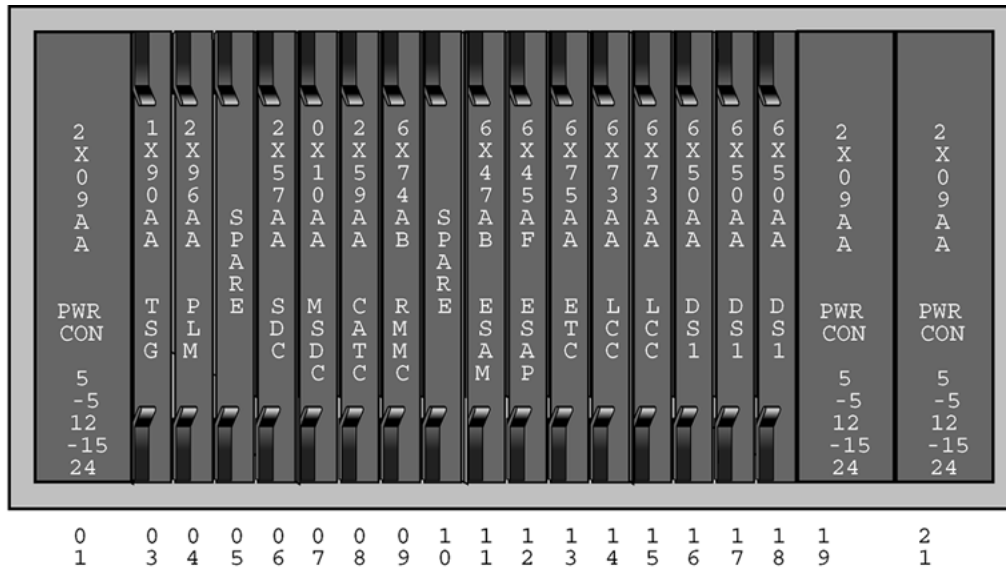

Slot	Abbreviation	Description
* 01	PWR CON	Power Converter
* 03	TSG	Test Signal Generator Card
* 04	PLM	PCM Level Meter Card
05	SPARE	Spare Maintenance Slot
* 06	SDC	Signal Distribution Card
* 07	MSDC	Miscellaneous Scan Detector Card
* 08	CATC	Coder/Decoder (CODEC) and Tone Card
* 09	RMMC	RMM Control Card (8085 up)
10	SPARE	Spare Maintenance Slot
11	ESAM	Emergency Stand Alone (ESA) Memory Card
12	ESAP	ESA Processor (68000 up)
13	ETC	ESA Tone and Clock Card
14-15	LCC	Link Control Card
16-18	DS1	DS-1 Interface Card (Card 2 is optional)
19	PWR CON	Power Converter
21	PWR CON	Power Converter

Note 1: The asterisk (*) indicates the required cards for the RMM in the RDLM configuration.

Note 2: The ESA cards (slots 11–13) are shown, but not required for the RMM with RDLM.

G100412

Hardware requirements

The RIM shelf has only 10 slots for the RMM (instead of the 20 slots provided in the standard RMM) and 12 slots for the HIE (instead of the 25 slots provided in the RLCM configuration).

"Required RMM cards for RDLM" (page 130) describes the required RMM cards.

Required RMM cards for RDLM

PEC	Name	Description
NT2X09AA	Power Converter	Provides +5V, -5V, +12V, -15V, and +24V required by shelf.
NT6X74AB	RMM Control Card	Provides processor, memory, and I/O functions.
NT1X90AA	Test Signal Generator Card	Provides programmable, dial-up test functions and internal diagnostic trunk test signals for Meridian SL-100 equipment (required for Transmission Test Trunk [TTT]).
NT2X96AA	PCM Level Meter Card	Contains circuits for measuring the level and frequency of PCM samples representing VF or tones (required for TTT).
NT0X10AA	Miscellaneous Scan Detector Card	Used to determine the state of a variety of Meridian SL-100 equipment (for example, alarm conditions, blown fuse, and door open).
NT2X57AA	Signal Distribution Card	Lower-output rated version of NT2X55, which provides interface between Meridian SL-100 and external relay-controlled equipment.
NT2X59AA	Coder/Decoder (CODEC) and Tone Card	Provides ROM-based tone generation and conversion between VF signals and PCM.

This feature requires an RDLM complete with 7X53AA RIM shelf. The RIM shelf must contain the following cards:

- 2X09AA Power Converter
- 6X74AB RMM Control Card (RMMC)
- 0X10AA Miscellaneous Scan and Detect Card (MSDC)
- 2X57AA Signal Distribution Card (SDC)

There must also be two 6X73AA Link Control Cards (LCCs) and two or three 6X50AA DS-1 interface cards in the RIM shelf.

Limitations and restrictions

The RIM shelf has only ten slots for the RMM.

Interactions

RMM for Remote DLM has no functionality interactions.

Datafill

Changes were made to table RMMINV to datafill the RMM in the RDLM configuration.

Service Orders

RMM for Remote DLM does not affect SERVORD.

Operational Measurements

Existing peripheral maintenance OMs are used. No new OMs were created for this feature.

Logs

Existing diagnostic and maintenance logs are used, but now include references to the RDLM and the new configuration of cards in the RIM shelf. No new logs were created.

User interface

Existing commands at the RMM MAP level are used as they were previously applied to RMMs for RLCMs. No new MAP commands or MAP levels were created.

Billing

RMM for Remote DLM does not affect billing.

AD0640 - RSC-DLM Basic**Description**

The Remote Switching Center with Digital Line Module (RSC-DLM) provides the facilities for interfacing with a large number of digital lines, analog lines, and digital trunks at a remote location. The RSC-DLM also handles "remote-off-remote" connection to other remote sites. The RSC-DLM enables the functionality of the Line Trunk Controller (LTC) and associated Peripheral Modules (PMs) to be transferred to a remote site. The maximum distance between the office and the most distant PM hosted by the RSC-DLM is 150 miles (241.3 km).

The RSC-DLM is essentially a Remote Cluster Controller (RCC) with the added capability of interfacing to the DLM and the Remote DLM (RDLM). This enhancement allows both digital and analog Line Concentrating Devices (LCDs) to be part of an RSC.


The following are the major functions of this feature:

- to support the same maintenance, diagnostics, and call processing features that are available on the DLM
- to use the current single-shelf Integrated Voice and Data (IVD) DLM peripheral without any hardware modifications

- to support 160 IVD station sets per DLM, each with voice and 64 kbps physical data channel. The maximum data rate for the Meridian Asynchronous Data Option (MADO) is 19.2 kbps.
- to provide higher traffic capacity for data calls - non-blocking in purely voice installations
- to provide software to support the IVD sets on the DLMs and RDLMs that are connected to the RCC, including call processing, maintenance and diagnostics, and table control. This feature allows DLMs and RDLMs to be added to the RCC and for the RCC to handle IVD lines.

"CCC/RSC-DLM configuration overview" (page 132) illustrates the CCC/RSC-DLM configuration.

CCC/RSC-DLM configuration overview

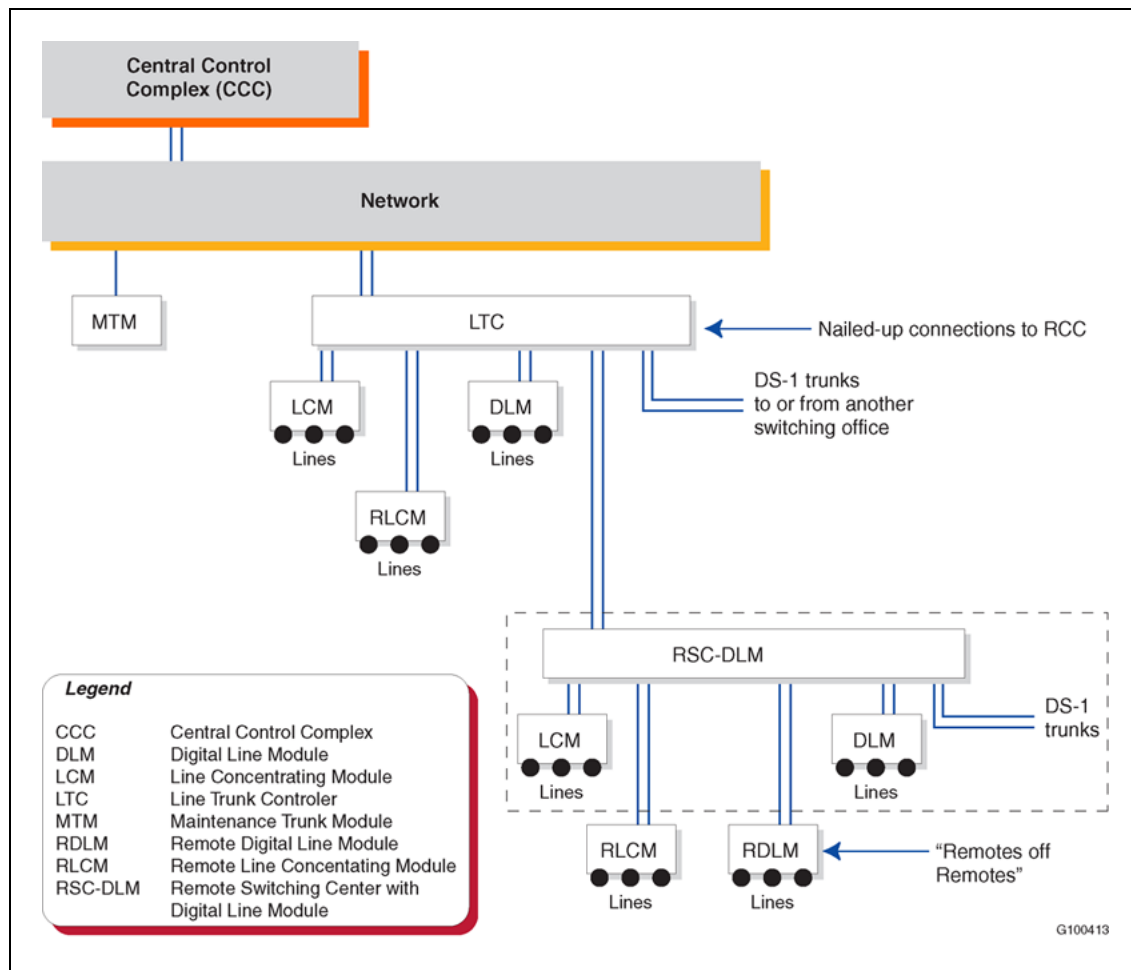

System description

The following section describes the major units located at the RSC-DLM.

RCC The RCC provides a master controller for all units at the RSC and is controlled by the host LTC. The RSC is a dual-shelf PM. It is similar in configuration to the LTC and uses many of the same components. The RCC shelves are referred to as Remote Controller Arrays (RCA). The RCC provides an interface through from three to 16 DS-1 links to matching DS-1 interfaces in the host office LTC. Within the RSC, the RCC provides up to 20 ports that can be configured to provide various combinations of DS-30A and DS-1 links.

LCM/DLM The Line Concentrating Module (LCM) and the Digital Line Module (DLM) at an RSC are identical to the LCM and DLM at the host office. Up to nine LCMs or DLMs, using two DS-30A links each, can be provisioned using 18 of the 20 DS-30A ports that the RCC provides. This leaves two ports available for RMMs.

The RCC has control of up to 5760 (9 x 640) remote subscriber lines if configured using only LCMs. The RCC has control of up to 2880 (9 x 320) remote subscriber channels (voice and data) if configured using only DLMs. In a smaller configuration where six LCMs are supported (each using three DS-30A links), the RCC controls up to 3840 lines. If six DLMs are supported (each also using 3 DS-30A links), the RCC controls 1980 channels of both voice and data.

Note: The RSC can be configured to have a mix of both LCMs and DLMs.

Remote-off-remote equipment If all RCC ports are not used for DS-30A links, from two to 20 ports can be provided with DS-1 interfaces and connected to DS-1 transmission facilities to another remote site.

Note: The RCC has 20 P-side ports, and each port can be provisioned with either a DS-30A link or a DS-1 link. The RCC -P-side can be provisioned with all DS-30A links, all DS-1 links, or a combination of both.

Equipment at the remote-off-remote site can consist of an RLCM or RDLM located inside a building. The RLCM interfaces with up to 640 local analog lines. The RDLM interfaces with up to 320 local digital channels (voice and data). This allows subscribers connected to RLCMs or RDLMs to share DS-1 facilities to the host office with subscribers connected to the RSC equipment.

Remote digital trunking A maximum of 20 DS-1 equipped P-side ports on the RCC can be assigned to interface with DS-1 digital trunk groups. However, if all 20 P-side ports are used for trunking, the RCC cannot be equipped with any DLMs, LCM, or RMMs.

Remote digital trunks only handle trunk traffic originating from or terminating on subscriber lines connected to an LCM/DLM or an RLCM/RDLM controlled by the same RCC.

Hardware requirements

This feature requires the use of an NT7X49AA DLM or RDLM attached to the P-side of an NT6X12AB RCC.

Limitations and restrictions

The following limitations and restrictions apply to RSC-DLM Basic:

- using the RCC RMM for IVD lines
- Emergency Stand Alone (ESA) capability for IVD lines
- IVD line - trunk intraswitching (normal mode)
- IVD line - trunk intraswitching (ESA mode)
- RCC - RCC Interswitching (normal mode)
- RCC - RCC Interswitching (ESA mode)
- Digital Recorded Announcement Messages (DRAMs)
- warm entry or exit of ESA for IVD lines

Interactions

RSC-DLM Basic has no functionality interactions.

Datafill

To datafill a DLM as associated with an RCC, table DLMINV (DLM Inventory) must be modified to accept an RCC as a valid C-side PM.

There are two possible configurations for DLMs associated with RCCs. A DLM can be co-located with an RCC, or it can be remote off of an RCC. The difference is reflected by the datafill entry in Table DLMINV. When a DLM is co-located with an RCC, the DLMSELECTOR field has the value "HDLM". This entry reflects the fact that the DLM is located at the same site as the C-side peripheral (the RCC), and that the DLM C-side links are DS-30A links. When a DLM is remote off of an RCC, the DLMSELECTOR field has the value "RDLM". This entry reflects the fact that the DLM is remote to the C-side peripheral, and that the DLM C-side links are DS-1 links.

Service Orders

RSC-DLM Basic does not affect SERVORD.

Operational Measurements

RSC-DLM Basic does not affect Operational Measurements.

Logs

RSC-DLM Basic does not affect logs.

User interface

The only changes visible in the user interface are at the DLM and RCC levels at the MAP workstation. When the TRNSL C command is issued at the DLM level and the DLM posted is attached to an RCC, the name of the RCC is displayed, along with the link numbers and link states. When the TRNSL P command is issued at the RCC level and the RCC posted has one or more DLMS attached to it, the name of the DLMS are displayed, along with the link numbers and link states.

Billing

RSC-DLM Basic does not affect billing.


AD0641 - RDLM ESA**Description**

Emergency Stand Alone (ESA) is an emergency service option of the Remote Digital Line Module (RDLM) that provides limited call processing capabilities in the event of loss of communications with the host.

The RDLM is a Digital Line Module (DLM) peripheral remotely connected to a host Line and Trunk Controller (LTC) using DS-1 links. The RDLM is capable of handling up to a maximum of 320 digital lines. The ESA functions are provided by additional software and hardware.

"RDLM ESA system diagram" (page 136) shows an overview of the RDLM ESA system.

RDLM ESA system diagram

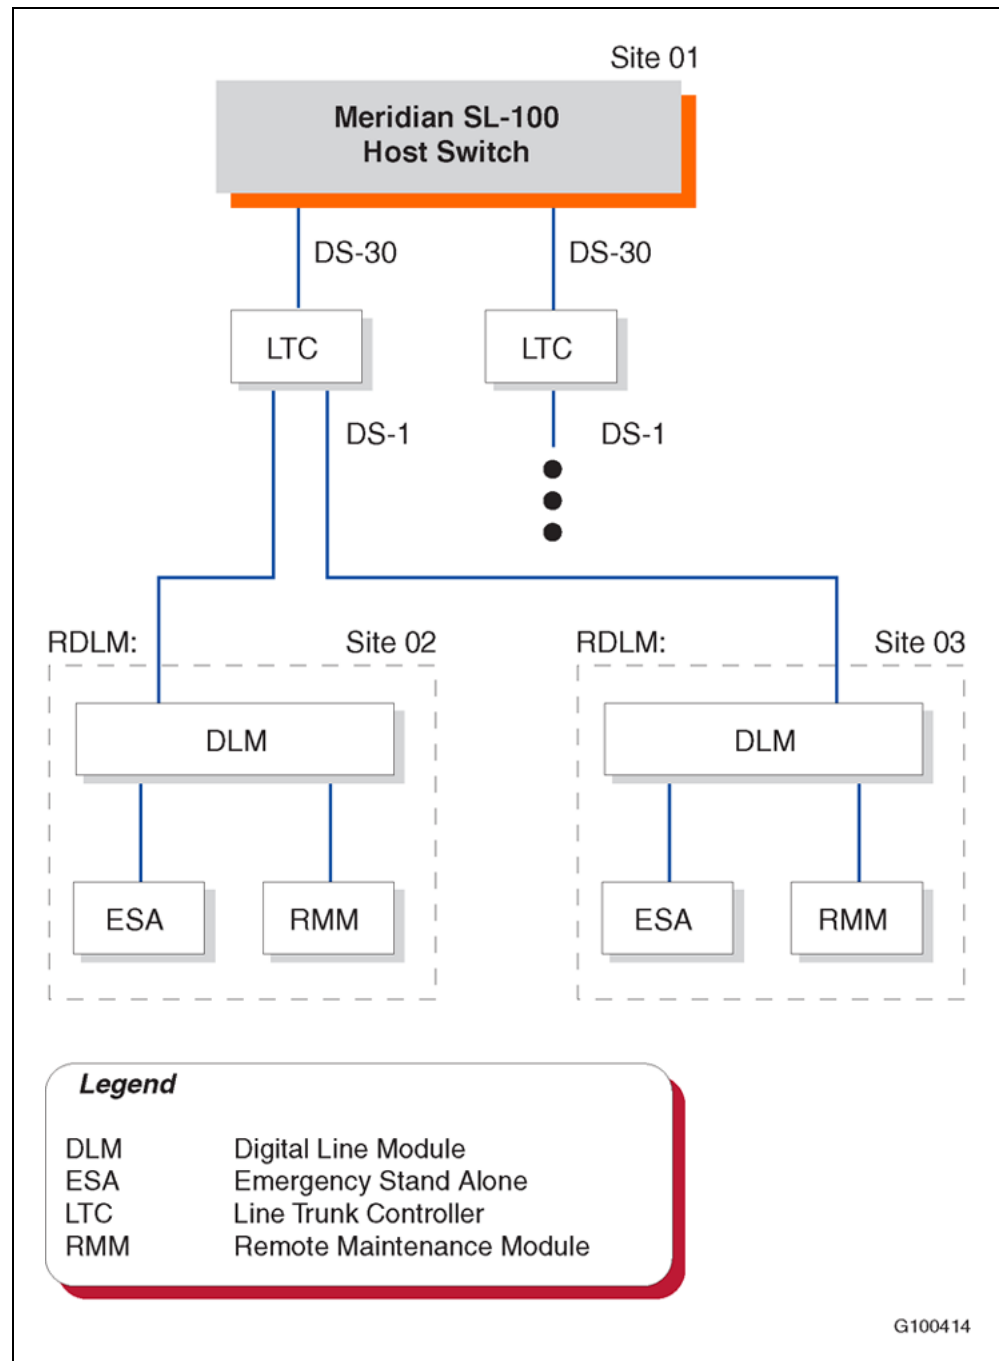

Intraswitching in ESA

This feature provides intraswitching during ESA. Intraswitching provides the capability of switching calls at a remote location without requiring transmission back to the host. For example, when a call is originated at an RDLM, a check is made to see if both parties reside on the same node. If they do, intraswitching calling is attempted in the RDLM.

The number of intraswitched calls supported during ESA is bound to the number of designated intracalling channels on the RDLM and varies depending on the number of DS-1 links used for host communication. Each call requires two channels.

Supported ESA calls

Number of host links	Number of ESA inter calls possible	Number of ESA intra calls possible	Total number of ESA calls possible
6	15	36	51
5	27	48	75
4	39	60	99
3	51	72	123
2	63	84	147

RDLM ESA features and services

The following section describes line types and services available for the RDLM ESA.

Line types Integrated Voice and Data (IVD) sets are the only sets supported on a DLM. IVD sets are considered to be Integrated Business Network (IBN) lines. The following IBN line types are supported:

- IVD - treated like 2500 sets with the Primary Directory Number (PDN) as the directory number. Only the PDN and Release keys are supported.
- MAD0 - DN only, no modem pooling in ESA

Services The following services are available while in ESA:

- Hunt group services - Multiline Hunt Group (MLH), Distributed Line Hunt Group (DLH), and Directory Number Hunt Group (DNH) with sequential line hunting are supported. DLH is treated the same as MLH. There is no circular hunting for DNH. The system allows a maximum of 26 hunt groups and 512 hunt group members per RDLM.
- Basic dialing - A subscriber can make calls to other subscribers serviced within the same RDLM.

- Automatic Lines (AUL) or Manual Lines (MAN) with maximum 15-digit DN - AULs must be datafilled by service orders. The system allows 63 AULs per RDLM.

The following IBN services are provided:

- maximum of 320 members in a customer group
- maximum of 32 customer groups per RDLM
- station-to-station dialing for a one- to six-digit extension number
- denied incoming call for a station
- direct outward dialing with or without second dial tone for termination to another customer group within the same RDLM
- inter-customer group calling by the same dialing plan (except lines with denied incoming option)
- primary numbers of the Multiple Appearance Directory Number (MADN) groups are treated as regular IBN lines
- coded ringing

ESA-ENTRY

ESA-ENTRY is the taking of call processing control from the Central Control (CC) by a peripheral, should the following conditions occur:

- The links from a peripheral to the CC become unusable.
- Communication between a peripheral and the CC is broken.

There are two ESA-ENTRY options: warm entry and cold entry. On warm entry, all calls that are intraswitched and at talking state are preserved. For cold entry, all calls are dropped.

There are two ESA-ENTRY triggers:

- The RDLM loop-around message audit has detected loss of communications of the CC.
- The RDLM software discovers that one or both active RDLM units have broken DS-1 C-side message links. This is detected by either local alarms on the link or a major DMSX messaging failure.

These triggers are controlled by the office parameters RLCM_ESAENTRY_BADCSIDE and RLCM_ESAENTRY_BADLINK respectively. Both RLCMs and RDLMS use these parameters.

ESA-EXIT

ESA-EXIT refers to the return of control to the CC when communications are reestablished. When the RDLM host communication is restored, the ESA mode goes under CC control. The CC takes back the call processing responsibility. There are two exit options: warm exit and cold exit. On warm exits, all stable calls that are intraswitched and at talking state are preserved. For cold exits, all calls are dropped.

ESA-EXIT is triggered by the restoration of C-side communications. When the host DS-1 links and CC communications are restored, CC is able to send an ESA-EXIT message to the ESA processor.

Enabling and disabling ESA

To control the enabling and disabling of the ESA capability, the ESA processor can be either put in-service, which allows the RDLM to enter ESA if a failure is detected, or made ManB, which has the effect of disabling the ESA ability.

Hardware requirements

ESA for RDLM requires additional hardware. This hardware resides in the Remote Interface and Maintenance Module (RIM) shelf of the RDLM and consists of the following cards:

- XPM Processor Card (NT6X45)
- ESA Clock and Tone Card (NT6X75)
- XPM MP Memory Card (NT6X47)

LTC requirements

The Host LTC to the RDLM with ESA must be equipped with the NT6X69 messaging card for communication with the ESA processor.

RMM requirements

A Remote Maintenance Module (RMM) must be equipped with the RDLM frame. This is required to provide diagnostics to the ESA processor while in ESA.

For the RMM, five circuit cards are required:

- RMM Control Card (NT6X74)
- Miscellaneous Scan Detector Card (NT0X10)
- Signal Distribution Card (NT2X57)
- TTT - PCM Level Meter Card (NT2X96)
- TTT - Test Signal Generator Card (NT1X90)
- Power Converter Card (NT2X09)

Limitations and restrictions

The following limitations and restrictions apply to RDLM ESA:

- The ESA processor is not able to resume ESA call processing following a fatal trap, as is the case with XPMs. However, non-fatal traps are handled by a "trap-handler," which allows the ESA processor to continue call processing in ESA.
- All calls are dropped when entering or exiting from ESA.

Interactions

This feature requires feature AD0467, RMM for RDLM.

Datafill

While in ESA, some special numbers, such as 411, 911 or IBN dial plans, require special translations. The ESA prefix translation table, ESAPXLA, stores the special translation data for POTS (Plain Ordinary Telephone Service) lines on an RLCM and IBN lines on an RLCM or RDLM. However, for IBN lines table CUSTHEAD must also be modified to link the ESAPXLA data to customer groups.

For IBN customer groups, up to eight special numbers per prefix translator name are allowed per RLCM or RDLM.

Service Orders

RDLM ESA does not affect SERVORD.

Operational Measurements

Because there is no communication between the RDLM and the CC during ESA, Operational Measurements (OMs) for ESA calls cannot be collected and output using standard means. For this reason, the RDLM pegs a limited number of call processing OMs while in ESA.

They are as follows:

- origination attempts
- termination attempts
- calls completed
- originations blocked due to lack of resources
- terminations blocked due to lack of resources
- lines taken out of service due to excessive errors
- translation errors

These OMs are sent to the CC and printed as a PM171 log after ESA-EXIT. The maximum value of each OM counter is 32,766.

Logs

RDLM ESA does not affect logs.

User interface

During ESA-EXIT status flags appear on the MAP display, indicating ESA-EXIT time out countdown and ESA-EXIT. ESA-EXIT has no effect on existing commands and does not add any new ones. When the RTS sequence enters the ESA-EXIT portion of the RTS process, the ESA-EXIT message appears on the unit overseeing the exit procedure. The mate unit runs a lockout task to prevent other maintenance from occurring during the exit. If the ESA requires a timeout, the countdown time remaining is shown in the load area of the unit overseeing the exit.

After ESA-EXIT, an ESA OM log is printed to confirm that the RDLM has entered and exited ESA.

The main ESA software has an XPM monitor interface resident in its ESA processor that allows examination of the ESA internal software states, data, and entry and exit initiation from the monitor. To enter the ESA monitor level, type ESA from the main monitor menu.

Billing

RDLM ESA does not affect billing.

AD0732 - M3000 Screen Updates and Feature Calling

Description

This feature is the third phase of the M3000 Call Progress Indication (CPI), which supports the following M3000 functions:

- Speed Calling Programming/Usage
- Call Park and Retrieval
- Call Forward Programming/Usage
- Time and Date Display
- Call Back Queuing with Ring Again Capability
- Message Waiting

Speed Call Programming and Usage

The user programs either Speed Call Short (SCS) or Speed Call Long (SCL). A user assigned Speed Call User (SCU) is only able to use numbers from their speed call user list. To program a Speed Call entry:

- Touch the TOUCH PROFILE softkey, and the screen is updated to display PROFILE features.

- Touch the CODE CALL LIST softkey, and the screen is updated to the local speed call screen.
- Touch the PROGRAM CODE CALL softkey, and enter the Speed Call code followed by a number. Enter OK.
- Enter the code, and number (digits are echoed), then OK. The programming is complete and the digits are sent to the switch. The echoed digits are cleared and the screen is ready for another entry.
- Select the PROGRAM CODE CALL softkey, and enter another entry.
- Depress the EXIT key, and the screen returns to the IDLE state.

Call Park and Retrieval

The user parks a call once it is ESTABLISHED (talking). To park a call:

- Touch the PARK softkey. The call is parked against the DN of the station.
- Touch the PARK key, and the screen is updated to the local call park screen with the system ID displayed.
- Verify that the call is parked. This is necessary to inform the user of the identification number to dial when retrieving the call.

To retrieve a call once it is parked:

- Select a line and obtain a dialtone.
- Dial the Special Service Prefix (SSP) and Parked Call Access code ("72") followed by the identification number assigned to the parked call.

Call Forward Programming/Usage

Call Forwarding allows the user to program a number to forward to, as well as cancel, from an IDLE state. To Call Forward a call:

- Touch the FORWARD softkey, and enter a number, then OK.
- Enter a number (digits are echoed), then OK. Call forwarding is complete, and the numbers are sent to the switch.

The user programs Cancel Call Forwarding:

- Touch the FORWARD softkey, and the screen displays the number of the set where the call is forwarded. The screen prompts to cancel call forwarding.
- Touch CANCEL FORWARDING to cancel the call. The screen returns to the IDLE state, and displays a message CALLS ARE NOT FORWARDED.

Time and Date

The time and date appears in the upper right corner of the screen and is updated upon an RTS of the set, as well as during the feature lamp audit process.

Call Back Queuing (CBQ) with Ring Again (RAG)

RAG is activated when a user encounters a busy line or receives an Expensive Route Warning Tone (ERWT). The user selects the RAG key to make a CBQ request. If the request is legal, the RAG indicator appears on the bar line, and the DN returns to idle. If the keystroke is illegal, the keystroke is ignored. The request is allowed if the outgoing trunk group is an Integrated Business Line (IBN) Customer Group trunk group with CBQ allowed.

Message Waiting

Message waiting provides the user the ability to route/retrieve calls to/from a customer-defined Message Center. When a message is waiting, the prompt line informs the user when the message arrives and an envelope appears next to the MESSAGE softkey.

- To retrieve a call:
- Touch the MESSAGE softkey.
- Select a line and the Message Center DN appears on display. The Message Center answers and gives the messages.
- Release call, and MESSAGE indicator (envelope) goes away.

Hardware requirements

This feature requires a Meridian SL-100 equipped with LGC, DLM, and Meridian Touch sets version 4.14 or greater.

Limitations and restrictions

This feature requires a DLM with BCS22 or greater firmware.

Interactions

M3000 Screen Updates and Feature Calling has no functionality interactions.

Datafill

M3000 Screen Updates and Feature Calling does not affect data schema tables or office parameters.

Service Orders

M3000 Screen Updates and Feature Calling does not affect SERVORD.

Operational Measurements

M3000 Screen Updates and Feature Calling does not affect OMs.

Logs

M3000 Screen Updates and Feature Calling does not affect logs.

User interface

M3000 Screen Updates and Feature Calling does not change the user interface.

Billing

M3000 Screen Updates and Feature Calling does not affect billing.

AD0757 - MMI Software Interface for Cabinetized Meridian SL-100
Description

Housing the Meridian SL-100 system into cabinets provides expanded capacity, more features, and greater functionality. This feature displays information about the Enhanced Line Concentrating Module (ELCM) to provide maintenance at the PM level of the MAP command interpreter (MAPCI).

Changes for the ELCM

The Meridian Cabinet Line Module (MCLM) contains two fully duplicated ELCMs. Each ELCM is eight line drawers, providing a 512 line card capacity. An ELCM is a repackaged standard line concentrating module (LCM). All four line drawers on each shelf are located on the left, leaving the control equipment on the right.


This feature performs the following.

- blocks datafilling of lines in logical drawers 8, 9, 18, and 19 of an ELCM
- provides the changed card layout when displaying messages at the PM level of the MAPCI
- modifies the frametype display for Meridian cabinet switch configurations as follows:
 - MCDM is displayed as the frametype for the QueryPM command and bad card lists display for Digital Line Modules

Note: The MCDM is manufacture discontinued (MDed) and is replaced by the Intelligent Peripheral Equipment column.

- MCLM is displayed as the frametype for the QueryPM command and bad card lists display for LCMs

"Meridian Cabinet Line Module (MCLM) card layout" (page 145) illustrates the card layout for the MCLM.

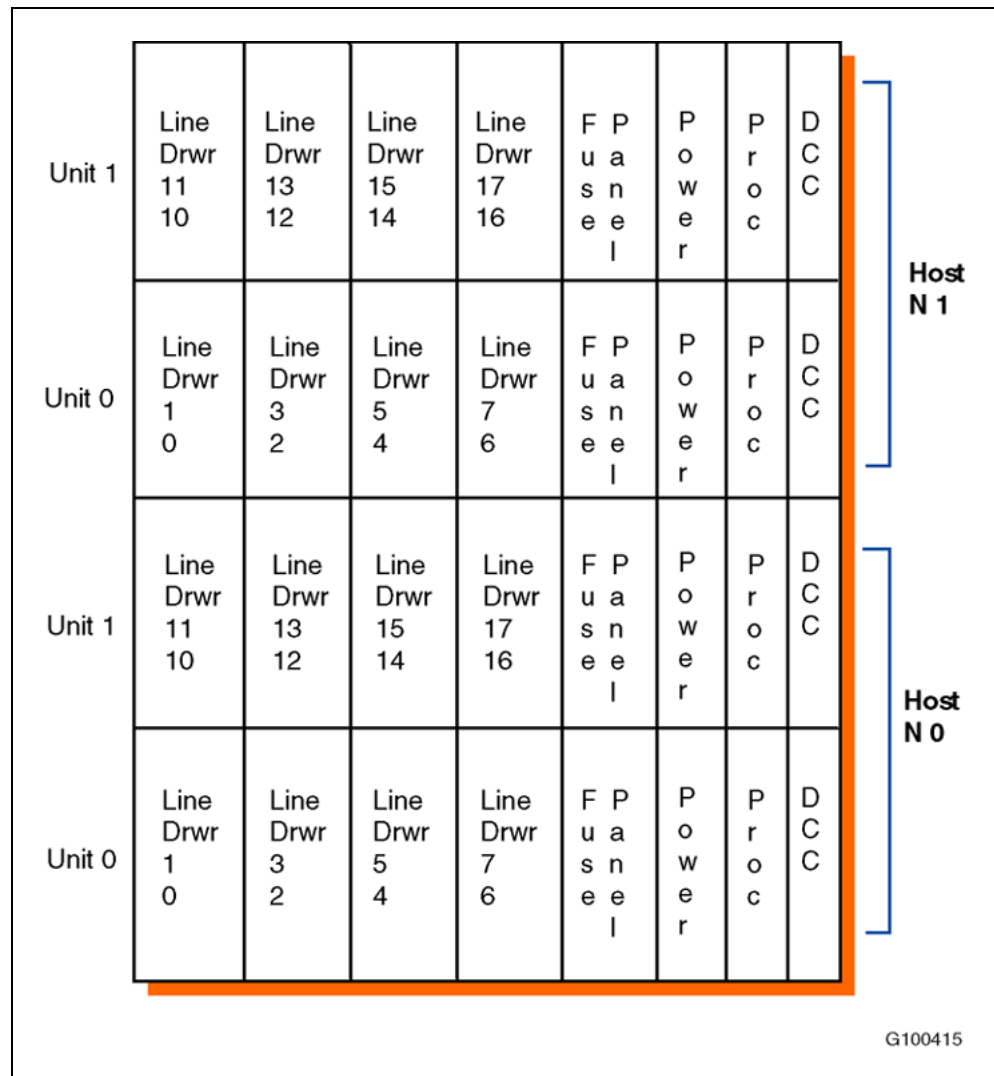Meridian Cabinet Line Module (MCLM) card layout**Hardware requirements**

The initial release of ELCM depends upon the following Meridian SL-100 cabinet hardware:

- Enhanced LCM Frame
- Enhanced LCM Frame Supervisory Panel (FSP)
- Enhanced LCM Cooling Unit
- Enhanced LCM Processor Card
- Enhanced LCM Digroup Controller Card
- Enhanced LCM Bus Interface Card
- Enhanced LCM Line Drawer

- Enhanced LCM Mechanical Assembly
- Enhanced LCM Power Converter

Limitations and restrictions

MMI Software Interface for Cabinetized Meridian SL-100 has no limitations or restrictions.

Interactions

This feature is designed so that ELCMs can co-exist with LCMs and any other LOW-variant type.

Datafill

ELCM is added to the range LCMTYPE for table LCMINV.

Service Orders

MMI Software Interface for Cabinetized Meridian SL-100 does not affect SERVORD.

Operational Measurements

Since this feature defines a new peripheral type, new OMs are defined for ELCMs. Functionally these OMs provide the same capability as OMs on LCMs.

Logs

All logs currently supported for LCMs are also supported for ELCMs. These logs provide identical functionality for ELCMs.

["Logs" \(page 146\)](#) lists the logs that are affected.

Logs

Log Name	Report Number	New, MOD deleted
PM	102	Modified
PM	103	Modified
PM	104	Modified
PM	105	Modified
PM	106	Modified
PM	107	Modified
PM	116	Modified
PM	117	Modified
PM	128	Modified
PM	179	Modified

Log Name	Report Number	New, MOD deleted
PM	180	Modified
PM	181	Modified
IOAU	103	Modified
IOAU	106	Modified
IOAU	108	Modified

User interface

The following MAP display appears at the PM level in response to a request to POST an ELCM.

```

      3      2      3      4      5      6      7

1234567890123456789012345678901234567890123456789012345678901
7  ELCM HOST  2  0  ISTB      LINKS  OOS:  CSIDE  0
8  UNIT0:      Insv      Takeover      /RG:  0
9  UNIT1:      ManB MTCE      /RG:  0  Loading 12345
10
11 Drwr:      01      23      45      89      01      45      67      89  Stby 1 Insv
12          ..      ..      ..  --      ..      ..      ..  --

```

Note: The drawer positions 8, 9, 18, and 19 indicate a '-' for the permanently unequipped drawers on ELCMs.

Billing

MMI Software Interface for Cabinetized Meridian SL-100 does not affect billing.

AD0897 - M2317 Updates and Feature Interactions

Description

This feature provides the capability for the Meridian 2317 display set to provide basic call processing and the Terminal Diagnostics Test.

M2317 Digital Telephone Set

The Meridian 2317 digital telephone set offers the user simultaneous voice and data capabilities, and context dependent softkeys. The voice set consists of a standard feature handset, a speaker for voice and tone alerting, integrated handsfree/mute, 11 feature keys/indicators, an optional headset jack, and a two-line liquid crystal display for softkeys.

Call Progress is any information that describes the happenings of a call as it proceeds through the network to a destination. Information regarding alerting of the called party, answering by the called party, and routing to treatments, tones and announcements are examples of call progress. This information is used to update the softkey screen of the M2317 set.

M2317 Softkey features

The following softkeys are supported on the M2317 set:

M2317 softkeys

Feature	Screen Text
Call Forward	FORWARD
Call Park	PARK
Call Pickup	PICKUP
Call Transfer	TRANSFER
Conference 6	CONFER
Message Waiting	MESSAGE
Privacy Release	PRIVACY
Ring Again	RINGBAK
Speed Call/User, Controller	SPEED #
Switch Parties	SWITCH
Complete Call Transfer	CONNECT
Complete Conference	CONNECT

The following keys are features that are controlled by the M2317 set:

Controlled features

Feature	
Last Number Redial	LAST#
Save the Number	SAVE#
Redial Saved Number	SAVED#
Reset Elapsed Time	TIMER

M2317 Call States

The M2317 supports the following call processing states for the M2317 set:

- IDLE: on-hook (voice and data)
- DIALTONE: ready to transmit dialed digits
- INTERCOM DIALTONE: ready to transmit digits for a group intercom call

- DIALING: transmitting dialed digits
- BUSY: called party off-hook
- REORDER: called party is unavailable
- RINGBACK: called party is ringing
- ERWT_CBQ: initial set of routes not available, user receives expensive route warning tone
- ESTABLISHED: connection made
- INTERCOM ESTABLISHED: connection established in a group intercom call
- CONF/XFER DIALTONE: special dialtone for CONF/XFER calls
- CONF/XFER DIALING: after special dialtone is heard, user is dialing digits on CONF/XFER call
- CONF/XFER BUSY: CONF/XFER called party is off-hook
- CONF/XFER REORDER: CONF/XFER called party is unavailable
- XFER RINGBACK: ringing called party for XFER
- CONFRINGBACK: ringing called party for CONF
- CONSULTATION: third party answers a CONF/XFER call
- CONSULTATION HOLD: user talks to original party and consulting party is on hold
- PRIVATE LINE DIALING: transmitting dialed digits on a private line
- PRIVATE LINE ESTABLISHED: connection made with a private line
- VOICE CALL/GROUP CALL ESTABLISHED: connection made using an intercom key or preset conference key

Call States and Corresponding Softkeys

"Call states and softkeys" (page 149) shows the call states and corresponding softkeys supported for the M2317 set.

Call states and softkeys

Call States	Soft Keys
IDLE	RINGBAK, FORWARD, SPEED, HELD#, TIMER, MORE
DIALTONE	RINGBAK, SPEED#, MESSAGE, SAVED#, LAST#, PICKUP, MORE
INTERCOM	SAVED#, LAST#, PICKUP
INTERCOM DIALTONE	RINGBAK

Call States	Soft Keys
PRIVATE LINE DIALING	SAVED#, LAST#
BUSY	RINGBAK, SAVE#
REORDER	No Soft Key
RINGBACK	SAVE#
ERWT_CBQ	RINGBAK, SAVE#
ESTABLISHED	CONFER, PARK, TIMER, SAVE#, TRANSFR, PRIVACY, MORE
INTERCOM ESTABLISHED	TRANSFR, CONFER, TIMER, SAVE#
PRIVATE LINE ESTABLISH	TIMER
VOICE/GROUP CALL ESTABLISHED	SPEED#, SAVED#, RINGBAK
CONF/XFER DIALTONE	No Soft Keys
CONF/XFER DIALING	RINGBAK, SAVE#
CONF/XFER BUSY	No Soft Keys
CONF/XFER REORDER	CONNECT, SAVE#
CONFERENCE RINGBACK	SAVE#
CONSULTATION	CONNECT, SWITCH
CONSULTATION HOLD	CONNECT, SWITCH

M2317 Terminal Diagnostics Program

The M2317 Terminal Diagnostics program, also known as the station ringer test (SRT), tests the hardware of the M2317 set. The operation of the set is verified by providing a visual and audio response to each key pressed. The test is started from the workstation to be tested.

Hardware requirements

M2317 Updates and Feature Interactions has no hardware requirements.

Limitations and restrictions

No terminations are allowed on any set other than IVD while testing is performed. To perform testing, all other DN keys are idle.

Interactions

M2317 Updates and Feature Interactions has no functionality interactions.

Datafill

M2317 Updates and Feature Interactions does not affect data schema tables or office parameters.

Service Orders

M2317 Updates and Feature Interactions does not affect SERVORD.

Operational Measurements

M2317 Updates and Feature Interactions does not affect Operational Measurements.

Logs

M2317 Updates and Feature Interactions does not affect logs.

User interface

M2317 Updates and Feature Interactions does not change the user interface.

Billing

M2317 Updates and Feature Interactions does not affect billing.

AD0898 - DLM PM Upgrade**Description**

This software feature provides enhancements to the PM maintenance for Digital Line Modules. The enhancements include:

- maintaining the Digital Port Card (DPC)
- providing more information displayed as a result of entering the QueryPM command from the DLM level of the MAP system
- enhancing the logs generated as a result of DLM state changes; using the format convention adopted for all other peripherals
- updating the alarms immediately upon DLM state change

Digital Port Card maintenance

Port card/drawer maintenance is looked at from two perspectives:

- maintaining a port card/drawer of the PM as separate entities, not including diagnostics
- enhancing diagnostics so that port card/drawer faults are distinguishable from faults affecting the entire unit of the PM

Port card maintenance is provided on a per port basis. Manual and system maintenance operates on DLM port cards within the bounds of the port card. Port card maintenance

- enhances diagnostics to help indicate problems on port cards before service is affected
- identifies faults occurring on working port cards easily

- corrects problems with a port card easily

Hardware requirements

DLM PM Upgrade has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to DLM PM Upgrade:

- In order for Port Card Maintenance to work properly, a BCS25 software load or later is used in conjunction with BCS25 CC software load.
- Tests are not performed on a port card before adding lines to it. Since the port card is not equipped until a line is datafilled, the datafill is added in table LNINV before the DLM equips the port card, after which testing is possible from the MAP system.
- Manual port card operations are restricted to one port at a time.

Interactions

DLM PM Upgrade has no functionality interactions.

Datafill

DLM PM Upgrade does not affect data schema tables or office parameters.

Service Orders

DLM PM Upgrade does not affect SERVORD.

Operational Measurements

No Operational Measurements (OMs) are added by this feature. However, new registers are added to groups PM and PMTYP to indicate port card/drawer faults. These registers are PMDRFLT and PMDRERR for group PM and PMTDRFLT and PMTDRERR for group PMTYP. Usage counts for the number of port cards/drawers in the man-busy or system-busy state.

Logs

A PM181 log is used to indicate port card changes. The affected logs are:

- PM102
- PM103
- PM106
- PM107
- PM128

User interface

An interface is provided that allows the technician to manually RTS, BSY, TST, or OFFL particular port cards.

Billing

DLM PM Upgrade does not affect billing.

AD0901 - ESA REX Test for RDLM**Description**

This feature implements Routine Exercising (REX) tests for DLMs. REX tests provide enhanced diagnostic capabilities by performing the following functions:

- periodically running Out-of-Service (OOS) tests on each DLM unit
- periodically running In-Service (InSv) tests on each DLM unit in both normal and takeover mode
- testing the ability of an RDLM to enter and exit Emergency Stand Alone (ESA) mode

REX tests for DLMs can be logically broken down into two areas:

- diagnostics run periodically by the system (DLM REX)
- tests related to the capability of an RDLM to successfully make the transition into and out of ESA mode (ESA REX)

The following sections explain these two aspects of REX tests, including how they relate to each other.

DLM REX tests

Diagnostics run by DLM REX tests include:

- OOS tests on each DLM unit
- InSv tests run on each DLM unit when mate unit is InSv
- InSv tests run on each DLM unit when mate unit is OOS

REX tests for Line Modules (LMs), Line Concentrating Modules (LCMs) including the LCM variants such as ISLM and ELM, and Digital Line Modules (DLMs) are controlled by office parameter LCDREX_CONTROL in table OFCVAR.

For DLMs, REX testing is performed during the specified interval one DLM at a time, in the order in which they were datafilled. It is sometimes not possible to exercise every DLM in the office during the REX interval. In this case, when the next interval starts, REX will pick up where it left off during the previous interval. That is, REX does not perform a second time on a particular DLM until it runs on all other DLMs in the office. No DLMs are exercised more than once during a given REX interval. The frequency of the routine exercise is determined by the length of the REX interval and

the number of DLMS in the office; however, REX is performed, at most, once every 24 hours per DLM. It takes up to 15 minutes to perform REX testing on a DLM.

Note: DLM REX tests require that both units of the DLM are in service before they can run.

ESA REX tests

The ESA REX tests, performed on RDLMs only, test the ability of RDLM units to enter and exit ESA and their ability to send messages to the ESA processor while in ESA. This is done by temporarily placing one of the two RDLM units in ESA mode. The other unit continues call processing in takeover mode. Since this is not true ESA, it is referred to as Pseudo ESA.

Note: The ESA module must be in service before ESA REX tests can run.

The system automatically performs REX tests on the ESA module (once per week for each module). These tests are run immediately following the DLM REX test of an RDLM unit, before the unit is returned to service.

ESA REX tests can also be invoked using a command available at the ESA level at the MAP terminal. The TST command at the ESA level has an optional parameter, REX. If omitted, the system runs the normal InSv or OOS tests (depending on the state of ESA). If the parameter is present, the system attempts to run REX tests. For this test to begin, both units of the parent RDLM must be in service. If this condition is not fulfilled, the test aborts with No Resources as a failure reason.

To prevent accidental attempts to perform maintenance on an RDLM unit in Pseudo ESA, the system runs an ESA Lockout task on the RDLM unit involved throughout the duration of the REX test.

The DLM MAP display is affected during the run of ESA REX tests. The REX test of an ESA module requires the use of a unit of the parent RDLM. During the REX test, the RDLM unit goes into System busy (SysB) state. ESA Lockout appears on the MAP display, next to the appropriate unit. This prevents the system (and technicians) from attempting to return the unit to service. When the REX test is complete, the RDLM unit is brought back into service and the same effect repeated with the other unit. This allows the ESA abilities of both units of the RDLM to be tested.

There is no difference between the MAP display of the ESA module being tested and the MAP display normally seen for an ESA module under test.

Effect on calls The takeover and takeback processes on the DLM have an affect on calls that are in the process of being connected. Calls that are already established can experience a 200-millisecond transition period. During this time, Pulse Code Modulation (PCM) is not sent or received from the telephone set. The first DLM unit is returned to service before the other unit is tested.

DLM REX steps

This section provides a step-by-step explanation of what happens in DLM REX tests once the tests have been invoked:

1. If both units of the DLM are InSv, unit 0 is made system busy (SysB); a PM128 state change log is generated with reason of REX in progress; the DLM node status is made InSv Trouble (ISTb) and a minor alarm is generated. If the QueryPM FLT command is entered with the DLM posted, the SysB reason of "REX in progress" is given for the SysB unit.
2. InSv diagnostics are run on unit 1 (which will be in takeover). If any diagnostics fail, the unit is placed ISTb and a PM181 log is generated. If this DLM is an RDLM, an attempt is made to perform ESA REX tests on unit 0. See the "ESA REX Steps" section for more information.
3. Unit 0 is returned to service; both OOS and InSv diagnostics are run. If OOS diagnostics fail, the unit is left SysB status and a major alarm is raised. A PM106 state change log is generated if the unit is returned successfully to service. If InSv diagnostics fail, the unit is placed ISTb state and a PM181 log is generated.
4. If unit 0 is returned to service successfully, steps 1-3 are repeated, except that unit 1 is placed OOS and InSv diagnostics are run on unit 0 in takeover mode.

ESA REX steps

This section provides a step-by-step explanation of what happens in ESA REX tests once the tests have been invoked:

1. Providing the ESA module is InSv, the messaging ability of each of the peripherals involved in the test (the ESA module itself and the DLM units) is tested. If each peripheral passes the messaging tests, the ESA module is placed in SysB status, and OOS tests are run on it. If the tests pass, the ESA module is brought back InSv. If any of these preliminary tests fail, ESA REX tests are not run, and logs and MAP displays indicate the reason.
2. If the preliminary tests pass, the REX tests proceed to place a unit of the DLM in Pseudo ESA, leaving the mate unit InSv in takeover mode. In Pseudo ESA, messaging links for the unit of the DLM involved are switched from the host to the ESA module.

3. Once the unit of the DLM is in Pseudo ESA, the ESA processor exercises the DLM's ability to message to ESA under ESA conditions as well as other diagnostics. After all tests are complete, the DLM unit is taken out of Pseudo ESA.

When ESA REX tests are invoked from the MAP station, the ESA REX steps are invoked twice, once for each RDLM unit. If the REX tests of the first unit pass, the system proceeds to REX test the ESA module using the second unit of the DLM.

Hardware requirements

ESA REX Test for RDLM has no hardware requirements.

Limitations and restrictions

To perform REX tests, an RDLM must be equipped with an ESA and RMM module at the remote site.

Interactions

ESA REX Test for RDLM has no functionality interactions.

Datafill

ESA REX Test for RDLM does not affect data schema tables or office parameters.

Service Orders

ESA REX Test for RDLM does not affect SERVORD.

Operational Measurements

No new OM groups or registers were added for this feature. However, the registers listed below are pegged when the respective PMs are busied during the REX tests. The following groups have a set of registers allocated per PM:

- PM2USB - unit SysB (Group PM2)
- PM2MSBU - module SysB (Group PM2)
- PMUSB - unit SysB (Group PM)
- PMSBP - module SysB (Group PM)

Group PMTYP has a set of registers allocated per PM type. This means there is one set for all DLMs and one set for all ESAs. This category includes the following:

- PMTUSU - unit SysB
- PMTSBP - module SysB

Logs

There are no new logs; however, existing logs contain new text.

User interface

The TST REX command at the ESA level of the MAP display is now implemented in the same manner as it is for LCMs.

Billing

ESA REX Test for RDLM does not affect billing.

AD0902 - RSC-DLM ESA and Intraswitching**Description**

This feature extends Emergency Stand Alone (ESA) and intraswitching capability in the Remote Switching Center (RSC) to handle Meridian Integrated Voice and Data (IVD) digital sets and Meridian Asynchronous Data Option (MADO) units attached to Digital Line Modules (DLMs) within the RSC.

ESA

The ESA function is an emergency service option of the Remote Cluster Controller (RCC) that provides call processing capabilities in the event of loss of communications with the host. The RCC is a peripheral remote connected to a host Line Trunk Controller (LTC) using DS-1 links. It is capable of handling up to nine DLMs, nine LCMs, or a combination of both.

Additional software running in the Central Controller (CC) and RCC provides the ESA functions. If a customer subscribes to the ESA option, it is included in the CC software. The ESA option can be enabled or disabled through an entry in the RCCINV table.

This feature supports Meridian IVD sets and MADO units. Meridian IVD sets are treated like a 2500 set with Primary Directory Number (PDN) as the directory number. Only the PDN and Release keys are supported. Other IVD set features are not supported. MADO units support PDN only, with no modem pooling.

The following Integrated Business Network (IBN) services are now provided to IVD lines in the ESA:

- basic dialing that allows a subscriber to make calls to other subscribers serviced within the RSC
- automatic lines (AUL) with a maximum 15-digit directory number. AULs must be datafilled by service orders. There are up to 255 AULs per RCC, plus one entry for the Plain Ordinary Telephone Service (POTS) operator that is needed for manual lines. Warm lines are not supported.
- hunt group services for POTS and IBN lines. The Multi-line Hunt Group (MLH), Distributed Hunt Group (DLH) and Directory Number Hunt group

(DNH) with sequential line hunting are supported. DLH is treated the same as MLH. There is no circular hunting for DNH.

- routing of invalid termination or vacant termination to reorder
- a maximum of 2,880 members in a customer group (320 for each DLM)
- support for a maximum of 32 customer group for each subtending DLM
- up to eight prefixes or special numbers of a maximum of 15 digits each for each customer group
- station-to-station dialing for one- to six-digit extension numbers
- denied incoming calls for a station
- direct outward dialing with or without second dial tone for termination to another customer group or POTS lines within the same RSC
- inter-customer group calling by the same dialing plan
- primary numbers of the Multiple Appearance Directory Number (MADN), which are treated like regular IBN lines

The following functions are not supported:

- Foreign Exchange (FX) calls
- Line Overflow to a Route (LOR) and Line Overflow to a Directory Number (LOD). Line overflows are routed to busy tones.
- Remote Make Busy (RMB) and Stop Hunt
- Equal access features
- Meridian IVD set and MADN feature keys are not supported. No action will be taken when these keys are pressed.
- Station Message Detail Recording (SMDR)
- NCOS for IBN lines is not supported. This means that customer groups or lines have a restricted dialing plan that is common to all customer groups.
- The Multi-line Variety Package (MVP)
- Conference calls

Only the IBNXL translation selector EXTN is supported for station-to-station dialing. If this selector is not datafilled, the POTS translation is used.

Translations in ESA The following three tables are set up specifically for ESA:

- ESAPXLA
- ESAHNPA

- ESARTE

While in ESA mode, some special numbers, such as 411, 911, or IBN dial plans, require special translations. The ESA prefix translation table, ESAPXLA, stores the special translation data for POTS and IBN terminators. This table is also used for RDLM ESA and RLCM ESA support.

Table ESAHNPA stores translation data for trunks on an RSC while it is in ESA to facilitate NPA/ESN translation to trunks. It can contain a set of prefix trunk entries for each customer group on each RCC node.

Table ESARTE, the routing table, contains the trunk groups that are selected by the entries in the ESAPXLA and ESAHNPA. Table ESARTE must be datafilled before a route can be selected in either the ESAPXLA table or the ESAHNPA table. Each entry in the routing table identifies the ESA trunk group to terminate on, the number of digits to delete, and any digits to prefix. The reference to this route entry is contained in the ESAPXLA table or ESAHNPA table. A maximum of 15 digits can be outputted over a trunk. If more than the maximum digits are specified, the excess digits are truncated. For IBN terminals, modify the CUSTHEAD table to link the ESAPXLA and ESAHNPA data to customer groups.

For IBN terminals, it is necessary to link the information in the ESAPXLA and ESAHNPA prefix tables to a particular customer group. To enable this, a new option called ESAPXLA is made available in the customer header table, CUSTHEAD. This allows the user to specify the prefix translator name associated with the customer group. More than one customer group can share a prefix translator name.

Restrictions on translations for POTS terminators are as follows:

- The ESAPXLA table contains up to 16 entries for each RSC.
- The ESAHNPA table contains up to 32 entries for each RSC.

Restrictions for translations for IBN customer groups are as follows:

- The ESAPXLA table contains up to eight entries per prefix translator name per RSC.
- The ESAHNPA table contains up to 16 entries per prefix translator name for each RSC.

ESATOOLS The CC command ESATOOLS provides a set of tools related to ESA trunking capabilities. Using the facilities provided in ESATOOLS, it is possible to verify ESA static data before sending it to the RCC. The QUERYRCC subcommand of ESATOOLS indicates the supported and unsupported trunks on a particular RCC. The subcommand ESATRAVER displays the translation and routing data used for the specified call if it is made on the RCC while it was in ESA.

Intraswitching

Intraswitching is an optional feature that allows subscribers on the same remote peripheral to be connected without the DMS network handling the call once it is in progress. Software running in the CC and RCC provides intraswitching functions. Because both RCC units are equipped with the same version of the software, intraswitching capability exists in both RCC units. This option can be enabled or disabled through an entry in the RCCINV table.

The flow of an intraswitched call setup at the RCC is described in the steps below:

1. Subscriber A goes off-hook and dials subscriber B. A CC path end, from the RSC to the CC, is seized for subscriber A.
2. To attempt to terminate the call from subscriber A at subscriber B, a CC path end is obtained for subscriber B.
3. The CC attempts to connect the call through a network connection. A check is made in Table RCCINV, field INTRASW, to determine if intraswitching is allowed at the RCC. If so, the CC frees the path ends for both subscribers.
4. The LGC/LTC releases the associated C-side path end. An intraswitched channel is allocated for the call.
5. The P-side path ends provide the necessary signaling tones to both subscribers.
6. Subscriber B answers the call. The Pulse Code Modulation (PCM) connection is made over the intraswitching channel. The P-side path end is released.
7. When either subscriber goes on-hook, an EXIT message is passed to the CC and the intraswitching channel is deallocated.

Note: This example assumes that both subscribers are on the same peripheral.

Hardware requirements

RSC-DLM ESA and Intraswitching has no hardware requirements.

Limitations and restrictions

RSC-DLM ESA and Intraswitching has no limitations or restrictions.

Interactions

RSC-DLM ESA and Intraswitching has no functionality interactions.

Datafill

The INTRASW field in table DLMINV is no longer forced to "N". If it is set to "Y", intraswitching is allowed for that RDLM node.

Service Orders

RSC-DLM ESA and Intraswitching does not affect SERVORD.

Operational Measurements

The OM labeled RLCDIS is pegged during RDLM intraswitching activity, but no new OMs are created. RDLMs have their own RLCDIS pegs for the following:

- total intraswitch call attempts
- unit intraswitch call attempts
- unit 1 intraswitch call attempts
- total intraswitch channel usage
- unit 0 intraswitch channel usage
- unit 1 intraswitch channel usage
- total blocked intraswitch attempts
- unit 0 blocked intraswitch attempts
- unit 1 blocked intraswitch attempts

Each of the pegs for group RSCIS is pegged for calls involving lines on DLMs or RDLMs on a given RCC.

The following are some of the line-to-line configurations that the intraswitching feature supports:

- If both terminals are on the same RDLN with intraswitching on in both peripherals (RCC and RDLM), intraswitching is attempted on the RDLM first. In this instance, the RLCDIS call attempted peg, ISTOTATT, is increased, intraswitching channels traffic busy usage counter, ISTOTTRU, is increased for every slow sample the call is up, and RSCIS OMs are not pegged.
- If the call is blocked at the RLCD level, intraswitching is then attempted at the RCC level. In this case, RLCDIS intraswitched calls blocked peg, ISTOTBLK, is increased. For a call intraswitched within a unit, the blocking OM for that unit is also pegged. The RSCIS line-to-line intraswitch attempted peg, RSCISALL, is increased, and the intraswitching channel busy usage counter, RSCISCBU, is increased for every slow sample the call is up.
- If the call is also blocked at the RCC level, the call reverts back to the network. The RSCIS blocking line-to-line peg, RSCISBLL, is increased.

Logs

RSC-DLM ESA and Intraswitching does not affect logs.

User interface

RSC-DLM ESA and Intraswitching does not change the user interface.

Billing

RSC-DLM ESA and Intraswitching does not affect billing.

AD1288 - Aries Table Control and CPI**Description**

This feature introduces the Aries line of Integrated Voice and Data (IVD) sets and options to the Meridian SL-100. Five Aries sets and several options are introduced to the Meridian SL-100 Central Control (CC) in the following areas:

- Table Control
- Call Processing
- Call Progress Indication
- Facilities Maintenance

Aries sets

The Aries line of IVD sets comprises five telephone sets. These sets are described in the following paragraphs.

- M2008: The Aries M2008 eight-key set supports the following options:
 - M0200 display option
 - Asynchronous data option
 - External alerter
 - Power supply option
- M2616: The Aries M2616 16-key set supports the following options:
 - M0200 display option
 - One or two M0022 22-key add-ons giving the set a total of 38 or 60 keys
 - Asynchronous data option
 - External alerter
 - Handsfree
 - Power supply option

- M2016S: The Aries M2016S 16-key secure set supports the following options:
 - M0200 display option
 - One or two M0022 22-key add-ons giving the set a total of 38 or 60 keys
 - Asynchronous data option
 - Factory installed power supply option
- M2216A: The Aries M2216A 16-key set supports the following options:
 - Factory installed M0200 display option
 - One or two M0022 22-key add-ons giving the set a total of 38 or 60 keys
 - Asynchronous data option
 - External alerter
 - Two RJ-11 jacks
 - Power supply option

Both RJ-11 jacks in the M2216A set support electret headsets. One RJ-11 jack is listen-only; the other jack is used for both transmitting and receiving. This set is fully operational with loop power.

- M2216B: The Aries M2216B 16-key set supports the following options:
 - Factory installed M0200 display option
 - One or two M0022 22-key add-ons giving the set a total of 38 or 60 keys
 - Asynchronous data option
 - External alerter
 - One PJ-327 jack
 - One RJ-11 jack
 - Factory installed power supply option

With the factory installed external power supply option, both the PJ-327 jack and the RJ-11 jack are functional. The PJ-327 jack supports a carbon headset for transmitting and receiving, and the RJ-11 jack supports a listen-only electret headset. Without the power supply option, the M2216B is completely powered by the subscriber loop, the PJ-327 jack is not functional, and the electret headset in the RJ-11 jack is used for both transmitting and receiving.

Aries options

Aries IVD telephone sets support a display option, a 22 key/lamp add-on option, an asynchronous data option, an external alerter option, and an external power supply option. These options are described in the following paragraphs.

- Meridian Programmable Data Adapter (MPDA): The entire line of Aries telephone sets support the MPDA, asynchronous data option. The MPDA is a single printed circuit card that is mounted in the Meridian Aries digital telephone set. The Aries asynchronous MPDA includes the following features:
 - Keyboard Dialing (KBD): The ability to originate data calls to local and remote hosts or data terminal equipment (DTE) by using the terminal keyboard. Keyboard dialing is only supported for ASCII, asynchronous, character mode, and interactive terminals.
 - AT Dialing: The capability of originating data calls using intelligent modem command set AT similar to Industry Standard Hayes Smart modem command set.
 - Extended AT Command Dialing: The capability to originate data calls from a data terminal or workstation to local and remote hosts/DTE from the MPDA.
 - Echo: During call set up, all user inputs are echoed by the MPDA to the terminal. The user issues the command "EO" to tell the MPDA not to echo.
 - MPDA Response Display: All messages displayed, to the terminal, are in upper case. The response from the MPDA is in word or digit code. The default response is word.
 - Call Disconnection: The user enters a command which causes the far end to disconnect the data call.
 - Escape Sequence: When configured for AT compatible keyboard dialing, the MPDA operation consists of two states: the command state and the online or transparent data state. In the keyboard dialing command state, user inputs are interpreted as call setup information. Once the call is established, the MPDA enters the online state and transmits all data on the RS232-C interface transparently across the network to the far end duplex device. It is the responsibility of the DTE connected to the far end MPDA to respond to user input. To return from the online state to the command state, the user uses the escape code sequence.
 - Parameter Registers (S registers): The parameter registers (S0 to S12) are used to program various call setup parameters. Querying the value of a particular S-register is done by the command Sr?, where "r" = 1 to 12.

- Script File Learn Mode for Dumb Terminals: The capability of automatically dialing the local or remote host and transmitting the login sequence each time this feature is activated.
 - Self Diagnostics: When the MPDA is powered up, it executes the self diagnostic routine. The LED on the MPDA indicates the results of the diagnostics:
 - LED off: No power or bad LED
 - LED on: Failed self test
 - LED flashing (2 hz): OK
 - LED distinctive flash: Loss of communication with set, but MPDA is good
 - Download Request: Upon powering up, the MPDA sends a message requesting profile information about itself. Upon receiving this request, the DSIP downloads this information to the MPDA. Profile information is also being downloaded to the MPDA from the Central Control (CC) whenever the MPDA is Returned to Service (RTS) or when the Digital Line Module (DLM) is RTS.
- M0200 Display Option: The entire line of Aries telephone sets support the M0200 display option. The M0200 display option is a modular accessory that uses a two-line by 24-character dot-matrix liquid crystal display. Information originating from the switch, MPDA, set, or the display option can be displayed on the screen. Sets equipped with a display option have added local features over the basic set. These features are:
 - Display of call timers
 - Predial: Predial allows the user to enter digits before going off-hook. This is only possible once a display option has been physically attached to the set.
 - M0022 Key/Lamp Option: A modular accessory that connects to the Aries terminals and provides 22 additional programmable feature keys. The terminals and modules attach such that they look like one integrated unit. This option is only available with the 16-key Aries sets M2616, M2016S, M2216A, and M2216B. A maximum of two modules can be added giving possibilities of 16, 38, and 60 programmable feature keys at these Aries stations.
 - Power supply option: The power supply option allows the Aries sets and other installed Aries options to use external (local) power, rather than subscriber loop power. The external power supply is used with Aries sets having the external alerter, the MPDA, the M0022 key/lamp option, boosted alerting volume, or carbon headsets installed.

Hardware requirements

The Meridian Aries IVD sets are only supported on the 7X49 Digital Line Module with 8X47BA Enhanced Digital Port Cards (EDPCs). The EDPC is a 16-port line card, with 16 voice and 16 data channels. There are two channels per port. The even-numbered channels (0 through 30) are the voice channels and the odd-numbered channels (1 through 31) are the data channels.

Limitations and restrictions

The features available to the Aries set/MPDA user are consistent with those available on other IVD sets/MADOs with the exception of the following:

- In Aries M2616 sets with handsfree, key 16 is dedicated to the handsfree option, disabling any features or directory numbers assigned to key 16.
- In sets that have the MPDA or M0200 display option, the top right feature key is dedicated as the local program mode key. This key controls access to the display or MPDA for parameter selection.
- Due to power consumption, the power supply option is factory installed in the Aries M2016S. This set does not operate on loop power.
- The user is restricted to entering only 0 to 9 in the drawer (or line subgroup) position of the Line Equipment Number (LEN), when assigning (LENs) to the Digital Line Module (DLM).
- The Meridian IVD set must be added to an even numbered LEN.
- The MADO and MPDA must be added to an odd numbered LEN.
- If one of the 32 lines (16 voice lines and 16 data lines) in a Meridian IVD port card becomes disabled, it cannot be physically detached from a port card in the same way a line card can be removed from a drawer. A new LEN must be assigned to provide the subscriber continued service. To avoid assigning the bad LEN to another subscriber, the LEN must be entered in table IVDTRBL. Once entered in this table, the bad LEN cannot be reassigned.

Interactions

Aries XPM Software-Phase I is required for the Aries sets to function.

Aries Table Control and CPI has no functionality interactions.

Datafill

Table IVDINV is modified to accept the Aries line of sets.

Service Orders

Aries Table Control and CPI does not affect SERVORD.

Operational Measurements

Aries Table Control and CPI does not affect Operational Measurements.

Logs

Aries Table Control and CPI does not affect logs.

User interface

Aries Table Control and CPI does not change the user interface.

Billing

Aries Table Control and CPI does not affect billing.

AD1289 - Aries XPM Software**Description**

Changes are made to the Terminal Processing Task (TPT) to incorporate the Meridian Module Telephone (MMT) series of Integrated Voice and Data (IVD) digital sets on the Meridian SL-100. Changes are made to decode/encode the new messages necessary to support the MMT terminals and options. Other areas that involve modifications include:

- Call Progress Indication (CPI)
- MMT Call States
- Terminal diagnostics program or Station Ringer Test (SRT)

Call Progress Indication (CPI)

CPI is any information that describes what is happening to a call as it proceeds through the network to its destination. Information regarding alerting of the called party, answer by the called party, and routing to treatments, and tones and announcements are examples of CPI. The display and MPDA options of the MMT terminal must be updated.

MMT Call States

The MMT terminals support the following call processing states, which are also implemented on M3000 and M2317 sets:

- IDLE: On-Hook (voice and data)
- DIALTONE: Ready to transmit dialed digits
- ESTABLISHED: Connection made

MMT Terminal Diagnostics Program

The MMT Terminal Diagnostics program, also referred to as the Station Ringer Test, tests the hardware of the MMT terminal. The operation of the set is verified by providing a unique visual and/or audio response to each key hit.

Hardware requirements

The MMT series of IVD digital sets are supported only on the DLM with 8X47BA Digital Port Cards (DPCs) and 8x49AB Digital Set Interface Processor (DSIP) and, on the IPE.

Limitations and restrictions

The following restriction and limitations apply:

- The features available to the MMT user are largely consistent with those now available on the Meridian 2000 series sets; the features available to the MPDA user are largely consistent with those available for the MADDO.
- The MMT terminals are IVD sets; one voice and one data circuit are multiplexed together on a single standard twisted pair using Time Compression Multiplexing (TCM). The voice and data circuits for a given MMT must be assigned to consecutive Line Equipment Numbers (LENs), the even circuit number being assigned to the voice line and the odd circuit to the data line.
- Since the 8X47 DPC is a multiple-port (32 port) card, the same maintenance restrictions that apply to M2000/M3000 series sets also apply to MMT terminals.
- A Primary Directory Number (PDN) must be assigned to key one of the set before any features or DNs can be assigned to the set.
- Support of MMT terminals requires the AB version of the 8X49 (DISP) card in the DLM.
- The firmware version of the 8X49AB DSIP card must be 6.7 or greater in order for the MMT SRT to function properly.

Interactions

Aries XPM Software has no functionality interactions.

Datafill

Aries XPM Software does not affect data schema tables or office parameters.

Service Orders

Aries XPM Software does not affect SERVORD.

Operational Measurements

Aries XPM Software does not affect Operational Measurements.

Logs

Aries XPM Software does not affect logs.

User interface

Aries XPM Software does not change the user interface.

Billing

Aries XPM Software does not affect billing.

AD1670 - Aries Digital Set Interface Processor Firmware**Description**

This feature enables the Meridian SL-100 to support Aries telephone areas and data cards. This feature provides additional signals/messages required to support the Aries set. The signaling consists of messages for call and data processing when the Aries set is equipped with the Aries Data Adapter (ADATA).

Maintenance

Tip and Ring polarity reversal is provided as a new maintenance function for Aries set detection. Aries set detection is provided by reversing the polarity of the 30V applied to the loop tip and ring. With normal polarity, the Aries set draws no current and is not detected by the facility measurement circuits. With polarity reversed, the set draws current and is detected by the sensors.

Hardware requirements

Aries Digital Set Interface Processor Firmware has no hardware requirements.

Limitations and restrictions

Aries Digital Set Interface Processor Firmware has no limitations or restrictions.

Interactions

This feature needs the following features to function properly:

- BF0828
- FD8X55
- AD1288
- AD1289
- AD1782
- AD1785

Datafill

Aries Digital Set Interface Processor Firmware does not affect data schema tables or office parameters.

Service Orders

Aries Digital Set Interface Processor Firmware does not affect SERVORD.

Operational Measurements

Aries Digital Set Interface Processor Firmware does not affect Operational Measurements.

Logs

Aries Digital Set Interface Processor Firmware does not affect logs.

User interface

Aries Digital Set Interface Processor Firmware does not change the user interface.

Billing

Aries Digital Set Interface Processor Firmware does not affect billing.

AD1671 - Aries Data Firmware**Description**

This firmware allows the Aries Data Card to interface with the Aries telephone sets and provide support for the following features:

- Key Pad Dialing (KPD)
- Key Board Dialing (KBD)
- AT Dialing
- Script

Key Pad Dialing

KPD provides the user the capability to originate data calls to local and remote hosts. The KPD feature is applicable for both synchronous and asynchronous modes.

The following key features are supported with the ADATA asynchronous data option:

Key Features

Features	Key Pad Dialing	Key Board Dialing
Auto Dial	X	X
Speed Call		X
Ring Again	X	X
Display of Call Number	X	X

Features	Key Pad Dialing	Key Board Dialing
Call Forward (Meridian 1 only)		X
Modem Pooling		X

Key Board Dialing

KBD refers to the capability of originating data calls to local and remote hosts by using the terminal keyboard. The KBD feature is only supported for ASCII, asynchronous, character mode, and interactive terminals equipped with EIARS-232C interface.

The KBD feature provides the following capabilities:

- call origination and termination to/from local and remote data devices
- Ring Again capability
- Auto Dial calling
- Speed Calling
- automatic and manual answering of incoming calls
- Automatic Set Relocation
- programming of speed call

AT dialing

AT dialing refers to the capability of originating data calls to local and remote hosts or DTE using a terminal keyboard or personal computer. The AT dialing feature is supported only for ASCII, asynchronous, character mode, and interactive terminals equipped with EIARS-232-C interface. AT dialing supports many of the features of AT Smartmodem.

The AT dialing provides the following capabilities:

- call origination to local and remote hosts
- modem pool calls
- automatic and manual answering of incoming calls
- speed calls

Script file

The script file feature allows users to store host/terminal dialogs in the Aries Data Adapter. Script files can be recalled and used to automatically perform log on procedures. Script files are associated with either the Auto Dial feature or the Speed Call feature.

Hardware requirements

Aries Data Firmware has no hardware requirements.

Limitations and restrictions

The following are the limitations on the ADATA, since there are no dedicated Data DN key:

- Modem Pooling is not supported.
- Ring Again is placed automatically.
- Speed Call is not supported.
- Manual Answer is not supported.

The following are database considerations for the proper operation of keyboard dialing:

- Data DN and secondary DN have single appearances.
- Access to remote hosts allows external calls.
- The Data TN is configured with the digit display feature.
- The virtual keys of the Data Option are assigned.
- The Data Option have the following class of service:
 - Warning Tone Denied (WTD)
 - Call Pickup Denied (PUD)
 - Call Forward No Answer Denied (FND)
 - Call Forward Busy Denied (FBD)
 - Data (DTA)
 - Automatic Digit Display (ADD)

Interactions

Aries Data Firmware has no functionality interactions.

Datafill

Aries Data Firmware does not affect data schema tables or office parameters.

Service Orders

Aries Data Firmware does not affect SERVORD.

Operational Measurements

Aries Data Firmware does not affect Operational Measurements.

Logs

Aries Data Firmware does not affect logs.

User interface

Aries Data Firmware does not change the user interface.

Billing

Aries Data Firmware does not affect billing.

AD1782 - Aries Service Orders**Description**

This feature adds the Aries line of Meridian Integrated Voice and Data (IVD) sets to Meridian SL-100 Service Orders. ["Aries sets Service Orders"](#) (page 173) shows the Aries sets included.

Aries sets Service Orders

Aries Sets	Description
M2008	Aries 2008 8 key set. This set has the M0200 display option attached to it.
M2016	Aries 2016 16-key set. This set has the following options: • M0200 display option • One or two M0022 22-key add-ons allowing a total of 38 or 60 keys • Handsfree. Handsfree takes the position of key 16
M2016S	Aries 2016 set. This set is a secure IVD digital telephone set with 16 programmable feature keys. This set has the following options: • M0200 display option • One or two M0022 22-key add-ons allowing a total of 38 or 60 keys
M2216A and B	IVD digital ACD telephone sets with 16 programmable feature keys and an M0200 display option factory installed. Two versions of the M2216 ACD set exist: • M2216A has two RJ-11 jacks and supports only electronic sets • M2216B has one PJ-237 jack and one RJ-11 jack One jack is listen only and the other jack allows both transmit and receive.
MPDA	Meridian Programmable Data Adapter. An integrated data module that is a single printed circuit card that is mounted in the Meridian Aries Digital telephone sets.
Key set	A telephone set that, in addition to the standard keyboard, has keys that are used for feature or Directory Number (DN) assignments.
M0022	22 key add-on option. This can be added to M2616, M2016S, M2216A, and M2216B sets. Each of these add-ons allows the user 22 additional keys for feature or DN assignment. Up to two of these can be added to each set.
M0200	This is the display option for Aries M2008, M2616, and M2016S sets. The M2216A and M2216B sets come with the display option installed.

This feature provides the user with a method of maintaining these sets with the database. Commands are provided to:

- add/delete options for a subscriber
- suspend or restore service
- query information about a subscriber

In addition to Service Orders, information about the subscriber line is obtainable using the Database Line Queries available to the user. These line queries include:

- QHU
- QHA
- QHASU
- QLOAD
- QLENWRK
- QLEN
- QDNSU
- QDNWRK
- QDN

Hardware requirements

The Meridian IVD sets are only supported on the NT7X49 Digital Line Module with NT8X47BA Enhanced Digital Cards (EDPCs). The EDPC is a 16-port line card, with 16 voice and 16 data channels. There are two channels per port. The even-numbered channels (0, 2, ..., 30) are the voice channels and the odd-numbered channels (1, 3, ..., 31) are the data channels.

Limitations and restrictions

When assigning Line Equipment Numbers (LENs) to the DLM, the user is restricted to entering only 0 to 9 in the drawer (or line subgroup) position of the LEN.

When assigning an IVD voice set to a LEN, the set can only be added to an even numbered LEN. When assigning the data device (MADO or MPDA) to a LEN, the device can only be an odd numbered LEN.

Meridian NT8X47 port cards contain 32 lines for use; 16 voice lines and 16 data lines. These lines cannot be physically detached from a port card in the same way.

When adding the M0200 display option to the Meridian Modular Telephone (MMT) Integrated Voice and Data (IVD) set, the display time and date portion of the feature is not active, until the set is reset using a BSY followed by an RTS at the MAP, or unplugged at the jack and reconnected.

Interactions

Since IVD sets are already included in the Service Order environment, impact is minimal. This feature is an extension of existing p-phone/Meridian IVD Service Orders. The operation of Service Orders for p-phones, data-units, M5000 series, and Meridian IVD M2112, M2018, M2317, and M3000 sets are not affected.

Datafill

Aries Service Orders does not affect data schema tables or office parameters.

Service Orders

This is a Service Order feature. Refer to the description section for further description of the changes.

Operational Measurements

Aries Service Orders does not affect Operational Measurements.

Logs

Aries Service Orders does not affect logs.

User interface

Aries Service Orders does not change the user interface.

Billing

Aries Service Orders does not affect billing.

AD1785 - Aries Feature Operation and Displays**Description**

This feature provides the necessary software to display information to a M0200 display on an Meridian Modular Telephone (MMT) IVD (Integrated Voice and Data) set. The M0200 is available for the M2008, M2616 and M2016S sets and comes as standard equipment for the MS2216A and M2216B sets.

This feature also provides modified facility maintenance diagnostics for testing the MMT sets, profile downloading for the MPDA (Meridian Programmable Data Adapter), MPDA system parameter download, and

determines operation of the message waiting light on the MMT sets. The MMT set can also be attached to a personal computer, allowing downloading of key and lamp status information to the PC.

User features

This feature allows users to do the following:

- display time and date
- display length of calls
- predial a number
- see the name or number of the party calling
- set volume levels for ringing, buzzing, on-hook dialing, handset, headset and hands free modes with the aid of display graphics
- view displayed general messages

Note: When adding the M0200 display option to the Meridian Modular Telephone (MMT) Integrated Voice and Data (IVD) set, the display time and date portion of the feature is not active until the set is reset using a BSY followed by an RTS at the MAP, or unplugged at the jack and reconnected.

On an MMT set equipped with a display, the display guides the user through the steps required to program the feature. Users can use the display to activate or deactivate the following options:

- Call Forwarding
- Auto Answer
- Make Set Busy
- Call Transfer
- Conferencing
- Autodial
- Call Park
- Ring Again
- Speed Call
- Group Intercom
- Expensive Route Warning

Facility maintenance

The MMT line of IVD sets are part of the current facility maintenance offered for other IVD sets. The current IVD facility maintenance diagnostics are modified for testing the MMT sets in the same way other IVD sets are tested.

MPDA profile downloading

The profile information for downloading to the MPDA is taken from information entered in table DPROFILE. The information contains the data required for the operating parameters of the MPDA. Profile downloading for the MADO (Meridian Asynchronous Data Option) currently takes place whenever the DLM (Digital Line Module) peripheral or the MADO itself is returned to service, or when the MADO requests a profile. The profile for an MPDA is downloaded under the same circumstances that a profile for a MADO is downloaded.

When the MPDA is originally plugged into its jack, it sends an equipped message to the peripheral. If the peripheral has no profile information, it requests profile information to be downloaded from the CC (Central Control). The CC then sends profile information down to the MPDA, as is currently done for the MADO.

MPDA system parameter download

The MPDA can operate without profile information, but cannot operate without the system parameters. The system parameters required by the MPDA include the following information:

- Meridian 1 or Meridian SL-100 system indication
- idle timeout value
- Directory Number of the MPDA

These are sent to the MPDA upon receipt of a request for them from the MPDA. The idle timeout value is retrieved from the profile information associated with the MPDA in the table DPROFILE. If there is no profile information available, a default value of 0 (no timeout) is used. Time out values may be 0 to 3, with 1 indicating 15 minutes, 2 indicating 30 minutes and 3 indicating one hour of idleness, before the data call is automatically released.

Operation of the MMT message waiting lam

The MMT IVD sets have a special lamp to indicate messages waiting. The lamp has no key associated with it, but comes on whenever a is waiting. Message waiting allows assignment of it as a code access feature on MMT sets.

Downloading key and lamp status information

When an MMT set is attached to a PC, the PC can request information about the features and Directory Numbers assigned to the set. When the switch receives the request, it collects the information and sends it to the LTC (Line Trunk Controller). The LTC then sends it to the PC without intervention from the MMT set.

The PC may also need to know the status of the lamps on the set. When the PC requests the status of the lamps, the switch schedules a lamp audit for that particular set. When the audit runs, the lamp status goes to the PC without intervention from the set.

Note: This feature requires special software on the PC to interpret the information about the keys and the status of the lamps.

Hardware requirements

The Meridian MMT IVD sets are supported only on the 7X49 Digital Line Module with 8X47BA Enhanced Digital Port Cards (EDPCs). There are two channels per port. The even-numbered channels (0-30) are voice channels, and the odd-numbered channels (1-31) are data channels.

To determine if a particular Meridian voice set is equipped with an MPDA, add 1 to the circuit number of the LEN (Line Equipment Numbers) for the voice set to yield the LEN for the corresponding data channel and look in table IVDINV to see if there is an MPDA datafilled for this LEN.

Limitations and restrictions

The following limitations and restrictions apply to Aries Feature Operation and Displays:

- When assigning LENs to a DLM, users can enter only 0 to 9 in the drawer or line subgroup position of the LEN. For example, if a user wants to assign an IVD set to LEN 2 0 1 10, the third position, which is the 1 in this case, is the drawer number of the LEN. When assigning an IVD voice set to a LEN number, the set can only be added to an even numbered LEN. For example, the set can be added to LEN 2 0 1 4, but not to LEN 2 0 1 5. Conversely, the MPDA can only be added to odd numbered LENs. These restrictions are necessary because of the way IVD sets and data devices are paired. The even LEN is for an IVD set's voice line, and the odd LEN is for that set's data device.
- Meridian 8X47 port cards contain 32 lines (16 voice and 16 data lines) that cannot be physically detached from a port card in the same way that a line card, such as a 6X21, can be removed from a drawer. If an IVD line becomes disabled, it cannot simply be pulled out and replaced, as can a 6X21 card. Because the one line is attached to the port card, removing the port card could interrupt the 31 other lines that are still good. To allow continuing service, another line can be assigned to the user. However, to do so frees the bad LEN, which another user can now choose. To avoid assigning a bad LEN to another user, this LEN can be entered in the IVDTRVL table. When a LEN is assigned to this table, it cannot be used to provide service. This table is checked before a LEN can be assigned to establish service.

- The set must have a Primary Directory Number (PDN) datafilled before data filling anything else for the set.
- If an MMT set has a display or has an MPDA datafilled, key 8 of the set becomes a local program key and cannot be used for feature or DN assignment.
- The M0200 display can only be assigned to the M2008, M2616 and M2016S MMT sets, and comes standard with the M2216A and M2216B sets.
- The M0022 22-key addition can only be added to the M2616, M2016S, M2216A and M2216B sets.
- Entries for table IVDTRBL must be made through table control and not service orders.
- Handsfree mode for the M2616 set is assigned to key 16, which prevents that key from being used for feature or DN assignment.

Interactions

Aries Feature Operation and Displays has no functionality interactions.

Datafill

Aries Feature Operation and Displays does not affect data schema tables or office parameters.

Service Orders

Aries Feature Operation and Displays does not affect SERVORD.

Operational Measurements

Aries Feature Operation and Displays does not affect Operational Measurements.

Logs

Aries Feature Operation and Displays does not affect logs.

User interface

Aries Feature Operation and Displays does not change the user interface.

Billing

Aries Feature Operation and Displays does not affect billing.

AD1802 - MSN N00 Dialing**Description**

This feature provides N00 dialing on a Meridian SuperNode (MSN) network. The Meridian SL-100 accepts an N00 number originated on-net that is routed to the Local Exchange Carrier (LEC) and back to the MSN, or an

N00 number originated off-net and routed by the Equal Access End Office (EAEO) or Access Tandem (AT) to the MSN. The call is received over a Feature Group D (FGD) interface, routed through the MSN network, and terminated to an on-net or off-net destination.

N00 numbers include the following:

- 800 Incoming Wide Area Telephone Service (INWATS)
- 800 Universal Access (UA) service
- 700 and 900 services

800 INWATS Service

INWATS is a special service designed to meet the needs of customers who receive substantial volumes of long distance calls. This service allows a customer to receive telephone calls originating within specified service areas without a charge to the originating party. The terminating party, the customer, is charged for all calls.

Meridian SuperNode 800 INWATS service provides a customer with the capability to carry 800 INWATS calls routed to the customer's network by a given LEC. These calls are then routed through the MSN network to their on-net or off-net destinations.

800 Universal Access Service

Universal Access allows a customer to gain access to their network from various locations by dialing an 800 access code. The customer enters an authorization code and optionally an account code for screening and billing purposes. After gaining access to their network, the customer can dial any number valid in the caller's dial plan.

MSN 800 Universal Access service provides a customer with the ability to gain access to their network through a Feature Group D (FGD) interface by dialing an appropriate 800 number. After receiving the 800 number, the Meridian SL-100 returns a special dial tone (SDT) to the caller. From this dial tone, the caller dials the authorization code, destination digits, and optional account code. The destination digits must be dialed according to the caller's dial plan.

700 and 900 Services

700 and 900 numbers are either called party billed or calling party billed. Currently, one use of 700 calls is to give the caller an announcement stating that they have subscribed to the network of that 700 number.

MSN 700 and 900 services provide a customer with the capability to receive 700 and 900 numbers through a FGD interface, and charge the calls to either the originating or terminating party. The party that is billed depends on the datafill of the particular 700 or 900 number dialed.

If the call is called party billed, the 700/900 number can require validation of the caller's Automatic Number Identification (ANI). This requirement is specified by the datafill of each 700/900 called party billed number. An example of a called party billed call in which the caller's ANI must be validated is using a 700 number to verify that callers are subscribed to a given network. ANI validation is not the same as ANI screening.

If the number is calling party billed, the caller is charged a flat rate for each call, rather than being charged according to the call duration. In addition, ANI screening can be performed on the originator. Whether or not ANI screening is performed is based on a trunk group parameter. If ANI screening is performed for MSN 700 and 900 calls, it is performed in the same manner as for any other MSN pure FGD calls with one exception. Unlike other pure FGD calls that require ANI screening, MSN 700 and 900 calling party billed calls do not obtain a new customer group and NCOS from the ANI to translate the call.

Incoming Digit Format

The MSN receives two streams of digits from the EAEO or AT in the following format:

```

KP + (II + ANI) + ST
KP + N00 + NXX-XXXX + ST

```

Where N = 2 to 9, X = 0 to 9, Y = 0 to 9, and in parenthesis items are optional.

Whether or not ANI (II + ANI) is sent to the MSN depends on the datafill of the ANIDIGS field in Table TRKGRP.

800 Calls For 800 calls, the digit streams can also come from the EAEO or AT in the following format:

```

KP + (II + ANI) + ST
KP + 00Y + NXX-XXXX + ST

```

If the EAEO or AT that interfaces to the Meridian SL-100 serves only one NPA, the second stream of digits comes into the MSN in the 800-NXX-XXXX format.

If the EAEO or AT that interfaces to the Meridian SL-100 serves more than one NPA, the second stream of digits can come into the MSN in either format. If the originating NPA is the same as the NPA of the office that interfaces to the MSN, this stream is in the 800 format. Otherwise, it is in the 00Y format.

For the case where the 00Y format is used, the EAEO or AT strips the 800 digits and replaces them with 00Y. The Y digit is used to represent the NPA of the originator. The Bell Operating Company (BOC) notifies the MSN of the mapping of Y digits to NPAs. However, since the originating NPA is provided in the ANI, the 00Y digits are not needed by the MSN. The MSN strips the 00Y digits and replaces them with "800" so that proper translations and routing can be performed.

ANI Screening - 800 Calls

ANI screening is not performed on 800 calls. However, the ANI is checked to insure that the NPA is received in the ANI.

The originating NPA is required in order to provide Banded Billing capabilities for INWATS. Banded Billing allows customers to charge INWATS subscribers different rates based on how far away the call originator is.

If NPA is not received in the ANI, the call is blocked and partial dial (PDIL) treatment given to the caller. This treatment is datafilled in table TMTCNTL.

ANI Screening - 700/900 Calls

ANI screening is performed on some 700/900 calls. Whether or not a call is screened depends on the datafill of table TRKGRP, and on how the call is billed.

If the ANISCREN field in table TRKGRP is datafilled "N", ANI screening is not performed. If this field is datafilled "Y", ANI screening may or may not be performed on a given 700/900 call. Whether or not a 700/900 call is screened depends on how it is billed.

ANI Validation Required ANI screening is not performed on these types of calls. However, a 10-digit ANI must be sent to the MSN for ANI validation. A valid ANI is an ANI that is datafilled in table FGDANISC, the ANI screening table for FGD calls. If the caller's ANI is not found in this table, ANI validation fails, the call is blocked, and the caller is given vacant code treatment.

ANI Validation Not Required No form of ANI screening is performed on these types of calls. No ANI is required in this case.

Calling Party Billed ANI screening is performed on calling party billed 700/900 calls. If the ANI is not sent to the MSN, the call is blocked and partial dial treatment is given to the caller.

With 700/900 calls, unless field ANISCREN in table TRKGRP is datafilled "Y", ANI screening is not performed.

N00 Pretranslator Screening

The first three digits of the second-digit stream is screened. If these digits are "N00", the new N00 Pretranslator table, table N00PXLA, is accessed to determine if the N00 number is an 800 INWATS, 800 Universal Access, 700, or 900 number. If the N00 number is not datafilled in this table, the call is blocked and vacant code treatment (VACT) is given to the caller. This treatment is datafilled in table TMTCNTL.

Note: The 00Y digits of 800 numbers are stripped and replaced with "800" at the time the first three digits are screened for being "N00".

800 Universal Access If table N00PXLA designates the 800 number as a UA number, the ANI is checked to insure that the NPA is present. If the NPA is present, translations proceed as specified for Universal Access Screening. Otherwise, the call is routed to PDIL treatment.

800 INWATS If table N00 PXLA designates the 800 number as an INWATS number, additional information is obtained from this table before translations proceed. This additional information consists of a new NCOS, as well as a new number. This "new number" is the actual number to which the 800 INWATS call must terminate. In addition, the ANI is checked for the originating NPA at this time.

After this information is obtained and if the NPA is found in the ANI, the new number obtained from the table is translated based on the customer group of the incoming trunk group and the new NCOS obtained from the table using regular IBN translations.

If the NPA is not found in the ANI, the call is routed to PDIL treatment.

700 and 900 Calls If table N00PXLA designates the N00 number as a 700 or 900 number, additional information is obtained from this table before translations proceed. First, whether the call is called or calling party billed is established. These two scenarios are discussed in the following:

- **Called Party Billed** - a new NCOS, as well as a new number is obtained. This new number is the actual number to which the 700/900 call must terminate. In addition, whether or not the caller's ANI must be validated is determined by the datafill. If ANI validation is required, table FGDANISC is checked for the caller's ANI. If the ANI is not found, the call is blocked and the caller given VACT. If the ANI validation is not required or if ANI validation passes, the new number is translated based on the customer group of the incoming trunk group and the new NCOS obtained from table N00PXLA using regular IBN translations.
- **Calling Party Billed** - a new NCOS, as well as a new number is obtained. This new number is the actual number to which the 700/900 call must terminate. In addition, ANI screening is performed on the originating

party. If ANI screening fails, the call is blocked and the caller given VACT. If ANI screening passes, the new number is translated based on the customer group of the incoming trunk group and the new NCOS obtained from table N00PXL A using regular IBN translations. Note that unlike other pure FGD calls which require ANI screening, MSN 700/900 calling-party-billed calls do not obtain a new customer group and NCOS from the ANI to translate the call.

Universal Access Screening

After being screened by table N00PXL A, 800 UA calls are translated using regular IBN translations in order to be routed to table DNROUTE. IBN translations use the customer group and NCOS of the trunk group over which 800 calls come into the MSN in order to translate and route the calls to table DNROUTE.

The 800 UA number must be datafilled in table DNROUTE as a Meridian Off-net Access (MONA) Directory Number (DN). Translations should be set up so that 800 calls not terminating to MONA will not terminate to valid routes. In this way, if an 800 number is not datafilled as a MONA DN, the call is blocked and the caller receives VACT.

For 800 calls routed to table DNROUTE, the MONA feature is used to return Meridian SL-100 dial tone to the caller and to collect an authcode (authorization code), destination digits, and optionally, an account code.

The UA call has the following format:

```
800 UA access number + <SDT> + authcode + (account
code)+ <RDT> + destination digits +
(<SDT> + account code)
```

where <SDT> is special dial tone, <RDT> is regular dial tone, and parenthetical items are optional.

Note: An account code can be collected in one of two ways: with the authcode, or after the destination digits, but in either case it is optional. Also, an account code is not verified for content, but for length.

After authcode, destination digits, and optionally, account code have been collected, regular IBN translations are used to translate and route the call to the proper destination based on the customer group of the MONA DN and the NCOS of the authcode.

Hardware requirements

MSN N00 Dialing has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to MSN N00 Dialing:

- An N00 number received over an FGD interface must be datafilled in table N00PXLA or the call is blocked and the caller receives vacant code treatment (VACT).
- An 800 number can be datafilled in table N00PXLA as an INWATS number, or a Universal Access number, but not both.
- An 800 Universal Access number must be datafilled in table DNROUTE as a Meridian Off-net Access (MONA) Directory Number (DN), or the call is blocked and the caller receives VACT.
- No ANI screening is performed for 800 calls.
- The NPA must be provided in the ANI for 800 calls or the call is blocked and the caller receives partial dial (PDIL) treatment.
- 700/900 calling-party-billed calls which require ANI screening must pass ANI screening, or the call is blocked and the caller receives VACT.
- 700/900 called-party-billed calls which require ANI verification must pass ANI verification, or the call is blocked and the caller receives VACT.
- The ANI of an on-net caller of a 700/900 number that requires ANI screening or ANI verification is not the ANI that is used for ANI screening/ANI verification. On-net originated 700/900 calls should be routed to the LEC interface so that they can be routed back to the MSN over an FGD interface. However, when an on-net call is routed to the LEC, the caller's ANI is not sent to the LEC, because regular IBN trunks do not send ANI. Therefore, the caller's ANI cannot be sent back to the MSN for ANI screening/ANI verification when the call is routed back to the MSN over an FGD interface. Instead whatever number the LEC sends to the MSN as the ANI is the number that is used for ANI screening/ANI verification.

Interactions

MONA

An 800 Universal Access number is datafilled as a MONA DN.

Incoming call screening

Incoming call screening can be done on a per MSN basis using the customer group and NCOS. This screening is based on the destination digits. For INWATS and 700/900 calls, the customer group is obtained from the incoming trunk group data and the NCOS, from table N00PXLA. For UA calls, the customer group is obtained from the MONA tuple in table DNROUTE and the NCOS, from table AUTHCDE.

Translations can be set up for the customer group and NCOS to block a given set of calls. For example, the customer may wish to block 800 INWATS calls originating and terminating in the same Local Access Transport Area (LATA).

Datafill

Table N00PXLA

A new table, N00PXLA, is created by this feature. This is the N00 Pretranslator table for the Meridian SuperNode (MSN). It contains all 800 INWATS, 800 Universal Access, 700, and 900 numbers for a particular MSN corporate network.

For each number datafilled, the table contains a call type. Depending on the call type, the entry can also contain a new number to which the N00 number must translate, a new Network Class of Service to translate that number, the billed party, and information that specifies whether ANI validation is to be performed.

Description of changed or new fields

The following are a description of changed or new fields:

- N00DIGS - N00 digits. This field contains the N00 (INWATS, UA, 700, or 900) number.
- CALLTYPE - Call type. Specifies whether the number is an INWATS, Universal Access, 700, or 900 number.
- BILLPTY - Billed party. Specifies whether the call should be charged to the originator (datafilled as CALLING) or terminator (datafilled as CALLED). This is only valid for 700 and 900 numbers.
- ANICHECK - ANI check. Specifies whether ANI validation ("Y" or "N") is required for this number. This is only valid for 700 and 900 called party billed calls.
- NCOS - Network class of service. The NCOS that is used to translate the TRANSDIG number. Note that the customer group used with this NCOS, is the customer group of the incoming trunk group of the N00 call entering the MSN. This is only valid for INWATS and 700/900 calls. It is not valid for UA calls.
- TRANSDIG - Translated digits. The actual number to which the N00 INWATS call must terminate (that is, the destination digits). This field is not valid for UA numbers.

Service Orders

MSN N00 Dialing does not affect SERVORD.

Operational Measurements

MSN N00 Dialing does not affect Operational Measurements.

Logs

MSN N00 Dialing does not affect logs.

User interface

MSN N00 Dialing does not change the user interface.

Billing

The following sections define what information the Meridian SuperNode will record in the described fields within the billing record.

800 INWATS

CALLED_DR - the TRANSDIG number obtained from table N00PXL.A.

MSN_N00 - INWATS.

MSN_ACCESS_DN - the 800 INWATS number.

MSN_INFO_DIGS - the ANI information digits.

MSN_ANI_NUMBER - the originator's ANI.

800 Universal Access

CALLED_DR - the destination digits dialed.

MSN_N00 - UNIVERSAL.

MSN_ACCESS_DN - the 800 UA number.

MSN_INFO_DIGS - the ANI information digits.

MSN_ANI_NUMBER - the originator's ANI.

AUTH_CODE - the authorization code dialed.

ACCOUNT_CODE - the account code dialed.

700 Service

CALLED_DR - the TRANSDIG number obtained from table N00PXL.A.

MSN_N00 - 700.

MSN_ACCESS_DN - the 700 number.

MSN_INFO_DIGS - the ANSI information digits.

MSN_ANI_NUMBER - the originator's ANI.

900 Service

CALLED_DR - the TRANSDIG number obtained from table N00PXL.

MSN_N00 - 900.

MSN_ACCESS_DN - the 900 number.

MSN_INFO_DIGS - the ANSI information digits.

MSN_ANI_NUMBER - the originator's ANI.

AD1946 - MSN Travel Card Number Database

Description

This feature implements a travel card database to validate travel card numbers entered by off-network callers accessing the network. These callers now have the ability to place calls through the corporate network with the billing charged, if required, against the travel card number. Each travel card holder is assigned a 14-digit travel card number.

The travel card number database, used to screen every travel card call, consists of a new table called MSNTCN. This table is capable of holding 400,000 tuples with each tuple consisting of four attributes, namely, travel card number, Network Class of Service, account code for billing purposes, and status of whether a call can proceed.

Hardware requirements

Data store for the MSNTCN table is dynamically allocated in blocks of 80 words with the addition of new entries. If the table is fully allocated for all 400,000 entries, it will require 2,020,000 words (five words per tuple multiplied by 400,000 + 20,000 words of overhead).

Limitations and restrictions

The MSNTCN table is designed to hold up to 400,000 TCNs. However, the design chosen to implement this feature is based on the assumption that TCNs entered into the database are randomly generated numbers. This limitation is imposed due to the huge storage requirement for the database of this table.

Interactions

MSN Travel Card Number Database has no functionality interactions.

Datafill

Database table attributes

The travel card number database consists of table MSNTCN that holds up to 400,000 tuples. Each tuple contains the following four fields:

- **CARDNUM** - a 14-digit travel card number (TCN) assigned to a subscriber. The required datafill for this field is a 14-digit number, with the first digit in the range of 2-9 and the following 13 digits in the range of 0-9.
- **NCOS** - Network Class Of Service. NCOS is basically IBN (Integrated Business Network) capability. Each customer group can have up to 256 different NCOS. Each NCOS basically defines the dial plan or view of the network. The required datafill for this field is a three-digit number in the range of 0-255.
- **ACCT** - the account code can be required for billing purposes based on either the attributes of the TCN entered by the caller or by the route taken by the call. The account code length is fixed per customer group. It is based on NCOS of CARDNUM and the required datafill for this field is Y or N.
- **ALLOW** - indicates whether a call will be allowed to proceed or not. The required datafill for this field is Y or N.

Database editor commands

The requirement of storing 400,000 tuples on the switch makes the usual approach in the database access implementation impossible. Therefore, some of the table editor commands execute differently from others existing on the DMS databases. The following is a list of these commands and their outcome if executed:

- **LIST ALL** - When in the MSNTCN table, all TCN tuples present in the database are displayed in the order they are stored and not in numerical order.
- **DELETE** - When in the MSNTCN table and after the tuple is deleted, the Table Control is positioned on the next TCN tuple stored in the database and not on the next number (TCN) that follows.
- **BOTTOM** - When in the MSNTCN table, the Table Control is positioned on the last TCN tuple as it is stored in the physical table and not on the last possible Travel Card Code (99999999999999), even if it is present in the table. The same applies to the TOP command where unless the first TCN (20000000000000) is in the database, the TOP command positions on the first TCN stored in the physical table.

Service Orders

MSN Travel Card Number Database does not affect SERVORD.

Operational Measurements

MSN Travel Card Number Database does not affect OMs.

Logs

MSN Travel Card Number Database does not affect logs.

User interface

MSN Travel Card Number Database does not change the user interface.

Billing

MSN Travel Card Number Database does not affect billing.

AD1979 - MADO Support of Smartcom II VI**Description**

This feature allows the Meridian Asynchronous Data Option (MADO) to support the Hayes Smartcom III Version 1.0 software package. MADO adapter users can use commands compatible with the Hayes V-series Smartmodem 9600 to originate and answer data calls. This allows the MADO adapter to be used with the following software packages that also support Hayes protocol:

- Smartcom II Version 2.0
- Smartcom III Version 1.0
- Crosstalk Version 3.6
- Direct Access from Citibank (proprietary)

Selecting a keyboard dialing type

The MADO adapter exists in one of the following states:

- autobaud
- one of two KBD (Keyboard Dialing) type versions
- data mode

When the unit is powered up, the autobaud state is active until the user enters a valid autobaud character. The characters used for autobaud or autoparity determine the keyboard dialing type that becomes active. If the user enters a period (2EH) and a carriage return (0DH), the standard Meridian SL-100 MADO KBD becomes active. If the user enters AT, the Hayes KBD is activated.

While in Hayes KBD state, the MADO adapter returns to autobaud state after each command is entered and after a call is taken down. In Meridian SL-100 MADO KB state, at the completion of any call origination attempt,

the MADO adapter returns to autobaud state. While in Meridian SL-100 KB state, the user can use an AT command to place the MADO adapter into the Hayes KBD state.

Note: The AT is now displayed in the Meridian SL-100 KBD menu. Its primary function is to allow users to toggle from the Meridian SL-100 KBD state to the Hayes KBD state without entering the autobaud state. This allows users of Hayes-compatible software packages to recover if they inadvertently enter the Meridian SL-100 KBD state.

Incoming calls activate the most recently used keyboard dialing method. Prompts are transmitted at the previously detected data rate, when the proper incoming call prompt is displayed. If the data rate of the DTE (Data Terminal Equipment) was changed, but no autobaud occurred between then and the arrival of the incoming call message, the prompts are transmitted at an incompatible data rate. If the MADO adapter has no previous data rate stored, the incoming call pro is transmitted at 19.2 Kbaud. Garbage may be displayed if the DTE is not set to that data rate. The MADO adapter will not have a previous data rate if it was not autobauded since power-up or since the line has had some type of maintenance run on it.

Hayes command syntax

All Hayes commands have the prefix AT and are followed by a carriage return character that executes the command. The repeat previous command (A) is the only exception to the command line structure. It is sent without the AT prefix and must appear on a line by itself. The MADO adapter examines the AT prefix and automatically determines the baud rate and parity settings of the data terminal equipment. For more information, see features AD0067 and BF0818. Both letters of the AT prefix must be entered in either upper case or lower case ("at" or "AT"), or the MADO adapter will not recognize the prefix.

Each command line can contain a number of commands concatenated together, but each line is limited to a maximum of 40 characters, excluding the AT prefix. Some commands must be entered on a line by themselves, as they prevent other commands on the same line from being processed. Most AT commands have selectable numeric parameters. For example, E0 turns off character echo, while E1 turns it on. When the MADO adapter receives a command without a parameter, it assumes 0. For example, E and E0 both turn character echo off. Punctuation characters, such as the hyphen and comma, are allowed for readability, but take up space in the 40-character command line buffer. A space (ASCII 20H) can also be used, but does not take up space in the buffer.

Hayes operating states

When using Hayes keyboard dialing, the MADO adapter operates in autobaud, Hayes KBD, or online state. In the following description, the autobaud and Hayes KBD states are combined and referred to as command state. After power-up, the MADO adapter enters the command state. Hayes commands can be issued only when the MADO adapter is in this state.

The MADO adapter remains in or enters the command state when:

- the MADO adapter is powered up
- no carrier is detected while originating or answering a call
- a carrier signal from the remote modem is lost
- the &D1, &D2, or &D3 option is selected and the MADO adapter detects an on-to-off transition of DTR (Data Terminal Ready)
- a semicolon is entered at the end of the dial (D) command to return the MADO adapter to the command state
- the escape sequence (+++) is entered while the MADO adapter is on line

In the Hayes command state user inputs are interpreted as call setup information. Once the call is established, as indicated by the CONNECT prompt, the MADO adapter enters the on line state and transmits all data on the RS232-C interface transparently across the network to the far-end MADO. The MADO adapter attempts to go on line in the following situations:

- the dial (D) command is issued
- the online command (O0 or O1) is issued
- the answer command (A) is issued
- the ring count (value of register S1) equals the number or rings to answer on (the value of register S0)

In this state, the MADO adapter acts as a full duplex device and it is the responsibility of the DTE connected to the far-end MADO to respond to user input.

Returning from online state to the command state can be done by using an escape code sequence. The default escape sequence consists of a minimum of one second (the escape guard time) of no data followed by three plus signs (+++) with less than one second between plus signs, followed by a minimum of one second of no data. It is extremely unlikely that such a sequence would be executed accidentally when in the online state.

Both the escape guard time and the escape character are programmable using registers S12 and S2. "Escape code sequence" (page 193) shows a typical example of using the escape sequence.

Escape code sequence

Step	User Input	Prompt	Comments
1			Wait at least one second after previous entry.
2	+++		Spaced less than one second apart.
3			Wait at least one second before next entry.
4		OK	MADO return to command state.

Once returned to the command state, the user can, for example, release the call using the H command or reenter the online state using the O command.

Dialing

The basic command for dialing is D followed by the telephone number. The dial command must have an AT prefix and end with a carriage return (<CR>). For example, ATD9974500<CR> dials 997-4500. No commands other than dial modifiers can follow the D command on the command line. An ERROR prompt is displayed if an illegal dial modifier is used, or if an unsupported number is dialed. The ERROR prompt also appears if any characters follow the ATD command from within the offline mode. Users cannot make a call from within the offline mode, but can execute ATD alone.

Dial modifier Dial modifiers are special parameters used to tell the MADO adapter how to dial the telephone number. "Dial modifiers" (page 193) shows the dial modifiers.

Dial modifiers

Dial Modifier	Description
0-9	Digits for dialing.
A B C D	Characters for dialing.
#	If used in the Meridian SL-100 dialing phase, this character instructs the PBX to begin dialing the digits entered up to this point (for example, ATD9974500#). If used after the Meridian SL-100 dialing phase, this character is outpulsed as a tone, as in ATD9974500,,,,1234*.
*	This character cannot be used in the Meridian SL-100 dialing phase. If used after the Meridian SL-100 dialing phase, this character is outpulsed as a tone, as in ATD9974500,,,,1234*.

Dial Modifier	Description
'	Delay process the next character by one second. This delay is fixed at one second and may not be altered by register S.
;	Return to command state after dialing.
! @ P R T W	These characters can be used in the dialing string, but will have no effect on the dialing sequence.

"Typical dialing sequence" (page 194) shows an example of a typical call setup sequence.

Typical dialing sequence

Step	User Input	Prompt	Comments
1	ATD n nnn<CR>		MADO sends digits when the <CR> is received.
2			The network connection is established.
3	CONNECT		The data connection is established.

Incomplete call

Calls can fail to complete the T-link handshake successfully, because of incompatible parameters or a noisy data path. Register S7 specifies the maximum time to wait for the handshake to complete. If data sync is not found in this amount of time, the call is released. This type of call progresses as shown in "Typical dialing sequence for an incomplete call" (page 194).

Typical dialing sequence for an incomplete call

Step	User Input	Prompt	Comments
1	ATD nnnn<CR>		MADO sends digits when the <CR> is received.
2			The network connection is established.
3			The data connection fails.
4		NO CARRIER	The call is released.

Auto answer

Incoming calls are answered automatically if the S0 register is set to any value between one and 255. The value assigned to the S0 register indicates the number of rings before the MADO adapter answers the incoming call. For example, if the S0 register contains 3, the MADO adapter rings three times before answering. If the MADO adapter is configured for auto answer, the default value of the S0 register is 1. Note that there is no audible ringing

provided by the MADO adapter. The RI lead of the RS232 connection (pin 22) is toggled high for two seconds and low for four seconds. These cycles are counted the same as physical ringing would be.

"Auto answer sequence" (page 195) shows a typical auto answer sequence.

Auto answer sequence

Step	User Input	Prompt	Comments
1		RING	MADO detects the incoming call.
2			MADO counts rings up to the value of S0.
3			MADO answers.
4		CONNECT	The data connection is established.

Manual answer

If the S0 register contains 0, the MADO adapter does not answer automatically and must be answered using the A command. If the MADO adapter is configured for manual answer, the default value of the S0 register is 0. "Auto answer sequence" (page 195) shows a typical manual answer sequence.

Auto answer sequence

Step	User Input	Prompt	Comments
1		RING	MADO detects the incoming call.
2			MADO rings.
3	ATA<CR>		MADO answers.
4		CONNECT	The data connection is established.

Call disconnection

If a number is dialed but no connection established, the MADO adapter is still in the command state and the call can be released by either an S7 time or by sending any character from the DTE to the MADO adapter. If a data connection has been established, the user can release a call by returning to the command state using the release sequence described previously, then entering the H command. The user can also release a call by dropping DTR (Data Terminal Ready), providing the MADO adapter was programmed with the &D2 or &D3 commands

S-registers

The S-registers (S0 to S58) can be used to program various call setup parameters. Query the value of a particular S-register by entering the following command:

Sr?

where

r is a number from 1 to 58

The S-registers used by the MADDO's Hayes-compatible keyboard dialing are shown in "Keyboard dialing parameter registers" (page 196).

Keyboard dialing parameter registers

Register	Range	Default	Description
S0	0-255 rings	0	Rings to answer on.
S1	0-255 rings	0	Ring count.
S2	Any valid ASCII code	43	Escape sequence character.
S3	Any valid ASCII code	13	Carriage return character.
S4	Any valid ASCII code	1 0	Line feed character.
S5	0-32, 127 ASCII codes	8	Backspace character.
S7	1-255 seconds ASCII code	3 0	Wait time for carrier.
S8	0-255 seconds	2	Pause time for ",," (not supported).
S10	1-255 X(0.1) seconds	7	Loss of carrier time out (not used).
S12	20-255 X(0.02) seconds	5 0	Escape sequence guard time.
S21			Reserved.
S22			Reserved.
S36	0,1	0	0 - no adaptation. 1 - no adaptation.
S37	0-3, 5-7, 9	0	Select maximum connect speed.
S38-S50	0-255	0	Not used.
S51	0-255 x(.25) seconds	1 6	Delay until modem pool activation.
S52	Any valid ASCII character	3 9	Most significant product code character.

Register	Range	Default	Description
S53	Any valid ASCII character	3 0	Least significant product code character.
S54	Any valid ASCII character	30	Least significant product code character.
S55-S58	0-255	0	Not used.

Some registers defined in the Hayes keyboard dialing implementation are not applicable to the MADO adapter and are ignored. To reset registers S0 through S50 to their default values, use the software reset commands Z, Z1, &F, &Y, and &Y1. Registers S51 through S58 are reset to their default value only during power up.

It is important to note that the software does not perform a range check on the value assigned to an S register. The range in the previous table indicates those values that give the expected results. Any other values may or may not function as desired and are not flagged as an error when the command is processed. Valid ASCII codes range from 0 to 127. Values larger than 127 may disable the function associated with that S register. Values larger than 255 are accepted without an error but are stored as modulo 256.

Register S0 - Ring to answer on S0 sets the ring on which the MADO adapter automatically answers a call. Setting S0 = 0 disables auto-answer.

Register S1 - Ring count The MADO adapter automatically tracks the number of rings, incrementing and writing the value in S1

Register S2 - Escape sequence character S2 holds the ASCII value of the escape sequence character.

Register S3 - Carriage return character S3 holds the ASCII value of the carriage return character.

Register S4 - Line feed character S4 holds the ASCII value of the line feed character.

Register S5 - Backspace character S5 holds the ASCII value of the backspace character.

Register S7 - Wait time for carrier Calls can fail to complete a T-link handshake successfully, because of incompatible parameters or a noisy data path. Register S7 specifies the maximum time to wait for the handshake to complete. If data sync is not found in this amount of time, the call is released and a NO CARRIER prompt displays.

Register S12 - Escape sequence guard time S12 holds the value of the delay required before and following the escape sequence. The guard time also dictates how quickly the escape sequence characters must be entered, since the interval between entry of each of the three characters must be of shorter duration than that specified for the guard time.

Register S36 - Baud rate adaptation When an attempt to make a connection fails because of incompatible baud rates, the MADO adapter reads this register to determine whether to terminate the connection or to adapt to the far-end baud rate. If the baud rates are incompatible and the S36 is set to 0, the MADO adapter hangs up. If S36 is set to 1, the MADO adapter is the calling party and the N0 command has been executed, the MADO adapter attempts to adapt at a baud rate equal to or less than the rate specified in register 37. If the far-end baud rate exceeds the S37 rate, the call is dropped. If the N1 command has been executed, the MADO adapter adapts to the far end regardless of the rate specified in register S37.

Register S37 - Maximum DCE (Data Communications Equipment) connect speed The MADO adapter attempts to connect at the highest supported speed that does not exceed the value specified by this register. This register will be reset to 0 after each call is released. Valid values for this register are shown in ["Register S37 - maximum DCE connect speed valid values" \(page 198\)](#).

Register S37 - maximum DCE connect speed valid values

Register setting (S37=)	Result
0	Attempt to connect at speed of last AT command (Default setting).
1 - 3	Attempt to connect at 300 bps.
4	Reserved.
5	Attempt to connect at 1200 bps.
6	Attempt to connect at 2400 bps.
7	Attempt to connect at 4800 bps.
8	Reserved.
9	Attempt to connect at 9600 bps.
10 - 255	Reserved.

Register S51 - Delay until modem pool activation S51 holds the value of delay before Outbound Modem Pool activation. Each decimal increment of S51 represents a .25 second delay. This register is not altered by the software reset commands.

Registers S52 through S54 - Product code response These three registers contain the Product Identification Code and is output in response to the IO command. Valid values are as follows:

- 960 - Smartmodem V-series 9600 modem (default)
- 124 - Smartmodem 1200
- 240 - Smartmodem 2400 or Smartmodem V-series 2400

Result codes The MADO adapter provides responses to commands in the form of result codes. Unless they are disabled with the Q1 command, a result code is displayed after a command is entered. Result codes can be displayed in either numeric form or in verbose (English) form as specified by the V command. The MADO adapter result codes and definitions are listed in ["Result code summary" \(page 199\)](#).

Result code summary

Digit code	Word code	Meaning
0	OK	Command line processed without error.
1	CONNECT	Connection at 0 to 300 baud.
2	RING	MADO ringing.
3	NO CARRIER	Data sync lost or never found.
4	ERROR	Command line error.
5	CONNECT 1200	Connection at 1200 baud.
7	BUSY	Busy signal detected.
10	CONNECT 2400	Connection at 2400 baud.
11	CONNECT 4800	Connection at 4800 baud.
12	CONNECT 9600	Connection at 9600 baud.
14	CONNECT 19200	Connection at 19200 baud.

Command Set The complete list of Hayes commands that the MADO adapter supports is in ["Hayes command set" \(page 199\)](#). Note that if commands are input without a numerical parameter, it is assumed to be 0. For example, if the user enters ATE, it is interpreted as ATE0 and will disable the echoing of keyboard dialing commands.

Hayes command set

Command	Description
A/	A/Re-execute previous command line. This command is not preceded with AT or followed by <CR>.
A	Go into answer mode and attempt to go to online state.

Command	Description
D	Go into originate mode, dial number that follows, and attempt to go to online state.
E 0	Disable character echo in command state.
E1*	Enable character echo in command state.
H 0	Go on hook (hang up).
I 0	Request product identification code. Outputs contents of S registers S52 through S54. Valid values are 960 Smartmodem V-series 9600 modem (default), 124-Smartmodem 1200, 240-Smartmodem 2400 or Smartmodem V-series 2400.
I1	Returns 206.
I4	Displays a037800c004420 B100000000 (the same value that the Smartmodem V-series 9600 returns).
N0*	MADO attempts connection at baud rate selected by S37.
N1	MADO ignores S37, connection is attempted at the speed of last auto baud command.
O	Go to online state.
O1	Same as ATO.
Q 0*	MADO returns result codes.
Q1	MADO does not return result codes.
Sr	Set pointer to register r.
Sr=n	Set register r to value n.
S r?	Display value stored in register r.
V 0	Display result codes in numeric form.
V1*	Display result codes in verbose form (as words).
X 0	Enable result codes 0-4.
X1	Enable result codes 0-5, 10-12, 14.
X2	Same as X1.
X3*	Enable result codes 0-5, 7, 10-12, 14.
X4*	Same as X3.
&C0	Assume data carrier is always present. This command asserts the three EIA (Electronic Industry Association) control leads: CTS, CD (Carrier Detect), and DSR (Data Set Ready). This command is the default if ASSERTRTS DPOPT is not datafilled for the MADO adapter.
	CTS, CD, and DST tracks far-end RTS (Return To Service). This command is the default if ASSERTRTS DPOPT is datafilled for the MADO adapter.
&D0	Ignore DTR. This command is the default is ASSERTDTR DPOPT is datafilled for the MADO adapter.
&D1	Assume command state when on-to-off transition of DTR occurs.

Command	Description
&D2	Hang up when on-to-off transition of DTR occurs. This command is the default if ASSERTDTR DPOPT is not datafilled for the MADO adapter.
&D3	Hang up and reset to default setting (MADO profile configuration).
&Q0	MADO ignores S37 and attempts connection at the speed of the last autobaud command. This command is identical to the N1 command and is generated by Smartcom III if the V-series error control option is set to N. The V-series error control option can be reached using the Connect Settings menu in Smartcom III.
&Q5*	MADO attempts connection at the baud rate selected by S37. This command is identical to the N0 command and will be output by Smartcom III if the V-series error control option is set to Y or H. The V-series error control option can be reached using the Connect Settings menu in Smartcom III.
&R0	CTS, CD, and DSR tracks the far-end RTS. This command is the default if ASSERTRTS DPOPT is not datafilled for the MADO adapter.
&R1	Assume CTS is always present. This command asserts the three EIA control leads: CTS, CD, and DSR.
&S0	Assume DSR is present. This command asserts the three EIA control leads: CTS, CD, and DSR. This command is the default if ASSERTRTS DPOPT is datafilled for the MADO adapter.
&S1	CTS, CD, and DST will track the far-end RTS. This command is the default if ASSERTRTS DPOPT is datafilled for the MADO adapter.
Z0	Reset MADO to default settings.
Z1	Same as ATZ0.
&F	Same as ATZ0.
&Y0	Same as ATZ0.
&Y1	Same as ATZ0.

The following commands are supported, but not executed (they do not return an error code):

- B0
- B1
- C0
- C1
- F0
- F1
- H1
- I2
- L0

- L1
- L2
- L3
- M0
- M1
- M2
- M3
- W0
- W1
- Y0
- Y1
- *G0
- &G2
- &J0
- &J1
- &K1
- &K2
- &K3
- &K4
- &K5
- &L0
- &L1
- &M0
- &P0
- &P1
- &T0
- &W0
- &W1

The following commands are not supported (they return an error message):

- H2
- I3

- O2
- Q2
- &M1
- &M2
- &M3
- &Q1
- &Q2
- &Q3
- &Q4
- &T1
- &T2
- &T3
- &T4
- &T5
- &T6
- &T7
- &T8
- &X0
- &X1
- &X2
- &V
- &ZN=x

Hardware requirements

MADO Support Of Smartcom II VI has no hardware requirements.

Limitations and restrictions

MADO Support Of Smartcom II VI has no limitations or restrictions.

Interactions

MADO Support Of Smartcom II VI has no functionality interactions.

Datafill

MADO Support Of Smartcom II VI does not affect data schema tables or office parameters.

Service Orders

MADO Support Of Smartcom II VI does not affect SERVORD.

Operational Measurements

MADO Support Of Smartcom II VI does not affect Operational Measurements.

Logs

MADO Support Of Smartcom II VI does not affect logs.

User interface

MADO Support Of Smartcom II VI does not change the user interface.

Billing

MADO Support Of Smartcom II VI does not affect billing.

AD2066 - Monitor Terminal Activity

Description

This feature implements a new Command Interpreter (CI) command called MONITOR. It allows a privileged user, at an isolated Maintenance and Administration Position (MAP) session, to conduct surveillance on the MAP session of a selected general user or device.

The MONITOR command is used to monitor every command, response, and output of a particular user's MAP session. Any output from the specified Monitor Device or user is displayed on the User's Video Display Unit (VDU) terminal.

Hardware requirements

Monitor Terminal Activity has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Monitor Terminal Activity:

- When MONITOR is started, all keyboard input from the user is ignored. A Break/Stop sequence is used to stop Monitoring.
- The MONITOR is only started by a user with the (VDU).
- Terminals intended for use as Monitoring Terminals must have higher baud rates than the Terminals being monitored.
- Monitoring a Monitoring User is not allowed.

Interactions

The dedication of the Monitoring Terminal to the monitoring function limits interactions.

Datafill

Monitor Terminal Activity does not affect data schema tables or office parameters.

Service Orders

Monitor Terminal Activity does not affect SERVORD.

Operational Measurements

Monitor Terminal Activity does not affect Operational Measurements.

Logs

Monitor Terminal Activity does not affect logs.

User interface

A new (CI) command, MONITOR, is created by this feature.

Billing

Monitor Terminal Activity does not affect billing.

AD2146 - Personal Identification Numbers**Description**

Personal Identification Numbers (PINs) are multi-digit codes used as another level of screening beyond the Authorization code in order to identify a caller. An Authcode (Authorization code) can have either a single one-to four-digit PIN or multiple PINs associated with it. Multiple PINs can be associated with the same authorization code and each PIN can identify a different person, even though they are using the same authcode. Each PIN digit value is in the range 0 to 9 and the PIN digits are collected in DTMF format. In case of multiple PINs, this feature supports two-digit PINs and three-digit PINs for each authorization code.

If a single PIN is associated with the authcode, it is stored in table AUTHCDE. If multiple PINs are associated with the authcode, they are stored in table PINDATA and the index is stored in the PININDEX field of table AUTHCDE.

This feature provides the following capabilities:

- Provides the Meridian SL-100 with the capability to collect PIN digits based on the authcode parameter, and then validates dialed PIN digits against PIN digits stored in the authcode parameter if a single PIN is associated with the authcode, or against the PINDATA database if multiple PINs are associated with the authcode. This is applicable to the following calls: Feature Group A (FGA), Feature Group B (FGB), Feature Group D (equal access plan) cut-through (FGD), Feature Group D (interim dialing plan) cut-through (FGD), Universal Access 800 calls, and Direct Access Trunk (DAT) cut-through.

- Creates PINDATA database (for each switch) to support multiple PINs for each authcode.
- Provides region code (the region where the trunks are originated and assigned to each region in the Meridian SL-100 network, depending upon the geographical location of the region) capability for FGA, FGB, FGD, and DAT.
- Provides billing capability for PIN digits to be recorded in Station Message Detail Record (SMDR).

Note: PIN digits are collected and validated on Meridian SL-100 trunks (Meridian SL-100 agencies) only.

Authorization code dialing

All calls entering a Meridian SL-100 system by FGA, FGB, FGD EAP cut-through, FGD interim dialing cut-through, DAT cut-through and UA access, invoke the Meridian OffNet Access (MONA) feature for collection of authorization code, PIN digits, account digits, and destination digits.

Optional PIN digits may be required to be input based on attributes of the authcode. If an authcode specifies that PIN digits are required to be input, PIN digits should be dialed immediately after the authcode. If the dialed PIN digits are not valid against filed PIN digits associated with that particular authcode, the call receives reorder treatment after collecting destination digits. So even if PIN digits are invalid, the Meridian SL-100 system collects destination digits as if the dialed PIN digits were valid in order to not give any hints to the caller that the dialed PIN digits are invalid. This is done for authcode security reasons.

PIN digit concept

This feature introduces two different concepts for the Meridian SL-100 system in connection with PIN digits based on the authcode parameter PINSTATS (PIN status). They are REQUIRED PIN and OPTIONAL PIN based upon Region code.

Region code The entire Meridian SL-100 network serving a physical area is divided into different regions. Each region is assigned a region code number (region codes range from 0 through 2047) depending on its geographical location in the network. All authorization codes assigned to subscribers of the Meridian SL-100 network belonging to a particular region have the same region code. Similarly, all incoming trunks that are coming in from a particular region have the same region code.

Required PIN This "required" PIN concept, when datafilled against an authorization code, specifies that a PIN be entered following the dialing of the authorization code. In other words, the PIN digits must always be dialed by the caller, regardless of the region from where the caller is

making the call. Either a SINGLE PIN or a MULTI PIN must be filed with the authorization code in this concept. The authorization code obtains this required PIN concept status by having its PIN status field datafilled with REQUIRED. The Meridian SL-100 system always collects PIN digits and validates them against the database.

Optional PIN based upon region code This PIN concept is based upon having a region code datafilled against the authorization code and against the various incoming trunks. It also requires the dialing of PIN digits following the authorization code, but only if the region code that is datafilled against the authorization code does not match the region code datafilled against the incoming trunk.

If the region code datafilled against the authorization code does match the region code datafilled against the incoming trunk, the dialing of PIN digits following the authorization code is not necessary. The caller must not dial PIN digits, even though the PIN digits were datafilled with their authorization code to make a call. If the caller dials PIN digits following the authorization code, in this case, the call will go through and get reorder treatment after collecting destination digits. Therefore, the caller must not dial PIN digits if the call is originated in their home region (authcode region code is same as the originating trunk's region code). Either a SINGLE PIN or a MULTI PIN must be filed with the authorization code in this concept. The caller, in this case, should be aware of the requirement of dialing PIN digits, as well as to whether they must dial PIN digits following the authorization code for a successful call.

Hardware requirements

Personal Identification Numbers has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Personal Identification Numbers:

- PIN digits are collected and validated only in calls that invoke the MONA feature for collection of Authcode and destination digits.
- The combined total number of Authcode, Security digits, PIN digits and Account Code (Auth_account combination) digits should not exceed 24.
- The valid range of PININDEX values is 0 to 8191. Values 0 through 4095 are reserved for two-digit PINs while values 4096 through 8191 are reserved for three-digit PINs. Consequently, two-digit and three-digit PINs cannot be intermixed for the same PININDEX.
- Only two-digit and three-digit PINs are allowed when validating PINs using the table PINDATA.
- PINDIGS and PININDEX are mutually exclusive.

- In case of OPTBYREG authcode, when the authorization code's region code matches the region code of the incoming trunk and the Meridian SL-100 receives PIN digits, the call gets reorder treatment after the collection of destination digits.
- If the PIN status (PINSTATS) field of an authcode is datafilled with an Optional by Region (OPTBYREG) field and the REGNCODE is not datafilled in the incoming trunk, the call gets reorder treatment after collecting destination digits.
- PIN digits are not collected for Authorization hotline calls.
- PIN digits are not recorded in the SMDR record if the caller dialed an invalid authorization code.

Interactions

The following paragraphs describe the interactions between Personal Identification Numbers and other functions.

Meridian OffNet Access (MONA)

All calls entering a Meridian SL-100 system using FGA, FGB, FGD cut-through, and 800 UA access invoke the Meridian OffNet Access (MONA) feature for collection of authorization, PIN digits, account digits, and destination digits.

Reset dialing

When a dialing mistake is made while dialing PIN digits, the caller can enter "*" (an asterisk) to receive dial tone from the Meridian SL-100 system and then redial the digit sequence prompted for by the previous dial tone. Hence, if a dialing mistake is made while entering the PIN digits, a caller does not have to dial the corporate network access number again, but will have to enter the authcode.

Call reorigination

Anytime after a call involving PIN digits dialing has completed routing, the caller can enter a "#" to disconnect the current call, thereby receiving dial tone from the Meridian SL-100 system and dialing another destination. Hence, the caller does not have to redial the corporate network access number, authorization digits and PIN digits again. In call reorigination, the PIN digits that are stored in the SMDR Extension Billing Record (format #DC) for the first call are retrieved and used for subsequent calls.

Reorigination is allowed based on the field "REORIG = Yes" in table TRKGRP data. Also note that reorigination is only valid for trunk originated calls.

Datafill**Table PINDATA**

This feature develops a database to support multiple two-digit and three-digit PINs for each authcode. This PIN database supports 4096 lists of two-digit PINs (maximum of 100 for each list or index, or both) and 4096 lists of three-digit PINs (maximum of 1000 for each list or index, or both).

A new table, PINDATA, is created for this feature. Table PINDATA contains a list of valid two-digit or three-digit PINs for a particular index. Only digits 0 through 9 are valid PIN digits. The valid range of values for two-digit PINs is 00 through 99. The valid range of values for three-digit PINs is 000 through 999. The index into table PINDATA should correspond with an allocated PININDEX (table AUTHCDE). The valid range of an index is from 0 through 8191. Two-digit PINs are only allowed from index 0 through 4095; three-digit PIN indexes are valid from 4096 through 8191. The index and PIN comprise the two-part key to table PINDATA. The two-part key is the entirety of the PINDATA tuple. Because the PINDATA tuple consists only of a key, a change operation is not valid. To effect a change the tuple must first be deleted and then added again. The list of valid PINs for a given index is built by doing successive adds, specifying the same index, but different PINs.

The field PININDEX, the index portion of a key, is a part of the authorization code. Each index can be associated with 100 PINs or 1000 PINs, depending upon the index value. Indices 0 through 4095 are allocated for two-digit PINs while indices 4096 through 8191 are allocated for three-digit PINs.

The field PINDIGS is the second part of a key disabled. The dialed PIN is compared to this filed PIN. PIN digits are used to identify a caller beyond his authcode.

Table TRKGRP

A new option REGION is being added to the OFNTOPTS area for IBNT1 and IBNT2 trunks. This option allows for a region code field assignment to FGA, FGB, FGD, and DAT trunks. The range of the trunk group region code is 0 through 2047.

In OFNTOPTS (Off-Net Options), a new option, REGION, has been added to this subfield.

The field REGION, contains Region code and the geographical location of the trunk. This field appears only when option REGION is datafilled for the OFNTOPTS field.

Table AUTHCDE

Table AUTHCDE implements the Authorization Code feature that is used to identify callers for billing purposes, assign Network Class of Service (NCOS) and control network access.

Within the option area of this table is the option PIN (Personal Identification Number), which can be used as a further enhancement for billing purposes.

A new field OPTIONS has been added to table AUTHCODE by this feature. This field allows options to be added to the authcodes in this table. To implement this feature a new option, PIN, is added to different auth options to prompt for PINSEL and PINSTATS fields to table AUTHCODE.

The PIN can be either of the following:

- A single PIN assigned (filed) against this particular authorization code.
- An index into table PINDATA that contains a list of either two-digit or three-digit PINs that are used in conjunction with the authorization code.

AUTHCODE PIN option The following are the various subfields and descriptions associated with the PIN option, and explanations on how to achieve the various PIN concepts as outlined in the preceding information.

PINSTATS (PINSTATUS) - this field determines what kind of PIN status should be given to the authorization code. It also determines whether or not the requirement of PIN digit dialing should be based on the region code of originating trunk group and the region code of authorization code.

The PINSTATS field can be datafilled as:

- **REQUIRED** (required PIN) - when REQUIRED is datafilled for the PINSTATS field of the authorization code. This means that the Meridian SL-100 always expects PIN digits to be collected for validation, following the authorization code from the caller. Since region code screening is not required for this REQUIRED PIN authcode, the region code field of the authorization code is not required to be datafilled. Thus the table control would not prompt for region code for the authorization code to be datafilled.
- **OPTBYREG** (Optional by Region) - when OPTBYREG is datafilled for the PINSTATS field of the authorization code. This means that the Meridian SL-100 expects PIN digits to be collected for validation following the authorization code from the caller only if the region code of the authorization code does not match the region code of the incoming trunk group over which the call is originated. Since region codes are required to be screened in this situation, the region code field of the authorization code must be datafilled. Thus the table control would prompt for region code for the authorization code to be datafilled.
- **PINSEL** (PIN SElector) - this field is used to indicate whether a SINGLE PIN or a MULTIPLE PIN is to be filed (datafilled) against this particular authorization code.

The PINSEL field can be datafilled as either:

- **SINGLE** (Single PIN only) - this field would be prompted by the table control if the PINSEL is set to SINGLE. This field is being used to file a single PIN digit associated with the authorization code.
- **MULTIPLE** (Multiple PINs) - this field is prompted by the table control if the PINSEL is set to MULTIPLE. This field is being used to support multiple PINs. It also makes it possible to file multiple PINs, instead of just a single PIN against an authorization code. This PININDEX is used to access table PINDATA, where a list of PINs are stored at the PININDEX.

In addition to PINSTATS and PINSEL, the following fields are also changed or new:

- **OPTIONS** - authcode different options (PIN is an example).
- **PININDEX** - each index can be associated with 100 PINs or 1000 PINs, depending upon its index value.
- **PINDIGS** - the actual PIN digits associated with the authcode are stored in this field. The dialed PIN is compared to this filed PIN. PIN digits are used to identify a person beyond the caller's authcode.
- **REGNCODE** - an authcode can be assigned a region code depending on its geographical location.

Single PIN validation A single one- to four-digit PIN can be associated with an authcode. If PIN digits are required to be entered by the caller, the dialed PIN digits are compared against the PIN digits filed in the caller's authcode (PINDIGS). If the dialed PIN and filed PIN match, the call will progress normally. Otherwise, the caller gets reorder treatment after the collection of account and destination digits.

Multiple PINs per authcode Multiple PIN digits per authcode supports multiple two-digit or three-digit PINs for each authcode. This feature implements a new table, PINDATA, to contain the list of PINs. This table supports 4096 lists of two-digit PINs (maximum of 100 for each list or index, or both) and 4096 lists of three-digit PINs (maximum of 1000 for each list or index, or both). The index into table PINDATA should correspond with an allocated PININDEX (table AUTHCODE).

PIN digit screening is done as follows: PIN digits dialed are screened against the PINs datafilled in table PINDATA at index PININDEX (authcode field). If the dialed PIN and filed PIN match, the call progresses normally; otherwise, the call gets reorder treatment after collecting account digits and destination digits. The PIN digits dialed can be recorded in the SMDR, even if PIN digits are not valid.

Table CUSTSMR

This feature adds a new option, PIN, to table CUSTSMR. This option is used to control the generation of the new SMDR extension record for PIN required calls, which is used to record PIN digits for billing.

The OPTIONS field has been changed to include a new field, PIN. This field is added to the list of options to allow for the generation of a new SMDR extension record for any call involving PIN digits dialing for billing purposes.

Datafill sequence

The order of datafill for tables AUTHCDE, TRKGRP, and PINDATA is given below:

- **Table AUTHCDE**

If PINSTATS = OPTBYREG, table TRKGRP must be datafilled with the REGION option. Table TRKGRP is not required.

If PINSEL = MULTIPLE, table PINDATA should be datafilled.

- **Table TRKGRP**

If PINSTATS = OPTBYREG only.

- **Table PINDATA**

If PINSEL = MULTIPLE only.

Service Orders

Personal Identification Numbers does not use SERVORD.

Operational Measurements

Personal Identification Numbers does not affect Operational Measurements.

Logs

The existing IBN logs are used to inform the switch administrator of any failures encountered with call processing procedures accessing table AUTHCDE or table PINDATA.

User interface

Personal Identification Numbers does not change the user interface.

Billing

The PIN digits, whether valid or not, can be recorded in the SMDR for all calls when PIN digits are required to be dialed as second level screening.

A new SMDR Extension Record Format (#DC) is generated for PIN digit calls when option PIN is datafilled in table CUSTSMR.

The SMDR Extension Record format #DC contains the following fields:

- Record Code - value #DC. This is a two-character code that identifies the PIN SMDR Extension Record.
- Pin Digits - this field is a 14-digit field that contains the PIN that the subscriber dialed. This is 14 digits because it is also used to record the travel card number on travel card calls.
- PIN Validation - this is a one-digit field that contains information dealing with the PIN digits. The possible values of this field are Valid_PIN (1) or Invalid_PIN (2).

AD2175 - Feature Group D ANI Delivery

Description

The purpose of this feature is to provide mapping of Automatic Number Identification (ANI) information resident on originating Integrated Business Network (IBN) Multi Frequency (MF) in-band signaling Feature Group D (FGD) trunks to terminating agents possessing Calling Party Identification (CPI) capabilities. Agents include both IBN Integrated Services Digital Network (ISDN) User Part (ISUP) Signaling System #7 (SS7) and IBN ISDN Primary Rate Interface (PRI) trunking facilities for applicable Meridian SL-100 configurations.

This method of tandeming calls traversing the network through either the IBN ISUP SS7 or IBN ISDN PRI terminating trunk facilities provides the capability of supplying incoming Calling Line Identification (CLID) information to remote sets capable of displaying CLID information about the calling party that originated from an off-net location.

Different methods of billing FGD calls

There are different FGD dialing plans available through the FGD protocol.

FGD calling party billable calls The following FGD dialing plans are referred to as calling party billable calls. This means that originating agents that use these FGD dialing plans bill the calling party for the call. FGD calling party billable calls are billed by one of the following methods:

- Billable by ANI - there may be ANI screening provided with this dialing plan. An example is FGD Pure (national and international dialing).
- Billable by Authorization Code (Authcode/Travel Card Number (TCN) - no ANI screening is possible with this dialing plan. Examples include: FGD Pure dialing 800 Universal Access Numbers, FGD Cut-thru (EAP dialing), and FGB Cut-thru (interim dialing). Note that 800 calls only examine the originating NPA of the ANI.
- Billable by both methods - there may be ANI screening provided with this dialing plan. Assuming that ANI screening is successful, the call can

then appear as a calling party billable by Authcode/TCN. An example is FGD Pure dialing a Meridian Off-net Access (MONA) Listed Directory Number (LDN).

FGD called party billable calls This FGD dialing plan is referred to as a called party billable call. This means that originating agents that use this FGD dialing plan bill the called party for the call. There is no ANI screening possible with this dialing plan. An example is FGD Pure dialing 800 INWATS numbers. Note that 800 calls only examine the originating NPA of the ANI.

FGD billing calls with specifiable billing This FGD dialing plan can be either FGD calling party by ANI or FGD called party billable. This means that whether the originator or terminator is billed for the call depends on datafill (specifically field BILLPTY in table N00PXL). ANI screening may or may not be possible with these dialing plans. This is dependent upon field BILLPTY in table N00PXL and field ANISCREEN in table TRKGRP. Examples of these are FGD Pure with 700 Dialing and FGD Pure with 900 Dialing.

IBN MF signaling (FGD protocol)

IBN MF PTS agents using the FGD protocol typically outpulse two stages using in-band signaling in the multifrequency (MF) format. The first stage is referred to as the ANI spill. A typical ANI spill contains two subfields: information digits (two-digits) and calling party's number (10-digits).

The second stage is referred to as the CALLED party's number and usually contains the destination digits (also known as the terminating station number).

IBN MF (FGD) signaling incoming, IBN ISUP SS7 outgoing

IBN ISUP SS7 agents handle various CPI information during the call establishment phase in their Initial Address Message (IAM). Specifically, there are mandatory and optional parameters of the IAM that are utilized for this purpose. The mandatory parameters are:

- Message Type
- Nature of Connection Indicator
- Forward Call Indicator
- Calling Party's Category
- User Service Information (formerly Bearer Capability)
- Called Party Number

IBN MF (FGD) signaling incoming, IBN ISDN PRI outgoing

IBN ISDN PRI agents handle various CPI information during call establishment in their SETUP messages. Many of the parameters are very dynamic (that is, they change a lot during call processing). The mandatory SETUP message parameters are as follows:

- Protocol Discriminator
- Call Reference
- Message Type
- Bearer Capability
- Channel Identification

Control of calling party information (ANI) transmittal

Originating group control The first step in specifying whether or not ANI information is mapped to terminating agents possessing CPI information is to specify that field ANIDIGS in table TRKGRP must be set to "Y" for incoming IBN MF PTS trunks using the FGD protocol. If field ANIDIGS in table TRKGRP is set to "N", ANI to CPI mapping is not possible for any calls traversing the IBN MF PTS (FGD) trunking facility regardless of dialing method used.

Originating station control The following points outline ways the originating station can control calling party information (ANI) transmission:

- Calling Party Billable By ANI - the option as to whether or not ANI information is displayed by downstream agents possessing CPI information is specifiable on a per-station basis to those FGD agents using FGD calling-party-billable-by-ANI dialing plans. This is because some off-net callers arriving through an IBN MF PTS trunk using the FGD protocol may not want their ANI information used for display purposes by downstream agents possessing CPI information, regardless of how field ANIDIGS in table TRKGRP is datafilled.
- Calling Party Billable By Authcode/TCN - because these calls are not subject to ANI screening, their suppression on a per-station basis is not supported. Instead, an office parameter entitled FGD PTS CUTTHRU ANI SUPPRESSION, which can be found in table OFCVAR is provided to determine whether or not the caller's ANI information can be displayed to terminating agents. The range of values for this office parameter is ALWAYS or NEVER.
- Called Party Billable - because the terminating station is billed for called-party-billable calls, ANI station suppression on a per-station basis is not supported (that is, the caller has no control). Instead, ANI information is provided (assuming it is available).

Terminating group control of ANI The following points outline issues regarding terminating group control of calling party information (ANI) transmission:

- IBN ISUP SS7 Terminating Trunk Agents - there is no terminating control for terminating IBN ISUP SS7 trunking agents to control whether or not certain fields are supplied or not supplied in the IAM message during call establishment.
- IBN ISDN PRI Trunks Connected to On-net Configurations - there is no terminating control for terminating IBN ISDN PRI trunking agents to control whether or not certain fields are supplied or not supplied in the IAM message during call establishment for on-net paths.
- IBN ISDN PRI Trunks Connected to Off-net Configurations - for IBN MF PTS (FGD) calls that terminate on IBN ISDN PRI trunks traversing off-net paths, whether the Called Number parameter and/or Calling Number parameter are omitted from the SETUP message during the call establishment phase of the call is controlled through table control. Specifically, field Calling Number Delivery (CGNDELV) and Called Number Delivery (CDNDELV) in table LTDATA with the DATATYPE refinement specified as SERV for the terminating IBN ISDN PRI trunking agent provides the capability to control delivery of these fields in the SETUP message. The Calling Party Number (CGN) and Called Party Number (CDN) information elements in the SETUP message are optional per subscription.

Hardware requirements

Feature Group D ANI Delivery has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Feature Group D ANI Delivery:

- Field ANIDIGS in table TRKGRP controls whether or not ANI information is mapped by the IBN MF PTS (FGD) trunk. In order to map ANI information into the CPI information of terminating IBN ISUP SS7 or IBN ISDN PRI trunking agents, field ANIDIGS must be set to "Y" for the originating IBN MF PTS (FGD) trunk. ANI to CPI mapping is not possible if field ANIDIGS in table TRKGRP is not set to "Y".
- The Originating Line Information Parameter, Calling Party Number Parameter, and Charge Number Parameter of the IBN ISUP SS7 IAM message is not provided if field ANIDIGS in table TRKGRP is set to "N" (No) for incoming and two-way IBN trunk group types using the FGD protocol.
- ANI Station Suppression (that is, calls with field SUPPRESS in table FGDANISC datafilled with a "Y") on a per-station basis is only available to originating callers that use FGD calling-party-billable-by-ANI dialing

plans that have both field ANIDIGS and ANISCREN in table TRKGRP set to "Y". Otherwise, ANI information may be displayable.

- Calling-party-billable-by-Authcode/TCN calls that have office parameter, FGD_PTS_CUTTHRU_ANI_SUPPRESSION, set to "NEVER" are displayable by terminating agents if the ANI is provided. This includes off-net originators (that is, subscribers in the public network) with unlisted numbers.
- Because calling-party-billable-by-Both-Calling-Methods calls can actually traverse two levels of screening (that is, screening by ANI and screening by Authcode/TCN), there is the potential for ambiguities to exist in defining the ANI suppression function. In this case, screening is similar to the calling-party-billable-by-ANI method (that is, through field SUPPRESS in table FGDANISC). This means that the contents of office parameter, FGD_PTS_CUTTHRU_ANI_SUPPRESSION, are ignored for this one exception cut-thru case.
- Called-party-billable calls are displayable by terminating agents if the ANI is provided. This includes off-net originators (that is, subscribers in the public network) with unlisted numbers.
- Calls requiring Service Access Codes (SAC) dialing or test call dialing are not supported by this feature.
- This feature does not provide ANI information to operator services agents.
- For FGD calling-party-billable calls, the address contained within the Charge Number parameter and the Calling Number parameter are treated as the same value (that is, both parameters contain the ANI). This means that in a few call scenarios, the number presented to a terminating agent as the calling number (known as Number Display or Calling Line Identification [CLID]) may actually be the address of the PBX from which the calling number originated; not the address of the originating station.
- Name Display and Network Name Display only works for on-net calls (that is, calls that originate and terminate on the same network). By design, incoming IBN MF PTS FGD protocol calls arrive from an off-net origination (that is, the public network) and terminate on-net. Therefore, Name Display and Network Name Display do not work with this feature.

Interactions

The following paragraphs describe the interactions between Feature Group D ANI Delivery and other functions.

MSN SMDR billing

Field MSN ANI MAPPING is contained within the MSN extension record of the Station Message Detail Recording (SMDR) billing record. This field identifies whether or not ANI information provided to the terminating IBN ISUP SS7 or IBN ISDN PRI trunking agents is displayable for the purposes of supplying CLID information to further downstream terminating agents.

Reorigination feature

This feature, by design, allows the second leg of a call (traversing MONA) to be disconnected without the requirement to regain access to the MSN (the first leg). Care is exercised to ensure that successive reoriginations receive the proper ANI information digits and ANI suppression information (supplied in the first leg) in the originating address of each and every subsequent leg call.

Call Transfer/Call Forward/Three Way Call

Calls arriving from off-net sources through an IBN PTS MF (FGD) trunk that terminate (first leg) to an IBN set (including Attendant Consoles) and then are subsequently extended by the IBN set by using the Call Transfer/Call Forward/Three Way Call feature to an additional destination, do not pass the original ANI to the terminator of the extended call. Instead, the display of the terminator of the extended call contains the ANI of the originator of the extended leg of the call. Also, if the originator of the extended leg of the call leaves the call, the display of the terminator of the extended leg of the call is not updated with the ANI of the originator of the original leg of the call.

Conference Calls/Preset Conference

This feature does not interact with conferencing features.

Datafill**FGD calling party billable by ANI calls**

Table FGDANISC contains the field SUPPRESS. This field controls whether or not off-net originated stations entering the network through an IBN MF PTS (FGD protocol) using pure dialing and ANI screening wish to have their ANI information suppressed, thereby preventing the display of their DN's on a per line (specified by the ANI calling number) basis. Individuals wishing to have their ANI information made available to downstream agents can have their ANI information provided by entering an "N" in field SUPPRESS. Conversely, individuals not wishing to have their ANI information made available to downstream agents can have their ANI information suppressed by entering a "Y" in field SUPPRESS.

FGD calling party billable by authcode/TCN calls

A new office parameter, FGD PTS CUTTHRU ANI SUPPRESSION, is added to table OFCVAR and has a range of values of ALWAYS and NEVER. This office parameter controls whether or not off-net originated stations

entering the network through an IBN MF PTS (FGD protocol) trunk using a cut-thru dialing plan (that is, 800 Universal Access, FGB, or FGD Cut-Thru dialing) wish to have their ANI information suppressed, thereby, preventing the display of their DNs.

Individuals wishing to have their ANI information made available to downstream agents can have their ANI information provided by entering a "NEVER" in this office parameter. Conversely, individuals not wishing to have their ANI information made available to downstream agents can have their ANI information suppressed by entering an "ALWAYS" in this office parameter.

Description of changed or new fields

A field is provided (SUPPRESS Y or N) to control whether or not off-net originated stations entering the network through an IBN MF PTS (FGD protocol) trunk using pure dialing wish to have their ANI information suppressed, thereby, preventing the display of their directory numbers. Individuals wishing to have their ANI made available to downstream agents can have their ANI information provided by entering an "N". Conversely, individuals not wishing to have their ANI information made available to downstream agents can have their ANI information suppressed by entering a "Y".

Service Orders

Feature Group D ANI Delivery does not affect SERVORD.

Operational Measurements

Feature Group D ANI Delivery does not affect Operational Measurements.

Logs

Feature Group D ANI Delivery does not affect logs.

User interface

Feature Group D ANI Delivery does not change the user interface.

Billing

Feature Group D ANI Delivery does not affect billing.

AD2185 - MSN Travel Card Call Processing

Description

This feature allows Meridian SL-100 subscribers to charge calls to a 14-digit travel card number (TCN). After accessing the Meridian SL-100, the subscriber can enter 0 to select a domestic call or 01 to select an international call, followed by the destination number, then the TCN. The subscriber places a call in the following manner:

ACCESS <SDT> +0+ Address Digits +<PT>+ TCN + (<DT>+AC) +<CT>

or

ACCESS <SDT> + 01 + International Address Digits + <PT> +TCN
+ (<DT> + AC) + <CT>

where

- TCN is travel card number
- AC is account code
- SDT is special dial tone
- DT is dial tone
- PT is prompt tone
- CT is confirmation tone
- () is optional

Digit collection

A travel card call consists of two stages of digit collection. The first stage is the address digits followed by a prompt tone. The second stage is the travel card digits followed by a confirmation tone.

FIRST STAGE	SECOND STAGE
<SDT> (address digits)	<PT> (travel card digits) <CT>

Address digits

The address digits are in one of two forms, depending on whether a domestic or international call is being dialed.

Domestic dialing Destination Digits is any dialing plan provided by Meridian OffNet Access (MONA). Since destination digits is a variable length of digits, the end of dialing for this stage is assumed when either an interdigital timeout occurs, or when a DTMF end-of-dialing digit "#" is received.

0 + destination digits + (#)

International dialing Since destination digits is a variable length of digits, the end of dialing for this stage is assumed when either an interdigital timeout occurs or when a DTMF end-of-dialing digit "#" is received.

01 + CC + NN . . N + (#)

where

- CC is country code
- NN is national number (0 . . 9)
- (#) is optional DTMF pound sign end of dialing digit

Travel card digits

The travel card number (TCN) must be a 14-digit number in the form of:

XXXXXXXXXXXXXX

where

- N = 2 through 9
- X = 0 through 9

The end of dialing for a TCN is assumed when either an interdigital timeout has occurred or when 14 digits have been received. The DTMF "#" sign should not be used to signify the end of the digit.

The validity of the TCN is checked in table MSNTCN of the database. If it is found to be valid, the call is routed. If an account code is required with the TCN (defined in table MSNTCN), the user must wait for the provided dial tone before entering the account code. The caller receives treatment if they fail to wait for the dial tone.

After all travel card digits are collected (and account code if required) and the TCN verified, the subscriber receives a confirmation tone indicating that the call is progressing. A new Network Class of Service (NCOS) is obtained from the travel card database and is used to translate the call.

Breaking Prompt Tone The subscriber does not need to wait for the prompt tone before dialing the TCN if an optional "#" is entered at the end of the address digits. The first travel card digit stops the prompt tone. If the subscriber does not pause after the address digits, no prompt tone is generated.

Treatments

Travel card call processing uses several treatments to which the subscriber is routed if an error condition occurs. These are three possible treatments:

- **FDNZ - First Digit Not Zero.** This treatment is given on TCN call reorigination when the subscriber fails to dial zero (or 01 for international), before the address digits.
- **CCTO - Calling Card Time Out.** This treatment is given when the subscriber fails to enter a TCN digit within 10 seconds, at which point the travel card times out.
- **CCNV - Calling Card Not Valid.** The subscriber receives this announcement when the TCN is invalid.

When routed to one of these treatments, one needs to hang up and try again.

Tones

The following two tones are used for information purposes:

- Travel Card Prompt Tone - This is a regular tone sent after the subscriber successfully dials the first stage of digits (address digits). The subscriber enters the TCN after the prompt tone and this tone stops upon the receipt of the first travel card digit.
- Travel Card Confirmation Tone - The subscriber receives this tone after the TCN or account code has been validated. This tone is actually two regular dial tones separated by a period of silence.

Hardware requirements

While both UTR and DTMF receivers are supported by this feature, UTR support is available only if this feature interacts with call reorigination.

Limitations and restrictions

The following limitations and restrictions apply to MSN Travel Card Call Processing:

- TCNOPT option has to be set for Meridian OffNet Access DN for travel card dialing.
- Operator assisted travel card dialing is not supported.
- Travel card dialing is supported for Feature Group A, Feature Group B, Feature Group D cut-through, 800 Universal Access, Direct Access Trunk cut-through, and Meridian OffNet Access.
- Since the digit 0 (zero) is used to determine a travel card call when it is dialed as the first digit, it is not to be used as the first digit for authorization code dialing. In other words, for authcode dialing, the first digit of the authcode cannot be zero.
- The DTMF "#" sign should not be used to signify the end of digit for the travel card number.
- If account code is required with the travel card number, the subscriber must wait for dial tone before entering the account code. If the subscriber fails to wait for dial tone, routing to treatment results.
- The subscriber is restricted to making TCN calls on reorigination after a TCN call.
- On reorigination, the subscriber must reenter 0 (zero).
- The travel card number database is an in-switch database.
- Table CUSTSMR must have option TCN if billing is required.
- The travel card number must be in DTMF.
- For a domestic travel card call, the first digit of the destination cannot start with the digit 1.

Interactions

The following paragraphs describe the interactions between MSN Travel Card Call Processing and other functions.

Reset dialing

The reset digit (*) provides the subscriber with the capability to start the digit collection process over. For the travel card call, the following three rules apply to reset the digit feature:

- Selecting a reset digit in the first stage (address digits) of the digit collection returns the subscriber to special dial tone where a TCN or authcode call can be initiated.
- Selecting a reset digit button in the second stage (travel card digits) of the digit collection returns the subscriber to the prompt tone where the TCN can be reentered.
- When the subscriber selects the reset digit after dialing the address digits during TCN call reorigination, 0 (zero) plus the address digits must be reentered. In other words, TCN calls must be made when reset dialing is used with TCN call reorigination.

Call reorigination

The call reorigination feature provides the caller with the ability to chain several calls together without redialing MSN access number and travel card digits. Reorigination is allowed based upon the field REORG = Y in the TRKGRP data.

The subscriber can reoriginate a TCN call in the following manner:

"*" or "#" + 0 + Address Digits + (Dial Tone + Account Code)
+ Confirmation Tone

This feature interacts with call reorigination as follows:

- The subscriber is restricted to making TCN calls on reorigination after a TCN call.
- The subscriber does not need to redial the TCN digits. The only digits that are expected are 0 (zero) and the address digits of the new call.
- The subscriber has to reenter the account code on reorigination calls if account code is required with TCN calls.
- After the address digit collection is over (and the account code is collected if required), the subscriber receives confirmation tone if the address digits are valid (and if the account code is valid).
- Reorigination is disabled for calls that go to treatment because of a dialing error.

Datafill

Adds the new option TCNOPT to table DNROUTE for the MONA feature to provide travel card dialing.

Adds the new option TCN to table CUSTSMR to control the generation of the new SMDR extension record for TCN calls.

There is no need to add the TCN during Dump and Restore as it is optional to table CUSTSMR.

Service Orders

MSN Travel Card Call Processing does not affect SERVORD.

Operational Measurements

MSN Travel Card Call Processing does not affect Operational Measurements.

Logs

MSN Travel Card Call Processing does not affect logs.

User interface

MSN Travel Card Call Processing does not change the user interface.

Billing

Option TCN is added to table CUSTSMR to provide travel card billing. This results in the creation of a new SMDR Extension Record Format (#DC) with the following fields:

- Record Code - Value #DC. This is a two-character code that identifies the TCN SMDR Extension Record.
- TCN Digits - This is a 14-digit field that contains the TCN entered by the subscriber.
- TCN Validation - This is a one-digit field that contains information dealing with the TCN. The three possible values are:
 - Valid TCN (3)
 - Invalid TCN (4)
 - TCN Timeout (5)

AD2186 - Private Speed Calling and Hotline Dialing**Description**

This feature provides the Meridian SL-100 with Private Speed Calling and Hotline Dialing. Private Speed Calling provides the caller with the capability to associate speed-call numbers with their authorization code, thus providing

an abbreviated form of dialing. Hotline Dialing provides a caller with another form of abbreviated dialing. Three types of Hotline Dialing are offered: Trunk Group Hotline, Authorization Code Hotline, and Conditional Hotline.

Private Speed Calling

Private Speed Calling provides a caller with an abbreviated form of dialing by allowing them to associate a list of speed-call numbers with an authcode (authorization code). Each speed-call number represents a number to which the call is routed when the associated speed-call number is dialed. The number associated with the speed-call number can be any number accessible by the caller using their dialing plan. Up to 64 speed-call numbers can be associated with each authcode.

Before dialing a private speed call number, a caller must first receive dial tone. After being prompted by the tone, the caller must enter an authcode. The caller then receives regular dial tone and can then dial the desired private speed call number.

The format for Private Speed Calling dialing is as follows:

ACCESS + <SDT> + AUTHCODE + (PIN) + (AC) + <RDT> + 1NN +
(<SDT> + AC)

where

- <SDT> is special dial tone (MSN dial tone)
- AUTHCODE is the caller's authorization code
- PIN is the caller's Personal Identification Number
- AC is the caller's account code
- <RDT> is regular dial tone
- N is a number in the range 2 to 9
- items in parenthesis are optional

The collection of PIN digits and account codes are optional.

Association between speed call numbers and authcodes If a customer group uses authcodes, an authpart must be assigned to that customer group in Table CUSTHEAD. This datafilled authpart is used to define the characteristics, such as format and length, of the authcodes for that customer group. These characteristics are defined through the datafill of Table AUTHPART.

When authcodes are datafilled in Table AUTHCODE, they are datafilled against the authpart of the customer group by which they will be used. Therefore, each authcode is associated with a certain authpart.

A given set of speed-call numbers is associated with a particular authcode. However, since an authcode is associated with a certain authpart, that set of speed-call numbers is actually associated with an authpart/authcode combination, rather than solely being associated with an authcode. This fact is transparent to the user. The user perceives that the private speed-call list is associated with their authcode.

Multiple use of speed call lists One private speed call list can be used by several authcodes. This would be implemented by datafilling the same private speed call index for each authpart/authcode combination in Table AUTHCDE, which is to use the private speed-call list associated with the datafilled private speed-call index.

Ambiguous dial plans The possibility exists for ambiguity between private speed call numbers and other numbers valid in a customer's dial plan. For example, a dial plan may be set up to have three-digit extension dialing. If the first digit of an extension is "1", this extension may look like a private speed call number. This section explains how this type of ambiguity is handled.

If a caller dials "1NN" and does not have private speed calling capability, "1NN" is sent to translations. Translations routes the call accordingly.

If a caller dials "1NN" and has private speed calling capability, Table PSCNUM is searched using the private speed-call index (PSCIDX) associated with the caller's authcode and the private speed-call number "NN". If an entry is found in the table, the call routes to the destination digits associated with this private speed-call number. However, if an entry is not found, the call is treated as if the caller did not have private speed calling capability.

Hotline Dialing

Trunk Group Hotline This feature provides the capability for a caller to dial a local exchange number and reach a destination associated with the incoming trunk group. This incoming group is the trunk group over which the call was routed from the LEC (Local Exchange Carrier) to the Meridian SL-100.

The format for Trunk Group Hotline Dialing is as follows:

NXXXXXX

where

- N is in the range of 2 to 9
- X is in the range of 0 to 9

Authorization Code Hotline Authorization Code Hotline, or Authcode Hotline, is a form of dialing that allows callers to dial an authcode after gaining access to the MSN and then be routed to an on-net or off-net destination without dialing destination digits. The call is routed to the hotline number associated with the authcode dialed by the caller using the translation scheme defined by the customer group of the Meridian Off-net Access (MONA) Directory Number (DN), which was used to gain access to the MSN network and the NCOS datafilled against the dialed authcode.

The format for Authcode Hotline Dialing is as follows:

ACCESS + <SDT> + AUTHCODE + (AC)

where

- <SDT> is special dial tone (MSN dial tone)
- AUTHCODE is the caller's authorization code
- AC is the caller's account code
- items in parenthesis are optional

The collection of account codes is optional.

Conditional Hotline

Conditional Hotline provides the caller with the option of either dialing destination digits or allowing digit collection to time out and letting the call get routed to a predefined destination. This feature is invoked after the user has gained access to the MSN network. If digits are received before digit collection times out, the call is treated as a non-hotline, or a regular, call. However, if digit collection times out and a hotline route is associated with the access digits that invoked MSN dial tone, the call is routed to the hotline route. The default hotline route is to an Attendant Console. This default can be overridden with any other route that has been set up in the MSN routing tables OFRT or IBNRTE.

An authcode can be required after gaining access to the MSN network. Whether or not an authcode must be dialed by the caller is specified through datafill. If an authcode is required, it must be dialed after access to the MSN network has been obtained and the caller has received special dial tone. If digit collection times out before the required authcode is dialed, the call is routed to the conditional hotline route. If, however, the authcode is dialed, the caller receives regular dial tone after dialing an authcode. The caller can then either dial destination digits or let digit collection time out and have the call get routed to the hotline route.

Accessing the MSN network

A caller can access the MSN network by one of the following access methods:

- FGA (Feature Group A)
- FGB (Feature Group B)
- FGD (Feature Group D) cut-thru: FGD EAP (Equal Access Plan) or FGD INTERIM
- DAT
- 800 UA (Universal Access)

After dialing one of the access numbers, the Meridian SL-100 returns dial tone.

Note: All access methods specified here invoke MONA for collection of destination digits and optional authorization and account codes. Private Speed Calling and Authcode Hotline require dialing an authcode. Therefore, for these features the datafill of the MONA tuple used to gain access to the MSN network must specify that an authcode is required.

If the datafill specifies that an authcode is not required, then neither the Private Speed Calling nor the Authcode Hotline feature can be invoked.

The Conditional Hotline feature does not require dialing an authcode. Therefore, the AUTHREQ field in Table DNROUTE can be datafilled "Y" or "N" for the MONA tuple used by this feature to gain access to the network.

Hardware requirements

Private Speed Calling and Hotline Dialing has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Private Speed Calling and Hotline Dialing:

- Private speed call numbers are collected in DTMF format.
- Private Speed Calling (PSC) and Authorization Hotline Dialing are mutually exclusive. Therefore, if the PSC option is added to table AUTHCDE for a particular authcode, the HOTLINE option cannot be added for that authcode. Likewise, if the HOTLINE option is added to table AUTHCDE for a particular authcode, the PSC option cannot be added for that authcode.
- Trunk Group Hotline is not supported for DAT FXS (Foreign Exchange Station Side) ground start trunks.

Interactions

The following paragraphs describe the interactions between Private Speed Calling and Hotline Dialing and other functions.

Account codes

Account codes can be required for both private speed calls and hotline calls, depending on datafill. If required, an account code may be collected in one of two ways for private speed calls: either with the authcode or after the destination digits. For hotline calls, an account code can be collected with an authcode. Account codes are not verified for content, but for length.

Two methods can be used to specify that an account code must be collected last. Either method is used in order to collect an account code with the Private Speed Calling feature. One method specifies that an account code must be collected based on the authcode dialed, the other, on the route taken.

PIN digits

PIN digits are optional for private speed calling, depending on datafill. If they are required, they are collected as follows:

ACCESS + <SDT> + AUTHCODE + PIN + <RDT> + 1NN

PIN digits are not required or collected with trunk group hotline dialing and authcode hotline dialing.

PIN digits are optional for conditional hotline dialing, depending on datafill.

Reset dialing

Reset dialing can be performed on private speed calls during the collection of the authcode, the account code, or the private speed call number.

Reset dialing can be performed on authcode hotline calls during the collection of the authcode.

If an authcode is required for a conditional hotline call, reset dialing can be performed on that call during the collection of the authcode.

Reorigination

A private speed call number can be dialed as the destination digits of a reoriginated call if the authcode that was previously dialed has the Private Speed Calling option. The requirement for this functionality is that the MSNs have SMDR billing.

A private speed call can be reoriginated. In other words, once a private speed call has terminated, the Reorigination feature can be used to dial another private speed call number or other destination digits.

Datafill**Table PSCNUM**

A new table, PSCUM, is created to store all the private speed call numbers for the Meridian SL-100 Private Speed Calling feature. The table has a double index. The first index is the private speed call index that associates the private speed call number with an authcode. The second index is the private speed call number that the caller dials. Destination digits are datafilled for each entry. These digits are the number to which the call is routed when the private speed call number is dialed for the authcode corresponding to the private speed call index.

The following is a description of changed or new fields:

- **PSCIDX** - Private Speed Call Index that is datafilled in table AUTHCDE. This number associates a private speed call number with a particular authcode. Up to 5000 private speed call indices can be datafilled in table PSCNUM. The value of this field can range from 0 to 4999. Note that the PSCIDX subfield of the PSC option datafilled in table AUTHCDE must also contain a number in the range of 0 to 4999, since the same number should be datafilled in both tables for a particular speed call list.
- **PSCNUM** - Private Speed Call Number that the caller dials. This number is in the form NN where N is a number from 2 to 9. Up to 64 private speed call numbers can be datafilled for each private speed call index. Thus each authcode contains a private speed call list of up to 64 speed call numbers.
- **DESTDIGS** - Destination Digits. The actual number to which the private speed number terminates. These digits can be any number within the translation scheme available to the caller, either within the customer's private network or in a connecting private or public network. The number consists of the digits 0 to 9 and is from 1 to 18 digits in length. Note that private speed call numbers are not programmable by the caller, but must be datafilled by data entry personnel.

No table dependencies exist for the datafill of this table. The minimum size of this table is 0 tuples and the maximum size is 320,000 tuples.

Table AUTHCDE

A new field, **OPTIONS**, is added to table AUTHCDE by this feature. In addition, two new options, **PSC** and **HOTLINE**, are added as valid options for the **OPTIONS** field of table AUTHCDE. The **PSCIDX** subfield of the **PSC** option contains the private speed call index associated with an authcode for the Private Speed Calling feature. The **HOTLNUM** subfield of the **HOTLINE** option contains the directory number associated with an authcode for the Authorization Code Hotline feature.

The following is a description of changed or new fields:

- **OPTIONS** - Options. Contains authcode options.

- **PSCIDX** - Private Speed Call Index. The index into table PSCNUM. This number associates an authcode with a private speed call list. This field appears only when PSC is datafilled in the Options field.
- **HOTLNUM** - Hotline number. The hotline number associated with this authcode. This field appears only when Hotline is datafilled in the Options field.

No new table dependencies have been created by the changes made to this table. Also, this feature does not change the number of tuples that are datafilled in table AUTHCDE. However, a limited number of authcodes may contain options. Note that a "\$" should be appended to the end of each IBN authcode tuple in this table.

Table TRKGRP

BILLDIGS has been added as a valid option for the OFNTOPT subfield of field OFFNET. OFNTOPT is a subfield created by the Meridian SL-100 Dedicated Access Trunk Interface feature.

The following is a description of changed or new fields:

- **OFNTOPT** - Off-Net options. A new option, BILLDIGS, has been added to this subfield.
- **DIGITS** - Digits. Contains billing digits for Trunk Group Hotline calls. This field appears only when BILLDIGS is datafilled in the OFNTOPT field.

No new table dependencies were created by the changes made to the table.

Table DNROUTE

A new option CONDHL has been added as a valid option for the MONAOPT field in table DNROUTE. This option contains two subfields: TBLNAME and IDX, which contains the table name and index into the table that specifies a conditional hotline route for a particular access Directory Number.

Datafill this table after the table specified in subfield TBLNAME is datafilled. This is due to the need for a valid table entry specification in the subfields of option CONDHL.

The following is a description of changed or new fields:

- **MONAOPT** - MONA options. A new option, CONDHL, is added to this field.
- **TBLNAME** - Table Name. The routing table in which the conditional hotline route is datafilled. This subfield appears only when CONDHL is datafilled in the MONAOPT field.
- **IDX** - Index. The index into the routing table specified in subfield TBLNM. When TBLNAME is indexed with IDX, the desired conditional

hotline route is obtained. This subfield appears only when CONDHL is datafilled in the MONAOPT field.

Service Orders

Private Speed Calling and Hotline Dialing does not affect SERVORD.

Operational Measurements

Private Speed Calling and Hotline Dialing does not affect Operational Measurements.

Logs

Private Speed Calling and Hotline Dialing does not affect logs.

User interface

Private Speed Calling and Hotline Dialing does not change the user interface.

Billing

A BILLDIGS field is added to the Meridian SL-100 SMDR extension record.

With the Private Speed Calling feature, the private speed call number, NN, is not recorded in the SMDR record. Instead, the destination digits associated with the private speed call number is recorded in the CALLED_DR field of the SMDR record.

With the Hotline Dialing feature, the number datafilled in the DIGITS subfield of the BILLDIGS option in table TRKGRP is the number to which trunk group hotline calls are charged. This number is recorded in the new BILLDIG field of the MSN SMDR extension record. If the BILLDIGS option is not datafilled in table TRKGRP for a trunk group hotline, no billing number is recorded for hotline calls over that trunk group.

With the Authorization Code Hotline feature, normal SMDR billing is recorded for Authcode Hotline calls. The hotline number is recorded in the CALLED_DR field of the SMDR record.

AD2468 - NSS ANI Delivery**Description**

The NSS ANI Delivery feature provides mapping of Automatic Number Identification (ANI) information to various Network Services Software (NSS) agencies for the purpose of delivering Calling Party Information (CPI).

Hardware requirements

NSS ANI Delivery has no hardware requirements.

Limitations and restrictions

The following categories of limitations and restrictions apply to NSS ANI Delivery:

- general restrictions
- originating restrictions
- terminating restrictions

General restrictions

The following general limitations and restrictions apply to NSS ANI Delivery:

- It is the responsibility of the datafill coordinator to ensure that the proper values are contained within field BILLDN. Since the contents of field BILLDN in table TRKGRP are used for ANI mapping, invalid entries in field BILLDN are propagated across the network and are not blocked. Entries should contain the address of the PBX from which the calling number originated and the address of the originating station.
- Calls that have the offnet option, ANIDELV, datafilled are displayable by terminating agents. This includes offnet originators with unlisted numbers. It is the responsibility of the terminating network to determine if the calling party's ANI is displayable by terminating agents possessing this capability.
- Calls requiring Service Access Codes (SACs) dialing or test call dialing are not supported. This includes the service code parameter of ISDN User Part (ISUP) Signaling System 7 (SS7) Intelligent Address Message (IAM) messages.
- ANI information to operator services agents from per trunk signaling (PTS) originators is not supported.
- Name display and network name display only work for on-net calls (calls that originate and terminate on the same network).
- Calls terminating to access to carrier (ATC) per trunk signaling (PTS) MF do not interpret ANI suppression indicators. Applicable originating NSS PTS agents that have requested suppression of their ANI (by any method) are overridden if the call terminates to an ATC PTS MF Feature Group D (FGD) trunk.
- The terminating billing option (TBO) is not available for SMDR billing records. If TBO is required, then AMA billing records should be used.
- Calls terminating to either ATC PTS MF (FGD) or ATC ISUP SS7 must use equal access translations. Failure to use equal access translations for ATC ISUP SS7 will result in various optional parameters not being assembled.

Originating restrictions

The following originating limitations and restrictions apply to NSS ANI Delivery:

- IBN PTS regular trunk originations (non-NSS)
- IBN PTS (FGA) trunk originations
- IBN PTS MF (FGB) trunk originations
- IBN PTS MF (FGD) trunk originations
- ATC PTS MF (FGD) trunk originations
- Dedicated access trunk (DAT) PTS trunk originations

IBN PTS regular trunk originations (non-NSS) ANI Delivery using a regular IBN PTS (non-NSS) trunk is not supported. This also includes NSS PTS trunks with an OFNTACTYP in table TRKGRP of IBN.

IBN PTS (FGA) trunk originations The number supplied as the CALLING party information is taken from field BILLDN in table TRKGRP for the incoming integrated business network (IBN) PTS (FGA) trunk and is not the usual ANI spill information supplied. In this case, "00" is padded in the information digits of terminating agents that require this information.

Name display and network name display only work for on-net calls. Calls delivered to the network using IBN PTS (FGA protocol) trunks do not have these capabilities.

IBN PTS MF (FGB) trunk originations Field ANIDIGS in table TRKGRP controls whether or not ANI information is to be mapped by the IBN MF PTS (FGB) trunk. To physically map ANI information into the CPI information of terminating IBN ISUP SS7 or IBN ISDN PRI trunking agents, field ANIDIGS must be set to Y. If field ANIDIGS is set to N, datafill supplied in field BILLDN for table TRKGRP is used as the ANI. If field ANIDIGS contains a Y, field BILLDN must contain an N.

The digits contained within field CONNGNPA can only be appended to physically received ANI digits and have no interactions with the ANI substitution method of providing an ANI using datafill in field BILLDN of table TRKGRP.

The Charge Number parameter of the ISUP SS7 IAM message contains the same fields as the Calling Party Number parameter (minus the presentation restricted indicator).

IBN PTS MF (FGD) trunk originations Field ANIDIGS in table TRKGRP controls whether or not ANI information is to be mapped by the IBN MF PTS (FGD) trunk. To map ANI information into the CPI information of terminating

ISUP SS7 or ISDN Primary Rate Interface (PRI) trunking agents, field ANIDIGS must be set to Y for the originating IBN MF PTS (FGD) trunk and field BILLDN must be set to N. ANI to CPI mapping is not possible if field ANIDIGS in table TRKGRP is not set to Y.

When incoming IBN PTS MF (FGD) trunk originations terminate to ISUP SS7 trunks, the parameters originating line information, calling party number, and charge number of the ISUP SS7 IAM message are not provided if field ANIDIGS in table TRKGRP is set to N for incoming and two-way IBN trunk group types using the FGD protocol.

ANI station suppression on a per-station basis is only available to originating callers that use the FGD calling party billable by ANI dialing plans that have fields ANIDIGS and ANISCREN in table TRKGRP set to Y. Whether or not ANI information is displayed depends on the ANI trunk group control suppression indicator. Also, the FGD calling party billable by ANI calls that are screened using table FGDANISC and allow ANI Delivery can still be overridden if offnet option, ANIDELV, is omitted from the table TRKGRP datafill.

The FGD called party billable calls are displayed by terminating agents when the ANI is provided. This includes offnet originators with unlisted numbers.

The Charge Number parameter of the ISUP SS7 IAM message contains the same fields as the Calling Party Number parameter when incoming IBN PTS MF (FGD) trunk originations involve FGD calling party billable calls.

ATC PTS MF (FGD) trunk originations PTS signaling does not transmit ANI spill information. Therefore, originating ATC PTS MF (FGD) trunk calls do not supply CPI information to downstream agents. ATC trunks are used for terminations only.

DAT PTS trunk originations The number supplied as the calling party information is taken from field BILLDN in table TRKGRP for the incoming DAT PTS trunk and is not the usual ANI spill information supplied (there are no ANI information digits). In this case, "00" is padded in the information digits of terminating agents that require this information.

Name Display and Network Name Display only work for on-net calls. Calls delivered to the network using DAT PTS trunks do not have these capabilities.

Terminating restrictions

The following terminating limitations and restrictions apply to NSS ANI Delivery:

- IBN PTS MF (FGA) trunk terminations

- IBN PTS MF (FGB) trunk terminations
- IBN PTS MF (FGD) trunk terminations
- ATC PTS MF (FGD) trunk terminations
- IBN ISUP SS7 trunk terminations
- IBN ISDN PRI trunk terminations
- ATC ISUP SS7 trunk terminations
- DAT PTS trunk terminations
- DAT ISDN PRI trunk terminations

IBN PTS MF (FGA) trunk terminations PTS signaling does not transmit ANI spill information. Therefore, terminating IBN PTS (FGA) trunk calls are not supplied with CPI information from originating agents.

IBN PTS MF (FGB) trunk terminations PTS signaling does not transmit ANI spill information. Therefore, terminating IBN PTS (FGB) trunk calls are not supplied with CPI information from originating agents.

IBN PTS MF (FGD) trunk terminations PTS signaling does not transmit ANI spill information. Therefore, terminating IBN PTS (FGD) trunk calls are not supplied with CPI information from originating agents. Instead, ATC trunks are used to deliver ANI spill information using the FGD protocol.

ATC PTS MF (FGD) trunk terminations Originating screening indicators are ignored if suppression has been chosen for this tandem call arrangement on outgoing ATC PTS MF (FGD) trunk terminations that originate from NSS PTS trunks. This includes offnet originators with unlisted numbers.

IBN ISUP SS7 trunk terminations If ANI information is not supplied by the originating trunk, IBN ISUP SS7 trunks do not assemble the parameters originating line information or calling party number in the IAM message. In addition, the charge number parameter is only provided for called party billable calls.

IBN ISDN PRI trunk terminations

Note: IBN ISDN PRI trunk SETUP messages do not provide a facility for saving ANI spill information digits.

For NSS PTS originating calls terminating on IBN ISDN PRI trunks and using OFFNET paths, whether the Called Number or Calling Number parameters, or both, are omitted from the SETUP message is controlled using Calling Number Delivery (CGNDELV) and Called Number Delivery

(CDNDELV) in table LTDATA. The calling party number (CGN) and called party number (CDN) information elements in the SETUP message are optional per subscription.

Three delivery options can be specified for the calling number delivery option in field CGNDELV of table LTDATA. The options are NEVER, ALWAYS and SCREENED. ALWAYS and NEVER are independent of the Calling Party Number parameter's presentation indicator. ALWAYS means that the Calling Party Number parameter is always delivered. NEVER means that the Calling Party Number parameter is never delivered. The third option, SCREENED, which is originator controlled, sends the Calling Party Number parameter, but modifies the parameter based upon the presentation indicator. If the presentation indicator is anything except "Presentation_Allowed" and the delivery option is SCREENED, the Calling Party Number parameter is delivered, but with no ANI information provided. Otherwise, the parameter is delivered as usual.

Two delivery options can be specified for the called number delivery option in field CDNDELV of table LTDATA. The options are ALWAYS and NEVER. ALWAYS means that the Called Party Number parameter is always delivered. NEVER means that the Called Party Number parameter is never delivered.

If there is no entry in table LTDATA for the logical terminal ID (LTID), the parameters Calling Party Number and Called Party Number are always included in the SETUP message. This is the normal method used for on-net configurations.

ATC ISUP SS7 trunk terminations The delivery of parameters Originating Line Information and Calling Party Number is controlled by the field ANI datafill in table OCCINFO.

If table TRKGRP datafill for the ATC ISUP SS7 trunk indicates that fields ANI and INCCPN are Y, an additional check is made to determine if the number supplied in the Charge Number parameter is unique to the number supplied in the Calling Number parameter. If the numbers are the same, the Charge Number parameter is omitted from the ISUP IAM message.

The delivery of the Transit Network Selector parameter is provided for international calls only.

The delivery of the Carrier Selection parameter is controlled by the field PICIND in table OCCINFO for the terminating ATC trunk.

ATC ISUP SS7 trunks require a 10-digit ANI using field BILLDN, if applicable, or in the special case of the physically received ANI over FGB, using offnet option, CONNGNPA.

DAT PTS trunk terminations PTS signaling does not transmit ANI spill information. Therefore, terminating DAT PTS trunk calls are not supplied with CPI information from originating agents.

DAT ISDN PRI trunk terminations For NSS PTS originating calls terminating on DAT ISDN PRI trunks and using OFFNET paths, whether the Called Number or Calling Number parameters, or both, are omitted from the SETUP message is controlled using Calling Number Delivery (CGNDELV) and Called Number Delivery (CDNDELV) in table LTDATA. The calling party number (CGN) and called party number (CDN) information elements in the SETUP message are optional by subscription.

Three delivery options can be specified for the calling number delivery option in field CGNDELV of table LTDATA. The options are NEVER, ALWAYS and SCREENED. ALWAYS and NEVER are independent of the Calling Party Number parameter's presentation indicator. ALWAYS means that the Calling Party Number parameter is always delivered. NEVER means that the Calling Party Number parameter is never delivered. The third option, SCREENED, which is originator controlled, sends the Calling Party Number parameter, but modifies the parameter based upon the presentation indicator. If the presentation indicator is anything except "Presentation_Allowed" and the delivery option is SCREENED, the Calling Party Number parameter is delivered, but with no ANI information provided. Otherwise, the parameter is delivered as usual.

Two delivery options can be specified for the called number delivery option in field CDNDELV of table LTDATA. The options are ALWAYS and NEVER. ALWAYS means that the Called Party Number parameter is always delivered. NEVER means that the Called Party Number parameter is never delivered.

If there is no entry in table LTDATA for the logical terminal ID (LTID), parameters Calling Party Number and Called Party Number are always included in the SETUP message. This is the normal method used for on-net configurations.

Interactions

The following paragraphs describe the interactions between NSS ANI Delivery and other functions.

MSN SMDR billing

The field MSN_ANI_MAPPING is contained within the MSN extension record of the SMDR billing record. This field identifies whether or not ANI information provided to the terminating ISUP SS7 or ISDN PRI trunking agents is displayable for the purposes of supplying CLID information to further downstream terminating agents.

Call Forward/Call Transfer/Three-Way Call

Calls arriving from NSS PTS agents (including DAT, FGA, FGB or FGD trunk originators) that terminate to an IBN base station (including Attendant Consoles) and then are extended by the IBN base station using the Call Transfer/Call Forward/Three-Way Call feature to an additional destination, do not pass the original ANI to the terminator of the extended call. Instead, the display of the terminator of the extended call contains the ANI of the IBN base station. Also, if the IBN base station leaves the established Three-Way call, the display of the terminator of the extended leg of the call is not updated with the ANI of the originator of the call.

Reorigination feature

The reorigination feature allows the second leg of a call (using MONA) to be disconnected without having to regain access to the NSS when using cut-through dialing. Care is exercised to ensure that successive reoriginations receive the proper ANI information digits and ANI suppression information in the originating address of each reoriginated call. Note that calls delivering ANI by the conventional method of physically transmitting the ANI require SMDR billing to be activated in order to deliver ANI information about subsequent reoriginated calls. Although SMDR billing is not a requirement for the reorigination feature, failure to provide SMDR billing means that reoriginated calls will not have ANI delivered.

TRANslations VERification (TRAVER)

Translations for these various call scenarios can be verified by using the TRAVER command. Feature AD2470, NSS TRAVER Enhancements, contains complete details.

Datafill

Two new offnet options are added to table TRKGRP for trunk group types IBNT1 and IBNT2 that enter a Y in field OFNTOPT. Specifically, offnet options CONNGNPA and ANIDELV are added for the offnet access trunk types, field OFNTACTYP, of DAT, FGA, FGB and FGD.

Offnet option ANIDELV serves as an ANI suppression trunk group control as to whether or not calls incoming on DAT, FGA, FGB and FGD trunks allow or deny terminating agents (except ATC PTS MF (FGD) trunks) to display their ANI information. Omitting offnet option ANIDELV from field OFNTOPT suppresses the terminator's capability of using ANI information for display purposes. Conversely, supplying this option allows the terminator to use ANI information for display purposes.

Offnet option, CNNGNPA serves as a three-digit field that contains the numbering plan area (NPA) of the connecting switch adjoining the NSS PTS agent. For FBG agents, field CONNGNPA is used to pad the seven-digit

ANI received by the FGB protocol with a three-digit NPA resulting in a complete 10-digit calling party number. This field is ignored for other NSS PTS offnet access types.

Service Orders

NSS ANI Delivery does not affect SERVORD.

Operational Measurements

NSS ANI Delivery does not affect Operational Measurements.

Logs

NSS ANI Delivery does not affect logs.

User interface

NSS ANI Delivery does not change the user interface.

Billing

NSS ANI Delivery does not affect billing.

AD2472 - NSS-DBCP Base**Description**

This feature provides the Network Services Software (NSS) the basic capability to route and tandem database query messages over Signaling System Number 7 (SS7) links. Examples of the queries include authorization code validation, Travel Card Number (TCN) validation, Automatic Number Identification (ANI) validation, and 700, 800, 900 number (N00) translations. This feature also enhances table MSGRTE to provide global title translation capability and to format the calling address for messages routing over SS7 links.

Additionally, this feature provides a method by which DBCP related database modifications performed on a particular switch can be propagated across the network to other switches. Synchronization of multiple DBCP databases reduces datafill mismatch errors that may arise.

At the originating switch, when ANI validation from DBCP is required, the call processing assembles the ANI query message and invokes the ANI application. The ANI application looks at the called address of the message and determines whether the message should be routed to the ANI DBCP application through an SS7 link or to a local ANI DBCP application using table MSGRTE. The combination of routing indicators that can be used include Global Title (GT), Point Code (PC), and a Subsystem Number (SSN) routing.

Global Title routing indicates routing is based on the global title digits. Global Title Translations (GTT) is used to route the message in Loadsharing and Hot Stand-by to retrieve the destination point code (DBPC) and subsystem number. Loadsharing is the situation where there is more than one DBCP connected to the originating switch. The originating switch must decide which terminating switch should process the message. Hot Stand-by is the situation where one of the DBCP mates is corrupted then all messages are delivered to the other DBCP mate to be processed.

SSN routing indicates that routing should be done based on the PC and SSN. Although SSN routing is specified as the routing indicator, the calling and called addresses should always contain the global title digits. These digits paired with the netname "PUBLIC", are used to lookup table MSGRTE and determine how to route or return the message to the next switch.

When an Signaling Transfer Point (STP) is present in the network, it provides the message tandem, Load Sharing and Hot-standby capabilities. It is recommended that when there is an STP involved, the routing indicator in the Signaling Connection Control Part (SCCP) message should be set to GT routing so that the STP can perform GTT for the query messages. For the return messages, SSN routing is set as the routing indicator since the STP has the capability to tandem messages based on the PC and SSN.

The ANI SCCP subsystem is invoked when a message is to be routed over an SS7 link. When a message arrives over a SS7 signaling link, it comes into the SCCP. The SCCP hands the message over to the appropriate subsystem for processing. Each NSS DBCP application is a separate SCCP subsystem which is capable of sending and receiving query messages.

The NSS DBCP application subsystems will use Transaction Capabilities Application Part (TCAP). The ANI SCCP subsystem calls the proper procedure to send the query message to the terminating switch.

At the terminating switch, the calling address becomes the called address and is used to send the return messages back to the originating switch. These addresses are datafilled on a per SCCP application subsystem basis. It is not determined at this time where the calling and called addresses are to be datafilled. The documentation for each of the specific DBCP application subsystems should contain this information.

When the NSS DBCP application subsystem goes down, it must send a subsystem prohibited to the SCCP to indicate that it is not capable of processing any more messages. A procedure provided by the SCCP is called by the application to notify the SCCP that the subsystem is down. The SCCP broadcasts the SubSystem Prohibited (SSP) message to all the concerned destinations when a node or link goes down or an application system is busied from a map. The SSP message informs the SCCP

management at the destinations of the failure of a subsystem. At this time, the SCCP routing tables are updated and the Subsystem-Status (SST) is initiated. SST is an audit procedure that detects whether the subsystem has been recovered in case an Subsystem Allowed (SSA) message is lost.

When the NSS DBCP application is up, another procedure provided by the SCCP is called by the application subsystem to notify the SCCP that the subsystem is now up and capable to process messages. The SSA message is sent to the concerned destinations when the subsystem is up or RTSed, or the node or link recovers. It informs the SCCP at the destinations that the subsystem which was formerly prohibited is now allowed and the routing tables updated.

Hardware requirements

NSS-DBCP Base has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to NSS-DBCP Base:

- New selector GTT for table MSGRTE only applies to NSS DBCP messages. A SWERR message is generated if GTT selector is chosen by other subsystems.
- Primary Rate Access (PRI) D-channel is not supported by NSS DBCP.

Interactions

All features such as PRI facility and Interwork Subsystem using table MSGRTE ignore the new GTT selector.

Datafill

Table MSGRTE is used by the PRI Facility process and the Interwork Subsystem to route messages through the network. Table MSGRTE is indexed by a three field key consisting of the Network Identifier (NETID), and two digit strings (FROMDIGS and TODIGS). Each entry can have up to four elements. Each element consists of one selector from (LOCAL, PRI, SS7). The list of selectors is searched to find the first available channel or link to send the message out on. When a selector is local, only one element is allowed.

When a LOCAL selector is chosen, the message terminates on this switch. When a SS7 selector is chosen, the SCCP Unit data message is constructed using the Point Code specified by the selector and sent to the associated SCCP application subsystem at the next switch. The DELDIGS and PREDIGS fields are parts of all these selectors. DELDIGS specifies the number of digits to delete from the beginning of the Destination Information Element before routing the message. PREDIGS is a string of digits to be prefixed to the destination Information Element before the message is routed.

A new selector, GTT, has been added to table MSGRTE to provide global title translation. Since Load Sharing and Hot Stand-by are requirements of NSS-DBCP configurations, it is necessary to do global title translation. When GTT selector is entered, there can only be one element for that entry. If selector GTT is chosen, a global title name is retrieved from this tuple and stored in the SCCP address. The SCCP then does GTT to get an SS7 address consisting of PC and or SSN using table C7GTT, sets the routing indicator accordingly and routes the message to the next node. SSN routing is set as the routing indicator when the entry in table C7GTT returns SSNONLY or PCSSN selector. GT routing is set as the routing indicator when the entry in table C7GTT returns PCONLY or PCNEWGT selector.

The following tables are datafilled in this feature:

- Table C7LOCSSN is used to datafill the local subsystem resident at the node. It provides attributes such as Subsystem name, Subsystem number (SSN), number of instances of the subsystem, indication of replication at another PC, Traffic Mix Information (TFMI) indicator and a list of concerned PCs which require notification on subsystem status changes.
- Table C7NETSSN is used to datafill the remote PCs and remote subsystems that are of concern to SCCP at the node. It provides attributes such as Point Code name and a list of subsystems at the PC where each subsystem consists of the subsystem name and number.
- Table C7RPLSSN is used to datafill a list of replicated subsystems that the node can route and keep status on. It provides attributes such as the subsystem name and a list of PC pairs where the subsystem is replicated.
- Table C7GTTTYPE is used to datafill the types of GT translations supported by the node. It provides attributes such as the global title type name, global title type number, and global title internal name.
- Table C7GTT is used to datafill the GT translations performed by the node and their results. It provides attributes such as the GTT type name, FROM digits specifying the range of GT of that type and the result of the translation. The result specifies the result type, the results of the type and the cost. If two results are given, cost is used to pick the result. The lowest cost result is chosen, unless both are equal, then loadsharing is used. There are four different result types:
 - PCONLY, where one or two PC names are specified
 - SSNONLY, where one local subsystem name is specified
 - PCSSN, where one or two PCs or subsystems are specified
 - PCNEWGT, where one or two PCs with a new GT format are specified

Service Orders

NSS-DBCP Base does not affect SERVORD.

Operational Measurements

NSS-DBCP Base does not affect Operational Measurements.

Logs

NSS-DBCP Base does not affect logs.

User interface

NSS-DBCP Base does not change the user interface.

Billing

NSS-DBCP Base does not affect billing.

AD2491 - Automatic Set Relocation Table Control

Description

The Automatic Set Relocation (ASR) feature allows a user to move Integrated Voice and Data (IVD) telephone sets from one location to another without assistance from a service representative. Automatic Set Relocation Table Control is a component of the ASR feature and provides datafill when a user chooses to perform automatic set relocation.

Hardware requirements

Automatic Set Relocation Table Control requires upgraded 8X49 boards for proper operation. Firmware enhancements were made on the boards to accommodate the Automatic Set Relocation feature.

Limitations and restrictions

The following limitations and restrictions apply to Automatic Set Relocation Table Control:

- A message is displayed and table entry removed if the service representative attempts to remove an entry from the WRDN table that is needed to perform ASR "put set back IN service."
- Up to 160 ASR DN's can be added to table WRDN.
- Table ASR can have up to 160 tuples.
- The customer must set aside a group specifically for the use of the Automatic Set Relocation In (ASRI) process.
- The user receives the Feature Not Allowed (FNAL) treatment if they dial a DN that is set aside for ASR use.
- For additional limitations and restrictions of the ASR feature, refer to the section on feature AD2492, Automatic Set Relocation Feature Process.

Interactions

The following paragraphs describe the interactions between the ASR feature and other functionalities.

This feature requires features AD2492, Automatic Set Relocation Feature Process, and AD2493, Automatic Set Relocation XPM Interaction. The ASR feature will not operate if both of these features are not present.

The ASR feature supports all options which are supported by Integrated Voice and Data sets and their associated data devices.

The ASR feature relies on the functionality of the SERVORD command, CKLN. The feature interactions supported by the CKLN command, CLEN and EBS, are supported by the ASR feature as well.

Datafill

Automatic Set Relocation Table Control updates three tables: ASR, IVDINV, and KSETLINE.

When a set is taken out of service using the ASR "OUT" code, the following table is updated:

- ASR

When a set is put back in service using the ASR "IN" code, the following tables are updated in the following order:

- IVDINV
- KSETLINE
- ASR

A set can be taken out of service using the ASR feature and put back in service at another LEN (by a service representative) using the CKLN service order. When a set is put back in service using the CKLN service order, the CKLN service order updates the ASR table. If a user takes a set out of service using the ASR out procedure, the set can be put back in service at the same LEN using the following procedure.

1. Enter table ASRTABLE.
2. Delete the entry for that DN (based on personal ID number).
3. Post set at LTP level of map.
4. RTS set.

Table ASR

Table ASR contains records of digital sets that are in the process of being relocated. This table retains a user's six-digit Personal Identification Number, along with information pertaining to which set is being relocated. Table ASR is updated to manage the bookkeeping of digital sets currently in ASR transition. Entries are added to this table when a set is taken out of service using the ASR feature. Entries are removed from this table when a set has been successfully relocated (by either the ASR feature or with the CKLN service order). An example of an entry in table ASR is:

CODE	PDN	OLD LEN
123456	5554922	04 0 00

- The CODE in the table is the user's six-digit personal identification. This code is created and entered by the person moving the set. The user must remember this code in order to put the relocated set back into service.
- PDN is the Primary Directory Number of the set being relocated.
- OLD LEN is the Line Equipment Number assigned to the set being relocated.
- TEMP LEN is a temporary Line Equipment Number (this number is the same as the OLD LEN). This field provides future enhancement capability.

Note: If a user performs the ASR OUT function and receives a confirmation tone, then realizes they should not have performed ASR OUT, there is only one way to return that LEN to service. The user must contact the service representative and inform them of the mistake. To correct the mistake, the service representative will have to delete the entry corresponding to the personal ID code entered by the user from table ASR.

How to enable Automatic Set Relocation processing

A service representative must datafill the following tables to enable automatic set relocation processing. The tables must be datafilled in the following order:

1. IBNXL
2. XLNAME
3. AUTHPART
4. AUTHCDE
5. WRDN

These tables can be datafilled in a variety of ways to provide ASR capabilities for a group. In the following sections, the datafill examples show only one of many ways to datafill translations for ASR "IN" and ASR "OUT."

Table IBNXLA

Table IBNXLA includes feature translators ASRI and Automatic Set Relocation Out (ASRO). These feature translators are given to customer groups requiring ASR.

Each customer group has its own entry in table IBNXLA for ASR "OUT." This requirement eliminates the potential problem of a customer group using an ASR access code that is already assigned to another feature for that group.

Sample Table IBNXLA

XLANAME	DGLIDX	TRSEL	ACR	SMDR	FEATURE
CUSTXLA	95	FEAT	N	N	ASRO

In this example, the entry defines an access code of 95 for the IBN translator CUSTXLA (ordinary customer group). ASR "take set OUT of service" processing is associated with the access code and customer translator. ASRO indicates the set is to be taken out of service (ASR OUT).

Table IBNXLA is also used for ASR "put back IN service" (ASR IN), as shown below.

Sample Table IBNXLA

XLANAME	DGLIDX	TRSEL	ACR	SMDR	FEATURE
ASRXL	96	FEAT	N	N	ASRI

In this example, the entry defines an access code of 96 for IBN translator ASRXL (customer group ASR). ASRI indicates the set is to be relocated.

With this example datafill, ASR IN is limited to those lines which use the translator name ASRXL, which is datafilled in table CUSTHEAD. ASR OUT is limited to those lines which use the translator name CUSTXLA, which is also datafilled in table CUSTHEAD. Numbers 95 and 96, and names ASRXL and CUSTXLA are example names only. The fields ACR and SMDR were set to N for example purposes only.

The values for the fields TRSEL and FEATURE must be entered as shown in the example for the feature to be accessible.

Table XLANAME

Table XLANAME is used for a specific translator name. XLANAME is indexed into table IBNXLA with the translator name in field XLANAME (see the example above in Table IBNXLA).

Sample Table XLANAME

XLANAME		TRSEL	ACR	SMDR	FEATURE
CUSTXLA		\$	N	N	ASRO
ASRXLA		\$	N	N	ASRI

Table WRDN

Table WRDN is used to add specific DNs that require ASR. Up to 160 ASR DNs can be added to this table. Table WRDN is datafilled to accommodate the case when 160 sets are put out of service by ASR and requires an equal number of DNs to be put back into service. Call processing uses table WRDN.

The format of table WRDN is as follows:

DN_KEYDIRECTORY_NUMBER_RESULT

805 555 2191ASR

In this example, DIRECTORY_NUMBER_RESULT is a new feature named ASR. This feature identifies the DN to be used only for ASR purposes.

Table AUTHPART

Table AUTHPART defines the partition in the authorization code database in which to store the authorization codes for a customer group. The authorization code is fixed in length on a customer group basis. The length of the authorization code is two to 10 digits long. The following examples use five digits in the authorization code.

The format of table AUTHPART is as follows:

PARTNMFORMATLENGTHSIZE

BNRPIBN520

- PARTNM (partition name) is the customer group defined in table CUSTHEAD.
- FORMAT is always IBN when an authorization code is assigned to a customer group.
- LENGTH is the number of digits in each authorization code within the partition.
- MAXSIZE is the maximum allowable number of authorization codes that can be accommodated in the partition.

Table AUTHCDE

Up to 20 authorization codes are made available for use by this feature for each customer group. Table AUTHCDE is updated to include these authorization codes. The type of authorization codes utilized by ASR is the Switch Wide Code type.

The format of table AUTHCDE is as follows:

Sample Table AUTHCDE

AUTHPART	AUTHCODE	FMT	NCOS	ACCT	SECDIGS	TYPE
BNRP	123456	IBN	0	N	2222	ASR
BNRP	654321	IBN	0	N	1234	ASR
BNRP	123467	IBN	0	N	4444	ASR

- AUTHPART is the partition name in table AUTHPART.
- AUTHCODE is the authorization code field.
- FMT is the format field (either IBN or EXEMPT).
- NCOS is the Network Class of Service for the feature.
- ACCT allows a combined authorization and accounts code for a specific authcode.
- SECDIGS calls for the user to dial security digits after the specific authorization code.
- TYPE indicates Switch Wide (SW) authorization code type.

Tables KSETLINE, KSETFEAT, IVDINV, and IBNSC

A check is made to determine if the LEN to be changed or deleted is in table ASRTABLE. No LEN can be changed or deleted if in table ASRTABLE.

Service Orders

The ASR feature supports a new service order command, Query Autoset Relocation (ASRSHOW). There are two syntax statements for the ASRSHOW command.

Command:

ASRSHOW DN <PDN>

Response:

DN ID OLD LEN TEMP LEN
 <PDN><6_Digit_ID_Code><Old_LEN><Temp_LEN>

Where:

- PDN is the Primary Directory Number of the set being moved. This must be supplied by the service representative.

- 6_Digit_ID_Code is the user's personal ID code.
- Old_LEN is the LEN of the set being moved.
- Temp_LEN is identical to Old_LEN.

Command:

```
ASRSHOW ALL <SUM or DETAIL>
```

Response:

```
DN ID OLD LEN TEMP LEN
```

If the Summary option is chosen, only a sum of the DNs in the ASR "OUT" state is displayed.

The service representative can relocate a digital set's datafill by performing the CKLN service order command. CKLN updates the ASR table to ensure the set is recorded as relocated.

Operational Measurements

Automatic Set Relocation Table Control does not affect Operational Measurements.

Logs

Automatic Set Relocation Table Control does not affect logs.

User interface

Automatic Set Relocation Table Control does not change the user interface.

Billing

Automatic Set Relocation Table Control does not affect billing.

AD2492 - Automatic Set Relocation Feature Process

Description

The Automatic Set Relocation (ASR) feature allows a user to move Integrated Voice and Data (IVD) telephone sets from one location to another without assistance from a service representative. Automatic Set Relocation Feature Process describes the steps required to operate the ASR feature.

Preliminary setup required for ASR

Several steps must be completed before starting the ASR feature process. Performing these steps ensures proper operation of ASR.

1. Add feature translators ASRI and ASRO to tables IBNXL and XLNAME.
2. Define authorization codes in tables AUTHCODE and AUTHPART.

3. Create temporary datafill to allow the user to receive dial tone and to dial the ASR IN code. This is accomplished by the system having a Directory Number set aside for ASR as well as having a customer group set aside for ASR IN use. Perform the following steps:
 - a. Set aside one DN for ASR use. One DN must be set aside for each set that is to be relocated at the same time as other sets are being relocated. Up to 160 sets can be relocated at one time; therefore, set up to 160 DNs for ASR use.
 - b. Create a special customer group to be used for ASR IN use. This customer group is entered in the system as any other customer group. However, this special customer group must also be identified in table OFCVAR for the entry ASR_CUSTGRP. ASR OUT or ASR IN will not work on sets if there is no customer group identified for ASR_CUSTGRP.

Note: It is recommended that this customer group be set up so that the user can only dial the ASR IN code. By limiting the customer group to ASR IN only, this eliminates the possibility of users using the maximum number of sets that are allowed to be in the ASR OUT state at one time.

 - c. The customer group identified in ASR_CUSTGRP is used for the temporary KSETLINE table entry, along with a SUBGRP of 0 and an NCOS of 0.
4. Make sure each group that will be using the ASR feature has an entry in table CUSTHEAD identifying the ASR feature translator.

Note: Refer to feature description AD2491, Automatic Set Relocation Table Control, for specific datafill information about the tables referenced in the previous steps.

Operating the ASR feature

Complete the steps in tables ASR OUT and ASR IN to operate the ASR feature. The table includes system responses to each action.

ASR OUT

Action	System Response
1. Go offhook at the PDN on the set.	Dial tone.
2. Dial ASR OUT code (datafilled in table IBNXL). (Dialing ASR OUT on the secondary DN receives treatment.)	Special dial tone.
3. Dial ASR authorization code.	Special dial tone if successful. Dial tone for first invalid authorization code and treatment for the second invalid authorization code.

Action	System Response
4. Dial personal authorization code.	Special dial tone if successful. Dial tone for first invalid authorization code and treatment for the second invalid authorization code.
5. Dial a six-digit ID code. Remember this code as it will be used again.	Dial tone for duplicate ID code. Confirmation tone if successful. After giving confirmation tone, the system disconnects the call. Then the LEN associated with the set and the LEN of the associated data device are taken out of service by setting the line states to Installation Busy (INB).
6. Unplug the set.	No response.
7. Take the set to its new location.	No response.

ASR IN

Action	System Response
1. Plug the set into any properly equipped jack. See Warning below.	System recognizes the set has been plugged in. System datafills new LEN with temporary datafill.
2. Wait 30 seconds before taking the next step.	No response.
3. Lift the handset of the telephone set.	Stuttered dial tone.
4. Dial ASR IN code (datafilled in table IBNXLA).	Special dial tone.
5. Dial a six-digit ID code. (The same one used in step 5 in ASR OUT table.)	Confirmation tone if successful. Dial tone for first invalid personal ID code and treatment for the second invalid personal ID code.
6. Wait one minute before attempting to use the telephone set or the corresponding data device.	System is moving the datafill for the telephone during this time.

**DANGER****Digital set or line card damage**

If an IVD digital set is plugged into a jack equipped with a non-IVD line card, damage to the digital set and/or line card can occur.

Note: If no dial tone is received in step 3 in the ASR IN table, release the call and go offhook again. If there is still no dial tone, contact the system administrator.

If a user forgets what number was dialed in step 5 in the ASR OUT table, a service representative can use a new query command, based on the PDN of the set, to find the ID number dialed by the user. This new command, ASRSHOW, is described in feature AD2491, Automatic Set Relocation Table Control.

In steps 3 and 5 in the ASR OUT table, the user is given two chances to enter a valid authorization code. If an invalid authorization code is entered on the first attempt, normal dial tone is returned. The user can try to enter a correct authorization code. If another invalid code is entered, a treatment is returned.

If the user enters an invalid personal ID code in step 5 in the ASR OUT table, normal dial tone is returned. If the user enters a PID that is already being used by someone else, normal dial tone is returned. There is no limit to the number of times the user can try to store a valid PID code.

If the user enters an invalid PID code in step 5 in the ASR IN table, normal dial tone is returned. The user can retry the PID code. If another invalid PID code is entered, treatment is returned. This eliminates guessing the code and prevents security problems.

The user can use the '*' key to restart code entering if a mistake was made while entering codes (authorization and PID) in the above-mentioned steps. If a treatment has already been given for the error, the '*' key will not work. If the user misdials and treatment is received, the user must hang up before trying the ASR process again.

If the user presses a feature key, such as call pickup, during the ASR process, one of two things occurs:

- If the user enters digits while pressing the feature key, the key depression is ignored. The user can continue entering digits, as if the feature key was never pressed.
- If the user receives dial tone or special dial tone while pressing the feature key, three seconds of reorder signaling is given indicating that the new feature cannot be started. The user is then given dial tone to signal that the ASR process is ready to accept digits for the step in which the feature key was pressed.

Some features are exceptions to the above limitation. If the user presses any of the following feature keys during the ASR process, the feature will be activated/deactivated (based on the previous state of the feature):

- Make Set Busy (MSB)
- Night Service (NGTSRVCE)
- Controlled Interflow (CIF)

Hardware requirements

Automatic Set Relocation Feature Process requires upgraded 8X49 boards in order to work properly. The firmware was enhanced on these boards to accommodate ASR.

Limitations and restrictions

The following limitations and restrictions apply to Automatic Set Relocation Feature Process:

- Only plug an IVD digital set into a jack that is equipped with an IVD line card (8X47BA).

**DANGER****Digital set or line card damage**

If an IVD digital set is plugged into a jack equipped with a non-IVD line card, damage to the digital set and/or line card can occur.

- Relocation procedures must be originated from the primary Directory Number on the telephone set.
- Only 160 sets can be in the ASR "OUT" state at one time. The number of DNs allocated for this feature's use determines the actual number of sets that can be in the ASR OUT state at the same time. At least one DN must be set aside for ASR use.
- A log is generated if a user attempts to perform the ASR OUT function when no DNs have been set aside for ASR use.
- The new location must be equipped and datafilled with the appropriate card type (8X47BA) in table LNINV.
- ASR on MADNs must comply with MADN distribution and engineering restrictions. All MADN engineering rules are checked. If the MADN rules are violated by moving a set to its new location, a log is generated.
- Data options (MADO and MPDA) are automatically relocated when the host set is relocated using the ASR feature.
- ASR only applies to IVD digital terminals and related data options. The IVD terminals and options supported by ASR are M2009, M2112, M2018, M2317, MADO; M3000; M2008, M2616, M2016S, M2216A, M2216B, MPDA.
- The ASR OUT and ASR IN functions are not allowed during an image function. Once the image is complete, these functions are allowed. If attempted during the image process, the user is routed to treatment. If a user plugs a set into an empty LEN during an image, the plug-in is not processed, no temporary datafill is made, no dial tone is heard and no action is taken to allow the user to bring the set back into service.

- The displays associated with the sets are not used for ASR processing instructions.
- The customer group datafill for ASR IN must be datafilled to only allow the user to enter the ASR IN code.
- A log is generated when the maximum number of sets have performed ASR OUT at one time. The log entry indicates that no more sets can perform the ASR OUT function until the ASR IN function is performed.
- A log is generated if the ASR IN procedure fails.
- If a user performs the ASR OUT function and receives confirmation tone, then realizes they should have not performed ASR OUT, there is only one way to return the LEN to service. The user must contact the service representative and inform them of the mistake. To correct the mistake, the service representative will have to delete the entry corresponding to the personal ID code entered by the user. Once this entry is deleted, the service representative must go to the LTP level of the MAP and return the user's line to service. Refer to feature AD2491, Automatic Set Relocation Table Control, for information about ASRTABLE.
- A service representative cannot change the state of a LEN when set to INB (during an ASR OUT procedure). The state can be changed after the corresponding entry in table ASRTABLE is deleted.
- No feature interactions are supported during the ASR process. If a user attempts to activate a feature during the ASR process, one of two things occurs:
 - If the user enters digits while pressing the feature key, the key depression is ignored. The user may continue entering digits, as if the feature key was never pressed.
 - If the user receives dial tone or special dial tone while pressing the feature key, three seconds of reorder signaling is given indicating that the new feature cannot be started. The user is then given dial tone to signal that the ASR process is ready to accept digits for the step in which the feature key was pressed.

Some features are exceptions to the above limitation. If the user presses any of the following feature keys during the ASR process, the feature will be activated/deactivated (based on the previous state of the feature):

- Make Set Busy (MSB)
- Night Service (NGTSRVCE)
- Controlled Interflow (CIF)
- No calls can be active or on hold at any DN on the set during the ASR OUT process.

- The user must wait 30 seconds after plugging the set into its new location before going offhook at the PDN of the set. After 30 seconds, the user can dial the ASR IN code. If no dial tone is received at this point, unjack the set. Wait 20 seconds, then follow the steps outlined in the table ASR IN beginning at step 1. If there is still no dial tone after this, contact the system administrator.
- The following options and features are supported by the ASR process. If a set has an option or feature that is not listed in the "[Features Supported by ASR](#)" (page 256), the datafill for that set cannot be moved from one LEN to another using the ASR process.

Features Supported by ASR

Feature acronym	Feature name
AUL	Automatic Line
SPB	Special Billing
DIN	Denied Incoming
PBL	Private Business Line
CLI	Calling Line Identification
DND	Do Not Disturb
RMB	Random Make Busy
RSUS	Requested Suspension
SHU	Stop Hunt
SEC	Security Code
CUG	Datapath Closed User Group
TWC	3-Way Calling
RAG	Ring Again
AUD	Auto Dial
CNF	6-Port Conferencing
CPU	Call Pick Up
SCL	Speed Calling Long
SCS	Speed Calling Short
CPK	Station Call Park
DCPK	Directed Call Park
CXR	Line Call Transfer Option
PRL	Privacy Release
CFU	Call Forward Universal
MSB	Make Set Busy All

Feature acronym	Feature name
MCH	Malicious Call Hold
SNR	Store Number Redial
EBO	Exec Busy Override Originate
GIC	Group Intercom for IBN Lines
QTD	Query Time and Date
AAB	Auto Answerback
NRS	Network Resource Selector
INSPECT	Inspect Key
KSH	Key-Set Short Hunt
QBS	Query Busy Station
PRV	MADN SBA/MBA Privacy Option
LOB	Line of Business
ACDNR	Automatic Call Distribution Not Ready
OBS	Observe Agent
EMK	ACD Emergency Key
ASL	Agent Status Lamp
SUPR	Supervisor
DQS	Display Queue Status
NGTSRVCE	ACD Night Service Key
DQT	Display Queue Threshold
CFI	Call Forward Intragroup
CFB	Call Forward Busy
CFD	Call Forward Don't Answer
SOR	Station Origination Restrictions
CCW	Cancel Call Waiting
CIF	Control Interflow
TBO	Terminating Billing Option
CPR	Call Path Restoration
SDY	AT&T Line Study
MWT	Message Waiting
CWT	Call Waiting
SIC	Single Intercom

- User receives treatment of FNAL if a DN that is set aside for ASR use is dialed.
- User receives treatment of FNAL when they dial into the switch through Direct Inward System Access (DISA) and then attempt to perform ASR OUT or ASR IN function.
- ASR process cannot be performed on a phone line that is set up as AUL (automatic line).
- Entries for a LEN cannot be changed when the LEN is in the ASR OUT state, with the following exceptions:
 - HUNTGRP
 - MDNGRP
 - CFX

The entries for these two tables can be changed since the entry represents information for a group, not an individual LEN.

An entry for a LEN in the ASR OUT state can be changed in table CFX. This lets the user change the forwarding information for the set while it is in the OUT state.

Interactions

The following paragraphs describe the interactions between Automatic Set Relocation Feature Process and other functionalities.

This feature operates only when used in conjunction with features AD2491, Automatic Set Relocation Table Control, and AD2493, Automatic Set Relocation XPM Interaction.

The Automatic Set Relocation feature supports all options supported by IVD sets and their associated data devices, with no restrictions.

ASR relies on the functionality of the SERVORD command, CKLN. The CKLN command allows the service representative to move the datafill for any key set from one LEN to another. The feature interactions supported by the CKLN command are supported by the ASR feature. The ASR feature allows the user to relocate IVD sets without the steps required in the CKLN command. ASR is an automated operation, freeing the service representative from the task of moving each set requiring relocation.

Datafill

Automatic Set Relocation Feature Process does not affect data schema tables or office parameters.

Service Orders

Automatic Set Relocation Feature Process does not affect SERVORD.

Operational Measurements

Operational Measurements (OMs) keeps track of the number of sets moved by the Automatic Set Relocation Feature Process.

Logs

Automatic Set Relocation Feature Process generates the following new logs:

- A log is generated each time a set is taken out of service. The log entry contains the user's LEN currently being accessed, the Primary Directory Number, the personal authorization code and the personal ID code.
- A log is generated each time a set is put back into service. The log entry contains the PDN and new LEN location.
- A log is generated when the MADN rules are violated by the moving of the set. ASR on MADNs must comply with MADN distribution and engineering restrictions. When a user is bringing a set back into the system and this set has a MADN appearance, the MADN engineering rules are checked. The log entry indicates the reason for the failure.
- A log is generated when the maximum number of sets have entered the ASR OUT state. The log entry indicates that no more sets can perform the ASR OUT function, until some sets perform the ASR IN function.
- A log is generated when a user attempts to perform the ASR OUT function when no more DNs are available for ASR use.
- A log is generated when the user attempts to perform the ASR OUT function and no customer group has been identified for ASR IN table OFCVAR.
- A log is generated when the user attempts to perform ASR OUT or ASR IN during the dumping of an image.
- A log is generated if the user is performing any of the ASR IN processes listed below:
 - A log is generated and the ASR IN process fails if the LEN of the OLD location is not idle (IDL), machine busy (MB) or offline (INB).
 - NEW LEN has a "Reserved" status.
 - NEW LEN has a "Restricted" status.
 - PDN is deleted from the LEN of the OLD location.
 - OLD LEN has Subscriber Line Usage (SLU) option.
 - OLD LEN has an option not supported by the ASR process.
 - OLD LEN is located on an MTS node and the NEW LEN is not.
 - OLD LEN cannot be deleted from table LINESTAT.
 - NEW LEN cannot be added to table CKLN.

- The ASR IN process will continue even if the MADN engineering rules cannot be checked. The log entry indicates that the engineering rules could not be checked.
- If the ASR IN process fails due to any condition, the log entry indicates on which LEN the ASR IN process failed.
- If the personal ID code and the associated data cannot be deleted from table ASRTABLE.
- A log is generated if the temporary entry (created for the purpose of allowing the user to perform the ASR IN process) cannot be removed from table IVDINV.
- A log is generated if the ASR process cannot unprotect data store for the purpose of modifying it.
- A log is generated if one of the following conditions occur when the user is unplugging the IVD set:
 - User plugs set into a LEN that is not datafilled up through table LNINV.
 - ASR plug in process fails to return the temporary LEN to service. The service representative will have to return the LEN to service.
 - User plugs set into a LEN that has a mate data line datafilled in table IVDTRBL. This log entry indicates that the data port on that LEN has been previously diagnosed as being a bad port. The service representative can delete the entry from table IVDTRBL, allowing the user to retry the plug-in. However, if the user has a data device associated with the IVD set, this device will not function properly at the new location once the user has performed the ASR IN process. This is because of the bad port for the data device. It is recommended that a new LEN assignment be given to new location.
 - User plugs into a LEN that already has a mate data line datafilled in table IVDINV. The service representative should investigate why the mate LEN is datafilled. If it is safe to delete the datafill for the mate LEN, the user can retry the plug-in after the service representative has removed the datafill for the mate LEN.
 - User plugs in set into LEN during the dumping of an image.
- A log is generated if one of the following conditions occur when the user is performing the ASR OUT process:
 - User performs process from a LEN that is already in the ASR OUT state.
 - Personal ID code and other information cannot be added to table ASRTABLE.

User interface

Automatic Set Relocation Feature Process does not change the user interface.

Billing

Automatic Set Relocation Feature Process does not affect billing.

AD2493 - Automatic Set Relocation XPM Interaction**Description**

The Automatic Set Relocation (ASR) feature allows a user to move Integrated Voice and Data (IVD) telephone sets from one location to another without assistance from a service representative. Automatic Set Relocation XPM Interaction implements the XPM (LGC/LTC/RCC) software changes required to handle the jack/unjack messages from the DLM.

Hardware requirements

The Automatic Set Relocation XPM Interaction feature requires the following equipment:

- The user's new location must be equipped with the appropriate line card type (8X48BA) and jack. When a user plugs a set into a jack that is not equipped with an appropriate line card, no dial tone is sent to the set.
- Upgraded 8X49 boards. These boards have firmware enhancements to accommodate the ASR feature.

**DANGER****Digital set or line card damage**

If an IVD digital set is plugged into a jack equipped with a non-IVD line card, damage to the digital set and/or line card can occur.

Limitations and restrictions

The following limitations and restrictions apply to Automatic Set Relocation XPM Interaction:

- The number of sets that can be relocated simultaneously is 160.
- There must be some unassigned DNs allocated for use by ASR. These DNs cannot be used by any other feature.
- ASR supports the following digital sets:
 - M2009
 - M2112
 - M2018
 - M2317

- M2008
- M2616
- M2216A
- M2216B
- M3000
- MADO
- ADATA1

Interactions

The following paragraphs describe the interactions between Automatic Set Relocation XPM Interaction and other functionalities.

The ASR feature does not change the attributes of a set, it only moves the datafill of the set from one location to another. A set which has been moved from location to another functions as it did before the move.

This feature operates only when used in conjunction with features AD2491, Automatic Set Relocation Table Control, and AD2492, Automatic Set Relocation Feature Process.

Datafill

Automatic Set Relocation XPM Interaction does not affect data schema tables or office parameters.

Service Orders

Automatic Set Relocation XPM Interaction does not affect SERVORD.

Operational Measurements

Automatic Set Relocation XPM Interaction does not affect Operational Measurements.

Logs

Automatic Set Relocation XPM Interaction does not affect logs.

User interface

Automatic Set Relocation XPM Interaction does not change the user interface.

Billing

Automatic Set Relocation XPM Interaction does not affect billing.

AD2854 - NSS Validated Account Codes and Authcode Last Dialing Plan

Description

This feature validates the content of two- and three-digit account codes for calls originated over Network Services Software (NSS) Feature Group A (FGA), Feature Group B (FGB), Network Services Software Feature Group D (NSSFGD) and Integrated Business Network (IBN) trunks and Direct Access Trunks (DAT).

This feature also provides an authcode last dialing plan within Meridian offnet access (MONA) which is accessed from FGA, FGB, NSSFGD, IBN trunks and DATs.

In addition to validating account codes and the authcode last dial plan, this feature provides the following two additional capabilities:

- This feature changes the reset interaction so that when the reset key (*) is pressed, the call stage is moved to the last audible prompt tone (to the last prompt tone that is not N for no dial tone). This capability is only applicable when the dial plan is authcode first and the destination prompt is N for no dial tone, or when the dial plan is authcode last and the account code prompt is N.
- The interactions for reset dialing for the authcode first dial plan when secrecy is on are also changed in this feature. This feature changes the interactions so that if the reset key (*) is pressed during collection of the authcode, PIN digits, security code digits, combined authcode/account code, and account code digits, the call stage is set to the authcode prompt tone so that the dialing sequence can be redialed.

Hardware requirements

NSS Validated Account Codes and Authcode Last Dialing Plan has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to NSS Validated Account Codes and Authcode Last Dialing Plan:

- Account code validation is only performed on NSS FGA, FGB, NSSFGD, and IBN trunks and NSS DATs.
- Only two- and three-digit account codes can be validated.
- Zero cannot be dialed as the first digit of the destination digits under authcode last dial plan when both authcode last and travel card dialing are permitted on the same trunk group.
- The destination digits are ignored and the call is routed to the hotline number if a hotline number is associated with the authcode dialed using the authcode last dial plan.

- The Authcode or Account Code Required (ACR) option in table CUSTHEAD specifying authcode required has no effect on the authcode last dial plan. This does not prevent a destination only dial plan from using the ACR option to specify that an authcode should be collected.
- Reset dialing cannot be performed during the collection of the account code if a caller dials a private speed call number that is datafilled in table PSCNUM under the private speed call index associated with the authcode that was dialed, and if the account code prompt is N for no dial tone. This restriction applies under the authcode last dial plan.
- An account code is not collected for authcode hotline calls under the authcode last dial plan, unless table CUSTHEAD specifies combined authcode/account codes.
- A call resets back to the authcode collection state if the account code prompt is N for no dial tone and if the reset key (*) is pressed during the collection of the account code. The destination digits are translated based on the customer group and NCOS associated with the last authcode that was dialed. If the destination digits do not translate, the appropriate logs are generated and the call is sent to treatment. Even if the call completes, logs may still be generated.

Interactions

The following paragraphs describe the interactions between NSS Validated Account Codes and Authcode Last Dialing Plan and other functionalities.

Validated account codes

Reorigination The account code is validated if it is required on a reoriginated call and if the customer group used in translating that call specifies that account code's validation.

Account code length The length of the dialed account code can be greater than or equal to the account code length specified in the ACCT option in table CUSTHEAD for a particular customer group. If the account code length is less than the length specified in table CUSTHEAD, a log is output and the call is routed to treatment regardless of whether account code validation is required.

The exception is when the account code is collected with the authcode under the combined authcode/account code specified in table CUSTHEAD. In this case, the account code length must be the same as the length specified in the ACCT option. If it is not, a log is output and the call is routed to treatment regardless of whether account code validation is required.

If the account code length is greater than or equal to the account code length specified in table CUSTHEAD and account code validation is required, only the number of digits specified in table CUSTHEAD are validated. These digits are taken from the beginning of the account code digit stream. For example, the call will not complete if the following happens:

1. Table CUSTHEAD specifies that the account code length for customer group of the caller is three.
2. 12345 is dialed as the account code.
3. 123 is datafilled in table ACSCRN1 for the account code screening index associated with the customer group of the caller.

FGD pure dialing Account codes are also validated for pure FGD calls in the manner specified in this document.

Authcode last dial plan

Reset dialing Reset dialing can be used under the authcode last dial plan during the collection of destination digits, authcode, or account code. If the reset dialing feature is used, the call resets to the previous dial tone.

Reorigination Reorigination can be performed for calls using the authcode last dial plan.

PIN Personal Identification Number (PIN) interactions and digits are collected with an authcode under this dial plan in the same manner they are collected under the authcode first dial plan.

Account code Account codes can be required based on authcode or IBN translations.

Security digits Security digits are collected with an authcode under the authcode last dial plan in the same manner they are collected under the authcode first dial plan.

Secrecy The Secrecy feature proceeds from the collection of a valid authcode and optional security code to the next stage of the call without waiting for an pound sign (#) or inter-digit timeout. Under the authcode first dial plan, prompt tone for destination digits is immediately applied when the Secrecy feature is active. Under the authcode last dial plan, if an account code prompt tone is required, it will immediately be given if the Secrecy feature is active.

Private Speed Calling Private Speed Call Number can be dialed with the authcode last dial plan.

Authcode Hotline If an authorization code that has a hotline associated with it is dialed, the destination digits that were dialed are ignored and the call is routed to the hotline number associated with the authcode.

Conditional Hotline The call will route to the conditional hotline route if the dial plan has the Conditional Hotline feature, and if digit collection times out during the collection of the authcode or collection of the destination digits.

FGD Pure Dialing The authcode last dial plan is valid for FGD pure calls when access is obtained by the MONA listed Directory Number.

Datafill

NSS Validated Account Codes and Authcode Last Dialing Plan affects data schema tables as follows.

Table ACSCRN1

This table is the account code screening table and is created by the NSS Validated Account Codes and Authcode Last Dialing Plan features. The table contains a list of valid two- or three-digit account codes for each index.

The two-part key to this table consists of an index (ACSCRIDX) and a valid account code (ACCTCODE). No other information is stored in a tuple. Adding several tuples with the same account code screening index, but different account codes, forms the list of account codes that are valid for the customer group associated with that account code screening index.

The range of ACSCRIDX is one to 2047. A given ACSCRIDX can contain either two-digit account codes or three-digit account codes, but not both. If the ACSCRIDX contains two-digit account codes, up to 100 account codes can be datafilled for that ACSCRIDX. If the ACSCRIDX contains three-digit account codes, up to 1000 account codes can be datafilled.

The first account code that is datafilled for a particular ACSCRIDX determines the length of all other account codes that can be datafilled for that ACSCRIDX. For example, if the first account code that is datafilled for ACSCRIDX 5 is 23, all other account codes datafilled with ACSCRIDX 5 must be two digits. Data entry personnel should ensure that the account codes datafilled in table ACSCRN1 for a given customer group are the same length as specified in the ACCT option of table CUSTHEAD for that customer group. If they are different, the calls are routed to treatment.

Since the only information that each entry contains is the key, a CHANGE operation is not valid. To change a tuple, it must be deleted and reentered.

Table CUSTHEAD

A new selector, ACCTVAL, is added to the ACCT option in table CUSTHEAD. This selector specifies, on a customer group basis, whether or not account code validation is performed. If account codes are to be validated, ACCTVAL is datafilled Y, otherwise, it should be datafilled N. For calls that require account code screening, ACCTVAL is datafilled Y for the customer group that is used to translate those calls.

The DIGINACC field of the ACCT option specifies the account code length for a customer group. Since only two- or three-digit account codes can be validated, either two or three must be datafilled in the DIGINACC field. If DIGINACC is datafilled with a number other than two or three, ACCTVAL must be datafilled to N.

When ACCTVAL is datafilled Y, an account code screening index, ACSCRIDX, must be datafilled. ACSCRIDX is used to index into the account code screening database using table ACSCRN1.

Table DIALPLAN

Specifying the authcode last dial plan involves datafilling two tables: TRKGRP and DIALPLAN. A dial plan name is specified in table TRKGRP under the field DIALPLAN. This dial plan name must be datafilled in table DIALPLAN with PLAN TYPE = CUTTHRU and CTTYPE = AUTHONLY. When PLAN TYPE = CUTTHRU and CTTYPE = AUTHONLY, the next field to be datafilled is ORDER. This feature adds LAST as a valid entry for the ORDER field. When LAST is entered in the ORDER field, data entry personnel are prompted for the destination, authcode, and account code prompt tones.

Under the NSS Offnet Access Dialing Plan Driver, feature AD2471, a CTTYPE of AUTHORTC could be datafilled when the PLAN TYPE was CUTTHRU. AUTHORTC allows both authcode and travel card dialing on the same trunk group. Feature AD2854 allows the authcode dial plan under AUTHORTC to refer to either the authcode first or authcode last dial plans.

When a CTTYPE of AUTHORTC is datafilled, data entry personnel are prompted for AUTHNAME and TCNNAME. The AUTHNAME subfield must be datafilled with a dial plan name that uses the AUTHONLY dial plan. If the ORDER for this AUTHONLY dial plan is FIRST, AUTHORTC refers to authcode first or TCN dial plan. If the ORDER for this AUTHONLY dial plan is LAST, AUTHORTC refers to authcode last or TCN dial plan.

Service Orders

NSS Validated Account Codes and Authcode Last Dialing Plan does not affect SERVORD.

Operational Measurements

NSS Validated Account Codes and Authcode Last Dialing Plan does not affect Operational Measurements.

Logs

NSS Validated Account Codes and Authcode Last Dialing Plan has added two new reports to the existing IBN 110 log.

- INCONSISTENT ACCT LENGTHS
- ACCT VALIDATION FAILURE

User interface

NSS Validated Account Codes and Authcode Last Dialing Plan does not change the user interface.

Billing

NSS Validated Account Codes and Authcode Last Dialing Plan does not affect billing.

AD2856 - NSS-DBCP Travel Card Number Validation**Description**

This feature provides the Network Services Software (NSS) the basic capability to route and tandem database query messages over Signaling System Number 7 (SS7) links. More specifically, this feature allows the customer to remotely validate Travel Card Numbers (TCNs) as a NSS Database Control Point (NSS-DBCP).

Hardware requirements

NSS-DBCP Travel Card Number Validation has no hardware requirements.

Limitations and restrictions

NSS-DBCP Travel Card Number Validation has no limitations or restrictions.

Interactions

NSS-DBCP Travel Card Number Validation has no functionality interactions.

Datafill

NSS-DBCP Travel Card Number Validation does not affect data schema tables or office parameters.

Service Orders

NSS-DBCP Travel Card Number Validation does not affect SERVORD.

Operational Measurements

NSS-DBCP Travel Card Number Validation does not affect Operational Measurements.

Logs

NSS-DBCP Travel Card Number Validation does not affect logs.

User interface

NSS-DBCP Travel Card Number Validation does not change the user interface.

Billing

NSS-DBCP Travel Card Number Validation does not affect billing.

AD3064 - Attendant Consoles on IPEs**Description**

This feature provides the software and verification required to support Meridian SL-100 Attendant Consoles (ACs) attached to Meridian SL-100 Intelligent Peripheral Equipment (IPE) analog lines.

Hardware requirements

This feature requires an Meridian SL-100 IPE equipped with an Extended Message Waiting Line Card (XMLC) and an Extended Analog Line Card (XALC).

Limitations and restrictions

Without this feature, Attendant Consoles attached to an IPE analog line are not supported. No functionality is added to Attendant Console call or feature processing. Consoles attached to IPEs operate in the same manner as consoles attached to either Line Modules (LMs) or Line Concentrating Modules (LCMs).

Interactions

Consoles attached to IPEs operate in the same manner as consoles attached to either LMs or LCMs.

Datafill

In order to datafill ACs on an IPE analog line, changes to two tables are required. The Lines Inventory Table LNINV is altered to accept analog lines on an IPE XMLCs or XALC. Table IBNLINES is changed to accept AC line datafill on lines associated with IPEs.

For verification, no changes to existing CC AC call processing/feature processing or XPM software occurs.

Service Orders

Attendant Consoles on IPEs does not affect SERVORD.

Operational Measurements

Consoles attached to IPEs peg the same OM groups and registers as consoles attached to LMs and LCMs.

Logs

No new logs are created for this feature. However, all logs currently implemented for ACs attached to other Line Concentrating Devices (LCDs) are generated for ACs attached to IPEs as well.

User interface

Attendant Consoles on IPEs does not change the user interface.

Billing

Attendant Consoles on IPEs does not affect billing.

AD3092 - Broadcast Table Control Enhancements

Description

This feature provides the table control modifications required to classmark a trunk group for potential use for secondary fan-out in a broadcast call. This feature also includes a new office parameter to define the requirements for internal resource allocation. Internal resource allocation is required based on the maximum number of output ports actively involved in a broadcast call.

Hardware requirements

Broadcast Table Control Enhancements has no hardware requirements.

Limitations and restrictions

Broadcast Table Control Enhancements has no limitations or restrictions.

Interactions

Broadcast Table Control Enhancements has no functionality interactions.

Datafill

A new option, BCREMOTE, is added to Table TRKGRP. This option classmarks the IBN trunks (IBNTO and IBNT2) as capable of secondary fan-out. Secondary fan-out is an interswitch link that serves as a single common input broadcasting to multiple destinations in a remote office.

The BCREMOTE option is only valid for IBN trunk groups datafilled to use ANSI CCS7 signaling protocol.

A new office parameter, NO_OF_CLONE_TIDS, is added to Table OFCENG. Clone Terminal Identifiers (TIDS) are internal entities used to provide linkage from the input to each output port in a broadcast call. This new office parameter defines the number of clone TIDS engineered for the office. This office parameter represents the sum of the maximum number of active concurrent output ports in all broadcast calls supported in the office at any one time.

The NO_OF_CLONE_TIDS parameter has a range between 0 and 32,000. If one clone TID is needed per output report, and up to 1000 trunks are supported with an average of eight destinations each, a maximum of 8000 clone TIDS are needed for the broadcast features. Since clone TIDS are not broadcast specific, additional clone TIDS are allocated for other uses.

This office parameter is limited in number to 32,000. The limiting factor is the number of concurrent broadcast output ports supported at one time, 8000, plus 24,000 more for non-broadcast specific applications.

The number of clone TIDS, once allocated, cannot be reduced.

Service Orders

Broadcast Table Control Enhancements does not affect SERVORD.

Operational Measurements

Broadcast Table Control Enhancements does not affect Operational Measurements.

Logs

Broadcast Table Control Enhancements does not affect logs.

User interface

Broadcast Table Control Enhancements does not change the user interface.

Billing

Broadcast Table Control Enhancements does not affect billing.

AD3093 - Broadcast Fan-Out Nodal Setup

Description

This feature allows the broadcasting of one source to multiple destinations. This feature uses Integrated Business Network (IBN) Integrated Services Digital Network User Part (ISUP) trunks with ISUP messages received from the control component.

The initial broadcast call is established with one connection from a single input port to a single output port. The maximum number of connections to a single incoming port is 16. Each additional connection can be progressively added after initial call setup. Each additional connection is unidirectional from the input to the output port.

A broadcast call is established with ISUP messages from the control component. The control component is an external signaling link interface to the Meridian SL-100. The signaling link associated with the input port is directly connected to the control component.

Hardware requirements

Broadcast Fan-Out Nodal Setup has the following hardware requirements:

- Meridian SL-100 with a Line Peripheral Processor (LPP)
- a two-node network of Meridian SL-100 switches
- IBN ISUP trunks as input and output ports

Limitations and restrictions

The following limitations and restrictions apply to Broadcast Fan-Out Nodal Setup:

- This feature is only available on the Meridian SL-100 equipped with an LPP.
- Customer premise equipment (CPE) is used to ensure unidirectional transmission (for voice and data).
- All broadcast call control information is provided through ISUP messaging in the form of Directory Numbers (DNs). DNs supplied in the ISUP INF message must translate to an IBN ISUP trunk agency for successful termination. No virtual DN mapping to any preset destinations is supported.
- Remote broadcast sessions are not supported.
- No special error recovery is provided to reestablish a previously established call upon failure (other than what is currently provided by Common Channel Signaling System No. 7). Loss of connections must be reinitiated from the control component.
- ISUP release in the forward direction terminates the broadcast call.
- Individual progressive release of terminating agents in the backward signaling direction is supported. ISUP release of a terminating agent disconnects the agent without affecting other established connections in the broadcast session.
- All add-ons must be initiated from the originating control component on the signaling link associated with the input port in the primary broadcast.

- The time necessary to set up a broadcast call and connect progressive add-ons is directly related to the existing translation and routing time within the Meridian SL-100.
- Translations based on Network Class of Service are supported. ScopeDial class of service is not supported.
- The Meridian SL-100 does not store network configuration information for any other switches in the network.
- Network configuration and network maintenance are handled by an external system.
- The number of simultaneous broadcast connections is restricted by the switching system's call processing and datafill capacity as follows:
 - Up to 16 links are in a link set.
 - Up to 8,192 trunk groups are on a Meridian SL-100.
 - Up to 16,384 trunk members are in a link set.
 - Up to 32,767 medium feature data blocks are allowed. Each input and output port actively involved in a call requires one medium feature data block.
 - Up to 32,767 feature control blocks are allowed. Each input and output port actively involved in a call requires one feature control block.
- A maximum of four DNs are contained in an ISUP information message requesting broadcast add-ons.
- Continuity tests are disabled for broadcast connections because they are only valid on two-way PCM connections.
- Survivability of a broadcast call over a CC switch activity (SWACT) is not supported.
- Destination numbers for add-on parties are limited to a maximum of 15 digits.

Interactions

Existing Automatic Message Accounting (AMA) billing on IBN ISUP trunks is not generated for broadcast calls.

Datafill

Table modifications required to identify broadcast agents as remote for secondary broadcast sessions are implemented by feature AD3092, Broadcast Table Control Enhancements.

Service Orders

Broadcast Fan-Out Nodal Setup does not affect SERVORD.

Operational Measurements

Broadcast Fan-Out Nodal Setup does not affect Operational Measurements.

Logs

Broadcast Fan-Out Nodal Setup does not affect logs.

User interface

Broadcast Fan-Out Nodal Setup does not change the user interface.

Billing

AMA and SMDR billing are not generated for broadcast connections.

AD3257 - Power Call Processing Architecture Enhancements**Description**

This feature is responsible for two tasks:

- Trunk selection enhancements
- Preset broadcast calls

Trunk selection enhancements

This feature, through translations, terminates to a trunk circuit based on the dialed Directory Number (DN). This is accomplished by providing a new selector, MEM, in table DNROUTE and table OFRT. The MEM selector already exists for table OFRT, but is now integrated into Meridian SL-100 loads. The selector contains information identifying the trunks circuit for termination. A DN that translates to this selector terminates to the datafilled trunk circuit or range of circuits.

When the selector is present in table DNROUTE, and the trunk circuit to which the DN translates is unavailable, the call routes to treatment. When the selector is present in table OFRT, and the trunk circuit to which the DN translates is unavailable, the call continues to the next route in the route list. When all possible routes in the route list are exhausted, the call routes to treatment.

Preset broadcast calls

This feature activates a broadcast call. Users perform the initial set up of a broadcast call by supplying a specific DN and a preset broadcast activation number. Associated with this preset broadcast activation number are up to eight terminating DNs. Activation of a preset broadcast call in this manner creates a unidirectional connection from the originator to the preset terminators.

Hardware requirements

Power Call Processing Architecture Enhancements has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Power Call Processing Architecture Enhancements for trunk selection enhancements and preset broadcast calls:

- trunk selection enhancements
 - The MEM selector allows specification of only one trunk group Common Language Location Identifier (CLLI) and one external member number for table DNROUTE.
 - The MEM selector is valid for Integrated Business Network (IBN) trunks.
 - Table OFRT is limited to 1024 routing lists. The list entries are not used exclusively for the MEM selector.
 - The MEM selector in DNROUTE cannot use a trunk with the Automatic Call Distribution (ACD) option, because of the limitations of table DNROUTE.
 - Datafill of the MEM selector is limited to 8000 items. An item is any DN in table DNROUTE set to use the MEM selector or any route in a route list datafilled with the MEM selector.
 - Offhook queuing and call back queuing are not supported with the MEM selector.
 - The command Query Directory Number (QDN) is not supported for DNs used as MEM selectors in table DNROUTE.
- preset broadcast calls
 - All add-ons must be initiated from the originating control component on the signaling link associated with the input port in the primary broadcast. This is after the preset broadcast call has been established by table BROADCAST.
 - Table BROADCAST allows the datafill of eight legs for each preset broadcast call.
 - An entry in table BROADCAST must have at least one DN datafilled in field BDCTADDR.
 - The maximum number of preset broadcast calls is 64.
 - Add-ons can only be added after the preset broadcast call is initiated.
 - There is a maximum of 16 output ports that are DNs. If nine DNs use 16 output ports, only nine DNs are supported.
 - The preset terminators in table BROADCAST cannot be other preset broadcast activation numbers.

- A preset broadcast activation number coming through an add on INF message is not allowed.
- The command QDN is not supported for DNs that represent activation of the preset broadcast feature.

Interactions

The following paragraphs describe the interactions between Power Call Processing Architecture Enhancements and other functionalities.

Trunk selection enhancements

The DN in the optional parameter of the CPG message does not indicate a one-to-one mapping with a trunk for broadcast call applications in table OFRT. The DN in the optional parameter of the CPG message does indicate a one-to-one mapping to the route list for broadcast call applications in table OFRT.

Preset broadcast calls

A CPG is used to acknowledge a broadcast call initiated or subsequently added on by an INF message. No such hand shaking mechanism is used for activation using the preset broadcast call method.

Datafill

Trunk selection enhancements

Table DNROUTE is changed to allow direct routing to a trunk member. This is done by adding a MEM selector to the DN_SEL field of table DNROUTE that indicates direct termination to the specified trunk circuit member.

Preset broadcast calls

New table BROADCAST defines up to 64 predefined broadcast sessions.

Table DNINV changes to allow the datafill of BDCT, a new feature selector. A DN with this selector will translate to a predefined broadcast session.

Service Orders

Power Call Processing Architecture Enhancements does not affect SERVORD.

Operational Measurements

Power Call Processing Architecture Enhancements does not affect Operational Measurements.

Logs

Power Call Processing Architecture Enhancements does not affect logs.

User interface

Power Call Processing Architecture Enhancements does not change the user interface.

Billing

Power Call Processing Architecture Enhancements does not affect billing.

AD3259 - Broadcast Interworking/Feature Interactions**Description**

This feature allows a broadcast call to terminate to Integrated Business Network (IBN) Per Trunk Signaling (PTS) trunks and IBN stations (that is, 2500/500 sets, Meridian Business Set, Integrated Voice and Data set, and Basic Rate Interface set). It also allows a broadcast call to IBN ISDN User Part (ISUP) trunks. The originator of a broadcast is always an IBN ISUP trunk.

This feature allows new terminators to be added locally to the secondary node of a broadcast call by sending an ISUP information message (INF) to any existing IBN ISUP terminator at the secondary node.

Hardware requirements

Broadcast Interworking/Feature Interactions has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Broadcast Interworking/Feature Interactions:

- The controller of a broadcast call must be an IBN ISUP trunk.
- Preemption of ScopeDial stations involved in a broadcast call is not supported.
- A PTS trunk as a terminator does not support network fanout (fanout at node two or further).
- A call progress (CPG) message is sent to the controller of the broadcast call (not to the terminating trunk that received the add-on request) if a local add-on from the terminating side at a remote node fails.
- At least one of the terminators at a remote node should be an IBN ISUP trunk to send a local add-on request at the remote node.
- Only IBN DTMF, MF, and dial pulse 2-wire (DP2W) and outgoing (OG) trunks of standard signaling type and DS1SIG cardcode are supported for IBN PTS trunk termination.
- Only one DN at each station should be datafilled for a preset broadcast in table BROADCAST. This restriction is for line termination.
- The maximum number of terminators in a broadcast call is 16.

Interactions

Broadcast Interworking/Feature Interactions has no functionality interactions.

Datafill

Broadcast Interworking/Feature Interactions does not affect data schema tables or office parameters.

Service Orders

Broadcast Interworking/Feature Interactions does not affect SERVORD.

Operational Measurements

Broadcast Interworking/Feature Interactions does not affect Operational Measurements.

Logs

Broadcast Interworking/Feature Interactions does not affect logs.

User interface

Broadcast Interworking/Feature Interactions does not change the user interface.

Billing

Automatic Message Accounting (AMA) billing is supported for the broadcast call. Station Message Detailed Recording (SMDR) records are generated for each leg of the broadcast call. A billing record for each terminating leg of a broadcast call shows the controller's trunk group and trunk member number as originator, and terminating agent as terminator. No billing record is generated for the controller's call.

AD3285 - NAS RLT IBN ISUP Trunk Interactions**Description**

This feature provides the necessary bridging capabilities that allows condensing a call and releasing unnecessary trunks to the attendant node. This feature also merges the original call and the second call placed by the attendant at the connecting, or bridging, node. These bridging capabilities apply to Integrated Business Network (IBN) ISDN User Part (ISUP) trunks and ISUP trunks connected to the attendant node.

Call bridging

The following situations are possible NAS RLT bridging scenarios:

- The attendant extends an incoming call that is routed back to the connecting node. The attendant releases the call and accomplishes NAS RLT functionality after the called party answers. See "[NAS RLT example when attendant extends call](#)" (page 280) for an example of this


bridging scenario. This type of bridging is also known as automatic activation of NAS RLT.

- The attendant receives an incoming call that is to be extended to another party. The attendant determines that this call is to be an NAS RLT call and presses the NAS RLT Incoming Call Identification (ICI) key. The attendant enters the extending Directory Number (DN) and presses the Release key. The system then bridges the call. (Refer to NAS RLT Attendant Console Special Function Key for more information about the NAS RLT ICI key.) This type of bridging is also known as manual activation of NAS RLT.

If the attendant extends an NAS RLT call that is to be routed to a different node than the bridging node, the system forces the call back to the bridging node. The system routes the call to the same trunk group as the incoming call.

If the attendant extends an NAS RLT call that is to be routed to the same node as the bridging node, the system does not force the call to use the same trunk group as the incoming call. However, if the trunk selected to route to the bridging node is not an IBN or ISUP trunk, the system forces the call to route to the same ISUP trunk group as the incoming call. IBN or ISUP trunks must be used to achieve the NAS RLT functionality.

Note: The NAS RLT function cannot be invoked if the Three Way Call (3WC) feature is activated.

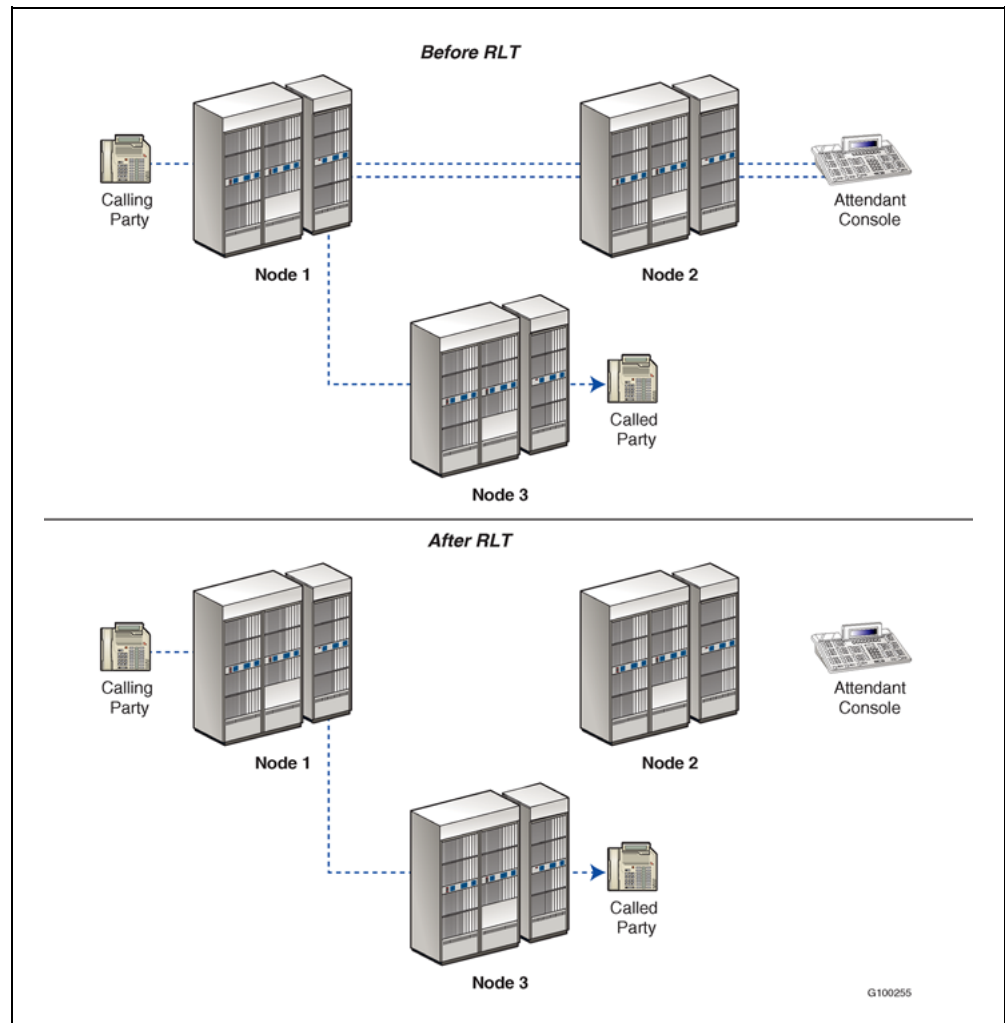NAS RLT example when attendant extends call**Bridging failures**

The following failures can occur when bridging a call at the bridging node:

- If the extended call is not normally routed to the bridging node, the incoming and outgoing trunks at the attendant node must be in the same ISUP trunk group for NAS RLT to be invoked. If an outgoing trunk is not available in the same trunk group as the incoming trunk, the system routes the call using normal translations and pegs the NRLTNOTK Operational Measurement (OM) at the attendant node.
- If the Call ID of the second call is not received in the Facility Accept Message (FAA) at the attendant node, the system cannot bridge the call. The system prints log NRLT100 at the attendant node in response to the failed bridge.

Note: All NAS RLT logs and OMs originate at the attendant node.

The NAS RLT feature cannot be invoked, unless the attendant releases the call at some point before or after the called party answers. If the attendant does not release, then resources remain, and no action is taken.

There can be some cases where the incoming and outgoing agents at the bridging node (from the calling and to the called parties) are incompatible. For example, a PTS trunk (as incoming agent) and an IBN T2 trunk (as outgoing agent) are incompatible for bridging. The system cannot invoke the NAS RLT function in this case and sends an Facility Reject (FRJ) message from the bridging node to the attendant node indicating a failure to bridge. The system pegs the OM NRLTAGIN in response to this event.

If the extended call is not normally routed to the bridging node, the system can invoke the NAS RLT function only if the incoming and outgoing trunks at the attendant node are part of the same ISUP trunk group. The system sends the call through normal translations if an outgoing trunk is not available in the same trunk group as the incoming trunk. The attendant node pegs the OM NRLTNOTK in response to this event.

If the attendant node does not receive the call ID of the second call in the FAA message, the system cannot bridge the call. The attendant node generates the NRLT100 log in response. However, if the call reference received in the FAR message is invalid, the system cannot bridge the call. The attendant node generates the NRLT101 log in response.

Note: The NAS RLT feature cannot be invoked when a call originates from another Attendant Console other than the one with NAS RLT functionality.

Hardware requirements

NAS RLT IBN ISUP Trunk Interactions has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to NAS RLT IBN ISUP Trunk Interactions:

- A uniform dialing plan must be used throughout the network.
- The called party must answer and the attendant must release the call before NAS RLT is invoked (unless the attendant uses the NAS RLT ICI key).
- IBN or ISUP trunks must be used between the bridging and attendant nodes.
- 3WC must not be active.
- The originating Attendant Console must have the NAS RLT option.

Interactions

The system does not provide the following features once the attendant activates NAS RLT and bridges the call:

- Network Attendant Recall
- Network Serial Recall
- Network Attendant Flash

The Basic Rate Access Functional Set (BRAFS) display shows the name of the called party, under the following conditions, if the name is datafilled for that party:

- the calling party is a BRAFS set, and the called party is on the same node
- the called party is a BRAFS set, and the calling party is on the same node

However, if the calling and called parties are not on the same node, then the BRAFS set display shows the Common Language Location Identifier (CLLI) of the involved trunk twice. The CLLI displayed first identifies the connected party, and the second CLLI identifies the party that caused the transfer to occur. For NAS RLT, the BRAFS display shows the same CLLI twice, because the two parties are the same.

Datafill

NAS RLT IBN ISUP Trunk Interactions does not affect data schema tables or office parameters.

Service Orders

NAS RLT IBN ISUP Trunk Interactions does not affect SERVORD.

Operational Measurements

Refer to ["Bridging failures" \(page 280\)](#) for more information about Operational Measurements.

Logs

Refer to ["Bridging failures" \(page 280\)](#) for more information about logs.

User interface

NAS RLT IBN ISUP Trunk Interactions does not change the user interface.

Billing

NAS RLT IBN ISUP Trunk Interactions does not affect billing.

AD3286 - NAS RLT AC Special Function Key

Description

This feature allows an attendant to activate the NAS RLT function from a key on the Attendant Console (AC). Normally this function is activated automatically when the attendant releases the call and the called party answers. However, the NAS RLT function can occur whether the called party answers or not. NAS RLT can occur when the attendant presses the special function key and releases the call, not when the called party answers.

To allow an NAS RLT-eligible call to be bridged, the Incoming Call Identification (ICI) key on the AC must be assigned to NAS RLT. This key allows the attendant to release the call and activate NAS RLT before the called party answers. Once the attendant releases the trunks using the NAS RLT ICI key, the following functions are not available: Network Attendant Recall, Network Serial Recall, and Network Attendant Flash.

This feature can also be implemented from a wild card key. Presently an attendant can access features assigned to console keys. The AC provides up to 42 assignable keys for both ICI and features on the console (14 on basic console, 28 on add-on module). Wild card keys preserve the number of keys used by invoking special features not directly available on that console through a feature key.

This feature adds two new wild card codes for the NAS RLT function (activation and deactivation). This code allows the attendant to release the call and activate NAS RLT, before the called party answers. However, once the attendant releases the trunk using the wild card code, the call cannot use Network Attendant Recall, Network Serial Recall, nor Network Attendant Flash.

Hardware requirements

NAS RLT AC special function key has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to NAS RLT AC special function key:

- The NAS RLT function cannot be invoked if the Three Way Call (3WC) feature is activated.
- The NAS RLT feature cannot be invoked when a call originates from another Attendant Console, other than the one with NAS RLT functionality.

Interactions

To allow an NAS RLT-eligible call to be bridged, the ICI key on the AC must be assigned to NAS RLT. This key allows the attendant to release the call and activate NAS RLT, before the called party answers. Once the attendant releases the trunks using the NAS RLT ICI key, the following functions are not available: Network Attendant Recall, Network Serial Recall, and Network Attendant Flash.

Datafill

Table FNMAP, field SPFN, must be datafilled as NRLT to dedicate the ICI key and lamp to the NAS RLT feature. This table also contains pertinent information that identifies the console CLLI, which points back to table CLLI, and the AC key and lamp number.

Table WCKCODES implements the wild card codes for NAS RLT activation and deactivation. Field WCSPFN must be datafilled as NRLT to provide the activation capability to the attendant and must be datafilled as NRLTD to provide the deactivation capability.

Service Orders

NAS RLT AC special function key does not affect SERVORD.

Operational Measurements

NAS RLT AC special function key does not affect Operational Measurements.

Logs

NAS RLT AC special function key does not affect logs.

User interface

This feature can also be implemented from a wild card key. An attendant can access features assigned to console keys. The AC provides up to 42 assignable keys for both ICI and features on the console (14 on basic console, 28 on add-on module). Wild card keys preserve the number of keys used by invoking special features not directly available on that console through a feature key.

This feature adds two new wild card codes for the NAS RLT function (activation and deactivation). This code allows the attendant to release the call and activate NAS RLT, before the called party answers. However, once the attendant releases the trunk using the wild card code, the call cannot use Network Attendant Recall, Network Serial Recall, nor Network Attendant Flash.

Activating NAS RLT with ICI key

If the datafill has been established, the NAS RLT ICI key lights when the attendant receives and answers NAS RLT-eligible calls. (The call must originate on an IBN ISUP two-way trunk, and the attendant must have option NRLT datafilled in table CUSTNTWK. This option specifies that NAS RLT is available for the associated network customer group.) The attendant initiates NAS RLT by pressing the ICI key assigned to NAS RLT. The system prompts the attendant for the second call destination. The attendant then enters the destination number followed by a pound sign (#) and presses the Release key. The system initiates the second call after the pound key has been pressed.

Note: If the attendant presses an idle loop key and presses the NAS RLT ICI key, the AC display shows DISALLOWED.

Deactivating NAS RLT with ICI key

If an attendant manually activates NAS RLT by pressing the NAS RLT ICI key, the attendant can deactivate NAS RLT by pressing the Release Destination key before pressing the Release key. This action cancels manual activation of NAS RLT. However, if the attendant presses the Release Destination key after entering a complete destination and launching the call, the system releases that destination and turns off the NAS RLT ICI lamp. If the attendant extends the call again, it is not considered to be NAS RLT-eligible, and the NAS RLT ICI lamp remains off.

If an attendant manually activates NAS RLT by pressing the NAS RLT ICI key, both automatic and manual NAS RLT can be deactivated by pressing the ICI key again. The AC display shows DEACTIVATED, and the incoming call is not considered to be NAS RLT-eligible.

Once the attendant receives and answers an NAS RLT call, the NAS RLT ICI key lights. If manual activation of NAS RLT is not desired, NAS RLT is automatically activated once the called party answers and the attendant releases the call. However, if the attendant decides not to use NAS RLT functionality, automatic activation is canceled by pressing the NAS RLT ICI key twice. The AC display shows DEACTIVATED, and the incoming call is not considered to be NAS RLT-eligible.

Reactivating NAS RLT with ICI key

Once NAS RLT has been deactivated for a call, the function can be reactivated by pressing the NAS RLT ICI key if the call has not yet been extended. The key lights, and the AC display shows NRLT REACTIVATED. At this point, NAS RLT can be activated either automatically or manually.

Automatic activation occurs when the attendant releases the extended call and the called party answers. However, manual activation requires that the attendant press the NAS RLT ICI key again, enter the destination number and #, and press the Release key.

If the attendant extends the call and attempts to reactivate NAS RLT, the AC display shows DISALLOWED. However, one exception exists. If the attendant extends the call and it returns to the originating node, the call becomes available for NAS RLT, and the AC display shows NRLT REACTIVATED. Only automatic activation is available at this point.

Activating NAS RLT with wildcard key code

The NRLT wild card key code provides manual activation of the NAS RLT function if the attendant does not have access to an NAS RLT ICI key. The attendant activates manual NAS RLT by pressing the NRLT wild card key.

Deactivating NAS RLT with wild card key code

After the NRLT wild card key activates NAS RLT, the NRLTD wild card key code provides manual deactivation of the NAS RLT function if the attendant does not have access to an NAS RLT ICI key. The attendant deactivates manual NAS RLT by pressing the NRLTD wild card key. Once the attendant presses the NRLTD wild card key, the AC display shows DEACTIVATED.

Reactivating NAS RLT with wild card key cod

After the NRLTD wild card key deactivates NAS RLT, the NRLT wild card key provides reactivation of the NAS RLT function if the attendant does not have access to an NAS RLT ICI key. The attendant reactivates manual NAS RLT by pressing the NRLT wild card key.

Billing

NAS RLT AC special function key does not affect billing.

AD3287 - NAS RLT Table Control and ISUP Messaging

Description

This feature provides the table control (datafill) and ISUP messaging required to implement the RLT function for Meridian SL-100 networks that use the Network Attendant Service (NAS).

A network with NAS RLT capability requires that translations in the systems be changed to route calls to the attendant node over a two-way ISUP trunk. The system routes a call from its node to the attendant node when translations determine that a call requires attendant assistance. The system connects the call to an available attendant at an Attendant Console (AC). If the attendant extends the call, the system establishes an additional path

from the attendant node to the called party. Once the call terminates, the attendant releases from the call, and the system releases the unnecessary trunks and bridges the call if the call returns to the bridging node.

Note: The NAS RLT function cannot be invoked if the Three Way Call (3WC) feature is activated. Also, when a call originates from another Attendant Console other than the one with NAS RLT functionality, the NAS RLT feature cannot be invoked.

ISDN User Part (ISUP) messaging

This feature provides the ISUP messaging necessary to initiate NAS RLT capability on Meridian SL-100 ISUP trunks. The Meridian SL-100 network uses the following ISUP messages to initiate an NAS RLT call. Refer to ["NAS RLT call scenarios" \(page 288\)](#) for more information about how the following messages are used:

- Initial Address Message (IAM)
- Address Complete Message (ACM)
- Reconfiguration Progress Message (RPM)
 - RPM Extended Message
 - RPM Extension Complete Message
- Facility Request message (FAR)
- Facility Accept message (FAA)
- Facility ReJect message (FRJ)

Initial address message The system sends the IAM to the node of the called party when the attendant extends the original call. The IAM also contains the Calling Party Category (CPC). If the attendant initiates the call, the system sets the CPC value to indicate Attendant Console origination.

Address complete message The node of the called party sends the ACM after receiving the IAM. The ACM contains CPC and NETINFO of the called party.

Reconfiguration progress message This proprietary message, enclosed within a Pass Along Message (PAM), is sent to the nodes of both the calling and called parties for display functionality purposes. The attendant node sends the following RPMs:

- RPM Extended Message - sent to the nodes of the calling and called parties when the attendant releases the call before the called party answers

- RPM Extension Complete Message - sent to the nodes of the calling and called parties only after the called party answers and the attendant releases the call

Facility request message The attendant node sends a FAR under the following circumstances:

- To the second call at the bridging node to request the call ID of the second call. This feature adds a specific value to the FAR that indicates that the call ID is being requested.
- To the first call at the bridging node to initiate the bridging. A new facility indicator (NAS_RLT_WITH_3RD_PTY) in the FAR indicates NAS RLT with third-party interaction. This message contains the call reference of the second call at the bridging node.

Facility accept message The bridging node sends an FAA under the following circumstances:

- To the attendant node after receiving an FAR requesting the call ID of the second call. This feature adds the requested call ID as a new parameter of the FAA.
- To the attendant node to indicate acceptance of the FAR. The bridging node sends this message only if the call is about to be successfully bridged.

Facility reject message The bridging node sends the FRJ to the attendant node to indicate that bridging failed. The FRJ contains a specific cause value that specifies the reason for the failure at the bridging node.

NAS RLT call scenarios

"NAS RLT call type 1 (calling party to attendant)" (page 290) through "NAS RLT call type 3 (attendant extends call to original calling party and bridges call)" (page 296) show RLT call flow diagrams for the following NAS RLT call types:

- Call extended from calling to called parties by the attendant (Call Type 1)
- Call released before called party answers (Call Type 2)
- Call placed and disconnected from calling party to attendant, then calls placed from attendant to called and calling parties (Call Type 3)

The following call type descriptions use the following terms: terminating node (corresponds to Node 1 in the figures), bridging node (corresponds to Node 2 in the figures), and attendant node (corresponds to Node 3 in the figures).

Call type 1 Figure 1 and Figure 2 show the call flow for Call Type 1. Figure 1 shows the call flow from the calling party to the attendant. Figure 2 shows call flow as the attendant extends and releases the call, and the system bridges the call. Because the extended call to the called party initiates at an Attendant Console (AC), the system sets the Calling Party Category (CPC) in the IAM to an AC value. The IAM, also containing the attendant NETINFO, is sent to the bridging and terminating nodes. After receiving the IAM, the bridging node sends an ACM to the attendant node, and the terminating node sends an ACM to the bridging node.

Once the called party answers, the terminating node sends an ANM to the attendant node, and the attendant releases the call. The attendant node then sends an RPM Extension Complete message to the bridging and terminating nodes and an FAR to the bridging node requesting the call ID of the second call. The bridging node then responds with an FAA containing the call ID to the attendant node.


If the FAA does not contain the call ID of the second call, the system generates the log NRLT100 at the attendant node. Refer to the *Log Report Reference Manual* for additional information.


The call reference within the FAA is reformatted into an FAR, which is sent to the first call at the bridging node. This FAR requests that the calls be bridged. If the call reference is invalid, the bridging node sends an FRJ to the attendant node. The system generates a corresponding log, NRLT101, at the attendant node.

The bridging node checks the facility indicator in the FAR to determine which function to perform. This example assumes a facility indicator of NAS_RLT_WITH_3RD_PTY. The call reference then is used to find the associated call at the bridging node. After the call is found, the system bridges the calling party to the called party.

Once the call is bridged, the bridging node sends an FAA to the attendant node to indicate FAR acceptance and call bridging. The bridging node sends a RElease message (REL) to release the connection, and the attendant node responds with a ReRelease Complete message (RLC) to both call legs.

NAS RLT call type 1 (calling party to attendant)

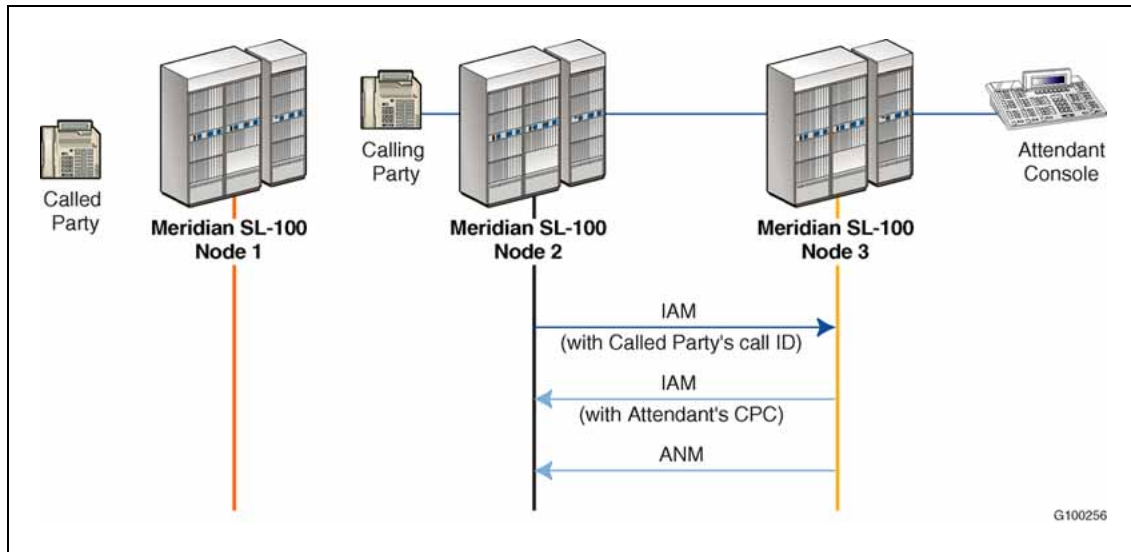

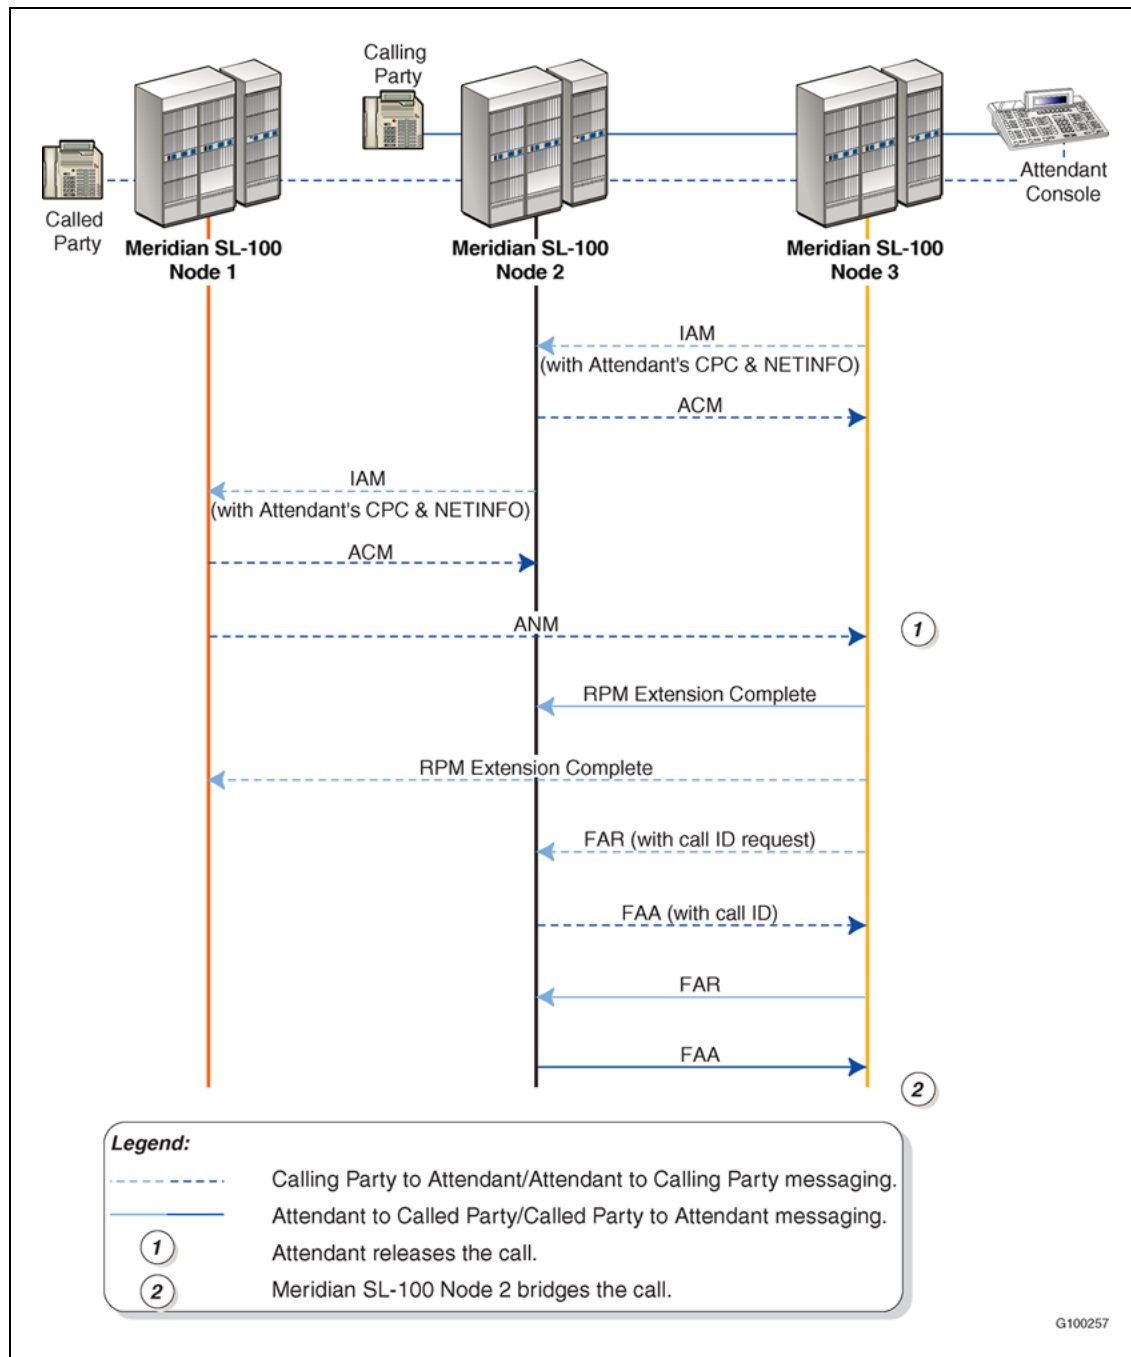NAS RLT call type 1 (attendant to called party and bridging)

Call type 2 "NAS RLT call type 2 (attendant releases call before called party answers)" (page 293) shows the call flow for Call Type 2 that involves the attendant releasing the original call before the called party answers. This example begins just as the example for Call Type 1. Because the extended call to the called party initiates at an Attendant Console, the system sets the Calling Party Category (CPC) in the IAM to an AC value.

The IAM, also containing the attendant NETINFO, is sent to the bridging and terminating nodes. After receiving the IAM, the bridging node sends an ACM to the attendant node, and the terminating node sends an ACM to the bridging node.


At this point, the attendant releases the call before the called party answers. The attendant node then sends an RPM Extended message to both nodes indicating that the attendant has released the call and that it has been extended.

The called party answers, and the terminating node sends an ANM to the attendant node. Once the ANM is received, the attendant node sends an RPM Extension Complete message to both nodes and an FAR to the second call at the bridging node. The FAR requests the call ID of the second call. The bridging node responds to this request by sending an FAA, containing the call ID, to the attendant node.

The call reference within the FAA is reformatted into an FAR, which is sent to the first call at the bridging node. This FAR requests that the calls be bridged. The bridging node checks the facility indicator in the FAR to determine which function to perform. This example assumes a facility indicator of NAS_RLT_WITH_3RD_PTY. The call reference then is used to find the associated call at the bridging node. After the call is found, the system bridges the calling party to the called party.

Once the call is bridged, the bridging node sends an FAA to the attendant node to indicate FAR acceptance and call bridging. The bridging node sends an REL to release the connection, and the attendant node responds with an RLC to both call legs.

NAS RLT call type 2 (attendant releases call before called party answers)

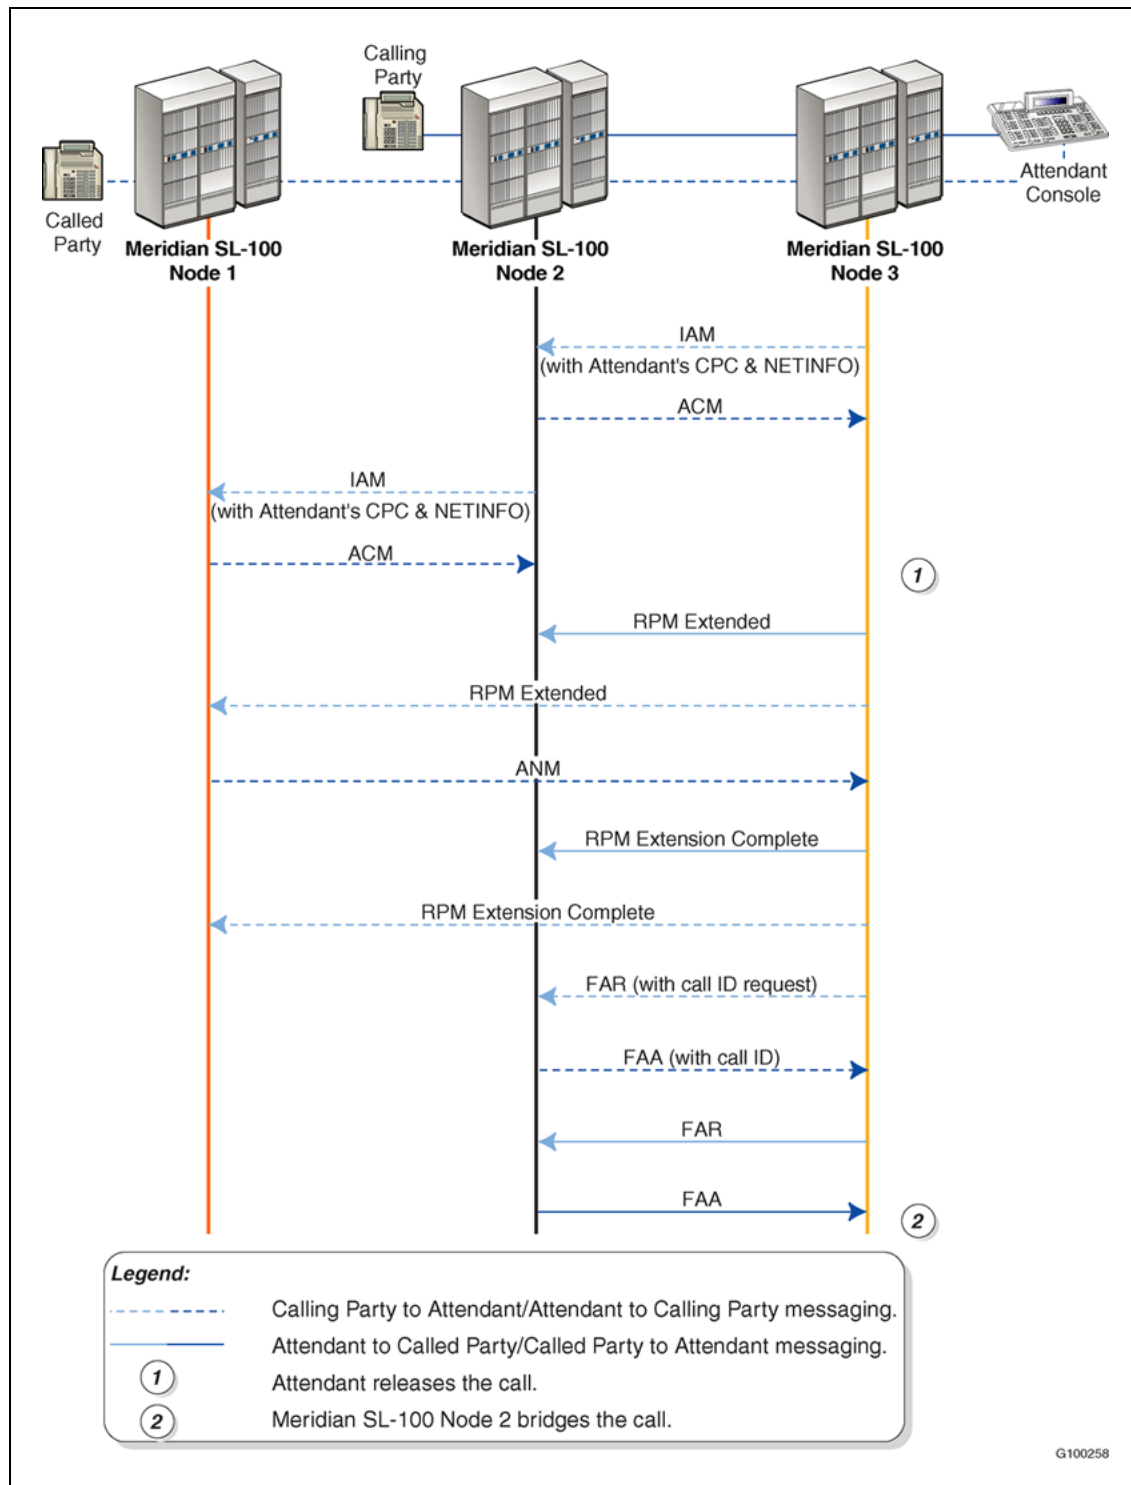

Call type 3 "NAS RLT call type 3 (calling party to attendant, call disconnected, attendant to called party)" (page 295) and "NAS RLT call type 3 (attendant extends call to original calling party and bridges call)" (page 296) show the call flow for Call Type 3. "NAS RLT call type 3 (calling party to attendant, call disconnected, attendant to called party)" (page 295) shows the call flow as the calling party places the original call to the attendant. Both parties disconnect, and the attendant replaces the call at a later time.

The calling party places a call to the attendant at the attendant node. The calling party's node sends an IAM to the attendant node with the calling party's call ID and NETINFO. The attendant node responds with an ACM that contains the attendant CPC and an ANM that indicates call answer. At this point, the attendant notifies the calling party that the connection must be made at a later time.


The attempt to make call connection is reinitiated by the attendant. Because the reinitiated call originates at an Attendant Console, the system sets the Calling Party Category (CPC) in the IAM to an AC value. The IAM, also containing the attendant NETINFO, is sent to the bridging and terminating nodes. After receiving the IAM, the bridging node sends an ACM to the attendant node, and the terminating node sends an ACM to the bridging node and an ANM to the attendant node indicating call connection.


"NAS RLT call type 3 (attendant extends call to original calling party and bridges call)" (page 296) shows a similar process to establish the second call leg between the attendant and the original calling party. The attendant node sends the IAM with the attendant's CPC and NETINFO, while the bridging node responds with an ACM and ANM.

After the original calling party answers, the attendant releases the call, and the attendant node sends an RPM Extension Complete message to the other nodes. The attendant node then sends an FAR to the bridging node requesting the call ID of the second call.

The bridging node responds to this request by sending an FAA, containing the call ID, to the attendant node. The call reference within the FAA is reformatted into an FAR, which is sent to the second call at the bridging node. This FAR requests that the call be bridged. The bridging node checks the facility indicator in the FAR to determine which function to perform. This example assumes a facility indicator of NAS_RLT_WITH_3RD_PTY. The call reference then is used to find the associated call at the bridging node. After the call is found, the system bridges the calling party to the called party.

Once the call is bridged, the bridging node sends an FAA to the attendant node to indicate FAR acceptance and call bridging. The bridging node sends an REL to release the connection, and the attendant node responds with an RLC to both call legs.

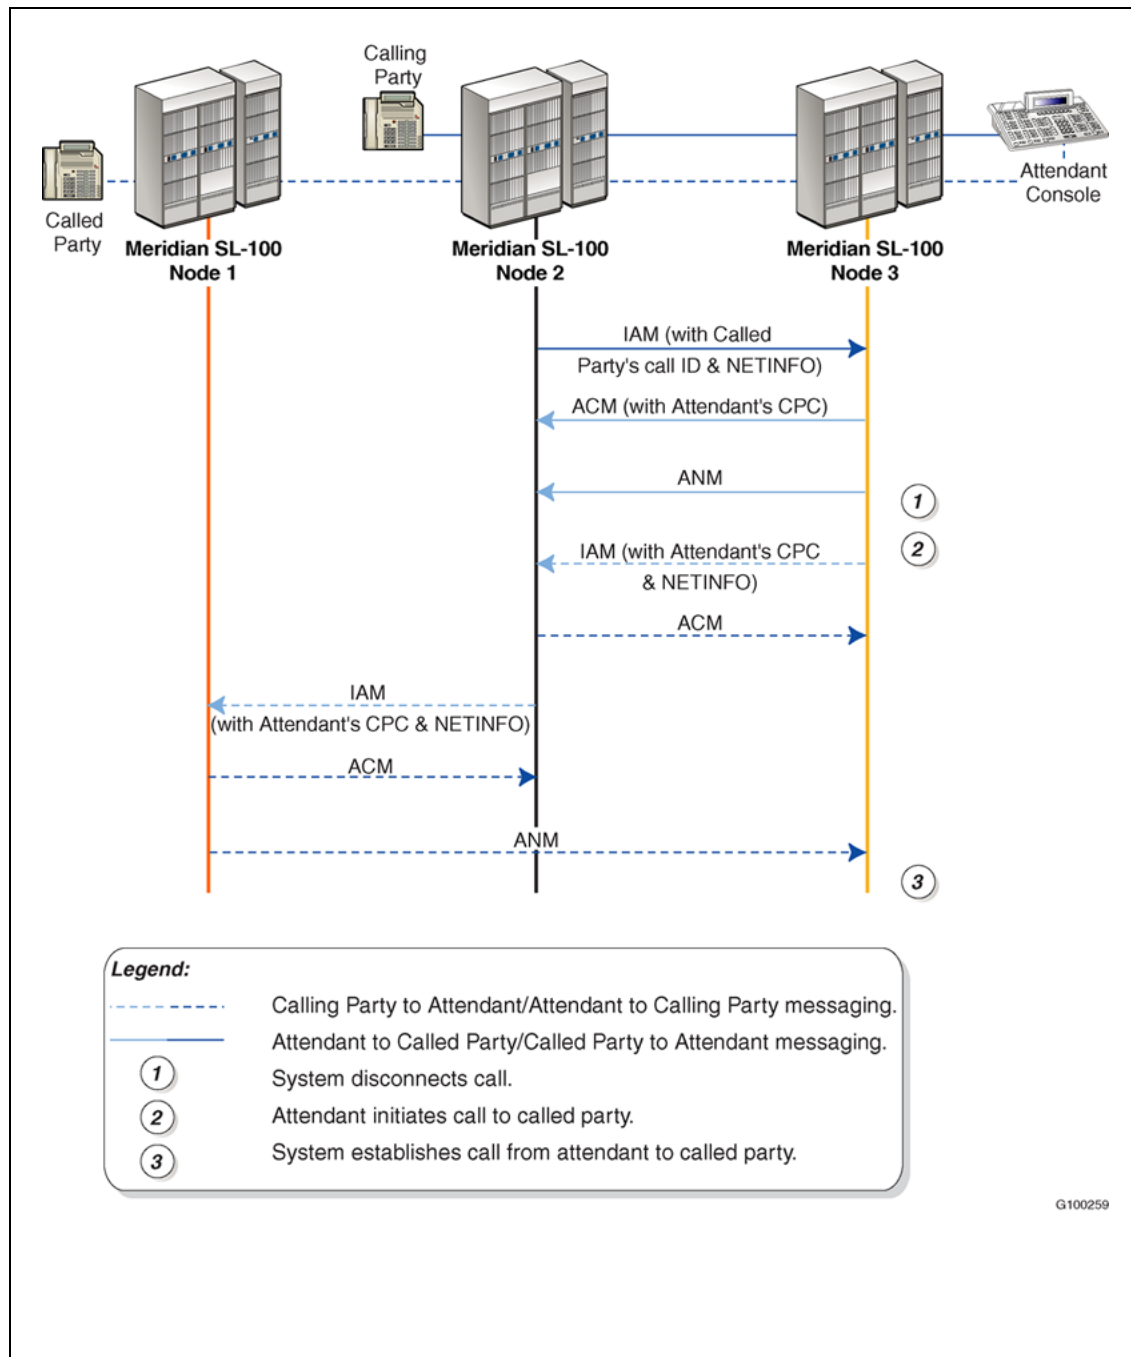NAS RLT call type 3 (calling party to attendant, call disconnected, attendant to called party)

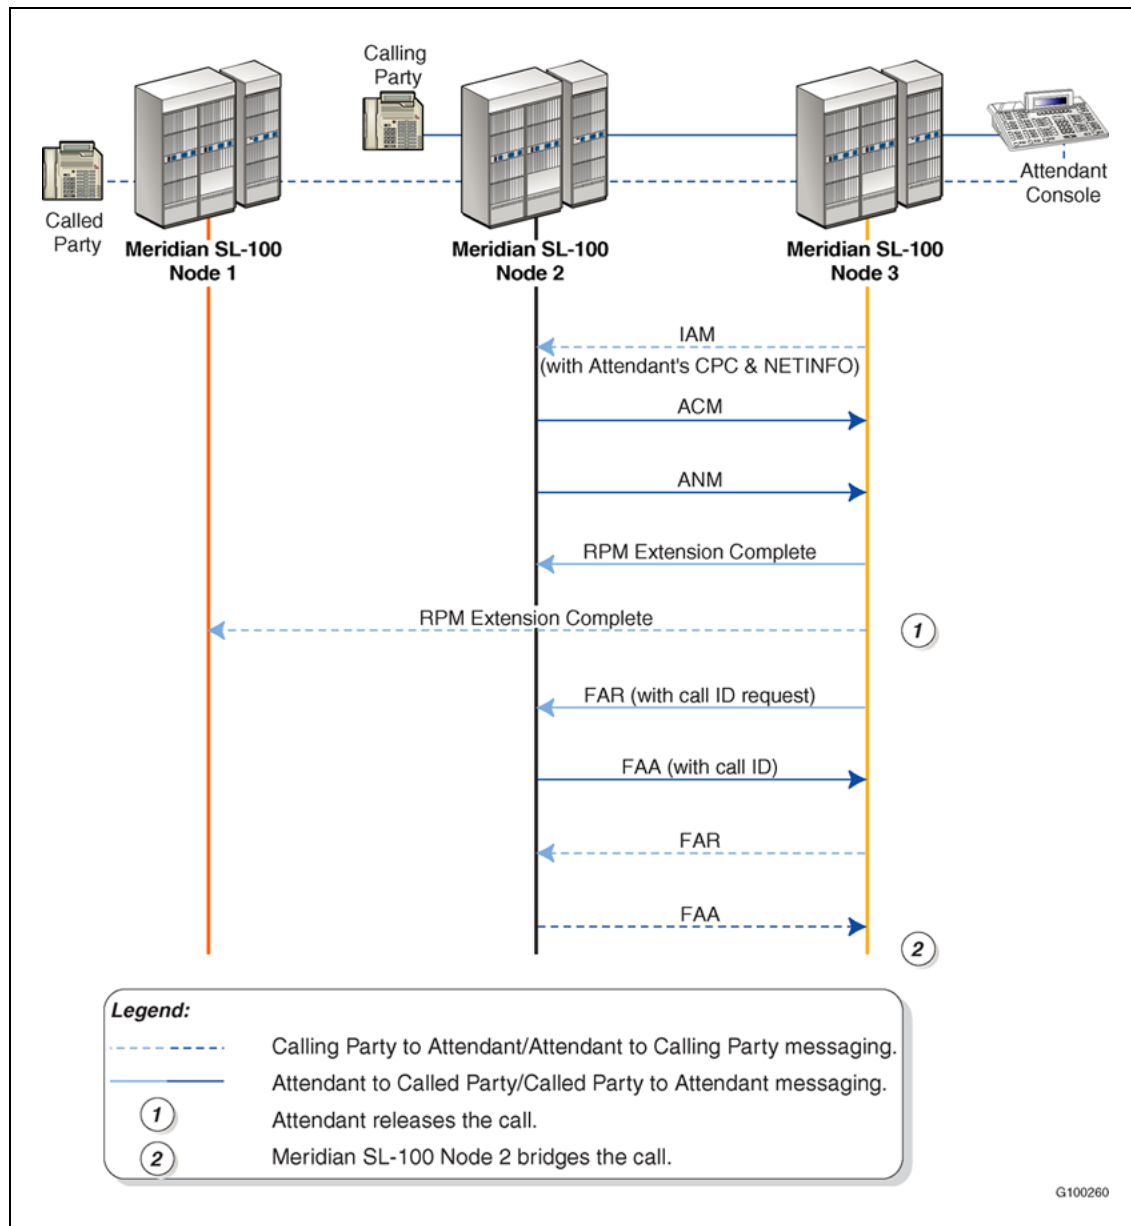NAS RLT call type 3 (attendant extends call to original calling party and bridges call)**Hardware requirements**

NAS RLT Table Control and ISUP Messaging has no hardware requirements.

Limitations and restrictions

NAS RLT Table Control and ISUP Messaging has no limitations or restrictions.

Interactions

NAS RLT Table Control and ISUP Messaging has no functionality interactions.

Datafill

Table CUSTNTWK provides the ability to specify a network name with which a customer group is associated and enables the customer to assign calling features to customer groups. This table is required for systems with North American translations and IBN and NAS features.

Table CUSTNTWK also specifies that the NAS RLT feature is available for the network customer group. If the NAS RLT feature is not datafilled in table CUSTNTWK, the system cannot support NAS RLT functionality at that node for calls associated with the attendant.

The NASOPT (Network Attendant Services Options) field in table CUSTNTWK specifies individual NAS features for a particular customer group. The NASOPT option must be datafilled as NRLT to specify that the NAS RLT function is available for that customer group. This option must be datafilled at all nodes where the NAS RLT feature could be invoked.

Service Orders

NAS RLT Table Control and ISUP Messaging does not affect SERVORD.

Operational Measurements

NAS RLT Table Control and ISUP Messaging does not affect Operational Measurements.

Logs

NAS RLT Table Control and ISUP Messaging does not add any additional logs. Refer to the "[Description](#)" ([page 286](#)) for feature interactions to logs.

User interface

NAS RLT Table Control and ISUP Messaging does not change the user interface.

Billing

NAS RLT Table Control and ISUP Messaging does not affect billing.

AD3288 - Remote Trunk ID Display at AC**Description**

This feature provides the ability to display a remote trunk group Common Language Location Identifier (CLLI) at the Attendant Console (AC) when the AC receives a call over an IBN ISUP trunk. Some features within a network environment depend on CLLIs to function properly. These CLLIs,

datafilled on a per-switch basis, have an associated alphanumeric name. However, each CLLI is assigned a number that is datafilled in the system. The system uses this number, or ID, in call processing. Because a local CLLI ID depends on the order in which it is datafilled, the CLLI ID cannot be considered unique across the network.

This feature provides a mapping of local CLLI IDs and unique network CLLI IDs defined for the network environment. Table NTWKCLLI implements this mapping by associating a CLLI with a network name that is defined in Table NETNAMES. Table NTWKCLLI also assigns this CLLI to a network CLLI ID and allows network CLLIs to be identified through a network by a NETCLLID. ISUP messaging provides the network name and network CLLI ID when nodes communicate with each other.

Hardware requirements

Remote Trunk ID Display at AC has no hardware requirements.

Limitations and restrictions

Remote Trunk ID Display at AC has no limitations or restrictions.

Interactions

Remote Trunk ID Display at AC has no functionality interactions.

Datafill

Systems within the associated network identify remote CLLIs and associated options by datafill in Table REMCLLI. This table provides two options:

- Incoming Call Identification (ICI) - specifies that incoming calls to the Attendant Console with the associated remote CLLI terminate to the ICI number datafilled with this option. Once the attendant answers the call, the AC display shows the Table ICIDATA information associated with this ICI number. The AC key associated with this ICI code lights.
- Local CLLI (LCLCLLI) - allows a customer to override the display of local incoming trunk group CLLIs with more meaningful names.

To complete this datafill, a new option in Table TRKSGRP must be datafilled. Option REMDISP, for IBN trunk types with a C7UP signaling type, indicates that network CLLI IDs may be included in the Initial Address Message (IAM). This information is added to the IAM only when the originating agent of the call is a trunk. The trunk group CLLI must have been datafilled in Table NTWKCLLI.

The IAM contains a new subparameter within the NETINFO parameter. The system adds this subparameter to the IAM when the outgoing ISUP trunk has the REMDISP option datafilled and the incoming trunk group CLLI is datafilled in Table NTWKCLLI. The subparameter, when included in the IAM, contains the network ID and the associated NETCLLID.

An additional option, REMTKDSP in Table CUSTCONS, checks whether a NETCLLID has been received. If so, the system checks Table REMCLLI to determine if the call is to be terminated to a specific ICI key associated with the NETCLLID. The system also determines whether a different CLLI should be presented on the second display line on the Attendant Console.

Service Orders

Remote Trunk ID Display at AC does not affect SERVORD.

Operational Measurements

Remote Trunk ID Display at AC does not affect Operational Measurements.

Logs

Remote Trunk ID Display at AC does not affect logs.

User interface

Remote Trunk ID Display at AC does not change the user interface.

Billing

Remote Trunk ID Display at AC does not affect billing.

AD3366 - Power Feature Enhancements and Maintenance**Description**

This feature provides enhancements and maintenance support for the broadcast features developed in BCS32. This feature provides:

- calling party number parameter in the Initial Address Message (IAM)
- user-to-user information parameter to transfer the information between the originator and the terminator
- maintenance and administrative enhancements for broadcast applications

Calling party number parameter

The calling party number parameter identifies the calling party. It is an optional parameter in the IAM. If the incoming IAM contains this parameter, it is copied to the outgoing IAMs while building an outgoing IAM.

Transport user-to-user information

This feature defines an optional parameter, user-to-user information, to transfer the information which is only used by the originator and the terminator. This parameter is optional in the IAM. If the incoming IAM contains this parameter, it is copied to the outgoing IAMs while building an outgoing IAM. The maximum length of this parameter is 131 bytes. The length of an ISDN User Part (ISUP) message with this parameter cannot exceed what is defined by ANSI.

Maintenance support

The following are included in maintenance support:

- existing MAP level
- enhancements to Trunk Test Position (TTP) for broadcast feature

Existing MAP level On the existing TTP level of a MAP workstation, a user is allowed to post a specific trunk Common Language Location Identifier (CLLI) plus the member number. When posted, the status of that trunk plus the status/connection information is displayed.

There is no change made on the TTP level display if the posted trunk is not involved in the broadcast call.

This feature provides the broadcast indicator and a new selector of the POST command under the TTP level for the broadcast feature.

Enhancements to TTP for broadcast feature The following are the enhancements:

- the ability to post broadcast controller/input port
- the ability to post broadcast terminator/output port
- a POST command

Broadcast controller/input port If a user posts an individual trunk which is the controller of the broadcast call, the status is displayed. BC-CTRL is displayed to indicate that this circuit is a broadcast call controller.

Broadcast terminator/output port If a user posts an individual trunk which is one of the terminators of the broadcast call, the status and broadcast controller are displayed. BC-TERM and BC-CTRL are also displayed to indicate the broadcast terminator/controller.

POST command The POST command is the only change to the existing commands and functions under TTP. This feature provides a new selector, broadcast call (BC), for the broadcast feature.

When the POST command is entered with the BC selector, a trunk CLLI and member number of the controller or terminator must be provided.

An error message, Circuit not involved in BC, is displayed if the provided trunk circuit is not involved in a broadcast call. If the trunk circuit is not involved in the broadcast call, the broadcast controller and all the terminators involved in the same BC (as provided by the specified trunk circuit) are formed as a post set. The broadcast controller of the call is displayed in the control position.

The user can issue the NEXT command to get the next terminator involved in the call. The terminator information is displayed in the control position.

If the user issues the HOLD command, the information displayed in the control position is copied to the hold position. The next terminator is displayed in the control position automatically.

The maintenance commands (BSY, RTS, TST) only apply to the trunk which is posted in the control position.

BRDCST command

This feature creates a new CI command called BRDCST. A valid trunk CLLI and member number need to be provided when issuing this command. If the provided trunk circuit is not involved in a broadcast call, the error message, Circuit not involved in broadcast call, is displayed. Otherwise, a list of the CLLI and member number of the broadcast controller, and all the terminators involved in this call, are displayed. The controller is always displayed at the beginning of the list.

Maintenance messaging

Two maintenance messages are used in this feature:

- FRLS
- busy carrier/carrier failure

FRLS A user can enter the Force Release (FRLS) command from the TTP level of any MAP workstation to force release a specific trunk circuit. When the FRLS command is issued, the maintenance sends a Reset Circuit (RSC) message to notify the other end.

Busy carrier/carrier failure The call is released and a group reset circuit message representing all the circuits is sent to the far end when a busy carrier or carrier failure occurs.

Hardware requirements

Power Feature Enhancements and Maintenance has no hardware requirements.

Limitations and restrictions

The Power Feature Enhancements and Maintenance supports the user-to-user information parameter as an optional parameter only in the IAM.

Interactions

The user-to-user information parameter and the calling party number parameter are the optional parameters in the IAM. When building an outgoing IAM, if the incoming IAM contains these two parameters, they are always copied to the outgoing IAMs for every broadcast-specific output port.

Datafill

Power Feature Enhancements and Maintenance does not affect data schema tables or office parameters.

Service Orders

Power Feature Enhancements and Maintenance does not affect SERVORD.

Operational Measurements

Power Feature Enhancements and Maintenance does not affect Operational Measurements.

Logs

Power Feature Enhancements and Maintenance does not affect logs.

User interface

This feature creates a CI command called BRDCST. A valid trunk CLLI and member number must be provided when issuing this command. If the provided trunk circuit is not involved in a broadcast call, the error message, Circuit not involved in broadcast call, is displayed. Otherwise, a list of the CLLI and member number of the broadcast controller, and all the terminators involved in this call, are displayed. The controller is always displayed at the beginning of the list.

Broadcast Call is a new selector added to the POST command under the TTP level. The trunk CLLI and the trunk member number are required when the POST command with BC selector is issued. If the specified trunk circuit is not involved in a broadcast call, an error message is displayed. Otherwise, the controller of the broadcast is displayed in the control position. The NEXT command can be entered to display the next terminator.

Billing

Power Feature Enhancements and Maintenance does not affect billing.

AD3417 - XSM System Monitor Maintenance Interface

Release applicability

XSM System Monitor Maintenance Interface was introduced in BCS34 and is applicable for release MSL03 and up.

Description

This feature provides support for the Extended System Monitor (XSM) maintenance interface for the Intelligent Peripheral Equipment (IPE). A generic data link interface residing in the Central Controller (CC) provides the Meridian SL-100 data link interface to the XSM.

Two existing tables, MPC and MPCLINK, datafill the data link circuits for communications with the XSMs. The following changes were made to support this feature:

- The SLLNKDEV table has been enhanced to allow the new XSM data application, XSMDATA, to use the SLLNK facility.
- Table IPEINV has been modified to allow the user to specify XSM information for a given IPE.
- A new CI command, XSMSHOW, has been created and is used to allow users to view XSM configuration information.

Table IPEINV changes

The following changes were made to table IPEINV:

- A new selector, XSMEQUIP, identifies whether or not the IPE column (IPEC) that the IPE resides in is equipped with an XSM.
- All IPEs residing in a given IPEC must have the same value datafilled for this selector.
- The LOOPID field must be filled in with a valid data link identified as datafilled in table SLLNKDEV.
- The XSMID field identifies the XSM that is monitoring the IPE. The value for this field corresponds to the DIP switch setting for the XSM monitoring the IPEC where the IPE resides. Range of values for this field is 0 to 63, with 0 representing the network-side XSM and 1 through 63 representing user-side XSMs.
- The MODULENO field specifies the address for the IPE within its IPEC. This field must correspond to the cube or shelf number in the IPENM field. Range of values for this field is 0 to 3.

XSMSHOW command

The XSMSHOW command allows a technician to view XSM configuration information that is datafilled in tables SLLNKDEV and IPEINV. The user can use this command to view configuration data for one XSM on a given data link, all XSMs on a given data link, or all XSMs that are datafilled.

XSM unsolicited fault reports

When a network-side XSM detects a fault in the IPEC that it monitors, or receives a fault message from one of its user-side XSMs during polling, a fault message is sent to the CC. The XSM SLLNK interface receives the message from the RS232-C port and routes the messages to the CC for processing. If the message reports a failure for one IPE with an IPEC, that IPE is queried using conventional CC-PM messaging. If the IPE responds to the query message, a PM log is generated and the state of the IPE is changed to In-service Trouble (ISTb).

The following are new ISTb conditions. They are displayed using the QUERYPM FLT command at the IPE level of the MAP display when the IPE that is in ISTb state is posted:

- circuit breaker tripped
- power supply fault
- excessive column temperature
- pedestal fan unit fault
- top cap fan unit sensor fault

If the IPE fails to respond, the IPE is marked System Busy (SysB) and PM logs generate to report the failure. If the message from the XSM reports a failure for all IPEs in an IPEC, each IPE is queried for its status. If a network-side XSM reports that one of its user-side XSMs is not reporting, an XSM log reporting the failure of the user-side XSM generates. Also, any XSM-related ISTb conditions for all IPEs monitored by the non-reporting user-side XSMs are cleared.

XSM fault cleared reports

When a network-side or user-side XSM detects that a previously reported fault condition is cleared, a corresponding status change report is sent to the CC. If the cleared fault corresponds to an IPE within an IPEC and the IPE is currently in ISTb state, any ISTb conditions related to the fault are cleared. If the IPE is currently in SysB state, the system attempts to return the unit to service. Most attempts to return the IPE to service are unsuccessful, because most serious XSM-related faults cause power to be turned off for the IPE. This results in the loss of the IPE's software load. If this happens, the technician must reload each unit and return it to service. If the message from the XSM reports a cleared fault for an entire IPEC, each IPE is handled as if the fault were cleared for each IPE individually.

XSM periodic audits

During each network-side XSM polling routine, each of the user-side XSMs reports its current status. If faults are detected, the network-side XSM reports the problem. If no faults exist, an XSM does not send any messages to the CC. The CC therefore has no way of knowing whether

or not everything is working properly and an XSM has nothing to report, or whether communication has been lost between the CC and the XSM. For this reason, as part of the regular PM audit cycle, each network-side XSM datafilled in the Meridian SL-100 reports the status of itself and its user-side XSMs. If there is no response to the status request, an XSM log is generated. This log states that the network-side XSM reporting on that link is out of service. If the network-side XSM responds and reports that one or more of its user-side XSMs is not responding, an XSM log pertaining to each failed user-side XSM is generated. If the network-side XSM reports failures within the IPEC it monitors, or if any of its user-side XSMs report failures, PM logs identify the failures.

Because the status of each IPE is already being audited as part of the same PM audit cycle, no query messages are sent to the IPEs in response to failures in the XSM audit portion.

Hardware requirements

The following are the hardware requirements for this feature:

- The XSM System Monitor card (NTD8D22AC) is required.
- The Multi-Protocol Controller card (NT1X89AA) is required to enable the Meridian SL-100 to communicate with XSMs.
- Two eight-position DIP switches on the XSM are used to indicate the system configuration, XSM function (network-side/user-side), and XSM identifier (0 to 63).
- Cables are required to establish the link between the XSM and the MPC, to serially connect the user-side XSMs with their network-side XSM, and to wire the IPE modules within an IPEC to the XSM.

Limitations and restrictions

The following limitations and restrictions apply to XSM System Monitor Maintenance Interface:

- The MPC (Multi-Protocol Converter) 1X89 card is used as the physical interface between XSMs and an IOC. One MPC card supports two RS232-C data links. Therefore, only two network-side XSMs can be supported on one MPC card.
- Table SLLNKDEV allows the technician to define MPC ports for XSM data applications. Up to 64 data links can be defined in table SLLNKDEV. Therefore, no more than 64 network-side XSMs can be defined in a single Meridian SL-100.
- If the data link between the Meridian SL-100 software and a network-side XSM is unavailable, it is impossible for the CC to determine any status information or fault reports from that XSM and any of its user-side XSMs.

- No other XSM fault reports other than those defined by this document are supported for XSMs in a Meridian SL-100 environment.
- User-side XSMs under the control of a given network-side XSM must be numbered sequentially (DIP switch setting), and failure to do so will result in incorrect fault reports being generated for any user-side XSM missing from the sequence. For example, if user-side XSMs were numbered 1,3,4, and 8, the network-side XSM would report that user-sides 2,5,6, and 7 were not reporting.
- If additional user-side XSMs are added to the "daisy chain" with a previously configured and working network-side XSM, the DIP switch setting for the network-side XSM must be changed to reflect the new number of user-side XSMs under its control.

Interactions

This is an optional feature that, in conjunction with feature AD3418, XSM System Monitor SLLNK Interface, provides XSM capability for IPEs in the Meridian SL-100 environment. This feature interacts with existing CC PM maintenance software and has the potential to invoke IPE PM maintenance operations and IPE state changes. With this feature, IPE power and temperature related faults can be reported and acted upon more quickly than with conventional CC PM maintenance audits and reporting facilities.

Datafill

Table IPEINV was modified to include XSM configuration information. ["New fields in table IPEINV" \(page 306\)](#) lists the new fields in table IPEINV:

New fields in table IPEINV

Field name	Range of values	Description
XSMEQUIP	Y or N	This field specifies whether the IPE is monitored by an XSM.
LOOPID	1 to 16 characters	This field specifies which data link is datafilled in table SLLNKDEV.
XSMID	0 to 63	This field specifies the number of the XSM that is responsible for monitoring the IPE. This value must correspond to the DIP switch setting for the XSM in the IPEC column pedestal.
MODULEID	0 to 63	This field specifies the address of the IPE within its IPEC column. This value should correspond with the IPE's position in its IPEC. It should also correspond with the shelf number in the key for this tuple.

If XSMs require datafill, table SLLNKDEV must be datafilled with a valid XSM data link before datafilling table IPEINV.

Service Orders

XSM System Monitor Maintenance Interface does not use SERVORD.

Operational Measurements

Existing IPE Operational Measurements in groups PM and PMTYP are pegged based on the state or state transitions of IPEs. Although the XSM usually reports IPE failures more quickly than conventional PM error reporting methods, the functionality of existing IPE OM is not changed.

Logs

This feature increases the possible ways in which an IPE fault or failure can be detected and subsequently logged. Two new log reports, XSM103 and XSM104 have been created. The XSM 103 log is generated when an XSM is determined to be out of service. For network-side XSMs, this occurs during the regular PM audit cycle when no response has been received to a status inquiry message. For user-side XSMs, it occurs when the network-side XSM reports a failure for the user-side XSM. The XSM104 log is generated when an XSM returns to service after a fault condition is reported.

User interface

The following changes have been made to the user interface for this feature:

- The IPE PM MAP level has been enhanced to display SysB or ISTb conditions using the QUERYPM FLT command for IPE hardware faults detected and reported by XSMs.
- A new command, XSMSHOW has been created to allow a technician to view XSM configuration information.
- A nonresident CI command XSMDEBUG was created to allow testing of XSM CC software without the need for a physical connection between the MPC and an XSM.

Billing

XSM System Monitor Maintenance Interface does not affect billing.

AD3418 - XSM System Monitor SLLNK Interface

Release applicability

MSL03 and up. XSM System Monitor SLLNK Interface was introduced in BCS34.

Description

This feature provides the data interface software on the Meridian SL-100 Central Control (CC) to communicate with up to 64 network-side Extended System Monitor (XSM) cards. The software interacts with the CC Peripheral Module (PM) maintenance task to relay system status messages to and from the XSM. This feature enables the technician to

- monitor the Intelligent Peripheral Equipment (IPE) system status using dedicated RS232-C links, and be alerted when a status change occurs
- organize the IPE modes into column/module and network-side/user-side configurations for system status monitoring
- perform system configuration changes and maintenance actions by using the DMS-100 mechanism
- improve the system availability by having an autonomous power monitoring and control system that provides up-to-the-second fault detection data

Data link interface

SLLNK, a generic data link interface that resides in the CC, provides the Meridian SL-100 data link interface to the XSM. The Multi-Protocol Controller (MPC) 1X89AA card connects the RS232-C link from the XSM to the Input/Output Controller (IOC) on the CC. The MPC is a software-downloadable I/O device that resides on the IOC shelf. It supports two serial ports capable of RS232 synchronous/asynchronous transmission.

Two existing tables, MPC and MPCLINK are used to datafill the data link circuits for communicating with the XSMs. Table SLLNKDEV was enhanced to allow the new XSM data application, XSMDATA, to use the SLLNK facility.

XSM configuration

The XSM circuit card is located on the IPE column pedestal. Each IPE column (IPEC) consists of a stack of up to four IPE modules. These modules are numbered 0 to 3 from bottom to top. IPE modules are numbered according to their physical locations in an IPEC. One network-side XSM is capable of supporting up to 64 columns, which means that one network-side XSM can potentially support up to 256 IPE modules.

The XSM ID (XSMID) is assigned using DIP switches on the XSMs from 0 to 63. Number 0 is always associated with the network-side XSM, which the user-side XSMs are numbered from 1 to 63. A RS232-C link that is connected to a network-side XSM is called a loop. There can be a number of network-side XSMs configured, and there can be an equal number of loops for the XSMs. The existing XSM configuration setup and changes are done through the existing IPEINV table. Table IPEINV was modified to allow

the user to specify the optional XSM information. The XSM information given to an IPE tuple in the IPEINV table is in the format of loop ID, XSMID and module number, which indicates exactly how an IPE node is configured.

A new CI command, XSMSHOW enables the technician to view the current XSM configurations. The configurations can be viewed by specifying an XSM loop ID or a pair key consisting of an XSM loop and XSMID. The XSM loop displays all the XSMs and IPEs associated with the specified XSM loop. The XSMID displays all the IPEs associated with the specified XSM loop and XSMID pair.

XSM maintenance interface

The XSM maintenance provides the need to react to the fault status reported by the XSMs, to alert the technician so that appropriate maintenance action can be taken, or to query the XSM for system fault status. When the XSM detects a fault, it is received by the CC through the RS232-C link. The IPE maintenance software is notified accordingly. Maintenance actions are taken and logs are generated to alert the technician.

For IPE configurations that are equipped with the XSMs, but that do not have RS232-C connections to the IOCs, the Meridian SL-100 provides an alarm system that consists of hardware devices and software modules for detecting and reporting equipment faults by visual and audible alarms. The hardware comprises various circuit cards that provide signal scan points and signal distribution points. Signal scan points determine the state of a variety of equipment. Signal distribution points activate and deactivate the external relay-controlled equipment.

The alarm system software serves as an interface between the alarm hardware and the external alarm's user interface. The external alarm's system user interface includes the MAP level alarm's status display and commands to display, query, or control the alarm scan and distribution points. The alarm scan points and distribution points are defined through table control in tables ALMSCGRP, ALMSC, ALMSDGRP, and ALMSD.

Hardware requirements

The XSM System Monitor card (NT8D22AC) is required. The Multi-Protocol controller card (NT1X89AA) is required to enable the Meridian SL-100 software to communicate with the XSM. Cables are required to establish the links between an XSM and an MPC, and between an IPE bulkhead and the IOC. Other cables are required to serially connect the user-side XSMs with the network-side XSM and to wire the IPE modules within a column to the XSM.

Limitations and restrictions

The following limitations and restrictions apply to XSM System Monitor SLLNK Interface:

- The MPC 1X8AA card is used as the physical interface between the XSM and the IOC. One MPC card supports two XSM RS232-C loops.
- Table SLLNKDEV allows users to define the MPC ports for XSM data applications. The maximum number of data links that can be defined in table SLLNKDEV is 64, so the maximum number of XSM loops that can be configured is restricted to 64 also. The XSM application co-exists with the SMDI applications, but competes with SMDI for available SLLNK devices.
- A single MPC card cannot support more than one protocol. No more than two physical links can be used per PC card.
- The XSM configurations are dictated by the way the network-side XSM communicates with its user-side XSMs and the way it reports the fault status.

Interactions

This feature, in conjunction with feature AD3417, XSM System Monitor Maintenance Interface, provides the XSM functionality to the Meridian SL-100 IPE configuration. It interacts with the MPC/SLLNK data link software and XSM System Monitor Maintenance Interface software.

Datafill

To enable the XSM data link interface to use the SLLINK services, the XFERS field of table SLLNKDEV was changed to allow a new application, XSMDATA. This change enables users to datafill a SLLNK device for XSM data applications. For the XSM application, the datafill sequence is table MPC, table MPCLINK, and table SLLNKDEV.

Service Orders

XSM System Monitor SLLNK Interface does not use SERVORD.

Operational Measurements

Existing OMs pertaining to the MPC and SLLNK are used as they are currently implemented. There are no new OMs for the XSM SLLNK interface application. The MPC/SLLNK related OMs include OM groups MPCBASE, MPCLINK2, MPCLINK3, SLLNKINC, and SLLNK.

Logs

Logs pertaining to the MPC and SLLNK systems are used. The following three new XSM data log reports were created for this feature:

- XSM100 - generates inquiry messages to the XSM when the data link is down.

- XSM101 - generates for each SLLNK data link the first time an XSM status inquiry message is successfully queued after the XSM100 condition is cleared.
- XSM102 - generates when an incoming message is discarded because there is no more room in the queue.

User interface

The existing CI increment LNKUTIL allows the users to manipulate the way SLLNK data link is used. Only the QUERY command is valid for MPC links. Command restrictions are unchanged. MPS links are automatically connected and started when datafilled in table SLLNKDEV and returned to service at the MAP display level. The links are automatically stopped when they are put into busy mode at the MAP display level.

A new CI command, XSMSHOW, is provided that allows the technician to view the current XSM configurations.

Billing

XSM System Monitor SLLNK Interface does not affect billing.

AD3419 - Broadcast Loading for IPEs and DLMs

Release applicability

MSL03 and up. Broadcast Loading for IPEs and DLMs was introduced in BCS34.

Description

This feature provides for rapid Intelligent Peripheral Equipment (IPE) and Digital Line Module (DLM) peripheral recovery following a major crisis, such a complete Private Branch Exchange (PBX) power loss. This feature includes enhancements to the maintenance operations available to both the DLM and the IPE level of the MAP display. Previously, maintenance operations issued from a MAP display could only be executed on a single Peripheral Module (PM) at a time. This feature allows a technician to execute a single command to perform maintenance operations on many PMs of the same type and set.

The following operations are supported for concurrent execution on a set of DLMs or IPEs.

- Busy (BSY)
- Return to Service (RTS)
- Offline (Offl)
- Loading (LoadPM)

These enhancements are available to all DLM- or IPE-based peripheral modules. The enhanced operations only function on a group of DLMs or a group of IPEs of the same PM type. By invoking a command with the ALL parameter, the maintenance operation executes on each PM in the post set.

For each DLM or IPE that is taken out of service, a warning prompt asks for confirmation of the maintenance operation on that PM. If the response to the prompt is no, that particular DLM or IPE is taken out of the group of DLMs or IPEs on which the operation is being performed. Execution of the operation continues on the DLMs or IPEs that are confirmed.

A reply to every maintenance request is provided. At the end of the operation, a summary is provided.

Hardware requirements

Broadcast Loading for IPEs and DLMs has no hardware requirements.

Limitations and restrictions

This feature is used only to extend the broadcast loading of LCMs to include both DLMs and IPEs.

Interactions

This feature interacts with the following:

- PM MAP level software
- PM maintenance software
- Feature AL0481, IPML PM Load MTC Utilities
- Feature AL0480, Enhanced PM MAP Level
- Feature AM0037, IPE PM Maintenance - Phase I
- Feature AD0069, DLM Maintenance Enhancements

Datafill

Broadcast Loading for IPEs and DLMs does not affect datafill.

Service Orders

Broadcast Loading for IPEs and DLMs does not use SERVORD.

Operational Measurements

Broadcast Loading for IPEs and DLMs does not affect Operational Measurements.

Logs

Broadcast Loading for IPEs and DLMs does not affect Logs.

User interface

This feature provides the ability to execute a maintenance operation on a set of DLMS by entering a single command. For the user to indicate that the operation is to be executed on a set of DLMS, rather than just the DLM displayed on the MAP display, the ALL parameter has been added. The Bsy, RTS, Offl, and LoadPM commands interact with the ALL parameter. Only those DLMS posted on the MAP display are in the scope of the ALL parameter.

Before executing a maintenance operation with the ALL parameter, a confirmation of the operation is required. A prompt displays to ensure that the user knows the number of DLMS that the operation is executed on.

Billing

Broadcast Loading for IPEs and DLMS does not affect billing.

AD3468 - Replace Dialed Digits II

Description

The Network Services System (NSS) Replace Dialed Digits (RDD) feature allows a call to route to a number other than the actual dialed digits. The feature replaces a call's dialed digits and Network Class of Service (NCOS) with new digits and a new NCOS using the RDD database. The new digits determine the call destination. The RDD database is a new table REPLDATA.

This feature provides the option of accessing the RDD database in the switch, in-switch, or remotely through a NSS database control point (DBCP). Network Service Code (NSC) call translations initiate accessing the in-switch or remote RDD database.

Remote RDD service is provided on a Service Switching Point (SSP) that communicates with the RDD database using Signaling System #7 (SS7). An SSP is a node in the SS7 network that launches queries to a database located at a DBCP.

This feature modifies the N00 dialing capabilities on an NSS by allowing an N00 number to be replaced using the in-switch or remote RDD database.

Hardware requirements

The Replace Dialed Digits II feature has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Replace Dialed Digits II:

- NSCODE REPLDIGS must be datafilled in table NSCDEFS with at least the REPLDIGS option, REPLACE.

- The REPLACE and COSMAP options are applicable only to the REPLDIGS NSCODE.
- All RDD numbers using the RDD database must be datafilled in table REPLDATA or the call routes to the failure route assigned in table NSCDEFS.
- An 800 universal access number must be datafilled in table DNROUTE as a Meridian Off Net Access (MONA) Directory Number (DN) or the call blocks and the caller receives vacant code treatment (VACT).
- The Numbering Plan Area must be provided in the Automatic Number Identification (ANI) for NSS Feature Group D (FGD) 400/800 INWATS calls that require ANI delivery or the call blocks and the caller receives partial dial (PDIL) treatment.
- The ten-digit ANI must be provided for NSS FGD 900 calls that require ANI delivery or the call blocks and the caller receives partial dial treatment.
- ANI screening is performed only for NSS FGD 700 calls. 700 calls that require ANI delivery must pass ANI screening or the call blocks and the caller receives ANI database failure treatment. The discussion of ANI in this document applies only to N00 calls on a NSS FGD trunk, with NSSFGD datafilled in table TRKGRP. The discussion of ANI in this document excludes calls on a SS7 FGD trunk.
- On non-FGD trunks, N00 calls will not block for failing ANI requirements.
- The TIMEOUT field in table NSCDEFS is datafilled with a value less than 600.
- Silent tone is given during the RDD DBCP response wait period. When a response timeout expires, the call is sent to the failure route.
- Since the value in the TIMEOUT field in table NSCDEFS determines the response timeout, the caller can receive silent tone for the length of the timeout value.
- The only field in the SMDR #DB record supported by the RDD feature is the MSN_ACCESS_DN for non-NSS calls.
- Each Integrated Business Network (IBN) feature imposes its own intragroup requirements. The "intragroupness" of a RDD call is evaluated on the basis of the translation of the dialed number rather than the replaced digits.
- If less than ten dialed digits route to the RDD feature, the call is sent to treatment and an NSS107 log generates.

Interactions

An 800 universal access number datafills as a MONA DN. RDD calls can dial as the destination digits of a MONA call.

RDD calls can dial as the destination digits of a re-originated call.

RDD calls can dial as the destination digits of a Direct Inward System Access (DISA) call.

RDD calls can dial as the destination digits after entering an authorization or account code feature access code. RDD calls can route to authorization or account code feature access codes.

RDD calls can route to some IBN features and some features can interact by dialing a RDD call. In all cases the intragroup requirements imposed by each feature must be met. The intragroupness of an RDD call is evaluated on the basis of the translation of the dialed number, rather than the replaced digits.

RDD replaced digits can route to the following features:

- ACD
- UCD
- MADN
- Meet-me Conference
- AUTH
- ACCT

RDD calls can dial from the following features:

- CNF
- CXR
- 3WC/CT

The following features work with RDD calls:

- OHQ
- VFGs
- LNR

Datafill

Table REPLDATA is added and changes are made to tables HNPACONT and NSCDEFS.

Service Orders

The Replace Dialed Digits II feature does not affect SERVORD.

Operational Measurements

The Replace Dialed Digits II feature does not affect Operational Measurements.

Logs

The Replace Dialed Digits II feature does not affect logs.

User interface

The Replace Dialed Digits II feature does not change the user interface.


Billing

For Station Message Detail Recording (SMDR) billing on NSS and non-NSS calls, the RDD feature uses the SMDR NSS record (#DB) to display the dialed digits in the SMDR record. The dialed digits display in the MSN_ACCESS_DN field. The other fields in the #DB record are not applicable for the RDD feature for non-NSS calls. The CALLED_DR field in the #D1 record, records the replaced digits. If the dialed digits are not replaced, the CALLED_DR field contains the nils, #A's.

For Variable Call Detail Recording (VCDR) billing, the DIALED_DR field records the replaced digits. The dialed digits are not recorded unless the digits cannot be replaced and the call routes to the fail route or to treatment.

AD3493 - Enhanced DLM PM Diagnostics**Description**

This feature enhances the current Peripheral Module (PM) diagnostics for the Digital Line Module (DLM) to test and verify Pulse Code Modulation (PCM) and signaling for the P-side of the 8X46 board. Previous DLM PM diagnostics performed a loop test that tested the W72 chips on the P-side of the 6X52 board and the C-side of the 8X49 board. However, these diagnostics were not able to detect W72 chip faults or do loop tests on the P-side of the 8X46 board. The enhanced PM diagnostics perform a series of line diagnostics (W72 loop tests) that allow testing of these chips. This feature adds W7 loop testing through the X11 chip on the 8X47 boards and the X12 chip on the 8X55 boards to the existing capabilities. ["Enhanced PM diagnostic capability" \(page 317\)](#) illustrates the enhanced PM diagnostic capability.

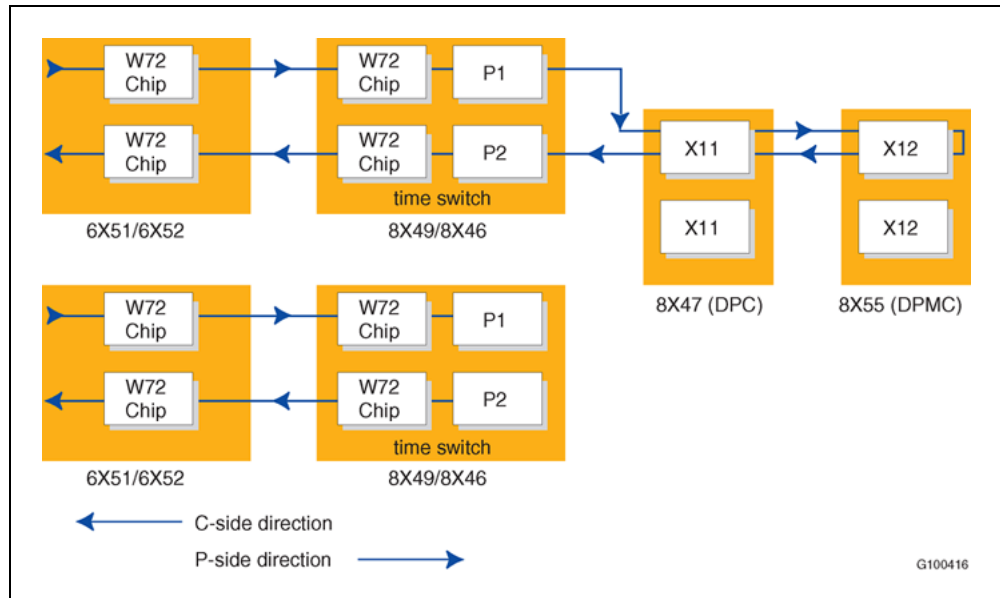Enhanced PM diagnostic capability

The W72 chip labeled "P1" serves as a parallel-to-serial converter and has 10 pins on each side. On the C-side, eight of the pins receive a parallel stream of Pulse Code Modulation (PCM). The ninth pin is used for voice and data signaling and the tenth pin is grounded. On the P-side, each one of the 10 pins is dedicated to a particular 8X47 board. These pins on the P-side of the W72 chips are serial streams of PCM and signaling.

The W72 chip labeled "P2" is the opposite, serving as a serial-to-parallel converter. The P-side pins receive PCM and signaling information from the 8X47 boards. The W72 chip processes the information and sends it to the C-side as eight bits of PCM and one signaling bit for voice and data.

In-service testing

The W72 chips on the P-side of the 8X46 board are tested using in-service tests. To fully test the W72 chips, each Digital Port Card (DPC) associated with a W72 chip must be tested. When testing the DPC, the software specifies a particular voice or data Line Equipment Number (LEN). When testing this LEN, there cannot be any calls on either the voice or data LEN. If a LEN is unequipped and in the Hardware Assigned, Software Unassigned (HASU) state, testing on that LEN will not cause any interruption of service. If the LEN is datafilled and is available for use, testing on that LEN prevents the voice and data line from being used during the test, which causes interruption of service.

Because the PM audit runs during the day, only HASU LENS are used when performing the W72 tests. However, for the REX test, both HASU LENS and working LENS are used to test the W72 chips. The REX test can use working LENS, because it is usually scheduled for off-hour testing.

The Digital Port Maintenance Card (DPMC) is used to verify PCM and voice-data signaling for the W7 chip and the DPC. If testing passes once, all ten of the C-side W72 pins are verified, but only one of the ten P-side pins is verified. Each DLM unit has five DPCs dedicated to it. Each of these five DPCs is dedicated to one pin on the P-side of the W72 chip. The five remaining pins of the W72 chip are used to communicate with the five DPCs of the mate unit. When the DLM unit is in service, it can communicate with each of its five dedicated DPCs. If the other unit is also in service, it cannot communicate with the DPCs of that unit. If the other DLM unit is out of service, this unit can communicate with the other DPCs. To verify the P-side pins, the PCM and voice-data signaling tests are repeated for each of the five DPCs associated with this unit. Only five of the ten P-side pins on a unit can be tested when the other unit is in service.

Testing with both units out of service

When both units of the DLM are out of service, the P-side W72 chips cannot be tested. Since the DLM is out of service, the 8X46 boards cannot communicate with the 8X47 boards. For this reason, the P-side chips on the 8X46 board cannot be tested.

PM Audit Testing

As part of the in-service PM audit, the PCM and voice-data signaling are tested using the DPMC. There must be at least one HASU LEN on a DLM unit. During audit testing, the LENSs on the X11 chips are tested on each DPC. When testing is completed for each DPC on the unit, the number of port cards that passed and the number that failed the W72 test are counted. If any of the DPCs fail, the problem is assumed to be with the 8X46 card. Units that fail are put in In Service Trouble (ISTB) status.

Out of service port card testing

After a DPC has been put in ISTB state for possible PCM or signaling failure, the DPC is tested to verify the failure. PCM and signaling tests verify the path through the W72 chips of the 8X46 board to the DPC. If one LEN is found to pass the tests, the fault is cleared for that card. If no LENS pass, the fault is not cleared.

Off-hour PM audit (REX) testing

REX testing is similar to PM audit testing. However, this procedure uses fully datafilled LENSs instead of HASU LENSs, unless no datafilled LENSs are available. If there are no datafilled or HASU LENSs, no W72 testing is performed. However, if only one LEN is datafilled for a DPC, it is still possible to perform testing for that DPC during the off-hour PM audit.

The software tests the P-side 8X46 board W72 chips by seizing the voice and data LENSs of idle Integrated Voice and Data (IVD) sets and tests the PCM and voice channel signaling using the DPMC. If PCM and signaling testing pass once, each of the 10 C-side W72 pins are verified, but only one

of the ten P-side pins is verified. This test is repeated until all ten of the P-side pins are tested. If there is a failure, another LEN on the same DPC, but a different X11 chip, is tested. If this test fails, the software determines that either the 8X47 or 8X46 board has failed. The software then stores the information about the DPCs that failed. This information is used for further testing.

After out-of-service testing, the unit is returned to service and the remaining in-service tests are performed. When these have passed, the mate unit is tested. After the W72 chips are tested for both units, the results are compared. If the same 8X47 board failed the test from both 8X46 boards, that 8X47 board is set to SYSB status. For each 8X47 board that passes for one 8X46, but fails for the other 8X46, the unit pin failure count increases by one. The unit with the largest pin failure count is set to SYSB status, giving the 8X46 as the reason. This puts the other unit into takeover mode so that service to that 8X47 board is not lost. If both units have failures, a PM 181 log is generated. This log indicates that the 8X46 should be replaced.

Hardware requirements

A DPMC (8X55) board is required for this feature. It must be datafilled in table DLMINV, and the DPMC must be installed and working. If the DLM is not equipped with a DPMC, the additional tests implemented by this feature cannot verify the P-side W72 chips on the 8X46 board. In addition, for these new tests to fully test the W72 chips on the P-side of the 8X46 board of a given DLM, all DPCs must be installed for that DLM.

Limitations and restrictions

The following limitations and restrictions apply to Enhanced DLM PM Diagnostics:

- Because there is no hardware on the 8X46 board to perform loop tests for the P-side W72 chips, LENs must be seized in order to verify the W72 chips.
- W72 testing is not executed unless REX testing is enabled for that particular DLM.
- REX testing should be scheduled for off-hours. If REX tests are run during peak hours, performance degradation should be expected.
- If no HASU LENs are available for the W72 testing, no W72 testing is performed in the standard PM audit.
- If no datafilled LENs are available for testing during REX testing, HASU LENs are used. If there are no HASU LENs, no W72 testing is performed.

Interactions

REX testing for the DLM is altered to execute the tests. These tests do not require additional action by the user.

Datafill

Enhanced DLM PM Diagnostics does not affect data schema tables or office parameters.

Service Orders

Enhanced DLM PM Diagnostics does not affect SERVORD.

Operational Measurements

Enhanced DLM PM Diagnostics does not affect Operational Measurements.

Logs

Enhanced DLM PM Diagnostics does not affect logs.

User interface

When a QUERYPM FLT is performed when a DLM is posted at the PM level of the MAP workstation, a new response can be given.

Billing

Enhanced DLM PM Diagnostics does not affect billing.

AD3513 - Layer 2 OMs for D-channel Backup**Description**

This feature adds the capability for DTCI/LTCI/PDTCi PRI backup D-channel's layer 2 performance monitoring for feature AD2606, ISDN DTC Robustness PRADCHL2 OM group.

The Integrated Services Digital Network (ISDN) Digital Trunk Controller (DTCI), ISDN Line Trunk Controller (LTCI), and ISDN PCM30 Digital Trunk Controller (PDTCi) is a new version of DTC/LTC/PDTC with the additional capabilities to support ISDN Primary Rate Interface (PRI). DTCI/LTCI/PDTCi uses the ISDN Signaling Processor (ISP) to provide the D-channel signaling for all the PRI interfaces terminating on it. The OM group, PRADCHL2, monitors the performance of the PRI D-channels in DTCIs/LTCIs/PDTCIs. An enhancement of the OM group, PRADCHL2, to include the performance monitoring for backup D-channel was necessary, because backup D-channel was released in BCS31.

There are no new OM registers introduced in this feature. The registers used are the same as defined in feature AD2606, ISDN DTC Robustness. For more information, refer to this feature description.

Before the backup D-channel was introduced, a user could check a D-channel's layer 2 performance by entering the command OMSHOW PRADCHL2 followed by the Common Language Location Identifier (CLLI) name of that trunk group.

When backup D-channel was introduced in BCS31, CLLI could not be used as a key to index into the PRADCHL2 table to get the performance data, because both the primary D-channel and backup D-channel have the same CLLI. If CLLI is used as a key, a user cannot determine which D-channel's data to review.

A key is defined so that the user can use the key to index into the PRADCHL2 table to review the layer 2 performance. To find the key, the user uses a MAP workstation at the CI level to enter the following commands:

```
MAPCI;MTC;TRKS;TTP;PRADCH;POST CD xxxxxxxx
```

where

xxxxxxx is the CLLI name of the trunk the user wants to review.

The MAP workstation displays the following:

CKT	TYPE		PM	NO.	COM	LANG	STA
2W	IS	IS	DTCI	10	5	24	xxxxxxx D1 INS
			DTCI	10	7	24	xxxxxxx D2 STB

The user enters the following command to check either the primary D-channel or the backup D-channel's layer 2 performance:

```
OMSHOW PRADCHL2 ACTIVE DTCI0100524
```

where

DTCI0100524 is the key for the primary D-channel of CLLI xxxxxxxx which corresponds to this specific D-channel's circuit location.

The first four characters are DTCI, which indicates that this circuit is on a DTCI.

The next three characters, 010, indicate the DTCI number is 10. Since the DTCI number can be three digits, put a 0 in front if the DTCI number is two digits (that is, 010 is 10).

The third part of the key, 05, is the span number of the specific primary D-channel. Since the span number can have two digits, from zero to 19, put a 0 in the front if the span number is a single digit (that is, 05 is 5).

The fourth part of the key, 24, corresponds to the time slot in the span of 05. The time slot can be a single digit, so put a 0 in front (that is, if time slot is 2, then enter 02).

Hardware requirements

Layer 2 OMs for D-channel Backup has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Layer 2 OMs for D-channel Backup:

- supports DMS-based PRI trunks only
- does not support backup D-channel on PDTCT

Interactions

Layer 2 OMs for D-channel Backup has no functionality interactions.

Datafill

Layer 2 OMs for D-channel Backup does not affect data schema tables or office parameters.

Service Orders

Layer 2 OMs for D-channel Backup does not affect SERVORD.

Operational Measurements

The Operational Measurements group PRADCHL2 is modified to contain the performance monitoring for the PRI backup D-channels as follows:

- PRI D-channel layer 2 OM group
- PRI backup D-channel if datafilled (PDTCT not supported)
- pegged on a per D-channel basis
- the registers are the same as defined in feature AD2606, ISDN DTC Robustness

Logs

Layer 2 OMs for D-channel Backup does not affect logs.

User interface

Layer 2 OMs for D-channel Backup does not change the user interface.

Billing

Layer 2 OMs for D-channel Backup does not affect billing.

AD3879 - Power - Nx64 Wideband Optionality**Description**

This feature provides an enhancement to the Nx64 wideband call processing capability.

Currently, wideband calls provide the capability to use either 2, 6, or 24 64 kbps channels in a single call ($N = 2, 6, \text{ or } 24$). This feature enhancement allows 2 to 24 64-kbps channels ($N = 2\text{-}24$) in a single call. Each channel is a DS0, and each channel associated with the wideband call must be on the same DS1. With this feature, a single DS1 can contain up to 24 DS0 channels for a maximum 24 x 64 kbps wideband call.

Wideband introduction

Wideband calls consist of a specific number (indicated by the variable N) of 64 kbps channels within a single call. Wideband calls are also known as Nx64 wideband calls, where N equals 2, 6, or 24. This feature package implements Nx64 wideband calls over Integrated Business Network (IBN) ISDN User Part (ISUP) trunks on an Meridian SL-100 switched network. This feature only supports IBN ISUP trunk to IBN ISUP trunk connections. One set of ISUP messages, instead of separate messages for each channel, sets up the call connections (that is, 2, 6, or 24 connections).

Each DS0 channel resides on the same DS1 link. A single DS1 contains up to 24 DS0s for a maximum 24 x 64-kbps wideband call. Different arrangements of the DS0s within a trunk group can be specified. Outgoing trunk groups can use bounded contiguous DS0s.

Bounded DS0s means that specific channels must be used depending on the number of connections. Outgoing trunks can also use noncontiguous DS0s.

- $N = 2$ (bounded) - The DS0 used must be either channels 1-2, 3-4, 5-6, etc. through 23-24.
- $N = 6$ (bounded) - The DS0 used must be either channels 1-6, 7-12, 13-18, or 19-24.

Noncontiguous DS0s should be used for wideband calls using the interswitch network. This configuration helps to obtain maximum use of the bandwidth. However, for Customer Premise Equipment (CPE) interfaces, bounded contiguous DS0s should be used for wideband calls. This configuration follows existing ANSI standards.

Wideband call processing

Incoming calls to the system arrive from the ISUP network or from Customer Premise Equipment (CPE). ISUP messaging is performed on the CCS7 signaling link that is connected to the Link Peripheral Processor (LPP). The ISUP trunks connect to the Digital Trunk Controller (DTC). The outgoing call then connects to the ISUP network or CPE. This feature provides for switching incoming ISUP trunks to the outgoing ISUP trunks as the wideband call needs.

The IAM sent to or received from the CPE uses current accepted ANSI standards to indicate a wideband call. The User Service Information (USI) parameter, in the IAM, indicates the bandwidth of the call. This feature only supports bounded contiguous calls for CPE connections.

ISUP messages (with the exception of the USI parameter) are similar to those used for broadcast calls.

As with call setup, call release can occur in one of two ways. The call is released when a RELease (REL) message is received from either the far-end office or the originating switch. Calls can also be released through maintenance commands, FRLS and BSY, or by a DS1 carrier failure. ISUP protocol requires that trunks states be changed to Idle (IDL) (except for the FRLS command) and the IDBs be unchained.

Routing strategies for wideband calls

Table IBNRTE or Table DNROUTE implements the routing strategies for wideband calls. Table DNROUTE allows a Directory Number (DN) to be associated with a specific trunk group member. This DN is then used to specify the lowest numbered DS0 on the CPE to which the wideband call is supposed to terminate. The incoming call uses the lowest numbered DS0 and bandwidth to connect to the CPE contiguously.

The following validation check helps in the selection of a route:

Only IBNT2 or IBNT0 ISUP trunks with the WB option (Table TRKGRP) can route Nx64 wideband calls.

Hardware requirements

Power - Nx64 Wideband Optionality has no hardware requirements.

Limitations and restrictions

Power - Nx64 Wideband Optionality has no limitations or restrictions.

Interactions

Power - Nx64 Wideband Optionality has no functionality interactions.

Datafill

Table IBNRTE or Table DNROUTE implements the routing strategies for wideband calls. Table DNROUTE allows a DN to be associated with a specific trunk group member. This DN is then used to specify the lowest numbered DS0 on the CPE to which the wideband call is supposed to terminate. The incoming call uses the lowest numbered DS0 and bandwidth to connect to the CPE contiguously.

This feature supports only two options for wideband boundary preference (for N = 2-24) in Field WBOUND in Table TRKGRP (WB). Use the NONCON (Noncontiguous) option for an interswitch network, and use the ANSI option for a Customer Premise Equipment (CPE) interface. If the BNDCON (Bounded Contiguous) option is specified, N must equal 2, 6, or 24.

Service Orders

Power - Nx64 Wideband Optionality does not affect SERVORD.

Operational Measurements

Power - Nx64 Wideband Optionality does not affect Operational Measurements.

Logs

Power - Nx64 Wideband Optionality does not affect logs.

User interface

Power - Nx64 Wideband Optionality does not change the user interface.

Billing

Power - Nx64 Wideband Optionality does not affect billing.

AD4550 - FCC DID Answer Supervision Compliance**Description**

This feature makes the Meridian SL-100 compliant with the FCC requirement Part 68 requiring a PBX or similar system to return answer supervision to ensure proper billing.

The following items are the requirements for the Commission's Rules and Regulations 68.314 (h):

- Answer supervision associated with DID ports is not readily alterable.
- Equipment returns DID answer supervision no later than 500 milliseconds after the incoming call is:
 - answered by called station
 - answered by an attendant
 - routed to a recorded announcement that can be administered by the PBX operator
 - routed to a dial prompt
- If this equipment has the ability to redirect or forward calls back to the Public Switched Telephone Network (PSTN), it returns answer supervision after:

- detection of voice energy or removal of audible ringback signal
- assumes the call is answered after an interval of no more than 20 seconds
- Equipment is not required to return DID answer supervision on incoming calls under the following conditions:
 - audible ringback with no answer
 - busy signal
 - reorder signal

To comply with the FCC requirements, answer supervision must be returned on all trunk-to-trunk calls within 15 seconds. In addition, since the switch operator has the ability to alter the announcements, answer supervision is sent to all trunks that are routed to announcements.

Hardware requirements

DID trunk interfaces that are not capable of supplying answer supervision may not be provisioned on an Meridian SL-100 switch in the United States.

Limitations and restrictions

The switch operator cannot disable this feature.

This feature is required for all Meridian SL-100 switches in the United States that meet the following requirements:

- manufactured after January 1, 1992
- installed after June 30, 1992
- moved after January 1, 1992

At this time, this software should never be used in any other country.

Interactions

FCC DID Answer Supervision Compliance has no functionality interactions.

Datafill

FCC DID Answer Supervision Compliance does not affect data schema tables or office parameters.

Service Orders

FCC DID Answer Supervision Compliance does not affect SERVORD.

Operational Measurements

FCC DID Answer Supervision Compliance does not affect OMs.

Logs

FCC DID Answer Supervision Compliance does not affect logs.

User interface

FCC DID Answer Supervision Compliance does not change the user interface.

Billing

Trunk-to-trunk calls are answered by software after 15 seconds, regardless of an actual answer. If one of the trunks returns answer before 15 seconds, billing (if required) begins at that point. When a trunk is routed to an announcement, answer is always returned.

AD7654 - Dialable Wideband CALLP Matrix-to-Crossthreads Additions

Description

This feature supports wideband origination on Integrated Business Network Incoming Trunks (IBNTI). It modifies the wideband functionality so that it supports IBNTI trunks as it does for IBN two-way (IBNT2), IBN outgoing (IBNTO), and IBN Primary Rate Interface (IBNT2 with ISDN PRI signaling) trunks.

A new cross matrix index (CMI) is created to represent the IBN ISDN User Part-IBN (ISUP-IBN) PRI calltype. The correct tables in modules CPTABUI, CPTAB5, CPTAB7 are filled to accurately reflect the processors which are used when an IBN ISUP-IBN PRI calltype is processed.

Hardware requirements

Wideband calls require an Enhanced Core (ECORE) with an Enhanced Network (ENET) configuration. The Ecore must contain Digital Trunk Controllers (DTCs) equipped with the time switch card, NTAX78AA. This time switch card must also be datafilled in Table LTCINV in the OPTCARD field.

Limitations and restrictions

The following limitations and restrictions apply to Dialable Wideband CALLP Matrix-to-Crossthreads Additions:

- IBNT2 trunks are the only IBN type trunks that support the Nx64 kbps feature for ISDN PRI D-channel signaling.
- The DS0s or trunk members datafilled in table TRKMEM have to be datafilled on a DTCI which has the NTAX78AA constant delay time switch card.
- All DS0s used in a call must be datafilled in the same trunk group.
- All DS0s of an Nx64 kbps call must lie within the same DS1 span.

- Large dense trunk groups reduce the chance of fragmentation. Dense means that the majority of DS1s belong in a single trunk group.
- For IBNTI type trunks, the Nx64 kbps boundary preference must be datafilled in the option field as WIDEBAND followed by WBGRPING.
- For IBNT0 and IBNT2 type trunks, the Nx64 kbps boundary preference must be datafilled in table TRKGRP for WBGRPING as either FIXED, FLEXIBLE, or FLOATING.
- The Nx64 kbps trunk selection sequence must be datafilled in table TRKGRP for WBSELSEQ as either ascending sequential (ASEQ) or descending sequential (DSEQ).
- The Nx64 kbps trunk selection method must be datafilled in table TRKGRP for WBSEARCH as either BESTFIT or FIRSTFIT.
- With the completion of this feature, Nx64 kbps functionality on IBN type trunks supports the following connection scenarios: ISUP-PRI, PRI-ISUP, ISUP-ISUP, PRI-PRI.
- A 6x50AB DS1 card (revision 67 or greater) is necessary in the DTCL for the Nx64 kbps functionality.

Interactions

Dialable Wideband CALLP Matrix-to-Crossthreads Additions has no functionality interactions.

Datafill

Dialable Wideband CALLP Matrix-to-Crossthreads Additions does not affect data schema tables or office parameters.

Service Orders

Dialable Wideband CALLP Matrix-to-Crossthreads Additions does not affect SERVORD.

Operational Measurements

Dialable Wideband CALLP Matrix-to-Crossthreads Additions does not affect Operational Measurements.

Logs

Dialable Wideband CALLP Matrix-to-Crossthreads Additions does not affect logs.

User interface

Dialable Wideband CALLP Matrix-to-Crossthreads Additions does not change the user interface.

Billing

Dialable Wideband CALLP Matrix-to-Crossthreads Additions does not affect billing.

AD7655 - Digital Set Support of 64 kbps Sync Data**Description**


This feature supports the transfer of new data call options to Meridian Communication Adapter (MCA) data units interfacing with a Meridian SL-100 environment such that all supported features of the Meridian Programmable Data Adapter (MPDA) and added options execute according to specifications. The new data call functions are established through the transfer of configuration parameter messages from the Computing Module (CM) to the MCA. Such messages are received by a Line Group Controller (LGC) or Line Trunk Controller (LTC) Extended Peripheral Module (XPM), which exists between the CM and MCA along their communication path. Upon receiving a message, the XPM converts it into the appropriate format for transmission toward the MCA. All messages transferred between the XPM and MCA route through an Intelligent Peripheral Equipment (IPE) or a Digital Line Module (DLM) circuit card.

The following changes support the application software:

- allows Meridian Telecenter application software to recognize MCA card option
- adds MCA test diagnostics for NT8D02AA, NT8D02AB, NT8D09AB, NT8D09AD, and NT8D03AB enhanced digital port card
- adds MCA test diagnostics for CD8X47BA enhanced digital port card
- allows maintenance users to perform specific tests on MCA, as well as query the Digital Line Module or Intelligent Peripheral Equipment for the status of the MCA
- adds predefined error statements used by test modules

Hardware requirements

This feature is used on a Meridian SL-100 LGC or LTC XPM module interfacing with an MCA. The hardware components associated with this feature include Meridian SL-100 switch elements (CM, message switch, Network), LGC or LTC, IPE or DLM, and M2000 series telephone sets containing MCA circuit cards. ["Hardware interface" \(page 330\)](#) provides a pictorial representation of the interface between these hardware elements.

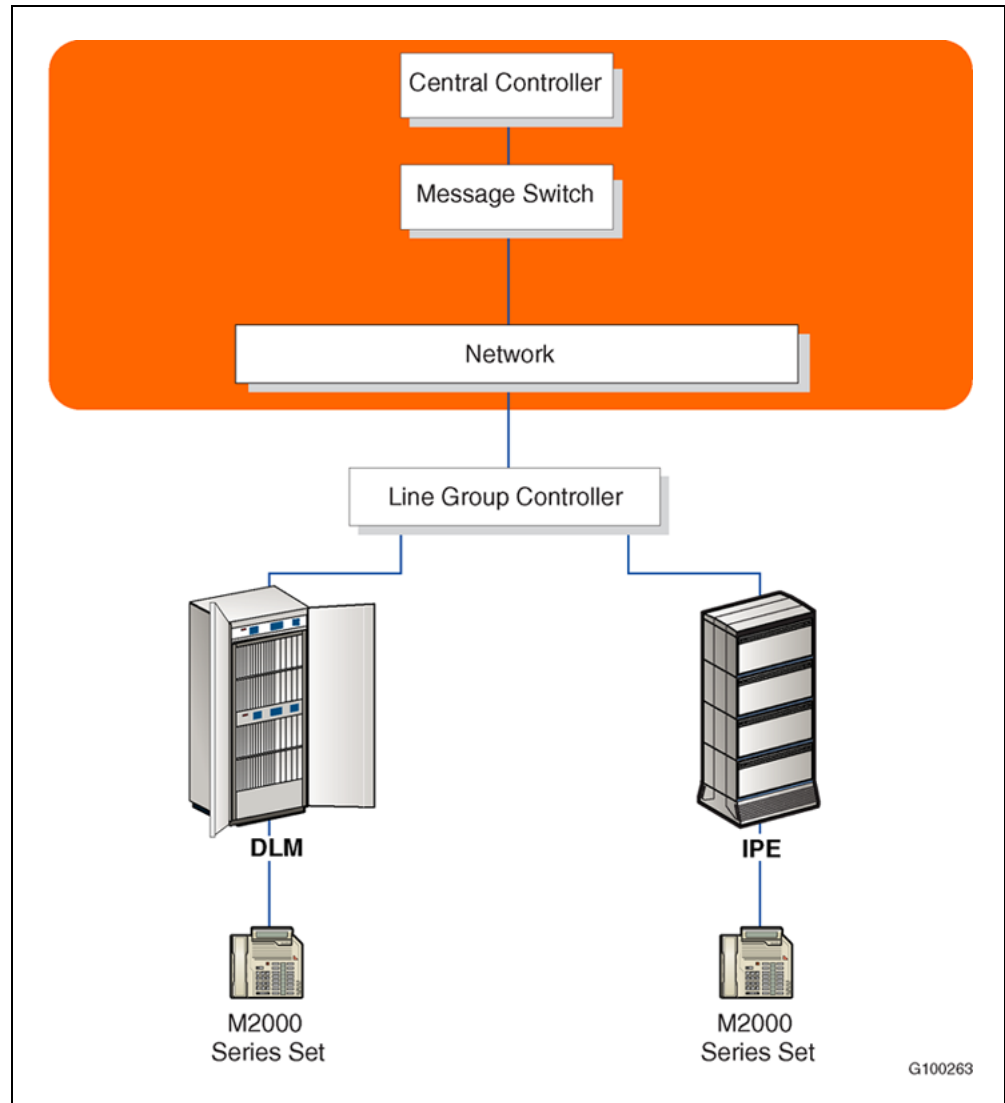Hardware interface**Limitations and restrictions**

Digital Set Support of 64 kbps Sync Data has no limitations or restrictions.

Interactions

Digital Set Support of 64 kbps Sync Data has no functionality interactions.

Datafill

The following data schema changes are applicable in this feature:

- adds software for processing table IVDINV to permit the datafilling of MCA as a valid SET_TYPE.
- adds MCA type to data dictionary for logical table IVDINV and binds the type for IPL

- adds necessary changes so that IVDINV table control can add, delete, or validate MCA options
- enhances table DPROFILE processing software to recognize three new parameters for the MCA terminal. Datafill the MCA option and the new V.25, High-Level Data Link control (HDLC) and RTS fields into table DPROFILE. In addition to table control, the software which currently references the MPDA is enhanced by adding support of the MCA.
- includes software to check for valid datafill for Line Equipment Number (LEN), Line Class Code (LCC), and feature keys on M2000 series set
- adds a maintenance code for the MCA terminal to allow the data profile download of the default settings provided in table DPROFILE. This information goes to the MCA during a maintenance return to service (RTS).
- adds recognition of MCA data type when posting and testing a Meridian set at the Line Test Position (LTP)
- allows M2000 series set to recognize MCA as a valid LCC type ID

Service Orders

The following commands are affected by this feature when MCA options are applicable: add option (ADO), delete option (DEO), and change keyset line (CKLN). Additionally, Service Order software is modified to allow automatic datafilling of table DPROFILE for the MCA.

Operational Measurements

Digital Set Support of 64 kbps Sync Data does not affect Operational Measurements.

Logs

Digital Set Support of 64 kbps Sync Data does not affect logs.

User interface

Software is added to allow posting of the MCA at the LTP MAP position. The output of the QLEN and QDN commands is altered for the MCA to display the new V.25, HDLC and RTS options.

Billing

Digital Set Support of 64 kbps Sync Data does not affect billing.

AD7656 - Line Side T1 IPE Interface Card

Description

This feature modifies the existing Meridian SL-100 code to recognize the NT5D11AA Line Side T1 Interface (LTI) circuit card.

Hardware requirements

The Product Engineering Code (PEC), NT5D11AA, is the LTI card, and allows the IPE to interface a T1 with voice mail and voice response equipment.

Limitations and restrictions

The following limitations and restrictions apply to Line Side T1 IPE Interface Card:

- In the system, the LTI behaves like an analog line card.
- This feature does not support T1 carrier diagnostics or alarm messages.
- It is the user's responsibility to ensure that logical datafill for the LTI circuit card matches the physical circuit card location. The user also has the responsibility to ensure that ports 8 through 15 of the second card slot are not used.

Interactions

Line Side T1 IPE Interface Card has no functionality interactions.

Datafill

Table LNINV displays the three new card codes 8D02EA, 8D02CC, and 5D11AA as datafill options in the existing list.

The CKTLOC command also displays the new 5D11AA card code.

Service Orders

The QUERYPM INVEN CARD and QUERYPM INVEN ALL commands display the new 5D11AA card code.

Operational Measurements

Line Side T1 IPE Interface Card does not affect Operational Measurements.

Logs

Line 101 and PM 181 logs display the new 5D11 option in the card type field.

User interface

Line Side T1 IPE Interface Card does not change the user interface.

Billing

Line Side T1 IPE Interface Card does not affect billing.

AD7658 - Fast Transfer for Digital Sets

Description

The Fast Transfer (FXR) feature is an optional keyset feature that reduces the required number of key strokes for a user to transfer a call to only two keystrokes. The first FXR keystroke establishes the second leg, and the second FXR keystroke transfers the call.

The FXR feature combined with Direct Station Select (DSS) or Busy Lamp Field (BLF) and Meridian Busy Set Station Camp-On (MBSCAMP) features, provide an enhanced functionality to the business set and allow the FXR feature to function at its fullest capability.

The FXR feature is assigned to a line through table control or service orders. The feature allows for the transfer of calls without having to conference. The Call Transfer Recall option is datafilled when assigning the FXR feature to the keyset. This option allows the transferring agent to get called back if no one answers the transferred call after a predetermined datafilled time.

FXR functionality

The FXR feature can be datafilled on the same set with the Three-Way Call (3WC), Call Transfer (CXR) and Conference Six port circuit (CONF6) features. However, the actual use of these features is mutually exclusive. When one of the features is in use the other features are ignored.

The DSS/BLF lamp has two states, on or off. When the DSS/BLF lamp is off (idle), the FXR and DSS/BLF keys transfer the call with or without announcement. If the terminating agent does not answer and the user has the Call Transfer Recall feature assigned, the user is recalled after the terminating set rings for the datafilled time interval. When the DSS/BLF lamp is on (busy), the FXR feature should only be used if the MBSCAMP feature is assigned to the set. The caller is camped on to the busy set and continues to receive ringing, silence, music, or an announcement, until the call is answered. If the terminating agent does not answer and the recall timer expires, the camped call goes back to the user.

When the MBSCAMP feature is not assigned to the user and the destination set is busy, a call can still transfer to the destination set using the FXR key. The caller hears a busy tone once the call transfers.

Method of operation for FXR

When a call is presented to the FXR user, the Directory Number's Liquid Crystal Display (LCD) flashes and the caller's DN and the called DN are displayed depending on the type of set and datafill. If the terminating agent

is unavailable or fails to answer the call, no further actions are taken. "Action initiated by FXR user" (page 334) shows the actions initiated by the FXR user.

Action initiated by FXR user

	User Action	Results
1	Presses the flashing DN key or goes off-hook.	The user answers the call and the DN's LCD turns on establishing the first leg of the call. The user is now involved in a two-port call. The user verifies the caller wants to be transferred.
2	Presses the FXR key.	The second leg of the call begins. The lamp associated with the FXR key goes solid. The DN lamp associated with the originating agent begins to flash and is on HOLD.
3	Depresses the DSS/BLF key or dials digits.	Ideally, the DSS/BLF lamp would be off. If the set is equipped with a display, the monitored DN (or digits dialed) is displayed on the user's set.
4	May announce to the terminating agent.	The call may be announced to the terminating agent before the transfer completes.
5	Presses the flashing FXR key.	The call is transferred. The FXR lamp is extinguished, as well as the DN lamp associated with the first leg (incoming call). If the set is equipped with a display, it is updated to reflect that the set is no longer connected to anyone.

Flip-flopping with FXR

The FXR user has the ability to flip-flop between the originating agent and the terminating agent as described in "Flip-flopping between agents" (page 334).

Flip-flopping between agents

	User Action	Results
1	Presses the flashing DN key or goes off-hook.	The user answers the call and the DN's LCD turns on establishing the first leg of the call. The user is now involved in a two-port call. The user verifies the caller wants to be transferred.
2	Presses the FXR key.	The second leg of the call begins. The lamp associated with the FXR key goes solid. The DN lamp associated with the originating agent begins to flash and is on HOLD.
3	Depresses the DSS/BLF key, or dials digits.	Ideally, the DSS/BLF lamp is off. If the set is equipped with a display, the monitored DN (or digits dialed) is displayed on the user's set.

	User Action	Results
4	Depresses the flashing DN associated with the originating agent.	The terminating agent does not want the call transferred, or the user does not want to transfer the call, but would rather confer with the first leg (caller) once more.
5	Presses the flashing FXR key.	The user is reconnected to the second leg, but does not lose the connection to the first leg.

Canceling FXR

"Actions when a call is ringing on user set" (page 335) describes the actions that take place once the FXR user has a call ringing on the user set.

Actions when a call is ringing on user set

	User Action	Results
1	Presses the flashing DN key or goes off-hook.	The user answers the call and the DN's LCD turns on establishing the first leg of the call. The user is now involved in a two-port call. The user verifies the caller wants to be transferred to a certain party.
2	Presses the release key.	The caller does not want to be transferred. The two-party call releases.
	Presses the FXR key.	The second leg of the call starts. The lamp associated with the FXR key goes solid. The DN lamp associated with the originating agent begins to flash and is on HOLD.
3	Presses the release key to stop FXR feature followed by the flashing DN key associated with the originating agent.	The user pressed the FXR key by mistake, pressed the wrong DSS/BLF key, or a mistake is made dialing digits and the user wishes to reconnect with the originating agent on the first leg of the call.
4	Presses the FXR key a second time.	The FXR key is depressed a second time to transfer the call. At this point, nothing can be done to stop the transfer. The FXR lamp is extinguished as well as the DN lamp associated with the first leg.

Hardware requirements

Fast Transfer for Digital Sets has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Fast Transfer for Digital Sets:

- The FXR feature is restricted to EBS, MBS, and IVD sets and is not compatible with 500/2500 sets.
- The FXR feature does not have conferencing capability.
- The 3WC, CXR, and CONF6 features and the FXR feature are mutually exclusive, although they can be assigned to the same set. All feature

restrictions and limitations that occur with the existing 3WC and CXR features apply to the FXR feature.

- All restrictions and limitations that apply to the DSS/BLF, MBSCAMP, and Recall features also apply when used in conjunction with the FXR feature to transfer a call.
- FXR is a supported feature of Feature Key Templates, but is only on Meridian Business Sets.
- The originator of an incoming trunk to a station using FXR to transfer the caller to a 911 facility can release from the call even though both parties terminate to a 911 agent. The FXR feature functions exactly as 3WC, except that the controller of the 3WC is not allowed to release, but the originator is allowed to release. To prevent the ability of the originator to release, the incoming trunk to the station with FXR should be made over a trunk type of OP or ES when transferring. An incoming trunk of type OP or ES transfers using FXR to an outgoing trunk of type OP and the originator is not allowed to release. However, it cannot be transferred using FXR to an outgoing trunk of type ES.

Interactions

The FXR feature has the same feature interactions as the existing 3WC and CXR features. The following table shows a list of the most commonly used feature interactions.

FXR interactions

Feature	Interaction
Call Forward	If the terminator of the second leg of a FXR call has CFU, the call forwards as in normal CFU operations.
Call Hold	A held party cannot initiate a FXR call.
Call Park (PRK)	The PRK retrieve access code is dialed as the second leg of a FXR call followed by the DN of the call to be retrieved.
Call Pickup (CPU)	A CPU member can pickup a call which is the second leg of a FXR call. A CPU member can pickup a call as the second leg of a FXR call by pressing the FXR key to place the originator on hold and then pressing the CPU key to pickup the ringing member followed by the FXR key to transfer the originator.
Multiple Appearance Directory Number (MADN)	Any member of a FXR call can be a MADN member, Multiple Call Arrangement (MCA) or Single Call Arrangement (SCA).
Inspect	When the INSPECT feature is active on the business set, the user is able to verify the FXR feature by pressing the Inspect key and then the FXR key. When the INSPECT feature is assigned to a set with a display, the feature name datafill for the FXR feature displays on the top line. This feature name is "Fast Transfer".

The FXR feature combined with DSS/BLF, or MBSCAMP features provides an enhanced functionality to the business set. However, they can be used independently. When using the DSS/BLF key to set up the second leg of the call, all feature interactions that are currently defined with respect to the terminating agent are valid.

When this feature interacts with the MBSCAMP feature, all feature interactions remain unchanged.

The Blind Transfer Recall functionality remains unchanged and acts as it does with the 3WC or CXR feature.

When a call transfers using the FXR feature, the caller's and destination's business sets show the same reason display as a call transfer through the regular 3WC or CXR features.

The FXR feature is supported by feature groups. If a business set belongs to a feature group, the option of the specific activity must be assigned to the feature group in order to enable the assignment of that activity on a key on the set. Attempts to assign the key, using Service Orders, are denied for business sets belonging to a feature group which does not have the option assigned.

The FXR feature currently interacts with B911. Once a call is made to a 911 operator, the operator has total control of that call. This means that the originator of the call cannot release the 911 operator, nor can the originator put the 911 operator on hold. The user of the FXR feature is not prevented from dialing the 911 operator. However, once connected to the operator, the call is in the hands of the operator. In effect, this means that the FXR controller cannot flip back to the first leg, nor can the controller transfer the call. This call can only be terminated by the 911 operator.

This feature provides the functionality to setup call supervision so that the originator on the first leg of the call cannot release.

Note: The first leg of the call can still be released by the original caller if call supervision is not setup.

Datafill

FXR is added to the valid range of features which can be datafilled on an EBS, MBS, or an Integrated Voice Data (IVD) set feature key in table KSETFEAT.

FXR is added to the valid range of feature options which can be datafilled on a MBS feature group in table FTRGOPTS.

Table OPTOPT now includes the FXR option. The FXR option includes a list of options with which it is incompatible. The incompatible options are the same as the options that are incompatible with 3WC.

Table LCCOPT now includes the FXR option.

Service Orders

The FXR key is a feature assigned to feature keys on an EBS, MBS, or an IVD set. This is done when the line is initially set up using the NEW command. It can also be added, changed, and deleted from an existing business set using the Add Option (ADO), Changed Feature (CHF), and Delete Option (DEO) commands in SERVORD. The FXR key is deleted from a line when the line is removed using the OUT command.

The FXR option on a line can be viewed using the QLEN or QDN command.

Operational Measurements

The same Operational Measurements (OM) used for 3WC are used for FXR. The following OMs in group TWCIBN are pegged: TWCATT, TWCATT2, TWCFAIL, TWCOVFL, CXFRATT, CFXRATT2, and CXFRFAIL.

Logs

Fast Transfer for Digital Sets does not affect logs.

User interface

Fast Transfer for Digital Sets does not change the user interface.

Billing

AMA or SMDR Billing is the same as with the existing 3WC and CXR feature.

- A station is billed for whatever leg it originated the FXR.
- Once the call transfers, the originator is billed for those legs that were originated. Essentially, the user is charged as if the originator originated the transferred call, rather than just transferred it.

AD7664 - MAGISTRAND SS7 Wideband Feature Robustification

Description

This feature corrects two wideband robustness problems residing in the DMS100 common (CCM) layer. The first correction stops TRAPS from occurring when a call attempt is out of the fixed range of a fixed wideband trunk group. The second correction stops non-contiguous calls from TRAPing when an error condition occurs.

With some slight code modifications, the rejected wideband call follows the narrowband call treatment path if rejected. This enhances the robustness by blocking erroneous wideband calls and treating them accordingly.

Message protocols

Although MAGISTRAND only deals with Signaling System #7 (SS7) wideband messaging protocols, this feature also interacts with other types of wideband calls.

Hardware requirements

Wideband calls require an ECORE with ENET configuration and a Digital Trunk Controller (DTC) equipped with a time switch card (NTAX78AA). Additionally, the DCTAX78 option must be datafilled in the OPTCARD field of table LTCINV.

Limitations and restrictions

This feature only interacts with SS7 wideband initiated calls.

Interactions

MAGISTRAND SS7 Wideband Feature Robustification has no functionality interactions.

Datafill

MAGISTRAND SS7 Wideband Feature Robustification does not affect data schema tables or office parameters.

Service Orders

MAGISTRAND SS7 Wideband Feature Robustification does not affect SERVORD.

Operational Measurements

MAGISTRAND SS7 Wideband Feature Robustification does not affect Operational Measurements.

Logs

MAGISTRAND SS7 Wideband Feature Robustification does not affect logs.

User interface

MAGISTRAND SS7 Wideband Feature Robustification does not change the user interface.

Billing

MAGISTRAND SS7 Wideband Feature Robustification does not affect billing.

AD7674 - Auto Recovery DLMs/IPEs

Description

The Auto Recovery DLM/IPE feature implements the conversion of the DLM and IPE peripherals to use the System Recovery Controller (SRC) to coordinate automatic recovery activities.

The SRC is software that acts as a high-level intelligence to coordinate the work and optimize the system resources necessary for automatic recovery following system restarts and degradations.

The most visible functionality gained from this feature is the ability to automatically broadcast-load groups of DLM/IPE peripherals. Before this feature, broadcast-loading was only possible by use of manual commands.

A DLM node consists of two units, while the IPE node consists only of a single unit (the IPE node itself). Therefore, the IPE interacts with the SRC and its utilities as a node, while recovery for the DLM occurs for the entire DLM node and the two individual units.

DLM and IPE units are grouped with other DLM/IPE units for broadcast-loading by the following criteria:

- load-file name
- C-side Extended Peripheral Module (XPM) node type
 - Remote Cluster Controller (RCC), RCC2
 - Line Group Controller (LGC), LGCI, Line Trunk Controller (LTC), and LTCI

The system maintains these static groups automatically over time as datafill changes. The SRC builds dynamic groups (subgroups) of these static groups as needed during recovery activities.

As an example of static grouping, the system puts two DLMs or IPEs that have the same load-file name, but subtend different C-side XPM node types into different groups.

Hardware requirements

Auto Recovery DLMs/IPEs has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Auto Recovery DLMs/IPEs:

- The system loads DLM/IPE units that cannot be grouped singly with other DLM/IPE units for broadcast-loading.
- DLMs and IPEs cannot be grouped together for a broadcast-load.

For automatic broadcast-loading, both the DLM and IPE peripherals must have valid load-file names datafilled for them in the following tables:

- DLMINV or IPEINV, respectively
- PMLOADS

DLM/IPEs can only be broadcast-loaded with other DLM/IPEs if they subtend the same C-side XPM node type. There are two types of C-side XPMs applicable to this feature: the RCC family and the LGC/LTC family.

Interactions

The SRC coordinates the broadcast-loading of each member of the group. It also monitors and controls the number of concurrent PM loading tasks.

Manual intervention through the MAP terminal can override any recovery activity. Only the ABTK and BSY (with FORCE option) commands permit manual intervention with system recovery activities. When used, the user is notified and prompted to continue.

Datafill

Auto Recovery DLMs/IPEs does not affect data schema tables or office parameters.

Service Orders

Auto Recovery DLMs/IPEs does not affect SERVORD.

Operational Measurements

Auto Recovery DLMs/IPEs does not affect Operational Measurements.

Logs

Auto Recovery DLMs/IPEs does not affect logs.

User interface

Accessing the main directory

To access the top level Peripheral Module (PM) directory, the user enters the following command:

MAPCI;MTC;PM

Accessing directories for specific peripherals

To access the directory for the specific DLM or IPE directory, the user enters the following appropriate command:

- **MAPCI;MTC;PM;POST DLM ALL**
- **MAPCI;MTC;PM;POST IPE ALL**

At this point, either DLMDIR or IPEDIR is accessed, depending on which peripherals are posted. In addition, NPMDIR is also accessed.

A system-recovery progress indicator appears where regular maintenance messages appear for a posted PM. The text that displays on the MAP workstation is System Recovery. This implies that the posted PM is under control of some SRC-related activity. Specifically, this indicates that the peripheral is awaiting other group members to initiate a load request. A system-busy (SYSB) DLM may be under the control of the SRC when this particular progress indicator is not displayed.

Return to CI

To return to the CI level, the user enters the following command:

`QUIT MAPCI`

Command description

The POST command at the PM level of the MAP allows a PM or a set of PMs to be selected.

The ABTK command provides the user with the ability to abort any maintenance activity on a peripheral unit. If any unit of the peripheral posted on the MAP terminal is involved in system recovery, the system notifies and prompts the user to continue. The prompt allows the user to stop the abort attempt after noting that system recovery is in progress.

The busy (BSY) command allows the user to place a peripheral, which is posted on the MAP workstation, in the MANB state. Without the FORCE option, any system-recovery maintenance activities running on the peripheral are executed (that is, no state change occurs). The FORCE option aborts system-recovery maintenance activities and changes the state of the peripheral to MANB.

The activity can be on either the entire node or one or both of the units, in the case of the DLM.

For both the ABTK and BSY (with FORCE option) commands, the actual system action to interrupt the recovery activity is executed only after the user is prompted and chooses to proceed.

Billing

Auto Recovery DLMs/IPES does not affect billing.

AD8418 - Attendant Console End-to-End Signaling over PRI**Description**

This feature allows an Attendant Console (AC) to output Dual-tone Multifrequency (DTMF) tones through a DTMF sender across a Primary Rate Interface (PRI) trunk. This feature also enhances the Attendant Console End-to-End Signaling (ACEES) functionality so that correct supervision between the DTMF sender and PRI trunk occurs.

Hardware requirements


Attendant Console End-to-End Signaling over PRI has no hardware requirements.


Limitations and restrictions

The following limitations and restrictions apply to Attendant Console End-to-End Signaling over PRI:

- Voice Mail System (VMS) on network side, AC on Meridian SL-100
- VMS on Meridian SL-100, AC on network side
- AC on Meridian SL-100, VMS on same node through looped back PRI trunks
- This feature does not support any DMS-100 configurations.

ACEES-PRI feature support

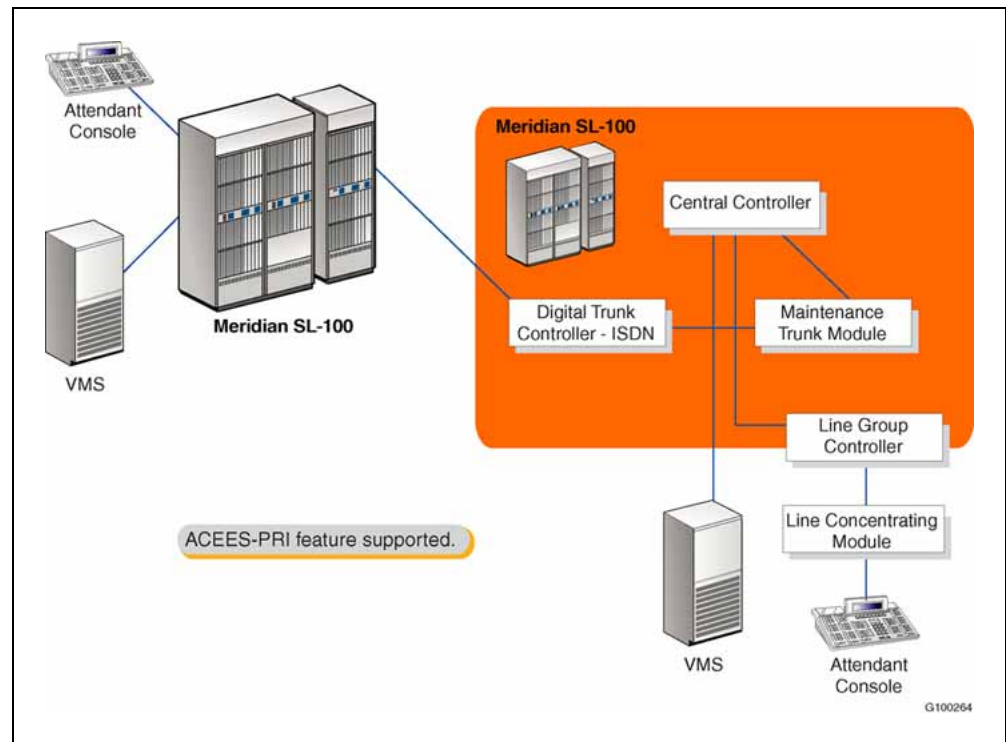

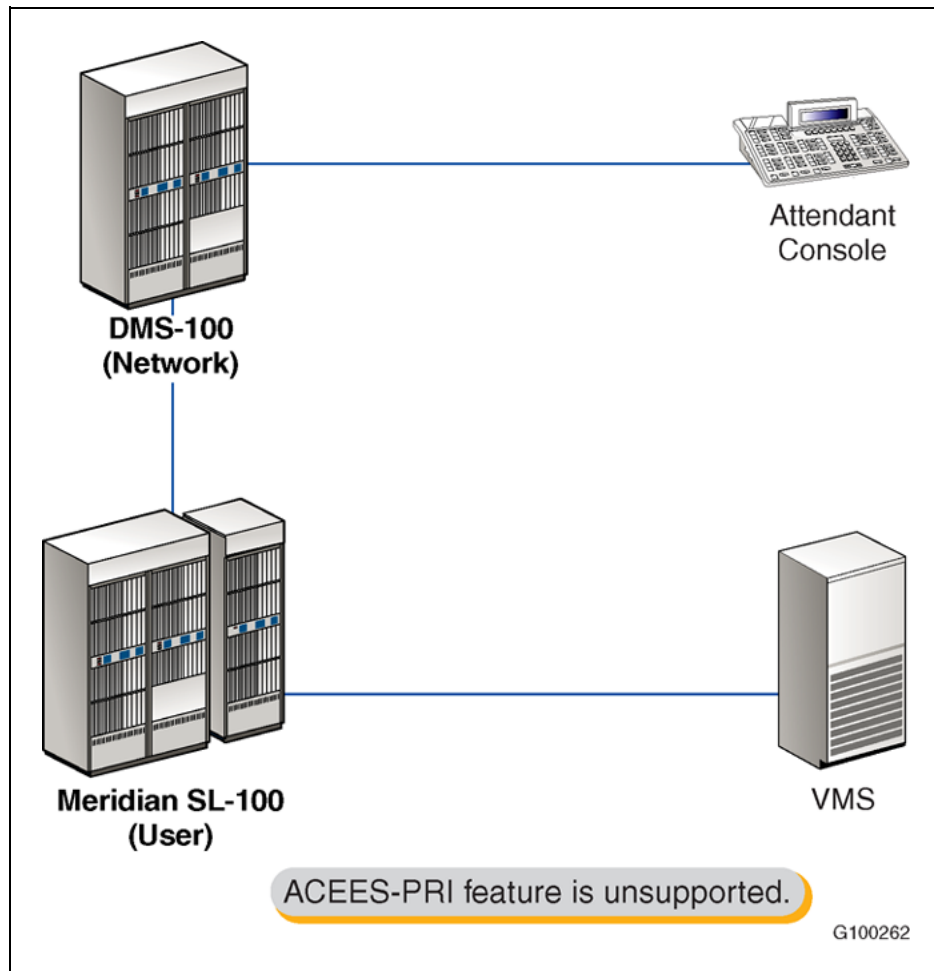ACEES-PRI feature unsupported

Note: This feature only supports Nortel North America (NTNA) PRI variant.

Interactions

Attendant Console End-to-End Signaling over PRI has no functionality interactions.

Datafill

Attendant Console End-to-End Signaling over PRI does not affect data schema tables or office parameters.

Service Orders

Attendant Console End-to-End Signaling over PRI does not affect SERVORD.

Operational Measurements

Attendant Console End-to-End Signaling over PRI does not affect Operational Measurements.

Logs

Attendant Console End-to-End Signaling over PRI does not affect logs.

User interface

Attendant Console End-to-End Signaling over PRI does not change the user interface.

Billing

Attendant Console End-to-End Signaling over PRI does not affect billing.

AD8419 - Secure Set Feature Support for Meridian SL-100**Description**

This feature activates the Secure Set Option (SSO) for the M5009S secure set using the following layers:

- Meridian Stored Logic (MSL)
- DMS-100 Common (CCM)
- Canadian-North American (CNA)
- Extended Peripheral Module (XPM)

The MSL layer relies on software support from the CCM, CNA, and XPM layers to add the SSO feature as an option to an M5009S and M2616S secure set in tables KSETINV and IVDINV respectively.

The CCM layer contains particular type definitions, constants, and initialization codes which are needed for the SSO to function properly with respect to the M5009S and the M2616S secure phone sets.

The CNA layer provides the COPYSET command through SERVORD to copy an array of options of a given phone set to a group of sets that should have the same set of options.

The XPM layer uses the SSO sent from the Computing Module (CM) to differentiate a secure set from a non-secure set. The secure set function uses a local ringer to generate a warble tone that notifies the user of an incoming call terminating on any other Directory Number (DN). A buzzer is used to notify the user of a non-secure set.

Additionally, this feature provides SERVORD functionality for the SSO. The SSO is assigned to the M5009S on a per set basis using the first DN key on the phone set.

Hardware requirements

This feature uses M5009S and M2016S secure sets.

Limitations and restrictions

The secure and non-secure sets should not be mixed within the Multiple Appearance Directory Number (MADN) group. If this occurs, a functional difference in feature notification with respect to the buzz tone could occur on the non-secure M5009 sets within a particular MADN group if the incoming call is assigned to a secure DN.

Hence, the MADN feature would be used in conjunction with the SSO feature only in the event all phone sets of the MADN group are secure sets.

There is no audible notification for Query Busy Station (QBS), Call Back Queueing (CBQ), Call Waiting, or Group Intercom on a secure set. The only indication for these features and options is the flashing lamp notification on a secure set.

Interactions

The SSO can be added to a non-secure M5009 phone set, therefore make sure to add the SSO to the correct phone set.

Datafill

The SSO is added to tables KSETINV and IVDINV as an option. The tables sizes are not affected.

Service Orders

This feature allows the current SERVORD commands, ADO, DEO, and COPYSET, to manipulate the SSO. However, since the M2616S is an IVD set, the copyset command will not work with it.

Operational Measurements

Secure Set Feature Support for Meridian SL-100 does not affect Operational Measurements.

Logs

Secure Set Feature Support for Meridian SL-100 does not affect logs.

User interface

Secure Set Feature Support for Meridian SL-100 does not change the user interface.

Billing

Secure Set Feature Support for Meridian SL-100 does not affect billing.

AD8420 - Software Activation of M2008 Handsfree

Description

This feature allows handsfree to be enabled or disabled on physical key 7 on the new M2008HF sets using the CHF command in SERVORD. Other features can be assigned to key 7 as long as handsfree is not set to "Y" in SERVORD. The M2008HF sets are shipped from the factory with the handsfree switch set to enabled. Once the customer upgrades to MSL06 or later, handsfree becomes software controlled for the M2008HF sets.

Hardware requirements

The Product Engineering Code (PEC) for the M2008HF is NT2K08GP. This feature supports M2008HF sets connected to a Digital Line Module (DLM) and Intelligent Peripheral Equipment (IPE).

Limitations and restrictions

The following limitations and restrictions apply to MSL06: Software Activation of M2008 Handsfree:

- Adding the handsfree field for all M2008s allows the original M2008 to be set to "Y" in SERVORD, even though the phone is incapable of handsfree. This is why the warning message is generated to ensure that the M2008 set is handsfree capable.
- Other features can be programmed on key 7 of the M2008HF as long as handsfree is set to "N".

Interactions

Software Activation of M2008 Handsfree has no functionality interactions.

Datafill

The handsfree field is added to the M2008 set type in KSETYPES. The default value for handsfree is set to N in the IVDINV table located in the MSL layer.

Service Orders

SERVORD allows the handsfree feature to be enabled or disabled on physical key 7 for M2008 set types. Perform this action through the CHF command instead of the ADO command, since handsfree is a feature, not an option. After handsfree is added to a M2008 set, a warning message displays whenever the handsfree field is set to Y. This reminds the user to ensure that the M2008 phone being assigned handsfree is a M2008HF set.

Operational Measurements

Software Activation of M2008 Handsfree does not affect Operational Measurements.

Logs

Software Activation of M2008 Handsfree does not affect logs.

User interface

Software Activation of M2008 Handsfree does not change the user interface.

Billing

Software Activation of M2008 Handsfree does not affect billing.

AD8422 - Multiple Station Message Waiting Indicators

Description

This feature provides the main functionality for the Multiple Station Message Waiting Indication (MSMWI) key set feature. MSMWI provides a visual indication of a message waiting for a primary terminal on one or more secondary terminals. A primary terminal must be datafilled with the Message Waiting (MWT) or Executive Message Waiting (EMW) feature. All attempts to remove MWT or EMW from the primary terminal are blocked, until all MSMWI assignments associated with that primary terminal are removed from the corresponding secondary terminals.

The visual indication on the secondary terminals consists of the lighting of the Liquid Crystal Display (LCD) lamp associated with the MSMWI key. When Message Waiting Indication is set for the primary terminal, the LCD lamp associated with the corresponding MSMWI key on the secondary terminal(s) is turned on (lit in a steady state). When Message Waiting Indication is turned off for the primary terminal, the LCD lamp associated with the corresponding MSMWI key on the secondary terminal is turned off.

Note: If the terminal datafilled with the MSMWI key set feature has an Light-Emitting Diode (LED), it is not used in conjunction with this feature.

The MSMWI key set feature only provides a visual indication of messages left against a primary terminal. Existing methods for accessing messages are unaffected by this feature, and can still be used. Additionally, the MSMWI key set feature behaves over restarts and activity switches similar to other message-related features.

Hardware requirements

The MSMWI key set feature functions with valid terminal types on the following peripheral modules:

- Digital Line Module (DLM), Remote DLM (RDLM)
- Intelligent Peripheral Equipment (IPE)
- Line Concentrating Module (LCM), Enhanced LCM (ELCM), Remote LCM (RLCM), LCME (ISDN)

Limitations and restrictions

The primary and secondary terminals associated with instances of the MSMWI key set feature must be of one of the valid terminal types. Refer to the table in the ["Datafill" \(page 348\)](#).

The MSMWI key set feature can only be associated with a primary terminal which has one of the following features assigned:

- Message Waiting (MWT)
- Executive Message Waiting (EMW)

Once MSMWI has been assigned to one or more secondary terminals, attempts to remove MWT or EMW from the primary terminal are blocked, until the corresponding secondary terminals have MSMWI removed. When such an attempt is made, an appropriate message is presented.

Interactions

The MSMWI key set feature relies on existing message waiting features (MWT and EMW) to provide the described visual indication. It does not interact directly with any Voice Mail System, but instead updates the MSMWI key lamps on secondary terminals when the corresponding indication is set on the primary terminal.

The MSMWI key set feature does not affect the existing functionality of the MWT or EMW features.

Datafill

Table name: KSETFEAT

Table KSETFEAT allows the MSMWI key set feature to be datafilled against the applicable terminal types. The valid terminal types compatible with MSMWI are shown in ["Terminal compatible with MSMWI" \(page 350\)](#).

Terminal compatible with MSMWI

Terminal description	Terminal type
Proprietary Business Sets	PSET;PSET with display.
M2000 Digital Telephones (Digital IVD Sets)	M2009; M2018; M2112; M2317.
Meridian Modular Telephones (Digital)	M2006; M2008; M2016; M2016S; M2216; M2616.
Meridian Business Sets	M5008; M5009; M5009S; M5112; M5208; M5209; M5212; M5216; M5312; M5316.

Note: The MSMWI key set feature is only assigned through SERVORD.

["KSETFEAT tuple with MSMWI example" \(page 351\)](#) shows an example of KSETFEAT tuple with MSMWI.

KSETFEAT tuple with MSMWI example

```

CI:
>table ksetfeat; format pack
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: KSETFEAT
<line length>:      76 columns can be output per line.
<pack mode>:       Pack mode is ON.
<indent column>:    Indented column of output is column 1.
<first column>:     The first column of output is column 1.
>pos lcml 00 1 08 31 5 msmwi
LCM0 00 0 08 31 5 MSMWI  MSMWI  IPE1 01 0 08 14 4
>

```

"Breakdown of data of KSETFEAT tuple with MSMWI" (page 351) breaks down the data in the previous tuple.

Breakdown of data of KSETFEAT tuple with MSMWI

Field Name	Description	Value
FEATKEY	LEN of secondary terminal	LCM0 00 0 08 31
	Key on secondary terminal	5 (see Note a)
	Key set feature	MSMWI
FEATURE KVAR	Key set feature	MSMWI
	LEN of primary terminal	IPE 01 0 08 14
	Key of primary terminal	4 (see Note b)
Note: a. This is the key on the secondary terminal to which MSMWI is assigned. b. This key on the primary terminal must have either MWT or EMW assigned.		

Table name: MSMWI

Table MSMWI is created in the MSL layer to maintain a direct mapping between the primary terminals and the associated secondary terminals. The table is a read only table and no modifications can be made directly to it at the CI prompt. Any modifications to this table are made directly as table KSETFEAT is updated.

Note: The MSMWI key set feature is only to be assigned through SERVORD.

"MSMWI tuple example" (page 352) shows a MSMWI tuple example.

MSMWI tuple example

```

CI:
>table msmwi; format pack
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: KSETFEAT
<line length<: 76 columns can be output per line.
<pack mode>: Pack mode is ON.
<indent column>: Indented lines will begin in column 1.
<first column>: The first column of output is column 1.
>pos ipe1 01 0 08 14 4
IPE1 01 0 08 14 4 LCM0 00 0 08 31 5
>

```

"Breakdown of data of MSMWI tuple" (page 352) breaks down the data in the previous tuple.

Breakdown of data of MSMWI tuple

Field Name	Description	Value
MSMWIKEY	LEN of primary terminal	IPE1 01 0 08 14
	Key on primary terminal	4 (see Note a)
	LEN of secondary terminal	LCM0 00 0 08 31
	Key on secondary terminal	5 (see Note b)

Note:

- a. This key on the primary terminal must have either MWT or EMW assigned.
- b. This is the key on the secondary terminal to which MSMWI is assigned.

Service Orders

The MSMWI line options are introduced to allow key set feature MSMWI to be datafilled through SERVORD.

The MSMWI key set feature is datafilled and manipulated through the use of the following SERVORD commands:

- NEW
- ADO
- DEO
- CHF
- COPYSET (in conjunction with the SETMODEL option)

The NEW command establishes service for an unassigned set. When establishing service with the NEW command, options and features can be assigned to the set.

The ADO command adds options and features to an existing set. The MSMWI feature can be assigned to a set through the use of the ADO command.

The DEO command deletes options and features from a set. The MSMWI feature can be deleted from a set through the use of the DEO command.

The CHF command changes feature data for a feature previously assigned to a set. The MSMWI feature can be changed through the use of the CHF command.

The COPYSET command, used in conjunction with the SETMODEL option, establishes service for up to 100 new sets using an existing set as a model. The MSMWI feature, if assigned to a key on a set with the SETMODEL option, can be assigned through the COPYSET command to the new sets.

Note: The COPYSET command requires unassigned or unused DN or LEN combinations for the new sets which it datafills.

Operational Measurements

Multiple Station Message Waiting Indicators does not affect Operational Measurements.

Logs

Multiple Station Message Waiting Indicators does not affect logs.

User interface

Multiple Station Message Waiting Indicators does not change the user interface.

Billing

Multiple Station Message Waiting Indicators does not affect billing.

AD8425 - Meridian SL-100 Changes to Support DBCP ANI Validation

Description

Database Control Point (DBCP) Automatic Number Identification (ANI) validation provides Network Services Software (NSS) the capability of remotely validating an ANI number by providing a Transaction Capabilities Application Part (TCAP) message interface to table ANIDATA.

This feature provides the flexibility of choosing an ANI validation method on a dial plan basis. The following validation methods are available:

- inswitch - ANIs are screened using a locally provided table of ANI information.
- remote - ANIs are screened by querying a remote ANI information table. This is accomplished by using the DBCP functions in conjunction with TCAP messaging, which is a standardized part of the Signaling System #7 (SS7) protocol.
- both - ANI screening is performed locally, and if the ANI is not found within the locally available ANI information table, the screening procedure queries the remote table.

This feature further develops the ANI validation application on the DBCP to process ANI validation TCAP queries and send responses back to the originating node, as well as enhances the TRAnslation VERification (TRAVER) utility to handle remote ANI validation.

Hardware requirements

Access to DBCP applications is through an SS7 network using TCAP signaling. As such, the following hardware is required:

- SuperNode cabinet system or SuperNode SE (SNSE) system
- Link Peripheral Processor (LPP) or single shelf LPP on SNSE

TCAP interface

To further expand this feature, OEM interfacing capabilities allows for off-loading database administration to third-party equipment. A destination digits field is added to the query and response messages. Within the query message, this field is loaded with the dialed digits of the incoming FGD call, and is 18 digits in length. Upon return, the destination digits field of the response message replaces the original dialed digits, and the call proceeds to translation on the newly replaced dialed digits. The office variable `NSS_DBCP_ANI_REPLACE_DR` which is either Yes or No, controls this function. If it is datafilled as Yes, the dialed digits are replaced with the digits in the destination digits field of the TCAP response message. If it is datafilled as No, the destination digits field of the TCAP response message are ignored and the call translates on the original dialed digits.

It should be noted that this feature handles the destination digits field at the DBCP by taking this field from the query message and immediately reinserting it in the response message. The end result of this is that if the DBCP is a DMS controlled by this feature, sending out the dialed digits in this field within the query message results in having these same digits sent back in the response message, making the status of the office variable

NSS_DBCP_ANI_REPLACE_DR irrelevant. It is only when an external Service Control Point (SCP) is handling the DBCP functions of ANIDATA that this office variable becomes relevant.

Note: Any third party application wishing to provide ANIDATA services in place of the DMS product must ensure to duplicate the ANIDATA functionality exactly as presented in this document, or risk causing serious network breakdown.

Limitations and restrictions

MSL Changes to Support DBCP ANI Validation has no limitations or restrictions.

Interactions

This feature operates with any Network Services System (NSS) based Meridian SL-100 system.

This feature is a direct extension of the functionality provided in feature AD2857, NSSFGD ANI Screening Database. It is designed as a member of the NSS TCAP application suite, and has a mild interaction with features AD2856, NSS Travel Card Number and AD3466, NSS Replace Dialed Digits. It does not, however, have any impact on these features, nor do they have any impact on this feature.

Additionally, this feature requires the services provided by features AD2857, AD2471, NSS Offnet Access Dialing Plan Driver, and AD2472, NSS DBCP Base.

Datafill

Table control for table DIALPLAN has been changed to accommodate DBCP ANI validation. ["First layer fields for table DIALPLAN"](#) (page 355) shows the first layer fields for table DIALPLAN.

First layer fields for table DIALPLAN

Field name	Range of values	Status	Default value
DIALPLAN	16-char vector	Unchanged	N/A
PLANTYPE	NONE, HOTLINE, SENDERIZ, CUTTHRU	Unchanged	N/A
OPTIONS	CONDHL, TIMEOUT, \$	Unchanged	\$

The table control changes involve modifications to subfields of field PLANTYPE for the specific plan types of NONE and CUTTHRU. "[Subfield modifications for a PLANTYPE of NONE](#)" (page 356) shows the subfield modifications for a PLANTYPE of NONE.

Subfield modifications for a PLANTYPE of NONE

Field name	Range of values	Status	Default value
ANIVALID	INSWITCH, REMOTE, BOTH	New	INSWITCH

The subfield modifications for a PLANTYPE of CUTTHRU are shown in "[Subfield modifications for a PLANTYPE of CUTTHRU](#)" (page 356).

Subfield modifications for a PLANTYPE of CUTTHRU

Field name	Range of values	Status	Default value
CUTHRUTY	DESTONLY, AUTHONLY, TCNONLY, AUTHORTC	Unchanged	N/A
ANIVALID	INSWITCH, REMOTE, BOTH	New	INSWITCH

The ANIVALID subfield specifies whether ANI validation is done locally without the use of the DBCP application (INSWITCH), remotely through the DBCP application (REMOTE), or first locally, and if that fails, then remotely (BOTH).

In both of the above cases (PLANTYPE = NONE and PLANTYPE = CUTTHRU), the ANIVALID subfield has two subfields, CLG_ADDR and CLD_ADDR, which represent calling address and called address, respectively. The expected values for these two fields are 10-digit numbers that identify the node requesting remote DBCP ANI validation and the node processing the remote validation request. "[CLG_ADDR and CLD_ADDR subfield expected values](#)" (page 356) illustrates this arrangement.

CLG_ADDR and CLD_ADDR subfield expected values

Field name	Range of values	Status	Default value
CLD_ADDR	Vector 0 to 9 of digit	New	N/A
CLG_ADDR	Vector 0 to 9 of digit	New	N/A

Service Orders

MSL Changes to Support DBCP ANI Validation does not affect SERVORD.

Operational Measurements

This feature uses the standard Operational Measurements (OMs) registers available through OM group NSSTCAP. This feature is registered as a key application called NSSANI and shows the command OMSHOW NSSTCAP.

The OM registers are currently defined as follows:

- NTKWPROB - network problem
- NORESRCE - no resource
- QRYPROCD - query processed
- TIMEREXP - timer expired
- QERYSENT - query sent
- INVDIGIT - invalid digits
- TCNFREEC - TCN free call (not applicable)

Logs

This feature introduces log NSS 108, that handles specific ANI validation database lookup failures for both originating and terminating DBCP nodes. It also introduces log NSS 109, which is a catch-all log designed to alert users of configuration errors within the three NSS TCAP applications: remote ANI validation, remote TCN validation, and replace dialed digits. In addition, this feature uses several logs already available within the NSS software.

All logs contain the date, time, the called address of the message, ANI digits, and application name.

NSS 102 - query protocol problem

This log is generated on the originating node when it receives a reject response from the DBCP. This response notifies the originator that there is a problem in the query protocol.

Log NSS 102 contains the following fields:

- APPLICATION - Identifies the application that is sending the non-standard protocol query (NSS_ANI in this case).
- CALLED ADDRESS - 10 digit field that identifies the DBCP node that rejects the query.
- PROBLEM TYPE - Indicates the protocol problem. This can be one of the following: NIL_PROBLEM, GENERAL_PROBLEM, INVOKE_PROBLEM, RESULT_PROBLEM, ERROR_PROBLEM, TRANSACT_PROBLEM, MAX_PROBLEM_FAMILY, or UNKNOWN_PROBLEM.
- PROBLEM_CODE - Indicates the protocol problem. It is a generic Signaling Connection Control Part (SCCP)/TCAP problem code.

NSS 104 - routing problem

This log is generated on either the originating or terminating DBCP nodes when table MSGRTE is not datafilled properly, or no route is defined at all for the calling or called addresses of the DBCP message.

Log NSS 104 contains the following fields:

- APPLICATION - identifies the application that is encountering the problem (NSS_ANI in this case).
- CALLED ADDRESS - 10-digit field that identifies the entry not correctly datafilled in table MSGRTE.
- REASON - Problem code for the MSGRTE error. There are two types of reasons:
 - MSGRTE_NOT_DATAFILLED, which means that the CALLED_ADDRESS is not datafilled in table MSGRTE, or
 - INVALID_MSGRTE, which means that the routing information provided in the MSGRTE tuple is not correct.

Note: When a tuple in MSGRTE is datafilled as PRA and the PRI D-channel is not in-service, the log reason indicates MSGRTE_NOT_DATAFILLED. When the PRI D-channel is in-service, the log reason indicates INVALID_MSGRTE.

NSS 105 - DBCP response protocol problem

This log is generated on the DBCP node when it receives a unidirectional message back from the originating node. This response notifies the terminating node that there is a problem in the response protocol. This occurs when the originating node cannot decode the response it receives from the DBCP.

Log NSS 105 contains the following fields:

- APPLICATION - identifies the application where the response protocol error occurred (NSS_ANI in this case).
- CALLED ADDRESS - 10-digit field that identifies the Service Switching Point (SSP) node that could not decode the response.
- PROBLEM TYPE - indicates the protocol problem. This can be one of the following entries: NIL_PROBLEM, GENERAL_PROBLEM, INVOKE_PROBLEM, RESULT_PROBLEM, ERROR_PROBLEM, TRANSACT_PROBLEM, MAX_PROBLEM_FAMILY, or UNKNOWN_PROBLEM.
- PROBLEM CODE - indicates the protocol problem. It is a generic SCCP/TCAP problem code.

NSS 106 - DBCP invalid data in response message

This log is generated on the DBCP node when it receives a unidirectional message back from the originating node. This response notifies the terminating node that there was a protocol error in the DBCP response. Unlike logs NSS 102, 104, and 105, the status of NSS 106 is changed.

Log NSS 106 contains the following fields:

- APPLICATION - identifies the application that is sending the non-standard protocol query (NSS_ANI in this case).
- CALLED ADDRESS - 10-digit field that identifies the DBCP node that rejects the query.
- INVALID FIELD - indicates the protocol problem. This can be one of the following: account code required (ACR), Network Class of Service (NCOS), network identification (NETID), network customer group ID (NETCGRPID), replace dialed digit (REPLDIGIT), ANI suppression field (SUPPRESS)*, international network class of service (INTLNCOS)*, international network ID (INTLNTID)*, or international network customer group ID (INTLNCID)*.

Note: *Indicates new field for this log.

- INVALID DATA - contains the corrupted value.

NSS 108 - ANI invalid

This is a new log associated with this feature. It is generated at the originating node when a return error message is received back from the DBCP node. The return error message is sent when the ANI is not found in the ANIDATA DBCP database, or the ANI is datafilled as NOT_ALLOWED in the remote database.

Log NSS 108 is generated at the terminating node when a query message from the originating node results in the ANI not being found or datafilled as NOT_ALLOWED in the ANIDATA DBCP database.

Log NSS 106 contains the following fields:

- CALLED ADDRESS - For the originating node, this field identifies the SSP node where ANI lookup failure occurred. For the terminating node, this field identifies the SSP node requesting the failed ANI lookup.
- ANI DIGITS - the received ANI digits used to query the remote database.
- REASON - The specific reason that ANI lookup failure occurs can be one of the following reasons:
 - ANI_NOT_FOUND, which means that the ANI was either invalid or not datafilled in the ANIDATA DBCP database, or
 - ANI_NOT_ALLOWED, which means that the ANI was found, but it was datafilled as NOT_ALLOWED.

NSS 109 - NSS general problem

This is a new log associated with this feature. The purpose of this log is to alert users to problems with datafill and configuration without resorting to the use of SWERS. It is not specific to remote ANI validation, but is used by all the NSS TCAP applications. It is generated at either the originating or terminating node of a TCAP transaction depending on where the configuration error was detected.

Log NSS 109 contains the following fields:

- APPLICATION - identifies the application that is responsible for the generation of this log. Currently available applications are NSS_TCN, REPL_DIGS, and NSS_ANI.
- CALLING ADDRESS - the originating node of the TCAP transaction that caused this log to be produced.
- CALLED ADDRESS - the terminating node of the TCAP transaction that caused this log to be produced.
- REASON - the specific reason this log was produced. The following reasons could be presented:
 - C7GTTYPE_NOT_DATAFILLED, which means there is no entry in table C7GTTYPE for the specified application.
 - C7GTTYPE_DATA_INVALID, which means that the entry in table C7GTTYPE for the specified application is invalid.
 - MORE_EXT_BLOCKS_ALLOCATED, which means that so many transactions are being processed that the switch had to allocate more extension blocks to handle the load. This is not really an error, but simply an indication of a busy switch.
 - LOCAL_SUBSYSTEM_NOT_INSV, which means that the local subsystem for the specified application is not currently in-service (INSV) or in-service trouble (ISTB).

User interface**CI and MAP test command**

This feature provides a resident test tool that is executable from both the CI prompt and a MAP level. The command, NSSANIVR, sends out an ANI remote database query using the same protocol as a call processing remote database query to assist in debugging the remote ANI validation system.

The command format is as follows:

```
> NSSANIVR <Calling Address> <Called Address> <ANI digits>
[<Destination Digits (optional)>]
```

The format for this command when accessed from the SCCPLOC level of the MAP is as follows:

```
> TESTSS NSSANI <Calling Address> <Called Address> <ANI
digits> [<Destination Digits (optional)>]
```

The calling and called address fields are the 10-digit SCCP address that is normally datafilled in a tuple of table DIALPLAN. The actual SS7 Point Code is given by table MSGRTE, which uses the called address to map to a SS7 Point Code. The ANI digits are the three or 10 digit ANIs that are presented in an NSSFGD call and datafilled in table ANIDATA.

The optional destination digits field is for use with the third party destination digit replacement capabilities of this feature. If destination digits (dialed digits) are included in the NSSANIVR command, these digits are included in the outgoing ANI query message. If the result of the NSSANIVR command is a return result message (the ANI is in the remote ANI database, and is not datafilled as NOT_ALLOWED), the new destination digits contained in the message are displayed in the CI trace. Only the return result messages (ANI_RESPONSE, ANI_RESPONSE_ALLOW, and ANI_RESPONSE_IDDD) contain space for new destination digits; therefore for digit replacement to work, the ANI must be datafilled in table ANIDATA, and must not be set to NOT_ALLOWED.

Note: The value of the office variable NSS_DBCP_ANI_REPLACE_DR affects the results of the NSSANIVR command. If this office variable is set to N, no digit replacement occurs and the digits sent out in the query message echo in the response message. This office variable must be set to Y to allow third party digit replacement.

Office parameters

This feature defines three office parameters that are accessible within table OFCVAR. "Table OFCVAR parameters" (page 361) explains these parameters:

Table OFCVAR parameters

Office parameter	Description
NSS_DBCP_ANI_RESP_TIMEOUT	This parameter has a valid range of one to 10 seconds, with a default value of three. It controls the wait time for response messages after queries have been sent out.
NSS_DBCP_ANI_BLOCK_CALL	This parameter has a valid range of Y or N, with a default value of Y. It controls whether a call should be blocked or allowed to proceed when certain network problems occur.
NSS_DBCP_ANI_REPLACE_DR	This parameter has a valid range of Y or N, with a default value of N. It controls whether the destination digits register received from the response message replaces the dialed digits register used to translate the call.

TRAVER enhancements

The TRAVER CI command is enhanced to allow for checking translations on incoming NSSFGD calls that use ANI screening with a remote ANIDATA database.

Billing

MSL Changes to Support DBCP ANI Validation does not affect billing.

AD9343 - NPA FREECALL Expansion for NSS**Description**

This feature removes the restriction within tables ANIDATA and REPLDATA that the middle, or P, digit of the NPA must be either a 0 or 1. Valid NPAs are now in the range 200-999.

In addition, this feature provides a table that allows a user to specify an NPA, and alter its behavior by specifying the NPA maps to a 700-, 800-, or 900-type call.

Table FREECALL maps specified Numbering Plan Areas (NPAs) to 700, 800, or 900 billing characteristics. Once mapped, the specified NPAs assume the call billing characteristics of the 700-, 800-, or 900-type calls to which they are mapped.

At initial program load (IPL), tuples are datafilled in table FREECALL to provide 700, 800, and 900 billing characteristics to 400, 700, 800, and 900 NPAs. Specifically, the 400 and 800 NPAs are mapped to 800-type billing, the 700 NPA is mapped to 700-type billing, and the 900 NPA is mapped to 900-type billing.

"Table FREECALL datafill immediately after IPL example" (page 362) shows an example of table FREECALL datafill immediately after IPL.

Table FREECALL datafill immediately after IPL example

```
>table FREECALL

TABLE:  FREECALL
>lis all

TOP
NPA MAPTON00
-----
400  800
700  700
800  800
900  900
BOTTOM
```

Note: The 400 NPA is no longer hardcoded as an 800-type NPA within NSS. Instead, the mapping of 400 to an 800-type NPA implements as a default tuple within table FREECALL.

The table control for tables ANIDATA and REPLDATA is modified to support a wider range of NPAs than are currently available. Currently, the middle digit of an NPA must be a 0 or 1, resulting in a maximum of 160 datafillable NPAs. By removing this restriction, the maximum goes up to 800.

Table ANIDATA allows users to enter either three-, six-, or ten-digit ANIs. The outward appearance of the table control for this table is not changed, other than to allow for a full range of digits in the middle position of the NPA. Table REPLDATA expects a 10-digit string as a key, indicating a called-party number to be replaced. As with ANIDATA, the outward appearance of table REPLDATA is not changed, other than to allow a full range of digits in the middle position of the NPA.

A table on the DMS allows users to specify a set of NPAs to be treated as called-party billed calls. The name of this table is FREECALL. In addition to allowing a specific NPA to be treated as an 800 number call, NPAs can be mapped to 700- or 900-type calls.

Note: The FREECALL table does not perform digit replacement. Users who desire this functionality are directed to the Replace Dialed Digits feature of Network Services software.

In addition to modifying the billing behavior of the datafilled NPAs, this feature carries over any call-processing specific treatments of these NPAs by NSS, such as whether ANI validation is performed or not. In other words, within NSS, NPAs datafilled in table FREECALL take on every aspect of the N00-type NPA to which they are mapped.

Bellcore has designated 888 as a free call NPA, and similar plans are now being made for 886 and 887. In addition, NSS treats the 400 NPA as an 800 NPA, and it might be useful to designate 777 as a 700-type NPA, as well as designating 999 as a 900-type NPA.

Hardware requirements

NPA FREECALL Expansion for NSS has no hardware requirements.

Limitations and restrictions

The following limitation or restriction applies to NPA FREECALL Expansion for NSS:

- A limit of 32 possible tuples within table FREECALL has been set.

Interactions

NPA FREECALL Expansion for NSS has no functionality interactions.

Datafill

The three-part keys in tables REPLDATA and ANIDATA (the keys are identical) accommodate a full range of digits in the middle position of the NPA part of the key.

Table FREECALL allows for mapping of non-N00 NPAs to N00-type behavior with regard to billing and ANI validation.

Service Orders

NPA FREECALL Expansion for NSS does not affect SERVORD.

Operational Measurements

NPA FREECALL Expansion for NSS does not affect Operational Measurements.

Logs

NPA FREECALL Expansion for NSS does not affect logs.

User interface

There is a slight change in the way TRAVER performs. Incoming feature group D calls that would usually pass through a section of code that checks whether or not the NPA is 400, 700, 800, or 900, now pass through code that performs a table lookup that checks table FREECALL. This information is reflected in the TRAVER output of such a call. At the point where the lookup is performed, two lines are inserted in the traver output that indicate whether or not the call is an N00-type call. These two lines are in one of the following formats:

```
TABLE FREECALL  
TUPLE NOT FOUND
```

This is displayed if the NPA field in the destination digits of the incoming call is not datafilled in table FREECALL (if the NPA is a regular NPA and not set up to be an N00-type NPA).

One of the following is displayed if the NPA field in the destination digits of the incoming call is datafilled in table FREECALL as being mapped to one of the N00-type calls:

```
TABLE FREECALL  
NPA XXX maps to a 700-type number
```

..... or

```
TABLE FREECALL  
NPA XXX maps to a 800-type number
```


. or

TABLE FREECALL
NPA XXX maps to a 900-type number

Billing

Billing records for 800-type calls are produced for any NPAs datafilled in table FREECALL as mapping to an 800 behavior. Also, 700- and 900-type billing records are produced for NPAs datafilled in table FREECALL as mapping to 700 or 900 behavior.

AD9693 - CCM: Trunk Member Display

Description

This feature displays the name of the Common Language Location Identifier (CLLI) and circuit member number of the trunk to the user of a Meridian Business Set (MBS) or Integrated Voice and Data (IVD) set.

The TRKDISP feature is active and displays the CLLI and circuit member number of the trunk to which it is connected when the Trunk Member Display (TRKDISP) key is pressed. When the TRKDISP key is pressed a second time, the feature updates the set with the previous display and cancels the feature.

The SERVORD tool is used to datafill this feature. This feature is capable of displaying the trunk data from any trunk type.

Accompanying feature

This feature works in conjunction with feature AD9706, XPM: Trunk Member Display.

Hardware requirements

CCM: Trunk Member Display has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to CCM: Trunk Member Display:

- This feature cannot be assigned to any softkeys.
- This feature is not compatible with any CLASS sets or features.
- This feature does not apply to the Attendant Console.
- This feature is not compatible with Integrated Services Digital Network (ISDN) type sets.
- This feature and any Three-way Call (3WC) or Conference feature cannot be simultaneously active.

- The Display option cannot be deleted before the TRKDISP option.

Interactions

This feature interacts with the information that is displayed on the set, before the TRKDISP feature is activated.

Datafill

A new feature, TRKDISP, is introduced in table KSETFEAT.

Service Orders

TRKDISP is a new line option for this feature.

This feature is verified by using the following commands:

- QLEN
- QDN
- QLENWRK
- QDNWRK

Operational Measurements

CCM: Trunk Member Display does not affect Operational Measurements.

Logs

CCM: Trunk Member Display does not affect logs.

User interface

CCM: Trunk Member Display does not change the user interface.

Billing

CCM: Trunk Member Display does not affect billing.

AD9694 - Call Forward Indication**Description**

This feature provides users with 500/2500 set types an audible notification that their phone is still manually forwarded. After the tone is heard, the set receives dial tone. Because users may not know that their phone has been forwarded, calls can mistakenly be forwarded to another number while the user is at their desk.

The Call Forward Indication (CFIND) feature is datafilled using SERVORD. The service representative specifies the audible tone from table STN.

Hardware requirements

Call Forward Indication has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Call Forward Indication:

- Supports 500/2500 Integrated Business Network (IBN) sets and Residential (RES line class code) sets.
- Supports IBN sets that have the Call Forward Universal (CFU) or Call Forward Intragroup (CFI) options assigned to them.
- Supports CFW for RES sets.
- The set must be manually forwarded, before the Call Forward Indication feature is considered active.
- Does not support Automatic Lines (AUL), Call Forward Busy (CFB) and Call Forward Don't Answer (CFD).
- The tone ANSPD cannot be used for CFIND.

Interactions

Call Forward Indication has no functionality interactions. The implementation of this feature occurs before dial tone. Therefore, Message Waiting and other features which use stuttered dial tones are not affected.

Datafill

Table LCCOPT is modified by the use of an EXT file to allow the CFIND option to be datafilled to IBN and RES sets. Table OPTOPT is datafilled so that AUL, CFD and CFB are incompatible with CFIND.

Service Orders

Service Orders are modified so that the CFIND options can be datafilled. The service representative has the option of assigning the call forward indication method to be any tone currently datafilled in table STN.

The Query Line Equipment Number (QLEN) and the Query Directory Number (QDN) commands are modified so that when a 500/2500 set is queried by its Line Equipment Number (LEN), or Directory Number (DN), the CFIND option, along with the notification tone, is shown.

Operational Measurements

Call Forward Indication does not affect Operational Measurements.

Logs

Call Forward Indication does not affect logs.

User interface

Call Forward Indication does not change the user interface.

Billing

Call Forward Indication does not affect billing.

AD9695 - CCM: Automated Datafill for IPE Line Cards**Description**

This feature, along with feature AD9718, MSL: Automated Datafill and Resource Allocation for the IPE, allows the Meridian SL-100 to poll the Intelligent Peripheral Equipment (IPE) line card and dynamically datafill the line card information into table LNINV. This capability allows Meridian SL-100 users to make immediate upgrades of existing card types for the IPE without software intervention.

This automatic datafill procedure provides the following benefits:

- minimal software patches are needed
- accurate and up-to-date product inventory is provided on the user's switch
- support can accurately identify and resolve field problems
- minimizes human error

Currently, a feature activity must be opened for any new version of line card that must be datafilled in table LNINV for the IPE. If table LNINV is not updated with the new product code of the line card, the current software does not allow the activation of that product.

Automated datafill is a plug and play design. It allows automatic datafill of a line card's Product Engineering Code (PEC) in table LNINV and maps proper test and diagnostic procedures to the line card.

To accomplish this functionality, the automated datafill operation is concerned primarily with polling cards within the IPE, creating a table for compatible cards, and binding diagnostic routines for compatible cards. The new table containing the compatible cards is considered the kernel of this feature. Information taken from it provides the data needed to properly automate the process of datafilling the IPE's line cards.

Accompanying features

This feature works in conjunction with the following features:

- AD9718, MSL: Automated Datafill and Resource Allocation for the IPE.
- AD9724, IPE: Automated Datafill and Resource Allocation for the IPE.

Hardware requirements

CCM: Automated Datafill for IPE Line Cards supports the following hardware:

- 8D02, digital line card
- 8D03, analog line card
- 8D09, analog/message waiting line card
- 5D11, line side T1

Limitations and restrictions

The CCM: Automated Datafill for IPE Line Cards feature applies only to IPE.

Interactions

CCM: Automated Datafill for IPE Line Cards impacts system operations with table LNINV, line card maintenance, and diagnostics functions for the IPE.

Datafill

CCM: Automated Datafill for IPE Line Cards does not affect data schema tables or office parameters. New data schema is created by feature AD9718, MSL: Automated Datafill and Resource Allocation for the IPE.

Service Orders

CCM: Automated Datafill for IPE Line Cards does not affect SERVORD.

Operational Measurements

CCM: Automated Datafill for IPE Line Cards does not affect Operational Measurements.

Logs

CCM: Automated Datafill for IPE Line Cards does not affect Logs. New logs are created by feature AD9718, MSL: Automated Datafill and Resource Allocation for the IPE.

User interface

CCM: Automated Datafill for IPE Line Cards does not change the user interface.

Billing

CCM: Automated Datafill for IPE Line Cards does not affect billing.

AD9697 - CCM: NAS RLT Enhancements

Description

This feature decreases the number of trunking facilities required when the attendant services are consolidated at one node for two or more nodes in the network. This is accomplished by bridging the call at an Meridian SL-100 node where the call was routed to the centralized attendant.

This feature enhances Network Attendant Services Release Link Trunk (NAS RLT) by allowing a bridged call to recall the attendant once the call has been released.

The bridged call attendant call allows the NAS RLT call to be recalled to the centralized attendant in the event that the call is not answered by the far end.

The originator of a NAS RLT ends up at the centralized console. The attendant then activates NAS RLT. Upon attendant release of a successfully bridged call, a recall timer is set to expire on the originator. If the far end does not answer before the timer expires, the call recalls to the Attendant Console subgroup that bridged the call.

Accompanying feature

This feature works in conjunction with feature AD9714, MSL: NAS RLT Enhancements.

Hardware requirements

CCM: NAS RLT Enhancements requires the Meridian Services Attendant Console (MSAC), NT409BB.

Limitations and restrictions

CCM: NAS RLT Enhancements has no limitations or restrictions. Refer to features AD3285, NAS RLT IBN ISUP Trunk Interactions, AD3286, NAS RLT AC Special Function Key, and AD3287, NAS RLT Table Control and ISUP Messaging for additional limitations or restrictions on NAS RLT functionality.

Interactions

CCM: NAS RLT Enhancements has no functionality interactions. Refer to features AD3285, NAS RLT IBN ISUP Trunk Interactions, AD3286, NAS RLT AC Special Function Key, and AD3287, NAS RLT Table Control and ISUP Messaging for additional interactions on NAS RLT functionality.

Datafill

CCM: NAS RLT Enhancements does not affect data schema tables or office parameters.

Service Orders

CCM: NAS RLT Enhancements does not affect SERVORD.

Operational Measurements

CCM: NAS RLT Enhancements does not affect Operational Measurements.

Logs

CCM: NAS RLT Enhancements does not affect logs.

User interface

CCM: NAS RLT Enhancements does not change the user interface.

Billing

CCM: NAS RLT Enhancements does not affect billing.

AD9698 - CCM: CFB/CFD Per Key Destination**Description**

This feature allows the user to assign different forwarding Directory Numbers (DNs) to the keys specified in the KEYLIST of the Call Forward Busy/Call Forward Don't Answer (CFB/CFD) feature. This is accomplished by adding a new control type in the KEYLIST field. This feature supports Meridian Business Set (MBS), Integrated Voice and Data (IVD) sets, and Integrated Services Digital Network (ISDN) sets.

To activate the feature, the switch administrator selects K for the CFB/CFD Per Key Control Field and specifies what DN keys they want the feature active on in the KEYLIST. After the user of the set enters which keys they would like the feature on, they program the forwarding DN as for the Programmable Control Option.

This feature does not affect how the current CFB/CFD normal, fixed, and programmable control options work.

The control type, K, works with the office parameter CFX_SEPARATE_KEYLIST_FEATURE, found in table OFCENG. The office parameter can be set to Y or N.

The CFB/CFD-Internal/External feature supports the new control type of K.

Accompanying features

The following features work in conjunction with this feature:

- AD9702, CNA: CFB/CFD Per Key Destination
- AD9720, MSL: CFB/CFD Per Key Destination

Hardware requirements

CCM: CFB/CFD Per Key Destination has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to CCM: CFB/CFD Per Key Destination:

- This feature is assigned to the primary DN key of a set and has a maximum of 24 DN keys that can be specified in the KEYLIST.
- FTRGRPS and the residential varieties of CFB/CFD (CFBL/CFDA) do not support the CFB/CFD Per Key types.

Interactions

CCM: CFB/CFD Per Key Destination has no functionality interactions.

Datafill

CCM: CFB/CFD Per Key Destination affects data schema tables and office parameters. There is a change to the way in which tuples are displayed in table CFX. When the control type is set to K, a tuple is displayed for every key that is entered in the KEYLIST field.

Service Orders

CCM: CFB/CFD Per Key Destination does not affect SERVORD, but a new CFB/CFD control option type is added. The switch administrator enters a K to select the CFB/CFD Per Key feature as the Control Type in SERVORD.

Operational Measurements

CCM: CFB/CFD Per Key Destination does not affect Operational Measurements.

Logs

CCM: CFB/CFD Per Key Destination does not affect logs.

User interface

CCM: CFB/CFD Per Key Destination does not change the user interface.

Billing

CCM: CFB/CFD Per Key Destination does not affect billing.

AD9699 - LINE 117/125 Log Enhancements**Description**

This feature enhances the LINE117 and LINE125 logs and provides identification information of the calling party.

The LINE117 and LINE125 logs are modified to provide the Directory Number (DN) of the calling party. If the DN of the calling party is not available and a charge number is found, the charge number is displayed for

the calling party. If both the DN and charge number for the calling party are unavailable, no DN is provided. The source of the DN is identified (that is, calling number, charge number, or unavailable).

In addition to LINE117 and LINE125 logs, LINE115 and LINE126 logs are related to this enhancement. "Line logs (115, 117, 125 and 126)" (page 373) describes these logs.

Line logs (115, 117, 125 and 126)

Log	Description
LINE115	A call originating from another line connected to the switch terminates to a line with the Calling Line Identification (CLI) service order option.
LINE117	A call originating from a trunk connected to the switch terminates to a line with the CLI Service Order option.
LINE125	A call originating from a trunk connected to the switch terminates to a line with the calling line flash-hook (CLF) Service Order option, and the hookswitch is flashed.
LINE126	A malicious call originates from another line connected to the switch with the CLF option and a flash is done from this line (the Malicious Call Trace feature is activated).

The implementation of logs LINE115 and LINE126 provides the following:

- terminating Line Equipment (LEN) and DN
- originating LEN and DN
- CALLID
- time (LINE115 only)

The existing implementation of logs LINE117 and LINE125 provides the following:

- terminating LEN and DN
- incoming trunk identifier consisting of a Common Language Location Identifier (CLLI) and circuit number
- CALLID
- time (LINE117 only)

SOC options

Feature AX0923, CCM: SOC for LINE 117 and LINE 125 Enhancements, provides a Software Optionality Control (SOC) to control the availability of calling party information. Refer to feature AX0923 for more information.

Hardware requirements

LINE 117/125 Log Enhancements has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to LINE 117/125 Log Enhancements:

- The availability of the DN, or charge number, of the calling party is dependent upon its being passed to the terminating nodes.
- Trunks using Signaling System #7 (SS7) or Primary Rate Interface (PRI) signaling should pass either the DN or the charge number of the calling party. Trunks which deliver Automatic Number Identification (ANI) should also pass either the DN or the charge number of the calling party.

Interactions

LINE 117/125 Log Enhancements has no functionality interactions.

Datafill

LINE 117/125 Log Enhancements does not affect data schema tables or office parameters.

Service Orders

LINE 117/125 Log Enhancements does not affect SERVORD.

Operational Measurements

LINE 117/125 Log Enhancements does not affect Operational Measurements.

Logs

"[Example of new LINE117 and LINE125 logs](#)" (page 375) shows an example of the new LINE117 and LINE125 logs.

Example of new LINE117 and LINE125 logs

```

NEWLINELOGS * LINE117 OCT29 11:10:39 5800 INFO CALLING LINE IDENT
LEN LCM1 00 1 09 31 DN 9975056 KEY 1
INCOMING TRUNK = CKT RCHTORTPPTS 0
CALLID        = 360467
TIME: OCT29 11:10:39
CALLING NUMBER = 2149975015
SOURCE        = CALLING NUMBER

NEWLINELOGS * LINE125 OCT29 11:11:37 8000 INFO TRACE_ON_MALICIOUS_CALL_IN
LEN RLCM 00 0 10 00 DN 9975002
INCOMING TRUNK = CKT RCHTORTPPTS 1
CALLID        = 360459
CALLING NUMBER = 2149975015
SOURCE        = CALLING NUMBER

NEWLINELOGS * LINE117 OCT29 11:12:41 5800 INFO CALLING LINE IDENT
LEN LCM1 00 1 09 31 DN 9975056 KEY 1
INCOMING TRUNK = CKT RCHTORTPPTS 0
CALLID        = 360522
TIME: OCT29 11:12:41
CALLING NUMBER = 2149975015
SOURCE        = CHARGE NUMBER

NEWLINELOGS * LINE117 OCT29 11:15:07 5800 INFO CALLING LINE IDENT
LEN LCM1 00 1 09 31 DN 9975056 KEY 1
INCOMING TRUNK = CKT RCHTORTPPTS 0
CALLID        = 360456
TIME: OCT29 11:15:07
CALLING NUMBER = 
SOURCE        = UNAVAILABLE

```

User interface

LINE 117/125 Log Enhancements does not change the user interface.

Billing

LINE 117/125 Log Enhancements does not affect billing.

AD9701 - CNA: M2616CT and ATA Support**Description**

This feature allows the system software to recognize and configure two additional terminal types. The first terminal, M2616CT, is a cordless version of the existing M2616 terminal and has the same interface and control into the Meridian SL-100. The second terminal type, Analog Terminal Adapter (ATA), adds an analog port to a digital terminal. The ATA fits into the base of the models M2006, M2008, M2008HF, M2216, M2616, and M2616CT phone sets and saves desktop space.

The ATA has the same interface and control into the Meridian SL-100 as the existing M2006. The ATA is datafillable on the odd Line Equipment Number (LEN) of a Digital Link Module/Intelligent Peripheral Equipment (DLM/IPE). Whereas the M2006 phone set along with all other voice sets, is only datafillable on the even LEN of a DLM/IPE.

These two additional terminal types are configured in the Computing Module (CM). The Line Group Controller (LGC), Line Trunk Controller (LTC), Remote Cluster Controller (RCC), Remote Cluster Controller (RCC2) Extended Peripheral Modules (XPMs) that exist between the CM and the terminals handle these two additional terminal types as messages. The messages pass to and from the CM and the terminals. All messages transferred between the XPM and the M2616CT phone and ATA are routed through an IPE or DLM circuit card. This feature identifies the definitions required within a host XPM for the additional terminals. It also allows the terminals to be datafillable using SERVORD with separate Line Class Codes (LCCs).

Accompanying features

The following features work in conjunction with this feature:

- AD9708, XPM: M2616CT and ATA Support
- AD9711, TL: M2616CT and ATA Support
- AD9719, MSL: M2616CT and ATA Support
- AD9753, CCM: M2616CT and ATA Support

Hardware requirements

This feature works on the Meridian SL-100 LGC or LTC XPM module interfacing with an M2616 cordless telephone (M2616CT) or an ATA. The following hardware components are associated with this feature:

- Meridian SL-100 switch elements (CM, MS, Network)
- host XPM (LGC/LTC/RCC/RCC2)
- IPE/DLM
- M2616CT or other sets (M2006, M2008, M2008HF, M2216, M2616) containing the ATA terminal in their base

Limitations and restrictions

CNA: M2616CT and ATA Support has no limitations or restrictions.

Interactions

All configurations of a DLM/IPE work, including with a DS30 interface card or a fiber interface card.

Datafill

CNA: M2616CT and ATA Support does not affect data schema tables or office parameters.

Service Orders

CNA: M2616CT and ATA Support does not affect SERVORD.

Operational Measurements

CNA: M2616CT and ATA Support does not affect Operational Measurements.

Logs

CNA: M2616CT and ATA Support does not affect logs.

User interface

CNA: M2616CT and ATA Support does not change the user interface.

Billing

CNA: M2616CT and ATA Support does not affect billing.

AD9702 - CNA: CFB/CFD Per Key Destination**Description**

This feature allows the user to assign different forwarding Directory Numbers (DNs) to the keys specified in the KEYLIST of the Call Forward Busy/Call Forward Don't Answer (CFB/CFD) feature. This feature supports Meridian Business Set (MBS), Integrated Voice and Data (IVD), and Integrated Services Digital Network (ISDN) sets.

To activate the feature, the switch administrator selects K for the CFB/CFD Per Key Control Field and specifies which DN keys they want the feature active on in the KEYLIST. After the user of the set enters which keys they would like the feature on, they program the forwarding DN as for the Programmable Control Option.

The changes specific to the CNA layer involve supporting the COPYSET command and the Call Screening, Monitoring, Intercept (CSMI) feature. The COPYSET command and the CFB/CFD-Internal/External feature support the control type K.

This feature does not affect how the current CFB/CFD normal, fixed, and programmable control options work.

The control type, K, works with the office parameter CFX_SEPARATE_KEYLIST_FEATURE, found in table OFCENG. The office parameter can be set to Y or N.

Accompanying features

The following features work in conjunction with this feature:

- AD9698, CCM: CFB/CFD Per Key Destination
- AD9720, MSL: CFB/CFD Per Key Destination

Hardware requirements

CNA: CFB/CFD Per Key Destination has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to CNA: CFB/CFD Per Key Destination:

- This feature is assigned to the primary DN key of a set and has a maximum of 24 DN keys that can be specified in the KEYLIST.
- FTRGRPS and the residential varieties of CFB/CFD (CFBL/CFDA) do not support the CFB/CFD Per Key types.
- CSMI only works for calls forwarded from the primary DN. CSMI only functions for Per Key from the primary DN.

Interactions

CNA: CFB/CFD Per Key Destination has no functionality interactions.

Datafill

CNA: CFB/CFD Per Key Destination does not affect data schema tables or office parameters.

Service Orders

The SERVORD COPYSET command supports the control type, K.

Operational Measurements

CNA: CFB/CFD Per Key Destination does not affect Operational Measurements.

Logs

CNA: CFB/CFD Per Key Destination does not affect logs.

User interface

CNA: CFB/CFD Per Key Destination does not change the user interface.

Billing

CNA: CFB/CFD Per Key Destination does not affect billing.

AD9706 - XPM: Trunk Member Display

Description

This feature displays the name of the Common Language Location Identifier (CLLI) and circuit member number of the trunk to the user of a Meridian Business Set (MBS) or Integrated Voice and Data (IVD) set.

The TRKDISP feature is active and displays the CLLI and circuit member number of the trunk to which it is connected when the Trunk Member Display (TRKDISP) key is pressed. When the TRKDISP key is pressed a second time, the feature updates the set with the previous display and cancels the feature.

The SERVORD tool is used to datafill this feature. This feature is capable of displaying the trunk data from any trunk type.

Overview of TRKDISP key in XPM

A TRKDISP key stroke turns on the TRKDISP key lamp and clears the display. After the TRKDISP key is pressed, the XPM sends a message to the Computing Module (CM) to initiate the TRKDISP function. This message indicates to the CM that the TRKDISP key was pressed and sends a FEATURE_MSG to the CM specifying the activation of the feature. The CM responds with a message containing the display information. When the TRKDISP key is pressed a second time, the TRKDISP key lamp is turned off and the display is updated with the previous display.

Accompanying feature

This feature works in conjunction with feature AD9693, CCM: Trunk Member Display.

Hardware requirements

XPM: Trunk Member Display has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to XPM: Trunk Member Display:

- This feature cannot be assigned to any softkey.
- This feature is not compatible with any CLASS sets or features.
- This feature does not apply to the Attendant Console.
- This feature is not compatible with Integrated Services Digital Network (ISDN) type sets.
- This feature and any Three-way Conference (3WC) or Conference feature cannot be simultaneously active.
- The Display option (DISP/M0200) cannot be deleted before the TRKDISP option. The TRKDISP option cannot be added without the DISP/M0200 option already datafilled.
- This feature is not compatible with 500/2500 sets.

Interactions

This feature interacts with the information that is displayed on the set before the TRKDISP feature is activated.

Datafill

XPM: Trunk Member Display does not affect data schema tables or office parameters.

Service Orders

XPM: Trunk Member Display does not affect SERVORD.

Operational Measurements

XPM: Trunk Member Display does not affect Operational Measurements.

Logs

XPM: Trunk Member Display does not affect logs.

User interface

XPM: Trunk Member Display does not change the user interface.

Billing

XPM: Trunk Member Display does not affect billing.

AD9708 - XPM: M2616CT and ATA Support**Description**

This feature allows the system software to recognize and configure two additional terminal types. The first terminal, M2616CT, is a cordless version of the existing M2616 terminal and has the same interface and control into the Meridian SL-100 system. The second terminal type, Analog Terminal Adapter (ATA), adds an analog port to a digital terminal. The ATA fits into the base of the models M2006, M2008, M2008HF, M2216, M2616, and M2616CT phone sets and saves desktop space. The ATA has the same interface and control into the Meridian SL-100 system as the existing M2006 phone set. The ATA is datafillable on the odd Line Equipment Number (LEN) of a Digital Link Module/Intelligent Peripheral Equipment (DLM/IPE). Whereas the M2006 phone set along with all other voice sets, is only datafillable on the even LEN of a DLM/IPE.

These two additional terminal types are configured in the Computing Module (CM). The Line Group Controller (LGC), Link Trunk Controller (LTC), Remote Cluster Controller (RCC), Remote Cluster Controller (RCC2) Extended Peripheral Modules (XPMs) which exist between the CM and the terminals handle these two additional terminal types as messages. The messages pass to and from the CM and the terminals. All messages transferred between the XPM and the M2616CT and ATA are routed through

an IPE or DLM circuit card. This feature identifies the definitions required within a host XPM for the additional terminals. It also allows the terminals to be datafillable using SERVORD with separate Line Class Codes (LCCs).

Accompanying features

The following features work in conjunction with this feature:

- AD9701, CNA: M2616CT and ATA Support
- AD9711, TL: M2616CT and ATA Support
- AD9719, MSL: M2616CT and ATA Support
- AD9753, CCM: M2616CT and ATA Support

Hardware requirements

This feature works on the Meridian SL-100 LGC or LTC XPM module interfacing with an M2616 cordless telephone (M2616CT) or an ATA. The following hardware components are associated with this feature:

- Meridian SL-100 switch elements (CM, MS, Network)
- host XPM (LGC/LTC/RCC/RCC2)
- IPE/DLM
- M2616CT or other sets (M2006, M2008, M2008HF, M2216, M2616) containing the ATA terminal in their base

Limitations and restrictions

XPM: M2616CT and ATA Support has no limitations or restrictions.

Interactions

XPM: M2616CT and ATA Support has no functionality interactions.

Datafill

XPM: M2616CT and ATA Support does not affect data schema tables or office parameters.

Service Orders

XPM: M2616CT and ATA Support does not affect SERVORD. See feature AD9753, CCM: M2616CT and ATA Support, for SERVORD activity.

Operational Measurements

XPM: M2616CT and ATA Support does not affect Operational Measurements.

Logs

XPM: M2616CT and ATA Support does not affect logs.

User interface

XPM: M2616CT & ATA Support does not change the user interface.

Billing

XPM: M2616CT and ATA Support does not affect billing.

AD9711 - TL: M2616CT and ATA Support**Description**

This feature allows the system software to recognize and configure two additional terminal types. The first terminal, M2616CT, is a cordless version of the existing M2616 terminal and has the same interface and control into the Meridian SL-100 system. The second terminal type, Analog Terminal Adapter (ATA), adds an analog port to a digital terminal. The ATA fits into the base of the models M2006, M2008, M2008HF, M2216, M2616, and M2616CT phone sets and saves desktop space. The ATA has the same interface and control into the Meridian SL-100 system as the existing M2006 phone set. The ATA is datafillable on the odd Line Equipment Number (LEN) of a Digital Link Module/Intelligent Peripheral Equipment (DLM/IPE). Whereas the M2006 phone set along with all other voice sets, is only datafillable on the even LEN of a DLM/IPE.

These two additional terminal types are configured in the Computing Module (CM). The Line Group Controller (LGC), Line Trunk Controller (LTC), Remote Cluster Controller (RCC), Remote Cluster Controller (RCC2) Extended Peripheral Modules (XPMs) which exist between the CM and the terminals handle these two additional terminal types as messages. The messages pass to and from the CM and the terminals. All messages transferred between the XPM and the M2616CT and ATA are routed through an IPE or DLM circuit card. This feature identifies the definitions required within a host XPM for the additional terminals. It also allows the terminals to be datafillable using SERVORD with separate Line Class Codes (LCCs).

Accompanying features

The following features work in conjunction with this feature:

- AD9701, CNA: M2616CT and ATA Support
- AD9708, XPM: M2616CT and ATA Support
- AD9719, MSL: M2616CT and ATA Support
- AD9753, CCM: M2616CT and ATA Support

Hardware requirements

This feature works on the Meridian SL-100 LGC or LTC XPM module interfacing with an M2616 cordless telephone (M2616CT) or an ATA. The following hardware components are associated with this feature:

- Meridian SL-100 switch elements (CM, MS, Network)

- host XPM (LGC/LTC/RCC/RCC2)
- IPE/DLM
- M2616CT or other sets (M2006, M2008, M2008HF, M2216, M2616) containing the ATA terminal in their base

Limitations and restrictions

TL: M2616CT and ATA Support has no limitations or restrictions.

Interactions

TL: M2616CT and ATA Support has no functionality interactions.

Datafill

TL: M2616CT and ATA Support does not affect data schema tables or office parameters.

Service Orders

TL: M2616CT and ATA Support does not affect SERVORD. See feature AD9753, CCM: M2616CT and ATA Support, for information about SERVORD activity.

Operational Measurements

TL: M2616CT and ATA Support does not affect Operational Measurements.

Logs

TL: M2616CT and ATA Support does not affect logs.

User interface

TL: M2616CT and ATA Support does not change the user interface.

Billing

TL: M2616CT and ATA Support does not affect billing.

AD9714 - MSL: NAS RLT Enhancements**Description**

This feature decreases the number of trunking facilities required when the attendant services are consolidated at one node for two or more nodes in the network. This is accomplished by bridging the call at a Meridian SL-100 node where the call is routed to the centralized attendant.

This feature enhances Network Attendant Services Release Link Trunk (NAS RLT) by adding the following:

- A bridged call can recall to the attendant once the call has been released.

- A new log report is generated whenever a facility reject message (FRJ) is created by the far end.

The originator of a NAS RLT ends up at the centralized console. The attendant then activates NAS RLT (for example, Manual NAS RLT). Upon attendant release of a successfully bridged call, a recall timer is set to expire on the originator. If the far end does not answer before the timer expires, the call recalls to the Attendant Console subgroup that bridged the call.

"[NAS RLT recall scenarios](#)" (page 384) describes the recall scenarios for manual and automatic NAS RLT.

NAS RLT recall scenarios

Originator	Automatic NAS RLT	Manual NAS RLT
Line	Recall	Recall
SS7 trunk	Recall	Recall
PRI trunk	Recall	No recall
PTS trunk	Recall	Recall

Accompanying feature

This feature works in conjunction with feature AD9697, CCM: NAS RLT Enhancements.

Hardware requirements

MSL: NAS RLT Enhancements requires the Meridian Services Attendant Console (MSAC), NT409BB.

Limitations and restrictions

MSL: NAS RLT Enhancements has no limitations or restrictions. Refer to features AD3285, NAS RLT IBN ISUP Trunk Interactions, AD3286, NAS RLT AC Special Function Key, and AD3287, NAS RLT Table Control and ISUP Messaging for additional limitations or restrictions on NAS RLT functionality.

Interactions

MSL: NAS RLT Enhancements has no functionality interactions. Refer to features AD3285, NAS RLT IBN ISUP Trunk Interactions, AD3286, NAS RLT AC Special Function Key, and AD3287, NAS RLT Table Control and ISUP Messaging for additional interactions on NAS RLT functionality.

Datafill

MSL: NAS RLT Enhancements does not affect data schema tables or office parameters.

Service Orders

MSL: NAS RLT Enhancements does not affect SERVORD.

Operational Measurements

MSL: NAS RLT Enhancements does not affect Operational Measurements.

Logs

A new log report, NRLT104, is created when the NAS RLT receives an FRJ with a cause indicator of CI_CALL_RETURNS.

The report is generated when one of the following conditions occur at the centralized attendant:

- The NAS RLT originator has another feature active (for example, Three-way calling).
- The originator is an attendant (attendant is attached).
- The NAS RLT terminator has another feature active (for example, Three-way calling).
- The terminator is an attendant (second call is an attendant).

Example log

```
MMSLDSNX06CB  NRLT104 JAN24 14:22:53 7500 INFO NAS RLT
PROBLEM: NAS RLT bridging rejected by far end
CALLID: 983066
```

User interface

MSL: NAS RLT Enhancements does not change the user interface.

Billing

MSL: NAS RLT Enhancements does not affect billing.

AD9716 - Answer Supervision Throttling for DID Calls

Description

This feature disables the capabilities of AD4550, FCC DID Answer Supervision Compliance. FCC DID Answer Supervision Compliance applies answer supervision to all Per Trunk Signaling (PTS) trunks in an office that must return answer supervision to the central office on specific calls. An office is any place of business, university, or location that has a Meridian SL-100. This feature provides the Federal Communications Commission (FCC) requirements which protect against fraudulent billing.

Answer Supervision Throttling for DID Calls deactivates answer supervision for offices that are exempted from the FCC ruling.

The use of this feature is controlled by the Software Optionality Control (SOC) utility. This utility controls the secure activation or use of options in a Product Computing-Module Load (PCL). At initial program load (IPL), the features which comprise the option in the PCL register their SOC information (that is, feature name, state, or usage support procedures) with the SOC utility. When a user requests an option state change or a usage limit change using the SOC interface, the SOC utility controls the activation or deactivation or usage of the optional software.

Hardware requirements

Answer Supervision Throttling for DID Calls has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Answer Supervision Throttling for DID Calls:

- Applies only to PTS trunks.
- Answer Supervision is active when delivered and after a One Night Process (ONP), unless the user had answer supervision previously turned off.

Interactions

Answer Supervision Throttling for DID Calls has no functionality interactions.

Datafill

Answer Supervision Throttling for DID Calls does not affect data schema tables or office parameters.

Service Orders

Answer Supervision Throttling for DID Calls does not affect SERVORD.

Operational Measurements

Answer Supervision Throttling for DID Calls does not affect Operational Measurements.

Logs

Answer Supervision Throttling for DID Calls does not affect logs.

User interface

The following information provides an overview of the SOC functionality for Answer Supervision Throttling for DID Calls.

The option name is called MSL Disable Ans Sup and its order code is MSL00111.

The SOC state-controlled option is used to control the answer supervision. The SOC state is either soc_on or soc_idle. When this option is in the soc_idle state, answer supervision is active. When this option is in the soc_on state, answer supervision is deactivated. The default for this feature is soc_idle.

The feature is delivered to the user's site in the soc_idle state. If the site is exempt from the FCC regulation, it has the option of leaving soc_idle on, or changing it with a keycode to soc_on. The state behavior is determined by the state of the software before an ONP. If answer supervision is on before an ONP, after completion of the ONP it is in the same state. This is controlled by the sensing software on the switch.

Billing

Answer Supervision Throttling for DID Calls does not affect billing.

AD9718 - MSL: Automated Datafill and Resource Allocation for the IPE

Description

This feature includes two functions for the Intelligent Peripheral Equipment (IPE):

- ringing resource allocation
- automated datafill for IPE line cards

Ringing resource allocation

Ringing resource allocation exploits the full capability of the IPE's ringing generator. Currently, there are three types of ringing generators available for IPE use: NT6D42, NT8D21, and NT7D03. Each ringing generator supports simultaneously ringing analog sets. NT6D42 supports 16; NT7D03 and NT8D21 support eight.

This feature makes more efficient use of ringing resources within the IPE. Due to hardware limitations of ringing generators for analog phone sets, concurrent ringing can only be supplied to a limited number of phones without physically damaging the ringing generators.

Table control is used to differentiate between ringing generators. The IPE now only recognizes the ringing generator that can ring eight phones. The throttling that the IPE currently uses is based on the actual ringing generator and notification is sent to the IPE setting its Maximum Ringing Resource (MRR). The MRR value is set by executing either the RTS or QUERYPM

command. In order to trace resource inadequacies for phones needing the resource, but failing to get it, a log is produced indicating this failure. Additionally, an operational measurement is pegged to keep statistics.

Automated datafill for IPE line cards

This feature allows the Meridian SL-100 system to poll the IPE line card and dynamically datafill the line card information into table LNINV. This capability allows Meridian SL-100 users to make immediate upgrades of existing card types for the IPE without software intervention.

This automatic datafill procedure provides the following benefits:

- minimal software patches are needed
- accurate and up-to-date product inventory is provided on the user's switch
- support can accurately identify and resolve field problems
- minimizes human error

Currently, a feature activity must be opened for any new version of line card that must be datafilled in table LNINV for the IPE. If table LNINV is not updated with the new product code of the line card, the current software does not allow the activation of that product.

Automated datafill is a plug and play design. It allows automatic datafill of a line card's Product Engineering Code (PEC) in table LNINV and maps proper test and diagnostic procedures to the line card.

To accomplish this functionality, the automated datafill operation of this feature is concerned primarily with polling cards within the IPE, creating a table for compatible cards, and binding diagnostic routines for compatible cards. The new table containing the compatible cards is considered the kernel of this feature. Information taken from it provides the data needed to properly automate the process of datafilling the IPE's line cards.

Accompanying features

This feature works in conjunction with the following features:

- AD9695, CCM: Automated Datafill for IPE Line Cards
- AD9724, IPE: Automated Datafill and Resource Allocation for the IPE

Hardware requirements

MSL: Automated Datafill and Resource Allocation has the following hardware requirements:

- Meridian SL-100 Enhanced Core/SuperNode Small Edition (ECORE/SNSE) switch

- Line Group Controller (LGC), Line Trunk Controller (LTC), or Remote Cluster Controller (RCC) peripheral module
- IPE peripheral module
- NT5D11, NT8D02, NT8D03, or NT8D09 line cards
- ringing generators NT6D42, NT8D21, or NT7D03

Limitations and restrictions

MSL: Automated Datafill and Resource Allocation for the IPE only supports the following card types:

- NT8D02, digital line card (XDLC)
- NT8D03, analog line card (XALC)
- NT8D09, analog/message waiting line card (XMLC)
- NT5D11, line side T1 (XALC)

Interactions

MSL: Automated Datafill and Resource Allocation for the IPE has no functionality interactions.

Datafill

Table IPECARDS is created by this feature. This table requires the ENGWRITE ON setting to write into it.

Service Orders

MSL: Automated Datafill and Resource Allocation for the IPE does not affect SERVORD.

Operational Measurements

An existing OM group (PMRGFLT) is used to keep statistics of ringing resource failures. This OM is a maintenance OM used within the IPE maintenance procedures.

Logs

A log is produced as a result of a ringing resource failure. This log is in PM189 format.

User interface

MSL: Automated Datafill and Resource Allocation for the IPE does not affect user interface.

Billing

MSL: Automated Datafill and Resource Allocation for the IPE does not affect billing.

AD9719 - MSL: M2616CT and ATA Support

Description

This feature allows the system software to recognize and configure two additional terminal types. The first terminal, M2616CT, is a cordless version of the existing M2616 terminal and has the same interface and control into the Meridian SL-100 system. The second terminal type, Analog Terminal Adapter (ATA), adds an analog port to a digital terminal. The ATA fits into the base of the models M2006, M2008, M2008HF, M2216, M2616, and M2616CT phone sets and saves desktop space. The ATA has the same interface and control into the Meridian SL-100 system as the existing M2006 phone set. The ATA is datafillable on the odd Line Equipment Number (LEN) of a Digital Link Module/Intelligent Peripheral Equipment (DLM/IPE). Whereas the M2006 phone set along with all other voice sets, is only datafillable on the even LEN of a DLM/IPE.

These two additional terminal types are configured in the Computing Module (CM). The Line Group Controller (LGC), Line Trunk Controller (LTC), Remote Cluster Controller (RCC), Remote Cluster Controller (RCC2) Extended Peripheral Modules (XPMs) which exist between the CM and the terminals handle these two terminal types as messages. The messages pass to and from the CM and the terminals. All messages transferred between the XPM and the M2616CT phone set and ATA are routed through an IPE or DLM circuit card. This feature identifies the definitions required within a host XPM for the additional terminals. It also allows the terminals to be datafillable using SERVORD with separate Line Class Codes (LCCs).

Accompanying features

The following features work in conjunction with this feature:

- AD9701, CNA: M2616CT and ATA Support
- AD9708, XPM: M2616CT and ATA Support
- AD9711, TL: M2616CT and ATA Support
- AD9753, CCM: M2616CT and ATA Support

Hardware requirements

This feature works on the Meridian SL-100 LGC or LTC XPM module interfacing with an M2616 cordless telephone (M2616CT) or an ATA. The following hardware components are associated with this feature:

- Meridian SL-100 switch elements (CM, MS, Network)
- host XPM (LGC/LTC/RCC/RCC2)
- IPE/DLM
- M2616CT or other sets (M2006, M2008, M2008HF, M2216, M2616) containing the ATA terminal in their base

Limitations and restrictions

MSL: M2616CT and ATA Support has the same limitations or restrictions as the M2616 and the 2500 Integrated Business Network (IBN) set, respectively.

Interactions

MSL: M2616CT and ATA Support has the same functionality interactions as the M2616 and the 2500 IBN set, respectively.

Datafill

Table LCCOPT is datafilled using the EXT file in the MSL layer.

Service Orders

MSL: M2616CT and ATA Support does not affect SERVORD. See feature AD9753, CCM: M2616CT and ATA Support for information of SERVORD activity.

Operational Measurements

MSL: M2616CT and ATA Support does not affect Operational Measurements.

Logs

MSL: M2616CT and ATA Support does not affect logs.

User interface

MSL: M2616CT and ATA Support does not change the user interface.

Billing

MSL: M2616CT and ATA Support does not affect billing.

AD9720 - MSL: CFB/CFD Per Key Destination**Description**

This feature allows the user to assign different forwarding Directory Numbers (DNs) to the keys specified in the KEYLIST of the Call Forward Busy/Call Forward Don't Answer (CFB/CFD) feature. This feature supports Meridian Business Set (MBS), Integrated Voice and Data (IVD), and Integrated Services Digital Network (ISDN) sets.

The changes specific to the MSL layer involve supporting the CFB/CFD Per Key Destination feature on IVD sets.

To activate the feature, the switch administrator selects K for the CFB/CFD Per Key Control Field and specifies which DN keys they want the feature active on in the KEYLIST. After the user of the set enters which keys they would like the feature on, they program the forwarding DN as for the Programmable Control Option.

This feature does not affect how the current CFB/CFD Normal, Fixed, and Programmable Control Options works.

The control type, K, works with the office parameter CFX_SEPARATE_KEYLIST_FEATURE, found in table OFCENG. The office parameter can be set to Y or N.

The CFB/CFD-Internal/External feature supports the control type of K.

Accompanying features

The following features work in conjunction with this feature:

- AD9698, CCM: CFB/CFD Per Key Destination
- AD9702, CNA: CFB/CFD Per Key Destination

Hardware requirements

MSL: CFB/CFD Per Key Destination has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to MSL: CFB/CFD Per Key Destination:

- This feature is assigned to the primary DN key of a set and has a maximum of 24 DN keys that can be specified in the KEYLIST.
- FTRGRPS and the residential varieties of CFB/CFD (CFBL/CFDA) do not support the CFB/CFD Per Key types.

Interactions

MSL: CFB/CFD Per Key Destination has no functionality interactions.

Datafill

MSL: CFB/CFD Per Key Destination does not affect data schema tables or office parameters.

Service Orders

MSL: CFB/CFD Per Key Destination does not affect SERVORD.

Operational Measurements

MSL: CFB/CFD Per Key Destination does not affect Operational Measurements.

Logs

MSL: CFB/CFD Per Key Destination does not affect logs.

User interface

MSL: CFB/CFD Per Key Destination does not change the user interface.

Billing

MSL: CFB/CFD Per Key Destination does not affect billing.

AD9724 - IPE: Automated Datafill and Resource Allocation for IPE**Description**

This feature ensures proper allocation of resources for the ringing generator and performs the following:

- Design the IPE software to support both eight and 16 maximum ringing resources (MRR).
- Produce a log indicating that a ringing generator overload occurred with an OM pegged of how many overloads occurred.
- Withdraw ringing resources from the line side T1 interface (LTI) (NT5D11) line card.

The feature adjusts the maximum number of simultaneously ringing analog phone sets. This adjustment is done by sending a message to the Intelligent Peripheral Equipment (IPE) from the Computing Module (CM), capturing the message and adjusting the MRR according to the message. The MRR value is set by executing either the RTS or QUERYPM command.

In addition, this feature withdraws analog ringing resources from the LTI line card by redefining it with its own card type within the IPE software. In the event that the ringing generator becomes overloaded, analog phone sets are placed into the resource's waiting queue. This feature increments the ring saturation counter and transmits a message to the CM that indicates the ringing generator overload state.

Accompanying features

This feature works in conjunction with the following features:

- AD9656, CCM: Automated Datafill for IPE Line Cards
- AD9718, MSL: Automated Datafill and Resource Allocation for the IPE

Hardware requirements

The following hardware is needed for this feature:

- one IPE
- one Supernode/SNSE

- LTC/LGC/RCC/LTCI/LGCI/RCC2
- line side T1 interface line card with electronically erasable programmable memory (EEPROM) changes
- ringing generators NT6D42, NT8D21, or NT7D03

Limitations and restrictions

The IPE: Automated Datafill and Resource Allocation for the IPE feature requires MSL07 software for a service representative to change MRR. Software below this release will set the MRR to eight.

Interactions

IPE: Automated Datafill and Resource Allocation for the IPE has no functionality interactions.

Datafill

IPE: Automated Datafill and Resource Allocation for the IPE does not affect data schema tables or office parameters. New data schema is created by feature AD9718, MSL: Automated Datafill and Resource Allocation for the IPE.

Service Orders

IPE: Automated Datafill and Resource Allocation for the IPE does not affect SERVORD.

Operational Measurements

IPE: Automated Datafill and Resource Allocation for the IPE does not affect Operational Measurements. A new OM is produced in feature AD9718, MSL: Automated Datafill and Resource Allocation for the IPE.

Logs

IPE: Automated Datafill and Resource Allocation for the IPE does not affect logs. A log is produced as a result of a ringing resource failure in feature AD9718, MSL: Automated Datafill and Resource Allocation for the IPE.

User interface

IPE: Automated Datafill and Resource Allocation for the IPE does not change the user interface. The MRR value is displayed at the MAP level by executing the QUERYPM command.

Billing

IPE: Automated Datafill and Resource Allocation for the IPE does not affect billing.

AD9725 - MSL: VCDR Removal

Description

This feature removes references to Variable Call Detail Recording (VCDR) which is manufactured discontinued (MDed). This software removes hooks to VCDR without compromising the existing functionality.

This feature removes all references to VCDR in the MSL Development Release Unit (DRU).

Accompanying features

The following features work in conjunction with this feature:

- AD9730, CCM: VCDR Removal
- AD9783, CNA: VCDR Removal
- AD9817, SHR: VCDR Removal

Hardware requirements

MSL: VCDR Removal has no hardware requirements.

Limitations and restrictions

MSL: VCDR Removal has no limitations or restrictions.

Interactions

This feature completes the removal of VCDR which was started by feature AD6563, MSL Misc Services Decoupling.

Datafill

Table CUSTVCDR is removed.

Service Orders

MSL: VCDR Removal does not affect SERVORD.

Operational Measurements

MSL: VCDR Removal does not affect Operational Measurements.

Logs

The following log modifications are made:

- removes VCDR100
- removes VCDR101

User interface

MSL: VCDR Removal does not change the user interface.

Billing

MSL: VCDR Removal does not affect billing.

AD9730 - CCM: VCDR Removal**Description**

This feature removes references to Variable Call Detail Recording (VCDR) which is manufactured discontinued (MDed). This software removes hooks to VCDR without compromising the existing functionality.

This feature removes all references to VCDR in the CCM Development Release Unit (DRU).

Accompanying features

The following features work in conjunction with this feature:

- AD9725, MSL: VCDR Removal
- AD9783, CNA: VCDR Removal
- AD9817, SHR: VCDR Removal

Hardware requirements

CCM: VCDR Removal has no hardware requirements.

Limitations and restrictions

CCM: VCDR Removal has no limitations or restrictions.

Interactions

The following paragraphs describe the interactions between CCM: VCDR Removal and other functionalities.

This feature completes the removal of VCDR which was started by feature AD6563, MSL Misc. Services Decoupling.

Datafill

Modifications are made to the following tables:

- Table IBNXLA
- Table XLANAME

Service Orders

CCM: VCDR Removal does not affect SERVORD.

Operational Measurements

The operational measurement VCDR_RECORDING_UNIT is removed from OMGROUP EXT.

Logs

CCM: VCDR Removal does not affect logs.

User interface

CCM: VCDR Removal does not change the user interface.

Billing

CCM: VCDR Removal does not affect billing.

AD9731 - TL: VCDR Removal**Description**

This feature removes the remaining references to Variable Call Detail Recording (VCDR) which is manufacture discontinued (MDed). This software safely removes all remaining hooks to VCDR without compromising the existing functionality.

This feature removes all references to VCDR in the telecom (TL) Development Release Unit (DRU).

Accompanying features

The following features work in conjunction with this feature:

- AD9725, MSL: VCDR Removal
- AD9730, CCM: VCDR Removal
- AD9783, CNA: VCDR Removal
- AD9849, BASE: VCDR Removal

Hardware requirements

TL: VCDR Removal has no hardware requirements.

Limitations and restrictions

TL: VCDR Removal has no limitations or restrictions.

Interactions

This feature completes the removal of VCDR which was started by feature AD6563, MSL Misc Services Decoupling.

Datafill

The following tables are modified:

- CRSMAP - Table CRSMAP is changed to reflect the removal of VCDR from the DATA_STREAM_FORMAT which is used for selecting different call types.

- CRSFMT - Table CRSFMT is changed to reflect the removal of VCDR from the DATA_STREAM_FORMAT which is used for selecting different call types.
- TRKGRP - Table TRKGRP is changed to reflect the removal of VCDR from the options field for IBNT2 and IBNTI trunks.
- DIGMAN - Table DIGMAN is changed to reflect the removal of VCDR from the option field DDD.

Service Orders

TL: VCDR Removal does not affect SERVORD.

Operational Measurements

TL: VCDR Removal does not affect Operational Measurements.

Logs

TL: VCDR Removal does not affect logs.

User interface

TL: VCDR Removal does not change the user interface.

Billing

TL: VCDR Removal does not affect billing.

AD9753 - CCM: M2616CT and ATA Support**Description**

This feature allows the system software to recognize and configure two additional terminal types. The first terminal, M2616CT, is a cordless version of the existing M2616 terminal and has the same interface and control into the Meridian SL-100 system. The second terminal type, Analog Terminal Adapter (ATA), adds an analog port to a digital terminal. The ATA fits into the base of the models M2006, M2008, M2008HF, M2216, M2616, and M2616CT phone sets and saves desktop space. The ATA has the same interface and control into the Meridian SL-100 system as the existing M2006 phone set. The ATA is datafillable on the odd Line Equipment Number (LEN) of a Digital Link Module/Intelligent Peripheral Equipment (DLM/IPE). Whereas the M2006 phone set along with all other voice sets, is only datafillable on the even LEN of the DLM/IPE.

These two additional terminal types are configured in the Computing Module (CM). The Line Group Controller (LGC), Line Trunk Controller (LTC), Remote Cluster Controller (RCC), Remote Cluster Controller 2 (RCC2) Extended Peripheral Modules (XPMs) which exist between the CM and the terminals handle these two terminal types as messages. The messages pass to and from the CM and the terminals. All messages transferred between the XPM and the M2616CT phone set and ATA are routed through

an IPE or DLM circuit card. This feature identifies the definitions required within a host XPM for the additional terminals. It also allows the terminals to be datafillable using SERVORD with separate Line Class Codes (LCCs).

Accompanying features

The following features work in conjunction with this feature:

- AD9701, CNA: M2616CT and ATA Support
- AD9708, XPM: M2616CT and ATA Support
- AD9711, TL: M2616CT and ATA Support
- AD9719, MSL: M2616CT and ATA Support

Hardware requirements

This feature works on the Meridian SL-100 LGC or LTC XPM module interfacing with an M2616 Cordless Telephone (M2616CT) or an ATA. The following hardware components are associated with this feature:

- Meridian SL-100 switch elements (CM, MS, Network)
- host XPM (LGC/LTC/RCC/RCC2)
- IPE/DLM
- M2616CT or other sets (M2006, M2008, M2008HF, M2216, M2616) containing the ATA terminal in their base

Limitations and restrictions

CCM: M2616CT and ATA Support has no limitations or restrictions.

Interactions

All configurations of a DLM/IPE work, including a DS30 interface card of a fiber interface card.

Datafill

CCM: M2616CT and ATA Support does not affect data schema tables or office parameters.

Service Orders

SERVORD is modified to allow the M2616CT phone set and ATA to be provisioned.

For the ATA, a user is only able to datafill this LCC on the odd LEN of a DLM/IPE. The SERVORD prompts are similar to the current M2006 single-line set.

Operational Measurements

CCM: M2616CT and ATA Support does not affect Operational Measurements.

Logs

CCM: M2616CT and ATA Support does not affect logs.

User interface

CCM: M2616CT and ATA Support does not change the user interface.

Billing

CCM: M2616CT and ATA Support does not affect billing.

AD9783 - CNA: VCDR Removal

Description

This feature removes references to Variable Call Detail Recording (VCDR) which is manufactured discontinued (MDed). This software removes hooks to VCDR without compromising the existing functionality.

This feature removes all references to VCDR in the CNA Development Release Unit (DRU).

Accompanying features

The following features work in conjunction with this feature:

- AD9725, MSL: VCDR Removal
- AD9730, CCM: VCDR Removal
- AD9817, SHR: VCDR Removal

Hardware requirements

CNA: VCDR Removal has no hardware requirements.

Limitations and restrictions

CNA: VCDR Removal has no limitations or restrictions.

Interactions

The following paragraphs describe the interactions between CNA: VCDR Removal and other functionalities.

This feature completes the removal of VCDR which was started by feature AD6563, MSL Misc Services Decoupling.

Datafill

CNA: VCDR Removal does not affect data schema tables or office parameters.

Service Orders

CNA: VCDR Removal does not affect SERVORD.

Operational Measurements

CNA: VCDR Removal does not affect Operational Measurements.

Logs

CNA: VCDR Removal does not affect logs.

User interface

CNA: VCDR Removal does not change the user interface.

Billing

CNA: VCDR Removal does not affect billing.

AD9817 - SHR: VCDR Removal**Description**

This feature removes references to Variable Call Detail Recording (VCDR) which is manufactured discontinued (MDed). This software removes hooks to VCDR without compromising the existing functionality.

This feature removes all references to VCDR in the SHR Development Release Unit (DRU).

Accompanying features

The following features work in conjunction with this feature:

- AD9725, MSL: VCDR Removal
- AD9730, CCM: VCDR Removal
- AD9783, CNA: VCDR Removal

Hardware requirements

SHR: VCDR Removal has no hardware requirements.

Limitations and restrictions

SHR: VCDR Removal has no limitations or restrictions.

Interactions

The following paragraphs describe the interactions between SHR: VCDR Removal and other functionalities.

This feature completes the removal of VCDR which was started by feature AD6563, MSL Misc Services Decoupling.

Datafill

Modifications are made to table TRKGRP.

Service Orders

SHR: VCDR Removal does not affect SERVORD.

Operational Measurements

SHR: VCDR Removal does not affect Operational Measurements.

Logs

SHR: VCDR Removal does not affect logs.

User interface

SHR: VCDR Removal does not change the user interface.

Billing

SHR: VCDR Removal does not affect billing.

AGxxxx features

AG0621 - PAD Provisioning Software

Description

PAD Provisioning Software provides a single set of PAD group names and values for use by all Meridian SL-100 switches, rather than having to custom engineer each office. This is required to implement the PBX loss or gain plan as defined by the Electronic Industries Association (EIA) standards for the Meridian SL-100.

For those Meridian SL-100 PBX offices that do not wish to use the EIA standard names and values, the module SLPADIPL should not be included in their loads. Existing Meridian SL-100 PBX offices may not decide to convert to this standard due to the work involved in changing all the tables that use PAD group names.

Hardware requirements

PAD Provisioning Software has no hardware requirements.

Limitations and restrictions

PAD Provisioning Software has no limitations or restrictions.

Interactions

PAD Provisioning Software has no functionality interactions.

Datafill

New PAD group names and values are entered in table PADDATA.

Service Orders

PAD Provisioning Software does not affect SERVORD.

Operational Measurements

PAD Provisioning Software does not affect Operational Measurements.

Logs

PAD Provisioning Software does not affect logs.

User interface

PAD Provisioning Software does not change the user interface.

Billing

PAD Provisioning Software does not affect billing.

AXxxxx features

AX0374 - CLASS on IPE

Description

This feature provides support within the intelligent peripheral equipment (IPE) for the following Custom Local Area Calling Service (CLASS) features:

- Calling Name Delivery (CNAMD), including default messages for the blocking features
- Calling Number Delivery (CND)
- Class Message Waiting Indication (CMWI)
- Spontaneous Call Waiting ID Display (SCWID)
- Calling Number Delivery Blocking (CNDB)
- Calling Name Delivery Blocking (CNAB)

To support the above functions, this feature uses the Class Modem Resource (CMR) card that resides in the XPM. By using this card, information relating to CNAMD and CND is sent to the phone between the first and second ring cycle. CND and CNAMD information is then presented at the phone set level.

Hardware requirements

The following hardware is required for this feature:

- Extended Peripheral Module (XPM)
- IPE
- NT8D09 or NT8D03 line cards
- CMR card


The following telephone sets are supported by CLASS on IPE:

- M9316CW, M9417, M9417CW, M9516, M9516CW
- Maestro sets: 1500, 2500, 3500, 4525, 4625
- PowerTouch sets: 225, 250, 350, 360

- Venture Multi-line Communications Systems
- 2500 sets with adjunct displays, M8001, M8003, M8009, M8314, M8417

"Meridian SL-100 configuration requirements" (page 406) illustrates the configuration required for this feature to operate properly. It shows that a CMR card is needed within the XPM and at least one NT8D09 card is needed within the IPE to send CLASS information over the specified voice path.

Meridian SL-100 configuration requirements

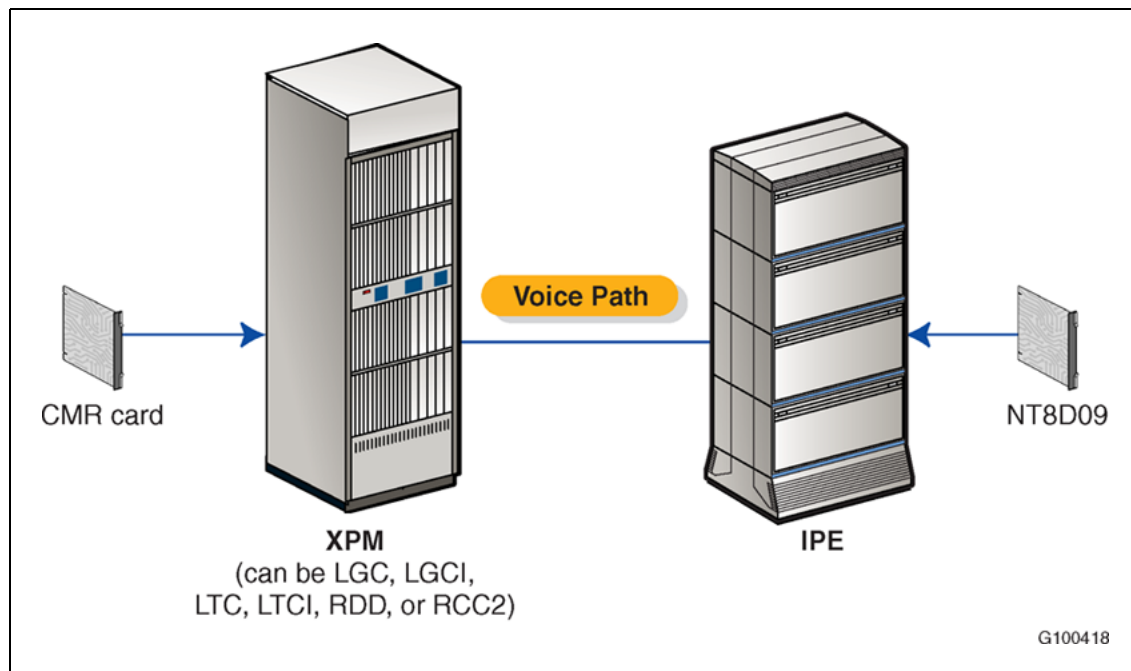

Limitations and restrictions

The following are limitations and restrictions for CLASS on IPE:

- Distinctive Ringing Call Waiting (DRCW) is not supported in the IPE environment.
- If a phone misses its immediate ringing resource during the first ringing cycle, the CLASS information is not sent by the CMR card within the XPM. This is because the CMR is not able to detect the ringing on the line within the given time period allotted to it.
- If a ringing generator overload is detected within the IPE during the first ringing cycle, the CLASS information is not sent.
- If the telephone user goes off hook between the first and second ringing cycle, the CLASS information is not sent.
- CND and CNAMD do not support the following ringing types:

- immediate ringing
- revertive ringing
- CND and CNAMD do not support secondary MADN members or secondary HUNT group members. These features use a revertive ringing pattern which is treated with the same urgency as immediate ringing. CND and CNAMD will not be supported for any feature or option whose secondary members require either immediate or revertive ringing patterns.
- CND and CNAMD do not support the M9316 and the M9216 telephone sets.
- The IPE does not support other ringing patterns regarding CND or CNAMD.

Interactions

The following interactions are supported for CLASS on IPE:

- The ringing schema is affected within the IPE, because the CMR card is used during the first and second ringing cycle.
- The immediate ring bool within table OFCENG must be set to N in order for the CMR information to send successfully.
- It is possible for an ERROR message to be displayed on an adjunct display if the display does not have time to refresh. This could be due to a change in line state. For example, if a set is in the process of receiving confirmation tone, but the line state changes to display incoming CND or CNAMD information, the adjunct display may not have enough time to recover from the previous line state and the word ERROR appears.
- A user could experience an extremely short burst of noise (about 0.75 seconds). This is because loss pad data was replaced with an idle code that the CMR card recognizes. To hear this noise, the user must answer the set within the 0.75 seconds range directly following the first ring.

Datafill

CLASS on IPE does not affect data schema tables or office parameters.

Service Orders

CLASS on IPE does not affect SERVORD.

Operational Measurements

CLASS on IPE does not affect Operational Measurements.

Logs

CLASS on IPE does not affect logs.

User interface

CLASS on IPE does not change the user interface.

Billing

CLASS on IPE does not affect billing.

AX0376 - SMDR Per Use Billing for Features**Description**

This feature gives Meridian SL-100 system CLASS service providers the ability to offer billing on a use-by-use basis as opposed to a flat monthly rate. This method is consistent with the way the local telephone company provides billing.

This feature includes the following four base capabilities:

- usage sensitive SMDR extension record
- SMDR record elements
- activating and deactivating SMDR Per Use Billing extension record
- generation of Meridian SL-100 logs

Universal access to CLASS features

Universal access to CLASS features is supported by feature AX0376. CLASS features accessed using the universal access method generate billing records, providing that Automatic Message Accounting (AMA) billing has been specified for universal access in table RESOFC. The check in table CUSTSMDR is still performed. Because of this checking, a feature accessed universally with AMA billing specified does not generate a billing record if the PERUSE option has not been added in table CUSTSMDR.

How this feature description is organized

This feature description describes the four base capabilities previously stated. Specifically, the section on the usage sensitive SMDR extension record is described in great detail. Topics covered in this section include

- supported CLASS features
- an example of a DF09 extension record
- a table defining the DF09 record fields
- the byte structure of the DF09 record
- a table defining the feature codes and the feature events to which they map
- details of CLASS feature operations
 - overview of datafill requirements

- the ACB/AR feature sample datafill, SMDR per use billing records feature codes, and a table with feature code definitions
- the CLASS display features sample datafill, SMDR per use billing records feature codes, sample logs and DF09 records, and log field definitions
- the CLASS display feature CNDB
- the COT sample datafill
- the screening list features sample datafill, SMDR per use billing records feature codes, a table with feature code definitions, and sample logs and DF09 records
- the DSCWID sample datafill
- the BCLID sample datafill and sample log and DF09 records

Usage sensitive SMDR extension record

This feature generates a usage sensitive SMDR extension record (extension code #DF09). This record is based on the same criteria as the per use billing records generated with the Bellcore AMA format. This record also stores CLASS feature usage information.

Note: Any set that can have the following CLASS features assigned to it supports SMDR Per Use Billing for Features. Refer to table LCCOPT for CLASS feature compatibility on a per set basis.

The CLASS features supported are

- Automatic Call Back (ACB)
- Automatic Recall (AR)
- Calling Number Delivery (CND)
- Calling Name Delivery (CNAMD)
- Dialable Directory Number (DDN)
- Calling Number Delivery Blocking (CNDB)
- Customer Originated Trace (COT)
- Distinctive Ringing/Call Waiting (DRCW)
- Selective Call Acceptance (SCA)
- Selective Call Forwarding (SCF)
- Selective Call Rejection (SCRJ)
- Deluxe Spontaneous Call Waiting Display (DSCWID)
- Bulk Calling Line Identification (BCLID)

The DF09 extension record is shown in the "[Sample figure DF09 extension record](#)" (page 410). The format of the record is described in "[CLASS per use information extension record field structure](#)" (page 410). There is an example of the byte structure for the SMDR DF09 extension call record right after "[CLASS per use information extension record field structure](#)" (page 410).

Sample figure DF09 extension record

```
*REC CODE:DF FMT CODE:09 CLASS FEATURE CODE:0352 BILL DN:2149975250
EVENT YEAR:1998 EVENT MONTH: 01 EVENT DAY:30 EVENT HOUR:15 EVENT
MINUTE:20 EVENT SECOND:25 NUM AVAIL: 0000 NUM UNAVAIL: 0000 NAME
AVAIL: 0000 NAME UNAVAIL: 0000 CONF PEGS: 0000 SCF LIST SIZE: 0005 SCA
LIST SIZE: 0000 SCRJ LIST SIZE: 0000 DRCW LIST SIZE: 0000 SPARE
DATA1: 0000 SPARE DATA2: 0000
```


CLASS per use information extension record field structure

Field name	Description
Record Code	DF (2 nibbles).
Format Code	#09 (2 nibbles).
CLASS Feature Code	This four-nibble field indicates the CLASS feature event. Values for this field are listed in the feature code to feature event mapping table.
Billable DN	This ten-nibble field contains the DN to bill against.
Event Year	This four-nibble field contains a numeric indication of the year the record was generated.
Event Month	This two-nibble field contains a numeric indication of the month the record was generated.
Event Day	This two-nibble field contains a numeric indication of the day the record was generated.
Event Hour	This two-nibble field contains a numeric indication of the hour the event was generated.
Event Minute	This two-nibble field contains a numeric indication of the minute the event was generated.
Event Second	This two-nibble field contains a numeric indication of the second the event was generated.
Note: A nibble is half of one byte, or four bits. Refer to the " Sample figure DF09 extension record " (page 410).	

Field name	Description
Num Avail	This four-nibble field shows the number of times calling number information was available and delivered to the phone. This applies to either the CND or DDN CLASS feature that is enabled on a phone without CNAMD. This field shows the number of times that the caller ID information delivered to the phone included the calling name, but not the calling number. This applies to the CND or DDN CLASS feature enabled on a phone with CNAMD. This field contains the number of times caller ID information was available and delivered to a phone in a BCLID group. This applies to the BCLID CLASS feature.
Num Unavail	This four-nibble field shows the number of times calling number information was unavailable and an unavailable or private message was sent in its place. This applies when either the CND or DDN CLASS feature is enabled on a phone without CNAMD. This field also shows the number of times the caller ID information delivered to the phone included the calling number, but not the calling name. This applies when either the CND or DDN CLASS feature is enabled on a phone with CNAMD. This field contains the number of times caller ID information was unavailable and not delivered to a phone in a BCLID group. This applies to the BCLID CLASS feature.
Name Avail	This four-nibble field shows the number of times calling name information was available and delivered to the phone. This applies to the CNAMD CLASS feature that is enabled on a phone without a number display option. This field shows the number of times the caller ID information was delivered to the phone and included both the calling name and the calling number. This applies to the CNAMD CLASS feature enabled on a phone with a number display option.
Name Unavail	This four-nibble field shows the number of times calling name information was unavailable and an unavailable or private message was sent in its place. This applies when the CNAMD CLASS feature is enabled on a phone without a number display option. This field also shows the number of times that both the name and the number information was unavailable and an unavailable or private message were sent in place of both items. This applies when the CNAMD CLASS feature is enabled on a phone with a number display option.
Conf Pegs	This four-nibble field indicates the number of times the conference feature is used in conjunction with the DSCWID CLASS feature.
SCF List Size	This four-nibble field indicates the current size of the SCF screening list at the time of record generation.
SCA List Size	This four-nibble field indicates the current size of the SCA screening list at the time of record generation.
SCRJ List Size	This four-nibble field indicates the current size of the SCRJ screening list at the time of record generation.
DRCW List Size	This four-nibble field indicates the current size of the DRCW screening list at the time of record generation.
Spare Data1	This four-nibble field is for future expansion.
Spare Data2	This four-nibble field is for future expansion.
Note: A nibble is half of one byte, or four bits. Refer to the "Sample figure DF09 extension record" (page 410).	

"SMDR DF09 extension call records example (Part 1 of 4)" (page 412) through "SMDR DF09 extension call records example (Part 4 of 4)" (page 415) show an example of the byte structure for the SMDR DF09 extension call records.

SMDR DF09 extension call records example (Part 1 of 4)

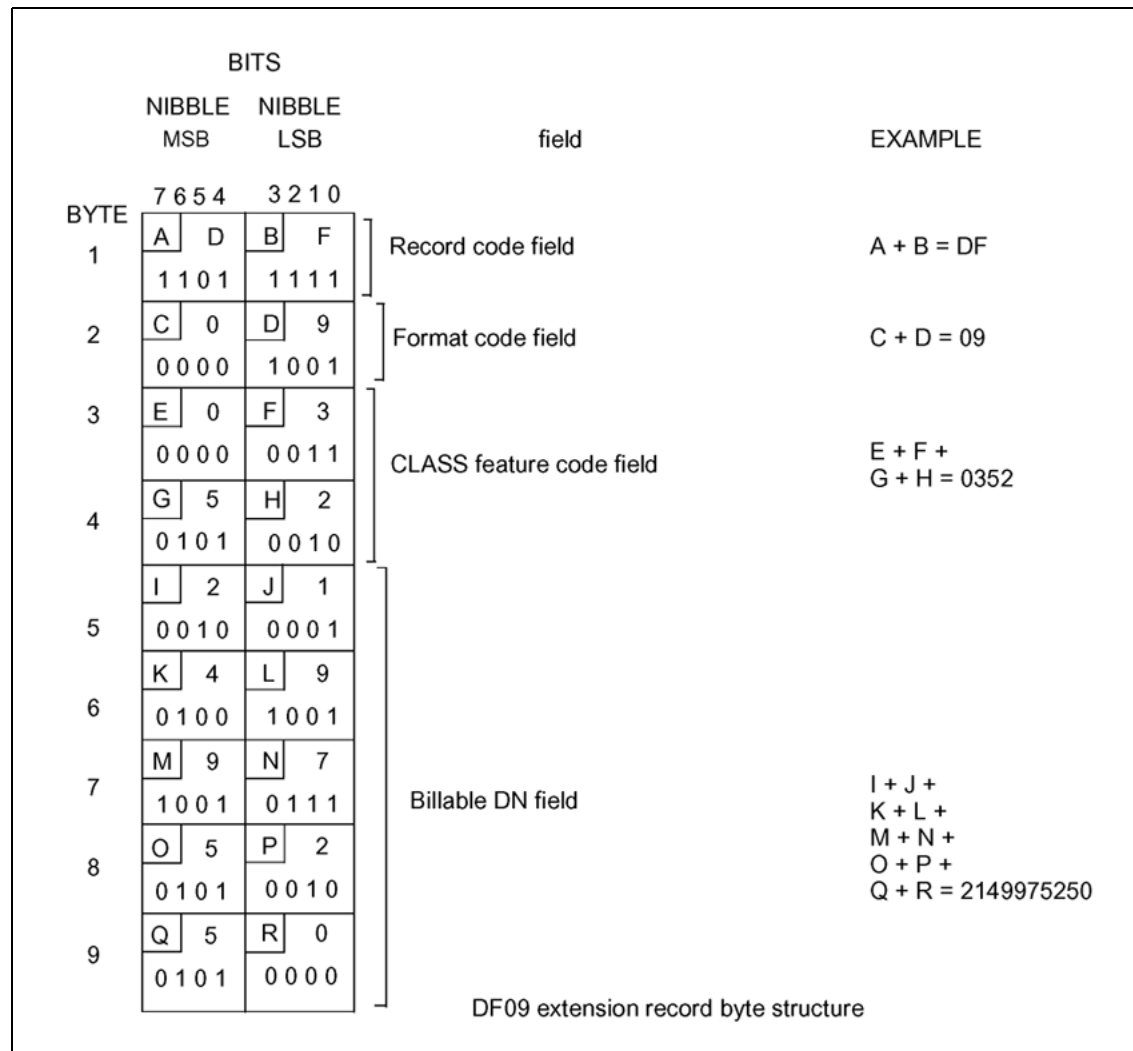

SMDR DF09 extension call records example (Part 2 of 4)

		BITS		field	EXAMPLE
		NIBBLE MSB	NIBBLE LSB		
BYTE	7 6 5 4	3 2 1 0			
10	S 1	T 9	Event year field	S + T + U + V = 1998	
	0 0 0 1	1 0 0 1			
11	U 9	V 8	Event month field	W + X = 01	
	1 0 0 1	1 0 0 0			
12	W 0	X 1	Event day field	Y + Z = 30	
	0 0 0 0	0 0 0 1			
13	Y 3	Z 0	Event hour field	AA + AB = 15	
	0 0 1 1	0 0 0 0			
14	AA 1	AB 5	Event minute field	AC + AD = 20	
	0 0 0 1	0 1 0 1			
15	AC 2	AD 0	Event second field	AE + AF = 25	
	0 0 1 0	0 0 0 0			
16	AE 2	AF 5	Num Avail field	AG + AH + AI + AJ = 0000	
	0 0 1 0	0 1 0 1			
17	AG 0	AH 0	Num Unavail field	AK + AL + AM + AN = 0000	
	0 0 0 0	0 0 0 0			
18	AI 0	AJ 0			
	0 0 0 0	0 0 0 0			
19	AK 0	AL 0			
	0 0 0 0	0 0 0 0			
20	AM 0	AN 0			
	0 0 0 0	0 0 0 0			

DF09 extension record byte structure (continued)

SMDR DF09 extension call records example (Part 3 of 4)

BITS									
NIBBLE					NIBBLE				
MSB					LSB				
field					EXAMPLE				
BYTE	7	6	5	4	3	2	1	0	
21	AO	0	AP	0	0000	0000	0000	0000	Name Avail field
22	AQ	0	AR	0					
23	AS	0	AT	0	0000	0000	0000	0000	Name Unavail field
24	AU	0	AV	0					
25	AW	0	AX	0	0000	0000	0000	0000	Conf Pegs field
26	AY	0	AZ	0					
27	BA	0	BB	0	0000	0000	0000	0000	SCF List size
28	BC	0	BD	5					
29	BE	0	BF	0	0000	0101	0000	0000	SCA List size
30	BG	0	BH	0					
31	BI	0	BJ	0	0000	0000	0000	0000	SCRJ List size

AO + AP +
AQ + AR = 0000

AS + AT +
AU + AV = 0000

AW + AX +
AY + AZ = 0000

BA + BB +
BC + BD = 0005

BE + BF +
BG + BH = 0000

BI + BJ +
BK + BL = 0000

DF09 extension record byte structure (continued)

SMDR DF09 extension call records example (Part 4 of 4)

BYTE	7	6	5	4	3	2	1	0		
32	BK	0	BL	0	SCRJ List size (continued)				BI + BJ + BK + BL = 0000	
	0	0	0	0						
33	BM	0	BN	0	DRCQ List size				BM + BN + BO + BP = 0000	
	0	0	0	0						
34	BO	0	BP	0	Spare Data1				BQ + BR + BS + BT = 0000	
	0	0	0	0						
35	BQ	0	BR	0	Spare Data2				BU + BV + BW + BX = 0000	
	0	0	0	0						
36	BS	0	BT	0						
	0	0	0	0						
37	BU	0	BV	0						
	0	0	0	0						
38	BW	0	BX	0						
	0	0	0	0						

DF09 extension record byte structure (end)

The following example illustrates a sample portion of the SMDR call record for a call with a DF09 extension record.

```
DF 09      0352 2149975250 1998 01 30 15 20 25 0000 0000
           0000 0000 0000 0005 0000 0000 0000 0000 0000
```

The following example illustrates the same data shown in the example immediately above with the detailed CALLDUMP output:

```
*REC CODE:DF FMT CODE:09 CLASS FEATURE CODE:0352 BILL
DN:21479975250 EVENT YEAR:1998 EVENT MONTH:01 EVENT
DAY:30 EVENT HOUR:15 EVENT MINUTE:20 EVENT SECOND:25
NUM AVAIL:0000 NUM UNAVAIL:0000 NAME AVAIL:0000 NAME
UNAVAIL:0000 CONF PEGS:0000 SCF LIST SIZE:0005 SCA LIST
SIZE:0000 SCRJ LIST SIZE:0000 DRCW LIST SIZE:0000 SPARE
DATA1:0000 SPARE DATA2:0000
```

"Feature code to feature event mapping" (page 416) shows the feature code to feature event mapping and the conditions required to generate the log or record.

Feature code to feature event mapping

CLASS feature code	CLASS feature name and event	Log or record generation condition
0032	AR reactivation - delayed processing	When the feature was deactivated then reactivated and completed after the originator goes on-hook.
0033	ACB reactivation - delayed processing	When the feature was deactivated then reactivated and completed after the originator goes on-hook.
0034	AR reactivation - busy ringback	When the feature was reactivated, but was not completed (timed out), because the originator was off-hook. See note.
0035	ACB reactivation - busy ringback	When the feature was reactivated, but was not completed (timed out), because the originator was off-hook. See note.
0036	AR reactivation - timeout	When the feature was reactivated, but was not completed (timed out), because the originator or terminator was off-hook.
0037	ACB reactivation - timeout	When the feature was reactivated, but was not completed (timed out), because the originator or terminator was off-hook.
0038	AR reactivation - deactivation	When the feature was deactivated, reactivated, then deactivated.
0039	ACB reactivation - deactivation	When the feature was deactivated, reactivated, then deactivated.
0052	SCF active	At the end of an SLE session, the SCF feature is currently active and has one or more DN's in its screening list, which previously contained at least one DN.
0060	AR immediate processing	When the feature immediately completes upon activation.
0061	ACB immediate processing	When the feature immediately completes upon activation.
0062	AR delayed processing	When the feature is activated and completes after the originator goes on-hook.
0063	ACB delayed processing	When the feature is activated and completes after the originator goes on-hook.
Note: Feature codes 0034, 0035, 0064, 0065, 0076, and 0085 are not supported.		

CLASS feature code	CLASS feature name and event	Log or record generation condition
0064	AR busy ringback	When the feature is activated, but is not completed (timed out), because the originator was off-hook. See note.
0065	ACB busy ringback	When the feature is activated, but is not completed (timed out), because the originator was off-hook. See note.
0066	AR timeout	When the feature is activated, but is not completed (timed out), because the originator or terminator was off-hook.
0067	ACB timeout	When the feature is activated, but is not completed (timed out), because the originator or terminator was off-hook.
0068	AR deactivation	When the feature is activated, but was deactivated before it could complete.
0069	ACB deactivation	When the feature is activated, but was deactivated before it could complete.
0070	COT	Upon feature activation.
0072	SCRJ active	At the end of an SLE session, the SCRJ feature is currently active and has one or more DN's in its screening list, which previously contained at least one DN.
0073	DRCW active	At the end of an SLE session, the DRCW feature is currently active and has one or more DN's in its screening list, which previously contained at least one DN.
0075	CNDB or CNNB activation	Upon feature activation.
0076	Single Activation SCF (SASCF)	Upon feature activation. See note.
0079	SCA active	At the end of an SLE session, the SCA feature is currently active and has one or more DN's in its screening list, which previously contained at least one DN.
0080	CND	At audit interval defined by tuple CIDSUSPAUD in table AMAOPTS.
0081	DDN	At audit interval defined by tuple CIDSUSPAUD in table AMAOPTS.
0082	CNAMD	At audit interval defined by tuple CIDSUSPAUD in table AMAOPTS.
Note: Feature codes 0034, 0035, 0064, 0065, 0076, and 0085 are not supported.		

CLASS feature code	CLASS feature name and event	Log or record generation condition
0084	BCLID	At audit interval defined by tuple BCLID_USPAUD in table AMAOPTS.
0085	CNAB	Upon feature activation. See note
0087	CNND	At audit interval defined by tuple CIDSUSPAUD in table AMAOPTS.
0088	Calling Name and Dialable DN Delivery	At audit interval defined by tuple CIDSUSPAUD in table AMAOPTS.
0089	DSCWID	At audit interval defined by tuple DSCWID_CONF_AUDIT in table AMAOPTS.
0095	AR two-level act - first level completion	When the first level of a two-level AR session is completed.
0152	SCF inactive	At the end of an SLE session, the SCF feature is currently inactive and has one or more DNs still in its screening list.
0172	SCRJ inactive	At the end of an SLE session, the SCRJ feature is currently inactive and has one or more DNs still in its screening list.
0173	DRCW inactive	At the end of an SLE session, the DRCW feature is currently inactive and has one or more DNs still in its screening list.
0179	SCA inactive	At the end of an SLE session, the SCA feature is currently inactive and has one or more DNs still in its screening list.
0252	SCF inactive-list deleted	At the end of an SLE session, the SCF feature had its entire screening list deleted.
0272	SCRJ inactive-list deleted	At the end of an SLE session, the SCRJ feature had its entire screening list deleted.
0273	DRCW inactive-list deleted	At the end of an SLE session, the DRCW feature had its entire screening list deleted.
0279	SCA inactive-list deleted	At the end of an SLE session, the SCA feature had its entire screening list deleted.
0352	SCF active - initial list creation	At the end of an SLE session, the SCF feature is currently active and has one or more DNs in its screening list which previously contained no DNs.
0372	SCRJ active - initial list creation	At the end of an SLE session, the SCRJ feature is currently active and has one or more DNs in its screening list which previously contained no DNs.
Note: Feature codes 0034, 0035, 0064, 0065, 0076, and 0085 are not supported.		

CLASS feature code	CLASS feature name and event	Log or record generation condition
0373	DRCW active - initial list creation	At the end of an SLE session, the DRCW feature is currently active and has one or more DNs in its screening list which previously contained no DNs.
0379	SCA active - initial list creation	At the end of an SLE session, the SCA feature is currently active and has one or more DNs in its screening list which previously contained no DNs.
0452	SCF inactive - initial list creation	At the end of an SLE session, the SCF feature is currently not active and has one or more DNs in its screening list which previously contained no DNs.
0472	SCRJ inactive - initial list creation	At the end of an SLE session, the SCRJ feature is currently not active and has one or more DNs in its screening list which previously contained no DNs.
0473	DRCW inactive - initial list creation	At the end of an SLE session, the DRCW feature is currently not active and has one or more DNs in its screening list which previously contained no DNs.
0479	SCA inactive - initial list creation	At the end of an SLE session, the SCA feature is currently not active and has one or more DNs in its screening list which previously contained no DNs.
0552	SCF inactive - session aborted	At the end of an SLE session, the SCF feature is currently not active and has no DNs in its screening list which previously contained no DNs.
0572	SCRJ inactive - session aborted	At the end of an SLE session, the SCRJ feature is currently not active and has no DNs in its screening list which previously contained no DNs.
0573	DRCW inactive - session aborted	At the end of an SLE session, the DRCW feature is currently not active and has no DNs in its screening list which previously contained no DNs.
0579	SCA inactive - session aborted	At the end of an SLE session, the DRCW feature is currently not active and has no DNs in its screening list which previously contained no DNs.
Note: Feature codes 0034, 0035, 0064, 0065, 0076, and 0085 are not supported.		

CLASS features operations

The following information assumes that all necessary translations, RESOFC datafill, and maintenance datafill are already available. Only the necessary datafill required for activating the SMDR Per Use Billing for Features feature is described.

There is a hierarchy of control levels used to determine if an SMDR per use billing record is generated. On a switch-by-switch basis, the control mechanism is the SUSP tuple in table AMAOPTS. Setting this tuple to OFF turns off per use billing for the entire switch. Setting this tuple to ON generates per use billing records depending on the further levels of control.

To generate SMDR per use billing records for customer groups use table CUSTSMDR. Every customer group defined on the switch has an entry in this table. For each customer group that is to have SMDR per use billing records generated, the option PERUSE must be added.

To generate SMDR per use billing records on a phone or feature basis, set the billing option to AMA when adding the CLASS feature using SERVORD. When SUSP is turned off in table AMAOPTS, SERVORD does not present the billing option prompt when adding one of the CLASS features. Instead, it sets the option to NOAMA by default. When SUSP is turned on in table AMAOPTS, SERVORD presents a billing option prompt after each CLASS feature.

An additional entry must be made in table AMAOPTS for the CLASS features CND, DDN, CNAMD, BCLID, and DSCIWD. The CLASS display features CND, DDN, and CNAMD must have an audit schedule set using tuple CIDSUSPAUD in table AMAOPTS. This tuple controls the interval at which the switch runs through every phone with one of the CLASS display features added. This tuple also generates a report that gives detailed delivery information. The CLASS features BCLID and DSCWID have similar tuples in table AMAOPTS called BCLID_USPAUD and DSCWID_CONF_AUDIT, respectively.

Using this feature To generate the logs and records to use this feature, follow these steps:

- Add the option PERUSE to the appropriate customer group in table CUSTSMDR. Set LOGS to Y (generates the MSLSMDR 100 log).
- Turn on the SUSP option in table AMAOPTS.
- Assign one of the CLASS features (listed in the usage sensitive SMDR extension record section) to a phone in the customer group that has PERUSE assigned to it. Set the billing option to AMA.
- Set an audit interval using tuple CIDSUSPAUD in table AMAOPTS for the CLASS display features CND, DDN, and CNAMD.
- Set an audit interval using tuple BCLID_USPAUD in table AMAOPTS for the CLASS display features BCLID and DSCIWD.
- Duplicate a log or record generation condition (refer to ["Feature code to feature event mapping" \(page 416\)](#)) for the feature assigned to the phone.

- Run CALLDUMP to output the record.

Automatic Call Back/Automatic Recall The following information describes example datafill, feature codes, and conditions for features ACB and AR. The only fields within the billing record that are important to features ACB and AR are CLASS feature code, billable DN, event time, and event date.

Sample datafill for ACB and AR

```
>table amaopts
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: AMAOPTS
>pos susp
                                SUSP                                ON

>table custsmdr
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: CUSTSMR
>pos bnrrch
                                BNRRCH                                9
(RAO ) (ANSTIM 15) (MSN) (PIN) (TCN ) (PERUSE Y) $
>qdn 9975200
-----
DN:          9975200
TYPE: SINGLE PARTY LINE
SNPA: 214 SIG: DT LNATTIDX: N/A
LINE EQUIPMENT NUMBER: LCM0 00 0 11 00
LINE CLASS CODE: IBN
IBN TYPE: STATION
CUSTGRP: BNRRCH SUBGRP: 0 NCOS: 0
CARDCODE: 6X17AC GND: N PADGRP: NPDGP BNV: NL MNO: N
PM NODE NUMBER : 38
OPTIONS:
ACB AMA AR AMA DGT
-----
```

ACB and AR SMDR per use billing records feature codes

Code	Description
0032	AR reactivation - delayed processing.
0033	ACB reactivation - delayed processing.
0034	AR reactivation - busy ringback (see note).
0035	ACB reactivation - busy ringback (see note).
0036	AR reactivation - timeout.
0037	ACB reactivation - timeout.
0038	AR reactivation - deactivation.

Note: These feature codes are not supported.

Code	Description
0039	ACB reactivation - deactivation.
0060	AR immediate processing.
0061	ACB immediate processing.
0062	AR delayed processing.
0063	ACB delayed processing.
0064	AR busy ringback (see note).
0065	ACB busy ringback (see note).
0066	AR timeout.
0067	ACB timeout.
0068	AR deactivation.
0069	ACB deactivation.
0095	AR two-level act - first level completion.
Note: These feature codes are not supported.	

SMDR per use billing feature code conditions for ACB and AR

Feature code condition	Description
Immediate processing	The ACB or AR feature is activated against a DN that is currently idle, allowing the call to go through immediately.
Delayed processing	The ACB or AR feature was previously activated against a DN that was busy. That DN just become idle allowing the call to complete.
Busy ringback	Not supported.
Timeout	The ACB or AR feature was previously activated against a DN, or a DN which activated the feature, that was busy and stayed busy. The length of the busy time was long enough that the background monitor went on longer than the T6 timer value in table RESOFC and timed out, canceling the monitor process.
Deactivation	A previously activated ACB or AR monitor process was just deactivated.
Reactivation - delayed processing	The ACB or AR feature was previously activated against a DN that was busy. The feature was activated again against the same DN, resetting the T6 timer value. The DN became idle and the call was completed.
Reactivation - busy ringback	Not supported.
Reactivation - timeout	The ACB or AR feature was previously activated against a DN that was busy. The feature was activated again against the same DN, resetting the T6 timer. That DN, or a DN which activated the feature, stayed busy. The length of the busy time was long enough that the background monitor went on longer than the T6 timer value in table RESOFC and timed out, canceling the monitor process.

Feature code condition	Description
Reactivation - deactivation	A previously activated, and subsequently reactivated, ACB or AR monitor process was just activated.
AR two level activation - first level completion	This condition applies to the AR feature only. The AR feature can be set up for two-level activation. The record is generated when moving from level one to level two in a two-level activation scenario.

CLASS display features - CND, CNAMD, DDN ["Sample datafill for CLASS display features"](#) (page 423) shows example datafill, feature codes, and example log information for the CLASS display features.

Sample datafill for CLASS display features

```

>table amaopts
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: AMAOPTS
>pos susp
                SUSP                                ON

>table custsmrdr
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: CUSTSMRDR
>pos bnrrch
                BNRRCH                                9
(RAO ) (ANSTIM 15) (MSN ) (PIN ) (TCN ) (PERUSE Y) $
>qdn 9975200
-----
DN:                9975200
TYPE: SINGLE PARTY LINE
SNPA: 214 SIG: DT LNATTIDX: N/A
LINE EQUIPMENT UMBER: LCM0 00 0 11 00
LINE CLASS CODE: IBN
IBN TYPE: STATION
CUSTGRP:          BNRRCH          SUBGRP: 0 NCOS: 0
CARDCODE: 6X17AC GND: N PADGRP: NPDGP BNV: NL MNO: N
PM NODE NUMBER    : 38
PM TERMINAL NUMBER : 353
OPTIONS:
DGT CND AMA CNAMD AMA
-----
>table amaopts
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: AMAOPTS
>pos cidsuspaudd
                CIDSUSPAUD PERIODIC 980226 0000 24 HRS

```

The CLASS display features are a little different from the other CLASS features, because the per use billing records are not generated for every use of the feature. Instead, an audit process is set up to collect CLID delivery counts for each phone that has one of these features added to it. At specified intervals defined by tuple CIDSUSPAUD in table AMAOPTS, a record is generated for every phone with a CLASS display feature that shows the number of times CLID information was delivered to that phone. The delivery counts are then reset to zero so that they can accumulate for the next audit interval.

Note: When the CND, DDN, and CNAMD features are added to a line using SERVORD with the AMA option, they function differently from the NOAMA option. The NOAMA option (when the display feature is added to a line) immediately delivers CID information to the phone. When the AMA option, the display feature can be activated and deactivated. Additionally, the user must activate the display feature by an activation code (described in the Residential Enhanced Services portion of the *Meridian SL-100 Translations Guide*), before CID delivery takes place. This gives users the ability to turn off the display feature if they will be gone for long periods of time. The Bellcore recommended activation and deactivation codes are *65 and *85, respectively.

The CIDSUSPAUD tuple in table AMAOPTS controls the generation of audits. In the sample datafill for CLASS display features the audit is set to PERIODIC, with a start date of February 26, 1998, a start time of 0000 (midnight), and an interval of 24 hours. Therefore, starting at midnight on February 26, 1998, a billing record showing CLID delivery counts is generated for every phone that has one of the CLASS display features added to it. The audit repeats at midnight on every subsequent night.

CLASS display SMDR per use billing records feature codes

Code	Description
0080	Calling Number Delivery (CND).
0081	Dialable Directory Number (DDN).
0082	Calling Name Delivery (CNAMD).
0087	Calling Name and Number Delivery (CNND).
0088	Calling Name and Dialable DN Delivery.
Note: Feature codes 0087 and 0088 indicate that both a number delivery feature and a name delivery feature have been added to the phone.	

Sample MSLSMDR 100 log and SMDR DF09 extension record

```

MSLS100 JAN28 14:08:23 0007 INFO SMDR PER USE BILLING LOG
  CLASS FEATURE CODE      = 0087 - CNND (Calling Name and Number Delivery)
  BILLABLE DN             = 2149975200
  EVENT TIME              = 00:00:23
  EVENT DATE              = 02/26/1998
  CLASS DISPLAY INFO DELIVERY COUNTS:
    NUMBER: 0004 AVAILABLE, 0003 UNAVAILABLE
    NAME: 0002 AVAILABLE, 0001 UNAVAILABLE
  DSCWID CONFERENCE PEGS: 0000
  SCREEN LIST SIZE:
    SCF = 0000, SCA = 0000, SCRJ = 0000, DCRW = 0000

*REC CODE:DF FMT CODE:09 CLASS FEATURE CODE:0087 BILL DN:2149975200
EVENT YEAR:1998 EVENT MONTH:02 EVENT DAY:26 EVENT HOUR:00 EVENT
MINUTE:00 EVENT SECOND:23 NUM AVAIL:0004 NUM UNAVAIL:0003 NAME
AVAIL:0002 NAME UNAVAIL: 0001 CONF PEGS:0000 SCF IST SIZE:0000 SCA
LIST SIZE:0000 SCRJ LIST SIZE:0000 DRCW LIST SIZE:0000 SPARE
DATA1:0000 SPARE DATA2:0000

```

The important fields in the billing records for the CLASS display information are the CLASS feature code, billable DN, and CLASS display info delivery counts. The event date and time are the date and time that the audit was run and have no relation to when the CLID information itself was delivered.

In "Sample MSLSMDR 100 log and SMDR DF09 extension record" (page 425), the record shows that ten calls are made to DN 2149975200. It also shows that both CND and CNAMD have been added to this phone, so the interpretation of the individual fields of the CLASS display info delivery counts section is a little different than it might seem.

To interpret "Sample MSLSMDR 100 log and SMDR DF09 extension record" (page 425), an explanation of the fields is necessary. Note that DDN and CND are mutually exclusive features, and that calling number delivery is used as a description of the process for both CND and DDN. When a single instance of CND, DDN or CNAMD is added to a phone, the fields indicate the following as shown in "Log field descriptions when CND, DDN, or CNAMD are added to a phone" (page 425) and "Log field descriptions when CNAMD and either CND or DDN are added to phone" (page 426).

Log field descriptions when CND, DDN, or CNAMD are added to a phone

Field name	Description
NUM AVAIL	Indicates the number of times a call was made and the calling party number was delivered to the phone. This field is zero if only CNAMD is present on the phone.

Field name	Description
NUM UNAVAIL	Indicates the number of times a call was made and the calling party number was unavailable, or blocked, and a private ID or unavailable message was delivered to the phone. This field is zero if only CNAMD is present on the phone.
NAME AVAIL	Indicates the number of times a call was made and the calling party name was delivered to the phone. This field is zero if only CND or DDN are present on the phone.
NAME UNAVAIL	Indicates the number of times a call was made and the calling party name was unavailable or blocked and a private ID or unavailable message was delivered to the phone. This field is zero if only CND or DDN is present on the phone.

Log field descriptions when CNAMD and either CND or DDN are added to phone

Field name	Description
NUM AVAIL	Indicates the number of times a call was made and the calling party name, but not the number, was delivered to the phone.
NUM UNAVAIL	Indicates the number of times a call was made and the calling party number, but not the name, was unavailable or blocked and a private ID or unavailable message was delivered to the phone.
NAME AVAIL	Indicates the number of times a call was made and both the calling party name and number were delivered to the phone.
NAME UNAVAIL	Indicates the number of times a call was made and neither the calling party name nor number were delivered to the phone.

The example in "[Sample MSLSMR 100 log and SMDR DF09 extension record](#)" (page 425) shows that ten calls were made to 2149975200. Of those ten, four included only the name, three included only the number, two included both the name and the number, and one included no information.

In addition to the audit process, a per use record is also generated when one of the CLASS display features is removed from a line. This takes care of any CLID information delivery counts that were accrued from the time of the last audit to the time of feature removal.

Customer Oriented Trace The COT CLASS feature generates billing records with the CLASS feature code of 0070-COT (Customer Originated Trace).

Billing record generation with this feature is straightforward. It is generated the first time a user activates the COT feature against a previous incoming call. The record is only generated if the trace was fully successful (that is, resulting in a valid calling DN). The record is not generated for subsequent

COT activations against the same previous incoming call. Once a new call comes in, a new activation of COT results in the generation of a per-use billing record.

The only fields within the billing record that are of concern for this feature are the CLASS feature code, billable DN, and event time and date.

"Sample datafill for COT" (page 427) shows an example datafill and feature codes information for COT.

Sample datafill for COT

```
>table amaopts
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: AMAOPTS
>pos susp
          SUSP                      ON
>table custsmdr
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: CUSTSMR
>pos bnrrch
          BNRRCH          9
(RAO ) (ANSTIM 15) (MSN ) (PIN ) (TCN ) (PERUSE Y)  $
>qdn 9975200
-----
DN:      9975200
TYPE:    SINGLE PARTY LINE
SNPA:    214 SIG: DT LNATTIDX: N/A
LINE EQUIPMENT NUMBER: LCM0 00 0 11 00
LINE CLASS CODE: IBN
IBN TYPE: STATION
CUSTGRP: BNRRCH SUBGRP: 0 NCOS: 0
CARDCODE: 6X17AC GND: N PADGRP: NPDGP BNV: NL MNO: N
PM NODE NUMBER : 38
PM TERMINAL NUMBER : 353
OPTIONS:
COT AMA DGT
```

CLASS display feature - CNDB The CNDB CLASS feature generates billing records with the CLASS feature code of 0075-CNDB or CNNB activation.

A billing record for this feature is generated every time it is activated on an outgoing call that completes to a terminating agent. It is not generated if the feature access code is dialed without other digits.

The important fields for this feature within the billing record are the CLASS feature code, billable DN, event time, and event date.

Note: There is an existing CLASS feature Calling Name and Number Blocking (CNNB) that encompasses the functionality of Calling Name

Delivery Blocking (CNDB) and Calling Name Blocking (CNAB). A user dialing the activation code for CNNB is in effect activating both CNDB and CNAB on the call. The use of CNNB generates a per-use billing record if one or both of the following conditions occur:

- the phone has CNDB with AMA billing as one of its line options
- CNDB with AMA billing is enabled for universal access

If neither is true, a per-use billing record is not generated.

"[CNDB datafill and feature codes example](#)" (page 428) shows example datafill and feature codes information for CNDB.

CNDB datafill and feature codes example

```
>table amaopts
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: AMAOPTS
>pos susp
                SUSP                                ON
>table custsmdr
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: CUSTSMR
>pos bnrrch
                BNRRCH                                9
(RAO ) (ANSTIM 15) (MSN ) (PIN ) (TCN ) (PERUSE Y) $
>qdn 9975200
-----
DN: 9975200
TYPE: SINGLE PARTY LINE
SNPA: 214 SIG: DT LNATTIDX: N/A
LINE EQUIPMENT NUMBER: LCM 0 00 0 11 00
LINE CLASS CODE: IBN
IBN TYPE: STATION
CUSTGRP: BNRRCH SUBGRP: 0 NCOS: 0
CARDCODE: 6X17AC GND: N PADGRP: NPDGP BNV: NL MNO: N
PM NODE NUMBER      : 38
PM TERMINAL NUMBER  : 353
OPTIONS:
CNDB AMA DGT
-----
```

Screening list features - SCA, SCF, SCRJ, DRCW "[Sample datafill for screening list features \(SCA only\)](#)" (page 429) shows example datafill, feature codes, and sample log information for the screening list features.

Sample datafill for screening list features (SCA only)

```

>table amaopts
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: AMAOPTS
>pos susp
          SUSP                      ON
>table custsmdr
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: CUSTSMDR
>pos bnrrch
          bnrrch          9
(RAO ) (ANSTIM 15) (MSN ) (PIN ) (TCN ) (PERUSE Y) $
>qdn 9975200
-----
DN:      9975200
TYPE: SINGLE PARTY LINE
SNPA: 214      SIG: DT      LNATTIDX: N/A
LINE EQUIPMENT NUMBER: LCM0  00 0  11  00
LINE CLASS CODE: IBN
IBN TYPE: STATION
CUSTGRP:      BNRRCH SUBGRP: 0  NCOS: 0
CARDCODE: 6X17AC GND: N PADGRP: NPDGP BNV: NL MNO: N
PM NODE NUMBER      :      38
PM TERMINAL NUMBER :      353
OPTIONS:
SCA AMA INACT $ DGT
-----

```

SLE CLASS features SMDR per use billing records feature codes

Code	Description
0052	SCF active.
0072	SCRJ active.
0073	DRCW active.
0079	SCA active.
0152	SCF inactive.
0172	SCRJ inactive.
0173	DRCW inactive.
0179	SCA inactive.
0252	SCF inactive - list deleted.
0272	SCRJ inactive - list deleted.
0273	DCRW inactive - list deleted.
0279	SCA inactive - list deleted.
0352	SCF active - initial list creation.

Code	Description
0372	SCRJ active - initial list creation.
0373	DRCW active - initial list creation.
0379	SCA active - initial list creation.
0452	SCF inactive - initial list creation.
0472	SCRJ inactive - initial list creation.
0473	DRCW inactive - initial list creation.
0479	SCA inactive - initial list creation.
0552	SCF inactive - session aborted.
0572	SCRJ inactive - session aborted.
0573	DRCW inactive - session aborted.
0579	SCA inactive - session aborted.

SMDR per use billing feature code conditions

Feature code condition	Description
Active	The SLE session is finished, the feature status is active, and the number of entries in the screening list is greater than zero.
Inactive	The SLE session is finished, the feature status is inactive, and the number of entries in the screening list is greater than zero.
List deletion	The SLE session is finished and the screening list has been deleted. This automatically leaves the feature in an inactive state.
Active with initial list creation	The SLE session is finished, the feature status is active, and the screening list was initially created with one or more number of entries.
Inactive with initial list creation	The SLE session is finished, the feature status is inactive, and the screening list was initially created with one or more number of entries.
Inactive - session abort	A screening list editing session is aborted without initially creating a screening list.

Note: Billing records are not generated by the operation of any of the SLE features.

Sample MSLSMDR 100 log and SMDR DF09 extension record

```

MSLS100 JAN28 14:08:23 0007 INFO SMDR PER USE BILLING LOG
  CLASS FEATURE CODE      = 0379 - SCA activation + list size increase
  BILLABLE DN             = 2149975200
  EVENT TIME              = 17:45:23
  EVENT DATE              = 02/25/1998
  CLASS DISPLAY INFO DELIVERY COUNTS:
    NUMBER: 0000 AVAILABLE, 0000 UNAVAILABLE
    NAME: 0000 AVAILABLE, 0000 UNAVAILABLE
  DSCWID CONFERENCE PEGS: 0000
  SCREEN LIST SIZE:
    SCF = 0000, SCA = 0013, SCRJ = 0000, DRCW = 0000

*REC CODE:DF FMT CODE:09 CLASS FEATURE CODE:0379 BILL DN:2149975200
EVENT YEAR:1998 EVENT MONTH:02 EVENT DAY:25 EVENT HOUR:17 EVENT
MINUTE:45 EVENT SECOND:23 NUM AVAIL:0000 NUM UNAVAIL:0000 NAME
AVAIL:0000 NAME UNAVAIL: 0000 CONF PEGS:0000 SCF LIST SIZE:0000 SCA
LIST SIZE:0013 SCRJ LIST SIZE:0000 DRCW LIST SIZE:0000 SPARE
DATA1:0000 SPARE DATA2:0000

```

The important fields in the billing records for the CLASS display information are the CLASS feature code, billable DN, event date, event time, and screen list size.

The screen list size fields show the size of the screen list for the particular feature identified by the CLASS feature code at the time of the generation of the record. In the sample log, the record shows the size of the screen list for the SCA feature was increased and the feature itself is in the active state. At the end of the SLE session, the size of the screening list for the SCA feature was 13 entries.

The four screening list size fields are mutually exclusive. Only the field that corresponds to the feature identified by the class feature code has a valid value. All other fields are zero.

Deluxe Spontaneous Call Waiting Display ["Sample datafill for DSCWID" \(page 432\)](#) shows example datafill information for DSCWID.

Sample datafill for DSCWID

```

>table amaopts
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: AMAOPTS
>pos susp
                SUSP                                ON
>table custsmdr
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: CUSTSMDR
>pos bnrrch
                BNRRCH                9
(RAO ) (ANSTIM 15) (MSN ) (PIN ) (TCN ) (PERUSE Y) $
>qdn 9975200
-----
DN:                9975200
TYPE: SINGLE PARTY LINE
SNPA: 214 SIG: DT LNATTIDX: N/A
LINE EQUIPMENT NUMBER: LCM0 00 0 11 00
LINE CLASS CODE: IBN
IBN TYPE: STATION
CUSTGRP: BNRRCH SUBGRP: 0 NCOS: 0
CARDCODE 6X17AC GND: N PADGRP: NPDGP BNV: NL MNO: N
PM NODE NUMBER : 38
PM TERMINAL NUMBER : 353
OPTIONS:
DFT DSCWID DAMA CONF $
-----
>table amaopts
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DNOS NOT ALLOWED
TABLE: AMAOPTS
>pos dscwid_conf_audit
                DSCWID_CONF_AUDIT PERIODIC 980226 0000 24 HRS

```

The important fields in the billing records for the CLASS display information are the CLASS feature code, billable DN, and DSCWID conference pegs. The event date and event time are the date and time that the audit was run.

Bulk Calling Line Identification "[Sample datafill for BCLID](#)" (page 433) shows example datafill, feature codes, and sample log information for BCLID.

Sample datafill for BCLID

```

>table amaopts
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: AMAOPTS
>pos susp
                SUSP                                ON
>table bclidgrp
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: BCLIDGRP
>lis all
1 Y 2149975250 FIRST N N Y Y Y Y (LCM0 00 0 11 00)$
2 Y 2149975350 FIRST N N Y Y Y Y (LCM0 00 0 00 05)$
>qdn 9975200
-----
DN:          9975200
TYPE: SINGLE PARTY LINE
SNPA: 214 SIG: DT LNATTIDX: N/A
LINE EQUIPMENT NUMBER: LCM0 00 0 11 00
LINE CLASS CODE: IBN
IBN TYPE: STATION
CUSTGRP:      BNRRCH SUBGRP: 0 NCOS: 0
CARDCODE: 6X17AC GND: N PADGRP: NPDGP BNV: NL MNO: N
PM NODE NUMBER      : 38
PM TERMINAL NUMBER   : 353
OPTIONS:
DGT BCLID 0
-----
>table amaopts
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE: AMAOPTS
>pos bclid_uspaud
                BCLID_USPAUD PERIODIC 980226 0000 24 HRS

```

This feature is different from the other CLASS features, because the per use billing records are not generated for every use of the feature. Instead, an audit process is set up to collect BCLID delivery counts for every BCLID group defined in table BCLIDGRP. At specified intervals defined by tuple BCLID_USPAUD in table AMAOPTS, a record is generated for every BCLID group defined in table BCLIDGRP. The delivery counts are then reset to zero so that they can accumulate for the next audit interval.

Additionally, due to the nature of this feature, the check in table CUSTSMR is bypassed. Instead, per use billing for each BCLID group is controlled by the USP field of each tuple in table BCLIDGRP.

As previously stated, the BCLID_USPAUD tuple in table AMAOPTS controls the generation of the audits. In the previous BCLID datafill example, the audit is set to PERIODIC. The audit has a start date of February 26, 1998,

a start time of 0000 (midnight), and an interval of 24 hours. Therefore, starting at midnight on February 26, 1998, a billing record showing BCLID delivery counts is generated for every BCLID group in table BCLIDGRP, and the audit will repeat at midnight on every subsequent night.

The BCLID CLASS feature generates billing records with the CLASS feature code 084-BCLID (Bulk Calling Line ID) Delivery.

Sample MSLSMR 100 log and SMDR DF09 extension record

```
MSLS100 JAN28 14:08:23 0007 INFO SMDR PER USE BILLING LOG
  CLASS FEATURE CODE      = 0084 - BCLID (Bulk Calling Line ID) Delivery
  BILLABLE DN             = 2149975250
  EVENT TIME              = 00:00:23
  EVENT DATE              = 02/26/1998
  CLASS DISPLAY INFO DELIVERY COUNTS:
    NUMBER: 0462 AVAILABLE, 0287 UNAVAILABLE
    NAME: 0000 AVAILABLE, 0000 UNAVAILABLE
  DSCWID CONFERENCE PEGS: 0000
  SCREEN LIST SIZE:
    SCF = 0000, SCA = 0000, SCRJ = 0000, DRCW = 0000

*REC CODE:DF FMT CODE:09 CLASS FEATURE CODE:0084 BILL DN:2149975250
EVENT YEAR:1998 EVENT MONTH:02 EVENT DAY:26 EVENT HOUR:00 EVENT
MINUTE:00 EVENT SECOND:23 NUM AVAIL:0462 NUM UNAVAIL:0287 NAME
AVAIL:0000 NAME UNAVAIL: 0000 CONF PEGS:0000 SCF LIST SIZE:0000 SCA
LIST SIZE:0000 SCRJ LIST SIZE:0000 DRCW LIST SIZE:0000 SPARE
DATA1:0000 SPARE DATA2:0000
```

The important fields in the billing records for the CLASS display information are the CLASS feature code, billable DN, and CLASS display info delivery counts. The event date and event time are the date and time that the audit was run. Since the BCLID feature represents a type of CLID feature, and the delivery counts are for the calling party number, the NUM AVAIL and NUM UNAVAIL fields were reused, instead of making a new field heading. The NAME AVAIL and NAME UNAVAIL fields are not used and will always be zero.

In the previous example log and SMDR extension record, the record shows that 749 calls were made to a BCLID group represented by a billable DN of 2149975250. Multiple phones can be in a single BCLID group, and the delivery count is an aggregate of all the phones in the group. Of the 749 calls, 462 had the calling party number information available to deliver, and 287 were blocked or had their CLID information unavailable.

SMDR record elements

The SMDR Per Use Billing extension record contains the following information:

- a code number indicating the CLASS feature event that occurred (the code numbers are listed in ["Feature code to feature event mapping" \(page 416\)](#))
- the DN to bill against
- the date the record was generated (Year 2000 ready)
- the time the record was generated

Activating and deactivating SMDR Per Use Billing extension record

Activating and deactivating the SMDR Per Use Billing extension record is done through datafill in table CUSTSMDR. The addition of a PERUSE option enables the generation of these SMDR records for the customer group for which the option is datafilled.

Generation of MSL logs

An MSL log is created every time an SMDR Per Use Billing extension record (#DF09) is produced. The log contains calling information such as CLASS feature code, billable DN, and date. Refer to ["Logs" \(page 437\)](#) for more information.

Accompanying feature

This feature works in conjunction with feature AX0390, CCM: SMDR Per Use Billing for Features.

Hardware requirements

MSL: SMDR Per Use Billing for Features has no hardware requirements.

Limitations and restrictions

The DF09 call extension record has the following limitations:

- Datafill appropriately all translations for the CLASS features that this record supports.
- Add the PERUSE option to the appropriate customer groups in table CUSTSMDR.
- Turn on the SUSP option in table AMAOPTS.
- Set AMA as the billing type when adding CLASS features through SERVORD.
- Set an audit interval using tuple CIDSUSPAUD in table AMAOPTS for the CLASS display features CND, DDN, and CNAMD.

- Set the USP option for the appropriate tuple in table BCLIDGRP for the CLASS feature BCLID. Set an audit interval using tuple BCLID_USPAUD in table AMAOPTS.
- Set an audit interval using tuple DSCWID_CONF_AUDIT in table AMAOPTS for CLASS feature DSCWID.
- The DF09 record is generated using a periodic audit of every phone that has option CND, DDN, CNAMD, DSCWID, and BCLID.
- The DF09 record is generated using activation/deactivation and through editing of the screening list for the SLE features SCA, SCF, SCRJ, and DRCW.
- The DF09 record is not generated when incoming calls are processed by SLE features SCA, SCF, SCRJ, and DRCW.
- The DF09 record is generated through feature activation or operation, or both, for every other supported feature.

Specific datafill instructions and operations for this feature are found in ["CLASS features operations" \(page 419\)](#).

Interactions

MSL: SMDR Per Use Billing for Features uses the existing SMDR facilities for generating extension records. No other new interactions are introduced by this feature.

The extension records generated by this feature are accessed using the CALLDUMP utility.

Datafill

The option, PERUSE, is added in table CUSTSMDR, along with a LOGS subfield. The PERUSE option enables and disables the DF09 extension record.

Provisioning information

Note that in all cases, a D1 record is produced immediately before the #DF09 extension record. This should be taken into account when setting any applicable office parameters for memory sizing, as well as for any downstream billing processor. Refer to the *Station Message Detail Recording Reference Guide*, 297-2071-119, for the format of the D1 record.

The size of the #DF09 extension record is 39 bytes (38 bytes of formatted data plus a one-byte header). The D1 record preceding a #DF09 is produced as a result of the way the SMDR billing system is built and cannot be removed. The information contained within it is not actual billing information, byte zeroed out fields.

["D1 record example" \(page 437\)](#) shows an example D1 record.

D1 record example

```
*REC CODE:D1 CUSTGRP CLLI:004 ORIGTYPE:A ORIGID:2147837000A
DATA CALL ID:A INFO DIGS:40 CONS NO:FF SUBGRP:0 TRM TYPE:A
TRM ID:AAAAAAAAAAAA RTE INFO:0 DAY=107 TIME: HR=08 MIN=28 SEC=51
ELAPSED TIME=000000 ORIG FC:B TERM FC:B CLD NO:9999999999AA
```

As previously stated, this record precedes every #DF09 extension record and can be safely discarded by a downstream billing processor. It can be distinguished from a valid D1 record by the ORIG FC and the TERM FC fields. These fields will always have a value of B when preceding a #DF09 extension record.

Two other fields within this D1 record also have valid information. These fields are:

- ORIGID - contains the same DN as the billable DN field of the #DF09 extension record
- CUSTGRP CLLI - contains a numerical representation of the customer group of the billable DN.

The information in these fields is provided to assist in searching through billing record archives with online search tools. They do not contain any additional information than what is in the #DF09 extension record.

For more information about provisioning, refer to the *Meridian SL-100 Office Parameters Reference Manual*.

Service Orders

MSL: SMDR Per Use Billing for Features does not affect SERVORD.

Operational Measurements

MSL: SMDR Per Use Billing for Features does not affect Operational Measurements.

Logs

This feature introduces the MSLSMDR 100 log. It is generated when a feature event occurs (refer to the feature code to feature event mapping table). "[MSLSMDR 100 log example](#)" (page 438) shows an example of the log.

MSLSMDR 100 log example

```

MSLS100 JAN28 14:08:23 0007 INFO SMDR PER USE BILLING LOG
CLASS FEATURE CODE      = 0070 - COT (Customer Originated Trace)
BILLABLE DN             = 1234567890
EVENT TIME              = 14:08:23
EVENT DATE              = 01/28/1998
CLASS DISPLAY INFO DELIVERY COUNTS:
    NUMBER: 0000 AVAILABLE, 0000 UNAVAILABLE
    NAME: 0000 AVAILABLE, 0000 UNAVAILABLE
DSCWID CONFERENCE PEGS: 0000
SCREEN LIST SIZE:
    SCF = 0000, SCA = 0000, SCRJ = 0000, DRCW = 0000

```

User interface

MSL: SMDR Per Use Billing for Features does not change the user interface.

Billing

MSL: SMDR Per Use Billing for Features adds an extension record for SMDR (#DF09). ["SMDR per use billing information" \(page 438\)](#) shows an example of the formatted SMDR per use billing information.

SMDR per use billing information

```

*REC CODE:DF FMT CODE:09 CLASS FEATURE CODE:0352 BILL DN:2149975250
EVENT YEAR:1998 EVENT MONTH: 01 EVENT DAY:30 EVENT HOUR:15 EVENT
MINUTE:20 EVENT SECOND:25 NUM AVAIL: 0000 NUM UNAVAIL: 0000 NAME
AVAIL: 0000 NAME UNAVAIL: 0000 CONF PEGS: 0000 SCF LIST SIZE: 0005 SCA
LIST SIZE: 0000 SCRJ LIST SIZE: 0000 DRCW LIST SIZE: 0000 SPARE
DATA1: 0000 SPARE DATA2: 0000

```

AX0377 - MAT GUI and Cabletron Development**Description**

Monitoring and managing the Meridian SL-100 system is done using a MAP terminal or a telnet session. This feature creates three Management Information Bases (MIBs) using the standard Simple Network Management Protocol (SNMP) to access and set data on the Meridian SL-100 system using an SNMP client. This data is currently available and accessed through MAP CI commands. The data that the MIB accesses provides the following information:

- userdata
- system tools
- lines

Userdata

This MIB provides general information about the user defined on the Meridian SL-100 system. This MIB has read-only access and provides the following fields:

- Username (string) - the user defined on the system
- Input device (string) - the MAP terminal or telnet device used to log in
- Output device (string) - the output device selected
- Input file (string) - the filename of the file being read
- Output file (string) - the filename of the file being written
- Logged-in (bool) - the logged-in status of the user
- Last logged-in (string) - the date which the user last logged in
- Index (integer) - a hidden field uniquely identifying a user
- Priority (integer) - the priority level of the user
- Stack size (integer) - the stack size for running processes
- Language (string) - the language of choice
- Privilege (string) - the command class(es) the user is permitted to use

System tools

This MIB provides general information regarding the percentage of traffic running on the Meridian SL-100 and the specific number of the software load. This MIB has read-only access and provides the following fields:

- CPU (int) - a snapshot of the percentage of the CPU utilization on the system
- Image description (string) - a descriptive text of the image name
- ProductName (string) - a descriptive name as described in the Nortel Networks PCA database user interface documents
- Load code (string) - a PCL/PPL load ordering code as described in the Nortel Networks PCA database user interface documents
- Base layer (string) - the context of the base layer used to build image name
- TL layer (string) - the context of the telecom (TL) layer used to build image name
- SHR layer (string) - the release and context of the SHR layer
- CCM layer (string) - the release and context of the CCM layer
- CNA layer (string) - the release and context of the CNA layer
- MSL layer (string) - the release and context of the MSL layer

- STPI layer (string) - the release and context of the STPI layer

Lines

This MIB provides information regarding lines and the Directory Numbers (DNs) available on the line. This data is provided through a Lines and DN table.

The data provided by the Lines table is a partial set of the data stored in table LNINV. In addition to this data, the line class code and line state of the lines are provided. A maintenance column is provided to allow maintenance operations (such as BSY, RTS, OFFLINE) on a line.

The data provided by the DN table is a partial set of the data provided by the DMS QUERY CI command (QLEN). This data is limited to read only operations.

The following fields are provided for lines.

- LEN (string) - the name of the Line Equipment Number. This five-part name is made up of the site, frame, shelf/unit, lsg/drawer, and circuit parts of the line.
- Card Code (string) - the Product Engineering Code (PEC) of the line card
- Pad Group (string) - the pad group assigned to the line
- Inventory State (integer) - the line inventory availability status of the line
- GND (integer) - a value used to indicate whether the line is GND or LOOP start
- BNV (integer) - a value used to indicate whether the balanced network value needs to be loaded
- Line Class Code (string) - the line class code of the terminal associated with the line
- Line State (integer) - the maintenance status of the line
- Line Set State (integer) - the maintenance operations permitted on the line
- DN (string) - the Directory Number of the line
- DN SNPA (string) - the serving Numbering Plan Area for this DN
- DN Customer Group (string) - the customer group assigned to this DN
- DN SubGroup (integer) - the sub group assigned to this DN
- DN NCOS (integer) - the Network Class of Service assigned to this DN

Hardware requirements

MAT GUI and Cabletron Development requires Ethernet Interface Unit (EIU) support.

Limitations and restrictions

SNMP compliant network management systems require an EIU to access the MIBs provided by this feature.

Interactions

MAT GUI and Cabletron Development has no functionality interactions.

Datafill

MAT GUI and Cabletron Development does not affect data schema tables or office parameters.

Service Orders

MAT GUI and Cabletron Development does not affect SERVORD.

Operational Measurements

MAT GUI and Cabletron Development does not affect Operational Measurements.

Logs

MAT GUI and Cabletron Development does not affect logs.

User interface

MAT GUI and Cabletron Development does not change the user interface.

Billing

MAT GUI and Cabletron Development does not affect billing.

AX0378 - MSL: Carrier System ID Log Enhancements**Description**

This feature adds the Carrier Identification (CARID) command to the MAP CI CARRIER level. This ability displays datafillable administrative information.

This feature creates a table called CARID. The administrative information is retrieved from table CARID and allows a technician to quickly retrieve trunk and trouble reporting information.

This feature also appends the datafillable administrative information to specific DS1 carrier logs. A blank line is appended to the carrier logs for all layers of this feature. Only the MSL layer overwrites the blank line with the specific carrier information.

When a carrier system fails or an alarm is generated, or both, the MAP display and log message(s) identify the peripherals affected by the failure. The peripherals that could be affected are as follows:

- Digital Trunk Controller (DTC)
- ISDN Digital Trunk Controller (DTCI)

- Line Trunk Controller (LTC)
- ISDN Line Trunk Controller (LTCI)
- Remote Cluster Controller (RCC)
- ISDN Remote Cluster Controller (RCC2)
- Subscriber Carrier Module Access (SMA)
- Enhanced SMA (SMA2)

Previously, when a failure occurred, the technician was required to consult paper records, or print tediously edited files stored in a disk, to determine the failing circuit IDs. The ability to append the DS1 carrier circuit ID to the associated carrier system log message reduces the time required to identify failing circuit IDs. By having this information online, technicians performing local and remote maintenance can quickly retrieve necessary information to comprehend the problem and obtain trouble reporting numbers.

"Sample output of CARID command" (page 442) is an example of the output the CARID command could produce.

Sample output of CARID command

CM	MS	IOD	Net	PM	CCS	Lns	Trks	Ext	APPL					
CM Flt	Clock	1 CkEr	Istb	1ESA	.	.	1 CC	1 Maj	.					
M	M			*C*	CR C	*C*	M							
POST	CLASS	ML	OS	ALARM	SYSB	MANB	UNEQ	OFFL	CBSY	PBSY	INSV			
0 Quit_	TRUNKS	0	0	0	0	0	0	87	0	0	84			
2 Post_	REMOTE	0	0	1	2	0	0	0	0	4	20			
3	TIMING	0	0	0	0	0	0	0	0	0	2			
4	DS1													
5 Loop_		N	CLASS	SITE		DTC	CK D	ALRM	SLIP	FRME	BER	ES	SES	STATE
6 Tst_		0	TIMING			0		0C	0	0<1.0	0	0		INSV
7 Bsy_		1	TRUNKS			0		1C	0	1<1.0	3	0		INSV
8 RTS_		2	TIMING			0		2C	0	0<1.0	0	0		INSV
9 OffL_		3	TRUNKS			0		3C	0	2<1.0	4	0		INSV
10 DispOpt_		4	TRUNKS			0		4C	0	1<1.0	3	0		INSV
11 Disp_		SIZE OF POSTED SET: 20					MORE...							
12 Next		CARRIER:												
13		CARID 3												
14 Detail_		CARID=TRUNK_GROUP_A_DPRK												
15		MISC1=DSX_LOCATION_3_JACK_4												
16		MISC2=TROUBLE_REPAIR_800_555_4444												
17		MISC4=DPRK_LOG_122_123												
18 CarID_														
	JOEBOB													
Time 14:31 >														

Note: Lines 13 through 17 contain the information taken from the CARID table.

Accompanying features

This feature works in conjunction with the following features:

- AX0383, TL: Carrier System ID Log Enhancements
- AX0487, SHR: Carrier System ID Log Enhancements

Hardware requirements

MSL: Carrier System ID Log Enhancements has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to MSL: Carrier System ID Log Enhancements:

- The datafillable administrative information that is entered in Table CARID must be contiguous alphanumeric characters or an underscore. No blanks are allowed. If a blank is entered, it ends the input stream.
- This feature appends a blank line to the ISDN 105, PM109, PM110, PM111, and PM186 logs that are initialized with 64 blank characters. Only the MSL layer overwrites the blank if any entry in the MSL layer table CARID exists for that specific PM and carrier. All other layers display the blank line.
- The peripheral modules that can be entered into table CARID include the DTC, DTCI, LTC, LTCI, RCC, RCC2, SMA, and SMA2. Only these peripherals append the Table CARID information to the logs. All other peripherals display a blank line.
- The CARID command is unavailable for lower layers.

Interactions

MSL: Carrier System ID Log Enhancements has no functionality interactions.

Datafill

Table CARID is created and datafilled with the information pertinent to the local and far end. The key fields are the peripheral, peripheral number, carrier number, and entry. The entry is used as an index into Table CARID. Entries of CARID are considered the primary entry and only the primary entry is appended to the logs. The other entries (MISC1, MISC2, MISC3, and MISC4), if datafilled, are available using the CARID command or the table itself. The CARID table is datafilled to contain the exact text that is to be appended to the existing carrier log messages. The text is displayed with the newly created MAP CI CARRIER level CARID command (see ["Sample output of CARID command" \(page 442\)](#) for an example of the CARID command output using the information datafilled in Table CARID). Only ASCII alphanumeric characters and the underscore (_) are allowed to be entered as CARID information in the CARRCHAR field. ["Sample Table CARID datafill" \(page 444\)](#) shows an example of the table entries.

Sample Table CARID datafill

CARRKEY				CARRCHAR
-----				-----
DTC	0	3	CARID	TRUNK_GROUP_A_DPRK
DTC	0	3	MISC1	DSX_LOCATION_3_JACK_4
DTC	0	3	MISC2	TROUBLE_REPAIR_800_555_4444
DTC	0	3	MISC4	FC_LOG_122_123

Note: Note that DTC 0 3 MISC3 is intentionally left out to show that it is only displayed with the CARID command if datafilled in table CARID. If no entries exist for a particular PM and carrier, the CARID command only displays the CARID command number entered.

Service Orders

MSL: Carrier System ID Log Enhancements does not affect SERVORD.

Operational Measurements

MSL: Carrier System ID Log Enhancements does not affect Operational Measurements.

Logs

The ISDN 105, PM186, PM109, PM110, and PM111 logs have an extra line appended to the bottom of the log to display the carrier information if datafilled in Table CARID for that specific PM and carrier.

User interface

The CARID display and command are added to the CARRIER level on the MAP terminal.

Billing

MSL: Carrier System ID Log Enhancements does not affect billing.

AX0380 - MSL: Call Park Enhancement - SYSPARK**Description**

This feature automatically generates the System Park Directory Number (DN) for the user parking the call when the location of the called party is unknown. In contrast, Directed Call Park must be assigned to a specific key on the set. When this key is activated and the pound sign (#) key is pressed, the caller is parked against a specific SYSPARK DN which is displayed. If the pound sign key is not pressed first and a DN supplied by the user is entered on the keypad, the normal Directed Call Park feature resumes.

The phone used to pick up the parked call does not need Directed Call Park assigned to it as long as it is in the same customer group as the System Park DN.

Users who currently have Directed Call Park and telephones with a display are automatically upgraded to the SYSPARK feature.

How Call Park works

Call Park is used when the location of a called party is unknown. Calls are parked against a number by a user who then pages the called party to have them retrieve the parked call. When the paged party gets to the telephone, that person dials the call park retrieval code, as well as the address of the parking lot space where the calling party is parked.

There are three types of call park as follows:

- Call Park
- Directed Call Park
- System Park (SYSPARK)

Call Park Call Park means the call is parked at the DN of the person parking the call. The party parking the call presses the Call Park button and that number is automatically the Call Park DN. To retrieve the call, the called party presses the Call Park button (if there is one on the telephone set), or dials the Call Park access code, on any telephone in the same customer group and dials the DN of the party who parked the call.

Directed Call Park Directed Call Park means the call is parked at a DN that the person parking the call chooses. The party parking the call presses the Directed Call Park button and then dials a DN in the same customer group. To retrieve the call, the called party presses the Directed Call Park button (if there is one on the telephone set), or dials the Directed Call Park access code, on any telephone in the same customer group. The called party then dials the DN the party who parked the call chose.

System Call Park System Call Park (SYSPARK) means the call is parked at a DN that the system chooses when the person parking the call presses the Directed Call Park button. There are three ways to retrieve phone calls as follows:

- To retrieve the call from any phone, the called party dials the DN the system chose.
- To retrieve the call from any phone, the called party dials the Call Park retrieval code (for example, *85) and the DN the system chose.
- To retrieve the call from any phone set with the feature Directed Call Park assigned to it, press the Directed Call Park button and the DN the system chose.

Hardware requirements

SYSPARK only works on telephone sets with a configured display.

Limitations and restrictions

The following limitations and restrictions apply to MSL: Call Park Enhancement - SYSPARK:

- Table DNROUTE has a limitation of 50 DNs for System Park. If there are no DNs configured in this table, SYSPARK will not operate.
- SYSPARK supports phone sets with displays (for example, MBS and IVD sets).
- SYSPARK only works on telephone sets with Directed Call Park assigned to them.
- All restrictions or limitations for Directed Call Park apply to SYSPARK (for example, Directed Call Park does not support Attendant Consoles).

Interactions

MSL: Call Park Enhancement - SYSPARK has the same interactions with features as Directed Call Park. Table DNROUTE must be datafilled with System Park DNs before this feature takes effect.

Directed Call Park only allows calls to be parked within the parker's customer group. Likewise, SYSPARK only parks calls within the same customer group.

Datafill

The System Park DNs reside in table DNROUTE. Up to 50 unique DNs can be defined for System Park. Each time System Park is activated, the first available DN in table DNROUTE is used. When there are no DNs datafilled in this table, SYSPARK acts like Directed Call Park.

Each System Park tuple contains the parking slot number and a customer group associated with the SYSPARK DN for the SYSPARK feature selector. When these tuples are datafilled, it is necessary for each DN to be properly assigned to its respective customer group. To prevent calls from being parked without the possibility of being retrieved, datafill each DN so that it can be translated (dialed) from within the customer group to which it is assigned.

Service Orders

MSL: Call Park Enhancement - SYSPARK does not affect SERVORD.

Operational Measurements

MSL: Call Park Enhancement - SYSPARK does not affect Operational Measurements.

Logs

MSL: Call Park Enhancement - SYSPARK does not affect logs.

User interface

MSL: Call Park Enhancement - SYSPARK does not change the user interface.

Billing

MSL: Call Park Enhancement - SYSPARK does not affect billing.

AX0382 - SNMP Enhancements for MAT and Spectrum**Description**

This feature enhances the existing Management Information Base (MIB) to monitor and manage the Meridian SL-100 remotely. This is achieved by using the industry-standard Simple Network Management Protocol (SNMP).

The existing SNMP framework includes an agent and supporting MIBs which are available in the Telecom layer. The MIB includes standard objects as defined by the MIP-2 ISO standard, as well as Meridian SL-100 objects.

The existing MIB objects include the following:

- system description
- node and link status
- logs and alarms
- Operational Measurements (OMs)
- file maintenance
- system restart counts
- security for MAP terminal access
- Internet protocols statistics

This feature adds new MIB objects for network management, as well as new functionality to the existing MIB.

The following objects are updated for monitoring and maintenance requests:

- trunk maintenance
- trunk monitoring
- carrier maintenance
- nodes maintenance

Trunk monitoring and trunk maintenance

The trunk MIB monitors all applicable trunk states. The information is obtained by retrieving a valid trunk name and trunk number. Examples of information that can be gathered for trunks include trunk state (the state of the trunk circuit), trunk name (the name of the trunk CLLI), and trunk direction (the direction of the circuit trunk).

Trunk maintenance is performed on trunks. The maintenance supported includes the following:

- Offline
- BSY
- RTS
- Init

Carrier monitoring and carrier maintenance

The carrier MIB monitors all applicable carrier states. The information is obtained by retrieving a peripheral module (PM) name and PM number. A small subset of information that can be gathered for the carrier includes the following:

- PM name (the name of the peripheral node type)
- PM number (the external node number of the peripheral)
- carrier direction (the direction of the carrier)
- carrier MTC status (the pulse code modulation type of the carrier)

Carrier maintenance is performed on the carrier. The maintenance supported includes the following:

- BSY
- RTS
- Offline
- PM_Reset
- SWACT

Nodes monitoring and nodes maintenance

This capability already exists, however, new information is added for maintenance of PMs.

Hardware requirements

SNMP Enhancements for MAT and Spectrum requires an Ethernet Interface Unit (EIU) to run the MAT/MAP evolution software on a PC.

Limitations and restrictions

The Meridian SL-100 must have EIU capabilities, the SNMP software, and a PC running the MAT/MAP evolution software.

Interactions

SNMP Enhancements for MAT and Spectrum has no functionality interactions.

Datafill

SNMP Enhancements for MAT and Spectrum does not affect data schema tables or office parameters.

Service Orders

SNMP Enhancements for MAT and Spectrum does not affect SERVORD.

Operational Measurements

SNMP Enhancements for MAT and Spectrum does not affect Operational Measurements.

Logs

SNMP Enhancements for MAT and Spectrum does not affect logs.

User interface

SNMP Enhancements for MAT and Spectrum does not change the user interface.

Billing

SNMP Enhancements for MAT and Spectrum does not affect billing.

AX0383 - TL: Carrier System ID Log Enhancements**Description**

This feature adds the Carrier Identification (CARID) command to the MAP CI CARRIER level. This ability displays datafillable administrative information.

This feature creates a table called CARID. The administrative information is retrieved from table CARID and allows a technician to quickly retrieve trunk and trouble reporting information.

This feature also appends the datafillable administrative information to specific DS1 carrier logs. A blank line is appended to the carrier logs for all layers of this feature. Only the MSL layer overwrites the blank line with the specific carrier information.

When a carrier system fails or an alarm is generated, or both, the MAP display and log message(s) identify the peripherals affected by the failure. The peripherals that could be affected are as follows:

- Digital Trunk Controller (DTC)
- ISDN Digital Trunk Controller (DTCI)
- Line Trunk Controller (LTC)
- ISDN Line Trunk Controller (LTCI)
- Remote Cluster Controller (RCC)
- ISDN Remote Cluster Controller (RCC2)

- Subscriber Carrier Module Access (SMA)
- Enhanced SMA (SMA2)

Previously, when a failure occurred, the technician was required to consult paper records, or print edited files stored in a disk, to determine the failing circuit IDs. The ability to append the DS1 carrier circuit ID to the associated carrier system log message reduces the time required to identify failing circuit IDs. By having this information online, technicians performing local and remote maintenance can quickly retrieve necessary information to comprehend the problem and obtain trouble reporting numbers.

"Sample output of CARID command" (page 450) shows an example of the output the CARID command could produce.

Sample output of CARID command

CM	MS	IOD	Net	PM	CCS	Lns	Trks	Ext	APPL	
CM Flt	Clock	1 CkEr	Istb	1ESA	.	.	1 CC	1 Maj	.	
M	M			*C*	CR C	*C*	M			
POST	CLASS	ML OS	ALARM	SYSB	MANB	UNEQ	OFFL	CBSY	PBSY	INSV
0 Quit_	TRUNKS	0 0 0	0	0	0	0	87	0	0	84
2 Post_	REMOTE	0 0 1	2	0	0	0	0	0	4	20
3	TIMING	0 0 0	0	0	0	0	0	0	0	2
4	DS1									
5 Loop_		N CLASS	SITE	DTC	CK D	ALRM	SLIP	FRME	BER	ES SES STATE
6 Tst_		0 TIMING		0		0C	0	0<1.0	0 0	INSV
7 Bsy_		1 TRUNKS		0		1C	0	1<1.0	3 0	INSV
8 RTS_		2 TIMING		0		2C	0	0<1.0	0 0	INSV
9 OffL_		3 TRUNKS		0		3C	0	2<1.0	4 0	INSV
10 DispOpt_		4 TRUNKS		0		4C	0	1<1.0	3 0	INSV
11 Disp_		SIZE OF POSTED SET: 20				MORE...				
12 Next		CARRIER:								
13		CARID FOR DTC 0 CARRIER 3								
14 Detail_		CARID=TRUNK_GROUP_A DPRK								
15		MISC1=DSX_LOCATION_3 JACK_4								
16		MISC2=ABC123_TROUBLE_REPAIR_800_555_4444								
17		MISC3=ABC123_DPRK_MN_555_6666								
18 CarID_		MISC4=DPRK_LOG_122_123								
JOEBOB										
Time 14:31 >										

Note: Lines 13 through 18 contain the information taken from the CARID table.

Accompanying features

This feature works in conjunction with the following features:

- AX0378, MSL: Carrier System ID Log Enhancements
- AX0487, SHR: Carrier System ID Log Enhancements

Hardware requirements

TL: Carrier System ID Log Enhancements has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to TL: Carrier System ID Log Enhancements:

- The datafillable administrative information that is entered in table CARID must be contiguous alphanumeric characters or an underscore. No blanks are allowed. If a blank is entered, it ends the input stream.
- This feature appends a blank line to the ISDN 105, PM109, PM110, PM111, and PM186 logs that are initialized with 64 blank characters. Only the MSL layer overwrites the blank if any entry in the MSL layer table CARID exists for that specific PM and carrier. All other layers display the blank line.
- The peripheral modules that can be entered into table CARID include the DTC, DTCL, LTC, LTCL, RCC, RCC2, SMA, and SMA2. Only these peripherals append the table CARID information to the logs. All other peripherals display a blank line.
- The CARID command is available for the MSL layer only.

Interactions

TL: Carrier System ID Log Enhancements has no functionality interactions.

Datafill

Table CARID is created and datafilled with the information pertinent to the local and far end. The key fields are the peripheral, peripheral number, carrier number, and entry. The entry is used as an index into table CARID. Entries of CARID are considered the primary entry and only the primary entry is appended to the logs. The other entries (MISC1, MISC2, MISC3, and MISC4), if datafilled, are available using the CARID command or the table itself. The CARID table is datafilled to contain the exact text that is to be appended to the existing carrier log messages. The text is displayed with the newly created MAP terminal CARID command (see ["Sample output of CARID command" \(page 450\)](#) for an example of the CARID command output using the information datafilled in table CARID). Only ASCII alphanumeric characters and the underscore (_) are allowed to be entered as CARID information in the CARRCHAR field. ["Sample table CARID datafill" \(page 451\)](#) shows an example of the table entries.

Sample table CARID datafill

CARRKEY				CARRCHAR
-----				-----
DTC	0	3	CARID	TRUNK_GROUP_A_DPRK
DTC	0	3	MISC1	DSX_LOCATION_3_JACK_4
DTC	0	3	MISC2	ABC123_TROUBLE_REPAIR_800_555_4444
DTC	0	3	MISC3	ABC123_DPRK_MN_555_6666
DTC	0	3	MISC4	FC_LOG_122_123

Service Orders

TL: Carrier System ID Log Enhancements does not affect SERVORD.

Operational Measurements

TL: Carrier System ID Log Enhancements does not affect Operational Measurements.

Logs

The ISDN 105, PM186, PM109, PM110, and PM111 logs have an extra line appended to the bottom of the log to display the carrier information if datafilled in table CARID for that specific PM and carrier. ["Sample TL layer log" \(page 452\)](#) shows an example.

Sample TL layer log

```
MMSLDSNX07AY      *      PM109  AUG06  13:40:29  3933  SYSB  CARRIER  DTCT  O
>
      P-side CARRIER-NO:  3, REASON:  CARRIER LOCAL ALARM SET
>
```

Note: The difference is hard to see. There is an extra blank line before the second prompt (>).

User interface

The CARID display and command are added to the CARRIER level on the MAP terminal and apply to the MSL layer only.

Billing

TL: Carrier System ID Log Enhancements does not affect billing.

AX0384 - CCM: Call Waiting Enhancements

Description

Call Waiting Enhancements lets a user activate and deactivate Call Waiting (CWT) as often and as long as desired. The purpose of this feature is to stop interruption of data calls (for example, fax lines) due to CWT on the line. The user accesses this feature with feature codes.

Cancel Call Waiting (CCW)

When two users with CWT are involved in a data call, CWT on either line disrupts the transmission. The originator of the call has the ability to disable CWT with the Cancel Call Waiting (CCW) access code, but only on a call-by-call basis. Therefore, originators must use CCW on any new call that they do not want interrupted.

Note: The call can be interrupted by CWT on the terminator end, since there is no way of disabling CWT on the terminating side.

Call Waiting Activated (CWTACT)

With this feature, the originator or terminator are no longer interrupted by CWT, because call waiting can be disabled for any length of time. Call Waiting Activated gives users the ability to selectively activate or deactivate CWT. With CWTACT, the user can deactivate or activate CWT indefinitely. For both the originator and terminator to not be interrupted during a data call, they would each have to deactivate CWT using CWTACT prior to making the call.

CWTACT is compatible with 500/2500 sets and Line Class Code of Integrated Business Network (IBN). CWTACT is not compatible with keysets because they are not given a tone when CWT is initiated.

Hardware requirements

CCM: Call Waiting Enhancements has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to CCM: Call Waiting Enhancements:

- CWT must exist on the telephone line.
- CWT cannot be deleted if CWTACT is activated on the line.
- CWTACT is only assignable to 500/2500 sets.
- CWTACT is not compatible with keysets.
- CWTACT cannot be assigned to Multiline Hunt (MLH) groups, because the two features are incompatible.

Interactions

Call Forward Busy

Call Forward Busy (CFB) presents a call waiting tone to the called party, and a ringing tone to the calling party, if Call Waiting is activated. If Call Waiting has been deactivated (by the user toggling the CWT feature on and off with access codes), CFB forwards the calling party.

Call Forward Do not Answer

Call Forward Don't Answer (CFD) presents a call waiting tone to the called party, and a ringing tone to the calling party, if Call Waiting is activated. If Call Waiting has been deactivated (by the user toggling the CWT feature on and off with access codes), CFD presents a busy tone to the calling party.

Call Waiting Origination (CWO)

CWO cannot interrupt a call that has Call Waiting deactivated.

Dial Call Waiting

Dial Call Waiting cannot interrupt a call that has Call Waiting deactivated.

Datafill

Table LCCOPT is modified with an EXT module to allow CWTACT to be datafilled for IBN sets.

Table OPTOPT is modified with an EXT module to make CWTACT incompatible with MLH groups.

Table IBNXLA is modified to use the feature access codes for activating and deactivating CWTACT. The feature names for the access codes as follows:

- CWTACT is used to activate the CWTACT option.
- CWTDEACT is used for deactivating the CWTACT option.

Table IBNFEAT stores the data feature tuple for each Line Equipment Number (LEN) which has the CWTACT option assigned to it.

Service Orders

Service Orders are modified so the CWTACT feature can be added to an IBN 500/2500 set. A Meridian SL-100 technician is prompted to enter the status of the CWTACT feature when adding it. Enter Y to have call waiting active and enter N to deactivate call waiting. To assign CWTACT to a line, the line must have CWT configured.

"[Service Orders commands for CWTACT](#)" (page 454) shows the commands used to add CWTACT. The COPYSET command is allowed with this feature.

Service Orders commands for CWTACT

```
>ado
SONUMBER:          NOV  97   8  25 PM
>$
DN_OR_LEN:
>8664005
OPTION:
>cwtact
CWT_ACTIVE:
>Y
OPTION:
>$
```

Operational Measurements

CCM: Call Waiting Enhancements does not affect Operational Measurements.

Logs

CCM: Call Waiting Enhancements does not affect logs.

User interface

CCM: Call Waiting Enhancements does not change the user interface.

Billing

CCM: Call Waiting Enhancements does not affect billing.

AX0386 - CCM: Message Waiting LCD Activation**Description**

This feature activates an LCD next to the Message Waiting (MWT) key on M2000 series sets that have both a MWT lamp and an LCD. When a message is in the queue, both the red MWT lamp and the LCD next to the MWT key are activated.

If the user has an Autodial key to the message center, the MWT key replaces the Autodial key.

Accompanying feature

This feature works in conjunction with feature AX0843, MSL: Message Waiting LCD Activation.

Hardware requirements

CCM: Message Waiting LCD Activation has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to CCM: Message Waiting LCD Activation:

- supports M2000 series sets only
- replaces Autodial key to message center
- phones must have both LCD and red MWT lamp

Interactions

CCM: Message Waiting LCD Activation has no functionality interactions.

Datafill

CCM: Message Waiting LCD Activation does not affect data schema tables or office parameters.

Service Orders

MWT can be assigned to any blank key on an M2000 series set.

Operational Measurements

CCM: Message Waiting LCD Activation does not affect Operational Measurements.

Logs

CCM: Message Waiting LCD Activation does not affect logs.

User interface

CCM: Message Waiting LCD Activation does not change the user interface.

Billing

CCM: Message Waiting LCD Activation does not affect billing.

AX0388 - CCM: COT and SCF on M2000 Sets**Description**

This feature allows M2000 phone set users to activate the features Selective Call Forwarding (SCF) and Customer Originated Trace (COT). SCF and COT are capabilities within the Custom Local Area Signaling Service (CLASS) feature.

Note: In this feature description, M2000 phone sets refer to M2616, M2008, M2008HF, M2006, M2216 ACD, and M2317 phone sets.

Selective Call Forward

With SCF, M2000 phone set users can ensure that selected calls will reach them when they are away from the home or office. Up to 31 incoming calls can be forwarded to another location. Calls from Directory Numbers (DNs) that are not in the SCF list can be picked up at home or in the office. They can also receive whatever treatment the user has arranged, such as an answering machine or voice mail. If the SCF destination is busy, the originator receives busy tone.

The following capabilities are supported by SCF:

- the ability to add and delete the SCF feature to all M2000 type sets using SERVORD
- the ability to activate/deactivate the SCF feature using SERVORD
- the ability to activate/deactivate the SCF feature as directed by an announcement
- the interaction with common switch and CLASS tools (such as QLEN, QDN, QDNWRK, COUNT, COUNT ALL, QCM, QSL)
- the ability to provide like-for-like SCF functionality and appearance between the M5000/M8000/M9000 series sets and the M2000 series sets (for example, datafill appropriate tables as those datafilled for M5000/M8000/M9000 series sets)
- the ability to provide interactions with Screening List Editing (SLE) services as those provided by M5000/M8000/M9000 series sets

Customer Originated Trace

COT allows users who have been receiving harassing or prank calls to activate an immediate trace of the last incoming call. This is done without requiring prior approval and costly manual intervention by telephone company personnel. After a harassing or prank call is terminated, the user who wishes to trace the call goes off hook, receives dial tone, and then dials the COT activation code. A log is supplied with information of the originating harassing or prank call.

The following capabilities are supported by COT:

- the ability to add and delete the COT feature to all M2000 series sets using SERVORD
- a LINE 150 log when the COT feature is activated with data concerning the originator of the previous harassing call
- a LINE 151 log when the COT feature is not successfully activated
- a confirmation tone on feature activation to the end user
- appears as an option when using QLEN or QDN and interacts appropriately with QDNWRK and QLENWRK
- CLASS feature tools (such as COUNT, COUNT ALL, and QCM) required to work on M2000 series sets

Hardware requirements

CCM: COT and SCF on M2000 Sets has no additional hardware requirements.

Limitations and restrictions

SCF is incompatible with the following features and options:

- Bridged Night Number
- Customer Data Change
- Denied Origination
- Denied Termination

COT is incompatible with the following features and options:

- Automatic Line (AUL)
- Denied Origination
- Denied Termination
- Multiple Appearance DNs (MADN)

Interactions

The interactions for this feature are the same as those specified by the SCF and COT features on M5000, M8000, and M9000 series sets. Refer to the DMS features AG1628, CLASS: Selective Call Forwarding, and AG1151, Customer Originated Trace Enhancements, located in *ISDN Service Orders for ISDN Terminals Reference Manual* and *DMS-100 Feature Description Manual*, respectively.

Datafill

CCM: COT and SCF on M2000 Sets does not affect data schema tables or office parameters.

Service Orders

CCM: COT and SCF on M2000 Sets does not affect SERVORD.

Operational Measurements

CCM: COT and SCF on M2000 Sets does not affect Operational Measurements.

Logs

CCM: COT and SCF on M2000 Sets does not affect logs. Refer to the DMS features AG1628, CLASS: Selective Call Forwarding, and AG1151, Customer Originated Trace Enhancements.

User interface

CCM: COT and SCF on M2000 Sets does not change the user interface.

Billing

CCM: COT and SCF on M2000 Sets does not affect billing.

AX0390 - CCM: SMDR Per Use Billing for Features**Description**

This feature gives Meridian SL-100 system CLASS service providers the ability to offer billing on a usage basis as opposed to a flat monthly rate. This method is consistent with the way the local telephone company provides billing.

This feature includes four base capabilities.

- usage sensitive SMDR extension record
- SMDR record elements
- activating and deactivating SMDR Per Use Billing extension record
- generation of MSL logs

Usage sensitive SMDR extension record

This feature generates a usage sensitive SMDR extension record (extension code #DF09). This record is based on the same criteria as the per use billing records generated with the Bellcore Automatic Message Accounting (AMA) format. This record also stores CLASS feature usage information. The following CLASS features are supported:

- Automatic Call Back (ACB)
- Automatic Recall (AR)
- Calling Number Delivery (CND)
- Calling Name Delivery (CNAMD)
- Dialable Number Delivery (DDN)
- Calling Number Delivery Blocking (CNDB)
- Customer Originated Trace (COT)
- Distinctive Ringing/Call Waiting (DRCW)
- Selective Call Acceptance (SCA)
- Selective Call Forwarding (SCF)
- Selective Call Rejection (SCRJ)
- Deluxe Spontaneous Call Waiting Display (DSCWID)
- Bulk Calling Line Identification (BCLID)

A sample of the DF09 extension record is shown in ["DF09 extension record example" \(page 459\)](#).

DF09 extension record example

```
*REC CODE:DF FMT CODE:09 CLASS FEATURE CODE:0352 BILL DN:2149975250
EVENT YEAR:1998 EVENT MONTH: 01 EVENT DAY:30 EVENT HOUR:15 EVENT
MINUTE:20 EVENT SECOND:25 NUM AVAIL: 0000 NUM UNAVAIL: 0000 NAME

LIST SIZE: 0000 SCRJ LIST SIZE: 0000 DRCW LIST SIZE: 0000 SPARE
DATA1: 0000 SPARE DATA2: 0000
```

SMDR record elements

The SMDR Per Use Billing extension record contains the following information:

- A code number indicating the CLASS feature event that occurred. The code numbers are listed in the preceding table, Feature code to feature event mapping.
- The DN to bill against.

- The date the record was generated (Year 2000 ready).
- The time the record was generated.

Activating and deactivating SMDR Per Use Billing extension record

Activating and deactivating the SMDR Per Use Billing extension record is done through datafill in table CUSTSMDR. The addition of a PERUSE option enables the generation of these SMDR records for the customer group for which the option is datafilled.

Generation of MSL logs

An MSL log is created every time an SMDR Per Use Billing extension record (#DF09) is produced. The log contains calling information such as CLASS feature code, billable DN, and date.

Accompanying feature

This feature works in conjunction with feature AX0376, MSL: SMDR Per Use Billing for Features.

Hardware requirements

CCM: SMDR Per Use Billing for Features has no hardware requirements.

Limitations and restrictions

Refer to feature AX0376, MSL: SMDR Per Use Billing for Features for a description of the limitations or restrictions.

Interactions

CCM: SMDR Per Use Billing for Features uses the existing SMDR facilities for generating extension records. No other new interactions are introduced by this feature.

Datafill

Refer to feature AX0376, MSL: SMDR Per Use Billing for Features for details on datafill requirements.

Service Orders

CCM: SMDR Per Use Billing for Features does not affect SERVORD.

Operational Measurements

CCM: SMDR Per Use Billing for Features does not affect Operational Measurements.

Logs

Refer to feature AX0376, MSL: SMDR Per Use Billing for Features for details on logs.

User interface

CCM: SMDR Per Use Billing for Features does not change the user interface.

Billing

Refer to feature AX0376, MSL: SMDR Per Use Billing for Features for details on billing.

AX0427 - MSL: MSMWI for IBN CLASS Sets**Description**

This feature is an enhancement to feature AD8422, Multiple Message Waiting Indication, which allows a secondary telephone set to provide an indication that messages are waiting on the primary telephone set.

Feature AD8422, Multiple Message Waiting Indication, was designed as a key set feature and only supports multiline telephone sets. Feature AD8422 provides visual lamp indication on a key of the secondary telephone set. The enhancements provided by this feature extend the support of Multiple Station Message Waiting Indication (MSMWI) to single line analog Integrated Business Network (IBN) sets which support CLASS messaging. With this enhancement, both primary and secondary sets can be either multiline sets or single line sets. To support the IBN CLASS set and meet this feature's requirements, the MSMWI feature provides a visual indication on a secondary set to notify users of messages waiting on the primary set. "IBN terminals supporting CLASS" (page 461) lists the IBN sets which support CLASS.

IBN terminals supporting CLASS

Terminal description	Terminal type
	2500
Maestro	1500, 2500, 3500, 4525, 4625
Powertouch	2252, 5035, 0360
Meridian Business Set	M8001, M8003, M9216, M9316, M9417, M9516
Quick Touch	100, 200
Silhouette	

This feature allows Companion C3050 sets to receive a visual indication of messages waiting on the primary set. The Companion C3050 sets are considered by the Meridian SL-100 to be single line analog IBN sets.

Accompanying feature

This feature works in conjunction with feature AX0428, CCM: MSMWI for IBN CLASS Sets.


Hardware requirements

CCM: MSMWI for IBN CLASS Sets requires that the XPM have a CLASS modem resource (CMR) card, because this feature only operates on IBN sets that are capable of CLASS messaging. Refer to feature AX0427, MSL: MSMWI for IBN CLASS Sets, for more information about hardware requirements.


The XPMs which support the CMR card are listed below.

- Line Group Controller (LGC)
- Line Trunk Controller (LTC)
- Subscriber Module Access (SMA)
- Subscriber Carrier Module Access 2 (SMA2)
- Remote Cluster Controller (RCC)
- Remote Cluster Controller 2 (RCC2)

Companion C3050 with MSMWI configuration

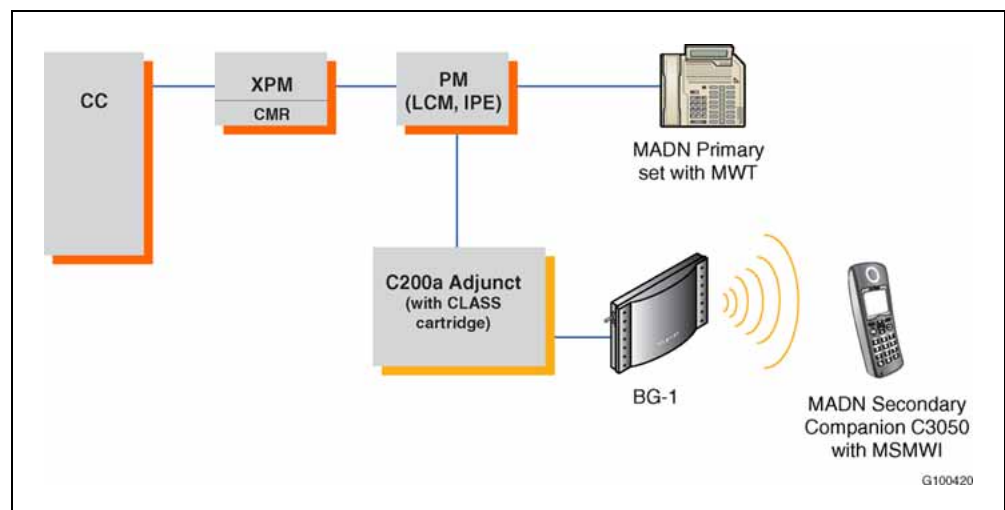

Primary and secondary sets with MSMWI configuration

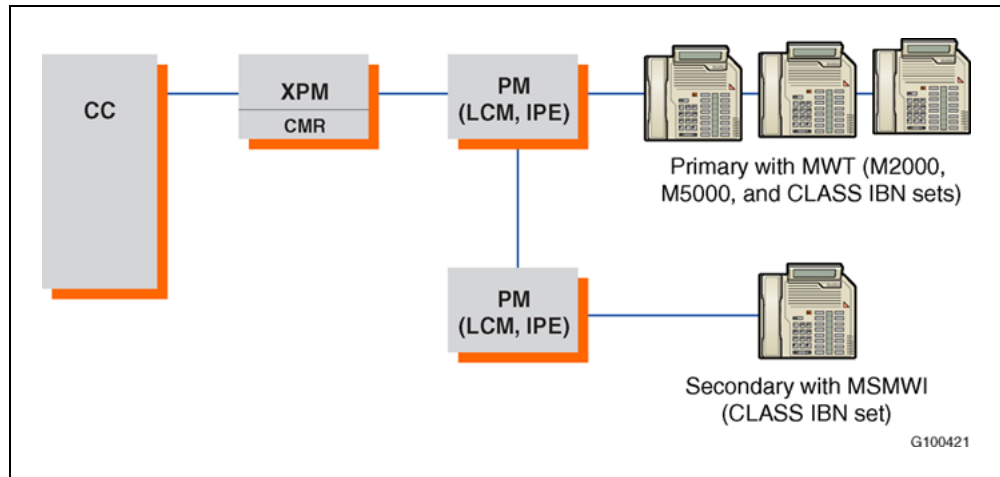

Limitations and restrictions

The following limitations and restrictions apply to MSL: MSMWI for IBN CLASS Sets:

- The IBN sets supported are IBN CLASS sets. These sets must meet the hardware requirements in "AX0427 - MSL: MSMWI for IBN CLASS Sets" (page 461).
- The number of primaries that a secondary can be provisioned to monitor is limited to one for single line sets. This limitation is because the MSMWI feature can only be assigned once to an IBN set.
- The MSMWI feature is not assignable to a Secondary Directory Number (SDN) (using Teen Services) of an IBN set.
- The IBN set requires a message waiting lamp in order for the user to receive the secondary indication. However, this feature can be configured by datafilling an IBN set which does not have a lamp. Because there is no lamp, the user of the IBN set will not receive any indication of a message waiting on the set.

Interactions

This feature requires that the primary set be datafilled with the Message Waiting (MWT) or Executive Message Waiting (EMW) feature and that the secondary set be datafilled with the MSMWI feature.

This feature is transparent to MADN Single Call Arrangement (SCA) groups. The feature operates the same regardless of whether the primary and secondaries are or are not members of a MADN SCA group.

Datafill

This feature affects four tables:

- IBNFEAT

- MSMWI
- LCCOPT
- OPTOPT

The format and information contained within the tuples of tables IBNFEAT and MSMWI does not change. The MSMWI table is capable of containing LENS of IBN sets, as well as key sets. The only difference is the key value displayed. The logical key for LENS of IBN sets is zero. The following examples display how the datafill looks in tables IBNFEAT and MSMWI when the MSMWI data feature is assigned to an IBN set.

Table IBNFEAT

"Table IBNFEAT example" (page 464) shows an example.

Table IBNFEAT example

```

LEN DNNO DF FEATURE DATA
-----
LCM1 00 0 08 00 0 MSMWI MSMWI LCM1 00 1 09 31 5

```

Table MSMWI

"Table MSMWI example." (page 464) shows an example.

Table MSMWI example.

```

MSMWIKEY          SLEN SLKEY
-----
LCM1 00 1 09 31 5 1 LCM1 00 0 09 00 0

```

Table LCCOPT

This table needs to be datafilled so that MSMWI can be assigned to IBN sets. In this table, the MSMWI feature is added to the IBN Line Class Code (LCC) tuple.

Table OPTOPT

This table needs to be datafilled so that MSMWI can be assigned to SDN. In this table, the MSMWI feature is added to the SDN option tuple.

Service Orders

When adding the MSMWI option to an IBN set, the user is not prompted for the primary's logical key. A default value of zero is used by the system.

Prompt mode example

Prompt Mode:

```
>ado
SONUMBER:          NOW 76  1  1  PM
>$
DN_OR_LEN:
>8653008
OPTION:
>msmwi
PRIMARY_LEN:
>lcm1  0  1  9  31
OPTION:
>$
COMMAND AS ENTERED:
ADO NOW 76 1 1 PM 8653008 ( MSMWI LCM1 00  1  09  31 ) $
ENTER Y TO CONFIRM, N TO REJECT OR E TO EDIT
>y
MACHINES ARE OUT OF SYNC, SERVICE ORDERS NOT ALLOWED
JOURNAL FILE IS INACTIVE, SERVICE ORDERS NOT ALLOWED
SHOULD ORDER BE DONE ANYWAY? (Y OR N)
> y
```

No-prompt mode example

No-prompt Mode:

```
>ADO $ 8653008 MSMWI LCM1 00  1  09  31 $ Y Y
```

Operational Measurements

MSL: MSMWI for IBN CLASS Sets does not affect Operational Measurements.

Logs

MSL: MSMWI for IBN CLASS Sets does not affect logs.

User interface

MSL: MSMWI for IBN CLASS Sets does not change the user interface.

Billing

MSL: MSMWI for IBN CLASS Sets does not affect billing.

AX0428 - CCM: MSMWI for IBN CLASS Sets

Description

This feature is an enhancement to feature AD8422, Multiple Message Waiting Indication, which allows a secondary telephone set to provide an indication that messages are waiting on the primary telephone set.

Feature AD8422, Multiple Message Waiting Indication, is a key set feature and only supports multiline telephone sets. Feature AD8422 provides visual lamp indication on a key of the secondary telephone set. The enhancements provided by this feature extend the support of Multiple Station Message Waiting Indication (MSMWI) to single line analog Integrated Business Network (IBN) sets which support CLASS messaging. With this enhancement, both primary and secondary telephone sets can be either multiline sets or single line sets. To support the IBN CLASS terminal and meet this feature's requirements, the MSMWI feature provides visual indication on a secondary telephone set.

This feature allows Companion C3050 sets to receive a visual indication of messages waiting on the primary telephone set. The Companion C3050 sets are considered by the Meridian SL-100 system to be single line analog IBN sets.

How this feature affects the CCM layer

Two functional areas within the CCM layer are affected by this feature. The areas are provisioning and set indication manipulation. To isolate the MSMWI functionality to the Meridian SL-100, procedure variables are defined in these functional areas to allow the functionality of this feature to reside only in the MSL layer.

Provisioning Provisioning within the CCM layer involves the following functionality:

- allows table IBNFEAT to be datafilled with the MSMWI data feature
- allows updating of the read-only MSMWI table when table IBNFEAT is datafilled with the MSMWI data feature
- provides the ability to assign the MSMWI data feature to an IBN CLASS set using SERVORD
- allows verification that secondary sets are not assigned to a primary IBN set when Message Waiting (MWT) and Executive Message Waiting (EMW) is being deleted from the primary set

Set Indication Manipulation Set indication manipulation within the CCM layer involves the following functionality:

- allows sending of CLASS messaging to secondary sets which provide the indication of messages waiting on the primary set

- allows auditing of the indication status of the secondary IBN set

Accompanying feature

This feature works in conjunction with feature AX0427, MSL: MSMWI for IBN CLASS Sets.

Hardware requirements

CCM: MSMWI for IBN CLASS Sets requires that the XPM have a CLASS Modem Resource (CMR) card, because this feature only operates on IBN sets that are capable of CLASS messaging. Refer to feature AX0427, MSL: MSMWI for IBN CLASS Sets, for more information about hardware requirements.

The XPMs which support the CMR card are as follows:

- Line Group Controller (LGC)
- Line Trunk Controller (LTC)
- Subscriber Module Access (SMA)
- Subscriber Carrier Module Access 2 (SMA2)
- Remote Cluster Controller (RCC)
- Remote Cluster Controller 2 (RCC2)

Limitations and restrictions

The following limitations and restrictions apply to CCM: MSMWI for IBN CLASS Sets:

- The IBN sets supported are IBN CLASS sets. These sets must meet the hardware requirements in ["Description" \(page 466\)](#).
- The number of primaries that a secondary can be provisioned to monitor is limited to one for single line sets. This limitation is because the MSMWI feature can only be assigned once to an IBN set.
- The MSMWI feature is not assignable to a Secondary Directory Number (SDN) (using Teen Services) of an IBN set.
- The IBN set requires a message waiting lamp in order for the user to receive the secondary indication. However, this feature can be configured by datafilling an IBN set which does not have a lamp. Because there is no lamp, the user of the IBN set will not receive any indication of a message waiting on the set.

Interactions

This feature requires that the primary set be datafilled with the MWT or EMW feature and that the secondary set be datafilled with the MSMWI feature.

This feature is transparent to MADN Single Call Arrangement (SCA) groups. The feature operates the same regardless of whether the primary and secondaries are or are not members of a MADN SCA group.

Datafill

Refer to feature AX0427, MSL: MSMWI for IBN CLASS Sets, for information about datafill requirements.

Service Orders

Refer to feature AX0427, MSL: MSMWI for IBN CLASS Sets, for information about Service Orders requirements.

Operational Measurements

CCM: MSMWI for IBN CLASS Sets does not affect Operational Measurements.

Logs

CCM: MSMWI for IBN CLASS Sets does not affect logs.

User interface

CCM: MSMWI for IBN CLASS Sets does not change the user interface.

Billing

CCM: MSMWI for IBN CLASS Sets does not affect billing.

AX0487 - SHR: Carrier System ID Log Enhancements**Description**

This feature adds the Carrier Identification (CARID) command to the MAP CI CARRIER level. This ability displays datafillable administrative information.

This feature creates a table called CARID. The administrative information is retrieved from table CARID and allows a technician to quickly retrieve trunk and trouble reporting information.

This feature also appends the datafillable administrative information to specific DS1 carrier logs. A blank line is appended to the carrier logs for all layers of this feature. Only the MSL layer overwrites the blank line with specific carrier information.

When a carrier system fails or an alarm is generated, or both, the MAP display and log message(s) identify the peripherals affected by the failure. The peripherals that could be affected are as follows:

- Digital Trunk Controller (DTC)
- ISDN Digital Trunk Controller (DTCI)
- Line Trunk Controller (LTC)

- ISDN Line Trunk Controller (LTCI)
- Remote Cluster Controller (RCC)
- ISDN Remote Cluster Controller (RCC2)
- Subscriber Carrier Module Access (SMA)
- Enhanced SMA (SMA2)

Previously, when a failure occurred, the technician was required to consult paper records or print edited files stored in a disk, to determine the failing circuit IDs. The ability to append the DS1 carrier circuit ID to the associated carrier system log message reduces the time required to identify failing circuit IDs. By having this information online, technicians performing local and remote maintenance can quickly retrieve necessary information to comprehend the problem and obtain trouble reporting numbers.

Accompanying features

This feature works in conjunction with the following features:

- AX0378, MSL: Carrier System ID Log Enhancements
- AX0383, TL: Carrier System ID Log Enhancements

Hardware requirements

SHR: Carrier System ID Log Enhancements has no hardware requirements.

Limitations and restrictions

SHR: Carrier System ID Log Enhancements has no limitations or restrictions.

Interactions

SHR: Carrier System ID Log Enhancements has no functionality interactions.

Datafill

SHR: Carrier System ID Log Enhancements does not affect data schema tables or office parameters.

Service Orders

SHR: Carrier System ID Log Enhancements does not affect SERVORD.

Operational Measurements

SHR: Carrier System ID Log Enhancements does not affect Operational Measurements.

Logs

The ISDN 105 carrier log is modified to contain an extra line for all layers. For example, "ISDN 105 current look" (page 470) shows how ISDN 105 currently looks.

ISDN 105 current look

```
MMSLDSNX07AY * ISDN105 AUG06 11:08:37 8852 FLT PRA Sync Loss
>
      ISP = 0          DTCI    0          PORT 1 CHNL 22
>
```

The ISDN 105 log is modified to look like the following in all layers except the MSL layer.

ISDN 105 modified look

```
MMSLDSNX07AY * ISDN105 AUG06 11:08:37 8852 FLT PRA Sync Loss
>
      ISP = 0          DTCI    0          PORT 1 CHNL 22
>
```

Note: extra blank line before the second prompt (>).

User interface

SHR: Carrier System ID Log Enhancements does not change the user interface.

Billing

SHR: Carrier System ID Log Enhancements does not affect billing.

AX0687 - MSL: Call Waiting Enhancements

Description

Call Waiting Enhancements lets a user activate and deactivate Call Waiting (CWT) as often and as long as desired. The purpose of this feature is to stop interruption of data calls (for example, fax lines) due to CWT on the line. The user accesses this feature with feature codes. The Meridian SL-100 system administrator assigns the feature access code in table IBNXL A.

Cancel Call Waiting (CCW)

When two users with CWT are involved in a data call, CWT on either line disrupts the transmission. The originator of the call has the ability to disable CWT with the Cancel Call Waiting (CCW) access code, but only on a call-by-call basis. Therefore, the originators must use CCW on any new call that they do not want interrupted.

Call Waiting Activated (CWTACT)

With this feature, the originator will no longer be interrupted by CWT, because call waiting can be disabled for any length of time. Call Waiting Activated gives users the ability to selectively activate or deactivate CWT. With CWTACT, the user can deactivate or activate CWT indefinitely.

Note: The call can be interrupted by CWT on the terminator end since there is no way of disabling CWT on the terminating side.

CWTACT is compatible with 500/2500 sets and Line Class Code of Integrated Business Network (IBN). CWTACT is not compatible with keysets, because they are not given a tone when CWT is initiated.

Accompanying feature

This feature works in conjunction with feature AX0384, CCM: Call Waiting Enhancements.

Hardware requirements

MSL: Call Waiting Enhancements has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to MSL: Call Waiting Enhancements:

- CWT must exist on the originating Meridian SL-100 line.
- CWT cannot be deleted if CWTACT is activated on the line.
- CWTACT is only assignable to 500/2500 sets.
- CWTACT is not compatible with keysets.
- CWTACT cannot be assigned to Multiline Hunt (MLH) groups because the two features are incompatible.

Interactions**Call Forward Busy**

Call Forward Busy (CFB) presents a call waiting tone to the called party, and a ringing tone to the calling party, if Call Waiting is activated. If Call Waiting has been deactivated (by the user toggling the CWT feature on and off with access codes), CFB forwards the calling party.

Call Forward Do not Answer

Call Forward Don't Answer (CFD) presents a call waiting tone to the called party, and a ringing tone to the calling party, if Call Waiting is activated. If Call Waiting has been deactivated (by the user toggling the CWT feature on and off with access codes), CFD presents a busy tone to the calling party.

Call Waiting Origination (CWO)

CWO cannot interrupt a call that has Call Waiting deactivated.

Dial Call Waiting

Dial Call Waiting cannot interrupt a call that has Call Waiting deactivated.

Datafill

Table LCCOPT is modified by the use of an EXT file so that feature CWTACT can be datafilled for IBN sets.

Table IBNXLA is modified to use the feature access codes for activating and deactivating CWTACT. The following are feature names for the access codes:

- CWTACT is used to activate the CWTACT feature.
- CWTDEACT is used to deactivate the CWTACT feature.

Service Orders

Service Orders are modified so the CWTACT feature can be added to an IBN 500/2500 set. A Meridian SL-100 technician is prompted to enter the status of the CWTACT feature when adding it. Enter Y to have call waiting active and enter N to deactivate call waiting. To assign CWTACT to a line, the line must have CWT configured.

"[Service Orders commands for CWTACT](#)" (page 472) shows the commands that are used to add CWTACT. The COPYSET command is allowed with this feature.

Service Orders commands for CWTACT

```
>ado
SONUMBER:          NOV  97   8   25 PM
>$
DN_OR_LEN:
>8664005
OPTION:
>cwtact
CWT_ACTIVE:
>y
OPTION:
>$
```

Operational Measurements

The IBN Call Waiting Fail OM will be pegged for IBN lines with CWT and CWTACT when CWTACT is deactivated.

Logs

MSL: Call Waiting Enhancements does not affect logs.

User interface

MSL: Call Waiting Enhancements does not change the user interface.

Billing

MSL: Call Waiting Enhancements does not affect billing.

AX0843 - MSL: Message Waiting LCD Activation**Description**

This feature allows MWT to be assigned to any blank key on M2000 series sets. When a message is in the queue, both the red MWT lamp and the LCD next to the MWT key are activated.

If the user has an Autodial key to the message center, the MWT key replaces the Autodial key.

Accompanying feature

This feature works in conjunction with feature AX0386, CCM: Message Waiting LCD Activation.

Hardware requirements

MSL: Message Waiting LCD Activation has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to MSL: Message Waiting LCD Activation:

- supports M2000 series sets only
- replaces Autodial key to message center
- phones must have both LCD and red MWT lamp

Interactions

MSL: Message Waiting LCD Activation has no functionality interactions.

Datafill

MSL: Message Waiting LCD Activation does not affect data schema tables or office parameters.

Service Orders

See feature, AX0386, CCM: Message Waiting LCD Activation, for more information.

Operational Measurements

MSL: Message Waiting LCD Activation does not affect Operational Measurements.

Logs

MSL: Message Waiting LCD Activation does not affect logs.

User interface

MSL: Message Waiting LCD Activation does not change the user interface.

Billing

MSL: Message Waiting LCD Activation does not affect billing.

AX0912 - CNA: NI-2 User Access Development**Description**

National ISDN-2 (NI-2) is a set of standards for ISDN in North America. These standards provide uniform messaging, functions, and features that promote interoperability among systems provided by different equipment vendors. These standards are documented in Bellcore publications. Before NI-2, there was a wide variety of semi-proprietary implementations of ISDN. The Nortel Networks North America (NTNA) ISDN variant was one such implementation. As makers and users of communications equipment employing ISDN Primary Rate Interfaces (PRIs) migrate towards NI-2 compliance, it becomes necessary for Nortel Networks to bring its implementation of ISDN PRI into compliance with NI-2. This compliance satisfies Nortel Networks' customers' needs for interoperable equipment.

Nortel Networks has already developed NI-2 software for ISDN PRI in the DMS-100 environment. This software brought the DMS-100 into compliance with NI-2 specifications for the network side of the PRI user network interface. Feature AX0912 implements the computing module (CM) resident portion of NI-2 compliant functionality, providing user side support for the PRI user network interface.

This feature addresses several requirements which are specific to the user side of the PRI user network interface. There are two general categories of functionality involved with this support:

- Basic call - This enables provisioning of an NIPRI trunk as user side. It sets default values for certain protocol timers on the user side. Basic call allows the Type of Number (TON) and numbering plan identifier (NPI) fields of the Called Party Number (CPN) Information Element

of the SETUP message to be set to UNKNOWN/UNKNOWN for calls outgoing from the user side.

- Call-by-call (CBC) - This provides user provisioning of carrier identification information for certain types of outgoing CBC services. It sets the length of network identification, type of network identification, network identification plan, and network identification fields of the Network-Specific Facilities (NSF) Information Element of the SETUP message for outgoing CBC services.

Accompanying feature

This feature works in conjunction with feature AX0940, XPM: NI-2 User Access Development.

Recommended reference material

The following documentation should be referenced for additional information on NI-2 ISDN PRI.

- *ISDN Primary Rate Interface Call Control Switching and Signaling Generic Requirements for Class II Equipment*, Issue 1, December 1991, plus Revision 1, December 1992, plus Revision 2, December 1994, Bellcore. Document number TR-NWT-001268.
- *Generic Requirements for ISDN PRI Call-By-Call Service Selection for Non-ISDN Foreign Exchange Facilities, Non-ISDN Tie Trunks, OUTWATS, and INWATS*, Issue 1, May 1992, plus Bulletin 1, December 1993, plus Bulletin 2, January 1995, Bellcore. Document number TR-NWT-001270.
- *1997 Version of National ISDN Primary Rate Interface Customer Premises Equipment Generic Guidelines*, Issue 1, November 1996, plus Revision 1, June 1997, Bellcore. Document number SR-3887.
- *Meridian SL-100 ISDN Primary Rate Interface Reference Manual*. Document number 555-4001-106.
- Feature AJ4141, Legacy NI-2 ISDN PRI Variant, Nortel Networks.
- Feature AJ4144, NI-2 PRI Basic Call, Nortel Networks.
- Feature AF6864, PRI Call-by-Call, Nortel Networks.

Hardware requirements

CNA: NI-2 User Access Development has no hardware requirements.

Limitations and restrictions

For all calls initiated over the user side of the NI-2 PRI trunks, the TON and NPI are set to UNKNOWN.

Interactions

CNA: NI-2 User Access Development depends upon modifications made to feature AX0940, XPM: NI-2 User Access Development.

Datafill

This feature requires datafill for the following tables:

- table LTDEF
- table PRIPROF
- table LTMAP

Table LTDEF

To provision a PRI trunk as NI-2, there must be an entry in table LTDEF containing a logical terminal definition specifically for NI-2. That logical terminal must be datafilled in an LTID option in the GRPINFO field of table TRKGRP.

"Datafill for defining an NI-2 logical terminal in table LTDEF" (page 476) shows the datafill necessary for defining an NI-2 logical terminal in table LTDEF.

Datafill for defining an NI-2 logical terminal in table LTDEF

Field	Subfield	Value
-----	-----	-----
CLASSREF	LTCLASS	PRA
CLASSREF	VARIANT	NIPPRI
CLASSREF	ISSUE	NI2V1
CLASSREF	PROFNAME	(see note)

Note: An optional profile name of a profile defined in table PRIPROF which contains NI-2 specific profile information can be included.

"LTID 15 datafilled for NI-2 PRI example" (page 476) is an example of a logical terminal (LTID 15) which has been datafilled for use as NI-2 PRI.

LTID 15 datafilled for NI-2 PRI example

LTKEY	LTAP	CLASSREF	-----									
ISDN	15	B PRA	25	25	4	4	NIPRI	NI2V1	NIL	(NOPMD	)	

Table PRIPROF

This table is used for specifying various modifications to the base protocol. For ISDN PRI versions prior to NI-2 (for example, NTNA), this table was used to specify protocol variations used in communicating with equipment from manufacturers other than Nortel Networks. This table also specified selected (using switches) behaviors of these protocol variations.

Because the intent of NI-2 is to provide a uniform protocol which does not allow variations, most of the functions performed by this table are not used on NI-2 trunks. For the NI-2 variant, the only supported switch is UNTONNPI, which forces the type of number/numbering plan identifier field of outgoing PRI calls to the value "unknown/unknown." This value is required in some cases to make destination switches correctly translate and route calls.

To make this profile work, the profile name must be placed into the PROFNAME field of an NI-2 logical terminal entry in table LTDEF.

"Table PRIPROF for NI-2 example" (page 477) shows how to provision table PRIPROF for NI-2.

Table PRIPROF for NI-2 example

Field	Subfield	Value
-----	-----	-----
PROFNAME	-	user-defined name
VARINFO	VARIANT	NIPRI
VARINFO	ISSUE	NI2V1
SWITCH	-	UNTONNPI

"PROFNAME of NI2PROFL which is datafilled for NI-2 example" (page 477) is an example of an entry with a PROFNAME of NI2PROFL which is datafilled for NI-2.

PROFNAME of NI2PROFL which is datafilled for NI-2 example

PROFNAME	VARINFO	SWITCH
-----	-----	-----
NI2PROFL	NIPRI	NI2V1 (UNTONNPI) \$

Table LTMAP

Table LTMAP is modified to allow mapping for an NIPRI trunk that has user side specified in table TRKSGRP. "NI2 PRI user side trunk in table TRKSGRP example" (page 478) is an example of an NI2 PRI user side trunk, called RCHTORTPN12, in table TRKSGRP.

NI2 PRI user side trunk in table TRKSGRP example

`ISDN 13 CLLI RCHTORTPNI2 TEI 0 $`

Tables LTDATA and LTCALLS

There is no new datafill for these tables specific to the user side (Meridian SL-100) of NI-2. However, there may be changes specific to the network side (DMS-100) of NI-2. Refer to the specific DMS-100 documentation for details.

For more details about data schema changes for this feature, refer to the *Communication Server 2100 Commercial Systems Data Schema Reference Manual* (555-4001-851).

Service Orders

CNA: NI-2 User Access Development does not affect SERVORD.

Operational Measurements

CNA: NI-2 User Access Development does not affect Operational Measurements.

Logs

CNA: NI-2 User Access Development does not affect logs.

User interface

CNA: NI-2 User Access Development does not change the user interface.

Billing

CNA: NI-2 User Access Development does not affect billing.

AX0913 - CCM: Flexible LEN**Description**

Without this feature, datafill for the Intelligent Peripheral Equipment (IPE) is restricted to voice only on even Line Equipment Numbers (LENs) and data only on odd LENs. This feature allows datafill for the IPE with voice class of service on odd LENs and data class of service on even LENs.

This feature is used to access the Symposium Personal Computer (PC) Communicator card.

The following modifications were made to the CCM layer to support Flexible LEN:

- Defines the FLXA card type in the CARDINFO field of table LNINV. (See note).

- Provides table control support for new cardinfo types.
- Removes the odd/even LEN restriction in SERVORD for the NEW, EST, CKLN, and ADD commands (if LEN is assigned FLXA).
- Modifies SERVORD error messages so it does not specify particular PEC codes.
- Defines the DTMK option for the Communicator card (see note).

Note: These modifications are made in this feature and feature AX0947, MSL: Flexible LEN.

Accompanying features


The following features work in conjunction with this feature:

- AX0942, XPM: Flexible LEN
- AX0947, MSL: Flexible LEN

Symposium PC Communicator card

The Communicator card is installed inside a PC and interfaces with an IPE digital line card and a Meridian digital telephone set. The Communicator card supports the use of computer telephony interface (CTI) applications. This card allows voice or data class of service on either B-channels of the Time Compression Multiplexed (TCM) loop from the PC to the IPE. Because this feature allows users to access both channels (voice and data), the use of two digital ports is extended to 256 Kbytes of data. See "[Symposium PC Communicator card configuration](#)" (page 479).

Symposium PC Communicator card configuration

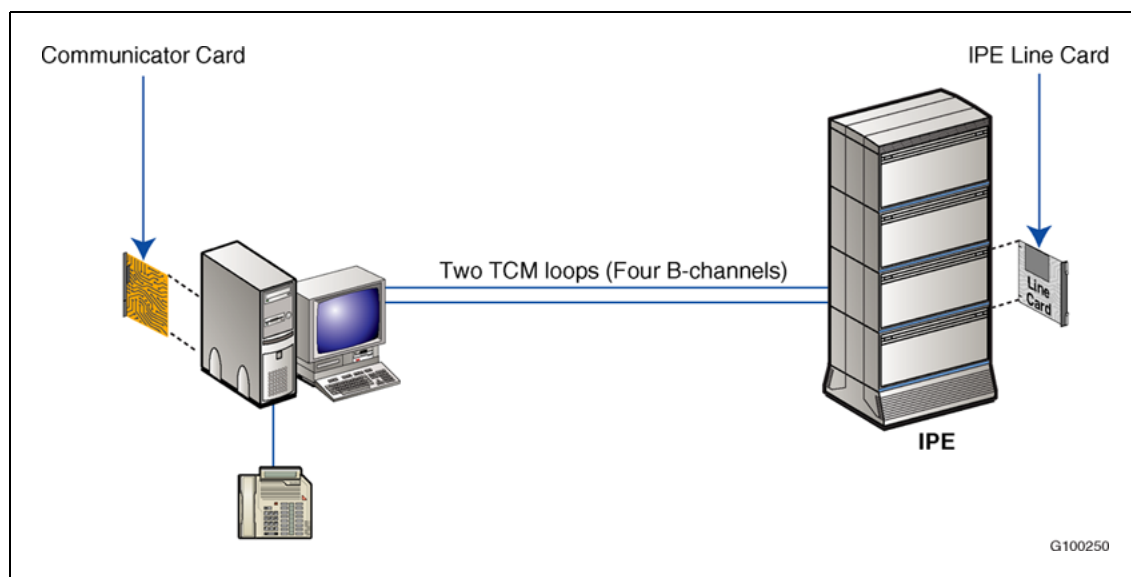

This feature also defines a data mode key (DTMK) option that can be assigned to one secondary DN of an Integrated Voice and Data (IVD) set connected to a Communicator card. The data mode key allows data communication on a secondary DN of a set while still supporting voice on the primary DN of the same set.

Hardware requirements

For sites wanting to use CTI applications such as Symposium, the Communicator card is required.

Limitations and restrictions

CCM: Flexible LEN has no limitations or restrictions.

Interactions

CCM: Flexible LEN has no interactions.

Datafill

CCM: Flexible LEN has no new datafill.

Service Orders

See feature AX0947, MSL: Flexible LEN, for SERVORD information about the DTMK option.

Operational Measurements

CCM: Flexible LEN does not affect Operational Measurements.

Logs

CCM: Flexible LEN does not affect logs.

User interface

CCM: Flexible LEN does not change the user interface.

Billing

CCM: Flexible LEN does not affect billing.

AX0914 - CCM: Call Forward Time of Day**Description**

Call Forward Time of Day (CFTOD) forwards calls based on the day of the week or year, or the time of day. Before this feature, users could forward all calls to a specific Directory Number (DN) using the Call Forward Universal (CFU) feature, or they could forward all calls to a specific internal DN (within the same customer group) using the Call Forward Intragroup (CFI) feature.

This feature supports Meridian Business Set (MBS), Integrated Voice and Data (IVD) sets, Integrated Services Digital Network (ISDN) sets, and Integrated Business Network (IBN) sets. The sets are required to have CFU or CFI assigned to them before CFTOD can be assigned.

CFTOD is added to key 1 for keysets and is set to active in Service Orders (SERVORD).

CFTOD allows separate forwarding DNS for internal, external, and data calls by allowing each phone to be given three TODNAMES at the SERVORD prompt. These TODNAMES have their own forwarding scheme defined in table TIMEODAY. CFTOD information is displayed using the CI commands QLEN, QDN, and QLT.

Accompanying feature

This feature works in conjunction with feature AX0946, MSL: Call Forward Time of Day.

Setting up CFTOD

Refer to feature AX0946, MSL: Call Forward Time of Day for details on datafilling tables for CFTOD.

Hardware requirements

CCM: Call Forward Time of Day has no hardware requirements.

Limitations and restrictions

Refer to feature AX0946, MSL: Call Forward Time of Day for details about limitations and restrictions.

Interactions

Refer to feature AX0946, MSL: Call Forward Time of Day for details about interactions.

Datafill

Table LCCOPT is modified by the use of an EXT file to allow the line option CFTOD to be datafilled for MBS, IVD, IBN, and ISDN sets.

Service Orders

Adding, deleting, or changing CFTOD TODNAMES for a DN is done with SERVORD. Refer to feature AX0946, MSL: Call Forward Time of Day for SERVORD examples.

Operational Measurements

CCM: Call Forward Time of Day does not affect Operational Measurements.

Logs

CCM: Call Forward Time of Day does not affect logs.

User interface

CCM: Call Forward Time of Day does not change the user interface.

Billing

CCM: Call Forward Time of Day does not affect billing.

AX0923 - CCM: SOC for LINE 117 and LINE 125 Enhancements**Description**

Feature AD9699, LINE 117/125 Log Enhancements, provides identification information of the calling party. This feature provides a Software Optionality Control (SOC) option that controls the availability of calling party information in LINE 117 and LINE 125 logs.

Refer to feature AD9699 for more information about LINE 117 and LINE 125 log enhancements.

SOC information

Option name	Order code
BAS CLID Linelog Enh	BAS00072

This feature does not change the format of LINE 117 and LINE 125 logs. The calling number and source fields added to the logs are present regardless of whether the SOC is idle or on.

Calling party information is only provided in the calling number and source fields if both of the following conditions exist:

- the SOC is set to on
- the calling party information is available

Hardware requirements

CCM: SOC for LINE 117 and LINE 125 Enhancements has no hardware requirements.

Limitations and restrictions

CCM: SOC for LINE 117 and LINE 125 Enhancements is only available for the Meridian SL-100 market.

Interactions

CCM: SOC for LINE 117 and LINE 125 Enhancements has no functionality interactions.

Datafill

CCM: SOC for LINE 117 and LINE 125 Enhancements does not affect data schema tables or office parameters.

Service Orders

CCM: SOC for LINE 117 and LINE 125 Enhancements does not affect SERVORD.

Operational Measurements

CCM: SOC for LINE 117 and LINE 125 Enhancements does not affect Operational Measurements.

Logs

No logs are physically changed by this feature. If the SOC state is idle, no calling party information is present in the LINE 117 and LINE 125 logs. See ["Sample LINE117 and LINE125 logs with SOC state idle" \(page 484\)](#) for an example of the logs with the SOC state set to idle.

Sample LINE117 and LINE125 logs with SOC state idle

```

LINELOGS      *LINE117 OCT29 11:10:39 5800 INFO CALLING LINE IDENT
LEN LCM1 00 1 09 31 DN 9975056 KEY 1
INCOMING TRUNK = CKT RCHTORTPSS7 0
CALLID = 360467
TIME: OCT29 11:10:39
CALLING NUMBER = $
SOURCE = UNAVAILABLE
LINELOGS      *LINE125 OCT29 11:11:37 8000 INFO TRACE_ON_MALICIOUS_CALL_INITIATED
LEN RLCM 00 0 10 00 DN 9975002
INCOMING TRUNK = CKT RCHTORTPSS7 1
CALLID = 360459
CALLING NUMBER = $
SOURCE = UNAVAILABLE
LINELOGS      *LINE117 OCT29 11:12:41 5800 INFO CALLING LINE IDENT
LEN LCM1 00 1 09 31 DN 9975056 KEY 1
INCOMING TRUNK = CKT RCHTORTPPRI 0
CALLID = 360522
TIME: OCT29 11:12:41
CALLING NUMBER = $
SOURCE = UNAVAILABLE
LINELOGS      *LINE125 OCT29 11:13:52 8000 INFO TRACE_ON_MALICIOUS_CALL_INITIATED
LEN RLCM 00 0 10 00 DN 9975002
INCOMING TRUNK = CKT RCHTORTPPRI 1
CALLID = 360344
CALLING NUMBER = $
SOURCE = UNAVAILABLE
LINELOGS      *LINE117 OCT29 11:15:07 5800 INFO CALLING LINE IDENT
LEN LCM1 00 1 09 31 DN 9975056 KEY 1
INCOMING TRUNK = CKT RCHTORTPPTS 0
CALLID = 360456
TIME: OCT29 11:15:07
CALLING NUMBER = $
SOURCE = UNAVAILABLE
LINELOGS      *LINE125 OCT29 11:16:48 8000 INFO TRACE_ON_MALICIOUS_CALL_INITIATED
LEN RLCM 00 0 10 00 DN 9975002
INCOMING TRUNK = CKT RCHTORTPPTS 1
CALLID = 360613
CALLING NUMBER = $
SOURCE = UNAVAILABLE

```

If the SOC state is on, calling party information is present in the LINE 117 and LINE 125 logs (if available). See ["Sample LINE117 and LINE125 logs with SOC state on"](#) (page 485) for an example of the logs with the SOC state set to on.

Sample LINE117 and LINE125 logs with SOC state on

```

LINELOGS      *LINE117 OCT29 11:10:39 5800 INFO CALLING LINE IDENT
LEN LCM1 00 1 09 31 DN 9975056 KEY 1
INCOMING TRUNK = CKT RCHTORTPSS7 0
CALLID = 360467
TIME: OCT29 11:10:39
CALLING NUMBER = 2149975015
SOURCE = CALLING NUMBER
LINELOGS      *LINE125 OCT29 11:11:37 8000 INFO TRACE_ON_MALICIOUS_CALL_INITIATED
LEN RLCM 00 0 10 00 DN 9975002
INCOMING TRUNK = CKT RCHTORTPSS7 1
CALLID = 360459
CALLING NUMBER = 2149975015
SOURCE = CALLING NUMBER
LINELOGS      *LINE117 OCT29 11:12:41 5800 INFO CALLING LINE IDENT
LEN LCM1 00 1 09 31 DN 9975056 KEY 1
INCOMING TRUNK = CKT RCHTORTPPRI 0
CALLID = 360522
TIME: OCT29 11:12:41
CALLING NUMBER = 2149975015
SOURCE = CHARGE NUMBER
LINELOGS      *LINE125 OCT29 11:13:52 8000 INFO TRACE_ON_MALICIOUS_CALL_INITIATED
LEN RLCM 00 0 10 00 DN 9975002
INCOMING TRUNK = CKT RCHTORTPPRI 1
CALLID = 360344
CALLING NUMBER = 2149975015
SOURCE = CHARGE NUMBER
LINELOGS      *LINE117 OCT29 11:15:07 5800 INFO CALLING LINE IDENT
LEN LCM1 00 1 09 31 DN 9975056 KEY 1
INCOMING TRUNK = CKT RCHTORTPPTS 0
CALLID = 360456
TIME: OCT29 11:15:07
CALLING NUMBER = $
SOURCE = UNAVAILABLE
LINELOGS      *LINE125 OCT29 11:16:48 8000 INFO TRACE_ON_MALICIOUS_CALL_INITIATED
LEN RLCM 00 0 10 00 DN 9975002
INCOMING TRUNK = CKT RCHTORTPPTS 1
CALLID = 360613
CALLING NUMBER = $
SOURCE = UNAVAILABLE

```

User interface

CCM: SOC for LINE 117 and LINE 125 Enhancements does not change the user interface.

Billing

CCM: SOC for LINE 117 and LINE 125 Enhancements does not affect billing.

AX0940 - XPM: NI-2 User Access Development**Description**

This feature provides the required XPM software changes to allow the NI-2 user side requirements in the Computing Module (CM) to function properly through the XPM peripheral.

This feature is related to ISDN PRI NI-2 user side and focuses on the following items:

- basic call
- Calling Line Identification (limited to calling number)
- 20 T1s per D-channel

Note: Although 20 T1s per D-channel are assignable in the software, Nortel does not recommend that many. The amount assigned is traffic dependent.

- D-channel backup
- call-by-call

Accompanying feature

This feature works in conjunction with feature AX0912, CNA: NI-2 User Access Development.

Hardware requirements

XPM: NI-2 User Access Development has no hardware requirements.

Limitations and restrictions

XPM: NI-2 User Access Development has no limitations or restrictions.

Interactions

XPM: NI-2 User Access Development interacts with feature AX0912.

Datafill

XPM: NI-2 User Access Development does not affect data schema tables or office parameters.

Service Orders

XPM: NI-2 User Access Development does not affect SERVORD.

Operational Measurements

XPM: NI-2 User Access Development does not affect Operational Measurements.

Logs

XPM: NI-2 User Access Development does not affect logs.

User interface

XPM: NI-2 User Access Development does not change the user interface.

Billing

XPM: NI-2 User Access Development does not affect billing.

AX0941 - XPM: Call Join**Description**

This feature makes modifications to the XPM layer to support the Call Join feature. For information on Call Join, refer to feature AX1160, MSL: Call Join.

Hardware requirements

XPM: Call Join has no hardware requirements.

Limitations and restrictions

XPM: Call Join has no limitations or restrictions.

Interactions

XPM: Call Join has no functionality interactions.

Datafill

XPM: Call Join does not affect data schema tables or office parameters.

Service Orders

XPM: Call Join does not affect SERVORD.

Operational Measurements

XPM: Call Join does not affect Operational Measurements.

Logs

XPM: Call Join does not affect logs.

User interface

XPM: Call Join does not change the user interface.

Billing

XPM: Call Join does not affect billing.

AX0942 - XPM: Flexible LEN**Description**

This feature supports the Data Mode Key (DTMK) option. For more information about the Flexible LEN feature, refer to the descriptions of features AX0913 and AX0947.

When the DTMK option is assigned to a Secondary Directory Number (SDN), the Meridian SL-100 system informs the Symposium Communicator card that the secondary DN has the DTMK option assigned to it. The

Communicator card sends a message to the XPM to originate or answer a call. The XPM recognizes this message as an origination message and acts accordingly. When the user presses the secondary DN that has the DTMK option assigned to it, the pressed key is ignored. Only an origination from the Communicator card is accepted for that key.

Accompanying features

This feature works in conjunction with the following features:

- AX0913, CCM: Flexible LEN
- AX0947, MSL: Flexible LEN

Hardware requirements

Refer to feature AX0913, CCM: Flexible LEN for hardware information.

Limitations and restrictions

Refer to features AX0913 and AX0947 for limitations and restrictions.

Interactions

All other key features are incompatible with the DTMK option.

Datafill

Refer to features AX0913 and AX0947 for data fill information.

Service Orders

Refer to feature AX0947, MSL: Flexible LEN, for Service Orders information.

Operational Measurements

XPM: Flexible LEN does not affect Operational Measurements.

Logs

XPM: Flexible LEN does not affect logs.

User interface

XPM: Flexible LEN does not change the user interface.

Billing

XPM: Flexible LEN does not affect billing.

AX0946 - MSL: Call Forward Time of Day

Description

Call Forward Time of Day (CFTOD) forwards calls based on the day of the week or year, and the time of day. Before this feature, users could forward all calls to a specific Directory Number (DN) using the Call Forward Universal (CFU) feature, or they could forward all calls to a specific internal DN (within the same customer group) using the Call Forward Intragroup (CFI) feature.

This feature supports Meridian Business Set (MBS), Integrated Voice and Data (IVD) sets, Integrated Services Digital Network (ISDN) sets, and Integrated Business Network (IBN) sets. The sets are required to have CFU or CFI assigned to them before CFTOD can be assigned.

CFTOD is added to key 1 for keysets and is active, by default, in Service Orders (SERVORD).

CFTOD allows separate forwarding DN's for internal, external, and data calls by allowing each phone to be given three TODNAMEs at the SERVORD prompt. These TODNAMEs have their own forwarding scheme defined in table TIMEODAY. CFTOD information is displayed using the CI commands QLEN, QDN, and QLT.

Accompanying feature

This feature works in conjunction with feature AX0914, CCM: Call Forward Time of Day.

Setting up CFTOD

The following sections describe how to set up the tables required for CFTOD to work properly. For more information, refer to the *Meridian SL-100 Translations Guide*.

Time of Day tables Before CFTOD is added to a phone using SERVORD, a TODNAME, a default CFTOD reference for that TODNAME, and the day types that are allowed to be forwarded, must be datafilled within table TODHEAD. The times for the TODNAME must also be datafilled within table TIMEODAY and the forwarding DN's should be datafilled in table CFTODDN.

Example datafill for table TODHEAD

TODNAME	TODTYPE	DAYTYPES
ENGREXT	CFTOD 0	(WEEKDAY)\$
ENGRINT	CFTOD 0	(WEEKDAY) (WEEKEND) (HOLIDAY)\$
ENGRDATA	CFTOD 0	(WEEKDAY)\$

TODNAME	TODTYPE	DAYTYPES
ENGRUNIV	CFTOD 0	(WEEKDAY) (WEEKEND) (HOLIDAY)\$
MKTGINT	CFTOD 0	(WEEKEND) (HOLIDAY)\$

Example datafill for table TIMEODAY

TODNAME	DAYTYPE	TIME	DATA
ENGREXT	WEEKDAY	9 0	CFTOD 0
ENGREXT	WEEKDAY	16 30	CFTOD 1
ENGRINT	WEEKDAY	8 0	CFTOD 0
ENGRINT	WEEKDAY	17 0	CFTOD 1
ENGRDATA	WEEKDAY	0 0	CFTOD 1
ENGRUNIV	WEEKDAY	0 0	CFTOD 1
ENGRUNIV	WEEKDAY	8 15	CFTOD 0
ENGRUNIV	WEEKDAY	18 30	CFTOD 1
ENGRUNIV	WEEKEND	8 0	CFTOD 2
ENGRUNIV	WEEKEND	14 0	CFTOD 3
MKTGINT	WEEKEND	0 0	CFTOD 1
MKTGINT	HOLIDAY	0 0	CFTOD 2

Note: Time is in military hours, HH MM. DNs listed as a 0 in table TIMEODAY are used to terminate the call to the station's DN or to be processed by other features or line options.

Example datafill for table CFTODDN

TODNAME	TODREF	CFTODDN
ENGREXT	1	8645010
ENGRINT	1	8645000
ENGRDATA	1	8645020
ENGRUNIV	1	8645020
ENGRUNIV	2	8645000
ENGRUNIV	3	8645010
MKTGINT	1	9974100
MKTGINT	2	9975120

Service Orders When setting up CFTOD in SERVORD, the TOD tables must be pre-datafilled to complete the set up. Examples of SERVORD prompts for setting up CFTOD to a phone and QLEN examples are shown in the following figures.

Example datafill for adding CFTOD with separate forwarding for internal and external calls

```

SO:
>ADO
SONUMBER:
>
DN_OR_LEN:
>9975120
OPTKEY:
>1
OPTION:
>CFTOD
TODNAME_INT:
>ENGRINT
TODNAME_EXT:
>ENGREXT
OPTKEY:
>$

```

TODNAME_INT references the TODNAME associated with calls that originate from internal DNs. The TOD tables associate this TODNAME with the tuples beginning with this name in the key field of tables TIMEODAY, TODHEAD, DAYOWEEK, and DAYOYEAR.

TODNAME_EXT references the TODNAME associated with calls that originate from external DNs. The TOD table associates this TODNAME with the tuples beginning with this name in the key field of tables TIMEODAY, TODHEAD, DAYOWEEK, and DAYOYEAR.

When setting up a phone capable of receiving a data call, SERVORD prompts for the TODNAME_DATA. The TODNAME_DATA prompt references the TODNAME associated with originating data calls.

The Line Class Codes (LCCs) that are capable of receiving a TODNAME_DATA prompt are ISDNKSET, DATA, PDATA, MCA, MPDA, M2006, M2008, M2016S, M2216A, M2216B, M2616, and M2616CT.

QLEN-example datafill for CFTOD (forward internal and external calls)

```

LEN:      LCM0  00 0 00 08
TYPE: SINGLE PARTY LINE
SNPA: 214
DIRECTORY NUMBER:      9975120
LINE CLASS CODE: M5212 SET
CUSTGRP:      BNRRCH SUBGRP: 0 NCOS: 0 RING: Y
CARDCODE: 6X21AC GND: N PADGRP: NPDGP BNV: NL MNO: Y
PM NODE NUMBER      :      38
PM TERMINAL NUMBER  :      9
OPTIONS:
NAME PUBLIC FRED FLINTSTONE
CFU N $ I $

KEY      DN
---      --
  1      DN      9975120
  2      DN      6577120
  3      DN      8208120

KEY      FEATURE
---      -
  1      CFTOD
  4      CFU

```

ENGRINT ENGREXT NILTODNM Y N
N \$I\$

Example datafill for adding CFTOD with forwarding for internal calls

```

SO:
>ADO
SONUMBER:
>
DN_OR_LEN:
>9975120
OPTKEY:
>1
OPTION:
>CFTOD
TODNAME_INT:
>ENGRINT
TODNAME_EXT:
>NILTODNM
OPTKEY:
>$

```

Calls to this DN are only screened on internal calls for TOD forwarding because only one TODNAME for the entry TODNAME_INT is entered.

QLEN-example datafill for CFTOD (forward only internal calls)

```

LEN:      LCM0  00 0 00 08
TYPE: SINGLE PARTY LINE
SNPA: 214
DIRECTORY NUMBER:      9975120
LINE CLASS CODE:  M5212 SET
CUSTGRP:      BNRRCH SUBGRP: 0 NCOS: 0 RING: Y
CARDCODE:  6X21AC  GND: N  PADGRP: NPDGP  BNV: NL MNO: Y
PM NODE NUMBER      :      38
PM TERMINAL NUMBER  :      9
OPTIONS:
NAME PUBLIC FRED FLINTSTONE
CFU N $ I 1 3

KEY      DN
---      --
  1      DN      9975120
  2      DN      6577120
  3      DN      8208120

KEY      FEATURE
---      -
  1      CFTOD
  4      CFU

```

ENGRINT NILTODNM NILTODNM Y N
N \$I 1 3

Example datafill for adding CFTOD with forwarding for all calls

```

SO:
>ADO
SONUMBER:
>
DN_OR_LEN:
>9975120
OPTKEY:
>1
OPTION:
>CFTOD
TODNAME_INT
>ENGRINT
TODNAME_EXT
>ENGREXT
OPTKEY:
>$

```

Calls to this DN are screened and forwarded on internal and external calls, because one TODNAME was entered for the entries TODNAME_INT and TODNAME_EXT.

QLEN-example datafill for CFTOD (forward all calls)

```

LEN:      LCM0  00 0 00 08
TYPE: SINGLE PARTY LINE
SNPA: 214
DIRECTORY NUMBER:      9975120
LINE CLASS CODE:  M5212 SET
CUSTGRP:      BNRRCH SUBGRP: 0 NCOS: 0 RING: Y
CARDCODE: 6X21AC GND: N PADGRP: NPDGP BNV: NL MNO: Y
PM NODE NUMBER      :      38
PM TERMINAL NUMBER  :      9
OPTIONS:
NAME PUBLIC FRED FLINTSTONE
CFU N $ I 1

KEY      DN
---      --
  1      DN      9975120
  2      DN      6577120
  3      DN      8208120

KEY      FEATURE
---      -
  1      CFTOD      ENGRINT ENGEXT  NILTODNM Y N
  4      CFU        N $I 1

```

Note: All of the TODNAMEs used in the preceding examples are defined in tables TIMEODAY, TODHEAD, and CFTODDN.

CFTOD activation, deactivation, and override codes

The activation, deactivation, and override codes for CFTOD are defined in table IBNXLA.

Example datafill for table IBNXLA

	Key	Result
FRCH	88	FEAT N Y CFTODACT
FRCH	89	FEAT N Y CFTODDEACT
FRCH	90	FEAT N Y CFTOVRACT
FRCH	91	FEAT N Y CFTOVRDACT

An activation code is used to activate CFTOD (for example, *88). Once CFTOD is active, the user hears a tone confirmation and each call is processed upon the set's TOD information.

A deactivation code (for example, *89) is used to deactivate CFTOD. When CFTOD is deactivated, all calls terminate to the set's DN or are processed by other features or line options.

While CFTOD is active, the line option can be overridden using a code for all sets related to this line option (for example, *90). The override can also be deactivated using another code (for example, *91).

The following examples illustrate using this feature for overriding CFTOD when arriving at work early, leaving work early, and leaving for a period of time during the day. An entry of either of the override codes has no effect if CFTOD is not active. The examples use the ENGRUNIV TODNAME as defined in tables TODHEAD and TIMEODAY example datafill.

Example 1: arriving early-override In this example, the user works from 8:15 a.m. to 18:30 (6:30 p.m.) on weekdays. The CFTOD for this user's phone is datafilled with ENGRUNIV as the TODNAME for internal and external calls. This forwards calls to the DN 864-5020 using CFTOD before 8:15 and after 18:30 of each day and terminates to the user's desk phone in the time between.

The user starts working at 7:30, dials the override activation code, and hears the confirmation tone. All calls before 8:15 now terminate to the user's phone, instead of the defined forwarding DN. Upon receiving the first call where the TIMEODAY tuple contains a different TODREF from when override was activated, the override is automatically deactivated making CFTOD resume the processing of calls based on the day of week or year and time of day.

Example 2: leaving early-override In this example, the user leaves work early at 4:30 pm. The time of day information remains the same from example 1. The user dials the override activation code and hears a confirmation tone. From 4:30 pm to 6:30 pm all calls received are forwarded to 864-5010, instead of the user's desk phone. Upon receiving the first call where the TIMEODAY tuple contains a different TODREF from when override was activated, the override is automatically deactivated making CFTOD resume the processing of all calls based on the day of the week or year and time of day.

Example 3: leaving early and returning before end of the day-override In this example, the user has an off-site meeting from 2:00 pm to 3:00 pm and plans to return to work after the meeting. The user wants the calls forwarded during the time of the meeting and then have calls terminate back at his desk from 3:00 pm to 6:30 pm. The user dials the override activation code and hears a confirmation tone. When the user returns from the meeting, they enter the override deactivation code to deactivate the override so that CFTOD resumes the processing of calls based on the day of the week or year and time of day.

Hardware requirements

MSL: Call Forward Time of Day has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to MSL: Call Forward Time of Day:

- CFU or CFI must be set up on the phone before CFTOD is added
- the maximum number of TODNAMEs that can be defined in table TODHEAD is 255
- CFTOD only supports MBS, IVD, ISDN, and IBN sets
- CFTOD can only be assigned to key one
- Defense Switched Network (DSN) does not support CFTOD

Interactions

"CFU/CFI interaction with CFTOD" (page 496) illustrates how CFTOD interacts with features CFU and CFI.

CFU/CFI interaction with CFTOD

CFU/CFI	CFTOD	Interaction
Inactive	Inactive	Calls terminate to dialed DN.
Active	Inactive	Calls forward to DN defined by CFU/CFI.
Inactive	Active	CFTOD.
Active	Active	CFU/CFI with CFTOD priority.

CFTOD is checked first to determine if it is active. CFU/CFI are checked after CFTOD. If CFTOD is active, the proper TODNAME is determined for forwarding purposes by determining whether the originator is an internal or external call. Tables TIMEODAY, CFTODDN, and TIMEODAY are checked with the correct TODNAME to see if a DN is assigned for forwarding at the time of the call. If there is no forwarding number at the time and CFU is active, the call is forwarded through CFU.

However, when both CFTOD and CFU/CFI are active, each call is checked to see if it falls within a defined time that is in table TIMEODAY. The DN within table CFTODDN for that TODNAME, if any, has precedence over any other DN.

Note: Features CFU and CFI do not change in any way, because of CFTOD.

Example-CFU/CFI interaction with CFTOD

A user in the engineering department has his phone set up with CFI and CFTOD with internal calls being forwarded through CFTOD. At 2:30 pm, the user decides to work in the lab, so programs CFI to forward the internal calls to the lab. At 3:00 pm, a call is sent to the phone in the lab. CFTOD first checks table TIMEODAY to determine if there is a forwarding DN defined for that time and TODNAME. Since a "0" is indicated for this time, the call goes through CFI and is forwarded to the lab. The user spends the rest of the work day in the lab and leaves work from there, not deactivating CFI on his phone. The user gets another call at 5:30 pm. CFTOD is checked again to determine if there is a forwarding DN defined for that time of day. There is, and the call is forwarded to DN 864-5000 by CFTOD.

Datafill

Table LCCOPT is modified to allow the line option CFTOD to be datafilled for MBS, IVD, IBN, and ISDN sets.

Table IBNXLA is modified to use the feature access codes for activating, deactivating, and overriding CFTOD. The feature names for the access codes are as follows:

- CFTODACT - activate the CFTOD option
- CFTODDEACT - deactivate the CFTOD option
- CFTOVRACT - override CFTOD
- CFTOVRDACT - deactivate CFTOD override

Tables IBNFEAT and KSETFEAT store the data feature tuple for the CFTOD option.

Table CFTODDN stores the DN used to forward the CFTOD calls. CFTODDN's key is made up of valid TODNAMEs, that are datafilled in table TODHEAD, and a unique reference number from 0 to 32767.

Service Orders

Adding, deleting, or changing CFTOD for a DN is done with SERVORD.

Operational Measurements

MSL: Call Forward Time of Day does not affect Operational Measurements.

Logs

A log is generated when CFTOD is activated, deactivated, and overridden.

User interface

MSL: Call Forward Time of Day does not change the user interface.

Billing

MSL: Call Forward Time of Day does not affect billing.

AX0947 - MSL: Flexible LEN**Description**

This feature supports SERVORD information required for Flexible LEN. For more information on the Flexible LEN feature, refer to descriptions of features AX0913 and AX0942.

This feature supports all MSL layer modifications including the following:

- Reads, writes, and deletes the FLXA card type when performing a list, add, change, or delete in table LNINV table control.
- Provides the check for the FLXA card type to disable the SERVORD and table IVDINV table control restriction of even/voice and odd/data LEN assignments.
- Creates a new line option, DTMK, by providing SERVORD and table control functions.

Accompanying features

This feature works in conjunction with the following features:

- AX0913, CCM: Flexible LEN
- AX0942, XPM: Flexible LEN

Hardware requirements

Refer to feature AX0913, CCM: Flexible LEN, for hardware information.

Limitations and restrictions

The following limitations and restrictions apply to MSL: Flexible LEN:

- The FLXA option can only be assigned to LENS on digital IPE line cards.
- The DTMK option can only be assigned to one secondary DN on M2008, M2008HF, M2616, M2616CT, and M2216A/B IVD sets.
- The DTMK option cannot be assigned to a secondary DN that has the AUL feature assigned to it.

Interactions

The AUL feature is incompatible with the DTMK option.

Datafill

Two tables are updated for this feature:

- table LNINV
- table KSETFEAT

Table LNINV

The FLXA value is added to field CARDINFO type.

Note: The MICB card is automatically datafilled as an NT5051 cardtype in table LNINV.

"FLXA example" (page 499) is an example of FLXA.

FLXA example

LEN	CARDCODE	PADGRP	STATUS	GND	BNV	MNO	CARDINFO-

IPE0	00 0 00	00	8D02AB	NPDGP	HASU	N NL Y	FLXA

Table KSETFEAT

The DTMK value is added to the field FEATURE type (refer to feature description AX0947). The following is an example of DTMK.

DTMK example

FEATKEY	FEATURE	KVAR

IPE0	00 0 00	00 2 DTMK DTMK

The range of the CARDINFO field in table LNINV includes the FLXA option.

The option, DTMK, is added to table KSETFEAT.

Table KSETFEAT example

```

TABLE: KSETFEAT
>list

```

	FEAT KEY	FEATURE	KVAR
-----	-----	-----	-----
IPE0 00 0 00 00 0	DTMK	DTMK	
>range feature			
2 FEATURE	KEY_SET_FEATURE		
	RLS, HLD, CUG, KSH, CFDVT, BC, CXR, 3WC, CNF, CWT, RAG, PRL,		
	CFX, AUD, CPU, SCS, SCL, ICM, MSB, MCH, PRK, EBO, NRS, QTD,		
	FC, QBS, CLSUP, DROP, XFER, MWIDC, PRV, SSAC, SOR, UCDS,		
	CPR, DRING, WML, AR, CNDB, COT, AUTODISP, ALI, BCLID, MBK,		
	SCMP, LPIC, SACB, AIN, SETMODEL, CFTB, CFTD, FCTDNTER,		
	FCTDNTRA, PCACIDS, AFC, MRFM, UCDLG, DQT, PR, MMI, LOCAL,		
	GIAC, QCK, MBSCAMP, BCONF, FAA, ACRJ, FXR, ACOU, WUCR, HF,		
	VMADN, VMEADENY, CIDS DLV, CIDSSUP, CFXVAL, CFXDNCT,		
	TRANSFER, RMI, TRKDISP, CRBL, DBC, DCC, DTMK}		

Service Orders

This feature adds a new line option, DTMK.

Prompt mode example

```

Prompt Mode:

>servord
SO:
>ado
SONUMBER:    NOW 97  12  12 PM
>
DN_OR_LEN:
>ipe0 0 0 0 00 0
OPTKEY:
>2
OPTION:
>dtmk
OPTKEY:
>$
COMMAND AS ENTERED:
ADO NOW 97 12 12 PM IPE0 00 0 00 00 ( 2 dtmk ) $
ENTER Y TO CONFIRM, N TO REJECT OR E TO EDIT
> Y
MACHINES ARE OUT OF SYNC, SERVICE ORDERS NOT ALLOWED
JOURNAL FILE IS INACTIVE, SERVICE ORDERS NOT ALLOWED
SHOULD ORDER BE DONE ANYWAY? (Y OR N)
>y

```

No-prompt mode example

```

No-Prompt Mode:

>servord
SO:
ADO $ IPE0 00 0 00 00 ( 2 dtmk ) $
COMMAND AS ENTERED:
ADO NOW 97 12 12 PM IPE0 00 0 00 00 ( 2 dtmk ) $
ENTER Y TO CONFIRM, N TO REJECT OR E TO EDIT
> Y
MACHINES ARE OUT OF SYNC, SERVICE ORDERS NOT ALLOWED
JOURNAL FILE IS INACTIVE, SERVICE ORDERS NOT ALLOWED
SHOULD ORDER BE DONE ANYWAY? (Y OR N)
>y

```

Error messages are provided in the following situations:

- adding option DTMK to a primary key
- adding option DTMK to a non-DN key
- adding option DTMK to more than one secondary DN
- adding option DTMK to an incompatible set

- adding option DTMK to a set not attached to an Intelligent Peripheral Equipment (IPE) module
- adding option DTMK to a secondary DN that has AUL assigned to it

Operational Measurements

MSL: Flexible LEN does not affect Operational Measurements.

Logs

MSL: Flexible LEN does not affect logs.

User interface

MSL: Flexible LEN does not change the user interface.

Billing

MSL: Flexible LEN does not affect billing.

AX1160 - MSL: Call Join

Description

This feature allows a user of a Meridian Business Set (MBS) and an Integrated Voice and Data (IVD) set to add a held call to the second leg of a conference or 3WC call. All parties would then be joined on the same call. This eliminates the previous requirement of having to drop and redial the held party.


The MBS conference feature allows a user to establish a conference call on an MBS set by dialing and adding a potential conferee to a conference call with the CNF key. This feature allows the MBS user to add a previously held party to an existing conference call by using the CNF or 3WC keys.

Similarly, the Three-Way Conference (3WC) feature allows the user, who is already talking to one party, to add a third party to the conversation by dialing the third party's number followed by a 3WC key.

Accompanying feature

This feature works in conjunction with feature AX0941, XPM: Call Join.

Call Join example

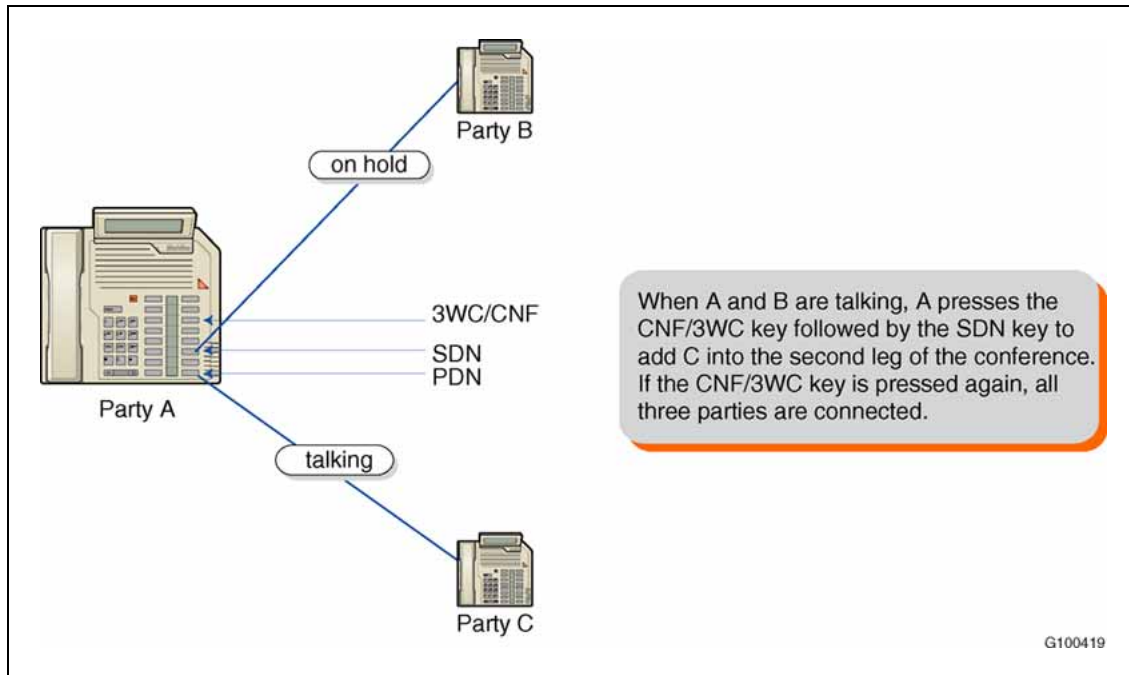

Using conference join

The following must be present before beginning a conference join operation:

- the CNF key
- the JOIN option must be assigned to the MBS and IVD sets
- the user must be on an active phone call
- a call that is to be joined must be on hold on the same MBS or IVD set

The user controlling the conference call performs the following conference join operations:

- Another call on the Secondary Directory Number (SDN) is on hold.
- While on the active call, press the CNF key. A special dial tone is heard. The CNF lamp comes on and the DN lamp flashes.
- The caller presses the held DN key to add the held call to the conference. Dial tone stops, the CNF lamp remains solid, and the caller converses privately with the party added. The held key's lamp goes off and the display is updated appropriately.

Note: The remainder of this operation works the same as the MBS 30-port conference feature.

- Once the caller is conversing with the party privately (using the CNF key), the caller returns to the conference call on the PDN by pressing the PDN key. The party with whom the caller was privately conversing with

is placed on hold. The CNF lamp flashes and the PDN lamp becomes solid. To return to the party on hold, the caller toggles as many times as desired.

- To add the party to the conference, the caller presses the CNF key again. The CNF lamp goes off and the DN's lamp becomes solid. A conference tone alerts the conferees that a party is joining the conference. The tone is also applied when a party goes on hook and leaves the conference.

Using 3WC join

The following must be present before beginning a 3WC join operation:

- the 3WC key
- the JOIN option must be assigned to the MBS and IVD sets
- the user must be on an active phone call
- a call that is to be joined must be on hold on the same MBS or IVD set

The user controlling the conference call performs the following 3WC join operations:

- The caller presses the 3WC key and receives a special dial tone. The 3WC lamp comes on and the active DN lamp flashes.
- The caller presses the held call key to add the held call to the second leg of the three-way conference. The dial tone stops, the 3WC lamp remains solid, and the caller converses privately with the added party. The held key's lamp goes off. The display updates appropriately.

Note: The remainder of this operation works the same as the MBS Three-Way Calling feature.

- Once the caller is conversing with the party privately (on the 3WC key), the caller returns to the call on the PDN by pressing the PDN key. The party with whom the controller was privately conversing with is placed on hold. The 3WC lamp then flashes and the PDN lamp becomes solid. To return to the party on hold, the caller toggles as many times as desired.
- To add the party to the conference, the caller presses the 3WC key again. The 3WC lamp goes off and the PDN lamp becomes solid. A conference tone is used to alert the conferees that a party is joining the 3WC conference. The tone is also applied when a party goes on hook and leaves the conference.
- To drop the party just added, the caller presses the 3WC key again.

Error conditions

The join operation receives a negative acknowledgement (NACK) when a held call is on the call appearance, but the call cannot be joined. This could be because the call is part of another conference, 3WC, or extended from an Attendant Console.

Hardware requirements

MSL: Call Join only supports MBS and IVD sets.

Limitations and restrictions**Allowable Call Join appearances**

MSL: Call Join allows the join action on a held call when it is on the following call appearances:

- DN key
- Call Waiting key
- MADN key
- ACD INCALLS key
- Intercom/Group Intercom key
- UCD key

Supported telephone sets

MSL: Call Join only supports MBS and IVD phone sets.

Supported conferences

MSL: Call Join only applies to the Station Controlled Conference. Therefore, the Preset Conference, Meet-Me Conference, or other types of conference are not affected.

Join limitations

The existing limitations and restrictions of the Station Controlled Conference and the 3WC apply to the Call Join operation when appropriate.

Interactions

After the private consult leg of the conference call is successfully established with the Call Join operation, the MBS 30-port Conference feature handles further interactions throughout the remainder of the call. Refer to MBS 30-Port Conference feature for interactions.

After the private consult leg of the 3WC is successfully established with the Call Join operation, the MBS 3WC feature handles further interactions throughout the remainder of the call.

The following feature interactions are specific to the Call Join operation.

- Attendant Console - If the held call to be joined was extended from an Attendant Console, the Call Join is not allowed. The caller receives NACK treatment.
- Call Waiting - Only an answered call on a call waiting key can be joined.
- Call Transfer - The call transfer type applies to the 3WC Join.
- Flexible Station Controlled Conference, Meet-Me Conference, Preset Conference - If the held call to be joined is part of another conference, the Call Join is not allowed. The caller receives NACK treatment.
- 3WC - If the held call to be joined is a terminating leg of another 3WC, the Call Join is not allowed. The caller receives NACK treatment.
- MADN - The existing feature interactions with MBS Conference and 3WC also apply to the Call Join operation. If the conference controller is on a MADN bridged call, the Call Join is not allowed. However, 3WC Join is allowed for each current feature. If the held call is part of a MADN bridged call, it is not allowed to be joined. A held MADN Single Call Arrangement (SCA) call can only be joined from the same set as the MADN member which placed the call on hold. Any other member of the MADN group must first become the active member on the call and explicitly place the call on hold prior to joining the held MADN SCA call.

Datafill

MSL: Call Join adds a new line option in table KSETFEAT. JOIN is assignable to the PDN of an MBS and IVD set. The JOIN tuple is added in table KSETFEAT once the option is successfully added to the set using SERVORD.

Note: The user should not add or delete the JOIN tuple using table control commands. The option should only be added or removed using SERVORD.

Table LCCOPT is updated to include JOIN for the MBS line class codes.

Service Orders

MSL: Call Join supports Service Orders in the following manner:

- Service Order commands such as ADO, DEO, EST, and NEW can be used on the JOIN option.
- The JOIN option can only be assigned to the PDN of an MBS or IVD set. When adding the JOIN option, a check is made to ensure CNF or 3WC is also assigned to the set.
- The JOIN option can be removed from a set by using the DEO command. When the CNF and 3WC features are deleted from the set,

the JOIN option is also removed. A warning message is given because the JOIN option is meaningless without either CNF or 3WC configured.

Operational Measurements

MSL: Call Join does not affect Operational Measurements.

Logs

MSL: Call Join does not affect logs.

User interface

MSL: Call Join does not change the user interface.

Billing

MSL: Call Join does not affect billing.

AX1221 - CCM: IVD Decouple**Description**

The purpose of this feature is to move Integrated Voice and Data (IVD) specific code into the MSL layer from the lower layers. This move improves the maintainability and adaptability of the software.

The functionality provided by this software includes call processing, Service Orders (SERVORD) feature checking and feature interactions, and table control for tables such as KSETFEAT and KSETLINE.

Hardware requirements

CCM: IVD Decouple has no hardware requirements.

Limitations and restrictions

CCM: IVD Decouple has no limitations or restrictions.

Interactions

CCM: IVD Decouple has no functionality interactions.

Datafill

CCM: IVD Decouple does not affect data schema tables or office parameters.

Service Orders

CCM: IVD Decouple does not affect SERVORD.

Operational Measurements

CCM: IVD Decouple does not affect Operational Measurements.

Logs

CCM: IVD Decouple does not affect logs.

User interface

CCM: IVD Decouple does not change the user interface.

Billing

CCM: IVD Decouple does not affect billing.

AX1223 - CCM: NI-2 User Re-architecture

Description

This feature redesigns the implementation of features AX0912 and AX0940, NI-2 PRI User Side. This feature creates a new PRI agent in the PRI PRO architecture, making the software more efficient. This feature is transparent to the user.

Hardware requirements

CCM: NI-2 User Re-architecture has no hardware requirements.

Limitations and restrictions

CCM: NI-2 User Re-architecture has no limitations or restrictions.

Interactions

CCM: NI-2 User Re-architecture has no functionality interactions.

Datafill

CCM: NI-2 User Re-architecture does not affect data schema tables or office parameters.

Service Orders

CCM: NI-2 User Re-architecture does not affect SERVORD.

Operational Measurements

CCM: NI-2 User Re-architecture does not affect Operational Measurements.

Logs

CCM: NI-2 User Re-architecture does not affect logs.

User interface

CCM: NI-2 User Re-architecture does not change the user interface.

Billing

CCM: NI-2 User Re-architecture does not affect billing.

AX1227 - CCM: NI-2 User Side Development - Phase II

Description

This feature brings additional NI-2 user side capabilities to the Meridian SL-100 customer. In many Meridian SL-100 Primary Rate Interface (PRI) implementations, the Meridian SL-100 acts as a user to a network side switch, in addition to acting as the network side to a subtending PBX.

This feature provides the following user side functionality:

- Nx64/Dialable Wideband Services (DWS)

Note: This functionality relies entirely on the software written for features AF7218, PRI Dialable Wideband Service, and AX0510, DMS-100 DWS XPM PRI. These features implement Dialable Wideband for the NI-2 PRI on the networking side. Refer to the *DMS-100 Feature Description Manual* for more information.

- Calling Name Delivery
 - Calling Name Delivery
 - Preferred name Presentation Status (Octet 3a in the Calling Party Number Information Element)
 - Link Calling Name presentation to Calling Number

Note: This functionality relies on the software written for features AF7209, PRI Calling Name, and AX0518, XPM PRI Calling Name. These features implement the ISDN Calling Name Delivery for PRI on the networking side. Refer to the *DMS-100 Feature Description Manual* for more information.

For more information and details, refer to the *Meridian SL-100 ISDN PRI Reference Manual*.

Accompanying feature

This feature works in conjunction with feature AX1245, XPM: NI-2 User Side Development - Phase II.

Nx64/Dialable Wideband Services

Nx64/Dialable Wideband Services provides end-to-end wideband connectivity on PRI and ISDN user part (ISUP) circuits. This feature provides the call processing necessary for the NI-2 PRI user side trunk originations and terminations for wideband calls.

DWS provides on-demand Nx64 kbps calls. The number of channels, labeled N, can range from two to 24. The N value provides data transfer rates ranging from 64 kbps to 1.536 Mbps, in increments of 64 Kbps, for a single call through the network.

All of the 64 kbps DS0 channels used on the incoming or outgoing wideband call must reside on the same DS1 span or T1 carrier, and in the same trunk group. The procedure for establishing DWS calls is similar to the procedure for establishing a basic 64 kbps circuit-switched ISDN call.

DWS is supported on Nortel North America (NTNA) PRI and on the network side of NI-2 PRI products. This feature does not affect the current DWS PRI products, but does provide interworking with the existing DWS PRI.

Dialable Wideband Services are provided by having multiple circuit switched DS0 channels grouped together for one call, thereby providing a higher bit rate channel for the call as a whole. The bit rate can only be increased in increments of 64 kbps. All of the following throughput values are supported for all valid N values from two to 24. Refer to "[Sample table Nx64 throughput values](#)" (page 510).

Sample table Nx64 throughput values

N value	Data throughput	N value	Data throughput	N value	Data throughput
2	128 kbps	10	640 kbps	18	1.152 Mbps
3	192 kbps	11	704 kbps	19	1.216 Mbps
4	256 kbps	12	768 kbps	20	1.280 Mbps
5	320 kbps	13	832 kbps	21	1.344 Mbps
6	384 kbps	14	896 kbps	22	1.408 Mbps
7	448 kbps	15	960 kbps	23	1.472 Mbps
8	512 kbps	16	1.024 Mbps	24	1.536 Mbps
9	576 kbps	17	1.088 Mbps		

A wideband call is distinguished from a narrowband call by the following information elements in the SETUP message received from the originating PRI trunk:

- bearer capability (BC)
- channel identification (CID)


Trunk selection This feature supports fixed, floating, and flexible methods of trunk selection for connections within the network.

Fixed Selection - Fixed selection is defined by selecting N consecutive DS0 channels which begin and end on exact boundaries. Only the N values of 6 and 24 are currently used for fixed selection. The boundaries for these supported N values are described in "Sample table H0 and H11 rates" (page 511) and "Sample figure fixed format - H0 illustrated" (page 511).

Sample table H0 and H11 rates


Size	DS0s used on a DS1
H0	(1, 2, 3, 4, 5, 6)(7, 8, 9, 10, 11, 12)(13, 14, 15, 16, 17, 18)19, 20, 21, 22, 23, 24)
H11	All DS0s in the DS1
Note: H0 and H11 refer to the bearer capability determined from the Information Transfer Rate (ITR).	

Sample figure fixed format - H0 illustrated

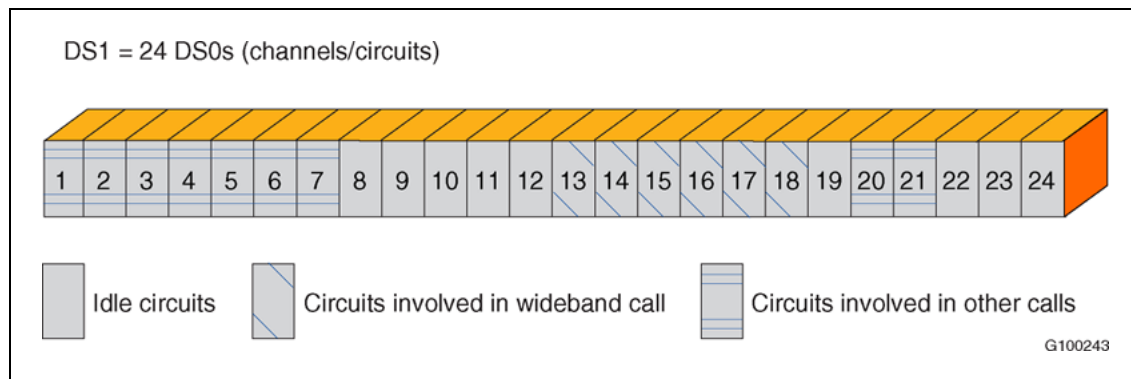


"Sample figure fixed format - H0 illustrated" (page 511) illustrates the fixed format, which is the most restrictive of the wideband trunk grouping methods.

Floating selection - Floating selection is defined by selecting any N consecutive channel on the DS1 span. These consecutive channels can start at any point in the DS1 span, but must all reside on the same DS1. Refer to "Sample figure floating format" (page 512).

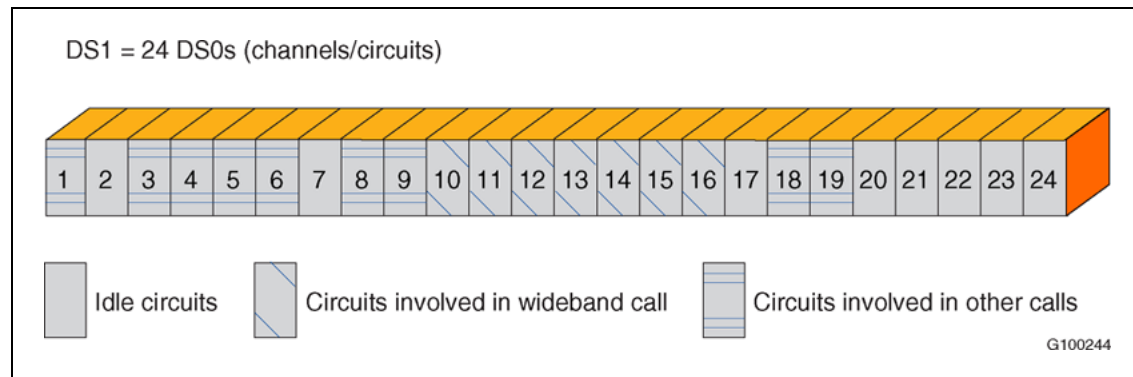Sample figure floating format

"Sample figure floating format" (page 512) illustrates the floating format which is less restrictive than the fixed method of trunk grouping.

Flexible selection - Flexible selection is defined by selecting any N DS0 channel in the DS1 span which will be used for the wideband call. Because this routine allows for the selection of DS0s in a random fashion, it works to reduce fragmentation on the DS1 by being able to select those fragmented idle channels on the DS1. Refer to "Sample figure flexible format" (page 512).

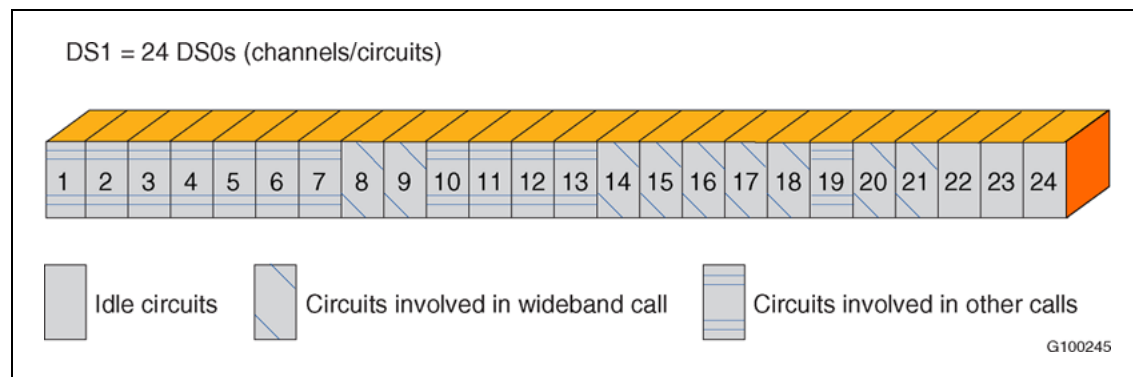Sample figure flexible format

The flexible trunk grouping method is the least restrictive of the three trunk grouping methods.

Calling Name Delivery


For the user side of NI-2 PRI, the Bellcore Standard SR-3887 calls for the Customer Premises Equipment (CPE) switch to accept the name for the calling party in a facility Information Element (IE) that is included in either a SETUP or a FACILITY message.

The calling party name information is only sent by the network side of the NI-2 PRI facility if the preferred name presentation status field of the Calling_Party_Number Information Element indicates Presentation

Allowed. If it does not indicate Presentation Allowed, the calling party name information will not be sent by the network to the user. Therefore, once the user side receives the calling party name information in the facility Information Element, the user side assumes that it is allowed to present the name and number of the calling party.

The CPE (for example, a Meridian SL-100) can serve as a user side switch to the network and as a network side switch to another switch (for example, a Meridian 1 PBX). Therefore, the network side ISDN PRI Calling Name Deliver (I-CNAM) feature is modified to accept name information from an NI-2 PRI user side trunk. Additionally, it can accept name information from an SS7 trunk, if the CPE is being used as a network side switch. This way, the name information is built into the SETUP message by the network side in order to send it to the user side of the next PBX. Refer to "Sample figure CPE used as user side and network side switch" (page 513).

Sample figure CPE used as user side and network side switch

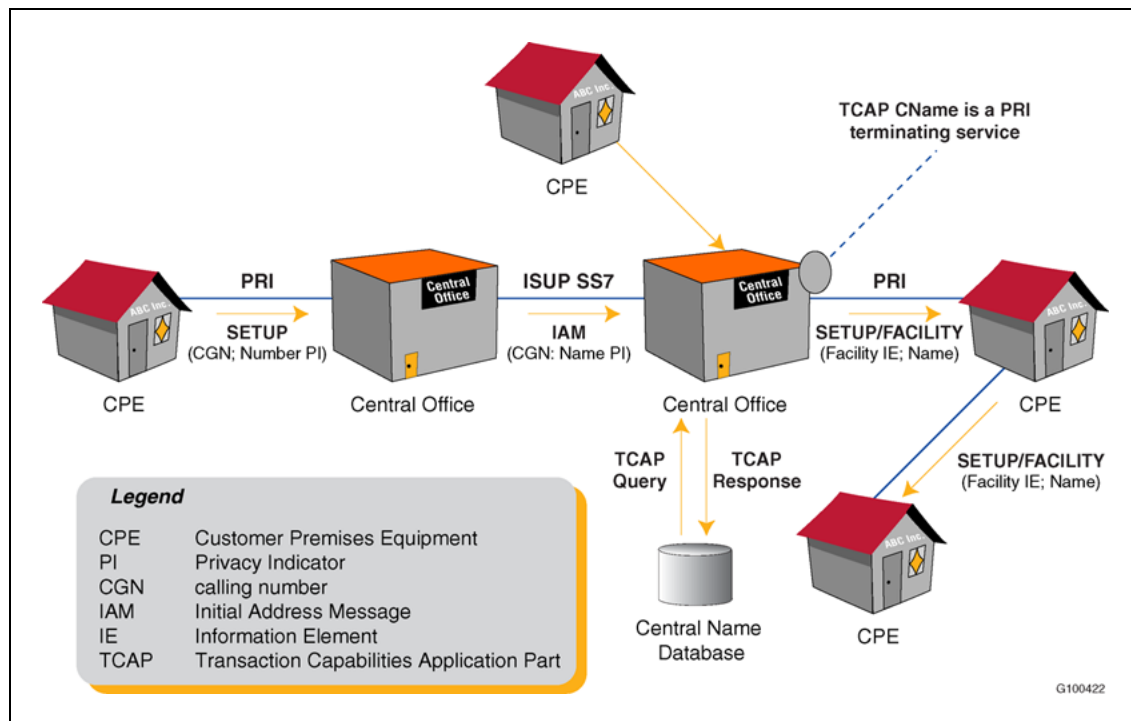

Message delivery: Nx64/Dialable Wideband

DWS uses only the SETUP message. The SETUP message is sent by the user or the network to initiate call establishment. Since narrowband calls are allowed on wideband trunks, both narrowband and wideband calls can originate on the same wideband trunk.

A wideband call is distinguished from a narrowband call by the following Information Elements in the SETUP message that is received from the originating PRI trunk.

- bearer capability (BC)
- channel identification (CID)

Together, these two IEs contain the information needed to set up a wideband call. The individual B-channels grouped together to form the wideband channel are identified in the CID Information Element while the transfer rate is identified in the BC Information Element.

Bearer capability information element The bearer capability information element (BC IE) of the NI-2 PRI SETUP message indicates the rate of the wideband call using the Information Transfer Rate (ITR) and the Transfer Rate Multiplier (TRM) fields. The BC IE, ITR, and TRM formats are shown in "Sample table information transfer rate" (page 514).

Sample table information transfer rate

ITR 5 4 3 2 1	Meaning	Trunk selection	Bearer capability
1 0 0 0 0	64 kbps	all forms	narrowband
1 0 0 1 1	384 kbps	fixed	H0
1 0 1 0 1	1.536 Mbps	fixed	H11
1 1 0 0 0	multirate (64 kbps base rate)	floating or flexible	size in TRM parameter 2 through 24 only

The information transfer rate and transfer rate multiplier fields are described in "Sample table information transfer rate/transfer rate multiplier" (page 514).

Sample table information transfer rate/transfer rate multiplier

ITR	TRM	Meaning	ITR	TRM	Meaning
1 0 0 0 0	1 0 0 0 0	narrowband call (64 kbps)	1 1 0 0 0	0 1 1 1 0	14×64
1 1 0 0 0	0 0 0 1 0	2×64	1 1 0 0 0	0 1 1 1 1	15×64
1 1 0 0 0	0 0 0 1 1	3×64	1 1 0 0 0	1 0 0 0 0	16×64
1 1 0 0 0	0 0 1 0 0	4×64	1 1 0 0 0	1 0 0 0 1	17×64
1 1 0 0 0	0 0 1 0 1	5×64	1 1 0 0 0	1 0 0 1 0	18×64
1 1 0 0 0	0 0 1 1 0	6×64	1 1 0 0 0	1 0 0 1 1	19×64
1 1 0 0 0	0 0 1 1 1	7×64	1 1 0 0 0	1 0 1 0 0	20×64
1 1 0 0 0	0 1 0 0 0	8×64	1 1 0 0 0	1 0 1 0 1	21×64
1 1 0 0 0	0 1 0 0 1	9×64	1 1 0 0 0	1 0 1 1 0	22×64

ITR	TRM	Meaning	ITR	TRM	Meaning
1 1 0 0 0	0 1 0 1 0	10×64	1 1 0 0 0	1 0 1 1 1	23×64
1 1 0 0 0	0 1 0 1 1	11×64	1 1 0 0 0	1 1 0 0 0	24×64
1 1 0 0 0	0 1 1 0 0	12×64	1 0 0 1 1	not required	H0
1 1 0 0 0	0 1 1 0 1	13×64	1 0 1 0 1	not required	H11

When the ITR equals multirate (11000), an optional octet is present in the BC IE. This octet contains the transfer rate multiplier value that indicates the bit rate of the wideband call (that is, the number of 65 kbps circuits involved in the wideband call).

The TRM is used only in the event that various Nx64 kbps capability is provided. In order to use the TRM, the ITR is set to 11000 for multirate (64 kbps base rate) and the TRM is encoded to the value of N in Nx64. The bandwidth is calculated by multiplying the ITR with the TRM.

Channel identification (CID) Information Element (IE) For a wideband call, the CID IE portion of the SETUP message contains information to identify the channels within a single DS1 carrying the call. This is accomplished using a three-octet B-channel bitmap.

Message delivery: Calling Name Delivery

For PRI, existing services are modified to generate and dispatch appropriate Q.931 messages based on feature events. To provide this functionality, a messaging platform is developed based on an existing messaging architecture.

When the network switch receives no response to a TCAP query from the database, before the SETUP is sent to the user side, the Information Following indication is used. This indication is sent in a Facility IE using ASN.1 encoding.

For more information and details, refer to the *Meridian SL-100 ISDN PRI Reference Manual*.

Message protocols: Nx64/Dialable Wideband

This feature uses the bearer capability and channel identification Information Elements in a SETUP message to implement DWS. For more information, refer to the preceding description on message delivery: Nx64 Dialable Wideband. This feature uses the Bellcore Standard (SR-3887, Issue 1, Revision 1) message protocol to accept the name information sent across the NI-2 PRI trunk.

Message protocols: Calling Name Delivery

This feature uses the name information in the facility Information Element of either the SETUP or FACILITY message sent over the NI-2 PRI trunk from the network side to the user side. (For more information, refer to the preceding description on message delivery: Calling Name Delivery.) This feature uses the Bellcore Standard (SR-3887, Issue 1, Revision 1) message protocol to accept the name information sent across the NI-2 PRI trunk.

Hardware requirements

CCM: NI-2 User Side Development - Phase II has no hardware requirements.

Limitations and restrictions

CCM: NI-2 User Side Development - Phase II has no limitations or restrictions.

Interactions

CCM: NI-2 User Side Development - Phase II has no functionality interactions.

Datafill

The following tables are modified for Nx64/Dialable Wideband:

- TRKGRP
- TRKSGRP
- OFCENG
- CARRMTC
- LTCPSINV
- LTDEF

This feature uses the existing information in table OFCENG (to provide the flexibility of generating either one or two AMA records) for Calling Name Delivery. Refer to feature AF6628, ISDN Calling Name/Number Delivery for more information.

There is no special datafill required to enable Calling Name Delivery for the user side NI-2 trunk. However, the network side NI-2 trunk requires datafill to deliver the calling name. Refer to feature AF7209, ISDN PRI Calling Name Delivery for more information.

Table TRKGRP

Table TRKGRP defines the logical and physical characteristics of a trunk group. To allow wideband calls on a PRI trunk group, the selection sequence (SELSEQ) field in this table must be set to WIDEBAND as a valid option. When you select WIDEBAND for the SELSEQ field, three subfields are prompted.

The prompted SELSEQ subfields are:

- WBSELSEQWIDEBAND SELECTION SEQUENCE
- WBGRPINGWIDEBAND GROUPING
- WBSEARCHWIDEBAND SEARCH

Note: Datafilling SELSEQ as WIDEBAND can only be applied to new trunk groups. To provide DWS capability on existing trunk groups, delete the existing trunk groups from table TRKGRP and then re-add the trunk groups with the SELSEQ field datafilled as WIDEBAND.

Subfield WBSELSEQ This subfield specifies whether the DS0s are chosen in ascending or descending order. It is recommended that the user datafill a trunk group as ASEQ (ascending) on the switch at one end of the trunk and as DSEQ (descending) on the switch at the other end of the trunk. This causes the two switches to search for available DS1s, from opposite ends of the set of DS1s on a trunk group, to avoid glare.

Subfield WBGRPING This subfield specifies the time slot arrangement types which can be used by call processing. Time slot choices are FIXED, FLOATING, FLEXIBLE. Refer to the preceding information about trunk selection.

Subfield WBSEARCH This subfield specifies the search method used to find a group of timeslots. The search method choices are BESTFIT and FIRSTFIT.

The descriptions for BESTFIT and FIRSTFIT follow.

- **BESTFIT** - the bestfit algorithm minimizes fragmentation by allowing the largest groups of contiguous channels to remain unused and thus available for large bandwidth calls. It is recommended that bestfit only be used on one-way trunks when resources are limited.
- **FIRSTFIT** - this simply selects the first available N channels. Firstfit helps to avoid glare. Glare is the blocking of a call by the simultaneous seizure of a facility at both ends of the call (for example, two switches simultaneously select the same trunk for different calls).

Refer to the example in ["Example datafill for table TRKGRP" \(page 518\)](#).

Example datafill for table TRKGRP

GRPKEY GRPINFO

PRIFIX0 PRA 0 NPDGP NCIT WIDEBAND DSEQ FIXED FIRSTFIR N (NETDWS 20) \$\$
 PRIFLT0 PRA 0 NPDGP NCIT WIDEBAND DSEQ FLOATING FIRSTFIT N (NETDWS 21) \$\$
 PRIFLX0 PRA 0 NPDGP NCIT WIDEBAND ASEQ FLEXIBLE FIRSTFIT N (NETDWS 22) \$\$

Table TRKSGRP

For wideband PRI trunks, the field BCHGLARE identifies whether the trunk is going to stand or yield in a glare situation. The values for this field are YIELD or STAND. This field should not be datafilled the same value on both ends of a PRI trunk.

Refer to the example in "[Example datafill for table TRKSGRP](#)" (page 518).

Example datafill for table TRKSGRP

RPKEY CARDCODE SGRPVAR SGRPVAR

PRIFIX0 0 DS1SIG ISDN 15 15 UNISPEC20 2 N YIELD USER PT_PT
 USER N UNEQ 160 N DEFAULT NTCI 2 2 24 64K HDLC \$

PRIFLT0 0 DS1SIG ISDN 15 15 UNISPEC20 2 N YIELD USER PT_PT
 USER N UNEQ160 N DEFAULT NTCI 2 5 24 64K HDLC \$

PRIFLX0 0 DS1SIG ISDN 15 15 UNISPEC20 2 N STAND USER PT_PT
 USER N UNEQ 160 N DEFAULT DTCI 2 0 24 64K HDLC \$

Table OFCENG

A switch can be configured to define the maximum number of simultaneous wideband calls allowed by using the office parameter, MAX_NUM_WIDEBAND_CALLS. This parameter has a range of 0 to 4096. The default value is zero. Data store needed for wideband calls is allocated by setting this value to a non-zero number. This parameter allocates two wideband extension blocks for each call.

Table CARRMTC

In table CARRMTC, an entry for the DTCI associated with wideband must have the field ZERO_LOGIC set to B8ZS, otherwise wideband calls will not operate properly. The recommended datafill for the DTCI is DTCI WIDEBAND . . . ESF B8ZS. . . .

Table LTCPSINV

Once an entry in table CARRMTC has been datafilled, changes must be made to table LTCPSINV for the DTCI that will carry wideband traffic. Each span that will host a wideband trunk must be datafilled with the

corresponding entry from table CARRMTC. ["Sample figure spans 3 through 12 as wideband" \(page 519\)](#) illustrates spans 3 through 12 as those that will host wideband trunks.

Sample figure spans 3 through 12 as wideband

```
(0 DS1PRA DEFAULT N 0 NIL) (1 DS1PRA DEFAULT N 0 NIL)
(2 DS1PRA DEFAULT N 0 NIL) (3 DS1PRA WIDEBAND N 0 NIL)
(4 DS1PRA WIDEBAND N 0 NIL) (5 DS1PRA WIDEBAND N 0 NIL)
(6 DS1PRA WIDEBAND N 0 NIL) (7 DS1PRA WIDEBAND N 0 NIL)
(8 DS1PRA WIDEBAND N 0 NIL) (9 DS1PRA WIDEBAND N 0 NIL)
(10 DS1PRA WIDEBAND N 0 NIL) (11 DS1PRA WIDEBAND N 0 NIL)
(12 DS1PRA WIDEBAND N 0 NIL) (13 DS1PRA DEFAULT N 0 NIL)
(14 DS1PRA DEFAULT N 0 NIL) (15 DS1PRA DEFAULT N 0 NIL)
(16 DS1PRA DEFAULT N 0 NIL) (17 DS1PRA DEFAULT N 0 NIL)
(18 DS1PRA DEFAULT N 0 NIL) (19 DS1PRA DEFAULT N 0 NIL)
```

Table LTDEF

Table LTDEF defines the variant for the PRI trunk. Variant NIPRI with version NI2v1 must be used to define an NI-2 PRI trunk. Refer to the example in ["Example datafill for table LTDEF" \(page 519\)](#).

Example datafill for table LTDEF

```
LTKEY LTAP CLASSREF
NETDWS 20 B PRA 100 100 49 50 NIPRI NI2V1 NIL (NOPMD) $
NETDWS 21 B PRA 100 100 49 50 NIPRI NI2V1 NIL (NOPMD) $
NETDWS 22 B PRA 100 100 49 50 NIPRI NI2V1 NIL (NOPMD) $
```

Service Orders

CCM: NI-2 User Side Development - Phase II does not affect SERVORD.

Operational Measurements

CCM: NI-2 User Side Development - Phase II does not affect Operational Measurements.

Logs

CCM: NI-2 User Side Development - Phase II does not affect logs. Refer to feature AF7218, PRI Dialable Wideband Service, for more information about logs associated with Nx64/Dialable Wideband NI-2 PRI services.

Refer to feature AF7209, ISDN PRI Calling Name Delivery, for more information about logs associated with Calling Name Delivery.

User interface

CCM: NI-2 User Side Development - Phase II does not change the user interface.

Billing

CCM: NI-2 User Side Development - Phase II does not affect billing.

AX1228 - CCM: Name Display Character Extension**Description**

This feature gives the user the option of displaying up to 24 characters in the name field on the displays of Integrated Voice and Data (IVD) and Meridian Business Set (MBS) phones. This option only applies if the phones are physically capable of handling the name size increase.

This feature does not replace the existing 15-character name feature, but is an added option. The option places the 24-character name on the top line of the phone set display and the second line displays the DN, followed by the timer.

Accompanying feature

This feature works in conjunction with feature AX1240, MSL: Name Display Character Extension.

Hardware requirements

CCM: Name Display Character Extension is compatible with the following IVD and MBS sets:

- M2006
- M2008
- M2016S
- M2216A
- M2216B
- M2616
- M2616CT
- M5208
- M5209
- M5212
- M5216
- M5312
- M5316

Limitations and restrictions

The following limitations and restrictions apply to CCM: Name Display Character Extension:

- only MBS and IVD phone sets are supported
- the 24-character name display is not supported in a non-PBX environment (for example, across the network)

Interactions

Refer to feature AX1240, MSL: Name Display Character Extension.

Datafill

Refer to feature AX1240, MSL: Name Display Character Extension.

Service Orders

CCM: Name Display Character Extension adds an option in SERVORD called Name24. The user chooses the Name24 option to make the phone set display up to 24 characters.

Operational Measurements

CCM: Name Display Character Extension does not affect Operational Measurements.

Logs

CCM: Name Display Character Extension does not affect logs.

User interface

CCM: Name Display Character Extension does not change the user interface.

Billing

CCM: Name Display Character Extension does not affect billing.

AX1232 - TL: Virtual Office Worker**Description**

The Virtual Office Worker (VOW) feature allows telecommuters (without dedicated physical phone sets) to access their dedicated Directory Number (DN) and associated features and options. Access is gained by logging into their dedicated DN from any predesignated group of phone sets.

A VOW is an individual who periodically visits an enterprise office location, but lacks dedicated office space. VOWs typically retain various services including a dedicated DN, voice mail, departmental billing, and features

specific to their set configuration. VOWs often reside in temporary cubicles or shared workspaces when visiting the office. This feature gives them access to the features and options associated with their DN.

Accompanying features

This feature works in conjunction with the following features:

- AX1233, CCM: Virtual Office Worker
- AX1236, MSL: Virtual Office Worker

Hardware requirements

TL: Virtual Office Worker has no hardware requirements.

Limitations and restrictions

Refer to feature AX1236, MSL: Virtual Office Worker.

Interactions

Refer to feature AX1236, MSL: Virtual Office Worker.

Datafill

Refer to feature AX1236, MSL: Virtual Office Worker.

Service Orders

Refer to feature AX1236, MSL: Virtual Office Worker.

Operational Measurements

Refer to feature AX1236, MSL: Virtual Office Worker.

Logs

Refer to feature AX1236, MSL: Virtual Office Worker.

User interface

Refer to feature AX1236, MSL: Virtual Office Worker.

Billing

TL: Virtual Office Worker does not affect billing. However, the DN against which calls from a predesignated VOW set are billed will change depending on whether a VOW user is logged in or not. Refer to feature AX1236, MSL: Virtual Office Worker.

AX1233 - CCM: Virtual Office Worker

Description

The Virtual Office Worker (VOW) feature allows telecommuters (without dedicated physical phone sets) access to their dedicated Directory Number (DN) and associated features and options. Access is gained by logging into their dedicated DN from any predesignated group of phone sets.

A VOW is an individual who periodically visits an enterprise office location, but lacks dedicated office space. VOWs typically retain various services including a dedicated DN, voice mail, departmental billing, and features specific to their set configuration. VOWs often reside in temporary cubicles or shared workspaces when visiting the office. This feature gives them access to the features and options associated with their DN.

Accompanying features

This feature works in conjunction with the following features:

- AX1232, TL: Virtual Office Worker
- AX1236, MSL: Virtual Office Worker

Hardware requirements

CCM: Virtual Office Worker has no hardware requirements.

Limitations and restrictions

Refer to feature AX1236, MSL: Virtual Office Worker.

Interactions

Refer to feature AX1236, MSL: Virtual Office Worker.

Datafill

Refer to feature AX1236, MSL: Virtual Office Worker.

Service Orders

Refer to feature AX1236, MSL: Virtual Office Worker.

Operational Measurements

Refer to feature AX1236, MSL: Virtual Office Worker.

Logs

Refer to feature AX1236, MSL: Virtual Office Worker.

User interface

Refer to feature AX1236, MSL: Virtual Office Worker.

Billing

CCM: Virtual Office Worker does not affect billing. However, the DN against which calls from a predesignated VOW set are billed will change depending on whether a VOW user is logged in or not. Refer to feature AX1236, MSL: Virtual Office Worker.

AX1234 - CCM: Authcode Enhancements**Description**

This feature is an authorization code (Authcode) enforcement option for existing Authcode functionality. The enforcement option does not allow users to complete calls without a valid authorization code. This feature enforces validation of voluntary Authcodes on a customer group basis.

Authorization codes are used with two types of features:

- Authcode First
- Authcode Last

This feature enhances the Authcode First feature.

Authcode First

Authcode First (voluntary Authcode) is activated by entering a feature access code associated with Authcode. The user is prompted for more digits and enters an authorization code. If it is valid, the Network Class of Service (NCOS) associated with that Authcode will override the NCOS of the set. The user then obtains dialing privileges associated with the NCOS assigned to that authorization code. Before this feature, if this Authcode was invalid, it was ignored and the call continued using the NCOS associated with the set.

Authcode Last

Authcode Last is activated when the number dialed is recognized as requiring an authorization code. The Authcode is then entered to complete the call. If this Authcode is invalid, the call is sent to a treatment specified in the Authcode Last datafill. The Authcode Enhancements feature has no impact on Authcode Last.

What happens with Authcode Enhancements

When a user enters an invalid authorization code when originating a call and the Authcode enforcement option is enabled, the call is sent to a treatment. An invalid Authcode is defined as containing the correct amount of digits, but does not match those datafilled in table AUTHCDE. Invalid Authcodes also contain either excess or an insufficient amount of digits. If the enforcement option is not enabled, there is no change in call processing (it continues using the NCOS of the line).

The Authcode enforcement option (AUTHENF) uses table CUSTHEAD. When the AUTHENF option is enabled for a customer group, the user is prompted to enter the type of treatment the call receives in the event of an invalid authorization code entry. The treatment specified is of type EXTENDED_TREATMENT. This treatment specification is similar to the one used in Authcode Last. See ["Limitations and restrictions" \(page 526\)](#).

When a user activates the Authcode First feature by entering its feature access code and enters an invalid authorization code, the datafill of this option determines if the call proceeds. If this option is enabled, the call is routed to the specified treatment.

Example authorization codes

Authorization codes can be combined with security digits and account codes. If security digits are associated with an Authcode, the format for dialing looks like the following example:

access code {dial tone} + authcode + security digits {dial tone} + DN

If account codes are combined with Authcodes (that is, datafilled as such in table CUSTHEAD), the format for dialing looks like the following example:

access code {dial tone} + authcode + account code {dial tone} + DN

The three codes can also be combined when dialing as shown in the following example:

access code {dial tone} + authcode + security digits + account code {dial tone} + DN

In the preceding scenarios, Authcode Enhancements takes effect in the event of an invalid Authcode, security code, or incorrect amount of code digits.

If the Authcodes are not combined with account codes the format looks like the following example:

access code {dial tone} + authcode {dial tone} + DN {dial tone} + account code

In the preceding scenario, Authcode Enhancements enforces the validation of the Authcode and its security digits (if applicable). The account code is validated for the correct amount of digits. If there are too few, the call is sent to treatment. Otherwise, the call is allowed. This validation is a function of Account Code Last, and therefore, is not changed by the AUTHENF option.

Note 1: Datafilling the AUTH option in table CUSTHEAD and setting the COMB field to Y prohibits authorization codes, which do not require account codes, in table AUTHCODE from working properly. This is

because an account code is always expected and when no account code is dialed, the authcode is considered invalid.

Note 2: The SECRECY field of the Authcode option (AUTH) in table CUSTHEAD indicates if a pound sign (#) has to be dialed after an authorization code. If this field is set to Y, a pound sign is not needed upon completion of dialing the Authcode or the security digits, or both, combined with an account code.

Hardware requirements

CCM: Authcode Enhancements has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to CCM: Authcode Enhancements:

- AUTHENF must be datafilled in table CUSTHEAD with a specific treatment.
- Supports only Authcode First and inherits that feature's limitations and restrictions.
- This feature adds treatment specification so that calls can be properly routed in the event of an invalid authorization code. This treatment must be added to table CUSTHEAD once the option is present.
- To avoid translation errors, this treatment (EXTENDED_TREATMENT) must be present in subtable OFFTREAT in table TMTCTL. If the treatment does not already exist in table OFFTREAT, it must be added.

To add the treatment to table OFFTREAT, select the following:

- LOG = Y
- FSTRTSEL = T
- EXTRTEID = OFRT (with a valid index into table OFRT)

Interactions

The following paragraphs describe the interactions between CCM: Authcode Enhancements and other functionalities.

This feature applies to the following three authorization types:

- System-Wide Authorization (SW) codes
- Super Authorization Codes (SUPAC)
- Station-Specific Authorization Codes (SSAC)

SW authcodes

SW Authcodes allow access to telephone privileges from phones in different areas, except those with SSAC assigned to them.

SUPAC authcodes

SUPAC Authcodes allow access privileges from any station and overrides the SSAC assignment.

SSAC authcodes

SSAC Authcodes are valid only when accessed from the set to which they are assigned. SSAC Authcodes are assigned through SERVORD and connect the authorization code to a Line Equipment Number (LEN). Any attempt to use an Authcode labeled as SSAC in table AUTHCDE on a set other than the one to which it is assigned is considered to be invalid and will be treated as such by this feature. Likewise, any attempt to use an authorization code other than the datafilled Authcode on a set with SSAC will have the same outcome. This datafilled Authcode is assigned to the set when SSAC is added using SERVORD.

DISA and NSS

Direct Inward System Access (DISA) and Network Switching System (NSS) use their own Authcode validation process and are not affected by this feature.

Datafill

Four tables control the Authcode First feature as follows:

- table IBNXLA - lists the access code with its customer translator name
- table CUSTHEAD - assigns an Authcode partition name to a customer group
- table AUTHPART - defines the properties of that partition
- table AUTHCDE - lists the Authcodes available for assignment

Table CUSTHEAD

CCM: Authcode Enhancements only affects table CUSTHEAD.

AUTHENF is a new option in table CUSTHEAD. If this option is selected, the user is prompted to enter the type of treatment the call is to receive in the event of an invalid Authcode. The treatment to specify is AUTHTRMT.

Service Orders

CCM: Authcode Enhancements does not affect SERVORD.

Operational Measurements

CCM: Authcode Enhancements does not affect Operational Measurements.

Logs

CCM: Authcode Enhancements does not affect logs.

User interface

CCM: Authcode Enhancements does not change the user interface.

Billing

CCM: Authcode Enhancements does not affect billing.

AX1236 - MSL: Virtual Office Worker**Description**

The Virtual Office Worker (VOW) feature allows employees who work outside of the enterprise location and are without dedicated physical phone sets access to their dedicated Directory Number (DN) and associated features and options when they visit their workplace location. Access is gained by logging into their dedicated DN from any set in a predesignated group of phone sets. Supported are Meridian Business Set (MBS), Integrated Voice and Data (IVD), and Integrated Business Network (IBN) sets.

A VOW is an individual who periodically visits an enterprise office location, but lacks dedicated office space. VOWs typically retain various services including a dedicated DN, voice mail, departmental billing, and features specific to their set configuration. VOWs often reside in temporary cubicles or shared workspaces when visiting the office. This feature gives them access to the features and options associated with their DN.

In general, there is not a one-to-one correspondence between VOWs and the physical sets used to access the dedicated DNs and features. For example, there can be 15 predesignated sets for a particular customer group, allowing 15 VOWs to access their dedicated DN and features at a time. If all VOWs in this customer group only require access to their dedicated DN and features one day a week during a five day work week, with the proper coordination, these 15 physical sets could support up to 60 VOWs each week.

Accompanying features

This feature works in conjunction with the following features:

- AX1232, TL: Virtual Office Worker
- AX1233, CCM: Virtual Office Worker

VOW setup

The following must be datafilled for each customer group that supports the VOW feature.

- In table DNROUTE, at least one VOWDN must be datafilled. A VOWDN is required for each set in the customer group to be used for VOW functionality.
- In table CUSTSTN, feature VOWDN must be datafilled. The CUSTSTN tuple contains the following:
 - NCOS and SUBGRP values for translations purposes on the predesignated VOW sets when no VOW is logged in
 - a value specifying whether the VOW authorization code is required within the associated customer group during use of the VOWIN feature access code
 - a value specifying whether the personal system wide (SW) authorization code is required within the associated customer group during use of the VOWIN feature access code
 - a value specifying whether the associated customer group is to be audited. If so, a value specifying the hour of the day the audit is to occur must be specified.
 - a value specifying whether VOW interacts with call forwarding. If it does, enabling call forwarding for a VOW when the user logs out and disabling call forwarding for a VOW when the user logs in must be specified.
 - the length of the VOW personal ID code (referred to as passcode from now on)
 - the Line Class Code of the sets which use the VOW feature
- In table IBNXL, feature translators VOWIN, VOWOUT, VOWPCC, and VOWROUT must be datafilled.
- In table AUTHCDE, VOW and SW authorization codes must be datafilled. These codes are used for the VOWIN feature access code (if the authorization codes are enabled through the VOWDN tuple in table CUSTSTN).

Within the customer groups that support the VOW feature, a VOW's dedicated DN and features must be configured on a predesignated phone set. On this set, the line option VOW must be assigned in Service Orders (SERVORD). Assignment of the VOW line option includes the specification of the initial passcode for the associated VOW. Once assigned, the VOW is logged into the dedicated DN and has access to features. In other words, when initially assigned, the VOW's dedicated DN and features are still

associated with the physical set on which they were configured prior to the assignment of the VOW line option. This is true until the VOW logs out, performs a remote logout, or is logged out by the VOW audit.

All predesignated sets used by VOWs need to have the VOWDN line option assigned within the customer groups that support the VOW feature.

Meridian SL-100 switch personnel can log a VOW in or out of their dedicated DN and features by using CKLN/CLN SERVORD commands. In these scenarios, the CKLN/CLN commands operate normally, but a VOW Line Equipment Number (LEN) is provided as either the source or target LEN of the change LEN command.

VOW login

A VOW performs the following steps to log in:

1. Go off hook
2. Upon receipt of dial tone, dial the VOWIN feature access code that is datafilled in table IBNXL (for example, *80) for the specific customer group and NCOS.
3. Upon receipt of dial tone, dial the VOW authorization code that is datafilled in table AUTHCDE (for example, 7654321) for the specific customer group and NCOS. The length of this authorization code is specified in table AUTHCDE. If a mistake is made when entering the VOW authorization code, press the '*' key to restart the collection of the code.

Note: This step is required only if the use of the VOW authorization code is enabled through the VOWDN tuple in table CUSTSTN for the specific customer group.

4. Upon receipt of dial tone, dial the personal authorization code that is datafilled in table AUTHCDE (for example, 1234567) for the specific customer group and NCOS. The length of this authorization code is specified in table AUTHCDE. If a mistake is made when entering the code, press the '*' key to restart the collection of the code.

Note: This step is required only if the use of the SW authorization code is enabled through the VOWDN tuple in table CUSTSTN for the specific customer group.

5. Upon receipt of dial tone, dial the Primary Directory Number (PDN) for the VOW set data for which the passcode is being modified (for example, 2149975005). If a mistake is made when entering the PDN, press the '*' key to restart collection of the PDN.

6. Upon receipt of dial tone, dial the passcode unique to that VOW (for example, 9975056449). If a mistake is made when entering the passcode, press the '*' key to restart collection of the passcode.

At this point, logs are generated and Operational Measurements (OM) are pegged to indicate a successful login. If login is unsuccessful, OM's are pegged to indicate that an error occurred during login and the set will return to an idle state.

Upon successful login, the VOW is able to make and receive calls using the dedicated DN. That DN is then associated with the VOW set on which the login took place. In addition, the features previously assigned to the dedicated DN operate normally and retain settings from the previous logout.

Once logged in, the VOW's dedicated DN and associated data are associated with a physical LEN, as shown in "QLEN output at login" (page 531).

QLEN output at login

```
>qlen 9975121
-----
LEN:    HOST 0 0 0 1
TYPE:   SINGLE PARTY LINE
SNPA:   214
DIRECTORY NUMBER:      9975121
LINE CLASS CODE:      M2016S
CUSTGRP:               BNRRCH SUBGRP: 0 NCOS: 0 RING: Y
CARD CODE: 8D02AB GND: N PADGRP: NPDGP BNV: NL MNO: Y
PM NODE NUMBER       : 55
PM TERMINAL NUMBER   : 33
OPTIONS:
CWI VOW
CFD F 5122 I 1 2 CWT Y Y N 1 2

  KEY      DN
  ----      -
    1      DN          9975121

  KEY      FEATURE
  ----      -
    1      CFD F          5000      I 1 2
    4      CWT Y Y N 1 2
-----
```

VOW logout

A VOW performs the following steps to log out:

1. Go off hook.
2. Upon receipt of dial tone, dial the VOWOUT feature access code that is datafilled in table IBNXLA (for example, *81).

At this point, logs are generated and OMs are pegged to indicate a successful logout. If the logout is unsuccessful, OMs will be pegged to indicate that an error occurred during a logout attempt and the set will return to an idle state.

If successful, the VOW is logged out. Calls can originate from the set on which the logout took place, but calls cannot terminate to that set. All data, including the dedicated DN and features associated with the VOW that just logged out, is completely disassociated with the set.

Once logged out, the VOW's dedicated DN and associated data are associated with a physical LEN. Instead, it is associated with a VOW logical terminal, as shown in "QLEN output at logout" (page 532). Similarly, when logged out, the predesignated VOW set returns to the VOWDN line format.

QLEN output at logout

```
>qlen 9975121
-----
LEN:   VOW 1 1
TYPE:  SINGLE PARTY LINE
SNPA:  214
DIRECTORY NUMBER:      9975121
LINE CLASS CODE:  M2016S
CUSTGRP:      BNRRCH SUBGRP: 0 NCOS: 0 RING: Y
CARDCODE:NOT APPLICABLE GND: N PADGRP: NPDGP BNV: NL MNO: N
OPTIONS:
CWI VOW
CFD F 5122 I 1 2 CWT Y Y N 1 2

  KEY      DN
  ----      -
    1      DN      9975121

  KEY      FEATURE
  ----      -
    1      CFD F      5000      I 1 2
    4      CWT Y Y N 1 2
-----
```


QLEN output - VOWDN line format

```

>qlen HOST 0 0 0 1
-----
LEN:      HOST 0 0 0 1
TYPE: VIRTUAL DIRECTORY NUMBER
SNPA: 214
DIRECTORY NUMBER:      9975121
LINE CLASS CODE: M2016S
CUSTGRP:      BNRCH SUBGRP: 0 NCOS: 0 RING: Y
CARD CODE: 8D02AB GND: N PADGRP: NPDGP BNV: NL MNO: Y
PM NODE NUMBER      : 55
PM TERMINAL NUMBER  : 33
OPTIONS:
VOWDN $
      KEY      DN
      ----      -
      1      DN      9975900

      KEY      FEATURE
      ----      -
      NONE
-----

```

VOW passcode change

On a set within the same customer group on the same switch as the VOW's set data, a VOW can perform a passcode change as follows:

1. Go off hook.
2. Upon receipt of dial tone, dial the VOWPCC feature access code that is datafilled in table IBNXLA (for example, *82) for the specific customer group.
3. Upon receipt of dial tone, dial the PDN of the VOW set for which the passcode is being modified (for example, 2149975005). If a mistake is made when entering the PDN, press the '*' key to restart collection of the PDN.
4. Upon receipt of dial tone, dial the current passcode unique to that VOW (for example, 99750564496). The length of this passcode is specified in table CUSTSTN in the VOWDN tuple for the specific customer group. If a mistake is made when entering the current passcode, press the '*' key to restart collection of the current passcode.
5. Upon receipt of dial tone, dial the new passcode for that VOW (for example, 99750569448). The length of this passcode is specified in table CUSTSTN in the VOWDN tuple for the specific customer group. If a mistake is made when entering the new passcode, press the '*' key to restart collection of the new passcode.
6. Upon receipt of dial tone, redial to confirm the new passcode for that VOW (for example, 99750569448). The length of this passcode

is specified in table CUSTSTN in the VOWDN tuple for the specific customer group. If a mistake is made when reentering the new passcode, press the '*' key to restart collection for the reentry of the new passcode.

If the first new passcode does not match the second new passcode (the confirmation fails), the VOW's passcode does not change.

Whether successful or not, OMs are pegged to record the result of the passcode change attempt.

VOW remote logout

On a set within the same customer group on the same switch as the VOW's set data, a VOW can perform a remote logout as follows:

1. Go off hook.
2. Upon receipt of dial tone, dial the VOWROUT feature access code that is datafilled in table IBNXL (for example, *83) for the specific customer group.
3. Upon receipt of dial tone, dial the PDN of the VOW set which is being remotely logged out (for example, 2149975005). If a mistake is made when entering the PDN, press the '*' key to restart collection of the PDN.
4. Upon receipt of dial tone, dial the current passcode for that VOW (for example, 99750564496). The length of this passcode is specified in table CUSTSTN in the VOWDN tuple for the specific customer group. If a mistake is made when entering the current passcode, press the '*' key to restart collection of the current passcode.

If the VOW was logged in, this forces a logout from a remote station. At this point, logs are generated and OMs are pegged to indicate a successful remote logout. If the remote logout was unsuccessful, OMs are pegged to indicate that an error occurred during the remote logout and the set returns to an idle state.

If the remote logout was successful, the VOW set data is modified (see the preceding description, VOW logout).

VOW audit process

In the VOWDN tuple in table CUSTSTN, specify that an audit be executed every 24 hours against the VOWs in a specific customer group. If specified, the hour at which the audit executes is entered. If the audit process is enabled, it executes at the specified hour every day and will log out those VOWs who are still logged in. Logs are generated and OMs are pegged to record any actions taken by the audit.

If the set at which a VOW is logged in is not in an idle state when the audit executes, that VOW is not logged out by the audit. Instead, at the next hour, the audit checks the set again. If the VOW is still logged in but is idle, the audit logs the VOW out. If still logged in and the set is not idle, the audit attempts to log out the VOW at the next hour. This repeats until the VOW is logged out, either manually or through the audit.

VOWs that are logged out through the audit process can log back in just as if they had logged themselves out.

Table VOWINV and CI command VOWCI

When sets and DNs are assigned the VOW and VOWDN line options, table VOWINV is automatically datafilled with information regarding the sets involved with the VOW feature. You cannot add or delete tuples from this table through the table editor. The only field that switch personnel can modify is the VOWPID field. This field contains a VOW's passcode. Use this field to reset a VOW's passcode.

The VOWCI command provides alternate views of the data present in table VOWINV. For example, this command can be used to list details about the following:

- the physical sets from which VOWs can log in
- the VOWs currently logged in or logged out
- data for each customer group

Refer to the datafill and user interface sections for more information on table VOWINV and the CI command, VOWCI.

Hardware requirements

MSL: Virtual Office Worker has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to MSL: Virtual Office Worker:

- The VOWDN line option is compatible with line options such as SETMODEL, M0200, and NAME.
- The VOW line option is not compatible with Multiple Appearance Directory Number (MADN), Automatic Call Distribution (ACD), or Hunt groups. Therefore, it is not compatible with the MADN, ACD, and the various hunt-related line options. It is also not compatible with the Network Facility Access (NFA) line option.
- Up to 20,500 VOWs can exist within a single Meridian SL-100 switch, if all VOWs require only a single LEN. Within a customer group, there is no limitation on the number of VOWs, except for the switch maximum. This limit facilitates having more VOWs (that is, VOW set data with the

VOW line option assigned) than VOWDN sets (that is, physical sets with the VOWDN line option assigned).

- IVD sets can be configured with a second (mate) LEN. If a VOW's dedicated DN and features are associated with such a set, that VOW requires two VOW LENs. This reduces the maximum number of VOWs.
- Within a customer group, all VOW's dedicated DNs and features must be associated with the same type of set. The predesignated physical sets from which VOWs will log in must also be of that same type.
- The calls that can be originated from a set with VOWDN assigned are determined and restricted by the translations set up against the corresponding customer group and the NCOS and SUBGRP values in the VOWDN tuple in table CUSTSTN. For example, translations could limit these VOWDN sets to only make E911 calls, E911 and local calls, and E911, local and long distance calls.
- One DN is required for each set in a customer group that supports the VOW feature. The maximum number of VOWDN instances is 4095, which is shared by all customer groups in the system.
- Once the VOW line option is assigned, the associated set can be updated using SERVORD (for example, commands ADO and NEW) when the associated VOW is logged in. If a VOW is logged out, the set data is associated with a VOW logical terminal number instead of a physical LEN. Further updating by Meridian SL-100 switch personnel must be performed as follows:
 - Use the appropriate CKLN/CLN SERVORD command to move the VOW's set data from a VOW logical terminal to a physical LEN. This logs the VOW in to the specific physical LEN.

Note: The audit time, if activated for the associated customer group, should be considered when performing this action. If these actions are executed when the VOW audit runs for the associated customer group, the VOW user is effectively logged out by the audit process.
 - Perform the required updating using SERVORD.
 - Use the appropriate CKLN/CLN SERVORD command to move the VOW's set data from the physical LEN back to a VOW logical terminal. This logs the VOW out of the previously specified LEN.
- A VOW login can only occur from a set with VOWDN assigned and which is in the same customer group as the VOW's set data for the VOW who is attempting to log in.
- Access to the VOW feature (using VOWIN, VOWOUT, VOWROUT, and VOWPCC) is not allowed during a One Night Process (ONP). This is

because of the number of tables that are modified when moving VOW set data from a physical LEN to a virtual LEN or moving VOW set data from a virtual LEN to a physical LEN.

Interactions

Configuring a VOW line option to a set results in the creation of a tuple in table VOWINV, as well as the allocation of a virtual VOW LEN for use by the set in which the VOW line option is assigned. If the set is an IVD set with a mate LEN present, a second virtual VOW LEN is allocated for the mate LEN.

The removal of the VOW line option from a set results in the deletion of the corresponding tuple in table VOWINV and the deallocation of the virtual LEN(s).

Once logged in, the existing features associated with a VOW's dedicated DN operate as if the VOW's set was originally configured for the set from which the user logged in. Features that operate without change are billing, message waiting indication, calling and caller name and number display, and originating and receiving calls.

Once logged out, the options associated with the VOW dedicated DN, such as call forwarding, will operate as if the VOW was actually logged in (assuming that such features were active at the time the VOW logged out).

If the VOWDN tuple in table CUSTSTN enables the VOW feature to interact with call forwarding, then when a VOW logs out, their call forwarding will be activated. Similarly, when a VOW logs in, their call forwarding will be deactivated. This interaction applies only to the basic call forwarding types Call Forwarding Universal (CFU), Call Forward Fixed (CFF), and Call Forwarding Internal (CFI). Call Forward Per Key (CFK), Call Forward Busy (CFB), and Call Forward Don't Answer (CFD) are not supported with the call forwarding interaction for this feature.

When logged out, the VOW data is moved from a physical LEN to a virtual LEN. When this occurs, the DNs on a VOW's set data which were moved appear to the system to be in a busy (offline) state. This means calls to logged out VOW DNs do not ring, but instead receive busy tone.

With normal call forwarding, the active CFU, CFF, CFI, and CFK call forwarding types take precedence over the CFB and CFD call forwarding types on a logged out VOW's set data.

"CFB/CFD interactions with logged out VOWs" (page 538) outlines how calls to a logged out VOW's DN will forward using CFB and CFD.

CFB/CFD interactions with logged out VOWs

	CFB active	CFB inactive	CFB not provisioned
If CFD active	Calls will forward using CFD	Calls will forward using CFD	Calls will not forward using either CFB or CFD
If CFD inactive	Calls will forward using CFB	Calls will not forward using either CFB or CFD	Calls will not forward using either CFB or CFD
If CFD is not provisioned	Calls will forward using either CFB	Calls will not forward using either CFB or CFD	Calls will not forward using either CFB or CFD

Datafill

This feature creates table VOWINV.

Other tables must be properly datafilled prior to using the VOW feature. These tables are

- table AUTHCDE
- table CUSTSTN
- table DNROUTE
- table IBNXL

Service Orders (SERVORD) automatically datafills table DNINV.

This feature creates a new LEN format. A VOW virtual LEN or logical terminal is noted through type EXT_LEN with the following format:

```
VOW <VOW node number> <VOW terminal number>
```

VOW node number is a value from 1 to 10, and VOW terminal number is a value 1 to 2050. For example, VOW 2 955.

When a VOW user logs out, the set data is moved from the associated physical LEN to a virtual VOW LEN. This impacts every table which has a reference to the physical LEN.

When a VOW user logs in, the set data is moved from the associated virtual LEN to a physical LEN. This impacts every table which has a reference to the virtual LEN.

Table VOWINV

This table stores data associated with the VOW feature. It contains the physical or virtual LENs associated with a VOW's dedicated DN and associated data, the personal ID code, and the primary DN. When VOWs log in and out of their dedicated DNs, this table automatically updates to keep the information current. Table VOWINV also contains information identifying the physical sets which have the VOWDN line option assigned to them. The only field in this table that Meridian SL-100 switch personnel can modify is the VOWPID field. Refer to ["Example datafill for table VOWINV" \(page 540\)](#).

VOWKEY is the table key and uniquely identifies a tuple through a customer group (CUSTGRP) and VOW_TUPLE_TYPE value (VOWTYPE). For example

- if a VOW_TUPLE_TYPE of VOW is specified, VOWPDN, identifying the primary DN of the VOW, is also part of the VOWKEY
- if a VOW_TUPLE_TYPE of VOWDN is specified, VOWDNLEN, identifying a physical LEN for which the VOWDN option is assigned, is also part of VOWKEY

The VOWDATA field contains the remaining data for the tuples. VOWTYPE within VOWDATA matches the value of VOWTYPE within VOWKEY.

If VOWTYPE within the VOWDATA field contains the VOW_TUPLE_TYPE VOWDN, the field VOWDN is present, identifying the DN associated with the corresponding VOWDN set.

If VOWTYPE within the VOWDATA field contains the VOW_TUPLE_TYPE VOW, other fields are present in the tuple.

They are:

- VOWPID - provides the associated VOW passcode value.
- VOWLEN - provides the preassigned virtual VOW LEN for use by the associated VOW user.
- VOWMATE - provides the preassigned virtual VOW mate LEN for use by the associated VOW user.
- LOGGEDIN - specifies whether the associated VOW user is logged in.
- PHYSLEN - if LOGGEDIN is set to Y, this field provides the physical LEN that the VOW user is currently logged onto. If LOGGEDIN is set to N, the field provides the physical LEN the VOW user was previously logged into.

- **PHYSMATE** - if LOGGEDIN is set to Y, this field provides the physical mate LEN that the user is currently logged onto, if there is a mate. If LOGGEDIN is set to N, the field provides the previous physical mate LEN.

Example datafill for table VOWINV

```
VOWKEY VOWDATA
-----
BNRRCH VOWDN LCM1 00 1 09 31 VOWDN 214 997 5700
BNRRCH VOW 2149975134 VOW 839943 VOW 2 66 N N IPE0 0 0 2 3 N
BNRRTP VOWDN IPE0 00 0 00 12 VOWDN 919 657 7700
BNRRTP VOW 9196577665 VOW 5576643 VOW 4 644 Y VOW 4 645 Y DLM0 0 0 4 12 Y
DLM0 0 0 4 13
```

Table AUTHCDE

Table AUTHCDE has a new value available in field AUTHTYPE called VOW. Use the VOW value in this field to specify the tuple as a VOW authorization code. Refer to ["Example datafill for table AUTHCDE" \(page 540\)](#).

Example datafill for table AUTHCDE

```
AUTHPART AUTHCODE INFO
-----
BNRRCH 7654321 IBN 0 N $ VOW $
```

Table CUSTSTN

Table CUSTSTN has a new value available in fields OPTNAME and OPTION.

The new fields in table CUSTSTN are as follows:

- **NCOS** - specifies the Network Class of Service to be associated with all physical sets that have the VOWDN line option assigned to them (value ranges from 0 to 511) in the specific customer group.
- **SUBGRP** - specifies the subgroup associated with the physical sets that have the VOWDN line option assigned to them (value ranges from 0 to 7).
- **VOWAUTH** - specifies whether the VOW authorization code is required for a VOW login.
- **SWAUTH** - specifies whether the personal system wide authorization code is required for a VOW login.
- **AUDIT** - specifies whether the VOW audit is to be executed (values are Y or N) in the specific customer group. If AUDIT is Y, the HOUR field must be completed.

- HOUR - specifies the hour of the day to start the audit (values are 0 to 23, where 0 equals midnight/12:00 am and 12 equals noon/12:00 pm) for the specific customer group.
- CFW - specifies whether call forwarding interactions with VOW logins and logouts are enabled (values are Y or N).
- PCCLLEN - specifies the length of the passcode values for VOWs (values are 4 to 10) in the specific customer group.
- VOWLCC - specifies the line class code of the set within the customer group which is to use the VOW feature (that is, the set for which the VOWDN and VOW line options can be assigned).

Refer to ["Example datafill for table CUSTSTN" \(page 541\)](#).

Example datafill for table CUSTSTN

```

CUSTNAME OPTNAME OPTION
-----
BNRRCH VOWDN VOWDN 0 0 Y Y Y 0 Y 7 PSET
BNRRTP VOWDN VOWDN 0 4 Y N N N 4 M2616

```

Table DNINV

Field FEATURE is modified within the FEAT result selector to allow a new FTRDN_CODE value of VOWDN. If VOWDN is present as the value of FEATURE, the new field VOWDNIDX associates a unique index value to the VOWDN tuple and CUSTGRP of type CUSTOMER_GROUP represents the customer group associated with the tuple. Refer to ["Example datafill for table DNINV" \(page 541\)](#).

Example datafill for table DNINV

```

AREACODE OFCCODE STNCODE DNRESULT
-----
919 657 7293 FEAT VOWDN 23 BNRRTP

```

Table DNROUTE

In table DNROUTE, at least one unique DN must be allocated against each customer group that supports the VOW feature. The FEATURE field is modified within the FEAT result selector to allow a new FTRDN_CODE value of VOWDN. If VOWDN is present as the value of FEATURE, the new field VOWDNIDX associates a unique index with the VOWDN tuple, and CUSTGRP of type CUSTOMER_GROUP represents the customer group associated with the tuple. Refer to ["Example datafill for table DNROUTE" \(page 542\)](#).

Example datafill for table DNROUTE

```

AREACODE  OFCCODE  STNCODE  DNRESULT
-----
919   657   7293   FEAT   VOWDN 23 BNR RTP

```

Table IBNXLA

In table IBNXLA, four new values are made available for the FEATURE field. They are

- VOWIN - indicates the VOW login feature
- VOWOUT - indicates the VOW logout feature
- VOWPCC - indicates the VOW passcode change feature
- VOWROUT - indicates the VOW remote logout feature

Example datafill for table IBNXLA

```

KEY  RESULT
-----
FRCH 30 FEAT N N VOWIN
FRCH 31 FEAT N N VOWOUT
FRCH 32 FEAT N N VOWPCC
FRCH 33 FEAT N N VOWROUT

```

Service Orders

This feature introduces two line options called VOW and VOWDN. These line options are available on the sets described in ["Phone sets compatible with the VOW and VOWDN line options" \(page 542\)](#).

Phone sets compatible with the VOW and VOWDN line options

Set type	Line class code (LCC)
MBS	PSET, M5008, M5009, M5112, M5208, M5209 M5212, M5216, M5312, M5316
IVD	M2006, M2008, M2009, M2016S, M2018, M2112, M2216A, M2216B, M2317, M2616, M2616CT
IBN	IBN

The VOWDN line option applies to a set from which a VOW can log in. It is compatible with line options such as SETMODEL, M0200, and NAME. The reason for this is so calls to the shared VOWDN, datafilled in DNROUTE against the corresponding customer group, do not terminate when dialed.

Both the VOW and VOWDN line options must be assigned to the PDN of a keyset with a line format in table KSETLINE of DN, or to an IBN set with a line format in table IBNLINES of STN. VOW is incompatible with the MADN feature, the ACD feature, and Attendant Consoles.

Operational Measurements

MSL: Virtual Office Worker creates a new OM group, VOW. The OM registers are pegged in the following events:

- successful log in
- successful log in through CLN/CKLN
- successful log out
- successful log out through CLN/CKLN
- successful log out through audit process
- successful remote log out
- successful passcode change
- invalid log in attempt
- invalid log out attempt
- invalid remote log out attempt
- invalid CLN/CKLN log in attempt
- invalid CLN/CKLN log out attempt
- invalid audit log out
- invalid passcode change attempt

The VOW OM group contains the following registers:

- INPASS
- INFAIL
- OUTPASS
- OUTFAIL
- CINPASS
- CINFAIL
- COUTPASS
- COUTFAIL
- AUDPASS
- AUDFAIL
- PCCPASS

- PCCFAIL
- ROUTPASS
- ROUTFAIL

Logs

Log type, VOW, is created for the VOW feature. This log type contains numerous reports.

Log reports are generated for the following events:

- successful log in
- successful log in through CLN/CKLN
- successful log out
- successful log out through CLN/CKLN
- successful passcode change
- successful remote log out
- successful log out through audit process
- unsuccessful log in
- unsuccessful log in through CLN/CKLN
- unsuccessful log out
- unsuccessful log out through CLN/CKLN
- unsuccessful remote log out
- unsuccessful audit log out

There are four log reports as follows:

- VOW501
- VOW502
- VOW601
- VOW602

VOW501

This log report generates when a VOW access attempt passes (for example, login, logout, or passcode change). Refer to ["VOW501 example" \(page 545\)](#).

VOW501 example

```

VOW501  JAN28 14:08:23  0007  INFO VOW ATTEMPT PASSED
VOW USER    = 2149975055
VOW LEN      = IPE0 0 1 1 12
ACTION       = LOGIN
METHOD       = VOWIN

```

VOW502

This log report generates when a VOW access attempt fails (for example, login, logout, or passcode change). Refer to ["VOW502 example" \(page 545\)](#).

VOW502 example

```

VOW502  JAN28 14:08:23  0007  INFO VOW ATTEMPT FAILED
VOW USER    = 2149975055
VOW LEN      = IPE0 0 1 1 12
ACTION       = LOGIN
METHOD       = VOWIN

```

VOW601

This log report generates when the VOW audit process completes. It contains the counts of the number of VOW users who were logged in when the audit began, the number of VOW users on which logouts were attempted by the audit, and success and failure counts for those attempts. Refer to ["VOW601 example" \(page 545\)](#).

VOW601 example

```

VOW601  JAN28 14:08:23  0007  INFO VOW AUDIT COMPLETE
CUSTOMER GROUP    = BNRRCH
LOGGED IN         = 23
ATTEMPTED LOGOUTS = 21
SUCCESSFUL LOGOUTS = 20
FAILED LOGOUTS    = 1

```

VOW602

This log report generates when VOW processing finds some error and cannot continue processing. It contains a text message describing the error event. This log is followed by one of the VOW501, VOW502, or VOW601 logs. These logs provide information regarding the agents involved with the VOW processing that failed.

VOW602 example

```
VOW602  JAN28 14:08:23  0007  INFO VOW INFORMATION
INFO:   Could not seize line to RTS
```

User interface

MSL: Virtual Office Worker creates a new CI command, VOWCI, to allow easy access to information about sets with the VOW feature.

There are five new VOWCI commands as follows:

- VOWDNSETS
- VOWALL
- VOWIN
- VOWOUT
- VOWCUST

VOWDNSETS

This command provides a formatted listing of all physical sets which have the VOWDN line option assigned to them. Included is the associated set type, the associated customer group, and the customer group specific information associated with the VOWDN sets. The customer group specific information includes VOWDN/VOW information from table DNROUTE/DNINV and the VOWDN information from table CUSTSTN.

A customer group can be specified to limit the output to a single customer group. If no customer group is specified, output is provided for all applicable customer groups.

Command syntax The following is the command syntax for the CI command, VOWDNSETS.

```
>VOWCIVOWCI:>Q VOWDNSETSCOMMAND VOWDNSETS: LIST VOW
SETSCOMMAND VOWDNSETS:VOWSETS [<CUSTOMER_GROUP>] >
```

VOWALL

This command provides a formatted listing of all VOW user's DNs which have the VOW line option assigned. This listing includes the set type, the associated customer group, log in or log out status of the user, and the LEN (physical or virtual) with which the user's set data is currently associated.

A customer group can be specified to limit the output to a single customer group. If no customer group is specified, output will be provided for all applicable customer groups.

Command syntax The following is the command syntax for the CI command, VOWALL:

```
>VOWCIVOWCI:>Q VOWALLCOMMAND VOWALL: LIST ALL VOW USERS
(LOGGED IN OR LOGGED OUT) COMMAND VOWALL:VOWALL
[<CUSTOMER_GROUP>] >
```

VOWIN

This command provides a formatted listing of all VOW users's DNs which have the VOW line option assigned and which are also logged into their DNs. Included are the set type, the associated customer group, and the physical LEN with which the user's set data is currently associated.

A customer group can be specified to limit the output to a single customer group. If no customer group is specified, output is provided for all applicable customer groups.

Command syntax The following is the command syntax for the CI command, VOWIN:

```
>VOWCIVOWCI:>Q VOWINCOMMAND VOWIN: LIST ALL LOGGED IN VOW
USERSCOMMAND VOWIN:VOWIN [<CUSTOMER_GROUP>] >
```

VOWOUT

This command provides a formatted listing of all VOW users' DNs which have the VOW line option assigned and which are also logged out of their DNs. Included are the set type, the associated customer group, and the virtual LEN with which the user's set data is currently associated.

A customer group can be specified to limit the output to a single customer group. If no customer group is specified, output is provided for all applicable customer groups.

Command syntax The following is the command syntax for the CI command, VOWOUT:

```
>VOWCIVOWCI:>Q VOWOUTCOMMAND VOWOUT: LIST ALL LOGGED OUT VOW
USERSCOMMAND VOWOUT:VOWOUT [<CUSTOMER_GROUP>] >
```

VOWCUST

This command provides the same information as VOWSETS and VOWALL.

A customer group can be specified to limit the output to a single customer group. If no customer group is specified, output is provided for all applicable customer groups.

Command syntax The following is the command syntax for the CI command, VOWCUST:

```
>VOWCIVOWCI:>Q VOWCUSTCOMMAND VOWCUST: LIST VOW CUSTOMER  
GROUP INFORMATIONCOMMAND VOWCUST:  
VOWCUST [<CUSTOMER_GROUP>] >
```

Error messages

The following error messages appear when one of the preceding VOWCI commands was used with incorrect customer group information:

- DNROUTE VOWDN: UnassignedNo VOWDN sets exist within this customer group.
- No VOW sets exist within this customer group.
- No logged-in VOW sets exist within this customer group.
- No logged-out VOW sets exist within this customer group.
- DNROUTE VOWDN: UnassignedNo VOWDN sets exist within this customer group.
- No VOW sets exist within this customer group

Recovery procedure

The preceding error message displays on the MAP workstation. To correct the error message, input the correct customer group information when using the VOWCI command (for example, VOWOUT BNRRCH).

Billing

MSL: Virtual Office Worker does not affect billing. The existing billing functionality handles the billing of calls from the temporary LEN to the corresponding virtual DN.

AX1238 - MSL: NT3X68 Tone Cards Consolidation

Description

The Meridian SL-100 provides tones to end users to communicate with and notify them of specific conditions. Some of these tones are provided by the NT3X68 circuit card. This circuit card is manufacture discontinued (MD) because of component obsolescence.

This feature modifies the software so that the NT3X68 circuit card is replaced with the NT1X80 Enhanced Digital Recorded Announcement Machine (EDRAM) circuit card.

The NT1X80 EDRAM circuit card is a stand-alone peripheral module (PM) that provides the capability of a fully configured DRAM shelf. The NT1X80 EDRAM circuit card has the following characteristics.

- Provides either four or 16 minutes of announcement time and 30 announcement channels like the DRAM shelf.
- All announcements are downloaded to the EDRAM in the form of a firmware loadfile (called a voice file). Voice files are loaded from tape or disk.
- One EDRAM circuit card has eight or 32 memory segments holding a total of four or 16 minutes of recording capacity in one slot of the maintenance trunk module (MTM) shelf.
- Each EDRAM circuit card is connected to the network through DS30 links and can access all 30 channels.
- EDRAM circuit card can be mixed with DRAMs physically on a shelf and logically in a Meridian SL-100 in any combination. All provisioning rules that apply to standard DRAM hardware apply to the allocation of standard announcements to EDRAM circuit cards in a Meridian SL-100.

Although the EDRAM circuit card is located on the MTM shelf, it is directly connected to the network through DS30 links. Having two links means having two MAP terminal appearances for each circuit card installed.

It appears as a PM since it is directly connected to the network, and also appears as a trunk, just as does a DRAM.

Each EDRAM circuit card provides 30 channels used for announcement trunks or tone trunks. The EDRAM circuit card has a built-in tone function which provides test tones, prompt tones, and special information tones (SIT). Tone files created by adding tone samples from each 3X68 card can be downloaded the same way as announcement files.

Hardware requirements

MSL: NT3X68 Tone Cards Consolidation requires the NT1X80AA/BA circuit card.

Limitations and restrictions

MSL: NT3X68 Tone Cards Consolidation has no limitations or restrictions.

Interactions

MSL: NT3X68 Tone Cards Consolidation does not interact with other functionalities.

Datafill

MSL: NT3X68 Tone Cards Consolidation does not affect office parameters or data schema.

Service Orders

MSL: NT3X68 Tone Cards Consolidation does not change the Service Order System (SERVORD).

Operational Measurements

MSL: NT3X68 Tone Cards Consolidation does not change Operational Measurements (OMs).

Logs

MSL: NT3X68 Tone Cards Consolidation does not change logs.

User interface

MSL: NT3X68 Tone Cards Consolidation does not change the user interface.

Billing


MSL: NT3X68 Tone Cards Consolidation does not generate billing records or changes.

AX1240 - MSL: Name Display Character Extension**Description**


This feature gives the user the option of displaying up to 24 characters in the name field on the displays of Integrated Voice and Data (IVD) and Meridian Business Set (MBS) phones. This option only applies if the phones are physically capable of handling the name size increase.

This feature does not replace the existing 15-character name feature, but is an added option. The option places the 24-character name on the top line of the phone set display and the second line displays the DN, followed by the timer.

This feature increases the length of the name field on the display from 15 to 24 characters. The feature uses all 24 physical spaces on the top "[Hardware requirements](#)" ([page 551](#))), leaving no room on the top for the DN. When a call is placed, the originating side displays the name field on the top line and the DN/Timer on the bottom line as shown in the following figure.

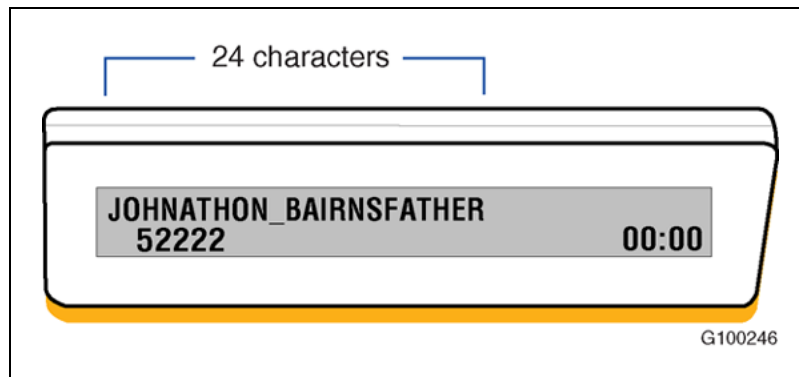Originator display

When a call is received on the terminating end, the name field and DN are displayed on the top line with the timer being displayed on the bottom line. This feature allows the DN to be displayed on the bottom line with the timer, leaving room on the top line for all 24 characters to be used for the name.

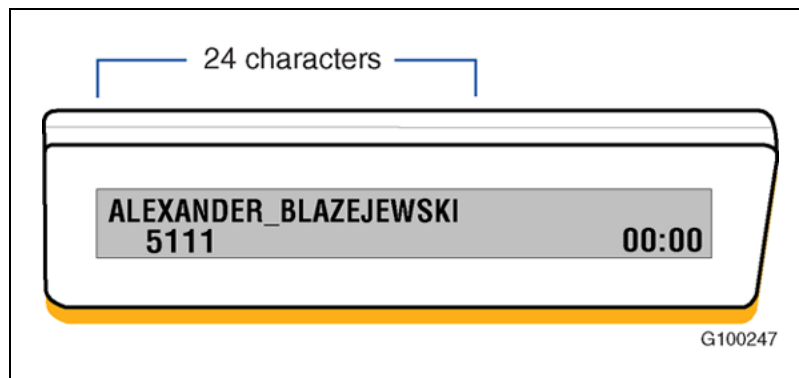Terminator display**Accompanying feature**

This feature works in conjunction with feature AX1228, CCM: Name Display Character Extension.

Hardware requirements

MSL: Name Display Character Extension is compatible with the following IVD and MBS sets:

- M2006
- M2008
- M2016S
- M2216A
- M2216B
- M2616

- M2616CT
- M5208
- M5209
- M5212
- M5216
- M5312
- M5316

Limitations and restrictions

The following limitations and restrictions apply to MSL: Name Display Character Extension:

- Autodisplay is removed (for example, key-1).
- Only MBS and IVD phone sets are supported.
- This feature is only supported on calls within the Meridian SL-100 system.
- The 24-character name display is not supported in a non-PBX environment (for example, across the network). PRI and CCS7 networks only support 15 characters for the name display.

Interactions

This feature interacts with the features Reasons and Autodisplay. When the Reasons feature is used, the 15-character NAME (for example, Conference, Call Forward) is displayed.

The Autodisplay feature is displayed on the bottom line of the LCD. It lets the called party know what key the calling party is using during the call. Because the DN is moved to the bottom line of the display in the Name24 feature, it would take the space of the Autodisplay feature.

Datafill

Table LCCOPTS keeps a list of the KSET phones supported by this feature.

Service Orders

MSL: Name Display Character Extension adds an option in SERVORD called NAME24. Both NAME and NAME24 options are datafilled to use the Name24 feature. This allows a 15-character name to be displayed when the call is external and a 24-character name when the call is internal.

Example datafill for NAME option (network calls)

```

>ADO
>$
DN_OR_LEN:
>9975120
OPTKEY:
>1
OPTION:
>NAME
NETNAME:
>PUBLIC
DISPLAYNAME:
>A_BLAZEJEWSKI
NETNAME:
>$
OPTKEY:
>$
COMMAND AS ENTERED:
ADO NOW 98 6 23 AM 9975120 (1 NAME (PUBLIC A_BLAZEJEWSKI) $ ) $

```

Example datafill for NAME24 option (internal calls)

```

>ADO
>$
DN_OR_LEN:
>9975120
OPTKEY:
>1
OPTION:
>NAME24
DISPLAYNAME:
>ALEXANDER_BLAZEJEWSKI
OPTKEY:
>$
COMMAND AS ENTERED:
ADO NOW 98 6 23 AM 9975120 (1 NAME24 (ALEXANDER_BLAZEJEWSKI) $

```

Operational Measurements

MSL: Name Display Character Extension does not affect Operational Measurements.

Logs

MSL: Name Display Character Extension does not affect logs.

User interface

MSL: Name Display Character Extension does not change the user interface.

Billing

MSL: Name Display Character Extension does not affect billing.

AX1245 - XPM: NI-2 User Side Development - Phase II

Description

This feature provides the XPM layer support for feature AX1227, CCM: NI-2 User Side Development - Phase II. Refer to the feature description for feature AX1227.

Accompanying feature

This feature works in conjunction with feature AX1227, CCM: NI-2 User Side Development - Phase II.

Hardware requirements

XPM: NI-2 User Side Development - Phase II has no hardware requirements.

Limitations and restrictions

XPM: NI-2 User Side Development - Phase II has no limitations or restrictions.

Interactions

XPM: NI-2 User Side Development - Phase II has no functionality interactions.

Datafill

XPM: NI-2 User Side Development - Phase II does not affect data schema tables or office parameters.

Service Orders

XPM: NI-2 User Side Development - Phase II does not affect SERVORD.

Operational Measurements

XPM: NI-2 User Side Development - Phase II does not affect Operational Measurements.

Logs

XPM: NI-2 User Side Development - Phase II does not affect logs.

User interface

XPM: NI-2 User Side Development - Phase II does not change the user interface.

Billing

XPM: NI-2 User Side Development - Phase II does not affect billing.

AMxxxx features

AM0032 - XPEC Call Processing - Phase I

Description

This feature provides the following functions for the Intelligent Peripheral Equipment (IPE) in a Meridian SL-100 environment:

- **Circuit Disconnect:** Provides the capability for the Extended Peripheral Equipment Controller (XPEC) to make connections between DS30X channels in an IPE and channels in the DS30A links to an XMS-based Peripheral Module.
- **Audit and Reconstruction of Connection Memory:** Compares connection memories with an image stored in Ram and makes corrections when discrepancies are detected.
- **Station Set Ringing and Cadence Control Features:** Processes commands from the XMS-based Peripheral Module (XPM) to initiate or terminate ringing of station sets attached to the IPE.
- **Babbling Set Detection, Isolation and Notification:** Performs monitoring of IPE ports to detect the condition of excessive message transmission from a particular station set indicating that an error condition exists.
- **EPEC Internal Message Queuing and Dequeuing Capabilities:** Performs message queuing tasks internal to the IPE.

Hardware requirements

XPEC Call Processing - Phase I has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to XPEC Call Processing - Phase I:

- Calls are completed in the IPE with this feature.
- No intraswitching is supported in the XPEC.

Interactions

This feature interacts with software in the IPE. It has no affect on the XPM or Central Control (CC). This feature interacts with the following features in the XPEC:

- XPEC Message Translation (AM0043)
- XPEC Maintenance (AM0044)
- XPEC Monitor (AM0042)

Datafill

XPEC Call Processing - Phase I does not affect data schema tables or office parameters.

Service Orders

XPEC Call Processing - Phase I does not affect SERVORD.

Operational Measurements

Dial Tone Speed Recording (DTRS) is not supported in this phase.

Logs

XPEC Call Processing - Phase I does not affect logs.

User interface

XPEC Call Processing - Phase I does not change the user interface.

Billing

XPEC Call Processing - Phase I does not affect billing.

AM0033 - IPE PM Maintenance - Phase II**Description**

This feature is a continuation of feature AM0037, IPE PM Maintenance - Phase I. This feature is concerned with the following:

- Diagnostics for a Intelligent Peripheral Equipment (IPE) and its associated line cards
- Log reports generated by IPE PM Maintenance. Logs are generated upon state changes of an IPE or one of its line cards, when a diagnostic routine finds a problem and when an IPE exception is detected.
- Operational Measurements (OMs) located on the IPE peripheral. When a fault is detected or other significant occurs, a corresponding OM is pegged.

Hardware requirements

IPE peripherals are required.

Limitations and restrictions

The following limitations and restrictions apply to IPE PM Maintenance - Phase II:

- This feature does not implement logs associated with audits.
- The OM group DTSR is not supported for IPEs.

Interactions

This feature needs the IPE MAP level to use the TST command. This feature does not enhance the Busy (BSY) and Return-To-Service (RTS) commands created in Phase I by adding the appropriate diagnostics as part of the BSY and RTS sequences.

Datafill

IPE PM Maintenance - Phase II does not affect data schema tables or office parameters.

Service Orders

IPE PM Maintenance - Phase II does not affect SERVORD.

Operational Measurements

"IPE OM group values impacted" (page 557) shows the Operational Measurement (OM) group values affected by an IPE.

IPE OM group values impacted

OM group	Description
PM	One tuple for each peripheral module. The stored measurements relate to the performance of the peripheral.
PMTYP	One tuple for each peripheral module type. The stored measurements relate to how the peripherals of a given type are doing collectively.
LMD	One tuple for each line peripheral. The stored measurements are related to call processing.
ENG640M1 TRA125M1 TRA125M2 TRA250M1	These remaining four OMs measure Subscriber Line Usage (SLU). Each of these scan a selected set of lines at a selected scan interval. There is a table corresponding to each of these OMs, where the lines to be scanned are listed. These tables are: • ENG40I1 • TRA125I1 • TRA125I2 • TRA250I1

	An entry in another table (OFCVAR) determines the scan rate for each OM. There is only one tuple per OM group. These measurements reflect the usage of the set of lines listed in the table corresponding to the OM, scanned at the rate specified in the OFCVAR table.

Logs

"IPE logs" (page 558) shows a list of logs and a description of the event that causes the log to be generated. These logs are not exclusive to the IPE and can be generated due to similar events or errors detected in other peripherals.

IPE logs

Log	Description
PM 102	The IPE goes from the InSv or ISTb state to the SysB state.
PM 103	The IPE goes from the MBsy or SysB state to the Offl state.
PM 104	The IPE shelf goes from Offl state to an UnEq state. This log is only generated if the IPE is posted at the MAP when the state change occurs.
PM 105	The IPE goes from the InSv, ISTb, Offl, or SysB state to the ManB state.
PM 106	The IPE goes from the SysB or ManB state to the InSv state.
PM 107	The IPE goes from the InSv, SysB, or ManB state to the CBSy state.
PM 116	A message is sent from the IPE to the CC indicating that a message error is detected.
PM 117	There is some kind of trouble at the IPE. The reason for the trouble is described in the text of the log.
PM 128	The IPE goes from the InSv state to the ISTb state.
PM 179	A message is sent from the IPE to the CC indicating a hardware exception is detected.
PM 180	A message is sent from the IPE to the CC indicating a software exception has occurred.
PM 181	A Diagnostic at the IPE fails, or there is some information about the IPE to be logged. This log is also generated upon line card state changes.

User interface

IPE PM Maintenance - Phase II does not change the user interface.

Billing

IPE PM Maintenance - Phase II does not affect billing.

AM0034 - IPE Downloading**Description**

The Intelligent Peripheral Equipment (IPE) downloading feature provides the necessary Central Control (CC) software support to download the IPE peripheral software load from the Meridian SL-100 system.

This feature

- provides a LOADPM command to allow Meridian SL-100 customers to initiate the loading of peripheral program files into POST IPE using the IPE level of the Maintenance and Administration Position (MAP) system
- describes all responses to explain results or problems to users
- generates a log report when an IPE software load is downloaded

Hardware requirements

The following hardware requirements are necessary for this feature:

- a Meridian SL-100 IPE Peripheral
- IVD Meridian M2000 and M3000 series sets

Limitations and restrictions

The following limitations and restrictions apply to IPE Downloading:

- Automatic loading of IPE software from a Meridian SL-100 is not supported by this feature.
- The IPE PM load can only reside on tape, disk, or SFDEV when it is downloaded from the Meridian SL-100 system.

Interactions

IPE Downloading has no functionality interactions.

Datafill

IPE Downloading does not affect data schema tables or office parameters.

Service Orders

IPE Downloading does not affect SERVORD.

Operational Measurements

IPE Downloading does not affect Operational Measurements.

Logs

No new logs are introduced. However, the existing PM181 Log Report is enhanced to indicate the completion of the loading of IPE files. All the existing functions of this log remain the same.

User interface

A new command, LOADPM, is introduced by this feature to the IPE level of the MAP for initiating the download process of the IPE software from the Meridian SL-100.

Billing

AMA/Billing is required if AMA/SMDR/Billing is affected.

AM0035 - CC/IPE Feature Regression

Description

This feature verifies the table control and call processing aspects of Meridian SL-100 features when assigned to IVD terminals residing on an IPE. "IPE verified features" (page 560) shows the Meridian SL-100 features that are verified.

IPE verified features

Feature	Description
Automatic Message Accounting Test (AMATEST)	The Automatic Message Accounting (AMA) data associated with a particular line is verified by placing the AMATEST option on the line and making a call that originates or terminates to this line. This insures that a particular translations path is producing an AMA record and that the proper information is contained within the record fields.
AT&T Line Study (SDY)	The SDY is assigned to Directory Number (DN) appearances that require an AMA record for complaint observing studies and line usage studies.
Authorization Code Conditional Last	With the Authorization Code Conditional Last feature, the user first dials the calling number. If it is then determined that call routing is restricted, the user is prompted for an authorization code. The call is then routed based on the Network Class of Service (NCOS) of the entered authorization code.
Authorization Code Unconditional First	The Authorization Code Unconditional First feature allows the user to enter an authorization code prior to dialing the calling number. The subscriber first dials an authorization code access code which then prompts for the entrance of an authorization code. The subsequent call is then routed based on the NCOS of the authorization code as opposed to that of the station.
Auto Answerback (AAB)	The AAB feature allows any incoming call to the Primary Directory Number (PDN) of the set (equipped with a handsfree unit with an auto answerback applique circuit) to be automatically answered after four seconds of ringing.

Feature	Description
ACD Call Forcing	With the ACD Call Forcing feature, the agent does not need to press the INCALLS key to answer a call. A 500 millisecond burst of tone is given and the lamp associated with the INCALLS key flashes. When the tone is completed, the call is automatically answered and the lamp stays on. This feature increases the efficiency of an ACD agent by freeing the agent from conventional telephone interactions. When the caller disconnects, the ACD agent is given a 2.5 second delay, followed by a short burst of tone, and then is presented with another call. This delay allows the agent time to activate Make Set Busy (MSB) or ACD Not Ready (ACDNR) to stop the next call from being presented.
ACD Make Set Busy (MSB)	If an agent presses the MSB key while active on an ACD call, the agent is unable to receive new ACD or non-ACD calls. ACD and non-ACD calls already in progress when the MSB key is pressed are unaffected. If the MSB feature is activated on an idle ACD agent position, the agent is logged out.
ACD Line of Business Code (LOB) key	The LOB feature provides the ACD agent with a smooth LOB code entry sequence during an ACD call. The agent, while active on an ACD call, stores the LOB code per ACD by pressing the LOB key and dialing the three-digit LOB code. The LOB code is sent to the Down Stream Processor using ACD MIS through the existing ACD call Released Event Messages.
ACD Not Ready (ACDNR)	This feature makes the ACD INCALLS key temporarily unable to receive ACD calls and also to release an answered ACD call by pressing the ACDNR key.
Call Agent (CAG) key	The CAG is used in conjunction with the Observe Agent (OBS) feature to conference a supervisor into the ACD call that is currently being observed or used to call an agent position so a supervisor can communicate with the agent. When CAG is used to originate a call, the CAG key and the associated lamp function exactly like a Secondary Directory Number (SDN) key that can only be used to originate calls. When CAG is used in conjunction with the OBS key, the CAG conferences a supervisor into the ACD call that is currently being observed. The OBS feature enables a supervisor to listen (observation mode) or conference (conference mode) in on an ACD call. In the observation mode, the supervisor can only listen to the ACD call being observed. If the supervisor wants to enter the conversation, the CAG can be pressed to move from observation to conference mode.
Call Supervisor (CLSUP) key	The Call CLSUP key allows an ACD agent to call the supervisor using only one key. The agent does not need to dial the supervisor's INCALLS, SDN number, or program an Automatic Dialing (AUD) key. The CLSUP key is also used to answer calls from the supervisor that are originated by the CAG key.

Feature	Description
Agent (AGT) key	The AGT feature enhances the CAG and OBS features by reducing the dialing requirements. The AGT uses the same datafill as the Agent Status Lamp (ASL) feature. The lamp associated with the ASL feature always reflects the current status of the agent.
Agent Status Lamp (ASL)	The ASL allows the supervisor of an ACD group to monitor the status of the agent position. The lamp is updated when the status of the agent changes. Activity on an SDN is also monitored by the supervisor using the ASL feature.
Answer Emergency (AEMK) key	The AEMK is an SDN on the supervisor set, designated to answer emergency calls from agents. Emergency calls from an agent are placed to the supervisor when an abusive caller is on the agent's ACD line. Calls cannot be originated from this key, nor can any access codes be entered when this key is pressed.
Controlled Interflow (CIF)	CIF provides the capability to activate/deactivate CIF from an ACD supervisor's set. When CIF is active, new calls to an ACD group are rerouted to a customer defined in table ACDGRP.
Display Agent Summary Key (DASK)	The DASK feature provides the ACD supervisor with the capability to quickly check on the overall state of the ACD agent positions assigned to an ACD group. Pressing the DASK key for a particular ACD group displays the following number of agent positions: • busy on ACD and non-ACD calls • waiting for calls • not ready to receive ACD calls • not manned
Display Queue Status (DQS)	The DQS feature is assigned to an ACD supervisor set to allow the supervisor to display the load status information associated with an ACD group. A DQS key is assigned to a set having a 32-character alphanumeric display. Before the DQS feature is assigned to a set, the set must have key number one assigned to the Supervisor (SUPR) feature.
Display Queue Threshold (DQT)	The DQT feature is assigned to either an ACD agent or an ACD Supervisor set to display the threshold status associated with an ACD group.
Emergency Key (EMK)	The EMK feature allows the ACD agents to conference to their supervisor in the event of a threatening or abusive ACD call.
Multi-Stage Queue Status (MSQS)	The MSQS feature allows ACD supervisors and agents to quickly determine which ACD groups need help in the form of either additional agents or a redistribution of agent positions. Three thresholds are assigned on a per ACD group basis to assess call handling for the MSQS feature. These queue thresholds are monitored by the operation of SD points, by displaying the current thresholds on an agent's display each time an ACD call is presented to that ACD agent position, or by pressing the DQT key to display the current ACD group status.

Feature	Description
Night Service (NGTSRVCE)	The Night Service feature allows an ACD supervisor to press a Night Service key, placing all ACD agent sets, belonging to an ACD group, into night service mode. ACD calls arriving to the ACD queues, after night service is activated, are routed to a specified treatment.
Supervisor (SUPR)	ACD allows a supervisor to perform special supervisory functions within the ACD group. A supervisor is designated by assigning the SUPR option to key number one of the set.
Automatic Dialing (AUD)	AUD enables frequently dialed numbers to be dialed automatically by pressing feature keys assigned to AUD. Each key is programmed.
Automatic Display (AUTODISP)	The AUTODISP feature displays incoming call information (such as calling name and number) on the display of a business set.
Automatic Line (AUL)	When an off-hook is reported from a line with the feature AUL, a connection is made to a predetermined location. This predetermined location is served by the switching unit or outpulsing. The stored number ranges from one to 15 digits.
Automatic Set Relocation (ASR)	ASR allows a telephone user to move IVD telephone sets from one location to another without the intervention of a service representative. After entering some special codes, the user simply unplugs the set from its current location and plugs the set into its new location. At the new location, the user goes off-hook (or presses the PDN), and dials the special ASR "IN" code. This transfers all Directory Numbers and features associated with the set from the old LEN to its new location.
Blind Transfer Recall Identification	The Blind Transfer Recall Identification feature enables the user of a Business Set (with display) to change to a call transfer recall by a message on the display.
Block Calling Name/Number Delivery Blocking Per Call (CNNB/CNDB/CNB)	This feature allows subscribers to control the display of DNs on the terminating station on a call-by-call basis. It also allows subscribers to suppress their DN and Name to the termination station on a call-by-call basis. This feature introduces three access codes: • Calling Number Delivery Blocking (CNDB) • Call Number Blocking (CNB) • Calling Number Name Blocking (CNNB)
Call Back Queuing (CBQ)	The CBQ feature notifies a station user, encountering an all trunks busy condition, when a trunk becomes idle. The user is then connected to the called number using the CBQ feature. After receiving a busy tone or no-circuit treatment, the user activates CBQ by flashing. When the trunk against which the CBQ is activated becomes idle, the station user is notified by Ring Again ringing. When the station user goes off-hook to answer the CBQ recall, the network connection to the trunk is made and the called number is outpulsed.

Feature	Description
Call Forwarding	Call Forwarding allows a customer to have incoming calls to a station automatically forwarded to a predetermined telephone number. Call Forwarding consists of the following variants: • Call Forwarding Universal (CFU) - Permits stations to forward calls to user defined locations inside/outside of the customer group. • Call Forward Intragroup (CFI) - Permits stations to forward calls only to customer defined locations within the customer group programmable at activation time. • Call Forward Fixed (CFF) - Permits stations to forward calls only to locations initially entered by the Telephone Operating Company. This does not allow users to program the forwarding numbers. • Call Forward Don't Answer (CFD) - If the called station does not answer, the incoming call is routed to another designated station or to an attendant. • Call Forward Busy (CFB) - When the call station is busy, all calls are forwarded to a predefined station inside/outside the customer group.
Call Forwarding Universal Intragroup Fixed (CFUIF)	CFUIF is only available when the switching unit has the separate keylist feature. Four types of call forwarding (Universal, Intragroup, Fixed, Universal per Key) are available to allow them a separate keylist.
Call Forwarding Don't Answer Variable Timing (CFDVT)	The CFDVT feature allows customers flexibility in assigning different call forward don't answer time out values. CFDVT is assigned to DN appearances on the set that have the CFD feature assigned.
Call Forwarding per Key (CFK)	The CFK feature allows the user to forward each DN on the Meridian Business Set to different destinations.
Call Forwarding - Remote Access (CFRA)	The CFRA feature lets the user activate/deactivate CFU, or CFF call forwarding from a digitone (DGT) line other than their own.
Call Forwarding Simultaneous (CFS)	The CFS is available on a line-by-line basis and puts an upper bound on the number of calls forwarded simultaneously for lines with call forwarding options.
Call Forward Validation (CFWAL)	The CFWAL verifies that a line successfully forwards at the time that call forwarding is activated. Depending on the validation method specified for the customer group, the system either verifies routing to the forwarded DN or actually completes the call to the forwarded DN.
Denied Call Forwarding (DCF)	A line assigned this option does not receive any calls that have been forwarded.
Multiple Call Forward (MULTICFX)	The MULTICFX feature allows a station to forward more than one call at a time. This option allows multiple call forwarding for other call forwarding features such as CFU, CFI, CFB, and CFD.

Feature	Description
Personal Call Screening (PCSCFA/PCSCFB/PC)	This feature allows a user to transfer calls back to a base station regardless of the fact that call forwarding is activated. This feature allows personal call screening for CFU/CFI (PCSCFA), CFB (PCSCFB), and CFD (PCSCFD).
Call Park (PRK)	PRK allows a DN appearance to park a call against its DN. The call is retrieved by any station by first requesting the call park retrieve and then dialing the DN of the station that parked the call.
Call Park Recall Identification	The Call Park Recall Identification feature allows the user of a business set to distinguish between Call Park (PRK) and Directed Call Park (DCPK) recalls and other types of calls. Depending on the options subscribed to, business users are alerted to a Call Park Recall in the following manner: • a flashing DN • a display message indicating that a call is a Call Park Recall • a flashing Call Park lamp • a distinctive ring
Call Transfer (CXR)	The CXR feature is assigned to a station when call transfer for the station is different from the call transfer assigned to the customer group in table CUSTSTN.
Call Transfer Warning (CTW)	CTW provides a warning tone to conferees whenever the transferring party remains on the line after transferring a call. A disconnect tone is given to the conferees after the transferring party goes on-hook.
Call Waiting (CWT)	This feature alerts a station of another call by a third party while talking to another party. The basic call waiting option only applies to the following: • attendant extended • Direct Inward Dial (DID) • Enhanced Private Switching Communications (EPSCS) • TIE trunk calls
Call Waiting Exempt (CWX)	The CWX feature exempts a station from Dial Call Waiting (CWD) and Call Waiting Originate (CWO).
Call Waiting Intragroup (CWI)	The CWI feature allows intragroup calls to use call waiting. This option is only assigned to stations having the CWT option.
Call Waiting Originate (CWO)	The CWO feature imposes call waiting when a call is placed to a busy line that does not have CWI assigned.
Call Waiting Ringback (CWR)	The CWR feature provides a distinctive ringing option to the caller which indicates whether the destination is idle or engaged in another call. CWR can only be assigned to stations which have the CWT option.
Calling Line Address Display (CLIDSP)	The CLIDSP feature, which is only available through feature groups, provides greater flexibility in defining the format of the calling line address for display on business sets.

Feature	Description
Calling Name Display (CND)	The CND feature provides a visual display on a business set for incoming and outgoing calls. Parties originating a call visually display the name of the party they have dialed. Parties receiving calls are given a visual display of the name of the party calling.
Calling Line Identification (CLI)	The CLI feature is assigned to DN appearances that require Calling Line Identification. When this feature is assigned, all local and toll calls terminating on the caller's line record the time and date of the call as the LEN and DN of the line being called on the Meridian SL-100 log system. For local calls, the LINE 115 output report is used, which also provides the LEN and DN of the calling party. For toll calls, the LINE 117 output report is used, which also provides the Common Language Location Identifier (CLLI) and the member number of the incoming line.
Cancel Call Waiting (CCW)	The CCW feature allows station users to use the Cancel Call Waiting feature provided CCW_AS_LINE_OPTION in table OFCVAR is set to "Y" (Yes).
Carrier Toll Denied (CTD)	The CTD feature denies toll access from the given station for up to 21 selected carriers.
Closed User Group (CUG)	The CUG feature provides a measure of security by restricting access into and out of a predefined group of data lines while allowing members of the group to communicate with each other and with members of predetermined compatible groups. CUG numbers of both the originator and terminator are checked to decide whether the call is allowed to proceed.
Customer Data Change (CDC)	The CDC feature allows users to change the translation and routing parameters of their business sets and data units to suit their needs.
Denied Incoming (DIN)	If the DIN feature is assigned, the DN appearance cannot receive calls from outside the customer group. This includes all calls incoming by trunks, except those trunk groups flagged as intragroup only. The attendant also cannot complete incoming calls to the station if the call originates outside the customer group, unless DN is modified by a Terminating Restriction Code.
Denied Originating Service (DOR)	The DOR is assigned to any line where the customer receives calls only. When a line with the DOR option attempts to originate a call, it is routed to the Originating Suspended Service Treatment (ORSS) specified in the Line Treatment Table.
Denied Terminating Service (DTM)	The DTM is assigned to any line where the customer originates calls only. When translation attempts to terminate to a line with DTM, it is routed to Denied Terminating Treatment (DNTR) in the Line Treatment Table.
Dial Call Waiting (CWD)	This option allows a station to impose call waiting on a called station.

Feature	Description
Directed Call Park (DCPK)	The DCPK feature allows any member of the set to park a call against any line in the same customer group. The call is retrieved by any line in the same customer group using either the DCPK key or dialing the Call Park Retrieve access code, and the DN of the parked line. If there is a security code associated with the DCPK feature on the line on which the call is parked against, the security code is supplied.
Directed Call Pickup Barge-In (DCBI)	The DCBI permits a station to answer a call that is ringing on any other line within the same customer group by dialing the Directed Call Pickup (DCP) access code. If the call is answered by the called station, the DCBI station barges into the answered call and is connected into a three-way call configuration.
Directed Call Pickup Non Barge-In Exempt (DCBX)	The DCBX feature blocks any attempt by another station with DCBI to barge in if the call is answered by this station.
Directed Call Pickup Non Barge-In (DCPU)	The DCPU feature permits a station to answer a call, which is ringing on any other line within the same customer group, by dialing the DCP access code. If the call is not answered by the called station, the dialing sequence is completed.
Directed Call Pickup Non Barge-In/Non Barge-In Exempt (DCPX)	The DCPX feature blocks any station assigned with DCBI or DCPU from picking up a call ringing on this station.
Disconnect Timeout (DISCTO)	The DISCTO feature enables the data line to be held in an unavailable state for a predetermined amount of time. Some devices take a significant amount of time to clear a call in their software.
Display Called Number	The Display Called Number feature provides the user of a business set with the display of the called number. When the display is idle, incoming call information is automatically displayed on the upper line of the two-line display.
Display Module (M0200)	The Display Module feature provides a two-line by 24-character display for the following Meridian Digital Telephones: M2008, M2616, M2016S, M2216A, and M2216B.
Distinctive Ringing (DRING)	The DRING feature allows the subscriber to specify the ringing cadences (Bell Canada Ringing Cycles 1 through 8) that are supplied to different types of calls on a per set basis.
DN Network Attribute Suppression (SUPPRESS)	The SUPPRESS feature prohibits the display of line identification information.
Do Not Disturb (DND)	The DND feature is assigned to a DN appearance that is made a member of a DND group. When DND is activated on a DN appearance, all calls to that DN are diverted to a treatment (tone or announcement), to a specified route, or to an attendant. This feature only applies if option DND is assigned to the customer group.

Feature	Description
Enhanced MBS Reason Display (REASDISP)	The REASDISP feature adds to the information displayed on a business set. Messages display to inform the user of the reason for a call redirection or to provide information about the progress of the call. This information is known as the "reason display".
Essential Line Service (ELN)	The ELN feature specifies that the line is exempt from override attempts.
Executive Busy Override (EBO)	The EBO feature allows a business set to call a busy station by pressing the EBO key or activating the EBO access code.
Executive Message Waiting (EMW)	The EMW feature allows a line to receive messages from calling stations with a compatible Mailbox Class of Service (MCOS). The respective EMW lamp is turned on when there is a message.
Expensive Route Warning Tone (ERWT)	The ERWT feature provides a warning tone to indicate the selection of an expensive route. Upon receiving ERWT, the user either refuses to use the expensive route by going on-hook or waits for time out to occur and allows the call to terminate on the expensive route.
Flexible Station Controlled Conference (CNF)	The CNF feature permits a station to establish a conference call consisting of more than three parties without the assistance of the attendant. The maximum number of conferees, including the originating station is 30. The station can be assigned one of seven feature variants. These are 6, 10, 18, 22, 26 or 30 conferees. The conferees can include lines in the same customer group, lines belonging to another customer group, and stations reached by trunks.
Free Number Terminating (FNT)	The FNT feature applies to local calls only. It is assigned when a charge condition is not returned to the terminating call.
Group Intercom (GIC)	The GIC feature allows a user to terminate on a member of a predetermined group using abbreviated dialing. The Intercom group can contain any combination of 500/2500 sets and business sets. To originate a call, the desired GIC key is pressed and the terminating member's number is dialed. The corresponding GIC lamp of the termination member flashes and audible ringing is given if the set is not busy. Pressing the flashing GIC key answers the call.
Held Calls	The Held Calls feature allows a business set user to hold an established call on any DN on the business set. The user can then originate or receive another call on any other idle DN. Business set Held Calls can be divided into two categories; Hold and Automatic Hold. To operate the regular Hold option, the user presses the Hold key to hold the active DN. To operate Automatic Hold, the user presses any channel-associated key. The original call can be reached by pressing its associated key.
Handsfree (HNSDFREE)	The HNSDFREE feature specifies whether or not a set can be used without a handset.
Hunting	When assigned, the switch offers the call to a sequence of other lines, searching for an idle line to complete the call. There are seven types of Hunting available.

Feature	Description
Directory Number Hunting (DNH)	Each line in the Hunt group has a unique DN. The hunt group is accessed by dialing the main number (Pilot DN) or by dialing the DN of one of the hunt group members. Hunting starts at the DN dialed.
Multi-Line Hunting (MLH)	There is one Pilot DN associated with MLH. To access the group, the Pilot is dialed. Hunting starts with the pilot and ends at the last line, in a sequential fashion.
Distributed Line Hunting (DLH)	There is one Pilot DN associated with DLH. To access the group, the Pilot DN is dialed. Hunting starts on the subsequent line in the group. If the line at which the hunting starts is not idle due to an origination, the next line is checked continuing until the hunting starting point is reached.
Line Hunt Overflow to a Route (LOR)	The LOR feature enables hunting to continue for a specified route, when all lines are busy.
Line Hunt Overflow to a DN (LOD)	The LOD feature enables hunting to continue to a specified DN, when all lines to a Hunt group are busy.
Bridged Night Number (BNN)	When a hunt group has several bridged night numbers, hunting takes place among the BNN. The BNN numbers can be formed into a BNN hunt group. Hunting is sequential, unless Circular Hunting (CIR) is assigned to the hunt group.
Preferential Hunt (PRH)	The PRH feature (optional) is assigned to one or more of the DNH groups. Each DNH group can have up to 64 PRH lists with up to 19 members each. Calls made directly to a busy DN of a PRH list hunt over the members of the PRH list before returning to search the DNH group. Preferential hunting only occurs when the pilot DN of the PRH list is busy.
Individual Page From GIC (GICPAGE)	The GICPAGE feature provides for one member of a GIC group, using the GIC key of a business set, to activate the built-in alerting speaker of another GIC member's business set for paging purposes. Both GIC members must be in the same GIC group. If a two-way conversion is desired, the called party can press the "On" key of the handsfree unit or lift the handset.
Inspect (INSPECT)	The INSPECT feature displays information about feature keys, Directory Number keys, and call information on incoming calls to a DN key.
Intercom (ICM)	The ICM feature allows a station, upon pressing the intercom key, to directly terminate on a predesignated set. If the terminating set is not busy, audible ringing is given and the terminator's ICM key lamp begins flashing. The terminator then chooses to answer the call by pressing the ICM key or waits for the two-second delay preceding an automatic connection being made. If the set is busy, a buzz tone is given to the terminator's set and the ICM key flashes, but no automatic connection is made. To answer the call, the terminator presses the ICM key.
Key Expansion Module (M0022)	The Key Expansion Module feature allows for a 22-key add-on unit to be added to Meridian Digital Telephones M2616, M2016S, M2216A, and M2216B.

Feature	Description
Key Short Hunt (KSH)	The KSH feature allows incoming calls to search a set of DN's for idle DN's to terminate. Hunting always takes place starting from the dialed DN up the keys of the business set.
Last Number Redial (LNR)	The LNR feature permits the last number dialed to be redialed by using a single key, instead of the whole number. Every time a number is dialed, it is stored as the LNR number. LNR is activated by pressing the pound sign (#) or dialing the LNR access code datafilled in the table IBNXL.
Last Number Redial Associated with Set (LNRA)	The LNRA feature permits the user to redial the last number dialed from the set, using one key. It is associated with the entire set, rather than a specific directory number. LNRA cannot be assigned if LNR is assigned to a set. The two options are mutually exclusive. LNRA can only be assigned to the PDN.
Listen On Hold	The Business Set Listen On Hold feature allows the user to put a called party on hold and listen to it through the speaker. The intended use of this feature is to enable the business user on hold to replace the handset and listen through the speaker to determine when the call is reestablished.
Local Call Detail Record (LCDR)	The Lcdr feature is assigned to lines when details of all local calls originated by the line are recorded on the AMA tape.
Multiple Appearance Directory Number (MADN)	The MADN feature is assigned to more than one set. The sets that are assigned this DN are known as a MADN group. MADN groups are configured in either Single Call Arrangements (SCA) or Multiple Call Arrangements (MCA).
MADN - Single Call Arrangement (SCA)	The SCA allows one set to be active, either originating or terminating, on the MADN, at any given time. A MADN member can originate or pick up an incoming call while the MADN group is idle. When any member of the MADN group is in a call, the lamps of the remaining members are turned on to indicate that the group is busy. The Privacy Release (PRL) key is used to establish a conference call among MADN SCA members and an external party. A maximum of 30 parties is permitted in a single MADN call.
MADN - Multiple Call Arrangement (MCA)	The MCA allows more than one set to be active on the MADN simultaneously. The number of simultaneous calls is restricted by the number of members in the MADN group. A MADN MCA member can originate calls without affecting the other members of the group.
Make Set Busy (MSB)	The MSB feature allows for all Directory Number appearances excluding private business lines and MADN members, to appear busy to all incoming calls. This feature is activated either by code access or by pressing the MSB key.
Make Set Busy Except GIC	The Make Set Busy Except GIC feature allows the subscriber to continue to receive GIC calls and calls on certain DN's while the MSB feature is active. Without this feature, the activation of MSB causes all incoming calls to receive a busy tone or other treatments.

Feature	Description
Make Set Busy Intragroup (MSBI)	The MSBI feature allows the user to make a line busy or available to intragroup calls by activating/deactivating the MSB feature. External calls are not blocked. Intragroup calls, blocked while MSBI is active, receive a busy tone.
Malicious Call Hold (MCH)	The MCH feature allows any DN appearance on the business set to hold a connection on a malicious call. When both parties terminate in the same switching unit, the entire call is held until released by the called party. When the call is on an incoming trunk, the call is held to the incoming trunk.
Meridian Telecenter (TELECNTR)	The TELECNTR feature applies only to the Meridian Programmable Data Adaptor (MPDA). It specifies that the MPDA use the Meridian Telecenter Personal Computer Application.
Meet Me Conference	The Meet Me Conference provides conference bridges and a DN that conference members dial at a specified time in order to hold a conference. The originator of a Meet Me Conference must call the attendant to receive a DN for a conference bridge and inform all potential conference members of the DN, the time, and the date of the conference. Up to 30 conferees can participate on the conference.
Message Waiting (MWT)	The MWT feature allows the PDN to receive and retrieve messages from the message center. Variations of this feature include an option of making a call request to another line that is in the busy/don't answer state to ring back.
Message Waiting Indication (MWIDC)	The MWIDC allows an Electronic Business Set (EBS) with display to function as a message center. The EBS Message Center operator can activate/deactivate the message waiting indication at a user's telephone set. The operator presses the MWIDC key to activate the message waiting indication at the user's telephone set, indicating that calls forwarded to the EBS Message Center, directly or indirectly by that user, are waiting for retrieval. Upon call retrieval, the operator presses the MWIDC key to deactivate the message waiting indication at the user's set.
Message Waiting Query (MWQRY)	The MWQRY feature allows an EBS Center to manually enter a DN with which to check for messages for call retrieval.
Music On Hold (KSMOH)	The KSMOH feature provides music on hold for DN lines on business sets. When the business set user places a call on hold or autohold, the held party is connected to an audio source such as music. When the business set user takes the call off hold, the call is reestablished on the DN line.
Network Resource Selector (NRS)	The NRS feature is only valid for data units. Activation of this feature causes a connection to the non-busy outbound DU-Modem pair selected from a modem pool by the switch when the user receives the carrier or answer tone when the far end modem goes off-hook.
No Double Connection (NDC)	The NDC feature is assigned to lines that are not connected to a verification or test circuit when the line is busy.

Feature	Description
No Receiver Off-Hook Tone (NOH)	The NOH is not transmitted to lines with this option assigned when the lines have a permanent signal or partial condition.
Off-Hook Queuing (OHQ)	The OHQ feature allows a call, that cannot be completed because inexpensive, outgoing trunks are unavailable, to wait off-hook for an idle trunk. An idle trunk cannot be found in the inexpensive route set when Automatic Route Selection encounters a queue head in the route list. Inexpensive routes are defined as all routes before the queue head. When an outgoing trunk becomes available, the call progresses in a normal manner.
On-Hook Dialing	The On-Hook Dialing feature allows the user to originate calls without lifting the handset, by pressing an idle DN key and dialing the desired number. Call progression tones and ringback are heard through the business set speaker. The user can lift the handset at any time and establish a two-way connection. Feature keys such as Speed Calling, Automatic dialing, and Ring Again are used with On-Hook Dialing. The call terminates at any time by pressing the Release key.
Originating Line Select Option (OLS)	The OLS feature consist of two options: - Idle Line Select (IDLE): Allows a user to automatically connect to an idle line when going off-hook. - No Line Select (NOSELECT): Requires a user to manually select the originating line by pressing the desired DN key.
Operator Number Identification (ONI)	The ONI option is assigned to lines that require operator number identification. Lines not assigned this option are assigned as Automatic Number Identification (ANI) lines.
Plug Up (PLP)	The PLP option is assigned to lines that are in the plug up state.
Preset Conference (CONF)	The CONF feature allows stations, trunks, or Attendant Consoles to set up a conference with a maximum of 25 conferees, by dialing a specific DN. This feature invokes simultaneous ringing of preselected conference members. The conferees are specified in advance in a data table indexed by the conference DN.
Primary InterLATA Carrier (PIC)	The PIC feature assigns a PIC to an IBN line.
Private Business Line (PBL)	The PBL feature allows the DN appearance on the set to look like POTS lines, having a POTS dialing plan. All features assigned to the business set are unavailable to the PBL.
Query Busy Station (QBS)	The QBS feature allows a business set to monitor the busy/idle status of a specific set. It also allows the monitoring set to be alerted when the monitored set becomes idle.
Random Make Busy (RMB)	The RMB feature is assigned to any hunt line. It provides for a miscellaneous scan of a point circuit controlled by an external key. When RMB is activated, the line is made permanently busy. When RMB is deactivated, the line is normal.

Feature	Description
Reason Display (READSP)	The READSP feature displays information about the feature keys, DN keys, and call information on incoming calls to a DN key, call waiting key, or Intercom without answering the call. Messages displayed can be defined to use the default set defined for the whole switch or uniquely defined for each set.
Requested Suspension (RSUS)	The RSUS feature is assigned to a DN appearance when the customer requests suspension of service. When RSUS is assigned to a DN, originations from and terminations to the specified DN are blocked. The call is instead routed to a customer specified treatment.
Ring Again (RAG)	The RAG feature allows a calling party encountering a busy station to be notified when the busy station becomes idle. When this occurs, the calling party receives notification tone. To complete the call, press an idle DN key and press the RAG key for the second time. The RAG feature dials the call and the calling party receives audible ringing.
Ringtype	The type of ringing that is generated on a set is datafillable. The following codes can be entered for the type of distinguishable ringing required: • Fast High (FH) • Fast Low (FL) • Slow High (SH) • Slow Low (SL)
Secondary Language (SL)	The SL feature gives users a second language option for office announcements for features such as Call Forward or Remote Access.
Security Code (SEC)	The SEC feature is assigned to a DN appearance when security is desired for the activation of certain features. When assigned, the security code must be supplied prior to the feature's activation.
Simplified Message Desk Interface (SMDI)	The SMDI feature provides an interface using a data link and the Meridian SL-100 to a text messaging system type of message desk. Agents logged into a UCD SMDI serve as an answering service for stations that have their calls forwarded.
Special Billing (SPB)	The SPB feature permits a billing DN, other than the station's DN, to be written to tape. For Station Message Detail Record (SMDR), the SPB DN is used if this feature is assigned to a line. The SPB DN must be a seven or ten-digit number.
Speed Calling Long List (SCL)	The SCL feature permits a customer to place calls to a previously designated list of frequently called numbers by dialing a two-digit speed calling code, instead of the complete number. The long list consists of 30, 50, or 70 numbers. The SCL can belong to an individual line or a number of users.

Feature	Description
Speed Calling Short List (SCS)	The SCS feature permits a customer to place calls to a previously designated list of frequently called numbers by dialing a two-digit speed calling code, instead of the complete number. The short lists consists of ten stored numbers. The Speed Calling Codes can range from zero to nine.
Station Message Detail Record (SMDR)	The SMDR feature is assigned to lines when details of all local calls originated by the line are recorded on AMA tape. All entries in the AMA are in the SMDR format.
Station Origination Restrictions (SOR)	The SOR is assigned to any DN appearance in order to place that DN into a SOR group. A station or an Attendant Console that acts as a SOR Controller (SORC) can apply a SOR level (0 through 4) against the SOR group. • A level 0 restriction permits completion of all calls allowed by the NCOS. • A level 1 restriction allows completion of only intragroup calls and calls specified in an exception list. • A level 2 restriction allows completion of only the intragroup calls. • A level 3 restriction allows completion of only intragroup calls and calls specified in an exception list. • A level 4 restriction allows completion of only 911 calls.
Station Origination Restrictions Controller (SORC)	A DN with the SORC feature assigned is allowed to apply a restriction level (0 through 4) against another DN or group of DNs in the same customer group. The SOR feature is used to group the DNs.
Station Specific Authorization Code (SSAC)	The SSAC enables the customer to limit the validity of an authorization code (authcode) to a single set. This restriction increases security by proving that calls are made by the individual who owns a particular SSAC, since the authcode is linked to that individual's station. SSAC eliminates the problem of unauthorized long distance charges and unfamiliar Directory Numbers appearing on user's accounts by allowing privileges accessed by an authcode only after the authcode is verified against the station from which it is disabled.
Stop Hunt (SHU)	The SHU feature is assigned to any DN appearance that is a member of DNH, MLH, or DLH hunt group. This feature provides for a miscellaneous scan point circuit controlled by an external key. When the key is not activated, the line is normal. The hunting feature is canceled when the key is activated. The same miscellaneous scan point can be simultaneously assigned to one, several, or all lines within the hunt group, depending on the number of lines having hunting canceled.
Subscriber Line Usage (SLU)	The SLU feature is assigned to a DN appearance that requires a peg count of all originating and terminating calls.
Suspended Service (SUS)	The SUS feature is assigned to lines that have originating and terminating service suspended.

Feature	Description
Terminating Line Select Option (TLS)	The TLS feature consists of two options: • Incoming Call Select: Allows a user to automatically answer an incoming call when going off-hook. • No Line Select: Requires a user to manually select the line to answer by pressing the desired DN key.
Time and Charge Services on 1+ Calls (ATC)	The ATC feature applies to lines with time and charge option. When a line is assigned this feature, call details for all 1+ calls are sent to the printer. The charges are calculated and sent by phone back to the subscriber.
Total Essential Service (TES)	The TES feature applies to lines that are allowed access to the toll network, when all other lines are denied access, through the activation of toll network protection. All lines with the TES feature also have the option ELN.
Uniform Call Distribution (UCD)	The UCD feature permits even distribution of incoming calls to a number of predesignated sets.
Uniform Call Distribution Login (UCDLG)	The UCDLG feature allows a UCD agent to automatically login/logout of the specified UCD group.
Uniform Call Distribution SD Point (UCDSD)	The UCDSD allows a Signal Distributor (SD) point to monitor a UCD agent's login/logout status through an External Device Connection.
Three Way Calling (3WC)	The 3WC feature enables any DN appearance on the assigned set to add another party to an existing connection for a three-way conference.

Hardware requirements

This feature requires IVD M2000 and M3000 series sets off the Meridian SL-100 version of the IPE peripheral.

Limitations and restrictions

The following limitations and restrictions apply to CC/IPE Feature Regression:

- Business Set features (unless supported in IVD terminals) and system features should function properly on IVD terminals residing on the IPE.
- Verification of an Attendant Console or Integrated Services Digital Network (ISDN) features does not occur.
- Verification of any Meridian Business Set features does not occur. This includes the following:
 - Call Covering (CCV)
 - Group Intercom All Call (GIAC)
 - Leave Message (LVM)

- Message List Editing (MLE)
- Power Feature Display (PFDSP)
- Privacy (PRV)
- Terminating Billing Option (TBO)
- Terminal Management Environment (TME)

Interactions

This feature has no impact on existing Meridian SL-100 features, but rather serves to verify functionality on IVD terminals residing on the IPE.

Datafill

CC/IPE Feature Regression does not affect data schema tables or office parameters.

Service Orders

Service Orders for the applicable Meridian SL-100 features are verified by feature AM0036 - IPE Service Orders/Query Commands.

Operational Measurements

CC/IPE Feature Regression does not affect Operational Measurements.

Logs

CC/IPE Feature Regression does not affect logs.

User interface

CC/IPE Feature Regression does not change the user interface.

Billing

CC/IPE Feature Regression does not affect billing.

AM0036 - IPE Service Orders/Query Commands**Description**

This feature expands the Meridian SL-100 Service Order capabilities to include support of the Intelligent Peripheral Equipment (IPE). The IPE now supports Integrated Voice and Data (IVD) digital lines. Service Orders are used to add and delete subscribers in the database, add or delete options for a subscriber, and suspend or restore service, and to query the information on a subscriber. In addition to the required enhancements, this feature also verifies the correct use of each SERVORD command on the new peripheral.

All existing Service Order commands are retained and are available for the IPE. All existing checking applies to the new IPE peripheral.

Hardware requirements

IPE Service Orders/Query Commands requires the Meridian SL-100 version firmware for the M2000 and M3000 series sets. The IPE peripheral, NT8D25AA, is also required.

Limitations and restrictions

The following limitations and restrictions apply to IPE Service Orders/Query Commands:

- When assigning an IVD voice terminal to a Line Equipment Number (LEN), the terminal can only be added to an even-numbered LEN. The data terminal Meridian Asynchronous Data Option (MADO) or Meridian Programmable Display Adapter (MPDA) can only be added to odd-numbered LENS.

Interactions

IPE Service Orders/Query Commands has no functionality interactions. This feature verifies the compatibility of the features documented in AM0035, CC/IPE Feature Regression.

Datafill

IPE Service Orders/Query Commands does not affect data schema tables or office parameters.

Service Orders

IPE Service Orders/Query Commands affects SERVORD as stated in ["Description" \(page 576\)](#).

Operational Measurements

IPE Service Orders/Query Commands does not affect Operational Measurements.

Logs

IPE Service Orders/Query Commands does not affect logs.

User interface

IPE Service Orders/Query Commands does not change the user interface.

Billing

IPE Service Orders/Query Commands does not affect billing.

AM0037 - IPE PM Maintenance - Phase I**Release applicability**

IPE PM Maintenance - Phase I was introduced in BCS31 and is applicable for MSL03 and up.

Description

This feature provides the Central Control (CC) software changes necessary to provide limited maintenance and diagnostic capabilities for the Meridian SL-100 Intelligent Peripheral Equipment (IPE) and its associated interface cards. A new IPE MAP level is added. Maintenance commands provided by the new IPE level for the IPE are similar to those provided for other Meridian SL-100 peripherals, such as the Digital Line Module (DLM) and the Line Concentrating Module (LCM).

The Extended Peripheral Equipment Controller (XPEC) provides the primary interface and control functions for the IPE. It receives messages from the network, Line Trunk Controller (LTC) or Line Group Controller (LGC), peripheral line cards, and terminals. It communicates with Extended Digital Line Cards (XDLC) and Extended Message Waiting Line Cards (XMLC).

The XDLC has 16 ports and supports 32 terminals per card. It interfaces with a maximum of 16 Meridian M2000 or M3000 digital sets, plus 16 data options. The XMLC supports 16 ports per card. An XMLC can be interfaced to a maximum of 15 500 or 2500 analog terminals, and supports message waiting lamp capability on terminals equipped with a message waiting lamp. Any line card slot in an IPE shelf accepts an XMLC or XDLC.

The XPEC resides in the IPE shelf and is capable of interfacing with as many as 16 line cards. In the Meridian SL-100 environment, the XPEC communicates with the cards through the CARD-LAN interface on the IPE back panel.

Links between an IPE and a Meridian SL-100 are assigned to an IPE in the IPEINV table. The first two links assigned to an IPE serve as combined message and speech links for the peripheral. The first two channels of a combined message and speech link carry message traffic and the remaining 30 channels carry speech traffic. The remaining links carry only speech traffic on all channels. One message and speech link is connected to each unit of the IPE's C-side peripheral (LGC or LTC). LGCs and LTCs operate in "hot stand-by" mode, instead of load sharing mode. The IPE does not receive conflicting messages from the two message links, because only one link is active at a time. Because the IPE is a simplex peripheral, the takeover process does not apply to this peripheral type.

IPE maintenance

A peripheral module with an IPE node type is a single-unit, single-shelf module. Up to four single-unit IPEs are housed in one Universal Equipment Module Frame (UEMF). The four IPEs in an UEMF are numbered from bottom to top with ascending numerical values assigned to each shelf. As with LCMs and DLMs, site names identify IPEs. The assignment of site name is controlled by entries in the SITE table. Each UEMF is identified by a discrimination number ranging from 0 to 99. This number, plus the shelf

number of the IPE in the UEMF are the parameters used with the POST command. The site name, with the UEMF number and shelf number are also the key to table IPEINV. An IPE has as many as six DS30A C-side links to its controlling LTC or LGC. C-side link numbers range from 0 to 5. At the LTC or LGC, where these links are P-side, the links are identified using the range 0 to 19. This covers all 20 links to a number of peripherals or trunks. For maintenance purposes, each circuit on the IPE is identified by a circuit number that depends on the card type and a line subgroup number ranging from 0 to 15. This corresponds to the line card slot on the IPE shelf where the circuit resides.

IPE maintenance states are basically the same as those defined for other Meridian SL-100 peripherals. "[Valid IPE node states](#)" (page 579) provides a description of the valid IPE node states.

Valid IPE node states

IPE node state	Code	Description
System Busy	SysB	System maintenance automatically removes PMs from service.
Manual Busy	ManB	The BSY command manually removes PMs from service to allow testing and other manual maintenance action.
Offline	Offl	System maintenance does not act upon PMs. They must manually be brought back into service.
Central Side Busy	CBSy	PMs connected to the network are unable to communicate with the CC, because the network or the links used to carry messages between the PM and the P-side of the network are unavailable.
In-Service Trouble	ISTb	PMs are still in service, but flagged by system maintenance, because a minor error condition occurred, the PM failed a minor audit test, or the load is not listed in the corresponding data table. Call processing service is unaffected.
In-Service	InSv	PMs are in service and available to support any intended process.

An IPE can be placed in the In-Service Trouble state for any of the following reasons:

- Line cards resident in the IPE do not match CC IPE lines datafill.
- There is a mismatch between the load specified in the IPEINV table and the actual software load in the IPE.
- One of the message links to the IPE is out of service.

IPE MAP level changes

Maintenance operations on an IPE are performed on the IPE level of the MAP display, which is an increment of the existing PM MAP level. The following is a list of commands available at the IPE level:

- The POST command accesses the PM sublevel for the specified PM or sets of PMs that the corresponding menu of commands is to perform action on. This command has been changed to allow access to the new IPE PM sublevel.
- The DISP command displays a list of all IPEs in the specified maintenance state. This is a PM level command. It has been changed to display IPEs using this command.
- The NEXT command posts the next IPE in the post set. The posted IPE number increases to the next higher discrimination number of the set of posted IPEs. The display is updated to show the state of the most recently posted IPE. This PM level command places the next PM in the post set into the control position. It now recognizes IPEs as a valid PM node type.
- The QUIT command causes the current display to change to a higher level.
- The TRNSL command identifies the C-side speech and message links of a previously posted IPE. The display includes the status and type of the links.
- The BSY command changes the state of an IPE in Manual Busy (ManB) state. The BSY command can be applied to the entire posted IPE, or to each individual card in the IPE. A PM105 log report generates whenever an IPE is placed in ManB state.
- The RTS command returns a posted IPE, or any of its individual cards, to service. No tests are executed. The device being returned to service must be in ManB state. A PM106 log report generates when an IPE is returned to service.
- The OFFL command places the posted IPE or one of its individual cards in the offline state. The device being taken offline must first be placed in the ManB state. A PM103 log report generates when an IPE is set to offline. An offline IPE remains in the OFFL state through all restarts.
- The QUERYPM command displays miscellaneous information about the posted IPE.
- The ABTK command aborts the current task on the posted IPE. This command does not appear on the menu for the IPE MAP level.

Hardware requirements

The following peripherals are required:

- Extended Peripheral Equipment Controller
- Extended Digital Line Card
- Peripheral Equipment Power Supply
- Universal Equipment Module (UEM)
- UEM Top Cap
- UEM Pedestal
- IVD Meridian M2000 or M3000 sets

Limitations and restrictions

The following limitations and restrictions apply to IPE PM Maintenance - Phase I:

- No in-service tests are provided with this feature.
- No out-of-service tests are provided with this feature.
- No Operational Measurements are provided with this feature.
- Because the IPE is a single-unit peripheral, the takeover process does not apply to this peripheral type.

Interactions

IPE PM Maintenance - Phase I has no functionality interactions.

Datafill

IPE PM Maintenance - Phase I does not affect datafill.

Service Orders

IPE PM Maintenance - Phase I does not use SERVORD.

Operational Measurements

IPE PM Maintenance - Phase I does not affect Operational Measurements.

Logs

IPE PM Maintenance - Phase I does not affect logs.

User interface

See the ["IPE MAP level changes" \(page 580\)](#) for a list of the commands that were added or changed for this feature.

Billing

IPE PM Maintenance - Phase I does not affect billing.

AM0038 - XPM Support of IPEs

Description

This feature provides the Line Group Controller (LGC) and Line Trunk Controller (LTC) software to support Intelligent Peripheral Equipment (IPE). The IPE attaches to the P-side of XMS-based Peripheral Module (XPM). This peripheral supports Integrated Voice and Data (IVD) terminals for this feature. This feature provides the following functions:

- Peripheral maintenance, which adds the capability for the software in the Central Control (CC) to send and receive messages to and from the IPE peripherals. Messages pass between the CC and the IPE through the XPM.
- Facilities maintenance, which initializes store in the XPM for each datafilled terminal on an IPE peripheral. Facilities maintenance also provides support for any functions that the XPM needs for an IPE peripheral type, such as digit collection, messaging, updating the set data, and P-side channel allocation.
- Call processing in the XPM.

Hardware requirements

This feature requires an IPE attached to an XPM.

Limitations and restrictions

Analog sets are not supported with this feature.

Interactions

This feature is required to interface an IPE to an XPM. It is used by and uses other features to accomplish the interfacing of IVD terminals and analog sets to the Meridian SL-100 switch.

Datafill

XPM Support of IPEs does not affect data schema tables or office parameters.

Service Orders

XPM Support of IPEs does not affect SERVORD.

Operational Measurements

XPM Support of IPEs does not affect Operational Measurements.

Logs

XPM Support of IPEs does not affect logs.

User interface

XPM Support of IPEs does not change the user interface.

Billing

XPM Support of IPEs does not affect billing.

AM0039 - IPE Lines Table Control**Description**

This feature provides the software necessary to allow datafilling of Integrated Voice and Data (IVD) digital lines from an Intelligent Peripheral Equipment (IPE). Line Equipment Numbers (LENs) can now refer to lines on an IPE. This feature also establishes the valid Product Engineering Codes (PECs) to line cards on the IPE.

This feature supports the following Meridian IVD terminal types:

- M2009
- M2112
- M2018
- Meridian Asynchronous Data Option (MADO)
- M2317
- M3000
- M2008
- M2616
- M2016S
- M2216A
- M2216B
- Meridian Programmable Data Adaptor (MPDA)

This feature affects tables LNINV and IVDINV.

Line Equipment Numbers

Line Equipment Numbers for the IPE include the following subfields:

- SITE - IPEs are assigned site names that fully identify them. The SITE table controls the assignment of site names.
- FRAME - The frame for an IPE refers to the Intelligent Peripheral Equipment Column (IPEC) where the IPE resides.
- SHELF - Each IPEC contains one to four IPEs. There is one IPE per shelf. Shelves are numbered starting from the bottom with shelf 0 through shelf 3.
- LSG - Line subgroup refers to the subgroup number that corresponds to an IPE line card to which a line is assigned. There are 16 line subgroups on each IPE numbered 0 through 15.

- **CIRCUIT** - This refers to the circuit within an IPE line card to which a line is assigned. There are 32 circuits numbered 0 through 31 for each Extended Digital Line Card (XDLC). IVD digital sets can only be datafilled with even-numbered circuit numbers. The corresponding data option is datafilled in the odd-numbered circuit number, which is one greater than the mate set.

Table LNINV

The line circuit inventory table LNINV contains the following data for each line card slot:

- the LEN for each line
- the PEC of the line card for a line
- the pad group for the line
- the status of the line card

This feature associates LENs with an IPE and establishes the PECs for the new IPE line cards.

Table IVDINV

The IVD table contains the following information:

- the LEN
- the set type and ring type
- the optional features for a set

This feature allows datafilling of IVD sets on an IPE.

"[Sample IVD data tuple](#)" (page 584) shows sample data tuples for table IVDINV. The first tuple shows a M2009 being datafilled with a fast high ring and no CDC option. The second tuple is the datafill for the associated Meridian Asynchronous Data Option (MADO).

Sample IVD data tuple

Site	Frame	IVDLEN Shelf	LSG	Circuit	SETDATA		Option	CDC Owner	*
					SET TYPE	RING TYPE			
Host	02	0	03	00	M2009	FH			\$
Host	02	0	03	01	MADO				\$

G100240

Hardware requirements

This feature is used with the Extended Digital Line Card (NT8D02AA). The IPE peripheral NT8D25AA is required.

Limitations and restrictions

A LEN for an IVD digital set can only be datafilled with an even-numbered circuit number. The corresponding data option is datafilled in the odd-numbered circuit number, which is one greater than the mate set.

Interactions

Before datafilling any tables changed in this feature, there must be a corresponding valid entry in table IPEINV.

Datafill

Tables LNINV and IVDINV were changed for this feature. Table LNINV was modified to accept lines hanging off the IPE. The new line cards used with the XPE are added to field CARDCODE, and LENs are checked for consistency between the line card being datafilled and the line cards that are already datafilled.

Table LNINV

"[Changed fields in table LNINV](#)" (page 585) lists the changed fields in table LNINV, the valid range of values for each field, and explains the change to each field that was implemented with this feature.

Changed fields in table LNINV

Field name	Range of values	Description of change
CARDCODE	N/A	Added card codes 8D02AA and 8D09AA for IPEs.
FRAME	0 through 99	FRAME can refer to an IPE column number.
SHELF	0 through 9	This field contains the valid shelf numbers for IPEs. Valid shelf numbers are 0 to 3. The lower-most IPE in a frame is shelf 0 and the upper-most IPE is shelf 3.
DRAWER or LSG	0 to 23	This field contains the valid line subgroup numbers for IPEs are 0 to 15.
CIRCUIT	0 to 31	The valid circuit numbers for IPEs depend on the card being datafilled. Circuits 0 to 15 are valid for the analog line card and circuits 0 to 31 are valid for the digital line card.
PADGRP	STDLN, UNBAL, PPHON, RCT LRLM, alphabetic, NPDGP, or "	Use only NPDGP for IPEs.
GND	Y or N	Use only N for IPEs.
BNV	L, NL, or "	Use only NL for IPEs.
MNO	Y, N, or "	Use Y for IPE line cards.

Before datafilling a line from an IPE in this table, there must be an entry for the IPE in the IPE inventory table IPEINV.

"Sample XDLC data tuple" (page 586) shows a sample data tuple for a digital line connected to an XDLC. There is no pad group assigned and the status is Hardware Assigned Software Unequipped (HASU).

Sample XDLC data tuple

Site	Frame	LEN Shelf	LSG	Circuit	Cardcode	PADGRP	Status	GND	BNV	MNO
Host	00	2	3	2	8D022A	NPDGP	HASU	N	NL	Y

G100241

Table IVDINV

Changes were made to the SHELF and SUBGROUP subfields of the LEN field so that IVD digital lines can be assigned to an IPE.

Changed fields in table IVDINV

Field name	Range of values	Description of change
FRAME	0 through 99	Frame can refer to an IPE frame number, instead of only a DLM frame number.
SHELF	0 through 3	Shelf can refer to an IPE shelf number, instead of only a DLM shelf number.
SUBGROUP	0 to 15	Subgroup can refer to an IPE subgroup number, instead of only a DLM subgroup number.
CIRCUIT	0 to 31	Circuits can be on XDLCs that are used in the IPE. The PEC for the XDLC is NT8D02AA. For all IVD digital terminals except MADOs and MPDAs, the circuit number must be even (0 through 30). For MADOs and MPDAs, the circuit number must be odd and one greater than the set with which it is associated.

"Sample IVD data tuple" (page 587) shows sample data tuples for table IVDINV. The first tuple shows a M2009 being datafilled with a fast high ring and no CDC option. The second tuple is the datafill for the associated Meridian Asynchronous Data Option (MADO).

Sample IVD data tuple

Site	Frame	IVDLEN Shelf	LSG	Circuit	SETDATA		Option	CDC Owner	*
					SET TYPE	RING TYPE			
Host	02	0	03	00	M2009	FH			\$
Host	02	0	03	01	MADO				\$

G100240

Service Orders

"Service Order input commands" (page 587) lists available Service Order commands and their definitions.

Service Order input commands

Command	Use	Applicable to
ABNN	Adds bridged night numbers.	Hunt group members.
ADA	Adds an authcode.	Offices with Integrated Business Network (IBN) authcodes.
ADD	Adds lines to an existing hunt group.	Hunt group members.
ADO	Adds options to lines. Adds existing lines to a DNH group. Adds options to hunt group lines specified by LEN. Adds proprietary Electronic Telephone Set (P-phone) and Data Unit features to set and data unit keys. Adds IVD voice and data features to voice set and data keys.	Individual lines. DNH group members, pilot of hunt group. MLH/DLH group members. Electronic telephone set and data units. Meridian voice and data sets.
BULK	Verifies or updates from a batch of Service Orders input in bulk.	All Service Order types.
CDN	Changes Directory Number (DN.)	All DNs of a hunt group, except the pilot DN.
CHF	Changes feature information for a feature that already exists on a line.	Individual lines, DNH group members, pilot of hunt group, MLH/DLH group members, electronic telephone set and data units, and Meridian voice and data sets.
CHG	Changes translation or routing information.	Offices with IBN authcodes.
CICP	Changes intercept type.	All unassigned DNs.

Command	Use	Applicable to
CKLN	Changes keyset Line Equipment Number.	N/A.
CLN	Changes Line Equipment Number.	All lines, except party lines.
CLTG	Changes line treatment group.	All Plain Ordinary Telephone Service (POTS) lines.
DBNN	Deletes bridged night numbers.	Hunt group members.
DEA	Deletes an authcode.	Offices with IBN authcodes.
DEL	Deletes lines form a hunt group.	Hunt group members, except the pilot.
DELCF	Deletes casual features.	Standard lines.
DEO	Deletes options from lines. Deletes options from hunt group lines specified by the LEN. Deletes features from electronic telephone set keys. Deletes features from Meridian set keys.	Individual lines, DNH group members, pilot of hunt group. MHL/DLH group members. Electronic telephone set and data units. Meridian voice and data sets.
DNC	Specifies the Dynamic Network Controller.	Network Operating Systems (NOS) using a DNC through the Meridian SL-100 passthrough MAP display.
DSP	Displays translation and routing information.	Offices with IBN authcodes.
ECHO	Turns on echoing of Service Orders to a terminal connected to the Meridian SL-100.	Service Order Echo.
EST	Establishes a hunt group.	Hunt groups with members having common options, 2WW service, electronic telephone set with DNH group, data unit, Meridian voice sets with DNH group, IVD data sets.
NEW	Establishes service.	Individual (non-hunt) lines and party lines, electronic telephone set and data units, Meridian voice and data sets.
NEWDN	Assigns a block of DNs not associated with line equipment. Assigns a station not associated with a LEN as the remote station to which calls are forwarded.	DNs associated with an office route. Remote Call Forwarding feature.

Command	Use	Applicable to
OUT	Removes service.	Individual lines, pilot of hunt group, electronic telephone set and data units, Meridian voice and data sets.
OUTDN	Deletes the assignment of a block of DNs. Deletes the assignment of a remote station to which calls are forwarded.	DNs associated with an office route. Remote Call Forwarding feature.
PLP	Places on trouble intercept (plug-up).	Individual lines, pilot of hunt group, DNH group members.
RES	Restores service from suspension or plug-up.	Individual lines, pilot (to restore hunt group).
RESGRP	Restores service for a group of lines.	Group of lines (NCOS).
SDNA	Sets up Directory Number attributes.	Group of Directory Numbers.
STOPECHO	Turns off echoing of Service Orders to a terminal connected to the Meridian SL-100.	Service Order echo.
SUS	Suspends service.	Individual lines, pilot (to suspend hunt group).
SWAP	Enables the exchange of DNs for up to 32 LENS.	Offices with IBN authcodes.

Operational Measurements

IPE Lines Table Control does not affect Operational Measurements.

Logs

IPE Lines Table Control does not affect logs.

User interface

IPE Lines Table Control does not change the user interface.

Billing

IPE Lines Table Control does not affect billing.

AM0040 - XPE Lines Maintenance - Phase I

Description

This feature enables a line circuit or set of line circuits served by Intelligent Peripheral Equipment (IPE) modules to be put into post (POST), busy (BSY), and return-to-service (RTS) modes. Maintenance actions on line circuits are invoked manually at the MAP display. This feature supports the following commands:

- POST

- BUSY
- RTS
- CKTLOC
- HOLD
- NEXT
- NEXTH
- NEXTP

The POST command is used to select a line circuit or set of line circuits from the IPE to the Line Test Position (LTP) for maintenance actions. The posted line circuit is placed in the control position. The POST command must be entered before using the BUSY or RTS commands. The following fields are displayed and continuously updated for a line in the control position:

- line class code
- party
- LEN
- DN
- state
- seizure indicator
- Line Test Access (LTA) connection mode
- terminating equipment

The BUSY command is used to change the state of the line in the control position, or lines in the control set, to a Manual Busy (ManB) state. Only lines in the Call Processing Busy (CPB), Installation Busy (INB), Idle (IDL), and Lock-out (LO) state are affected. The ALL option appended to this command is used to change the states of all lines in the posted set, including the one in the control position, to ManB state. The state change requested by this command is delayed when invoked on a line or set of line circuits in the CPB state. The circuit is changed to CPD state and placed in the busy queue, until the call in progress is completed.

The RTS command changes the state of the line in the control position or lines in the control set from the ManB state to the IDL state. Only lines in the ManB state are affected. The ALL option appended to this command returns all line circuits in the posted set to service.

The CKTLOC (circuit locate) command displays the location identifier of the circuit in the control position.

The HOLD, NEXT, NEXTH, and NEXTP commands select and manipulate circuits in the Control and Hold positions of the Line Test Position (LTP). They are provided as in the previous implementation for the Meridian Integrated Voice and Data (IVD) sets.

Access to these maintenance commands for lines connected to the IPE are similar to those provided for lines connected to a Line Concentrating Module (LCM) or Digital Line Module (DLM).

Hardware requirements

This feature requires the new IPE peripherals and the IVD Meridian M2000 or M3000 series sets.

Limitations and restrictions

This feature provides limited commands for performing maintenance on lines connected to the IPE. The following limitations and restrictions apply to XPE Lines Maintenance - Phase I:

- No diagnostic test capabilities are supported in this release.
- Line circuits off the IPE are not included in Automatic Line Testing (ALT).
- The IPE supports only Meridian IVD M2000 and M3000 series terminals.

Interactions

This feature uses the existing access methods at the LTP level of the MAP display to post, make busy, and return lines to service off of the IPE.

Datafill

XPE Lines Maintenance - Phase I does not affect data schema tables or office parameters.

Service Orders

XPE Lines Maintenance - Phase I does not affect SERVORD.

Operational Measurements

XPE Lines Maintenance - Phase I does not affect Operational Measurements.

Logs

XPE Lines Maintenance - Phase I does not affect logs.

User interface

XPE Lines Maintenance - Phase I requires no activation or deactivation by the end user.

The following directories are changed for this feature to include the new commands:

- LNLTPDIR
- LNDATADIR
- LNMANDIR

The commands that were changed for this feature are described in the ["Description" \(page 589\)](#) section.

Billing

XPE Lines Maintenance - Phase I does not affect billing.

AM0041 - IPE PM Table Control/Call Processing

Description

This feature verifies existing call processing and upgrades the software to allow Integrated Voice and Data (IVD) digital lines from Intelligent Peripheral Equipment (IPE) to perform basic line-to-line call processing. It also provides the necessary software within the Central Controller (CC) to support the new IPE node type for call processing purposes. A new inventory table, IEPINV, allows datafilling of the IPE into the Meridian SL-100.

This feature ensures that IVD digital lines on the IPE share the same call processing and feature codes as the equivalent agent types that the Digital Line Module (DLM) supports. The supported terminal types are as follows:

- M2009
- M2112
- M2018
- Meridian Asynchronous Data Option (MADO)
- M2317
- M3000
- M2008
- M2616
- M2016S
- M2216A
- M2216B
- Meridian Communications Adaptor (MCA)

An IPE is a single-unit, single-shelf module. As many as four IPEs can be stacked into one Intelligent Peripheral Equipment Column (IPEC). The four IPEs in an IPEC are numbered 0 through 3 from bottom to top. As with Line Concentrating Modules (LCMs) and Digital Line Modules (DLMs), site names identify IPEs.

The SITE table controls the assignment of site names. The site name, a frame number (0 to 99), and a shelf number (0 to 3) further identifies the IPE. The site name, combined with the frame and shelf number are the key to the new inventory table, IPEINV. An IPE has as many as six DS30A C-side links to its controlling Line Trunk Controller (LTC) or Line Group Controller (LGC). C-side links are numbered from 0 to 5. At the associated LTC or LGC, the links are numbered from 0 to 19.

All characteristics of an IPE are assigned through table IPEINV. For each frame of an IPE, this table assigns the following data:

- the site where the IPE is located
- the frame type that the peripheral module is mounted on
- the floor, row on floor, frame position in the row, and shelf number of the module
- the shelf position associated within an IPE frame
- the issue name of the peripheral module software
- the peripheral module type and number to which the IPE is attached
- the assignment of IPE C-side peripheral module links

Hardware requirements

A Meridian SL-100 IPE peripheral and Meridian M2000 and M3000 series IVD sets are required.

Limitations and restrictions

Only the Meridian M2000 and M3000 IVD sets are supported on the IPE peripheral. Only the Meridian SL-100 feature set is supported for this phase. Because the IPE is a single-unit peripheral, the takeover process does not apply to this peripheral type.

Interactions

This feature interacts with IPE lines and peripheral maintenance functions.

Datafill

"IPEINV fields" (page 594) lists the fields in table IPEINV.

IPEINV fields

Field name	Valid values	Description
IPENM	Alphanumeric	The IPE name. This field is comprised of subfields SITE, FRAME, and SHELF, and is the key into the table.
SITE	Alphanumeric	The site name assigned to the IPE location. If left blank, the default value is HOST.
FRAME	0 through 127	The physical frame number of the IPE.
SHELF	0 through 3	The IPE shelf number, numbered from the bottom. This number, combined with the entry in the FRAME field, produces a unique designation.
FRTYPE	IPEC	The frame type that the peripheral module equipment is mounted on. Enter IPEC for Intelligent Peripheral Equipment Column.
SHPOS	0 through 77	The shelf position that the peripheral module equipment is mounted on. The value indicates the number of inches above the floor.
FLOOR	0 through 99	The floor on which the peripheral module frame is located.
ROW	A-H, J-N, P-Z, AA-HH, JJ-NN, PP-ZZ	The row on the floor where the peripheral module frame is located.
FRPOS	0 through 99	The frame position in the row of the peripheral module equipment frame.
EQPEC	8D37AA	The equipment Product Engineering Code (PEC) of the peripheral module.
LOAD	Alphanumeric	The name given to the issue of the peripheral module software.
CSPMNO	Alphanumeric	The C-side peripheral module number. This field is comprised of subfields PMTYPE and PMNO.
PMTYPE	LGC, LTC	The peripheral module type to which this IPE is attached.
PMNO	0 through 63	The peripheral module number to which this IPE is attached.
IPEINFO	Alphanumeric	The intelligent peripheral equipment information. This field is comprised of subfields IPESELECTOR and LKINFO.
IPESELECTOR	HIPE	The IPE selector. HIPE defines this IPE as a host.

Field name	Valid values	Description
RGEQUIP	Y or N	This field specifies whether the unit is ringing generator equipped. Must be set to "N".
LKINFO	Vector 2 to 6 of 0 through 19 or \$	The C-side link information for IPESELECTOR = HIPE. The LGC or LTC links (0 through 19) to which a host IPE is assigned. At least two links must be defined. The first one is a message link. Two to six entries can be made. All links entered must be of type DS30A. Even-numbered links are usually assigned to unit 0 of the C-side peripheral and odd-numbered links to unit 1. Enter \$ to end data entry.

Datafill this table in the same sequence as tables LCMINV and DLMINV. Tables LTCINV and LTCPSINV must be datafilled before table IPEINV. Table SITE can optionally be datafilled before table IPEINV. The minimum size of this table is 0 tuples; the maximum size is 255 tuples.

"Sample data tuple" (page 595) shows a sample data tuple.

Sample data tuple

IPENM		FRTYPE		SHPOS	Floor	Row	FRPOS
Site	Frame	Shelf					
Host	04	0	IPEC	4	2	B	16
EQPEC		CSPMNO		IPEINFO			
	Load	PMTYPE	PMNO	IPESEL	RGEQUIP	LKINFO	
8D37AA	IPE31AA	LTC	1	HIPE	N	3 4 5 6 7 8	\$

G100242

Service Orders

IPE PM Table Control/Call Processing does not affect SERVORD.

Operational Measurements

IPE PM Table Control/Call Processing does not affect Operational Measurements.

Logs

IPE PM Table Control/Call Processing does not affect logs.

User interface

IPE PM Table Control/Call Processing does not change the user interface.

Billing

IPE PM Table Control/Call Processing does not affect billing.

AM0042 - XPEC Monitor**Description**

This feature enhances the existing Extended Peripheral Equipment Controller (XPEC) monitor to facilitate software debugging. It also incorporates the pROBE-68K System Debugger/Analyzer (pROBE) into the XPEC software as an optional component. The user interface allows the user to switch easily between the XPEC Monitor and pROBE to debug the XPEC software.

The XPEC supports a maintenance port that interfaces to a maintenance terminal through a faceplate connector. The monitor allows Nortel Networks personnel to control the maintenance port and execute commands given by the user. The user interface is an ASCII terminal connected to the nine-pin maintenance port interface on the XPEC. The XPEC Monitor is an internal debugging tool that is intended for Nortel Networks personnel use only.

pROBE-68K is a system debugger and analyzer from Software Components Group (SCG), Inc. Along with pSOS-68K, pROBE is resident on the XPEC. It uses knowledge of the operating system software to observe, control, and simulate system execution. pROBE remains in stand-by mode, until the user activates it.

Hardware requirements

This feature runs on the XPEC card (NT7D07AC). A maintenance port on the XPEC is used to interface to a maintenance terminal through a faceplate connector for monitoring the XPEC functions. An ASCII terminal is necessary to access the XPEC monitor. The dual UART (DUART) chip on the XPEC provides the interface port to the maintenance terminal. An ASCII terminal is required to use the XPEC monitor.

Limitations and restrictions

The following limitations and restrictions apply to XPEC Monitor:

- The XPEC monitor should be used by Nortel Networks personnel only.
- pROBE is an optional component in this feature and can be excluded or included in an XPEC load as needed.
- The incorporation of XPEC monitor commands into PMDEBUG is not provided with this feature.

Interactions

The XPEC Monitor commands and the pROBE commands provide various functions for monitoring and debugging the XPEC software. The monitor commands interact with different XPEC processes and their controlling mechanisms.



CAUTION

Using these commands without caution can disrupt the normal XPEC operation.

Datafill

XPEC Monitor does not affect data schema tables or office parameters.

Service Orders

XPEC Monitor does not affect SERVORD.

Operational Measurements

XPEC Monitor does not affect Operational Measurements.

Logs

XPEC Monitor does not affect logs.

User interface

Two distinct sets of monitoring and debugging commands are available through the maintenance port on the XPEC. One set of commands is an application-oriented debugging tool developed by Nortel Networks for internal use only. The other optional set consists of the pROBE-68K commands that were developed by SCG, Inc.

The monitor operates in one of two modes. After system initialization, the monitor is in the monitor mode. Only XPEC monitor commands are available in this mode. If pROBE-68K is present in the XPEC load, press the BREAK key to access pROBE mode. If pROBE is not built into the load, pressing the BREAK is treated simply as an error key input. To return to the monitor mode, clear any breakpoints and enter GO.

The prompt characters indicate the current mode. If the monitor is in monitor mode, the prompt appears as follows:

```
Vmmdd>
```

In this prompt, mmdd represents the release month and day. If the monitor is in pROBE mode, the prompt appears as follows:

```
pROBE>
```

XPEC monitor commands

The following are the commands that were modified for this release:

- Dump Memory (d) dumps XPEC memory, starting at a specified address with a specified length.
- Message (m) constructs a message destined to a specific queue in a test buffer.
- Help (h) displays a list of available commands and their command syntaxes.

The following are the commands that are new for this release:

- Dump IVD Status Record (di) dumps the IVD status record, starting at a specified IVD channel number.
- Display Message Monitor (dmon) displays the currently active message monitor settings.
- Dump Peripheral Status Record (dp) dumps the peripheral status record starting at a specified card.
- Dump R72 Control Memory (r72) dumps the R72 (TSIC chip) control memory for the specified DS30A link or line card.
- Remove Message Monitor (rmon) removes active messages under monitoring.
- Start Message Monitor (smon) monitors messages based on selected destination task ID, source task ID, line card number, and channel number.
- Write A31 Status Clear (wc) clears the buffer count and maximum messages used in the Write A31 Status command.
- XPEC Diagnostic Test (x) conduct basic XPEC diagnostic tests to detect any hardware abnormalities.

pROBE-68K commands

The following are the pROBE commands that are applicable in the Meridian SL-100 environment:

- Display Memory (DM)
- Patch Memory (PM)
- Fill Memory (FM)
- Search Memory (SM)
- Search Memory (SM)
- Move Memory (MM)
- Compare Memory (CM)

- Disassemble Memory (DM)
- Assemble into Memory (AS)
- Display Registers (DR)
- Display Offset Registers (DF)
- Patch Registers (PR)
- Define Breaks (DB)
- List Breaks (LB)
- Clear Breaks (CB)
- Resume Execution (GO)
- Go Non-Stop (GN)
- Step (ST)
- Go Start pSOS (GS)
- Go Until pSOSExit (GX)
- Query Process (QP)
- Query Exchange (QX)
- Query Memory (QM)
- Query Time (QT)
- Query Configuration Table (QC)
- Enable Profile (EP)
- List Profile Data (LP)
- Issue pSOS System Call (SC)
- Evaluate Constant (FC)
- Set pROBE Flag (FL)
- Help (HE)

Billing

XPEC Monitor does not affect billing.

AM0043 - XPEC Message Translation

Description

This feature translates messages from DMS-X format to an internal Extended Peripheral Equipment Controller (XPEC) format, or from the internal XPEC format to DMS-X format, and routes these messages to an appropriate software process. The purpose of this feature is to

- manage communications between the XMS-based Peripheral Module (XPM) and Extended Peripheral Equipment (XPE) from the XPEC C-side
- translate messages destined for the XPM or Central Controller (CC) into DMS-X format over a DS30A link using DMS-X protocol
- receive a reset message from the XPM and reset the XPE when that type of message is received
- receive call processing and maintenance messages from the XPM and route the request to the appropriate process
- receive set messages from the XPM and pass them down to the line cards

This feature is required to provide the XPEC with messaging capability with XPMs through a DS30A link, using the DMS-X protocol. Messages over the DS30A link adhere to the DMS-X protocol. DMS-X is a byte-oriented, half duplex protocol. Handshaking is performed between communicating transceivers. The DMS-X format has the following structure:

- two start-of-message bytes
- packet data
- two Cyclic Redundancy Check (CRC) bytes
- two end-of-message bytes

The packet data encompasses destination IDs, source task IDs, the peripheral processor number, destination terminal ID, and data bytes that contain the actual message.

Set messages are translated for the Extended Digital Line Card (XDLC) and Extended Message Waiting Line Card (XMLC) for 500 and 2500 sets. If there is a transmission error, the XPEC S71 chip retries the transmission. If the second transmission fails, it discards the buffer and pegs an error counter. No timeout mechanism exists when a message is sent to the XP from the XPE. If the link fails when a message is sent, or needs to be sent, no action is taken.

Hardware requirements

This feature requires the following components:

- Extended Peripheral Equipment Controller

- Extended Digital Line Card
- Peripheral Equipment Power Supply (PEPS)
- Universal Equipment Module (UEM)
- UEM Top Cap
- UEM Pedestal
- A/C Ringing Generator (ACRG)
- XPE Backplane (XPE B/P)

Limitations and restrictions

This feature does not provide diagnostics.

Interactions

XPEC Message Translation has no functionality interactions.

Datafill

XPEC Message Translation does not affect data schema tables or office parameters.

Service Orders

XPEC Message Translation does not affect SERVORD.

Operational Measurements

XPEC Message Translation does not affect Operational Measurements.

Logs

XPEC Message Translation does not affect logs.

User interface

XPEC Message Translation does not change the user interface.

Billing

XPEC Message Translation does not affect billing.

AM0044 - XPEC Maintenance - Phase I**Description**

The Extended Peripheral Equipment Controller (XPEC) Maintenance (Phase I) feature provides the following three functions within the Intelligent Peripheral Equipment (IPE) in the Meridian SL-100 environment:

System initialization

Performs operating system and applications software initialization.

- This function defines the operating system configuration table, provides procedures for handling processor exceptions, and invokes the operating system startup procedure.
- This function activates the applications software initialization processes, creates interprocess communication paths, and initializes the contents of the data structures.

Routine maintenance

Responds to and acts upon busy, return-to-service (RTS), test, link status, configuration, and query messages from the Central Control.

- Busy messages are used to logically disable equipment so that it no longer participates in call processing. In the IPE, busy messages refer to one of three types of equipment: the XPEC, line cards, or terminals.
- RTS messages are used to logically enable equipment so that it can participate in call processing. In the IPE, RTS messages refer to one of three types of equipment: the XPEC, line cards, or terminals.
- Test messages are used to isolate faults in the IPE. In the IPE, two comprehensive tests are available: the in-service test and the out-of-service test.
- Link status messages are used to control the operation of the C-side DS-30A links. In the IPE, the links can be either enabled or disabled.
- Configuration messages are used to set up the operational parameters of equipment. In the IPE, configuration messages refer to either line cards or terminals.
- Query messages are used to determine the configuration of equipment. In the IPE, query messages return the load name, the line card configuration, and various maintenance statistics.

Background maintenance

Handles equipment auditing, hexadecimal display control, watchdog timer setting, and phase lock loop switching.

- Equipment is audited periodically in order to detect unexpected changes in operational status. This function audits each line card and terminal at least once every 15 seconds.
- The EXPEC faceplate has a two-digit hexadecimal display. This function handles all output directed to this display from other processes.
- The ability to recover from catastrophic software failures is very important. The XPEC has a watchdog timer circuit that resets the board automatically if it is not cleared periodically by the applications

software. This function clears the watchdog timer on a regular basis. If the watchdog times out, a catastrophic software failure is assumed and the XPEC is reset.

- The IPE must be synchronized to the C-side communication links in order to communicate over them. The XPEC has a phase lock loop circuit that accomplishes this synchronization. This function attempts to resynchronize the XPEC if the phase lock loop loses sync with the C-side links.

Hardware requirements

XPEC Maintenance - Phase I requires the Meridian SL-100 version of XPEC firmware.

XPEC Maintenance - Phase I requires the following components:

- Extended Peripheral Equipment Controller (XPEC), NT7D07AC
- Extended Digital Line Card (XDLC), NT8D02AA
- Peripheral Equipment Power Supply (PEPS), NT8D06AA
- Universal Equipment Module (UEM), NT8D25AA

Limitations and restrictions

XPEC Maintenance - Phase I currently only supports digital line cards and digital terminals.

Interactions

The following features interact with XPEC Maintenance - Phase I:

- XPI PM Maintenance (Phase 1)
- XPI PM Maintenance (Phase 2)
- XPM Support of IPEs
- XPEC Message Translation
- XPEC Call Processing

Datafill

XPEC Maintenance - Phase I does not affect data schema tables or office parameters.

Service Orders

XPEC Maintenance - Phase I does not affect SERVORD.

Operational Measurements

XPEC Maintenance - Phase I does not affect Operational Measurements.

Logs

XPEC Maintenance - Phase I does not affect logs.

User interface

XPEC Maintenance - Phase I outputs to the hexadecimal display.

Billing

XPEC Maintenance - Phase I does not affect billing.

AM0103 - XPEC Firmware**Description**

This feature covers the message support for Return-To-Service (RTS) and download functions required for the XPEC card. The XPEC card is used on the IPE shelf, and it serves as the interface between the DS-30 line cards on the shelf and the DS-30A links on the Meridian SL-100 LGC. The XPEC is able to serve up to 16 DS-30X line cards and from two to six DS-30A network loops.

The following functions are provided by the XPEC II firmware:

- Power up initialization - upon power up the faceplate LED is turned on indicating XPEC is out of service and all decimal points are turned on. After power up, the XPEC attempts to synchronize with the network clock. The characters "CF" appear on the faceplate display until synchronization is obtained and then "00" is displayed.
- Message support for IPE Return-To-Service - the first step in the RTS sequence is to reset the XPEC processor by sending it a RESET message and thus setting the XPEC into the WAI state. The XPEC awaits a STATUS message. Once the message is received a diagnostic test can be requested by sending a TEST message to the XPEC. The final step is to initialize the system by sending a RUN message to the XPEC. Once the message is acknowledged, program execution is turned over to the download software.
- Message support for IPE Peripheral software download - the first step in the RTS sequence is to reset the XPEC processor by sending it a RESET message and thus setting the XPEC into the WAI state. The XPEC awaits a STATUS message. Once the message is received a diagnostic test can be requested by sending a TEST message to the XPEC. The next step is to load the XPEC by sending a sequence of LOAD messages. The response to this message is either an acknowledgement or an error. After loading is complete, the XPM sends a LOAD_CHK message. The final step is to initialize the system by sending a RUN message to the XPEC, and it responds.

Hardware requirements

XPEC Firmware runs on the XPEC card.

Limitations and restrictions

XPEC Firmware has no limitations or restrictions.

Interactions

XPEC Firmware has no functionality interactions.

Datafill

XPEC Firmware does not affect data schema tables or office parameters.

Service Orders

XPEC Firmware does not affect SERVORD.

Operational Measurements

XPEC Firmware does not affect Operational Measurements.

Logs

XPEC Firmware does not affect logs.

User interface

XPEC Firmware does not change the user interface.

Billing

XPEC Firmware does not affect billing.

AM0117 - M2006 Single-line Digital Set Support**Description**

The M2006 single-line digital set is one of the Meridian Integrated Voice and Data (IVD) sets. The M2006 set provides the following options:

- a single DN (Directory Number) set
- a six-key set with functionality similar to that of the M2008 set
- full support of all existing features, except those with display capabilities

This feature provides the necessary software to introduce the new terminal type to the Extended Multiprocessor System (XMS)-based Multiprocessor System (XPM) and to make changes to decode and encode the new messages necessary to support the M2006 set. This feature also provides modified facility maintenance diagnostics for testing the M2006 set as other sets are tested.

Hardware requirements

The Meridian IVD sets are supported only on the 7X49 Digital Line Module (DLM) with 8X47BA Enhanced Digital Port Cards (EDPCs). The EDPC is a 16-port line card, with 16 voice and 16 data channels. There are two channels per port. The even-numbered channels (0-30) are voice channels and the odd-numbered channels (1-31) are data channels.

Limitations and restrictions

The following limitations and restrictions apply to M2006 Single-line Digital Set Support:

- When assigning Line Equipment Numbers (LENs) to a DLM, users can enter only 0 to 9 in the drawer or line subgroup position of the LEN. For example, if a user wants to assign an IVD set to LEN 2 0 1 10, the third position, which is the 1 in this case, is the drawer number of the LEN.
- The set must have a Primary Directory Number (PDN) datafilled before datafilling anything else for the set
- The M2006 does not support any display option

Interactions

M2006 Single-line Digital Set Support has no functionality interactions.

Datafill

M2006 Single-line Digital Set Support does not affect data schema tables or office parameters.

Service Orders

Service Orders are updated to include the Meridian M2006 IVD set. This set is treated like the other IVD sets currently in the Service Order. Prompts follow those that are already established for other IVD sets

Error Message

If a user adds a secondary DN to an IVD set and specifies M2006 as the set, the following error message is displayed:

Only a single DN is allowed for the M2006 set.

MDPA

When adding Directory Numbers or features to the M2006 set that has either an ADATA1 datafilled as the mate line, key 6 of the set is not available for assignment. Key 6 becomes dedicated to local functions when the set has the MPDA datafilled in the mate line position.

Note: The LEN of the mate data line is the same as the LEN of the voice set plus one.

Operational Measurements

M2006 does not affect Operational Measurements.

Logs

M2006 Single-line Digital Set Support does not affect logs.

User interface

M2006 Single-line Digital Set Support does not change the user interface.

Billing

M2006 Single-line Digital Set Support does not affect billing.

AM0125 - IPE PM Maintenance - Phase III**Description**

This feature is a continuation of IPE PM Maintenance - Phase I and IPE PM Maintenance - Phase II. It provides the Central Control (CC) software necessary to provide the following functionality:

- complete/expand/correct any IPE MAP level commands required by Intelligent Peripheral Equipment (IPE) CC maintenance
- support Extended Message Waiting Line Cards (XMLC) and Extended Analog Line Cards (XALC) on an IPE shelf
- support fault detection and handling for the IPE and its associated line interface cards (Extended Digital Line Card, XMLC, and XALC)
- support a ringing generator on an IPE shelf and update the IPE MAP level to provide information regarding the ringing generator
- support a second messaging link to an IPE peripheral

Without this feature, XMLCs and XALCs are not supported on an IPE. Also, no diagnostics are invoked for an IPE during the RTS sequence or prior to software downloading if this feature is not present. The QUERYPM command at the IPE MAP level is enhanced to provide more information to the technician. Finally, no system-invoked diagnostics or maintenance actions are invoked in response to unsolicited messages received from an IPE. Only PM180 logs are produced.

Hardware requirements

The Meridian SL-100 version of the XPEC firmware and XPEC Self Test and Diagnostic Firmware is required.

IPE peripherals are required consisting of at least the following hardware:

- Extended Peripheral Equipment Controller (XPEC)
- Extended Digital Line Card (XDLC)

- Extended Analog Line Card (XALC)
- PE Power Supply PCBA, DC version
- Extended Message Waiting Line Card
- DC Ringing Generator
- Universal Equipment Module
- UEM Top Cap
- UEM Pedestal

Limitations and restrictions

Limited capability of the System Monitor Card for an IPE in the Meridian SL-100 environment is provided, therefore very limited diagnostic and status information is currently provided for IPE ringing generators.

Interactions

IPE PM Maintenance - Phase III requires XPEC Maintenance Phase II and XPEC Self Test and Diagnostics Firmware in order to function correctly.

Datafill

IPE PM Maintenance - Phase III does not affect data schema tables or office parameters.

Service Orders

IPE PM Maintenance - Phase III does not affect SERVORD.

Operational Measurements

IPE PM Maintenance - Phase III does not affect Operational Measurements.

Logs

IPE PM Maintenance - Phase III does not affect logs.

User interface

IPE PM Maintenance - Phase III provides enhancements to the RTS, LOADPM, and QUERYPM commands at the IPE MAP level.

Billing

IPE PM Maintenance - Phase III does not affect billing.

AM0126 - IPE Lines Maintenance - Phase II

Description

The use of Intelligent Peripheral Equipment (IPE) modules in Meridian SL-100 installations require modifications to facilities maintenance, which includes maintenance and diagnostics for line circuits. This feature completes the second phase of development of maintenance software for digital and analog line circuits served by the IPE.

This feature provides the following functions for line circuits:

- Diagnostic capability for all Meridian IVD terminals and 500/2500 type station sets - the diagnostic capabilities are invoked using the DIAG (diagnose) command at the Line Test Position (LTP) level of the Maintenance and Administration Position (MAP).
- Maintenance functions on Meridian sets and 500/2500 type station sets - in addition to diagnostic tests, all facility maintenance actions on Meridian sets and analog type sets can be invoked manually through the use of the following levels of the MAP: Line Test Position (LTP), Line Test Position Manual (LTPMAN), Line Test Position Line Test Access (LTPLTA), and Line Test Position Data (LTPDATA).
- Log reports generated by IPE facilities maintenance.
- Operational Measurements (OMs) effected by the IPE lines.

IPE MAP level enhancements

The following are IPE MAP level enhancements from this feature:

- Return-to-service (RTS) Command Changes - the RTS command is enhanced to provide diagnostic capabilities during the RTS of an IPE.
- QUERYPM Command Changes - the output for the basic QUERYPM command issued with no parameters is altered to display the interface line card types datafilled in the lines inventory (LNINV) table for the IPE being queried, as well as the actual card types resident in the IPE shelf. The QUERYPM CNTRS command is changed to allow the user to optionally specify which link to query for DMSX counter information. A new option, INVEN (inventory), is added to the QUERYPM command that allows the CC to collect and report inventory information such as firmware version, card identification information, and card type for interface cards and the XPEC card residing in an IPE shelf.
- LOADPM Command Changes - the LOADPM command is enhanced to provide diagnostic capability during the execution of the LOADPM command prior to the downloading of software to an IPE.

IPE fault detection and handling

With the enhancements provided by this feature, IPE CC maintenance software now recognizes and responds to the following unsolicited messages from an IPE.

- "WHO-AM-I" - this message is passed to the CC from an XPM that receives a WHO-AM-I (WAI) message from an IPE. This message is sent when an IPE requires restarting or reloading.
- "SOFTW_ERROR" - this message is sent to the CC from an IPE when software residing in the IPE detects an error. This functionality is enhanced to allow IPE CC maintenance to react to the message based on its severity.
- "TRAP" - this message is sent to the CC from an IPE when hardware-detected errors are detected. They are handled in a manner similar to serious software errors.
- "BABBLING_LINE" - this message is sent to the CC from an IPE when a babbling line is detected. The message is passed to facilities maintenance procedures for processing.
- "SELF_TEST_FAILED" - this message is sent to the CC from an IPE when the IPE fails a self test. If an interface card is removed from its slot, this message is generated. The severity of the test failure determines whether the IPE is placed in ISTb or SysB state by IPE CC maintenance.
- "ICMO" - this message is generated by the XPM based on information received from an IPE regarding incoming message overload.

XALC/XMLC maintenance

XMLC/XACL supports 500/2500 analog sets, therefore, IPE CC maintenance software is changed to support the new card type. These changes involve changing CC to IPE messaging to accept an XMLC/XALC as a valid IPE interface card type and detecting mismatch between CC datafill and IPE hardware. Both the RTS PM and RTS CARD commands are enhanced so that if the CC sends an IPE a card configuration message with the wrong interface card type, the IPE reports the problem, and the CC responds by placing those cards where the mismatch occurred in SysB state.

Ringling generator support

The QUERYPM command at the IPE MAP level is altered slightly to allow a technician to determine the status of the ringing generator in an InSv IPE shelf.

Dual message link support

With this feature, the CC is able to support messaging to an IPE on either of two message links. The links to an IPE are defined in table IPEINV with the first two datafilled for a given IPE designated as the message links.

Hardware requirements

IPE Lines Maintenance - Phase II requires Meridian IVD sets connected the Extended Digital Line Card and 500/2500 analog sets connected to the Extended Message Waiting Line Card or Extended Analog Line Card.

An XPE with the Meridian SL-100 version of XPEC firmware is required.

IPE Lines Maintenance - Phase II requires the following minimum level of hardware:

- Extended Peripheral Equipment Controller (XPEC)
- Extended Digital Line Card (XDLC)
- Extended Message Waiting Line Card (XMLC)
- Extended Analog Line Card (XALC)
- PE Power Supply PCBA, DC version (PEPS)
- DC Ringing Generator (DCRG)
- Universal Equipment Module (UEM)
- UEM Top Cap (TOP CAP)
- UEM Pedestal (PEDESTAL)

Limitations and restrictions

This feature only supports the following terminals connected to the XDLC and XMLC:

- Meridian M2000 and M3000 digital terminals
- analog 500 and 2500 station sets

There is no relay or Metallic Test access on XDLC, XMLC, and XALC. The diagnostic is very limited. There are no subscriber loop tests.

This feature only supports the POST, BUSY, DIAG, CKTLOC, CKTTST, and RTS commands for the XDLC line card.

This feature only supports the POST, BUSY, CKTLOC, and RTS commands for the XALC and XMLC line cards.

Interactions

Without this feature, a full set of facilities maintenance actions cannot be performed on digital or analog line circuits connected to the IPE. Only limited commands can be performed on IVD digit line circuits (that is, Post, Busy, and Return-to-service).

Datafill

IPE Lines Maintenance - Phase II does not affect data schema tables or office parameters.

Service Orders

IPE Lines Maintenance - Phase II does not affect SERVORD.

Operational Measurements

The IPE Lines Maintenance - Phase II feature does not add new Operational Measurements to the system. The existing peg count PMCCTDG (Circuit diagnostics run) expands to peg when the diagnostic is run on a line off an IPE. The existing peg count PMCCTFL (Circuit diagnostics fails) expands to peg when a fault occurs after diagnostic is run on a line off an IPE.

Logs

IPE Lines Maintenance - Phase II does not require any new logs. Existing logs are used. The CARD TYPE appearing in LINE101 log are expanded to include the new card codes NT8D02AA, NT8D09AB, and NT8D03AB. Other than the card type changes, the format of the logs is the same.

User interface

IPE Lines Maintenance - Phase II includes changes to the LTP, LTPMAN, LTPLTP, and LTPDATA levels of the MAP. Refer to ["Description" \(page 609\)](#) for more information about the changes to the user interface.

Billing

IPE Lines Maintenance - Phase II does not affect billing.

AM0127 - IPE Link Diagnostics**Description**

This feature enhances the existing Central Controller (CC) and XMS-based peripheral module (XPM) link diagnostic software to allow for link looparounds/testing to be performed on DS-30A links connected to Intelligent Peripheral Equipment (IPE). XPM Bit Error Rate Testing (XBERT) for these links is also supported.

This feature concentrates on diagnosing problems in the hardware interface between an XPM and an IPE. There are between two and six DS-30A links between an XPM and an IPE. Two of these links can be used for messaging and speech, and the remaining links are used for speech only. All messaging between an XPM and an IPE takes place on the two messaging links. If both of these links go down, the IPE can no longer perform any call processing. Therefore, errors on these links are a high priority and the technician must be informed as quickly as possible. On the other hand, if one or more of the speech-only links must be taken

out-of-service, call processing can continue on the IPE. However, these links should be corrected as soon as possible to avoid possible degradation of performance of the IPE due to lack of available speech channels.

This feature can be broken down to the following areas:

- testing of links using the TST LINK command when the central side (C-side) XPM is posted
- periodic auditing of the links
- testing of the links using XBERT

TST LINK command

In order to use the TST LINK command to test a link to an IPE, the user must first bring the IPE in-service and then post the C-side XPM for that IPE on a Maintenance Administrative Position (MAP). After the XPM is posted, perform a TRNSL P to get the number of the link to be tested. Issue the "TEST LINK x" (where "x" is the number of the link to be tested).

Upon issuing this command the following tests are performed:

- link interface hardware presence in the XPM
- PCM loop-around (all links)

If one of the tests should fail on a link, an error message is displayed on the MAP, a log is generated, and no further action is taken.

Link audits

Tests on all P-side links of an XPM are run periodically. These tests include:

- link interface hardware presence in the XPM
- PCM loop-around

If one of these tests fail, the link is put in the system busy (SysB) state. If the failing link is the only in-service messaging link to the IPE, the IPE is marked C-side busy (Cbsy), otherwise the IPE enters an in-service-trouble (ISTB) state with reason "C-side Link Out-of-service". One log each is generated when a link diagnostic fails, when a link is marked SysB, and when an IPE is marked Cbsy.

XBERT

XBERT is a diagnostic tool used to detect bit marginal XPM, Line Concentrating Module (LCM), and Digital Line Module (DLM) components responsible for inducing bit errors in the transmission of data. This feature enhances XBERT so that IPE components can also be tested. This is done by the creation of a new test called XBERTIPE. No other XBERT tests are affected by this feature.

The XBERTIPE test tries to establish the test path (loop-around). If this loop-around attempt is unsuccessful, an appropriate error message is displayed and the test is aborted. If the IPE loop-around is successfully allocated, the test is performed by injecting a tone at the 6X69 card and checking at the receiving end to see if the bits are the same as the ones sent.

Hardware requirements

IPE Link Diagnostics requires the following hardware:

- IPE peripherals
- the Meridian SL-100 version of the XPEC firmware, and XPEC Self Test and Diagnostics
- in order to use XBERT on an XPM, it must be equipped with a NT6X69AB message card, or a NT6X69AA message card, and a NT6X79AA tone card

Limitations and restrictions

The following limitations and restrictions apply to IPE Link Diagnostics:

- Without this feature, problems with DS-30A links between an XPM and an IPE cannot be detected.
- This feature does not provide the capability for taking appropriate action when a link to an IPE is taken out-of-service due to a diagnostic failure. This is handled as part of the IPE PM Maintenance - Phase III feature.

Interactions

IPE Link Diagnostics interacts with the following features:

- IPE PM Maintenance - Phase III
- XPEC Message Interface - Phase II
- XPEC Call Processing - Phase II

Datafill

IPE Link Diagnostics does not affect data schema tables or office parameters.

Service Orders

IPE Link Diagnostics does not affect SERVORD.

Operational Measurements

IPE Link Diagnostics does not affect Operational Measurements.

Logs

The following is a new instance for when a PM181 log can be generated. This log is generated as a result of the IPE detecting a fault on one of its links:

```
PM181 JUN14 19:12:23 7443 INFO IPE HOST 00 3IPE detected
fault on LINK 0
```

User interface

IPE Link Diagnostics creates a new test called XBERTIPE in the XBERT level of the XPM monitor.

Billing

IPE Link Diagnostics does not affect billing.

AM0128 - Analog Lines on Intelligent Peripheral Equipment (IPE)**Description**

This feature extends IPE support from Integrated Voice and Data (IVD) digital sets to 500/2500 analog sets by providing the following capabilities:

- allowing datafill on analog lines from an IPE in tables LNINV and IBNLINES
- allowing Service Orders and line query commands on analog lines off of an IPE
- enhancing the existing Central Control (CC) call processing to support analog lines off of an IPE
- verifying the proper functioning of existing Meridian SL-100 features for 500/2500 analog sets off an IPE

Table control

Tables LNINV and IBNLINES now support the datafilling of LENS associated with analog lines off of an IPE. Table LNINV supports two new card codes for the IPE: 8D03AB and 8D09AB. Card code 8D03AB corresponds to the Extended Analog Line Card (XALC) that supports 500 and 2500 sets without message waiting lamps. Card code 8D09AB corresponds to the Extended Message Waiting Line Card (XMLC). The IPE must be equipped with an XMLC for 500 and 2500 sets to support message waiting lamps. Table IBNLINES now supports LENS that are associated with analog lines from an IPE. Checks now ensure that the IPE LEN that is added is correctly datafilled in table LNINV with card code 8D03AB or 8D09AB.

Service Orders

This feature ensures that all existing Service Orders and line query commands function correctly when used in conjunction with analog lines attached to an IPE. Service Orders provide a rapid means of performing

operations such as assigning and unassigning Directory Numbers (DN) and line options and features. Line query commands provide information about subscriber lines.

Call processing

Meridian SL-100 call processing has been extended to analog lines from an IPE. Call processing involves establishing a call between two telephony agents. This process requires the successful completion of the following:

- detection of a line origination
- digit collection
- digit translation and call routing
- establishing a speech path between originator and terminator
- applying ringing to the terminator and audible ringback tone to the originator
- detection of an answer
- detection of a disconnect by either originator or terminator

This feature ensures that these call processing steps are properly performed when one or both of the telephony agents is an IPE analog line.

Feature verification

This feature verifies the Meridian SL-100 features when assigned to 500 and 2500 sets residing on the IPE. The verified features include a set of station and system features. The following Meridian SL-100 features are verified:

- Automatic Message Accounting Test (AMATEST)
- AT&T Line Study (SDY)
- Authorization Code Conditional Last
- Authorization Code Unconditional First
- Automatic Call Distribution (ACD)
- Automatic Line (AUL)
- Blind Transfer Recall
- Calling Number Blocking
- Call Back Queuing
- Call Forwarding (CFX)
- Call Hold (CHD)
- Call Pickup (CPU)
- Call Transfer (CXR)

- Call Transfer Warning (CTW)
- Call Waiting (CWT)
- Call Waiting Exempt (CWX)
- Call Waiting Intragroup (CWI)
- Call Waiting Originate (CWO)
- Call Waiting Ringback (CWR)
- Calling Line Identification (CLI)
- Call Line Identification with Flash (CLF)
- Cancel Call Waiting (CCW)
- Carrier Toll Denied (CTD)
- Common Control Switching Arrangement (CCSA)
- Custom IBN (Integrated Business Network) Disconnect Treatment (CDT)
- Customer Data Change (CDC)
- Cutoff on Disconnect (COD)
- Denied Incoming (DIN)
- Denied Originating Service (DOR)
- Denied Terminating Service (DTM)
- Dial Call Waiting (CWD)
- Directed Call Park (DCPK)
- Directed Call Pickup Barge-in (DCBI)
- Directed Call Pickup Barge-in Exempt (DCPX)
- Distinctive Ringing (DRING)
- DN Network Attribute Suppression (SUPPRESS)
- Do Not Disturb (DND)
- Essential Line Service (ELN)
- Executive Busy Override (EBO)
- Executive Busy Override Exempted (EBX)
- Executive Message Waiting (EMW)
- Expensive Route Warning Tone (ERWT)
- Feature Group (FTRGRP)
- Fire Reporting System, Originating (FRO)
- Flexible Station Controlled Conference (CNF)

- Free Number Terminating (FNT)
- Group Intercom (GIC)
- Hunting
- Directory Number Hunting (DNH)
- Multi-line Hunting (MLH)
- Distributed Line Hunting (DLH)
- Line Hunt Overflow to a Route (LOR)
- Line Hunt Overflow to a DN (LOD)
- Bridged Night Number (BNN)
- Preferential Hunt (PRH)
- Ignore Flash (FIG)
- Last Number Redial (LNR)
- Local Call Detail Record (LCDR)
- Make Set Busy All Calls (MSB)
- Make Set Busy Intragroup (MSBI)
- Meet Me Conference
- Message Waiting (MWT)
- Multiple Appearance Directory Number (MADN)
- Single Call Arrangement (SCA)
- Multiple Call Arrangement (MCA)
- Privacy Release (PRL)
- No Double Connection (NDC)
- No Line Insulation Test (NLT)
- No Receiver Off-hook Tone (NOH)
- Off-hook Queuing (OHQ)
- Operator Number Identification (ONI)
- Park (PRK)
- Permanent Hold (HLD)
- Plug Up (PLP)
- Preset Conference (CONF)
- Primary Interlata Carrier (PIC)
- Random Make Busy (RMB)

- Requested Suspension (RSUS)
- Ring Again (RAG)
- Security Code (SEC)
- Short Timed Release Disconnect (STRD)
- Secondary Language (SL)
- Simplified Message Desk Interface (SMDI)
- Special Billing (SPB)
- Speed Calling Long List (SCL)
- Speed Calling Short List (SCS)
- Station Message Detail Record (SMDR)
- Station Origination Restrictions (SOR)
- Station Origination Restrictions Controller (SORC)
- Station Specific Authcode (SSAC)
- Stop Hunt (SHU)
- Subscriber Line Usage (SLU)
- Suspended Service (SUS)
- Terminating Billing Option (TBO)
- Time and Charge Service on 1+ Calls (ATC)
- Toll Essential Service (TES)
- Uniform Call Distribution (UCD)
- Uniform Call Distribution SD Point (UCDSD)
- Three Way Calling (3WC)

Hardware requirements

This feature requires 500 and 2500 sets to be attached to the Meridian SL-100 version of the IPE peripheral. The IPE must be equipped with an Extended Analog Line Card and an Extended Message Waiting Line Card.

Limitations and restrictions

The following limitations and restrictions apply to Analog Lines on IPE:

- This feature does not support Attendant Consoles and Attendant Console-related features.
- This feature verifies a comprehensive set of station features and a representative set of system features. All station and system features function properly on 500 and 2500 sets residing on the IPE.

Interactions

Analog Lines on IPE has no functionality interactions.

Datafill

Tables LNINV and IBNLINES are enhanced to support the datafilling of LENS associated with IPE analog lines. Field CARDCODE in table LNINV now supports the two new IPE analog card codes, 8D03AB and 8D09AB. A check has been added to ensure that the IPE LEN being added is correctly datafilled in table LNINV with one of the IPE analog card codes.

Service Orders

This feature ensures that all existing Service Order and line query commands function correctly when used in conjunction with IPE analog lines.

Operational Measurements

Analog Lines on IPE does not affect Operational Measurements.

Logs

Analog Lines on IPE does not affect logs.

User interface

Analog Lines on IPE does not change the user interface.

Billing

Analog Lines on IPE does not affect billing.

AM0129 - XPEC Message Interface - Phase II**Description**

This feature enables the Extended Peripheral Equipment Controller (XPEC) to perform the following:

- Translate analog set messages from the XMS-based Peripheral Module (XPM) and send them to the Extended Message Waiting Line Card (XMLC) or Extended Analog Line Card (XALC). Messages to analog sets are translated from DMS-X format to A10 format.
- Translate analog set messages from the XMLC or XALC card and send them to the XPM. Messages from analog sets are translated from A10 format to DMS-X format and sent to the XPM.
- Support Intelligent Peripheral Equipment (IPE) overload control. Overload control processing allows the XPM to receive information regarding the state of IPE messaging memory use.
- Support the use of two transceivers on the Receive Signaling (RSIG) S71 chip. The RSIG chip is programmed to enable the interruptions on

two transceivers. Both transceivers of the RSIG chip are used, subject to the link open or closed state of each.

This feature supports transmission and reception of DMS-X messages over the DMS-X link and handles error conditions. Messages are received on two DMXS message channels and routed to the appropriate processes within the IPE.

Analog message processing

This feature supports the following analog set messages:

- Ring On
- Ring Off
- Message Waiting On (XMLC only)
- Message Waiting Off (XMLC only)
- On-hook
- Off-hook
- Digit 0-9 Selected
- Hookswitch Flash

Overload control support

Overload control is a method of controlling message flow to and from the IPE. Overload control provides continued processing of calls at maximum capacity during peak traffic periods. Messages from in-progress calls experience minimal delays in the XPM, while calls being originated during an overload condition can encounter dial tone delays because of delays in the XPM.

Overload control bytes are added to each DMS-X set message sent to the XPM. These bytes signify the percentage of available memory that is free from the pool that the IPE uses to transmit and receive messages. Two time stamp bytes are included in each DMS-X message sent to the XPM to enable correct Dial Tone Speed Recording (DTSR) computation. These time stamp bytes are the value of the system clock in the XPEC.

Overload audit reports are generated and sent to the XPM when the IPE detects that messages, either C-side or P-side, are dropped. The overload audit reports are sent to the XPM every five minutes, as long as the message dropping condition persists. The report includes the overload status, the C-side and P-side message lost counters, and the sequence number of the ongoing overload cycle.

RSIG multiple transceiver support

The RSIG chip can transmit and receive using one or two transceivers. This feature supports the use of two transceivers to transmit and receive messages to or from the XPM. One DS30A channel is assigned to each transceiver. Each transceiver has both a status and a control register, transmit and receive buffers, state machines to control the protocol for transmitting and receiving, and Cyclic Redundancy Check (CRC) generation and checking.

The following conditions apply to the support of two RSIG transceivers:

- both transceivers receive and transmit data
- link statistics are maintained
- link error conditions are detected and reported
- if one of the transceivers is disabled, the other enabled transceiver takes over all of the transmit and receive responsibilities

Hardware requirements

This feature runs on the XPEC card and is downloadable.

Limitations and restrictions

Overload control processing is dependent on the size of the memory heap available in the IPE software.

Interactions

XPEC Message Interface - Phase II has no functionality interactions.

Datafill

XPEC Message Interface - Phase II does not affect data schema tables or office parameters.

Service Orders

XPEC Message Interface - Phase II does not affect SERVORD.

Operational Measurements

XPEC Message Interface - Phase II does not affect Operational Measurements.

Logs

XPEC Message Interface - Phase II does not affect logs.

User interface

XPEC Message Interface - Phase II does not change the user interface.

Billing

XPEC Message Interface - Phase II does not affect billing.

AM0130 - XPEC Call Processing - Phase II**Description**

This feature enhances the software for the Intelligent Peripheral Equipment (IPE) in the Meridian SL-100 environment to provide the following functions:

- ringing support for analog line cards
- network side connection loopback
- re-enabling of disabled babbling sets
- support for the line data message

Ringing support for analog line cards

This feature provides software to support station set ringing on the XMLC analog line card. The software is modified to check the card type of a station set when it receives a ring command from the Central Control (CC). Ring-on and Ring-off commands are sent to analog sets using the A10 message format. Ring commands to digital sets are sent in X12 format.

An analog station set requires the use of a ring generator while its ringer is on. The ring generator is capable of ringing a maximum of eight sets at one time. Logic is added to the ringing cadence to stagger analog station set ringing so that as many as 24 sets can actively ring at one time. Analog station sets that require ringing when the ring generator is saturated are placed in a ring waiting queue, until ring generator resources become available, or until a stop ringing command is received from the CC.

Network side connection loopback

The IPE periodically receives messages that cause a DS30A channel to loop upon itself, as well as messages that disconnect a loopback connection. These messages are similar to the regular MAKE CONNECTION and BREAK CONNECTION messages, but with logic added. The MAKE CONNECTION message specifies a loopback by specifying a second C-side port and channel number.

In a normal MAKE CONNECTION message, the second C-side port and channel fields contain a null value.

When a loopback command is recognized, the specified DS30A port and channel are connected to one of the unused DS30X channels on the peripheral side of the Time Slot Interface Chip (TSIC). A table keeps track of the DS30X channels that are available for use in a loopback connection. Each time a Break Connection message is received, the connection is checked to determine if the specified connection is in a loopback. If a

connection is looped, it is disconnected and the DS30X loopback channel is marked "available for use". The TSIC audit function is modified to support loopback connections.

Re-enabling babbling sets

When a babbling set is detected, it is disabled and a BABBLE REPORT message is sent to the XMS-based Peripheral Module (XPM). Under normal circumstances, the IPE receives a command from the XPM to disable the station set. This feature adds software logic to return a station set to service that has been marked as a babbling set. It disables the set if the XPM does not respond to the BABBLER REPORT message with a DISABLE SET command within 30 seconds.

The software keeps a list of station sets that have been marked as "babblers". This list contains a time stamp marking the time the set was disabled. Elements of the babbler list are removed when a DISABLE SET command is received for the corresponding station sets. The babbler list is scanned periodically to determine if a set has been on the list for more than 30 seconds. If a set that has been disabled for more than 30 seconds is found in the list, it is re-enabled and removed from the babbler list.

Supporting the line data message

Software is added to process the Line Data message from the CC. This message is sent to the IPE after a warm Switch Activity (SWACT) occurs to ensure agreement between the IPE and the CC as to the state of each circuit on the IPE. The Line Data message contains a bit map that defines the state of each circuit. This state information is compared to the time switch connection information in the IPE to ensure that they match. If a circuit is connected in the IPE, but is not connected as defined by the Line Data messages, the circuit is disconnected in the IPE. In this way, calls that have not reached talking stage when a SWACT occurs are disconnected.

Hardware requirements

This software runs on an IPE.

Limitations and restrictions

The following limitations and restrictions apply to XPEC Call Processing - Phase II:

- Only the Extended Digital Line Card (XDLC) and Extended Message Waiting Line Card (XMLC) card types are supported.
- No intraswitching is supported in the XPEC.
- No more than 24 analog sets can ring at one time.
- No more than 61 connections can be looped back at one time.

Interactions

This feature interacts with the following features in the XPEC:

- XPEC Message Interface - Phase II (AM0129)
- XPEC Maintenance - Phase II (AM0124)
- PMDEBUG Interface to XPEC Monitor (AM0135)
- DTSR Audits for IPEs (AM0134)
- IPE Lines Maintenance - Phase II (AM0126)

Datafill

XPEC Call Processing - Phase II does not affect data schema tables or office parameters.

Service Orders

XPEC Call Processing - Phase II does not affect SERVORD.

Operational Measurements

XPEC Call Processing - Phase II does not affect Operational Measurements.

Logs

XPEC Call Processing - Phase II does not affect logs.

User interface

XPEC Call Processing - Phase II does not change the user interface.

Billing

XPEC Call Processing - Phase II does not affect billing.

AM0131 - XPM IPE Interface Optimization**Description**

This feature defines the interface between an XMS-based Peripheral Module (XPM) and the Extended Peripheral Equipment (XPE) peripheral that supports connections to a Meridian SL-100. The interface between the XPM and XPE consists of numerous messages that are necessary to load, return to service, provide call processing information, and maintain the operating state of the peripheral. This feature identifies the messages that are common to the Line Concentrating Module (LCM), Digital Line Module (DLM), and the XPE peripherals. The three kinds of messages that define the interface between an XPM and the XPE peripheral are maintenance, call processing, and miscellaneous messages.

Maintenance messages include the following:

- busy
- load

- return to service
- test
- status
- drawer data
- line data

Call processing includes the following:

- ringing
- set cadence
- make connection
- break connection

Miscellaneous messages include the following:

- Dial Tone Speed Recording (DTSR)
- overload control
- babblers
- tones
- XPM Bit Error Rate Tests (XBERT)

Because of the hardware differences between the XPM to XPE interface and the LCM and DLM configuration, existing messages were modified specifically for the XPM to XPE interface.

The following message formats are used between the Central Control and the different levels of peripherals:

- external DS30 format to the network
- external DMSX format to the LCM
- internal DS30/DMSX format to the LGC tasks

The external DS30 message format consists of an eight-byte header, 55 bytes of data, and a checksum (one byte). The external DMSX message format consists of a 6-byte header, 55 bytes of data and a 1-byte checksum. The internal DS30/DMSX message format consists of the 8-byte header and the data (55 bytes).

Hardware requirements

XPM IPE Interface Optimization has no hardware requirements.

Limitations and restrictions

XPM IPE Interface Optimization has no limitations or restrictions.

Interactions

XPM IPE Interface Optimization has no functionality interactions.

Datafill

XPM IPE Interface Optimization does not affect data schema tables or office parameters.

Service Orders

XPM IPE Interface Optimization does not affect SERVORD.

Operational Measurements

XPM IPE Interface Optimization does not affect Operational Measurements.

Logs

XPM IPE Interface Optimization does not affect logs.

User interface

XPM IPE Interface Optimization does not change the user interface.

Billing

XPM IPE Interface Optimization does not affect billing.

AM0132 - Overload Control for IPEs

Description

This feature provides overload control for Intelligent Peripheral Equipment (IPE) Modules. Overload control consists of overload protection and overload indicators.

Overload Protection

Overload protection regulates the message flow between an IPE and its host XMS-based Peripheral Module (XPM). The XPM performs Origination Shedding, also called Origination Flow Control, which is a procedure that postpones the processing of new calls sent from an overloaded peripheral. This prevents the use of any more resources on new calls. The saved resources are then reserved for calls in progress. A sophisticated flow control in the XPM manipulates call processing messages according to call priorities. The flow control system automatically provides progress message favoring, a system that gives preference to calls in progress over new calls.

The IPE informs the host XPM when Origination Shedding should be applied. Each flow task message that is sent to the host XPM contains a load state indicator. This indicator is filled in with the information on the current load state. After receiving the flow task message, the XPM

examines and interprets the load state indicator to determine the available call processing data store left in the IPE. If the load state indicator of an IPE reaches or goes beyond the predefined overload level, the host XPM carries out the following actions:

- Determines the IPE to be overloaded and sets its internal state to In-Service Trouble (ISTB).
- Queues up any new incoming line origination messages conveyed from the overloaded IPE.
- Places the queued line origination messages to another appropriate queue under the Guaranteed Dial Tone (GDT) system of the flow control. These messages are continuously placed at the back of the queue until the IPE is out of overload state.

These line origination messages are not processed until the corresponding IPE load is reduced. When the IPE is no longer in a high load condition, the next flow task message is sent from the IPE to its host XPM, indicating a normal traffic condition in the load state indicator fields. If the IPE does not transfer any flow task messages after it comes out of overload and there have been no messages from the IPE for the past three seconds, the GDT audit in the XPM returns an overloaded IPE back to in-service state.

At times of high peak traffic load, the Overload Control for IPEs regulates the flow of messages between the overloaded IPE and its host XPM. The IPE concentrates on processing work that is less time consuming and work that has higher priority, such as termination messages. Therefore, the IPE can have a rapid recovery from the overload level to a stable condition by regaining its data store.

Overload indicators

When an IPE goes into overload, it gives one of the following kinds of overload indications:

- Maintenance and Administration Position (MAP) display
- logs
- Operational Measurements (OMs)

MAP display The QUERYPM (Query PM) command with FLT (Fault) option in the MAP display's IPE level shows a posted IPE with the fault conditions caused by an overload situation.

Logs If new messages arrive from the host XPM or the P-side of the IPE when the IPE is in danger of running out of data store, there is the possibility that messages might be discarded. If this occurs, the IPE sends an exception report to inform the CC (Central Control) through XPM about

the number of messages that have been lost between the XPM and the IPE and between the IPE and the P-side of the IPE. The following logs are then generated:

- PM180 to indicate that the IPE has just entered overload with the number of lost messages.
- PM128 to indicate the change of IPE state from INSV to ISTB when an IPE enters overload. This action applies only if the current state is INSV and there are no other situation that may affect the IPE to change from INSV to ISTB.
- PM180 to display the number of lost messages for an overloaded IPE on a predefined time basis until the number is clear (zero) within the last period.
- PM180 to state that the IPE is out of the overload
- PM106 to indicate the change of the IPE state from ISTB to INSV when the IPE is out of overload. This action applies only if the current state is ISTB and there are no other situations in the IPE that could keep the IPE in ISTB state.

Operational Measurements The OM group PMOVL D consists of the Origination Denied (PORGDENY) and Termination Denied (PTRMDENY) fields. These fields provide information on originations and terminations that are denied in either the CC or the XPM during overload. Each IPE peripheral is one of the keys to OM group PMOVL D. The PORGDENY OM message that contains the PORGDENY OMs of the peripherals is sent every three minutes from the XPM to the CC. The PORGDENY for an IPE peripheral is pegged under various internal flow control denial conditions manipulated by the XPM flow control system.

These internal conditions include the following:

- shedding stale messages in various queues
- exceeding the maximum allowable number of messages for an originating or terminating terminal
- shedding old origination messages for the new originations
- losing originations, because the resources are completely used up by terminations
- losing call processing messages due to unavailability of resources for queuing new work

This feature extends the existing OMSHOW CI command by allowing a terminal on a switch to have immediate display of information about origination denial tuples in OM group PMOVL D.

Hardware requirements

Overload Control for IPEs has no hardware requirements.

Limitations and restrictions

At times of high peak traffic load, the flow control for IPEs may not be sufficient to prevent IPEs from running out of data store.

Interactions

This feature works with the capabilities provided by XPEC Message Interface - Phase II (AM0129), IPE PM Maintenance - Phase II (AM0033), IP PM Maintenance - Phase I (AM0037), IPE PM Maintenance - Phase III (AM0125), and other related features. This feature also works with the existing XPM flow control system.

Datafill

Overload Control for IPEs does not affect data schema tables or office parameters.

Service Orders

Overload Control for IPEs does not affect SERVORD.

Operational Measurements

No new OM groups or fields are introduced with this feature. However, this feature introduces the existing OM group PMOVL D with an IPE peripheral as one of its key indexes. This OM group consists of PORGDENY and PTRMDENY. The PORGDENY register for an IPE reflects the origination messages that are shed or denied by the host XPM flow control.

Logs

No logs are introduced with this feature. Existing PM128, PM106, and PM180 logs are enhanced to indicate the overload state, out of an overload state, and number of lost messages for an IPE. All the existing functions of these logs remain the same.

User interface

No new CI commands are added with this feature. However, the PTRMDENY and PORGDENY registers associated with an IPE peripheral can be displayed in the OM group PMOVL D through the OMSHOW command. The QUERYPM command with the FLT option in the IPE level of a MAP display was enhanced to display a posted IPE with fault conditions caused by an overload situation.

Billing

Overload Control for IPEs does not affect billing.

AM0133 - IPE on RCC

Release applicability

IPE on RCC was introduced prior to BCS31 and is applicable to MSL03 and up.

Description

This feature provides the changes to table IPEINV to support the Intelligent Peripheral Equipment (IPE) attached to Remote Cluster Controllers (RCCs) and to table IPEINV to support dynamic Peripheral Module (PM) reconfigurations involving the IPE.


This feature supports host IPE service through an RCC and provides the same level of support as for a host Digital Line Module (DLM). The specific capabilities for Remote Switching Center (RSC) include the following:

- Emergency Stand Alone (ESA) capability for IPE lines (RSC only)
- IPE line to Trunk Intraswitching (normal or ESA mode in RSC only)
- RCC-to-RCC Interswitching (normal or ESA mode in RSC only)

The same levels of maintenance, diagnostics, and call processing that are supported on XMS-based Peripheral Modules (XPMs) for the IPE are supported on the RCC. This includes Integrated Voice and Data (IVD) digital sets, the Meridian Asynchronous Data Option (MADO), the Meridian Programmable Data Adapter (MPDA), and 500/2500 analog sets. No hardware modifications to the current IPE shelf are necessary for RCC support.

ESA is an emergency service option of the RCC for providing a subset of call processing capabilities in the event of loss of communications with the host. The RCC is a peripheral that is remotely connected to a host Line Trunk Controller (LTC) through DS-1 links. It is capable of handling up to nine Line Controller Modules (LCMs), DLMs or IPEs, or a combination of the three. While an RCC is primarily designed to provide terminations for remote lines, the RCC also supports a limited range of DS-1 trunk circuits to service these lines. A typical RSC configuration is shown in "[DLM Configuration](#)" (page 632).

DLM Configuration

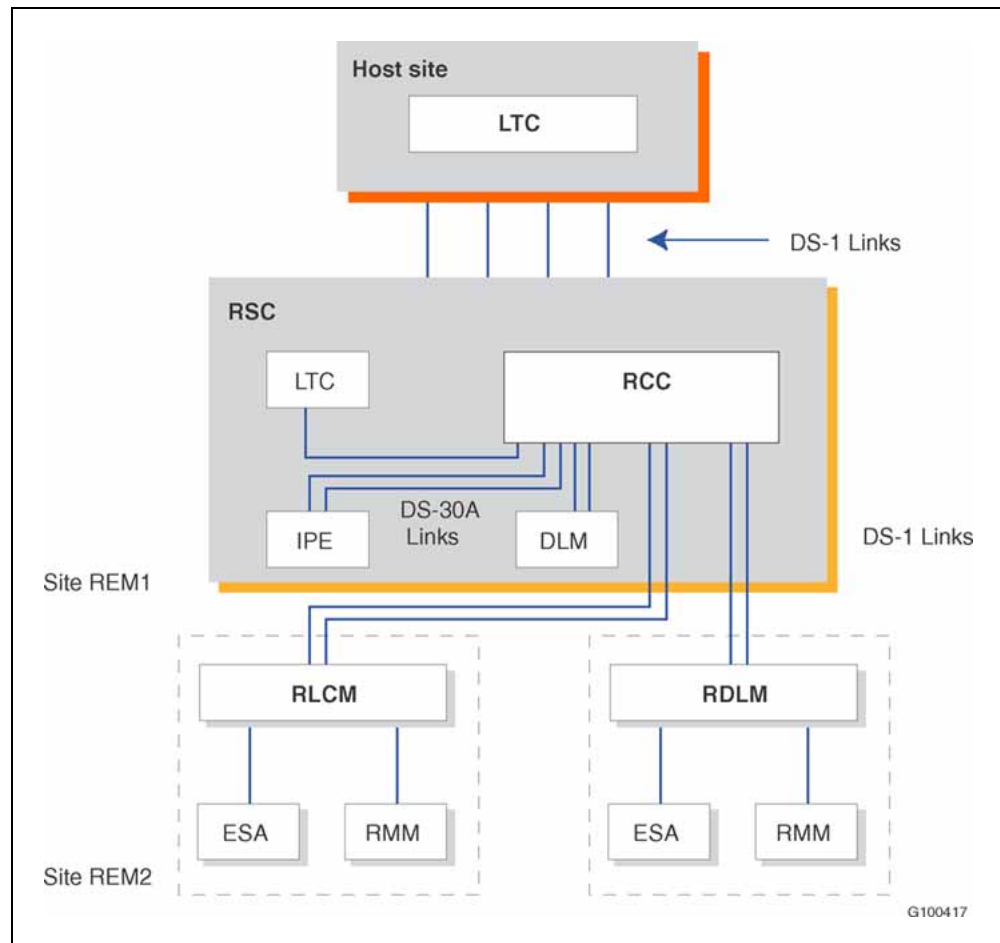

Additional software running both in the CC and RCC provides ESA functions. If a customer subscribes to the ESA option, the package that provides the ESA capability, NTX149AA, is included in the CC software. This package also provides the option of enabling and disabling ESA, which is controlled by changing an entry in the RCCINV table. Because both RCC units are equipped with the same version of the software, ESA capability exists in both RCC units.+

Intraswitching

Intraswitching is an optional capability on the RCC that provides call processing capabilities without using CC network resources or DS-1 link resources. For call processing purposes, the RCC is viewed as an LTC with 16 DS-1 host network ports. The speech bus of the RCC contains 32 channels per port. Each equipped DS-1 port utilizes 24 channels for speech and one channel for signaling. The remaining seven channels are looped back for intraswitching. All 32 of the channels on each unequipped port are also looped back for intraswitching purposes.

Additional software provides the intraswitching functions running in the CC and RCC. The intraswitching option is enabled or disabled by changing an entry in the RCCINV table. Because both RCC units are equipped with the same version of the software, intraswitching capability exists in both RCC units.

Automatic static data updates

This feature expands the existing table control and static data downloading software for table IPEINV and enables certain reconfigurations of the IPE and its links. This feature reduces the manual activity required to perform these reconfigurations by sending only the required data to the XPMs. This reduces the amount of time and number of messages required to reconfigure an IPE. The data configuration is treated separately from the rest of the static data. Automatic in-service updates of the configuration data are supported in CPMs that currently support IPEs, such as Line Group Controllers (LGCs), Line Trunk Controllers (LTCs), and RCCs.

This feature does not eliminate the static data mismatch In-Service Trouble condition. It also does not eliminate certain restrictions in table control that require resources to be in certain states to reconfigure. This means that all existing table control restrictions on data changes still apply.

Hardware requirements

Analog line cards and ring generators are required to support the 500/2500 analog set.

Limitations and restrictions

The following limitations and restrictions apply to IPE on RCC:

- This feature does not support the following capabilities:
 - using the RCCs Remote Maintenance Module (RMM) for IPE lines
 - warm entry or exit of ESA for IPE lines
- An RCC supports only a co-located (host) IPE. A remote IPE does not exist. Therefore, the IPE C-side link must be the DS-30A type.
- All table control restrictions to the reconfiguration of nodes and links that previously existed still apply. This feature is limited to supporting the in-service updates of configuration data resulting from the following table control modifications:
 - C-side link reconfiguration
 - node reconfiguration
 - ringing data changes

- When changing an IPE from one XPM to another (for example, LTC to RCC or LTC to LTC), reload the IPE to bring it back into service. Because call processing uses the configuration data, any dynamic changes to the data can clear calls.

Interactions

This feature interacts with feature BC1228, Audit XPM Data. It uses the audit software to recalculate the XPM data checksum after the static data update is completed. Because data changes are being made to in-service XPMs, call processing can be affected during the updates. Dial tone is sometimes slow during the update process, but normal call processing returns after completion of the update.

Datafill

In table IPEINV, the field for the assignment of the C-side node has been changed to allow datafill of an IPE on an RCC.

Service Orders

IPE on RCC does not use SERVORD.

Operational Measurements

Intrawitched OMs are pegged for intrawitched calls on IPE lines.

Logs

IPE on RCC does not affect logs.

User interface

When the TRNSL C command is issued at the IPE level of the MAP display and the IPE posted is attached to an RDD, the name of the RCC displays along with the link numbers and link states. Conversely, when the TRNSL P command is issued at the RCC level and the RCC posted has one or more IPEs attached to it, the name of the IPEs are displayed along with the link names and link states.

For PM reconfiguration, at the MAP display where the C-side XPM is posted, only the words "Static Data" appear in the maintenance status area to the right of the posted XPM. The MTCE flag also appears momentarily for each affected unit.

Billing

IPE on RCC does not affect billing.

AM0134 - DTSR Audits for IPEs

Description

This feature has three purposes:

- to add the Dial Tone Speed Recording (DTSR) capability for the Intelligent Peripheral Equipment (IPE)
- to provide line audits for the IPE
- to provide Peripheral Maintenance (PM) audits for the IPE

500/2500 analog, and Integrated Voice and Data (IVD) digital, lines on the IPE are included in the existing DTSR collection routines. These routines collect statistics on how soon dial tone is given after an off-hook state has been detected. A dial tone delay of greater than three seconds indicates that overall system performance is degrading, which can require corrective action. Analog and IVD digital lines on the IPE are included in the DTSR audit routines, which monitor the lines and attempt to correct any inconsistencies found in areas such as line state and lamp state. The IPE is included in the existing PM audit routines, which periodically run on each peripheral. These routines attempt to correct any inconsistencies found in areas such as link state and peripheral state.

Hardware requirements

A Meridian SL-100 peripheral is required.

Limitations and restrictions

DTSR Audits for IPEs has no limitations or restrictions.

Interactions

DTSR Audits for IPEs has no functionality interactions.

Datafill

DTSR Audits for IPEs does not affect data schema tables or office parameters.

Service Orders

DTSR Audits for IPEs does not affect SERVORD.

Operational Measurements

A new OM group, SITE3, is created in order to make DTSR functional on the IPE for both 500/2500 analog and IVD digital terminals. When the OMSHOW DTSR, OMSHOW DTSRPM, and OMSHOW SITE3 commands are used, new fields are shown for both analog and IVD digital terminals on the IPE.

Logs

DTSR Audits for IPEs does not affect logs.

User interface

DTSR Audits for IPEs does not change the user interface.

Billing

DTSR Audits for IPEs does not affect billing.

AM0135 - PMDEBUG Interface to XPEC Monitor**Description**

This feature enhances the existing PMDEBUG non-resident debugging tool to allow access to the Extended Peripheral Equipment Controller (XPEC) monitor. It also includes the XPEC software enhancements necessary to support the PMDEBUG interface and to expand the current monitor command set.

The XPEC supports a maintenance port that is used to interface to a maintenance terminal to monitor the XPEC functions. The monitor allows Nortel Networks personnel to control the maintenance port and execute commands that users issue. The user interface is an ASCII terminal connected to the nine-pin maintenance port interface on the XPEC. This feature also allows users access to the monitor through the non-resident debugging tool PMDEBUG at a Maintenance and Administration Position (MAP) display on the Meridian SL-100 Central Control (CC) Complex. It also enhances the XPEC monitor command set to provide more debugging and diagnostic capability.

The XPEC monitor is intended for use by skilled Nortel Networks personnel that have thorough knowledge of the XPEC software. Improper use of the monitor can disrupt system operation.

Hardware requirements

The DUART MC68681 Dual Asynchronous Receiver Transmitter chip on the XPEC provides the interface port to the maintenance terminal. An ASCII terminal is required to use the XPEC monitor from the maintenance port. The terminal is connected to the nine-pin RS-232 faceplate connector with the following settings:

- 9600 baud
- eight data bits
- character mode
- no parity

A MAP display is required to use the XPEC monitor with the CC non-resident debugging tool PMDEBUG.

Limitations and restrictions

The XPEC monitor allows single-user access only. At any time only one user (the PMDEBUG user or the maintenance port user) has access to the XPEC monitor. A mechanism is provided to ensure mutual exclusion and guaranteed accessibility. Guaranteed accessibility means that both the maintenance port user and the PMDEBUG user have the same capability to preempt the current XPEC monitor user.

Interactions

The user interface portion of the XPEC monitor has been modified to accommodate the fact that the PMDEBUG interface is message packed-based, while the maintenance port interface is character-based. For the PMDEBUG user, the command line editing is handled by the CC software, which is transparent to the XPEC monitor. The CC uses the break key of a MAP station for I/O and process control. Most control keys and special keys are either ignored or treated literally as input characters. As a result of the capability to allow access to the XPEC monitor using PMDEBUG, the new message interface interacts with PMDEBUG, the XPEC monitor, and the messaging facilities residing on the CC, the XPM, and the XPEC.

Datafill

PMDEBUG Interface to XPEC Monitor does not affect data schema tables or office parameters.

Service Orders

PMDEBUG Interface to XPEC Monitor does not affect SERVORD.

Operational Measurements

PMDEBUG Interface to XPEC Monitor does not affect Operational Measurements.

Logs

PMDEBUG Interface to XPEC Monitor does not affect logs.

User interface

This feature expands the monitor command set by implementing new commands and enhancing the existing commands. In addition to the command set enhancements, it also incorporates the message interface

into the monitor so that it can be invoked at a MAP display through the PMDEBUG tool. The following tables list the new, enhanced, and unchanged monitor commands.

New monitor commands

Command	Purpose
aa	A31 registers access.
ad	DUART register access.
add	Add hexadecimal numbers.
as	S71 registers access.
ax	XPEC registers access.
c0 through c9	Command recall and re-execution.
cv	Command history view.
ds	Dump statistics and miscellaneous data.
dx, dx1 through dx5	Display macro commands.
fill	Fill memory.
reset	Reset XPEC.
sub	Subtract hexadecimal numbers.
sx1 through sx5	Set macro commands.
wb	Write memory byte.
x1 through x5	Execute macro commands.

Enhanced monitor commands

Command	Purpose
dc	Dump card (peripheral) status record.
di	Dump IVD status record.
h	Help.
r	Repeat.
r72	Dump R72 control memory.
smon	Start message monitor.
w	Write A31 status.

Unchanged monitor commands

Command	Purpose
****	Abort.
d	Dump memory.

Command	Purpose
dmon	Display message monitor.
m	Message.
p	Print line priority.
qmsg	Queue a message.
rmon	Remove message monitor.
s	Signal process.
wc	Write A31 status clear.

Billing

PMDEBUG Interface to XPEC Monitor does not affect billing.

AM0140 - XPEC Self Test and Diagnostics Firmware

Description

This feature provides the following functions in the Intelligent Peripheral Equipment (IPE) in the Meridian SL-100 environment:

- power-up self test and clock synchronization
- two communications channels to which the IPE responds that allow it to act upon reset, status, test, load check, and run messages from the Central Control (CC)
- out-of-service board level diagnostics
- handling of hexadecimal display functions

Power-up diagnostics tests

At power-up, the XPEC runs a series of self tests. The results of the tests appear on the hexadecimal display. The first two tests are essential for Extended Peripheral Equipment Controller (XPEC) operation. If either of these tests fails, the power-up diagnostics restart. The remainder of the tests are executed after successful completion of the first two tests.

"Power-up diagnostics tests" (page 639) lists the power-up diagnostics tests:

Power-up diagnostics tests

Test number	Test name
1	CPU test.
2	CPU memory stack test.
3	RAM test.
4	R72 N-P switching control memory test.
5	R72 P-N switching control memory test.
6	R72 NIVD buffer test.

Test number	Test name
7	R72 XIVD buffer test.
8	A31 #1 configuration memory test.
9	A31 #1 internal TXVM memory test.
A	A31 #1 internal context memory test phase 1.
B	A31 #1 internal context memory test phase 2.
C	A31 #1 external buffer test.
D	A31 #1 external FIFO test.
E	A31 #2 configuration memory test.
F	A31 #2 internal TXVM memory test.
10	A31 #2 internal context memory test (phase 1).
11	A31 #2 internal context memory test (phase 2).
12	A31 #2 external buffer test.
13	A31 #2 external FIFO test.
14	W72 peripheral side loopback using A31 #1.
15	W72 peripheral side loopback using A31 #2.
16	S71 peripheral side continuity test.
17	S71 network side continuity test. Note: Requires a 8 Khz frame pulse and a 5.12 Mhz clock connected to ports 0 or 1 to pass, otherwise it does not execute or report a failed condition.
18	S71 register test.
19	S71 simultaneous packet transmission test.
1A	R72 P-N quiet code register test.
1B	R72 N-P quiet code register test.
1C	R72 XIVD loopback buffer test.
1D	Sanity timer test.
1E	EPROM checksum.
1F	DUART test.
20	EEPROM access.

Clock Synchronization

After completion of power-up diagnostics, the XPEC attempts to synchronize with one of two network clocks. When lock is established, the display indicates C0 or C1 for successful lock to port 0 or 1. When no lock is established, the XPEC attempts a switch over to the other clock source and the display continuously indicates CF (clock failure) until establishing a lock.

When CF is indicated and lock is reestablished, the XPEC reinitializes all peripheral devices. There are a maximum of six physical DS30 links to the IPE numbered 0 through 5. Links 0, 1, 2, and 3 are cabled together with the clock and frame for port 0. Links 4 and 5 are combined with the clock and frame for port 1.

System communication

The IPE shelf is connected to the XPM with a minimum of two DS30A links. The first channel of the first two links is reserved for messaging between XPM and IPE. The XPEC firmware supports simultaneous messaging on both channels. If the XPM or a link failure disables one message channel, the XPEC switches to single channel mode and routes all messages over the remaining active messaging channel.

Expiration of the sanity timer causes an exception report to the XPM, except when diagnostics are running on the sanity timer. Message link 0 is channel 0 of DS30 link 0 and message link 1 is channel 0 of DS30 link 1.

Upon receipt of an out-of-service test message, the XPEC performs a comprehensive diagnostic test on the XPEC circuit card. The test results appear on the display. The tests in "[System communication tests](#)" ([page 641](#)) are a subset of the power-up diagnostics tests. They are used for destructive and non-destructive out-of-service tests and can also be called individually by the software.

System communication tests

Test number	Test name
3	RAM test (not applicable for non-destructive tests).
4	R72 N-P switching control memory test.
5	R72 P-N switching control memory test.
6	R72 NIVD buffer test.
7	R72 XIVD buffer test.
8	A31 #1 configuration memory test.
9	A31 #1 internal TXVM memory test.
A	A31 #1 internal context memory test phase 1.
B	A31 #1 internal context memory test phase 2.
C	A31 #1 external buffer test.
D	A31 #1 external FIFO test.
E	A31 #2 configuration memory test.
F	A31 #2 internal TXVM memory test.
10	A31 #2 internal context memory test (phase 1).

Test number	Test name
11	A31 #2 internal context memory test (phase 2).
12	A31 #2 external buffer test.
13	A31 #2 external FIFO test.
14	W72 peripheral side loopback using A31 #1.
15	W72 peripheral side loopback using A31 #2.
16	S71 peripheral side continuity test.
17	S71 network side continuity test. Note: Requires a 8 Khz frame pulse and a 5.12 Mhz clock connected to ports 0 or 1 to pass, otherwise it does not execute or report a failed condition.
18	S71 register test.
19	S71 simultaneous packet transmission test.
1A	R72 P-N quiet code register test.
1B	R72 N-P quiet code register test.
1C	R72 XIVD loopback buffer test.
1D	Sanity timer test.
1E	EPROM checksum.
1F	DUART test.
20	EEPROM access.
21	Program store checksum (not applicable for destructive tests).

Display functions

A single red LED is provided on the XPEC faceplate. The LED is turned on when the XPEC is out of service and turned off when the XPEC is in service.

A double digit hexadecimal display on the XPEC faceplate displays card status and diagnostics test results. The following are the possible display combinations while the firmware has control of program execution:

- The four decimal points are turned on when firmware has control of program execution.
- During power-up, all segments of the digit display are listed for one second then turned off.
- D0 is displayed for power-up diagnostics.
- D1 is displayed for destructive out-of-service diagnostics.
- D2 is displayed for non-destructive out-of-service diagnostics.

- If the sanity timer test passes the D0 for the power-up, diagnostics are blanked. This happens because the sanity timer resets the board.
- The test number of each power-up, or out-of-service, test that failed is displayed for one second.
- C0 is displayed if the clock is synchronized to port 0.
- C1 is displayed if the clock is synchronized to port 1.
- CF is displayed if lock cannot be established with either port.
- E1 indicates a RESET message was received.
- E2 indicates a STATUS message was received.
- E3 indicates a TEST message was received.
- E4 indicates a LOAD message was received.
- E5 indicates a LOAD_CHK message was received.
- E6 indicates a RUN message was received.

Hardware requirements

XPEC Self Test and Diagnostics Firmware has no hardware requirements.

Limitations and restrictions

Even though the diagnostics in this feature cover the majority of components, there are some components that can only be tested using system level tests.

Interactions

XPEC Self Test and Diagnostics Firmware has no functionality interactions.

Datafill

XPEC Self Test and Diagnostics Firmware does not affect data schema tables or office parameters.

Service Orders

XPEC Self Test and Diagnostics Firmware does not affect SERVORD.

Operational Measurements

XPEC Self Test and Diagnostics Firmware does not affect Operational Measurements.

Logs

The logs in "[Sanity timer exception report logs](#)" (page 644) now refer to Intelligent Peripheral Equipment (IPE) in addition to other peripherals.

Sanity timer exception report logs

Log number	Description
PM102	The Peripheral Module (PM) subsystem generates this report when a system request changes a peripheral module to System Busy (SysB). This log notifies of a change of state to SysB.
PM103	The PM subsystem generates this report when a manual request places the peripheral module Offline (OFFL) from a Manual Busy (ManB) state. This log confirms a change of state for a specific PM to OFFL.
PM104	The PM subsystem generates this report when a manual request changes a peripheral module from OffLine (OffL) to Unequipped (UNEQ). This log confirms a change of a specific PM to UNEQ.
PM105	The PM subsystem generates this report when a manual request changes a peripheral module state to Manually Busy (MANB) by a manual request. This log confirms a change of state for a specific PM to MANB.
PM106	The PM subsystem generates this report when a system request returns a peripheral module to service (RTS) from a System Busy state, or a manual request returns it to service from a Manual Busy state. This log confirms or notifies of a change of state for a specific PM to in-service.
PM107	The PM subsystem generates this report when a system request changes a peripheral module state to Central-Side Busy (CBSY). This log notifies of a change of state for a specific PM to CBSY.
PM116	The PM subsystem generates this report when a message error report is received from a peripheral module.
PM117	The PM subsystem generates this report when Trouble (TBL) occurs during a PM operation. This log notifies of a TBL during a PM operation. Text specifies the type of trouble detected.
PM128	The PM subsystem generates this report when the PM encounters Trouble (TBL) during normal operation. The PM state changes as a result of a system or manual request. ISTB conditions do not affect service and are resolved by system action. This log is generated as notification of a TBL condition during normal operation.
PM179	The PM subsystem generates this report when a hardware condition affecting normal operation of the Meridian SL-100 or its peripherals occurs. This log supplies information on a PM HW Exception Report.
PM180	The PM subsystem generates this report when a software condition affecting normal operation of the Meridian SL-100 or its peripherals occurs. This log supplies information on a PM Exception Report.
PM181	The PM subsystem generates this report when a PM exception has occurred. This log notifies of a PM exception.

User interface

The user interface associated with the XPEC firmware is the faceplate display.

Billing

XPEC Self Test and Diagnostics Firmware does not affect billing.

AM0145 - Collecting PIN Digits in a Centrex Dialing Plan**Description**

This feature collects the Personal Identification Numbers (PINs) in conjunction with the authorization code to provide another level of screening. Currently, only security digits and account code digits can be collected in conjunction with a given authorization code when using the IBNXLA AUTH code feature.

Security digits can be from zero to four digits in length, are assigned per authorization code basis, and are transparent to the end user. They make authorization codes more secure by varying the total authorization code digit length.

Account code digits vary from two to 14 digits in length, but within a customer group, the length is fixed. They make the authorization codes more secure by varying the length of authorization code digits.

The Collecting PIN Digits in a Centrex Dialing Plan feature provides the following:

- Supports the collection of PIN digits using the IBNXLA feature AUTH.
- Provides Station Message Detail Record (SMDR) billing capability to record PIN digits.
- Provides the capability of having a single, one-to-four-digit in length, PIN per authorization code.
- Provides the capability of having multiple two- or three-digit PINs for each authorization code. Table PINDATA is used (on a switch basis) to support multiple PINs for each authcode.
- Provides the capability of generating a log to inform the switch administrator of any failures encountered when entering PIN digits.

Hardware requirements

Collecting PIN Digits in a Centrex Dialing Plan has no hardware requirements. No additional data store is required for this feature.

Limitations and restrictions

The following limitations and restrictions apply to Collecting PIN Digits in a Centrex Dialing Plan:

- A total of 15 digits are allowed for authcode digits, security digits, PIN digits and account code digits.
- The valid range of PININDEX values is from zero to 8191. Zero through 4095 are reserved for two-digit PINs. 4096 through 8191 are reserved for three-digit PINs. Two- and three-digit PINs cannot be intermixed for the same PININDEX.
- Only two- and three-digit PINs are allowed when validating PINs using the table PINDATA.
- PIN digits values range from zero to nine.
- This feature is not applicable to the ACR feature.
- No billing records are generated when invalid PIN digits are dialed based on the IBNXL Auth First feature.

Interactions

Reset dialing

When a mistake is made dialing the PIN digits, the caller can enter the * (asterisk) to receive dial tone and redial the digit sequence prompted for by the previous dial tone. Looking at the dialing sequence, if the caller makes a mistake while dialing PIN digits and enters *, the user has to redial the authorization code and not the feature access code.

Region code screening

In the PIN option, if the PINSTATS field is datafilled as OPTBYREG, and the incoming agent is a line, or if the incoming agent is a trunk without offnet access or without region code, the scenario is treated as if the option was datafilled as REQUIRED. However, if the incoming agent is a trunk with the region code the same as the one datafilled with the PIN option, PIN digits are not required to be dialed.

Datafill

No new tables or fields are created for this feature. This feature uses tables AUTHCDE and PINDATA extensively. Table AUTHCDE specifies the option for PIN digits. If the field PINSTATS in the table is datafilled as REQUIRED, PIN digits are expected to be dialed. When PIN digits are required, the field PINSEL can either be datafilled as SINGLE, to indicate that there is only a single PIN associated with the authorization code, or it can be datafilled as MULTIPLE to indicate that there is more than one PIN digit associated with the authorization code. If there are multiple PINs, the PIN digits are stored in the table PINDATA, and the index at which the PIN is stored is datafilled in the field PININDEX of the table AUTHCDE.

Table PINDATA is used to store the PIN digits when there are multiple PIN digits associated with a particular authorization code. Indices zero to 4095 are used to store PIN digits with a length of two, and indices 4096 to 8191 are used to store PIN digits with a length of three. A maximum of 100 PINs for each index for two digits and a maximum of 1000 PINs for each index for three digits can be stored.

Service Orders

Collecting PIN Digits in a Centrex Dialing Plan does not affect SERVORD.

Operational Measurements

Collecting PIN Digits in a Centrex Dialing Plan does not affect Operational Measurements.

Logs

Collecting PIN Digits in a Centrex Dialing Plan does not create any new logs. The existing Integrated Business Network (IBN) logs are used to inform the switch administrator when any failure is encountered when call processing procedures access the table AUTHCODE or PINDATA.

User interface

Collecting PIN Digits in a Centrex Dialing Plan does not change the user interface.

Billing

Collecting PIN Digits in a Centrex Dialing Plan does not change billing. When the PIN digits are correctly dialed and the PIN option is set in the table CUSTSMR, they can be recorded in an SMDR. The SMDR extension record format (#DC) is generated to record the use of PIN digits.

AM0164 - Meridian TeleCenter**Description**

Meridian TeleCenter, a form of software-based telephony, consists of a series of software applications that transform the personal computer into an intelligent communications management system. With this feature, users access a personal computer to control features of the Meridian Modular Terminal (MMT), voice messaging features, and other selected third-party applications. Meridian TeleCenter interworks with standard MMT and Meridian Programmable Data Adapters (MPDAs) on the Meridian SL-100.

Hardware requirements

NT8X49AC boards are required for this feature to work properly for MMTs served by Digital Line Modules (DLMs). This is because of firmware enhancements made on the boards to accommodate the MMT sets (which

created the NT8X49AB) and more firmware enhancements made for the Meridian TeleCenter application (producing the NT8X49AC). Special equipment is also necessary to test this feature.

In order to properly inform Meridian TeleCenter about the state or progress of a call, the Meridian SL-100 software sends call progress messages to the set and to the Meridian TeleCenter. Call progress messages are not normally sent to every MMT.

Limitations and restrictions

The following limitations and restrictions apply to Meridian TeleCenter:

- If the TELECNTR option is not specified for the MPDA, the Meridian TeleCenter application will not function properly. The Call Manager window may show no DN appearances for the set or the application may abort with a "Driver Communication Error."
- This activity provides support for Meridian TeleCenter on MMTs equipped with MPDAs and served by either DLMs or Intelligent Peripheral Equipment (IPE). The DLM configuration requires the NT8X49AC board in each unit of the DLM.
- The software for this activity is included in optional package NTXQ21AA.

Interactions

Meridian TeleCenter has no functionality interactions.

Datafill

An option, TELECNTR, is offered for the MPDA. This option indicates that a Meridian TeleCenter application is attached to the MPDA.

Service Orders

An option, TELECNTR, is offered for the MPDA. This option can be specified for the MPDA in the NEW, EST, ADD and ADO commands. The new option can also be deleted from the MPDA using the DEO command.

Operational Measurements

Meridian TeleCenter does not affect Operational Measurements.

Logs

Meridian TeleCenter does not affect logs.

User interface

Meridian TeleCenter does not change the user interface.

Billing

Meridian TeleCenter does not affect billing.

BCxxxx features

BC1523 - IVD Maintenance

Description

This feature includes two new maintenance and diagnostic procedures. Peripheral Maintenance or Digital Line Module (DLM) maintenance is associated with functions supported specifically for the DLM controller (6X51 and 6X52) and the Parallel Space Time Switch (PSTS or 8X46). Facility maintenance functions affect diagnostic routines on the facility side of the IVD product set, such as the IVD port cards (IVDPC), the subscriber loop, and Meridian sets.

Peripheral maintenance

DLM maintenance functions generate a series of tests that check the DLM hardware. Full out-of-service diagnostics are performed if the DLM is busy. Call processing is not available during out-of-service diagnostics. If the DLM is in service, only a small set of tests that do not affect service are run. Call processing continues during in service diagnostics.

The following is a list of the maintenance and diagnostic tests available on a DLM to test the hardware components on the 6X51, 6X52 and 8X46 cards:

- Processor memory (6X51 and 8X46 cards)
- Memory check sum (6X51 and 8X46 cards)
- Sanity timeout (6X51 and 8X46 cards)
- Parity trap
- Write protect trap
- Timing
- Time counter
- Inter-unit communication loop-around
- PSTS loop-around test
- PSTS activity test
- Receive transmit time switch connection memory

- Receive transmit multiplex connection memory
- Line address connection memory
- DCC-PSTS loop-around connection memory
- Line card communication
- PSTS connection memory

All of these tests, except the PSTS test, were previously supported on the 6X51 and 6X52 cards of a line connecting module. Since the PSTS is designed to simulate and replace existing Bus Interface Cards (BIC), all BIC tests are functionally supported on the PSTS. The PSTS processor and on-board memory is also diagnosed by the new memory tests.

If the PSTS fails, the MAP terminal provides appropriate card lists and their corresponding circuit locations in the DLM. Similarly, the output logs now reflect PSTS failures, instead of BIC failures, as they did previously.

Facility maintenance

Facility maintenance functions provide diagnostic routines for the facilities of the IVD product, such as the IVD port card, subscriber loop, and the Meridian set. These tests can detect, isolate, and identify facility failures. Because the Meridian set is designed to operate in a PBX environment with short loops and digital transmission facilities, traditional test methods using relays are no longer feasible. New maintenance tests use loop-around techniques and station tests that originate from the Meridian set. These tests can isolate problems down to the card level.

Diagnostic tests This feature provides the following diagnostic tests:

- status requests that provide status information related to IVD port cards and Meridian sets
- signaling channel loopback tests that check messaging hardware through the PSTS to the Meridian set
- MADDO self tests that check the MADDO hardware
- a PCM/data byte loop-around that checks the integrity of the PCM path or data path through to the loop-around point
- Bit Error Rate Tests (BERT) that measure data error rates to identify marginal hardware components
- station access tests that test the following functions on the Meridian set:
 - ringing
 - keypad and digit generation
 - speaker operation

- tone generation
- light indicators

Maintenance functions Periodic maintenance action is invoked on Meridian sets using the Automatic Line Test (ALT) level of the MAP workstation. Maintenance commands are similar to those provided for P-phones and data units. However, because of different Meridian hardware and function, the actual implementation will vary. This feature provides the following facility maintenance functions:

- A short diagnostic test that provides limited hardware testing capability up to the line card level. This test is useful as a periodic maintenance test and applies equally to a voice or data circuit on the Meridian set. This test only interferes with the circuit under test and does not affect its mate.
- An extended diagnostic test that is a more thorough test of the Meridian hardware. This test interferes with both circuits of a Meridian set, so checks must be made to ensure that both circuits can be removed from service before beginning the extended diagnostics. There are separate diagnostics for voice and data lines.
 - The extended voice line diagnostics include the following tests:
 - signaling loop-around at the PSTS
 - a port card present test
 - a set presence test
 - signaling loop-around at the Time Compression Multiplexing (TCM)
 - PCM loop-around test at the PSTS, TCM, and the CODEC (coder/decoder)
 - The extended data line diagnostics include the following tests:
 - signaling loop-around test at the PSTS
 - port card presence test
 - set present test
 - signaling loop-arounds at the TCM and the Meridian Asynchronous Data Adapter (MADA) X12 interface
 - MADA self test
 - PCM loop-around at the PSTS, TCM, MADA X12, and the USART
- A post command that identifies a Meridian set or group of sets to the Line Test Position (LTP) for maintenance purposes. This command

allows users to designate all lines in a logical drawer (equivalent to an IVD port card) as a set. When a set is selected for maintenance, it can consist of voice only, data only, or all voice and data circuits.

- Control position to a specified state.
- A return to service (RTS) command that changes the state of the circuit in the control position from the Manual Busy (MB) state to the idle (IDL) state.
- A circuit locate command that displays the location identifier of the circuit in the control position.
- Hold, NEXTH, and NEXTP commands that are used to select and manipulate circuits in the "control" and "hold" positions of the LTP. The commands are the same as in the current implementation for P-phones and data units.

Automatic line tests (ALT) Automatic line testing on Meridian sets includes testing of line cards and the subscriber loops. Automatic line testing normally runs on a large group of lines during low traffic periods.

For Meridian sets, only short and extended diagnostics ALT tests are performed. The short diagnostic checks most of the line card for correct operation. The extended diagnostic checks a higher proportion of the line cards for correct operation. This test is not performed as frequently as the short diagnostic, because it takes longer to run.

Tests not provided for Meridian sets are the Line Insulation Test (LIT) and the On-hook Balance Network (BAL) test. The Line Insulation Test checks the subscriber's loop for foreign potentials and leakage resistances. These tests are not applicable in the digital transmission environment of the Meridian set and are therefore not provided.

The following kinds of tests are included as part of the line insulation tests:

- EMF foreign potential (AC and CD)
- tip to ground resistance
- ring to ground resistance
- tip to ring resistance

The on-hook balance test is run when new line circuits are being placed in service. After that, they are only run occasionally.

Hardware requirements

This feature adds maintenance capability for the IVD product. It therefore requires all of the DLM hardware, including the Meridian 2000 series sets.

Limitations and restrictions

IVD Maintenance has no limitations or restrictions.

Interactions

This feature works in conjunction with feature BC1534, as well as existing Plain Ordinary Telephone Service (POTS), P-phone, and DU diagnostic commands.

Datafill

IVD Maintenance does not affect data schema tables or office parameters.

Service Orders

IVD Maintenance does not affect SERVORD.

Operational Measurements

IVD Maintenance does not affect Operational Measurements.

Logs

IVD Maintenance does not affect logs.

User interface

IVD Maintenance does not change the user interface.

Billing

IVD Maintenance does not affect billing.

BC1524 - IVD Call Processing**Description**

This feature provides basic voice call processing for Meridian sets on Meridian SL-100 digital switches. The Meridian series consists of the M2112, M2018 and Compact Asynchronous Data Adapter (CADA). The M2112 provides an integrated handsfree feature and twelve feature keys. The M2018 provides eighteen feature keys and accepts one add-on module that is either a corded handsfree module or a dual headset module.

The programmable keys on the Meridian set support the following features:

- Directory Numbers (DNs)
- Call Park (CPK)
- Three-Way Conference Calling (TWC)
- Six-Way Conference Calling (SWC)
- Call Transfer (CT)
- Call Waiting (CWT)
- Ring Again (RAG)

- Privacy Release (PRL)
- Call Forward (CFU, CFI)
- Call Pickup (CPU)
- Speed Calling - Long (SCL)
- Speed Calling - Short (SCS)
- Intercom (INT)
- Make Set Busy (MSB)
- Malicious Call Hold (MCH)
- Message Waiting (MWT)
- Private Business Line (PBL)
- Busy Override (BOV)
- Autodial (AUD)
- Handsfree (on the M2112 and M2112/Disp models only)

The following keys are not programmable on the Meridian set:

- Release
- Hold
- Volume up
- Volume down
- Primary DN (must be the first key)

Basic Call Operation

"Off-hook dialing" (page 654) show the steps in basic call operation for the Meridian IVD sets.

Off-hook dialing

Action	Response
Lift handset.	Primary Directory Number (PDN) lamp comes on, dial tone is received through handset
Talking on PDN - press Secondary Directory Number (SDN).	Auto-hold PDN call (PDN lamp winks). SDN lamp comes on, dial tone is received through handset.
Talking on SDN - press PDN.	Auto-hold SDN call (SDN lamp winks). PDN lamp comes on, dial tone is received through handset.
Press first digit.	Dial tone is replaced with silent tone.

Action	Response
Complete dialing number.	Termination within switch results in audible ringing or treatment as per dialing plan, or termination on another switch through a trunk results in PCM cut-through when outpulsing is complete.
Other end answers.	PCM cut-through enabling talk path. Applicable to termination within switch configuration.

On-hook dialing (use of handset after answer)

Action	Response
Press PDN key.	PDN lamp comes on, dial tone is received through speaker.
Press SDN key.	SDN lamp comes on, dial tone is received through speaker.
Press first digit.	Dial tone is replaced with silent tone.
Complete dialing number.	Termination within switch results in audible ringing or treatment as per dialing plan, or termination on another switch through a trunk results in PCM cut-through when outpulsing is complete.
Other end answers.	PCM cut-through enabling talk path. Applicable to termination within switch configuration.
Lift handset.	Talk through handset.

On-hook dialing (handsfree)

Action	Response
Press Handsfree key.	PDN lamp comes on, handsfree lamp comes on, handsfree talking is enabled, dial tone is received through speaker.
Handsfree talking on PDN - press SDN.	Auto-hold PDN call (PDN lamp winks). SDN lamp comes on, dial tone is received through speaker, handsfree lamp comes on.
Handsfree talking on SDN - press PDN.	Auto-hold SDN call (SDN lamp winks). PDN lamp comes on, dial tone is received through speaker, handsfree lamp comes on.
Press first digit.	Dial tone is replaced with silent tone.
Complete dialing number.	Termination within switch results in audible ringing or treatment as configured for dialing plan, or termination on another switch through a trunk results in PCM cut-through when outpulsing is complete.
Other end answers.	PCM cut-through enabling talk path. Applicable to termination within switch configuration.

Other end dials PDN

Action	Response
Other end dials PDN.	PDN lamp flashes. Ringing tone is given if set is on the hook. Two seconds of buzz tone given if set is off the hook (not idle).
Lift handset if the set is on the hook.	PDN lamp comes on. Alerting tone is canceled.

Action	Response
Talking on SDN on handset - press PDN key.	Unit buzzes. SDN call is put on auto-hold. SDN lamp winks, PDN lamp comes on. PDN cut-through, handset enabled for conversation.
Press Handsfree key.	Handsfree talking enabled. Handsfree lamp comes on, PDN lamp comes on.
Handsfree talking on SDN, press PDN key.	SDN put on auto-hold. SDN lamp winks, PDN lamp comes on. Handsfree lamp comes on (still handsfree).
Talking on SDN, put SDN on hold.	SDN lamp winks, call on hold.
Talking on handset, press PDN key.	PDN lamp comes on.
Talking handsfree, press PDN key.	PDN lamp comes on, hands free lamp comes on (still handsfree).
Lift handset.	PDN lamp comes on, handsfree lamp off, talking through handset.

Termination

Action	Response
Other end dials SDN.	SDN lamp flashes. Ringing tone is given if set is on-hook. Two seconds of buzz tone given if set is off-hook (not idle).
Press flashing SDN key, left handset if it is on the hook.	SDN lamp comes on. Alerting tone canceled.
Talking on PDN on handset - press SDN key.	Unit buzzes. SDN call put on auto-hold. SDN lamp winks, PDN lamp comes on. PDN cut-through, handset enabled for conversation.
Press flashing SDN key, press Handsfree key.	SDN lamp comes on and stops flashing. Handsfree lamp comes on, handsfree talking is enabled.
Handsfree talking on PDN, press SDN key.	PDN put on auto-hold. PDN lamp winks, SDN lamp comes on. Handsfree lamp comes on (still handsfree).
Talking on PDN, put PDN on hold.	SDN lap winks, call goes on hold.
Talking on handset, press SDN key.	SDN lamp comes on.
Talking handsfree. Press SDN key.	PDN lamp on, hands free lamp comes on (still handsfree).

Handsfree operation

Pressing the Handsfree key allows users to talk to another party on the Meridian IVD set without using the handset. Although the IVD set has on-hook dialing capability, the Handsfree key must be pressed during the call for the user to be able to talk without using the handset. Pressing the Handsfree key while the set is idle activates the handsfree mode and the primary DN to make a call. Handsfree talk is disabled and the handsfree

lamp goes off if the user lifts the handset during the call. To activate handsfree mode again, press the Handsfree key and return the handset to its cradle.

Once handsfree mode is active, it remains active until the user presses the Handsfree key again, lifts the handset, or the call is disconnected. For example, if the Handsfree feature is active and the user puts a call on hold and then places a second call on another line, handsfree mode is still in effect for the second call.

To have a conversation with people in the same room using handsfree mode without allowing the person at the other end of the line to hear, activate the mute feature by pressing the handsfree key again. This causes the handsfree indicator to display a delay flash. To turn the mute feature off, press the handsfree key once again. To disconnect the call while in handsfree mode, press the Release key.

Hardware requirements

In addition to the Meridian IVD sets, this feature requires the following hardware:

- IVD Digital Line Module (DLM)
- Integrated Voice Data Line Card (IVDLC)
- DLM Parallel Serial Time Switch (PSTS)

Limitations and restrictions

IVD Call Processing has no limitations or restrictions.

Interactions

IVD Call Processing has no functionality interactions.

Datafill

IVD Call Processing does not affect data schema tables or office parameters.

Service Orders

IVD Call Processing does not affect SERVORD.

Operational Measurements

IVD Call Processing does not affect Operational Measurements.

Logs

IVD Call Processing does not affect logs.

User interface

IVD Call Processing does not change the user interface.

Billing

IVD Call Processing does not affect billing.

BC1525 - IVD Table Control - Phase I**Description**

The purpose of this feature is to provide the table control and data structures to support the Meridian Integrated Voice and Data (IVD) sets. Existing tables KSETLINE and KSETFEAT establish line and feature appearances on IVD sets, P-phones, and data units. Table IVDINV, which is similar to table KSETINV, is a new customer table. Table IVDINV contains the following configuration information:

- the LEN to which the set is assigned
- the Meridian set type
- the type of ringing
- optional equipment included in the set

Table KSETFEAT controls the following categories of features that are assigned to Meridian sets:

- set features
- subset features
- key features
- Directory Number features
- code access features

Set features

Set features control all Directory Number appearances on a set. A set feature is usually assigned to a vacant key on the set. The exceptions are code access features. Set features include the following:

- Three-Way Calling (3WC)
- Call Transfer (CTR)
- Six-Way Conference (6WC)
- Call Park (PRK)
- Executive Busy Override (EBO)
- Speed Calling - Long (SCL)
- Speed Calling - Short (SDS)
- Speed Calling - User (SCU)
- Make Set Busy (MSB)

- Malicious Call Hold (MCH)
- Ring Again (RAG)
- Privacy Release (PRL)
- Network Resource Selection (NRS)
- Query Time and Date (QTD)
- Directed Call Park (DCPK)

Subset features

Subset features are associated with a specified subset of the DN appearances on the set. Subset features are usually assigned to a vacant key on the set. Code access features are the exceptions. Subset features include the following:

- Call Pickup (CPU)
- Call Forwarding (CFX)
- Call Waiting (CWT)

Key features

Key features must be assigned to a vacant key on the set. They are independent of any DN appearances. There is more than one appearance of each of these feature keys on a single set. Key features include Automatic Dial (AUD) and Intercom (ICM).

Directory Number features

Directory Number features do not require a separate key on the set and are associated with an individual DN appearance on the set. These features are assigned to as many of the DN appearances on the set as necessary. Directory Number features include the following:

- Automatic Line (AUL)
- Special Billing (SPB)
- Denied Incoming (DIN)
- Subscriber Line Usage (SLU)
- Line Study (SDY)
- Calling Line Identification (CLI)
- Do Not Disturb (DND)
- Private Business Line (PBL)
- Random Make Busy (RMB)
- Requested Suspension (RSUS)
- Stop Hunt (SHU)

- Security Code (SEC)
- Automatic Answerback (AAB)
- Message Waiting (MWT)

Note: Automatic Answerback and Message Waiting apply only to the set's primary DN.

Code access features

Many of the set features and subset features can be assigned as code access features. When assigned as code access features, they do not require a separate key on the set. The feature is activated by dialing the access code for the specific feature. If the call state is not idle (for example is ringing, busy, or an active call), the user must precede the access code by pressing either the Three-Way Calling or Call Transfer key to generate a flash.

The following features can be assigned as code access features:

- Speed Calling - Long (SCL)
- Speed Calling - Short (SDS)
- Speed Calling - User (SCU)
- Call Park
- Directed Call Park
- Executive Busy Override
- Conference Calling
- Make Set Busy
- Malicious Call Hold
- Call Pickup
- Call Forwarding
- Automatic Answerback

Hardware requirements

IVD Table Control - Phase I has no hardware requirements.

Limitations and restrictions

IVD Table Control - Phase I has no limitations or restrictions.

Interactions

IVD Table Control - Phase I has no functionality interactions.

Datafill

One new customer (logical) table, table IVDINV, is required to support the Meridian sets. Table IVDINV is a new table implemented in new table control. It contains Meridian set configuration information. This table is datafilled at any time after the LNINV table is datafilled. There are no default tuples to be entered. Dump and restore this table.

There are four input tuple formats for this table, one for each of the three different Meridian voice sets and one for the data adapter (CADA). The SET_TYPE field defines the type of set. To define the set type, enter one of the following in the SET_TYPE field as appropriate:

- M2009 for Meridian M2009 sets
- M2112 for Meridian M2112 sets
- M2018 for Meridian M2018 sets
- CADA for a Compact Asynchronous Data Adapter

Service Orders

IVD Table Control - Phase I does not affect SERVORD.

Operational Measurements

IVD Table Control - Phase I does not affect Operational Measurements.

Logs

IVD Table Control - Phase I does not affect logs.

User interface

IVD Table Control - Phase I does not change the user interface.

Billing

IVD Table Control - Phase I does not affect billing.

BC1535 - MADO Profile**Description**

This feature provides the ability to datafill profile information for the Meridian 2000 series Asynchronous Data Option (MADO). The table used for the datafill is the existing table DPROFILE. This table is used to download profile information to data devices and for Datapath feature reference and information.

The MADO profile captures data from Service Order and table control input, and allows users to set up the data communication parameters of the MADO at the MAP workstation and then download them to the MADO board when the line is returned to service.

This feature is resident in the Datapath subsystem that is optional to Integrated Business Network (IBN). Without a MADO profile, the user can only set the baud rate and parity.

MADO profile downloading

To activate this feature, provide the correct datafill in the DPROFILE table and set the DOWNLOAD parameter to "YES". This can be done by using Service Orders or by table control. Next, at the LTP level of the MAP workstation, execute the Return-To-Service (RTS) command for the MADO line.

Note: Posting the line and returning it to service is unnecessary for datafill additions made through Service Orders, because this action is performed automatically.

When the line is returned to service, the profile is downloaded from the Central Control (CC) to the Parallel Space Time Switch (PSTS) for the MADO line, and from the PSTS down to the MADO board. Because the MADO board has only volatile Random Access Memory (RAM) in which to store the profile, the PSTS stores the profile indefinitely and transfers the profile to the MADO unit upon recovery from a local power loss. If the DOWNLOAD parameter is not set to "YES", it defaults to "NO" and the profile is not downloaded. Error messages are displayed if problems are encountered when attempting the profile download at return-to-service time.

DU (Data Unit) profile table

The DU profile parameters are stored in table DPROFILE. Each entry in the table contains the field DPKEY, followed by a set of fields containing the profile parameters. DPKEY is the key identifying each entry in table DPROFILE. DPKEY consists of the Line Equipment Number (LEN) associated with the data unit's line card. Invalid datafill for a MADO adapter causes an error message to display on the MAP workstation.

Hardware requirements

To configure a Meridian 2000 series set, the line module must be a Digital Line Module (DLM). There must also be a Parallel Space Time Switch (PSTS or 8X46) card present. The Meridian 2000 series sets can then be connected to Integrated Voice/Data Line Cards (IVDLC or 8X47), with a maximum of 16 voice sets per card. Each of the sets can optionally be equipped with a MADO board.

Limitations and restrictions

MADO Profile has no limitations or restrictions.

Interactions

MADO Profile has no functionality interactions.

Datafill

Datafill Table DPROFILE after table KSETINV, RESINV, and IVDINV. The DPROFILE tuple must be deleted before the corresponding tuple can be deleted from table KSETINV, RESINV, or IVDINV.

Error and warning messages can be encountered while using table control to datafill the DPROFILE table. An error prevents the command from being executed while a warning points out circumstances that require attention even though the command is executed properly.

Each data unit requires nine words of protected data store, consisting of four words for the dprofile_suppl_data block and five words for an entry in the DPROFILE table. An additional 390 words of protected store are required to hold the descriptors to the DPROFILE table and its free space map. This free space map consumes one bit of protected store per DU profile. Memory is allocated dynamically.

Service Orders

MADO Profile does not affect SERVORD.

Operational Measurements

MADO Profile does not affect Operational Measurements.

Logs

MADO Profile does not affect logs.

User interface

MADO Profile does not change the user interface.

Billing

MADO Profile does not affect billing.

BC1536 - IVD Call Processing Audits**Description**

This feature provides Central Control (CC) audits to ensure that Integrated Voice and Data (IVD) calls are in the correct state, as well as synchronization audits to ensure lamps are in the correct state.

Audits for IVD sets are applied in two separate processes. The first process is the auditing of erroneous CC states. The second is the synchronization of valid CC states with equivalent LGC states and the refreshing of lamps based on the CC active feature status for certain features.

Synchronization audits are applied to all LCM/DLM-based terminals. The parameters LSYNC_BURST_THRESHOLD, ranging from 0 to 1000, and LSYNC_DELAY_THRESHOLD, ranging from 5 to 6000, control the

number of sets that are audited consecutively and the wait period in seconds between bursts. These parameters are found in table OFCENG. The software initializes the LSYNC_BURST_THRESHOLD to 1 and LSYNC_DELAY_THRESHOLD to 15. The customer can modify these values.

The task that drives the audits "loops" over each peripheral, as well as each terminal datafilled on these peripherals, which includes all Meridian, P-phone, and POTS types. This procedure ensures that every set is audited on a regular and equal basis. The frequency with which a particular set is audited is directly related to the number of datafilled sets. If there are only a few sets datafilled, these sets are audited much more often than if there are numerous sets.

The audit task audits all datafilled terminals that are in the idle state, regardless of whether the set is actually present. If a set is not idle when it is next to be audited, it will not be audited until the next audit cycle. For example, if there are 100 datafilled sets and the audit parameters are set to the default parameters, it takes 25 minutes to audit every set. If there are 1000 sets, it takes 250 minutes, or four hours and ten minutes, to audit every set. If invalid lamp states are invoked on a set and that particular set was audited just before the bad lamp states, it will take more than four hours for the audits to come back around and refresh the lamps.

Hardware requirements

This feature requires that a Digital Line Module (DLM) be connected between the Meridian IVD sets and the LGC/LTC. The LGC must be upgraded with the new XMP memory cards and refitted with the following cards:

- NT6X47AB MP Memory card
- NT6X46AB SP Memory card
- two NT6X45AC Processor card

Limitations and restrictions

IVD Call Processing Audits has no limitations or restrictions.

Interactions

IVD Call Processing Audits has no functionality interactions.

Datafill

IVD Call Processing Audits does not affect data schema tables or office parameters.

Service Orders

IVD Call Processing Audits does not affect SERVORD.

Operational Measurements

IVD Call Processing Audits does not affect Operational Measurements.

Logs

IVD Call Processing Audits does not affect logs.

User interface

IVD Call Processing Audits does not change the user interface.

Billing

IVD Call Processing Audits does not affect billing.

BC1537 - IVD Data Call Processing**Description**

A Meridian Asynchronous Data Option (MADO) is an RS-232 data communications board that fits inside Meridian digital telephones. The MADO units permit the connection of telephones with ASCII terminals and personal computers for optimal data distribution. When making a data call using the MADO unit in a Meridian M2000 series set, the phone number must be dialed using the terminal or PC keyboard. This is called keyboard dialing. MADO offers the same call processing features that data unit call processing offers. MADO call processing follows data unit call processing where possible.

MADO keyboard dialing supports the following features:

- call to local host
- Autodial
- Speed Call
- Resource Call (modem pooling)
- Ring Again
- automatic answering of incoming calls

The following utilities are also provided with this feature:

- updating of Autodial number and Speed Call
- set and reset remote loopback status
- cancellation of pending Ring Again
- status and data query

Hardware requirements

The following hardware is required for this feature:

- A Meridian SL-100 digital switch

- Digital Line Module (DLM)
- Meridian M2000 series set
- An 8X46 Parallel Space Time Switch (PSTS) card
- An 8X47 Port card

Limitations and restrictions

The following limitations and restrictions apply to IVD Data Call Processing:

- The only method of dialing and activating features for the MADO unit is through keyboard dialing. The Central Control responds to keyboard-dialed features as though a feature key were pressed.
- If a call terminates while the user is using keyboard dialing, any items entered are discarded.
- Call Back Queuing is not available.

Interactions

IVD Data Call Processing interactions are the same as those for data unit call processing.

Datafill

Table IVDINV is required to support the Meridian sets. Table IVDINV is a new table implemented in new table control. It contains Meridian set configuration information. This table can be datafilled at any time after the LNINV table is datafilled. There are no default tuples to be entered. Dump and restore this table.

There are four input tuple formats for this table, one for each of the three different Meridian voice sets and one for the data adapter (CADA). The SET_TYPE field defines the type of set. To define the set type, enter one of the following in the SET_TYPE field as appropriate:

- M2009 for Meridian M2009 sets
- M2112 for Meridian M2112 sets
- M2018 for Meridian M2018 sets
- CADA for a Compact Asynchronous Data Adapter

Service Orders

IVD Data Call Processing does not affect SERVORD.

Operational Measurements

IVD Data Call Processing does not affect Operational Measurements.

Logs

IVD Data Call Processing does not affect logs.

User interface

IVD Data Call Processing does not change the user interface.

Billing

IVD Data Call Processing does not affect billing.

BC1538 - IVD Service Orders**Description**

This feature provides users with service capabilities for Meridian digital telephone sets. Commands allow users to add and delete subscriber entries in the database, add or delete options for subscribers, suspend or restore their service, and query information on a subscriber.

Note: Private Branch Exchange (PBX) customer service parameters, feature access codes, or route lists cannot be modified using Service Orders. This type of data is not related to an individual subscriber and can only be changed by altering system data tables using the table editor

A Service Order number is associated with each Service Order. To enter a Service Order, users enter a Service Order command. The system prompts the users for parameters until all required parameters are entered. Experienced users can also have the option of entering all of the parameters on one line without using the prompts. When all information required in the Service Order is entered, the data is verified extensively and distributed to the various required tables. Editing is available to correct any input errors that might occur.

All previous Service Order commands were retained to handle Meridian sets and MADO boards. Existing checking applies to Meridian sets and MADO boards as well. All Service Orders applicable to P-phones and data units will also be applicable to Meridian voice sets and MADO boards. However, some commands prompt the user for information in different ways. Multiple Appearance Directory Number (MADN) input for Meridian sets is the same as for P-phones. The MADN feature is fully supported for Meridian sets.

A new option, Ring Type, is available for Integrated Voice and Data (IVD) sets. It allows users to change the ring type of a set that has already been datafilled. This option can only be used with the CHF (Change Feature) command.

Note: This Ring Type option is not the same as the RINGTYPE set data that is prompted for when establishing new service.

The Ring Type feature can only be used with the CHF command. This option must be associated with key 1 of the set. The IVD set must already be datafilled.

Note: The ring type can be changed for the primary MADN appearance; however, the secondary MADN appearance always uses the default ring type.

Changes to commands

The NEW command has been changed so that users creating a new Meridian set or MADO line must specify the Line Class Code (LCC). The system then prompts the user for additional items, such as group, options, and data transmission parameters. The specific items depend on the type of LCC chosen.

Directory Number Hunt (DNH), Multi Line Hunt (MLH), Directory Line Hunt (DLH) and Bridged Night Number (BNN) hunt groups are now supported for Meridian sets.

When using the EST (Establish) command, users creating a new Meridian set or MADO line must now specify the Line Class Code (LCC). For each subsequent hunt group member, the user must specify a KEY, DN and LEN. If the hunt group member listed is a different data type than the pilot, the system prompts for the LCC and data profile information. The system does not allow the mixing of data and voice in a hunt group. For example, if the pilot is voice, all members must be voice.

The ADD command has been changed so that the system looks at the Line Equipment Number of the member to determine if it is an IVD set. If so, the system prompts for the LCC and ring type. This applies only to MLH, DLH, and DNH hunt groups.

The ADO (Add Option) command is used to add features to feature keys of Meridian sets or MADO units. The MADO unit has no visible keys and does not prompt the user for key number entry when adding features to a MADO unit. All features for the MADO are activated through keyboard dialing. Even though the MADO unit has no keys, key numbers are required for table control. The MADO unit's keys are predefined to allow feature assignment. The user enters only the feature desired and the system assigns the feature to the appropriate key. The keys and their reserved features are as follows:

- Key 1 - Directory Number
- Key 2 - Network resource (allows the user to use Modem Pooling)
- Key 3 - Autodial
- Key 4 - Speed calling
- Key 5 - Volume up
- Key 6 - Volume down
- Key 7 - Ring again

The DEO (Delete Option) command deletes features from keys on a Meridian set or MADO unit. The LEN, KEY, and option being deleted must be specified.

The OUT command removes a set from service. The command uses as parameters the DN, the LEN, and the intercept, such as BLDN. If the OUT command is used on a Secondary DN (SDN), only that DN is removed from the set. If it is used on the Primary DN (PDN), the entire set is removed.

For Service Orders, the ACD command is handled for Meridian sets as it is handled for P-phones. Multiple Appearance Directory Number (MADN) input for Meridian sets is the same as for P-phones. The MADN feature is fully supported for Meridian sets.

The CHF command now allows users to use the Ring Type option to change the ring type of an IVD set that has been datafilled. With this option, users can change the ring type without having to change any other information on the set. The Ring Type option can only be used on an IVD set.

Options

All features and options available on P-phones and data units are available on Meridian voice sets and MADO units with the exceptions of the EXT option for add-ons and extension sets. The MADN option for creating a MADN Meridian DN is the same as for P-phones. A MADN group can be added to a set either during the creation of the set using the NEW command or by adding it as an option using the ADO command. The user can query the Directory Number of the MADN group to see which LENS are associated with it. This lists the type of MADN along with each LEN associated with it.

Hardware requirements

The Meridian 2000 series sets must be configured in a Digital Line Module (DLM - 8X45AA). The Parallel Space Time Switch (PSTS - 8X46) is part of the DLM. A single DLM consists of two units, each of which contains from one to five IVDPCs. The line card used for the Meridian sets is the Integrated Voice and Data Port Card (IVDPC - 8X47AA).

Limitations and restrictions

The following limitations and restrictions apply to IVD Service Orders:

- The EXT (extension/add-ons) option is not available, because the M2000 series sets do not support extensions or add-ons.
- The PLP command is not allowed for IVD sets
- When assigning Line Equipment Numbers (LENS) to a DLM, users can enter only 0 to 9 in the drawer or line subgroup position of the LEN. For example, if a user wants to assign an IVD set to LEN 2 0 1 10, the third position, which is the 1 in this case, is the drawer number of the LEN.

- When assigning features to a 12-key Meridian set (M2112), the twelfth key is automatically assigned to the twelfth key of an M2112 set.
- Meridian port cards contain 32 lines (16 voice and 16 data lines) that is not physically detached from a port card in the same way that a line card can be removed from a drawer. If a line becomes disabled, it is not simply pulled out and replaced. Because the one line is attached to the port card, removing the port card could interrupt the 31 other lines that are still good. To allow continuing service, another line can be assigned to the user. However, to do so frees the bad LEN, which another user can now choose. To avoid assigning a bad LEN to another user, enter this LEN in the IVDTRVL table. This table is checked before a LEN can be assigned to establish service.
- The Ring Type option is not valid for use with any set other than an IVD set that has ring type set data.

Interactions

IVD Service Orders has no functionality interactions.

Datafill

IVD Service Orders does not affect data schema tables or office parameters.

Service Orders

Service Orders include the Meridian line of digital terminals. Meridian voice sets are treated similarly to P-2000 series P-phone sets. The MADO unit is treated similarly to the data unit.

Service Orders include new prompts for data hunt group members. When adding a data device to a hunt group, the software prompts for the Line Class Code (LCC) and profile information for the member if this device differs from the device listed as the pilot of the group.

When using the NEW and EST commands, IVD LCCs can only be associated with an 8X47 line card and not a P-phone line card. LENS for 8X47AA card cannot be used if a LEN associated with an IVD line card is entered, but a P-phone LCC is associated with the LEN. When using the CHF (Change Feature) command, error messages are generated if the ring type is changed incorrectly.

The new field RINGTYPE is not prompted for in the case of a MADO unit. It is applicable only to voice sets. This field is prompted for in the NEW, ADD, and EST commands. This new option does not depend on any other option.

This feature introduces four new LCCs. They are as follows:

- M2009
- M2112
- M2018

- MADO

None of the new LCCs support the EXT option, because there are no extensions or add-on modules of features keys for the Meridian sets.

Operational Measurements

IVD Service Orders does not affect Operational Measurements.

Logs

IVD Service Orders does not affect logs.

User interface

IVD Service Orders does not change the user interface.

Billing

IVD Service Orders does not affect billing.

BC1548 - IVD CP Features

Description

This feature supports the options and user features available on the Meridian Integrated Voice and Data (IVD) sets.

Non-optional keys

All Meridian sets have Hold, Release, and Volume Control keys. These keys are not optional and are not programmable.

Hold The hold function has two modes of operation: manual and autohold. A call can be put on hold by pressing the Hold key (manual operation). Selecting another Directory Number while a call is engaged puts the original call on hold (autohold) and activates the new call. In both cases, the lamp associated with the held call changes from burning steadily to winking. The user can then originate or answer a call on another DN. The Hold key does not have an associated lamp.

Release The Release key terminates a call. The lamp associated with the released call goes off. The Release key does not have an associated lamp.

Volume control The speaker volume is controlled by the two volume control keys that are labeled "Volume Up" and "Volume Down". These keys incrementally increase or decrease the volume.

Optional feature keys

The IVD set has feature keys with associated lamps. The lamps can be on, off, flashing at 60 Impulses Per Minute (IPM), or winking at 120 IPM. The feature keys can be assigned a subset of the following possible features:

- Directory Numbers (DNs)
- Call Park (PRK)
- Three-Way Conference (3WC) or Call Transfer (CT)
- Call Waiting (CWT)
- Ring Again (RAG)
- Call Back Queueing (CBQ)
- Privacy Release (PRL)
- Call Pickup (CPU)
- Speed Calling (SC)
- Intercom (INT)
- Do Not Disturb (DND)
- Make Set Busy (MSB)
- Malicious Call Hold (MCH)
- Message Waiting (MWT)
- Private Business Line (PBL)
- Busy Override (BOV)
- Auto Dial (AUD)
- Handsfree (M2112 set only)

Along with feature keys, the Meridian sets also support code access features. They do not support a switch hook flash.

Directory Numbers and Multiple Appearance Directory Numbers The IVD set typically has two DN's, one of which is the Primary Directory Number (PDN). The bottom feature key is always assigned a DN and is usually the prime DN. Each DN requires one key and associated lamp. Multiple Appearance Directory Number (MADN) is a Meridian SL-100 feature that makes it possible for multiple line appearances to be associated with a single Directory Number. Any line appearance sharing the same MADN can originate calls subject to regular Integrated Business Network (IBN) line restrictions. When an incoming call is terminating on the MADN, all line appearances are alerted and anyone can answer the incoming call. The two basic variants of the MADN are Multiple Call Arrangements (MCA) and Single Call Arrangements (SCA).

Call Park The Call Park feature provides IVD stations with the capability of holding a call against a Directory Number appearance in the system. Any station can later retrieve the call. The call is parked against the Directory Number of the user who requested the feature. The person retrieving the call can do so from any station by first requesting Call Park retrieve and then dialing the Directory Number of the station against which the call was parked. Once a call is parked against a DN appearance in the system, the user is free to originate and receive calls on that DN.

Three-Way Conference Calling and Call Transfer Three-Way Conference Calling allows users to establish a three-way conference call. While actively engaged in a call, the user presses the Conference key, dials the third party and presses the Conference key again to connect all three parties. Once the three parties are conferenced, press the Release key to transfer the call or hang up.

Six-Way Conference Calling Six-Way Conference Calling allows a user to establish a six-way conference call. While actively engaged in a call, the user presses the Conference key, dials the third party, then has the option to alternate between the two parties or press the Conference key again to connect all three. Repeat the procedure to connect a fourth, fifth or sixth party.

Call Waiting If another call attempts to terminate on an engaged DN, the user is notified. The user has the option of pressing the Call Waiting key to autohold the original call and answering the waiting call, alternating between the two calls, or terminating the calls.

Ring Again When encountering a busy number, press the Ring Again key to activate the Ring Again (RAG) feature, go on hook, and if desired, originate or answer other calls. The user is notified by buzzer or lamp wink when the busy end becomes free. To cancel a RAG request, press the RAG key while it is in an active (but not notification) state.

Call Back Queueing Call Back Queueing is similar to the Ring Again feature. It allows a user to make a Ring Again request on a busy trunk in addition to a busy line. Upon hearing a busy tone, reorder tone, ERWT, or no circuits announcement, press the RAG key to make a CBQ request. If the request is allowed, the RAG lamp becomes lit and the DN lamp goes off. If the request is not allowed, the keystroke is ignored. When the trunk group or line becomes available, an audible RAG notification tone occurs and the RAG lamp changes from solid to winking. The user can answer the recall by pressing an inactive DN and then the RAG key. The RAG lamp goes out and the Meridian SL-100 tries to complete the call over the trunk or line. Cancel the request at any time by pressing the RAG key again. As with the RAG feature, the request cannot be canceled while the user is being notified that the trunk or line is free.

Privacy Release/MADN Multiple Appearance DN, Single Call Arrangement (MADN SCA) normally has privacy associated with an active call. This means that other members in the MADN group are denied access to that DN. The station engaged in an active call can activate the Privacy Release key. Another member can now press the DN to enter the call. Once entered, privacy is reestablished.

Call Forward Call Forward allows a station user to have incoming calls automatically forwarded to a programmed telephone number. The user programs the number to receive forwarded calls by pressing the Call Forward key, dialing the destination number, and pressing the Call Forward key again. The Call Forward status lamp is on while Call Forward is active.

Call Pickup Call Pickup enables a station to answer incoming calls to another station in the same call pickup group. To activate this feature, press the Call Pickup key after obtaining a dial tone.

Speed Calling Speed Calling allows users to store numbers in a speed calling list. To use Speed Calling, the user obtains a dial tone, presses the Speed Call key and dials the one- or two-digit access code. The list of stored Speed Call numbers can also be reprogrammed using the Speed Call key.

Intercom The Intercom feature allows a user to establish a voice connection to the loudspeaker of a preselected station. To activate, go off hook and press the Intercom key. This establishes the voice connection. The receiving end can then establish a normal connection by going off-hook and selecting the Intercom channel.

Do Not Disturb Only the attendant can make IBN lines individually busy to incoming calls by using the Do Not Disturb Individual Station (DNDIS) feature. The attendant must also reset the status of a line so that the line can receive incoming calls again. Therefore, a person on an IBN line has to call the attendant initially to make the line busy to incoming calls, then a second time to make it available again to accept calls. Users can make their own sets appear busy without the help of the attendant by invoking the Make Set Busy feature.

Make Set Busy By activating the Make Set Busy key, the station appears busy to all incoming calls. The station user can still originate calls. The associated lamp remains on while the feature is active.

Malicious Call Hold The Malicious Call Hold feature allows the user to hold a connection within the switching unit on a malicious call, enabling the call to be traced back to the originating party. If both parties are terminated in the switching unit, the entire connection is held until the called party releases the call. If the call is on an incoming trunk and terminates within

the switching unit, the connection is only held back to the incoming trunk. When this feature is activated, a log report generates and an alarm sounds at the switching center.

Message Waiting A Message Waiting lamp indicates to a station user that a message is waiting at the message center. If the customer has defined a message center, the user dials the message center Directory Number (MCDN) to retrieve messages. The Message Center attendant controls the DN's message lamp.

Private Business Line The Private Line feature allows a direct dial "9" trunk to be associated with a DN appearance on the set.

Executive Busy Override When encountering a busy signal, a set equipped with the Busy Override feature can break into the busy connection. This feature is activated when the user presses the Busy Override key. Both parties of the busy connection are notified by a tone of an impending override. A three-way call is then established that consists of the activating station and the original busy parties.

Automatic Dial One or more feature keys can be designated as Automatic Dial. This allows the users to store one telephone number in a feature key. Once the dial tone is obtained, the feature automatically dials the programmed number.

Hardware requirements

This feature requires the following hardware:

- Meridian SL-100 digital switch
- Digital Line Module (DLM)
- Meridian 2000 series set
- PSTS (8X46) card
- 8X47AA port card

Limitations and restrictions

The Private Business line cannot be a member of the MADN feature. Although the PB line resembles a POTS line, no POTS features can be assigned to it. The PB line cannot use the code access features available on the set. These code access features are as follows:

- Call Forwarding
- Call Pickup
- Speed Calling
- Call Park

Interactions

The following table describes the interactions between features.

Feature	Interaction
Call Park - The interactions between the Call Park feature and other features that can be assigned to either the calling or receiving party are listed below. It is assumed that the parking party is a P-phone or Meridian set DN appearance and that the feature has been activated using the Call Park key.	
Three-way Calling or Call Transfer	While a call is in the Call Park primed state (Call Park is activated), neither party can initiate three-way calling or call transfer. The Call Park store feature is disabled on calls in which three-way calling or call transfer are in effect. However it is possible to press the Three-way Call key, then press the Call Park key and dial the parked DN to retrieve a parked call on the second leg of a three-way call.
Call Waiting	The Call Waiting feature allows a call to be waited against a P-phone or Meridian set DN involved in a call on which Call Park has been activated. In such situations, if the Call Waiting key is pressed to access the waiting call, the original call is automatically held, and the Call Park request is canceled. It is possible to park a call that is active on the Call Waiting key. However, the recall is always presented to the primary DN. Call Park recalls to the parking station are never call waited.
Call Forwarding	Call Park recalls to the parking station are not call forwarded, even if Call Forwarding was previously activated on the station. This is true no matter which variation of the Call Forwarding feature is assigned.
Executive Busy Override	If an incoming call attempts to activate the Executive Busy Override feature on a call that is in Call Park primed or Call Park held states, the attempt is denied and the calling party receives a reorder tone.
Ring Again	The activation of Call Park on a call does not affect Ring Again requests from either the parking or the parked party. Such requests are handled in the normal manner once the party against whom the Ring Again request was made releases the call.
Call Pickup	Accessing a Call Park recall from a station other than the one being recalled is possible using the Call Pickup feature. Once accessed in this manner, the call is automatically unparked.
Straight Intercom	The Call Park feature is deactivated on Straight Intercom calls, because intercom lines have no Directory Number against which the call can be parked.
Do Not Disturb and Make Set Busy	Activating either the Do Not Disturb or Make Set Busy features on a station does not prevent Call Park recalls to that station. Make Set Busy can be activated even while the call is in Call Park Confirm, Call Park Primed, or Call Park Held states.

Feature	Interaction
Call Line Identify with Flash and Malicious Call Hold	It is not possible to activate the Calling Line Identify with Flash (CLF) or the Malicious Call Hold features on a call that has been primed for parking. A restriction on the Call Park feature prevents the originator of a call from activating Call Park if the terminator has either the CLF or MCH feature assigned.
Speed Calling and Automatic Dial	To retrieve parked calls, it is possible to use either Speed Calling or Automatic Dial to specify the digits against which the call to be retrieved was originally parked. This is done only after the user presses the Park key and receives a special dial tone. In these situations, the lamps associated with either of these features functions in the usual manner.
Multiple Appearance Directory Number	MADN group members with either the single call or multi-call arrangements have access to the Call Park feature. Since all members of a MADN group share the same Directory Number, only one member is allowed to park a call at any time. If the Call Park recall occurs, it only rings the station of the MADN member that originally parked the call.
Privacy Release	The Privacy Release feature is deactivated on calls that are primed for parking.
Private Business Lines	Although Call Park is a set feature on Meridian stations, it does not apply to Private Business Lines (PBL). If a user presses the Park key while a station is active on a PBL Directory Number, the appearance is ignored.
Attendant Camp-on	It is not possible for the attendant to activate the Camp-on feature on a call that was primed for parking. In such situations, the attendant receives reorder treatment.
Attendant Busy Verification	An attendant attempting to busy-verify a line involved in a call on which the Call Park was activated is given reorder treatment. This is true whether the call is in Call Park Primed or Call Park Held states.
Three-Way Calling and Transfer - The following feature interactions are virtually the same as those for existing IBN three-way calling.	
Hold	If an inactive DN key is pressed at any time, any currently active DN is put on hold. This can include the conference itself.
Call Waiting	The user does not receive Call Waiting notification while active on a three way call. The user can initiate a three-way call while Call Waiting is active. Answer a call on the CWT key by pressing the 3WC key to originate a second leg of the call, assuming the 3WC key is not currently being used with another DN. The second leg is subject to restrictions and billings as if it were the set's PDN.
Three-Way Calling	Three-Way Calling interacts with itself. The user can initiate a three-way call on one DN, hold the second leg of the call, and use another DN. However, if the user presses the 3WC key while active on a second DN, it is ignored. This is because the system cannot determine if pressing the 3WC key applies to the second leg of the first call, or is intended to initiate a second three-way call.

Feature	Interaction
Ring Again	The user can use the RAG key on the second leg of a call. If the user presses the RAG key during an audible busy tone on the second leg of a three-way call, the RAG request is activated and the three-way call lamp turns off.
Privacy Release	If the PRL key is pressed while the three-way call is active, it is ignored.
Call Forward	If the terminating party of the second leg of the 3WC has Call Forwarding active, the call is forwarded and becomes a normal call.
Automatic Dial	Press the 3WC key, then the AUD key to dial the second leg of the call.
Call Pickup	The terminating party of the second leg of the 3WC can be picked up. The originator of the second leg of the 3WC cannot use the CPU key or dial the CPU access code to connect to another station's call in the Call Pickup group.
Speed Calling	The originator of the second leg of the 3WC can press the Speed Calling key and the Speed Call Digit access code to dial the third party.
Access codes	The user cannot use the 3WC key to simulate a flash and then dial an access code for a feature.
Attendant Camp-on	If a call is camped on to a two-port call, the user receives an audible camp-on tone. The user can use the 3WC key to alternate back and forth between the camped-on party and the original party.
Attendant Recall	If the attendant has extended the call to a third party and then placed both on hold, either user can then press the 3WC key to recall the attendant.
Busy Override	Users encountering a busy tone on the second leg of the 3WC cannot use the Busy Override (BOV) feature. Busy override is not possible on the three-port conference once the user is connected.
Automatic Answer Back	The second leg of a 3WC can terminate on a phone with Automatic Answer Back.
Six-Way Calling	Users cannot originate on the 3WC key while a conference is active on another DN, or use the Six-Way Calling feature when a three-way call is active on a DN.
Private Business Line	A Private Business Line is used for the first leg of a three-way call.
Authorization codes and account codes	Enter authorization codes or account codes on the second leg of the three-way call the same as on a 500/2500 set
Uniform Call Distribution	On the second leg of a call, the user can terminate on a Uniform Call Distribution (UCD) Directory Number. The call can also be conferenced.
Six-Port Conference	

Feature	Interaction
	The conference feature can be assigned to any Meridian set as long as it has at least one DN that can originate calls. All feature interactions for a Meridian set 30-port conference follow that of the IBN flexible station conference with the following clarifications: • Thirty-port conference is a set feature and applies to every DN on the set that can originate calls. However, it does not apply to private business lines on the set. • If a set is assigned the Call Waiting feature and is active in a 30-port conference, any incoming calls to the set are call waited if the set is not involved in a consult call. • If one of the members of the conference call is a P-phone or Meridian set with Call Waiting, an incoming call to this set is also call waited. • The consult call to a busy line with the CWT/CWI option is not call waited. • Consult calls to a Multiple Appearance Directory Number can be transferred to the conference, provided the call is answered. A MADN line can also originate a 30-port conference. • If the attendant is reached on the consult call, the controller has no control over the conference. The controller cannot conference the attendant. Control is returned to the controller when the attendant either releases the consult call or extends the call to another part. • If an operator is reached on the consult call, the call is connected through a trunk and therefore the controller would not lose any conferencing capabilities.
Call Waiting	
	The following interactions apply to Call Waiting: • A call is waited only if the line is in talking state. • Call Waiting does not apply to Busy Verification by the attendant. • If the called station activates Call Forward Universal or Call Forward Intragroup, the Call Waiting feature is disabled for the duration that either of these two features is active. Call Forward Busy and Call Waiting are compatible. The first call to a busy station with CFB is waited and subsequent calls are forwarded to CFB DN. Call Forward Don't Answer is incompatible with Call Waiting. A Call Waited call is not forwarded if it is not answered. • Call Waiting does not apply to attendant-originated calls. If the called station is busy, the attendant receives a busy tone. • The called station is able to invoke the conference feature from the Call Waiting key. This means the attendant can have a conference on the Call Waiting key, as well as another conference on the DN key. The only restriction is that the attendant cannot conference a call on one of the DNs with the waited call. Any six-port conference call is call-waited on P-phone and Meridian sets only. • Call Waiting is subject to called line restrictions. A call is only waited if the called station is permitted to receive the call type. • Call Waiting applies to Night Service type calls. If the called station is also a night station, calls placed directly to the station do not have priority over Night Service calls. • Call Waiting cannot be assigned to any DN that uses the No Double Connect option.

Feature	Interaction
	- Call Waiting and Attendant Camp-on are mutually exclusive. Attendant Camp-on is a customer group parameter and Call Waiting is assigned for each set or DN. If both are applicable to a DN, Call Waiting has precedence. - Executive Busy Override does not break in on a call-waited call. However, override on the DN call that has a call-waited call is possible.
Speed Calling	
The following feature interactions apply to Speed Calling: - Speed Calling is transparent to Call Forwarding and Make Set Busy. The subscriber can assign or use the Speed Calling feature while Call Forwarding is active without noticing any difference in the feature's performance. - The Speed Call number cannot be updated while the line is busy on a call. - Meridian SL-100 does not support cut-through dialing, so pause insertion is unnecessary. Asterisks cannot be inserted to serve as timed pauses. - Speed calling can be used to establish a six-port conference call, a three-way call, and to transfer a call. - It is possible to put a call on hold and update a number in a Speed Calling list. However, it is not possible to program a set when another set has put it on hold.	
Intercom Call	
An intercom call cannot have any features active on it. A user can put an intercom call on hold or make use of autohold, but the system ignores any attempts to activate any features on it.	
Make Set Busy - This section describes the effect of the MSB feature on other features that can be assigned to the Meridian set. Features not mentioned here function as usual even on a busy set.	
Ring Again	The Ring Again feature takes precedence over MSB. Outstanding Ring Again requests are handled in the normal fashion on Meridian sets in the make busy state. However, RAG requests from other parties on a Meridian set in the make busy state are not permitted.
Call Waiting	If MSB All Calls is assigned, the Call Waiting feature is deactivated on all DN appearances while the Meridian set is in the make busy state. If MSB Intragroup is assigned, only intragroup calls are prevented from Call Waiting on a busy set.
Executive Busy Override	Attempts by incoming calls to activate the Executive Busy Override (EBO) feature are blocked on Meridian sets made busy, but the calling party receives a reorder tone as the default treatment instead of a busy tone.

Feature	Interaction
Call Forwarding	The Call Forwarding feature interacts with the Make Set Busy feature as follows: • Calls to DN appearances on which the Call Forwarding Universal or Call Forwarding Intragroup variations have been activated are forwarded, regardless of whether the set is made busy or not. • Calls to DN appearances assigned the Call Forwarding Busy or Don't Answer variation always receive the treatment specified for MSB. • Call Forwarding Universal and Intragroup variations always take precedence over all other variations, whether the MSB feature is activated or not.
Intercom	Make Set Busy does not affect the intercom feature. Intercom calls terminate on Meridian sets even if the MSB feature is activated on the set.
Attendant Originate, Extend	If the attendant attempts to originate or extend a call to a DN appearance on a Meridian set in the make busy state and the set is assigned the MSB All Calls feature, the attempts are blocked. In this situation, the message "MSB ACTIVE" appears on the console's display and the attendant is given two seconds of reorder tone. If the MSB Intragroup feature is assigned to a set, the attendant is always allowed to terminate on an idle DN appearance on the set whether or not MSB is activated on that set.
Signal source, signal destination	If the attendant attempts to signal a DN appearance on a Meridian set in the make busy state, it is handled in the normal manner.
Do Not Disturb	The Make Set Busy feature takes precedence over the attendant-activated DND feature. Treatments specified for MSB apply when both MSB and DND are activated on a given line. If both MSB and DND stations are active on a line and MSB is deactivated, the DND is also deactivated. If the attendant attempts to activate or deactivate DND on a Meridian line on which MSB is activated, the message "DISALLOWED" appears on the console.
Operator verification	The Busy Verification Lines (BVL) feature is the only attendant feature that overrides the Make Set Busy feature. An attendant applying Busy Verify on a Meridian set in the make busy state is unaware of the MSB feature.
Attendant Camp-on	Attendant camp-on is not possible on Meridian sets in the make busy state. The attendant is given reorder treatment and the message "MSB ACTIVE" appears on the console's display if it is equipped with a display key.
Malicious Call Hold - This section describes how activating Malicious Call Hold on a call affects the operation of other features.	
Three-Way Calling and Call Transfer	Attempts to initiate Three-Way Calling or Call Transfer from a call held by MCH are denied regardless of whether they are initiated by the calling or called party. All code access features are also denied on MCH held calls.
Call Waiting	For Plain Old Telephone Service (POTS) and IBN stations, the Call Waiting feature is not compatible with MCH. The Call Waiting feature is deactivated on calls held by MCH, so that the originating party receives busy treatment.

Feature	Interaction
Executive Busy Override	Incoming calls attempting to activate the Executive Busy Override feature on calls held by MCH are blocked and the calling party receives the reorder tone.
Call Park	Calls held by the MCH feature cannot be parked on the Meridian set.
Attendant Camp-on	Attendant Camp-on is not possible on calls on which the MCH feature is active and the attendant is given reorder treatment.
Busy Verification	The attendant is not able to busy-verify a line involved in a call on which the MCH feature is active. In such cases, a busy tone is applied to the Attendant Console.
Busy Verification Trunks (Barge-In)	The attendant is not able to barge in on a trunk involved in a call on which the MCH feature is active. In such cases, a busy tone is applied to the console.
Message Waiting - This section describes how Message Waiting affects the operation of other features.	
Attendant extended calls	The following feature interactions apply to attendant extended calls: • Attendant extended calls to a station do not follow the Call Forward No Answer feature. If the station is idle, the attendant extended call is not forwarded to the message center. • Attendant extended calls to a station do not follow the Call Forward Busy feature. • Attendant Camp-on or Call Waiting is applicable if the customer group has the Camp-on feature or the station has the Call Waiting feature. • Attendant originated calls to a station follow the Call Forward No Answer and Call Forward Busy features. Attendants are allowed to queue for the message center attendants. • If attendants serving as the message center are in subgroup 0 and are in Night Service, calls are not forwarded to the message center. Message center attendants in subgroup 1 to 7 are routed to subgroup 0.
Recalls	Calls recalled by the Call Park or Permanent Hold feature or terminated by the Call Hold feature to a station are not subject to Call Forward No Answer or Call Forward Busy. Message center forwarding is not applicable for these recalls.
Ring Again and Call Back Queueing	Recalls of queued calls (either Ring Again or Call Back Queueing) are not subject to Call Forward No Answer.

Feature	Interaction
Call Forward	A station can have one or both of Call Forward No Answer or Call Forward Busy to another station, or one or both of Call Forward No Answer or Call Forward Busy to the message center. Call Forward Universal and Call Forward Intragroup, when activated, supersede the Call Forward No Answer and Call Forward Busy Features. A station can program Call Forwarding to the message center through the Call Forward Universal and Call Forward Intragroup features. Note: Call Forward Busy and Call Forward Don't Answer can be datafilled as different DNs.
Station busy features	The Do Not Disturb, Make Set Busy, and Ring Again features override the Call Forward feature. The message center is not applicable to calls with active Do Not Disturb.
Multiple Appearance Directory Number	Message Waiting for stations belonging to a MADN group have Message Waiting activated against the prime set only. The primary member owns call requests against the MADN group. This feature is applicable to the primary member only.
Hunt group	For Directory Number Hunt groups (DNH), Message Waiting is applicable for the station. For Directory Line Hunt and Multi-Line Hunt, Message Waiting is activated for the pilot DN only. Stations in a hunt group can have the Call Request feature. This feature operates in the activate mode only. The pilot owns call requests against the hunt group. When the Message Waiting feature is assigned to a Meridian station, it applies only to the station's Primary Directory Number. Message Waiting is not available to secondary DN appearances on Meridian stations. Message Waiting can only be assigned to the primary member of a MADN group. For this reason Message Waiting cannot be assigned to Meridian stations where the PDN is a non-primary MADN group member.
Private Business Line	
The Meridian set features that have a key are not available to the Private Business Line (PBL). These features include the following: • Call Transfer • Three-Way Calling • Ring Again • Speed Calling • Automatic Dial • Conference 6 • Busy Override • Automatic Answer Back • Make Set Busy The PBL can use the Hold and the Release key. All flashes on the PBL are ignored.	

Feature	Interaction
	The PBL cannot have any subset features included with the PBL. The subset features include: • Call Pickup • Call Forward • Call Waiting If an existing SDN key with subset features is changed to a PBL key, the subset features must be deleted before assigning the PBL keys. The PBL cannot have any receptacle features associated with the DN. These features consist of the following: • Automatic Line • Special Billing • Denied Incoming • Subscriber Line Use Any existing receptacle feature must be deleted before assigning the PBL key.
MADN	
	The following features and options cannot be used with MADN: • UCD - Uniform Call Distribution • CSDDS - Circuit Switched Digital Data Systems • All hunt groups The following features and options interact with MADNs on a line or member basis, but are handled by existing call processing: • DOR - Denied origination • DTM - Denied termination • FNT - Free number termination • RSUS - Requested suspension • SUS - Suspended line • PLP - Plug up • DIN - Denied incoming • CLI - Calling Line Identification • CLF - Calling Line Identification with Flash • COD - Cut off on disconnect • SPB - Special billing

Feature	Interaction
	Do Not Disturb, Group Intercom, and Automatic Line are incompatible with MADN. All other features and options are compatible or independent of MADNs. Executive Busy Override cannot barge in on the MADN end of a MADN call. This is because EBO is used to barge in on a specific talking party. However, with MADNs there is no way for the user of EBO to know which MADN member is active. A MADN member can be the third party in a call in which an EBO barges in, because the member identity is unimportant in this situation.
Three-Way Calling	Three-Way Calling is assigned on an individual line or individual member basis. If an MADN group member who is active in a conference call that was initiated using Privacy Release attempts to create a second conference using Three-Way Calling, the attempt is ignored. MADN, like all other IBN lines, only allows one active conference for each DN.
Call Waiting	Call Waiting is assigned on an individual line or individual member basis. If a MADN SCA group member is active with a call and a second call is made to this MADN, the MADN terminator selects the active member to terminate on. Incoming calls are waited on the line or set, not the whole group, and follow normal Call Waiting feature restrictions. If Call Waiting is available on a P-set and the MADN is a member of the Call Waiting DN subset list, a second call coming in to this active MADN member is waited on this member Call Waiting key. For 500 and 2500 sets, if Call Waiting has been assigned to an active MADN member's line, a second incoming call is waited on this member. If this member terminates the present call by going on-hook, only this set is rung again.
Call Park	Call Park is assigned on an individual line or individual member basis. Only the member of the group who parked the call is rung again when the parking meter times out. Only one call can be parked per MADN group.
IBN Call Forwarding	Call Forwarding is assigned on a group-by-group basis. Call Forwarding is compatible with MADNs, but with the following restrictions: • The MADN group must have a primary member. • The Call Forwarding option is only set on, or assigned to, a primary member's line. • Call Forwarding DN subsets for Meridian sets cannot include non-primary MADN group members. • For the CFU, CFI, and CFUI varieties of Call Forwarding, only the primary member can program, activate, and deactivate Call Forwarding for the group. • Also for CFU, CFI, and CFUI, only the primary member receives the ring splash as the call is forwarded. • For Call Forwarding Don't Answer, the entire group is rung for the datafilled amount of time before the call is forwarded.

Feature	Interaction
	- When CFB, CFD, or CFBD is assigned to the primary member's line or when CFU, CFI, or CFUI is activated by the primary member, the entire call is forwarded. This means that once a call is forwarded from a MADN group, no member of that group can answer that call. - When a forwarded call reverts back to a CFD station that is a MADN, the entire group is rung again as a normal incoming MADN call.
Call Pickup	Call Pickup is assigned on an individual line or individual member basis. However, MADN group members are not restricted to belong to the same Call Pickup group or to belong to any group at all. Call Pickup behaves the same with MADN lines as with any other IBN extended line.
TAFAS	MADN can serve two purposes with TAFAS. A MADN group can be a TAFAS device that can be answered directly or picked up using the TAFAS access code. A MADN group member can also answer a TAFAS call using the access code.
Ring Again	Ring Again is assigned on an individual line or individual member basis. It behaves the same as Ring Again for a normal line. Any member is allowed to initiate Ring Again and only that member receives the Ring Again recall for that call. As per normal lines, only one Ring Again request is allowed per MADN member.
Subscriber Line Usage	Subscriber Line Usage can only be set on an individual member or line basis, through the use of office equipment numbers. Attempts to assign SLU to a MADN are flagged as an error and a message is displayed.
Busy Verify Line	If an attendant busy-verifies an idle MADN group, only the selected primary member is terminated. The other member's lamps go on and they are locked out.
Preset Conference	If a MADN is included in the call out list of a preset conference, only the selected primary member is terminated. The other member's lamps go on and they are locked out.
Do Not Disturb	DND, Group Intercom, and Automatic Line are incompatible with MADN.
Busy Override	
With the exception of Call Waiting, feature interactions for Meridian Executive Busy Override follow that of IBN EBO. A Meridian set with EBO and CWT option is call waited while active with EBO, because Meridian CWT does not require a three-port conference circuit. EBO can barge in on a call on a Meridian set that has a call-waited call. Only one authorization or account code per key can be stored. The user cannot store a Directory Number, plus an authorization code or an account code against the AUD key. The authorization code cannot be stored with an access code, because the Meridian set does not support a flash. Automatic Dial can store dialed feature access codes that the set may have, such as Call Forwarding, Call Pickup, or Call Park. The Automatic Dial feature also interacts with the following features: A pound sign (#) is used to indicate the end of the number. The number is not stored.	

Feature	Interaction
	- Automatic Dial can establish a six-port conference call or three-way conference call, and can also transfer a call. - Call Forwarding can be activated to a number contained in an AUD key if the set has both features. This activates Call Forwarding to the number stored against the AUD key when the feature is in use. - The AUD key updates a number in the Speed Call list. The system does support pressing multiple keys while programming. - It is possible to put a call on hold and update the number associated with the AUD key. However, it is not possible to program while on hold.

Datafill

IVD CP Features does not affect data schema tables or office parameters.

Service Orders

IVD CP Features does not affect SERVORD.

Operational Measurements

IVD CP Features does not affect Operational Measurements.

Logs

There are two different log reports associated with the Malicious Call Hold (MCH) feature. One is used when the calling party is on a line. The other is used when the call is from a trunk. These reports are identical to those used for the Calling Line Identification with Flash (CLF) feature on IBN lines since MCH is the P-phone equivalent of CLF. Included in the log report for line originations (LINE126) is the DN and LEN, while the trunk report (LINE125) includes the common language name and circuit number of the incoming trunk. The reports also specify the time and date of the call.

For P-phone sets that are assigned the MCH feature, these log reports are only generated when the feature is activated, not every time a call terminates on one of the set's DN appearances. If a subscriber wishes to have a report of every call termination on a particular P-phone line, then the Calling Line Identification (CLI) feature must also be assigned. Because CLI is not a set feature, CLI must be assigned to individual DN appearances on a P-phone set.

User interface

IVD CP Features does not change the user interface.

Billing

IVD CP Features does not affect billing.

BC1558 - Digital Set Diagnostics

Description

This feature tests the hardware of the Meridian M2000 set. It is similar to the Meridian SL-100 Electronic Telephone station ringer test. This diagnostics program provides a unique visual or audio response to each key that is pressed to verify the operation of the set.

To begin the test, the set must be idle with the handset on-hook. The tester presses a loop key and dials a two- or three-digit access code and the last five digits of the Directory Number. The last five digits are checked to ensure that they are the same as what is registered on the switch as the telephone number of the subscriber. If they are different, the tester receives a reorder tone. The tester presses the Release key to stop the test. If the digits are correct, all the LCDs on the set come on. When the test is finished, a lamp audit restores the lamps to their pretest state.

The tester then performs a series of specific operations on the handset, dial pad, and feature keys of the unit. These tests must be performed in a specific order, and a specific response must be given for each test. Handsfree operation is not tested for the M2009 and M2018 sets. Eleven keys are tested on the M2112 and nine keys are tested on the M2009.

Hardware requirements

For this feature, a Digital Line Module must connect the Meridian IVD sets and the Line Group Controller (LGC). Because of the increase in LGC code, the LGC must be upgraded with the new XPM memory cards. The LGC must be refitted with the following:

- a NT6X47AB MP Memory card
- a NT6X46AB SP Memory card
- two NT6X45AC Processor cards

Limitations and restrictions

The following limitations and restrictions apply to Digital Set Diagnostics:

- No terminations are allowed on any of the set's other VIDs while the test is in progress, because the restricted Boolean parameter of the UNPROT DATA line is set to "true".
- The tester has seven minutes to perform the test. Tests can be complete either by performing all of the operations or by a timeout. When the test is completed, the restricted Boolean parameter is reset on all the VIDs. Regardless of the hook state, the set is completely idled, with no dial tone or other originating supervision.
- This test is not valid for the MADO unit. Users cannot initiate the test from a data line.

Interactions

A tester trying to perform the test when any other loop keys are not idle receives the reorder tone. No attempt is made to restore LCDs to their pretest state. If a feature key's LCD is on before the test begins, it goes off before the end of the test and the feature remains in the same state as before the test.

Datafill

Digital Set Diagnostics does not affect data schema tables or office parameters.

Service Orders

Digital Set Diagnostics does not affect SERVORD.

Operational Measurements

Meridian sets use the same OMs as P-phones.

Logs

Digital Set Diagnostics does not affect logs.

User interface

Digital Set Diagnostics does not change the user interface.

Billing

Digital Set Diagnostics does not affect billing.

BFxxxx features

BF0625 - IVD LGC Requirements

Description

This feature provides the changes required in the terminal processing task that affect call processing in the Line Group Controller (LGC) for the Meridian and SL-Touch set digital telephone families. The Meridian set uses the X12 Digital Station Interface Chip (DSIC) to interface between a two-wire full duplex Time Compression Multiplexed (TCM) loop and the voice and data functions in the set. The DLIC (Digital Line Interface Chip) performs the protocol conversion between DS-30X serial PCM (Pulse Code Modulated) data on the processor side and eight TCM twisted-pair subscriber loops connected to eight IVD sets. The DLIC on the loop side interfaces with the DLIC chip on the IVD set.

Meridian sets provide a standard handset, dial pad, programmable function keys and associated indicators, a speaker for voice and tone alerting, a hold key, a release key, and volume control keys. The M2112 set provides an integrated handsfree unit with 11 programmable keys. The twelfth key is assigned to the handsfree function. The M2018 set provides 18 programmable keys and a jack for an add-on handsfree or headset module.

The Compact Asynchronous Data Adapter (CADA) is an 8031-based Data Access Module (DAM) that is installed in a Meridian set. It provides asynchronous data communications between a user's Data Terminal Equipment (DTE) and a DAM using a Meridian SL-100. The user interface consists of keyboard dialing and menus. A CADA set provides true simultaneous voice and data transmission. This means that the user can talk on a Directory Number (DN) line while using the terminal.

The SL-Touch set is an intelligent communications terminal that offers a full complement of Meridian SL-100 features. It uses soft function keys, feature menus, and prompts. The SL-Touch set does not have ordinary feature keys with indicators. Instead, functions are activated by touching the softkey labels that appear on a large Liquid Crystal Display. The SL-Touch set includes an integrated handsfree unit and provides for an optional data communications adapter.

The handsfree unit allows users to talk without lifting the handset from the hook. Pressing the Handsfree key on an idle set selects the primary DN for the call. When the set rings on the primary DN, pressing the handsfree key turns on the handsfree unit and answers the incoming call. To deactivate the handsfree unit, the user can go off hook or press the Release key. Pressing the Handsfree key while the unit is active mutes the call.

Hardware requirements

For this feature, a Digital Line Module must connect the Meridian IVD sets and the LGC/LTC. Because of the increase in LGC code, the LGC must be upgraded with the new XPM memory cards. The LGC must be refitted with the following:

- a NT6X47AB MP Memory card
- a NT6X46AB SP Memory card
- two NT6X45AC Processor cards

Limitations and restrictions

IVD LGC Requirements has no limitations or restrictions.

Interactions

IVD LGC Requirements has no functionality interactions.

Datafill

IVD LGC Requirements does not affect data schema tables or office parameters.

Service Orders

IVD LGC Requirements does not affect SERVORD.

Operational Measurements

IVD LGC Requirements does not affect Operational Measurements.

Logs

IVD LGC Requirements does not affect logs.

User interface

IVD LGC Requirements does not change the user interface.

Billing

IVD LGC Requirements does not affect billing.

BF0632 - MADO T-link Firmware

Description

This feature provides the firmware required to support the T-link protocol on the Compact Asynchronous Data Adapter (CADA). The Meridian Asynchronous Digital Option (MADO) is a microprocessor-based Data Access Module (DAM) that provides an interface between an RS-232 connection of a Data Terminal Equipment (DTE) and a Digital Set Interface Circuit (DSIC) that maps data onto a channel using T-link protocol. The MADO board uses Time Compression Multiplexing (TCM) technology to map the RS-232 interface onto a two-wire loop. The MADO board operates in a Meridian set on the Meridian SL-100 system. It is powered by an external power supply that plugs into a standard wall socket and is compatible with other Datapath products.

The Datapath Profile is a datafillable table that contains parameters, such as data rate, that characterize a DAM. Information in the table is downloaded from the Meridian SL-100 to the DAM. Many of these parameters that are downloaded to a MADO unit are asynchronous communication parameters. No physical interface exists on the MADO unit that allows entry of parameters. The following are some of the downloaded parameters:

- The Adaptive Profile allows the MADO board to adapt its profile to that of the far end MADO. Depending on the state of this parameter at both ends of the MADO to CADA link, the T-link parameter exchange before establishment of a data link can force one end to adapt its profile to that of the other end. If both MADO units in a connection have the Adaptive Profile option enabled, it is the called party that adapts. If the two MADOs have incompatible parameters and neither unit has the Adaptive Profile option enabled, the call is terminated.
- When the Assert Data Terminal Ready (DTR) option is enabled, it forces the local DTR on logically rather than electrically. The MADO responds as though the local DTR from the DTE is on.
- When the Assert Request to Send (RTS) option is enabled, it forces the local RTS on logically, rather than electrically. The MADO responds as though the local RTS from the DTE is on.

Typical MADO-to-CADA data call

The following describes the typical sequence of a MADO-to-CADA data call:

- After powering up the MADO and the DTE, the user autobauds by typing a period followed by a carriage return. This only has to be done at power-up, unless the DTE baud is changed.
- The DTE now displays the main menu, listing the selection of features. To dial a number, the user types in the digits and edits them as necessary, then presses the carriage return.

- The DTE displays the number dialed. As call progress messages are received from the Meridian SL-100, they are converted to English messages and displayed on the DTE.
- The MADO unit begins a handshake on the 64 kbps channel.
- The MADO unit begins communicating using the T-link data protocol.
- The originating and terminating MADOs exchange baud rate and other asynchronous parameters.
- Both MADOs send end-to-end signaling, until end-to-end signaling is received from the other end.
- When T-link synchronization is achieved, the DTE displays the connect message.
- The Meridian SL-100 takes the connection down at either end of the connection as a result of either the invocation of the release procedure or the on-to-off transition of the DTR signal.

Hardware requirements

MADO T-link Firmware has no hardware requirements.

Limitations and restrictions

The firmware described in this document can only be used with Meridian SL-100 M2000 series sets.

Interactions

MADO T-link Firmware has no functionality interactions.

Datafill

MADO T-link Firmware does not affect data schema tables or office parameters.

Service Orders

MADO T-link Firmware does not affect SERVORD.

Operational Measurements

MADO T-link Firmware does not affect Operational Measurements.

Logs

MADO T-link Firmware does not affect logs.

User interface

MADO T-link Firmware does not change the user interface.

Billing

MADO T-link Firmware does not affect billing.

BF0808 - DLM Software for Meridian Digital Sets

Description

This feature modifies the Line Concentrating Module (LCM) software to interface a Digital Line Module (DLM) to the P-side of a Line Group Controller (LGC). It also provides the peripheral and facilities maintenance software needed to communicate with the Parallel Serial Time Switch (PSTS), the Integrated Voice and Data Port Card (IVDPC), and the Meridian line of digital telephone sets.

The DLM is comparable to an LCM in architecture and purpose. The initial design of the DLM uses the same processor and time switch as the LCM. However, it uses the Parallel Serial Time Switch (PSTS) to replace the Bus Interface Cards (BICs). Existing line cards that supported only one set per card were replaced with IVDPCs that can interface up to 16 sets.

The Control Center (CC) controls the DLM peripheral and facilities maintenance. The DLM acts as an interpreter, accepting messages for itself and reformatting messages bound for the PSTS and Interactive Voice and Data (IVD) sets. The software includes a new command to test the PSTS.

The facilities maintenance software in the DLM supports the testing of the IVDPC, the subscriber loop, and the IVD set. Facilities maintenance consists of three major types of commands that relay information about the components that are functioning properly and those that are not. These three types of commands are as follows:

- status request messages that allow for cross-checking the current state of the set, its Meridian Asynchronous Digital Option (MADO), and the port card
- message or signaling loop-around that allow testing of the integrity of the data link between the DLM and the PSTS, and between the PSTS and set
- PCM loop-arounds that allow for noise and loss measurements and Bit Error Rate Testing (BERT) of the PSTS and the IVDPC card

These diagnostics combine with the audit task to run periodic checks of the PSTS hardware and the other components. When the tests detect a fault, a maintenance request is issued to isolate the fault and, if possible, correct it. The software also allows the mate unit of a PSTS to take control if a fault occurs in the prime unit. When the fault is corrected, the prime unit goes back in service.

Hardware requirements

For this feature, a Digital Line Module (DLM-NT8X45) must connect the Meridian IVD sets and the LGC. Release 1W1 or later of the PSTS hardware is also required, including the NT8X49 processor board and the NT8X46

connection memory board. Because of the increase in LGC code, the LGC must be upgraded with the new XPM memory cards. The LGC must be refitted with the following:

- a NT6X47AB MP Memory card
- a NT6X46AB SP Memory card
- two NT6X45AC Processor cards

Limitations and restrictions

Because the DLM differs from the LCM in some ways, several of the LCM facilities maintenance actions are not supported in the DLM.

Interactions

This feature is required for the DLM peripheral to function properly.

Datafill

DLM SW for Meridian Digital Sets does not affect data schema tables or office parameters.

Service Orders

DLM SW for Meridian Digital Sets does not affect SERVORD.

Operational Measurements

DLM SW for Meridian Digital Sets does not affect Operational Measurements.

Logs

DLM SW for Meridian Digital Sets does not affect logs.

User interface

DLM SW for Meridian Digital Sets does not change the user interface.

Billing

DLM SW for Meridian Digital Sets does not affect billing.

BF0817 - Meridian LGC Maintenance

Description

This feature provides the changes in the base XPM software that are necessary to interface a Digital Line Module (DLM) to the P-side of a Line Group Controller (LGC). It also provides the peripheral and facilities maintenance software needed to communicate with the DLM, the Integrated Voice and Data Port Card (IVDPC), and the Meridian line of digital sets.

The DLM is similar to an LCM in architecture and purpose. The initial design of the DLM uses the same processor and time switch as the LCM. However, it uses the Parallel Serial Time Switch (PSTS) to replace the Bus Interface Cards (BIC). Existing line cards that supported only one set for each card were replaced with Integrated Voice and Data Port Cards (IVDPCs) that can interface up to 16 sets.

The facilities maintenance software in the DLM supports the testing of the IVDPC, the subscriber loop, and the IVD set. Facilities maintenance consists of three major types of commands that relay information about the components that are functioning properly and those that are not. These three types of commands are as follows:

- status request messages that allow for cross-checking the current state of the set, its Meridian Asynchronous Digital Option (MADO), and the port card
- message or signaling loop-arounds that allow testing of the integrity of the data link between the port card and the set, and within the set itself
- PCM loop-arounds that allow for noise and loss measurements of the subscriber loop and set

Facilities maintenance also includes more extensive testing, including station ringer and link integrity tests. Both tests aid in isolating faulty components. The CC also sends additional commands that are part of previous versions of the facilities maintenance package, including those that reset the sets and turn the LCDs on and off.

Hardware requirements

For this feature, a Digital Line Module must connect the Meridian IVD sets and the LGC. Because of the increase in LGC code, the LGC must be upgraded with the new XPM memory cards. The LGC must be refitted with the following:

- a NT6X47AB MP Memory card
- a NT6X46AB SP Memory card
- two NT6X45AC Processor cards

Limitations and restrictions

Because the DLM is different from the LCM in some ways, several of the LCM facilities maintenance actions are not supported in the DLM.

Interactions

This feature is required to interface a DLM to an LGC/LTC. It is used by and uses other features to accomplish the interfacing of the Meridian series of digital sets to the Meridian SL-100 switch.

Datafill

Meridian LGC Maintenance does not affect data schema tables or office parameters.

Service Orders

Meridian LGC Maintenance does not affect SERVORD.

Operational Measurements

Meridian LGC Maintenance does not affect Operational Measurements.

Logs

Meridian LGC Maintenance does not affect logs.

User interface

Meridian LGC Maintenance does not change the user interface.

Billing

Meridian LGC Maintenance does not affect billing.

BF0818 - CADA Keyboard Dialing**Description**

This feature provides Keyboard Dialing (KBD) on the Meridian SL-100 Meridian Asynchronous Data Option (MADO). Keyboard dialing is the only method for a user using Data Terminating Equipment (DTE) to establish a switch data call. This feature allows users to dial data calls to multi-host sites and activate features such as Speed Calling, Auto Dialing, and Ring Again.

To activate keyboard dialing, users with the keyboard dialing option must set up the DTE as they normally would. KBD becomes inoperative as soon as a data connection is established and is reactivated once the data call is released.

To invoke autobaud or autoparity, the user types a period, followed by a carriage return. If the input is received successfully, autobauding is successful and the period is displayed on the screen. The software ignores any other characters, until the user enters a period. The carriage return initializes the KBD and displays a menu on the screen. All characters are ignored until a carriage return is entered. The user then enters the desired menu selection and answers any further prompts to establish the connection. Prompts appear at each stage of the call setup to aid the user. No calls can be originated or terminated until autobauding is completed.

During KBD dialing, the KBD function recognizes the XON(DC1) and XOFF(DC3) ASCII code from the terminal or DTE. Character output to the DTE is halted when XOFF is received. Output resumes when a subsequent XON is received.

KBD supports the following features and utilities:

- calling to a local or remote host
- Autodial
- Speed Calling
- Resource Call (Modem Pooling)
- Ring Again
- automatic answering of incoming calls
- updating of Autodial number and Speed Calling list
- setting and resetting the remote loopback status
- cancellation of pending Ring Again requests
- status and data query

User inputs

User inputs must conform to the following limitations:

- Input can be in upper or lower case, but the KBD echoes all inputs to the terminal in upper case.
- When KBD prompts for a number, the input cannot be in alphanumeric combinations as found on a standard dial pad.
- Invalid input results in a prompt to reenter the information.
- The Delete key deletes the whole input line. It is echoed to the terminal as a carriage return and line feed so the user can reenter the information on a new line.
- A maximum of 24 characters is allowed before a carriage return.
- The user can abort any KBD function by pressing the Control and Z keys simultaneously.
- Only one menu selection on a line is allowed. If the user attempts to enter more than one menu selection on a line, the MADO unit responds with a Bell character and a backspace.

KBD prompt messages

The following characteristics apply to all prompt messages that the KBD displays:

- All prompts are in upper case.
- A line feed precedes all prompts.
- A colon follows prompts that wait for user input.
- Other prompts are terminated by a carriage return and line feed.

Call disconnection

During call setup, the user can press the Control and Z keys simultaneously to abort a call attempt. This aborts the current KBD function. After a call is set up and KBD is no longer functioning, drop the connection with one of the following methods:

- user logoff from the host and the host DTE
- any action that causes the Data Terminal Ready control lead from the DTE to go low (for example, placing the DTE in offline mode or turning the power off)
- power going off in the DTE interfacing unit
- keyboard input that consists of a one second delay, followed by three exclamation points with less than one second delay between each, followed by a one second delay

Note: Some features are subscriber options. Attempts to activate unsubscribed options result in an error message.

KBD features operation

This section details the operation of the KBD features.

Call operation "Call operation" (page 700) shows call operation for local and remote calls.

Call operation

Step	User input	Screen display	Comments
1			Main menu is displayed.
2	NNNN (CR)		User keys in the DN.
3		CONNECTION IN PROGRESS	Meridian SL-100 software rings a local set or terminates on an outgoing trunk.
4			Data call established, session starts.

Resource call operation Because the Meridian SL-100 has no automatic insertion of the modem pool, the user must enter M (modem pool) until the far end modem answers the call. See "Resource call operation" (page 700).

Resource call operation

Step	User input	Screen display	Comments
1			Main Menu is displayed.
2	R (CR)		

Step	User input	Screen display	Comments
3		TYPE PREFIX THEN PRESS RETURN	
4	PP (CR)		"PP" is the MP feature activation code.
5		MODEM RESERVED TYPE NUMBER THEN PRESS RETURN	Modem pool member has been reserved, but not connected.
6	NNNN (CR)		User keys in the DN.
7			Data call established, session starts.

Ring Again activation "Ring Again activation" (page 701) illustrates Ring Again activation when a call begins, but the local destination is busy. Ring Again cannot be activated on remote calls or modem pools.

Ring Again activation

Step	User input	Screen display	Comments
1		BUSY, DO YOU WISH TO RING AGAIN? TYPE Y/N or BUSY, PREVIOUS RING AGAIN ACTIVE, REPLACE? TYPE Y/N	Destination busy Informs the user that there is already a Ring Again active.
2	Y (CR) or (CR)	RING AGAIN PLACED CALL RELEASED or CALL RELEASED	Activates RAG. Aborts call attempt. Invalid request. Aborts call attempt.
3			Main Menu is displayed.

Ring Again recall "Ring Again recall" (page 701) illustrates the steps in Ring Again recall operation.

Ring Again recall

Step	User input	Screen display	Comments
1		DATA STATION NOW AVAILABLE, PLACE CALL? TYPE Y/N	Both stations idle and RAG is pending. A Bell character is also sent to the terminal to alert the user.
2	Y (CR)		

Step	User input	Screen display	Comments
3		CONNECTION IN PROGRESS	The Meridian SL-100 rings a local set.
4		CALL IS CONNECTED, SESSION STARTS.	Data call established.

Cancel Ring Again "Canceling a Ring Again request" (page 702) shows the steps to cancel a pending Ring Again request.

Canceling a Ring Again request

Step	User input	Screen display	Comments
1			Main Menu is displayed.
2	M (CR)		Modify Menu is displayed.
3	C (CR)	RING AGAIN CANCELLED	
4			Modify Menu is displayed.

Autodial Activation The steps for activating Autodial are shown in "Autodial activation" (page 702). Autodial is compatible with modem pooling.

Autodial activation

Step	User input	Screen display	Comments
1			Main Menu is displayed.
2	A (CR)		
3		CONNECTION IN PROGRESS	The Meridian SL-100 is ringing a local set or terminated on an outgoing trunk.
4		CALL IS CONNECTED, SESSION STARTS.	Data call is established.

Autodial number update The steps for updating an Autodial number are shown in "Autodial number update" (page 702).

Autodial number update

Step	User input	Screen display	Comments
1			Main Menu is displayed.
2	M (CR)		Modify Menu is displayed.
3	A (CR)	TYPE AUTO DIAL NUMBER THEN PRESS RETURN	

Step	User input	Screen display	Comments
4	NNNN (cr)		DN number for Autodial.
5			Modify Menu is displayed.

Speed Call activation "Speed Call activation" (page 703) illustrates the steps in activating Speed Calling. Speed Calling is compatible with modem pooling

Speed Call activation

Step	User input	Screen display	Comments
1			Main Menu is displayed.
2	S (CR)	TYPE ACCESS CODE THEN PRESS RETURN	
3	AA (CR)		User inputs one- or two-digit access code.
4		CONNECTION IN PROGRESS	Meridian SL-100 rings a local set or terminates on an outgoing trunk.
5		CALL IS CONNECTED, SESSION STARTS.	Data call established.

Speed Call list update "Speed Call list update" (page 703) illustrates the steps in updating a Speed Calling list.

Speed Call list update

Step	User input	Screen display	Comments
1			Main Menu is displayed.
2	M (CR)		Modify Menu is displayed.
3	S (CR)	TYPE ACCESS CODE THEN PRESS RETURN	
4	AA (CR)		User inputs one- or two-digit access code.
5		TYPE SPEED NUMBER THEN PRESS RETURN	
6	NNNNN (CR)		User types in DN for Speed Calling.
7			Modify Menu is displayed.

Setting and resetting remote loopback operation Remote loopback provides a method for verifying the integrity of the data and signaling channels of the data loop facility. When the user activates Remote Loopback, the user's data loops around at the called MADU unit's RS-232 interface back to the user's DTE. Loopbacks are made over digital trunks,

but cannot be used with modem pooling. The feature must be activated before the data call is placed. "Setting and resetting remote loopback operations" (page 704) illustrates the steps in setting and resetting remote loopback operations.

Setting and resetting remote loopback operations

Step	User input	Screen display	Comments
1			Main Menu is displayed.
2	M (CR)		Modify Menu is displayed.
3	R (CR)	REMOTE LOOPBACK? TYPE Y/N	
4	Y (CR)		RLB set.
5	N (CR)		RLB clear.
6			Modify Menu is displayed.

Status display operation When the user enters the command D (CR) at the Main Menu, the MAD0 unit displays information about the terminal's parameters. "Status Display Operation" (page 704) illustrates the steps in the Status Display operation.

Status Display Operation

Step	User input	Screen display	Comments
1			Main Menu is displayed.
2	D (CR)	BAUD RATE: rrrrREMOTE LOOPBACK: Y/AUTO ANSWER: Y/NRING AGAIN NUMBER: nnnn/NONE	
3			Modify Menu is displayed.

Answer mode update "Answer Mode Update" (page 704) lists the steps in updating the answer mode.

Answer Mode Update

Step	User input	Screen display	Comments
1			Main Menu is displayed.
2	M (CR)		Modify Menu is displayed.
3	M (CR)	MANUAL ANSWER? Y/N	

Step	User input	Screen display	Comments
4	Y (CR) or N (CR)		Sets manual answer mode. Sets auto answer mode.
5			Modify Menu is displayed.

Manual answer operation "Manual Answer Operation" (page 705) lists the steps for manual answer operation.

Manual Answer Operation

Step	User update	Screen display	Comments
1		INCOMING CALL ANSWER? TYPE Y/N	A Bell character is sent to the terminal. A carriage return is interpreted as a "YES" reply.
2		INCOMING CALL CONNECTED, or UNDER TEST	Incoming goes to DTE, synchronization is achieved. Given if the calling party requests the MADDO unit to loopback the data. Auto-answered when testing.
3		INCOMPATIBLE INCOMING CALL. CALL RELEASED.	Incoming call to DTE, connection failed due to parameter mismatch.
4			A Bell character is sent to the terminal to alert the user.

Auto answer operation DTE units employing KBD are normally set up for auto-answering incoming calls. "Auto answer operation" (page 705) lists the steps for auto answer operation.

Auto answer operation

Step	User input	Screen display	Comments
1		INCOMING CALL CONNECTED or UNDER TEST	Incoming call to DTE, synchronization is achieved. A Bell character is sent to the terminal to alert the user. Given if the calling party requests the MADO unit to loop back the data.
2		INCOMPATIBLE INCOMING CALL. CALL RELEASED.	Incoming call to DTE, connection failed due to parameter mismatch.
3			A Bell character is sent to the terminal to alert the user.

Hardware requirements

The following hardware is required:

- Meridian Digital Line Module
- Meridian Digital Port card
- Meridian M2000 Series Digital Set
- Meridian Asynchronous Data Option (MADO) card

Limitations and restrictions

The following limitations and restrictions apply to CADA KBD:

- The default NRS feature to activate outbound modem pooling cannot be assigned to the user. Assign only the Prefix NRS.
- This feature does not include the Expensive Route Warning (ERW) feature.
- Incoming calls are allowed while the user is editing a DN. When the user enters a CR to answer the incoming call, the digits that were meant for an outgoing call are ignored. When not answering the incoming call, the user must enter the DN digits after the calling party releases the present call.

Interactions

The feature interactions are the same as for the Datapath KBD feature.

Datafill

One new customer (logical) table, table IVDINV, is required to support the Meridian sets. Table IVDINV is a new table implemented in new table control. It contains Meridian set configuration information. This table can be datafilled at any time after the LNINV table is datafilled. There are no default tuples to be entered. This table is to be dumped and restored.

There are four input tuple formats for this table, one for each of the three different Meridian voice sets and one for the data adapter (CADA). The SET_TYPE field defines the type of set. To define the set type, enter one of the following in the SET_TYPE field as appropriate:

- M2009 for Meridian M2009 sets
- M2112 for Meridian M2112 sets
- M2018 for Meridian M2018 sets
- CADA for a Compact Asynchronous Data Adapter

Service Orders

CADA KBD does not affect SERVORD.

Operational Measurements

CADA KBD does not affect Operational Measurements.

Logs

CADA KBD does not affect logs.

User interface

CADA KBD does not change the user interface.

Billing

CADA KBD does not affect billing.

BF0828 - DLM-PSTS Firmware**Description**

This feature provides the control of signaling between the 6X51 and Integrated Voice and Data (IVD) sets equipped with the Meridian Asynchronous Data Option (MADO). The signaling consists of messages for call processing and data processing.


The Digital Signal Interface Processor (DSIP 8X49) is a controller card in the Digital Line Module (DLM). This card, along with the 8X46 Parallel Serial Time Switch (PSTS) provides an interface between the 6X51 and the port cards. Together the DSIP and PSTS (referred to here simply as the DSIP) handle the Receive Control (RCON) and Transmit Control (TCON) signals on ten separate lines. The DSIP converts messages between the X12 format signals and the Meridian Digital station sets. The DSIP also performs the time and space switching functions to convert the DS30A signals into the DS30X signals that the X11 chips on the port card and the X12 chip in the IVD set use. Functionally, the DSIP replaces the bus interface cards. The firmware and an on-board microprocessor control the DSIP card. The firmware resides in on-board ROMs and is initiated by a power-on reset or software reset. All tasks are interrupt-driven and self-scheduling.

DLM configuration

The DLM has Digital Port Cards (DPCs), instead of the line drawers that were in the Line Concentrating Module (LCM). The DLM shelf is divided into two units containing five Digital Port Cards each. Each unit contains a 6X51. Physically, both units are side-by-side on the same DLM shelf. There are ten RCON and ten TCON lines from each of the two 6X51s. Of these, five are used under normal circumstances. The other five are used only in "takeover" mode.

Each DPC can have up to 16 Meridian sets (32 channels) connected to it. Each RCON carries messages destined for one DPC and one of 32 channels on that DPC. ["DLM configuration" \(page 708\)](#) illustrates the DLM configuration.

DLM configuration

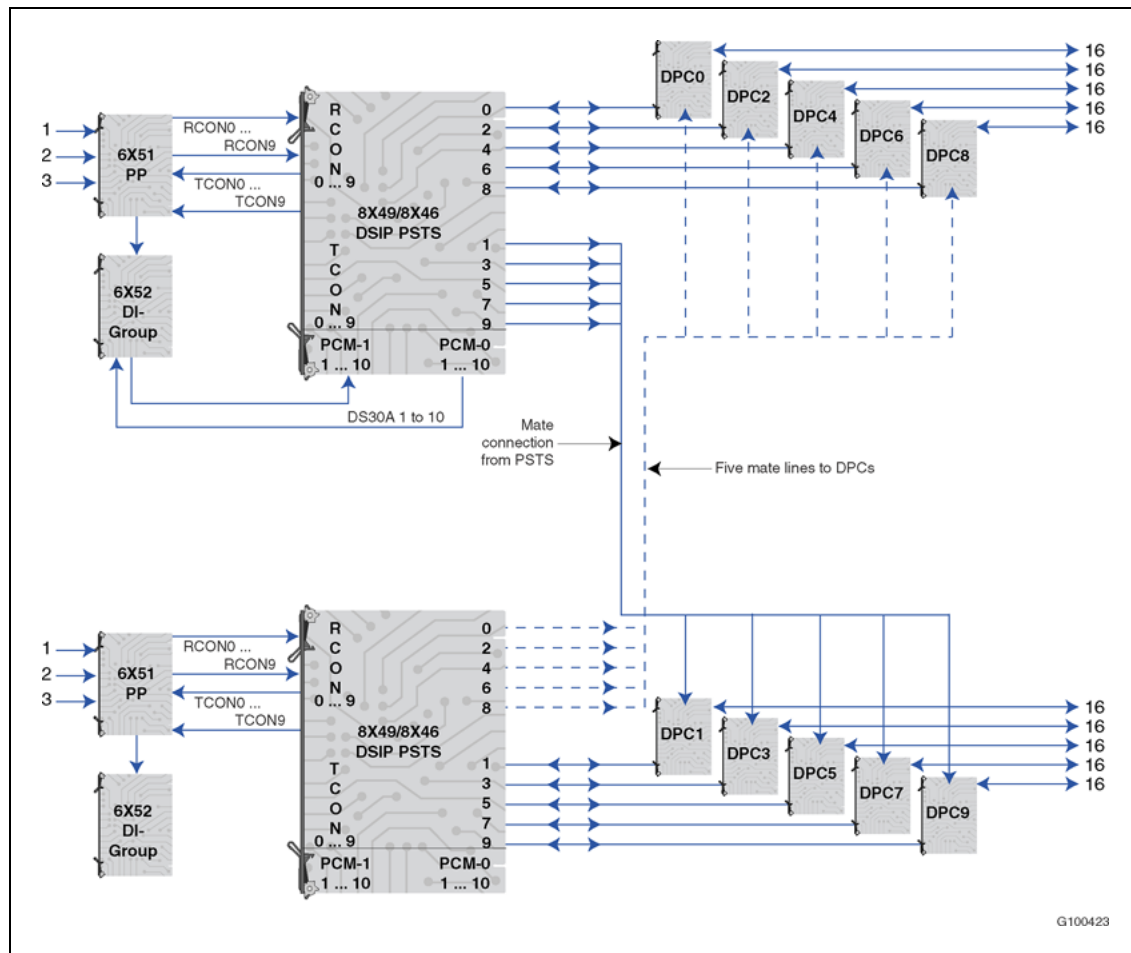**DSIP connect memory**

The connect memory on the DSIP is nine-bit high-speed memory containing data for connecting DS30A channels to DS30X channels. This memory has 320 locations, 160 per unit. The address of each location corresponds to a DS30A channel number (0 through 319). The contents of the locations are the DS30X channel number (0 through 319). On initialization, the memory is loaded with the value 511 (hexadecimal 1FF), which implies an idle channel. Data reads from the connection memory can only be performed in intervals of up to 125 microseconds. The read is performed in synchronization with the data transfer out of the data memory. The DSIP has the capability of hardware enabling and disabling messages from a specific channel or set. As well as providing the contents of connection memory for a specific channel in response to an RCON connection memory read message, the TCON response also indicates the status of the line, whether the hardware is enabled or disabled, and whether it is currently being looped back or not.


RCON messages


There is only one RCON message active on any one RCON line at any one time. The 24 bit-wide RCON message is latched upon reception. The RCON message contains the RCON line number field (four bits) that is supplied by the start bit detection hardware and the message field (20 bits). The most significant bits are the line numbers and bits 19 through 0 are the message bits.

Output FIFO on the DSIP

All messages destined for the 6X51 are put into an output FIFO with the exception of inhibit read responses and connection memory read responses. The output FIFO is 24 bits wide and contains the TCON line number field (4 bits), which carries the TCON line number supplied by the microprocessor, and the actual message (20 bits). The most significant four bits (bits 20 through 23) contain the TCON line number. Bits 0 through 19 contain the 20-bit message with the start bit in position 19. See ["RCON processing" \(page 709\)](#) and ["TCON processing" \(page 710\)](#).

RCON processing

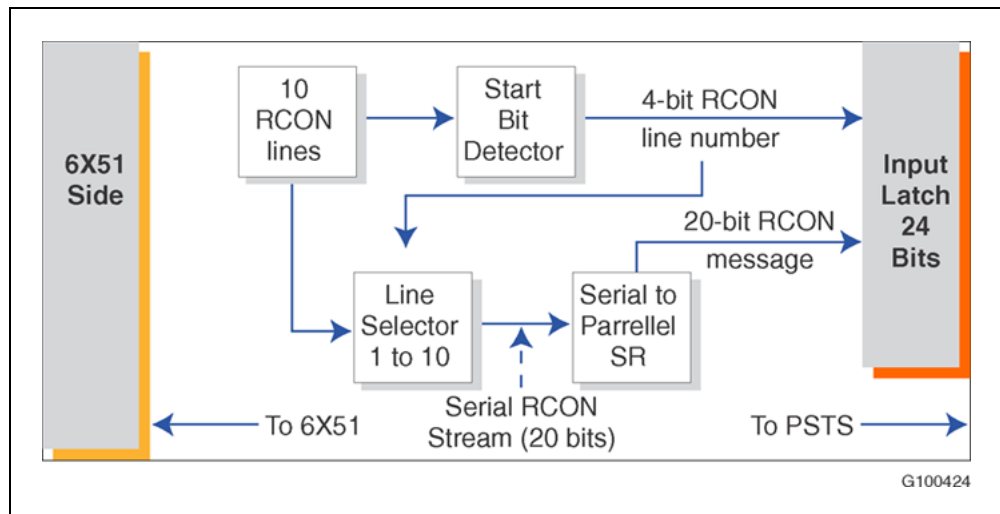

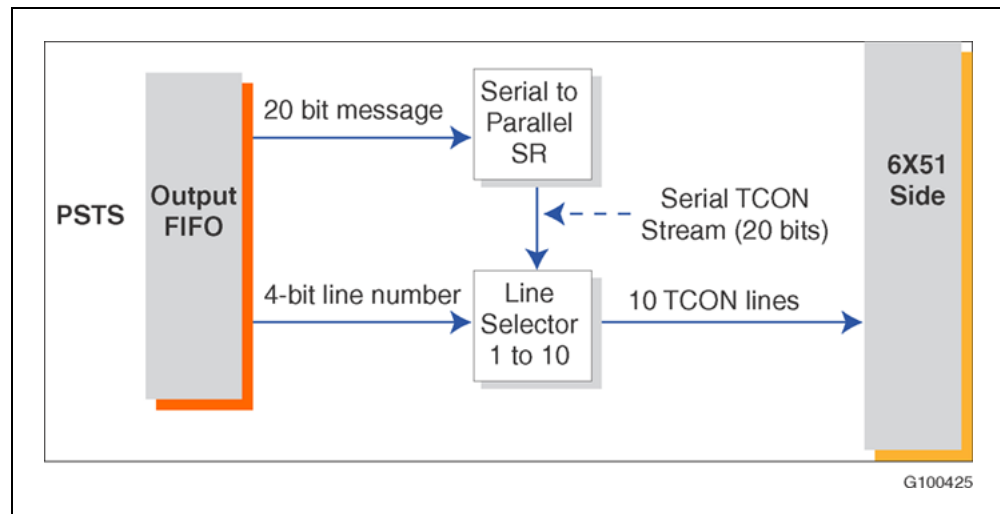TCON processing**Messaging to and from IVD sets**

Messages from the 6X51 come to the DSIP over the RCON lines. The messages meant for the IVD sets are sent by the 6X51 to the DSIP as two successive transfers of 24 bits each. The address portion of the two messages are the same. The data portion of each message contains 1 byte of the 16-bit message. The first message contains the most significant byte and the last one contains the least significant byte. The s0 bit is set to 1 in the first message to indicate the start of a message. The s0 bit is set to 0 in the second message transfer.

The microprocessor sends messages to the IVD sets. The microprocessor writes the message data (including the flow control bits) to a specific DS30X channel address. The DSIP uses the DS30A channel number from the RCON message to look up the copy connection memory and read out the corresponding DS30X channel number. The message data is then written to this DS30X channel address. The message also contains two flow control bits. The flow control bit selects one of two choices. The first flow control bit controls the Pulse Control Module (PCM) back from the set and the second bit controls the messaging back from the set. If the flow control bit is set, that function is inhibited. Otherwise, the function is enabled. The TCM message stream is constructed so that the flow control bits are always the last two message bits in any superframe. Each signaling packet is made of six raw message bits and two flow control bits, until all message bits are exhausted. Filler bits are then inserted to pad the message to fit a super frame boundary. The last two bits are always the flow control bits.

The X12 sends both KEY UP and KEY DOWN messages. The LGC can request suppression of these messages by sending the MASK KEYBOARD ON message. Because the Line Group Controller (LGC) does not require the key up in normal operation, the default is KEY UP SUPPRESSED. The DSIP discards all other key up messages when in this state.

During set ringing, the DSIP sends messages from the ringing IVD set to the PP. These messages include the HOOKSWITCH UP message. The DSIP controls the cadencing using the TONE ON and TONE OFF control messages to the set.

The Ringing Cadence Table contains 12-bit values where each bit corresponds to a one-half second interval. This table contains an entry for each set if the bit is a one. The TONE ON message is sent to the set for a half second unless it is already on. If the bit is zero, a TONE OFF message is sent to the set unless it is already off. The 12 bits provide a cadencing pattern in this manner for six seconds. The DSIP repeats this pattern until the LGC sends a STOP RINGING message. When a set is not being cadenced, its Ringing Cadence Table entry is zeros. The LGC sends a cadence pattern in a special set control message when ringing the set. The set ringing is done using the TONE ON and TONE OFF. The cadencing for this is controlled by the DSIP. The LGC message SET_RING OFF triggers the ringing cadencing routines in the DSIP to accomplish this. When the DSIP receives the SET_RING OFF message, it clears the Ringing Cadence Table entry for the set and sends a TONE OFF message to the set.

Messages destined for the IVD sets are first received on the RCON and formatted by the Message Processor Task into messages that the X12 recognizes. The messages from the PP are received in a message unit. A message unit is one 24-bit RCON message. These messages are assembled into 20-bit message units containing 16 bits of actual message and 8 bits of message header. The DSIP receives the 16 bits of message in 2 RCON message units.

Signaling message to the X12

The DSIP sends one bit of the signaling message to the Meridian set every 125 microseconds. This bit is inserted into the least significant bit of the 10-bit PCM that is sent to the X11 on the port card.

Facility maintenance

Loop-around tests are available to test the subscriber loop and the M2000 set, as well as signaling at the DPC. In addition, message channel loop-around and PCM channel loop-around are available on the DSIP. The message channel loop-around is available both on the processor side and on the set of the DSIP and the PCM. Channel loop-around is done on the

station set side of the DSIP. This permits most of the PCM hardware to be included in the loop-around test. The 6X51 initiates the following facility maintenance tests:

- TCM loop-around on. The 6X51 sends a LOOP TCM ON message to the X12 chip in the station. In response to this message, the transmit signaling interface in the station set loops back the voice signaling and control bits.
- TCM loop-around off. The 6X51 sends a LOOP TCM OFF message to the X12 in the station set. This message turns off the TCM loop-around mode.
- CODEC loop-around on. The 6X51 sends a LOOP CODEC ON message to the X12 in the station set. In response to this message the analog signal is looped back from the receive pin (RC) of the CODEC (W05) to the transmit pin (XI) of the CODEC using the CODEC's AUX1 path. The PCM voice can be looped back in this manner to the 6X51 through the PSTS.
- CODEC loop-around off. The 6X51 sends a LOOP CODEC OFF message to the X12 in the station set to turn off the CODEC loop-around mode. In response to this message, the CODEC loop-around is turned off.
- DSIP PCM and signaling loop-around. The 6X51 sends this message to the DSIP in order to loop around both the PCM channel and the signaling channel on the peripheral side of the PSTS card. This loop-around can only be done on one channel at a time.
- PSTS message loop-around. This is an automatic loop-around. It is performed each time a RCON message is sent that does not require a response.

Firmware architecture

The firmware's main function is to perform set processing, RCON processing, set cadencing, and maintenance functions. Because of the architecture of this feature, all events are interrupt-driven. Some events are capable of interrupting other events, and some events are capable of interrupting at the end of the current event. Because all events are interrupt-driven, the background task monitors all sets for a change in state. The interrupt level structure for call processing is as follows:

- Set interrupt - set message has arrived.
- RCON interrupt - RCON message is loaded from the RCON latch and put in the buffer for later processing.
- 14.X MSEC interrupt - clears the Message Sent table to ensure proper amount of time has passed between sending consecutive messages to

the same set. It also processes ALL LAMP FLASH, ALL LAMP ON, and ALL LAMP OFF messages.

- 7.X MSEC interrupt - used for sending bulk data transfer to data adapters.
- 4 MSEC interrupt - enabled when there are format messages to be sent to a set that requires transmission of the final byte of the message immediately following the initial transfer.

Set processing

Set processing includes the processing of message from all sets including the data adapters. The processing function consists of converting the received set message and formatting them into a TCON format for transfer to the 6X51. Typical message consists of dial digits, function keys, and PCM data transfers. This firmware also monitors the incoming message to determine if any messages require an immediate response.

RCON processing

RCON processing is similar to set processing except that messages are from the 6X51. This class of message consists of the following types of messages:

- messages destined for the set, which require a straight translation to the X12 format
- messages for the DSIP, which are normally initialization messages
- function test requests or messages requiring DSIP interception, such as profile store for the data adapter, connect memory read requests, and connect memory write

Cadence control task

This task is responsible for maintaining the ringing cadence to each set when the call processing software issues a command to ring a set. It issues a series of TONE ON and TONE OFF messages to the set. The selection of the TONE ON or TONE OFF is dictated by the value of the bit in the cadence pattern. The cadence pattern is obtained from the Ringing Cadence Table. The Set Ring On message from the LGC carries an index into this table. A 12-bit cadencing pattern is circulated every six seconds (1 bit every half second.) The SET RING OFF message from the LGC terminates the ringing process.

Hardware requirements

DLM-PSTS Firmware has no hardware requirements.

Limitations and restrictions

DLM-PSTS Firmware has no limitations or restrictions.

Interactions

DLM-PSTS Firmware has no functionality interactions.

Datafill

DLM-PSTS Firmware does not affect data schema tables or office parameters.

Service Orders

DLM-PSTS Firmware does not affect SERVORD.

Operational Measurements

DLM-PSTS Firmware does not affect Operational Measurements.

Logs

DLM-PSTS Firmware does not affect logs.

User interface

DLM-PSTS Firmware does not change the user interface.

Billing

DLM-PSTS Firmware does not affect billing.

BVxxxx features

BV2056 - IVD BAD Port Administration

Description

This feature provides a low-impact alternative to replacing an entire card with only one defective port by preventing a bad port on an Interactive Voice and Data Port Card (IVDPC) from being assigned. When a bad port is detected, the port's entries for both the voice line and the data line are deleted from table IVDIND. The LEN of the line of the bad port is entered into the new table IVDTRBL. The only field contained in the logical tuple for this table is the Line Equipment Number (LEN), which is the key field.

The existence of a LEN in table IVDTRBL indicates that the corresponding port has been flagged as a bad port. In this case, neither of the LENS associated with that port can be datafilled in table IVDINV. When the LENS associated with a given port do not exist in table IVDTRBL, both of the LENS can be datafilled in table IVDINV. Whenever the problem with a bad port is remedied by replacing the port card, the tuples for the port in table IVDTRBL are deleted. This removes the trouble flag and enables the corresponding LENS in table IVDINV to be datafilled.

If the technician attempts to add a tuple to tables IVDTRBL or IVDINV for a port for which a tuple still exists in the other table, an error message is issued and the update is rejected.

Hardware requirements

The Meridian sets must be connected to the Digital Line Module (DLM) with the IVDPC. The DLM must also be equipped with a Parallel Space Time Switch (PSTS).

Limitations and restrictions

IVD BAD Port Administration has no limitations or restrictions.

Interactions

IVD BAD Port Administration has no functionality interactions.

Datafill

Table IVDTRBL is a new customer logical table implemented in new table control. The module that contains the table control data aspects is module IVDBPTCI, which is in the optional subsystem IVDSUB. Datafill this table at any time after the LNINV table is datafilled. There are no default tuples to be entered.

Memory for this table is allocated dynamically and therefore table size is increased automatically as more tuples are input. Similarly, memory previously occupied by deleted tuples is reused, before extending the table.

Service Orders

IVD BAD Port Administration does not affect SERVORD.

Operational Measurements

IVD BAD Port Administration does not affect Operational Measurements.

Logs

IVD BAD Port Administration does not affect logs.

User interface

IVD BAD Port Administration does not change the user interface.

Billing

IVD BAD Port Administration does not affect billing.

A5xxxx features

A59006982 - Real-time SMDR over EIU


Description

Station Message Detail Recording (SMDR) data must transfer from the Meridian SL-100 system to the billing server in order to bill for features. This feature, Real-time SMDR over EIU, transfers SMDR data from the Meridian SL-100 system Computing Module (CM) to a billing server. SMDR data is sent over an Ethernet Interface Unit (EIU) using Transmission Control Protocol/Internet Protocol (TCP/IP).

This feature has the following requirements:

- a billing server that is configured as a TCP device
- a logical connection from the CM to the TCP device

"[SMDR data transfer to billing server over EIU](#)" (page 718) shows the flow of the SMDR data from the Meridian SL-100 switch Computing Module to a repository in the DMS Bus, through an EIU and LAN connection, to the billing server.

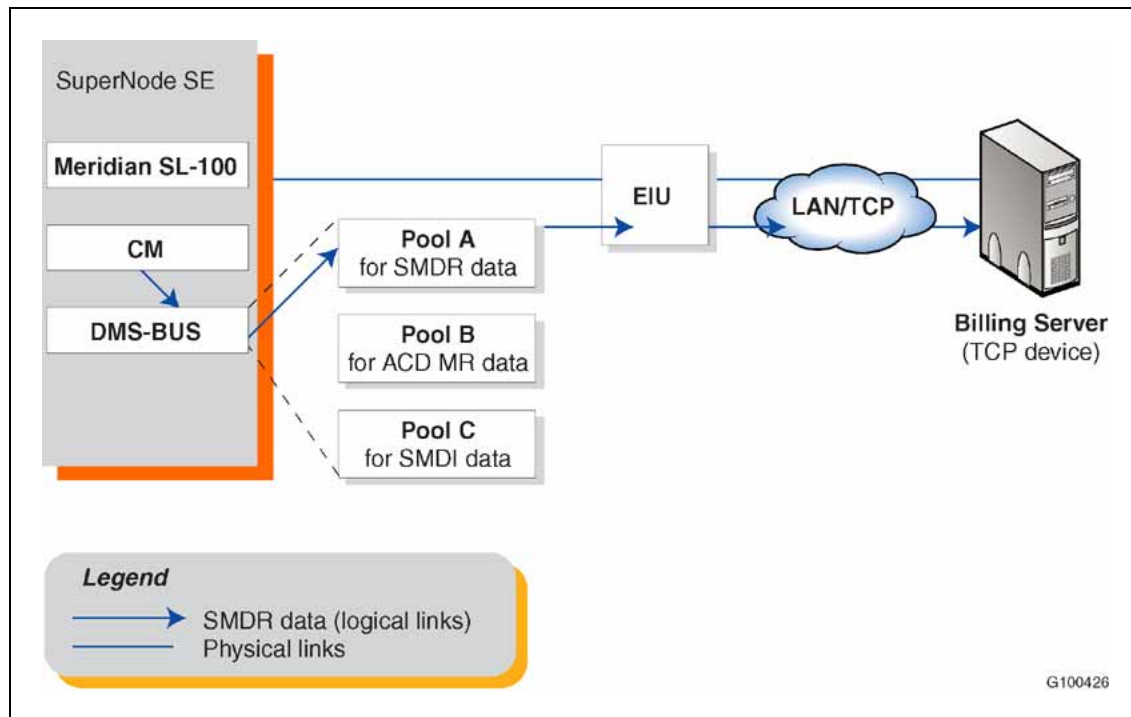SMDR data transfer to billing server over EIU

The following sections describe how to create a logical connection to the TCP device and how to disconnect the TCP device.

Create a logical connection to the TCP device

To create a logical connection between the TCP device and the CM, use ["Creating a logical connection to the TCP device" \(page 718\)](#).

Creating a logical connection to the TCP device**Step Action**

- 1 Enter LNKUTIL at the CI prompt. An example of the command is as follows:


```
1999/01/13 01:26 LOG MESSAGE IS NOT SET
CI:
>lnkutil
LNKUTIL:
```
- 2 Execute the DEVCON command at the LNKUTIL prompt. An example of the command is as follows:


```
>DEVCON <device name> [<datalink poolname>]
```

The TCP device links to the available pool. If no pool is available, and no pool name is specified, a pool with the same name as the device name is created. If a pool name is specified by the user, this name is assigned to the pool, if exists. Otherwise, the specified name is assigned to the newly created pool.

- 3 Execute the POOLSTART/DEVSTART command at the LNKUTIL prompt. An example of the command is as follows:

```
>POOLSTART <datalink poolname> SMDRRPT
```

or

```
>DEVSTART <device name> SMDRRPT
```

The SMDR data starts transferring from the pool name specified to the connected billing server.

- 4 Go to the SMDRLNK prompt by entering SMDRLNK. An example of the command is as follows:

```
1999/01/13 01:26 LOG MESSAGE IS NOT SET
LNKUTIL:
>smdrlnk
SMDRLNK:
```

- 5 Execute the SENDSMDR command at the SMDRLNK prompt. An example of the command is as follows:

```
>SENDSMDR <datalink poolname>
```

—End—

The TCP device is connected and routes the SMDR data to the specified pool.

Disconnect the TCP device

To disconnect the logical connection of the TCP device from the CM, use ["Disconnecting the TCP device" \(page 719\)](#)

Disconnecting the TCP device

Step	Action

- 1 Execute the STOPSMR command at the SMDRLNK prompt. An example of the command is as follows:

```
>STOPSMR <datalink poolname>
```

The SMDR data stops transfer to the specified pool.

- 2 Execute the POOLSTOP/DEVSTOP command at the LNKUTIL prompt. An example of the command is as follows:

```
>POOLSTOP <poolname> SMDRRPT
```

or

```
>DEVSTOP <device name> SMDRRPT
```

This POOLSTOP command stops the transfer of SMDR data from the specified pool to the TCP device.

This DEVSTOP command stops the transfer of SMDR data to the TCP device.

- 3 Execute the DEVDISC command at the LNKUTIL prompt. An example of the command is as follows:

```
>DEVDISC <device name> [<kill>]
```

The TCP device is disconnected. The KILL option unassigns the TCP device from the specified pool.

—End—

Hardware requirements

This feature requires an EIU connected to the Meridian SL-100 Message Switch (MS).

Limitations and restrictions

The following limitations and restrictions apply to Real-time SMDR over EIU:

- The data transmission is one-way and the switch side does not accept data.
- No security features are necessary.
- If the TCP connection goes down, the data transmission aborts and an SLLNKERR alarm (MAJOR) is raised.

Interactions

Real-time SMDR over EIU has no functionality interactions.

Datafill

Real-time SMDR over EIU does not affect office parameters.

This feature affects the data schema table SLLNKDEV. For detailed information about provisioning this feature, see the *Communication Server 2100 Commercial Systems Data Schema Reference Manual* (555-4031-851).

Service Orders

Real-time SMDR over EIU does not affect SERVORD.

Operational Measurements

Real-time SMDR over EIU affects the Operational Measurements group SLLNK and the following registers:

- SLLNKOVF - counts messages overwritten because of an attempt to queue when it is full. A full queue contains the maximum number of messages waiting for processing. Overwritten messages cannot be retrieved. SLNK106 is also generated when a queue overflow occurs.
- SLLNKOK - counts messages successfully queued for transfer to the downstream processor
- SLLNKQU - counts messages in a queue for processing. The queue updates every 100 seconds.

Logs

Real-time SMDR over EIU generates the following logs for various events on the TCP device:

- SLNK100 - created with each successful TCP connection, or execution of the DEVCON command.
- SLNK101 - created with each successful disconnect from the TCP device, or execution of DEVDISC command.
- SLNK102 - created every time the TCP device begins transferring data, or execution of POOLSTART/DEVSTART commands.
- SLNK103 - created every time the TCP device stops transferring data, or execution of POOLSTOP/DEVSTOP commands.
- SLNK106 - created every time remote operation (RO) did not queue a data link device in the last two minutes, because of a full queue.
- SLNK107 - created when a Meridian SL-100 link wakeup fails to restart a datalink for any reason after a restart or link failure.

User interface

Real-time SMDR over EIU does not change the user interface.

Billing

Real-time SMDR over EIU does not affect billing.

A59006994 - Music on Transfer

Description


The Music on Transfer (MOT) feature provides audio to the held party of a Three-Way Call (3WC) or Call Transfer (CXR) when the conference or transfer is initiated.

When caller A is transferred or conferenced by caller B to caller C, caller A is connected to an audio source, such as music. When the call is completely transferred or conferenced, or the second leg is dropped by caller B, the call is reestablished on the line and the audio source is terminated. The functionality is provisioned by assigning MOT through SERVORD, on a Primary Directory Number (PDN).

MOT is different from feature key set music on hold (KSMOH). KSMOH is also available for a 3WC or CXR. With KSMOH, the held party does not hear music until the holding party completes the dialing sequence for the third party. The MOT feature provides audio immediately when the holding party begins the transfer process (presses the 3WC or CXR key, or the hook).

"Example of MOT" (page 722) shows an example of how MOT works.

Example of MOT

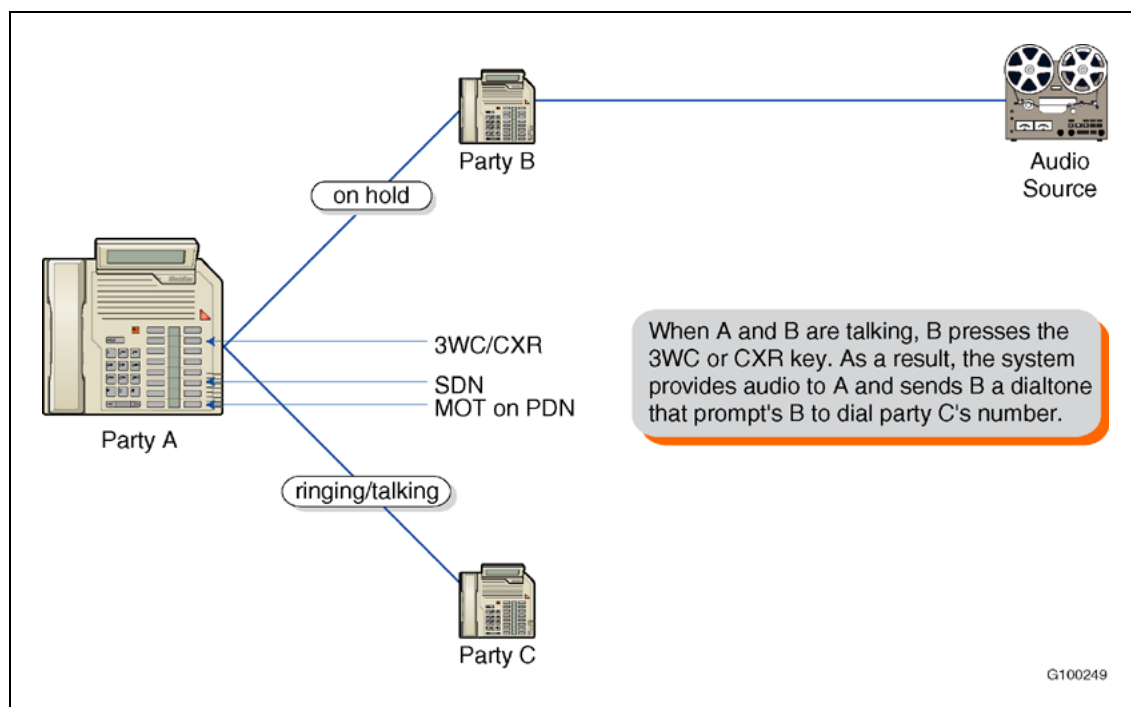

Feature activation


MOT supports Integrated Business Network (IBN) sets, all Line Class Codes (LCCs) supported by key sets, and Integrated Voice and Data (IVD) sets. Details for activation on these sets are explained in the following paragraphs.

The following section describes MOT feature functionality for IBN sets. See ["Event flow for IBN sets" \(page 724\)](#) for more information.

IBN sets The following describes an example of how the MOT feature works for IBN sets.

1. A line-to-line call is established between two parties, Set A and Set B.
2. Set B, which has the MOT and 3WC or CXR options assigned, presses 3WC or CXR.
3. Set A is now on hold and receives audio source (defined in table AUDIO), while Set B gets a dial tone to dial the destination digits on the second leg of 3WC or CXR.
4. Once the call on the second leg of Set B is complete, Set B presses 3WC or CXR again to complete the conference, or hangs up to transfer the call, and the audio source to Set A is automatically stopped.

Event flow for IBN sets

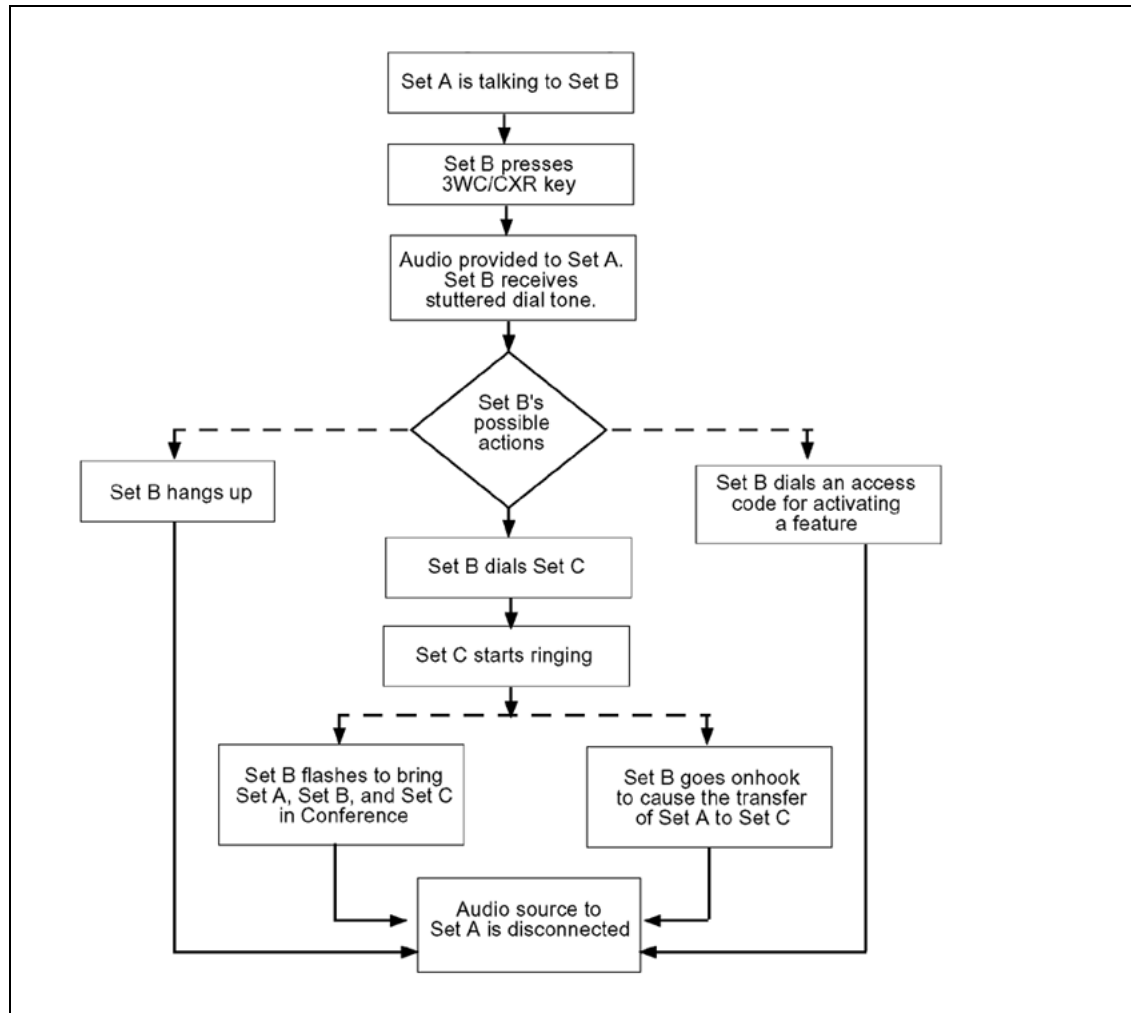


The following section describes MOT feature functionality for MBS and IVD sets. See ["Event flow for MBS and IVD sets" \(page 725\)](#) for more information.

MBS and IVD sets The following describes an example of how the MOT feature works for MBS and IVD sets.

1. A line-to-line call is established between two parties, Set A and Set B.
2. Set B's 3WC or CXR key is pressed to activate either a three-way call or call transfer. The MOT option is on the Primary Directory Number (PDN). The features 3WC and CXR are on separate keys.
3. When Set B's 3WC or CXR key is pressed, Set A is placed on hold and receives the audio source (defined in table AUDIO). Set B receives a stuttered dial tone for the destination digits on the second leg.

4. Once the call on the second leg of Set B is complete, either the 3WC key is pressed to complete the conference, or the CXR key is pressed to transfer the call. Set B can also go on hook to cause the transfer. With any of these actions, the audio source to Set A is automatically stopped.

Event flow for MBS and IVD sets

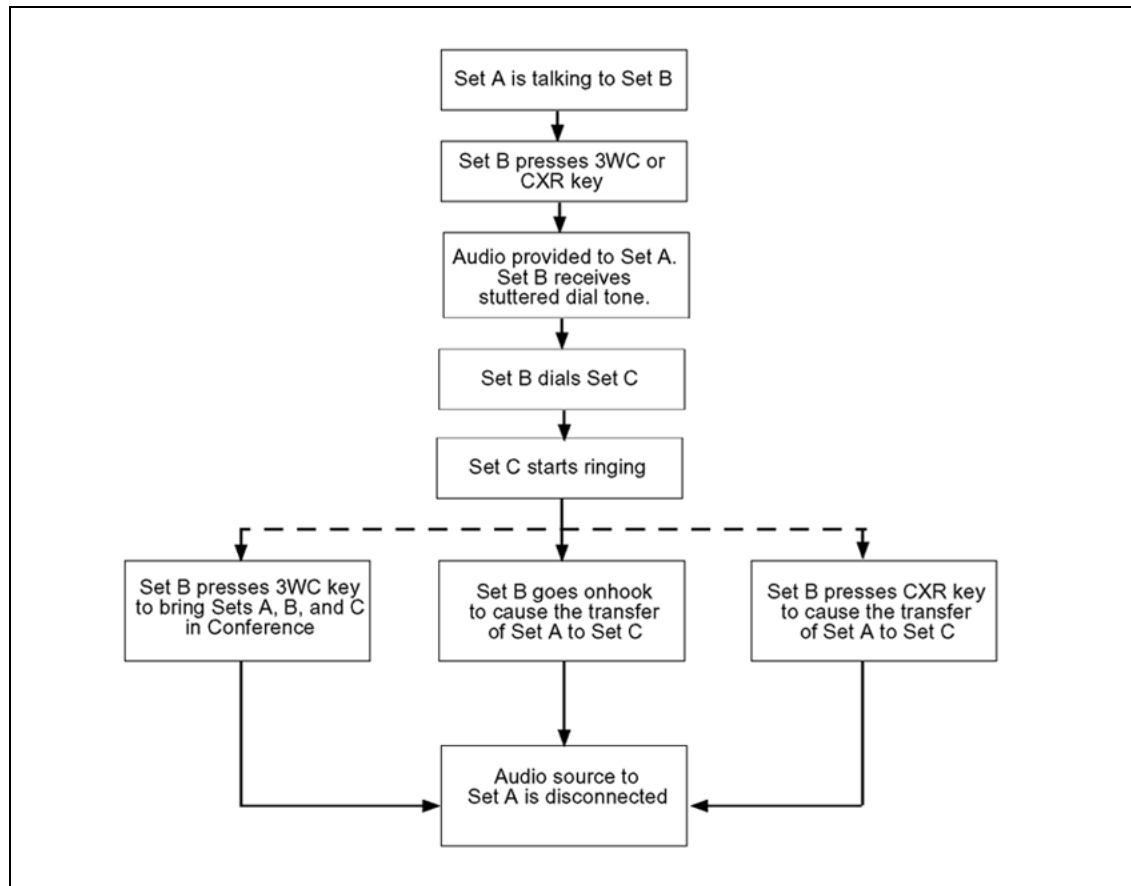

References

The following features provide information related to Music on Transfer:

- Feature AD0751, Key Set Music on Hold for P-Phones - Phase I
- Feature AD0904, Key Set Music on Hold for P-Phones - Phase II
- Feature AD0989, Key Set Music on Hold for P-Phones - Phase III
- Feature AF7806, Line Music on Hold for CCM
- Feature BC0946, Audio Interlude
- Feature AF6655, ISDN Music on Hold
- Feature AJ5124, Push Button Music on Hold

Hardware requirements

Music on Transfer has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Music on Transfer:

- This feature provides audio on Three-Way Conference (3WC) or Call Transfer (CXR) for IBN, MBS, and IVD sets only. The same functionality is provided to ISDN sets by feature AF6655, which is a Software Optionality Control (SOC) feature.
- The line must be in a customer group which is datafilled with the MOT option and MOT's audio group must be datafilled in table CUSTSTN.
- The line must be in a MOT audio group which is datafilled with an audio route containing a valid audio source in table AUDIO.
- If a participant in a 3WC places a conference call on hold, audio are not provided to the other conferees. If the holding party is a line agent, and is identified as a conference call, audio is not provided.

Interactions

Interactions between Music on Transfer and other functionalities are broken out between IBN sets and MBS/IVD sets. For all sets, the line must be in a customer group that has the option MOT, and 3WC or CXR assigned.

The following are MBS/IVD functionality interactions with MOT:


- Call Waiting (CWT)
- Conference (CNF) call
- Call Hold (CHD)
- Permanent Hold (PHOLD)
- Key Set Music on Hold (KSMOH)

IBN sets have functionality interactions with MOT and flash activated features. See the following paragraph for details about the interactions.

Flash activated feature interactions for IBN sets

Audio is provided by MOT to the held party when the holding party quickly presses the hook (or flashes). The holding party can flash to activate other features (for example, Call Park). For activating any such feature, the holding party flashes and then dials the activation code for the feature. As a result of the flash, the held party, listens to audio provided by the MOT feature until the holding party completes dialing the activation code for that feature. See ["Flash interactions for IBN sets" \(page 727\)](#) for an example of how MOT works for IBN sets.

Flash interactions for IBN sets

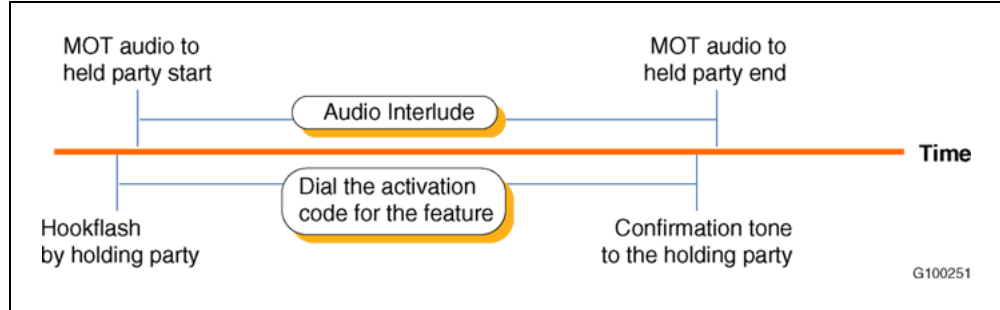

Feature interactions with MOT for MBS/IVD sets

The feature interactions with MOT for MBS/IVD sets are explained in the following paragraphs.

Call Waiting (CWT) feature interactions with MOT When the user presses CWT to answer a waiting call, the holding call receives audio. If the user presses CWT again to put the active call on hold and returns to the original call, audio is removed from the first call and applied to the second call.

If a CWT user is put on hold and is receiving audio, and a waiting call is presented, the user hears the Call Waiting Indicators (CWI) overlaid on the audio. That is, the held party hears: MUSIC ----- CWI ----- MUSIC ----- CWI ----- MUSIC -----until the waiting call is answered or CWI times out.

If the CWT user goes on hook with a party on hold, the CWT user's phone set rings back with that call. The held party continues to receive audio while the CWT user's phone rings.

The caller on hold should hear audio regardless of whether the call is line-to-line or trunk-to-line.

Call waiting calls can be chained, so that if Set A and Set B are talking and both have CWT assigned to their lines, Set A can press CWT to answer a waiting call from some other caller, Set C, and Set B hears audio. Set B then receives a waiting call from Set D and presses CWT to answer it. If Set A presses RLS to go back to the original call, Set B now has Set A on hold and Set A hears audio.

Conference (CNF) call feature interactions with MOT If a participant in a conference call (CNF) puts the conference on hold, the MOT feature does not provide audio to the other conferees. The same interaction applies to Three-Way Conference calls (3WC).

Call hold (CHD) feature interactions with MOT When a set's CHD key is pressed (to initiate call hold) the held party receives audio immediately, according to MOT's audio source. If the audio source of MOT is different from that of the CHD feature, after the CHD access code is entered, MOT audio stops and CHD audio starts.

Permanent hold (PHOLD) feature interactions with MOT When a set's PHOLD key is pressed (to initiate permanent hold), the held party receives audio immediately, according to MOT's audio source. If the audio source of MOT is different from that of the PHOLD feature, after the PHOLD access code is entered, MOT audio stops and PHOLD audio starts.

Key set music on hold (KSMOH) feature interactions with MOT If KSMOH is assigned on a line along with MOT, KSMOH does not provide audio for 3WC or CXR held calls, as it is already provided by MOT.

Datafill

Music on Transfer (MOT) does not affect office parameters.

This feature affects data schema tables CUSTSTN, AUDIO, IBNLINES, and KSETFEAT. Information on how tables CUSTSTN and AUDIO are affected is as follows. For more detailed information about the affected tables, refer to the *Communication Server 2100 Commercial Systems Data Schema Reference Manual* (555-4031-851).

Table CUSTSTN

For this feature to provide audio, the MOT option is datafilled in table CUSTSTN. The MOT's audio group is also assigned in this table. The AUDIOGRP field of the MOT option allows the customer to datafill the desired audio source. See "[Table CUSTSTN sample datafill](#)" (page 728) for a sample datafill for table CUSTSTN.

Table CUSTSTN sample datafill

TABLE: CUSTSTN		
>list		
CUSTNAME	OPTNAME	OPTION

CTXGRP1	MOT	MOT AUDIO512
>		

Table AUDIO

The MOT audio route lists are optionally assigned to the 512 allocated MOT audio groups in table AUDIO.

For each of the 512 allocated MOT audio groups (MOT AUDIO1 to MOT AUDIO512), an audio route list, containing up to four audio sources, is datafilled. See "Table AUDIO sample datafill" (page 729) for a sample datafill for table AUDIO.

Table AUDIO sample datafill

```
TABLE:  AUDIO
>list
      AUDIOKEY          ROUTES
-----
      AUDIO1 MOT      (ANN Y 2 NFRAANN) (RINGING 12) (MUSIC
      AUTOAINANNC 12) (REPEAT 2) $
>
```

Service Orders

Music on Transfer is provisioned on the set using SERVORD commands NEW and ADO. This option must be assigned on a PDN.

Operational Measurements

Music on Transfer does not affect Operational Measurements.

Logs

Music on Transfer does not affect logs.

User interface

Music on Transfer does not change the user interface.

Billing

Music on Transfer does not affect billing.


A59007002 - AAB Enhancement

Description

The Auto Answer Back (AAB) Enhancement feature allows the AAB feature to work on Secondary Directory Numbers (SDNs) and Group Intercoms (GICs). AAB Enhancement supersedes the AAB feature. It works as follows. The user activates AAB for any DN. When a call is presented to a DN on the set for which AAB is active, the call is automatically answered after four seconds of ringing without any user intervention. The handsfree unit is turned on and a special tone splash is given to both the caller and the called party to indicate that AAB is active on the called party's set. This tone splash also indicates that the handsfree unit has been turned on. This enhancement works the same way for GIC (see note). References to the AAB feature from this point forward, include the AAB Enhancement functionality.

Note: The abbreviation, DN, from this point forward will refer to both DN and GIC.

AAB activated call flow

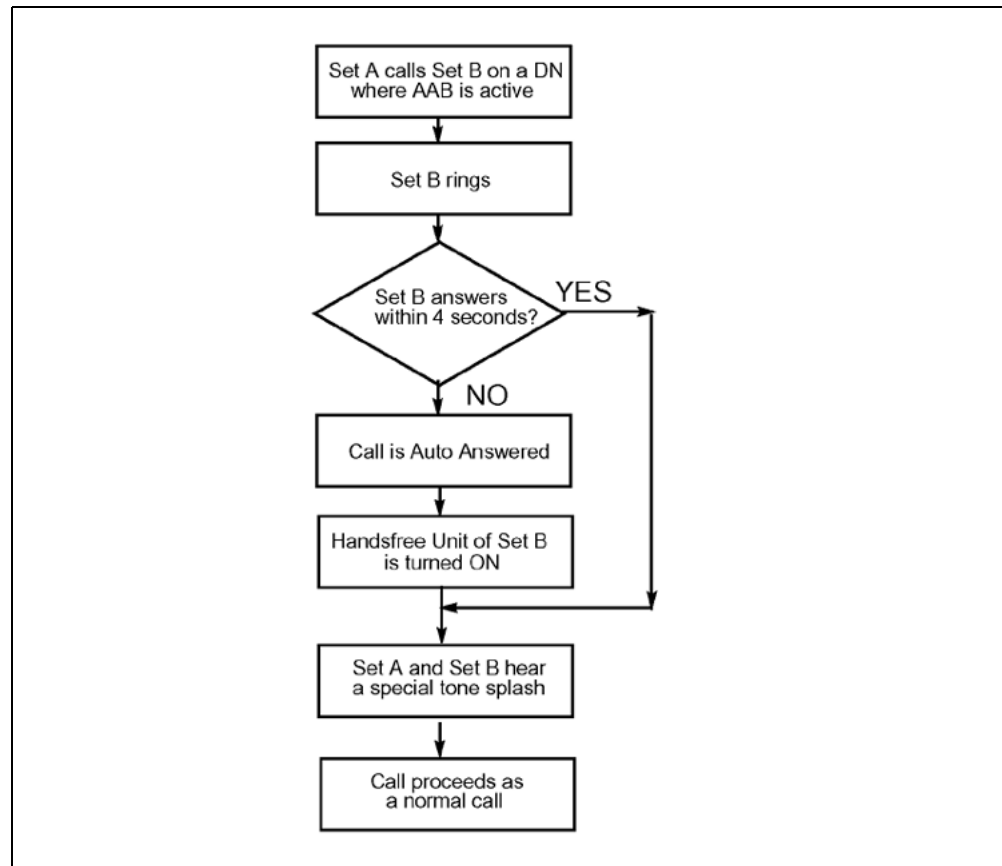

Feature activation and deactivation

AAB is assigned on a dedicated key. Use the following instructions for activation and deactivation of the feature. The set must be idle while performing the steps.

Feature activation Use the following steps to activate the AAB feature on a dedicated key.

To activate AAB:

1. Press the feature key on which AAB is assigned. The lamp next to the key flashes.
2. Press the DN key or GIC key for which you want AAB activated. The lamp lights solid.

Feature deactivation Use the following steps to deactivate the AAB feature on a dedicated key.

To deactivate AAB:

1. Press the feature key on which AAB is assigned. The lamp next to the key flashes.
2. Press the DN key or GIC key for which you want AAB deactivated. The lamp goes off, unless there is at least one DN on the set for which AAB is still active.

Feature verification

If the AAB key has a lamp turned on beside it, the user verifies if AAB is active for a DN on the set by pressing the DN key. If the user receives a stuttered dial tone, AAB is active for that DN. If the user gets a normal dial tone, AAB is inactive for that DN.

Hardware requirements

Auto Answer Back Enhancement has no hardware requirements.

Limitations and restrictions

The following limitations and restrictions apply to Auto Answer Back Enhancement:

- This feature can only be used with Handsfree capable key sets (KSET). See the *Meridian SL-100 Service Order Reference Manual* for more information.
- When an incoming call to an Integrated Voice and Data (IVD) set DN or a KSET DN is manually answered before four seconds of ringing (that is, before the AAB timer expires and the call is automatically answered) a tone splash is given.

Interactions

Auto Answer Back Enhancement has no functionality interactions.

Datafill

Auto Answer Back Enhancement

- does not affect office parameters
- affects data schema tables KSETLINE and KSETFEAT

Service Orders

Auto Answer Back Enhancement affects the ADO, NEW, CHF and DEO SERVORD commands. See the *Meridian SL-100 Service Order Reference Manual* for more information.

Operational Measurements

Auto Answer Back Enhancement does not affect Operational Measurements.

Logs

Auto Answer Back Enhancement does not affect logs.

User interface

Auto Answer Back Enhancement does not change the user interface.

Billing

Auto Answer Back Enhancement does not affect billing.

A59007055 - Meridian Digital Telephone Flash Download**Description**

This feature implements the firmware Flash Download mechanism for the Meridian Digital Terminals M3900 series portfolio. This is accomplished through the Nortel Networks Optivity Telephony Manager for the Meridian SL-100 product.

Meridian Digital Telephone Flash Download (referred to as Flash Download from this point forward) downloads firmware from the switch to a M3900 series Meridian Digital Telephone in the following situations:

- support a new language
- add new text prompts and self-labels for features and softkeys
- add new firmware-based applications
- support new signaling messages for server-based applications
- fix customer-reported problems

This feature using the Optivity Telephony Manager for Meridian SL-100

- queries the current firmware version on a Meridian Digital (M3900 series) Telephone
- initiates Flash Downloads to a series of Meridian Digital (M3900 series) Telephones
- initiates scheduled Flash Download on Meridian Digital Terminals configured on Intelligent Peripheral Equipment (IPE) with an enhanced Extended Peripheral Equipment Controller (EXPEC)
- tracks download progress, as well as manages the correlation of firmware files for the different terminals
- logs download failures

Note: All new firmware must be tested on a non-critical phone prior to downloading to a range of DN numbers to ensure that the load is not corrupt. Refer to CAB 75689 for additional information.

Accompanying features

The following features work in conjunction with this feature:

- A59007068, Meridian Digital Telephone DN Download
- A59007097, Meridian Digital Telephone Provisioning and Softkey Configuration
- A59007106, Meridian Digital Telephone Key Based Access Expansion Module
- A59007115, Meridian Digital Telephone Display Based Access Expansion Module
- A59007124, Meridian Digital Telephone Group Listening and Password Protection

References

For more information, refer to the *M3900 Series Meridian Digital Telephone Reference Manual*.

Hardware requirements

Flash Download requires no hardware. However, Optivity Telephony Manager for Meridian SL-100 is recommended.

Meridian Digital Terminals require IPE with an EXPEC.

Limitations and restrictions

The following limitations and restrictions apply to Flash Download:

- Flash Download is not available if the Meridian Digital Telephone is active with a call.
- Meridian Digital Telephones are inoperable during the Flash Download process. The terminals display a message when a download is in progress. If a download fails, a message display indicates that maintenance is required.

Interactions

When IPE is equipped with EXPEC, and a M3900 series Meridian Digital Telephone and Meridian M2000 series coexist, the M2000 terminals continue to operate during the Flash Download process. Call processing traffic increases download time, and Flash Download processing increases call processing time.

Datafill

Flash Download does not affect data schema tables or office parameters.

Service Orders

Flash Download does not affect SERVORD.

Operational Measurements

Flash Download does not affect Operational Measurements.

Logs

Flash Download does not affect logs.

User interface

Flash Download does not change the user interface.

Billing

Flash Download does not affect billing.

A59007068 - Meridian Digital Telephone DN Download

Description

The Meridian Digital Telephone M3900 series (except M3901) has a display area next to each key. This area displays the Directory Number (DN) associated with a line key or the feature assigned to a feature key, thus eliminating paper labels.

Meridian Digital Telephone DN Download (referred to as DN Download from this point forward) provides the M3900 series with the DN information for the display area. Contained within this information are the feature codes used to display the assigned feature to a key.

Accompanying features

The following features work in conjunction with DN Download:

- A59007055, Meridian Digital Telephone Flash Download
- A59007097, Meridian Digital Telephone Provisioning and Softkey Configuration
- A59007106, Meridian Digital Telephone Key Based Access Expansion Module
- A59007115, Meridian Digital Telephone Display Based Access Expansion Module
- A59007124, Meridian Digital Telephone Group Listening and Password Protection

References

For more information, refer to the *M3900 Series Meridian Digital Telephone Reference Manual*.

Hardware requirements

Meridian Digital Telephone M3900 series requires digital line cards in Intelligent Peripheral Equipment (IPE) with an enhanced Extended Peripheral Equipment Controller (EXPEC).

Limitations and restrictions

DN Download and feature key labeling is applicable to Meridian Digital Telephones equipped with a display. Therefore, the M3902, M3903, M3904, M3905, and Display Based Access Expansion Module (DBA) use this functionality, while the M3901 set does not.

The M3902 Meridian Digital Telephone feature keys are limited to seven characters.

The M3903, M3904, and M3905 Meridian Digital Telephone feature keys are limited to ten characters.

DNs contain seven digits or characters.

Interactions

DN Download has no functionality interactions.

Datafill

DN Download does not affect data schema tables or office parameters.

Service Orders

DN Download does not affect SERVORD.

Operational Measurements

DN Download does not affect Operational Measurements.

Logs

DN Download does not affect logs.

User interface

DN Download does not change the user interface.

Billing

DN Download does not affect billing.

A59007097 - Meridian Digital Telephone Provisioning and Softkey Configuration

Description

The purpose of these features, Meridian Digital Telephone Provisioning and Softkey Configuration (referred to as Telephone Provisioning and Softkey Configuration from this point forward) is to introduce the Meridian Digital Telephone M3900 series to the Meridian SL-100 product market.

The following sections give brief characteristics of each model in the portfolio. For more detail, please refer to the *M3900 Series Meridian Digital Telephone Reference Manual*.

M3901 characteristics

The M3901 set is a single-line set with no display. It supports one Directory Number (DN) and five programmable features. This set also includes fixed keys for Line, Feature, Hold, Goodbye, and Volume Up/Down.

M3902 characteristics

The M3902 set is a single-line set with a two-line display. It supports one DN, three programmable feature keys that are self-labeled, and three fixed keys for Message, Transfer, and Options. Although the Message and Transfer keys are permanently labeled, they are not restricted to those features. This set includes fixed keys for Hold, Goodbye, Smart Mute with Light Emitting Diode (LED), Volume Up/Down, Handsfree (with LED), and four Navigation keys (up, down, left, and right).

M3903 characteristics

The M3903 is a four-DN set with a three-line display. It supports four self-labeled line/feature keys and four keys to access context-sensitive softkeys. It has five fixed feature/application keys which are Options, Message, Call Log, Applications, and a Shift key used to page between two layers of line/feature keys. The Message key is permanently labeled as such, but is not restricted to that feature. The set includes fixed keys for Hold, Goodbye, Smart Mute (with LED), Volume Up/Down, Headset (with LED), Handsfree (with LED), and four Navigation keys (up, down, left, right). This set also has Copy and Quit keys for applications and features.

M3904 characteristics

The M3904 is a professional set with a five-line display. It supports six self-labeled programmable line/feature keys with a Shift key to page between two layers of feature keys, for a total of 12. This set includes four context-sensitive softkeys used to access features, and fixed keys for Hold, Goodbye, Smart Mute (with LED), Volume Up/Down, Headset (with LED), and Handsfree (with LED). There are four Navigation keys (up, down, left, right) and Copy and Quit keys for applications and features.

M3905 characteristics

The M3905 is an Automatic Call Distribution (ACD) set that supports eight self-labeled programmable line/feature keys with a four-line display. This set has four context-sensitive softkeys used to access features. It has six fixed feature/application keys for ACD features Supervisor, Emergency, Not Ready, Make Busy, In Calls, and Headset. These keys are permanently labeled, but not restricted to those features. This set also has fixed keys for Hold, Goodbye, Smart Mute (with LED), Volume Up/Down, Headset (with LED), and Supervisor Observe (with LED). There are four Navigation keys (up, down, left, right) and Copy and Quit keys for applications and features.

Accompanying features

The following features work in conjunction with Telephone Provisioning and Softkey Configuration:

- A59007055, Meridian Digital Telephone Flash Download
- A59007068, Meridian Digital Telephone DN Download
- A59007106, Meridian Digital Telephone Key Based Access Expansion Module
- A59007115, Meridian Digital Telephone Display Based Access Expansion Module
- A59007124, Meridian Digital Telephone Group Listening and Password Protection

References

For more information, refer to the *M3900 Series Meridian Digital Telephone Reference Manual*.

Hardware requirements

Telephone Provisioning and Softkey Configuration work with the following Meridian Digital Terminals:

- M3901
- M3902
- M3903
- M3904
- M3905

Meridian Digital Terminals M3900 series function on digital line cards in Intelligent Peripheral Equipment (IPE) with an enhanced Extended Peripheral Equipment Controller (EXPEC).

Limitations and restrictions

The following limitations and restrictions apply to Telephone Provisioning and Softkey Configuration:

- The M3904 and M3905 support a maximum of two Key Based Access Expansion Modules (KBA) or one Display Based Access Expansion Module (DBA).
- A set that has at least one KBA cannot have a DBA and a set with a DBA cannot have a KBA.

Interactions

The Analog Terminal Adapter (ATA) functions with the Meridian Digital Telephone M3900 series.

Datafill

Telephone Provisioning and Softkey Configuration does not affect office parameters.

This feature affects the following data schema tables:

- IVDINV - stores information about the Meridian Digital Terminals
- KSETKEYS - supports feature key templates to simplify the configuration of the terminals
- LCCOPT - lists all of the available Line Class Codes (LCCs) and compatible options for the LCC

Service Orders

Telephone Provisioning and Softkey Configuration introduce Line Class Codes for the terminals. The LCCs are M3901, M3902, M3903, M3904, and M3905. For more information, see the *Meridian SL-100 Service Order Reference Manual*.

Operational Measurements

Telephone Provisioning and Softkey Configuration does not affect Operational Measurements.

Logs

Telephone Provisioning and Softkey Configuration does not affect logs.

User interface

Telephone Provisioning and Softkey Configuration does not change the user interface.

Billing

Telephone Provisioning and Softkey Configuration does not affect billing.

A59007106 - Meridian Digital Telephone Key Based Access Expansion Module

Description

The purpose of this feature is to allow Meridian Digital Telephone model M3904 and M3905 users to add Key Based Access Expansion Modules (KBAs) to these sets. The KBAs are equipped with 22 keys, used as additional keys, beyond the available physical and self-labeled programmable feature keys on the M3904 and M3905. These additional keys are available as Directory Number (DN) or feature keys. The terminals and modules attach so that they look and feel like one integrated unit.

There are 32 keys on the model M3904/M3905 Meridian Digital Terminals. The M3904 and M3905 support up to two KBAs with 22 keys each. Therefore, with one KBA, the key numbers are from 1 to 54. With two KBAs, the key numbers are from 1 to 76.

Accompanying features

The following features work in conjunction with Meridian Digital Telephone KBA:

- A59007055, Meridian Digital Telephone Flash Download
- A59007068, Meridian Digital Telephone DN Download
- A59007097, Meridian Digital Telephone Provisioning and Softkey Configuration
- A59007115, Meridian Digital Telephone Display Based Access Expansion Module
- A59007124, Meridian Digital Telephone Group Listening and Password Protection

References

For more information, refer to the *M3900 Series Meridian Digital Telephone Reference Manual*.

Hardware requirements

The KBA is for the Meridian Digital Telephone models M3904 and M3905.

Limitations and restrictions

The following limitations and restrictions apply to Meridian Digital Telephone KBA:

- a KBA cannot be combined with a Display Based Access Expansion Module (DBA)
- a KBA is compatible with Meridian Digital Telephone models M3904 and M3905

Interactions

Meridian Digital Telephone KBA has no functionality interactions.

Datafill

Meridian Digital Telephone KBA

- does not affect office parameters
- affects data schema tables IVDINV. For more information, see the *Communication Server 2100 Commercial Systems Data Schema Reference Manual* (555-4031-851).

Service Orders

Meridian Digital Telephone KBA affects SERVORD functions NEW, NEWACD, ADO, DEO, and CHF. For more information, see the *Meridian SL-100 Service Order Reference Manual*.

Operational Measurements

Meridian Digital Telephone KBA does not affect Operational Measurements.

Logs

Meridian Digital Telephone KBA does not affect logs.

User interface

Meridian Digital Telephone KBA does not change the user interface.

Billing

Meridian Digital Telephone KBA does not affect billing.

A59007115 - Meridian Digital Telephones Display Based Access Expansion Module

Description

The Display Based Access Expansion Module (DBA) is optional for the Meridian Digital Telephone models M3904 and M3905. The module physically attaches to the M3904 or M3905 and increases the number of programmable feature keys by 24, for a total of 56 keys. Feature keys 33-56 are on the DBA. The DBA contains a display, eight self-labeled programmable feature keys, and a Shift key. The display shows a set of eight labels next to a key. As a user shifts through the pages of the display (three pages total), the labels change according to the features programmed for the next set of feature keys.

SERVORD provisions the DBA as a line option. Once a DBA is added to a telephone, Directory Numbers (DNs) or features are assigned to the extra keys. Through a key map download from the switch to the set, the DBA keys are enabled according to their assignments. Softkey labeling is handled by the firmware of the DBA. A softkey label contains up to 10 characters.

Accompanying features

The following features work in conjunction with Meridian Digital Telephone DBA:

- A59007055, Meridian Digital Telephone Flash Download
- A59007068, Meridian Digital Telephone DN Download
- A59007097, Meridian Digital Telephone Provisioning and Softkey Configuration
- A59007106, Meridian Digital Telephone Key Based Access Expansion Module
- A59007124, Meridian Digital Telephone Group Listening and Password Protection

References

For more information, refer to the *M3900 Series Meridian Digital Telephone Reference Manual*.

Hardware requirements

The DBA is for the Meridian Digital Telephone models M3904 and M3905.

Limitations and restrictions

The following limitations and restrictions apply to Meridian Digital Telephone DBA:

- A DBA is optional for the Meridian Digital Telephone models M3904 and M3905 only. Each telephone accommodates only one DBA.
- A DBA cannot be combined with a Key Based Access Expansion Module (KBA).
- A DBA must be provisioned on Key 1 of the Meridian Digital Telephone.

Interactions

This feature affects the DN Download feature for the Meridian Digital Terminals. For more information, see Meridian Digital Telephone DN Download.

Datafill

Meridian Digital Telephone DBA does not affect office parameters.

The following data schema tables are affected by Meridian Digital Telephone DBA:

- OPTOPT
- IVDINV
- LCCOPT

For more information, see the *Meridian SL-100/Communication Server 2100 Commercial Systems Data Schema Reference Manual*.

Service Orders

Meridian Digital Telephone DBA creates the DBA option. SERVORD commands affected by this option are NEW, NEWACD, ADO, and DEO. QLEN and QDN commands display a Line Equipment Number (LEN) or Directory Number (DN) with the DBA option. For more information, see the *Meridian SL-100 Service Order Reference Manual*.

Operational Measurements

Meridian Digital Telephone DBA does not affect Operational Measurements.

Logs

Meridian Digital Telephone DBA does not affect logs.

User interface

Meridian Digital Telephone DBA does not change the user interface.

Billing

Meridian Digital Telephone DBA does not affect billing.

A59007124 - Meridian Digital Telephones Group Listening and Password Reset

Description

Meridian Digital Telephone Group Listening and Password Reset (referred to separately as Group Listening and Password Reset from this point forward) are two features with details for each described in the following paragraphs.

Group Listening is available for models M3902, M3903, and M3904.
Password Reset is available for models M3903, M3904, and M3905.

Group Listening

Group Listening allows the user to turn on the loudspeaker at the same time that the handset is in use. This allows a group of people to listen to the audio, but only the handset transmits audio. Handsfree must be enabled to activate Group Listening. Group Listening differs from Handsfree in that

only the loudspeaker, and not the handsfree microphone, is enabled. Other differences between Group Listening and Handsfree are that the handset is off hook, and its audio paths are on with Group Listening.

Group Listening is available when enabled and assigned to the telephone through SERVORD. The user enables the feature through the Options key. If Group Listening is not available to the telephone, it is not present in the options menu list. Also, Group Listening cannot be activated when Handsfree is in use.

Password Reset

Password Reset is performed by a switch administrator. When users forget their passwords, the command interface (CI) command RESETPWD can reset the password for all directories. When Password Reset is performed on a telephone with password protection enabled, the user must enter the new password to gain access to a list. When Password Reset is performed on a telephone with password protection disabled, the user must enter the new password the next time password protection is enabled.

Accompanying features

The following features work in conjunction with Group Listening and Password Reset:

- A59007055, Meridian Digital Telephone Flash Download
- A59007068, Meridian Digital Telephone DN Download
- A59007097, Meridian Digital Telephone Provisioning and Softkey Configuration
- A59007106, Meridian Digital Telephone Key Based Access Expansion Module
- A59007115, Meridian Digital Telephone Display Based Access Expansion Module

References

For more information, refer to the *M3900 Series Meridian Digital Telephone Reference Manual*.

Hardware requirements

The Group Listening feature is available for models M3902, M3903, and M3904.

The Password Reset feature is available for models M3903, M3904, and M3905.

Limitations and restrictions

The Group Listening feature requires that Handsfree be enabled.

The Password Reset feature has no limitations or restrictions, other than the hardware requirements.

Interactions

The Group Listening and Password Reset features have no interactions.

Datafill

The Password Reset feature does not affect data schema tables or office parameters.

The Group Listening feature

- does not affect office parameters
- affects data schema tables IVDINV

Service Orders

The Group Listening feature is assignable to M3902, M3903, and M3904 terminals using SERVORD commands ADD, NEW, NEWACD, and EST. The SERVORD CHF command toggles the status of the option to a previously datafilled Meridian Digital Telephone. For more information, see the *Meridian SL-100 Service Order Reference Manual*.

Operational Measurements

The Group Listening and Password Reset features do not affect Operational Measurements.

Logs

The Group Listening and Password Reset features do not affect logs.

User interface

The Group Listening feature does not change the user interface.

The Password Reset feature is issued by RESETPWD at the MAP terminal.

Billing

The Group Listening and Password Reset features do not affect billing.

A59007133 - Enhanced IPE Controller**Description**

This feature is the software portion of a combined set of software and hardware enhancements to the Intelligent Peripheral Equipment (IPE) controller. The hardware portion is the Enhanced Extended Peripheral Controller (EXPEC) card. This controller provides all of the functionality of the previous generation IPE controller, Extended Peripheral Controller (XPEC), plus other capabilities described in the following paragraphs.

A portion of the EXPEC capabilities is directed at all users of this controller. The EXPEC capabilities include

- increased performance from a faster Central Processing Unit (CPU) and an upgraded operating system
- non-volatile flash memory for storage of an IPE software load and a modification to the MAPCI RTS command, which together allow the IPE to be restored to service without the delay of software downloading from the computing module (CM)

Note: The software load stored in flash cannot be upgraded without Optivity Telephony Manager for Meridian SL-100.

The remainder of the EXPEC capabilities is directed at users of Optivity Telephony Manager for Meridian SL-100, a Graphical User Interface (GUI)-based management platform for the Meridian SL-100 product. The EXPEC capabilities using the Optivity Telephony Manager for Meridian SL-100 include

- an Ethernet interface and transmission control protocol/internet protocol software, which allows the IPE to communicate with Optivity Telephony Manager for Meridian SL-100 and provides increased bandwidth for file transfer
- the ability to transfer new software loads from repositories on the Local Area Network (LAN) and commit the software loads to non-volatile flash memory while the IPE is in service
- the ability to maintain multiple software load versions in flash memory and to designate which load is to be booted when the IPE is returned to service (RTS) from flash memory
- a set of modified log messages to report status information associated with hardware and software capabilities

Hardware requirements

This feature is developed in conjunction with the IPE controller card (EXPEC) and is deployed with this card. The remaining hardware in the IPE is unchanged and operates with this controller card identically to the way it operates with the controller's predecessor (XPEC).

In addition to the equipment needed for an IPE shelf, the following items are needed for operation with Optivity Telephony Manager for Meridian SL-100:

- 10BaseT Ethernet connection to an EXPEC
- EXPEC card

Limitations and restrictions

The following limitations and restrictions apply to Enhanced IPE Controller:

- Supports release MSL11 or higher.
- Transferring load files to the IPE using the Ethernet interface under direction of the Optivity Telephony Manager for Meridian SL-100 requires one or more repository hosts on the LAN. Each host must contain a copy of the load files and provide an RFC-959-compliant File Transfer Protocol (FTP) server for accessing the files. The Meridian SL-100 FTP server provides this capability.
- Transferring load files using the Ethernet interface is different from loading the IPE using the LOADPM command interface (CI) command. The differences are explained in the following list:
 - Optivity Telephony Manager for Meridian SL-100 transfers loads to flash memory, using the Ethernet interface, while the IPE is in an In service (INSV) or In service Trouble (ISTB) state. The load in flash memory becomes active after the return to service (RTS) peripheral module (PM) FLASH CI command is issued (see the following note).
 - The LOADPM CI command is issued while the IPE is in a Manual Busy (MANB) state. This load becomes active after the RTS PM CI command is issued.

Note: In some circumstances, Optivity Telephony Manager for Meridian SL-100 transfers loads while the IPE is in MANB state. The IPE requires a valid load with a valid IP address set in the IPE prior to it being placed in the MANB state. In addition, if the IPE is RTS while Optivity Telephony Manager for Meridian SL-100 is transferring a load, the Optivity Telephony Manager connection is lost, resulting in an incomplete load file in the IPE flash memory.

While Optivity Telephony Manager for Meridian SL-100 transfers an IPE load stored in a valid repository (for example, an FTP server), the switch requires the IPE load to be stored on a disk storage device (for example, System Load Module [SLM]) to clear PM loader faults and for proper use of the IPE system recover controller.

For any communication with Optivity Telephony Manager for Meridian SL-100 to occur, the IPE must be datafilled as an EXPEC, with a valid IP address, subnet mask, and gateway. An RTS must be performed to set these parameters in the IPE. Any changes to these parameters requires a subsequent RTS to activate the changes.

Interactions

Enhanced IPE Controller has no functionality interactions.

Datafill

Enhanced IPE Controller does not affect office parameters.

Enhanced IPE Controller modifies data schema table IPEINV by adding the following fields:

- XPEC type - used by the front-end software to distinguish between the XPEC card and the EXPEC card
- IP port status - determines whether Optivity Telephony Manager for Meridian SL-100 uses the port for maintaining load files
- IP address - downloads files to the EXPEC card
- Subnet mask - calculates the network ID and host ID
- Default gateway - indicates the IP address of a router, if one is present on the network segment to which the EXPEC is attached

Service Orders

Enhanced IPE Controller does not affect SERVORD.

Operational Measurements

Enhanced IPE Controller does not affect Operational Measurements.

Logs

Enhanced IPE Controller affects logs PM128, PM181, and PM189.

The following log messages are generated for PM128:

- XPEC type mismatch
- IP port info mismatch

The following log messages are generated for PM181:

- MSL version message sent
- time/day message sent
- IP address sent

The following log messages are generated for PM189:

- corrupt load transferred
- memory not initialized
- heap error
- SRAM write deficiency
- flash memory failure
- flash boot load update

- flash boot load update failure
- Ethernet connection accepted/rejected

User interface

Enhanced IPE Controller does not change the user interface.

Billing

Enhanced IPE Controller does not affect billing.

A59007614 - SNMP Enhancements for Optivity Telephony Manager**Description**

This feature affects the Management Information Base (MIB) of the DMS-100 and Meridian SL-100 switches by providing additional security to SNMP messages. In this document, the feature name is shortened to SNMP Enhancements for Optivity Telephony Manager for Meridian SL-100.

DMS-100 management information base enhancements

The MIB is enhanced by the following maintenance and monitoring operations in DMS-100 switches:

- increased log trap size - allows Optivity Telephony Manager for Meridian SL-100 to set the log trap text size using SNMP
- log filtering on trap number and event type - allows Optivity Telephony Manager for Meridian SL-100 to select the type of logs to generate traps, based on the trap number and the event type

Meridian SL-100 management information base enhancements

The MIB is enhanced by the following maintenance and monitoring operations in Meridian SL-100 switches:

- monitoring the P-side of a node
- filtering on node state
- provisioning QueryPM with fault information
- provisioning LTP and LTPMan level commands
- filtering on line state
- provisioning TTP level commands
- getting the IP address of IPE controller cards
- getting the MAPCI; MTC top level alarms

Monitoring the P-side of a node This MIB object provides information about P-side links of a node. The output fields of the object are

- P-side node number

- P-side node state
- device name of P-side node
- port number
- speech/message capability
- message condition

Filtering on node state This MIB object allows Optivity Telephony Manager for Meridian SL-100 to identify all the nodes in a particular state. The nodes allow filtering on the following states:

- node okay
- node machine busy
- node manual busy
- node offline
- node unequipped
- node in service trouble (for peripheral modules [PM])
- node system busy (for PMs)
- node C-side busy (for PMs)

Provisioning QueryPM with fault information This MIB object allows Optivity Telephony Manager for Meridian SL-100 to monitor various PMs using SNMP. It also provides fault information about PMs.

The output fields of this object are

- node number
- PM type
- PM number
- number of PMs equipped for an office
- location information
- load file information
- Product Engineering Code
- node status
- fault information
- threshold limit for messages
- IPE datafilled and IPE actual card information
- ring generator status

Provisioning LTP and LTPMan level commands The following paragraphs and lists give more detail about the LTP and LTPMan level commands.

LTP level commands are

- DIAG
- AlmStat
- CktLoc
- Hidden command - FRLS

LTPMan level commands are

- Loss
- Noise
- ToneGen
- Jack
- Tstring
- Balance
- RlsConn
- Hold
- Ckttst
- Sustate

LTP and LTPMan Command summary

Command	Description
DIAG	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the DIAG command using SNMP. The DIAG command performs an extended diagnostic test on a line that is in the idle (IDL) or manual busy (MB) state. The command output field is DIAG Result.
AlmStat	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the AlmStat command using SNMP. The AlmStat command queries the alarm system of the Line Maintenance Subsystem (LNS) and displays the status of alarms. It also changes the thresholds of the alarm classes in the switch. The command output fields are • threshold values of the different alarms • number of different working lines, terminals • node Dial Tone Speed Recording (DTSR) display information

Command	Description
CktLoc	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the CktLoc command using SNMP. The CktLoc command locates and identifies the circuit card used for the line circuit and displays circuit characteristics. The command output fields are • bay id • H/W device • Product Engineering Code • floor number • row number • shelf number • site name • drawer number • loss (attenuation) pad setting for local-to-local calls • balance network
FRLS	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the FRLS command using SNMP. The FRLS command forcibly disconnects a line circuit from test equipment or any other circuit and changes its state to MB.
Loss	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the Loss command using SNMP. The Loss command measures the insertion loss of a test tone sent from the subscriber end of a loop to its line circuit. The command output field is the loss measurement in dBm.
Noise	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the Noise command using SNMP. The Noise command measures the C-message weighted circuit noise on a subscriber loop. The command output field is the noise measurement in dBRNC.
ToneGen	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the ToneGen command using SNMP. The ToneGen command transmits a tone on a subscriber loop. The command output field states whether the specified tone is generated.
Jack	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the Jack command using SNMP. The Jack command connects a jack-ended trunk to a subscriber line or a jack to a subscriber loop while bypassing the line card. The command output field states whether the specified jack is connected.
Tstring	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the Tstring command using SNMP. The Tstring command tests the ringing relay in the line card for proper functioning. The command output field states whether the test passed.

Command	Description
Balance	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the Balance command using SNMP. The Balance command performs an on-hook balance network test on a subscriber loop. The command output fields are balance network value, and loss pad value.
RlsConn	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the RlsConn command using SNMP. The RlsConn command releases test equipment connected to a line. The command output field states whether the connection is released.
Hold	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the Hold command using SNMP. The command output field gives the status of the hold command performed on a line.
Ckttst	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the Ckttst command using SNMP. The Ckttst command sends test messages to test the line. The command output field is the number of test messages received.
Sustate	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the Sustate command using SNMP. The Sustate command determines the subscriber status of the EBS connected to the business set line. The command output field states the result of the sustate command.

Filtering on line state This MIB object allows Optivity Telephony Manager for Meridian SL-100 to identify all the lines in a specified state, using SNMP.

Provisioning TTP level commands ["TTP level command summary" \(page 752\)](#) provides more detail about the TTP commands.

TTP level command summary

Command	Description
TST	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to execute the test (TST) command for specified trunks using SNMP. The type of test is specified as a parameter of the TST command.
Cktloc	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to perform the Cktloc command for trunks using SNMP. This command provides information about the physical location of the circuit. The command output fields are • site name • floor location • row number • bay id • shelf number • device description • card position • Product Engineering Code

Command	Description
	• circuit number • receive pad setting • transmit pad setting • maintenance noise limit • immediate action noise limit • expected measured loss • precision balance unit • loop length • compensation resistor
FRLS	This MIB object allows Optivity Telephony Manager for Meridian SL-100 to force release trunks with the FRLS command using SNMP.

Getting the IP address of IPE controller cards This MIB object allows Optivity Telephony Manager for Meridian SL-100 to obtain the IP addresses of the enhanced IPE controller cards, using SNMP.

Getting the MAPCI;MTC top level alarms This MIB object allows Optivity Telephony Manager for Meridian SL-100 to access the alarm status for different categories of switch equipment. This information is available using the MAP as the alarm banner at MAPCI;MTC level. The alarm type and alarm text are also available.

Access to the following is provided with this object:

- alarm status for CM
- alarm status for MS
- alarm status for IOD
- alarm status for Net
- alarm status for PM
- alarm status for CCS
- alarm status for LNS
- alarm status for TRKS
- alarm status for EXT

Security enhancements

This feature ensures authenticity of SNMP messages. Authenticating SNMP messages allows Optivity Telephony Manager for Meridian SL-100 to perform maintenance operations in a secure manner.

SNMP sessions are established with user ID and password verification. The user ID is the same as that used for the switch login. A new password is given for the SNMP user and is provisioned through SNMPUTIL. The IP address, from which an SNMP user starts an SNMP session, can be restricted and is also provisioned through SNMPUTIL. Every session has a unique sessionID.

An inactivity timer is started when an SNMP session is started. This timer resets on receipt of an authentic SNMP message. On expiration of the inactivity timer, the SNMP session terminates automatically.

SNMPUTIL has additional commands to monitor and terminate SNMP sessions, edit the trap destination table, and select the message format.

Starting and terminating SNMP sessions

The processes of starting and terminating SNMP sessions are transparent to the Optivity Telephony Manager for Meridian SL-100 user. An SNMP session starts when Optivity Telephony Manager for Meridian SL-100 exchanges the first GET request on the session login device. The SNMP session terminates when Optivity Telephony Manager for Meridian SL-100 is exited or the inactivity timer expires. If the inactivity timer expires, the user must restart an SNMP session, or the switch will not respond to requests. The inactivity timer value is set through Optivity Telephony Manager for Meridian SL-100.

Accessing session information

Information associated with the SNMP sessions is available through the sessionMIB command. This allows Optivity Telephony Manager for Meridian SL-100 access to the following fields:

- Session ID - the session ID of the user
- User ID - the user ID
- Login time - the SNMP session start time
- IP address - the IP address of the user
- Inactivity timer - the inactivity timer value

References

See the Meridian *SL-100 Getting Started with Optivity Telephony Manager User Guide* for more information.

Hardware requirements

The SNMP Enhancements for Optivity Telephony Manager for Meridian SL-100 feature requires an Ethernet Interface Unit (EIU).

Limitations and restrictions

The SNMP Enhancements for Optivity Telephony Manager for Meridian SL-100 feature requires software release MSL11 or greater.

Interactions

The SNMP Enhancements for Optivity Telephony Manager for Meridian SL-100 feature has no functionality interactions.

Datafill

The SNMP Enhancements for Optivity Telephony Manager for Meridian SL-100 feature

- does not affect office parameters
- creates data schema table SNMPTAB

Service Orders

The SNMP Enhancements for Optivity Telephony Manager for Meridian SL-100 feature does not affect SERVORD.

Operational Measurements

The SNMP Enhancements for Optivity Telephony Manager for Meridian SL-100 feature does not affect Operational Measurements.

Logs

The SNMP Enhancements for Optivity Telephony Manager for Meridian SL-100 feature affects three logs as indicated in the following list:

- SNMP 101 - when an SNMP user starts an SNMP session, the following attributes are logged:
 - user ID
 - login time
 - IP address
- SNMP 102 - when an SNMP user ends an SNMP session, the following attributes are logged:
 - user ID
 - login time
 - logout time
 - IP address
- SNMP 103 - when an SNMP user performs a maintenance operation. The following maintenance operations generate this log:

- LTP: Diag, Loss, Noise, Tonegen, Jack, Tstring, Balance, Frls and Ckttst
- TTP: Tst and Frls

The following attributes are logged:

- user ID
- IP address
- time of execution of the command
- command performed

User interface

The following are user interface commands provided by the command interface (CI) command SNMPUTIL:

- WHO - lists all SNMP users with active SNMP sessions
- TERMINATE - terminates the active SNMP sessions specified by the sessionID in the command, or terminates all active sessions if sessionID "0" is used in the command
- TRAPDESTEDIT - allows access to edit the Trap Destination Table
- MAXSESSION - controls the maximum number of active SNMP sessions at a given instance of time
- ADDUSER - permits SNMP access to the specified user in the command
- DELUSER - denies SNMP access to the specified user in the command
- DISPLAYUSERS - displays all users with SNMP access
- NEWMSGFORMAT - allows user to select the message format
- PASSWD - allows user to change password

Billing

The SNMP Enhancements for Optivity Telephony Manager for Meridian SL-100 feature does not affect billing.

A59009240 - PRI on RCC2 for Meridian SL-100

Description

This feature supports Primary Rate Interface (PRI) National Integrated Services Digital Network-2 (NI-2) trunks off the Meridian SL-100 switch Remote Cluster Controller 2 (RCC2).

RCC2 general description

The RCC2 is a remote peripheral based on the common peripheral module (CPM) shelf.

The C-side of the RCC2 is connected with up to 20 digital signal level 1 (DS1) links to a host peripheral, such as Line Trunk Controller (LTC), Line Group Controller (LGC), or ISDN Line Trunk Controller (LTCI).

The RCC2 main shelf supports up to 24 DS1 links on its P-side. The RCC2 main shelf, with an extension (half shelf), can support up to 48 DS1 links.


The main features of the RCC2 are as follows:

- LCM/LCME support off DS30A links
- RLCM off DS1 links
- Star Remote off DS1 links
- ISDN line drawer (ILD) support, in the following possible configurations:
 - LCM/RLCM, up to two ILDs
 - Star Remote, up to six ILDs
- remote line drawer (RLD). Starting at NA11, up to 16 RLDs are deployed off the Star Remote, over DS1 links
- trunks support
- dual support
- intraswitching capabilities using P-side to P-side matrix connections
- Emergency Stand Alone (ESA) support, including warm entry/exit

PRI on RCC2 configuration

"[PRI on dual RCC2 configuration](#)" (page 758) shows one of the possible configurations for the RCC2, as it can be used in a dual and non-dual configuration off the same LTC.

PRI on dual RCC2 configuration

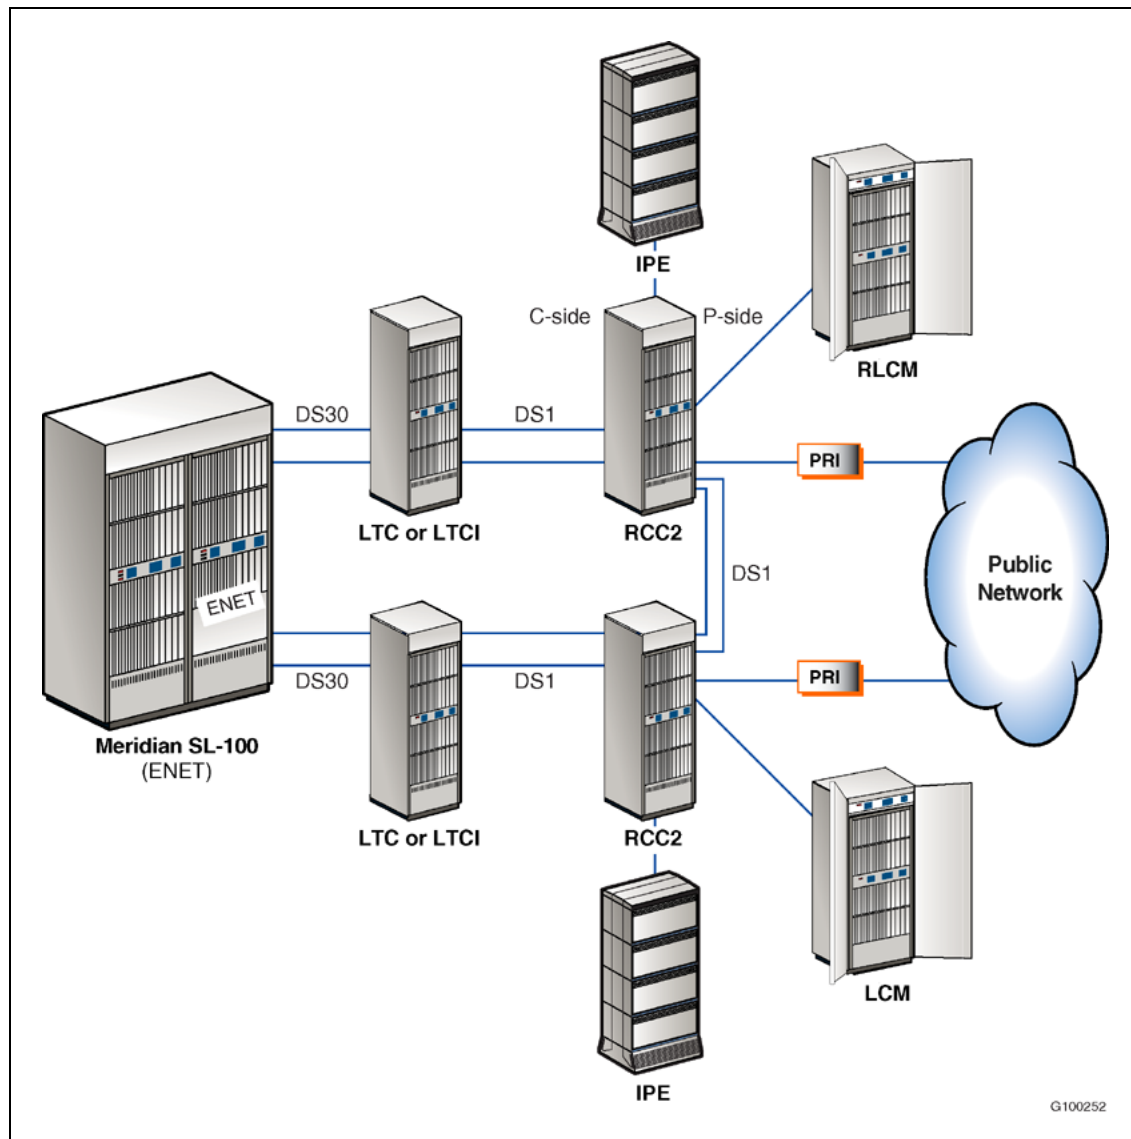**Dual RCC2**

When two RCC2s are connected by DS1 links on each P-side, they are in dual configuration. The links are called interlinks. The dual configured RCC2s are considered spouses. Calls originating in one RCC2 and terminating in its spouse RCC2 are completed using channels on interlinks, with no need to use C-side speech channels. These calls are referred to as interswitched calls.

Scope of work

PRI on RCC2 provides the following functionalities:

- support PRI static trunks on RCC2

- support PRI dynamic trunks on RCC2
- support PRI in ESA mode
- support ESA warm entry/exit for PRI calls
- support dual RCC2 configuration for PRI calls
- interworking support, according to the following list:
 - Plain Ordinary Telephone Service (POTS) to PRI
 - Electronic Business Set (EBS) to PRI
 - Basic Rate Interface (BRI) to PRI
 - Per Trunk Signaling (PTS) trunk to PRI
 - Signaling System 7 (SS7) trunk to PRI
 - Emergency Service Bureau (ESB) trunk to PRI
 - PRI to PRI

Hardware requirements

This feature is designed for an RCC2.

Limitations and restrictions

The following limitations and restrictions apply to PRI on RCC2:

- only the Nortel Networks NI-2 PRI (NTNIPRI) variant is supported with this feature
- ESA mode operation supports the following:
 - Basic Call, which is composed of
 - speech
 - 3.1 KHz audio
 - 64 kbps unrestricted digital
 - 64 kbps unrestricted digital, rate adapted from 56 kbps
 - Back-up D-channel
- Normal mode operation supports the following:
 - Basic Call, as described above
 - Back-up D-channel
 - Integrated Service Access (Call-by-Call)
 - Dialable Wideband (Nx64)
 - Calling Name Delivery

- Integrated Business Network two-way trunk group (IBNT2) ISDN and PRI trunks are supported for PRI
- C-side speech channels connect the Enhanced ISDN Signaling Processor (EISP) with the PRI D-channels
- B-channel negotiation is not supported by Meridian SL-100 during normal mode or ESA mode
- PRI trunks are defined on the first 20 DS1 links off the RCC2 P-side
- The number of possible PRI D-channels depends on the number of ILD/RLDs existing, and the number of ILD/RLDs depends on the PRI D-channels (see the ["ILD/RLD versus PRI D-channels" \(page 760\)](#)). The exact numbers can also be calculated by interpolation.

["ILD/RLD versus PRI D-channels" \(page 760\)](#) describes the alternatives for PRI D-channels.

ILD/RLD versus PRI D-channels

BRI D-ch. cards	ILD/RLD number	PRI D-channels
=< 10	9	20
=< 10	27	16
=< 10	54	10
=< 10	82	4
=< 10	100	0

Interactions

PRI on RCC2 has no functionality interactions.

Datafill

The datafill required to define a PRI on RCC2 is the same as it is for PRI trunks on LTCI. For more information, refer to the *Integrated Services Digital Network Primary Rate Interface Translations Guide*.

The following data schema tables are not changed by this feature, but must be datafilled in order for this feature to work:

- RCCINV
- LTMAP
- LCMDRINV

The following data schema tables are changed by this feature:

- RCCPSINV
- ISTRKGRP

- TRKSGRP
- TRKMEM

RCCINV table provisioning

The inventory data besides the P-side link assignments are defined in table RCCINV. It is not possible to delete the EISP card when PRI trunks are defined on the peripheral module. An error message is generated in such a case, and the tuple change is not accepted. See the following datafill example for table RCCINV.

Note: In an opposite situation, a check for existence of an EISP definition is made in the first definition of a PRI trunk on the RCC2.

Table RCCINV tuple RCC2

```

RCCNAME      ADNUM  FRTYPE FRNO SHPOS  FLOOR  ROW FRPOS  EQPEC  LOAD
              CSPM                                EXECTAB
              CSAI                                CSLNKTAB
ESA INTRASW ADDLMSG
TONESET                                OPTCARD
                                PROCPEC
                                EXTINFO
OPTATTR      E2LOAD
-----
REM1      RCC2  4
          5  CRSC  3  18      2  B  5  MX85AA  XRI11AP
(POTS POTSEX) (KEYSET KSETEX) (ABTRK DTCEX) (RMM_TERM RSMEX)
(ESALINES ESAEX) (PRAB DTCEX) $
LTC  0
Y      N      N      (  0) (  1) (  2) (  4) (  3) (  5) $
      (  UTR6 ) (  MSG6X69) (  ISP 4) $
NORTHAM
          BNKONI05
          AX74AA AX74AA
          N
$

```

RCCPSINV table provisioning

The P-side links are defined in table RCCPSINV. Each link has its own link type. For the PRI trunks the link type is DS1PRA. See the following datafill example for table RCCPSINV.

Table RCCPSINV tuple RCC2

RCCNAME			PSLNKTAB
-----			-----
REM1	RCC2	4	
(0 NILTYPE) (1 DS1 DEFAULT Y) (2 DS1PRA PRI N 1 NIL \$)			
(3 DS1PRA PRI N 1 NIL \$) (4 DS1PRA PRI N 1 NIL \$)			
(5 DS1PRA PRI N 1 NIL \$) (6 DS1PRA PRI N 1 NIL \$)			
(7 DS1PRA PRI N 1 NIL \$) (8 NILTYPE) (9 DS1 DEFAULT Y)			
(10 DS1PRA PRI N 1 NIL \$) (11 DS1PRA PRI N 1 NIL \$)			
(12 DS1PRA PRI N 1 NIL \$) (13 DS1PRA PRI N 1 NIL \$)			
(14 DS1PRA PRI N 1 NIL \$) (15 DS1PRA PRI N 1 NIL \$)			
(16 DS1 DEFAULT Y) (17 DS1 DEFAULT Y) (18 DS1 DEFAULT Y)			
(19 DS1 DEFAULT Y) (20 NILTYPE) (21 NILTYPE) (22 NILTYPE) (23 NILTYPE)			
(24 NILTYPE) (25 NILTYPE) (26 NILTYPE) (27 NILTYPE) (28 NILTYPE)			
(29 NILTYPE) (30 NILTYPE) (31 NILTYPE) (32 NILTYPE) (33 NILTYPE)			
(34 NILTYPE) (35 NILTYPE) (36 NILTYPE) (37 NILTYPE) (38 NILTYPE)			
(39 NILTYPE) (40 NILTYPE) (41 NILTYPE) (42 NILTYPE) (43 NILTYPE)			
(44 NILTYPE) (45 NILTYPE) (46 NILTYPE) (47 NILTYPE) (48 DS30A)			
(49 DS30A) (50 DS30A) (51 DS30A) (52 NILTYPE) (53 NILTYPE) \$			

ISTRKGRP table provisioning

Dynamic trunks are defined in table ISTRKGRP. See the following datafill example for table ISTRKGRP.

Table ISTRKGRP

ISTRKKEY			XPMNAME
-----			-----
TTIMF3	REM1	RCC2	3
PRI1	REM1	RCC2	4
DTRK1	REM1	RCC2	4
DTRK2	REM1	RCC2	4

TRKSGRP table provisioning

When a trunk is defined as a PRI trunk (GRPTYP in IBNT2 or PRA in TRKGRP table), the location of the D-channel for this trunk is defined in table TRKSGRP. See the following datafill example for table TRKSGRP.

Table TRKSGRP tuple RCC2

SGRPKEY		CARDCODE										SGRPVAR	
SGRPVAR													

PRI1 0		DS1SIG											
ISDN 20 20	87Q931 2	N	STAND	USER	PT_PT	USER N	UNEQ						
50 N DEFAULT	RCC2	4	12 24	64K	HDLC								
				\$									
					\$								

Logs

PRI on RCC2 affects ISDN logs 401 and 402. For more information about these logs, see the *Meridian SL-100 Log Report Reference Manual*.

User interface

PRI on RCC2 does not change the user interface.

Billing


PRI on RCC2 does not affect billing.

A59011306 - Meridian Cabinet Network Interface (MCNI)

Description

This software feature allows the hardware of the same name, MCNI, to be datafilled, for a combined cabinet of the Enhanced Network (ENET) and the Fiberized Link Interface Shelf (FLIS). Tables SUSHELF and ENINV are datafilled. The frame Product Engineering Code (PEC), NTYA05AA, is also used in table ENINV. See the *Communication Server 2100 Commercial Systems Data Schema Reference Manual* (555-4031-851) for more information about provisioning the software feature MCNI.

If only one Link Interface Shelf (LIS) is provisioned, it must be on shelf 26 of the MCNI hardware. A second LIS, or blank panel is provisionable for shelf 00 of the MCNI hardware. See "[Meridian Cabinet Network Interface components](#)" (page 765) for an example of the MCNI hardware configuration used as a combined ENET and FLIS.

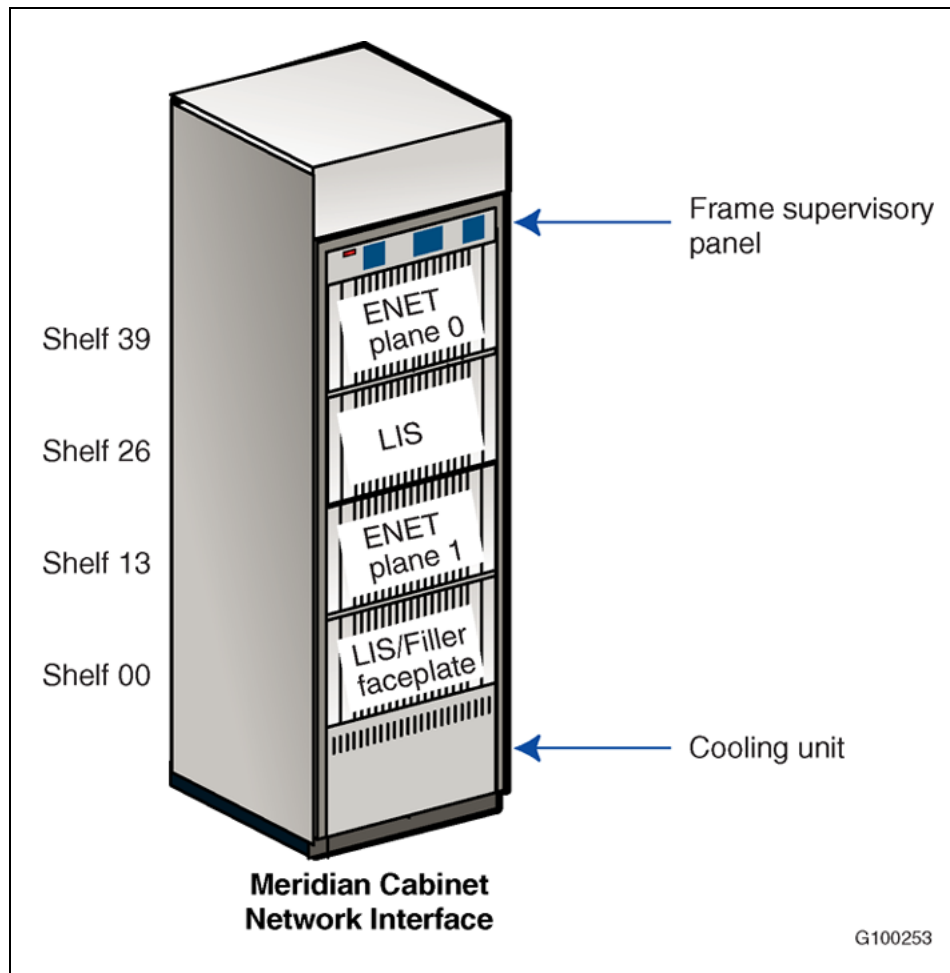Meridian Cabinet Network Interface components**Hardware requirements**

The MCNI software feature requires the MCNI hardware, NTYA05AA. However, if a site has the ENET hardware installed, the customer can upgrade the ENET to an MCNI by using the upgrade kit, NTYA05UK.

Limitations and restrictions

The datafill for the MCNI software feature is exclusive to the MCNI hardware and must not be used for other cabinet types.

Interactions

MCNI has no functionality interactions beyond those of ENET and FLIS.

Datafill

MCNI does not affect office parameters.

MCNI affects data schema tables SUSHELF and ENINV. No new fields are introduced. The range commands are changed for the tables to allow for extra options. For more information, refer to the *Meridian SL-100/Communication Server 2100 Commercial Systems Data Schema Reference Manual*.

Service Orders

MCNI does not affect (SERVORD).

Operational Measurements

MCNI does not affect Operational Measurements (OM).

Logs

MCNI does not affect logs.

User interface

MCNI does not change the user interface.

Billing

MCNI does not affect billing records.

A59013044 - Meridian Digital Telephone (M3900 Series) Desktop Enhancements

Description

This feature adds the following new capabilities or enhancements to the M3900 series sets:

- Icon-Based Display Indication
- Auto Display (AUTODISP) Enhancement

Icon Based Display Indication

Icon-Based Display Indication displays various functional icons on the Key-Based Access Expansion Module (KBA), Display-Based Access Expansion Module (DBA), and Meridian Digital Telephone M3904 sets. The icons for the KBA and DBA are fixed. The icons for the M3904 set are based on a 9 x 17 pixel bit-mapped cell. This feature does not apply to the M3901, M3902, M3903, and M3905 sets.


The functions displayed are I-Ringing, I-Active, U-Active, I-Hold, and U-Hold. The icons appear on the LCD displays located next to the DN or feature keys for the M3904 sets, DBAs, and KBAs. The scenarios for these icons are as follows:

- I-Ringing: The I-Ringing icon displays for incoming calls on supported terminals.

- I-Active: The I-Active icon displays when a user goes off-hook for supported terminals.
- U-Active: The U-Active icon displays on supported terminals within a MADN SCA group. This icon appears on all of the other MADN-supported terminals that have not answered the call to the MADN DN after the call has been established.
- I-Hold: The I-Hold icon displays for holding calls on supported terminals that control the call.
- U-Hold: The U-Hold icon displays on supported terminals within a MADN SCA group. This icon appears on all the other MADN-supported terminals that do not have control of the call, when a set that has answered the call places it on hold.

"Icons example" (page 767) shows examples of the icons used with the previous scenarios.

Icons example

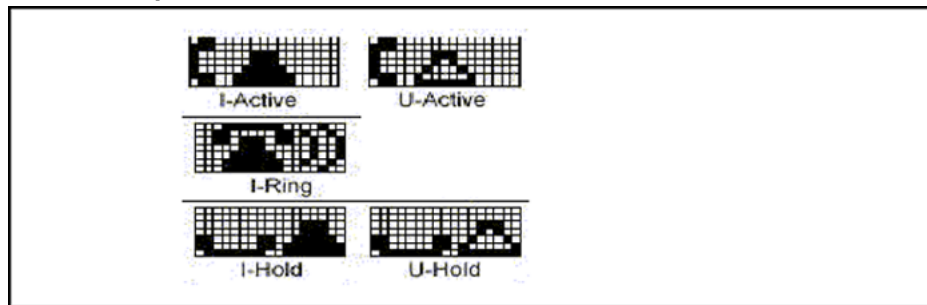

Auto Display Enhancement

The Auto Display Enhancement feature allows the existing Auto Display (AUTODISP) option to be extended to cover all keys on a multiline terminal that can be datafilled as a DN. This capability includes keys on add-on KBA, and DBA modules; previous generation MSL IVD terminals with displays; and Meridian Business Sets (in addition to M3900 Series Meridian Digital Telephones). Auto Display Enhancement allows datafill for the Autodisp option to go up to key 76, instead of the previous limitation of up to key 9.

"MSL IVD sets affected by the Auto Display Enhancement" (page 768) shows the terminals which are affected by the Auto Display Enhancement feature.

MSL IVD sets affected by the Auto Display Enhancement

LCC	Current Auto Display keys	Enhanced Auto Display keys	Enhanced Auto Display Add-on keys
M2317	1-12	NA	NA
M3000	1-12	NA	NA
M2018	1-18	NA	NA
M2112	1-12	NA	NA
M2016	1-9	1-16	17-38 or 17-60
M2216	1-9	1-16	17-38 or 17-60
M2616	1-9	1-16	17-38 or 17-60
M2616CT	1-9	1-16	NA
M3904	1-9	1-12	33-54, 33-76, or 33-56
M3905	1-8	1-8	33-54, 33-76, or 33-56
M5316	1-9	1-14	15-36, 15-58
M5216	1-9	1-13	15-36, 15-58
M5009	1-9	NA	12-29, 30-47, 48-65
M5209	1-9	NA	12-29, 30-47, 48-65
M5112	1-9	1-11	12-29, 30-47, 48-65
M5212	1-9	1-11	12-29, 30-47, 48-65
M5312	1-9	1-11	12-29, 30-47, 48-65

The following are valid combinations for the various terminals and the Auto Display Enhancement feature:

- Terminals M2016, M2216, and M2616 can have one or two M0022 add-on modules. Each add-on module has 22 keys.
- Terminals M3904 and M3905 can have one or two KBAs or one DBA. A KBA has 22 keys, and a DBA has 24 keys.
- Terminal M5216 and M5316 can have one or two M522 modules. An M522 has 22 keys.
- Terminals M5009, M5209, M5112, M5212, and M5312 may have one, two, or three M518 modules. They can also have an M536 module. These terminals can also have one M518 module and one M536 module. An M518 module has 18 keys and an M536 module has 36 keys.
- Terminals with nine or less keys are not affected by this enhancement.

Hardware requirements

The Meridian Digital Telephone (M3900 Series) Desktop Enhancements feature has no hardware requirements. This feature uses Meridian Digital Telephone (M3900 Series) sets introduced in software release MSL11.

Limitations and restrictions

The limitations and restrictions that follow apply to the Meridian Digital Telephone (M3900 Series) Desktop Enhancements feature:

- **Icon-Based Display Indication:** This feature applies only to the Meridian Digital Telephone M3904 set, DBA, and KBA. The U icons (U-Hold, U-Active) are supported only for MADN SCA arrangements.
- **Auto Display Enhancement:** Except for the nine-key maximum, this feature supports all restrictions or limitations that exist for AUTODISP. Up to 24 DN keys on a set can have AUTODISP assigned.

Interactions

Meridian Digital Telephone (M3900 Series) Desktop Enhancements does not interact with other functionalities.

Datafill

Meridian Digital Telephone (M3900 Series) Desktop Enhancements does not affect data schema tables or office parameters.

Service Orders

Auto Display Enhancement affects SERVORD. The impact of this feature on SERVORD is that it allows the user to enter a number higher than nine as a KEYLIST entry for the AUTODISP option. For more detailed information about how this feature affects SERVORD, refer to the *Meridian SL-100 Service Order Reference Manual*.

Operational Measurements

Meridian Digital Telephone (M3900 Series) Desktop Enhancements does not affect Operational Measurements (OM).

Logs

Meridian Digital Telephone (M3900 Series) Desktop Enhancements does not affect logs.

User interface

Meridian Digital Telephone (M3900 Series) Desktop Enhancements does not change the user interface.

Billing

Meridian Digital Telephone (M3900 Series) Desktop Enhancements does not affect billing.

A59019794 - SMDI ID Override

Description

The SMDI IDOVR feature creates a line option IDOVR. When IDOVR is assigned to a line, the line can pass an intermediate Directory Number (DN) in a call forward chain to the Voice Messaging System (VMS) over SMDI links.

The MSL14 software release adds the feature Simplified Messaging Desk Interface SMDI ID Override (IDOVR). This feature enables the passing of intermediate Directory Numbers to the Voice Messaging Service over SMDI links, allowing the customer to determine which DN's greetings will be presented to the caller in a call forward chain.

Without IDOVR assigned to a line, it is not possible to pass an intermediate DN in a call forward chain. In other words, without IDOVR, either the call forward originating DN or the last forwarding DN is passed to the VMS over SMDI links.

Functionality

The line option IDOVR requires a sub-field Application (APP) entry.

Note: The sub-field is used in order to pass the appropriate DN to the SMDI link. Simply setting the APP sub-field to "Y" does not create a voice mailbox on the VMS.


The following rule is provided for greater understanding about how SMDI ID Override works. This rule and the following commentary assume that the switch maintenance personnel datafilled the IDOVR line option with certain knowledge of whether or not a voice mailbox exists for each DN where IDOVR is assigned.

Rule

In any call forward chain, existing call forwarding rules apply, unless the last DN assigned IDOVR is set to APP = Y, whereupon its DN is passed to the SMDI links, or the last assigned IDOVR is set to APP = N, in which case the last DN in the call forward chain is passed.

Remarks

The "SMDI ID override scenario" (page 771) and "IDOVR assignment and APP status" (page 771) explain how SMDI ID Override works. Refer to the table to determine the status of any call chain, with reference to the IDOVR assignment and the APP= sub-field setting. Consider the case illustrated in "SMDI ID override scenario" (page 771) where a call originally comes or is transferred to Station A, who forwards it to B. It is then forwarded to C, then to D, and finally to the Voice Message System. B and C represent any number of intermediate DNs in the chain from one to three (which would give the maximum number of allowable DNs for a call forward chain).

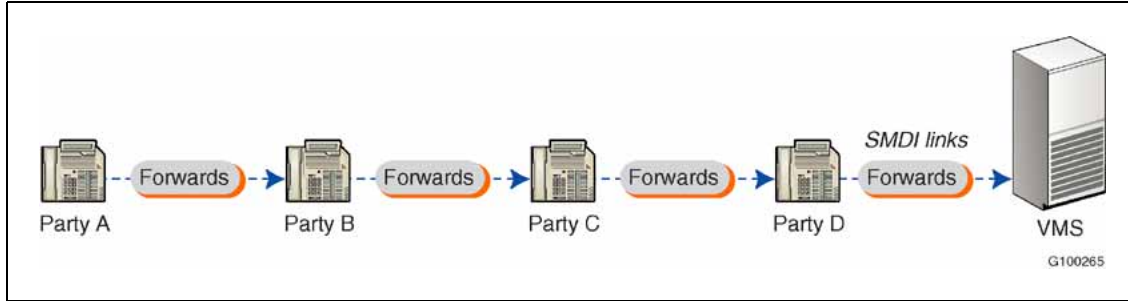SMDI ID override scenario

In the following table, an entry in the B, C, or D columns indicates IDOVR is assigned. The entry indicates the APP = status.

IDOVR assignment and APP status

A	B	C	D	DN passed, LASTFWDN enabled	DN passed, LASTFWDN not enabled
				D	A
	APP=N			D	D
	APP=Y			B	B
	APP=Y/N	APP=Y		C	C
	APP=Y/N	APP=N		D	D
			APP=Y/N	D	D
APP=Y				A	A
APP=N				D	D

Notice that the IDOVR status of D, the last DN in the chain, makes the result equivalent to LASTFWDN enabled without IDOVR assigned to any DNs. Setting the last intermediate DN to IDOVR/APP = N is also the logical equivalent of enabling LASTFWDN with no IDOVR assignments insofar as determining which DN is passed to the SMDI links.

Assignability

The line option IDOVR can be assigned to all the Line Class Codes (LCCs) in the Meridian SL-100 market through Service Orders (SERVORD).

Hardware requirements

SMDI ID Override has no hardware requirements.

Limitations and restrictions

The limitations and restrictions that follow apply to SMDI ID Override:

- Customers who may receive sensitive phone messages should fully understand the limitations of both LASTFWDN and IDOVR. These customers can include those who received privileged communications such as attorney/client or doctor/patient messages or any other messages of a confidential nature.
- Regardless of any call forward variety assigned on a line, IDOVR can be assigned to a DN.
- The line option will override only the LASTFWDN option or default behavior of First Forward DN in the SMDI link.
- The IDOVR line option is assigned on a per-line basis by the Meridian SL-100 switch maintenance personnel with knowledge of whether there is a voice mailbox assigned for each DN.
- IDOVR is not supported on Network Message Service (NMS) calls.
- IDOVR is lost if a call is routed over a trunk.
- When a call is transferred, the IDOVR status of any set in the chain prior to the transfer is ignored. With respect to IDOVR, a transferred call is treated as an originating call by the new call forward chain and the other IDOVR rules then apply.
- When this feature is assigned to a line, the system software is not compliant with TR-TSY-000283 for that line.

Interactions

This feature does have direct interaction with SMDI. If this line option is assigned to a line, it overrides the SLLNKDEV table option LASTFWDN. Therefore, the presence of IDOVR on a line changes the existing functionality of SMDI for First Forward DN or LASTFWDN.

With the SMDI application, the Message Waiting feature on a set gives an indication that a message is being stored in the Voice Message System against it. Since the presence of the IDOVR feature changes the existing functionality of SMDI with First Forward DN or LASTFWDN features, the DN for which the message waiting lamp is to be activated by the SMDI application would also change accordingly. Therefore, the IDOVR feature has indirect interaction with Message Waiting features. Due to MWT, it does have an indirect interaction with Light Two Lamp as well.

When SCMP and Call Forward is active on the line, Call Forward takes precedence and hence IDOVR applies. However, if only SCMP is active IDOVR will not apply.

In a scenario wherein KSH appears on a forwarded call, IDOVR/APP = Y will override the KSH option for forwarding the DN on SMDI links. For example, A forwards to B (with IDOVR/APP = Y), B to C, C KSH to D and D to VMS, then B's DN would be forwarded to SMDI links. More details would be provided in DSUM.

This feature does not have interaction with LOD feature. Therefore, calls terminating on SMDI links with LOD are processed in the existing way.

Datafill

SMDI ID Override affects data schema tables KSETFEAT and IBNFEAT. See the *Meridian SL-100/Communication Server 2100 Commercial Systems Data Schema Reference Manual* for more information.

Office Parameters

SMDI ID Override does not affect office parameters.

Service Orders

SMDI ID Override affects SERVORD commands ADO, DEO, CHF, and NEW. See the *Meridian SL-100 Service Order Reference Manual* for more information.

Operational Measurements

SMDI ID Override does not affect Operational Measurements (OM).

Logs

SMDI ID Override does not affect logs.

User interface

SMDI ID Override does not change the user interface.

Billing

SMDI ID Override does not affect billing.

A59023539 - M3900 Release 3 Enhancements

Description

M3900 Release 3 introduces and enhances several features for M3900 sets.

One-Button Feature Access

With One-Button Feature Access, users have more direct access to the following:

- Call Log (Callers List)
- Call Log (Redial List)
- Personal Directory

- Corporate Directory

Callers List

M3900 Release 3 introduces a Callers List softkey for M3903, M3904, and M3905 sets. Press either the softkey or the programmable feature key to go directly to the new callers in the list.

Note: If there are no new callers in your Callers List, when you press the Callers List softkey or programmable feature key, you go directly to the old Callers List.

The system administrator can define the Callers List to the context sensitive of 28. The system administrator can configure a Callers List programmable feature key, but the Callers List softkey must be manually removed. If necessary, the system administrator can add the softkey back on the predefined softkey number. This feature can be assigned to programmable keys and context sensitive keys at the same time.

Password protection applies to One-Button Feature Access to the Callers List. If the password is enabled, when you press the Callers List key, a prompt appears requesting password entry. Once you enter the correct password, you can access the "new" Callers List.

Redial List

M3900 Release 3 introduces a Redial softkey for M3903, M3904, and M3905 sets. Press either the softkey or the programmable feature key to go directly to the Redial List.

The default softkey assignment for the Redial List is 29. However, if the system administrator configures a Redial List programmable feature key, the Redial List softkey is automatically removed. If necessary, the system administrator can add the softkey back on the predefined softkey number.

Password protection applies to One-Button Feature Access to the Redial List. If the password is enabled, when you press the Redial List softkey, a prompt appears requesting password entry. Once you enter the correct password, you can access the Redial List.

Directory/Log key

With M3900 Release 3, the Personal Directory can be accessed with one key stroke. Currently, users press two keys to access the directory, the Directory/Log key and the Select key. With M3900 Release 3, users can start a directory search with the dial pad without pressing the Select key.

The directory application assumes that the Select key has been pressed and processes the search. The Select softkey is still be available for use.

Note: Since there is no Directory/Log hand key on an M3905, the system administrator programs can datafill a programmable line feature key.

Full Duplex Handsfree

A Full Duplex Handsfree accessory for the M3904 Release 3 telephone set are available with the M3900 Release 3 telephones. It is cartridge type accessory that is hot swappable. It can be added or removed during an established call.

Note: The Full Duplex Handsfree accessory is only complete with a M3904 Release 3 (NTMN34GA or later) telephone set.

Password Clear

The function for clearing the Directory/Call Log password is the same by use of the MSL11 feature RESETPWD, but if the eight-digit value "00000000" (8 zeroes) is entered as the password reset value, the password is cleared. This allows a user to press the Directory/Call logs without entering a password. The user can then enable Release 3 Password Protection if they are desired.

Full Icon support

Meridian SL-100 system supports the following icons on the M3902, M3903, M3904, M3905, KBA, and DBA telephone sets:

- I-Ringing
- I-Active
- U-Active
- I-Hold
- U-Hold

These icons were previously only supported on the M3904, KBA, and DBA.

Corporate Directory Search Enhancement

The Corporate Directory Search Enhancement introduces the Resume softkey to the Corporate Directory screens of the M3903, M3904, and M3905 Release 3 sets. The Resume key allows returning to the Corporate Directory Find screen to enter additional characters and continuing to search without starting over from the beginning.

The Resume key appears on the following Corporate Directory screens:

- List view
- Card view

By pressing the Resume softkey, the Corporate Directory Find screen returns with the previously entered information. This places the cursor at the last entered letter, and users can enter additional letters and press the Done softkey to go to a new point in the directory.

31-Digit Dialing

With the 31-Digit Dialing feature, M3900 Release 3 display screens accommodate dialing strings of up to 31 digits. This allows the screens to fully display long dialing strings, such as Calling Card numbers and access codes.

The M3902 set has a one-line display. Use the Left/Right Navigation keys to scroll through the digits on the line.

M3903, M3904, and M3905 display screens accommodate 24 characters on each line. For dialing strings greater than 24 characters, the number automatically wraps to the second line. ["Features that support 31-Digit Dialing" \(page 776\)](#) lists the features that support 31-Digit Dialing on M3902, M3903, M3904, and M3905 sets.

Features that support 31-Digit Dialing

	M3902	M3903	M3904	M3905
Personal Directory			X	X
Call Log		X	X	X
Redial		X	X	X
Predial	X	X	X	X

Note: Currently the PC Utility only supports 24 characters.

Call Forward Enhancement for M3900 sets

The Call Forward Enhancement feature modifies the method for activating Call Forward on M3903, M3904, and M3905 Release 3 sets.

To forward your calls or change the previously stored Call Forward number, perform the following steps:

Forwarding calls procedure

Step	Action
1	Press the Forward key. The previously stored Call Forward number appears, if one exists.
2	If you want to keep the previously stored Call Forward number, press Done. If you want to enter a new Call Forward number, go to Step 3.

- 3 Enter the new Call Forward number.
When you start to enter the new number, the initial Call Forward number automatically deletes.
- 4 You can use the Delete key to delete each digit in the Call Forward number shown. To edit the number, use the Left or Right Navigation keys to move the cursor.
- 5 You can use the Delete key to delete each digit in the Call Forward number shown. To edit the number, use the Left or Right Navigation keys to move the cursor.
- 6 A Cancel key also appears. Press the Cancel key to exit without changing the previously stored Call Forward number.
- 7 Press Done.

—End—


Pause in dialing string

With M3900 Release 3, M3902, M3903, M3904, and M3905 sets support a pause in dialing. This pause is often required when a user dials remote devices, such as answering machines, Interactive Voice Response (IVR) systems, auto attendants, and tandem switches.

The Pause feature enters a 1.5-second delay in a dialing sequence. The user can add the delay while programming or editing an entry in the Personal Directory, Callers List, Redial List, and Predial List.

This feature introduces a Pause softkey. To enter a Pause in the dialing string while editing a number, press the Pause softkey. A Pause place marker appears in the dialing string. The place marker appears as two parallel bars, and takes up one space in the dialing string.

Note: You can enter multiple pauses for longer delays. Currently, the PC Utility does not support the pause character.

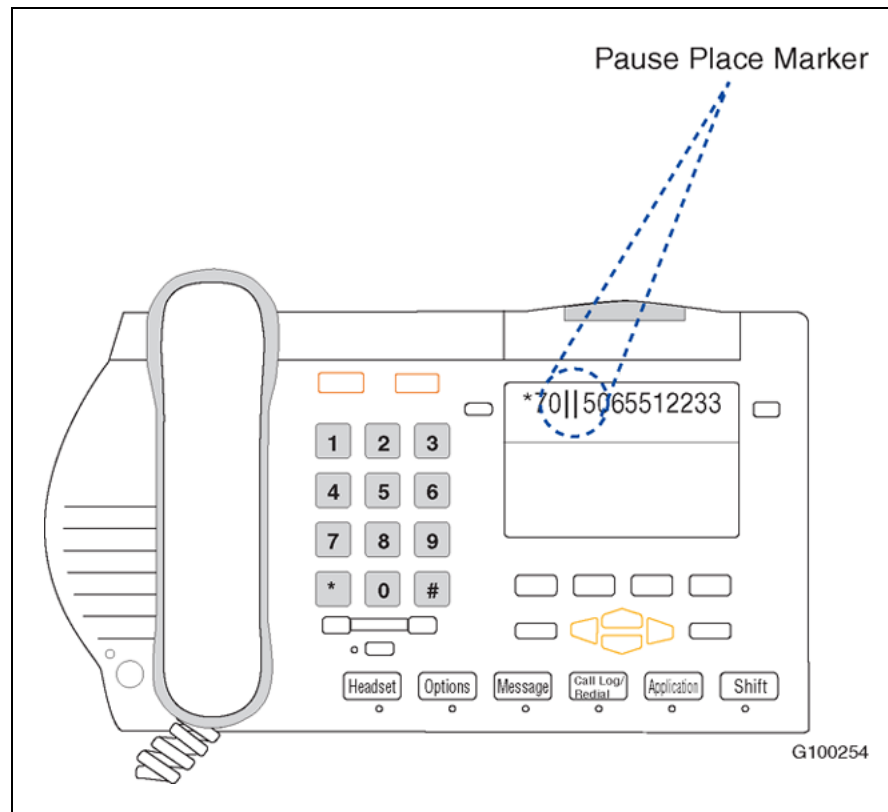Example of the Pause place marker in a dialing string**Special character support**

With M3900 Release 3, M3902, M3903, M3904, and M3905 sets support special characters found on a PC keyboard. Special character support allows a user to input special characters when using the edit mode in the Personal Directory, Call Log and Redial List. For example, a user can enter a name with an accent in their Personal Directory (for example, Josée).

The special character set includes all characters from the extended portion of the ASCII character set. The extended ASCII character set that supports the set's current language is the character set that appears in the edit mode. The special character set contains up to 130 characters. It is displayed in six lines with 24 characters on each line. Use the navigation keys to scroll through the list or to move through an individual 24-character line.

The special character set does not include upper and lower case letters or numerals. Use the keypad of the set to define these characters.

Default key assignments

Follow the assignments listed in "[Context-Sensitive softkey default assignments](#)" (page 779) to configure Context-Sensitive softkeys on M3903, M3904, and M3905 sets.

Context-Sensitive softkey default assignments

Key number	Feature
18	Transfer.
19	Conference.
20	Call Forward.
21	Ring Again.
22	Call Park.
23	Call Pickup.
24	Speed Call or System Speed Call.
25	Privacy Release.
26	Reserved for future use.
27	Reserved for future use.
28	Callers List.
29	Redial List.
30-32	Reserved for future use.

For M3904 and M3905 sets, One-Button Feature Access keys for the Callers and Redial lists cannot be programmed on a Display Based Accessory (DBA) or a Key-Based Accessory (KBA).

Feature implementation

Refer to the *Meridian SL-100 Service Order Reference Guide* for feature implementation.

Hardware requirements

The Full Duplex Handsfree Accessory requires an M3904 telephone set (NTMN34GA or later), an Accessory Connection module, and a 110V wall transformer.

Limitations and restrictions

Release 3 features and functionality require the latest firmware to be downloaded to Release 1 and 2 M3902, M3903, M3904, and M3905 telephone sets.

The Full Duplex Handsfree Accessory requires a new M3904 Release 3 telephone set. It is not supported with a Release 2 M3904.

Interactions

M3900 Release 3 Enhancements does not interact with other functionalities.

Service Orders

The following new options are being introduced to support Release 3:

- RDLL - Redial List
- CLLG - Call Log

Operational Measurements

M3900 Release 3 Enhancements does not affect Operational Measurements (OMs).

Logs

M3900 Release 3 Enhancements does not affect logs.

Command Interface

M3900 Release 3 Enhancements does not change the user interface.

Billing


M3900 Release 3 Enhancements does not affect billing.

A59024197 - Call Forward Enhancements Part I: CFXQUERY CI Tool Description

CFXQUERY is a CI tool which takes a Directory Number (DN) in a 10-digit format as input and provides a list of all the Line Equipment Numbers (LENs) that are forwarded to the input DN. The output format provides the following information: the LEN, DN, DN Key, call forward variant and the state of the call forward - active or inactive.

The tool lists a LEN if the forwarded DN is valid and translatable from the LEN as the originating party.

In the following scenario A, B and C have forwarded their sets to set X.

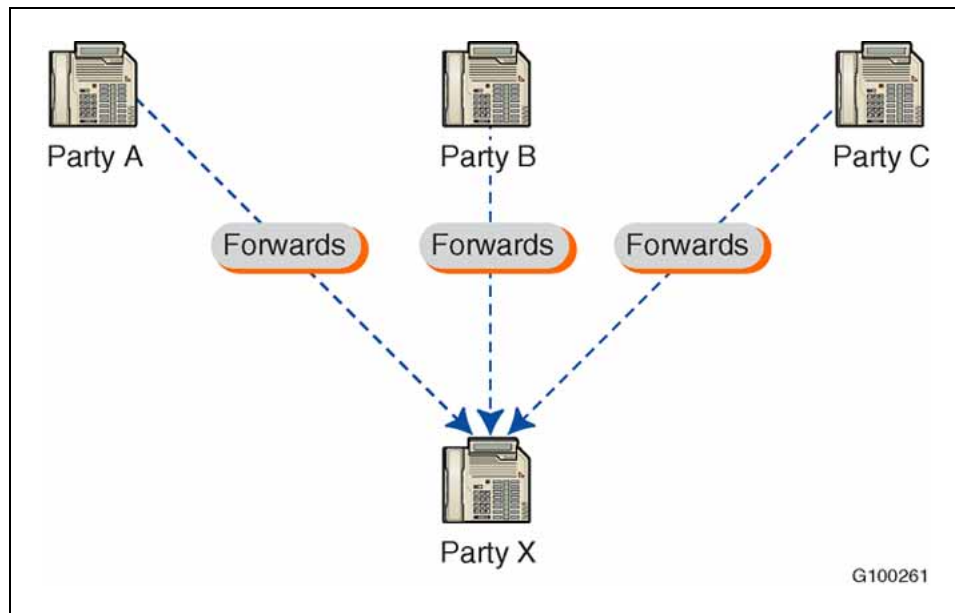Call Forward Functional Behavior Diagram

Set A has its calls forward to DN 3691350 using Call Forward Universal (). Set B and Set C are forwarded to the same DN 3691350 using Call Forward Do Not Answer - Unrestricted (CFD) and Call Forward Fixed (CFF) respectively.

Prior to development of this feature, the only way to understand which LENS (sets) were forwarded to 3691350 was to check in Table CFX.

Table CFX

```

TABLE: CFX
      CFXLEN      IFVAR
-----
HOST 00 0 00 04 0 N I $ A 1350 I $ I $
HOST 00 1 07 03 0 Y N A 1350 N
HOST 00 1 08 04 0 Y N A 1350 N

```

The CI Tool, CFXQUERY, can be used to list the LENS forwarded to DN 3691350 in real time without querying table CFX. In addition, the output format provides the DN Key, call forward variant and the state of the call forward - active or inactive. "CI Tool: CFXQUERY" (page 782) shows an example of the output format generated as a result of using the CFXQUERY tool.

CI Tool: CFXQUERY

```
>CFX>CFXQUERY 6133691350
```

```
=====
THE FOLLOWING LEN(S) ARE FORWARDED TO THE INPUT DN
=====
HOST 00 0 00 04 DN 6133691390 KEY 1 CFX VARIANT: CFD Status: ACTIVE
HOST 00 1 07 03 DN 6133694320 CFX VARIANT: Status: ACTIVE
HOST 00 1 08 04 DN 6133691370 KEY 1 CFX VARIANT: CFF Status: ACTIVE
```

Hardware requirements

No new hardware is needed for this CI tool.

Limitations and restrictions

The following restrictions apply:

- The CFXQUERY CI tool does not support Interswitch queries.
- The CFXQUERY CI tool does not support queries on Virtual Directory Numbers (VDNs) such as: Virtual Office Workers (VOW) DNs, Automatic Call Distribution (ACD) DNs, ringing Multiple Appearance Directory Numbers (MADNs), etc.

Interactions

Call Forward Enhancements Part I: CFXQUERY CI Tool does not interact with other functionalities.

Logs

Call Forward Enhancements Part I: CFXQUERY CI Tool does not affect logs.

Service Orders

Call Forward Enhancements Part I: CFXQUERY CI Tool does not affect SERVORD.

Operational Measurements

Call Forward Enhancements Part I: CFXQUERY CI Tool does not affect Operational Measurements (OMs).

Command interface

"New CFXQUERY command" (page 783) shows new/modified commands.

New CFXQUERY command

Command name	New, changed or deleted	New name (if renamed)	Directory/MAP level name	Menu/non-menu/hidden
CFXQUERY	New	NA	CFXQUERY	Non-Menu

Billing

Call Forward Enhancements Part I: CFXQUERY CI Tool does not affect billing.

A59024197A - Call Forward Enhancements Part II: CHANGECFX CI Command

Description

The CHANGECFX feature is a new CI tool which provides an external means to activate, deactivate, and change the call forward variant destination Directory Number (DN) for the following call forwarding variants: Call Forward Universal (CFU), Call Forward Intragroup (CFI), Call Forward Fixed (CFF), Call Forward Universal per Key (CFK), Call Forward Busy (CFB), and Call Forward Don't Answer (CFD).

All call forwarding feature information for a set is stored in Table CFX. To change the state of the destination DN or the destination DN itself, the CHANGECFX CI tool can be used to change and update the information in the tuple for the set in table CFX.

The call forward option must be present on the set before the CHANGECFX CI command can be used to activate, deactivate, or change the call forward destination DN.

The details of the call forward, such as the LEN, DN, DN Key status, can be obtained in real-time by using the CI tool CFXQUERY, which is also a part of the new call forward feature enhancements.

An example of how the entire process works using the CFXQUERY and CHANGECFX commands for a set provisioned with the Call Forward Universal () feature is displayed in the following example.

CFXQUERY and CHANGECCFX used together

```

>CFXQUERY 6133691350

=====
THE FOLLOWING LEN(S) ARE FORWARDED TO THE INPUT DN
=====
HOST 00 0 15 04 DN 9192461150 KEY 1 CFX VARIANT: Status: ACTIVE
HOST 00 1 07 03 DN 9192461881 CFX VARIANT: Status: ACTIVE
HOST 00 1 08 04 DN 6133691370 KEY 1 CFX VARIANT: CFD Status: ACTIVE

```

CHANGECCGX CI Command output

```

>CHANGECCGX:
LEN:
>0 0 15 4
DN_KEY:
>1
CCGX_OPTION:
>
IFDN:
>2461170
CSTATE:
>A
The Destination DN and its State are updated in Table
CCGX

```

Hardware requirements

No new hardware is needed for this CI tool.

Limitations and restrictions

The call forward option must be present on the set before the CHANGECCGX CI tool can be used to activate, deactivate or change the call forward destination DN.

Interactions

Call Forward Enhancements Part II: CHANGECCGX CI Command does not interact with other functionalities.

Service Orders

Call Forward Enhancements Part II: CHANGECCGX CI Command does not affect SERVORD.

Operational Measurements

Call Forward Enhancements Part II: CHANGECCGX CI Command does not affect Operational Measurements (OMs).

Logs

Call Forward Enhancements Part II: CHANGECCGX CI Command does not affect logs.

Command interface

"New commands" (page 785) shows the new/modified commands.

New commands

Command name	New, changed or deleted	New name (if renamed)	Directory/MAP level name	Menu/non-menu/hidden
CFXQUERY	New	NA	CFXQUERY	Non-Menu
CHANGECCFX	New	NA	CHANGECCFX	Non-menu

Billing

Call Forward Enhancements Part II: CHANGECCFX CI Command does not affect billing.

A59019809 - LDAP Syncing for Meridian SL-100

Description

Lightweight Directory Access Protocol (LDAP) is a specification for a client-server protocol to retrieve and manage directory information. The LDAP Syncing for Meridian SL-100 feature is introduced in MSL15 software release. This feature provides LDAP syncing between the Meridian SL-100 and an LDAP version 3 compliant corporate database.

This feature allows customers to update their authoritative database. This takes advantage of the ability of the higher end digital M3900 series telephones to query a corporate directory server. The LDAP Syncing feature allows the Meridian SL-100 administrator to

- update corporate LDAP databases with telephone number changes
- update the Meridian SL-100 system with name and/or unique identifier changes made in the corporate LDAP database
- align Meridian SL-100 with other Nortel Network products that synchronize and interwork with LDAP directories
- reduce or eliminate redundant database updates

Functionality

In LDAP Syncing for Meridian SL-100 feature, the Meridian SL-100 will function as an LDAP Client and sync to an LDAPv3 Server. The functionality of the Syncing Client is divided into the following components:

Startup

The startup process will associate all the DNs on the Meridian SL-100 with a Unique Identifier. This Unique Identifier are used in Syncing the changes.

The initial association of a DN on the Meridian SL-100 with a UNIQUE Identifier on the LDAP Server is done by the subcommand POPULATE of the LDAPCI tool. The TABLE DNATTRS are updated with a value of "UNKNOWN" for PUBLIC Network Name. It is then updated with the actual names present in the LDAP server by the syncing Client.

The startup process deletes all those DNs on the LDAP server that are blank DNs (BLDNs) on the Meridian SL-100.

Continuous Sync

A TCP connection is opened between the Meridian SL-100 and the LDAP Server using the new CI tool, LDAPCI. The IP Address and Port of the LDAP Server are datafilled in the new table LDAPTAB.

The Syncing algorithm syncs the Meridian SL-100 with the LDAP Server. DN changes in the Meridian SL-100 are communicated to the LDAP Server and the NAME changes in the LDAP Server are communicated to the Meridian SL-100.

Each time a TCP/IP connection is opened with the LDAP server, a maximum of 100 queries are made to the LDAP server.

Access to the LDAPv3 Server is authenticated during each query/update to the LDAP Server from the Meridian SL-100.

The syncing repeats itself based on the datafill of the field FREQSYNC (Frequency of Sync) in table LDAPTAB. The syncing client, however, must be started manually for the first time through the LDAPCI command START.

In case the LDAP Database goes down, the Shadow Database to the LDAP Server is updated/queried. The IP Address and the Port No of the Shadow Database are datafilled in table LDAPTAB.

The password for opening the TCP/IP connection is only changed or added through the LDAPCI tool. The password is hidden from the end-user. When the password is corrupted in the switch, a technician can reset the password using the DEBUG tool and resetting the protected store containing the password.

The ESNMAP field in table LDAPTAB is kept for future use and has no role currently.

Hardware requirements

The Meridian SL-100 should be equipped with an EIU and should be in the same LAN as the LDAP corporate database.

Limitations and restrictions

The limitations and restrictions that follow apply to LDAP Syncing for Meridian SL-100:

- It is assumed that the name associated with a Directory Number is stored as one of the following:
 - DISPLAY NAME
 - COMMON NAME
 - FIRST and LAST NAME
 - GIVEN NAME and SURNAME
- The network on which the SL-100 and the LDAP server reside is assumed to be a secure network that does not require the security of KERBEROS authentication.
- Only those Directory Numbers (DNs) that have been associated with a Unique ID are kept in sync as the syncing algorithm assumes the presence of a Unique ID for a DN.
- Only the components of the LDAP protocol required for syncing are implemented. After the feature has been completed, it cannot be assumed that the Meridian SL-100 is LDAPv3 compliant.
- Only one LDAP server is synced at a time. If the Meridian SL-100 is being synced with 2 LDAP servers simultaneously, the resulting output will be inconsistent and unpredictable.
- Referrals are not supported as a part of this feature.
- The USERNAME, PASSWORD (through LDAPCI), BASEDN, and DIGDEL fields in table LDAPTAB should be in single quotes, otherwise the Meridian SL-100 switch converts everything to UPPER CASE.
- Blank characters are not accepted in the USERNAME and BASEDN fields of table LDAPTAB. A PIPE (|) should be entered where blank characters are needed within the USERNAME or BASEDN fields. The Syncing Client internally converts them to blanks.
- During each syncing session, a maximum of 1000 Meridian SL-100 DN changes are updated in the LDAP Server. All the tuple deletions in DNATTRS will be queued. This queue can take up a maximum of 1000 changes. A tuple deletion in table DNATTRS after the 1000th tuple deletion will, therefore, not be queued. The change will, consequently, be lost and not reflected in LDAP server. This effectively means that only 1000 DN changes on the Meridian SL-100 can be updated in the LDAP Server for every syncing session. Parameter freqsync in table LDAPTAB overcomes this limitation.

Interactions

This feature interworks with all features conforming to LDAP Version 3.

Datafill

"[New or modified tables](#)" (page 788) shows the new command.

New or modified tables

Table name	New, changed or deleted	Table control (new/old/unchanged)
LDATAB	New	New

LDAP Syncing for Meridian SL-100 creates a new Data Schema table, Lightweight Directory Access Protocol Table (LDAPTAB). This table is stored in PROTECTED Store.

This feature allows customers to change name and/or unique identifiers on the Meridian SL-100 switch and DNS on the LDAP server.

LDAPTAB stores information that is used by the syncing client to establish a connection to the LDAP server and to perform required operations.

Refer to the *Meridian SL-100/Communication Server 2100 Commercial Systems Data Schema Reference Manual* for more information.

Office parameters

LDAP Syncing for Meridian SL-100 does not affect office parameters.

Service Orders

LDAP Syncing for Meridian SL-100 introduces a new line option, UNIQID. UNIQID associates a DN with a unique identifier. The unique identifier is used to sync the Meridian SL-100 switch with the LDAP version 3 server. This feature can be provisioned on the following telephone sets:

- Meridian Business Set (KSET)
- Integrated Voice and Data (IVD)
- Integrated Business Network (IBN)
- Integrated Services Digital Network (ISDN)
- Residential Enhanced Services (RES)

LDAP Syncing for Meridian SL-100 affects SERVORD commands ADO, DEO, CHF, and NEW.

Refer to the *Meridian SL-100 Service Order Reference Manual* for more information.

Alarms

LDAP Syncing for Meridian SL-100 does not affect alarms.

Operational Measurements

LDAP Syncing for Meridian SL-100 does not affect Operational Measurements (OMs).

Logs

LDAP Syncing for Meridian SL-100 generates a new log, LDAP.

The reason for generation of LDAP00x is as follows:

- 001: The Unique id is not found in the LDAP version 3 Server or is duplicated in the LDAP server.

This happens when a unique id datafilled on a DN on Meridian SL-100 switch is not found in the LDAP server or a unique id datafilled on a DN in Meridian SL-100 switch is found in more than one entry in the LDAP server.

- 002: the LDAP operation has failed.

This happens if any operation from the syncing Client to the LDAP version 3 server fails during syncing or during the startup process.

- 003: the TCP connection could not be opened.

This happens if the TCP connection between the Meridian SL-100 and the LDAP Server could not be opened due to authentication failure or the LDAP Server being down.

- 004: the syncing process has started.

This log is generated when the syncing process starts.

- 005: the syncing process has completed.

This log is generated when the syncing process has completed one sync cycle or the startup process has completed successfully.

New or modified Logs

Log name	Log number	New, changed or deleted
LDAP	001	New
LDAP	002	New
LDAP	003	New
LDAP	004	New
LDAP	005	New

Refer to the *Meridian SL-100 Logs Reference Manual* for more information.

Command interface

"LDAPCI command" (page 790) shows new or modified commands.

LDAPCI command

Command name	New, changed or deleted	New name (if renamed)	Directory/MAP level name	Menu/non-menu/hidden
LDAPCI	New			Non-menu

Directory: LDAPCI

This directory supports all CI commands for syncing the LDAP server with the Meridian SL-100. The commands under this directory are as follows:

- START
- STATUS
- STOP
- PASSWD
- POPULATE
- REPORT
- QUIT

Billing

LDAP Syncing for Meridian SL-100 does not affect billing.

A59025160 - RLT on PRI Enhancement

Description


The RLT functionality was developed in MSL07 for Meridian SL-100 switches to release redundant PRI trunks when a call starts from an Meridian SL-100 switch, goes to a Meridian 1 switch, and returns to the Meridian SL-100 that starts the call.

The enhancement in MSL17 provides the ability to release redundant PRI trunks when a call starts from a Meridian 1, goes to an Meridian SL-100, and returns to the Meridian 1 that starts the call.

The enhancement also provides the ability to release redundant PRI trunks when a call starts from an Meridian SL-100, goes to an Meridian SL-100, and returns to the Meridian SL-100 that starts the call.


"RLT available in MSL07" (page 791) shows the RLT functionality available in MSL07 release.

RLT available in MSL07

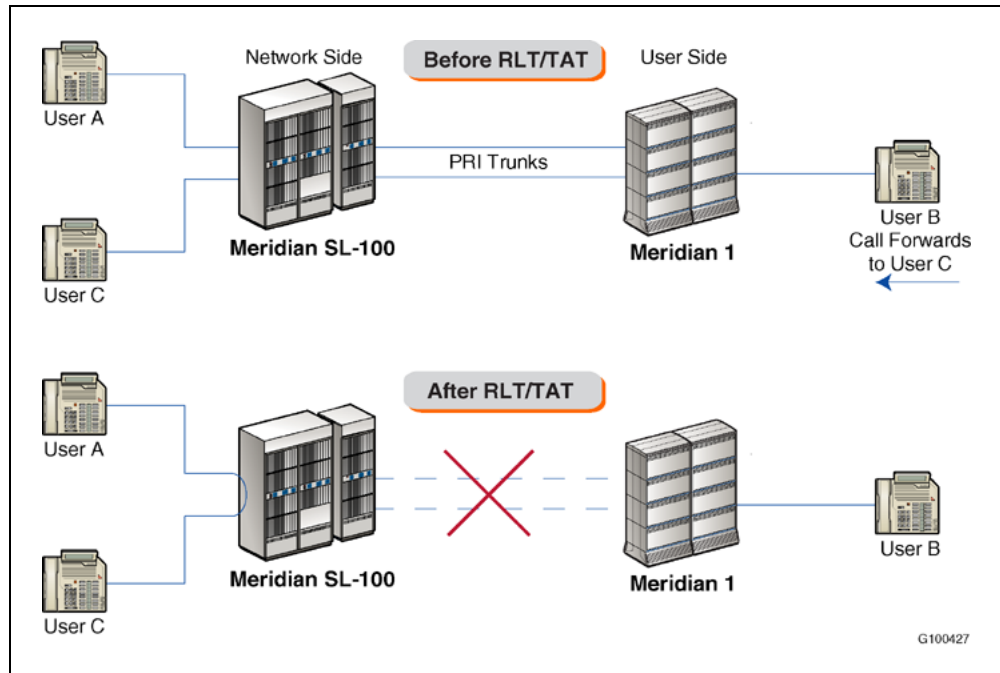


"RLT for two Meridian SL-100s with call dropping on Network Side" (page 791) shows the RLT functionality between two Meridian SL-100 switches.

RLT for two Meridian SL-100s with call dropping on Network Side

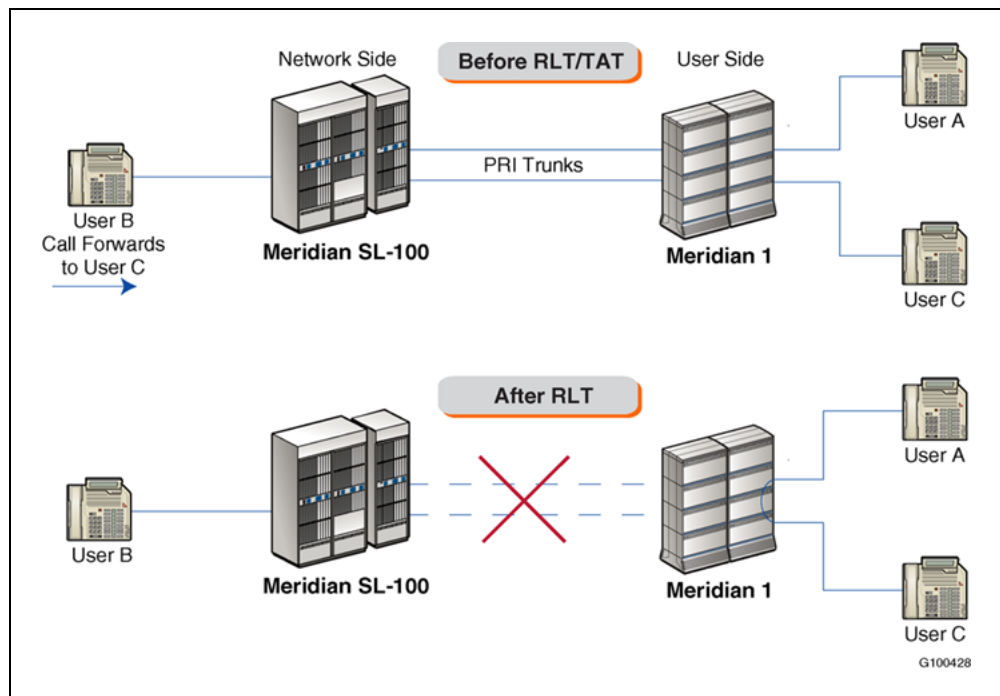

"RLT for Meridian 1 with call dropping to Meridian SL-100" (page 792) shows the RLT functionality between a Meridian 1 and an Meridian SL-100 switch.

RLT for Meridian 1 with call dropping to Meridian SL-100

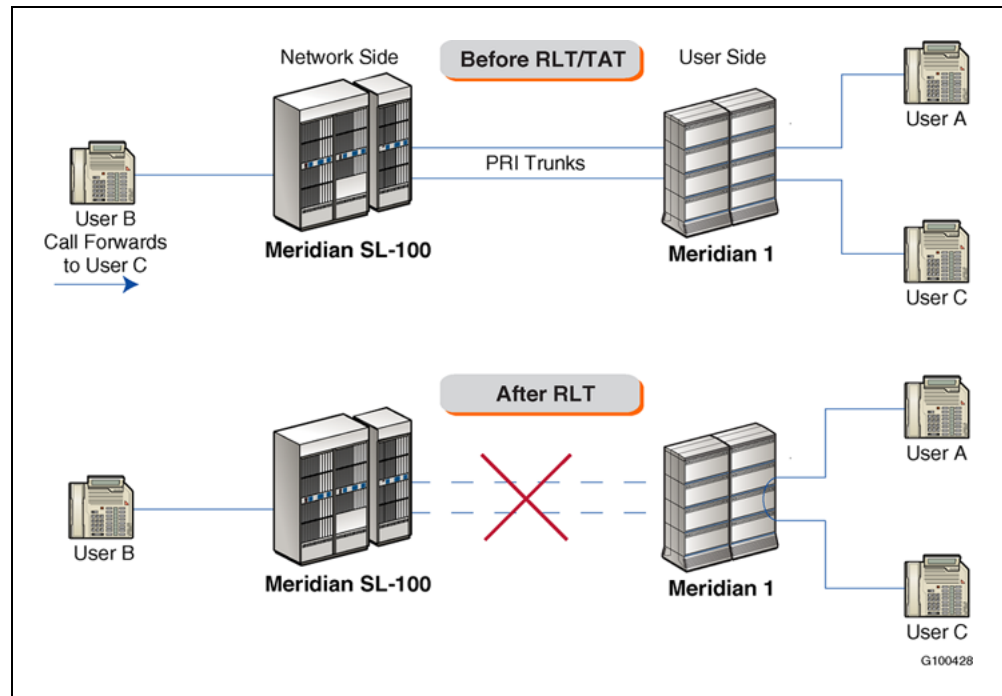

Hardware requirements

RLT on PRI Enhancement has no hardware requirements.

Limitations and restrictions

The Trunk Anti-Tromboning (TAT) package must be enabled on the Meridian 1 switch.

Interactions

The RLT functionality is compatible with both NTNA and NI-2 protocol variants.

Data schema

RLT on PRI Enhancement does not affect data schema tables.

Office parameters

RLT on PRI Enhancement does not affect office parameters.

Service Orders

RLT on PRI Enhancement does not affect SERVORD.

Operational Measurements

RLT on PRI Enhancement does not affect Operational Measurements (OMS).

Logs

RLT on PRI Enhancement does not affect logs.

Command interface

RLT on PRI Enhancement does not change the user interface.

Billing

RLT on PRI Enhancement does not affect billing.

A59028416 - Individual Multiple Appearance Directory (MADN) Hold**Description**

Individual MADN Hold was introduced in MSL17 software release. This feature provides a different wink to a MADN member of SCA and CACH MADN groups that has placed a call with an external party on hold.

The phone sets of all members of an SCA or CACH MADN group wink when any member of that group places a call with an external party on hold. The wink is identical for all the MADN members including the member that placed the call on hold (the MADN Hold controller). It is not possible, therefore, to distinguish the MADN Hold controller from other members of the MADN group.

The MWINK option provides a slower, distinctive wink for the MADN Hold controller to more easily distinguish the MADN Hold controller from other members of the MADN group.

Functionality

The MWINK option is assigned to a MADN group as a MADN group option (that is, any MADN member can assign the option to the MADN group). Similarly, any MADN member can remove the MWINK option from the MADN group.

The MWINK option can only be assigned to MADN lines of SCA and CACH group types. It should not be assigned to MADN lines of MCA and EXB group types. Once the MWINK option is assigned to the MADN group, the MADN group type cannot be changed to MCA and EXB group types, unless MWINK option is removed from the MADN group.

A MADN member on an EBS or IVD set can invoke MADN Hold by pressing the Hold key or by pressing some another DN key thus invoking auto Hold.

For a CACH MADN group, MWINK option when assigned to the group functions for all the Call Appearances the group.

The following scenarios occur with MADN Hold:

- MADN Hold (including EKTS Hold) applies only when a single member of the MADN group is active in a call with an external party.
- MADN Hold (including EKTS Hold) does not apply when more than one member of the group is engaged in a MADN bridged conference with an external party and any one of the active MADN members invokes MADN Hold. Only the MADN member who invokes MADN Hold winks, and the MWINK option does not provide a slower, distinctive wink to the MADN Hold controller.

The following scenarios occur for MADN groups with EKTS Hold:

- If the MADN group does not have the bridging option and the active member (also called as MADN Hold controller) places a call with external party on Hold, only the MADN Hold controller winks, other members of the MADN group do not wink in this case. The MWINK option, in such a case does not provide a slower, distinctive wink to the MADN Hold controller.
- The following non-bridged scenarios occur for MADN groups with EKTS MADN Hold and the bridging option:
 - When the active MADN member of a MADN group places a call with an external party on Hold, the other members of the MADN group wink only if the call is of non-private status. The MWINK option in this case would provide a different, slower wink to the MADN Hold controller.
 - Only the active MADN member that places a private call to an external party and places that call on Hold, winks. Other MADN members do not wink in this situation. The MWINK option in this case does not provide a different, slower wink to the MADN Hold controller.

Hardware requirements

Individual Multiple Appearance Directory (MADN) Hold has no new hardware requirements.

Limitations and restrictions

Individual Multiple Appearance Directory (MADN) Hold does not support ISDN sets. The MWINK functionality, for a MADN group comprised of EBS, IVD, IBN, and ISDN sets, works only when activated from EBS or IVD sets. The MWINK functionality does not apply when MADN Hold is activated from an ISDN set member of a MADN group with the MWINK option.

Interactions

The MWINK option does not introduce any new interaction with other MADN and non-MADN features. MWINK does not change any existing interaction between MADN and non-MADN features.

Data schema

Individual MADN Hold introduces a new option, MWINK, to table MDNGRP.

Table MDNGRP is a change-only table. Tuples cannot be added to or deleted from this table; they can only be modified.

A new entry is automatically added to the table MDNGRP whenever a new MADN group is created using SERVORD, or when an entry in table IBNLINES or KSETLINES with a format of MADN is added. Entries in table MDNGRP cannot be added to or deleted from the table.

The tuple associated with the MADN group must be changed in order to add an option in table MDNGRP. The changed tuple is then edited. This allows the option MWINK to be assigned to or removed from the MADN group.

MWINK can only be assigned to the MADN group through table MDNGRP or through SERVORD.

"ILD/RLD versus PRI D-channels" (page 760) shows the modified command.

New or modified tables

Table Name	New, changed or deleted	Table Control (new/old/unchanged)
MDNGRP	Changed	Unchanged

Office parameters

Individual Multiple Appearance Directory (MADN) Hold does not affect office parameters.

Service Orders

Option MWINK of feature Individual MADN Hold is assigned and removed through SERVORD.

MWINK can be added to any member of a MADN SCA or MADN CACH group. It cannot be assigned to non-MADN lines as well as to members of MCA and EXB MADN groups.

MWINK is added as a MADN group option (that is, it can be assigned through any member of the MADN group). MWINK can also be removed from the MADN group through any member of the MADN group.

MWINK restricts the change of MADN SCA and CACH group types to MCA and EXB group types.

Operational Measurements

Individual Multiple Appearance Directory (MADN) Hold does not affect Operational Measurements (OMs).

Logs

Individual Multiple Appearance Directory (MADN) Hold does not affect logs.

User interface

The status of the MWINK option (assigned or unassigned) is displayed in the output of the QMADN command.

The Individual MADN Hold feature modifies only the output of QMADN. The status of the MWINK option is displayed in the output of QMADN command.

The QMADN Command is a command interpreter (CI) command which displays data regarding MADN groups and MADN members. The QMADN Command is invoked at a CI prompt using the command "qmadn" followed by 1 to 9 operations:

QMADN	DISPLAY <dn>
	DISPGRP <group#>
	DISPALL
	DISQUICK
	LCMCNT [<site>] <frame><unit>
	OFCCNT
	GRPNUM <dn>
	VERIFY <dn>
	VERIFY ALL

Feature impact Feature 59028416 does not modify the input or responses of the QMADN Command.

Individual Multiple Appearance Directory (MADN) Hold modifies only the output of QMADN. The status of the MWINK option is displayed in the output of QMADN Command.

The following notes apply to the MWINK option:

- the MWINK option, when assigned to a MADN group, is displayed with the QDN and QGRP Commands for ISDN, EBS and 500/2500 sets.
- MWINK appears with a QLEN on a 500/2500 set.
- The following applies with a QLEN on an EBS set and QLT on an ISDN set:

- MWINK appears only for the MADN DN that is assigned to Key 1 of the set
- when a MADN DN is assigned to any key other than key 1 on an EBS or an ISDN set, the QLEN and QLT Command will not show the MWINK option. This occurs because several MADN groups could have appearances on the set and each could have a separate MADN group information.

Example of QMADN output with MWINK

```
>QMADN DISPLAY 4811520

=====
Group:-32768      Type:SCA      Size:2
State:IDLE -> Act :1
PRV :Off -> Ctlr:1
MDN_3WC: OFF
MRF:N
BRG:Y -> Tone:Y -> Size:30
DNL:Y   CFW :N   SSC :N
EHLN:Y   MREL:N   MLAMP:N   MWINK:Y   MDN_CSA:0
=====
<Member#1>
HOST 00 0 08 10 DN 9194811520 KEY 1
TID - NN:43 TN:267
Prim:y XPM :y Type :EBS Map :Y.
Ring:RNG Name:n CFMDN:N
Chnl:N RNOC:N WORT :N Asso:Y Mtc :N
SDB: Y Idx: -32768 IBNOPB: SCA= Y MCA= N EXB= N CACH= N
.....
<Member#2>
HOST 00 1 01 05 DN 9194811520 KEY 2
TID - NN: 44 TN: 38
Prim:N XPM :Y Type :EBS Map :Y
Ring:RNG Name:N CFMDN:N
Chnl:N RNOC:N WORT :N Asso:Y Mtc :N
SDB: Y Idx: -32768 IBNOPB: SCA= Y MCA= N EXB= N CACH= N
.....
```

Billing

Individual Multiple Appearance Directory (MADN) Hold does not affect billing.

A59028425 - QHASU Enhancements

Description

This feature provides Meridian SL-100 the flexibility of querying all variants of a card type.

The Query Hardware Assigned Software Unassigned (QHASU) Command displays a summary or detailed printout of hardware assigned and software unassigned Line Equipment Numbers (LENS).

The existing QHASU Command requires the input of the full card code.

"Example of the QHASU Command before modification" (page 798) shows an example of the QHASU Command before the modification.

Example of the QHASU Command before modification

```
>qhasu
LINE_MODULE_RANGE: ALL
>r
FROM_LM:
>00 0
TO_LM:
>00 0
LINE_DRAWER_RANGE: ALL
>r
LINE_DRAWER_NUMBER:
>4
LINE_DRAWER_NUMBER:
>5
LINE_DRWAER_NUMBER:
>6
LINE_DRAWER_NUMBER:
>$
CARD CODE: NIL_CC
>6X17AC
GDN:N
>y
SUMMARY OR DETAIL: S
COMMAND AS ENTERED
QHASU R HOST 00 0 HOST 00 0
R (4) (5) (6) $ 6X17AC Y S
ENTER Y TO CONFIRM, N TO REJECT OR E TO EDIT
>y
```

"Example of the QHASU output before modification" (page 798) shows an example of the QHASU Command output before the modification.

Example of the QHASU output before modification

```
SUMMARY OF HARDWARE ASSIGNED SOFTWARE UNASSIGNED LEN --
HASU

FROM HOST 00 0 TO HOST 00 0 4 5 6
CARTYPE 6X17AC OPT GND
COUNT BY LINE DRWAERS
4 5 6
LM : HOST 00 0 COUNT: 0
0 0 0

TOTAL: 0
```

The enhancement allows all the HASU LENS with 6X17** card code to be displayed. For example, 6X17AA, 6X17AC.

"Example of the QHASU Command after modification" (page 799) shows an example of the QHASU Command after the modification.

Example of the QHASU Command after modification

```
>qhasu
LINE_MODULE_RANGE: ALL
>r
FROM_LM:
>00 0
TO_LM:
>00 0
LINE_DRAWER_RANGE: ALL
>r
LINE_DRAWER_NUMBER:
>4
LINE_DRAWER_NUMBER:
>5
LINE_DRAWER_NUMBER:
>6
LINE_DRAWER_NUMBER:
>$
CARD CODE: NIL_CC
>6X17
GDN:N
>Y
SUMMARY OR DETAIL: S
COMMAND AS ENTERED
QHASU R HOST 00 0 HOST 00 0
R (4) (5) (6) $ 6X17AC Y S
ENTER Y TO CONFIRM, N TO REJECT OR E TO EDIT
>Y
```

"Example of the QHASU output after modification" (page 800) shows an example of the QHASU Command output before the modification.

Example of the QHASU output after modification

```

SUMMARY OF HARDWARE ASSIGNED SOFTWARE UNASSIGNED LEN --
HASU

CARD 6X17AC
-----
FROM HOST 00 0 TO HOST 00 0 4 5 6
CARTYPE 6X17AC OPT GND
COUNT BY LINE DRWAERS
4 5 6
LM : HOST 00 0 COUNT: 0
0 0 0

TOTAL: 0

CARD 6X17AA
-----
FROM HOST 00 0 TO HOST 00 0 4 5 6
CARTYPE 6X17AA OPT GND
COUNT BY LINE DRWAERS
4 5 6
LM : HOST 00 0 COUNT: 0
0 0 0

TOTAL: 0

```

Hardware requirements

QHASU Enhancements has no new hardware requirements.

Limitations and restrictions

QHASU Enhancements has no limitations or restrictions

Interactions

QHASU Enhancements has no interactions with other functionalities.

Data schema

QHASU Enhancements does not affect data schema tables.

Office parameters

QHASU Enhancements does not affect office parameters.

Service Orders

QHASU Enhancements does not affect SERVORD.

Operational Measurements

QHASU Enhancements does not affect Operational Measurements (OMs).

Logs

QHASU Enhancements does not affect logs.

User interface

QHASU Enhancements does not change the user interface.

Billing

QHASU Enhancements does not affect billing.

A59028432 - Identifying Group Intercom (GIC) Members**Description**

This feature enhances the QGRP Command in querying Group Intercom (GIC) members. The enhanced command provides output that contains more information about the members of a specific GIC group, including Directory Numbers (DN) and names.

Identifying Group Intercom (GIC) Members modifies only the output of QGRP. In addition to displaying the Line Equipment Number (LEN), number of member in the group, and the key number, the new output displays the DNs and names of the members of a particular GIC group.

"[Example of the QGRP command and output before modification](#)" (page 801) shows an example of the QGRP Command syntax and output before the modification.

Example of the QGRP command and output before modification

```
>qgrp
GRP_TYPE:
>gic
LEN_OR_LTID:
>0 0 9 5
KEY
>10
GIC GROUP
-----

HOST 00 0 09 05 KEY 10 MEMBER 20

The number of members in the GIC GROUP "ABCD" is 1
```

"[Example of the modified QGRP command output](#)" (page 802) is an example of the modified QGRP Command output.

Example of the modified QGRP command output

```

>qgrp
GRP_TYPE:
>gic
LEN_OR_LTID:
>0 0 9 5
KEY:
>10
SORT_BY_LEN_OR_MEM: LEN
>LEN

GIC GROUP
-----

HOST 00 0 09 05 KEY 10 MEMBER 20

DN 9192465011 NAME JAMES BOND
DN 9192315666 NAME JENNY CHU

HOST 00 01 09 05 KEY 8 MEMBER 21

DN 6132311111 NAME SALLY BENN
DN 6132314242 NAME CHARLIE TRUT

The number of members in the GIC GROUP "ABDC" is 2

If the output is sorted based on member, the output
should be:

GIC GROUP
=====

MEMBER 20 HOST 00 0 09 05 KEY 10
DN 9192465011 NAME JAMES BOND
DN 9192315666 NAME JENNY CHU

MEMBER 21 HOST 00 01 09 05 KEY 8
DN 6132311111 NAME SALLY BENN
DN 6133214242 NAME CHALIE TRUT

The number of members in the GIC GROUP "ABCD" is 2

```

Hardware requirements

Identifying Group Intercom (GIC) Members has no new hardware requirements.

Limitations and restrictions

Identifying Group Intercom (GIC) Members has no limitations or restrictions.

Interactions

Identifying Group Intercom (GIC) Members does not interact with other functionalities.

Data schema

Identifying Group Intercom (GIC) Members does not affect data schema tables.

Office parameters

Identifying Group Intercom (GIC) Members does not affect office parameters.

Service Orders

Identifying Group Intercom (GIC) Members does not affect SERVORD.

Operational Measurements

Identifying Group Intercom (GIC) Members does not affect Operational Measurements (OMs).

Logs

Identifying Group Intercom (GIC) Members does not affect logs.

User interface

The output of the QGRP when used to query the GIC group members displays Directory Number and name of the member.

Billing

Identifying Group Intercom (GIC) Members does not affect billing.

A59029642 - Internet Telephony Gateway (ITG) for Meridian SL-100**Description**

This feature introduces the new ITG terminals to the Meridian SL-100 market for the 802.11 Wireless IP Gateway for Meridian SL-100. There are two parts to the development:

- Implement the ITG terminals by configuring a generic IP (Internet Protocol) terminal to function with the Meridian SL-100 switch.
- Develop the Meridian SL-100 ITG line card that contains the Terminal Proxy Server (TPS) and the firmware that contains the cardlan messaging set.

802.11 Wireless IP Gateway system architecture

The 802.11 Wireless IP Gateway for Meridian SL-100 contains the PBX environment and the IP LAN environment. The Meridian SL-100 ITG line card is the gateway interface between these two environments. The PBX environment contains the Meridian SL-100 switch and the Intelligent Peripheral Equipment (IPE) that contains the Meridian SL-100 ITG line card. The IP LAN environment contains Ethernet wiring, third-party Access Points (APs), and third-party wireless handsets.

Each Meridian SL-100 ITG line card represents an 802.11 Wireless IP gateway H.323+ zone, supporting a maximum of 24 wireless handsets. Each Meridian SL-100 system can have multiple H.323+ zones, but each wireless handset is dedicated to one specific Meridian SL-100 ITG line card or zone. Calls are routed through the Meridian SL-100 whether the call is within the same H.323+ zones, across different zones within the same Meridian SL-100, or across different zones in different Meridian SL-100 zones.

The following codecs are supported on the 802.11 Wireless IP Gateway: G.711, A-law/M-law and G.729A/AB. The default codec is G.729AB.

IP terminals

The IP terminals are third-party 802.11 11 Mbps DS wireless handsets. The wireless handsets use the H.323 protocol with Nortel Networks extensions (referred to as H.323+), to communicate through the LAN to the ITG line card and Meridian SL-100. The wireless handsets provide Wireless Voice over Internet Protocol (WVoIP) capability for the 802.11 Wireless IP Gateway for Meridian SL-100. The handsets support simultaneous voice and messaging and deliver Meridian SL-100 features over a LAN.

Supported Meridian SL-100 Features The 11 Mbps 802.11 wireless handsets supports the following Meridian SL-100 features:

- M0200, CXR, CNF, MSB, CPU, CFB, CFD, PRK, RAG, SCU, PRL, MWT, MDN (SCA), MSMWI

For information about how these Meridian SL-100 features work with the wireless handsets, refer to *Using Meridian SL-100 Features on the 802.11 Wireless LAN Portable Handsets*.

Access Points

The Access Points (APs) are third-party 802.11 11 Mbps DS APs. The APs connect the LAN and the third-party wireless handsets. The APs convert the wireless Radio Frequency (RF) protocols from the handsets to IP LAN protocols. Each third-party AP has antenna(s), power adaptor, Ethernet and serial ports.

Meridian SL-100 ITG line card

The Meridian SL-100 ITG line card (NTDE52AA) is a 24-port line card that requires two card slots in an IPE shelf. The ITG line card contains the software and firmware for the 802.11 Wireless IP Gateway for Meridian SL-100. The ITG line card acts as the H.323 gateway between the Meridian SL-100 switch and the H.323 wireless handsets providing gatekeeper functionality. To the Meridian SL-100 switch, the ITG line card emulates an Extended Digital Line Card (XDLC). To the wireless handsets, the ITG line card is an H.323 Gateway. Each Meridian SL-100 ITG line card can support

a maximum of 24 wireless handsets (one handset for each port on the ITG line card). The ITG line card allows wireless handsets to deliver Meridian SL-100 features over a LAN.

Meridian SL-100 ITG line card provisioning

You can provision an Meridian SL-100 ITG line card using the Meridian SL-100 ITG Configuration Tool or the Command Line interface. Both these methods allow you to log into and configure an Meridian SL-100 ITG line card:

- Meridian SL-100 ITG Configuration Tool - a GUI software tool that you use from your Web browser to access and configure Meridian SL-100 ITG line cards. When installed, access the Meridian SL-100 ITG Configuration Tool, with a Web browser from the server that contains the tool, or use a Web browser from a client workstation (PC only) that can access the server that contains the tool.
- Command Line interface (CLI) - the CLI provides a text interface that allows you to access and configure Meridian SL-100 ITG line cards. To access the CLI, connect the COM port of a PC running a TTY or VT-100 terminal emulation program to the maintenance port on the Meridian SL-100 ITG line card.

For more information about provisioning a Meridian SL-100 ITG line card, refer to the following customer information:

- *802.11 Wireless IP Gateway for Meridian SL-100* (555-3001-206).
- Meridian SL-100 ITG Configuration Tool online help system - accessed from the ITG Configuration Tool user interface.

For steps on activating the Meridian SL-100 ITG line card, refer to the "Installation" section of NTP 555-3001-206.

Requirements

You need the following hardware requirements for the 802.11 Wireless IP Gateway for Meridian SL-100:

- 802.11 Wireless IP Gateway for Meridian SL-100 package (NTDE50AA) - includes 24-port ITG line card, PC maintenance cable, E-LAN/T-LAN RS232 port cables, 50-Pin I/O filter connector
- Enhanced controller card - EXPEC (NT7D07BA)
- Maintenance/administration PC (with NIC)
- Intelligent Peripheral Equipment (IPE)
- Third-party 802.11 11 Mbps DS access point (AP)
- Third-party 802.11 11 Mbps DS wireless handsets

- A Windows NT server, or Windows 2000 server with CD-ROM drive
- FTP server (software)

You need the following software for the 802.11 Wireless IP Gateway for Meridian SL-100:

- MSL12 release or higher.
- Meridian SL-100 ITG line card application software contained on the 802.11 Wireless IP Gateway Meridian SL-100 CD-ROM.
- Meridian SL-100 ITG Configuration Tool software contained on the 802.11 Wireless IP Gateway Meridian SL-100 CD-ROM.
- Windows NT, or Windows 2000 (loaded on a Server).
- To use the Meridian SL-100 ITG Configuration Tool, you need Microsoft Internet Explorer (version 5.0 or higher) or Netscape Navigator (version 6.2 or higher).
- For Windows NT, you need Microsoft Internet Information server software IIS4.0.
- For Windows 2000, you need IIS5.0 (IIS5.0 comes bundled with Windows 2000).
- Java Runtime Environment software (JRE version 1.2.2 +).
- Third-party configuration software that you use to configure and download the Nortel Networks firmware to the third-party wireless handsets.
- Adobe Acrobat Reader (version 5.0 or higher) for viewing the customer documentation for the 802.11 Wireless IP Gateway for Meridian SL-100.
- FTP server (software).

Limitations and restrictions

The following limitations and restrictions apply to this feature:

- Every Meridian SL-100 ITG line card can support a maximum of 24 handsets.
- There can be an impact on Quality of Service when transitions from one codec to another causes compression and decompression. For example, some loss of information occurs when there is a transition from G.711 to G.729, and then back again to G.711.
- Take the Meridian SL-100 ITG line card out of service, before you change codecs on the DSPs.
- All APs must be on the same subnet to prevent calls from dropping when the handset user roams from one subnet to the next.

- Line and card diagnostics are supported, but extended diagnostics are not supported. However, you can perform extended diagnostics from the Meridian SL-100 switch.

Interactions

The following interactions apply to this feature:

- You cannot use the # key as a terminating character on the wireless handsets when dialing or activating a Meridian SL-100 feature.
- To enable a user to monitor their desk set using the MSMWI feature, datafill the MSMWI feature on the Meridian SL-100 against key 11. If you datafill the MSMWI feature against any other key, the feature does not allow a user to monitor their desk set.
- When you set a line state for the wireless handset to BSY, the message "Set Test" appears on the display of the wireless handset.
- When you set an ITG line card state to BSY, the message "Disabled Set" appears on the display of the wireless handsets attached to that line card.

Data schema

Use table IPSETINV to associate new IP terminals with existing terminals. Use table IPECARDS to assign the ITG line card type supported by the IPE. Use table IVDINV to datafill information about new IP terminals. Use table LNINV to assign LENS against the installed ITG line card type from table IPECARDS.

New or modified tables

Table Name	New, Changed or Deleted	Table Control (New/Old/Unchanged)
IPSETINV	New	New
IPECARDS	Changed	Unchanged
IVDINV	Changed	Unchanged
LNINV	Changed	Unchanged

For more information about table IPECARDS and table IPSETINV, refer to the *Communication Server 2100 Commercial Systems Data Schema Reference Manual* (555-4031-851).

For more information about table IVDINV and table LNINV, refer to the *DMS-100 Family NA100 Customer Data Schema Reference Manual* (297-8001-351).

Office parameters

Internet Telephony Gateway (ITG) for Meridian SL-100 does not affect office parameters.

Service Orders**Description**

Use LCC IPTELSET to designate the type of IP terminal when you create a new IP terminal using the SERVORD command NEW.

This feature introduces no new SERVORD options. For more information about the SERVORD command NEW and LCC IPTELSET, refer to the *DMS-100 Family NA100 SERVORD Reference Manual* (297-8001-808).

Example: SO command NEW with IPTELSET

"[Example of SO command NEW in prompt-mode](#)" (page 809) shows datafill for the SERVORD command NEW in no-prompt mode. The user is creating a new IP terminal. At the LCC_ACC prompt, the user enters IPTELSET to designate the type of new IP terminal. At the IP_TERM prompt, the user enters ds4046 to indicate a wireless handset.

In "[Example of the modified QGRP command output](#)" (page 802) IPTELSET designates the type of IP terminal. ds4046 indicates a wireless handset.

Example of SO command NEW in prompt-mode

```

>:SO:
>NEW
SONUMBER: NOW 2 2 20 PM
>
DN:
>8058674137
LCC_ACC:
>IPTELSET
IP_TERM:
>ds4046
RINGTYPE:
>fh
HANDS_FREE:
>N
GROUP:
>ntirich
SUBGRP:
>0
NCOS:
>64
SNPA:
>972
KEY:
>1
RINGING:
>Y
LATANAME:
>nillata
LEN_OR_LTID:
>prf4 3 0 0 20
OPTKEY:
>1
OPTION:
>m0200
OPTKEY:
>$
COMMAND AS ENTERED:
NEW NOW 2 2 20 PM 8058674137 IPTELSET DS4046 FH N NTIRICH
0 64 972 1 Y NILLATA PRF4 03 0 0 20 (1 M0200) $
ENTER Y TO CONFIRM, N TO REJECT OR E TO EDIT
>Y
2002/02/20 15: 19: 37.671 WED. JOURNAL FILE RECORD ID 25522

```

"Example of the SO command NEW in no-prompt mode" (page 810) shows datafill for the SERVORD command NEW in no-prompt mode. The user creates a new IP terminal by entering IPTELSET to designate the type of new IP terminal and ds4046 to indicate a wireless handset.

Example of the SO command NEW in no-prompt mode

```
>NEW NOW 2 2 20 PM 8058674137 IPTELSET DS4046 FH N NTIRICH
0 64 972 1 Y NILLATA PRF4 3 0 0 20 1 M0200 $
COMMAND AS ENTERED:
NEW NOW 2 2 20 PM 8058674137 IPTELSET DS4046 FH N NTIRICH
0 64 972 1 Y NILLATA PRF4 3 0 0 20 1 M0200 $
```

Prompts

"New input for the LCC_ACC prompt and the IP_TERM prompt using the SO command NEW" (page 810) gives the new input for the LCC_ACC prompt and the IP_TERM prompt using the SO command NEW.

New input for the LCC_ACC prompt and the IP_TERM prompt using the SO command NEW

Prompt	Correct input	Explanation	Areas affected by prompts
LCC_ACC:	IPTELSET	Use IPTELSET to designate the type of new IP terminal.	
IP_TERM:	DS4046	DS4046 indicates a wireless terminal.	

Operational Measurements

Internet Telephony Gateway (ITG) for Meridian SL-100 does not affect Operational Measurements (OMs).

Logs

Internet Telephony Gateway (ITG) for Meridian SL-100 does not affect logs.

User interface

Internet Telephony Gateway (ITG) for Meridian SL-100 does not change the user interface.

Billing

Internet Telephony Gateway (ITG) for Meridian SL-100 does not affect billing.

A59036861 - Mark Non-IVD LENS

Description

Introduced in MSL17, this feature creates table LENTRBL. Table LENTRBL stores faulty non-Integrated Voice and Data (IVD) Line Equipment Numbers (LENs). Switch technicians manually enter the non-IVD LENs which they identify and mark as faulty in table LENTRBL. If a check in this table verifies that LENs are not faulty, SERVORD assigns phones to them.

Functionality

Technicians place non-IVD LENs that they identify as faulty in the new table, LENTRBL. Table LENTRBL supports all the non-IVD LENs which exist in table LNINV, with its status field as Hardware Assigned Software Unassigned (HASU). ISDN LENs that have no LTIDs associated with them can be entered in table LENTRBL. Table LENTRBL, and the corresponding check mechanism, are provided only on the MSL layer.

All relevant SERVORD commands which require one or more HASU or ISDN LENs as input, check whether the LEN (or LENs) are faulty. If the LEN is determined to be faulty, the SERVORD command fails and displays an error message.

Refer to ["Service Orders" \(page 812\)](#) for

- a list of the relevant SERVORD commands
- an example of a scenario where a user attempts to assign a faulty non-IVD LEN through SERVORD

Hardware requirements

Mark Non-IVD LENS has no new hardware requirements.

Limitations and restrictions

Mark Non-IVD LENS has no limitations or restrictions.

Interactions

Mark Non-IVD LENS does not interact with other functionalities

Data schema

Mark Non-IVD LENS introduces a new table, LENTRBL, to hold faulty non-IVD LENSs identified through this activity. Refer to table LENTRBL in the *Communication Server 2100 Commercial Systems Data Schema Reference Manual* (555-4031-851) for further information about the Data Schema changes "[New or modified tables](#)" (page 33) shows the new table.

New or modified tables

Table Name	New, Changed or Deleted	Table Control (New/Old/Unchanged)
LENTRBL	New	New

Office parameters

Mark Non-IVD LENS does not affect office parameters.

Service Orders

All relevant SERVORD commands which require one or more HASU or ISDN LENSs as input check whether the LEN (or LENSs) are faulty. If the LEN is determined to be faulty, the SERVORD command fails gracefully and displays the correct error message.

SERVORD commands which check for faulty Non-IVD LENSs

Command	Description
ADD	Prevention with an error display message if LEN exists in LENTRBL.
CLN	Same as above.
CKLN	Same as above.
COPYSET	Same as above.
EST	Same as above, if either the Hunt Pilot or the member LEN is marked bad in LENTRBL.
EXBADD	Same behavior as for ADD if the secondary LENSs is marked.
SLT-ATT	Prevention of an attachment of an LTID to a LEN.
NEW	Refer to example below.

Example:

In a scenario where the LEN HOST 00 0 00 04 is added to the new table, LENTRBL, the following is a sample behavior when the user attempts to assign the bad non-IVD LEN HOST 00 0 00 04 through SERVORD.

LEN HOST 00 0 00 4 exists in table LNINV with status HASU

```

> table lninv
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE : LNINV
> pos HOST 00 0 00 04
HOST 00 0 00 04 6X21AC STDLN HASU N
NL Y NIL

```

LEN HOST 00 0 00 4 is entered into the new table LENTRBL

```

> table lentrbl
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
TABLE : LENTRBL
> add
MACHINES NOT IN SYNC - DMOS NOT ALLOWED
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
ENTER Y TO CONTINUE PROCESSING OR N TO QUIT
> y
LEN :
> 00 0 00 04
TUPLE TO BE ADDED :
HOST 00 0 00 04
ENTER Y TO CONFIRM, N TO REJECT OR E TO
EDIT
> y
TUPLE ADDED

```

Attempting to assign the LEN HOST 00 0 00 4 from SERVORD using the NEW command

```

> servord
SO :
> new
SONUMBER :      NOW   1   7   19   PM
>
DN :
> 9192464567
LCC_ACC :
> pset
GROUP :
> bnr
SUBGRP :
> 0
NCOS :
> 0
KEY :
> 1
RINGING :
. Y
LATANAME :
> nillata
LTG :      0
>
LEN_OR_LTID :
> 0   0   0   4
OPTKEY :
> $
COMMAND AS ENTERED :
NEW NOW 1 7 19 PM 9192464567 PSET BNR 0 0 1 Y
NILLATA 0 HOST 0 0 0 0 0 0 4 $
ENTER Y TO CONFIRM, N TO REJECT OR E TO EDIT
> Y
LEN : HOST      0 0 0 0 0 0 4 IS IN TABLE LEN-
TRBL AND MAY NOT BE USED
* * *      ERROR - INCONSISTENT DATA      ***
COMMAND AS ENTERED :
NEW NOW 1 7 19 PM 9192464567 PSET BNR 0 0 1 Y
NILLATA 0 HOST 0 0 0 0 0 0 4 $
ENTER Y TO CONFIRM, N TO REJECT OR E TO EDIT

```

Operational Measurements

Mark Non-IVD LENS does not affect Operational Measurements.

Logs

Mark Non-IVD LENS does not affect logs.

User interface

Mark Non-IVD LENS does not change the user interface.

Billing

Mark Non-IVD LENS does not affect billing.

A59036868 - Query Busy Lamp Field

Description

As a part of the Query Busy Lamp Field activity, a new command QGRP has been added to the CI system as QGRP Busy Lamp Field (BLF).

Command type

Non-Menu.

Command target

SUPERNODE and BRISC processors.

Command availability

RES.

This is a Query Group Command. The input to this command is a Directory Number (DN). The command provides a list of Line Equipment Numbers (LENs) which are BLF/Set-Based Lamp Field (SBLF) monitoring the input DN. The command also displays the corresponding key and type of monitoring (for example if the monitoring is set_based or group_based).

Command syntax

Command	Parameters and variables
QGRP BLF	<INPUT_DN>

Parameters

Parameters and variables	Description
BLFDN	The Directory Number for which all the LENS monitoring this DN through the BLF/SBLF needs to be listed.

Error Messages

Error message	Description	When occurs
No LEN is BLF monitoring the input DN	This means that the when the search was conducted, there was no result.	When there is no LEN which is BLF/SFLF monitoring the input DN.
KSETFEAT Table is empty	This means that there is no entry present in the table.	This is a rare message, only occurs when no keyset exists in the office.

Response description and system or user action

Response	Description	System or user actions
No LEN is BLF monitoring the input DN	Search results are empty. This will happen when there is no LEN which is BLF/SFLF monitoring the input DN.	None.
KSETFEAT table is empty	There is no entry in the table. This is a rare message, and it means that they is no key set present in the office.	None.

Usage examples for QGRP BLF command

Description of task	To List all the LENS which are BLF/SFLF Monitoring the INPUT_DN
Command	QGRP BLF
Map response:	BLFDN: >9097502531 ----- The LENS monitoring the input DN are: LEN KEY TYPE ----- HOST 01 1 19 25 5 SET_BASED HOST 01 1 19 31 6 GROUP_BASED -----

Hardware requirements

Query Busy Lamp Field has no new hardware requirements.

Limitations and restrictions

Query Busy Lamp Field has no limitations or restrictions.

Interactions

Query Busy Lamp Field does not interact with other functionalities.

Data schema

Query Busy Lamp Field does not affect data schema tables.

Office parameters

Query Busy Lamp Field does not affect office parameters.

Service Orders

Query Busy Lamp Field does not affect SERVORD.

Operational Measurements

Query Busy Lamp Field does not affect Operational Measurements (OMS).

Logs

Query Busy Lamp Field does not affect logs.

User interface

See ["Description" \(page 815\)](#).

Billing

Query Busy Lamp Field does not affect billing.

A59036875 - Large Scale Message Waiting Indication Reset

Description

Feature operation


The Large Scale Message Waiting Indication Reset feature enables switch administrators to reset or dequeue message indications at multiple directory numbers (DNs) simultaneously. The feature introduces a Command interface (CI) tool, "MWRESET", for this task. Administrators can save time by using this feature to reset, or dequeue, multiple messages from message waiting queues across a large number of DN's (for example, when the message waiting queue of a DN gets corrupted).

The feature also provides the ability to perform sanity checks on messages in multiple message waiting queues. This functionality deletes and removes corrupt messages.

In this document, the person who leaves a message for another person is called the "requestor"; the person for whom the message is left is the "requestee". When a voice mail subscriber to a message service has their calls forwarded to the service, the voice mail subscriber is the "requestee" of the message. In this case, the message service DN is the "requestor" of the message. The message service DN can include the following:

- Uniform Call Distribution (UCD) group or Hunt group with Simplified Message Desk Interface (SMDI) option
- Intelligent Call Manager (ICM) Automatic Call Distribution (ACD) group or agent
- Primary Rate Interface (PRI) Message Storage and Retrieval (MSR)

The "[SMDI as message service DN](#)" (page 819) shows an example of an SMDI message service DN.

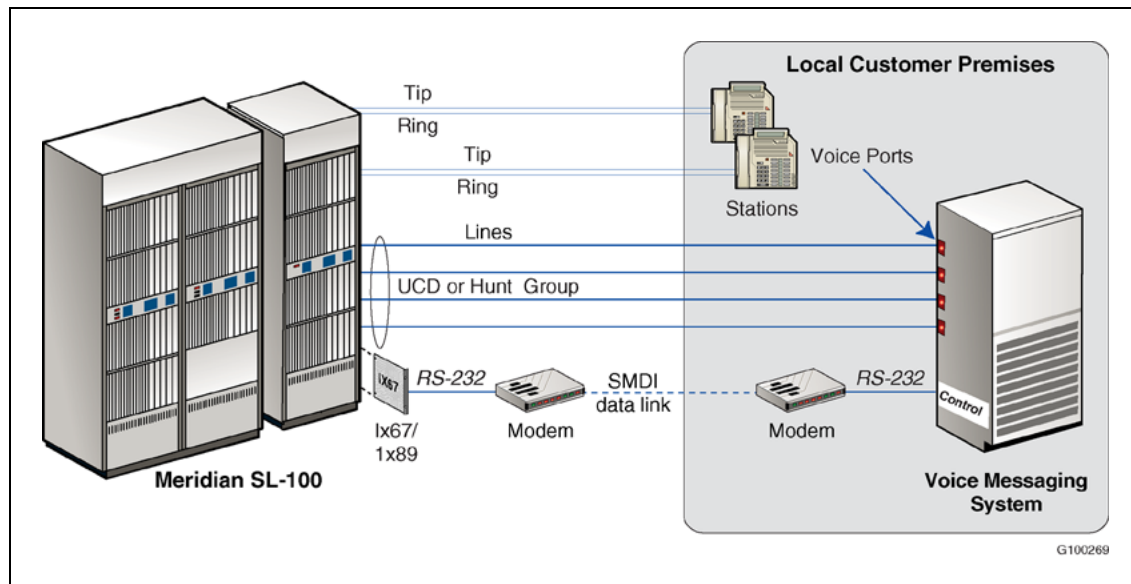SMDI as message service DN

The Meridian SL-100 stores the message that a requestor leaves for a requestee in a queue. This queue is called a "message waiting queue" which belongs to the requestee DN. Each message in the message waiting queue of the requestee DN contains information that identifies the requestor DN of that particular message.

Currently, an administrator can reset or dequeue messages only from the message waiting queue of a single requestee DN. This feature introduces a MWRESET CI tool with sub commands that provide the following enhancements:

- RESET - the ability to reset (that is, remove all messages from) the message waiting queues of multiple requestee DNs.
- DEQUE - the ability to dequeue (that is, remove a specific message from) the message waiting queues of multiple requestee DNs.
- SANITY - the capability to detect and remove corrupt messages from the message waiting queues of requestee DNs.

In each case, the system updates the message waiting indicator for each of the requestee DN to reflect the current state of its message waiting queue.

CI MWRESET command summary

RESET After an administrator executes the RESET command they must identify the requestee DNs to be reset. There are three options available to the administrator (see "[MWRESET RESET options](#)" (page 820)).

MWRESET RESET options

Option	Description
RANDOM	If an administrator inputs RANDOM, they can then enter a list of requestee DNs, up to a maximum of 30 DNs. The RESET command removes all the waiting messages from all the requestee DNs entered.
RANGE	If an administrator inputs RANGE, the CI prompts them for a START DN and A STOP DN. The START and STOP DNs must be in the same Numbering Plan Area (NPA) and should have the same office code. The station code of the START DN must not be greater than the station code of the STOP DN. The RESET command then removes the DNs within the range. The range is per order of the DNs in table DNINV in the office. For example, if an administrator enters: <pre>RESET RANGE 9097500000 9097509999</pre> The system removes all the messages from the message waiting queue of all DNs between 9097500000 and 9097509999.
ALL	If an administrator enters ALL, the RESET command removes all the messages waiting from all the requestee DNs in the office (that is, removes all waiting messages in the office).  WARNING Use this command with care, as it removes each and every message in the office.

DEQUE

After an administrator executes the DEQUE command, the system prompts them to enter a parameter that identifies whether the requestor DN is a nodal DN or network DN. "[MWRESET DEQUE options](#)" (page 821) shows the options available to the administrator.

MWRESET DEQUE options

Option	Description
NODAL	If an administrator inputs NODAL, this indicates that the requestor DN is in the same office as its requestee DN or the office in which the command is executed. The system prompts the administrator for the type of the requestor DN. Valid responses are as follows: • L - the requestor DN is a line • M - the requestor DN is an SMDI message desk • C - the requestor DN is a console group (that is, a customer group and a subgroup) • I - the requestor DN is an ICM agent (that is, a line with Extended Call Management (ECM) line option or an ACD group with the ECM customer group option) • P - the requestor DN is a PRI MSR The administrator must enter one of these single letters, followed by the requestor DN.
NETWORK	If an administrator inputs NETWORK, this indicates that the requestor DN is a different office than its requestee DN or the office in which the command is executed. The system then prompts the administrator to enter the requestor DN.

After an administrator enters either NODAL or NETWORK, the CI asks if the DEQUE command applies to random DNS, a range of DNS, or all DNS in the office. From here on operation is similar to the RESET sub command, except that the DEQUE command removes a specific message from the message waiting queues, instead of all the messages.

For example, an administrator enters the following to remove a message queued by a DN from a range of numbers in a different office than the requestee DN:

DEQUE NETWORK 103481111 RANGE 9097500000 9097509999

The system removes the message enqueued by DN 103481111 from all DNS between 9097500000 and 9097509999.

SANITY After an administrator executes the SANITY command, the system prompts them to enter a parameter that identifies the requestee DN that the system should check the message waiting queues for sanity. This parameter provides the administrator with the same three choices as the RESET prompt. However, instead of removing messages from the

message waiting queues, the system checks the messages for sanity. Subsequently if the system finds a corrupted message, it dequeues it from the DN's message waiting queue.

Hardware requirements

Large Scale Message Waiting Indication Reset has no hardware requirements.

Limitations and restrictions

Large Scale Message Waiting Indication Reset has no limitations or restrictions.

Interactions

Large Scale Message Waiting Indication Reset does not interact with other functionalities.

Data schema

Large Scale Message Waiting Indication Reset does not affect data schema tables.

Office parameters

The following office parameters apply to Large Scale Message Waiting Indication Reset:

- When entering DNs against the RANDOM option, the administrator must take care that the command does not exceed 80 characters on a line. If the command exceeds 80 characters, the administrator must continue the command on another line by entering a "+" sign on the current command line that exceeds 80 characters. The CI will ignore DNs that exceed 80 characters on any line.
- When entering DNs against the RANDOM option, the administrator must use quotation marks ("") for any DN less than 32767. If not, the system only operates on DNs entered before this DN. It ignores all subsequent DNs.

For example, an administrator enters:

```
MWRESET:
>reset random 7502531 7502532 3276 6321216
EITHER incorrect optional parameter(s) OR too many
parameters.
```

In this example, the system will operate only DNs 7502531 and 7502532; it ignores DNs 3276 and 6321216.

- There is no guarantee that the SANITY command will detect every type of corruption.

- The RESET, DEQUE, SANITY commands will operate on lines with CALLOG line option and thus CALLOG message queues.
- The DEQUE command ignores Executive Message Waiting (EMW) messages in a SAVED or DELETED state.
- The RESET, DEQUE and SANITY commands are not applicable to lines with the Advanced Intelligent Network Message Waiting (AINMWT) line option.
- As MWRESET commands scan a large number of lines in the office, they take time to complete. The delay depends on the number of lines to be scanned.

Service Orders

Large Scale Message Waiting Indication Reset does not affect SERVORD.

Operational Measurements

Large Scale Message Waiting Indication Reset does not affect Operational Measurements.

Logs

"MWR logs" (page 823) shows the logs that the Large Scale Message Waiting Indication Reset feature introduces. The log title for Large Scale Message Waiting Indication Reset logs is "MWR".

MWR logs

MWR101	
Description	The system generates this log whenever it executes a RESET, DEQUE or SANITY command of MWRESET. This log shows the command was executed and the parameter type of the command (that is, RANDOM, RANGE or ALL).
Event type	Whenever an administrator executes a RESET, DEQUE or SANITY command of MWRESET.
Format	MWR101 <mmdd hh:mm:ss ssdd> INFO MWRESET COMMAND EXECUTED. COMMAND : <com_type> PARAMETER: <parm_type>
Examples	MWR101 JUN27 20:25:46 6400 INFO MWRESET Command Executed. COMMAND : RESET PARAMETER: RANDOM MWR101 JUN27 20:25:47 6489 INFO MWRESET Command Executed. COMMAND : DEQUE PARAMETER: RANDOM MWR101 JUN27 20:25:48 6402 INFO MWRESET Command Executed. COMMAND : SANITY PARAMETER: RANDOM
MWR102	

Description	The system generates this log whenever the SANITY command of MWRESET finds a message waiting Feature Queue (FTRQ) enqueued against a requestee DN to be corrupt. This log indicates that the FTRQ has been dequeued.
Event type	Whenever an administrator executes the SANITY command and the system finds a FTRQ to be corrupt and dequeues the FTRQ.
Format	MWR102 <mmdd hh:mm:ss ssdd> INFO FTRQ DEQUEUED <Requestee DN> Reason : <Dequeue Reason>
Examples	<pre> MWR102 JUN28 20:25:46 6308 INFO FTRQ DEQUEUED HOST 01 0 19 09 DN 9097502531 KEY 1 Reason : Requestor Corrupted MWR102 JUN28 20:25:46 6308 INFO FTRQ DEQUEUED HOST 01 0 19 09 DN 9097502531 KEY 1 Reason : Data Corrupted MWR102 JUN28 20:25:46 6308 INFO FTRQ DEQUEUED HOST 01 0 19 09 DN 9097502531 KEY 1 Reason : MCOS Corrupted </pre>

Command interface

The Large Scale Message Waiting Indication Reset feature introduces a new CI resident directory: MWRESET.

Directory: MWRESET

This directory provides commands for large scale resetting, dequeuing and sanity checking of messages from message waiting queues of multiple requestee DNs.

The MWREST directory provides the following sub commands:

- RESET
- DEQUE
- SANITY
- HELP
- QUIT

Procedures

This section provides procedures for using the RESET, DEQUE, SANITY and HELP sub commands.

Using RESET Follow the steps in ["Reset multiple message waiting queues" \(page 825\)](#) to reset the message waiting queues of multiple requestee DNs.

Reset multiple message waiting queues

Step	Action

From the MAP CI:

1 Enter:

MWRESET

The MSRESET directory opens.

2 Enter:

RESET

The CI prompts you to enter one of *RANDOM*, *RANGE*, or *ALL*.

If	Do
you want to reset a message in random message waiting queues	Go to Step 3 .
you want to reset a message in a range of message waiting queues	Go to Step 4 .
you want to reset a message in all message waiting queues	Go to Step 5 .

3 Perform the following step to reset random multiple message waiting queues. Enter:

RESET RANDOM + the DN of the message waiting queue you want to reset

Note: You can enter multiple DNs.

Example:

RESET RANDOM 7502531 7502532 7502539 7502537

4 Perform the following step to reset a range of multiple message waiting queues.

a. Enter:

RESET RANGE

b. The CI responds:

Enter: <START DN>

c. Enter the first DN in the range. For example:

6321201

d. The CI responds:

Enter: <STOP DN>

- e. Enter the second DN in the range. For example:

6321209

Note: You can enter multiple ranges.

Example:

RESET RANGE 6321201 6321209

- f. The CI responds:

START DN:

NPA: 103 OFC: 632 STN: 1201

STOP DN:

NPA: 103 OFC: 632 STN: 1209

*All the DNs, within the above Range will be operated upon
DO YOU AGREE ?*

Please confirm ("YES", "Y", "NO", or "N"):

Enter:

Y or YES

if the range is correct.

Or enter:

N or No

if the range is incorrect.

- 5** Perform the following step to reset all message waiting queues.

- a. Enter:

RESET ALL

- b. The CI responds:

*This command will remove each message waiting request in
the office.*

ARE YOU SURE ?

Please confirm ("YES", "Y", "NO", or "N")

Enter:

Y or YES

if you want to reset all.

Or enter:

N or No

if you do not want to reset all.

- 6 To return to CI environment from MWRESET directory, enter:
QUIT

—End—

RESET error messages - "RESET error messages" (page 827) shows the error messages that the CI prints if an invalid entry is made when using the RESET command.

RESET error messages

The DN XXXXXXXX is invalid for this office.	
Meaning	The DN entered as a part of RANGE or RANDOM option is not present in the office.
Action	For the RANGE option, you must to enter a correct DN (that is, a DN that exists in the office). For the RANDOM option, this error message is for information purposes and this DN is excluded from the list of DN's you enter.
The DN XXXXXXXX is ambiguous. Please Use the Full National DN (NPA+DN).	
Meaning	The START or STOP DN entered as a part of RANGE option is ambiguous (that is, more than one NPA has DN XXXXXXXX).
Action	Re enter the DN including its NPA, office code and station code.
The DN XXXXXXXX is ambiguous.	
Meaning	The DN entered as a part of RANDOM option is ambiguous (that is, more than one NPA has DN XXXXXXXX).
Action	This error message is for information purpose, the RANDOM option ignores this particular DN.
The START and STOP DN's must be in the same NPA.	
Meaning	The START and STOP DN's entered as a part of RANGE option are not in the same NPA.
Action	Enter START and STOP DN's that have the same NPA.
The START and STOP DN's must have the same office code.	
Meaning	The START and STOP DN's entered as a part of RANGE option do not have the same office code.
Action	Enter START and STOP DN's that have same office code. The NPAs should also be the same as described in the previous message.
The Station Code of START DN should not be greater than the Station Code of STOP DN.	
Meaning	The station code of the START DN has to be less than or equal to the station code of the STOP DN when you select the RANGE option.

Action	Select START and STOP DN's so that START DN comes before STOP DN in table DNINV.
Please enter the DN with its NPA.	
Meaning	You entered a local DN that was determined to have a nil office code.
Action	Enter the local DN along with its NPA.

Using DEQUE

Follow the steps in ["Dequeue messages in multiple message waiting queues" \(page 828\)](#) to dequeue the message waiting queues of multiple requestee DN's.

Dequeue messages in multiple message waiting queues

Step	Action

From the MAP CI:

1 Enter:

MWRESET

The MSRESET directory opens.

2 Enter:

DEQUE

The CI prompts you to select whether the requestor DN is nodal or network.

If	Do
the requestor DN is in the same office as its requestee DN or the office in which the command is executed	Go to Step 3 .
the requestor DN is in a different office as its requestee DN or the office in which the command is executed	Go to Step 4 .

3 The requestor DN is nodal.

a. Enter:

NODAL

The CI prompts you to select the type of requestor DN.

b. Enter one of the following options:

- L - if the requestor DN is a line.
- M - if the requestor DN is an SMDI message desk.

- C - if the requestor DN is a console group.
- I - if the requestor DN is an ICM agent.
- P - if the requestor DN is a PRI MSR.

c. Proceed to **Step 5**.

4 The requestor DN is network.

a. Enter:

Network

b. Proceed to **Step 5**.

5 The system prompts you to enter the Requestor DN.

Enter:

XXXXXX

where:

xxxxxx is the Requestor DN.

6 *The CI prompts you to enter one of RANDOM, RANGE, or ALL.*

If	Do
you want to dequeue a message in random message waiting queues	Go to Step 7 .
you want to dequeue a message in a range of message waiting queues	Go to Step 8 .
you want to dequeue a message in all message waiting queues	Go to Step 9 .

7 Perform the following step to dequeue random multiple message waiting queues.

Enter:

DEQUE RANDOM + the DNS of the message waiting queue you want to dequeue

Note: You can enter multiple DNS.

Nodal example (requestor DN is a line):

DEQUE NODAL L 10348111 RANDOM 7502531 7502532 7502537

Network example:

DEQUE NETWORK 10348111 RANDOM 7502531 7502532 7502537

- 8 Perform the following step to dequeue a range of multiple message waiting queues.

- a. Enter:

DEQUE RANGE

- b. The CI responds:

Enter: <START DN>

- c. Enter the first DN in the range. For example:

6321201

- d. The CI responds:

Enter: <STOP DN>

- e. Enter the second DN in the range. For example:

6321209

Nodal example (requestor DN is a line):

DEQUE NODAL L 10348111 RANGE 6321201 6321209

Network example:

DEQUE NETWORK 10348111 RANGE 6321201 6321209

- f. The CI responds:

START DN:

NPA: 103 OFC: 632 STN: 1201

STOP DN:

NPA: 103 OFC: 632 STN: 1209

*All the DNs, within the above Range will be operated upon
DO YOU AGREE ?*

Please confirm ("YES", "Y", "NO", or "N"):

Enter:

Y or YES

if the range is correct.

Or enter:

N or No

if the range is incorrect.

- 9 Perform the following step to dequeue all message waiting queues.

- a. Enter:

DEQUE ALL

Nodal example (requestor DN is a line):

DEQUE NODAL 10348111 L ALL

Network example:

DEQUE NETWORK 10348111 ALL

- b. The CI responds:

This command will remove the Requestor from each Requestee's queue.

ARE YOU SURE ?

Please confirm ("YES", "Y", "NO", or "N")

Enter:

Y or YES

if you want to dequeue all.

Or enter:

N or No

if you do not want to dequeue all.

- 10** To return to CI environment from MWRESET directory, enter:

QUIT

—End—

DEQUE error messages - Several DEQUE error messages that the CI prints if an invalid entry is made are similar to those that appear when using the RESET command (see "[RESET error messages](#)" (page 827)). In addition, "[DEQUE error messages](#)" (page 831) shows the error messages that are unique to DEQUE.

DEQUE error messages

REQUESTOR DN is not a Line.	
Meaning	The requestor DN entered after specifying the DEQUE command to operate on a NODAL requestor of LINE type is not a line.
Action	Enter a valid line DN.
REQUESTOR DN is not a Message Desk.	
Meaning	The requestor DN entered after specifying the DEQUE command to operate on a NODAL requestor of SMDI message DESK type is not an SMDI message Desk DN (that is, a UCD or Hunt Group with the SMDI option).

Action	Enter a valid SMDI Message Desk DN (that is, a UCD or Hunt Group with SMDI option).
The ACD Group does not have ECM Customer Group option.	
Meaning	The requestor DN entered after specifying the DEQUE command to operate on a NODAL requestor of ICM type is an ACD Group DN, but it does not has ECM customer group option in CUSTNTWK table.
Action	Enter a valid ICM ACD Group DN (that is, an ACD Group DN with ECM customer group option in CUSTNTWK table).
The line does not have ECM option.	
Meaning	The requestor DN entered after specifying the DEQUE command to operate on a NODAL requestor of ICM type does not have ECM line option assigned to it.
Action	Enter a valid ICM agent DN (that is, a DN with ECM line option assigned to it).
REQUESTOR DN is not a line or ACD Group DN.	
Meaning	The requestor DN after specifying the DEQUE command to operate on a NODAL requestor of ICM agent type is not an line with ECM line option or an ACD Group with ECM customer group option.
Action	Enter a line with ECM line option or an ACD Group with ECM customer group option.
Invalid Customer Group parameter.	
Meaning	The customer group entered after specifying the DEQUE command to operate on a NODAL requestor of a console group type is not a valid customer group.
Action	Enter a valid customer group.
Invalid sub group parameter.	
Meaning	The sub group of a customer group entered after specifying the DEQUE command to operate on a NODAL requestor of a console group type is not a valid sub group.
Action	Enter a valid subgroup of the previously entered customer group.
Consoles not supported by Customer Group.	
Meaning	The console group (customer group and sub group) entered after specifying the DEQUE command to operate on a NODAL requestor of a console group type does not have a console.
Action	Enter a console group (customer group and its sub group) that has got consoles.
PRI MSR DN has a non-numeric digit.	
Meaning	The PRI MSR DN entered after specifying the DEQUE command to operate on a NODAL requestor of a PRI MSR DN contains a non numeric character.
Action	Enter a valid PRI MSR DN.
Invalid PRI MSR DN.	
Meaning	The PRI MSR DN entered after specifying the DEQUE command to operate on a NODAL requestor of a PRI MSR DN type is not a PRI MSR DN.
Action	Enter a valid PRI MSR DN.
The Network Requestor DN can have a maximum of 10 digits.	

Meaning	The Network DN entered after specifying the DEQUE command to operate on a Network type of requestor contains more than 10 digits.
Action	Enter a Network Requestor DN with maximum 10 digits.
Invalid Network Requestor DN.	
Meaning	The Network DN entered after specifying the DEQUE command to operate on a Network type of requestor contains an invalid character.
Action	Enter a Network Requestor DN that only consists of digits.

Using SANITY

Follow the steps in "Use the SANITY sub command" (page 833) to perform SANITY checks on the message waiting queues of multiple requestee DNs.

Use the SANITY sub command

Step	Action

From the MAP CI:

1 Enter:

MWRESET

The MSRESET directory opens.

2 Enter:

SANITY

The CI prompts you to enter one of RANDOM, RANGE, or ALL.

If	Do
you want to perform a sanity check on random message waiting queues	Go to Step 3 .
you want to perform a sanity check on a message in a range of message waiting queues	Go to Step 4 .
you want to perform a sanity check on a message in all message waiting queues	Go to Step 5 .

3 Use the following step to perform a sanity check on random multiple message waiting queues.

Enter:

SANITY RANDOM + the DN of the message waiting queue you want to check

Note: You can enter multiple DNs.

Example:

SANITY RANDOM 7502531 7502532 7502539 7502537

- 4** Perform the following step to perform a sanity check on a range of multiple message waiting queues.

- a. Enter:

SANITY RANGE

- b. The CI responds:

Enter: <START DN>

- c. Enter the first DN in the range. For example:

6321201

- d. The CI responds:

Enter: <STOP DN>

- e. Enter the second DN in the range. For example:

6321209

Example:

SANITY RANGE 6321201 6321209

- f. The CI responds:

START DN:

NPA: 103 OFC: 632 STN: 1201

STOP DN:

NPA: 103 OFC: 632 STN: 1209

*All the DNs, within the above Range will be operated upon
DO YOU AGREE ?*

Please confirm ("YES", "Y", "NO", or "N"):

Enter:

Y or YES

if the range is correct.

Or enter:

N or No

if the range is incorrect.

- 5** Perform the following step to perform a sanity check on all message waiting queues.

- a. Enter:

SANITY ALL

- b. The CI responds:

This command will perform a sanity check on each message waiting request in the office.

ARE YOU SURE ?

Please confirm ("YES", "Y", "NO", or "N")

Enter:

Y or YES

if you want to perform a sanity check on all.

Or enter:

N or No

if you do not want to perform a sanity check on all.

- 6** To return to CI environment from MWRESET directory, enter:

QUIT

—End—

SANITY error messages - SANITY error messages that the CI prints if an invalid entry is made are similar to those that appear when using the RESET command (see ["RESET error messages" \(page 827\)](#)).

Using HELP

Follow the steps in ["Access the CI MWRESET Help" \(page 835\)](#) to access help when using the MWRESET commands.

Access the CI MWRESET Help

Step	Action

From the MAP CI:

- 1** Enter:

MWRESET

The MSRESET directory opens.

- 2** Enter:

HELP

The CI displays a brief description of all the MWRESET commands.

—End—

Billing

Large Scale Message Waiting Indication Reset does not affect billing.

A59037865 - Local Ten-Digit Display

Description

Introduced in MSL17, the Local Ten-Digit Display feature allows a called party's display phone to display the area code (three-digit number) along with the DN (seven-digit number) of the calling party when:

- the call is a non-intragroup call from a Primary Rate Interface (PRI) or Signaling System #7 (SS7) trunk
- both calling and called parties are in the same Serving Numbering Plan Area (SNPA)
- both calling and called parties are using Calling Line Identification (CLID)

This feature removes the current restriction that only the DN (seven-digit number) of the calling party is displayed on the called party's phone where:

- the call is a non-intragroup incoming call from a PRI or SS7 trunk
- both the called and calling parties are in the same local area code

Functionality

The activation of this feature is controlled by the Software Optionality Control (SOC) utility. This utility controls the secure activation or use of options in a Product Computing Module Load (PCL). Features (which comprise the option in the PCL) register their SOC information (feature name, state of usage support procedures) with the SOC utility at initial program load (IPL). When a user requests an option state change, the SOC utility activates or deactivates the optional software. The new SOC ID is MSL00132. The SOC name is "10 Digit Local Disp".

Note: When SOC MSL00132 is enabled, ten digits are displayed. When SOC MSL00132 is not enabled, seven digits are displayed. This feature allows users to display seven or ten digits on a switch-wide basis. This feature does not, however, allow some customer groups to display seven digits, while others display ten digits on the same switch.

"[Software Optionality Control](#)" (page 836) provides Software Optionality information for the Local Ten-Digit Display feature.

Software Optionality Control

Field	Description
SOC option name:	FTRLCL10
SOC option title:	10 Digit Local Disp

Field	Description
SOC option control type:	STATE
New SOC option?	YES
SOC option order code	MSL00132
Option defined in DRU:	MSL
Affected products:	MSL17

For more information on the SOC interface and how to activate a feature, refer to the *Software Optionality Control User Manual*.

Hardware requirements

Local Ten-Digit Display has no new hardware requirements.

Limitations and restrictions

Local Ten-Digit Display applies only to PRI and SS7 non intragroup calls.

Interactions

Automatic Recall

If a customer group is datafilled with Automatic Recall (AR) translations in Table DNREVLXA, the set displays Reverse translations which override the Local Ten-Digit Display feature.

Data schema

Local Ten-Digit Display does not affect data schema tables.

Office Parameters

Local Ten-Digit Display does not affect office parameters.

Service Orders

Local Ten-Digit Display does not affect SERVORD.

Operational Measurements

Local Ten-Digit Display does not affect Operational Measurements.

Logs

Local Ten-Digit Display does not affect logs.

User interface

Local Ten-Digit Display does not change the user interface.

Billing

Local Ten-Digit Display does not affect billing.

Pxxxx/Sxxxx features

PAF00037210 - Echo Cancellation on PRI and PTS Trunks

Description

Before the introduction of this feature, the Meridian SL-100 did not support the echo cancellation function for Primary Rate Interface (PRI) and Per Trunk Signaling (PTS) trunking on the Spectrum Peripheral Module. The Echo Cancellation on PRI and PTS Trunks feature provides the Spectrum Peripheral Module with the ability to provide Echo Cancellers for NTNA, NI-2 and PTS trunks for the Meridian SL-100. The following trunk types are supported:


- **PRI** - NTNA, NI2, U459, IBNT2
- **PTS** - ATC, IT, SC, OP, IBNT2, IBNT0, IBNTI, CELL, ES

This feature uses the Spectrum Peripheral Module ECAN algorithm on the Computing Module/Control Signaling (CM/CS) to take advantage of EC bit setting and automatic ECAN allocation on the Spectrum Peripheral Module for PRI and PTS trunks.

Echo Cancellation on PRI and PTS Trunks uses option SPMECIDX in Table TRKSGRP to index to Table SPMECAN for the ECAN resource parameters. Technicians provision ECAN on PRI and PTS trunks on a per-trunk-group basis. This feature is also responsible for allocating/deallocating PRI and PTS Spectrum Peripheral Module Echo Cancellers on a per-call basis, which is done using the SPMECAN autoallocation/deallocation as provisioned above. Technicians manage the Echo Celler through the use of EC bit settings.

["Echo Cancellation on PRI and PTS Trunks functional behavior" \(page 840\)](#) shows how this feature operates in a Meridian SL-100 network configuration.

Echo Cancellation on PRI and PTS Trunks functional behavior

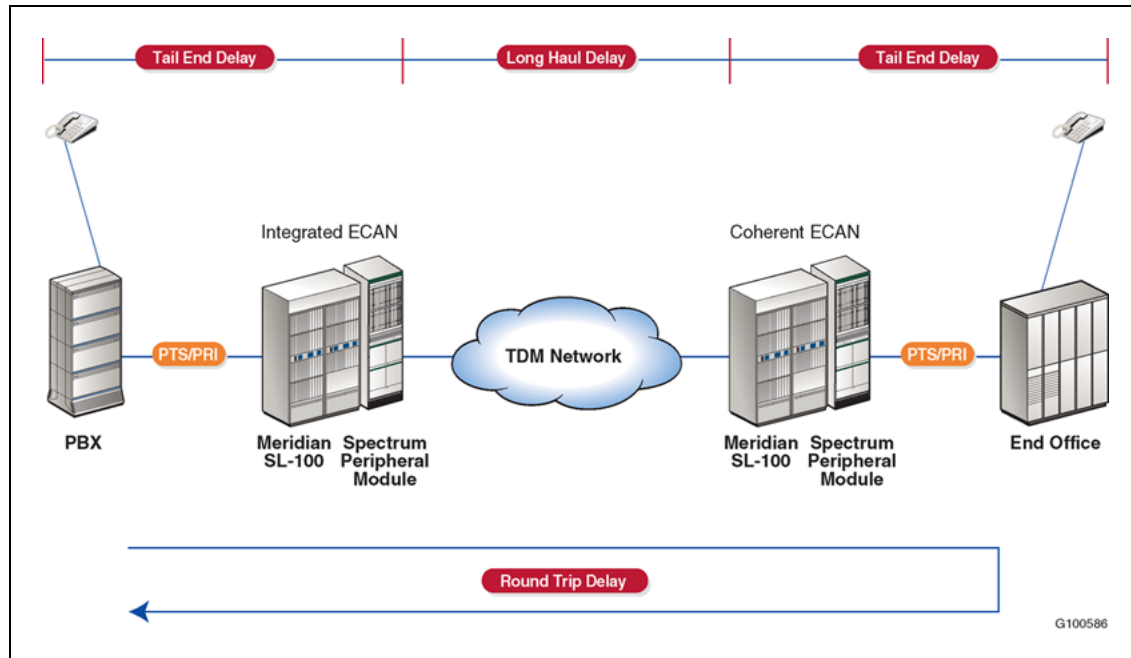

Hardware requirements

Echo Cancellation on PRI and PTS Trunks has no new hardware requirements. The feature works with any of the following internal Spectrum Peripheral Module Echo Cancellers:

- NTLX86AA Coherent ECAN card

Limitations and restrictions

Echo Cancellation on PRI and PTS Trunks has the following limitations or restrictions:

- This feature supports Meridian SL-100 PRI and PTS trunks. It allows the SPMECIDX option to be provisioned on any Spectrum Peripheral Module PRI or PTS trunk, but the call control only works on the Meridian SL-100.
- On a PTS to Meridian SL-100 PRI call, there is PRI code executed after the PRI terminator sends the Scp_X message back to the switch. As such, there is no way for PRI to parse and/or propagate the EC bits. The Meridian SL-100 PRI terminator will auto-allocate a backward echo cancellation in this call scenario.
- This feature does not support echo cancellation deallocation under any circumstances while the call is still active. Once the system drops a call leg, however, any echo cancellations allocated to that PRI leg will be deallocated. The echo canceller can be disabled during the call with support of G.164 and G.165 Tone Disabling.

- The system does not generate a "BSY/RTS ALL B-CHANNELS" message when a technician removes the SPMECIDX option from Table TRKSGRP. Although the message is not displayed, the technician must busy or return-to-service all B-channels after removing the SPMECIDX option from Table TRKSGRP.
- This feature supports only single echo cancellation allocation per PTS/PRI trunk. The originating PTS/PRI trunk allocates a forward echo cancellation and the terminating PTS/PRI trunks allocates a backward echo cancellation. Back-to-back echo cancellation allocation is not supported.

Echo cancellation allocation

Echo Cancellation on PRI and PTS Trunks introduces echo control bit setting on PTS/PRI trunks, along with automatic echo cancellation allocation on PTS and PRI trunks. This enables the Spectrum Peripheral Module to allocate echo cancellations based on EC bit settings in the ScpcTerminate, ScpcProgress and ScpcAlerting messages and to auto-allocate echo cancellations for the ScpxOriginate, ScpxProgress and ScpxAlerting messages.

The PTS/PRI EC bits are only present in the internal messages on the switch (that is, ScpC and ScpX messages). There are no EC bits defined for PTS/PRI messaging outside of the switch (for example, Q.931 messages). The PTS/PRI EC Bit subfeature is only used to control echo cancellation within a single switch. This means that the echo cancellation is not passed from switch to switch in PRI Q.931 messaging.

Note: For data and wideband calls, the ECAN algorithm prevents allocation, since echo cancellations are not required in these cases. This functionality is accomplished by verifying the bearer capability of the call and not allocating echo cancellation if the call is not a voice call.

On PRI originations - The Spectrum Peripheral Module attempts to allocate a forward echo cancellation if the following conditions are met:

- SPMECIDX is datafilled in Table TRKSGRP for the originating PRI trunk.
- The index value for SPMECIDX references a tuple in Table SPMECAN in which the value for field FAREC is N and the Spectrum Peripheral Module bearer capability indicates a voice call.
- The Spectrum Peripheral Module receives a Q.931 Setup message in which the EC bit is clear.

If the forward echo cancellation was successfully allocated, the EC bit is set in the incoming (to the switch) ScpxOriginate message. The EC bit also propagates to the CCB for use by outgoing ScpcTerminate, ISUP_IAM and PTS and messages. In the case of an echo cancellation allocation failure, the EC bit will be clear.

On PRI terminations - The Spectrum Peripheral Module attempts to allocate a forward echo cancellation if the following conditions are met:

- SPMECIDX is datafilled in Table TRKSGRP for the terminating PRI trunk.
- The index value for SPMECIDX references a tuple in Table SPMECAN in which the value for field FAREC is N and the switch bearer capability indicates a voice call.
- The Spectrum Peripheral Module receives an ScpcTerminate message in which the EC bit is clear.

If the echo cancellation was attempted on the basis of receiving an ScpcTerminate message with the EC bit clear, no further action is required for the reason that the ScpcTerminate message is a precursor to the outgoing Q.931 Setup message which does not contain echo cancellation information.

On PRI terminations - The Spectrum Peripheral Module allocates a backward echo cancellation if the following conditions are met:

- SPMECIDX is datafilled in Table TRKSGRP for the terminating PRI trunk.
- The index value for SPMECIDX references a tuple in Table SPMECAN in which the value for field FAREC is N and the Spectrum Peripheral Module bearer capability indicates a voice call.
- The Spectrum Peripheral Module receives a Q.931 Progress or Q.931 Alerting message in which the EC bit is clear.

If the backward echo cancellation was successfully allocated, the EC bit will be set in the incoming (to the switch) ScpxProgress or ScpxAlerting message. The EC bit will be either be propagated to the CCB for use by PTS messages or mapped directly to the outgoing ScpcProgress, ScpcAlerting or ISUP_IAM message. In the case of an echo cancellation allocation failure, the EC bit will be clear.

On PRI originations - The Spectrum Peripheral Module attempts to allocate a backward echo cancellation if the following conditions are met:

- SPMECIDX is datafilled in Table TRKSGRP for the outgoing PRI trunk.
- The index value for SPMECIDX reference a tuple in Table SPMECAN in which the value for field FAREC is N and the switch bearer capability indicates a voice call.
- The Spectrum Peripheral Module receives a ScpcProgress or ScpcAlerting message in which the EC bit is clear.

If the echo cancellation was attempted on the basis of receiving an ScpcProgress or ScpcAlerting message with the EC bit clear, no further action is required for the reason that the ScpcProgress and ScpAlerting messages are precursors to the outgoing Q.931 Progress and Q.931 Alerting messages, respectively.

Note: Q.931 messages do not contain echo cancellation information.

Interactions

All Meridian SL-100 PTS and PRI features work with the Echo Cancellation on PRI and PTS Trunks feature, except for the following features:

- Release Line Trunk (RLT)
- Two B-channel Transfer (TBCT)

Datafill

This section describes the following items:

- The tables impacted by this feature.
- How to provision ECAN hardware (that is, the Voice Services Processor)
- How to program ECAN control attributes.
- A configuration example.

Table changes

The Echo Cancellation on PRI and PTS Trunks feature uses the existing SPMECIDX option in Table TRKSGRP. Refer to the *Meridian SL-100/Communication Server 2100 Commercial Systems Data Schema Reference Manual* for further information.

"[New or modified tables](#)" (page 843) shows the impacted table.

New or modified tables

Table Name	New, Changed or Deleted	Table Control (New/Old/Unchanged)
None - the SPMECIDX option already exists in Table TRKSGRP.	N/A	Unchanged

Voice Services Processor provisioning

The Spectrum Peripheral Module offers integrated echo cancellation on the Voice Services Processor resource Module. Spectrum Peripheral Module echo cancellers are half echo cancellers cancelling echo in one direction. These echo cancellers are not statically assigned to a trunk, but instead are dynamically allocated, and activated, on a per-call basis.

You provision echo cancellers as resources on NTLX86AA Voice Services Processor resource Modules using Table MNCKTRAK. Refer to the *Meridian SL-100/Communication Server 2100 Commercial Systems Data Schema Reference Manual* for further information.

ECAN attribute provisioning

The Spectrum Peripheral Module echo canceller application offers a number of control parameters that are stored in Table SPMECAN. Supported trunk agencies have an index into this table, thus selecting the control parameters desired.

"Table SPMECAN fields" (page 844) shows the Spectrum Peripheral Module control parameters, along with the recommended default values. For a detailed description of each of these parameters, see the *Communication Server 2100 Commercial Systems Data Schema Reference Manual* (555-4031-851).

Table SPMECAN fields

Field	Description	Value	Default
ECINDEX	SPMECAN table key	{0 TO 255}	Not applicable
TONDS	Tone Disabler enable/disable	{Y, N}	Y
TONMG	Tone Disabler disable/reenable event messages enable/disable	{Y, N}	Y
TONDMOD	Tone Disabler G.164/165 mode select	{G164, G165}	G165
S56KB	Tone Disabler switched 56 kbps mode enable/disable	{Y, N}	N
AUTOON	Tone Disabler Auto on	{Y, N}	Y
NLP	Center Clipper enable/disable	{Y, N}	Y
NSMAT	Noise Matching enable/disable	{Y, N}	Y
SOS	SOS messages enable/disable when ECAN can not achieve spec	{Y, N}	Y
TDINC	Auto increment of maximum tail delay when convergence cannot be achieved enable/disable	{Y, N}	Y
MDLA	Maximum tail delay	{16MS, 32MS, 48MS, 64MS, 80MS, 96MS, 112MS, 128MS}	32MS
MERL	Minimum ERL setting as initial assumption	{0DB, 3DB, 6DB}	6DB
ACOM	Expected limit of combined loss	{20DB to 70DB}	33DB
FAREC	Far-end ECAN equipped	{Y, N}	N
BK2BK	Back-to-Back ECANs required	{Y, N}	Y

Field	Description	Value	Default
EC_BYTE_1	Control Byte 1	{00 - FF}	00
EC_BYTE_2	Control Byte 2	{00 - FF}	00
EC_BYTE_3	Control Byte 3	{00 - FF}	00
EC_BYTE_4	Control Byte 4	{00 - FF}	00

The BK2BK, EC_BYTE_1, EC_BYTE_2, EC_BYTE_3, and EC_BYTE_4 fields do not apply to the Meridian SL-100. They have no impact on ECAN allocation and behavior on the Meridian SL-100. Nortel Networks recommends that the BK2BK field value be set to "N" and the EC_BYTE_1 through EC_BYTE_4 fields be set to "0".

All Meridian SL-100 fields, except FAREC correspond to Spectrum Peripheral Module control parameters. The FAREC field is used to signify that the far-end of a trunk is equipped with an echo canceller, when the existences of such an echo canceller cannot be determined based on the Forward/backward protocol messages.

Configuration example

Follows the steps in ["Configure Echo Cancellation on PRI and PTS trunks"](#) (page 845) to configure Echo Cancellation on PRI and PTS Trunks.

Configure Echo Cancellation on PRI and PTS trunks

Step	Action

From the MAP

- 1 Make sure that Table SPMECAN has the ECINDEX option datafilled as follows:

```
>table spmecan
>list all
TOP
ECINDEX TONDS TONMG TONEDMOD S56KB AUTON NLP NSMAT
SOS TDINC MDLA MERL ACOM
FAREC BK2BK S2COMPAT EC_BYTE_1 EC_BYTE_2 EC_BYTE_3
EC_BYTE_4
-----
-----
1 Y Y G165 N Y N Y Y N 64MS 6DB 33DB N N S2C_NONE 00
00 00 00
2 Y Y G164 N Y Y Y Y Y 64MS 6DB 33DB Y N S2C_NONE 00
00 00 00
```

```
10 Y Y G164 N Y Y Y Y Y 64MS 6DB 33DB Y N S2C_NONE 00
00 00 00 BOTTOM
```

2 Access Table TRKSGRP to configure the SPMECIDX option as follows:

```
>pos SPMPRI1 0
SPMPRI1 0 DS1SIG ISDN 20 20 87Q931 2 N STAND NETWORK
PT_PT USER
N UNEQ 255 N
DEFAULT SPM 0 96 24 64K HDLC $ $
>cha
JOURNAL FILE UNAVAILABLE - DMOS NOT ALLOWED
ENTER Y TO CONTINUE PROCESSING OR N TO QUIT
>Y
CARDCODE: DS1SIG
.
.
.
>
ECSTAT: UNEQ
> OPTION:
>spmecidx
EC_IDX:
>1
OPTION:
>$
TUPLE TO BE CHANGED:
SPMPRI1 0 DS1SIG ISDN 20 20 87Q931 2 N STAND
NETWORK PT_PT USER N UNEQ 255 N
DEFAULT SPM 0 96 24 64K HDLC $ (SPMECIDX 1) $
ENTER Y TO CONFIRM, N TO REJECT OR E TO EDIT.
>Y
```

BSY and RTS all trunk members in this sub-group for SPMECIDX changes to take effect.

```
TUPLE CHANGED
JOURNAL FILE INACTIVE
```

The following is a sample of the expected result:

```
SPMPRI1 0 DS1SIG ISDN 20 20 87Q931 2 N STAND NETWORK
PT_PT USER N UNEQ 255 N DEFAULT SPM 0 96 24 64K HDLC $
(SPMECIDX 1) $
```

Echo Cancellation is provisioned on Spectrum Peripheral Module PRI/PTS trunks.

—End—

Service Orders

Echo Cancellation on PRI and PTS Trunks does not affect SERVORD.

Operational Measurements

Echo Cancellation on PRI and PTS Trunks does not affect Operational Measurements.

Logs

Echo Cancellation on PRI and PTS Trunks does not does not affect logs.

User interface

Echo Cancellation on PRI and PTS Trunks does not change the user interface.

Billing

Echo Cancellation on PRI and PTS Trunks does not affect billing.

S60352150 - Buzz Tone Duration**Description**

The Buzz Done Duration feature provides an administrator with the flexibility to configure buzz tones with varying durations. Prior to this MSL17 feature, buzz tones, used for things such as incoming calls to a telephone's secondary DN or for repeated alerts, had a set duration of two seconds.

Switch administrators can now select between the following four buzz tone durations that users hear during an active call:

- 500 milliseconds
- 750 milliseconds
- one second
- two seconds

Feature operation

Switch administrators use the Software Optionality Control (SOC) utility to activate the Buzz Tone Duration feature. The SOC utility controls the activation, or use of options, in a Product Computing Module Load (PCL). During initial program load (IPL), the features, which comprise the option in the PCL, register their SOC information with the SOC utility. This information includes the feature name and the state of usage support procedures.

When the SOC Right to Use (RTU) is set to yes and the SOC status is "ON", the administrator can select one of the four buzz tone durations. To select a Buzz tone duration, the administrator uses the Command Interface (CI) command "SETBUZZ".

"SOC summary" (page 848) shows how this feature impacts Software Optionality Control.

SOC summary

Item	Description
SOC option name	NMSLBUZZ
SOC option title	Buzz Tone Length
SOC option control type	STATE
New SOC option?	YES
SOC option order code	MSL00133
Option defined in DRU	MSL
Affected products	MSL17

For more information about how to use the CI to configure the Buzz Tone Duration, see "User interface" (page 849).

Hardware requirements

The Buzz Tone Duration feature has no hardware requirements.

Operating parameters

The following operating parameters apply to the Buzz Tone Duration feature:

- This feature only applies to Integrated Voice and Data (IVD) sets. The IVD sets that are impacted by this feature are the M2009, M2112, M2018, M3000, M2317, M2008, M2616, M2016S, M2216A, M2216B, M2616CT, M3903, M3904 and M3905.
- The new SOC is implemented switch-wide, as opposed to by customer group.
- Prior to the upgrade to MSL17, sites requesting this functionality require an XPM patch to implement the correct buzz tone durations. Between the time that these sites install XPM17 and MSL17, this patch must be in effect. After the upgrade to MSL17 software, the Buzz Tone Duration feature implements the necessary functions to accommodate all sites.
- Once implemented, future upgrades that include MSL17 or later default to a Buzz Tone Duration of 500 milliseconds for an active SOC or two seconds for an inactive SOC.

Interactions

Buzz Done Duration does not interact with other functionalities.

Datafill

Buzz Done Duration does not affect office parameters or data schema tables.

Service Orders

The Buzz Tone Duration feature does not affect SERVORD.

Operational Measurements

Buzz Done Duration does not affect Operational Measurements.

Logs

Buzz Done Duration does not affect logs.

User interface

The Buzz Tone Duration feature introduces the new CI command "SETBUZZ" that creates a new resident directory: BUZZTONEDIR.

Directory: BUZZTONEDIR/SETBUZZ

Follow the steps in "[Configure the buzz tone duration](#)" (page 849) to enter and exit the BUZZTONEDIR directory, and change the buzz tone duration.

Configure the buzz tone duration**Step Action**

- 1 At the CI: prompt enter:

```
CI:> SETBUZZ
```

The BUZZTONE prompt appears.

- 2 To modify the buzz tone duration, at the BUZZTONE prompt enter:

```
BUZZTONE:>duration xxxx
```

where: XXXX = 500ms; 750ms; 1sec; 2sec. The duration parameter is mandatory; you must enter one of these character strings.

Note: You cannot use the DURATION command, unless you turn on SOC ID MSL00133. If you do not turn on SOC ID MSL00133, the following message appears:

Access denied: you do not have authority to use this command. SOC ID MSL00133 must be activated to gain access to this command."

After you have SOC ID MSL00133 activated and enter a correct response to the Duration command, the following message appears (for example, you enter duration 500ms):

"The Buzz Tone duration has been set to 500 ms."

This applies to all of the other valid durations as follows:

"The Buzz Tone duration has been set to 750 ms."

"The Buzz Tone duration has been set to 1 second."

"The Buzz Tone duration has been set to 2 seconds."

Note: If you have SOC ID MSL00133 activated, but do not enter one of the four correct responses to the duration prompt, the CI shows the following message:

"Invalid Option, please choose:

500ms, 750ms, 1sec or 2sec"

- 3** To return to the CI environment, at the BUZZTONE prompt enter:

BUZZTONE:>quit

or

BUZZTONE:> LEAVE

—End—

Follow the steps in ["Query the BUZZTONE command" \(page 850\)](#) to query the CI command at the Command level and the Subcommand level:

Query the BUZZTONE command

Step	Action
1	At the CI: prompt enter: Q SETBUZZ The following message appears: <i>"CI BUZZ TONE Command - subcommands are: DURATION <duration> QUIT or LEAVE"</i>
2	At the BUZZTONE prompt enter: Q DURATION The following message appears: <i>"Command to set Buzz Tone duration Duration: 500ms 750ms 1sec 2sec"</i>

—End—

Billing

The Buzz Tone Duration feature does not affect billing.

S10479659 - Meridian SL-100 Calling Number Delivery for Public Network**Description**

The Meridian SL-100 Calling Number Delivery for Public Network feature controls the Calling Number Delivery (CND) functionality on MSL loads using public network calls that have a maximum of nine digits.

Functionality

The Software Optionality Control (SOC) utility controls the use of this feature as follows:

- When the STATE of SOC #MSL00137 is set to "ON", CND displays the calling party's Directory Number (DN) on incoming calls from DN's that have a maximum of nine digits on public network calls.
- When the STATE of SOC #MSL00137 is set to "IDLE", CND displays "UNKNOWN NUMBER" on incoming calls from DN's that have a maximum of nine digits on public network calls.

For more information about the SOC interface and how to activate a feature, refer to the *Software Optionality Control User Manual*.

Hardware requirements

Meridian SL-100 Calling Number Delivery for Public Network has no new hardware requirements.

Limitations and restrictions

MSL Calling Number Delivery for Public Network only affects public network calls. For information about CND functionality on private calls that have a maximum of nine digits, refer to office parameter CND_PRIV_LESS_THAN_10_DIGITS in the *DMS-100 Family NA100 Office Parameters Reference Manual*.

This feature is only applicable to Custom Local Area Signaling Service (CLASS) sets with displays.

Interactions

Meridian SL-100 Calling Number Delivery for Public Network does not interact with other functionalities.

Data schema

Meridian SL-100 Calling Number Delivery for Public Network does not affect data schema tables.

Office Parameters

Meridian SL-100 Calling Number Delivery for Public Network does not affect office parameters.

Service Orders

Meridian SL-100 Calling Number Delivery for Public Network does not affect SERVORD.

Operational Measurements

Meridian SL-100 Calling Number Delivery for Public Network does not affect Operational Measurements.

Logs

Meridian SL-100 Calling Number Delivery for Public Network does not affect logs.

User interface

Meridian SL-100 Calling Number Delivery for Public Network does not change the user interface.

Billing

Meridian SL-100 Calling Number Delivery for Public Network does not affect billing.

Communication Server 2100

Commercial Systems Feature Description Manual

Copyright © 2006, Nortel Networks
All Rights Reserved.

Publication: 555-4031-801
Document status: Standard
Document version: 17.02
Document date: 20 October 2006

To provide feedback or report a problem in this document, go to www.nortel.com/documentfeedback.

The information in this document is sourced in Canada, the United States of America, and the United Kingdom.

The information contained herein is the property of Nortel Networks and is strictly confidential. Except as expressly authorized in writing by Nortel Networks, the holder shall keep all information contained herein confidential, shall disclose it only to its employees with a need to know, and shall protect it, in whole or in part, from disclosure and dissemination to third parties with the same degree of care it uses to protect its own confidential information, but with no less than reasonable care. Except as expressly authorized in writing by Nortel Networks, the holder is granted no rights to use the information contained herein.

This is the Way, This is Nortel, Nortel, the Nortel logo, the globemark design, and the NORTEL NETWORKS corporate logo, are trademarks of Nortel Networks. All other trademarks are the property of their respective owners. All rights reserved.

