



# **MERLIN MAGIX<sup>TM</sup> Integrated System**

System Planning  
Release 2.1 and Earlier

555-721-112  
Issue 1  
November 2001

## Notice

Every effort has been made to ensure that the information in this guide is complete and accurate at the time of printing. Information, however, is subject to change. See Appendix A, "Customer Support Information," in *Feature Reference* for important information.

## Avaya Web Page

The world wide web home page for Avaya is <http://www.avaya.com>.

## Heritage Statement

Intellectual property related to this product (including trademarks) and registered to Lucent Technologies Inc. has been transferred or licensed to Avaya. Any reference within the text to Lucent Technologies Inc. or Lucent should be interpreted as reference to Avaya. The exception is cross references to books published prior to April 1, 2001, which may retain their original Lucent titles. Avaya, formed as a result of Lucent's planned restructuring, designs, builds, and delivers voice, converged voice and data, customer-relationship management, messaging, multiservice networking, and structured cabling products and services. Avaya Labs is the research and development arm for the company.

## Preventing Toll Fraud

Toll Fraud is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or working on your company's behalf). Be aware that there is a risk of toll fraud associated with your system and that, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

## Avaya Fraud Intervention

If you suspect that you are being victimized by toll fraud and you need technical assistance or support, call the Avaya Customer Care Center at **1 800 628-2888**.

## Providing Telecommunications Security

Telecommunications security of voice, data, and/or video communications is the prevention of any type of intrusion to, that is, either unauthorized or malicious access to or use of, your company's telecommunications equipment by some party.

Your company's "telecommunications equipment" includes both this Avaya product and any other voice/data/video equipment that could be accessed via this Avaya product (that is, "networked equipment").

An "outside party" is anyone who is not a corporate employee, agent, subcontractor, or working on your company's behalf. Whereas, a "malicious party" is anyone, including someone who may be otherwise authorized, who accesses your telecommunications equipment with either malicious or mischievous intent.

Such intrusions may be either to/through synchronous (time multiplexed and/or circuit-based) or asynchronous (character-, message-, or packet-based) equipment or interfaces for reasons of:

- Utilization (of capabilities special to the accessed equipment)
- Theft (such as, of intellectual property, financial assets, or toll-facility access)
- Eavesdropping (privacy invasions to humans)
- Mischief (troubling, but apparently innocuous, tampering)
- Harm (such as harmful tampering, data loss or alteration, regardless of motive or intent).

Be aware that there may be a risk of unauthorized or malicious intrusions associated with your system and/or its networked equipment. Also realize that, if such an intrusion should occur, it could result in a variety of losses to your company, including, but not limited to, human/data privacy, intellectual property, material assets, financial resources, labor costs, and/or legal costs.

### **Your Responsibility for Your Company's Telecommunications Security**

The final responsibility for securing both this system and its networked equipment rests with you - an Avaya customer's system administrator, your telecommunications peers, and your managers. Base the fulfillment of your responsibility on acquired knowledge and resources from a variety of sources, including, but not limited to:

- Installation documents
- System administration documents
- Security documents
- Hardware-/software-based security tools
- Shared information between you and your peers
- Telecommunications security experts

To prevent intrusions to your telecommunications equipment, you and your peers should carefully program and configure your:

- Avaya provided telecommunications system and their interfaces
- Avaya provided software applications, as well as their underlying hardware/software platforms and interfaces
- Any other equipment networked to your Avaya products

### **Federal Communications Commission Statement**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at their own expense. For further FCC information, see Appendix A, "Customer Support Information," in *Feature Reference*.

### **Canadian Department of Communications (DOC) Interference Information**

This digital apparatus does not exceed the Class A limits for radio noise emissions set out in the radio interference regulations of the Canadian Department of Communications.

Le Présent Appareil Numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

---

## Trademarks

5ESS, AUDIX, CONVERSANT, CentreVu, DEFINITY, Magic On Hold, MERLIN, MERLIN LEGEND, MERLIN Mail, PARTNER, PassageWay, MLX-10, MLX-20L, MLX-28D, MLS-6, MLS-12, MLS-12D, MLS-18D, MLS-34D, SYSTIMAX, TransTalk, and Voice Power are registered trademarks and 4ESS, Intuity, MERLIN MAGIX, and ProLogix are trademarks of Avaya Inc. in the U.S. and other countries.

Acculink, ACCUNET, MEGACOM, MulitiQuest, MLX-5, MLX-5D, MLX-16DP, MLX-10D, MLX-10DP, and NetPROTECT are registered trademarks of AT&T.

Microsoft, Windows, Windows NT, and MS-DOS are registered trademarks of Microsoft Corporation.

ProComm and ProComm Plus are registered trademarks of DataStorm Technologies, Inc.

Supra, Supra NC, StarSet, and Mirage are registered trademarks of Plantronics, Inc.

UNIX is a registered trademark of UNIX System Laboratories, Inc.

PagePac is a registered trademark and Powermate and Zonemate are trademarks of DRACON, a division of Harris Corporation.

Okidata is a registered trademark of Okidata Corporation.

Pipeline is a trademark of Ascend Communications, Inc.

Intel and Pentium are registered trademarks of Intel Corporation.

Apple and Macintosh are registered trademarks of Apple Computer, Inc.

IBM is a registered trademark of International Business Machines, Inc.

Novell and NetWare are registered trademarks of Novell Corporation.

CLASS is a servicemark of Bellcore.

## Ordering Information

**Call:** Avaya Publications Center  
Voice 1 800 457-1235                      International Voice 317 322-6791  
Fax 1 800 457-1764                        International Fax 317 322-6699

**Write:** Avaya Publications Center  
2855 North Franklin Road  
Indianapolis, IN 46219-1385

**Order:** Document No. 555-721-112  
Issue1, January, 2001

For more information about Avaya documents, refer to the section entitled "Related Documents" in "About This Guide" in *Feature Reference*.

## Support Telephone Number

In the continental U.S., Avaya provides a toll free customer helpline 24 hours a day. Call the Avaya Customer Care Center at **1 800 628-2888** or your Avaya authorized dealer if you need assistance when installing, programming, or using your system. Outside the continental U.S., contact your local Avaya authorized representative.

## Warranty

Avaya provides a limited warranty on this product. Refer to "Limited Warranty and Limitation of Liability" in "Customer Support Information" in *Feature Reference*.

---

---

## IMPORTANT SAFETY INSTRUCTIONS



The exclamation point in an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

To reduce the risk of fire, electrical shock, and injury to persons, follow these basic safety precautions when installing telephone equipment:

- Read and understand all instructions.
  - Follow all warnings and instructions marked on or packed with the product.
  - Never install telephone wiring during a lightning storm.
  - Never install a telephone jack in a wet location unless the jack is specifically designed for wet locations.
  - Never touch uninsulated telephone wires or terminals unless the telephone wiring has been disconnected at the network interface.
  - Use caution when installing or modifying telephone lines.
  - Use only Lucent Technologies-manufactured MERLIN MAGIX Integrated System circuit modules, carrier assemblies, and power units in the MERLIN MAGIX Integrated System control unit.
  - Use only Lucent Technologies-recommended/approved MERLIN MAGIX Integrated System accessories.
  - If equipment connected to the TDL telephone modules (412 LS-ID-TDL and 024 TDL), the MLX telephone modules (008 MLX, 408 GS/LS-ID-MLX, and 016 MLX), or the ETR telephone module (016 ETR) is to be used for in-range out-of-building (IROB) applications, IROB protectors are required.
  - Do not install this product near water—for example, in a wet basement location.
  - Do not overload wall outlets, as this can result in the risk of fire or electrical shock.
  - The MERLIN MAGIX Integrated System is equipped with a 3-wire grounding-type plug with a third (grounding) pin. This plug will fit only into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the grounding plug.
  - The MERLIN MAGIX Integrated System requires a supplementary ground.
  - Do not attach the power supply cord to building surfaces. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
  - Slots and openings in the module housings are provided for ventilation. To protect this equipment from overheating, do not block these openings.
  - Never push objects of any kind into this product through module openings or expansion slots, as they may touch dangerous voltage points or short out parts, which could result in a risk of fire or electrical shock. Never spill liquid of any kind on this product.
  - Unplug the product from the wall outlet before cleaning. Use a damp cloth for cleaning. Do not use cleaners or aerosol cleaners.
  - Auxiliary equipment includes answering machines, alerts, modems, and fax machines. To connect one of these devices, you must first have a Multi-Function Module (MFM).
  - Do not operate telephones if chemical gas leakage is suspected in the area. Use telephones located in some other safe area to report the trouble.
-



**WARNING:**

- To eliminate the risk of personal injury due to electrical shock, DO NOT attempt to install or remove an MFM from your MLX telephone. Opening or removing the module cover of your telephone may expose you to dangerous voltages.
- ONLY an authorized technician or dealer representative shall install, set options, or repair an MFM.

**SAVE THESE INSTRUCTIONS**

---

# System Planning

## Master Table of Contents

### 0 Release Enhancements

Release 2.1 Enhancements (November 2001) .....	xiii
Release 2.0 Enhancements (January 2001) .....	xv
Release 1.5 Enhancements (June 1999) .....	xvi

### About This Guide

Overview .....	xix
Intended Audience .....	xix
How to Use This Guide .....	xix
Terms and Conventions Used .....	xx
■ Typographical Conventions .....	xxi
■ Product Safety Advisories .....	xxi
Security .....	xxii
Related Documents .....	xxiii
How to Comment on This Guide .....	xxiv

### 1 Before You Begin

Overview .....	1-1
Reviewing System Components .....	1-1
Confirming the Location of the Control Unit .....	1-2
■ Grounding Requirements .....	1-4
■ Electrical Noise/Radio-Frequency Interference .....	1-5
Requirements for Supporting CTI Applications .....	1-6
Obtaining Telephone Company Information .....	1-9
Obtaining User Information .....	1-10
Obtaining a Floor Plan .....	1-12

### 2 Control Unit Configuration

Overview .....	2-1
Planning Module Placement .....	2-1
■ Capacity for Lines/Trunks .....	2-2
■ Capacity for Extensions .....	2-2
■ Control Unit Diagram—Module Placement .....	2-3

Recording System Operating Conditions .....	2-6
■ Programming Equipment .....	2-6
■ System Mode .....	2-7
■ Automatic Maintenance Busy .....	2-8
■ Set System Date .....	2-9
■ Backup .....	2-9
■ System Consoles .....	2-9
■ Second Dial Tone Timer .....	2-10
■ Applications .....	2-10
Numbering the System .....	2-11
■ Identifying Extension Jacks .....	2-12
■ System Renumbering .....	2-28
■ Updating Planning Information .....	2-31
<b>3 Lines/Trunks</b>	
Overview .....	3-1
Identifying Line/Trunk Jacks .....	3-1
■ Module Types and Line/Trunk Jack Types .....	3-2
■ Jacks for Auxiliary Equipment .....	3-8
Selecting Line/Trunk Options .....	3-9
■ Loop-Start Reliable Disconnect .....	3-10
■ Outmode Signaling .....	3-11
■ Hold Disconnect Interval .....	3-12
■ QCC Operator to Receive Calls (Hybrid/PBX Mode Only) .....	3-13
■ QCC Queue Priority Level (Hybrid/PBX Mode Only) .....	3-13
■ Pools (Hybrid/PBX Mode Only) .....	3-14
■ Remote Access .....	3-15
■ DS1 Connectivity (100D, 100R INA, or 100 DCD Module) .....	3-19
■ Tie Trunks .....	3-34
■ NI-1 BRI Connectivity .....	3-39
Assigning Lines/Trunks .....	3-44
Assigning Telephone Buttons .....	3-45
■ Telephones in Hybrid/PBX Mode .....	3-46
■ Telephones in Key and Behind Switch Mode .....	3-54
■ Direct-Line Consoles .....	3-67
<b>4 Features</b>	
Overview .....	4-1
Telephone and Extension Features .....	4-2
■ Queued Call Console (Hybrid/PBX Mode Only) .....	4-3
■ Pool Dial-Out Code Restriction (Hybrid/PBX Mode Only) .....	4-4
■ Calling Restrictions .....	4-4

---

■ Forced Account Code Entry .....	4-5
■ Microphone Operation .....	4-5
■ Remote Call Forwarding .....	4-6
■ Fax Message-Waiting Receiver .....	4-7
■ Trunk-to-Trunk Transfer .....	4-7
■ HotLine.....	4-8
■ Extension Copy.....	4-8
■ Cover Ring Delay.....	4-12
■ Service Observing.....	4-13
Operator Features.....	4-14
■ Direct-Line Console .....	4-15
■ Queued Call Console (Hybrid/PBX Mode Only) .....	4-15
■ Direct Station Selector .....	4-21
Group-Assigned Features .....	4-22
■ Call Pickup Groups .....	4-23
■ Group Paging.....	4-24
■ Coverage .....	4-24
■ Group Calling.....	4-27
System Features .....	4-35
■ Transfer Options .....	4-36
■ Camp-On Return Time.....	4-38
■ Call Park Return Time.....	4-38
■ Automatic Callback .....	4-38
■ Extension Status .....	4-39
■ Station Message Detail Recording (SMDR).....	4-39
■ Inside Dial Tone .....	4-41
■ Reminder Service Cancel .....	4-41
■ Calls to Unassigned Extensions .....	4-42
■ Interdigit Timers .....	4-43
■ Rotary .....	4-43
■ Automatic Daylight Savings Time .....	4-44
■ Allowed Lists .....	4-44
■ Disallowed Lists .....	4-46
■ Call Restriction Summary .....	4-47
■ Labeling .....	4-50
■ Automatic Route Selection (Hybrid/PBX Mode Only) .....	4-52
<b>5 Data Communications</b>	
Overview .....	5-1
Terminology .....	5-2
About Data and Video Communications .....	5-3
■ Connectivity .....	5-3
■ Data Stations .....	5-4

---

■ Modem Data Stations .....	5-5
■ MLX Voice and Modem Data .....	5-6
■ Other Resource Groups .....	5-11
■ Video Systems .....	5-12
Planning Overview .....	5-14
Assigning Extension Jacks .....	5-17
■ Guidelines for Digital Extension Jacks .....	5-18
■ Modem Data-Only Stations .....	5-18
■ ISDN Terminal Adapter Data-Only Stations .....	5-19
■ Local Host Computer Data Stations .....	5-19
■ LAN Workstations .....	5-20
■ Video Systems .....	5-21
Assigning Lines/Trunks to Data and Video Stations .....	5-22
■ Assigning Line Buttons in Hybrid/PBX Mode .....	5-25
■ Assigning Pools and Lines/Trunks (Hybrid/PBX Mode Only) .....	5-26
■ Assigning Line Buttons in Key Mode .....	5-27
Assigning Features to Data Stations .....	5-29
■ Pool Dial-Out Code (Hybrid/PBX Mode Only) .....	5-30
■ Calling Restrictions .....	5-30
■ Forced Account Code Entry .....	5-31
■ ARS Facility Restriction Level (Hybrid/PBX Mode Only) .....	5-31
■ System Speed Dial Codes .....	5-32
Creating Data Hunt Groups .....	5-32
Digital Data/Video Stations .....	5-34
<b>6 Modifications</b>	
Overview .....	6-1
Preparation .....	6-1
Adding to the System .....	6-2
<b>7 Upgrading the System</b>	
Upgrading from MERLIN MAGIX Release 2.0 or Earlier .....	7-1
Upgrading from a MERLIN LEGEND System .....	7-3
■ Installing and Removing the Plastic Shell .....	7-5
■ Preparing the MERLIN LEGEND System .....	7-7
■ Upgrading to the MERLIN MAGIX System .....	7-9
PCMCIA Upgrade Card .....	7-13
■ Upgrading the System Software .....	7-13
■ Upgrading Module Firmware .....	7-14
Automatic Conversion of Backup Files .....	7-15

---

Flow Control .....	7-16
<b>A Customer Support Information</b>	
Support Telephone Number .....	A-1
Federal Communications Commission (FCC) Electromagnetic Interference Information .....	A-1
Canadian Department of Communications (DOC) Interference Information .....	A-2
FCC Notification and Repair Information .....	A-2
Installation and Operational Procedures .....	A-3
DOC Notification and Repair Information .....	A-4
Renseignements sur la Notification du Ministère des Communications du Canada et la Réparation .....	A-5
Security of Your System: Preventing Toll Fraud .....	A-8
Toll Fraud Prevention .....	A-9
■ Physical Security, Social Engineering, and General Security Measures .....	A-9
■ Security Risks Associated with Transferring through Voice Messaging Systems .....	A-10
■ Security Risks Associated with the Automated Attendant Feature of Voice Messaging Systems .....	A-12
■ Security Risks Associated with the Remote Access Feature .....	A-13
Other Security Hints .....	A-14
■ Educating Users .....	A-14
■ Educating Operators .....	A-15
■ Detecting Toll Fraud .....	A-15
■ Establishing a Policy .....	A-15
■ Choosing Passwords .....	A-16
■ Limiting Outcalling .....	A-17
Limited Warranty and Limitation of Liability .....	A-17
■ Limitation of Liability .....	A-18
Remote Administration and Maintenance .....	A-18
<b>B System Forms</b>	
Overview .....	B-1
<b>C Data Forms</b>	
Data Forms .....	C-1

---

<b>D</b>	<b>T1/PRI Planner</b>	
	T1/PRI Planner .....	D-1
<b>E</b>	<b>DS1 Connectivity Ordering</b>	
	DS1 Connectivity Ordering .....	E-1
<b>F</b>	<b>Unit Load Calculation</b>	
	Overview .....	F-1
	Configuration Rules for Power Supplies (assumes a mix of telephone types) .....	F-2
	Unit Load Capacity of Power Supplies .....	F-2
	Unit Load Rules for Different Modes .....	F-3
	Calculation of Unit Loads .....	F-3
	Unit Load Worksheet .....	F-5
<b>G</b>	<b>NI-1 BRI Review</b>	
	NI-1 BRI Review .....	G-1
	■ Form Needed .....	G-1
	■ Planning Form Instructions .....	G-1
<b>H</b>	<b>NI-1 BRI Provisioning</b>	
	NI-1 BRI Provisioning .....	H-1
	Lucent Technologies 5ESS Switch Translations .....	H-2
	■ ISDN Capability Package “S” .....	H-2
	■ Series Completion Feature Translations .....	H-4
	Northern Telecom DMS-100 Switch Translations .....	H-25
	■ ISDN Capability Package “S” .....	H-25
	■ Multiline Hunt Group Feature Translations .....	H-28
	Siemens SSC EWSD Switch Translations .....	H-36
	■ ISDN Capability Package “S” .....	H-36
<b>I</b>	<b>Network Engineering Forms</b>	
	Glossary .....	GL-1
	Index .....	IN-1

# System Planning

## Master List of Figures

### 0 Release Enhancements

### 1 Before You Begin

- 1-1 System Configuration for Support of CTI Applications ..... 1-7
- 1-2 Sample Floor Plan ..... 1-13

### 2 Control Unit Configuration

- 2-1 Sample Control Unit Diagram ..... 2-5
- 2-2 Extension Numbers for 2-Digit Numbering Plan ..... 2-29
- 2-3 Extension Numbers for 3-Digit Numbering Plan ..... 2-30
- 2-4 Extension Numbers for Set Up Space Numbering Plan ..... 2-30

### 3 Lines/Trunks

- 3-1 Partially Completed System Form 2c ..... 3-7
- 3-2 Factory-Set Assignment for 4412D+, 4424D+, and 4424LD+ Telephones  
(Hybrid/PBX Mode) ..... 3-47
- 3-3 Factory-Set Assignment for 4406D+ Telephone (Hybrid/PBX Mode) ..... 3-47
- 3-4 Factory-Set Assignment for MLX-20L and MLX-28D Telephones  
(Hybrid/PBX Mode) ..... 3-47
- 3-5 Factory-Set Assignment for MLX-16DP Telephone (Hybrid/PBX Mode) ..... 3-48
- 3-6 Factory-Set Assignment for MLX 5- and 10-Button Telephones  
(Hybrid/PBX Mode) ..... 3-48
- 3-7 Factory-Set Assignment for ETR-34D Telephone (Hybrid/PBX Mode) ..... 3-49
- 3-8 Factory-Set Assignment for ETR-18/18D Telephone (Hybrid/PBX Mode) ... 3-49
- 3-9 Factory-Set Assignment for ETR-6 Telephone (Hybrid/PBX Mode) ..... 3-50
- 3-10 Factory-Set Assignment for MLS-34D Telephone (Hybrid/PBX Mode) ..... 3-50
- 3-11 Factory-Set Assignment for MLS-18D Telephone (Hybrid/PBX Mode) ..... 3-51
- 3-12 Factory-Set Assignment for MLS-12/12D (Hybrid/PBX Mode) ..... 3-51
- 3-13 Factory-Set Assignment for MLS-6 Telephone (Hybrid/PBX Mode) ..... 3-51
- 3-14 Factory-Set Assignment for TransTalk 9031/9040 Telephone  
(Hybrid/PBX Mode) ..... 3-52
- 3-15 Factory-Set Assignment for Business Cordless 905 Telephone  
(Hybrid/PBX Mode) ..... 3-52
- 3-16 Factory-Set Assignment for 4412D+, 4424D+, 4424LD+ Telephones  
(Key and Behind Switch Modes) ..... 3-55

3-17	Factory-Set Assignment for 4406D+ Telephone (Key and Behind Switch Modes) . . . . .	3-56
3-18	Factory-Set Assignment for MLX-20L and MLX-28D Telephones (Key and Behind Switch Modes) . . . . .	3-56
3-19	Factory-Set Assignment for MLX-16DP Telephone (Key and Behind Switch Modes) . . . . .	3-57
3-20	Factory-Set Assignment for MLX 5- and 10-Button Telephones (Key and Behind Switch Modes) . . . . .	3-57
3-21	Factory-Set Assignment for ETR-34D Telephone (Key Mode) . . . . .	3-58
3-22	Factory-Set Assignment for ETR-18/18D Telephones (Key Mode) . . . . .	3-58
3-23	Factory-Set Assignment for ETR-6 Telephone (Key Mode) . . . . .	3-59
3-24	Factory-Set Assignment for MLS-34D Telephone (Key Mode) . . . . .	3-59
3-25	Factory-Set Assignment for MLS-18D Telephone (Key Mode) . . . . .	3-59
3-26	Factory-Set Assignment for MLS-12/12D Telephones (Key Mode) . . . . .	3-60
3-27	Factory-Set Assignment for MLS-6 Telephone (Key Mode) . . . . .	3-60
3-28	Factory-Set Assignment for TransTalk 9031/9040 Telephone (Key Mode) . .	3-60
3-29	Factory-Set Assignment for Business Cordless 905 Telephone (Key Mode)	3-61
3-30	Factory-Set Assignment for ETR-34D Telephone (Behind Switch Mode) . . .	3-61
3-31	Factory-Set Assignment for ETR-18/18D Telephones (Behind Switch Mode) . . . . .	3-62
3-32	Factory-Set Assignment for ETR-6 Telephone (Behind Switch Mode) . . . . .	3-62
3-33	Factory-Set Assignment for MLS-34D Telephone (Behind Switch Mode) . . .	3-63
3-34	Factory-Set Assignment for MLS-18D Telephone (Behind Switch Mode) . . .	3-63
3-35	Factory-Set Assignment for MLS12/12D Telephones Behind Switch Mode) .	3-64
3-36	Factory-Set Assignment for MLS-6 Telephone (Behind Switch Mode) . . . . .	3-64
3-37	Factory-Set Assignment for TransTalk 9031/9040 Telephone (Behind Switch Mode) . . . . .	3-64
3-38	Factory-Set Assignment for Business Cordless 905 Telephone (Behind Switch Mode) . . . . .	3-65
3-39	4400-Series Direct-Line Console . . . . .	3-68
3-40	MLX Direct-Line Console . . . . .	3-68

#### 4 Features

4-1	Completed ARS Worksheet—Automatic Route Selection Tables . . . . .	4-55
4-2	Example 1: Form 3f, 6-Digit Table . . . . .	4-57
4-3	Example 2: Form 3f, Area Code Table . . . . .	4-58
4-4	Subpattern Example . . . . .	4-60
4-5	Other Digits Example . . . . .	4-61
4-6	Digit Absorption Example . . . . .	4-62

---

**5 Data Communications**

5-1	Modem Data Only .....	5-6
5-2	MLX Voice and Modem Data .....	5-7
5-3	MLX Voice and ISDN Terminal Adapter Data .....	5-8
5-4	ISDN Terminal Adapter Data-Only .....	5-9
5-5	Personal and Group Video Connections .....	5-14

**7 Upgrading the System**

7-1	Inserting the Module into the Left Housing .....	7-6
7-2	Attaching the Right Housing .....	7-6
7-3	Using a Mounting Bracket .....	7-11
7-4	Positioning Mounting Screws .....	7-12

**D T1/PRI Planner**

D-1	Sample DS1 Planning Map .....	D-4
-----	-------------------------------	-----



# System Planning

## Master List of Tables

### 0 Release Enhancements

#### 1 Before You Begin

1-1	Environmental Requirements . . . . .	1-2
1-2	Control Unit Space Requirements. . . . .	1-4
1-3	Employee Communications Survey: Description of Questions . . . . .	1-11

#### 2 Control Unit Configuration

2-1	Application Ports . . . . .	2-13
2-2	Modules with Touch-Tone Receivers . . . . .	2-15
2-3	Touch-Tone Receivers Required by Voice Messaging Systems . . . . .	2-16
2-4	System Requirements for Touch-Tone Receivers . . . . .	2-17
2-5	TTRs Required for Primary Delay Announcement Devices . . . . .	2-17
2-6	TTRs Required for Secondary Delay Announcement Devices . . . . .	2-18
2-7	Maximum Number of Operator Positions . . . . .	2-20
2-8	Application Ports . . . . .	2-26

#### 3 Lines/Trunks

3-1	Line/Trunk Jack Types . . . . .	3-2
3-2	Codes for Line/Trunk Jacks . . . . .	3-5
3-3	Line Compensation Settings . . . . .	3-22
3-4	Line Compensation Settings . . . . .	3-28
3-5	NI-1 BRI Timers . . . . .	3-44

#### 4 Features

4-1	Features that Can Be Copied . . . . .	4-9
-----	---------------------------------------	-----

#### 5 Data Communications

5-1	Data Station Configurations . . . . .	5-10
5-2	Data Forms . . . . .	5-15
5-3	System Forms . . . . .	5-16
5-4	Extension Jack Types . . . . .	5-17

#### 6 Modifications

6-1	Adding New Trunks . . . . .	6-4
6-2	Adding Auxiliary Equipment . . . . .	6-4
6-3	Adding New Extensions . . . . .	6-5
<b>7</b>	<b>Upgrading the System</b>	
7-1	Unsupported Modules from MERLIN LEGEND Communications System . . . .	7-8
7-2	Supported MERLIN LEGEND Modules That Cause WinSPM Error Message	7-10
<b>B</b>	<b>System Forms</b>	
B-1	System Forms . . . . .	B-1
<b>C</b>	<b>Data Forms</b>	
C-1	Data Forms . . . . .	C-1
<b>E</b>	<b>DS1 Connectivity Ordering</b>	
E-1	Guide to DS1 Connectivity Ordering . . . . .	E-1
E-2	Channel Service Unit (CSU) . . . . .	E-2
<b>F</b>	<b>Unit Load Calculation</b>	
F-1	Unit Loads per Module . . . . .	F-3
F-2	Unit Loads per Port . . . . .	F-4
<b>I</b>	<b>Network Engineering Forms</b>	

# Release Enhancements

---

The MERLIN MAGIX™ Integrated System incorporates most of the features and functionality of a MERLIN LEGEND® Communications System Release 7.0, plus supports the use of the 100R INA module. The release enhancements to the MERLIN MAGIX systems are explained below.

---

## Release 2.1 Enhancements (November 2001)

Release 2.1 includes all Release 2.0 functionality plus the enhancements listed below.

- Several features are being added and/or enhanced to compliment the MERLIN MAGIX Release 2.1 CRM (Customer Relationship Management) solution:

**NOTE** ► The system Extension Status feature must be set to Group Calling Supervisor mode and not in the Hotel mode for the Release 2.1 enhancements to work. When the Extension Status feature is set to Hotel mode, the group calling supervisor mode operation is the same as previous releases.

- **Calling group agent in multiple calling groups.** A calling group agent can be a member of more than one calling group.

**NOTE** ► The calling group agent in multiple calling groups applies to extensions assigned as members of calling groups that are programmed as automatic login or automatic logout calling group types. Extensions assigned as members of integrated and VMI calling groups can be assigned to only one calling group.

- **Selective login.** A calling group agent can selectively log into individual calling groups or can log into all calling groups to which the agent has been assigned as a member. The agent selectively logs into a calling group by pressing a programmed Login button then dialing the extension number for the calling group, or by pressing the Feature button or # and dialing 764 and the extension number for the calling group.
- **Selective logout.** A calling group agent can selectively log out of individual calling groups or can log out of all calling groups. The agent selectively logs out of a calling group by pressing a programmed Logout button then dialing the extension number for the calling group, or by pressing the Feature button or # and dialing 765 and the extension number for the calling group.

- **Auxiliary Work Time.** When a calling group agent activates the Auxiliary Work Time feature, the calling group agent is unavailable to receive calling group calls. When the calling group agent activates or deactivates Auxiliary Work Time, the MERLIN MAGIX system maintains the agent's logged in or logged out status for calling groups. The agent activates Auxiliary Work Time by pressing a programmed Auxiliary Work Time button (the green LED next to the programmed button goes on), or by pressing the Feature button or # and dialing 766. The agent deactivates Auxiliary Work Time by pressing a programmed Auxiliary Work Time button (the green LED next to the programmed button goes off), or by pressing the Feature button or # and dialing \*766.
  - **Selective Supervisor mode.** The new Selective Supervisor mode allows a calling group supervisor to see the login/logout status for all assigned group members and delay announcement units (DAUs) assigned to the calling group. The calling group supervisor can see which extensions that have selectively logged into an individual calling group. In this mode, the supervisor can log in or log out any extension assigned the group. The calling group supervisor enters Selective Supervisor mode by pressing the Feature button or # and dialing 32 and the extension number for the calling group. The calling group supervisor returns to the normal call-handling mode by pressing the Feature button or # and dialing 32 then pressing the Drop button.
  - **Enhanced TSAPI events and services.** The MERLIN MAGIX system and the MERLIN MAGIX PBX Driver are enhanced to provide services providing more information about calling groups and extensions. This allows CRM applications to automatically configure their database with the support and overflow groups for an individual calling group. The application can also query the state of Do Not Disturb and Message Waiting lights at an extension allowing for a more accurate MERLIN MAGIX system view when the application is initiated. The restrictions that prevent the Deflect Call Service are removed.
- Release 2.1 also includes enhancements to address field-related issues:
- **Caller ID display enhancement.** For customers who do not subscribe to Caller ID service or who do not have loop-start lines connected to modules that support caller ID service (800 GS/LS-ID, 408 GS/LS-ID-MLX, or 412 LS-ID-TDL modules), only the programmed label for the line appears on display telephones when a call is received on the line. The No Caller ID label does not appear on display telephones as on previous releases. This enhancement is system wide and requires no system programming.
  - **100DCS/DSU maintenance enhancements.** The Data BERT tests for the 100DCD module are moved in the maintenance hierarchy to the same level as other data tests (for example, the Data Terminal test). When the system technician is not required to busy out the 100DCD module when running the data BERT test. The system technician can also select the direction of the test (either looped back to the MERLIN MAGIX system or going out to the network). Since 100DCD module does not provide LEDs for the Data Terminal Ready, Clear To Send, Request to Send, or Transmit and Receive data leads, new maintenance screen is available to help to diagnose problems. The new maintenance screen provides the on or off status for Data Terminal Ready, Clear to Send and Request to Send. The new maintenance screen also provides an indication of the speed of the data that is being transmitted.
  - **Conversion for previous releases.** Support for the conversion feature that allows a user to take a backed-up configuration of an earlier release of a MERLIN LEGEND system or MERLIN MAGIX system and have the file automatically mapped into a version that the new release can use. This functionality is provided as part of the WinSPM software. The user can select a backup file, select the desired product to CONVERT TO, and then select the Release number of that product. The user is prompted for all these inputs; choices for

upgrades are based on the version of the backup file chosen to convert. In Release 2.1 of the MERLIN MAGIX system, there is an upgrade path from prior releases of MERLIN MAGIX and MERLIN LEGEND systems to MERLIN MAGIX Release 2.1.

- **WinSPM Release 6.** New with the introduction of Release 6.0 for WinSPM is compatibility with Windows 2000 and, as well as a new telephone set label-making application. WinSPM Release 6.0 replaces WinSPM R5.0 for programming the MERLIN MAGIX systems. WinSPM R6.0 must be used to upgrade from a MERLIN MAGIX R1-R1.5/R2.0 to R2.1 system and to upgrade from a MERLIN LEGEND system to a MERLIN MAGIX R2.1 system. WinSPM R6.0 has been enhanced to automatically drop the programmer into Standard SPM programming mode, if upgrading from a MERLIN LEGEND system to a MERLIN MAGIX system with supported modules that are not recognized. See the Upgrade Information section of this Offer Announcement for specific information regarding supported and non-supported MERLIN LEGEND system modules.

---

## Release 2.0 Enhancements (January 2001)

Release 2.0 includes all Release 1.5 functionality, plus the enhancements listed below.

- **Enhanced CSTA services.** CSTA services are enhanced to provide more flexibility for lines and features and to provide new services and events to help support a Customer Relationship Management application
- **More TSAPI events and services.** More TSAPI events and services are made available to Customer Relationship applications that aid the application in real-time reporting and routing
- **New current delay announcement unit (DAU) functionality.** The new current DAU functionality is available through the MERLIN Messaging System Release 2.5 and later. There is a new system programming option added to associate an announcement number with a particular delay announcement number.
- **Support for the TransTalk 9040.** The TransTalk 9040 is a digital wireless telephone with programmable buttons, on 412 LS-TDL and 024 TDL modules for Release 1.5 and later systems, and on 016 ETR modules for all releases.
- **Conversion for previous releases.** Support for the conversion feature that allows a user to take a backed-up configuration of an earlier release of a MERLIN LEGEND system or MERLIN MAGIX system and have the file automatically mapped into a version that the new release can use. This functionality is provided as part of the WinSPM software. The user can select a backup file, select the desired product to CONVERT TO, and then select the Release number of that product. The user is prompted for all these inputs; choices for upgrades are based on the version of the backup file chosen to convert. In Release 2.0 of the MERLIN MAGIX system, there is an upgrade path from prior releases of MERLIN MAGIX and MERLIN LEGEND systems to MERLIN MAGIX Release 2.0.
- **Display integration.** Display integration with MERLIN Messaging System Release 2.5 and later allows users with display telephones to view basic voice mail message information such as the number of New and Old Messages.
- **Send Caller ID information.** The MERLIN MAGIX system enhanced functionality allows Caller ID information to be forwarded to the MERLIN Messaging system for use with other messaging system features.

## Release 1.5 Enhancements (June 1999)

Release 1.5 includes all Release 1.0 functionality, plus the enhancements listed below.

### ■ **100 DCD Module**

The 100 DCD module provides a built-in channel service unit (CSU) and data service unit (DSU). Using this module eliminates the need to attach an external CSU/DSU, thereby allowing easier routing of calls. The 100 DCD module has the same signaling modes as the 100D and 100R INA modules, including the ability to use T1 or PRI configuration. As such, the new module counts toward the combined system total of three 100D, 100R INA, and 100 DCD modules. The 100 DCD module can fit into both metal and plastic carriers. Therefore, it can be added to an existing MERLIN LEGEND Communications System, where it functions like other 100D modules. The CSU/DSU part of the 100 DCD module, however, only functions with Release 1.5 or later of the MERLIN MAGIX system.

### ■ **Programming Options for 100R INA and 100 DCD Modules**

The 100R INA and 100 DCD modules use many of the same programming options as the 100D module. However, the 100R INA module has two new programming options: Activate/Deactivate the On-Board CSU and Channel Selection. The 100 DCD module has the same programming options, plus two additional ones: Activate/Deactivate the DSU and Programming Data Port Parameters.

### ■ **Tests for the 100R INA and 100 DCD Modules**

Three new Tests apply to both the 100R INA and 100 DCD modules:

- Line Loopback Test
- Payload Loopback Test
- Bit Error Rate Test (BERT)

Three other tests have been added specifically for the 100 DCD module:

- Data-channel Loopback Test
- Data Terminal Loopback Test
- Data Port Local Loop Test

### ■ **Automatic Daylight Savings Time Feature**

This new feature allows the system to automatically set the system clock ahead or back one hour when Daylight Savings Time starts or ends. You can use the factory setting of "USA ADST," or choose to customize the parameters of the feature. If you select "USA ADST," the system time moves one hour ahead at 2:00 a.m. on the first Sunday in April and moves one hour back at 2:00 a.m. on the last Sunday in October.

### ■ **Automatic Route Selection Feature Enhancement**

Because of the changes in facilities and dial plans across the USA and Canada, Release 1.5 offers new enhancements to the Automatic Route Selection feature:

- 10- and 11-digit dialing
- 24 programmable tables
- Wild card characters in 6-digit tables
- Enhanced 911 service

---

- **Allowed Lists and Disallowed Lists Feature Enhancement**

Two enhancements for Allowed/Disallowed Lists are supported in Release 1.5:

- Maximum number of digits in Allowed Lists has been increased from 7 to 14.
- One-to-one wild card character matching is supported.

With the increase number of digits in Allowed Lists, you can allow Outward or Toll Restricted users to dial equal access codes to specific area codes and/or exchanges, for example, 1010xxx-1-xxx-xxx-xxxx.

Now you can also use one-to-one wild card character matching in Allowed/Disallowed List entries. Press Hold to enter a wild card character. The character appears as a “p” on telephone displays and in the printed report.

- **WinSPM 4.0**

WinSPM 4.0 software offers an automatic conversion program via the DOS-emulator version of SPM and flow control for the programming serial port.

- **Automatic Configuration of the MERLIN Messaging System**

To ease the amount of effort during a system installation, MERLIN MAGIX Release 1.5 can automatically configure a voice mail system when Release 2.0 of the MERLIN Messaging System is housed in one of the system’s carriers. This capability takes the current data on the MERLIN MAGIX system and passes it to the MERLIN Messaging System, thereby allowing the System Administrator to configure the messaging system without having to manually enter a lot of data. Although primarily intended for installation, the automatic configuration can be used at any time.

- **Release 1.5 Upgrade Card**

In Release 1.5, an Upgrade PCMCIA card is available which allows you to upgrade the entire system software or to upgrade only the firmware on the modules, thereby leaving the system programming intact.

- **Maintenance Enhancements**

In addition to the new tests for the 100R INA and 100 DCD modules described earlier, Release 1.5 provides the following maintenance enhancements:

- **Station Responding Test.** Beginning in Release 1.5, you can run a Station Responding Test to check the connection between an extension and the system. When you select this test from the maintenance screen, the system sends a request to the telephone at that extension (station), asking for the telephone’s classmark. You can request the Station Responding Test locally or remotely. This test does not work for tip/ring devices because they do not have a classmark.
- **Touch-Tone Receiver Test.** The Touch-Tone Receiver Test runs as an audit on the system. It is not a demand test but runs continuously in the background as a maintenance check. This test checks every touch-tone receiver (TTR) in the system modules, including those in the MERLIN Messaging System. If a TTR fails the test, a permanent error is logged and the TTR becomes maintenance busy. If 50% or more TTRs become maintenance busy at the same time, another permanent error is logged, and the system alarm LED lights. The Touch-Tone Receiver Test itself does not maintenance busy out 50% or more TTRs. When a maintenance-busy TTR is retested and passes the test, it is automatically placed back into service.

- **Viewing Module Serial Numbers.** You can view the serial numbers of the following modules in the Maintenance screens:
  - Processor module
  - 024-TDL
  - 100 DCD
  - 100R INA
  - 412 LS-ID-TDL
  - MERLIN Messaging System
- **E911 Service Error Codes.** Three new error codes have been added for E911 service.
  - E911 OVERFLOW (Error Code 0802)
  - E911 ADJUNCT OOS (Error Code 4001)
  - E911 NO OUTGOING SEIZURE (Error Code 8411)

# About This Guide

---

---

## Overview

The MERLIN MAGIX Integrated System is an advanced digital switching system that integrates voice and data communications features. Voice features include traditional telephone features, such as Transfer and Hold, and advanced features, such as Group Coverage and Park. Data features allow both voice and data to be transmitted over the same system wiring.

---

## Intended Audience

This guide provides detailed information about system planning. It is intended for use by anyone who works with customers to plan, coordinate, and implement a system, including support personnel, sales representatives, and account executives. It is also intended for technicians who are responsible for system installation, maintenance, and troubleshooting.

---

## How to Use This Guide

This guide has been designed to provide optimal assistance to you in completing the planning forms—for example:

1. Since some chapters and/or sections apply to one or another of the configurations (Key or Behind Switch, Hybrid/PBX, or data communications), these sections are clearly marked—for example, “Hybrid/PBX Only.” Also, you are alerted to proceed to the next appropriate section, or to skip chapters or sections that do not apply to your particular system. Proceed through this guide as appropriate.
2. A list of forms or information that will be needed for particular procedures appears at the beginning of each chapter and section.
3. Where appropriate, examples of completed forms are included so you can confirm what you have done.

Since this guide assumes that you are familiar with the system, detailed information about equipment, features, and programming are not included. Refer to the following documentation for additional information:

- *System Programming* gives procedural instructions for programming system features.
- User and operator guides give procedural instructions for programming and using telephone features.

“[Related Documents](#),” later in this section, provides a complete list of system documentation, together with ordering information.

**In the USA only**, Avaya provides a toll free customer Helpline 24 hours a day. Call the Helpline at 1 800 628-2888 (consultation charges may apply), or contact your Avaya representative if you need assistance when installing, programming, or using your system.

**Outside the USA**, if you need assistance when installing, programming, or using your system, contact your Avaya authorized representative.

---

## Terms and Conventions Used

The terms described here are used in preference to other, equally acceptable terms for describing communications systems.

### Lines, Trunks, and Facilities

*Facility* is a general term that designates a communications path between a telephone system and the telephone company central office. Technically, a *trunk* connects a switch to a switch—for example, the MERLIN MAGIX Integrated System to the central office. Technically, a *line* is a loop-start facility or a communications path that does not connect switches—for example, an intercom line or a Centrex line. In actual usage, however, the terms *line* and *trunk* are often applied interchangeably. In this guide, we use *line/trunk* and *lines/trunks* to refer to facilities in general. Specifically, we refer to *digital facilities*. We also use specific terms such as *Personal Line*, *ground-start trunk*, *Direct Inward Dialing (DID) trunk*, and so on. When you talk to personnel at your local telephone company central office, ask them which terms they use for the specific facilities they connect to your system.

Some older terms have been replaced with newer terms, as follows:

Old Term	New Term
trunk module	line/trunk module
trunk jack	line/trunk jack
station	extension
station jack	extension jack
analog data station	modem data workstation
digital data station	terminal adapter workstation
7500B data station	ISDN terminal adapter data workstation

Old Term	New Term
digital voice and analog data station	MLX voice and modem data workstation
analog data-only station	modem data-only workstation
digital data-only station	terminal adapter data-only workstation
7500B data-only station	ISDN terminal adapter data-only workstation
digital voice and digital data station	MLX voice and terminal adapter workstation
MLX voice and 7500B data station	MLX voice and ISDN terminal adapter data workstation

## Typographical Conventions

Certain type fonts and styles act as visual cues to help you rapidly understand the information presented:

Convention	Example
Italics or bold indicate emphasis.	It is <i>very</i> important that you follow these steps.  WARNING: Do <b>not</b> remove modules from the carrier without following proper procedures.
Italics also set off special terms.	The part of the headset that fits over one or both ears is called a <i>headpiece</i> .
Plain constant-width type indicates text that appears on the telephone display or PC screen, as well as characters you dial at the telephone or type at the PC.	Choose <code>Ext Prog</code> from the display screen.  To activate Call Waiting, dial <code>*11</code> .

## Product Safety Advisories

Throughout these documents, hazardous situations are indicated by an exclamation point inside a triangle and the word *CAUTION* or *WARNING*.



### **WARNING:**

*Warning indicates the presence of a hazard that could cause death or severe personal injury if the hazard is not avoided.*



### **CAUTION:**

*Caution indicates the presence of a hazard that could cause minor personal injury or property damage if the hazard is not avoided.*

## Security

Certain features of the system can be protected by passwords to prevent unauthorized users from abusing the system. You should assign passwords wherever possible and limit distribution of such passwords to three or fewer people.

Nondisplaying authorization codes and telephone numbers provide another layer of security.

Throughout this guide, toll fraud security hazards are indicated by an exclamation point inside a triangle and the words *SECURITY ALERT*.

 **SECURITY ALERT:**

*Security Alert indicates the presence of a toll fraud security hazard. Toll fraud is the unauthorized use of your telecommunications system, or use by an unauthorized party (e.g., persons other than your company's employees, agents, subcontractors, or persons working on your company's behalf). Be sure to read "Your Responsibility for Your System's Security" on the inside front cover of this guide and ["Security of Your System: Preventing Toll Fraud"](#) in Appendix A, ["Customer Support Information."](#)*

---

## Related Documents

The documents listed in the following table are part of the MERLIN MAGIX documentation set. Within the continental United States, contact the Avaya Publications Center by calling 1 800 457-1235.

Document No.	Title
<b>System Documents:</b>	
555-721-110	<i>Feature Reference</i>
555-721-112	<i>System Planning</i>
555-721-113	<i>System Planning Forms</i>
555-721-119	<i>System Manager's Quick Reference</i>
555-661-150	<i>Network Reference</i>
555-721-800	<i>Customer CD-ROM:</i> Consists of <i>System Manager's Quick Reference</i> , <i>Feature Reference</i> (PDF version), and <i>Online Feature Reference tool</i> (HTML version).
555-721-801	<i>Reference CD-ROM:</i> Consists of <i>System Manager's Quick Reference</i> , <i>Feature Reference</i> (PDF version), <i>Online Feature Reference tool</i> (HTML version), <i>System Planning</i> (including forms), <i>Pocket Reference</i> , and <i>Installation, Basic System Programming &amp; Maintenance and Troubleshooting</i> .
<b>Telephone User Support:</b>	
555-710-123 (U.S. English)	<i>4400/4400D Telephone User's Guide</i>
555-710-123FRC (Canadian French)	<i>4400/4400D Telephone User's Guide</i>
555-710-127 (U.S. English)	<i>4406D+, 4412D+, 4424D+, and 4424LD+ Telephone User's Guide</i>
555-710-127FRC (Canadian French)	<i>4406D+, 4412D+, 4424D+, and 4424LD+ Telephone User's Guide</i>
555-660-122	<i>MLX Display Telephone User's Guide</i>
555-630-150	<i>MLX- 5D, MLX-10D and MLX-10DP Display Telephone Tray Cards</i> (5 cards)
555-630-152	<i>MLX-28D and MLX-20L Telephone Tray Cards</i> (5 cards)
555-660-124	<i>MLX-5<sup>®</sup> and MLX-10<sup>®</sup> Nondisplay Telephone User's Guide</i>
555-630-151	<i>MLX-5 and MLX-10 Nondisplay Telephone Tray Cards</i> (6 cards)
555-630-155	<i>MLX-16DP Display Telephone Tray Cards</i> (5 cards)

<b>Document No.</b>	<b>Title</b>
555-670-151	<i>MLS and ETR Telephone Tray Cards</i>
555-670-152	<i>MLS and ETR Telephone Tray Cards (16 cards)</i>
555-660-126	<i>Single-Line Telephones User's Guide</i>
555-660-138	<i>MDC and MDW Telephones User's Guide</i>
<b>System Operator Support:</b>	
555-710-134	<i>Digital Direct Line Console Operator's Guide</i>
555-710-136	<i>Digital Queued Call Console Operator's Guide</i>
<b>Miscellaneous User Support:</b>	
555-661-130	<i>Calling Group Supervisor and Service Observer User Guide</i>
555-650-105	<i>Data and Video Reference</i>
555-661-140	<i>Installation, SPM, Maintenance and Troubleshooting</i>
555-721-140	<i>Installation, Programming Basics, Maintenance and Troubleshooting</i>
555-721-116	<i>Pocket Reference</i>
<b>Toll Fraud Security:</b>	
555-025-600	<i>BCS Products Security Handbook</i>

---

## How to Comment on This Guide

We welcome your comments, both positive and negative. Please use the feedback form on the next page to let us know how we can continue to serve you. If the feedback form is missing, write directly to:

Documentation Manager  
Avaya Inc.  
150 Allen Road, Room 3C19  
Liberty Corner, New Jersey 07938

*We'd like your opinion . . .*

Avaya welcomes your feedback on this document.

Your comments can be of great value in helping us improve our documentation.

**MERLIN MAGIX™ Integrated System  
System Planning  
Issue 1, November, 2001  
555-721-112**

1. Please rate the effectiveness of this document in the following areas:

	Excellent	Good	Fair	Poor
Ease of Finding Information . . . . .	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Clarity . . . . .	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Completeness . . . . .	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Accuracy . . . . .	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Organization . . . . .	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Appearance . . . . .	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Examples . . . . .	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Illustrations . . . . .	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Overall Satisfaction . . . . .	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

2. Please check the ways you feel we could improve this document:

- |  |   |
|--|---|
| <input type="checkbox"/> Improve the overview/introduction | <input type="checkbox"/> Make it more concise                       |
| <input type="checkbox"/> Improve the table of contents     | <input type="checkbox"/> Add more step-by-step procedures/tutorials |
| <input type="checkbox"/> Improve the organization          | <input type="checkbox"/> Add more troubleshooting information       |
| <input type="checkbox"/> Add more figures                  | <input type="checkbox"/> Make it less technical                     |
| <input type="checkbox"/> Add more examples                 | <input type="checkbox"/> Add more/better quick reference aids       |
| <input type="checkbox"/> Add more details                  | <input type="checkbox"/> Improve the index                          |

Please add details about your major concerns. \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

3. What did you like most about this document? \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

4. Feel free to write any comments below or on an attached sheet. \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

If we may contact you concerning your comments, please complete the following:

Name: \_\_\_\_\_ Telephone Number: (\_\_\_\_) \_\_\_\_\_

Company/Organization: \_\_\_\_\_ Date: \_\_\_\_\_

Address: \_\_\_\_\_

**You may FAX your response to 908 953-6912. Thank you.**



# Before You Begin

# 1

---

## Contents

Overview .....	1-1
Reviewing System Components .....	1-1
Confirming the Location of the Control Unit .....	1-2
■ Grounding Requirements .....	1-4
■ Electrical Noise/Radio-Frequency Interference .....	1-5
Requirements for Supporting CTI Applications .....	1-6
Obtaining Telephone Company Information .....	1-9
Obtaining User Information .....	1-10
Obtaining a Floor Plan .....	1-12



---

## Overview

You should perform several tasks before you begin filling out the planning forms for the MERLIN MAGIX Integrated System:

- Review the system's hardware, features, and operation as defined at the time of purchase.
- Confirm the location of the control unit.
- Obtain the required information from the local telephone company.
- Obtain information about telephone users and their needs.
- Obtain or develop a floor plan of the customer's site.

Each of these preplanning tasks is described in this chapter.

---

## Reviewing System Components

To tailor the system to the customer's business, you must know the number and types of telephones, outside lines/trunks, and adjuncts that were ordered. You also need to know how the equipment will be used—for example, which type of telephone is assigned to each employee, which consoles operators will be using, and where adjuncts will be located.

Review the list of equipment ordered. If you did not participate in the ordering process, you may want to confer with the customer representative who did. You also may want to conduct a premises check to determine whether any additional equipment is required.

## Confirming the Location of the Control Unit

Before installation, a room, closet, or other area must be designated where the system control unit can be mounted on the wall. The area must meet the environmental requirements in Table 1-1.

**Table 1-1. Environmental Requirements**

Conditions...	Requirements...
Distances	Within 25 cable feet (7.6 m) of the network interface (cannot be installed outdoors) Within 1000 cable feet (304.8 m) of telephones Within 5 cable feet (1.5 m) of a dedicated AC power outlet (one outlet for every carrier)
Heat Dissipation	Fully loaded basic carrier: 500 Btu/hr (35 cal/sec) Fully loaded 2-carrier: 1000 Btu/hr (70 cal/sec) Fully loaded 3-carrier: 1500 Btu/hr (105 cal/sec)
Power	Basic carrier: 117 VAC60 Hz $\pm$ 5% 160 W 5.4 amps 2-carrier: 117 VAC60 Hz $\pm$ 5% 320 W 10.8 amps 3-carrier: 117 VAC60 Hz $\pm$ 5% 480 W 16.2 amps one properly grounded outlet needed for each carrier Additional outlets may be needed if installing printers and PCs.
Temperature	40° through 104°F; 4° through 40°C (optimal temperature 60°F; 16°C)
Humidity	20% through 80% relative humidity
Ventilation	Allow at least 1 inch (2.5 cm) of space on the right and left sides of the control unit and 12 inches (30.5 cm) above and below the control unit to prevent overheating.

** CAUTION:**

*The AC outlet for the control unit should not be switch-controlled. Plugging the control unit into an outlet that can be turned on and off by a switch can cause accidental disconnection of the system.*

*The AC outlet must be properly grounded by using an AC receptacle for a 3-prong plug.*

*Do not install the control unit outdoors.*

*Do not place the control unit near extreme heat (furnaces, heaters, attics, or direct sunlight).*

*Do not expose the control unit to devices that generate electrical interference (such as arc welders or motors).*

*Do not expose the control unit to moisture, corrosive gases, dust, chemicals, spray paint, or similar material.*

*Do not place anything on top of the carriers.*

*Do not install the control unit under any device that may drip fluid, such as an air conditioner.*

In addition, a backboard is needed to mount the system on the wall. One can be made locally from 3/4 inch (1.9-cm) plywood. The dimensions depend on the number of carriers, as shown in Table 1-2. A newly designed, pre-drilled, light-weight plastic backboard may be ordered (COMCODE 848556148). In some areas, fire or electrical codes require a flame-retardant backboard. Check with the appropriate authorities to ensure that the proper material is provided. A template, which shows the layout for mounting equipment, is available (COMCODE 847009206). It comes with safety, electrical, environmental, and space requirements for the system.

**Table 1-2. Control Unit Space Requirements**

Part...	Requirements...
<b>Carrier</b>	
Basic carrier	11 inches wide x 20 inches high x 11 inches deep (28 cm. x 50.8 cm. x 28 cm.)
Basic carrier + 1 expansion carrier	22 inches wide x 20 inches high x 11 inches deep (55.9 cm. x 50.8 cm. x 28 cm.)
Basic carrier + 2 expansion carriers	33 inches wide x 20 inches high x 11 inches deep (83.8 cm. x 50.8 cm. x 28 cm.)
<b>Backboard</b>	
Without <b>Systemax</b> <sup>®</sup>	6 feet wide x 3 feet high x 3/4 inches deep (182.9 cm. by 91.4 cm. x 1.9 cm.)
With <b>Systemax</b>	7 feet wide x 4 feet high x 3/4 inches deep (213.4 cm. x 121.9 cm. x 1.9 cm.)

It is important that the location selected for the control unit meets all of these specifications and that the backboard is in place before installation. If the location has already been selected and changes are needed, arrange for these changes before installation.

## Grounding Requirements

Proper grounding of the installation site is essential for correct and safe functioning of the system. Grounding protects the system against:

- Lightning
- Power surges
- Power crosses on outside lines/trunks
- Electrostatic discharge (ESD)

The telephone company is responsible for providing protection of outside lines/trunks at the entrance to the site. The protection should consist of:

- Carbon blocks or gas-discharge tubes connected to an approved ground.
- Adequate bonding of the outside line/trunk protector ground and the power-company ground.

 **CAUTION:**

*Improper ground can result in equipment failures and service outages. Verify that the AC power uses an approved ground for its primary ground and that all voltage-limiting devices are attached to an approved ground. Approved grounds are as follows:*

- The metal frame of the building.
- A metal water pipe connected to an underground water pipe that is in direct contact with earth.
- An electrode encased by at least 2 inches (5 cm) of concrete and located within and near the bottom of a concrete foundation or footing in direct contact with earth.
- A copper ring that encircles the building and is in direct contact with earth.

For most surge occurrences, the following standard grounding requirements provide adequate lightning and power surge protection:

- Properly wired, grounded, and bonded outside line protectors.
- Properly wired and grounded AC outlet.
- Properly grounded single-point ground bar.
- Properly wired connection between single-point ground and power supply.

## Electrical Noise/Radio-Frequency Interference

In most cases, electrical noise is introduced to the system through lines/trunks or telephone cables. However, electromagnetic fields near the control unit may also induce noise in the system. The control unit and cable runs, therefore, should not be placed in areas where a high electromagnetic field strength exists. Radio transmitters (AM and FM), television stations, induction heaters, motors (with commutators) of 1/4 horsepower (200 watts) or greater, and similar equipment are leading causes of interference. Small tools with universal motors do not generally cause a problem when operated on separate power lines. Motors without commutators generally do not cause interference.

Field strengths below 1.0 volt per meter are unlikely to cause interference. Estimate the field strength produced by radio transmitters by dividing the square root of the emitted power (in kilowatts) by the distance from the antenna in kilometers.

This yields the approximate field strength in volts per meter and is relatively accurate for distances greater than about half a wavelength (492 feet, or 150 meters, for a frequency of 1000 Hz).


To comply with FCC Part 15 requirements, each power supply on a newly installed system must have a ferrite core installed around the AC power cord and ground wire. Beginning with Release 2.1 this ferrite core is packaged with the power supply module at the factory. Ferrite cores are also compatible with earlier s.

## Requirements for Supporting CTI Applications

If your site will take advantage of the Computer Telephony Integration (CTI) capabilities of the MERLIN MAGIX Integrated System, each Client Desktop must have one extension associated with a computer that is networked to a Telephony server which, in turn, is connected to the MERLIN MAGIX Integrated System through a CTI link. Figure 1-1 on page 1-7 shows the system configuration for support of CTI applications.

Use the following resources and procedures to implement a CTI application.

1. Complete the appropriate MERLIN MAGIX/Telephony Services Preliminary Survey for the application being sold.
  - The Preliminary Survey is available from the Sales and Design Support Center (SDSC) Techni-Fax (1 888 297-4700—select the appropriate prompts), or from IntraWorks at [http://www.bcs.avaya.com/tech\\_info/sdsc/forms](http://www.bcs.avaya.com/tech_info/sdsc/forms).
  - The survey is completed by the Account Executive (AE) and customer.
2. Contact SDSC for CTI presale support.
  - The AE should contact SDSC (1 888 297-4700—select the appropriate prompts to reach the MERLIN MAGIX split) to discuss customer requirements and potential solutions. If the CTI solution is deemed appropriate, then the AE must obtain the appropriate MERLIN MAGIX/Telephony Services Preliminary Survey.
3. Return the completed survey after the sale is made.
  - The AE will coordinate and monitor the relationship between the OEM and the customer.
  - The AE will put the DOSS Order Number on the completed survey.
  - For Phonetastic:
    - Fax the completed survey to the Phonetastic™ Outsource Partner Desk (1 801 984-1120, Attention Phonetastic Outsource Coordinator).
  - The OEM will assign an Outsource Partner.
  - The OEM will establish an implementation date with the customer.
  - The OEM Outsource Partner will complete the Statement of Work for the customer.
4. Statement of Work (SOW)
  - Defines all duties performed by the OEM Outsource Partner.
  - Defines customer expectations.
  - Defines customer responsibilities.
  - Once the customer and the Outsource Partner have signed the SOW, it will be sent back to the AE to be included in the customer contract package.
5. Implementation Considerations for OEM Outsource Partners
  - Application installation requires a six-week interval. Early coordination will be required to enable a smooth implementation.

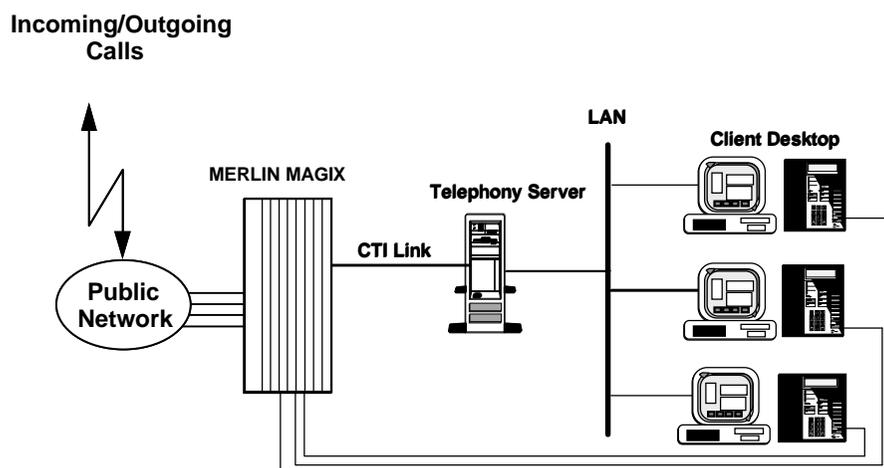

**Figure 1-1. System Configuration for Support of CTI Applications**

A CTI link requires the following equipment:

- MERLIN MAGIX Integrated System in Hybrid/PBX mode.
- An MLX line/trunk or extension module, with a free extension jack, installed in the system control unit. A free extension jack must be available on ports 2-4 or 6-8 on a 008 MLX, 408 GS/LS-MLX, or a 408 GS/LS-ID-MIX module; or ports 2-4, 6-8, 10-12, or 16-16 on a 016 MLX module. A free extension jack cannot be a port programmed as an operator or programming console. The MLX module must have a certain firmware vintage or application vintage.
  - If a “U” appears after the module name in the System Inventory screens, check for the proper Application Vintage:
    - 008 MLX—27 or later, *but not 42 with application Version 24*
    - 408 GS/LS-ID-MLX—27 or later, *but not 42 with application Version 24*
    - 016 MLX—12 or later
  - If no “U” appears after the module name in the System Inventory screens, check for the proper Firmware Vintage:
    - 008 MLX—28 or later, *but not 29*
    - 408 GS/LS-ID-MLX—28 or later, *but not 29*

**NOTE** ► If you have a 008 MLX or 408 GS/LS-ID-MLX module with Firmware Version 29, or with Firmware Version 42 with Application Version 24, replace the module with an appropriate version or, for a flash card update, call the Avaya Customer Care Center at: 1 800 628-2888. Follow the voice prompts for MERLIN MAGIX system support.

- Additional equipment and software is needed:
  - A Pentium® (350 MHz or higher) computer with at least 64 MB of RAM and 11 MB of disk space. More memory may be needed if additional applications will be running on the Telephony Server machine. The computer must also be equipped with the following:
    1. An available 16-bit slot for the Eicon DIVA ISDN interface card
    2. A CD-ROM drive and 3.5-inch floppy drive (for authorization and license diskettes).
    3. Windows® 2000 or Windows NT 4.0 Workstation or Server.

**NOTE** ► ■ With Windows 2000, you should install Service Pack 2 or later, and with Windows NT 4.0, you should install Service Pack 6 or later. Both are available from Microsoft®.

- CentreVu Computer-Telephony software, Release 9.1 or later, and the accompanying Telephony Services license diskette.
- MERLIN MAGIX PBX Driver (MMPD) software, Release 2.1 or later, and the accompanying authorization diskette.
- Network interface card configured for TCP/IP (for CentreVu Telephony Services client access).
- Eicon DIVA 2.015 or 2.01 ISDN (PCI) board, an ISDN interface card from Eicon Technology Corporation, Eicon DIVA Driver Version 2.50 or later for Windows 2000, or Eicon DIVA Driver Version 2.40 or later for Windows NT. You also need the board's associated cable for the CTI link.

**or**

Eicon DIVA 2.01 ISDN (ISA) board, an ISDN interface card from Eicon Technology Corporation, Eicon DIVA Driver Version 2.50 or later for Windows 2000 or Eicon Diva Driver Version 2.08 or later for Windows NT. You also need the board's associated cable for the CTI link. An Eicon SCOM ISDN BRI card for the CTI link.

**NOTE** ► For more information about these requirements and about installing a CTI link, see the *Network Manager's Guide for MERLIN MAGIX Advanced Communications System*.

## Environmental Specifications

If the Telephony Server platform and the MERLIN MAGIX Integrated System are to share an equipment room, the room's environment (temperature, humidity, contaminants, EMI, AC power and grounding) must meet the more demanding set of environmental specifications for the two units. Refer to the specifications for each hardware platform for details.

---

## Obtaining Telephone Company Information

To fill out many of the forms, especially forms involving incoming lines/trunks, you need to obtain information from the local telephone company. Before you speak with the local telephone company, make sure you understand your customer's company requirements regarding the system. Some of the information you will need to know includes:

- Which incoming line/trunk connects to each channel on each 100D, 100R INA, or 100 DCD module, and the order in which the lines/trunks are assigned.
- The Service Profile Identifier (SPID) and Directory Number (DN) associated with each channel on each 800 NI-BRI module.
- Whether the disconnect signals for loop-start lines/trunks are reliable or unreliable, and the length of the Hold disconnect interval.

Information the local telephone company can provide includes:

- Detailed T1 parameters
- Detailed NI-1 BRI parameters
- Number of digits sent on DID trunks
- Any lines/trunks that require a toll call prefix
- Telephone number for each incoming line/trunk
- Type or types of incoming lines/trunks (loop-start, ground-start, and so on)
- Any lines/trunks that are rotary-dial

## Obtaining User Information

The features and calling privileges you assign to each employee's telephone ensure that employees get the most benefit from the system. If you were not involved in the planning and equipment-ordering for the system, you should discuss the system's design with the customer representative who took part.

To determine calling privileges, answer the following questions:

- Does management want to allow both local and toll calls to be made from every telephone?
- If any telephones are restricted, are there any numbers the users should be allowed to call?
- Are there any specific numbers (such as 900) that you want to restrict users from calling?
- Who, if anyone, will be given Personal Lines?
- Will access to central office lines/trunks (outside lines) be restricted to certain employees?
- Do any departments (such as sales and service) receive frequent special calls that should come to them directly, bypassing a system operator?
- Do any departments or extensions need to screen incoming calls?

You may want to use the Employee Communication Survey Form to determine each employee's telecommunications needs. A copy of this form is in Appendix B and is included in the forms package. Since a survey form should be completed for each user, make as many copies of the form as you need.

If it is not feasible for each employee to fill out a form, get the information you need from a knowledgeable person in each department, section, or work group. This person should have sufficient information and authority to make decisions about calling features and coverage assignments for others in the department.

Use the information in Table 1-3 to interpret and analyze the results of the Employee Communication Survey. Numbers for items in the Required Information column correspond to question numbers on the survey.

**Table 1-3. Employee Communications Survey: Description of Questions**

Required Information...	Description...
1. Types of lines/trunks outside lines) used	Indicates toll calling habits. In most cases, assigning a button for each line/trunk is not necessary; the use of Automatic Route Selection (Hybrid/PBX mode only) ensures that the preferred line/trunk is selected.
2. Calls covered by someone else (sender)	Suggests that this employee should be assigned as a sender in either an Individual or a Group Coverage arrangement, particularly if calls are covered by someone other than the operator.
3. Shares lines/telephone numbers	Identifies Shared System Access buttons and/or common Personal Line appearances.
4. Covers someone else's calls (receiver)	Suggests assignment as a receiver in someone else's Individual or Group Coverage arrangements.
5. Shares incoming calls	Identifies Calling Group needs.
6. Frequency of use	Identifies heavy and light telephone users. Heavy users may benefit from additional System Access buttons and/or an additional System Access Originate Only button.
7. Data needs	Identifies existing and potential data terminal and personal computer users.
8. Use of account codes	Identifies current account codes used for charge-back of calls if there is a programmed Account Code button on the telephone and if the system includes Call Accounting System (CAS).
9. Frequently dialed numbers	Identifies useful numbers for the System Speed Dial list.
10. Picks up calls	Identifies the need for a Pickup group.
11. View incoming caller information	Identifies which telephone users need call screening capabilities. This service may be part of the local telephone company's services, if available, and must be subscribed to.

## Obtaining a Floor Plan

You may want to use a floor plan to make planning more manageable and to ensure that the correct telephone equipment is assigned to each employee. If the customer does not already have a floor plan showing the location of system equipment, you should create one. Use the symbols shown in Figure 1-2 and the following instructions:

1. Use a large sheet of paper and sketch the office layout. The location of office walls and other partitions is important when features are assigned to telephones that must be within hearing range of each other. For example, pickup group members must be able to hear each others' telephones ringing.
2. Indicate the location of each employee's telephone, other locations that will have a telephone (such as a conference room), and the locations of data terminals, PCs, and host computers.
3. Indicate the type of telephone at each location, using an abbreviation that includes the number of programmable buttons. For example, write 4424LD+ at large-display, 24-button 4400-Series telephones; 4424D+ for small-display, 24-button 4400-Series telephones; MLX-10 at 10-button MLX telephones; MLX-20L at 20-button MLX display telephones, and so on.
4. Indicate the type of adjunct at each location. For example, write FAX, ana.modem (analog modem), headset, or other type of adjunct beneath the symbol.
5. Indicate any additional equipment, such as a Station Message Detail Recording (SMDR) printer, Call Accounting System device, equipment required for off-site telephones, and so on.
6. Indicate the locations where AC power is available and/or required, for example, for a Multi-Function Module (MFM), a console with two Direct Station Selectors (DSSs), or an Integrated Services Digital Network (ISDN) terminal adapter.

The floor plan does not need to be elaborate or to scale. Keep the floor plan on hand. Refer to it during planning and complete it (by filling in extension numbers) when you get to “[Numbering the System](#)” in Chapter 2.

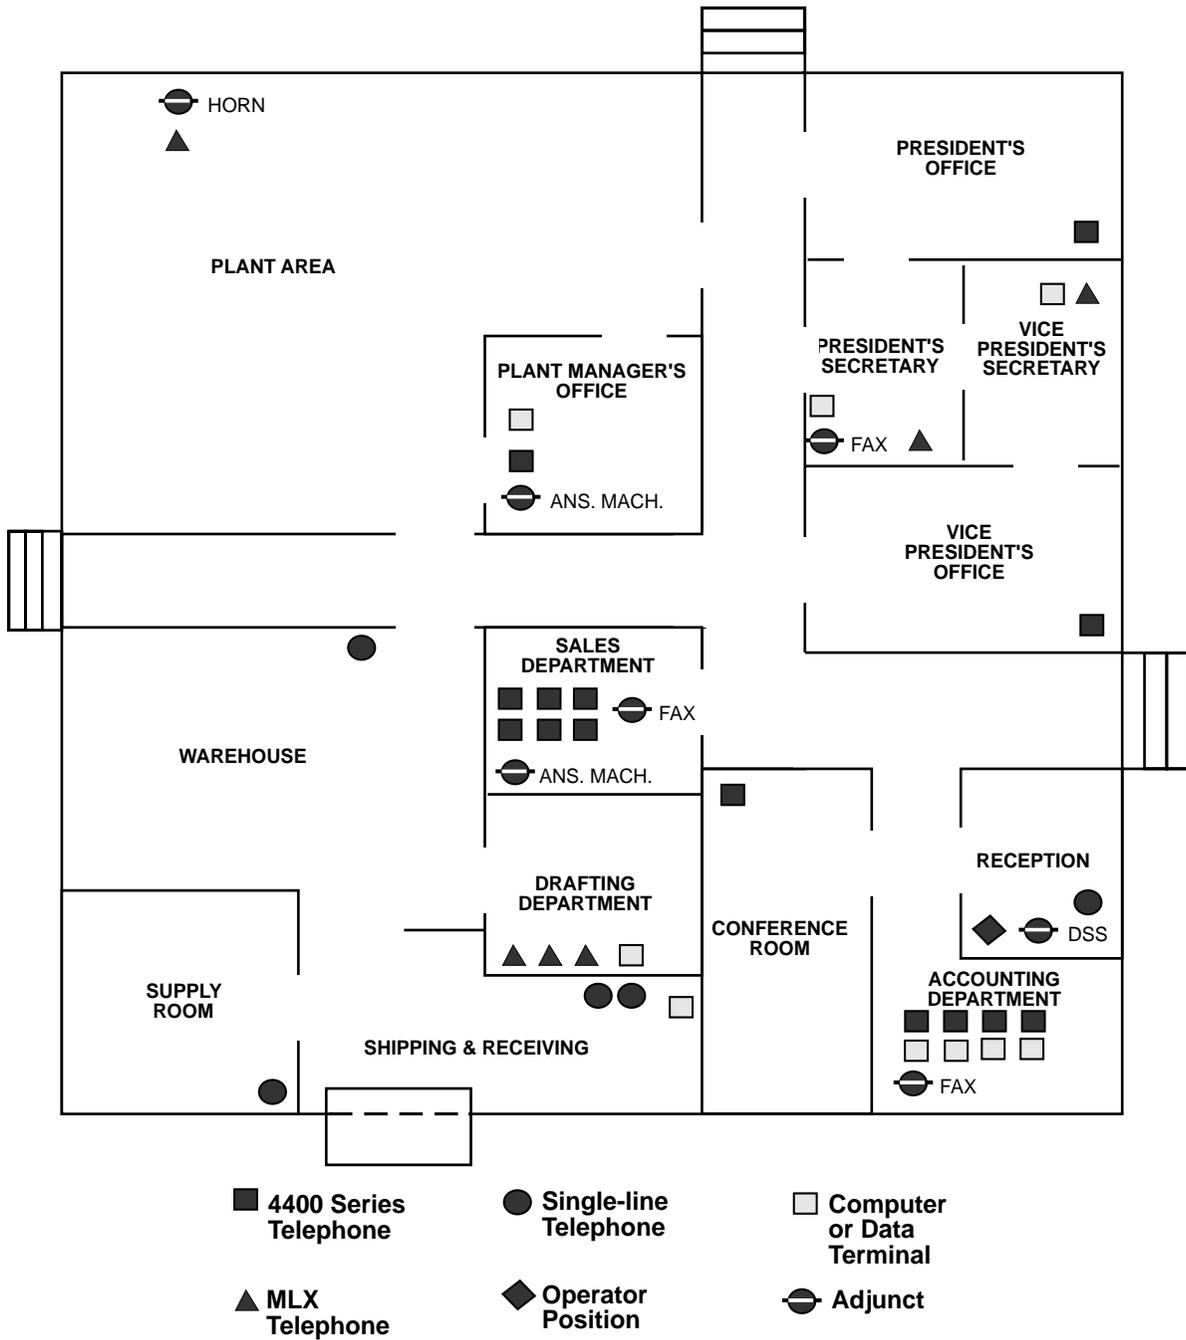


Figure 1-2. Sample Floor Plan



---

## Contents

Overview .....	2-1
Planning Module Placement .....	2-1
■ Capacity for Lines/Trunks .....	2-2
■ Capacity for Extensions .....	2-2
Planning Form Instructions .....	2-3
■ Control Unit Diagram—Module Placement .....	2-3
Planning Form Instructions .....	2-4
Recording System Operating Conditions .....	2-6
■ Programming Equipment .....	2-6
■ System Mode .....	2-7
■ Automatic Maintenance Busy .....	2-8
■ Set System Date .....	2-9
■ Backup .....	2-9
■ System Consoles .....	2-9
■ Second Dial Tone Timer .....	2-10
■ Applications .....	2-10
Numbering the System .....	2-11
■ Identifying Extension Jacks .....	2-12
Module Types and Extension Jack Types .....	2-13
Touch-Tone Receivers (TTRs) .....	2-15
Jack for Primary Operator Position .....	2-19
Jacks for Additional Operator Positions .....	2-20
Jacks for 4400-Series Telephones .....	2-21
Jacks for MLX Telephones .....	2-22
Jacks for the CTI Link Application .....	2-24
Jacks for Tip/Ring Equipment and Applications .....	2-25
Labels .....	2-28
■ System Renumbering .....	2-28
■ Updating Planning Information .....	2-31



---

## Overview

After you have completed the preplanning tasks described in Chapter 1, “[Before You Begin](#),” you can plan the control unit configuration. Planning the control unit configuration consists of the following tasks:

- **Planning Module Placement.** Calculate the system’s line/trunk and extension capacity according to the number of module types; then map out the placement of the modules on the Control Unit Diagram.
- **Recording System Operating Conditions.** Note the system’s type of programming equipment, its mode and language choice, and whether the Automatic Maintenance Busy feature is to be enabled or disabled.
- **Numbering the System.** Decide the order in which to connect the telephones and other equipment to the control unit based on the customer’s needs and applications. Determine whether the system-assigned extension numbers are appropriate for the customer’s business or if they need to be renumbered.

This chapter contains instructions for completing each of these tasks.

---

## Planning Module Placement

In addition to the processor module and power supply module, the system supports several types of line/trunk and extension modules. Deciding how to place the modules in the carriers consists of the following tasks:

- Calculating the system’s line/trunk capacity according to module types.
- Calculating the system’s extension capacity according to module types.
- Mapping out module placement on the Control Unit Diagram, according to specific guidelines.

This section contains instructions for each of these tasks.

For information about calculating unit load requirements, see Appendix F, “[Unit Load Calculation](#).”

For detailed information about modules and their specifications (including line/trunk and extension capacity), see the descriptions of hardware components contained in the *Pocket Reference*.

### Forms Needed

- Equipment List (if available)
- Form 1, System Planning

## Capacity for Lines/Trunks

Line/trunk capacity is the number of lines/trunks that can be connected to the control unit. This section contains instructions for calculating the systems capacity for lines/trunks, according to the system's module types.

### Planning Form Instructions

1. In the table in the Line/Trunk Capacity section of Form 1, System Planning, fill in the number of each type of line/trunk module on the appropriate line of the Number of Modules column.
2. Add the column and record the result at the bottom of the column on the System Totals line.
3. For each module type noted, multiply the value in the Number of Modules column by the value in the Trunks Supported by Module column; write the results in the appropriate row under Total Trunks by Module Type.
4. Add the column and record the total line/trunk capacity of the system at the bottom of the column, on the System Totals line.

## Capacity for Extensions

Extension capacity is the number of extensions that can be connected to the control unit. In most cases, the number of physical jacks on the modules indicates capacity. Most loop-start and ground-start modules have one or two power-failure transfer (PFT) jacks connected to a single-line telephone in case of a power failure, and not counted in system capacity. Every four line jacks has one associated PFT jack.

One extension number is automatically assigned to each extension jack, whether or not equipment is connected to it, except for the following modules:

- **024 TDL and 412 LS-ID-TDL Modules.** Two extension numbers are assigned to each physical extension jack.
- **008 MLX, 016 MLX, 408 GS/LS-MLX, and 408 GS/LS-ID-MLX Modules.** Two extension numbers are assigned to each physical extension jack: the first for an MLX telephone and the second for any equipment connected to the telephone through an MFM, ISDN terminal adapter, or any 2B data desktop video endpoint.
- **008 OPT Module.** The system recognizes this module as a 012 (T/R) module. Therefore, even though the OPT module has only 8 physical jacks, it uses 12 ports of capacity. An extension number is assigned to each of the 8 physical jacks and to each of the four "phantom" jacks.

- **MERLIN Messaging Module.** The system assigns 12 extension numbers to this module regardless of the actual number of ports the customer buys.

This section contains instructions for calculating the system's extension capacity according to the number of certain module types.

### Planning Form Instructions

1. In the table under the Extension Capacity section of Form 1, fill in the number of each type of extension module on the appropriate line of the Number of Modules column.
  - Each 100D, 100R INA, or 100 DCD module is assigned 24 logical IDs, even though the module has only 1 physical trunk jack.
  - Each 800 NI-BRI module is assigned 2 logical IDs per physical trunk jack for a total of 16 logical IDs.
2. Add the column and record the result at the bottom (System Totals line).
3. For each module, multiply the value in the Number of Modules column by the value in the Physical Jacks per Module column and record the results on the appropriate line in the Physical Jacks by Module Type column.
4. Add the column and record the result at the bottom (System Totals).
5. To determine the number of extensions assigned for each module type, multiply the value in the Physical Jacks by Module Type column by the value in the Extensions Assigned column and write the results in the appropriate row in the Total Extensions Assigned column.

**NOTE** ► Since the system assigns an additional four extensions to each 008 OPT module, you must first calculate the Extensions Assigned by multiplying the number of 008 OPT modules (noted in the Number of Modules column) by 4 and then add this subtotal to the number noted in the Physical Jacks by Module Type column.

6. Add the column and record the result at the bottom (System Totals).

### Control Unit Diagram—Module Placement

This section describes how to use the Control Unit Diagram on Form 1 (page 2) to map the placement of the modules according to certain guidelines. Figure 2-1 on page 2-5 provides an example of a Control Unit Diagram for a system with 32 lines/trunks and 52 extensions. In addition, this section describes how to identify each jack on each module with respect to type (line/trunk or extension) and its associated logical ID. Each physical jack on the control unit is numbered sequentially from bottom to top and left to right with logical IDs as follows:

- Extension jacks are numbered from 1 to 200.
- Line/trunk jacks are numbered from 1 to 80.

This sequence of logical IDs is the basis for connecting components to the control unit, as well as for the assignment of extension numbers and line/trunk numbers.

## Planning Form Instructions

**NOTE** ► The Unit Load blocks above the diagram are reserved for equipment changes or maintenance. An Avaya representative or authorized dealer computes these values manually.

1. On the Control Unit Diagram of Form 1 (page 2), record the type of module to be installed in each slot by writing the module name (for example, 008 MLX) on the slanted lines at the top of each slot. Use the following guidelines:
  - a. Indicate the power supply module in the far left slot of each carrier.
  - b. Indicate the processor module in Slot 00 of the basic carrier.
  - c. Indicate line/trunk and extension modules in any order in Slots 01 through 17, with the following conditions:
    - Group the modules in each carrier from left to right with no empty slots between modules. (The system does not recognize modules in slots that follow an empty slot; slots to the right of the last module can be left empty.)
    - (Hybrid/PBX mode only) If the system includes a Queued Call Console (QCC), the first line/trunk and/or extension module must be a 412 LS-ID-TDL, 024 TDL, 408 GS/LS-ID-MLX, 008 MLX module, or 016 MLX module.
    - (All modes) Current 008 OPT and 016 (T/R) modules have built-in ring generators. The 016 (T/R) module has a REN of  $\geq 4$ , can ring 16 ports at a time, and has no restriction on the number of jacks that can be used for applications. The 016 ETR module has a REN of 3 and can ring all tip/ring ports at the same time.
    - Group all 800 DID, 100D, 100R INA, 100 DCD, 800 NI-BRI, and 400EM modules together according to type; this helps save time in system programming.

**NOTES** ► ■ The 491D1 power supply has a maximum rating of 96 unit loads. A total of 96 4400-Series, MLX, ETR, or MLS telephones may be connected to the system.

- If the switch is part of a private network and a tandem PRI trunk (programmed as LEGEND-PBX or LEGEND-NTWK) has some B-channels that would bring the total number of trunks over the system limit of 80, the 100D, 100R INA, or 100 DCD module for that tandem PRI trunk should be placed in the last slot in the carrier. In this manner, the 100D, 100R INA, or 100 DCD module contains the last lines in the system, and any B-channel over the 80 line/trunk limit is ignored. However, the D-channel still functions even if the 100D, 100R INA, or 100 DCD module exceeds the line capacity of the system. The number of B-channels must be the same on each networked system. See the *Network Reference* for additional information.

2. For each line/trunk and extension jack of each module, write the type of jack (X = extension; and L/T = line/trunk) and the associated logical ID, keeping in mind the following:
  - Each 100D, 100R INA, or 100 DCD module is assigned 24 logical IDs, even though the module has only 1 physical trunk jack.

- Each 800 NI-BRI module is assigned 2 logical IDs per physical trunk jack for a total of 16 logical IDs.
- The 008 OPT module is assigned 12 logical IDs, even though the module has only 8 physical extension jacks.
- Power-failure transfer (PFT) jacks are not assigned logical IDs.

- NOTES**
- ▶ If the system has one or more PFT telephones (maximum: 20), indicate on the Control Unit Diagram the modules that will have PFT telephones connected to their PFT jacks; write PFT in the modules. A PFT telephone can be connected to a PFT jack on a 800 GS/LS-ID, 408 GS/LS-ID-MLX, or 412 LS-ID-TDL module. Touch-Tone PFT telephones must be connected to jacks with Touch-Tone lines/trunks.
  - You need a ground-start button on a PFT telephone connected to a ground-start trunk.

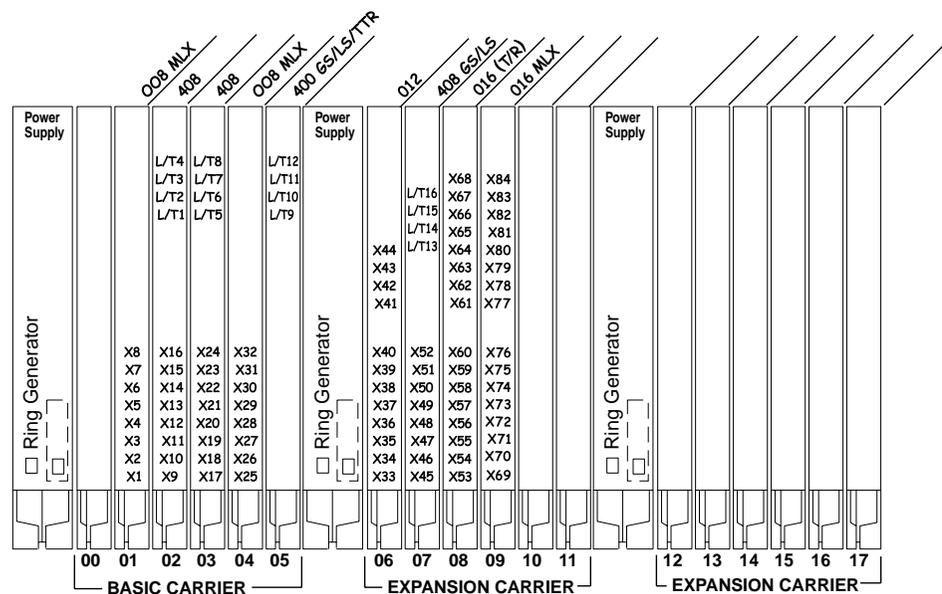


Figure 2-1. Sample Control Unit Diagram

## Recording System Operating Conditions

This section contains instructions for recording the following system operating conditions:

- Programming equipment to be used and its extension jack assignment
- Mode of operation
- Language choice
- Enable and disable Automatic Maintenance Busy
- A reminder to set the system date
- Backup schedule
- Identifying system console extensions
- Second Dial Tone Timer
- Identifying system applications

### Forms Needed

Form 1, System Planning

## Programming Equipment

Two types of equipment can be used for system programming:

- A 4424LD+ or MLX-20L telephone identified as a system programming console. The telephone is connected to the first (lowest) extension jack (which is factory-set for system programming) on the first TDL or MLX module.
- A personal computer with Windows® System Programming and Maintenance (WinSPM) software. The PC connects to the lowest jack on the processor module.

### Planning Form Instructions

1. Under the Programming Equipment heading in the System Operating Conditions section on Form 1 (page 2), do *either* of the following:
  - If the system will use a system programming console, check the System Programming Console box.
  - If the system will use a PC with WinSPM software, check the PC with WinSPM Software box.

- NOTES** ▶
- In conjunction with the 4424LD+ or MLX-20L telephone and the PC, a PCMCIA card is required. Check the box labeled PCMCIA Memory Card.
  - The first (lowest) extension jack on the first TDL or MLX module is factory-set for system programming and as the primary operator position. Since the primary operator position cannot be reassigned, you may want to change the system programming assignment to ensure that future programming sessions do not interfere with the operator's work.
2. Do *either* of the following:
    - If you checked System Programming Console, proceed to Step 3.
    - If you checked PC with WinSPM Software, skip to the next section, "[System Mode.](#)"
  3. To change the factory-set system programming jack, write in the new logical ID using the information from the Control Unit Diagram.

If you want the system programming jack to be different from that of system operators, change the programming assignment to any one of extension jacks 2 through 5 on the first TDL or MLX module in the control unit (the lowest jack on the module is extension jack 1). You fill in the extension number of the jack later.

## System Mode

The mode of operation determines how outside lines/trunks are provided to users, the types of operator consoles allowed, the features available, and how they work. Each system is registered with the Federal Communications Commission (FCC) to operate as a Private Branch Exchange (PBX), Hybrid, or Key system (factory setting). However, you can program the system to operate in any of the three modes: Hybrid/PBX, Key, or Behind Switch.

### Planning Form Instructions

Under the System Mode heading in the System Operating Conditions section of Form 1 (page 2), check *one* of the following:

- If the system will operate in Key mode, check Key. (This is the factory setting.) If need be, this mode can be changed to Hybrid/PBX mode at another time.
- If the system will operate in Hybrid/PBX mode, check Hybrid/PBX.
- If the system will be connected behind a larger system or a Centrex system, check Behind Switch and record the host's dial codes for the Transfer, Conference, and Drop features so users can access these features on the larger system.

## Language Selection

Language-specific operation is available in U.S. English, Canadian French, and Latin American Spanish. The language selection affects prompts and displays on user telephones, SPM system programming displays, SMDR records, and printed reports.

This feature works as follows:

- The 4400-Series telephones are available with factory-imprinted buttons in U.S. English or Canadian French.
- The MLX-10D, MLX-20L, and MLX-28D display telephones, and the MLX-10 nondisplay telephones are available with factory-imprinted buttons in U.S. English, Canadian French, or Latin American Spanish.
- The system can be programmed to operate in one of the languages, but an individual with a 4400-Series, MLX, or ETR telephone can override the system language by selecting any one of the three languages for his or her own telephone.

This section describes how to record the selected language for the system and, if desired, to set a different language for SMDR and printers.

**NOTE** ► If you plan to set a different language for an individual telephone, record the language selection on Form 6b as described in Chapter 4, “Features.”

### Planning Form Instructions:

Under the Language Selection heading in the System Operating Conditions section of Form 1 (page 2):

1. To select a system-wide language, check *one* of the following: U.S. English (the factory setting), Canadian French, or Latin American Spanish.
2. To set a different language for SMDR, check *one* of the following: U.S. English (the factory setting), Canadian French, or Latin American Spanish.
3. To set a different language for printed reports, check *one* of the following: U.S. English (the factory setting), Canadian French, or Latin American Spanish.

## Automatic Maintenance Busy

The factory setting for Automatic Maintenance Busy is Disable, which means that faulty lines/trunks are *not* automatically put in a maintenance-busy state.

In Key and Behind Switch modes, Automatic Maintenance Busy usually remains disabled. If you plan to group lines/trunks into pools in Hybrid/PBX mode, enable Automatic Maintenance Busy to provide optimal system performance.

For a detailed description of this feature (including considerations and feature interactions), see the *Feature Reference*.

## Planning Form Instructions

Under the Automatic Maintenance Busy heading in the System Operating Conditions section of Form 1, page 2, do *either* of the following:

- To keep the factory setting (no maintenance-busy state), check Disable.
- To enable Automatic Maintenance Busy, check Enable.

## Set System Date

The system date is the month, day, and year, shown on display telephones and SMDR reports. For information on SMDR, see “[System Features](#)” in Chapter 4. Error reports used by authorized technicians for maintenance also show the system date and time.

These sections on the planning form remind you to set the system date when you perform the initial programming for the system. The system also has an Automatic Daylight Savings Time feature. See “[Automatic Daylight Savings Time](#)” on page 4-44 for information about setting this feature.

## Planning Form Instructions

Check Yes under the Set System Date heading on Form 1 as a reminder to set the current date.

## Backup

Backup makes a copy of the customized system data on a translation memory card. A backup is made after each system upgrade, service technician visit, or major system reconfiguration.

**NOTE** ► If Automatic Backup is used, the customer must ensure that a valid PCMCIA Translation card is in the processor slot at the time of the backup. Otherwise, the Automatic Backup feature will be cancelled and the customer must reset it.

## Planning Form Instructions

Check Automatic if weekly or daily backup procedures are planned. Record the day and time in the blank space for weekly backups or the time of day for daily backups.

Check Manual if you plan manual backup procedures.

## System Consoles

To make programming easier, use this section to summarize information about the consoles in the system.

### Planning Form Instructions

Under the System Consoles heading, check the type or types of consoles:

- For Queued Call Consoles, check the QCC or QCCs box and enter the extension numbers (if known).
- For Direct-Line Consoles, check the DCL or DLCs box and enter the extension numbers (if known).

### Second Dial Tone Timer

In some instances, after dialing a star code, the central office responds with a second dial tone as a prompt to enter additional digits. Once a star code is accepted by the system, the Second Dial Tone Timer is activated and set to the programmed value. If dialing is attempted before the Second Dial Tone Timer expires, the call is treated as though it had violated calling restrictions and is not completed.

#### **SECURITY ALERT:**

*If the Second Dial Tone Timer is set to 0 ms and a caller begins dialing additional digits before the second dial tone, system restrictions may be bypassed and a restricted call may be routed. Careful administration of the Second Dial Tone Timer prevents the caller from bypassing call restrictions in this manner.*

Marked System Speed Dial entries (entries that do not display) are not affected by the Second Dial Tone Timer setting. If the central office does not immediately supply dial tone when a star code is entered and a Marked System Speed Dial entry uses star codes, then the appropriate number of pauses (each 1.5 seconds) must be programmed in the entry following each star code.

### Planning Form Instructions

Under the Second Dial Tone Timer heading, enter the desired value. Valid entries are 0–5000 ms, in increments of 200 ms. The factory setting is 0.

### Applications

Several call-handling and management applications can be used with the system, including voice mail and messaging; call accounting and reporting; and call management, distribution, and reporting. This section contains instructions for noting those applications that will be used with this system.

#### **CAUTION:**

*General information about these applications is contained in the Feature Reference. To ensure proper service, however, you must review the documentation provided with the application itself.*

---

## Planning Form Instructions

On Form 1 (pages 3 and 4):

1. Check the name of each application that will be connected to the system.
2. For each application name you check, you may want to include pertinent information in the Notes section. For example, you can note the version of the application installed at the customer's site.

---

## Numbering the System

This section describes the assignment of numbers to extensions.

**NOTE** ▶ Assigning numbers to Calling Groups, Paging Groups, Park Zones, and Remote Access is described later in this book.

The process of numbering extensions consists of the following tasks:

- **Identifying Extension Jacks.** Using the placement of modules in the control unit as a guide (see the Control Unit Diagram on Form 1), determine the order in which to connect telephones and other equipment to the control unit. To do this, identify the extension jack types available by module and then match system components (for example, operator positions or telephone types) with the jacks that support them.
- **Renumbering.** If the system-assigned extension numbers are not appropriate for the customer's business, change them. The system offers two automatic numbering plans (2-digit and 3-digit numbers), as well as the option of creating a unique numbering plan with extension numbers of 1 to 4 digits. Each of these three plans allows renumbering of all or selected extensions.
- **Updating Planning Information.** Add information to Form 1 and to the floor plan as appropriate.

This section contains instructions for completing each of these tasks. The *Feature Reference* provides detailed information about system numbering and the three numbering plans.

### Forms Needed

- Floor plan
- Equipment List (if available)
- Form 1, System Planning
- Form 2a, System Numbering: Extension Jacks
- Form 2b, System Numbering: Digital Adjuncts

## Identifying Extension Jacks

Identifying extension jacks consists of the following tasks:

- Determining which extension jack types are available according to the types of modules in the control unit.
- Matching the telephones and other equipment to the jacks that support them, in the following order:
  - Primary operator position
  - Additional operator positions
  - CTI link port
  - 4400-Series telephones
  - MLX telephones
  - ETR telephones
  - MLS telephones
  - TransTalk 9031/9040 telephones
  - Business Cordless 905 telephones
  - Tip/ring equipment and applications

### Planning Form Instructions

Before you begin, review the floor plan and Equipment List (if available) to identify the equipment and the number of each kind of connection needed, as well as to obtain other information you need to fill in the forms:

- Number, type or types, and user name and/or location of operator consoles
- Number and user name and/or location of analog multiline telephones that will use the Voice Announce to Busy feature or voice and data
- Number of non-operator MLX telephones and user names and/or locations
- Number and user name and/or location of analog multiline telephones
- Number and user name and/or location of tip/ring equipment
- Names of optional applications

## Module Types and Extension Jack Types

The module type determines the type of extension jack used. For example, the 016 (T/R) module has 16 tip/ring jacks. Table 2-1 lists the extension jack types and the equipment that can be connected to these jacks.

**Table 2-1. Application Ports**

Module	Ext. Jack Type	No. of Jacks	Used to Connect...
412 LS-ID-TDL	Digital	12	4400-Series telephones
024 TDL		24	TransTalk 9040 telephones (Release 1.5 and later systems)
008 MLX	Digital	8	MLX telephones with or without PassageWay Direct Connect Solution
016 MLX		16	CTI link
408 GS/LS-ID-MLX		8	Desktop video endpoints and/or Group Video endpoints Digital data devices, such as an ISDN terminal adapter
016 ETR	ETR (all 16 ports) or Tip/ring (ports 11-16 only)	12	ETR operation: <ul style="list-style-type: none"> <li>■ ETR telephones</li> <li>■ MLS telephones</li> <li>■ TransTalk 9031/9040 telephones</li> <li>■ Business Cordless 905 telephones</li> </ul> Tip/ring operation: <ul style="list-style-type: none"> <li>■ Single-line telephones</li> <li>■ Delay announcement devices</li> <li>■ Adjuncts, such as analog modems or fax machines</li> <li>■ PARTNER Door Phone</li> <li>■ OPRE</li> <li>■ Optional applications, such as:               <ul style="list-style-type: none"> <li>— MERLIN MAGIX Enhanced Customer Care Solution</li> <li>— Octel 100 Messaging</li> <li>— Intuity™ AUDIX VS</li> <li>— MERLIN Mail® Voice Messaging System<sup>1</sup></li> <li>— AUDIX® Voice Power (IS III)<sup>1</sup></li> </ul> </li> </ul>

**Table 2-1. Application Ports—Continued**

Module	Ext. Jack Type	No. of Jacks	Used to Connect...
016 (T/R)	Tip/ring	16	Single-line telephones Delay Announcement Devices Adjuncts, such as analog modems or fax machines OPRE Optional applications, such as: <ul style="list-style-type: none"> <li>■ MERLIN MAGIX Enhanced Customer Care Solution</li> <li>■ Octel 100 Messaging</li> <li>■ Intuity™ AUDIX VS</li> <li>■ MERLIN Mail® Voice Messaging System<sup>1</sup></li> <li>■ AUDIX® Voice Power (IS III)<sup>1</sup></li> </ul>
008 OPT	Tip/ring	8 <sup>2</sup>	Tip/ring equipment in another building or off premises PARTNER Door Phone
MERLIN Messaging System		0 <sup>3</sup>	Provides MERLIN Messaging System

<sup>1</sup> No longer available.

<sup>2</sup> The system uses 12 logical IDs for a 008 OPT module, even though only eight will have equipment attached to them. Do not use a 008 OPT module for applications (such as MERLIN Messaging System, Octel 100 Messaging, or Intuity AUDIX VS). Be sure to leave the extra four ports blank on Form 2a.

<sup>3</sup> The MERLIN Messaging System module has up to 10 internal ports but is assigned 12 extensions.

## Planning Form Instructions

Refer to the completed Control Unit Diagram (Form 1) and Table 2-1 to mark the extension jack types on Form 2a:

- For each extension module noted in the Control Unit Diagram (beginning with Slot 01), write in the type of module in the Mod. Type column of Form 2a and, after the appropriate logical ID (Log. ID) number, draw a line to indicate the end of that module.

For example, if the first module in the control unit is a 008 MLX module that has eight jacks, write 008 MLX in the Mod. Type column and draw a line after Logical ID 8.

**NOTE** ► If your list includes a 008 OPT module, draw a line after the twelfth logical ID, but cross off the last four logical IDs, since these jacks cannot be used to physically connect telephone equipment. The extension numbers of these logical IDs can be used, however, for applications requiring phantom extensions.

2. In the Jack Type column of Form 2a, do *one* of the following to indicate the type of each extension jack next to its logical ID:
  - If the jack is digital, check D.
  - If the jack is tip/ring, check T.
  - If the jack is enhanced tip/ring, check E.

You are now ready to match the system telephones and other equipment to these available jacks. After calculating Touch-Tone receivers, as described in the next section, begin matching equipment and jacks with Jack for Primary Operator Position, and proceed through the subsequent sections as appropriate for the system.

### Touch-Tone Receivers (TTRs)

Use these guidelines for calculating the system requirements for Touch-Tone receivers for systems both with and without a voice messaging system (VMS).

The number of TTRs needed in a MERLIN MAGIX system should be calculated before the system is installed so that you can order the modules required to supply the TTRs. However, as the volume of calls increases and more applications are added to the system, TTRs may also need to be added. A system that exhibits one or more of the following symptoms may need more TTRs:

- Single-line telephone users do not get dial tone when they lift the handset to dial out.
- The voice messaging system fails to transfer calls.
- Calls fail to ring or go to coverage prematurely.
- Reorder tone on UDP/ARS calls using tandem tie trunks (private network only).
- Delay in MWL updates via tie trunks when tie trunks are available (private network only).

Table 2-2 lists the modules that supply TTRs to the MERLIN MAGIX Integrated System.

**Table 2-2. Modules with Touch-Tone Receivers**

Module	Number of TTRs
008 OPT	2
016 (T/R)	4
016 ETR	4
024 TDL	8
412 LS-ID-TDL	4
800 DID	2
800 GS/LS-ID	2
MERLIN Messaging System	2

**NOTE** ► For MERLIN Messaging Release 2.5 and later systems, TTRs are not allocated for calls made from the MERLIN Messaging module ports but are allocated for calls made to the MERLIN Messaging module ports. To ensure correct operation, use the same TTR requirements as shown in Table 2-2.

A voice messaging system (VMS) requires a certain number of TTRs in addition to any system requirements for TTRs. The number of TTRs depends on the number of ports used by the voice messaging system (see Table 2-3). TTRs are also required in private networks using E&M, T1 tie, and tandem tie trunks.

**NOTE** ► A VMS *cannot* be directly connected to the 008 OPT module. However, the TTRs supplied by the 008 OPT module can be used by the VMS.

**Table 2-3. Touch-Tone Receivers Required by Voice Messaging Systems**

Number of VMS Ports	Number of TTRs Required
1	1
2	1
3	2
4	2
6	3
8	4
12 <sup>1</sup>	6
18	8

<sup>1</sup> If a 12-port MERLIN MAGIX Enhanced Customer Care Solution is used, 8 TTRs are required.

Table 2-4 estimates the total number of TTRs required in the system, based on call volume and whether the system uses account codes. The call volume per hour in this table includes all calls originating from single-line telephones, calls on tie lines, incoming Remote Access and Direct Inward Dial (DID) calls.

**NOTE** ► You must consider the call traffic across a private network when estimating the number of required TTRs. This includes calls on analog tandem tie trunks and T1-emulated tandem tie trunks. In addition, if your private network includes Centralized Voice Messaging, you must consider the call traffic coming across the private network for the voice messaging system and the TTRs required for the updating of Message Waiting lights. For this updating, a TTR is required at the sending end and the receiving end. If the systems in the private network are connected by PRI trunks, no additional TTRs are needed.

**Table 2-4. System Requirements for Touch-Tone Receivers**

Calls/Hour	TTRs Required...	
	No Account Codes	Account Codes Used
110	2	4
180	4	6
350	4	8
420	6	8
610	6	10
710	8	10

The use of the Prompt-Based Overflow setting, which allows callers to request overflow coverage while waiting in a Calling Group queue, requires TTRs for primary and secondary delay announcement devices that present the option to callers.

Table 2-5 shows the TTRs required for primary delay announcement devices when using the Prompt-Based Overflow setting.

**Table 2-5. TTRs Required for Primary Delay Announcement Devices**

Number of Devices	Number of TTRs Required
1	1
2	2
3	3
4	4
5	4
6	5
7	5
8 or more	6

Table 2-6 shows the TTRs required for secondary delay announcement devices when using the Prompt-Based Overflow setting.

**Table 2-6. TTRs Required for Secondary Delay Announcement Devices**

Number of Devices	Number of TTRs Required
1	1
2	1
3	1
4	2
5	2
6	2
7	3
8	3
9	3
10 or more	4

To calculate the total number of TTRs that are required by the system, do the following:

1. If the system has a VMS, use Table 2-3 to find the number of TTRs required by the system to support the VMS.
2. Estimate the hourly call volume for all calls originating from single-line telephones, incoming calls (including private network tandem tie trunks) on Remote Access and DID lines, all calls on tie lines, and calls routed to the VMS. Use Table 2-4 to find the system requirements for TTRs based on the estimated hourly call volume, and whether Account Codes are used.

**NOTE** ► You must consider the call traffic across a private network when estimating the number of required TTRs. This includes calls on analog tandem tie trunks and T1-emulated tandem tie trunks. In addition, if your private network includes Centralized Voice Messaging, you must consider the call traffic coming across the private network for the voice messaging system and the TTRs required for the updating of Message Waiting lights. For this updating, a TTR is required at the sending end and the receiving end. If the systems in the private network are connected by PRI trunks, no additional TTRs are needed.

3. Add the number of TTRs obtained in Step 1 and Step 2. If the Group Calling Prompt-Based Overflow setting is not being used, go to Step 6.
4. If the Group Calling Prompt-Based Overflow feature is being used, add the number of TTRs needed for the primary delay announcement devices that are assigned to those Calling Groups. Use Table 2-5 to determine the TTR requirements for the primary delay announcement devices.

5. If applicable, add the number of TTRs needed for the secondary delay announcement devices that are assigned to Calling Groups using the Prompt-Based Overflow feature. Use Table 2-6 to determine the TTR requirements for the secondary delay announcement devices.

**NOTE** ► If no announcement is used on a primary or secondary delay announcement device, no TTRs are needed.

6. Use Table 2-2 for information on the number of TTRs provided by each type of module, and to determine the number of TTRs already supplied.
7. Compare the total TTRs needed to the total TTRs already supplied to determine if additional TTRs are required.
8. Add a new module if more TTRs are required.

### Jack for Primary Operator Position

The factory setting for the primary operator position is the lowest extension jack on the first TDL or MLX telephone module. You cannot change the factory setting for the primary operator position.

The primary operator position uses two types of operator consoles:

- **Direct-Line Console (DLC)**. Can be assigned to a TDL or MLX extension jack.
- **Queued Call Console (QCC)**. Can be assigned to a TDL or MLX extension jack; the 4424LD+ and the MLX-20L are the only telephones that can be used as a QCC.

If the system includes QCCs, the primary operator position must be a QCC.

### Planning Form Instructions

Mark jack assignments on Form 2a:

1. Do *either* of the following:
  - If the system uses a system programming console, proceed to Step 2.
  - If the system does not use a system programming console, skip to Step 5.
2. Obtain the logical ID of the extension jack for the system programming console by referring to the System Operating Conditions heading, Form 1 (page 2).
3. Identify the logical ID for the system programming console by writing SPC beside the appropriate logical ID in the Log. ID column of Form 2a.
4. Write either the name of the person who will program the system or the location of the system programming console in the Person, Location, or Function column. Then proceed to Step 5.

5. Do *either* of the following:
  - To indicate the primary QCC operator position for a system with one or more QCCs, proceed to Step 6.
  - To indicate the primary DLC operator position for a system with one or more DLCs, skip to Step 7.
6. To indicate the primary QCC operator position:
  - a. Locate the first extension jack showing a D (digital) jack type and write QCC beside the preprinted logical ID number.
  - b. Write the name or location of the primary QCC operator in the Person, Location, or Function column.
  - c. On Form 1 (page 2), write the extension of the QCC under System Consoles.
7. To indicate the primary DLC operator position:
  - a. Locate the first extension jack showing a jack type of D (digital) or A (analog) and write DLC beside the preprinted logical ID number.
  - b. Write the name or location of the primary DLC operator in the Person, Location, or Function column.
  - c. On Form 1 (page 2), write the extension of the DLC under System Consoles.

Proceed to the next section, [“Jacks for Additional Operator Positions.”](#)

### Jacks for Additional Operator Positions

Use these instructions only if the system has more than one operator position. Otherwise, skip to the next section, [“Jacks for 4400-Series Telephones.”](#)

The maximum number of operator positions is shown in Table 2-7.

**Table 2-7. Maximum Number of Operator Positions**

Position	Telephone	Maximum
QCC	4424LD+	4
QCC	MLX-20L	4
DLC	4424LD+	8
DLC	4424D+	8
DLC	MLX-20L	8
DLC	MLX-28D	8

Any combination of operator positions can be assigned as long as no more than four are QCCs and the total combined number is no more than eight. For example, a system can have a combination that consists of four QCCs, two MLX DLCs, and two 4400-Series DLCs.

### Planning Form Instructions

1. On the Control Unit Diagram on Form 1, determine which extension jacks can be used as operator positions by circling the first and fifth extension jacks on 008 MLX, 408 GS/LS-MLX, and 408 GS/LS-ID-MLX modules until you have reached the maximum number of eight positions. The 016 MLX module has potential operator positions on the first, fifth, ninth, and thirteenth extension jacks. The 024 TDL module has potential operator positions on the first, fifth, thirteenth, and seventeenth extension jacks.
2. On Form 2a, mark the extension jacks to be used as additional operator positions.
3. Do *either* of the following:
  - If the system has additional QCCs, proceed to Step 4.
  - If the system has additional DLCs, skip to Step 5.
4. For each additional QCC:
  - a. Write QCC next to the preprinted logical ID for each additional QCC position. Be sure to assign QCCs to only the first and fifth extension jacks on each digital module.
  - b. Write the name or location of each additional QCC operator in the Person, Location, or Function column.
  - c. On Form 1 (page 2), write the extension number of each additional QCC in the System Consoles box.
5. For each additional DLC:
  - a. Write DLC next to the preprinted logical ID for each additional DLC position, including DLC positions used for Calling Group supervisors. Be sure to assign DLCs to only the first and fifth extension jacks on each digital or analog module.
  - b. Write the name or location of each additional DLC operator in the Person, Location, or Function column.
  - c. On Form 1 (page 2), write the extension number of each additional DLC in the System Consoles box.

Proceed to the next section, [“Jacks for 4400-Series Telephones.”](#)

### Jacks for 4400-Series Telephones

Use these instructions only if the system has non-operator 4400-Series telephones to assign to extension jacks on 412 LS-ID-TDL or 024 TDL modules. Otherwise, skip to the next section, [“Jacks for MLX Telephones.”](#)

The system assigns two extensions, although only one logical ID is assigned to each extension jack. For information about renumbering jacks, see [“System Renumbering”](#) later in this chapter.

- NOTES** ▶
- The system capacity for endpoints is decreased by two whenever a 4400-Series telephone is used.
  - In Behind Switch mode, the system automatically assigns two prime lines to each port on a TDL module. The second prime line can be removed and then can be assigned to another user.

### Planning Form Instructions

Use the floor plan and Equipment List (if available) to verify the location of all remaining 4400-Series telephones. On Form 2a, mark the extension jack assignments for the remaining 4400-Series telephones:

1. In the Jack Type column, make sure D is checked next to the logical ID for each digital extension jack.
2. In the Person, Location, or Function column, identify each 4400-Series telephone by the user's name, location, or function.

Proceed to the next section, [“Jacks for MLX Telephones.”](#)

### Jacks for MLX Telephones

Use these instructions only if the system has non-operator MLX telephones, ISDN terminal adapters used to connect a data terminal, or digital data/video stations (such as a videoconferencing station) to assign to digital extension jacks on 008 MLX, 408 GS/LS-ID-MLX, or 016 MLX modules. Otherwise, skip to the next section, [“Jacks for the CTI Link Application.”](#) To plan connections for digital data equipment, see Chapter 5, [“Data Communications.”](#)

The system assigns two extensions, although only one logical ID is assigned to each digital extension jack. For MLX telephones, one extension number is automatically assigned to the MLX telephone physically connected to the digital extension jack. The second extension number is reserved for an adjunct, such as an analog modem or Delay Announcement Device, that can be connected to the MLX telephone through a Multi-Function Module (MFM). For information about renumbering jacks, see [“System Renumbering”](#) later in this chapter.

The system automatically assigns both extension numbers whether or not the extension includes an MFM or ISDN terminal adapter. Calls can be placed to both extension numbers independently.

The MFM can operate as an interface for either a Supplemental Alert Adapter or a tip/ring device. The Supplemental Alert Adapter (SAA) setting on the MFM is used when the MFM connects an external alert such as a bell or horn. The tip/ring (T/R) setting is used when the MFM connects a tip/ring device such as an answering machine or an analog modem.

- NOTES** ▶
- The system capacity for endpoints is decreased by two whenever an MLX telephone is used.
  - In Behind Switch mode, the system automatically assigns two prime lines to each port on an MLX module — one for the MLX telephone and one for the device connected to the MFM. If an MFM is not connected to an MLX telephone, or the MLX port is not used, the prime line for the MFM can be removed. The prime line can then be assigned to another user.

When PRI, NI-1 BRI, or T1 Switched 56 lines/trunks are assigned to an MLX jack, digital data/video stations may use two B-channels simultaneously (2B Data) to place or receive high-speed data/video calls. For more information on planning for video applications, see Chapter 5, “[Data Communications](#).”

The MERLIN MAGIX Integrated System supports the use of an MLX port as a Computer Telephony Integration (CTI) link in Hybrid/PBX mode. The CTI link feature allows CTI applications to interact with the MERLIN MAGIX Integrated System over a local area network (LAN). The CTI link is the system’s hardware and software interface to the Avaya Communication CentreVu Telephony Services product, which supports the Windows 95, Windows 98, Windows 2000, and Windows NT systems platforms on the client side. CTI link circuitry connects to an MLX port on the system and to a LAN server using Windows NT 4.0 Server or Workstation software (server is recommended).

These CTI services enable a desktop computer running a certified PC application to provide computer-based features to users. Select from ports 2, 3, 4, 6, 7, or 8 on a 008 MLX or 408 GS/LS-ID-MLX module. You can also select ports 2, 3, 4, 6, 7, 8, 10, 11, 12, 14, 15, or 16 on a 016 MLX module. The CTI link port cannot be the potential operator port or the console programming port.

### Planning Form Instructions

Use the floor plan and Equipment List (if available) to verify the location of any video stations and all remaining MLX telephones and adjuncts connected to them.

1. On Form 2a, mark the extension jack assignments for the video stations and the remaining MLX telephones:
  - a. In the Jack Type column, make sure D is checked next to the logical ID for each digital extension jack.
  - b. In the Person, Location, or Function column, identify each video station or MLX telephone by the user’s name, location, or function.
  - c. If an extension port will be a CTI link, Write CTI Link in the Person, Location, or Function column and Label column, and put a check mark in the CTI Link column. If this is a CTI link, skip to Step 3. Select from ports 2, 3, 4, 6, 7, or 8 on a 008 MLX or 408 GS/LS-ID-MLX module. You can also select ports 2, 3, 4, 6, 7, 8, 10, 11, 12, 14, 15, or 16 on a 016 MLX module. The CTI link port cannot be the potential operator port or the console programming port.

2. Using the information from Form 2a, mark the digital extension adjuncts and video stations on Form 2b, System Numbering: Digital Adjuncts:
    - a. Do *either* of the following:
      - If the jack does not have an adjunct connected, write None in the Adjuncts column and skip to Step 3.
      - If an adjunct is connected to the MLX telephone, proceed to Step b.
    - b. If an adjunct is connected to the MLX telephone, enter the type of adjunct (such as I SDN T/A) in the Adjuncts column.
    - c. If a digital data or video station will be connected to the jack, and the equipment supports 2B Data (such as a videoconferencing system using a BRI interface or a v.35 interface and an ISDN terminal adapter that supports 2B Data), check the box in the 2B column.
- NOTE** ► Do not connect equipment that does not support 2B Data (such as G4 FAX, or a videoconferencing system using a v.35 interface and an ISDN terminal adapter that does not support 2B Data) to an MLX jack configured as a 2B Data port.
- d. If a digital data or video system is connected to the jack, enter the extension number in the MLX Telephone Ext. No. column.
3. Identify the type of equipment connected to the jack or the ISDN terminal adapter connected to the jack. Also, record the person, location, or function, if desired.

Proceed to the next section, [“Jacks for the CTI Link Application.”](#)

### Jacks for the CTI Link Application

Use these instructions only if the system has 008 MLX, 408 GS/LS-ID-MLX, or 016 MLX modules, and if users will be using CTI applications and a CTI Server (CentreVu Telephony Services for Windows NT). Otherwise, skip to the next section, [“Jacks for Tip/Ring Equipment and Applications.”](#)

The CTI link allows the computer users to interact directly with the system and obtain access to features through the use of a computer. Once installation is completed, the CTI port does not need feature programming, but the port and extension information must be recorded so it can be used when programming the network features.

If a 4400-Series or MLX telephone extension is going to have a CTI-capable program installed on the extension's worktop PC, you need to identify both the CTI link extension (the MLX port extension that connects to the CTI Server), and the 4400-Series or MLX telephone extensions that will have the CTI-capable program installed. All extensions with the exception of a QCC and MFM can use the CTI applications. CTI applications can make calls on behalf of all extension types except:

- Single-line telephones
- TransTalk 9031/9040 telephones
- Business Cordless 905 telephones

- 4400 and 4400D telephones
- ETR ports programmed as tip/ring

If the CTI link is on the first MLX module in the system, program the CTI link by using WinSPM. If the CTI link is not on the first MLX module, you can use the system programming console to do the programming.

CTI can be used only in Hybrid/PBX mode.

To get the Incoming Caller ID (ICLID) information, LS-ID delay must be set to On (factory setting is Off).

Extensions that interact with a CTI-capable program on a computer (extensions marked Computer Telephony Integrated Client PC) should not have Microphone Disable programmed.

The CTI link must be connected to an extension that is on an MLX port module, but not a module of firmware vintage 29 or Firmware Version 42 with Application Version 24 (see page 1-6 for a complete listing of firmware and application vintage requirements). A CTI link cannot be connected to the console programming port or to a potential operator position in the first or fifth port on the 008 MLX and 408 GS/LS-ID-MLX modules. Potential operation positions also occur on the first, fifth, ninth, and thirteenth ports of the 016 MLX module. CTI link programming removes 2B Data programming for a port. If you want to keep a port programmed as a 2B data port, do *not* assign it as a CTI link port.

The CTI link extension must directly connect to the CTI card on the CTI Server. Adapters, MFMs, and passive bus arrangements are not supported on this port.

### Planning Form Instructions

On Form 2a, mark the box under the CTI Link column for the extension that will connect the control unit to the CTI Server. The CTI link cannot be on an extension that is a potential operator (gray on the planning form), or a console programming port. If you want to keep a port programmed as a 2B data port, do *not* assign it as a CTI link port.

On form 4d, 4h, 4j, 4m, or 4o, check the Yes box under Computer Telephony Integrated Client PC, or on form 5a or 5b, check the CTI PC adjunct box if a computer at the same location as the extension will have a CTI-capable program (client) installed.

### Jacks for Tip/Ring Equipment and Applications

Use these instructions only if the system includes 016 (T/R), 016 ETR, or 008 OPT modules. Otherwise, skip to the section, [“Labels.”](#)

On the 016 ETR module, the first 10 ports are ETR ports only; ports 11-16 support tip/ring or ETR functionality, but not both simultaneously.

Assign the tip/ring jacks on the 016 (T/R), 016 ETR, or 008 OPT modules to any tip/ring equipment such as single-line telephones, fax machines, analog modems, or Group Calling Delay Announcement Devices. The hardware design of the 008 OPT module includes an interface for off-premises telephones, which supplies increased gain levels and protection.

If you assign tip/ring jacks on a 016 (T/R) module, the Ringing Frequency may be set to either 20-Hz (Type A) or 25-Hz (Type E). The Ringing Frequency is programmable on each 016 (T/R) module and affects all ports on that module.

Several optional applications, if used with the system, require tip/ring jacks. These jacks are found on a 016 (T/R) module, or on ports 11–16 of a 016 ETR module when these ports are programmed for tip/ring operation. The optional applications include:

- MERLIN MAGIX Enhanced Customer Care Solution
- Octel 100 Messaging
- Intuity AUDIX
- AUDIX Voice Power – Integrated Solution III (IS III)<sup>1</sup>
- Integrated Voice Power Automated Attendant – IS III<sup>1</sup>

Do not use the 008 OPT module for these applications.

All 16 ports on the 016 (T/R) module may be used for applications.

You can select Rotary Dial Enable for each tip/ring port. When you enable rotary dialing for a port, the port accepts both rotary dialing and Touch-Tone signals. If you leave the port on the factory setting of Touch-Tone only, no rotary dialing signals are accepted by that port. Activate Rotary Dial Enable when you connect a rotary-dial device to the system.

Table 2-8 shows, by application, the number of ports used, the number of TTRs required, and the number of additional single-line telephones that can be added to the modules. Use this table as a guideline.

**Table 2-8. Application Ports**

Application	Ports	TTRs Required	Maximum Additional Telephones on a 016 (T/R) Module
MERLIN Messaging System	2	1	N/A
	4	1	
	6	2	
Octel 100 Messaging	4	2	2
	6	3	1
	8	4	0
	12	5	0
	16	6	0

**Table 2-8. Application Ports—Continued**

Application	Ports	TTRs Required	Maximum Additional Telephones on a 016 (T/R) Module
Intuity AUDIX	4	2	2
	6	3	1
	8	4	0
	10	5	0
	12	6	0
MERLIN MAGIX	12	8	0
Enhanced Customer Care Solution (ESC)	16	8	0
CONVERSANT	(see NOTES below)		
AUDIX Voice Power <sup>1</sup>	2	1	6
	4	2	4
	6	3	2
	8	4	0

- NOTES** ▶
- Do not use the 008 OPT module for applications such as MERLIN MAGIX Enhanced Customer Care Solution, Octel 100 Messaging, or Intuity AUDIX.
  - When planning for CONVERSANT, refer to the documentation provided with the application and contact the SDSC (dial 1 888 297-4700 and follow the prompts to reach the CONVERSANT split) for information on TTRs and ports.

### Planning Form Instructions

On Form 2a, mark the extension jack assignments on the 016 (T/R), MERLIN Messaging System, and 008 OPT modules:

1. In the Jack Type column, make sure T is checked next to the logical ID for each tip/ring jack.
2. In the Person, Location, or Function column, identify each T/R device by the user's name or location and by type, such as single-line telephone, fax, modem, or Delay Announcement Device.
3. If the system includes optional applications, indicate the application on the appropriate line in the Appl column, as follows:
  - For MERLIN LEGEND Mail, write ML Mail.
  - For Octel 100 Messaging, write M2000.
  - For Intuity AUDIX, write Intuity.

- For MERLIN MAGIX Enhanced Customer Care Solution, write ESC.
  - For CONVERSANT, write CONV.
  - For AUDIX Voice Power IS III, write AVP.
  - For no applications, write None.
4. If the system has Octel 100 Messaging or AUDIX Voice Power, also write port in the Appl column for any logical IDs that are being used for fax ports.
  5. If the system is to be part of a Centralized Voice Messaging system, check Yes under the Centralized Voice Messaging heading. Also check Yes on page 4 of the MERLIN MAGIX Design Implementation Guide form located in Appendix I. If it will not be part of a Centralized Voice Messaging system, check No on both forms.

**NOTE** ► For more information on Centralized Voice Messaging, see the *Network Reference*.

6. For each 016 (T/R) module, if applicable, indicate the Ringing Frequency for that module. Enter 20-Hz or 25-Hz in the Ring Freq. column for all ports on the 016 (T/R) module. When configuring a system in the United States or Canada, generally the 20-Hz setting is applicable. The factory setting is 20-Hz.
7. If you are using rotary-dial equipment, check the Rot. Dial column to indicate that Rotary Dial Enable is to be activated.

Proceed to the next section, [“Labels.”](#)

### Labels

This section contains instructions to associate alphanumeric labels with extension numbers so that both the name of the caller and the extension number appear on display telephones.

### Planning Form Instructions

On the appropriate line in the Label column on Form 2a, write the label (maximum: 7 characters) to be displayed for each telephone.

## System Renumbering

The selection of a numbering plan depends on the customer's needs. Each of the systems numbering plans (2-digit, 3-digit, and Set Up Space) allows you to renumber all or selected extensions. If you do not need to renumber extensions, skip to the last section of this chapter, [“Updating Planning Information.”](#)

In Hybrid/PBX mode only, the Uniform Dial Plan (UDP) allows you to choose non-local dial plan numbering to specify the numbering of extensions connected to remote systems in a private network and allow users on your system to access those extensions as if they were connected to your own system. When renumbering a system that is part of a private network, see the *Network Reference* for information.

**⚠ CAUTION:**

Before programming the private network ranges, set up the local dial plan. If the ranges are programmed in the network, and then 2-digit, 3-digit, or Set Up Space factory settings are used, all network ranges on that switch are erased.

Before the system is renumbered, the AUDIX Voice Power channel assignments should be deleted (through AUDIX Voice Power) for the extensions being renumbered. When the renumbering for the system is complete, AUDIX Voice Power channels for the renumbered extensions should be added.

Figure 2-2 through Figure 2-4 list the extension numbers according to the three numbering plans: 2-digit, 3-digit, and Set Up Space. The numbers are arranged in blocks according to the first digit. The type of equipment or feature they are assigned is shown in the block. The shaded areas of the table indicate extension numbers automatically assigned by the system. The unshaded areas indicate the extension numbers available for reassignment. Use the appropriate plan-specific instructions that follow to mark Forms 2a and 2b with extension number assignments.

For detailed information about the numbering plans (including considerations, constraints, and feature interactions that may affect selection), see the *Feature Reference*.

0	Operator Console (not flexible) 0				
1	Extensions 10–19				
2	Extensions 20–29				
3	Extensions 30–39				
4	Extensions 40–49				
5	Extensions 50–59				
6	Extensions 60–66	Extra Extensions 6700–6842	6843–6849	Extra 4400-Series Adjuncts/ MFMs/ Terminal Adapters 6850–6992	6993–6999
7	Main Pool 70	Adjuncts 710–766	767–769	Calling Groups 770–791, 7920–7929	Paging Groups 793–799
8	800 <sup>1</sup>	Lines/Trunks 801–880	Park 881–888	889 <sup>2</sup>	Pools 890–899
9	ARS Access (Hybrid/PBX Mode)/Idle Line Access 9				

1 Listed Directory Number (QCC Queue)

2 Remote Access

NOTE: "0" and "10" are the same station.

**Figure 2-2. Extension Numbers for 2-Digit Numbering Plan**

0	Operator Console (not flexible) 0				
1	Extensions 100–199				
2	Extensions 200–299				
3	4400-Series/MLX Adjuncts 300–399				
4	4400-Series/MLX Adjuncts 400–499				
5	500–599				
6	600–699				
7	Main Pool 70	71–76	Calling Groups 770–791, 7920–7929		Paging Groups 793–799
8	800 <sup>1</sup>	Lines/Trunks 801–880	Park 881–888	889 <sup>2</sup>	Pools 890–899
9	ARS Access (Hybrid/PBX mode)/Idle Line Access 9				

1 LDN (QCC Queue)

2 Remote Access

NOTE: “0” and “100” are the same station.

**Figure 2-3. Extension Numbers for 3-Digit Numbering Plan**

0	Operator Console (not flexible) 0					
1	100–199					
2	200–299					
3	300–399					
4	400–499					
5	500–599					
6	600–699					
7	Main Pool 70	Extensions 7100–7299	4400-Series/ MLX Adjuncts 7300–7499	7500–7699	Calling Groups 770–791, 7920–7929	Paging Groups 793–799
8	800 <sup>1</sup>	Lines/Trunks 801–880		Park 881–888	889 <sup>2</sup>	Pools 890–899
9	ARS Access (Hybrid/PBX mode)/Idle Line Access 9					

1 LDN (QCC Queue)

2 Remote Access

NOTE: “0” and “7001” are the same station.

**Figure 2-4. Extension Numbers for Set Up Space Numbering Plan**

## Planning Form Instructions

Use Figure 2-2 through Figure 2-4 as you record extension number information:

1. On Form 2a and 2b, if this switch is part of a private network, check Yes under the Networked Switch heading. If the switch is not part of a private network, check No.

**NOTE** ► For more information, see the *Network Reference*.

2. Identify the 2-digit, 3-digit, or Set Up Space numbering system you will be using under the Factory Set column on Form 2b, by circling the name of the appropriate numbering system.
3. Do *either* of the following:
  - If you do *not* need to renumber any of the factory-set extension numbers:
    - Check the 2-Digit, 3-Digit, or Set Up Space box under the Renumber System heading on Form 2a to indicate the numbering plan you are using.
    - Skip to the next section, [“Updating Planning Information.”](#)
  - If you want to renumber only a few of the extensions and there are enough numbers available for 2- and 3-digit numbering plans:
    - Check the 2-Digit, the 3-Digit, or the Set Up Space box to indicate the numbering plan you’re using. *Be sure to check Selected Extension Numbers under the Renumber System heading on Form 2a, page 1.*
    - Write the new extension number or numbers in the Renumber to columns on Form 2a and Form 2b.

Proceed to the next section, [“Updating Planning Information.”](#)

## Updating Planning Information

On the floor plan, add the extension number beneath the symbol for each telephone and adjunct. If you are using a system programming console, go to Form 1, System Planning, in the System Operating Conditions section, and add the new extension number of the console in the space next to Ext. No.

**NOTE** ► The remaining columns on Form 2a (Eqpt., Label, Old Ext. No., and Wire No.) are completed by the technician during installation.

To complete the forms for lines/trunks, proceed to Chapter 3, [“Lines/Trunks.”](#)



## Contents

Overview .....	3-1
Identifying Line/Trunk Jacks. ....	3-1
■ Module Types and Line/Trunk Jack Types. ....	3-2
LS-ID Delay Option .....	3-3
■ Jacks for Auxiliary Equipment. ....	3-8
Selecting Line/Trunk Options .....	3-9
■ Loop-Start Reliable Disconnect .....	3-10
■ Outmode Signaling .....	3-11
■ Hold Disconnect Interval. ....	3-12
■ QCC Operator to Receive Calls (Hybrid/PBX Mode Only) .....	3-13
■ QCC Queue Priority Level (Hybrid/PBX Mode Only) .....	3-13
■ Pools (Hybrid/PBX Mode Only). ....	3-14
■ Remote Access. ....	3-15
■ DS1 Connectivity (100D, 100R INA, or 100 DCD Module).....	3-19
T1 Service .....	3-20
PRI Service .....	3-26
■ Tie Trunks. ....	3-34
■ NI-1 BRI Connectivity .....	3-39
Service Profile .....	3-39
Clock Synchronization .....	3-41
Timers .....	3-42
Assigning Lines/Trunks .....	3-44
Assigning Telephone Buttons .....	3-45
■ Telephones in Hybrid/PBX Mode .....	3-46
Guidelines for Button Assignments .....	3-52
■ Telephones in Key and Behind Switch Mode .....	3-54
Factory Assignments .....	3-55
Guidelines for Button Assignments .....	3-65
■ Direct-Line Consoles. ....	3-67



---

## Overview

Planning for lines/trunks consists of the following tasks:

1. **Identifying Line/Trunk Jacks.** Use the placement of modules in the control unit (see the Control Unit Diagram on Form 1) as a guide to determine in what order to connect trunks to the control unit. To do this, identify the line/trunk jack types available by module and then match trunks and auxiliary equipment with the jacks that support them.
2. **Selecting Line/Trunk Options.** According to the requirements of the customer, choose from available options for the incoming trunks connected to the system.
3. **Assigning Lines/Trunks to User Extensions.** Assign lines/trunks to telephones and DLCs.
4. **Assigning Telephone Buttons.** Assign buttons to Hybrid/PBX mode telephones, to Key and Behind Switch mode telephones, and to DLCs.

**NOTE** ► If the switch is part of a private network, the following tasks must also be performed to plan for lines/trunks: Labeling the Network Trunks, PRI Switch Type (LEGEND-PBX or LEGEND-NTWK), and Switch Identifiers. See the *Network Reference* for information.

This chapter contains instructions for completing each of these tasks. You should become familiar with line/trunk types and options, as well as the requirements of the system before you attempt to perform the procedures in this chapter. It is also critical that you understand what services the local telephone company can provide.

---

## Identifying Line/Trunk Jacks

Identifying line/trunk jacks consists of the following tasks:

1. Determining which line/trunk jack types are available according to the types of modules in the control unit.
2. Matching incoming trunks to the jacks that support them.
3. Designating jacks for auxiliary equipment (if any).

This section contains instructions for completing all of these tasks.

**Forms Needed**

- Form 1, System Planning
- Form 2c, System Numbering: Line/Trunk Jacks

You also need the local telephone company’s line/trunk information.

**Module Types and Line/Trunk Jack Types**

The line/trunk jack type is determined by the type of module. Table 3-1 lists the line/trunk jack types and the incoming line/trunk or auxiliary equipment that can be connected to these jacks.

**Table 3-1. Line/Trunk Jack Types**

Module Type	Line/Trunk Jack Type	Number of Jacks	Used to Connect
412 LS-ID-TDL <sup>1</sup>	Loop-start (LS)	4	Line/Trunk Types: Basic, Special Purpose (FX, WATS)
408 GS/LS-ID-MLX <sup>1</sup>	Ground-start/loop-start (GS/LS)	4	Line/Trunk Types: Basic, Special Purpose (FX, WATS)
800 GS/LS-ID <sup>1</sup>		8	Auxiliary Equipment: Music-On-Hold, Loudspeaker paging system, Maintenance Alarm
800 DID (Hybrid/PBX)	DID	8	DID
800 NI-BRI	NI-1 BRI	8 (16 channels)	NI-1 BRI
400EM	Tie	4	4-wire E&M tie line
100D 100R INA 100 DCD	DS1	1 (24 channels)	T1, T1 Switched 56 Data, PRI

<sup>1</sup> Module designations containing “ID” indicate that the module supports Caller ID.

- NOTES** ►
- You cannot mix T1 and Primary Rate Interface (PRI) service on the same 100D,100R INA, or 100 DCD module. Any of the following AT&T Switched Network (ASN) Services can be provided through a T1 or PRI facility: Megacom<sup>®</sup> WATS, Megacom 800, Software Defined Network (SDN), and MultiQuest<sup>®</sup>. PRI also supports Call-by-Call Service Selection and some ACCUNET<sup>®</sup> switched digital services. T1 supports Shared Access for Switched Services (SASS) and ACCUNET Switched Digital Service (or other circuit-switched data service) at 56 kbps. Both support Dialed Number Identification Service (DNIS).
  - The MERLIN MAGIX Integrated System supports Centrex service with loop-start lines only. The system does *not* support a timed switchhook flash with ground-start trunks or ground-start emulation on DS1 facilities in any mode of operation (Hybrid/PBX, Key, or Behind Switch).
  - The MERLIN MAGIX Integrated System does not support timed switchhook flash with NI-1 BRI lines. Pressing the Recall button on a system telephone is ignored. If the Recall button is stored as part of an Auto Dial string, it is not sent out over an NI-1 BRI line, or stored for Redial or Saved Number Dial when calling on an NI-1 BRI line.
  - The MERLIN MAGIX Integrated System does not support BRI features such as Local Area Signaling Services (LASS), central office Transfer, and other Centrex offerings.
  - Trunks used for incoming caller line identification (ICLID) service should not have any equipment other than the MERLIN MAGIX line port connected to them. Connecting other equipment (such as alarms, autodialers, and so on) may result in distorted or lost ICLID data.
  - Trunks assigned as either the system Music-On-Hold or External Page Port cannot be assigned as a Group Calling trunk.

### LS-ID Delay Option

The LS-ID Delay option is available through the 800 GS/LS-ID, 408 GS/LS-ID-MLX, and 412 LS-ID-TDL modules and is programmed for each trunk. The LS-ID Delay option prevents applications and adjuncts from answering before the Caller ID information is processed.

Use the LS-ID Delay option only if the following conditions apply:

- If the adjunct or application cannot be programmed to answer on the second or later ring, see the documentation for the adjunct or application.
- If the first option applies (as with headsets using Auto Answer All) and line buttons receiving Caller ID cannot be programmed for Delay Ring—for example, Auto Attendants.

- NOTES** ▶
- It is recommended that trunks with the LS-ID Delay option be used as incoming trunks only.
  - If no delay is programmed, the caller may hear one or two extra bursts of ringback while the person receiving the call has not yet heard a ring.
  - If the option is programmed on a two-way trunk, the system will not seize a trunk from the pool for an outgoing call when that trunk is receiving an incoming call.
  - Use the LS-ID Delay option if the adjunct or application does not allow line buttons to be set for Delay Ring.
  - If the option is programmed on a trunk programmed as a Group Calling trunk, the system will not dispense the call to either the Group Calling queue or to any Calling Group member until either the LS-ID Delay timer expires or the system software is informed that ICLID information is unavailable.

### Planning Form Instructions

Refer to the completed Control Unit Diagram on Form 1 to mark line/trunk jack types on Form 2c:

1. For each module with line/trunk jacks noted in the Control Unit Diagram (beginning with Slot 01), write in the type of module and its slot number in the Module Type and Slot No. column of Form 2c; after the appropriate Log. ID number, draw a line to indicate the logical IDs (and, therefore, the line/trunk jacks) that correspond to that module.

If the system has 100D, 100R INA, or 100 DCD (DS1) modules, keep in mind that, even though the module has only one physical jack, the 100D, 100R INA, or 100 DCD module supports up to 24 endpoints. Therefore, 24 logical IDs and associated line/trunk numbers are assigned to each module.

The 800 NI-BRI module supports up to 16 endpoints, therefore 16 logical IDs and associated line/trunk numbers are assigned to each 800 NI-BRI module even though the module has only eight physical jacks.

2. In the Jack Type column of Form 2c, for all modules except 100D, 100R INA, and 100 DCD modules, write the jack type for each logical ID. Use the codes shown in Table 3-2.

**Table 3-2. Codes for Line/Trunk Jacks**

Jack Type Code	Line/Trunk Type
LS	Loop-start
GS/LS	Ground-start/loop-start
DID	DID
Tie	Tie
T1-GS	DS1 connectivity used to emulate GS
T1-LS	DS1 connectivity used to emulate LS
T1-Tie <sup>1</sup>	DS1 connectivity used to emulate tie or for digital data service
T1-DID	DS1 connectivity used to emulate DID
T1-S56	DS1 connectivity used for digital data
PRI	DS1 connectivity used for PRI service
BRI	NI-1 BRI

<sup>1</sup> T1 Switched 56 digital data is also available using T1-Tie trunks. See the “[Tie Trunks](#)” section later in this chapter.

3. For systems that include a 100D, 100R INA, or 100 DCD module, do *one* of the following in the Jack Type column:
  - If the module will emulate trunks or will be used for digital data transmission, write the appropriate jack type code (see [Table 3-2](#)) for the channels being used (for example, T1-LS, T1-TIE, or T1-S56), or write T1 if the channels are not being used at this time.
  - If the module will connect services (such as Megacom and Megacom 800), write PRI for all 24 logical IDs of PRI-type modules.

You may now match incoming trunks to the available jacks, as described in the next section.

## Incoming Line/Trunk Type

Use the procedure in this section to match incoming trunks to the continuous sequence of line/trunk jacks on the control unit, beginning with the first line/trunk jack (logical ID 1).

**NOTE** (Key mode only) If the system is registered with the FCC registration number of AS59CM-7914-KF-E, and the processor module has been modified for Permanent Key mode, you can connect loop-start trunks to the GS/LS type line/trunk jacks. With the KF registration number, ground-start trunks are allowed only when the system includes DS1 connectivity dedicated as a T1 type and the channels are used to emulate ground-start trunks.

This procedure also includes instructions for assigning a label to identify the line/trunk being used.

### Planning Form Instructions

1. In the Incoming Line/Trunk Type column of Form 2c, write the type of line/trunk you plan to connect to each line/trunk jack, T1 channel or BRI channel: Main No., Personal Line, FX (Foreign Exchange), WATS (include band), DID, or Tie. (Contact the local telephone company for line/trunk information.) Use the following guidelines:
  - Group trunks together according to type: basic loop-start or ground-start trunks, and special-purpose loop-start or ground-start trunks. (DID, PRI, T1, BRI, and tie trunks are automatically grouped according to type since they require specific types of modules.) The local telephone company supplies the information you need to identify the specific trunks connected to each line/trunk jack on each DID and tie trunk module and each channel on 100D, 100R INA, 100 DCD, or 800 NI-BRI modules.
  - Use line/trunk jacks at the beginning of the sequence for basic ground-start and/or basic loop-start trunks. Use jacks later in the sequence for special-purpose trunks such as WATS or FX.
  - If a line/trunk, such as WATS, is only inbound or only outbound (not two-way), include that information along with the line/trunk type.
2. If the jack type shown in the Jack Type column is GS/LS, then write either GS or LS to indicate the line/trunk type in the Incoming Line/Trunk Type column. For a T1 or NI-1 BRI trunk not used at this time, write unequipped. For other T1 or PRI facilities, the kind of service connected (such as Megacom 800) will be filled in later.

**NOTE** In the next step, be sure the line/trunk type associated with each telephone number matches the jack type. Also, if you have 800 NI-BRI modules or have dedicated 100D, 100R INA, or 100 DCD module channels to emulate loop-start, ground-start, and/or tie trunks, the local telephone company will supply the telephone number associated with each of the channels on the BRI or DS1 facility.

3. In the Telephone Number or Equipment column, write the telephone number for each incoming line/trunk (as supplied by the local telephone company) on the row with the logical ID for its line/trunk jack. If you do not know the telephone number, leave the column blank and enter the information later.

- In the Label column, write the label for each line/trunk on the appropriate line. The labels can contain up to seven characters, including capital letters, numbers, ampersands (&), dashes (-), spaces, colons (:), asterisks (\*), and pound signs (#).

The remaining entries on this form are covered in “[Selecting Line/Trunk Options](#),” later in this chapter. If the system does not have auxiliary equipment (for example, Music-On-Hold or a loudspeaker paging system), skip to “[Selecting Line/Trunk Options](#),” in this chapter.

Figure 3-1 shows an example of a partially completed Form 2c.

Module Type and Slot No.	Log. ID	Jack Type (LS, GS, DID, Tie, etc.)	Trunk No.	Pool Dial-Out Code†‡	Re-number To	Incoming Trunk Type (Main No., Personal Line, WATS, FX, etc.)	Telephone Number or Equipment	Label
008 MLX 01	1	GS	801			Basic GS	555-1200	1, LOCAL
	2	GS	802			Basic GS	555-1201	2, LOCAL
	3	GS	803			Basic GS	555-1202	3, LOCAL
	4	GS	804			Basic GS	555-1203	4, LOCAL
	5	GS	805			Basic GS	555-1204	5, LOCAL
	6	GS	806			Basic GS	555-1205	6, LOCAL
	7	GS	807			Basic GS	555-1206	7, LOCAL
	8	GS	808			Basic GS	555-1207	8, LOCAL
008 MLX 02	9	GS	809			Basic GS	555-1208	9, LOCAL
	10	GS	810			Basic GS	555-1209	10, LOCAL
	11	GS	811			Basic GS	555-1210	11, LOCAL
	12	GS	812			Basic GS	555-1211	12, LOCAL
	13	GS	813			Basic GS	555-1212	13, LOCAL
	14	GS	814			Basic GS	555-1213	14, LOCAL
	15	GS	815			Basic GS	555-1214	15, LOCAL
	16	GS	816			Basic GS	555-1215	16, LOCAL

Figure 3-1. Partially Completed System Form 2c

## Jacks for Auxiliary Equipment

Use these instructions only if the system has auxiliary equipment: Music-On-Hold, a loudspeaker paging system, or a Maintenance Alarm. Otherwise, skip to the next section, "[Function Information](#)."

Only connect auxiliary equipment to loop-start or ground-start/loop-start jack types. You cannot use a line/trunk jack for auxiliary equipment on an 800 DID, 100D, 100R INA, 100 DCD, 800 NI-BRI, or 400EM module.

To make it easier to add incoming trunks in the future, connect auxiliary equipment to the last line/trunk jack or jacks on the rightmost module with either LS or GS/LS line/trunk jacks.

### Planning Form Instructions

1. Review the floor plan and Equipment List (if available) to confirm the auxiliary equipment to be connected.
2. At the top of Form 2c, fill in the line/trunk numbers for each type of auxiliary equipment planned:
  - For Music-On-Hold, write the line/trunk number of the line/trunk jack designated for this equipment, and identify the music source (tape player, radio, or Music-On-Hold) on the Music-On-Hold line.

**NOTE** ► If the system uses equipment that rebroadcasts music or other copyrighted materials, the customer may be required to obtain a copyright license from, and pay license fees to, a third party such as the American Society of Composers, Artists, and Producers (ASCAP) or Broadcast Music Incorporated (BMI). The Magic On Hold<sup>®</sup> system, which does not require such a license, can be purchased from an Avaya representative.

- For Loudspeaker Paging, on the appropriate row, write the line/trunk numbers (maximum of 3) of the line/trunk jack or jacks designated for the paging equipment.
- For Maintenance Alarm, on the appropriate row, write the line/trunk number of the line/trunk jack designated for the Maintenance Alarm external alert.

**NOTE** ► The last item, Loop-Start Reliable Disconnect, refers to a line/trunk option and is completed later in this chapter.

## Function Information

If the system has a voice messaging system (such as Octel 100 Messaging), you can use the Function column to indicate which service is available for those jacks. You can also use this column to indicate whether a jack connects a Personal Line and, therefore, has an owner.

### Planning Form Instructions

In the Function column of Form 2c, do *either* of the following:

- If a jack is used for a special purpose, note the purpose. For example, if the system has Octel 100 Messaging with fax capability, indicate the service by writing one of the following for the appropriate jack:
  - For Automated Attendant, write AA.
  - For Call Answer, write CA.
  - For Information Service, write I S.
  - For Message Drop, write MD.
  - For Voice Mail, write VM.
  - For Fax Response, write FR.
- If a jack is used for a Personal Line, write the extension number of the telephone.

Proceed to the next section, [“Selecting Line/Trunk Options.”](#)

---

## Selecting Line/Trunk Options

You can select the following options for the incoming trunks connected to the system:

- Loop-Start Reliable Disconnect
- Outmode Signaling
- Toll Call Prefix Dialing Requirements (Toll Type)
- Hold Disconnect Interval
- QCC Operator to Receive Calls (Hybrid/PBX mode only)
- QCC Queue Priority (Hybrid/PBX mode only)
- Pools
- Remote Access
- DS1 Connectivity
- Tie Trunks
- DID Trunks
- NI-1 BRI Connectivity

**NOTE** ► If incoming trunks are part of a private network, the Switch Identifier must also be programmed. See the *Network Reference* for information.

This section contains instructions for selecting line/trunk options for incoming trunks. In addition, because some systems outside of the U.S. have slow dial tones from their local telephone companies, this section also includes instructions for compensating for a slow dial tone.

### Forms Needed

- Form 1, System Planning
- Form 2c, System Numbering: Line/Trunk Jacks
- Form 3a, Incoming Trunks: Remote Access
- Form 3b, Incoming Trunks: DS1 Connectivity (100D, 100R INA, or 100 DCD Module)
- Form 3c, Incoming Trunks: Tie
- Form 3d, Incoming Trunks: DID
- Form 3i, Incoming Trunks: BRI Options (800 NI-BRI module)

## Loop-Start Reliable Disconnect

Disconnect signals on incoming calls on loop-start trunks are classified as one of the following:

- **Reliable.** A disconnect signal is sent to the system by the local telephone company shortly after a caller hangs up. Loop-start trunks must be reliable for remote call forwarding and trunk-to-trunk transfer. Also, reliable disconnect is strongly recommended for remote call transfers and VMSs such as the MERLIN Messaging System.

**NOTE** ► If the local telephone company uses a short hold disconnect interval, do not specify a reliable disconnect signal. Also, to ensure proper voice messaging operation, and for private network systems, the system must have ground-start or loop-start trunks with reliable disconnect.

- **Unreliable.** A disconnect signal is *not* sent by the local telephone company on every call.

### SECURITY ALERT:

*Toll fraud can occur when loop-start lines/trunks are used with unreliable disconnect. If the calling party stays on the line after the called party hangs up, the central office will return a dial tone at the conclusion of the call enabling the caller to place another call as if it were being placed from your company.*

Since the disconnect signal on most loop-start trunks is unreliable, the factory setting for the disconnect signal is Unreliable.

Before you change the setting, check with the telephone company to determine whether the disconnect signals for the loop-start trunks are reliable and to obtain the length of the hold disconnect interval.

If you select Reliable disconnect, you can set the interval after which the line/trunk is released as described in the [“Hold Disconnect Interval”](#) section later in this chapter.

Trunk-to-trunk transfer is programmed on a per-extension basis and should remain disabled even if the loop-start trunk has reliable disconnect. See the [“Trunk-to-Trunk Transfer”](#) section in Chapter 4.

### Planning Form Instructions

At the top of Form 2c, under the Loop-Start Reliable Disconnect heading, choose one of the following:

- If the loop-start trunks have an unreliable disconnect signal, check the No box (the factory setting).
- If the loop-start trunks have a reliable disconnect signal, check Yes.

## Outmode Signaling

The system is factory-set to generate Touch-Tone signals when users dial outside calls. Identify any rotary-dial trunks that are connected to the system so that rotary-dial signals can be used for these trunks.

**NOTE** ► Touch-Tone, single-line telephone users cannot make calls using rotary-dial trunks unless their telephones allow them to switch between Touch-Tones and rotary dial pulses. Check with the local or long-distance telephone company to determine which, if any, trunks connected to the system are rotary-dial trunks.

### Planning Form Instructions

In the Outmode Signaling column on Form 2c, do *one* of the following:

- For Touch-Tone trunks (factory setting), put a check in the TT column.
- For rotary-dial trunks, put a check in the R column.

## Toll Type Prefix Required

Toll Type allows the system to classify calls as either local or toll, based on the number dialed by the user. Normally, people have to dial a toll call prefix (1 or 0) before dialing the area code and telephone number for a toll call. In some areas, this is not necessary; dialing a prefix depends on local telephone company requirements and the type of line/trunk used.

Find out from the local telephone company which trunks require a toll call prefix. This information is used by the system when a toll call is placed by an extension on ground-start or loop-start trunks.

For reliable Toll Restriction, telephone company trunks must require 1 or 0 for toll calls. Also, the Toll Type feature does *not* apply to tie trunks.

### Planning Form Instructions

On Form 2c, in the Toll Type Prefix Required for LD column, check Yes next to any trunks on which people need to dial a prefix when placing toll calls.

## Hold Disconnect Interval

This option allows you to set the number of milliseconds (ms) before the line/trunk is released when a caller on hold hangs up and abandons the call. Local telephone companies use either a long (450 ms) or short (50 ms) interval. The factory setting for the system is the long interval, since it is the interval used by most telephone companies.

Check with the local telephone company for the disconnect interval used.

If the local telephone company uses the short interval, you must change the factory setting. If you do not change the setting, when a caller waiting on hold hangs up, the line/trunk is not released.

### Planning Form Instructions

In the Hold Disc. Interval column on Form 2c, do *either* of the following:

- To change to a short hold disconnect interval (50 ms), put a check in the Short column.

**NOTE** ► If the local telephone company uses a short hold disconnect interval, be sure you have checked No for Loop-Start Reliable Disconnect, as described earlier in this section.

- To keep the factory setting, a long hold disconnect interval (450 ms), put a check in the Long column.

---

## QCC Operator to Receive Calls (Hybrid/PBX Mode Only)

Use these instructions only if the system has one or more QCCs. Otherwise, skip to [“Remote Access.”](#)

Assigning the QCC operator to receive calls on a line/trunk determines whether incoming calls on the line/trunk ring into the QCC queue and which QCC operator position answers the calls. This applies to Hybrid/PBX mode only.

- NOTES** ►
- If an operator presses the programmed Backup On (or Position Busy) button on the console, any incoming calls are directed to other operator positions (regardless of whether they normally receive such calls) or to the programmed backup extension number. For more information, see [“Position-Busy Backup”](#) in the [“Queued Call Console \(Hybrid/PBX Mode Only\)”](#) section of Chapter 4.
  - Trunks assigned to ring into the QCC queue cannot be assigned as Group Calling lines/pools.

### Planning Form Instructions

For each ground-start, loop-start, and automatic-in tie line/trunk on Form 2c, write *one* of the following in the QCC Operator to Receive Calls column:

- If you do not want the calls received on the line/trunk to ring into the QCC queue, write No (factory setting).
- If you want all QCC operators to receive incoming calls on a line/trunk, write All.
- If you want to specify one or more QCC operators to receive incoming calls on a line/trunk, write any combination of the extension numbers for up to four operator positions.

If you wrote All, or specified extension numbers in this procedure, then proceed to the next section, [“QCC Queue Priority Level \(Hybrid/PBX Mode Only\).”](#) Otherwise, skip to the following section, [“Pools \(Hybrid/PBX Mode Only\).”](#)

## QCC Queue Priority Level (Hybrid/PBX Mode Only)

The QCC queue priority determines the order in which calls on each line/trunk are sent to QCC operator positions. You set the priority for each individual line/trunk.

Considerations to be used in deciding the priority level are discussed in the description of Queued Call Consoles in the *Feature Reference*.

Since incoming calls on DID and non-automatic-in tie trunks route to specific extension numbers, you cannot assign a QCC queue priority for these types of trunks. Also, QCC queue priority cannot be assigned to private network tandem trunk types (LEGEND-PBX or LEGEND-NTWK). However, calls received can be directed to the Listed Directory Number (LDN) which has queue priority set.

### Planning Form Instructions

On Form 2c, for each line/trunk with All or an extension number in the QCC Operator to Receive Calls column, write the priority level (1 to 7) in the QCC Queue Priority Level column for each line/trunk used for incoming calls. (A value of 1 indicates the highest priority; a value of 7 indicates the lowest. The factory-set priority for calls received on all trunks programmed to ring in the queue is 4.)

### Pools (Hybrid/PBX Mode Only)

The system can have up to 11 pools with factory-set dial-out codes of 70 and 890 through 899. When the system is set up, pools are assigned automatically (see the *Feature Reference*). If you want any lines/trunks grouped in a pool, you must manually assign each line/trunk to the pool of your choice. Use the instructions in this section.

- NOTES** ▶
- Pools can be assigned to Calling Groups and all trunks within the pool are directed to members of the Calling Group. Individual trunks within a pool cannot be assigned to Calling Groups.
  - If the pool contains any dial-in trunks (such as DID trunks), the pool cannot be assigned to a Calling Group. Also, pools with private network tandem trunks should not be assigned to Calling Groups.

Decide whether to change the dial-out codes. Apply the same considerations as you do for reassigning extension numbers.

### Planning Form Instructions

1. Use the following guidelines to determine which trunks to group into pools:
  - Each pool should contain trunks of the same type (basic, WATS, FX, or tie). Ground-start and loop-start trunks of the same type (for example, WATS or FX) can be mixed in the same pool.
  - Do not mix different calling areas of WATS or FX trunks to different cities or include both inbound-only and outbound-only trunks within the same pool. DID trunks and/or trunks used for auxiliary equipment cannot be grouped in pools. T1 Switched 56 data lines should not be mixed with trunks used for voice calls. If you plan to assign Pool buttons on telephones, do not group dial-in-only tie trunks in pools.
  - In typical pooled systems, all the trunks are grouped in pools except those mentioned previously, single special-purpose trunks, and any basic trunks that are needed as Personal Lines assigned to a button on a telephone.
  - Group the trunks for the main pool first. This should be the local trunks capable of accepting 411, 911, and so on. If your system includes ground-start basic trunks, reassign them from the dial-890 extension pool to the main pool. After these trunks are assigned to the main pool, decide how to arrange the rest of the trunks in the remaining pools. For private network systems, refer to the *Network Reference* for additional information.

2. Indicate the dial-out code in the Pool/Dial-Out Code column on Form 2c by doing *either* of the following:
  - To keep the factory set dial-out code, write the code.
  - To change the factory-set dial-out code:
    - Write the new number in the Renumber to column.
    - On Form 2d, System Numbering: Special Renumbers, write the new number in the Renumber to column of the Pools section of the form.
3. On Form 2c, use the Function column to identify different calling areas of WATS trunks and different destinations of FX trunks.
4. Proceed to the next section, [“Remote Access.”](#)

## Remote Access

### SECURITY ALERT:

*The Remote Access feature of your system, if you choose to use it, permits off-premises callers to access the system from a remote telephone by using an 800 number or a 7- or 10-digit telephone number. The system returns an acknowledgment signaling the user to enter his or her barrier code, which is selected and programmed by the System Manager. After the barrier code is accepted, the system returns dial tone to the user. If you do not program specific egress restrictions, the user will be able to place any call normally dialed from a telephone associated with the system. Such an off-premises network call is originated at, and will be billed from, the system location.*

*The Remote Access feature, as designed, helps the customer, through proper programming, to minimize the ability of unauthorized persons to gain access to the network. Most commonly, telephone numbers and codes are compromised when overheard in a public location, through theft of a wallet or purse containing access information, or through carelessness (writing codes on a piece of paper and improperly discarding it). Additionally, hackers may use a computer to dial an access code and then publish the information to other hackers.*

*(See Appendix A, [“Customer Support Information,”](#) for more information about security.)*

Use these instructions only if remote users need access to the system. Systems that are part of a private network need to use these instructions to modify Remote Access so that users can access remote trunks. Otherwise, skip to the next section, [“DS1 Connectivity \(100D, 100R INA, or 100 DCD Module\).”](#)

The Remote Access feature allows people to use the system from a remote location. It also allows remote system programming and maintenance by a qualified technician.

You can assign Remote Access to any incoming line/trunk connected to the system except T1 Switched 56 data facilities, DID and dial-in tie trunks, and private network tandem trunks. (For DID, the routing digits supplied by the central office must match the Remote Access code.)

This section contains instructions for:

- Renumbering the Remote Access code from the factory setting
- Allowing access to the Automatic Callback feature
- Designating trunks for Remote Access
- Specifying shared or dedicated access
- Assigning barrier codes and class-of-restriction for security
- Allowing access to private network tandem trunks

For detailed information about these options, see the *Feature Reference*.

You may want to assign Remote Access to only a few trunks and increase the number later if more are needed.

- NOTES** ►
- If you want to allow Remote Access on DID trunks, the routing digits supplied by the central office must match the factory-set Remote Access code (889) or the Remote Access code assigned to the system in the following procedure.
    - Trunks programmed for both Remote Access and Group Calling will receive Remote Access treatment only.
    - Remote Access callers may not log in to a Calling Group but may call the Calling Group by dialing the group access number.
    - Private network calls may use the Remote Access feature if the Remote Access code is included in the non-local dial plan.

### Planning Form Instructions

1. See [“Numbering the System”](#) in Chapter 2. Review the numbers available in the numbering plan you have selected. Before you begin planning Remote Access, to assure that TTRs are available, check the Control Unit Diagram on Form 1 to verify that one or more of the following types of modules are present: 008 OPT, 800 DID (Hybrid/PBX mode only), 800 GS/LS-ID, 016 (T/R), 016 ETR, 412 LS-ID-TDL, or 024 TDL.
2. Under the DID and Private Network Tie Trunks heading at the top of Form 3a, Incoming Trunks: Remote Access, do *either* of the following:
  - To keep the factory-set access code, check Remote Access Code: 889 and proceed to Step 3.
  - To change the factory-set access code:
    - Check Renumber to and write the new number on the line provided.
    - On Form 2d, System Numbering: Special Renumbers, write the new number in the Renumber to column of the Remote Access Code section at the bottom of the form. Proceed to Step 3.

3. Under the Automatic Callback heading at the top of Form 3a, check *either* of the following:
  - If you do not want remote callers to use the Automatic Callback feature, check Disable (factory setting).
  - To allow remote callers to use this feature, check Enable.

**NOTE** ► Private network calls to Remote Access cannot use the Automatic Callback feature.

4. Under the Barrier Required for Private Network Tie Trunks heading, check *either* of the following:
  - If any of the following conditions apply, check Yes.
    - You plan to assign barrier codes to these trunks.
    - Private network Tie calls are allowed access to PSTN trunks using ARS.
    - Private network Tie calls pass through the system (use Tandem switching).
  - If no barrier codes are planned for these trunks, check No.

 **SECURITY ALERT:**

*To help prevent toll fraud, barrier codes should always be assigned. The barrier codes should also be the maximum length allowed.*

5. Under the Barrier Codes Required for Non-Tie Trunks (DID, PRI private network calls, and PRI Dial Plan routing) heading, check *one* of the following:
  - If any of the following conditions apply, check Yes.
    - You plan to assign barrier codes to these trunks.
    - Private network PRI calls are allowed access to PSTN trunks using ARS.
    - Private network PRI calls pass through the system (use Tandem switching).
  - If no barrier codes are planned for these trunks, check No.

 **SECURITY ALERT:**

*To help prevent toll fraud, barrier codes should always be assigned. The barrier codes should also be the maximum length allowed.*

6. Remote Access should not be assigned to DID trunks and private network tandem trunks that are used for incoming customer calls. However, for all trunks to which you are assigning Remote Access:
  - a. Transfer the information from Form 2c, System Numbering: Line/Trunk Jacks to Form 3a:
    1. Write the logical ID and line/trunk number in the applicable columns.
    2. Check either the DID or Priv. Net. Tie Trunk column or the Non-Tie Trunk column.
    3. Complete the Line/Trunk Type and Description column. Include the different calling areas of WATS trunks and different destinations of FX trunks. If a private network trunk, write Network.

- b. For each line/trunk, check the Dedicated column (to indicate that it is always used for Remote Access) or the Shared column (to indicate that it is used for Remote Access when the system is in Night Service operation). Do not check either column for private network trunks.
  7. For Class-of-Restriction without Barrier Codes on Form 3a (page 3), complete the DID and Private Network Tie Trunks and Non-Tie Trunks sections as follows:
    - a. Under the Network Calls heading, check one of the boxes using the following information:
      - If the switch is not part of a private network, check None.
      - If the switch is part of a private network, and tandem calls will pass through this system, check Tandem.
      - If the switch is part of a private network, and network calls will be allowed to access PSTN trunks, check ARS.

**NOTE** ► If Tandem or ARS is selected under Network Calls, the Restriction should be set to Unrestricted. For additional information on private networks, see the *Network Reference*.

- b. For Restriction, check one of the following three boxes: Unrestricted, Outward Restrict (to keep the factory setting), or Toll Restrict.

 **SECURITY ALERT:**

*It is recommended that Outward Restrict be set at all times; otherwise, toll fraud can occur. If the switch is part of a private network and restrictions need to be changed from Outward Restricted, barrier codes should be required.*

- c. Under the Disallowed List Access heading, check the box if you plan to assign disallowed lists.

**NOTE** ► Instructions for filling in the ARS Restriction Level and Disallowed List numbers are included in Chapter 4, “Features.”

8. Form 3a (page 4) identifies programming information for four barrier codes. If more barrier codes are planned, make the appropriate number of copies of Form 3a (page 4). A maximum of 16 barrier codes is allowed.

 **SECURITY ALERT:**

*Barrier codes of at least 11 digits should be assigned to help prevent toll fraud.*

For Class-of-Restriction with Barrier Codes on Form 3a (page 4), do the following for each barrier code:

- a. Write the barrier code number in the space provided, numbering them sequentially beginning with 1.
  - b. Write the 4- to 11-digit barrier code in the Digits space. The star is added to the end of the barrier code. For security reasons, you may want to record the code elsewhere.

- c. For Restriction, check one of the following three boxes: Unrestricted, Outward Restrict (to keep the factory setting), or Toll Restrict.
- d. Under the Disallowed List Access headings, check the boxes if you plan to assign disallowed lists.

**NOTE** ► Instructions for filling in the ARS Restriction Level and Disallowed List numbers are included in Chapter 4, “Features.”

Proceed to the next section, “[DS1 Connectivity \(100D, 100R INA, or 100 DCD Module\)](#).”

## **DS1 Connectivity (100D, 100R INA, or 100 DCD Module)**

Use these instructions only if the system has a 100D, 100R INA, or 100 DCD module. Otherwise, skip to the Planning Form Instructions in “[Tie Trunks](#).”

Digital Signal 1 (DS1) connectivity involves the transmission of digital signals in DS1 format. The interface that enables the system to allow DS1 connections is the 100D, 100R INA, or 100 DCD module. The system can have up to a total of three 100D, 100R INA, or 100 DCD modules. Each 100D, 100R INA, or 100 DCD module supports up to 24 logical endpoints (IDs) or ports (one for each channel), even though the module has only one jack.

The 100D, 100R INA, or 100 DCD module can be configured to operate with either of the following types of service:

- **T1** (factory setting). To transmit and receive voice and analog data and, with T1 Switched 56 service, digital data.
- **PRI** (Primary Rate Interface). To transmit and receive voice, analog, and digital data.

To ensure the proper protocol between both ends of the DS1 connection, the following options should be set for both types of service:

- Type of Service
- Frame Format
- Suppression (Line Code)
- Signaling mode
- Line Compensation
- Clock Synchronization
- Channel Service Unit (CSU) setting

Additional settings must be entered for both services, especially for PRI and T1 Switched 56 service. Appropriate settings are determined by the transmission facility to which the module is connected and/or is supplied by the service provider. This section contains instructions for both T1 and PRI services.

**NOTE** ► PRI service requires that the service provider's switching equipment be either a 4ESS Generic 13 through 16, 5ESS Generic 6, 5ESS serving the FTS2000 (federal government only) network, DMS-100, DMS-250, or DEX600E.

If DS1s are to be used for private networks, see the *Network Reference* before you begin this section and as you work through these instructions.

### Planning Form Instructions

On Form 2c, System Numbering: Line/Trunk Jacks:

1. For all trunks listed as "PRI" in the Jack Type column:

**NOTE** ► You cannot use Channel 24 for services.

- a. Write the kind of service to be connected to each channel in the Incoming Line/Trunk Type column. If the PRI channel is being used in a private network, write NTWK and the switch identifier in this column.
  - b. Write unequipped in the Incoming Line/Trunk Type column for any channel not used at this time.
2. For all trunks listed as T1-Tie that do not show an unequipped entry in the Incoming Line/Trunk Type column, write the kind of service connected to each channel in the Incoming Line/Trunk Type column.

**NOTE** ► If you use common-channel signaling, you cannot use Channel 24 and program the module for tie-trunk emulation.

3. Select settings for T1 and T1 Switched 56 (see the next section, "[T1 Service](#)"). For T1 Switched 56 service, you must also complete the "[T1 Switched 56 – Network](#)" section.

### T1 Service

T1 service allows the emulation of different analog lines. You can also order services, such as Megacom 800, over the channels. The capacity, however, is limited to voice calls and data calls using a modem. In addition, T1 supports ACCUNET Switched Digital Service (or other circuit-switched data service) at 56 kbps when the T1 channel or T1-Tie trunk is configured as T1 Switched 56. The system allows T1 service to provide tandem PRI service in a private network.

The planning form instructions below apply to both T1 and T1 Switched 56 service except where noted. If you are configuring channels for T1 Switched 56 service, complete these instructions then proceed to the "[T1 Switched 56 – Network](#)" section that immediately follows. If configuring T1-Tie trunks for T1 Switched 56 service, proceed to the Planning Form Instructions in "[Tie Trunks](#)" section after completing these instructions. If you are planning to use T1 service as PRI trunks in a

private network, check the PRI box under Type of Service on Form 3b (page 1). See the *Network Reference* for more information regarding configuration for use in a private network.

### Planning Form Instructions

Fill in the following on Form 3b (page 1), Incoming Trunks: DS1 Connectivity (100D, 100R INA, or 100 DCD Module), for each 100D, 100R INA, or 100 DCD module in the system:

1. In the Module Slot No. space, write the number of the control unit slot that contains the module (see the Control Unit Diagram on Form 1).

**NOTE** ► If more than one 100D, 100R INA, or 100 DCD module is used, complete the first box, Module 1, to show the options assigned to the 100D, 100R INA, or 100 DCD module in the lowest number control unit slot. Use the second box for the second lowest-numbered slot, and the last box for the highest-numbered slot.

2. Under Type of Service, check T1 (the factory-setting).

**NOTES** ►

- For T1 or T1 Switched 56 service, the T1 box must be checked on the form. (If you leave this blank, and T1 is not specified during programming, the 100D, 100R INA, or 100 DCD module will not be programmed.)
- Steps 3, 4, 5, and 6 must match the service provider settings. Check with the provider if necessary. See [“Obtaining Telephone Company Information,”](#) in Chapter 1, for more information.

3. In the table under the T1 Trunks heading, write the channel number or numbers for each trunk type and/or, for Tie or All Tie, check the Tie-PBX, Toll, or S56 boxes.
4. Under the Frame Format heading, do *either* of the following:
  - To retain the factory setting, check D4 Compatible.
  - To change the factory setting, check Extended Superframe (ESF).
5. Under the Suppression (Line Code) heading, do *either* of the following:
  - To retain the factory setting, check AMI-ZCS.
  - To change the factory setting, check B8ZS.
6. For T1 operation only, under the Signaling Mode heading, for all boxes that describe T1 modules, do *either* of the following:
  - To retain the factory setting of robbed-bit signaling, check Robbed-Bit Signaling (RBS).
  - To change the factory setting to common-channel signaling, check Common-Channel Signaling (CCS).

**NOTE** ► CCS is not an option with T1 when you use a 100D or 100 DCD module of apparatus code 517M15 or later. CCS is used primarily for an earlier “AT&T Proprietary” connection between a MERLIN MAGIX Integrated System and a DEFINITY® or System 25® system. If CCS is required, a prior release of the module is needed. A 100D or 100 DCD module of apparatus code 517M15 or later does not work in the following situations:

- If a 64 kbps clear data channel is required between connected systems *and* PRI is not an option.
- If the customer is replacing a 100D or 100 DCD module programmed as CCS, either an older 100D or 100 DCD module that supports CCS with T1 must be used, or PRI must be programmed on both connected systems.

7. Under the Line Compensation heading:

- a. Fill in the approximate distance (number of cable feet) between the 100D, 100R INA, or 100 DCD module and its channel service unit (CSU) or other far-end connection in the space provided next to Cable Feet.
- b. Use Table 3-3 to select the Line Compensation setting needed. (The factory setting is 1.)

**Table 3-3. Line Compensation Settings**

Setting	dB Loss	Cable Feet <sup>1</sup>
1 (factory setting)	-0.6	0–133
2	-1.2	133–266
3	-1.8	266–399
4	-2.4	399–533
5	-3.0	533–655

<sup>1</sup> Based on 22-gauge cable.

8. If the system includes 800 NI-BRI, 100D, 100R INA, or 100 DCD modules, clock synchronization planning should be completed at the same time. There is only one primary/secondary/tertiary clock for 800 NI-BRI, 100D, 100R INA, or 100 DCD modules, with the same system programming screens used for both types.

Plan your clock source administration to minimize the need for clock switching, which is known to cause noise on active calls.

**NOTE** ► The following information is for planning clock synchronization in systems that are not part of a private network. For planning clock synchronization in a private network configuration, see the *Network Reference*.

Under Priority in the Clock Synchronization section, do *either* of the following:

- If installing only one 100D, 100R INA, 100 DCD module:
  - To keep the factory setting, check Primary (that is, this module provides synchronization for the system).
  - If the synchronization source is other than through the 100D, 100R INA, or 100 DCD module, check None.
- If installing more than one 100D, 100R INA, 100 DCD module, decide which module, if any, provides the primary synchronization:
  - If Module 1 provides clock synchronization, check Primary in the first box (the factory setting).
  - If Module 2 (or Module 3) provides clock synchronization, check Primary in the box that describes that 100D, 100R INA, 100 DCD module.
  - If the synchronization source is other than through a 100D, 100R INA, 100 DCD module, check None.

9. If assigning backup synchronization:

- a. In the box that describes the 100D, 100R INA, 100 DCD module providing secondary synchronization, check Secondary.
- b. In the box that describes the 100D, 100R INA, 100 DCD module providing tertiary backup, check Tertiary.

10. Under the Source subheading in each box, do *either* of the following:

- To retain the factory setting, check Loop (that is, the system uses the clock of the far-end connection).
- To change the setting, check Local (that is, the clock is free-running).

**NOTE** ► The MERLIN MAGIX system must be set to Loop if the clock Source is coming from the network. The Local setting is generated from the MERLIN MAGIX system and must be used whenever connecting two MERLIN MAGIX systems or a MERLIN MAGIX system and a DEFINITY System (Tie trunk). In a Tie trunk configuration, one system *must* have the clock Source set to Local and the other *must* be set to Loop.

11. Under the Activation subheading in each box, do *either* of the following:

- If loop clock synchronization is taking place, check Active (factory setting).
- If the clock is free-running, check Not Active.

**NOTE** ► Normally, the primary synchronization source is set to Active and other modules are set to Not Active.

12. If incoming ground-start or loop-start trunks are to be emulated, then record the CSU setting under the Channel Service Unit heading by doing *either* of the following:
  - To retain the factory setting, check Foreign Exchange.
  - To change the factory setting, check Special Access.
13. For the 100R INA and 100 DCD modules only, do one of the following under “Activation”:
  - To activate the built-in Channel Service Unit, check Activated (the factory setting).
  - To deactivate the built-in Channel Service Unit, check Deactivated.

**NOTE** ► The built-in Channel Service Unit on the 100 DCD module is supported only in Release 1.5 or later systems.

To set up T1 channels for T1 Switched 56 service, continue with the next section. To set up T1 Switched 56 service on T1-Tie trunks, proceed to the section entitled Planning Form Instructions in [“Tie Trunks.”](#) To set up a 100D, 100R INA, or 100 DCD module for PRI service, proceed to the section entitled, [“Planning Form Instructions.”](#)

### T1 Switched 56 – Network

Use these instructions only if channels on a 100D, 100R INA, or 100 DCD module are to be programmed as T1 Switched 56 channels. The instructions provided in the [“T1 Service”](#) section must be completed first.

T1 Switched 56 service provides high speed digital data services (up to 56 kbps per channel) to the network as well as digital Tie trunk services. This allows you to use your T1 facilities for basic digital data and file transfer needs, as well as for more sophisticated personal and/or group videoconferencing.

- NOTES** ►
- T1 Switched 56 service is supported only in Hybrid/PBX or Key mode.
  - Incoming data calls that attempt to route to busy data endpoints, unassigned Dial Plan numbers, or ports that are not equipped with data endpoints will not be connected.

This section contains instructions for configuring those T1 Switched 56 options that apply to the T1 network interface. For information specific to digital Tie trunk planning, refer to the Planning Form Instructions in [“Tie Trunks.”](#) section of this chapter.

The following options are covered in this section:

- Direction
- Incoming and Outgoing Signaling Type
- Incoming and Outgoing Signaling Mode
- Dial Plan Routing options (incoming services)

---

After completing the procedure for filling in the module information on Form 3b, pages 1 and 2, continue to the next section to fill in T1 Switched 56 options.

### Planning Form Instructions

On Form 3b (page 11), T1 Switched 56 Options, for each T1 channel programmed for T1 Switched 56 service:

1. Select the Channel Direction.
  - Select either Incoming, Outgoing, or Two Way. The factory setting is Two Way.
2. Select both the Incoming and Outgoing Signaling Mode.
  - Select either Touch-Tone or Rotary. The factory setting is Touch-Tone.
3. Select both the Incoming and Outgoing Signaling Type.
  - Select either Wink, Auto, or Delay. The factory setting is Wink.

The Incoming Signaling Type selected will determine the Incoming Routing Method:

    - If the Incoming Signaling Type is set to Auto, the Incoming Routing Method is Line Appearance Routing. Incoming data calls are typically terminated at a data extension/endpoint that has a Personal Line appearance. The 1B data call may also terminate at a data extension/endpoint in a Calling Group.
    - If the Incoming Signaling Type is set to Wink or Delay, the Incoming Routing Method is Dial Plan Routing. Incoming data calls are routed by dial plan and may terminate to an SA button on any data extension within the system.

If the switch is part of a private network, data calls can be routed to another switch in the network. T1-emulated tie lines need to be assigned to a pool and programmed to a route. The route must be marked as Data Only.
4. If the Incoming Signaling Type is programmed as Wink or Delay and incoming data calls are routed by dial plan, you may have to manipulate the incoming digits by deleting or adding digits. This is because, in many cases, the digits that are sent by the service provider may not match the programmed dial plan. See the *Network Reference* for more information.

Enter the following Dial Plan Routing options:

- **Expected Number of Digits.** Check the expected number of digits (1–4). The factory setting is 3.
- **Number of Digits to Delete.** Check the number of digits to delete (0–4) in order to match the Dial Plan. The factory setting is 0.
- **Specific Digits to Add.** Enter the specific digits to add (1–9999) to the collected digits in order to determine a routing pattern. If no digits are to be added, check 0. The factory setting is 0.

## PRI Service

Use these instructions only if the type of service on a 100D, 100R INA, or 100 DCD module is PRI. Otherwise, skip to the section, Planning Form Instructions in [“Tie Trunks.”](#)

**NOTE** ► For private PRI network trunks, see the [“T1 Service”](#) section earlier in this chapter and the *Network Reference*. Do not use the PSTN PRI service.

PRI is a standard access arrangement of Integrated Services Digital Network (ISDN) service that may be used to connect the system to another switch over a DS1 facility.

This section contains instructions for recording decisions about the following options for each PRI facility:

- B-channel groups
- PRI services (incoming and outgoing) according to B-channel group
- Line Appearance Routing (incoming services)
- Dial Plan Routing (incoming services; Hybrid/PBX mode only)
- Outgoing Tables (Network Selection Table, Special Services Table, and Call-by-Call Service Table)
- Telephone Number to Send Station Identification or Automatic Numbering Information (SID-ANI)
- Test Telephone Number or Numbers
- Timers and Counters
- Terminal Equipment Identifier (TEI)

After completing the procedure for filling in the module information on Form 3b, pages 1 and 2, continue to the next section to fill in PRI options.

**NOTES** ► The PRI service type must be selected before entering the PRI information during system programming.

- Because of the complexity of the timer, counter, and terminal equipment identifier information, the factory settings should rarely be changed. Incorrect settings can have an adverse affect on the operation of PRI facilities.
- If there is more than one 100D, 100R INA, or 100 DCD module set up for PRI service or you have more than eight B-channel groups assigned to a module, make copies of Form 3b (page 4) as necessary.

## Module Information

Use the procedure in this section to fill in module information on pages 1 and 2 of Form 3b, Incoming Trunks: DS1 Connectivity (100D, 100R INA, or 100 DCD Module). Then proceed to the next section.

## Planning Form Instructions

On Form 3b (page 1), Incoming Trunks: DS1 Connectivity (100D, 100R INA, or 100 DCD Module), for each 100D, 100R INA, or 100 DCD module with PRI service:

1. In the module Slot No. space, write the number of the control unit slot that contains the module (see the Control Unit Diagram on Form 1).

**NOTE** ► If more than one 100D, 100R INA, or 100 DCD module is used, complete the first box, Module 1, to show the options assigned to the 100D, 100R INA, 100 DCD module in the lowest-numbered control unit slot. Use the second box for the second lowest-numbered slot and the last box for the highest-numbered slot.

2. Under the Type of Service heading, check PRI. (During programming, PRI must be selected here *before* the PRI options information is entered. When it is selected, the system restarts.)
3. Under the Switch Type (PRI Service Only) heading, check the PRI switch type. If the switch is part of a private network, check either LEGEND-PBX or LEGEND-NTWK.

**NOTE** ► If the switch is part of a private network and is connected to a DEFINITY switch, select LEGEND-PBX. If the switch is connected to another MERLIN MAGIX system, one switch must be configured as LEGEND-PBX and the other is configured as LEGEND-NTWK. See the *Network Reference* for more information.

4. Under the Frame Format heading, change the factory setting by checking the Extended Superframe (ESF) box.
5. Under the Suppression (Line Code) heading, change the factory setting by checking the B8ZS box.
6. Under the Signaling Mode heading, check Common-Channel Signaling (CCS).

**NOTE** ► CCS is automatically assigned when PRI is selected. Also, Channel 24 cannot be used for voice or data transmissions.

7. Under the Line Compensation heading:
  - a. Fill in the approximate distance (number of cable feet) between the 100D, 100R INA, or 100 DCD module and its CSU or other far-end connection in the space before Cable Feet.
  - b. Use Table 3-4 to select the line compensation setting needed. (The factory setting is 1.)

**Table 3-4. Line Compensation Settings**

Setting	dB Loss	Cable Feet <sup>1</sup>
1 (factory setting)	-0.6	0–133
2	-1.2	133–266
3	-1.8	266–399
4	-2.4	399–533
5	-3.0	533–655

1 Based on 22-gauge cable.

8. If the system includes 800 NI-BRI, 100D, 100R INA, or 100 DCD modules, clock synchronization planning should be completed at the same time. There is only one primary/secondary/tertiary clock for 800 NI-BRI, 100D, 100R INA, or 100 DCD modules, with the same system programming screens used for both types.

If the switch is part of a private network, clock synchronization needs to be coordinated for the entire network. See the *Network Reference* for information.

Plan your clock source administration to minimize the need for clock switching, which is known to cause noise on active calls.

Under Priority in the Clock Synchronization section, do *either* of the following:

- If installing only one 100D, 100R INA, or 100 DCD module:
  - To keep the factory setting, check Primary (that is, this module provides synchronization for the system).
  - If the synchronization source is other than through the 100D, 100R INA, or 100 DCD module, check None.
- If installing more than one 100D, 100R INA, or 100 DCD module, decide which module, if any, provides the primary synchronization:
  - If Module 1 provides clock synchronization, check Primary in the first box (the factory setting).
  - If Module 2 (or Module 3) provides clock synchronization, check Primary in the box that describes that 100D, 100R INA, or 100 DCD module.
  - If the synchronization source is other than through a 100D, 100R INA, or 100 DCD module, check None.

9. If assigning backup synchronization:
- a. In the box that describes the 100D, 100R INA, or 100 DCD module providing secondary synchronization, check Secondary.
  - b. In the box that describes the 100D, 100R INA, or 100 DCD module providing tertiary back up, check Tertiary.

10. Under the Source subheading in each box, do *either* of the following:
  - To retain the factory setting (that is, the system uses the clock of the far-end connection), check Loop.
  - To change the setting (the clock is free-running), check Local.
11. The typical setup for the primary synchronization source is Active, and other modules are set to Not Active. Under the Activation subheading in each box, do *either* of the following:
  - If loop clock synchronization is taking place, check Active (factory setting).
  - If the clock is free-running, check Not Active.
12. Under the Channel Service Unit heading, check Foreign Exchange.

### PRI Options

If the switch is part of a private network, the PRI options are automatically set. If the switch is not part of a private network, after you have completed the module information on pages 1 and 2 of Form 3b, Incoming Trunks: DS1 Connectivity (100D, 100R INA, or 100 DCD Module), use the instructions in this section to record these PRI options:

- Assigning B-channels to groups.
- Associating outgoing and incoming services to the group.
- For groups with incoming services, selecting an incoming routing method (Dial Plan Routing or Line Appearance) and providing routing information.
- For groups with outgoing services, completing the Network Selection, Special Services, and Call-by-Call Service tables.
- Identifying the trunk and telephone numbers sent to the network for caller identification.
- Assigning a test number used for maintenance by the service provider, changing timers and counters from the factory settings, and assigning the Terminal Equipment Identifier (TEI).

All channels assigned to a group must be on the same 100D, 100R INA, or 100 DCD module. Also, the order of the B-channel groups is not important. When programmed for PRI, the single DS1 jack on the 100D, 100R INA, or 100 DCD module supports 23 B-channels (the Channel 24 superframe transmits signaling mode information).

#### CAUTION:

*The order in which channels are assigned within a group must be the exact opposite of the order in which the telephone company's switch hunts through for a channel. Consult with the service provider to determine what the correct order should be.*

### Planning Form Instructions

1. To assign B-channels to groups, determine which channels to group together and then record each group on Form 3b (page 3), under the B-Channel Groups heading:
    - a. Write the group number (1–80) under the B-Channel Group No. heading (start with 1 and number sequentially).
    - b. Write the slot and port number of each B-channel assigned to the group (see Form 2c, System Numbering: Line/Trunk Jacks). To determine the port number, assume that port 1 is at the bottom of the module to which you are assigning B-channels.
    - c. For all channels you plan to associate with the group, write the trunk number (see Form 2c, System Numbering: Line/Trunk Jacks).
  2. To assign service to each B-channel group, complete Form 3b (page 4) as follows: If there is more than one 100D, 100R INA, or 100 DCD module set up for PRI service or you have more than eight B-channel groups assigned to a module, make copies of Form 3b (page 4) as necessary.
    - a. In the Module Slot No. space, write the number of the control unit slot that contains the module as noted on pages 1 and 2 of this form.
    - b. Under the B-Channel Group No. heading, copy the B-Channel group numbers from Form 3b (page 3).
    - c. Write the services to be associated with each group under the Outgoing Services and Incoming Services headings. Select from the following services:
      - **AT&T Toll.** (for 4ESS or 5ESS, see Form 3b, page 1) Megacom WATS, Megacom 800, ACCUNET SDS, Software Defined Network (SDN), MultiQuest, and Long Distance.
      - **5ESS Local.** (For switch type 5ESS, see Form 3b, page 1) OUTWATS, 56/64 Digital, Virtual Private Network, and INWATS.
      - **MCI Toll.** (for DMS-250 or DEX600E, see Form 3b, page 1) MCI Prism, MCI VNet, and MCI 800 and MCI 900.
      - **DMS-100 Local.** (for a DMS-100, see Form 3b, page 1) DMS Private Network, DMS INWATS (Inward Wide Area Telephone Service), DMS OUTWATS (Outward Wide Area Telephone Service), DMS FX (Foreign Exchange), and DMS Tie Trunk.
      - **Other.** Call-by-Call and Other.
- NOTE** ► If a B-channel group has more than one outgoing service, then enter Call-by-Call on Form 3b, page 4, under the Outgoing column instead of itemizing the services. Form 3b, page 8, is where you enter specific services with specific dial-out patterns.
- d. If the group has incoming services assigned, do *either* of the following:
    - If the routing will be Dial Plan Routing (Hybrid/PBX mode only), check Dial Plan Routing.
    - If the routing will be by line appearance, check Line Appearance.

3. For all B-channel groups that are programmed to route calls by line appearance, assign a telephone number to each line in the B-channel group. Record the information on Form 3b (page 5):
  - a. Write the B-channel group numbers and the trunk number or numbers from Form 3b (page 3).
  - b. In the Telephone Number column, write the unique inbound routing telephone number (the “directory number”) of up to 12 digits, furnished by the PRI service provider.

**NOTE** ► The factory does not preassign a telephone number. The telephone number you assign should be the same sent to the system by the network. The number should also be unique within the same B-channel group and must be different from the associated test telephone number. (Test telephone numbers are assigned later in this procedure.)

4. For all B-channel groups you plan to assign to Dial Plan Routing, you must program the Dial Plan Routing table to direct the system to properly route calls. Record table entries (maximum: 16 entries) on Form 3b (page 6):
  - a. For the entry to be activated, a service must be entered. In the Service cell, write *one* of the following:
    - **AT&T Toll.** (for 4ESS or 5ESS, see Form 3b, page 1) Megacom WATS, Megacom 800, ACCUNET SDS, Software Defined Network (SDN), MultiQuest, and Long Distance.
    - **5ESS Local.** (For switch type 5ESS, see Form 3b, page 1) OUTWATS, 56/64 Digital, Virtual Private Network, and INWATS.
    - **MCI Toll.** (for DMS-250 or DEX600E, see Form 3b, page 1) MCI Prism, MCI VNet, and MCI 800 and MCI 900.
    - **DMS-100 Local.** (for a DMS-100, see Form 3b, page 1) DMS Private Network, DMS INWATS (Inward Wide Area Telephone Service), DMS OUTWATS (Outward Wide Area Telephone Service), DMS FX (Foreign Exchange), and DMS Tie Trunk.
    - **Other.** Call-by-Call and Other.
  - b. In the Pattern to Match cell, write the exact pattern to match if you have more than one block of incoming numbers. If you want to match any pattern, leave it blank.
  - c. In the Total Digits in Dialed Number cell, write the total number of digits (0–14) expected in the dialed number; 0 is a wildcard (match any number). (Contact the service provider for the appropriate number.)
  - d. After the match has been made, do *either* of the following to enable the system to determine where to direct the call:
    - To delete digits, write the number of digits to delete (0–14). (The system deletes from the first digit forward.)
    - To add digits, write the exact digits to enter (up to four digits) as a prefix—for example, 7128. The factory setting is blank. (The system adds the digits to the beginning of the number.)

5. In the Network Selection Table of the outgoing tables on Form 3b (page 7), the dial pattern represents the dial code for specifying a long-distance common carrier; the asterisks represent the digits in the common carrier identification. If the telephone company has directed you to change this information, obtain the correct entry from them. But note that the dial pattern must come first. Entry 1 represents current national standards for specifying long-distance carriers (asterisks represent the common carrier code wildcard so that anything will match). Entry 0 represents the coming national standards. The remaining entries are reserved for future use.

**NOTE** ► The Network Selection Table and the Special Services Table contain factory settings that reflect U.S. standards for public telephone network access. These factory settings can be modified to conform to other standards. You should not change them, however, unless the telephone company explicitly instructs you to do so.

6. In the Special Services Table:
  - a. In the Pattern to Match cell, write the exact dial pattern to match. (No wildcards are permitted.)
  - b. In the Operator cell, indicate Local Operator (OP), Presubscribed Operator (P), or No Operator service (none) associated with the pattern.
  - c. In the Type of No. cell, indicate whether the pattern is for calling National (N) or International (I).
  - d. To delete digits, write the number of digits to delete (0–4). (The system deletes from the first digit forward.)
7. For all Call-by-Call B-channel groups, to route all outgoing calls over a call-by-call B-channel group, you must program the Call-by-Call Service Table to direct the system to properly route calls. Record table entries (maximum: 10) on Form 3b (page 8):
  - a. In the Pattern to Match cell, write the dial pattern to match (up to 8 digits). No wildcards are permitted.
  - b. In the Call Type cell, indicate the type or types of calls that will be associated with the pattern by doing *one* of the following:
    - If all outgoing calls will be voice calls (for example, Megacom WATS), write Voice.
    - If all outgoing calls will be data only (for example, ACCUNET), write Data.
    - If outgoing calls may be either voice or data (for example, SDN), write Both.

**NOTE** ► If you indicate Both, make sure the service can support both voice and data calls.

- c. In the Service cell, write *one* of the following:
  - **AT&T Toll.** (for 4ESS or 5ESS, see Form 3b, page 1) Megacom WATS, Megacom 800, ACCUNET SDS, Software Defined Network (SDN), MultiQuest, and Long Distance.
  - **5ESS Local.** (For switch type 5ESS, see Form 3b, page 1) OUTWATS, 56/64 Digital, Virtual Private Network, and INWATS.

- **MCI Toll.** (for DMS-250 or DEX600E, see Form 3b, page 1) MCI Prism, MCI VNet, and MCI 800 and MCI 900.
  - **DMS-100 Local.** (for a DMS-100, see Form 3b, page 1) DMS Private Network, DMS INWATS (Inward Wide Area Telephone Service), DMS OUTWATS (Outward Wide Area Telephone Service), DMS FX (Foreign Exchange), and DMS Tie Trunk.
  - **Other.** Call-by-Call and Other.
- d. If the system will need to delete digits, write the number of digits to delete (0–8). (The system deletes from the first digit onward.)
8. On Form 3b, check the appropriate box for the information that will be sent to the network for outgoing PRI calls. Check Extension Only, Base Number with Extension, or Line Telephone Number.

If you check Line Telephone Number, do the following:

- Identify the trunk number.
- Write the telephone number (up to 12 digits) that identifies the company as the caller in the Telephone Number to Send column.

**NOTE** ► There is no factory-assigned telephone number. If you assign a number, it does not have to be unique. Also, the availability of caller identification information may be limited by your local-serving jurisdiction, by availability, or by central office equipment.

9. If available, assign a test telephone number that is used for maintenance by the service provider. For each 100D, 100R INA, or 100 DCD module with a PRI service type, write the test telephone number (up to 12 digits) used for maintenance next to the module number under the Test Telephone Numbers heading on Form 3b (page 10).

**NOTE** ► The factory does not assign a test telephone number. You must assign the same number as that furnished by the PRI service provider. It must be different from the numbers assigned to other channels associated with the same B-channel group.

10. Under the Timers and Counters heading, do *either* of the following:
- To keep the factory setting, leave the Change to column blank.
  - To change the factory setting for any timer or counter, write the new threshold on the appropriate line in the Change to column.
11. Under the Terminal Equipment Identifier (TEI) heading, do *either* of the following:
- To keep the factory-set TEI, check 0.
  - To change the factory-set TEI, write a value from 1 to 63 in the space provided.

**NOTE** ► If the system includes DS1 connectivity, all local offerings of DS1 configurations must be reviewed by Avaya Sales and Design Support Center (SDSC) personnel to ensure compatibility. For more information, see Appendix D, “T1/PRI Planner.” Also, information required by the facilities vendor is discussed in Appendix E, “DS1 Connectivity Ordering.”

## Tie Trunks

Use these instructions only if the system has tie trunks, including tie trunks emulated through a DS1 connection. Otherwise, skip to the next section, “[DID Trunks \(Hybrid/PBX Mode Only\)](#).”

If configuring T1-Tie trunks, including those with Switched 56 digital data service, complete the instructions in the “[T1 Service](#)” section first.

Tie trunks must be configured to match central office requirements or the configuration of the system to which they tie. Review tie trunk operations and make the following decisions about the way each tie trunk operates:

- Direction
- Signaling type
- E & M Signaling
- Dial mode
- Dial tone
- Answer supervision time
- Disconnect time
- Private network tandem trunks

**NOTE** ► See the *Network Reference* for information on private networking.

This section contains instructions for each of these options.

### Planning Form Instructions

1. Transfer the trunk identification from Form 2c, System Numbering: Line/Trunk Jacks, to Form 3c, Incoming Trunks: Tie. Write the logical ID and trunk number for each tie trunk connected to the system.
2. Under the Direction heading on Form 3c, check the direction for each tie trunk next to its trunk number:
  - If the tie trunk is two-way, check the Two Way (factory-setting) column. Use this option for private networks.
  - If the trunk is one-way, check either the Outgoing column or the Incoming column.

3. Under the Signaling Type (Intype/Outtype) heading, check the appropriate column for either In or Out under the Wink, Delay, Immediate, or Automatic columns for each tie trunk. For T1 facilities used for services (for example, Megacom), consider the direction of the tie trunk and how trunk assignments will be made. Then select from the list that follows these notes:

- NOTES** ►
- Check the same signaling type used by the system to which you are connecting. For incoming-only or two-way tie trunks, the incoming type must be the same as the outgoing type of the remote system. For outgoing-only or two-way tie trunks, the outgoing type must be the same as the incoming type of the remote system.
  - Wink is the factory setting and is the preferred type, followed by Delay then Immediate. Immediate does not work with Touch-Tone dial mode. Use Delay for private networks.
  - Automatic incoming signaling is required if the central office switch is a Lucent Technologies 5ESS or Northern Telecom DMS-100 and incoming calls are programmed to route by Line Appearance. Immediate Dial outgoing signaling should not be used for digital emulated Tie trunks using T1 Switched 56 service due to the lack of trunk integrity checking.
  - Dial-in E&M Tie trunks cannot be assigned to ring into a Calling Group. Only Auto-in Tie trunks can be assigned to ring into a Calling Group.
    - **One-way, Outgoing Tie Trunks.** All outgoing calls are placed using Automatic Route Selection, and tie trunks are not assigned to Personal Line or Pool buttons on telephones. Select wink signaling.
    - **One-way, Outgoing Tie Trunks.** Tie trunks are assigned to Personal Line or Pool buttons on telephones. Select immediate signaling.
    - **One-way, Incoming Tie Trunks.** Dialed Number Identification Service (DNIS) is included. Select wink signaling.

4. Under the E&M Signal heading, select *one* of the following signaling types to be used on the tie trunks:

**NOTE** ► E&M Signaling does not apply to digital emulated Tie trunks using T1 Switched 56 service and should not be set during administration of those trunks.

- If the tie trunks are connected to the other system through the local telephone company, check 1S (the factory setting).
- If the tie trunks are connected directly to a system that uses type 1S signaling and is located near this system, check 1C.

**NOTE** ► The 1C option assumes that the two systems are connected together without any provisioned facility, and without any signaling treatment equipment. When connecting a MERLIN MAGIX switch to another MERLIN MAGIX or MERLIN LEGEND switch, use 1C on one switch and 1S on the other.

- If the tie trunks are connected directly to a system that uses type 5 signaling and is located near this system, check 5.

**NOTE** ► When connecting a MERLIN MAGIX switch to a DEFINITY switch, use the Type 5 signaling type.

5. To select dial mode: under the Inmode heading, check either the Touch-Tone column or Rotary column (factory setting) for each incoming-only and each two-way tie trunk. Use Touch-Tone for private networks.

**NOTES** ► ■ If you have checked the Incoming or two-way column for a tie-trunk's direction and Immediate for its incoming signaling type, you cannot use the Touch-Tone setting for Inmode.

- Touch-Tone outmode can be used with Outtype Immediate trunks, but Touch-Tone inmode cannot be used with Intype Immediate Trunks.

- Under the Outmode heading, check either the Touch-Tone column or the Rotary column (factory setting) for each outgoing-only and each two-way tie trunk.

6. To indicate whether the system provides a dial tone for people calling in on a tie trunk, check *either* of the following for each tie trunk under the Dial Tone heading:

- If the system provides a dial tone, check Remote (factory setting). Use this setting for private networks.
- If the system does *not* provide a dial tone, check Local.

7. For Answer Supv. Time, do *either* of the following:

- To keep the factory setting, check the 300 column. (Use this setting for private networks.)
- To change to a new value, write the new value (20 to 4800 ms) in the Other column. (Use 20-ms increments.)

8. Under the Disconnect Time heading, do *either* of the following:

- To keep the factory setting, check the 300 column. (Use this setting for private networks.)
- To change to a new value, write the new value (140 to 2400 ms) in the Other column. (Use 10-ms increments.)

## DID Trunks (Hybrid/PBX Mode Only)

Use these instructions only if Direct Inward Dial (DID) trunks are connected to the system. Otherwise, skip to the next section, [“NI-1 BRI Connectivity.”](#)

### **SECURITY ALERT:**

*DID numbers that correspond to the Remote Access code can be used to make calls on the system's trunks, leading to toll abuse and/or fraud. (See Appendix A, [“Customer Support Information,”](#) for more information about security.)*

This section contains instructions for setting the following options for DID trunks:

- Type of DID Trunks
- Expected Digits
- Delete Digits
- Add Digits
- Signaling
- Invalid Destination
- Trunks Included in Blocks

These options are assigned to blocks of trunks. A maximum of two blocks is permitted.

If you want to allow Remote Access on DID trunks, one of the telephone numbers assigned by the telephone company must match the Remote Access dial code. The factory setting is 889.

If two-way DID service is available from the local telephone company, it is typically set up as Tie trunk service.

- NOTES** ►
- If the system will have two blocks, make a copy of Form 3d and write the block number in the Block Number space. Check with the local telephone company to determine the number of digits sent.
  - DID trunks cannot be assigned to ring into a Calling Group.

### **CAUTION:**

*Since the system can have only two blocks of DID trunks, when configuring a private network, careful planning of both immediate and future needs is essential when ordering DID trunks from the local telephone company. See the Network Reference for additional information.*

## Planning Form Instructions

1. On Form 3d, under the Type heading, do *either* of the following:
  - To keep the factory setting, check the Wink-Start box.
  - To change the type, check the Immediate-Start box.

2. Under the Expected Digits heading on Form 3d, do *either* of the following:
  - To show that the telephone company sends the factory-set number of digits, check the box labeled 3.
  - To show the number of digits sent by the telephone company, check one of the boxes labeled 1, 2, or 4.
3. Compare the number of digits sent by the local telephone company to the number of digits in the system numbering plan, and do *one* of the following:
  - If the system's numbering plan matches the number of digits sent by the telephone company, check 0 (the factory setting) under the Delete Digits and Add Digits headings.
  - If the number of digits sent by the local telephone company is *more* than the number of digits in the system numbering plan, specify that one to four digits be deleted from the telephone company digits by checking the appropriate number (1, 2, 3, or 4) under the Delete Digits heading.
  - If the number of digits sent by the local telephone company is *fewer* than the number of digits in the system's numbering plan, specify the specific digits (1–9999) to be added to the digits sent; check the Add these digits box under the Add Digits heading and then write the specific digits to be added in the space provided.
4. Under the Signaling heading, do *either* of the following:
  - To keep the factory-set signal, check Rotary.
  - To change the setting, check Touch-Tone. (You cannot have Touch-Tone if you selected Immediate-Start.)
5. Under the Invalid Destination heading, do *either* of the following. (The Invalid Destination setting applies to both blocks. You cannot specify a different setting for each block.)
  - To indicate that calls to unassigned extension numbers go to the backup position (usually the primary operator), check Send to backup position.
  - To indicate that calls to unassigned extension numbers should receive a fast busy signal, check Return to fast busy.
6. Group DID trunks into each block by assigning the DID trunks according to how incoming calls must be routed to reach the proper local and non-local extension numbers, and transfer the information from Form 2c, System Numbering: Line/Trunk Jacks to the Trunks Included in Block section of Form 3d. Write the logical ID, trunk number, and telephone number in the applicable columns.
7. Select the disconnect time for each DID trunk by doing *either* of the following under the Disconnect Time heading:
  - To keep the factory setting, check 500 ms.
  - To change the disconnect time, write the new value (10 to 2550 ms) in the Other column.

Proceed to the next section, ["NI-1 BRI Connectivity."](#)

## NI-1 BRI Connectivity

To ensure proper operation of the BRI line features, the following options must be set on the MERLIN MAGIX system during system programming:

- Service Profile Identifier (SPID) for each BRI line B-channel
- Directory Number (DN) for each BRI line B-channel
- Clock Synchronization for the system
- Timers for each BRI module (system provides defaults)

The following affect the operation of the MERLIN MAGIX system. However, they are programmed on the central office switch:

- Service Configuration of the BRI lines (IOC "S", Multiline Hunt)
- Hunting pattern for a Multiline Hunt configuration

### Service Profile

A Service Profile (SP) defines the interface on a BRI line between a central office and an ISDN terminal. It specifies the parameters and their values necessary to provide services to the terminal. There are standardized capability packages called ISDN Ordering Codes (IOCs) that are configured on the central office at subscription time. The IOC contains information necessary for the central office to provide service to the system.

The MERLIN MAGIX system supports the IOC "S" capability package, which provides alternate voice/circuit-switched data on two B-channels with no packet data capability or supplementary voice features, except for the Calling Party Number/Billing Number (CPN/BN) feature, if available.

In addition to the IOC "S" capability package, the MERLIN MAGIX system supports Multiline Hunt (MLH) service for *alternate* voice *and* data hunting if the central office is a Lucent Technologies 5ESS or Northern Telecom DMS-100 switch. For a Siemens SSC EWSD switch, MLH service must be provisioned as *either* voice *or* data hunting. MLH service is provided through the *Multiline Hunt Group (MLHG)* feature on Northern Telecom DMS-100 switches, and through the *Series Completion* feature on Lucent Technologies 5ESS and Siemens SSC EWSD switches.

**NOTE** ► The MLHG feature on the Lucent Technologies 5ESS and Siemens SSC EWSD switches is *not* recommended for use with the MERLIN MAGIX system.

MLH service may be configured in either a linear or circular pattern. Current testing of the MERLIN MAGIX system with the central office switches supports linear hunting on a Lucent Technologies 5ESS switch, and circular hunting on the Northern Telecom DMS-100 and Siemens SSC EWSD switches. Other configurations are possible, but they are not guaranteed to work with the MERLIN MAGIX system.

The Service Profile consists of the following:

- A Service Profile Identifier (SPID), which is a unique identifier used by the central office to associate an ISDN terminal with a Service Profile.
- A Directory Number (DN) for each BRI line B-channel. This DN is usually the local telephone number that was assigned by the service provider.
- If MLH service *is not* subscribed, only one call to a particular DN will be accepted at any given time, and any station with the line appearance of the BRI line will alert. If MLH *is* subscribed, the central office will automatically hunt for the next available B-channel within the hunt group and deliver multiple calls to the same DN. If all B-channels are in use, subsequent calls to the same DN will receive standard central office treatment (such as busy tone).
- Optional features:
  - Calling Party Number/Billing Number (CPN/BN) can also be ordered at subscription time.

The local telephone company normally provides two SPIDs and DNs for each BRI line (also called a Digital Subscriber Line [DSL]) ordered. The SPID consists of a string of digits, 0 through 9, not more than 20 digits in length. The DN consists of a string of digits, 0 through 9, not more than 10 digits in length. Each DSL will use two lines on Form 3i, Incoming Trunks: BRI Options (800 NI-BRI Module).

### Planning Form Instructions

1. Transfer the following information from 2c, System Numbering: Trunk Jacks, to Form 3i, Incoming Trunks: BRI Options (800 NI-BRI Module):
  - Write the logical ID in the “Logical ID” column. Skip a line between each entry.
  - Write the line number in the “Line Number” column.

**NOTE** ▶ Refer to the information provided by the local telephone company to enter the information below.

2. Write the two DNs for each BRI line in the “Directory Number” column.
3. Write the two SPIDs assigned to each BRI line in the “Service Profile Identifier” column.

Refer to the NI-1 BRI Planner form for the information needed to complete the next sections.

4. Indicate the Service Configuration of the central office switch:
  - If configured with IOC package “S,” place a check in the IOC “S” column under the “Service Configuration” heading.
  - If configured with MLH service, indicate the type of hunt group provisioned by entering a V (voice only hunt group), D (data only hunt group), or V/D (voice/data hunt group) in either the MLHG or Series Comp. column under the Service Configuration heading as appropriate.

- NOTES** ►
- IOC package “S” is available on the Lucent Technologies 5ESS, Northern Telecom DMS-100, and Siemens SSC EWSD switches.
  - If configured with MLH service, the MLHG feature must be used if the central office is a Northern Telecom DMS-100 switch. The Series Completion feature must be used if the central office is a Lucent Technologies 5ESS or Siemens SSC EWSD switch.
  - The MERLIN MAGIX system does not support Voice/Data hunt groups with the Siemens SSC EWSD central office switch.
5. If configured with MLH (using either the MLHG or Series Completion feature), indicate whether the hunt pattern is linear or circular by placing a check in the appropriate column under the Hunt Pattern heading.
  6. Indicate the features available on each BRI line:
    - If CPN/BN is available, place a check in the CPN/BN column, as appropriate.

### Clock Synchronization

**NOTE** ► The following information is for planning clock synchronization in systems that are not part of a private network. For planning clock synchronization in a private network configuration, see the *Network Reference*.

If the system includes 800 NI-BRI, 100D, 100R INA, and 100 DCD modules, clock synchronization planning should be completed at the same time. There is only one primary/secondary/tertiary clock for 800 NI-BRI, 100D, 100R INA, and 100 DCD modules, with the same system programming screens used for both types.

Plan your clock source administration to minimize the need for clock switching, which is known to cause noise on active calls.

The primary, secondary, and tertiary clock sources, all three of which should be programmed if possible, should be set in the following order:

1. The loop clock sources on BRI ports with DSLs in service. If at all possible, all three clock sources should be on the same 800 NI-BRI module.
2. The loop clock source on any 100D, 100R INA, or 100 DCD module connected to the central office and in service.
3. The loop clock source on any 100D, 100R INA, or 100 DCD module in T1 mode operating in a tie-trunk configuration.
4. The local clock source on any 100D, 100R INA, or 100 DCD module.

If no administration has been performed, upon Frigid Start (system start-up), the first 100D, 100R INA, 100 DCD, or NI-1 BRI port that is in service will be the default primary loop clock source.

**NOTE** ► Extra BRI DSLs which are not in service should never be programmed as clock sources.

### Planning Form Instructions

Refer to Form 1, System Planning, Control Unit Diagram. Complete the following information on Form 3i, Incoming Trunks: BRI Options (800 NI-BRI Module), page 2:

1. To keep the factory setting (the first slot and port found in the system provides synchronization for the system), or if assigning a different module to provide primary clock synchronization:
  - a. Enter the slot and/or DSL number (BRI only) under Primary Clock Synchronization.
  - b. Under the Source subheading, check Loop to indicate that the system uses the clock of the far-end connection (factory setting) or “Local” to indicate the clock is free-running (100D, 100 R INA, or 100 DCD modules only).

**NOTE** ► The only option for an 800 NI-BRI module is loop, which is automatically assigned and is not programmable.

2. If assigning secondary or tertiary backup synchronization:
  - a. Enter the slot and DSL number (BRI only) under Secondary Clock Synchronization and/or Tertiary Clock Synchronization.
  - b. Under the Source subheading in each column, check “Loop” to indicate that the system uses the clock of the far-end connection (factory setting) or Local to indicate the clock is free-running (100D, 100R INA, or 100 DCD modules only).

**NOTE** ► The only option for an 800 NI-BRI module is loop, which is automatically assigned and is not administrable.

### Timers

Timers ensure that the system takes the appropriate corrective action when the expected response is not received from the network during normal operation.



#### **CAUTION:**

*Since incorrect settings can hinder the operation of BRI facilities, consult with an Avaya representative or authorized dealer before making changes. The factory-set thresholds are standard settings and should rarely be changed.*

The timers, descriptions, factory settings, and allowable thresholds are shown in Table 3-5.

**Planning Form Instructions**

On Form 3i, Incoming Trunks: BRI Options (800 NI-BRI Module), under the "Timers and Counters" heading on page 2. For each timer:

- To keep the factory setting, check the first box under the timer name.
- To change the factory setting, check the second box under the timer name and write the new threshold in the space provided.

**Table 3-5. NI-1 BRI Timers**

Name	Description	Factory Setting	Allowable Threshold
T200	The minimum time which Layer 2 must wait for an acknowledgment of a link establishment frame, an information frame, or a polling supervisory frame, before initiating retransmission procedures.	1,000 ms	500–5,000 ms, in increments of 500 ms
T203	The maximum time for which the Layer 2 link can remain inactive.	33 seconds	10–255 seconds, in increments of 1 second
T303	The delay in central office response after the system has sent a SETUP message to initiate an outgoing call.	4 seconds	2–10 seconds, in increments of 1 second
T305	The delay in response from the central office after the system has initiated a DISConnect message for call clearing.	30 seconds	2–60 seconds, in increments of 1 second
T308	The delay in response from the central office after the system has sent a release message for call clearing.	4 seconds	2–10 seconds, in increments of 1 second

## Assigning Lines/Trunks

This section contains instructions for assigning lines/trunks to telephones and Direct-Line Consoles.

**NOTE** ► To assign lines/trunks to data-only stations, follow the instructions in Chapter 5, “[Data Communications](#).”

### Forms Needed

- 2a, System Numbering: Extension Jacks
- 2b, System Numbering: Digital Adjuncts
- Use the following forms as appropriate for telephones and consoles in the system. Make one copy of the appropriate form for each extension.
  - 4d, MLX Telephone
  - 4e, MFM Adjunct: MLX Telephone
  - 4f, Tip/Ring Equipment
  - 4h, ETR Telephone
  - 4j, MLS Telephone

- 4k, 4400/4400D Telephone
- 4m, Multiline 4400-Series Telephone
- 4o, Wireless Telephone
- 5b, Direct-Line Console (DLC)
- 5c, MFM Adjunct: DLC

### Planning Form Instructions

1. On page 1 of Forms 4d, 4h, 4j, 4k, 4m, 4o, and 5b, transfer the following user information from Form 2a, System Numbering: Extension Jacks to each copy of each of these telephone forms:
  - a. Write the logical ID in the Logical ID space.
  - b. Write the extension number in the Extension No. space.
  - c. Write the name of the person or the location of the equipment in the Person or Location space.
2. For any adjuncts connected to an MLX telephone using an MFM, fill in the following user information from Form 2b, System Numbering: Digital Adjuncts, on Forms 4e and 5c in the Connected to MLX extension No. space:
  - a. Write the extension number in the Extension No. space.
  - b. Write the name of the person or the location of the equipment in the Person or Location space.
3. Identify the equipment at each extension (see the floor plan):
  - a. Check the box that describes the telephone, console model, or type of tip/ring equipment.
  - b. Check the box under Adjuncts that describes the adjuncts at the extension. (Checking the Data terminal box is informational only.)

---

## Assigning Telephone Buttons

This section contains instructions for assigning buttons to:

- Telephones in Hybrid/PBX mode
- Telephones in Key and Behind Switch mode
- DLCs

### Forms Needed

- 4c, Extension Copy: MLX Telephone Template
- 4d, MLX Telephone
- 4e, MFM Adjunct: MLX Telephone
- 4f, Tip/Ring Equipment
- 4g, Extension Copy: ETR Telephone Template
- 4h, ETR Telephone
- 4i, Extension Copy: MLS Telephone Template
- 4j, MLS Telephone
- 4k, 4400/4400D Telephone
- 4l, Extension Copy: Multiline 4400-Series Telephone Template
- 4m, Multiline 4400-Series Telephone
- 4n, Extension Copy: Wireless Telephone Template
- 4o, Wireless Telephone
- 5b, Direct-Line Console (DLC)
- 5c, MFM Adjunct: DLC

### Telephones in Hybrid/PBX Mode

This section contains instructions for assigning the following kinds of buttons to telephones, or to adjuncts connected to an MLX telephone using an MFM (excluding QCC operator positions):

- System Access Ring (SA Ring) button
- System Access Voice (SA Voice) button
- System Access Originate Only (SA Orig Only) button
- Shared System Access (SSA) button
- Personal Line button
- Pool button
- Loudspeaker Paging button

The system automatically assigns certain kinds of line buttons, depending on the type of equipment. For nonoperator multiline telephones, the system assigns SA Ring, SA Voice, and SA Orig Only buttons (see Figures [3-2](#) to [3-15](#)).

<input type="checkbox"/> 21 <input type="checkbox"/>			<input type="checkbox"/> 23 <input type="checkbox"/>	<input type="checkbox"/> 25 <input type="checkbox"/>			<input type="checkbox"/> 27 <input type="checkbox"/>
<input type="checkbox"/> 5 <input type="checkbox"/>			<input type="checkbox"/> 10 <input type="checkbox"/>	<input type="checkbox"/> 15 <input type="checkbox"/>			<input type="checkbox"/> 20 <input type="checkbox"/>
<input type="checkbox"/> 4 <input type="checkbox"/>			<input type="checkbox"/> 9 <input type="checkbox"/>	<input type="checkbox"/> 14 <input type="checkbox"/>			<input type="checkbox"/> 19 <input type="checkbox"/>
<input type="checkbox"/> 3 <input type="checkbox"/>	SA Orig. Only		<input type="checkbox"/> 8 <input type="checkbox"/>	<input type="checkbox"/> 13 <input type="checkbox"/>			<input type="checkbox"/> 18 <input type="checkbox"/>
<input type="checkbox"/> 2 <input type="checkbox"/>	SA Voice		<input type="checkbox"/> 7 <input type="checkbox"/>	<input type="checkbox"/> 12 <input type="checkbox"/>			<input type="checkbox"/> 17 <input type="checkbox"/>
<input type="checkbox"/> 1 <input type="checkbox"/>	SA Ring		<input type="checkbox"/> 6 <input type="checkbox"/>	<input type="checkbox"/> 11 <input type="checkbox"/>			<input type="checkbox"/> 16 <input type="checkbox"/>


**Figure 3-2. Factory-Set Assignment for 4412D+, 4424D+, and 4424LD+ Telephones (Hybrid/PBX Mode)**

<input type="checkbox"/> 3 <input type="checkbox"/>	SA Orig. Only		<input type="checkbox"/> 6 <input type="checkbox"/>
<input type="checkbox"/> 2 <input type="checkbox"/>	SA Voice		<input type="checkbox"/> 5 <input type="checkbox"/>
<input type="checkbox"/> 1 <input type="checkbox"/>	SA Ring		<input type="checkbox"/> 4 <input type="checkbox"/>


**Figure 3-3. Factory-Set Assignment for 4406D+ Telephone (Hybrid/PBX Mode)**

<input type="checkbox"/> 22 <input type="checkbox"/>			<input type="checkbox"/> 24 <input type="checkbox"/>	<input type="checkbox"/> 26 <input type="checkbox"/>			<input type="checkbox"/> 28 <input type="checkbox"/>	
<input type="checkbox"/> 21 <input type="checkbox"/>			<input type="checkbox"/> 23 <input type="checkbox"/>	<input type="checkbox"/> 25 <input type="checkbox"/>			<input type="checkbox"/> 27 <input type="checkbox"/>	
<input type="checkbox"/> 5 <input type="checkbox"/>		3	8	<input type="checkbox"/> 15 <input type="checkbox"/>		13	18	<input type="checkbox"/> 20 <input type="checkbox"/>
<input type="checkbox"/> 4 <input type="checkbox"/>		2	7	<input type="checkbox"/> 14 <input type="checkbox"/>		12	17	<input type="checkbox"/> 19 <input type="checkbox"/>
<input type="checkbox"/> 3 <input type="checkbox"/>	SA Orig. Only	1	6	<input type="checkbox"/> 13 <input type="checkbox"/>		11	16	<input type="checkbox"/> 18 <input type="checkbox"/>
<input type="checkbox"/> 2 <input type="checkbox"/>	SA Ring		5	<input type="checkbox"/> 12 <input type="checkbox"/>		10	15	<input type="checkbox"/> 17 <input type="checkbox"/>
<input type="checkbox"/> 1 <input type="checkbox"/>	SA Ring		4	<input type="checkbox"/> 11 <input type="checkbox"/>		9	14	<input type="checkbox"/> 16 <input type="checkbox"/>

**Figure 3-4. Factory-Set Assignment for MLX-20L and MLX-28D Telephones (Hybrid/PBX Mode)**

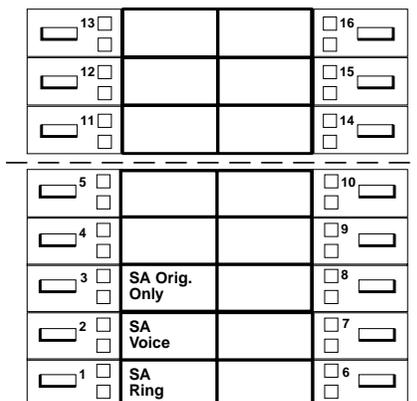

**Figure 3-5. Factory-Set Assignment for MLX-16DP Telephone (Hybrid/PBX Mode)**

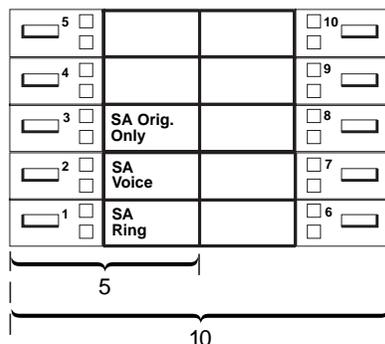

**Figure 3-6. Factory-Set Assignment for MLX 5- and 10-Button Telephones (Hybrid/PBX Mode)**

Although equipment such as single-line telephones, analog modems, and fax machines do not have buttons, the system treats these as multiline telephones with 34 buttons.

The system assigns one SA Ring, one SA Voice, and one SA Orig Only button to every adjunct connected through an MFM to an MLX telephone. For equipment connected to a 016 (T/R) or 008 OPT module, or to a port programmed for tip/ring operation on a 016 ETR module, the system assigns two SA Ring buttons and one SA Orig Only button.

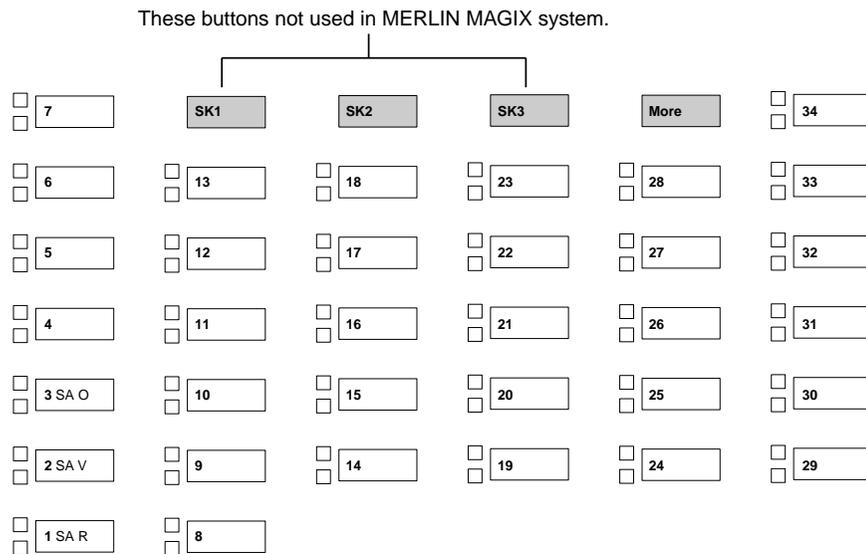


Figure 3-7. Factory-Set Assignment for ETR-34D Telephone (Hybrid/PBX Mode)



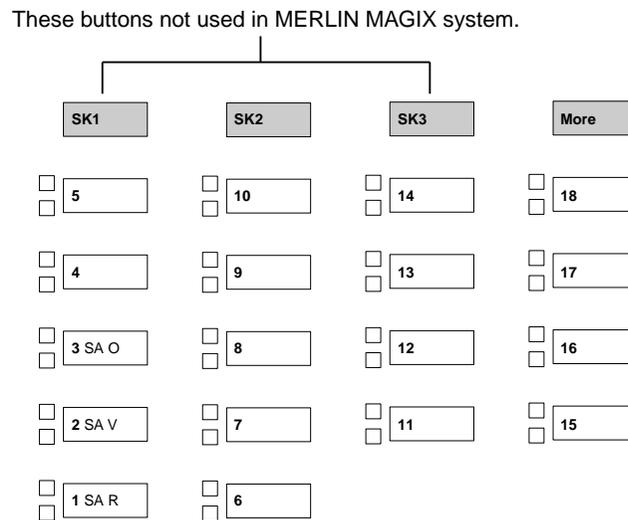



Figure 3-8. Factory-Set Assignment for ETR-18/18D Telephone (Hybrid/PBX Mode)

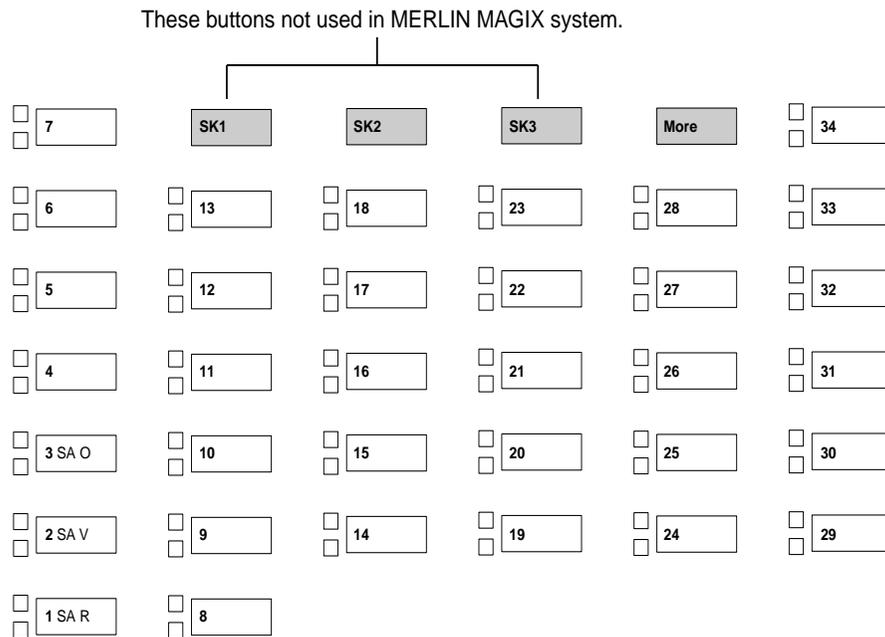


**Figure 3-9. Factory-Set Assignment for ETR-6 Telephone (Hybrid/PBX Mode)**

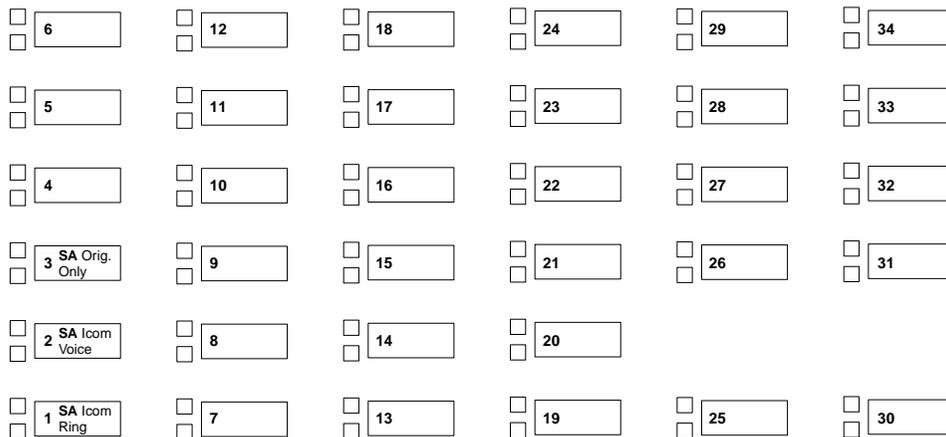


**Figure 3-10. Factory-Set Assignment for MLS-34D Telephone (Hybrid/PBX Mode)**

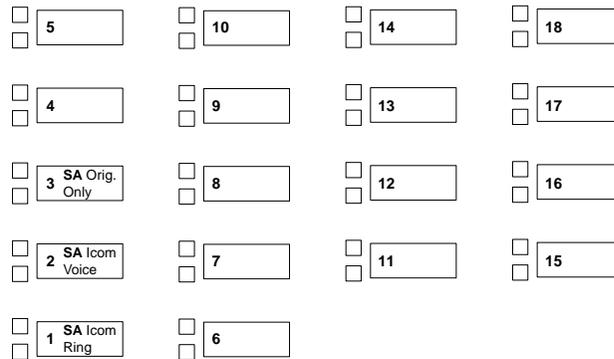

**Figure 3-11. Factory-Set Assignment for MLS-18D Telephone (Hybrid/PBX Mode)**

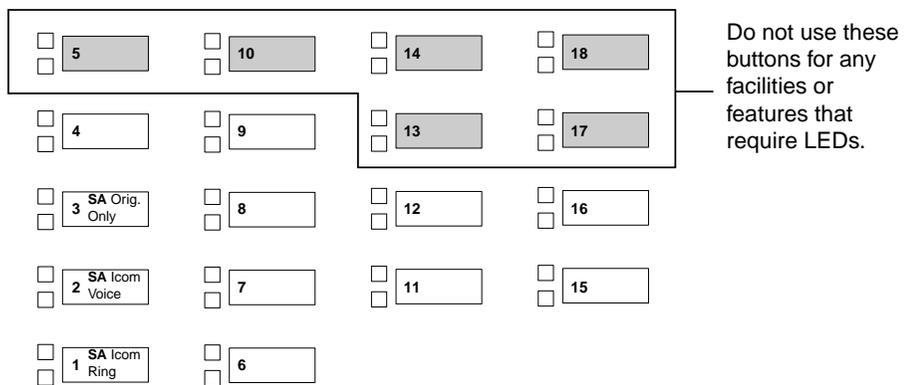

**Figure 3-12. Factory-Set Assignment for MLS-12/12D (Hybrid/PBX Mode)**

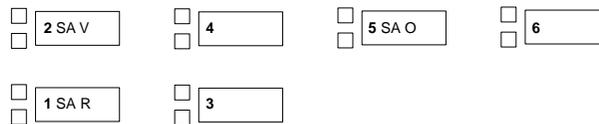

**Figure 3-13. Factory-Set Assignment for MLS-6 Telephone (Hybrid/PBX Mode)**

Blank 5	Blank 6	Blank 7	Blank 8
SA OO 1	Blank 2	Blank 3	Blank 4
SA Ring A	SA Voice B	Blank C	Drop D

---

**Figure 3-14. Factory-Set Assignment for TransTalk 9031/9040 Telephone (Hybrid/PBX Mode)**

---

SA Ring 1	SA Voice 2	SA OO 3	Blank 4	Drop 5
-----------------	------------------	---------------	------------	-----------

---

**Figure 3-15. Factory-Set Assignment for Business Cordless 905 Telephone (Hybrid/PBX Mode)**

---

### Guidelines for Button Assignments

Use the following guidelines for assigning buttons to telephones or to adjuncts connected to an MLX telephone.

- NOTES** ▶
- When assigning buttons to telephones or adjuncts, keep in mind that BRI lines are not automatically assigned to telephones or DLCs.
  - ETR or MLS telephones cannot be used as DLCs or QCCs.

For multiline telephone users:

- The system software treats the ETR-6 and MLS-6 telephones as one type of telephone. The factory-setting button assignments, however, are different. Change the SA-O button on the MLS-6 telephone to match the button's assignment on the ETR-6 telephone.

- For non-operator multiline telephones, you can assign SA Voice, SA Ring, and SA Orig Only buttons to the first 10 buttons on each telephone, and up to 27 SSA buttons to each telephone. However, it is recommended that the factory setting of 3 SA buttons be used to ensure that when each user is busy on a call, at least one additional button is available to receive a call and another is available to make a call. This leaves the rest of the buttons on multiline telephones free for customizing.
- An extension can have SSA buttons for another extension, but it must have at least one SA button for itself. For example, Extension A has 10 SA buttons. Extension B can have SSA buttons for up to 9 of the 10 SA buttons on Extension A; the remaining button is for B's own SA button.
- On a DLC, there can be 10 SA buttons (including SA Orig Only), but no SSA buttons. The factory setting for SA buttons is 2. It is recommended that additional SA buttons be added to ensure that the operator can transfer calls.
- On a QCC, no buttons can be programmed. However, if the QCC Voice Announce feature has been enabled, the Call 5 button becomes a VA (Voice Announce) button.
- If you plan to use Automatic Route Selection (ARS), consider keeping the factory-set button assignments. Since ARS picks the appropriate route, there is no need for Pool buttons.
- Consider assigning SSA buttons to small groups of users who need to answer and distribute each other's calls easily or join conversations. Each SSA button you assign corresponds to an SA Ring or SA Voice button on another telephone. To provide complete coverage within the group, therefore, you must be sure that each SA Ring and SA Voice button assigned to a telephone is also assigned to other members of the group. Each SA Ring or SA Voice button on a telephone can be assigned as an SSA button on up to 16 other telephones.
- Assign a Pool button when a specific trunk pool (for example, BRI, WATS or FX) is used frequently. Also consider assigning Pool buttons if you do not plan to use ARS and the system includes only one or two pools. Do not assign network pools to telephones.
- Assign Personal Line buttons when an exclusive private number is needed, for example, for a company executive. Any line/trunk connected to the system can be used as a Personal Line, as long as it is not in a trunk pool. Do not assign network trunks to telephones.

For single-line telephones, analog modems, fax machines, or any other device connected to a 016 (T/R), 016 ETR, or 008 OPT:

- The settings for SA buttons can be changed (see below); however, factory settings should be adequate to meet most user needs, since SA buttons can be used to make and receive both inside and outside calls.
- Single-line telephones cannot have additional SA buttons and cannot have any SSA buttons. Single-line telephones connected through a 016 (T/R), 016 ETR, or 008 OPT module, however, can have SA buttons removed. Removing all but one SA button from single-line telephones disables features such as Transfer, Conference, and any other feature that requires more than one SA button.
- If you want the extension to receive outside calls on a specific line/trunk, assign a Personal Line button; if you want the extensions to receive outside calls on a line/trunk included in a pool, assign a Pool button.

For adjuncts connected by using an MFM, it is recommended that you change the Button 2 assignment to SA Orig Only and remove the Button 3 assignment.

### Planning Form Instructions

1. Using the guidelines above, select the types of buttons to assign to each telephone.
2. Complete the Button Diagram page of each copy of Forms 4c, 4d, 4e, 4f, 4g, 4h, 4i, 4j, 4k, 4l, 4m, 4n, and 4o.

**NOTE** ► The button diagrams for DLCs (Form 5b) will be completed later.

- a. On buttons 1 through 27, indicate the types of System Access buttons by circling SA for SA Voice, SA Ring, or SA Orig Only, and writing Ring or Voice or SA Orig Only buttons and writing Shared SA, Pool, or Personal Line. Then do the following, as appropriate:
  - For an SSA button, include the number of the extension with the associated SA button (see Form 2a), and the button number on that telephone.
  - For a Pool button, include the pool's extension number (see Form 2c).
  - For a Personal Line button, include the telephone number and record the line/trunk numbers (see Form 2c).
  - Indicate whether all but one SA button will be removed from single-line telephones on Form 4f.
- b. Assign Loudspeaker Page buttons by selecting the button and writing Page on it.

If the system includes one or more DLCs, proceed to [“Direct-Line Consoles”](#) later in this section. Otherwise, proceed to Chapter 4, [“Features,”](#) to record feature assignments on these forms for each extension.

### Telephones in Key and Behind Switch Mode

The line buttons you assign to the telephones, or to the adjuncts connected through an MLX telephone using an MFM, are the following:

- Intercom Ring (ICOM Ring) button
- Intercom Voice (ICOM Voice) button
- Intercom Originate Only (ICOM Orig Only) button
- Loudspeaker Paging button
- Personal Line button (Key mode only)
- Prime line button (Behind Switch mode only)


- NOTES** ▶
- In Behind Switch mode, the system automatically assigns two prime lines to each port on a TDL or MLX module. On a TDL module, the second prime line can be removed and then can be assigned to another user.
  - On an MLX module, one of the prime lines is for the MLX telephone and one is for the device connected to the Multi-Function Module (MFM). If an MFM is not connected to an MLX telephone or the MLX port is not used, the prime line for the MFM can be removed. The prime line can then be assigned to other users.

### Factory Assignments


The system automatically assigns certain kinds of line buttons depending on the type of equipment and the mode of operation:

- In Key mode, the system assigns an ICOM Ring button and an ICOM Voice button; the first eight outside lines connected to the control unit are assigned to each nonoperator multiline telephone, beginning with Button 3.
- In the Behind Switch mode, the system assigns an ICOM Voice button, an ICOM Ring button, and one prime line button (Button 3) to every nonoperator multiline telephone.
- For either mode, the line/trunk assignment is the same for 4400-Series, MLX, ETR, and MLS telephones, except for the MLS-6 telephone.

Figures 3-16 to 3-38 show the factory-set button assignments for 4400-Series, MLX, ETR, MLS, TransTalk 9031/9040, and Business Cordless 905 telephones.

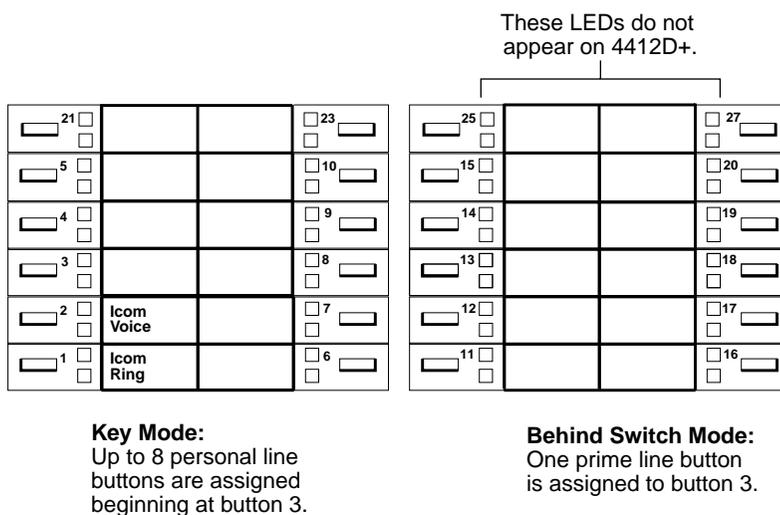

**Figure 3-16. Factory-Set Assignment for 4412D+, 4424D+, 4424LD+ Telephones (Key and Behind Switch Modes)**

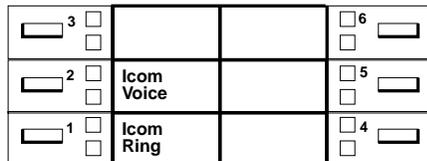


**Key Mode:**

Up to 4 personal line buttons are assigned beginning at button 3.

**Behind Switch Mode:**

One prime line is assigned to button 3.

**Figure 3-17. Factory-Set Assignment for 4406D+ Telephone (Key and Behind Switch Modes)**

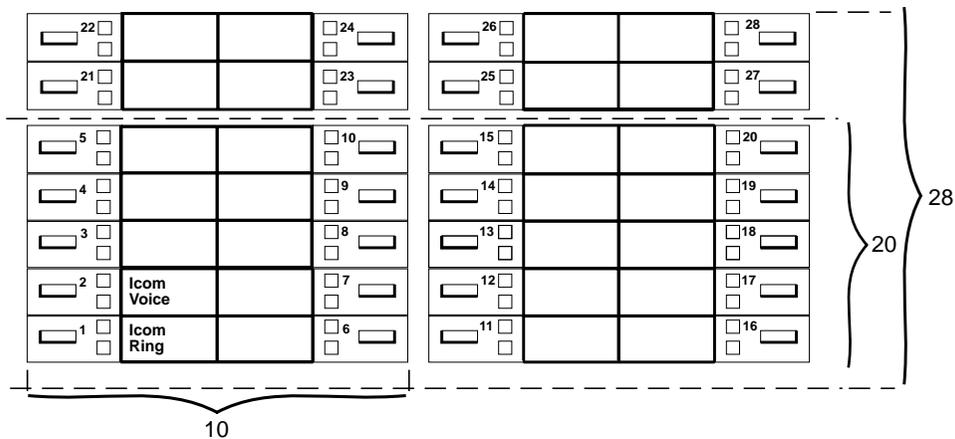


**Key Mode:**

Up to 8 personal line buttons are assigned beginning at button 3.

**Behind Switch Mode:**

One prime line button is assigned to button 3.


**Figure 3-18. Factory-Set Assignment for MLX-20L and MLX-28D Telephones (Key and Behind Switch Modes)**

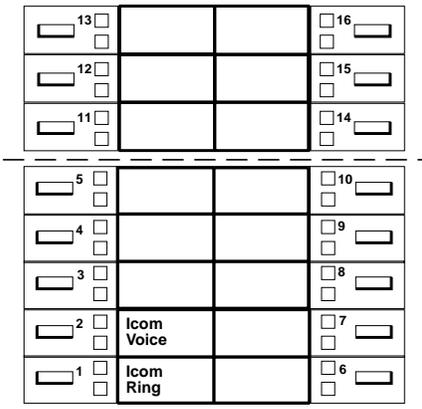

**Key Mode:**  
Up to 8 personal line buttons are assigned beginning at button 3.

**Behind Switch Mode:**  
One prime line button is assigned to button 3.


**Figure 3-19. Factory-Set Assignment for MLX-16DP Telephone (Key and Behind Switch Modes)**

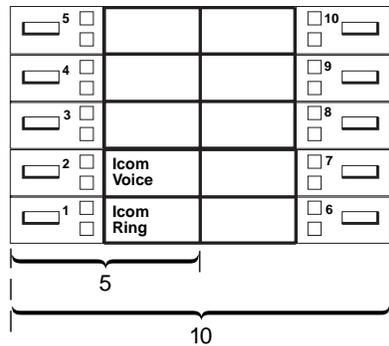


**Key Mode:**  
Up to 8 personal line buttons are assigned beginning at button 3.

**Behind Switch Mode:**  
One prime line is assigned to button 3.


**Figure 3-20. Factory-Set Assignment for MLX 5- and 10-Button Telephones (Key and Behind Switch Modes)**

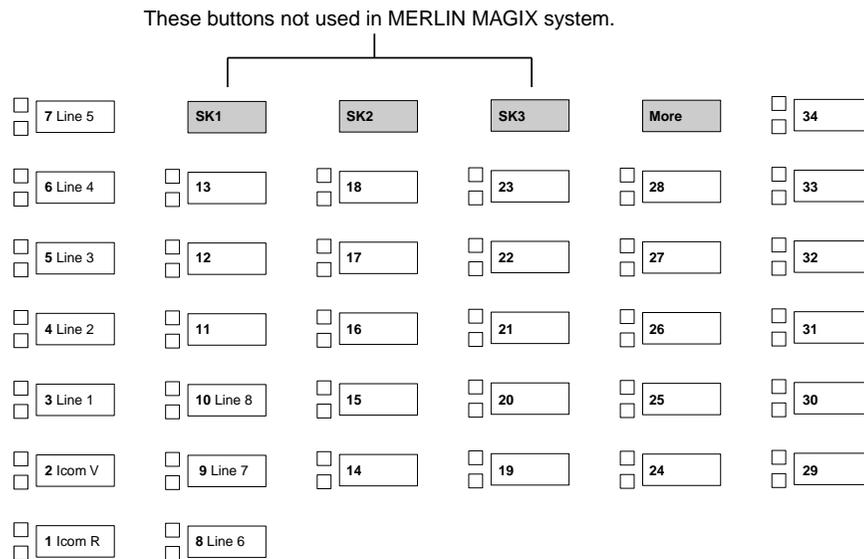


**Figure 3-21. Factory-Set Assignment for ETR-34D Telephone (Key Mode)**

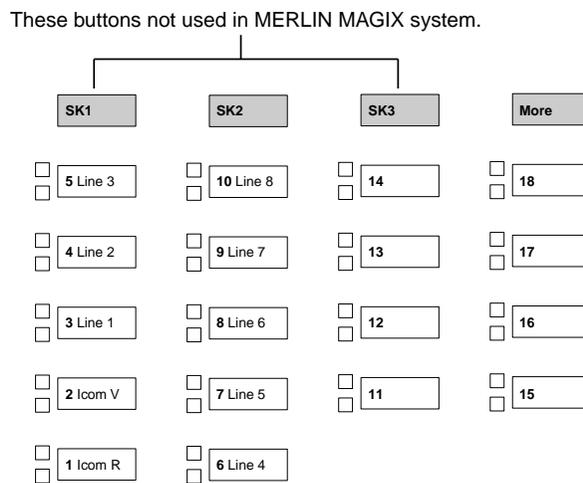


**Figure 3-22. Factory-Set Assignment for ETR-18/18D Telephones (Key Mode)**

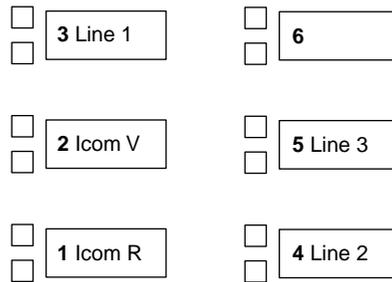


**Figure 3-23. Factory-Set Assignment for ETR-6 Telephone (Key Mode)**

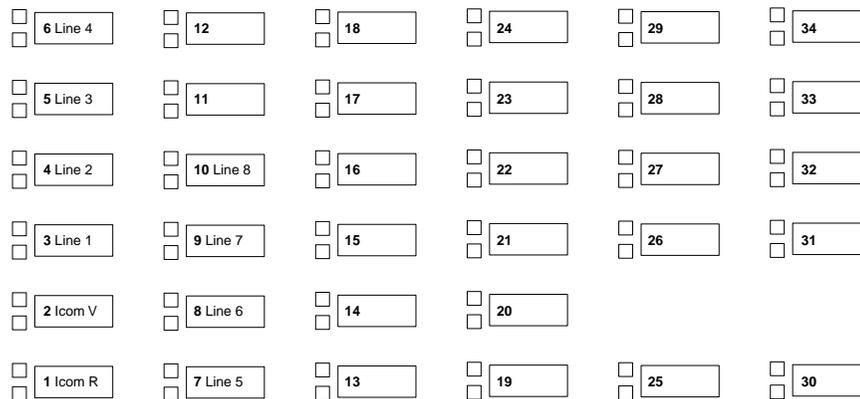


**Figure 3-24. Factory-Set Assignment for MLS-34D Telephone (Key Mode)**

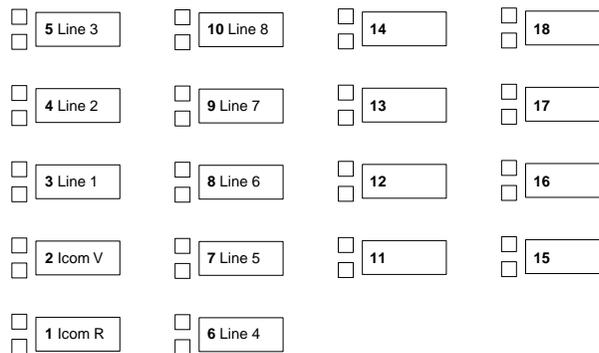

**Figure 3-25. Factory-Set Assignment for MLS-18D Telephone (Key Mode)**

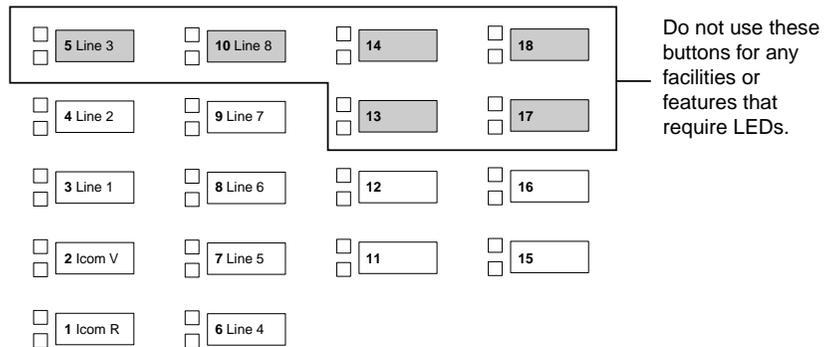

**Figure 3-26. Factory-Set Assignment for MLS-12/12D Telephones (Key Mode)**

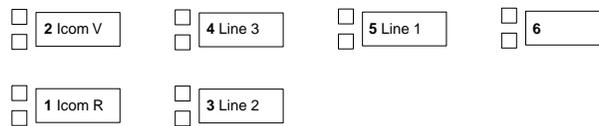


**Figure 3-27. Factory-Set Assignment for MLS-6 Telephone (Key Mode)**

Line 5	Line 6	Line 7	Line 8
5	6	7	8
Line 1	Line 2	Line 3	Line 4
1	2	3	4
ICOM Ring A	ICOM Voice B	Blank C	Blank D


**Figure 3-28. Factory-Set Assignment for TransTalk 9031/9040 Telephone (Key Mode)**

ICOM Ring 1	ICOM Voice 2	Line 1 3	Line 2 4	Line 3 5
-------------------	--------------------	-------------	-------------	-------------

**Figure 3-29. Factory-Set Assignment for Business Cordless 905 Telephone (Key Mode)**

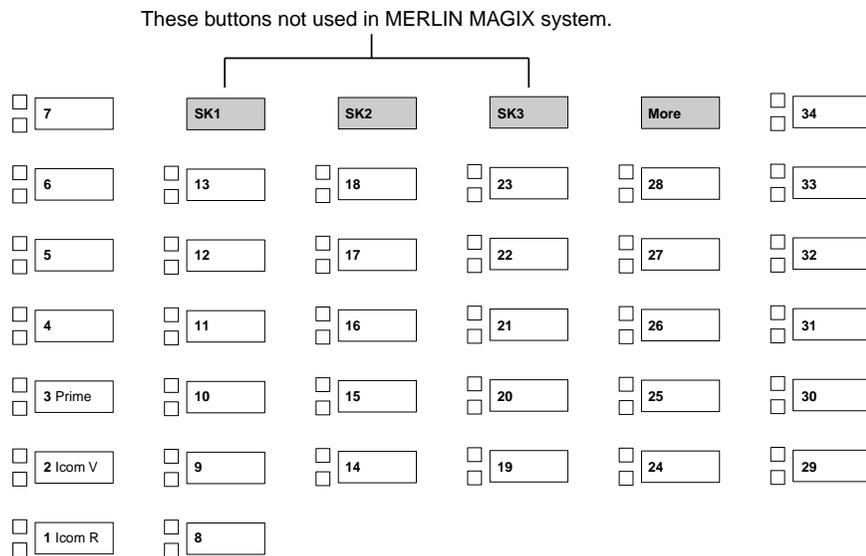


**Figure 3-30. Factory-Set Assignment for ETR-34D Telephone (Behind Switch Mode)**

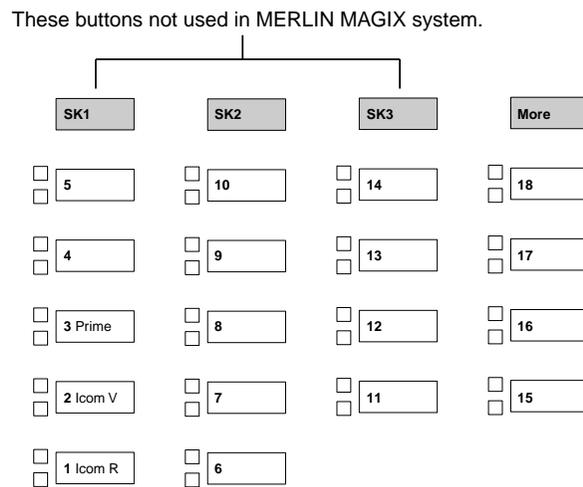

---

**Figure 3-31. Factory-Set Assignment for ETR-18/18D Telephones (Behind Switch Mode)**


---

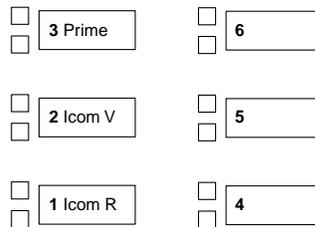


---

**Figure 3-32. Factory-Set Assignment for ETR-6 Telephone (Behind Switch Mode)**


---

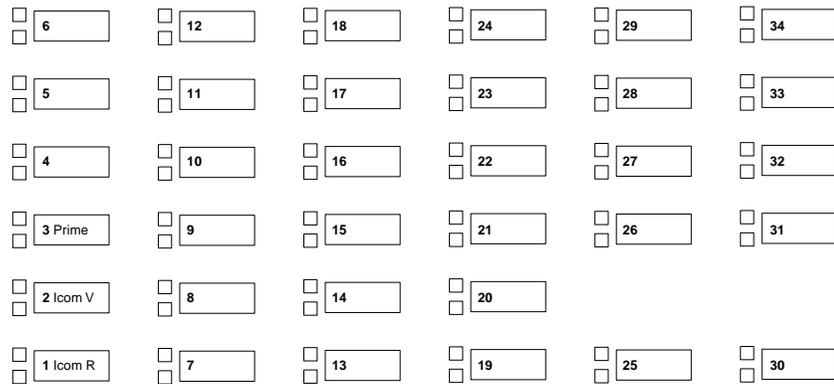


**Figure 3-33. Factory-Set Assignment for MLS-34D Telephone (Behind Switch Mode)**

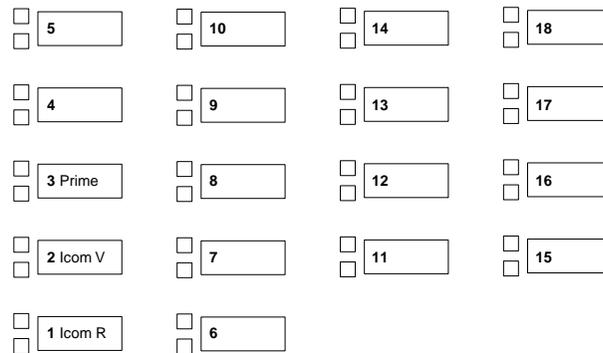

**Figure 3-34. Factory-Set Assignment for MLS-18D Telephone (Behind Switch Mode)**

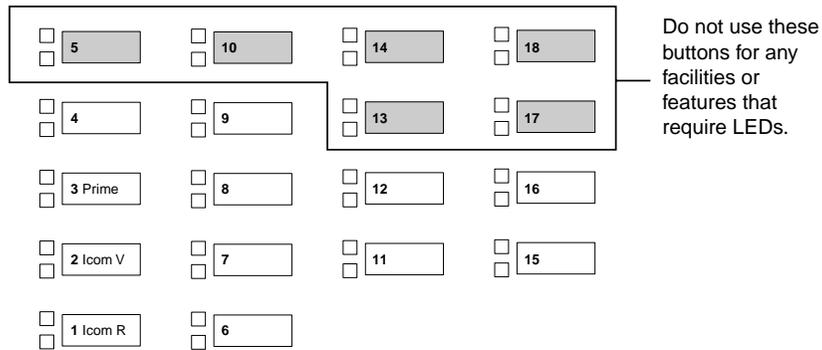

**Figure 3-35. Factory-Set Assignment for MLS12/12D Telephones Behind Switch Mode)**

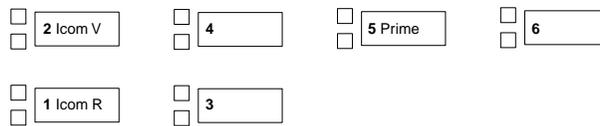

**Figure 3-36. Factory-Set Assignment for MLS-6 Telephone (Behind Switch Mode)**

Blank	Blank	Blank	Blank
5	6	7	8
Prime	Blank	Blank	Blank
1	2	3	4
ICOM Ring A	ICOM Voice B	Blank C	Blank D

**Figure 3-37. Factory-Set Assignment for TransTalk 9031/9040 Telephone (Behind Switch Mode)**

ICOM Ring 1	ICOM Voice 2	Blank 3	Blank 4	Blank 5
-------------------	--------------------	------------	------------	------------

**Figure 3-38. Factory-Set Assignment for Business Cordless 905 Telephone (Behind Switch Mode)**

Although equipment such as single-line telephones, analog modems, and fax machines do not have buttons, the system treats these as multiline telephones with 34 buttons. In both Key and Behind Switch modes, the system assigns no outside lines to this type of equipment. The system assigns two ICOM Ring buttons to equipment connected to a 016 (T/R) or 008 OPT module, or to a port programmed for tip/ring operation on a 016 ETR module. The system assigns an ICOM Ring and an ICOM Voice button to every adjunct connected through an MFM. You *must* remove the ICOM Voice button.

### Guidelines for Button Assignments

This section contains guidelines for assigning buttons in Key or Behind Switch mode.

#### Key Mode

Use the following guidelines to assign buttons for a system in Key mode.

**NOTE** ► When assigning buttons in Key mode, keep in mind that BRI lines are not automatically assigned to telephones or DLCs.

For Key mode with multiline telephone users:

- The system software treats the ETR-6 and MLS-6 telephones as one type of telephone. The default button assignments, however, are different. Change the Line 1, Line 2, and Line 3 buttons on the MLS-6 telephone to match the buttons on the ETR-6 telephone.
- The system software automatically assigns lines to buttons on the MLS-12/12D telephone that do not have LEDs. If you are using facilities or features that require LEDs, reassign these lines to buttons that have LEDs.
- You can assign ICOM Voice, ICOM Ring, or ICOM Orig Only buttons to each extension.
- Assign an additional ICOM Ring, ICOM Voice, or ICOM Orig Only button for people who frequently receive or make transferred calls. The ICOM Orig Only button ensures that if all intercom buttons are busy, at least one is still available to make a call or to transfer the current call.
- Assign additional outside lines, including special-purpose lines such as WATS or FX.
- Remove or rearrange the eight factory-set line assignments, if desired.

- For all types of telephones for which you want the extension user to receive outside calls on a specific line, assign a Personal Line to a button on the telephone or adjunct.
- Consider assigning a Loudspeaker Paging button to make announcements over an optional loudspeaker connected to the control unit. To make an announcement, users press the button and speak into the handset. They do not need to dial the extension of the loudspeaker paging system.

For Key mode with single-line telephone users, analog modems, fax machines, or any other tip/ring device connected to a 016 (T/R) or 008 OPT module, to a port programmed for tip/ring operation on a 016 ETR module, or to an MFM:

- You can assign a combination of up to 10 ICOM Ring or ICOM Orig Only buttons to each extension. (At least one intercom button must be assigned to each single-line telephone or adjunct connected to an MLX telephone using an MFM.) ICOM Voice buttons should not be assigned on single-line telephones.
- If you want the extension user to receive outside calls on a specific line, assign a Personal Line to a button on the telephone or adjunct. The extension user is automatically connected to the intercom line when the receiver is lifted, and the user can select an outside line by dialing the dial-out code (usually a 9).

### Behind Switch Mode

Use the following guidelines to assign buttons for a system in Behind Switch mode.

**NOTE** ► For adjuncts connected using an MFM, you should change the Button 2 assignment to ICOM Orig Only and remove the Button 3 assignment. (MFMs are used with MLX telephones only.)

For Behind Switch mode with multiline telephones:

- The system software treats the ETR-6 and MLS-6 telephones as one type of telephone. The default button assignments, however, are different. Change the Prime button on the MLS-6 telephone to match the button's assignment on the ETR-6 telephone.
- You can assign additional lines and any outside lines connected directly to the control unit, including special-purpose lines.
- If a loudspeaker paging system is to be connected to the control unit, include a programmed Loudspeaker Paging button to make announcements over the loudspeaker system. To make an announcement, users press the button and speak into the handset. They do not need to dial the extension of the loudspeaker paging system.

For Behind Switch mode with single-line telephones, analog modems, fax machines, or any other tip/ring device connected to a 016 (T/R) or 008 OPT module, to a port programmed for tip/ring operation on a 016 ETR module, or to an MFM, you can assign additional lines and any outside lines connected directly to the control unit, including special-purpose lines.

## Planning Form Instructions

1. Using the guidelines above for Key and Behind Switch modes, select the types of buttons to assign to each telephone.
2. Complete the Button Diagram page of each copy of Forms 4b, 4d, 4e, 4f, 4g, 4h, and 5c, by doing *either* of the following:
  - To keep the factory-set assignments, proceed to Step 3.
  - To change the factory-set assignments, skip to Step 4.
3. To keep the factory-set assignments:
  - For multiline telephones in Key mode, fill in the telephone number on Buttons 3 through 10. Record the line numbers (see Form 2c).
  - For multiline telephones in Behind Switch mode, fill in the extension number of the prime line on Button 3.
4. To change the factory-set assignments:
  - a. On Buttons 1 through 10, indicate the type of intercom button by circling ICOM for ICOM Voice, ICOM Ring, or ICOM Orig Only, and writing Ring, Voice, or Orig Only.
  - b. Fill in the telephone numbers (or prime-line extension numbers) to be assigned or changed. Start with Button 3 and record the line numbers on the diagram (see Form 3b).
  - c. Assign programmed Loudspeaker Paging buttons by selecting the button and writing Page on it.

## Direct-Line Consoles

Use these instructions only if the system has one or more Direct-Line Consoles (DLCs). Otherwise, proceed to Chapter 4, “Features,” record feature assignments on the forms for each extension.


**NOTE** ► For more information on DLCs, see the *Feature Reference*.

The number of line, Direct Station Selector (DSS), and programmed feature buttons assigned to a DLC depends on the type of telephone and the number of lines/trunks connected to the system. The factory setting for DLCs is that, in addition to an SA Voice and an SA Ring button, or ICOM buttons, as many lines/trunks as possible are assigned to each console. Each line/trunk appears on a separate button, which means that the number of lines/trunks assigned is limited to the number of buttons on the console (up to a maximum of 26 buttons on the 28-button MLX-28D DLC).


If a DSS is present, the system assigns a DSS button for each extension number associated with an extension and special-feature buttons that are used by the DLC operator for call-handling functions.

Figure 3-39 and Figure 3-40 show initial line/trunk and feature assignments for 4400-Series and MLX DLCs. Refer to the appropriate figure as you select line/trunk assignments for DLCs.

**NOTE** ▶ System Access buttons appear on DLCs in Hybrid/PBX mode. Intercom buttons appear on DLCs in Key or Behind Switch mode.

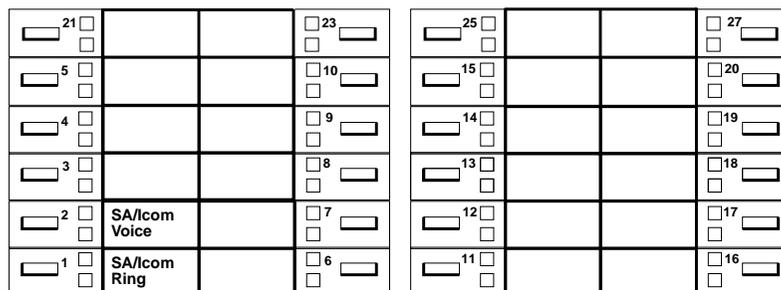

**Figure 3-39. 4400-Series Direct-Line Console**

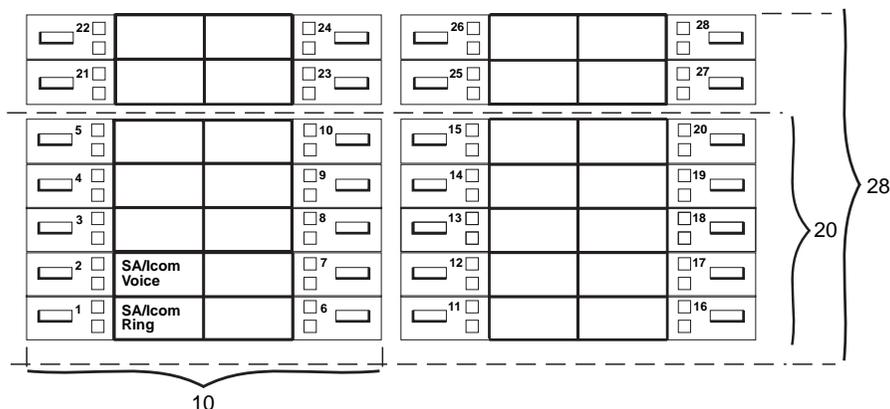

**Figure 3-40. MLX Direct-Line Console**

The system assigns lines/trunks to buttons on DLCs in the order in which the lines/trunks are connected to the control unit. You can change the factory-set assignments by removing, adding, or changing the order in which lines/trunks are assigned to buttons for each DLC operator.

If the system has more than the number of factory-assigned lines/trunks to operator consoles, be sure to change the line/trunk assignment so that all lines/trunks you want answered by a DLC operator appear on at least one operator position.

Decide which lines/trunks should appear on each DLC operator console based on each operator's call-handling responsibilities. All operators may not need the same assignments. DLC operators who are responsible for answering calls for specific groups usually need only the lines/trunks used by group members.

If the system includes a loudspeaker paging system, consider assigning a programmed Loudspeaker Paging button to DLC positions for one-touch access to the paging equipment. The factory assignments can be changed through centralized telephone programming or by a DLC operator.

### **Planning Form Instructions**

Complete the Button Diagram page on each copy of Form 5b:

1. For the Ring and Voice buttons, circle SA or Icom.
2. Write the telephone number of the line/trunk you want to assign in the space on the Button Diagram page. Record each line/trunk number (see Form 2c).
3. Assign Alarm, Night Service, or Send/Remove Message buttons by labeling the appropriate button Alarm, Nite Svc, or Snd/Rem Msg.
4. Assign programmed Loudspeaker Paging buttons by selecting the button and writing Page on it.

Proceed to Chapter 4, "[Features](#)," to complete the remaining sections of these forms.



## Contents

Overview . . . . .	4-1
Telephone and Extension Features . . . . .	4-2
■ Queued Call Console (Hybrid/PBX Mode Only) . . . . .	4-3
■ Pool Dial-Out Code Restriction (Hybrid/PBX Mode Only) . . . . .	4-4
■ Calling Restrictions . . . . .	4-4
■ Forced Account Code Entry . . . . .	4-5
■ Microphone Operation . . . . .	4-5
■ Remote Call Forwarding . . . . .	4-6
■ Fax Message-Waiting Receiver . . . . .	4-7
■ Trunk-to-Trunk Transfer . . . . .	4-7
■ HotLine . . . . .	4-8
■ Extension Copy . . . . .	4-8
■ Cover Ring Delay . . . . .	4-12
■ Service Observing . . . . .	4-13
Operator Features . . . . .	4-14
■ Direct-Line Console . . . . .	4-15
Operator Hold Timer . . . . .	4-15
DLC Automatic Hold . . . . .	4-15
■ Queued Call Console (Hybrid/PBX Mode Only) . . . . .	4-15
Hold Return . . . . .	4-16
Automatic Hold or Release . . . . .	4-16
Calls-in-Queue Alert . . . . .	4-16
Queue Over Threshold . . . . .	4-17
Elevate Priority . . . . .	4-17
Message Center . . . . .	4-18
Return Ring . . . . .	4-19
Position-Busy Backup . . . . .	4-19
Operator Hold Timer . . . . .	4-20
Call Types . . . . .	4-20
Voice Announce . . . . .	4-21
■ Direct Station Selector . . . . .	4-21
DSS Page Buttons . . . . .	4-21
Park Zones . . . . .	4-22
Group-Assigned Features . . . . .	4-22
■ Call Pickup Groups . . . . .	4-23
■ Group Paging . . . . .	4-24
■ Coverage . . . . .	4-24

- Individual Coverage . . . . . 4-25
- Group Calling . . . . . 4-27
  - Calling Group Options . . . . . 4-30
- System Features . . . . . 4-35
  - Transfer Options . . . . . 4-36
  - Camp-On Return Time . . . . . 4-38
  - Call Park Return Time . . . . . 4-38
  - Automatic Callback . . . . . 4-38
  - Extension Status . . . . . 4-39
  - Station Message Detail Recording (SMDR) . . . . . 4-39
  - Inside Dial Tone . . . . . 4-41
  - Reminder Service Cancel . . . . . 4-41
  - Calls to Unassigned Extensions . . . . . 4-42
  - Interdigit Timers . . . . . 4-43
  - Rotary . . . . . 4-43
  - Automatic Daylight Savings Time . . . . . 4-44
  - Allowed Lists . . . . . 4-44
  - Disallowed Lists . . . . . 4-46
  - Call Restriction Summary . . . . . 4-47
    - Night Service with Group Assignment . . . . . 4-48
    - Night Service with Time Set . . . . . 4-49
    - Night Service with Coverage Control . . . . . 4-50
  - Labeling . . . . . 4-50
    - Posted Message . . . . . 4-51
    - System Speed Dial . . . . . 4-51
  - Automatic Route Selection (Hybrid/PBX Mode Only) . . . . . 4-52
    - ARS Worksheet . . . . . 4-53
    - Subpatterns . . . . . 4-58
    - Enhanced 911 Service . . . . . 4-64

---

## Overview

The system offers many optional features. This chapter contains instructions for assigning features in the following categories:

- **Telephone and Extension Features.** Individual telephones, consoles, or adjuncts are assigned these features. Some features may be assigned to other equipment at an extension.
- **Operator Features.** All operator consoles are assigned these features.
- **Group-Assigned Features.** These features are used by functional groups of users (such as separate departments).
- **System Features.** All or most users on the system use these features.

Detailed information about all features (including the considerations, constraints, and feature interactions that may impact their use) is contained in the *Feature Reference*. You should be familiar with this information before you attempt to perform the procedures in this chapter.

Since certain features are optional, you can simply skip those sections that do not apply to the system.

Each individual telephone form is a complete record for that specific telephone for planning, programming, and subsequent reference by the System Manager. Some features noted on the individual telephone forms are not described in this book—for example, Abbreviated Ring, Call Waiting, and Automatic Line Selection. For more information about these features, see the *Feature Reference*.

**NOTE** ▶ Except for some telephone-specific features—for example, microphone operation—many of the features described in this chapter can be assigned to other equipment, such as a data terminal or fax machine. Therefore, throughout this chapter, the more general term “extension” is often used instead of, or in addition to, “telephone.”

## Telephone and Extension Features

This section contains instructions for assigning some optional features to extensions. These features may be used by both system operators and general users:

- Pool Dial-Out Code Restriction (Hybrid/PBX mode only)
- Calling Restrictions
- Forced Account Code Entry (not QCC)
- Microphone Operation
- Remote Call Forwarding (not QCC)
- Fax Message-Waiting Receiver and Threshold
- Trunk-to-Trunk Transfer
- HotLine (single-line telephones only)
- Service Observing (4406D+, 4412D+, 4424D+, 4424LD+, and MLX telephones for Service Observer; any telephone for a Service Observing group member except QCC or CTI link)

- NOTES** ►
- The Service Observing button is administrable only via centralized telephone programming.
  - Service Observing may be subject to federal, state, or local laws, rules, or regulations or require the consent of one or both of the call parties. You must check in your jurisdiction and comply with all applicable laws, rules, and regulations before using this feature. Failure to comply may result in severe penalties.

The system programmer and/or network administrator assigns these features.

There are additional extension features noted on the forms but not covered in this book. Individuals normally program these features at their telephones, although the System Manager may also program these features using centralized telephone programming. You may, however, want to complete the information on the forms so they can serve as a complete summary of features for each extension. Detailed information about these and all features is contained in the *Feature Reference*. Instructions for using centralized telephone programming are included in *System Programming*. For users who want to program features on their own telephones, information and procedures are contained in the user and operator guides.

You may choose the Extension Copy feature to create a template that can then be copied to other similar extensions whose users require the same features. This feature is also described later in this section.

---

## Forms Needed

- 2a, System Numbering: Extension Jacks
- 4d, MLX Telephone
- 4e, MFM Adjunct: MLX Telephone
- 4f, Tip/Ring Equipment
- 4h, ETR Telephone
- 4j, MLS Telephone
- 4k, 4400/4400D Telephone
- 4m, Multiline 4400-Series Telephone
- 4o, Wireless Telephone
- 5b, Direct-Line Console (DLC)
- 5c, MFM Adjunct: DLC
- 5d, Queued Call Console (QCC)
- 6b, Optional Extension Features
- 6g, Call Restriction Assignments and Lists
- 6h, Authorization Codes
- 6i, Pool Dial-Out Code Restrictions
- 11, Service Observing: Group Assignment
- Floor plan

## Queued Call Console (Hybrid/PBX Mode Only)

Use these instructions if the system includes one or more QCCs. Otherwise, skip to the next section, [“Pool Dial-Out Code Restriction \(Hybrid/PBX Mode Only\).”](#)

### Planning Form Instructions

1. Transfer the user information from Form 2a, System Numbering: Extension Jacks to each copy of Form 5d, by filling in the Logical ID, Extension No., and Person or Location spaces. Use the Button Diagram on Form 5d as a guide for labeling the operator console buttons. You cannot change the button assignments shown. If the QCC Voice Announce feature is enabled, however, the Call 5 button becomes a VA (Voice Announce) button. Refer to the [“Operator Features”](#) section later in this chapter.
2. Check the box under the Adjuncts heading that applies to the equipment at the extension (see the floor plan).

3. Under Message Center Operator, check No if the QCC will not be a message center, or Yes if it will be a message center.

**NOTE** ► If a Calling Group member is programmed as a QCC, the extension is removed from the Calling Group. If a Service Observing group member is programmed as a QCC, the extension is removed from the Service Observing group. If a Service Observer extension is programmed as a QCC, the extension is removed as a Service Observer.

Proceed to the next section, [“Pool Dial-Out Code Restriction \(Hybrid/PBX Mode Only\).”](#)

### Pool Dial-Out Code Restriction (Hybrid/PBX Mode Only)

This section contains instructions to tailor the use of dial-out access codes by restricting extensions from making calls on specific trunk pools (for example, those consisting of special-purpose lines/trunks such as WATS or FX), or to reserve trunk pools for data communications only.

#### Planning Form Instructions

Use Form 6i to identify those extensions that are restricted from using some dial-out access codes. The factory setting is for *all* extensions to be restricted from using *all* dial-out access codes. This form only identifies extensions that are to remain restricted. Extensions that are not listed on this form must have their restrictions removed through system administration. All extensions should be restricted from dialing private network pools.

### Calling Restrictions

This section contains instructions to restrict selected extensions from making outside calls—for example, for telephones in a reception area and to control toll call abuse—but still allow local and intercom calls.

#### **SECURITY ALERT:**

*Calling restrictions [for example, Disallowed Lists, Toll Restriction, and Facility Restriction (FRL) Levels] should be programmed, as appropriate, to minimize toll fraud abuse. Refer to the “Calling Restrictions” section in the Feature Reference for additional information on programming calling restrictions.*

#### Planning Form Instructions

If these restrictions are too limited, use [“Allowed Lists”](#) and [“Disallowed Lists,”](#) as described later in this chapter.

Use Form 6h to identify Authorization Codes for use by the users of certain extensions. After you complete Form 6h, remove it from the forms set and keep it in a secure place.

---

Use Form 6g, Call Restriction Assignments and Lists, to identify the extensions with calling restriction assignments. List the extensions with calling restrictions in the Ext. No. column and the type of restriction in the Restriction Type column. The factory setting is Restricted.

**NOTE** ► Setting this option to Outward Restrict or Toll Restrict does *not* allow reliable Toll Restriction on telephone company lines/trunks that do not require 1 or 0 for toll calls. The Toll Type setting of 1 or 0 allows the system to classify calls as either local or toll, based on the number a user dials. Dialing a prefix depends on local telephone company requirements and the type of trunk being used. The system must be programmed to designate whether or not to restrict users from dialing calls to certain areas. The Toll Type feature does *not* apply to DID trunks or private network tandem trunks.

To restrict the extension from making outside calls so only intercom or private network calls can be made, check the Outward Restriction column.

To restrict the extension from making toll calls so only intercom, local, or private network calls can be made, check the Toll Restriction column.

## Forced Account Code Entry

This section contains instructions for setting up the system to associate calls with corresponding accounts, clients, or projects for billing and accounting purposes.

### Planning Form Instructions

Use Form 6b to identify extensions requiring Forced Account Code Entry. Under the Forced Account Code Entry heading on Form 6b, do *either* of the following:

- To allow users to make calls without entering an account code, check the No (factory setting) box.
- To require users to enter an account code, check the Yes box.

## Microphone Operation

This section contains instructions to disable the microphones on MLX telephones when they are used in areas where use of the speakerphone is disruptive.

Extensions that interact with a CTI-capable program on a computer (extensions marked Computer Telephony Integrated Client PC on forms 4b, 4d, 4h, or 4j) should not have their microphones disabled.

**NOTE** ► The microphones on 4400-Series telephones cannot be disabled. TransTalk 9031/9040 and Business Cordless 905 telephones do not have microphones.

### Planning Form Instructions

Under the Microphone heading on Form 6b, do *one* of the following:

- To allow speakerphone use (factory setting), check Enable.
- To prevent speakerphone use, check Disable.

### Remote Call Forwarding

This section contains instructions to allow users to forward calls to outside numbers and to allow users to “screen” their calls through use of the Forwarding Delay option. With the Forwarding Delay option activated, incoming calls ring at the called extension a specified number of times (from 1 to 9 rings) before the call is forwarded.

#### SECURITY ALERT:

*Remote Call Forwarding can only be used securely when used on ground-start line/trunks or loop-start lines/trunks with “reliable disconnect” (sometimes referred to as forward disconnect or disconnect supervision). Toll fraud can occur when loop-start lines/trunks are used with unreliable disconnect. If the calling party stays on the line after the called party hangs up, the central office will return a dial tone at the conclusion of the call, enabling the caller to place another call as if it were being placed from your company.*

Remote Call Forwarding and the Forwarding Delay option are programmed for each extension. Assign these features to selected extensions, for example, for people who often work away from the office. Remote Call Forwarding cannot be assigned to QCCs. If there is a Personal Line assigned to a telephone, you can specify that calls on that line be forwarded to an outside number if the extension is the principal user of the Personal Line.

Ensure that the number of rings for Remote Call Forwarding is less than the Coverage Delay or the call will not forward.

### Planning Form Instructions

1. Under the Remote Call Forwarding heading on Form 6b, do *either* of the following:
  - To prevent users from forwarding calls to outside numbers (factory setting), check the Not Allowed column and proceed to the next section, [“Fax Message-Waiting Receiver.”](#)
  - To provide Remote Call Forwarding, check the Allowed column, then proceed to Step 2.
2. If you want a user to be able to forward the incoming calls on a specific line or lines to another number, write the extension number in the spaces provided on Form 6c, Principal User of Personal Line.
3. If Remote Call Forwarding is enabled, do *either* of the following:
  - If you wish to disable the Forwarding Delay option, enter 0 in the Delay (0–9) column under the Remote Call Forwarding heading on Form 6b. This causes incoming calls to be forwarded immediately.

- If you wish to enable the Forwarding Delay option for an extension, enter the number of times an incoming call should ring at the called extension (1–9 rings) before the incoming call is forwarded.

- NOTES** ►
- If Do Not Disturb (DND) and Forwarding Delay are both active, DND overrides the Forwarding Delay and the call is forwarded immediately.
  - Due to the timing of when the ringing signal is applied to a single-line telephone, and the interval of that ringing signal, single-line telephones may appear to have their calls forwarded one ring sooner than the programmed number.

## Fax Message-Waiting Receiver

Use these instructions only when the system has fax machines connected directly to the control unit by way of a 016 (T/R), 016 ETR, or 008 OPT module; or connected to an MLX telephone using a Multi-Function Module (MFM). Otherwise, skip to the section, [“Operator Features.”](#)

This section contains instructions to designate from one to four telephones to receive message-waiting indications when a fax is received on a specific fax machine, and to specify the length of time before the system assumes a fax has arrived and sends the message-waiting indication.

### Planning Form Instructions

Use Form 6d to identify up to 16 fax machine extension numbers and up to four receiver extension numbers for each fax number.

The System Notification Threshold setting can be left at the factory setting of 10 seconds or changed and identified on the line at the top of the form for up to 30 seconds.

**NOTE** ► You will fill in the rest of the optional telephone features later.

## Trunk-to-Trunk Transfer

This section contains instructions to allow or disallow trunk-to-trunk transfer at each extension.

If trunk-to-trunk transfer is disallowed on an extension in a private network, the extension cannot transfer an outside call to a local system trunk connected to the PSTN. See the *Network Reference* for more information.

Trunk-to-trunk transfer may only be performed on ground-start trunks and loop-start trunks with reliable disconnect. Trunk-to-trunk transfer may be performed on BRI, Tie lines, PRI, ground-start trunks, and loop-start trunks that have reliable disconnect.

Trunk-to-trunk transfer is factory set to disabled and may be enabled for a specific extension. Single-line telephones are restricted from completing a trunk-to-trunk transfer.

### Planning Form Instructions

Use Form 6b to identify extensions permitted to perform trunk-to-trunk transfers. Under the Trunk-to-Trunk Transfer heading on Form 6b, do *either* of the following:

- To block an extension from completing a trunk-to-trunk transfer, check the No (factory setting) check box.
- To allow an extension to complete trunk-to-trunk transfers, check the Yes check box.

### HotLine

The HotLine feature is available only for single-line telephones and devices connected to a port on a 016 (T/R), 016 ETR, or 008 OPT module. A single-line telephone connected to an MFM cannot use the HotLine feature. Also, a 4400/4400D Telephone cannot use the Hotline feature. This feature enables you to set up a telephone to dial one specific number once the telephone goes off-hook. The number that is dialed is the first personal speed dial (code 01) programmed on the single-line telephone using centralized telephone programming or extension programming. (Extension programming is only available before the HotLine feature is activated.)

A HotLine extension can call a private network extension. See the *Network Reference* for information.

**NOTE** ► After the Hotline extension number has been assigned, the FRL value for the Hotline extension number should be set to 6. This ensures that, regardless of the FRL value assigned to the route or routes in the UDP Routing Table connecting two switches in a private network, placing a UDP call from switch A directly connected to switch B using the Hotline feature will not fail due to the FRL.

### Planning Form Instructions

On Form 4f specify if this device will use the HotLine Feature. Under the HotLine heading on Form 4f, do *either* of the following:

- To set the extension to not use the HotLine feature, check the Off (factory setting) box.
- To set the extension to be a HotLine extension, check the On check box. Enter the extension or telephone number that the HotLine extension dials when it is taken off-hook in the space provided below the On box.

### Extension Copy

The Extension Copy feature enables you to copy an extension's programmed buttons (with some exceptions) to one or more extensions. The features are individually programmed on one extension to create a template that can then be copied to other extensions in the system. You can make additional copies of these forms and have several templates for different groups of users.

Only similar types of extensions can be copied to each other (for example, MLX to MLX or 4400-Series to 4400-Series) because each extension type has a different button layout. For a system that has each telephone type, you need at least five templates, one for MLX, one for ETR, one for MLS, one for 4400-Series multiline, and one for wireless (TransTalk 9031/9040 and Business Cordless 905) telephones.

**NOTE** ▶ A Multi-Function Module (MFM) extension can be copied to or from another MFM extension. A 4400-Series DLC extension can only be copied to another 4400-Series DLC extension. An MLX DLC extension can only be copied to another MLX DLC extension. Single-line telephones and QCCs *cannot* use the Extension Copy feature.

Table 4-1 contains a list of the features that can be copied and whether the features apply to 4400-Series, MLX, ETR, MLS, or wireless telephones, or to all of them. Following the table is a list of operator features that can be copied.

**Table 4-1. Features that Can Be Copied**

Feature	4400-Series	MLX	ETR	MLS	Wireless
Account Code Entry	✓	✓	✓	✓	✓
Authorization Code	✓	✓	✓	✓	✓
Auto Dial Inside	✓	✓	✓	✓	✓
Auto Dial Outside	✓	✓	✓	✓	✓
Barge-In	✓	✓	✓	✓	
Callback-Selective	✓	✓	✓	✓	✓
Caller ID Toggle Button	✓	✓	✓	✓	
Camp-On	✓	✓			✓
Conference <sup>1</sup>	✓	✓	✓	✓	✓
Coverage Off	✓	✓	✓	✓	✓
Coverage VMS	✓	✓	✓	✓	✓
Data Status	✓	✓	✓	✓	
Direct Voice Mail	✓	✓	✓	✓	✓
Do Not Disturb	✓	✓	✓	✓	✓
Drop <sup>1</sup>		✓			✓ <sup>↔</sup>
4400-Series Drop	✓				
ETR Drop			✓	✓	✓✓
Extension Status 2 (ES2) (Non-operator)	✓	✓			

Table 4-1. Features that Can Be Copied—Continued

Feature	4400-Series	MLX	ETR	MLS	Wireless
Extension Status 1 (ES1) (Non-operator)	✓	✓			
Feature Button	✓				
Forward	✓	✓	✓	✓	✓
Group Calling	✓	✓	✓	✓	✓
Group Page	✓	✓	✓	✓	
Headset Auto Answer	✓	✓			
Headset Hang Up	✓	✓			
Headset Status	✓	✓			
Headset/Handset Mute		✓			
Messaging:					
Delete Message	✓✓		✓	✓	✓
Leave Message	✓	✓	✓	✓	
Message Light Off	✓	✓	✓	✓	✓
Next Message	✓↔		✓	✓	✓
Posted Message	✓	✓			
Return Call	✓↔		✓	✓	
Scroll Message	✓↔		✓	✓	
Park	✓	✓	✓	✓	✓
Pickup:					
Group	✓	✓	✓	✓	✓
General	✓	✓	✓	✓	✓
Extension	✓	✓	✓	✓	✓
Line	✓	✓	✓	✓	✓
Privacy	✓	✓	✓	✓	✓
Recall	✓	✓	✓	✓	
Redial <sup>5</sup>	✓	✓	✓	✓	
Reminder Service:					
Set	✓	✓	✓	✓	
Cancel	✓	✓	✓	✓	
Saved Number Dial <sup>2</sup>	✓	✓	✓	✓	✓

**Table 4-1. Features that Can Be Copied—Continued**

Feature	4400-Series	MLX	ETR	MLS	Wireless
Signaling	✓	✓	✓	✓	
System Access: <sup>6</sup>					
SA/ICOM Originate Only	✓	✓	✓	✓	✓
SA/ICOM Ring	✓	✓	✓	✓	✓
SA/ICOM Voice	✓	✓	✓	✓	✓
System Speed Dial	✓	✓	✓	✓	✓
Transfer <sup>1</sup>	✓	✓	✓	✓	✓

1 Behind Switch mode only.

2 For TransTalk 9040 telephone connected to a TDL port.

3 For TransTalk 9040 telephone connected to an ETR port and for TransTalk 9031 and Business Cordless 905 telephones.

4 4406D+ telephone only.

5 Number is *not* copied.

6 Ringing options (No Ring, Delay Ring, and Immediate Ring) are copied with the button.

The following are operator features that can be copied:

- Alarm
- Extension Status Off
- Extension Status 1
- Extension Status 2
- Missed Reminder
- Night Service
- Operator Park
- Send/Remove Message

### Planning Form Instructions

1. On page 1 of Forms 4c, 4g, 4i, 4l, and 4n, write the extension number of the Master Extension and the extensions to which this template will be copied.
2. Complete the Button Diagrams on Forms 4c, 4g, 4i, 4l, and 4n, assigning features to the buttons.
3. On the individual telephone forms (Forms 4d, 4e, 4h, 4j, 4m, 4o, 5b, and 5c) do the following:
  - a. By the extension information at the top of each page, check Copied from Master Extension No. and write the extension number of the Master Extension.
  - b. Under every form's Button Diagram heading, check the See Master Extension box.

## Cover Ring Delay

The following ring delay options can be programmed for extensions:

- The Group Coverage Ring Delay is programmed on individual sender extensions and replaces the Coverage Delay Interval programmed on a system-wide basis in previous releases.
- When used in conjunction with Secondary Cover buttons, consider the following when setting the value:
  - When secondary cover buttons are programmed for a sender, set the value such that when the Group Coverage Ring Delay is added to the Primary Cover Ring Delay, the result is greater than the Secondary Ring Delay plus two rings (the fixed Secondary Cover Delay Interval).
- The Primary Cover Ring Delay and Secondary Cover Ring Delay are programmed on individual sender extensions and replace the Delay Ring Interval programmed on a system-wide basis.

### Forms Needed

- 4d, MLX Telephone
- 4e, MFM Adjunct: MLX Telephone
- 4f, Tip/Ring Equipment
- 4h, ETR Telephone
- 4j, MLS Telephone
- 4k, 4400/4400D Telephone
- 4m, Multiline 4400-Series Telephone
- 4o, Wireless Telephone
- 5b, Direct-Line Console (DLC)
- 5c, MFM Adjunct: DLC
- 7c, Group Coverage

### Planning Form Instructions

1. After assigning Individual Coverage for each receiver telephone, locate the appropriate form for each sender telephone (Form 4b, 4d, 4f, 4h, 4j, 4k, 4m, 4o, or 5b).
2. Under the Primary Cover Ring Delay heading, do one of the following:
  - To keep the factory-set delay, check the 2 rings box.
  - To change the factory-set delay, check the second box and write the number of rings (1–6) in the space provided.
3. Under the Secondary Cover Ring Delay heading, do one of the following:
  - To keep the factory-set delay, check the 2 rings box.
  - To change the factory-set delay, check the second box and write the number of rings (1–6) in the space provided.

4. After assigning senders to Group Coverage on form 7c, locate the appropriate form for each sender telephone (Form 4b, 4d, 4f, 4h, 4j, 4k, 4m, 4o, or 5b).
5. Under the Group Coverage Ring Delay heading, do one of the following:
  - To keep the factory-set delay, check the 3 Rings box.
  - To change the factory-set delay, check the second box and write the number of rings (1–9) in the space provided.

## Service Observing

This section contains instructions for setting up Service Observing so that a designated observer can monitor a call at any extension that is a member of the Service Observer's group.

**NOTE** ► Service Observing may be subject to federal, state, or local laws, rules, or regulations or require the consent of one or both of the call parties. You must check in your jurisdiction and comply with all applicable laws, rules, and regulations before using this feature. Failure to comply may result in severe penalties.

You can establish up to 16 Service Observing groups on a system. Each group consists of one Service Observer and a list of the stations (up to the system maximum of 400) that the observer is allowed to monitor. A warning tone is programmed on a per group basis to provide an audible indication that an extension is being observed.

- NOTES** ►
- Any multiline 4400-Series telephone (except a QCC) may be a Service Observing extension.
  - Any or MLX extension (except QCC or CTI link) may be a Service Observing extension.
  - A Service Observing button must be assigned to the observer's multiline 4400-Series or MLX telephone and is programmed only via Centralized Telephone Programming.
  - Any extension (except QCC or CTI link) may be a group member.
  - If an extension becomes a QCC or CTI link, it is removed from all Service Observing groups.
  - A Service Observer may be a member of another Service Observing group. Any extension may be a member of more than one Service Observing group.
  - The Service Observer and all extensions in a Service Observing group must be on the local switch.
  - Data, video, page, and reminder service calls, and calls at VMI ports and delay announcement devices cannot be observed.
  - An adjunct that is connected to an MFM can be observed but cannot be an observer.

### Forms Needed

- 4d, MLX Telephone
- 4m, Multiline 4400-Series Telephone
- 5b, Direct-Line Console (DLC)
- 11, Service Observing: Group Assignment

### Planning Form Instructions

Determine which stations will be assigned as Service Observers and complete the following on page 1 of Forms 4d, 4m, and 5b:

- In the Centralized Programming Requirements section, check the Assign Service Observing Button box for each 4400-Series and MLX telephone that will have a Service Observing button assigned. Any extension with a programmed Service Observing button may be assigned as an Observer extension.

Determine the number of Service Observing groups needed. Then, for each group, complete the following on Form 11:

1. Write the group number in the Group No. space.
2. Write the extension number for the group Observer in the Observer Ext. No. space. The Observer's extension must have a Service Observing button.
3. Check the appropriate option under the Warning Tone heading.
  - To keep the factory-set option and provide a warning tone to indicate that the extension is being monitored, check the Yes box.
  - If a warning tone will not be provided when an extension is being monitored, check the No box.
4. Write the extension number for each group member in the Member Ext. No. column.
5. Write each Service Observing group member's name in the Member Name column.

---

## Operator Features

Operator features apply only to DLCs, QCCs, and any Direct Station Selectors (DSSs) connected to them.

### Forms Needed

- 2a, System Numbering: Extension Jacks
- 2d, System Numbering: Special Renumbers
- 5d, Queued Call Console (QCC)
- 6a, Optional Operator Features

---

## Direct-Line Console

Use these instructions only if the system has one or more DLCs. Otherwise, skip to the section, [“Queued Call Console \(Hybrid/PBX Mode Only\).”](#) This section contains instructions for the Operator Hold Timer and DLC Automatic Hold features.

### Operator Hold Timer

This section contains instructions to set the operator hold timer to track the number of seconds callers are on hold for an operator. When a caller is on hold longer than the number of seconds programmed for the timer, the operator is reminded of the call by a single ring.

### Planning Form Instructions

Under the Operator Hold Timer heading on Form 6a, do *either* of the following:

- To keep the factory setting, check 60 Seconds.
- To change the factory setting, check the second box and write the number of seconds (10 to 255 seconds) in the space provided.

### DLC Automatic Hold

This section contains instructions to set DLC Automatic Hold to place calls on hold automatically when the operator presses another line button.

### Planning Form Instructions

Under the DLC Automatic Hold heading on Form 6a, do *either* of the following:

- To keep the factory setting (no DLC Automatic Hold), check the Disable box.
- To automatically put calls on hold when another line button is pressed, check the Enable box.

If the system includes one or more QCCs, proceed to the next section. Otherwise, skip to the section, [“Direct Station Selector.”](#)

## Queued Call Console (Hybrid/PBX Mode Only)

Use these instructions only if the system has one or more QCCs. Otherwise, skip to the section, [“Direct Station Selector.”](#)

This section contains instructions to set the following QCC operator features:

- Hold Return
- Automatic Hold or Release
- Calls-in-Queue Alert
- Queue Over Threshold
- Elevate Priority

- Message Center Operation
- Automatic or Manual Directed Call Completion
- Return Ring
- Position-Busy Backup
- Operator Hold Timer
- Call Types
- Voice Announce

### **Hold Return**

This section contains instructions to specify whether calls put on hold by a QCC operator stay on hold indefinitely, or are returned to the QCC queue after the Hold Timer has expired twice.

### **Planning Form Instructions**

Under the Hold Return heading on Form 6a, do *either* of the following:

- To indicate that calls stay on hold after the hold timer has expired twice, check the Remain on Hold (factory setting) box.
- To indicate that calls on hold return to the QCC queue after the hold timer has expired twice, check the Return to Queue box.

### **Automatic Hold or Release**

This section contains instructions to specify whether a call that is in progress on a Call button is automatically put on hold (Automatic Hold) or disconnected (Automatic Release), when the operator presses another Call button.

### **Planning Form Instructions**

Under the Automatic Hold or Release heading on Form 6a, do *either* of the following:

- To specify that calls are automatically disconnected, check the Automatic Release box (factory setting).
- To specify that calls are automatically put on hold when another Call button is pressed, check the Automatic Hold box.

### **Calls-in-Queue Alert**

This section contains instructions for setting the Calls-in-Queue Alert option to notify QCC operators (with a single beep) when a new call enters the QCC queue.

---

## Planning Form Instructions

Under the Calls-in-Queue Alert heading on Form 6a, do *either* of the following:

- To keep the factory setting (QCC operators are *not* notified when calls are waiting in queue), check the Disable box.
- To specify that particular QCC operators are notified (with a single beep) when a call enters the queue, check the Enable box and, in the space provided, write the extension number of each QCC position that receives the notification (see Form 2a or Form 5d).

## Queue Over Threshold

This section contains instructions to specify the maximum number of calls allowed in the QCC queue before operators are notified (with a tone through the receiver or headset) that calls are waiting.

## Planning Form Instructions

Under the Queue Over Threshold heading on Form 6a, do *either* of the following:

- To keep the factory setting (operators are not notified), check the 0 Calls box.
- To indicate that operators are notified when calls are waiting in the queue, check the second box and write the maximum number of calls in the queue before notification (any number from 1 through 99) in the space provided.

## Elevate Priority

This section contains instructions to arrange the QCC queue so that important business calls are answered first.

**NOTE** ▶ During high-volume calling periods this means that only high-priority calls are delivered to a QCC within a reasonable amount of time, and low-priority calls go unanswered. To review call priority assignments, see [“QCC Queue Priority Level \(Hybrid/PBX Mode Only\)”](#) in Chapter 3, “Lines/Trunks.”

The setting for the Elevate Priority option determines the length of time (in seconds) before the calls waiting in the QCC queue are automatically assigned a higher level of priority. Although the priority of every call in the queue is then increased to a higher level, a call is never increased to the highest priority (1) because priority 1 calls are those that must reach the operator as quickly as possible.

### Planning Form Instructions

Under the Elevate Priority heading on Form 6a, do *either* of the following:

- To indicate that the order of priority is not changed, check the 0 Seconds box (the factory setting).
- To indicate that call priority is reordered, check the second box and write the number of seconds in the space provided. Select any number from 5 through 30 depending on the number of priority levels assigned to calls ringing into the queue and the volume of incoming calls. (The recommendation for typical systems is 8 seconds.)

### Message Center

This section contains instructions to assign this feature when there is more than one QCC operator position and the customer wants one centralized location where employees retrieve messages. Usually only one message center position is necessary, but there can be several QCCs in one room sharing messaging duties.

The Message Center option allows you to designate a QCC as a message center with the following options automatically set:

- The only incoming calls that go to the message center QCC are calls to the extension number of the QCC and calls sent to the QCC using Forward or Follow Me.
- Returning calls (such as those sent to an extension, operator-parked, and camp-on calls) go to the message center QCC. This means that the message center position is different from that of the system operator who originally answered the call.
- Group Coverage calls go to the QCC message center.
- DID calls to invalid destinations (unassigned extension numbers) go to the QCC message center.

### Planning Form Instructions

Under the Message Center heading on Form 6a, do *either* of the following:

- To indicate that no message center operator is assigned, check the No box.
- To assign a message center, check the second box and write the extension of the QCC operator position in the space provided (see Form 2a or 5d).

## Directed Call Completion

Use these instructions only if the system has a QCC with a Direct Station Selector (DSS). Otherwise, skip to the next section, [“Return Ring.”](#)

This section contains instructions for changing the factory setting for Directed Call Completion from Automatic to Manual (that is, the QCC operator must press the Release button when using a DSS button to direct a call).

**NOTE** ► If the QCC operator uses the DSS to transfer calls across a private network, the operator may want to use manual completion to avoid transfer without return to busy. If you subscribe to ANI or ICLID and automatic completion is selected, the ANI and ICLID information will be sent but calls will not return on busy.

## Planning Form Instructions

Under the Extended Call Completion heading on Form 6a, do *either* of the following:

- To keep the factory setting, check the Automatic completion box.
- To require the operator to use the Release button to direct calls, check the Manual completion box.

## Return Ring

This section contains instructions to specify the number of rings before an unanswered call is returned from the extension where it was sent to the QCC queue (or QCC message center position).

If the system includes a voice mail system, you should increase this number to ensure that the voice mail system gets the call before it is returned.

## Planning Form Instructions

Under the Return Ring heading on Form 6a, do *either* of the following:

- To keep the factory setting, check the 4 Rings box.
- To change the factory setting, check the second box and write the number of rings you want to assign in the space provided (1–15 rings).

## Position-Busy Backup

This section contains instructions to assign another telephone to receive calls when all QCC operator consoles are in a position-busy state. Only a Calling Group can be assigned as a backup for a QCC operator position. If a backup is not designated, the system does not allow the last available operator position to go into the position-busy state.

### Planning Form Instructions

Under the Backup On heading on Form 6a, do *either* of the following:

- To indicate that no backup is assigned, check the No box (factory setting).
- To designate a backup, check the second box. The extension number of the backup Calling Group will be completed later.

### Operator Hold Timer

This section contains instructions to set the system to track the number of seconds that callers are on hold at an operator console. When a caller is on hold longer than the number of seconds programmed for the timer, the operator is reminded by a single ring.

### Planning Form Instructions

Under the Operator Hold Timer heading on Form 6a, do *either* of the following:

- To keep the factory setting, check the 60 Seconds box (factory setting).
- To change the factory setting, check the second box and write the number of seconds (from 10 to 255 seconds) in the space provided.

### Call Types

This section contains instructions to assign a QCC operator to receive certain types of calls and to set the QCC queue priority level.

### Planning Form Instructions

The Group Coverage Calls section on the back of Form 6a will be completed later in this chapter.

Under the Call Types heading on Form 6a (page 2):

1. In the QCC Operator to Receive Calls column, for each call type, do *either* of the following:
  - If QCC operators are not to receive the call type, write None.
  - If one or more QCC operators are to receive the call type, write any combination of the extension number or numbers. See Form 2a or 5d.

**NOTE** ► You cannot assign an operator to either Follow Me calls or calls to QCC operator extensions.

2. In the QCC Queue Priority Level column, write the level for each call type. Assign a value of 1 (high priority) through 7 (low priority). The factory setting is 4.

## Voice Announce

This section contains instructions to enable a QCC operator to originate Voice Announce (VA) calls. When enabled, the Call 5 button on the QCC can originate Voice Announce calls.

**NOTE** ► QCCs cannot receive Voice Announce calls.

## Planning Form Instructions

Under the Voice Announce heading on Form 6a, do *either* of the following:

- To prevent QCC operators from originating Voice Announce calls, check the Disable box (factory setting).
- To allow QCC operators to originate Voice Announce calls, check the Enable box.

## Direct Station Selector

Use these instructions only if the system has Direct Station Selectors (DSSs) connected to 4400-Series or MLX operator consoles. Otherwise, skip to the section, [“Group-Assigned Features.”](#)

This section contains instructions for recording the range of extensions assigned to the Page buttons, and for renumbering the extensions for Park, so that the extensions fall within the Page button ranges.

## DSS Page Buttons

This section contains instructions for recording the range of extensions assigned to each of three Page buttons. The three Page buttons should be set to reach ranges of numbers that include the extension numbers in the extension numbering plan (including non-local extensions if the system is in a private network configuration) and reflect the number of extensions available:

- If one DSS is connected to an operator console, set each Page button for a range of 50 numbers (matching the 50 available extensions).
- If two DSSs are connected, set each Page button for a range of 100 numbers. The Page buttons then control 100 extensions, 50 on each DSS.

**NOTE** ► If two DSSs are used, the Page buttons on the second DSS are not active.

### **Planning Form Instructions**

In the Page Buttons table under the Direct Station Selector heading of Form 6a (page 1), write the beginning extension for the range of the 50 or 100 extension numbers for each Page button. Assign the lowest extension numbers in the plan to the first Page button, the middle range of numbers to the second Page button, and the highest extension numbers to the third Page button. (Use the information from Form 2a, System Numbering: Extension Jacks to assign the range of extensions for each Page button.) Also, record this information on Form 2d under the DSS Page Buttons heading.

### **Park Zones**

This section contains instructions to enable operators with a DSS to have one-touch use of Park. The system automatically reserves eight extensions (881–888) for system operator Park Zones; only system operators can use these Park Zone extensions to park calls. Consider changing these factory-set extensions to numbers that fall within the Page button ranges. The same considerations apply as those used during reassignment of extension numbers.

### **Planning Form Instructions**

In the Call Park Codes table under Direct Station Selector on Form 6a:

- Write the new Zone numbers assigned in the Renumber to columns.
- On Form 2d, System Numbering: Special Renumbers, write the new numbers in the Renumber to column of the Park Zone section.

---

## **Group-Assigned Features**

The system offers the following features to facilitate the call-handling responsibilities of groups of users:

- Call Pickup Groups
- Group Paging
- Coverage
- Group Calling

This section contains instructions for recording information about these features.

To determine whether any of the group-assigned features are appropriate for system users, see the analysis of the Employee Communication Survey.

---

### Forms Needed

- 2a, System Numbering: Extension Jacks
- 2d, System Numbering: Special Renumbers
- 4d, MLX Telephone
- 4h, ETR Telephone
- 4j, MLS Telephone
- 4m, Multiline 4400-Series Telephone
- 4o, Wireless Telephone
- 5b, Direct-Line Console (DLC)
- 6a, Optional Operator Features
- 7a, Call Pickup Groups
- 7b, Group Paging
- 7c, Group Coverage
- 7d, Group Calling

### Call Pickup Groups

This section contains instructions for assigning this feature to employees who work in a common area and who do not have a support person for coverage. You can assign up to 30 call pickup groups with up to 15 telephones for each group. Each telephone can be assigned to only one group.

**NOTE** ► This feature is similar to the Coverage feature presented later in this chapter. Compare these features before choosing the appropriate feature for the system.

### Planning Form Instructions

1. Form 7a holds the programming information for eight Call Pickup groups. Make additional copies of the form if more groups are planned. Review the analysis of question 10 on the Employee Communication Survey, and determine the number of call pickup groups needed (maximum of 30).
2. For each group, write the group number in the Group Number space. Start with 1 and number the groups sequentially.
3. Write the name of a group, such as Customer Service, in the Group ID space (see the survey analysis).
4. Write the extension number for each group member in the Ext. No. column (see Form 2a).
5. Write each group member's name or location in the Person or Location column (see Form 2a).

## Group Paging

This section contains instructions for setting the system to allow users to make voice announcements that are heard by a particular group of employees with speakerphones or by everyone who has a speakerphone.

You can assign six Paging Groups of selected employees, such as secretarial pools, committee members, or departments, who need to hear announcements. Each group can have as many as 10 extension numbers.

The seventh Paging Group is factory-set to page all extension numbers. This group is useful if the system does not have a loudspeaker paging system.

The system automatically reserves extension numbers 793–799 for Paging Groups. Extension 799 is the Page All group. Decide whether to keep or to reassign the factory-set extension numbers. Keep in mind that you can provide one-touch use of Group Paging to operators with DSSs if you renumber to extensions within the Page 1, 2, or 3 button ranges or set the Page 1, 2, or 3 buttons so the operators can access them.

### Planning Form Instructions

1. Determine the number of Paging Groups needed.
2. For each group, write the name of the group, such as Sales, in the Group ID space on Form 7b.
3. To change the factory-set extension numbers:
  - a. Write the new numbers in the Renumber to space.
  - b. On Form 2d, System Numbering: Special Renumbers, write the new numbers in the Renumber to column of the Group Paging section of that form.
4. Write the extension number for each group member in the Ext. No. column (see Form 2a).
5. Write each group member's name or location in the Person or Location column (see Form 2a).

## Coverage

Coverage allows calls to extensions (called *senders*) to be covered by one or more alternate extensions (called *receivers*). Coverage can be individual or group-assigned. This section contains instructions for both types. See ["Calling Restrictions"](#) earlier in this chapter for more information.

### Forms Needed

- 2a, System Numbering: Extension Jacks
- 4d, MLX Telephone
- 4h, ETR Telephone
- 4j, MLS Telephone
- 4m, Multiline 4400-Series Telephone
- 4o, Wireless Telephone

## Group-Assigned Features

---

- 5b, Direct-Line Console (DLC)
- 6a, Optional Operator Features
- 8a, System Features

### Individual Coverage

This section contains instructions to allow an arrangement in which calls from one sender are covered by one or more receivers. A receiver can provide primary Individual Coverage or secondary Individual Coverage.

A sender can have calls covered by up to eight receivers, and a receiver (such as a secretary) can provide Individual Coverage for more than one sender (up to eight buttons on one receiver telephone). Any type of telephone can be a sender; only a multiline telephone with programmable buttons available can be a receiver. The receiver must have a programmed Cover button for each sender whose calls are being covered.

**NOTE** ► See “Coverage” in the *Feature Reference* for additional information.

Calls on lines programmed for No Ring cannot be covered.

If a principal user is assigned, calls that would be sent to Group Coverage are sent only to the principal’s Group Coverage receivers. If the principal user has Remote Call Forwarding on, calls are sent to an outside number rather than to the coverage receivers.

### Planning Form Instructions

1. Review the Employee Communication Survey analysis and determine which users (senders) need Individual Coverage.

**NOTE** ► Single-line telephones cannot be receivers, and QCCs cannot be senders or receivers.

2. On the appropriate form for each receiver telephone (Form 4d, 4f, 4g, 4h, 4k, 4m, 4o, or 5b), locate an available button on the Button Diagram and write I nd Cover and the sender’s extension number. Write P to indicate primary or S to indicate secondary Individual Coverage.

### Group Coverage

In Group Coverage, senders are organized into groups, and calls received by any member of the group are sent to a receiver.

Any type of telephone (excluding QCCs) can be a member of a coverage group; however, no individual sender can be a member of more than one group. A maximum of 32 coverage groups can be set up, and there is no limit to the number of senders in each group. Three types of receivers can be programmed: Calling Groups, or the QCC queue and/or multiline telephones.

**NOTE** ► Group Coverage can be used alone or can be set up to work with either primary or secondary Individual Coverage, or both. This allows callers to get personal attention from the primary and/or secondary Individual Coverage receiver and backup from Group Coverage. For example, a receiver such as a secretary can have a Primary Cover button to provide Individual Coverage for a sender who is also a member of a coverage group.

### Planning Form Instructions

1. Form 7c holds information for eight coverage groups. Make additional copies of the form if more groups are planned. Review the Employee Communication Survey analysis and determine the senders to be grouped.
2. Form 8a is used to identify system features. Under the Coverage Delay Interval heading at the top of Form 8a, do *either* of the following:
  - To keep the factory-set interval, check the 3 rings box.
  - To change the factory-set interval, check the second box and write the number of rings (1–9) in the space provided.
3. Under the Delay Ring Interval heading, do *either* of the following:
  - To keep the factory-set interval, check the 2 rings box.
  - To change the factory-set interval, check the second box and write the number of rings (1–6) in the space provided.
4. On Form 7c:
  - a. Write the group number in the Group No. space. Start with 1 and number the groups sequentially.

**NOTE** ► If a group is the coverage group for AUDIX Voice Power<sup>1</sup> (the factory setting is Group No. 30 but can be changed), write AUDI X by the group number and list the extensions of AUDIX Voice Power subscribers (see Form 2a).

<sup>1</sup> Can no longer be ordered.

- b. List the extension numbers of all senders in the group in the upper block (see Form 2a).
- c. List the receivers for the group in the lower block by doing one of the following:

- NOTES** ▶
- If you have not yet created Calling Groups, you must defer naming them as receivers until later.
  - If the system includes a voice mail system, see that system's documentation for completing the receivers. In addition, if the system is part of a private network with Centralized Voice Messaging, see the *Network Reference*.
    - Designate a Calling Group as a receiver by checking the Calling Group box (see Form 7d).
    - Designate the QCC queue as a receiver (Hybrid/PBX mode only) by checking the QCC Queue box and/or listing the extension numbers of all receivers (maximum of eight).
5. On each copy of Forms 4d, 4f, 4h, 4j, 4k, 4m, 4o, and 5b that describes a specific receiver:
    - a. Locate an available button on the Button Diagram.
    - b. Write Group Cover and the coverage group number in the space available.
  6. If designating the QCC Queue as a receiver (Hybrid/PBX mode only), on the Group Coverage Calls table on Form 6a (page 2):
    - a. Write the extension or extensions for the QCC operator position or positions to receive the calls in the QCC Operator to Receive Calls column (see Form 2a).
    - b. Write the priority level for each coverage group's calls in the QCC Queue Priority Level column. Assign a value of 1 (highest) through 7 (lowest); the factory setting is 4.

## Group Calling

This section contains instructions to group the telephones of people (such as ticketing agents) who handle the same type of call. Through the Group Calling feature, all telephones in the group are assigned to a single extension number that is used by both inside and outside callers to reach the group. The individual extension numbers of the telephones are still used by callers who need to reach a specific member of the Calling Group.

- NOTES** ▶
- The Extension Status feature must be set for the Group Calling configuration (which is the factory setting) in order for Calling Groups to be available. See the "[Extension Status](#)" instructions later in this chapter for details.
  - One non-local member may be in a Calling Group. A Calling Group cannot contain both local and non-local members. See the *Network Reference* for information.
  - If Calling Groups are to be used in conjunction with Centralized Voice Messaging, see the *Network Reference* for information.

The system automatically reserves extension numbers 770–791 and 7920–7929 for Calling Groups (these may be changed). If operators with DSSs need one-touch Group Calling, renumber the extensions that fall within the Page button ranges.

If the system has AUDIX Voice Power/Fax Attendant System<sup>1</sup>, certain extension numbers are reserved as follows:

7924	Fax Response
7925	Voice Mail
7926	Call Answer
7927	Information Service
7928	Message Drop
770	Automated Attendant

Calling Groups can be part of the group assignment for Night Service, as described later in this chapter.

### Planning Form Instructions

1. Review the Employee Communication Survey analysis and determine the number of Calling Groups needed, using the following guidelines:
  - Assign up to 32 Calling Groups with up to 20 members for each group. For Release 2.0 and earlier systems, each telephone user can be a member of only one calling group. For Release 2.1 and later systems, each telephone user can be a member of up to 32 groups (system maximum).
  - Designate up to 80 lines/trunks to ring directly into a Calling Group. Incoming calls on a given line/trunk can be directed to only one Calling Group.
  - If the MERLIN Messaging System or other supported VMS is being used, either on the local system or a remote system (Centralized Voice Messaging), reserve one or more Calling Groups for that feature.
  - A Calling Group may have up to one non-local member. If a Calling Group has a non-local member, that is the only member allowed in the Calling Group. Local and non-local members cannot be in the same Calling Group. A Calling Group containing a single non-local member can be used for the same purposes as a Calling Group containing only local extensions. This includes night service, group coverage, Calling Group overflow coverage, and QCC queue overflow coverage across a private network to a centralized VMS/AA, non-local Calling Group, QCC queue, DLC, or any individual extension on a remote MERLIN MAGIX, MERLIN LEGEND, DEFINITY ECS, DEFINITY BCS, or DEFINITY Prologix system, or to the PSTN via UDP routing.
2. For each Calling Group, make a copy of both sides of Form 7d, Group Calling.
3. For each group, on the front of Form 7d, list the extensions and lines/trunks assigned to the group:
  - a. Write the group number in the Group No. space. Start with 1 and number sequentially.

---

<sup>1</sup> Can no longer be ordered.

- b. Write the name of the group in the Group Name space. See the survey analysis.

**NOTE** ► If the system has MERLIN Messaging System or other supported VMS, fill in only the group number and group name here, then fill in the rest of the Group Calling information on the applicable forms for that VMS.

- c. Do *either* of the following:

- To use a factory-set extension number, write the number in the space provided (770 for group 1, 771 for group 2, and so on).
- To change a factory-set extension number, write the new number in the Renumber to space, and then on Form 2d, System Renumbering: Special Renumbers, write the group name in the Group ID Label column (up to 7 characters), and the new number in the Renumber to column of the Group Calling section of that form.

**NOTE** ► Before you complete the extension number and name entries in Step 4, read Step 2 on page 4-32 of the instructions in the next section, “[Calling Group Options](#).”

4. In the Extensions section of Form 7d, write the extension number of each member of the group in the Ext. No. column and the name of the person or location in the Person or Location column (see Form 2a).
5. In the Trunks/Pools table of Form 7d, for each line/trunk that is to ring directly into the Calling Group, write the line/trunk or pool number (see Form 2c).

**NOTES** ►

- When a pool is assigned to a Calling Group, all lines/trunks in the pool are assigned to the group. Individual trunks within the pool cannot be assigned to a Calling Group.
- If a pool contains any dial-in trunks (such as DID trunks), the pool cannot be assigned to a Calling Group. Also, pools with private network tandem trunks should not be assigned to Calling Groups.
- Pools may be assigned to only one Calling Group.
- Lines/trunks assigned as the system Music-On-Hold or External Page Port cannot be assigned to a Calling Group.
- Before adding to a Calling Group, you must first remove lines/trunks from the QCC.

6. If assigning a Calling Group as backup for a QCC, under the Position Busy Backup heading in the Queued Call Console section of Form 6a, Optional Operator Features, check Yes and write the extension number of the calling group.
7. To record information for another Calling Group, repeat this procedure beginning with Step 3; use a blank Form 7d for each group.

### Calling Group Options

This section contains instructions for the following Calling Group options:

- Hunt Type
- Primary and Secondary Delay Announcements
- Message-Waiting Receiver
- Calls-in-Queue Alarm Thresholds
- External Alert for Calls-in-Queue Alarm
- Overflow Coverage
- Overflow Threshold
- Overflow Threshold Time
- Prompt-Based Overflow
- Group Type
- Queue Control
- Priority Call Queuing

The order in which the system searches for available Calling Group members for subsequent calls can be *circular*, *linear*, or according to which agent is *most idle* and is called the *hunt type*. The Circular setting searches for an available Calling Group member starting with the extension after the last extension to receive a call. The Linear setting distributes calls starting with the first extension assigned to the group through system programming. The Most Idle setting distributes calls according to the most-idle queue. For some applications, this hunt type is more efficient than the circular method, because it takes into account the varying duration of calls.

Up to 10 primary and one secondary delay announcement devices can be designated for each Calling Group; more than one Calling Group can use the same announcement devices. The announcement devices should not be assigned as group members, and they are outward-restricted to prevent unauthorized calls.

Each Calling Group can have only one telephone assigned as its message-waiting receiver. The same telephone can be assigned as the message-waiting receiver for more than one Calling Group.

Three Calls-in-Queue Alarm thresholds can be set to more clearly indicate the real-time status of the calls waiting in the queue according to the behavior of programmed Calls-in-Queue Alarm buttons.

Using all three levels, the System Manager sets Threshold 3 to the highest value, Threshold 2 to a middle value, and Threshold 1 to the lowest value. A Calls-in-Queue Alarm button indicates the severity of the alarm conditions in the following ways:

- If the number of waiting calls is less than the value programmed for Threshold 1, or drops below that level, the LED is unlit.
- If the number of waiting calls is greater than or equal to the Threshold 1 value but less than the Threshold 2 value, the LED flashes.

- If the number of waiting calls is greater than or equal to the Threshold 2 value but less than the value for Threshold 3, the LED winks.
- If the number of waiting calls is greater than or equal to the highest value, Threshold 3, the LED lights steadily.

If all three thresholds are set to the same value, the result is one threshold only with LED state either off or on (steady). If two values are the same, then the result is two alarm levels (flash, steady). The factory setting is one call for all three thresholds with LED states of off and steady.

After the primary delay announcement plays, an inside caller hears a special ringback, a transferred inside caller hears regular ringback, and an outside caller (including a transferred outside caller) hears special ringback or Music-On-Hold, if programmed, until the call is answered by a Calling Group member. The primary delay announcement is played only once while the call is in queue.

The System Manager can specify the extension for an optional secondary delay announcement and use system programming to set the interval (0–900 seconds) between announcements. This setting determines the time before a waiting caller hears the secondary announcement or, if it is set to repeat, the interval between replays of the secondary announcement. The secondary announcement can either repeat or play only once, after which the caller hears ringback or Music-On-Hold, according to the rules outlined above. The primary and secondary announcement options, when used together, allow the System Manager to issue an initial message to callers, followed by a repeating announcement that, for example, urges the caller to stay on the line and wait for a Calling Group member.

The external alert, designated as a calls-in-queue alarm, can be any alerting device connected through an MFM in the External Alert mode for MLX telephones. That alert is tied to the third threshold value. The alert stays on as long as the threshold is exceeded. Only one external alert can be designated for each Calling Group. Since the signal is continuous, you should only use lighted external alerting devices.

The Overflow Threshold determines the maximum number of calls (1–99) waiting in the Calling Group queue before being sent to the Overflow receiver. The Overflow Threshold Time determines the maximum amount of time that any call waits in the queue before being sent to the Overflow receiver. The Overflow Threshold should be set to a number larger than the third Calls-in-Queue Alarm Threshold to ensure that the Calls-in-Queue Alarm will alert before calls are sent to the Overflow receiver. If the Overflow Threshold Time is the primary source for overflow, set the Overflow Threshold to a large number of calls (for example, 99 calls). If you want calls to overflow based on the number of calls in the queue, disable the Overflow Threshold Time by setting it to 0 seconds.

Prompt-Based Overflow allows callers waiting in the queue, and listening to delay announcements, to press the pound key (#) in order to reach the overflow receiver for the group (which may be the QCC queue to another Calling Group, including a Calling Group assigned for a voice mail system).

**NOTE** ► One TTR is allocated while the announcement unit is playing the message if Prompt-Based Overflow is enabled for a group.

The System Manager can control the number of calls allowed into the primary Calling Group queue. Subsequent callers will receive a busy signal as long as the call was received on the following types of lines/trunks: DID, PRI facilities programmed for dial plan routing, and all calls that are transferred from a VMI port to a local extension.

**NOTE** ► Remote Access calls to a Calling Group, coverage calls directed to a Calling Group, and calls directed to a Calling Group through a QCC Position-Busy backup are not eligible for queue control.

A Calling Group can be assigned a priority level and can be used to support another Calling Group. This feature is called Priority Queuing. When a Calling Group is assigned as a *Support Calling Group* to another Calling Group (called the *Home Calling Group*), it answers calls coming into the Home Calling Group when no Home Calling Group agents are available. Depending on its priority level, the Support Calling Group answers its own calls or the Home Calling Group's calls first.

For example, if the Home Calling Group has a priority of 3, the Support Calling Group has a priority of 5, and no Home Calling Group members are available, the Support Calling Group answers all of the Home Calling Group's calls before it answers its own calls. If the Support Calling Group's priority is higher than that of the Home Calling Group, the Support Calling Group answers all of its own calls first.

Each Home Calling Group can have only one Support Calling Group. A Support Calling Group, however, can serve up to 31 Home Calling Groups.

### Planning Form Instructions

For each Calling Group:

1. On Form 7d (page 2), copy the Group No., ID, and extension number from the front of the form.
2. Select the Hunt Type by doing *one* of the following:
  - To keep the factory-set hunting pattern, check the Circular box.

**NOTE** ► If you choose a Linear hunt, be sure you have listed the extension numbers and names in the Extensions section on Form 7d (page 1), in the order that you want the group searched. If you have not done this, go back and correct the front of the form so that the extensions are in the right order.

- To change the factory-set hunting pattern to Linear, check the Linear box.
  - To change the factory-set hunting pattern to Most-Idle, check the Most-Idle box.
3. Under the Primary Delay Announcement heading, do *one* of the following:
    - If there are no announcement devices, check the No box and proceed to Step 4.
    - To designate one or more announcement devices, check the second box and write the extension numbers for the devices in the space provided (see Form 2a or 2b).

4. Under the Secondary Delay Announcement heading, do *one* of the following:
    - If there is no secondary announcement device, check the No box and proceed to Step 5.
    - To designate a secondary announcement device, check the second box and write the extension number for the device in the space provided (see Form 2a or 2b). Also do the following:
      - Write in the desired Delay Interval between the primary announcement and the secondary announcement in seconds. The Delay Interval is also the time between repeats of the Secondary Announcement, if the Repeat Announcement option is set.
- NOTE** ► As a rule, the Delay Interval should never be set less than the length (in seconds) of the secondary announcement. Ideally, the Delay Interval should be a multiple of the secondary announcement's length, based on the anticipated number of calls in the queue. For example, if the secondary announcement length is 10 seconds and five calls are expected to be in the queue during busy times, then the Delay Interval should be 50 seconds. For more information on optimizing the settings for announcements, see the *Feature Reference*.
- If you want the secondary announcement to repeat continuously after the Announcement Delay Interval, then check the Yes box next to Repeat Announcement. Otherwise check the No box.
5. To designate a telephone to receive message-waiting indications for the group, do *either* of the following under the Message-Waiting Receiver heading on Form 7d (page 2):
    - To assign no receiver, check the No box.
    - To assign a receiver, check the second box and write the extension number of the message-waiting receiver (see Form 2a).
  6. Under the First Calls-in-Queue Alarm Threshold heading, do *either* of the following:
    - To keep the factory setting, check the 1 Call box.
    - To change the factory-set number of calls allowed in the queue before members are notified with a flashing LED, check the second box and write the number of calls (up to 99) in the space provided.
  7. Under the Second Calls-in-Queue Alarm Threshold heading, do *either* of the following:
    - To keep the factory setting, check the 1 Call box.
    - To change the factory-set number of calls allowed in the queue before members are notified with a winking LED, check the second box and write the number of calls (up to 99) in the space provided.
  8. Under the Third Calls-in-Queue Alarm Threshold heading, do *either* of the following:
    - To keep the factory setting, check the 1 Call box.
    - To change the factory-set number of calls allowed in the queue before members are notified with a steady LED, check the second box and write the number of calls (up to 99) in the space provided.

9. Under the External Alert for Calls-in-Queue Alarm heading, do *either* of the following:
- For no external alert for Calls-in-Queue Alarm, check the No box.
  - To designate an external alert when the Third Calls-in-Queue Alarm Threshold is exceeded, check the second box and write the extension number for the alert in the space provided (see Form 2b).
10. Under the Priority Call Queuing heading, do *either* of the following:
- For no priority call queuing, check the No box.
  - To designate priority call queuing, check the Yes box, and do the following:
    - Write the Home Group Priority Level (1-32) in the space provided. The factory setting is 16.
    - To designate a Support Group for the Home Group, write the Support Group extension number in the space provided. Also indicate the Support Group Priority Level in the space provided.
- NOTE** ► You assign a priority level to a Calling Group independent as to its status as a Home or Support Group. This is why the Support Group Priority Level is in parentheses.
11. Under the Overflow Coverage heading, do *one* of the following:
- For no overflow coverage, check the No box.
  - To designate overflow coverage by another Calling Group, check the second box and write the Calling Group number of the overflow Calling Group in the space provided.
  - To designate that overflow coverage will be provided by QCC operators, check the third box and write the QCC LDN (queue) extension number in the space provided.
12. Under the Overflow Threshold heading, do *either* of the following:
- To keep the factory setting, check the 1 call box.
  - To change the threshold, check the second box and write the number of calls (up to 99) in the space provided.
13. Under the Overflow Threshold Time heading, do *either* of the following:
- To keep the factory setting and disable the Overflow Threshold Time, check the 0 Seconds box.
  - To change the threshold, check the second box and write the maximum number of seconds (1–900) calls wait in the queue in the space provided.
14. Under the Prompt-Based Overflow heading, do *either* of the following:
- To keep the factory setting and disable the Prompt-Based Overflow feature, check the Disabled box.
  - To enable Prompt-Based Overflow, check the Enabled box.

15. Under the Group Type heading, do *either* of the following:
  - To keep the factory setting of no automatic login, check the Auto Logout box.
  - To change the factory setting from Auto Logout, do *one* of the following:
    - Check the Auto Login box to indicate automatic login for an extension that should never be logged out, such as a data extension.
    - Check the Integrated VMI box to indicate automatic login for a VMS that requires special signaling for integrated operation.
    - Check the Generic VMI box to indicate automatic login for a VMS that does not require special signaling.
16. To specify the number of calls allowed into the group calling queue, under the Queue Control heading do *either* of the following:
  - To keep the factory setting, check the 99 Calls box.
  - To change the threshold, check the second box and write the number of calls (0–98) in the space provided.

**NOTE** ► Specifying a Queue Control threshold of 0 indicates that no calls are allowed into the queue (Queue Control is turned off).

Proceed to the next section, [“System Features.”](#)

---

## System Features

System features affect all users and all or most telephones. For more information on system features, see the *Feature Reference*.

This section contains instructions for assigning the following system features:

- Transfer of calls
- Camp-On Return Time
- Call Park Return Time
- Automatic Callback
- Extension Status
- Station Message Detail Recording (SMDR)
- Inside Dial Tone
- Reminder Service Cancel
- Redirect Calls to Unassigned Extension Numbers
- Recall Timer

- Interdigit Timers
- Rotary-Dial Delay
- Allowed Lists
- Disallowed Lists
- Call Reservation Summary
- Night Service
- Labeling
- Automatic Route Selection (Hybrid/PBX Mode Only)

### Forms Needed

- 3e, Automatic Route Selection Worksheet
- 3f, Automatic Route Selection Tables
- 3g, Automatic Route Selection Default and Special Numbers Tables
- 6e, Allowed Lists
- 6f, Disallowed Lists
- 6g, Call Restriction Assignments and Lists
- 8a, System Features
- 9a, Night Service: Group Assignment
- 9b, Night Service: Outward Restriction
- 9c, Night Service: Time Set
- 10a, Label Form: Posted Message
- 10b, System Speed Dial

## Transfer Options

This section contains instructions for setting the following Transfer feature options to allow users to transfer outside or inside calls to another telephone:

- Transfer Return Interval
- One-Touch Transfer
- Transfer Audible
- Type of Transfer

- NOTES** ►
- Transfer features, and any other feature that requires more than one SA button, can be disabled on single-line telephones by removing all but one SA button through centralized programming. Refer to Form 4f, Tip/Ring Equipment.
  - If customers with CTI applications will frequently use the Conference feature, set the system Transfer Type to Ring and not Voice. This will minimize the possibility of broadcasting a conference over an unattended speakerphone.
  - If the DLC operator uses the DSS to transfer calls across a private network, the operator may want to use manual completion to avoid transfer without return to busy. If you subscribe to ANI or ICLID and automatic completion is selected, the ANI and ICLID information will be sent but calls will not return on busy.

### Planning Form Instructions

1. Under the Return Time Interval heading in the Transfer Options section of Form 8a, do *one* of the following:
  - To keep the factory setting, check the 4 Rings box.
  - To indicate no return for transferred calls, check the 0 Rings box.
  - To change the factory-set number of rings, check the third box and write the number of rings (1–9) in the space provided.
2. Under the One-Touch Call Handling heading, do *either* of the following:
  - To keep the factory setting, check the One-Touch Transfer box and do *either* of the following:
    - Check the Automatic Completion box to keep the factory-set automatic completion of transfers.
    - Check the Manual Completion box to change the factory setting to manual completion.
  - To change from One-Touch Transfer to One-Touch Hold, check the One-Touch Hold box.
3. Under the Transfer Audible heading, do *either* of the following:

**NOTE** ► If programmed for Music-On-Hold and a music source is provided, outside callers who are transferred to a Calling Group, are waiting in the queue, or outside callers who are parked or camped-on, will hear music while they are waiting. If the system uses the Centrex Transfer via Remote Call Forwarding feature, it is recommended that Transfer Audible be set to Ringback.

- If the system should play music while callers are on hold for transfer, check the Music-On-Hold box.
  - If the system will not provide music, check the Ringback box.
4. Under the Type of Transfer heading, do *either* of the following:
    - For the system to select a Ring button for transferred calls, check the Ring Button box (factory setting).
    - For the system to select a Voice button for transferred calls, check the Voice Button box.

## Camp-On Return Time

This section contains instructions for designating the number of seconds a caller waits when transferred to a busy extension by way of the Camp-On feature. If the telephone is still busy at the end of the programmed interval, the call returns to the person who transferred the call.

### Planning Form Instructions

Under the Camp-On Return Time heading on Form 8a, do *either* of the following:

- To keep the factory-set interval, check the 90 Seconds box.
- To change the factory-set interval, check the second box and write the number of seconds (30–300) in the space provided.

## Call Park Return Time

This section contains instructions for designating the number of seconds a caller waits when a person uses the Call Park feature to put a call on hold. If the call is not picked up at the end of the programmed interval, the call returns to the person who parked the call.

### Planning Form Instructions

Under the Call Park Return Time heading on Form 8a, do *either* of the following:

- To keep the factory-set interval, check the 180 seconds box.
- To change the factory-set interval, check the second box and write the number of seconds (30–300) in the space provided.

## Automatic Callback

This section contains instructions for setting the number of times the system should ring to alert a caller about a callback attempt. After the specified number of rings, the system abandons the callback attempt.

### Planning Form Instructions

Under the Automatic Callback Interval heading on Form 8a, do *either* of the following:

- To keep the factory-set interval, check the 3 Rings box.
- To change the factory-set interval, check the second box and write the number of rings (1–6) in the space provided.

---

## Extension Status

This section contains instructions to set Extension Status to allow an operator or a Calling Group supervisor to determine the status of a telephone at a glance. The lights next to the buttons on a DSS or next to Auto Dial buttons programmed with extension numbers indicate the status of the telephone.

In Hotel mode, Extension Status (ES) affects an extension's calling restrictions. Only an ES operator can use a DSS to turn off states ES1 or ES2 to remove calling restrictions.

**NOTE** ► In Hotel mode, an ES-restricted extension can call a remote private network extension.

Decide on the configuration and assign operator positions to monitor extension status.

### Planning Form Instructions

Under the Extension Status heading on Form 8a:

1. Check the Assign to operator positions box and write the extension number for each operator position in the space provided. See the appropriate copy of Form 5b.
2. Do *either* of the following:
  - To keep the factory-set configuration, check the Group Calling box.
  - To change the configuration, check the Hotel box.

## Station Message Detail Recording (SMDR)

Use these instructions only if connecting a Station Message Detail Recording (SMDR) device or call accounting application. Otherwise, skip to the next section, [“Inside Dial Tone.”](#)

This section contains instructions for setting up SMDR to keep track of telephone usage. SMDR works in conjunction with the Call Accounting System (Intuity CAS, Windows CAS, IS CAS, CAS Plus V3, and MERLIN MAGIX Reporter) or a serial printer connected to the SMDR port on the control unit. The SMDR port is the upper RJ-45 jack on the processor module.

Two SMDR report formats are available: the factory-set Basic format or the ISDN format. The ISDN format is used when the business subscribes to ICLID or to the AT&T INFO2 automatic number identification service (ANI). When the system is set for ISDN format, the actual number dialed by the caller appears on the report. In a PRI private network, the ISDN format may be used to show the caller's telephone number. The rest of the fields are identical to the Basic format.

Two options, Calls Reported (non-UDP) and Calls Reported (UDP), determine what calls are included in the SMDR report. For calls that are not routed using the non-local dial plan, the options available are to report both incoming and outgoing calls (factory setting) or outgoing calls only. For calls that are routed using the non-local dial plan, the options available are to report both incoming and outgoing calls (factory setting) or none

- NOTES** ►
- For outgoing UDP calls, any call that involves the public network will be logged on the SMDR report regardless of the programmed setting of the UDP SMDR option. Examples of this type of call include DID calls that get routed over the private network, central office transfers from one switch to another in the private network, and UDP ARS calls.
  - For incoming UDP calls, with the exception of UDP Calling Group calls, the call will not be logged unless the Calls Reported (UDP) option is set to Log Incoming/Outgoing. UDP Calling Group calls (a call made from one switch in a private network to a Calling Group on another switch in the private network) will be logged regardless of the programmed setting of the UDP SMDR option if the Talk Time option is set to Enable.

The Talk Time option determines whether the SMDR report includes the talk-time duration in the Talk field. Talk-time duration is the amount of time a Calling Group agent spends on an incoming call. If SMDR is used with the MERLIN MAGIX Reporter, the Talk Time option must be enabled. If SMDR is used with CAS or a serial printer, the Talk Time option must be disabled.

MERLIN MAGIX Reporter and CAS will not operate concurrently.

If Talk Time is enabled, an asterisk (\*) indicates an abandoned call. This occurs when the calling party disconnects a call being directed to an Auto Login or Auto Logout Calling Group before a member answers, even if the call was answered elsewhere in the system (unless the call is on a loop-start facility that does not have reliable disconnect supervision).

- NOTES** ►
- For accurate reports, the system date must be set to the current date when the system is installed. Be sure you checked the Yes box on Form 1 under Set System Date.
  - For systems where the majority of lines are PRI facilities, the SMDR Call Length should be programmed for one second.
  - When SMDR is used with the MERLIN MAGIX Reporter, the settings for Call Length and Calls Reported have no effect on SMDR reporting for Calling Group calls.

### Planning Form Instructions

In the SMDR Options section of Form 8a:

1. Under the Call Format heading, do *either* of the following:
  - To keep the factory-set format, check the Basic box.
  - To change the report format, check the ISDN box.
2. Under the Call Length heading, do *either* of the following:
  - To keep the factory-set call length, check the 40 Seconds box.
  - To change the factory-set call length, check the second box and write the number of seconds (0–255) in the space provided.

3. Under the Calls Reported (non-UDP) heading, do *either* of the following:
  - To keep the factory setting, check the Incoming and Outgoing box.
  - To change the factory setting, check the Outgoing Only box.
4. Under the Calls Reported (UDP) heading, do *either* of the following:
  - To keep the factory setting, check the Incoming and Outgoing box.
  - To change the factory setting, check the None box.
5. Under Talk Time heading, do *either* of the following:
  - To keep factory setting, check the Disable box.
  - To change the factory setting, check the Enable box.

## Inside Dial Tone

This section contains instructions for specifying whether the system uses an inside dial tone that is different from or the same as outside line/trunk dial tone. The factory setting is for a different inside dial tone. How you set the system for dial tone is a matter of preference.

**NOTE** ► Regardless of how you set this option, VMSs receive outside dial tones. Some modems may require outside dial tone to dial out.

### Planning Form Instructions

Under the Inside Dial Tone heading on Form 8a, do *either* of the following:

- To keep the factory-set system inside dial tone, check the Inside box.
- To change the dial tone to match the outside dial tone, check the Outside box.

## Reminder Service Cancel

This section contains instructions for assigning a preset time when the system cancels all reminders.

Although all users can set and cancel reminder calls for their own telephones, and DLC system operators can set and cancel reminder calls for any telephone in the system, Reminder Service Cancel automatically cancels all reminder calls at the preset time, for example, at the end of the business day when all users have gone home and are not available to receive reminders.

### Planning Form Instructions

Under the Reminder Service Cancel heading on Form 8a, do *either* of the following:

- To set no reminder service cancel time, check the No box.
- To set a time to cancel all reminders in the system, check the second box and write the time of day in the space provided.

### Calls to Unassigned Extensions

This section contains instructions for designating that calls made to unassigned extension numbers by Remote Access users, or on DID or dial-in tie trunks are redirected to another extension number, the QCC queue, or a Calling Group instead of to the primary operator.

**NOTE** ► When an Automated Attendant transfers a call to a non-local extension, the transferring MERLIN MAGIX system monitors the call to ensure that it is answered. If the non-local extension is not available or the call is not answered within the transfer redirect timeout period (fixed at 32 seconds), the call stops ringing at the non-local destination and is redirected to the extension on the same system as the Automated Attendant that is programmed to receive redirected calls. This redirect extension can be a QCC queue, a Calling Group, or an individual extension.



#### **SECURITY ALERT:**

*DID numbers that correspond to pool dial-out codes (or facility access codes) can be used to avoid Toll Restriction, leading to toll abuse and/or fraud. (See Appendix A, “Customer Support Information” for more information about security.)*

### Planning Form Instructions

Under the Calls to Unassigned Extensions heading on Form 8a, do *one* of the following:

- To keep the factory setting, check the Extension box.
- To change from the factory-set redirect to the primary operator, check *one* of the following:
  - To redirect calls to a QCC operator (Hybrid/PBX only), check the QCC queue box and write the extension number in the space provided (see Form 2a).
  - To redirect calls to another telephone, check the Extension box and write the extension number in the space provided (see Form 2a).
  - To redirect calls to a Calling Group, check the Calling Group box and write the Calling Group extension number in the space provided (see Form 7d).

---

## Recall Timer

This section contains instructions for designating the length of the switchhook flash sent when Recall is used to disconnect a call and receive a new dial tone without hanging up. The interval of the switchhook flash and how Recall works depends on the type of telephone being used.

For multiline telephones, the factory setting is 450 ms. If users experience difficulty with Recall, the interval can be changed to a longer or shorter interval.

The single-line telephone Flash or Recall button transmits a timed switchhook flash of about half a second.

### Planning Form Instructions

Under the Recall Timer heading on Form 8a, check *one* of the following:

- 350 ms
- 450 ms (factory setting)
- 650 ms
- 1 sec

## Interdigit Timers

Programming for interdigit timers is reserved for an Avaya technical support personnel or authorized dealers.

Interdigit timers are used by the MERLIN MAGIX system to determine when a user originating an outside call has completed dialing the digits. The information is necessary to allow the system to perform subsequent operations. You should not change the factory settings for interdigit timers unless instructed to do so by an Avaya technical support or by an authorized dealer.

## Rotary

This section contains instructions for designating whether dialed digits on rotary-dial lines/trunks are sent one by one as they are dialed or are stored and sent when dialing is completed.

### Planning Form Instructions

Under the Rotary heading on Form 8a, check *either* of the following:

- To store digits and send them when dialing is completed, check the Delay (factory setting) box.
- To send digits out as they are dialed, check the No Delay box.

## Automatic Daylight Savings Time

This section contains instructions for designating whether Automatic Daylight Savings Time (ADST) is enabled or not, and whether ADST follows the settings standard for the USA or settings customized for another country or location.

**NOTE** ► The Automatic Daylight Savings Time feature is supported in MERLIN MAGIX systems of Release 1.5 and later.

### Planning Form Instructions

Under the Automatic Daylight Savings Time heading on Form 8a:

1. Do *either* of the following:
  - To enable ADST, check the Enable box (the factory setting).
  - To disable ADST, check the Disable box.
2. If you checked the Enable box, do one of the following:
  - To use the USA ADST settings (the factory setting), check the USA ADST box.
  - To select the ADST settings individually, check the Custom box.

## Allowed Lists

### SECURITY ALERT:

*If you assign a 0 (zero) as the first digit for any entry in an Allowed List, any Toll Restrictions assigned for calls to numbers that can be placed by local or toll operators are removed.*

Use the instructions in this section and the next ("[Disallowed Lists](#)") only if calling restrictions are assigned to any telephones. Otherwise, skip to the section, "[Night Service](#)."

This section contains instructions to designate an Allowed List of telephone numbers that a restricted telephone can dial.

You can design up to eight lists, each with a maximum of 10 numbers. Each number can have up to 14 (7 in Release 1.0 systems) digits, including a leading "1" as a toll prefix. Star codes (such as \*67) may also be included in the list to allow users to access special services offered by the central office. In Release 1.5 and later systems, you can enter "wild card" characters in Allowed List numbers by pressing the Hold button; a "p" is entered each time you press the Hold button. Once you have designed the lists, decide which restricted telephones have access to the lists. Each restricted telephone can have up to eight lists.

** SECURITY ALERT:**

*In some instances, after dialing a star code, the central office responds with a second dial tone as a prompt to enter additional digits. If a caller begins dialing additional digits before the second dial tone, system restrictions may be bypassed and a restricted call may be routed. Careful administration of the Second Dial Tone Timer prevents the caller from bypassing call restrictions in this manner. Refer to the [“Planning Form Instructions”](#) that follow for information.*

If foreign exchange (FX) or tie trunks are connected to the system, you can enter the exchange in the Allowed List to allow people with restricted telephones to dial numbers to the area code for the FX or tie trunk. As you design each list, consider which numbers need to be called by specific groups of restricted users. In a private network, restricted telephones can dial non-local UDP extensions. The non-local extension ranges do not need to be put on an Allowed List.

**Planning Form Instructions**

On Form 6e:

1. Write the name of the list in the space next to the list number.
2. Write the allowed area codes, exchanges, and/or star codes in the spaces provided (a maximum of 10 entries for each list).
3. If star codes are included in the Allowed List, the Second Dial Tone Timer must also be programmed. This timer induces a time delay before the user may dial additional digits after a star code, and is activated once a star code has been accepted. The dialing of any digits before this timer expires is treated as if normal restrictions have been violated and the call is not completed. The timer may be set from 0 to 5000 ms in increments of 200 ms. The factory setting is 0. On Form 1 (page 2), System Planning, write the desired setting for the Second Dial Tone Timer.
4. Write the extension numbers of the telephones that need access to the list in the Allow to Ext. Nos. column (see Form 2a).
5. If you planned Remote Access with restrictions and want to permit Allowed List numbers to be called by Remote Access users, then do the following:

**NOTE** ► Allowed List Class-of-Restriction assignments apply to all Remote Access users and cannot be assigned on an individual basis.

- a. On Form 3a (page 3), Incoming Trunks: Remote Access, in the Class of Restrictions without Barrier Codes section, write the list numbers under the Allowed List Access heading for either or both tie and non-tie trunks.
- b. On all copies of Form 3a (page 4), Class of Restriction with Barrier Codes, write the list numbers under the Allowed List Access heading for each barrier code assigned.

## Disallowed Lists

This section contains instructions for using Disallowed Lists to prevent people from making calls to specific numbers, whether or not restrictions are specified for an extension and for Remote Access. You can use this feature instead of restricting telephones totally from making toll or local calls.

### **SECURITY ALERT:**

*Be sure to review the toll fraud information with regard to Disallowed Lists in Appendix A, "Customer Support Information."*

Use a "wild card" character to indicate that you want calls to an exchange restricted in every area code. During system programming, a Pause (entered using the Hold button) indicates a wild card character; therefore, use the letter "p" to indicate on the form that a wild card character should be programmed.

You can design up to eight lists with a maximum of 10 numbers. Each number can have up to 11 digits—for example, a leading 1 (if a toll call prefix is required for dialing) followed by the area code and telephone number. Star codes (such as \*67) may also be included in the list to block users from accessing special services offered by the central office. Once you have designed the lists, decide which telephones to restrict. You can assign up to eight lists for each telephone.

Disallowed List 7 is the system default list and includes the numbers most frequently associated with fraud. The factory set entries for Disallowed List 7 are as follows: 0, 10, 11, 1809, 1700, 1900, 976, 1ppp976, \*, and ppp976 (Release 1.5 and later systems).

- NOTES** ►
- Users cannot dial a number on an Allowed List if it matches a number on a Disallowed List assigned to the telephone.
  - For a private network environment, see the *Network Reference* for planning Disallowed Lists needed to restrict calls across the private network.

## Planning Form Instructions

On Form 6f:

1. Write the name of the list in the space next to the list number.
2. Write the disallowed area codes, exchanges, and/or star codes in the spaces provided (a maximum of 10 entries for each list). Use the wild card character ("p") to restrict an exchange from being dialed in any area code. For example, to prevent users from directly dialing the 976 exchange in any area code, write 1 p p 9 7 6.

**NOTE** ► On Form 6f (page 3), Disallowed List 7 contains factory set entries—that is, it is the factory set disallowed list. To change the entries in this list, cross out the entry and write the new values in the space provided.

3. Write the extension numbers of the telephones that you want to assign to the list in the Disallow to Ext. Nos. column (see Form 2a).

4. Disallowed List Class-of-Restriction assignments apply to all Remote Access users and cannot be assigned on an individual basis unless barrier codes are used. If barrier codes are used, Class-of-Restriction is assigned to individual barrier codes. Use Form 3a, Incoming Trunks: Remote Access, if you planned Remote Access and want to restrict callers through Disallowed Lists. For a private network environment, see the *Network Reference* for planning Disallowed Lists needed to restrict calls across the private network:
  - a. On Form 3a (page 3), in the Class of Restriction without Barrier Codes section, write the list numbers under the Disallowed List Access heading for either or both tie and non-tie trunks.

 **SECURITY ALERT:**

*To help prevent toll fraud, barrier codes should always be required and should also be set to the maximum length allowed.*

- b. On all copies of Form 3a (page 4), Class of Restriction with Barrier Codes, write the list numbers under the Disallowed List Access heading for each barrier code.

## Call Restriction Summary

After the individual telephone forms have been completed, Form 6g, Call Restriction Assignments and Lists, can be used as a summary and telephone programming aid for telephone calling restrictions as designated in this chapter.

### Planning Form Instructions

On Form 6g:

1. In the Ext. No. column, do *either* of the following:
  - Transfer the extension number from the individual telephone forms.
  - If copying from another extension, write the new extension number and then, in the Copy From column, write the extension from which calling restrictions for this extension will be copied.
2. In the Restriction Type column, check the appropriate column: Out for Outward Restriction, Toll for Toll Restriction, or No Rest. for No Restriction.
3. In the Allowed List No. and Disallowed List No. columns, write the appropriate list numbers from Forms 6e and 6f, respectively.
4. In the ARS Restriction Levels (FRL) column, write the Facility Restriction Level (FRL) value noted in the ARS Restriction Level heading on Form 6g.

## Night Service

Use these instructions only if Night Service is used for after-hours telephone operation. Otherwise, skip to the section, “[Labeling](#).” This section contains instructions for selecting any combination of the following options for Night Service:

- Night Service with Group Assignment
- Night Service with Outward Restriction
- Night Service with Time Set

### Night Service with Group Assignment

This section contains instructions for setting Night Service so that any call that comes to the operator console while Night Service is in effect rings immediately at each available telephone in a defined group and/or at a designated Calling Group. Calls ring immediately even on lines/trunks set for Delay Ring or No Ring.

You can create up to eight Night Service groups and/or Night Service Calling Groups, one for each operator. There is no limit to the number of telephones or outside lines assigned to each Night Service group, and each telephone or outside line can be assigned to more than one Night Service group.

A Calling Group can be the Night Service group for more than one operator, but only one Calling Group is allowed for each operator.

A DID call directed to a Calling Group will not receive Night Service treatment.

Private network calls will receive Night Service treatment.

### Planning Form Instructions

In each column on Form 9a, Night Service: Group Assignment, do the following:

1. In the Operator Ext. No. space, write the extension number for the operator whose calls are being answered (see Form 2a for the extension number).
2. In the Trunk No. column, write the line/trunk number for each outside line that is a member of the Night Service group (see Form 2c for the line/trunk number).
3. In the Ext. or Calling Group No. column, write the extension number for each member of the Night Service group or for a Calling Group (see Form 2a for the extension number).
4. In the User or Calling Group Name column, write each Night Service group member’s name or the name of the Calling Group (see Form 2a for the group number).

## Night Service with Outward Restriction

This section contains instructions for setting Night Service so that only authorized users can place non-emergency calls when Night Service is in effect. This prevents unauthorized after-hours use of telephones.

Calls to non-local UDP extensions can be made even while Night Service restricted.

Calls to non-emergency numbers do not go through unless a password is entered first. You can include up to 10 telephone numbers on the Night Service Emergency List. If a HotLine extension dials an outside number, that telephone number should be on the Night Service Emergency List or the extension should be on the Exclusion List. Each number can have a maximum of 12 digits.

Once you specify that a password is required, the password applies to all telephones in the system when Night Service is activated at any operator position.

If users need to make after-hours calls and prefer not to enter a password, you can set up an Exclusion List that exempts those extensions from the password requirement. Extensions assigned to the Exclusion List keep the normal calling restrictions, if any are assigned, when Night Service is in effect. These extensions, however, are not protected in any other way from unauthorized after-hours use.

## Planning Form Instructions

On Form 9b, Night Service: Outward Restriction:

1. The password must be 4 digits and can include the numbers 0–9 in any combination. To keep the password private, record it on a separate paper and not on the form.



### SECURITY ALERT:

*Additional steps must be taken to maintain security on ports (such as use of Disallowed Lists, Outward Restriction, and so on). Refer to Appendix A, [“Customer Support Information.”](#) for more information.*

2. Write the numbers to be included in the Telephone No. list in the Emergency Allowed List section.
3. To exclude users from the password requirement, complete the Exclusion List section.
  - a. In the Ext. No. column, write the extension number for each telephone (see Form 2a).
  - b. In the Name column, write each user's name (see Form 2a).

## Night Service with Time Set

This section contains instructions for setting the system to automatically turn Night Service on and off at the times and on the days of the week you specify. This ensures that after-hours calls are handled properly even if an operator forgets to turn on Night Service. Operators can still override the timer and turn Night Service on or off manually. The feature can also be deactivated through system programming for special conditions, such as a midweek holiday.

### Planning Form Instructions

On Form 9c, Night Service: Time Set, write the time of day you want Night Service turned on (Start Time) and off (Stop Time) for each day of the week. Use 24-hour numbering, called military time—for example, 5:30 p.m. is 1730 in 24-hour numbering.

If Night Service is to remain on throughout the day, for example on Sunday, do not enter on and off times.

### Night Service with Coverage Control

Night Service Coverage Control automatically controls the status of programmed VMS Coverage Off buttons.

When the Coverage Control option is enabled, a transition into Night Service (either by pressing a Night Service button or automatically by the Time Set option) automatically deactivates the VMS Coverage Off buttons (LED is off) and allows outside calls to go to VMS Coverage at night. When the system is taken out of Night Service (either by pressing a Night Service button or automatically by the Time Set option), programmed VMS Coverage Off buttons are activated (LED is on) and outside calls are prevented from going to VMS Coverage during the day.

**NOTE** ► Private network calls act like outside calls and do not go to voice mail when VMS Coverage Off is activated.

When the Coverage control option is disabled, Night Service status has no effect on programmed VMS Coverage Off buttons.

### Planning Form Instructions

In the Coverage Control section of Form 9c, Night Service: Options, do *either* of the following:

- To keep the factory-setting of disabled, check the Disabled box.
- To change the factory-setting and enable the Coverage Control option, check the Enabled box.

## Labeling

Labeling enhances the capability of display telephones used with the system.

The following types of labels appear on display telephones:

- Extensions and Calling Groups
- Posted Messages
- System Directory/System Speed Dial

Labels for extensions are described in Chapter 2, “[Control Unit Configuration](#),” labels for lines/trunks are described in Chapter 3, “[Lines/Trunks](#),” and labels for Calling Groups are described earlier in this chapter.

---

This section contains instructions for assigning labels for Posted Message and System Directory/System Speed Dial.

### Posted Message

This section contains instructions for allowing users to post a message telling callers who have display telephones why they cannot answer.

There can be as many as 20 messages. Messages 1 through 10, shown on Form 10a, are already programmed in the system, and 10 more can be added, for a total of 20. Messages 2 through 9 can be changed.

### Planning Form Instructions

Posted messages can contain as many as 16 characters, including capital letters, numbers, ampersand (&), dash (-), space, colon (:), asterisk (\*), and pound sign (#).

On Form 10a, Label Form: Posted Message, do *either* of the following:

- To add posted messages for Messages 11 through 20 (for example, CUSTM MSG 11) write each new message next to its message number (11 through 20) in the Revised Message column.
- To change existing messages, cross out the message and write the new message in the Revised Message column.

**NOTE** ► Message 1, DO NOT DISTURB, cannot be changed.

### System Speed Dial

This section contains instructions for designating system-wide, frequently used numbers. You can assign and store up to 130 three-digit System Speed Dial codes. To call one of these numbers, a caller presses the Feature button and dials a three-digit code.

Assign System Speed Dial codes to telephone numbers that shouldn't be displayed on telephones, such as access codes. Entries that do not display are referred to as Marked System Speed Dial entries. You can also assign labels to the System Speed Dial codes. These labels are listed in the System Directory so that MLX telephone users can search for them and dial System Speed Dial numbers with the touch of a button.

### Planning Form Instructions

**NOTE** ► As a visual aid to distinguish lines during programming, every fourth line on the form is shaded.

1. Review the analysis of question 9 on the Employee Communication Survey.

2. On Form 10b, System Speed Dial:
  - a. Write the label (maximum: 11 characters) to be displayed for the number in the Name column.
  - b. Write each telephone number (maximum: 40 digits) in the Telephone Number column.
  - c. To display no number (Marked System Speed Dial entry), check the No box in the Display column (the factory setting is Yes).

- NOTES** ►
- Marked System Speed Dial entries (entries that do not display) are not affected by the Second Dial Tone Timer setting. If the central office does not immediately supply dial tone when a star code is entered and a Marked System Speed Dial entry uses star codes, then the appropriate number of pauses (each 1.5 seconds) must be programmed in the entry following each star code.
  - When a Marked System Speed Dial number (the dialed number is suppressed from the display) is used to dial a number, calling restrictions (such as Toll or Outward Restrictions, or Allowed and Disallowed Lists) assigned to that extension are overridden. However, when you use a marked System Speed Dial number that contains a dial pool access code, the number is dialed only if the extension has access to the pool. The marked System Speed Dial number does not override pool dial-out code restrictions assigned to the extension.
  - When an unmarked System Speed Dial or a Personal Speed Dial number is used to dial a restricted number, the call cannot be completed unless the number is on the Allowed List for that extension.

### Automatic Route Selection (Hybrid/PBX Mode Only)

#### **SECURITY ALERT:**

*ARS should always be used for the best security protection.*

This section contains instructions for using Automatic Route Selection (ARS) to allow the most cost-effective use of lines/trunks connected to the system, which can mean significant savings for the customer's business. Routing calls efficiently is especially important when the business has several different types of lines/trunks, such as local, WATS, FX, or tie, or uses more than one long-distance company. If the system is pooled, you can use ARS to specify which trunk pool should be used for each call, based on the telephone number the caller dials.

ARS tables can be used to route calls across a private network and out to the PSTN using a remote system's trunks. See the *Network Reference* for information on how to set up ARS for the private network.

With ARS, users must dial a 1 before dialing any 10-digit toll number, even if the local telephone company does not require a toll call prefix.

You can define up to 24 (16 in Release 1.0 systems) ARS tables, each divided into two *subpatterns* based on the time of day. Four additional tables are factory-set and are designed to save programming time.

In this section, you define a set of ARS tables. This set includes a list of area codes and exchanges associated with each table, the preferred and alternate routes (if any) for each subpattern, and the Facility Restriction Level (FRL) for each route. As the System Manager becomes more familiar with the calling patterns of the company and with the intricacies of ARS, he or she may want to change these patterns to suit the particular installation.

## ARS Worksheet

This section contains instructions for completing the ARS worksheet (Form 3e) to decide how to best route calls.

For each trunk pool, you identify the trunk pool number, type of trunk (local, FX, regional WATS, and so on), whether the calls are toll or local calls, and the number of area codes or exchanges the pool should serve.

When placing a toll call using ARS, callers dial one of the following:

- **11 Digits.** 1 + 3 (area code) + 3 (exchange) + 4 (last 4 digits of the number)
- **8 Digits.** 1 + 3 (exchange) + 4 (last 4 digits of the number)
- **7 Digits.** 3 (exchange) + 4 (last 4 digits of the number)

Keep in mind that for 10-digit toll calls, callers must dial 1 before dialing the area code, even if they don't normally need to dial a prefix to make a toll call.

Figure 4-1 provides a sample of a completed ARS worksheet.

## Planning Form Instructions

1. Review Form 2c, System Numbering: Line/Trunk Jacks, for the types of lines/trunks available.
2. Record the number of exchanges in the local calling area in the blank at the top of Form 3e, Automatic Route Selection Worksheet. If you are not sure how many exchanges there are, consult the telephone directory.
3. Enter the number of each of the trunk pools (factory setting is 70 and 890–899) in the Trunk Pool No. column.

- NOTES** ►
- Some trunk pools, such as in-state WATS trunk pools, can be used for both toll and local calls. (Note that with ARS, a local call is any call that does not require dialing a 1.)
  - If you expect people to use a particular trunk pool for both toll and local calls, enter the number of that trunk pool in the worksheet twice and note the reason.

4. For each trunk pool number entered:

- a. In the Trunk Type column, record the type of trunk (local, FX, network, regional WATS, and so on) that is in the pool.
- b. Under the Type of Dial heading, check the appropriate column (Local, Toll, or Network) for the type of call that should be dialed on each trunk pool:
  - **Toll.** Any call that has a series of digits beginning with a 1, followed by an exchange or area code.
  - **Local.** Any call that is not a toll call. This includes the seven-digit dialed numbers required in most areas.
  - **Network.** Any call that will be routed to a non-local switch.
- c. Enter the total number of different area codes or exchanges that the pool should serve in the Number of Area Codes or Exchanges for which Trunk Pool Is Used column.

**NOTE** ► If you do not know the exact number of exchanges or area codes, write a note such as All area codes in the U.S. except the 15 served by the regional WATS lines/trunks. Keep in mind that you are recording how many different area codes or exchanges the pool should access, not the area codes or exchanges themselves. This step helps identify the preferred trunk pools for toll and local calls. (Preferred pools are the trunk pools in which the system places each call unless a different route has been specified for that particular type of call.)

5. Under the Preferred Trunk Pools heading:
  - a. Determine which of the toll trunk pools is used for calls to the greatest number of different area codes. Write the number of that trunk pool in the space next to *For toll calls* (Table 25; Table 17 in Release 1.0 systems). Table 25 (17) is explained later in this chapter.
  - b. Determine which of the local trunk pools is used for calls to the greatest number of different exchanges. Write the number of that trunk pool in the space next to *For local calls* (Table 26; Table 18 in Release 1.0 systems). Table 26 (18) is explained later in this chapter.

Figure 4-1 shows the completed Automatic Route Selection Worksheet for the fictitious company, McHale and Associates of Denver, Colorado (area code: 303). McHale has a local trunk pool, an in-state WATS pool, and a cross-country WATS pool. Because Colorado has three area codes (303, 719, and 970), the in-state WATS line/trunk can be used for both toll and local calls. Figure 4-1 shows an example of two entries (for the 303 and 719 area codes) for Pool 890 on the worksheet.

The cross-country WATS trunk pool serves the greatest number of different area codes, every area code in the country except the two in Colorado. Therefore, it is the preferred trunk pool for toll calls.

The in-state WATS trunk pool serves the greatest number of different exchanges. It is the preferred trunk pool for calls to every exchange in area code 303, except the 20 exchanges in the local calling area. Therefore, it is the preferred trunk pool for local calls and some of these are toll calls.



- **6-Digit Tables.** If the cost of calls to another area code varies according to the exchange, this table can be used to route calls on different trunk pools, depending on both the area code and the exchange. An area code is the first entry, and the remaining 99 entries are exchanges within the area code. The system scans the first six digits of the user-dialed number (area code and exchange) to route the call.
- **Area Code Tables.** These tables are lists of 3-digit area codes. Area code tables are useful if just one type of line/trunk is used for all calls to each area code on the list.
- **Local Exchange Tables.** These tables list 3-digit exchanges within the local area code. They can be used to route calls over in-state WATS.
- **1+7 Tables.** These tables contain a list of exchanges within the local area code that require dialing a 1 but not an area code before the 7 digits.

Because ARS routing requires care and planning, the instructions for filling out the planning forms are presented a few steps at a time with examples of completed forms shown after each group of steps. The instructions begin with the programmable tables (1 through 24; 1 through 16 in Release 1.0 systems) and introduce the factory-set tables midway through the process.

### Planning Form Instructions

Complete Form 3f for each trunk pool listed on the ARS worksheet (Form 3e).

**NOTE** ► The digits before the blank lines in the Area Code/Exchanges section represent the table entry number used during programming.

On each copy of Form 3f:

1. Write the table number in the Table No. space (maximum 24; 16 in Release 1.0 systems). Start with the number 1 and proceed sequentially.
2. Check the appropriate box under the Type of Table heading: 6-Digit, Area Code, Exchange, or 1+7.
3. Do *either* of the following:
  - If this is *not* a 1+7 table, skip to Step 4.
  - If this is a 1+7 table, do *either* of the following:
    - If users do *not* need to dial a 1 to reach numbers within their own area code, check the Not Within Area Code box (factory setting).
    - If users need to dial a 1 to reach numbers within their own area code, check the Within Area Code box.

Complete the Area Code/Exchanges section by doing *either* of the following:

- If this is a 6-digit table, write the area code on the blank line next to entry 001. Then write each exchange to be called in that area code. Use the numbered lines, beginning with entry 002.

Up to 99 exchanges can be listed in any order. If you need to list another area code with exchanges, prepare another 6-digit table.

- If this is an Area Code, Exchange, or 1+7 table, write the area codes or exchanges on the numbered lines, beginning with entry 001.

Up to 100 area codes or exchanges can be listed in any order, but area codes and exchanges cannot be on the same table.

**Example 1.** If a business plans to use Table 1 to route calls to exchanges 333, 444, and 523 in area code 816, the upper section of the completed Form 3f will look similar to Figure 4-2.

**Example 2.** If the business plans to use Table 7 to route calls to the northeastern (band 1) WATS lines/trunks as entries 001 through 015, the upper section of the completed form will look similar to the one shown in Figure 4-3.

**Automatic Route Selection Tables\***

Maximum: 16 Tables. (Make a copy for each table.)

Table No.   1  

**Type of Table**

6-Digit

Area Code

Exchange

1 + 7, dialing from

within area code

not within area code ↕

**Area Code/Exchanges**

001 <u>  816  </u>	021 _____	041 _____	061 _____	081 _____
002 <u>  333  </u>	022 _____	042 _____	062 _____	082 _____
003 <u>  444  </u>	023 _____	043 _____	063 _____	083 _____
004 <u>  523  </u>	024 _____	044 _____	064 _____	084 _____
005 _____	025 _____	045 _____	065 _____	085 _____
006 _____	026 _____	046 _____	066 _____	086 _____
007 _____	027 _____	047 _____	067 _____	087 _____
008 _____	028 _____	048 _____	068 _____	088 _____
009 _____	029 _____	049 _____	069 _____	089 _____
010 _____	030 _____	050 _____	070 _____	090 _____
011 _____	031 _____	051 _____	071 _____	091 _____
012 _____	032 _____	052 _____	072 _____	092 _____
013 _____	033 _____	053 _____	073 _____	093 _____
014 _____	034 _____	054 _____	074 _____	
015 _____	035 _____	055 _____		
016 _____	036 _____			
017 _____	037 _____			
018 _____				
019 _____				

**Figure 4-2. Example 1: Form 3f, 6-Digit Table**

**Form 3f**

**Automatic Route Selection Tables\***

Maximum: 16 Tables. (Make a copy for each table.)

Table No. 7

**Type of Table**

- 6-Digit
- Area Code
- Exchange
- 1 + 7, dialing from
  - within area code
  - not within area code ◆

**Area Code/Exchanges**

001 <u>413</u>	021 _____	041 _____	061 _____	081 _____
002 <u>617</u>	022 _____	042 _____	062 _____	082 _____
003 <u>203</u>	023 _____	043 _____	063 _____	083 _____
004 <u>508</u>	024 _____	044 _____	064 _____	084 _____
005 <u>401</u>	025 _____	045 _____	065 _____	085 _____
006 <u>516</u>	026 _____	046 _____	066 _____	086 _____
007 <u>518</u>	027 _____	047 _____	067 _____	087 _____
008 <u>914</u>	028 _____	048 _____	068 _____	088 _____
009 <u>717</u>	029 _____	049 _____	069 _____	089 _____
010 <u>201</u>	030 _____	050 _____	070 _____	090 _____
011 <u>603</u>	031 _____	051 _____	071 _____	091 _____
012 <u>207</u>	032 _____	052 _____	072 _____	092 _____
013 <u>215</u>	033 _____	053 _____	073 _____	093 _____
014 <u>802</u>	034 _____	054 _____	074 _____	
015 <u>609</u>	035 _____	055 _____		
016 _____	036 _____			
017 _____	037 _____			
018 _____				
019 _____				

**Figure 4-3. Example 2: Form 3f, Area Code Table**

**Subpatterns**

For each table (1 through 24; 1 through 16 in Release 1.0 systems; and factory-set Tables 25 and 26; Tables 17 and 18 in Release 1.0 systems), you can select two subpatterns (A and B) that specify routes to be used at different times. You can specify up to six routes for each subpattern. For example, you may want calls to certain area codes routed over WATS lines/trunks during the day; after 11 p.m., when toll rates are less expensive on basic lines/trunks, you may want the calls routed over the main pool.

For each of the 12 routes (six for each subpattern), you can specify a Facility Restriction Level (FRL). The FRL is used to refine the route selection process still further. Each route is assigned an FRL from 0 through 6 (6 is the most restricted). Each telephone is also assigned an FRL from 0 through 6 (0 is the most restricted). Callers (extension or Remote Access barrier code/trunk) can

use the route only if their FRL is equal to or greater than that specified for the route. You assign a value of 0 to the route if you want all users to access the route, or 1 through 6 to restrict calling for the route to specific users only.

The form for a typical Area Code Table, illustrated in Figure 4-4, shows a table to route calls to the 13 area codes served by the northeastern (band 1) WATS lines beginning at 8 a.m. with no restrictions. The number of the northeastern WATS pool, 891, is on the first line in the Subpattern A section. The time, 8:00 a.m., is in the Time of Day space, and an FRL of 0 indicates no restrictions. The 11 p.m. in the Time of Day space for Subpattern B and Pool 70 in the Pool column indicates that calls to these area codes are to be routed over the main pool after 11 p.m.

### Planning Form Instructions

In the Subpattern sections on Form 3f and Form 3g:

1. To direct calls differently according to time of day, write a starting time for each subpattern in the Time of Day space (for example, 8 a.m.).
2. To complete the Pool column for each subpattern, write the number of the preferred trunk pool next to the number 1. This is the pool to which calls to the area codes or exchanges listed in the Area Code/Exchanges section of this form should be directed.

If you want to designate a backup pool in case all the lines/trunks in the first choice pool are busy, write the number of the backup trunk pool next to the number 2, and so on.

3. To complete the FRL column, enter a value of 0 through 6. Assign a value of 0 if you want all users to access the route, or 1 through 6 to restrict calling for the route to specific users only. For all except the Default Local Table, the factory setting is 3. The Default Local Table factory setting is 2.
4. If extra digits at the beginning of the dialed number may be required for the system to place a call on a particular pool, enter the digits (0 through 9) in the same row as the pool number, in the column under the Other Digits heading. (See the Other Digits example below, in Figure 4-5.)

These special access or account codes can range from a single digit, such as 9, to a maximum of 20 digits.

Because calls to the 15 area codes shown on Figure 4-4 should be placed on the cross-country WATS lines/trunks when all the northeastern WATS lines/trunks are busy, the number of the cross-country WATS pool, 890, is used in both cases. An FRL of 4 is assigned to restrict some users from using cross-country WATS lines/trunks.

**Example:** If a business uses a different long-distance company for calls to nine area codes in Canada, accessing the alternate long-distance company lines requires getting a local line and dialing seven digits. The completed form for the Area Code Table that routes these calls to the alternate long-distance company lines is shown in Figure 4-5.

**Form 3f**

**Automatic Route Selection Tables\***

Maximum: 16 Tables. (Make a copy for each table.)

Table No. 2

**Type of Table**

- 6-Digit
- Area Code
- Exchange
- 1 + 7, dialing from
  - within area code
  - not within area code ◆

**Area Code/Exchanges**

001 <u>413</u>	021 _____	041 _____	061 _____	081 _____
002 <u>617</u>	022 _____	042 _____	062 _____	082 _____
003 <u>203</u>	023 _____	043 _____	063 _____	083 _____
004 <u>508</u>	024 _____	044 _____	064 _____	084 _____
005 <u>401</u>	025 _____	045 _____	065 _____	085 _____
006 <u>516</u>	026 _____	046 _____	066 _____	095 _____
007 <u>518</u>	027 _____	047 _____	076 _____	096 _____
008 <u>914</u>	028 _____	057 _____	077 _____	097 _____
009 <u>717</u>	029 _____	058 _____	078 _____	098 _____
010 <u>201</u>	039 _____	059 _____	079 _____	099 _____
011 <u>603</u>	040 _____	060 _____	080 _____	100 _____

Subpattern A Time of Day <u>8:00 am</u>					Subpattern B Time of Day <u>11:00 pm</u>				
Pool	FRL (3 ◆)‡	Other Digits	Absorb	Call Type† (Both ◆)	Pool	FRL (3 ◆)‡	Other Digits	Absorb	Call Type† (Both ◆)
1 891	<u>0</u>	_____	1	<u>V</u>	1 70	<u>0</u>	_____	1	<u>V</u>
2 890	<u>4</u>	_____	2	<u>V</u>	2 890	<u>4</u>	_____	2	<u>V</u>
3	_____	_____	3	_____	3	_____	_____	3	_____
4	_____	_____	4	_____	4	_____	_____	4	_____
5	_____	_____	5	_____	5	_____	_____	5	_____
6	_____	_____	6	_____	6	_____	_____	6	_____

◆ Factory Setting  
 \* Hybrid/PBX mode only  
 † Select Voice only, Data only, or Both.  
 ‡ Local Tables Default FRL is 2.

**Figure 4-4. Subpattern Example**

**Form 3f**  
**Automatic Route Selection Tables\***

Maximum: 16 Tables. (Make a copy for each table.)

Table No.   3  

**Type of Table**

- β-Digit
- Area Code
- Exchange
- 1 + 7, dialing from
  - within area code
  - not within area code ♦

**Area Code/Exchanges**

001 <u>604</u>	021 _____	041 _____	061 _____	081 _____
002 <u>403</u>	022 _____	042 _____	062 _____	082 _____
003 <u>306</u>	023 _____	043 _____	063 _____	083 _____
004 <u>204</u>	024 _____	044 _____	064 _____	084 _____
005 <u>807</u>	025 _____	045 _____	065 _____	_____
006 <u>705</u>	026 _____	046 _____	_____	095 _____
007 <u>519</u>	027 _____	_____	076 _____	096 _____
008 <u>416</u>	028 _____	057 _____	077 _____	097 _____
009 <u>613</u>	_____	058 _____	078 _____	098 _____
010 _____	039 _____	059 _____	079 _____	099 _____
_____	040 _____	060 _____	080 _____	100 _____

Subpattern A Time of Day _____					Subpattern B Time of Day _____				
Pool	FRL (3 ♦)‡	Other Digits	Absorb	Call Type† (Both ♦)	Pool	FRL (3 ♦)‡	Other Digits	Absorb	Call Type† (Both ♦)
1	<u>70</u>	<u>905012</u>	1	<u>V</u>	1	_____	_____	1	_____
2	_____	_____	2	_____	2	_____	_____	2	_____
3	_____	_____	3	_____	3	_____	_____	3	_____
4	_____	_____	4	_____	4	_____	_____	4	_____
5	_____	_____	5	_____	5	_____	_____	5	_____
6	_____	_____	6	_____	6	_____	_____	6	_____

♦ Factory Setting  
 \* Hybrid/PBX mode only  
 † Select Voice only, Data only, or Both.  
 ‡ Local Tables Default FRL is 2.

**Figure 4-5. Other Digits Example**

- If the system must absorb certain leading digits dialed by users to place calls on a particular pool, enter a number in the same row as the pool number, in the Absorb column.

Use the number 0 if you do not want absorption. Assign a value of 1 through 11 according to the number of digits you want absorbed, starting with the first digit dialed.

**Example:** If a company has FX lines/trunks for the 686 exchange in the 901 area code and wants to allow people to dial those calls the same way they dial toll calls to other area codes, an

absorption number of 4 is assigned to the FX trunk pool, Pool 893. The completed form for the 6-Digit Table that routes calls to the FX trunk pool is shown in Figure 4-6.

After ARS is programmed, people in the company, illustrated in Figure 4-6, dial 1-901-686-XXXX to make these calls. The system absorbs the leading 1 and the area code and dials only the seven-digit number to place these calls on one of the FX lines/trunks.

**Form 3f**  
**Automatic Route Selection Tables\***

Maximum: 16 Tables. (Make a copy for each table.)

Table No. 4

**Type of Table**

6-Digit

Area Code

Exchange

1 + 7, dialing from

within area code

not within area code ◆

**Area Code/Exchanges**

001 <u>901</u>	021 _____	041 _____	061 _____	081 _____
002 <u>686</u>	022 _____	042 _____	062 _____	082 _____
003 _____	023 _____	043 _____	063 _____	083 _____
004 _____	024 _____	044 _____	064 _____	084 _____
005 _____	025 _____	045 _____	065 _____	_____
006 _____	026 _____	046 _____	_____	095 _____
007 _____	027 _____	_____	076 _____	096 _____
008 _____	028 _____	057 _____	077 _____	097 _____
009 _____	_____	058 _____	078 _____	098 _____
010 _____	039 _____	059 _____	079 _____	099 _____
_____	040 _____	060 _____	080 _____	100 _____

**Subpattern A Time of Day** \_\_\_\_\_

Pool	FRL (3 ◆) <sup>‡</sup>	Other Digits	Absorb	Call Type <sup>†</sup> (Both ◆)
1 893	_____	_____	1 4	V
2	_____	_____	2	_____
3	_____	_____	3	_____
4	_____	_____	4	_____
5	_____	_____	5	_____
6	_____	_____	6	_____

**Subpattern B Time of Day** \_\_\_\_\_

Pool	FRL (3 ◆) <sup>‡</sup>	Other Digits	Absorb	Call Type <sup>†</sup> (Both ◆)
1	_____	_____	1	_____
2	_____	_____	2	_____
3	_____	_____	3	_____
4	_____	_____	4	_____
5	_____	_____	5	_____
6	_____	_____	6	_____

◆ Factory Setting  
\* Hybrid/PBX mode only  
† Select Voice only, Data only, or Both.  
‡ Local Tables Default FRL is 2.

**Figure 4-6. Digit Absorption Example**

6. To complete the Call Type column, enter *one* of the following:

- For voice only calls, write V.
- For data only calls, write D.
- For both voice and data calls, write Both.

**NOTE** ► Pools should be labeled as Voice unless they can support digital data. Both can be used for BRI, PRI, and private network PRI pools. Data can be used for T1 Switched 56 pools, and to reserve lines for data in BRI, PRI, and private network PRI pools.

7. If you have worked on only one of your planned non-default tables, complete all copies of Form 3f. Repeat Steps 1 through 6 for each table (Tables 1 through 24; 1 through 16 in Release 1.0 systems) that you need.

8. If you have not completed the factory-set tables, do so now:

- a. For Tables 25 (17 in Release 1.0 systems; Default Toll) and 26 (17 in Release 1.0 systems; Default Local), repeat Steps 1 through 6 to complete the subpattern and pool routing sections.
- b. For the Dial 0 table (Table 27; 19 in Release 1.0 systems), complete the Pool routing, Facility Restriction Level (FRL), and Other Digits entries following Steps 2 through 4. If the switch is part of a private network, and the private network needs to use the Dial 0 table, see the *Network Reference* for information.

 **WARNING:**

*In the next step, assigning a restrictive FRL could impair the ability to dial 911 (Release 1.0 systems only).*

- c. If users need to dial an access code to call the special numbers 411, 611, 811, and 911 (only in Release 1.0 systems), record that code on the Special Number Table (Table 28; Table 20 in Release 1.0 systems), under the Other Digits heading. Assign the FRL as shown in Step 3. If the switch is part of a private network and the private network needs to use the Special Numbers table, see the *Network Reference* for information.
  - d. For Enhanced 911 Service (Release 1.5 and later systems), complete the Pool routing and Other Digits entries in the E911 Table.
9. If restricting extensions, private network calls, and Remote Access users from specific routes, locate Form 6g, Call Restriction Assignments and Lists:
- a. Under the ARS Restriction Level heading on each telephone form, write the value (0 to 6) you want to assign.
  - b. Under the ARS Restriction Level heading on pages 3 and 4 of Form 3a, check the value (0 to 6) you want to assign.

Extension and Remote Access FRL values must be equal to or greater than the FRL value assigned to routes in order for users to access those routes. A value of 0 is the most restrictive, and a value of 6 is the least restrictive. The factory-set FRL value assigned to extensions is 3.

To restrict an extension from specific routes, assign an FRL value to the extension that is lower than the route's value.

For example, if you want to limit a user from making calls on pools with special-use lines/trunks such as WATS, assign a value of 0. If you want a telephone used by a top executive to have unlimited use of any ARS route, assign a value of 6.

### Enhanced 911 Service

Release 1.5 or later of the MERLIN MAGIX system in Hybrid/PBX mode supports Enhanced 911 (E911) service that allows the recipient of a 911 call to accurately identify the telephone number and physical location of the calling party. Emergency response personnel cross-check the incoming Automatic Number Identification (ANI) information with the Automatic Line Identification (ALI) or billing information (in other words, the billing address) associated with the telephone number. If the caller is in a multi-floor office or a multi-building campus, emergency response operators have little idea of the exact location of the caller since the information presented is often just the main billing address of the company. You can use the E911 Partition (the factory setting) or E911 Adjunct options to provide more specific ALI to identify the caller's location.

For the E911 options to function properly, the 911 number has been removed from the Special Numbers Table and placed in a separate E911 Table, Table 29.

### Allow-11

Release 1.5 or later of the MERLIN MAGIX system offers the Allow-11 function. When you enable Allow-11 and the ARS access code is 9, dialing "911" or "9-911" both place a 911 call. If Allow-11 is enabled and the ARS access code is 9, you cannot use "11" to dial star codes. (Dialing \*11 is used for rotary-dial lines.)

### E911 Partition

As a building can be partitioned into different floors or different areas on one floor, the extensions in the MERLIN MAGIX system can be grouped ("partitioned") according to their locations. For example, you can place all the extensions in the northeast corner of the second floor of an office building in one partition and all the extensions in the northwest corner in a second partition. You then assign some trunks with an ALI of the northeast corner of the second floor to the first partition. Next, you assign trunks with an ALI of the northwest corner of the second floor to the second partition. When a caller dials "911," the ALI information sent shows the emergency response people exactly where the caller is located.

**NOTE** ► You must update the partition trunk's ALI to identify the location of the extensions in a partition.

The MERLIN MAGIX system supports up to 10 partitions. When you change the system mode to Hybrid/PBX mode, all the extensions and adjuncts in the system are automatically assigned to Partition 1.

An extension can belong to only one partition. If the System Administrator enters an already assigned extension into another partition, the system automatically removes the extension from the previous partition.

Partition trunks can be any type of outcalling facility and can be programmed for other system functionality, such as pools and Personal Lines. Partition trunks cannot be programmed as the following:

- E911 Adjunct trunks
- DID trunks
- Music-On-Hold trunks
- Loudspeaker Paging trunks
- Data trunks
- Maintenance alarm trunks
- Unassigned T1 trunks
- PRI lines that are not assigned to a B-channel group
- PRI lines assigned as the D-channel

You can assign a trunk to only one partition or to the E911 Adjunct. You can assign trunks that are already used in pools or as Personal Lines.

**NOTE** ► If no trunks are assigned to an extension's partition, a 911 call from that extension is routed through the main pool. If you select E911 Adjunct as your E911 option and no trunks are assigned to the E911 adjunct, 911 calls are routed through the main pool.

 **CAUTION:**

*Do not assign a trunk that does not work or is unreliable. You should enable system trunk maintenance. The system cannot use trunks that are maintenance busy. If an E911 call fails, the system marks that trunk as maintenance busy. The next E911 call uses another trunk in the partition or overflows to the main pool.*

**NOTE** ► If an E911 call overflows to the main pool, the ALI information sent may not include the exact location of the caller.

Each partition can have up to 20 digits that include digits 0–9, \* (but not in the first position), and Pause (entered by pressing the Hold button). If an E911 call overflows to the main pool, the system may add prefixed digits.

### Planning Form Instructions

1. Review Form 2c, System Numbering: Line/Trunk Jacks, for the types of lines/trunks that are available and appropriate.
2. On Form 3j, Enhanced 911 Service, check “Enable” under “Allow-11” as desired.
3. Check “E911 Partition” under “Type of E911 Service.”
4. Enter the number for the partition.
5. Enter the trunk numbers of the trunks to be assigned to the partition. The factory setting is for all extensions to be assigned to Partition 1.
6. Enter the digits (up to 20) that are to be sent for that partition when “911” is dialed.

### E911 Adjunct

The second way to support Enhanced 911 service is to have calls routed through trunks connected to an auxiliary piece of equipment called the “E911 adjunct.” You can assign up to five trunks to be E911 Adjunct trunks.

When a user calls 911, the ground-start or loop-start trunk sends the extension information to the E911 adjunct. The E911 adjunct reads the extension information and sends the appropriate telephone information out to the 911 Emergency Service. If the E911 adjunct cannot decipher the extension information, it should send the main billing telephone number and billing address. If all the trunks programmed for E911 service are busy, the call is routed through the main pool.

**NOTE** ► If an E911 call overflows to the main pool, the ALI information sent may not include the exact location of the caller.

When the E911 adjunct detects an error condition (such as the disconnection of the trunk cable between the E911 adjunct and the PSTN), the contacts on the front panel ALARM relay close. You must wire this ALARM relay to a system tip/ring extension jack and then program that extension jack as an E911 Adjunct Alarm extension. An E911 Adjunct Alarm extension uses the Hotline feature to place a call automatically to the system operator when the ALARM relay contacts close. This causes an alarm LED to light on the operator’s console and places the E911 Adjunct trunks into a Trunk Maintenance Busy state. While the E911 Adjunct trunks are in this state, any 911 calls go directly to the main pool. A major alarm error is also generated. See the “Maintenance and Troubleshooting” chapter in the *Installation, SPM, Maintenance, and Troubleshooting Guide* for further information.

E911 Adjunct trunks can be loop-start trunks or ground-start trunks with the following exceptions. However, ground-start trunks can only be used on modules with upgradeable firmware (the 800 GS/LS-ID module and the 408 GS/LS-MLX-ID module).

- No Music-On-Hold trunks
- No Loudspeaker Paging trunks
- No data trunks
- No maintenance alarm trunks
- No unassigned T1 trunks

- No PRI lines that are not assigned to a B-channel group
- No PRI lines assigned as the D-channel
- No trunks used in pools
- No trunks used as Personal Lines
- No trunks assigned to an E911 partition

**Planning Form Instructions**

1. Review Form 2c, System Numbering: Line/Trunk Jacks, for the types of lines/trunks that are available and appropriate.
2. On Form 3j, Enhanced 911 Service, check "Enable" under "Allow-11" as desired.
3. Check "E911 Adjunct" under "Type of E911 Service."
4. Enter the trunk numbers of the trunks to be assigned to the E911 Adjunct (up to five trunks) on page 3j-2.
5. Enter the extension number of the E911 Adjunct Alarm.



## Contents

Overview . . . . .	5-1
Terminology . . . . .	5-2
About Data and Video Communications . . . . .	5-3
■ Connectivity . . . . .	5-3
■ Data Stations . . . . .	5-4
■ Modem Data Stations . . . . .	5-5
Modem Data Only . . . . .	5-5
■ MLX Voice and Modem Data . . . . .	5-6
ISDN Terminal Adapter Data Stations . . . . .	5-7
MLX Voice and ISDN Terminal Adapter Data . . . . .	5-8
ISDN Terminal Adapter Data-Only . . . . .	5-9
Summary of Data Station Configurations . . . . .	5-9
■ Other Resource Groups . . . . .	5-11
Data Hunt Groups . . . . .	5-11
■ Video Systems . . . . .	5-12
Personal Videoconferencing . . . . .	5-12
Planning Overview . . . . .	5-14
Assigning Extension Jacks. . . . .	5-17
■ Guidelines for Digital Extension Jacks . . . . .	5-18
■ Modem Data-Only Stations. . . . .	5-18
■ ISDN Terminal Adapter Data-Only Stations . . . . .	5-19
■ Local Host Computer Data Stations . . . . .	5-19
■ LAN Workstations . . . . .	5-20
■ Video Systems . . . . .	5-21
Assigning Lines/Trunks to Data and Video Stations . . . . .	5-22
■ Assigning Line Buttons in Hybrid/PBX Mode . . . . .	5-25
■ Assigning Pools and Lines/Trunks (Hybrid/PBX Mode Only) . . . . .	5-26
■ Assigning Line Buttons in Key Mode . . . . .	5-27
Assigning Features to Data Stations . . . . .	5-29
■ Pool Dial-Out Code (Hybrid/PBX Mode Only). . . . .	5-30
■ Calling Restrictions . . . . .	5-30
■ Forced Account Code Entry . . . . .	5-31
■ ARS Facility Restriction Level (Hybrid/PBX Mode Only) . . . . .	5-31
■ System Speed Dial Codes . . . . .	5-32
Creating Data Hunt Groups . . . . .	5-32
Digital Data/Video Stations . . . . .	5-34



---

## Overview

In addition to voice communications capabilities, the system also supports data and video communications to enable users to send or receive data, or establish group or personal video conferences.

**NOTE** ► To configure the switch to support data communications across a private network, see the *Network Reference* for information.

Planning for data and video communications consists of the following tasks:

1. Planning how the data and/or video equipment connects to extension jacks on the control unit. This depends on the type of data stations or video systems:
2. Creating modem/ISDN terminal adapter pools (pairs of modems and ISDN terminal adapters) to enable calls between the two types of data stations: modem data stations and ISDN terminal adapter data stations.
3. Assigning lines/trunks to data stations and video systems.
4. Assigning features to data stations.
5. Creating data hunt groups (DHGs), that is, data Calling Groups, if there are modem/ISDN terminal adapter pools with more than one data communications equipment pair (a modem and an ISDN terminal adapter), or to designate a group of either modems or ISDN terminal adapters to receive calls to communicate with a local host computer or local area network (LAN) workstation.
6. Configuring MLX jacks for 2B Data (2 B-channel) connectivity. This allows video systems to use both B-channels on a single MLX jack to establish high-speed video connections at data rates of up to 128 kbps.

- NOTES** ▶
- For additional information on 2B Data/Video and for information on connecting video systems to the MERLIN MAGIX system, refer to the *Data and Video Reference*.
  - For information on ordering desktop video equipment, refer to Marketing Announcement Letter *GBCS-96-05-001, Multi-Vendor Desktop Videoconferencing Offer*.

Following an explanation of the terminology used in this chapter and an overview of data communications, this chapter contains instructions for planning data and video communications. Some procedures involve making additional entries on the forms already completed earlier in this guide; others involve filling out data forms as described in “[Assigning Extension Jacks](#),” later in this chapter.

Instructions for using the data and video communications capabilities are contained in the *Data and Video Reference*.

---

## Terminology

The following terms are used in this chapter:

- **Data Station.** A hardware configuration used to send and receive data (and sometimes voice signals, depending on the equipment). The configuration includes data terminal equipment (DTE) for input and output of data, and data communications equipment (DCE) to enable the transmission of data over digital or analog telephone lines and trunks. There are two types of data stations:
  - **Modem Data Station.** Connects to the control unit through a T/R jack and requires a modem. Analog data stations can support analog data and analog voice, analog data only, or analog data and MLX voice.
  - **ISDN Terminal Adapter Data Station.** Connects to the control unit through an MLX extension jack and requires an ISDN terminal adapter. ISDN terminal adapter data stations can support ISDN terminal adapter data and MLX voice or ISDN terminal adapter data only.
- **Data Terminal Equipment (DTE).** Data station equipment—for example, a PC, host computer, or LAN workstation, from which data is input and/or output. DTE, which can also be referred to as a data terminal, uses data communications equipment (DCE) to transmit and receive the digital signals it requires.
- **Data Communications Equipment (DCE).** Data station equipment that enables the transmission of data over digital or analog telephone lines and trunks. DTE requires DCE as follows:

- **Modem.** A type of data communications equipment that converts the DTE's outgoing digital signals into analog signals for transmission over regular (analog) telephone company lines. Another modem at the receiving data station converts the analog signals back into digital signals for reception by the DTE—for example, a PC. An analog data station uses a modem as its DCE.
- **ISDN Terminal Adapter.** A type of data communications equipment that transmits digital signals over digital telephone company facilities—for example, PRI. A digital data station uses an ISDN terminal adapter as its DCE.
- **Data Terminal.** Data station equipment (for example, a PC, host computer, LAN workstation, Group IV fax machine, or a group videoconferencing installation) from which data is input and/or output. A data terminal uses data communications equipment (DCE) to transmit and receive the digital signals it requires.
- **Modem/ISDN Terminal Adapter Pool.** A special type of hardware configuration that combines one or more pairs of DCEs to enable communication between modems and ISDN terminal adapter data stations. A pair consists of one modem and one ISDN terminal adapter. Modem/ISDN terminal adapter pools are set up in one of two ways depending on the type of data station being used to *send* data: analog-to-digital or digital-to-analog.
- **Data Hunt Group (DHG).** A data Calling Group typically used to distribute calls to modem/ISDN terminal adapter pools that have more than one pair of DCEs.
- **Video System.** Equipment that allows desktop or group videoconferencing. This equipment connects either directly or through an ISDN terminal adapter to an MLX jack on the MERLIN MAGIX system. If the MLX port is programmed as a 2B Data port, the video systems can use both of the B-channels assigned to the MLX port to provide video. Many video applications also support data sharing and/or transfer.

**NOTE** ► If the video system is connected to the MLX jack through an ISDN terminal adapter, unless the ISDN terminal adapter itself supports 2B Data communications, it is recommended that the MLX port *not* be programmed as a 2B Data port.

---

## About Data and Video Communications

This section provides a high-level overview of the system's data and video communications capabilities, followed by more detailed information about some of the equipment and concepts introduced in this overview.

### Connectivity

Data communications connectivity enables the system to share resources, as well as to establish and manage connections between computers and other data devices.

Video communications connectivity enables users to conduct personal or group video conferences and to share data and applications (also known as Video Collaboration).

The system control unit (hardware and software) in conjunction with other external hardware devices provides data and video connectivity for the following:

- On-premises analog data stations.
- Connection to off-premises data stations by way of an analog line/trunk (GS, LS, Tie, or DID), by way of a dedicated analog line/trunk, or by way of a DS1 Digital Service Link providing emulated GS, LS, Tie or DID trunks.
- On-premises ISDN terminal adapter data stations.
- Connection to off-premises digital data stations by way of a PRI, NI-1 BRI, or T1 Switched 56 facility (including T1-Tie trunks using T1 Switched 56 service).
- Connections between two similar types of data stations.
- Connection between a digital data station (on a B-channel) and an analog data station by way of 2-stage dialing through a modem/ISDN terminal adapter pool. This configuration is not described in this book.
- On-premises host computer access.
- Local area network (LAN) access by way of a modem or ISDN terminal adapter connected to an RS-232 port on a workstation on the LAN.
- On- and Off-premises personal or group video systems by way of a digital PRI, NI-1 BRI, or T1 Switched 56 facility (including T1-Tie trunks using T1 Switched 56 service).

## Data Stations

A data station is a hardware configuration used to send and receive data (and/or voice, depending on the equipment). The configuration must include two main components: data terminal equipment (DTE) for input or output of data, along with data communication equipment (DCE) to enable the transmission of data over analog or digital lines/trunks. Depending on the station configuration, it may or may not include a telephone, either tip/ring or an MLX telephone.

The DTE is usually a PC, but can be a host computer, a LAN workstation, a printer, an optical scanner, or a video system or other equipment used for data input and/or output.

The DCE, which is either a modem or an ISDN terminal adapter, allows data from the DTE to be transmitted over digital or analog telephone lines/trunks. The DCE, which has capabilities similar to a telephone, also can make the data call, maintain the connection, and terminate the data call.

**NOTE** ► The DCE and DTE may have hardware and/or software options that can be set for transferring and receiving data, such as parity and bit rate. For more information, refer to the DTE and DCE documentation for configuration compatibility requirements, options, and guidelines for changing options.

There are two types of data stations:

- **Modem Data Station.** This type of data station sends and receives analog data. It includes a modem as its DCE and is connected to an analog extension jack or T/R jack on the control unit.

- **ISDN Terminal Adapter Data Station.** This type of data station sends and receives digital data. It includes an ISDN terminal adapter as its DCE and is connected to a digital extension jack (MLX port) on the control unit.

Within each type, there are several configurations, depending on the station's capabilities (for example, voice and data or data only) and, therefore, what equipment is involved and what type of module it connects to on the control unit.

This section describes each type of data station and the configurations supported within each type.

## Modem Data Stations

A modem data station uses a modem as its DCE to send and receive data.

The modem converts digital signals from the DTE at the originating station into analog signals so the data can be transmitted over analog telephone lines/trunks. At the receiving station, the modem converts the analog signals back to digital signals so the DTE at that end can accept them. A modem may provide dialing and answering capabilities for a modem data station; if not, a telephone can be connected to dial out.

A modem data station can be used to make analog data calls either over the telephone company network or to a data station inside the system.

The interface for a modem data station is the tip/ring (T/R) interface provided by one of the following:

- A port on a T/R module (016 (T/R) or 008 OPT)
- A port programmed for T/R operation on a 016 ETR module
- A Multi-Function Module (MFM) adjunct on an MLX telephone

There are different types of modem data stations, depending on the data station capabilities:

- Modem data only
- Modem data and MLX voice

Each of these use different equipment as described in this section.

### Modem Data Only

This type of modem data station includes only DTE and a modem (see Figure 5-1). The modem connects to the control unit through a port on a 016 (T/R) module. If the modem does not provide dialing capability, a single-line telephone can be connected to it to provide dial-out capability; however, the data station and the telephone cannot be used simultaneously.


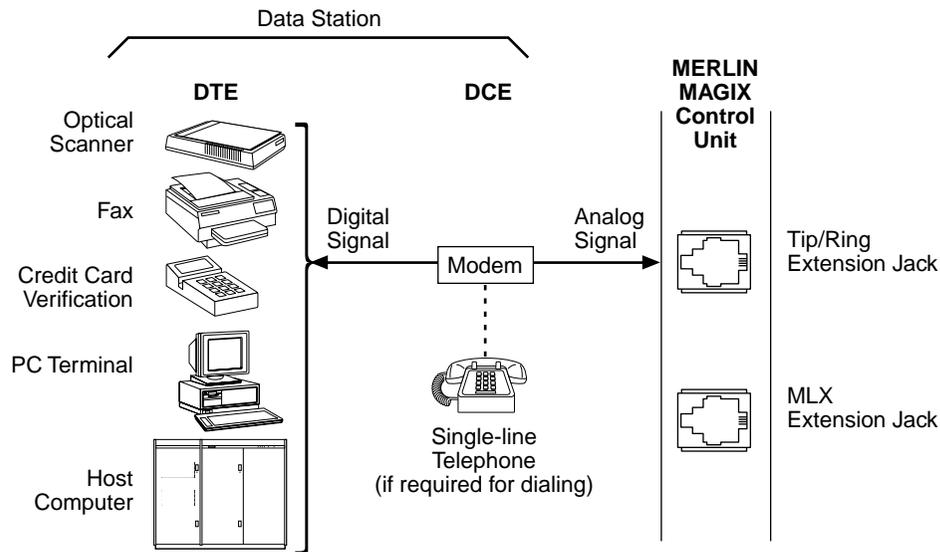


Figure 5-1. Modem Data Only

### MLX Voice and Modem Data

This type of analog data station includes an MLX telephone in addition to the DTE and modem (see Figure 5-2). The modem connects to the MLX telephone through the T/R interface of the Multi-Function Module (MFM), which is installed in the MLX telephone. The telephone connects to the control unit through an MLX extension jack. The communication capabilities of the MLX telephone and data station can be used simultaneously.

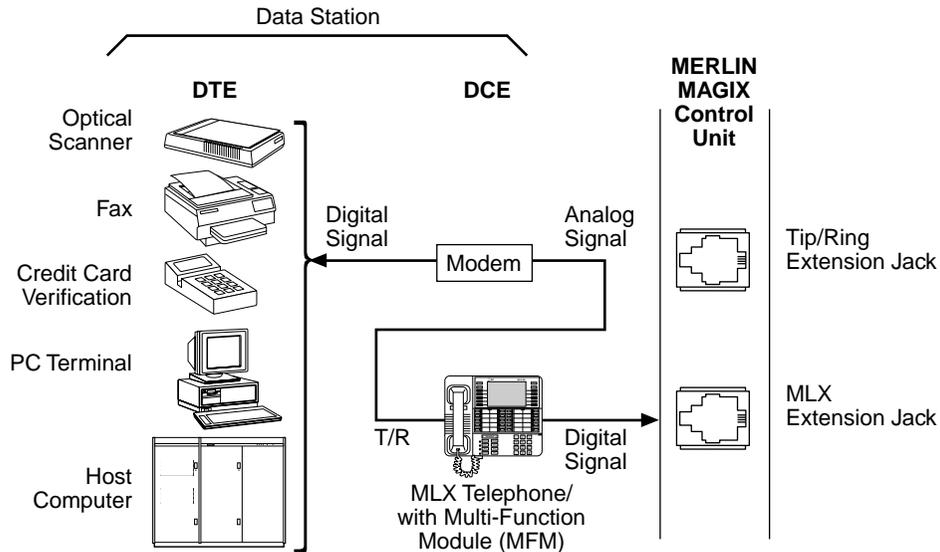

**Figure 5-2. MLX Voice and Modem Data**

### ISDN Terminal Adapter Data Stations

An ISDN terminal adapter data station uses an ISDN terminal adapter as its DCE to send and receive data and connects to a digital extension jack (MLX port) on the control unit. If PRI, NI-1 BRI, or T1 Switched 56 facilities (including T1-Tie trunks using T1 Switched 56 service) are assigned to the MLX port, that port may be configured as a 1B Data or 2B Data port. In a 1B configuration, only one of the assigned B-channels is used by the ISDN terminal adapter data station. The 2B configuration allows the simultaneous use of both B-channels.

The ISDN terminal adapter adapts the DTE to the MLX environment. Instead of converting digital signals to analog signals as a modem does, the ISDN terminal adapter maintains a digital data format that allows transmission to another inside ISDN terminal adapter station or over the PRI, NI-1 BRI, or T1 Switched 56 telephone network.

The ISDN terminal adapter can provide dialing and answering capabilities to the data station, and can share the MLX extension jack with an MLX telephone.

An ISDN terminal adapter data station can be used to make data calls either over digital telephone facilities (PRI, NI-1 BRI, or T1 Switched 56 facilities) or to an ISDN terminal adapter data station inside the system.

There are different types of ISDN terminal adapter data stations depending on the data station's capabilities:

- MLX voice and ISDN terminal adapter data (digital voice-and-data)
- ISDN terminal adapter (data-only)

### MLX Voice and ISDN Terminal Adapter Data

This type of ISDN terminal adapter data station includes an MLX telephone in addition to the DTE and ISDN terminal adapter (see Figure 5-3). The ISDN terminal adapter connects to the control unit through an MLX port. The MLX port is shared by both the telephone and the data station, but they operate independently of each other and can be used simultaneously.

**NOTE** ► In an MLX voice and ISDN terminal adapter data station, the MLX telephone cannot contain an MFM.


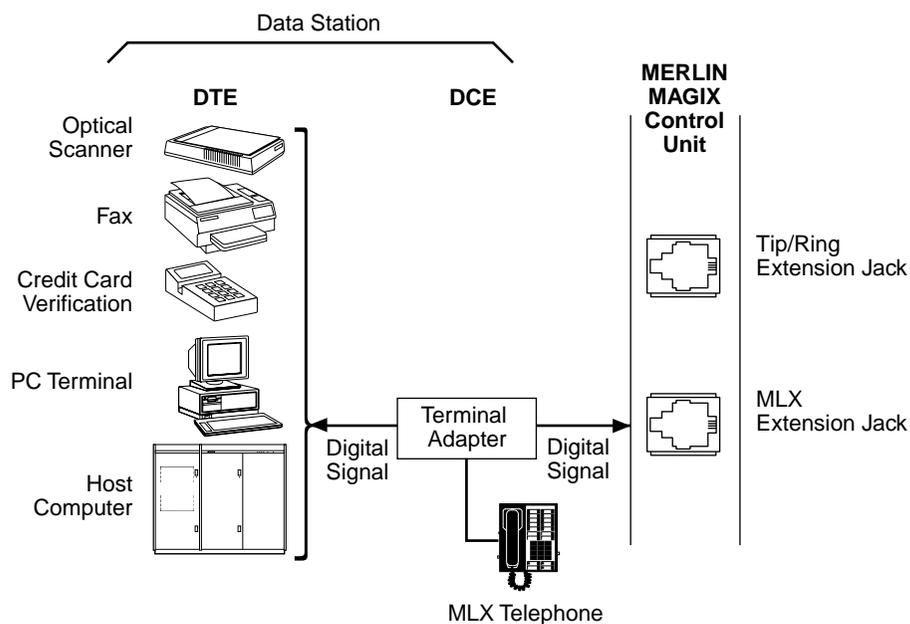


Figure 5-3. MLX Voice and ISDN Terminal Adapter Data

## ISDN Terminal Adapter Data-Only

This type of digital data station includes only the DTE and ISDN terminal adapter. The ISDN terminal adapter connects the DTE to the system through an MLX extension jack on the control unit (see Figure 5-4). Since the configuration does not include an MLX telephone, if a 7500B data module is used as the ISDN terminal adapter, a 440A4 terminating resistor adapter is required.

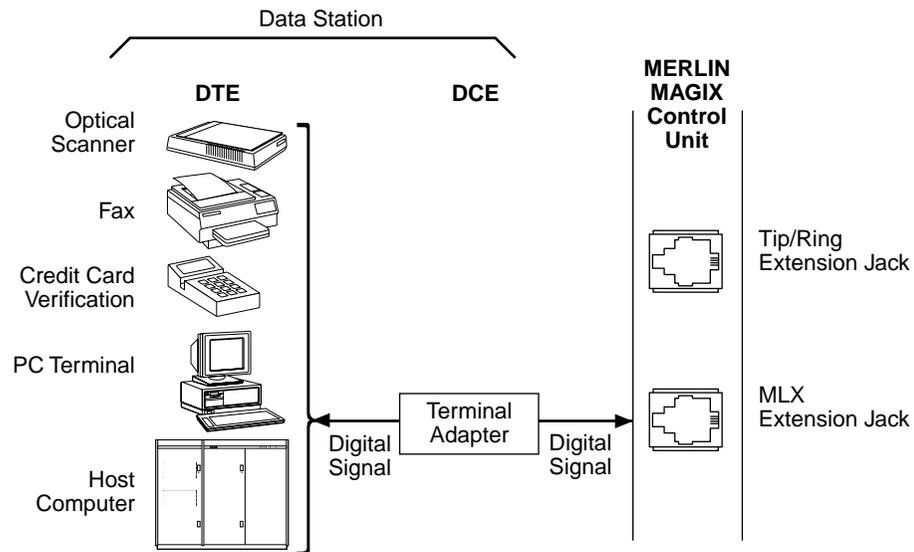

**Figure 5-4. ISDN Terminal Adapter Data-Only**

## Summary of Data Station Configurations

Table 5-1 describes the extension jacks and equipment required for each data station configuration.

**Table 5-1. Data Station Configurations**

Type of Data Station	Module and Jack Type	Telephone (for voice)	GPA or MFM	Modem or ISDN Terminal Adapter	Data Terminal
Modem data only	1 extension jack on a 016 (T/R), 016 ETR, or 008 OPT module	None	None	Modem	PC, LAN workstation, or local host
MLX voice and Modem data	1 extension jack on a 008 MLX, 016 MLX, or 408 GS/LS-ID-MLX module	MLX telephone	MFM	Modem	PC or LAN workstation
MLX voice and ISDN terminal adapter data	1 extension jack on a 008 MLX, 016 MLX, or 408 GS/LS-ID-MLX module	MLX telephone	None	ISDN terminal adapter	PC, LAN workstation, local host, or video conferencing
ISDN terminal adapter data-only	1 extension jack on a 008 MLX, 016 MLX, or 408 GS/LS-ID-MLX module	None	None	ISDN terminal adapter (if using a 7500B data module, a 440A4 terminating resistor adapter is also required)	PC, LAN workstation, local host, or videoconferencing
Digital Data/ Video	1 extension jack on a 008 MLX, 016 MLX, or 408 GS/LS-ID-MLX module set as a 2B Data port, or 2 jacks set as 1B Data ports <sup>1</sup>	None	None	None if station is connected by a BRI interface; one ISDN terminal adapter if the TA supports 2B Data; two ISDN terminal adapters if the TAs support only 1B Data	G4 FAX or videoconferencing

<sup>1</sup> A digital data/video station that connects directly to an MLX port, using either a BRI interface or a v.35 interface and an ISDN terminal adapter that supports 2B Data, requires only one MLX port programmed as a 2B Data port. A digital data/video station that connects to an MLX port, using a v.35 interface and an ISDN terminal adapter that does not support 2B Data, requires two 1B Data MLX ports.

## Other Supported Data Terminals

Other data equipment that can be connected to the system includes analog data terminals using modem connections, such as the following:

- A local host computer
- Group III (G3) fax machine
- An output-only device
- An input-only device

A PC containing an internal modem card can also be connected to a T/R interface.

Other digital data terminals may be connected using ISDN terminal adapters, including the following:

- Group videoconferencing system
- Group IV (G4) fax machine

## Other Resource Groups

You can create the following types of special groups:

- **Modem-Only Group.** Provides access to multipoint data equipment, for example, a caller at a data station calling an online database system at an outside number, over analog lines/trunks.
- **ISDN Terminal Adapter-Only Group.** Provides access to multipoint equipment—for example, a host computer—by assigning the MLX ports interfacing with the ISDN terminal adapters in the pool to a DHG.

## Data Hunt Groups

A data hunt group (DHG) is similar to a voice-extension Calling Group, except that the group in this case is a group of modems or a group of ISDN terminal adapters (not both). The group can be used to communicate with a local host computer or workstation (gateway) on a LAN.

All modems or ISDN terminal adapters in a DHG are assigned to a single extension number that is used both by inside and outside callers to reach the group. Users are given the DHG number that corresponds to the pool they need to reach.

Calls to the group are distributed among group members in a circular pattern. The system hunts for the first available modem or ISDN terminal adapter, starting with the one that received the last call. If all group members are unavailable, the caller hears a ringback tone.

Guidelines for creating DHGs are contained in [“Creating Data Hunt Groups,”](#) later in this chapter.

## Data Hunt Group Configurations

The following DHG configurations work on the system:

- **ISDN Terminal Adapters.** Allows communications with the local host computer or a workstation (gateway) to a LAN.
- **Modems.** Allows communications with the local host computer or a workstation (gateway) to a LAN.

## Video Systems

A video system is a hardware configuration that provides video teleconferencing. The video systems use both B-channels (2B Data) associated with an MLX port to achieve data rates of up to 128 kbps when using PRI or NI-1 BRI facilities, and 112 kbps when using T1 Switched 56 facilities.

There are two basic types of video teleconferencing:

- **Personal Videoconferencing.** This type, also referred to as Desktop Videoconferencing, typically is a single user communicating with another individual using their PC.
- **Group Videoconferencing.** This type, as the name implies, allows larger groups of people to communicate with another group at a different location.

### Personal Videoconferencing

A personal videoconferencing system typically consists of a video camera and an audio unit connected to a PC. The PC, when equipped with a BRI interface card, can connect directly to any available MLX port on a 408 GS/LS-ID-MLX, 008 MLX, or 016 MLX module.

The MLX port must be configured as a 2B Data port in order to provide the necessary high-speed data connection needed to support video applications. The network facilities used by the endpoint connected to the MLX port may be PRI, T1 Switched 56 (both provided by the 100D, 100R INA, and 100 DCD modules), or NI-1 BRI (provided by the 800 NI-BRI module) facilities.

**NOTE** ► Some applications also provide data and application sharing and transfer capabilities (video collaboration) in addition to videoconferencing.

This configuration, in which the personal video system is the only device connected to the MLX port, is called the Stand-alone configuration. See Figure 5-5 in the next section for a sample connection diagram.

## Group Videoconferencing

A group videoconferencing system consists of a video camera, an audio unit, and a display screen (such as a television) that connect to a coder-decoder (CODEC). The CODEC converts the analog voice and video signals into digital form for transmission, and converts the digital signals received back into analog form.

The CODEC may use either a BRI interface to connect directly to an available MLX port on a 408 GS/LS-ID-MLX module, 008 MLX module, 016 MLX module, or a v.35 interface to connect to an ISDN terminal adapter, which in turn connects to an MLX port.


When the group videoconferencing system uses a BRI interface, or an ISDN terminal adapter that supports 2B Data, the video system may be connected to a single MLX port that has been configured as a 2B Data port. This allows the video system to use both B-Channels assigned to the MLX port, thereby achieving the high-speed data connection necessary to support video.

If the group videoconferencing system uses a v.35 interface to connect to an ISDN terminal adapter that does not support 2B Data, then two ISDN terminal adapters are required (each connecting to a separate MLX port that has been configured as a 1B Data port) in order to achieve a 2B Data connection.

**NOTE** ► Do not connect equipment that does not support 2B Data—such as an ISDN terminal adapter or G4 fax machine—to an MLX port that has been configured as a 2B Data port. This wastes system resources and may cause other system errors.

The network facilities used by the endpoint connected to the MLX port may be any combination of PRI, T1 Switched 56 (both provided by the 100D, 100R INA, and 100 DCD modules), and/or NI-1 BRI (provided by the 800 NI-BRI module) facilities; however it is recommended that you use two B-channels of the same type to ensure the best possible connection. See Figure 5-5 for a sample connection diagram.

**NOTE** ► See the *Network Reference* for information on group videoconferencing over private network tandem trunks.

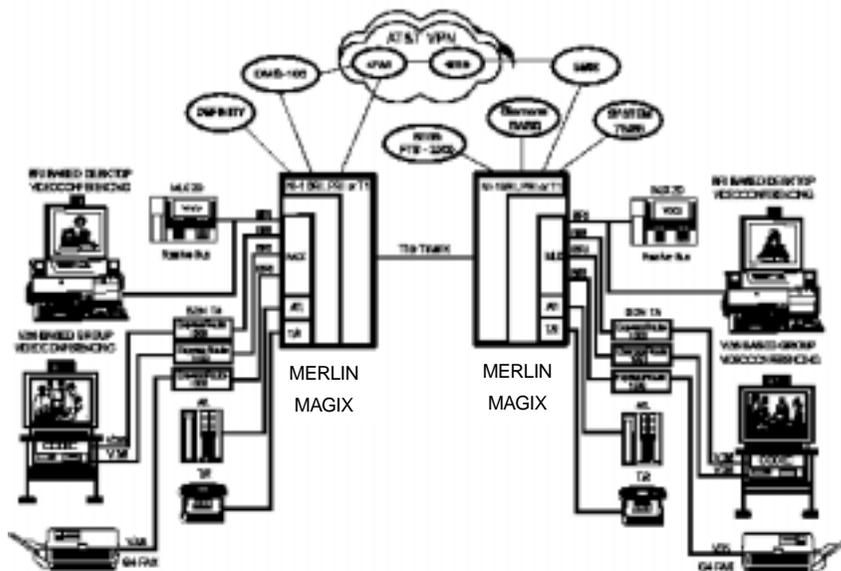

---

**Figure 5-5. Personal and Group Video Connections**

---

## Planning Overview

By using the procedures earlier in this guide, you should have already reserved the following:

- Trunk jacks for outside lines/trunks
- Extension jacks for voice telephone users
- Extension jacks for:
  - MLX telephones with either a modem data station connected using an MFM or a digital data station connected using an ISDN terminal adapter.
  - Digital data/video equipment (such as G4 FAX, and personal or group video systems) connected either directly to an MLX port or connected to an MLX port by way of an ISDN terminal adapter.

## Forms Needed

Whether you are planning data options for a new system or modifying an existing system, you record data communications planning information by making additional entries on forms already completed earlier in this book, and on the appropriate data forms shown in Table 5-2. Duplicate the master data forms in Appendix C, “Data Forms,” and work on the copies. Use the forms listed in Table 5-3, as needed.

**NOTE** ▶ Behind Switch mode is not included in these instructions. It works the same way as Key mode.

**Table 5-2. Data Forms**

To Plan New or to Modify Existing Systems...	Use These Forms...
Trunk assignments	1a, Modem Data Station 1b, ISDN Terminal Adapter Data Station
Feature assignments	1a, Modem Data Station 1b, ISDN Terminal Adapter Data Station
Data hunt groups	2, Data Hunt Groups
Digital data and/or video stations	3, Digital Data/Video Station

**Table 5-3. System Forms**

To Plan...	Use These Forms...
Extension jack connections <sup>1</sup> Modem data stations ISDN terminal adapter data stations Local host computer connections LAN workstation access connections Modem/ISDN terminal adapter pools <sup>1</sup>	2a, System Numbering: Extension Jacks (for all configurations)
Line/Trunk assignments	2a, System Numbering: Extension Jacks 2b, System Numbering: Digital Adjuncts 2c, System Numbering: Line/Trunk Jacks
Feature assignment	2a, System Numbering: Extension Jacks 2b, System Numbering: Digital Adjuncts 4d, MLX Telephone 4e, MFM Adjunct: MLX Telephone 4h, ETR Telephone 4j, MLS Telephone 4m, Multiline 4400-Series Telephone 5b, Direct-Line Console (DLC) 5c, MFM Adjunct: DLC
Dial-out code (Hybrid/PBX only)	2c, System Numbering: Line/Trunk Jacks
ARS Facility Restriction Level (Hybrid/PBX only)	3f, Automatic Route Selection Tables 3g, Automatic Route Selection Default and Special Numbers Table
Data hunt groups	2c, System Numbering: Line/Trunk Jacks 2d, System Numbering: Special Renumbers 7d, Group Calling

<sup>1</sup> You must make an entry for extension jack connections.

## Assigning Extension Jacks

Following some guidelines about digital extension jacks, this section contains procedures to plan extension jack connections for the following:

- Modem data-only stations
- ISDN terminal adapter data-only stations
- Local host computer data stations
- LAN workstations
- Video systems (personal or group)

For each type of data station, planning how the data equipment connects to extension jacks on the control unit involves the following tasks:

1. Review Form 2a, on which you entered codes (D for digital, T for tip/ring, and E for enhanced tip/ring), and find the telephone type and the user, location, or function for each data station to be connected. Table 5-4 lists extension jack types, the corresponding module types, and the equipment that can be connected.
2. Add the extension jack assignments to Form 2a.

**Table 5-4. Extension Jack Types**

Jack Type	Module Type	Connects...
Digital	024 TDL 412 LS-ID-TDL	4400-Series telephones
Digital	008 MLX 016 MLX 408 GS/LS-ID-MLX	MLX telephones (including MLX voice-modem data stations) MLX telephones (including MLX voice and ISDN terminal adapter stations) ISDN terminal adapter data terminals (such as PCs) Video systems (personal or group)
ETR or Tip/ring	016 ETR <sup>1</sup> 016 (T/R) 008 OPT	Fax machines Modem data-only stations

<sup>1</sup> Only ports 11–16 can be programmed T/R.

Before you assign extension jacks for ISDN terminal adapter data stations, review the guidelines in the next section, [“Guidelines for Digital Extension Jacks.”](#)

## Guidelines for Digital Extension Jacks

Although only one logical ID is assigned to each digital extension jack, the system automatically assigns two extension numbers:

- The first extension number shown on Form 2a is assigned to a TDL or MLX telephone connected to the extension jack.
- The second extension number assigned to each jack is reserved for an adjunct, such as an ISDN terminal adapter data terminal or desktop video endpoint, connected to the MLX telephone.

**NOTE** ► Although two extension numbers are assigned to each TDL extension jack, the 4400-Series telephones do not have connections for adjuncts.

- If a personal or group video system is connected to the MLX port, extension numbers are assigned to the video system for use in 2B Data connections.

Both extension numbers are assigned automatically, whether or not the extension includes an ISDN terminal adapter. Calls can be placed to both extension numbers independently. Note that an MLX extension cannot have both an ISDN terminal adapter and an MFM.

Also, when configuring digital data equipment connections to an MLX port, the following requirements and/or restrictions must be applied:

- When using a 7500B data module as an ISDN terminal adapter, and it is the only ISDN terminal adapter data station on the MLX port (no MLX telephone is connected), a 440A4 terminating resistor adapter must be configured to provide 100-ohm termination for each transmission pair. The 7500B data module does not provide termination.
- An MLX telephone is independent from the ISDN terminal adapter; however, the telephone may cause channel conflict between the telephone and the ISDN terminal adapter when the telephone is voice-signaled while active on a call. If a slight chance of data call blocking is unacceptable, an MLX telephone should not be connected to an ISDN terminal adapter used in a data station configuration.
- The maximum cord length from an MLX telephone to an ISDN terminal adapter is 80 feet (24 meters). This should be considered if you plan to use the voice capability of a port by connecting an MLX telephone far from the ISDN terminal adapter.
- An ISDN terminal adapter that does not support 2B Data should not be connected to an MLX port that has been programmed as a 2B Data port.

## Modem Data-Only Stations

A modem data-only station consists of a data terminal connected to the control unit using an internal or external modem. This station does not include a telephone.

Assign a tip/ring extension jack on a 016 (T/R) or 008 OPT module, or to a port programmed for tip/ring operation on a 016 ETR module. Either an on- or off-premises extension can be connected to a 008 OPT module.

### **Planning Form Instructions**

Record the extension jack assignments for modem data stations on Form 2a, System Numbering: Extension Jacks:

1. In the Jack Type column, make sure there is a T next to the number for each tip/ring extension jack.
2. In the Person, Location, or Function column, write modem and then identify each modem data station by person, location, or function.

### **ISDN Terminal Adapter Data-Only Stations**

An ISDN terminal adapter data-only station consists of a PC or a data terminal connected to an ISDN terminal adapter. Each ISDN terminal adapter data station connects to a digital extension jack on a 008 MLX, 408 GS/LS-ID-MLX, or 016 MLX module.

#### **Planning Form Instructions**

Record the extension jack assignments for ISDN terminal adapter data stations on Form 2a, System Numbering: Extension Jacks:

1. In the Jack Type column, make sure there is a D next to the number for each digital extension jack.
2. In the Person, Location or Function column, write ISDN-TA and identify each ISDN terminal adapter data station by person, location, or function.
3. Fill in Form 2b with the extension number of the ISDN terminal adapter.

### **Local Host Computer Data Stations**

A local host computer data station consists of a local host computer, a data terminal for that computer, and one or more ISDN terminal adapters and/or modems.

Assign each ISDN terminal adapter used for access to a host computer to a digital extension jack on a 008 MLX, 408 GS/LS-ID-MLX, or 016 MLX module. Assign each modem to a tip/ring extension jack on a 016 (T/R) or 008 OPT module, or to a port programmed for tip/ring operation on a 016 ETR module.

If you have a limited number of ISDN terminal adapters or modems to share among many users, assign some or all of the modems or ISDN terminal adapters to a DHG. In this way, users can access all the devices in the DHG by dialing one extension number.

Users access the computer by placing a data call to the extension number for either an ISDN terminal adapter or modem (or DHG)—depending on the user's type of data station—that is assigned for communication with the local host computer.

### Planning Form Instructions

Record the extension jack assignments for local host computer access extensions on Form 2a, System Numbering: Extension Jacks.

**NOTE** ► Before you assign extension jacks for a local host computer, review the guidelines in [“Guidelines for Digital Extension Jacks,”](#) earlier in this section.

1. For each digital extension jack used to connect an ISDN terminal adapter:
  - a. In the Jack Type column, make sure there is a D next to the number for each digital extension.
  - b. In the Person Location, or Function column, write Terminal Adapter-host.
2. For each tip/ring extension jack you plan to use to connect a modem:
  - a. In the Jack Type column, make sure there is a B next to the number.
  - b. In the Person, Location or Function column, write modem-host.

### LAN Workstations

A Local Area Network (LAN) consists of workstations (PCs) connected together to share resources. The system connects to the LAN through a workstation that functions as a gateway, providing ports for modem and ISDN terminal adapter connections.

Assign each ISDN terminal adapter used for access to a LAN workstation to a digital jack on a 008 MLX, 408 GS/LS-ID-MLX, or 016 MLX module. Each modem must be connected to a tip/ring extension jack on a 016 (T/R) or 008 OPT module, or to a port programmed for tip/ring operation on a 016 ETR module.

If you have a limited number of ISDN terminal adapters or modems to share among many users, assign some or all of the modems or ISDN terminal adapters to a DHG. In this way, users can access all the devices in the DHG by dialing one extension number.

Users access the computer by placing a data call to the extension number for either an ISDN terminal adapter or modem (or DHG)—depending on the user’s type of data station—that is assigned for communication with the local host computer.

### **Planning Form Instructions**

Record the extension jack assignments for access to a workstation on a LAN on Form 2a, System Numbering: Extension Jacks.

1. For each digital extension jack used to connect an ISDN terminal adapter:
  - a. In the Jack Type column, make sure there is a D next to the number for each digital extension.
  - b. In the Person Location, or Function column, write Terminal Adapter-LAN.
2. For each tip/ring extension jack you plan to use to connect a modem:
  - a. In the Jack Type column, make sure there is a B next to the number for each tip/ring extension jack used to connect a modem.
  - b. In the Person, Location or Function column, write modem-LAN.

### **Video Systems**

Video systems may connect to an MLX port on the MERLIN MAGIX system either directly through a BRI interface, or by way of a v.35 interface and an ISDN terminal adapter.

Assign each video system that is connected directly to the MLX port, or connected to an ISDN terminal adapter that supports 2B Data, to one digital jack configured as a 2B Data port on a 008 MLX, 408 GS/LS-ID-MLX, or 016 MLX module.

Assign each video system that is connected to an MLX port by way of an ISDN terminal adapter that does not support 2B Data to two separate digital jacks configured as 1B Data ports on a 008 MLX, 408 GS/LS-ID-MLX, or 016 MLX module.

### **Planning Form Instructions**

Record the extension jack assignments for video systems on Form 2a, System Numbering: Extension Jacks.

1. In the Jack Type column, make sure there is a D next to the number for each digital extension.
2. In the Person, Location, or Function column, enter the type of equipment connected.

## Assigning Lines/Trunks to Data and Video Stations

The following types of outside lines/trunks are used to make and receive data calls to and from data stations outside of the system:

- **Loop-Start (LS).** This is the standard line/trunk for homes and small businesses, and can be used to communicate with outside modem data stations. Video calls are not made over loop-start lines/trunks. Loop-start lines/trunks are the least expensive lines/trunks in some areas but have the following disadvantages:
  - They do not protect against glare, a condition that occurs when an outside call is made at the same time that an incoming call arrives on the same line/trunk.
  - They may not provide reliable far-end disconnect for Toll Restriction.

### **SECURITY ALERT:**

*Toll fraud can occur when loop-start lines/trunks are used with unreliable disconnect. If the calling party stays on the line after the called party hangs up, the central office returns a dial tone at the conclusion of the call enabling the caller to place another call as if it were being placed from your company.*

- **Ground-Start (GS).** This line/trunk is preferred for communication with outside modem data stations. Ground-start lines/trunks provide improved signaling and reliable far-end disconnect for secure Toll Restriction. Video calls are not made over ground-start lines/trunks.

The following kinds of outside ground-start or loop-start lines/trunks can be used for data communications:

- Basic lines/trunks
- Wide area telecommunications service (WATS)
- 800 service (inbound WATS)
- Foreign exchange (FX)

Ground-start/loop-start lines/trunks connect to ground-start/loop-start jacks on the following types of modules in the control unit:

- 408 GS/LS-ID-MLX
- 412 LS-ID-TDL (loop-start lines/trunks only)
- 800 GS/LS-ID

- **Analog/Digital Tie.** This trunk type “ties” two telephone switching systems together, providing access to all telephones or data equipment on each system. Analog Tie trunks are used for data communication with modem data stations connected to a system at a different location, such as a different floor of a building, a different building, or a different city or state. Analog Tie trunks connect to a jack on a 400EM module in the control unit. Video calls are not made over analog Tie lines/trunks.

Digital Tie trunks are used for digital data communications, such as G4 fax and videoconferencing, with digital data/video stations connected to a system at a different location, such as a different floor of a building, a different building, or a different city or state.

Digital Tie trunks are emulated by T1 facilities connected to a 100D, 100R INA, or 100 DCD module in the control unit. Video and digital data calls may be made over digital Tie lines/trunks.

- **Direct Inward Dial (DID).** Incoming calls reach specific individuals or facilities in the system without the help of a system operator. DID trunks are available only in Hybrid/PBX mode. A DID trunk is used to receive incoming calls from outside modem data stations. It is not used for outgoing calls. A DID trunk connects to a jack on an 800 DID module in the control unit. Video calls are not made over DID lines/trunks.
- **Digital Signal 1 (DS1).** This facility carries digital signals in the DS1 format. A DS1 facility can be used for communication with outside digital or modem data stations, including video systems. A DS1 facility connects to the jack on a 100D, 100R INA, or 100 DCD module in the control unit. Even though there is only one physical jack, the 100D, 100R INA, or 100 DCD module supports up to 24 logical endpoints for voice and data calls; each DS0 channel in the DS1 signal corresponds to a trunk or logical ID.

A DS1 facility provides either T1 (including T1 Switched 56 for digital data/video calls) or PRI access:

- **T1** (factory setting). The 24 channels on a T1 facility can be programmed individually in any combination to emulate a loop-start, ground-start, E&M tie, DID, or Switched 56 digital data trunk, so a single 100D, 100R INA, or 100 DCD module can replace 24 outside lines/trunks. When T1 Switched 56 service is used, high-speed video connections at data rates of 56 kbps per channel (112 kbps for 2B Data) are possible.
- **PRI.** The standard format for ISDN services provided by connection to a 5ESS central office switch or a 4ESS or DEFINITY toll switch. PRI facilities provide several benefits, including increased speed of data calls to an outside destination, INFO-2 automatic call identification (ANI) service, dynamic B-channel assignment, improved Toll Restriction, reliable indication of far-end disconnect, and improved SMDR. Twenty-three channels can be programmed for individual services (Channel 24 is reserved for signaling purposes). PRI facilities may also be used for high-speed video calls at data rates of up to 64-kbps per B-channel (128 kbps total for 2B Data).

The 100D, 100R INA, or 100 DCD module supports any combination of the following AT&T Switched Network services:

- ACCUNET Switched Digital Service for 56 kbps and 64 kbps restricted and 64 kbps clear (unrestricted) circuit-switched data calls (PRI only)
  - ACCUNET Switched 56 Service for 56 kbps (restricted or unrestricted) data calls (T1 only)
  - Megacom 800 for incoming domestic toll free voice calls
  - Megacom WATS service for outgoing domestic long-distance voice calls
  - Software-Defined Network (SDN) for circuit-switched voice and data calls at up to 56 kbps
- These MCI services are also available:
    - MCI PRISM
    - MCI Vnet
    - MCI 800
    - MCI 900
  - These local exchange carrier services are also available:
    - DMS Private

- DMS INWATS
- DMS OUTWATS
- DMS FX
- DMS Tie Trunk
- **NI-1 BRI.** Basic Rate Interface (BRI) is a protocol within the ISDN standard that provides digital voice, data, and video connectivity. NI-1 BRI facilities connect to a jack on the 800 NI-BRI module, with each facility providing two B-channels per jack (total of 16 NI-1 BRI channels per 800 NI-BRI module). BRI facilities provide data rates of up to 64-kbps clear (unrestricted) circuit-switched data calls per B-channel (128 kbps total for 2B Data).

To assign lines/trunks to data stations, you decide on the types of line buttons that are assigned to the data communications equipment at each data station. The data stations are:

- MLX voice and modem data stations
- MLX voice and ISDN terminal adapter data stations, including telephones
- Modem data-only stations
- ISDN terminal adapter data-only stations
- Digital data/video stations

The system treats each data station as an extension with a 34-button telephone.

When you choose the mode of operation (Key, Behind Switch, or Hybrid/PBX), Intercom (ICOM) or System Access (SA) buttons are assigned automatically to every extension connected to the control unit. However, you can customize the system by changing the factory-set assignments and reassigning line buttons. The number and types of buttons assigned depends on the mode chosen and the type of extension jack you are using.

### Forms Needed

- Data Form 1a, Modem Data Stations
- Data Form 1b, Data Stations
- Form 4e, MFM Adjunct: MLX Telephone
- Form 5c, MFM Adjunct: DLC

### Planning Form Instructions

You should have already filled out preliminary information on Forms 4e and 5c when you planned voice communications. The lines/trunks for MLX telephones have already been assigned.

There are two different forms for data stations:

- Data Form 1a. Use this form for modem data-only stations and for modems used to communicate with the local host computer and to communicate with a workstation on a LAN.
- Data Form 1b. Use this form for ISDN terminal adapters and ISDN terminal adapter data stations used to communicate with the local host computer or with a workstation on a LAN.

Make enough copies of each data form so that you can complete one form for each data station. Do the following:

1. From Form 2a, System Numbering: Extension Jacks, obtain the identification information for each data station.
2. Record the information on the appropriate data form (2a or 2b) for each data station and for each modem and ISDN terminal adapter used to communicate with a local host computer or with a workstation on a LAN:
  - a. In the Logical ID space, write the logical ID for each extension.
  - b. In the Extension No. space, write the extension number for each extension.
  - c. In the Person or Location space, write the name of the person or the location of the data equipment.
  - d. Under the Data Station Use heading, indicate the purpose of the data station by checking one of the following boxes: Individual use, Local host computer, or LAN workstation.

## Assigning Line Buttons in Hybrid/PBX Mode

The line buttons you can assign to data stations are as follows:

- **System Access Ring (SA Ring).** Used to make and receive inside and outside data calls. To make outside calls, the user selects an outside line/trunk by dialing either the code for Automatic Route Selection (ARS) or the dial-out code for the trunk pool. Users at ISDN terminal adapter data stations and video endpoints can also dial the line/trunk number (801-880) to select an outside line/trunk.
- **Personal Line.** Used to make and receive outside data calls from a data station on a specific outside line/trunk. A Personal Line is an outside line/trunk assigned to a line button on one or more data or voice stations. The outside line/trunk cannot be a member of a pool.

To dedicate an outside line/trunk for data calls and have the calls automatically answered by data equipment, do not assign the same outside line/trunk to both data equipment and telephones because modems answer voice calls as data calls.

On ISDN terminal adapter data stations, a Personal Line can be used to make and receive outside data calls. To select the line/trunk for an outgoing call, the caller dials the line/trunk number (801–880). To allow the user at an ISDN terminal adapter data station access to the digital network for making and receiving calls to outside digital data stations, assign PRI, NI-1 BRI, or T1 Switched 56 (including T1-Tie lines using Switched 56 service) facilities as Personal Lines.

- **Pool.** Used when you want the voice and data station to make and receive outside data calls on a specific trunk pool (for example, a pool with PRI facilities) without dialing a dial-out code. The Pool button is used to make and receive only outside calls. Automatic Line Selection should be set to the Pool button in order to place calls on it.

- NOTES** ►
- Do not assign System Access Voice (SA Voice) buttons to data communications equipment.
  - You must use PRI facilities with a digital data service such as ACCUNET Switched Digital Service, a Software Defined Network (SDN), T1 Switched 56 facilities, or NI-1 BRI facilities for digital data calls.
  - T1 facilities that are not using Switched 56 service can be used for modem data and analog voice calls and can be assigned to telephones to allow the voice user to make and receive voice calls using these types of facilities.

The following line button assignments are factory set for Hybrid/PBX mode and are prerecorded on the Button Diagram on Data Forms 1a and 1b:

- One System Access Originate Only (SA Orig Only) button and two System Access Ring (SA Ring) buttons are assigned to all data equipment connected to a tip/ring port on a 016 (T/R) or 008 OPT module, or to a port programmed for tip/ring operation on a 016 ETR module.
- One System Access Originate Only (SA Orig Only) button, one System Access Ring (SA Ring) button, and a System Access Voice (SA Voice) button are assigned to all data equipment connected to a digital extension jack on a 008 MLX, 408 GS/LS-ID-MLX, or 016 MLX module. Remove the SA Voice button (see Form 5c, page 1).

The factory settings can be changed; however, the settings should be adequate to meet most user needs, since System Access lines can be used to make both inside and outside data calls. Each data extension must have at least one SA button, or two SA buttons for making 2B Data calls. If making 2B Data calls with two Personal Line buttons, you must also have two SA buttons.

If you want an ISDN terminal adapter data station to make and receive outside data calls on a specific outside line/trunk, assign a Personal Line button. To make calls on a Personal Line, set the Automatic Line Selection to that line.

### Assigning Pools and Lines/Trunks (Hybrid/PBX Mode Only)

If you want the voice and data station to make and receive outside calls on a specific trunk pool, assign a Pool button.

To dedicate a specific line/trunk or pool to receive outside data calls, assign a Personal Line or pool to a data station or DHG.

To dedicate specific lines/trunks for use in data communications only (such as PRI channels or other special data lines), consider grouping those lines/trunks in a pool.

If the system uses ARS, follow the instructions on ARS earlier in this book to specify routes for outgoing data calls.

To restrict non-data users from dial access to data trunk pools, use the “[Pool Dial-Out Code \(Hybrid/PBX Mode Only\)](#)” instructions later in this chapter.

### Forms Needed

- Form 2c, System Numbering: Line/Trunk Jacks
- Data Form 1a, Modem Data Station
- Data Form 1b, ISDN Terminal Adapter Data Station

### Planning Form Instructions

Record your decisions for each data station on the Hybrid/PBX Mode Button Diagram of Data Form 1a or 1b.

1. If you want to assign Personal Lines to the data station, write Personal Line and the telephone number (from Form 2c) of the outside line on the appropriate button. For ISDN terminal adapter data stations, include the line/trunk number.
2. If you want to assign a pool to the data station, write Pool and the pool's extension number (from Form 2c) on the appropriate button.

**NOTE** ► On modem data stations from which the user does not need to make inside calls, you can assign only Personal Lines or pools; when going off-hook, the user or equipment gets a telephone company line/trunk by Automatic Line Selection.

## Assigning Line Buttons in Key Mode

There are two kinds of line buttons you can assign to data stations used to make and receive data calls:

- **Intercom Ring.** Used to make and receive inside data calls only.
- **Outside Line/Trunk.** Used to make and receive outside data calls on a specific outside line/trunk. An outside line/trunk can be assigned to a line button on one or more data stations or voice extensions. To dedicate an outside line/trunk for data calls and have the calls automatically answered at a data station, do not assign the same outside line/trunk to data stations and to telephones, because modems answer voice calls as data calls.

For digital data stations, the outside line/trunk can be used to make and receive outside data calls. For an outgoing call, the user dials the line number (801-880) to select the line/trunk.

To allow the user at an ISDN terminal adapter data station access to the digital network for making and receiving calls to outside digital data stations, assign PRI facilities with digital data service such as ACCUNET Switched Digital Service and Software Defined Network (SDN), NI-1 BRI, or T1 Switched 56 facilities to ISDN terminal adapter data stations. If these facilities are not available,

the ISDN terminal adapter data station user can make calls over the regular analog telephone network only by using a digital-to-analog modem pool.

**NOTE** ► PRI and NI-1 BRI facilities are also used for analog data and voice calls and can be assigned to telephones to allow the voice user to make and receive voice calls using these types of facilities.

The following line button assignments are factory-set for Key mode and are prerecorded on the Button Diagram on Data Forms 1a and 1b. Two Intercom Ring (ICOM Ring) buttons are assigned to the following:

- Data equipment connected to a tip/ring port on a 016 (T/R) or 008 OPT module, or to a port programmed for tip/ring operation on a 016 ETR module.
- All equipment connected to a digital extension jack on a 008 MLX, 408 GS/LS-ID-MLX, or 016 MLX module.

The factory settings can be changed; however, at least one ICOM button must be assigned to each data station. To allow a user to make and receive outside data calls, you must assign an outside trunk to the data station.

To dedicate a specific line to receive outside data calls, assign an outside line/trunk to a data station, DHG, LAN workstation, or local host computer.

On a digital or analog data station, the user selects an outside line/trunk by dialing the Idle Line Preference code (usually 9) on an ICOM button. On an ISDN terminal adapter data station, the user can also select lines/trunks assigned to the extension by dialing the line number (801–880) assigned to that outside line/trunk.

It is extremely important that the factory-set Idle Line Preference (the line to which the user is connected automatically when going off-hook) not be changed. The user must be connected to an intercom line to activate features such as Privacy or to select an available outside line/trunk by dialing the Idle Line Preference code.

### **Planning Form Instructions**

Using Form 2c, System Numbering: Line/Trunk Jacks as reference, record your decisions for each data station on the Key mode Button Diagram of Data Form 1a or 1b. If you want to assign outside lines/trunks to the data station, write the telephone number (from Form 2c) of the outside line/trunk on the appropriate button. For ISDN terminal adapter data stations, include the line/trunk number.

---

## Assigning Features to Data Stations

Many of the features used for voice calls (as described earlier in this guide) can also be assigned to data stations. This section describes these features and how to assign them to each ISDN terminal adapter or modem data station. This includes: modem data stations with an MLX telephone using an MFM, ISDN terminal adapter data stations with a telephone, and modem and ISDN terminal adapter data-only stations (data stations with no telephone).

The following optional features can be assigned to data stations:

- **Account Code Entry.** This feature allows tracking of outgoing data calls for billing, forecasting, or budget reports.
- **Automatic Route Selection (Hybrid/PBX Mode Only).** This feature routes calls over outside lines/trunks according to the number dialed and the lines/trunks available. Therefore, the system can be programmed to select the least expensive route for each data call over either PRI, NI-1 BRI, or T1 Switched 56 facilities.
- **Calling Restrictions.** These features inhibit line access, and allow companies to control and manage communications costs for outgoing data calls.
- **Data Status.** This button allows monitoring of station activity (busy, not busy) at any data station. Although this feature is similar to having an Inside Auto Dial or Signaling button because it lights the green LED to indicate extension-busy status, pressing the button has no effect. It does not dial the data extension number. Thus, the button does not interfere with a data call in progress, unlike an Auto Dial button, which dials its programmed number.
- **Personal Lines.** This feature provides direct access from an ISDN terminal adapter data station to outside lines that support the PRI, NI-1 BRI, or T1 Switched 56 interface.
- **Idle Line Preference.** This feature automatically selects the first available line for data calls.
- **Personal Speed Dial.** These 2-digit numbers are programmed for quick dialing of frequently used numbers. The dialing sequence requires a dial-out code for outside calls.
- **Privacy.** This feature prevents loss of data by ensuring that data transmission is not interrupted accidentally. Privacy is automatic for data calls on ISDN terminal adapter data stations. Privacy is activated manually on modem data-only stations.
- **Redial.** This feature automatically places a call to the last number dialed from that data station. The dialing sequence must include dial-out code for outside calls.
- **System Speed Dial.** This feature allows quick dialing of numbers that are frequently used system-wide. The dialing sequence requires a dial-out code for outside calls. The System Speed Dial feature is programmed system-wide for both voice and data stations. Follow the instructions earlier in this book to assign System Speed Dial codes to data station users.

**NOTE** ► Certain system (voice) features interfere with data connections. The following system features must be disabled for the data station:

- Voice Announce
- Call Waiting
- Automatic Callback

For detailed information about these features, refer to the *Feature Reference*. For information on planning for features not described in this section, use the guidelines presented in the appropriate sections earlier in this guide.

### Forms Needed

- Data Form 1a, Modem Data Station
- Data Form 1b, ISDN Terminal Adapter Data Station
- Form 4e, MFM Adjunct: MLX Telephones
- Form 5c, MFM Adjunct: DLC

### Pool Dial-Out Code (Hybrid/PBX Mode Only)

Use these instructions only if the system is operating in Hybrid/PBX mode.

The factory setting is for all extensions, including data stations, to be restricted from using *all* dial-out access codes. You can unrestrict data stations to allow the user access to one or more trunk pools by dialing the pool dial-out code.

The dial-out code restriction places data calls only on specific trunk pools. For example, you may want to restrict users to trunk pools that are made up of special data lines such as PRI channels used for data services, or to reserve other trunk pools for voice communications only.

### Planning Form Instructions

Use the Optional Features section of Data Form 1a or 1b for each data extension to record your decisions:

1. In the Optional Features section, under the “Pool Dial-Out Code Restriction” heading:
  - Check Unrestricted from following codes and list the codes in the space provided for unrestricted use.
  - Check Restricted from following codes and list the codes in the spaces provided for restricted use. The factory setting is restricted for all codes.
2. Use Form 2c, System Numbering: Line/Trunk Jacks to locate the dial-out codes for each pool that the data station is restricted from using. Write the dial-out codes on the lines below the Yes box.

### Calling Restrictions

When the system is first set up, all data stations are restricted. This means that only inside (intercom) calls may be made, local and long-distance calls may not be placed from any data station. You can unrestrict selected data stations, however, to allow local and long-distance calls.

### Planning Form Instructions

Use the Optional Features section of Data Form 1a or 1b for each data station to record your decisions. Under the Call Restriction heading, do *one* of the following:

- If you do not want calling restrictions for this data station, check the Unrestricted box.
- If you want the data station restricted from making any outside calls, check the Outward Restrict box (factory setting).
- If you want the data station restricted from making long-distance calls (intercom and local calls can be made), check the Toll Restrict box.

### Forced Account Code Entry

The Forced Account Code Entry feature is used for billing or for tracking data calls by requiring data extension users to enter account codes (1 to 16 digits) for outside calls. Assign this feature to data stations so that you can associate outgoing data calls with specific client accounts.

**NOTE** ► Account codes cannot be used to track incoming calls to data stations.

### Planning Form Instructions

To record your decisions, use the Optional Features section of Data Form 1a or 1b for each data station. Under the Forced Account Code Entry heading, do *either* of the following:

- If the user must enter an account code for outgoing calls, check the Yes box.
- If you do not want the feature assigned to the data station, check the No box (the factory setting).

### ARS Facility Restriction Level (Hybrid/PBX Mode Only)

Use these instructions only if the system is operating in Hybrid/PBX mode.

If the system uses ARS for data calls, you can assign a Facility Restriction Level (FRL) to each data station. This value (0–6) corresponds to the FRL assigned to each route and is used to restrict data users from access to specific routes. Before restricting a data station, review the values assigned to each route.

To restrict a data station from specific routes, assign an FRL value lower than the route's lowest value. (Values equal to or greater than the route's values allow data extension users to access those routes.) A value of 0 is the most restrictive, and a value of 6 is the least restrictive. The factory setting is 3.

For example, to give a modem data station unlimited use of any ARS route, assign a value of 6. If you have ISDN terminal adapter data stations, assign a value of 0 to prevent users from inadvertently using ARS to select an analog line for outside data calls.

### Planning Form Instructions

1. Using Form 3f, Automatic Route Selection Tables, and Form 3g, Automatic Route Selection Default and Special Numbers Table, review the values assigned to the routes.
2. For each data station, to record your decisions about Facility Restriction Level, do *either* of the following in the Optional Features section of Data Form 1a or 1b:
  - Check 3 to keep the factory setting.
  - To change the setting, write the value (0–6) for the ARS Facility Restriction level you want to assign to each data station.

## System Speed Dial Codes

To avoid giving the telephone number of a remote computer to modem pool users, assign a System Speed Dial code to the telephone number. Users can dial this 3-digit code to place data calls to the remote computer.

For data calls, the telephone number programmed for a System Speed Dial code must include the access code (the dial-out code or the ARS dial-out code) if required.

To specify that the remote computer's telephone number does not appear on call reports, use the ["System Speed Dial"](#) instructions in Chapter 4 of this guide.

---

## Creating Data Hunt Groups

Use these instructions if the system has a group of modems or ISDN terminal adapters.

DHGs are data Calling Groups that provide uniform call distribution among a group of modems or a group of ISDN terminal adapters. DHGs support the following:

- Modem pools
- Dedicated lines for data service
- A local host computer
- A workstation that functions as a gateway on a LAN

For more information, see the ["Assigning Extension Jacks,"](#) earlier in this chapter.

## Guidelines

Use the following guidelines for the procedure in this section:

- Members of a DHG must be extension jacks of the same type: all tip/ring or all MLX.
- You can assign up to 32 DHGs or Calling Groups, or a combination of both types. Each DHG can have a maximum of 20 members and each data station can be a member of only one DHG.
- You can designate particular lines/trunks or pools (Hybrid/PBX mode only) to ring directly into a DHG. Incoming calls on a given line/trunk, however, can be directed to only one DHG.
- Extension numbers 770–791 and 7920–7929 are reserved automatically for Calling Groups and DHGs. If you want to change the extension numbers assigned to a DHG, see the information about reassigning extension numbers described in Chapter 2, “[Control Unit Configuration](#).” The same considerations apply to data stations and voice extensions.

## Forms Needed

- Form 2a, System Numbering: Extension Jacks
- Form 2c, System Numbering: Line/Trunk Jacks
- If the system includes voice Calling Groups, Form 7d, Group Calling
- If you plan to renumber the factory-set extensions, Form 2d, System Numbering: Special Renumbers

## Planning Form Instructions

Make enough copies of Data Form 2, Data Hunt Groups, for the number of data hunt groups you plan. For each DHG:

1. Write the group number (1–32) in the Group Number space.
2. Write the name of the group in the Group ID space.
3. Write the factory-set extension number for the DHG in the space provided.

**NOTE** ► Check all pages of Form 7d to be sure that you have not assigned the extension to a voice Calling Group.

4. If you want to reassign the factory-set extension number for the DHG, write the new number in the Renumber to space. Also, write the new extension number you want to reassign in the Calling Group or DHG on Form 2d, System Numbering: Special Renumber.
5. Under the Purpose of Group heading, indicate the group use: local host computer access workstation, LAN access, and so forth.
6. In the Stations area, write the extension number of each member of the group in the Ext. No. column and the name of the person or location in the Person or Location column.

7. In the Trunks or Pool area, for each line/trunk or pool that you want to ring directly into the DHG, write the line/trunk number or pool extension number next to the logical ID in the Trunk or Pool column. (See Form 2b for the line/trunk numbers and Form 2c for the pool extension number.)

---

## Digital Data/Video Stations

Use these instructions if the system has digital data/video endpoints.

**NOTE** ▶ See the Network Reference for information on digital data/video stations on a private network.

Digital data/video endpoints provide access to voice, as well as high speed digital data and video services over PRI, NI-1 BRI, or T1 Switched 56 facilities. Incoming data/video calls can be received using:

- Dial Plan Routing (PRI and T1 Switched 56 Data)
- Tie Line Routing (PRI and T1 Switched 56 Data)
- Personal Lines

Outgoing data/video calls can be placed using:

- Pool Access
- Automatic Route Selection (ARS)
- Personal Lines

For more information, see the [“Assigning Extension Jacks,”](#) earlier in this chapter.

### Forms Needed

- Form 2a, System Numbering: Extension Jacks
- Data Form 3, Digital Data/Video Stations

### Planning Form Instructions

Make enough copies of Data Form 3, Digital Data/Video Stations, for the number of digital data/video stations you plan. For each:

1. From Form 2a, System Numbering: Extension Jacks, obtain the identification information for each digital data/video station.
2. Record the information on Data Form 3, Digital Data/Video Stations.
  - a. In the Logical ID space, write the logical ID for each extension.
  - b. In the Extension No. space, write the extension number for each extension.

- c. In the Equipment, Person, Location space, write the type of data/video endpoint, and the name of the person or the location of the equipment.
3. In the Data/Video Type space, place a check mark in the 1B or 2B column to indicate whether this endpoint uses one or two B-channels.
4. In the Digital Facilities space, enter the method used to access incoming and outgoing facilities.
  - a. In the Digital Facilities In space, enter one of the following for incoming data/video calls:
    - If Personal Lines are used to receive data/video calls, enter the line/trunk number for each Personal Line. For example, 801/802.
    - If Dial Plan Routing is used to route incoming data/video calls (PRI and T1 Switched 56 facilities only), enter Dial Plan Routing.
    - If Tie Line Routing is used to route incoming data/video calls (PRI and T1 Switched 56 facilities only), enter Tie Line Routing.
  - b. In the Digital Facilities Out space, enter one of the following for outgoing data/video calls:
    - If Personal Lines are used to place outgoing data/video calls, enter the line/trunk number for each Personal Line—for example, 801/802.
    - If Pool Access is used to place outgoing data/video calls, enter the pool access number—for example, 890.
    - If Automatic Route Selection (ARS) is used to place outgoing data/video calls, enter the ARS access code. The ARS access code factory setting is 9.





## Contents

Overview . . . . .	6-1
Preparation. . . . .	6-1
Adding to the System. . . . .	6-2



---

## Overview

This chapter contains instructions for adding trunks, auxiliary equipment, or more telephones to an existing system. It includes the following:

- The actions that you must take to add to the system.
- The interrelated options or features that you should consider.
- The forms that must be revised or completed.

To modify the system, perform the following tasks:

1. Decide what to change and identify the programming needed.
2. Complete (or revise) the appropriate planning forms.
3. Program the modification using instructions in the *Feature Reference*.

**NOTE** ► If you need to modify a private network (such as adding a new switch to the network or modifying one or more switches in the network), see the *Network Reference* for information.

---

## Preparation

To prepare for modifying the system:

1. Collect the package of completed planning forms. Although you may need to revise only one or two forms, you should have all completed forms available for reference.
2. Review Chapter 1, “[Before You Begin](#),” for details on preparation for planning activities.
3. Before revising the forms, analyze and document the changes planned. For example:
  - If adding extensions to the system, revise the floor plan to show the location of the new telephones and the kind of equipment to be used.
  - If activating a feature such as System Speed Dial, survey employees to identify the numbers that should be programmed into the speed dial file.

4. Review security information in Appendix A, “Customer Support Information,” for details on how to minimize the risk of toll fraud.

---

## Adding to the System

Adding to the system is defined as increasing its capacity or capability. This increase may mean adding more or different kinds of lines/trunks, connecting auxiliary equipment, or installing more telephones, consoles, or T/R equipment.

### Forms Needed

- 1, System Planning
- 2a, System Numbering: Extension Jacks
- 2c, System Numbering: Line/Trunk Jacks

### Planning Form Instructions

1. Determine the specific type of line/trunk, auxiliary equipment, or telephones to be added. Then determine the type of line/trunk and/or extension module needed to support the additional equipment. Consider the following as you choose the modules:
  - DS1 connectivity configured for T1 operation provides 24 channels.
  - T1-Tie trunks may be configured to use Switched 56 service.
  - NI-1 BRI service provides 16 channels per 800 NI-BRI module.
  - If you are planning for Remote Access, at least one module with Touch-Tone receivers (TTRs) must be installed.
  - If you are connecting T/R equipment to the 016 ETR module, you must program the port for tip/ring operation.
2. On Form 1 (page 2), System Planning, review the completed Control Unit Diagram and determine whether the module type needed is present. Do one of the following:
  - If the module is not in the control unit, skip to Step 4.
  - If the module type needed is already in the control unit, proceed to Step 3.
3. Determine whether there are jacks available on the module for the new line/trunk, auxiliary equipment, or telephone by referring to Form 2a, System Numbering: Extension Jacks, or Form 2c, System Numbering: Line/Trunk Jacks.  
Do either of the following:
  - If there are sufficient jacks available on an existing module, plan to connect the added line/trunk, auxiliary equipment, or telephone to them. Skip to Step 6.
  - If no jacks are available, proceed to Step 4.
4. Plan the placement of the new module required to support the line/trunk, auxiliary equipment, or telephone by reviewing the guidelines that follow and deciding where the new module should be placed.

- The power supply module must be placed in the far left slot of each carrier.
  - The processor module must be installed in Slot 0 of the basic carrier.
  - Line/trunk and/or extension modules can be placed in any order in Slots 1 through 17 (with two expansion carriers), with the following conditions:
    - Install the modules in each carrier from left to right, with no empty slots between modules.
    - If the system includes a QCC, the 024 TDL, 412 LS-ID-TDL, 008 MLX, 408 GS/LS-ID-MLX, or 016 MLX module that supports the QCC must be the first extension module in the control unit.
5. Do *either* of the following:

**NOTE** ► Placing additional modules in the control unit requires a recalculation of unit loads. See Appendix F, “Unit Load Calculation.”

- If the control unit has an available slot to the right, and the guidelines permit placement there, proceed to Step 6.
  - If you must rearrange existing modules to accommodate the new one, skip to Step 7.
6. Revise or complete the required planning form or forms according to the directions shown in Table 6-1, Table 6-2, and Table 6-3.
7. If you rearrange modules in the control unit, the numbering plan reverts to the factory-set 2-digit plan. You must then reprogram the system:
- a. Obtain a blank set of planning forms; copy them from Appendix B of this book or order them separately.
  - b. Locate the Equipment List (if available), the local telephone company line/trunk information list, the floor plan, and the Employee Communication Survey forms. If any of these materials has been revised, find both the original and revised versions.
  - c. Work through *System Planning*, beginning with Chapter 2, “Control Unit Configuration.”
  - d. When you have completed modifying existing forms or completing new forms, program the modification or modifications, following the instructions in the *Feature Reference*.

**Table 6-1. Adding New Trunks**

If Adding...	Complete these Forms...
Loop-start or Ground-start Trunks	All columns of Form 2c, System Numbering: Line/Trunk Jacks
DS1 Trunks	All Columns of Form 2c, System Numbering: Line/Trunk Jacks and Form 3b, Incoming Trunks: DS1 Connectivity (100D, 100R INA, or 100 DCD Module)
NI-1 BRI Trunks	All Columns of Form 2c, System Numbering: Line/Trunk Jacks and Form 3i, Incoming Trunks: BRI Options (800 NI-BRI Module)
Tie Trunks	All columns of Form 2c, System Numbering: Line/Trunk Jacks and Form 3c, Incoming Trunks: Tie
DID Facilities	<p>All columns of Form 2c, System Numbering: Line/Trunk Jacks and Form 3d, Incoming Trunks: DID</p> <p>Consider revisions to Form 3a, Incoming Trunks: Remote Access</p> <p>Consider revisions to Form 2c, System Numbering: Line/Trunk Jacks (labels) and Forms 3e through 3g for ARS</p> <p>Button Diagram on copies of Forms 4a through 4f, and 5a through 5d</p> <p>If a Personal Line is assigned, consider Remote Call Forwarding</p>

**Table 6-2. Adding Auxiliary Equipment**

If Adding...	Complete these Forms...
Maintenance Alarm, Music-On-Hold, Loudspeaker Paging	Form 2c, System Numbering: Line/Trunk Jacks

**Table 6-3. Adding New Extensions**

<b>If Adding...</b>	<b>Complete these Forms...</b>
New Extensions	All columns of Form 2a, System Numbering: Extension Jacks
	Copy of appropriate telephone/operator Forms 4c through 4o, and 5b through 5d
	Consider revisions to: Group Assigned Features (Forms 7a through 7d) Allowed and Disallowed List assignments (Forms 6e and 6f) Night Service assignments (Forms 9a through 9c) Extension Labels (Form 2a)
Operator console	Consider revisions to: Optional Operator Features (Form 6a) Extension Status assignment (Form 8a)



---

## Contents

Upgrading from MERLIN MAGIX Release 2.0 or Earlier .....	7-1
Upgrading from a MERLIN LEGEND System .....	7-3
■ Installing and Removing the Plastic Shell .....	7-5
Installing the Plastic Shell .....	7-5
Removing the Plastic Shell .....	7-7
■ Preparing the MERLIN LEGEND System .....	7-7
■ Upgrading to the MERLIN MAGIX System .....	7-9
PCMCIA Upgrade Card .....	7-13
■ Upgrading the System Software .....	7-13
■ Upgrading Module Firmware .....	7-14
Automatic Conversion of Backup Files .....	7-15
Flow Control .....	7-16



You can upgrade to the Release 2.1 of the MERLIN MAGIX Integrated System from either a MERLIN MAGIX Release 2.0 or earlier system or a MERLIN LEGEND Communications System. Many of the modules used in the MERLIN LEGEND system are supported in the MERLIN MAGIX system. Also, you can encase all but one of the modules introduced in the MERLIN MAGIX system in a plastic shell and use them in a MERLIN LEGEND plastic carrier after you upgrade system software. The 100R INA module is the one module that must be used in a metal carrier.

**NOTE** ▶ Upgrading from a MERLIN LEGEND system to a MERLIN MAGIX system is very similar to upgrading to a Release 2.1 MERLIN MAGIX system. Any differences between the two upgrades are noted in [“Upgrading from a MERLIN LEGEND System”](#) on page 7-3.

---

## Upgrading from MERLIN MAGIX Release 2.0 or Earlier

You can upgrade from a Release 2.0 or earlier MERLIN MAGIX system by using the PCMCIA upgrade card for Release 2.1. See [“PCMCIA Upgrade Card”](#) on page 7-13. With MERLIN MAGIX Release 2.1 you receive the following feature enhancements:

- Several features added and/or enhanced to compliment the MERLIN MAGIX Release 2.1 CRM (Customer Relationship Management) solution:
  - **Calling group agent in multiple calling groups.** A calling group agent can be a member of more than one calling group.
  - **Selective login.** A calling group agent can selectively log into individual calling groups or can log into all calling groups to which the agent has been assigned as a member.
  - **Selective logout.** A calling group agent can selectively log out of individual calling groups or can log out of all calling groups.
  - **Auxiliary Work Time.** When a calling group agent activates the Auxiliary Work Time feature, the calling group agent is unavailable to receive calling group calls. When the calling group agent activates or deactivates Auxiliary Work Time, the MERLIN MAGIX system maintains the agent’s logged in or logged out status for calling groups.

- **Selective Supervisor mode.** The new Selective Supervisor mode allows a calling group supervisor to see the login/logout status for all assigned group members and delay announcement units (DAUs) assigned to the calling group. The calling group supervisor can see which extensions that have selective logged into an individual calling group. In this mode, the supervisor can log in or log out any extension assigned the group.
- **Enhanced TSAPI events and services.** The MERLIN MAGIX system and the MERLIN MAGIX PBX Driver are enhanced to provide services providing more information about calling groups and extensions. This allows CRM applications to automatically configure their database with the support and overflow groups for an individual calling group. The application can also query the state of Do Not Disturb and Message Waiting lights at an extension allowing for a more accurate MERLIN MAGIX system view when the application is initiated. The restrictions that prevent the Deflect Call Service are removed.
- Enhancements to address field-related issues:
  - **Caller ID display enhancement.** For customers who do not subscribe to Caller ID service or who do not have loop-start lines connected to modules that support caller ID service (800 GS/LS-ID, 408 GS/LS-ID-MLX, or 412 LS-ID-TDL modules), only the programmed label for the line appears on display telephones when a call is received on the line. The No Caller ID label does not appear on display telephones as on previous releases. This enhancement is system wide and requires no system programming.
  - **100D/CSU/DSU maintenance enhancements.** The Data BERT tests for the 100DCD module are moved in the maintenance hierarchy to the same level as other data tests (for example, the Data Terminal test). When the system technician is not required to busy out the 100DCD module when running the data BERT test. The system technician can also select the direction of the test (either looped back to the MERLIN MAGIX system or going out to the network). Since 100DCD module does not provide LEDs for the Data Terminal Ready, Clear To Send, Request to Send, or Transmit and Receive data leads, new maintenance screen is available to help to diagnose problems. The new maintenance screen provides the on or off status for Data Terminal Ready, Clear to Send and Request to Send. The new maintenance screen also provides an indication of the speed of the data that is being transmitted.
  - **Conversion for previous releases.** Support for the conversion feature that allows a user to take a backed-up configuration of an earlier release of a MERLIN LEGEND system or MERLIN MAGIX system and have the file automatically mapped into a version that the new release can use. This functionality is provided as part of the WinSPM software. The user can select a backup file, select the desired product to CONVERT TO, and then select the Release number of that product. The user is prompted for all these inputs; choices for upgrades are based on the version of the backup file chosen to convert. In Release 2.1 of the MERLIN MAGIX system, there is an upgrade path from prior releases of MERLIN MAGIX and MERLIN LEGEND systems to MERLIN MAGIX Release 2.1.
  - **WinSPM Release 6.** New with the introduction of Release 6.0 for WinSPM is compatibility with Windows 2000 and, as well as a new telephone set label-making application. WinSPM Release 6.0 replaces WinSPM R5.0 for programming the MERLIN MAGIX systems. WinSPM R6.0 must be used to upgrade from a MERLIN MAGIX R1-R1.5/R2.0 to R2.1 system and to upgrade from a MERLIN LEGEND system to a MERLIN MAGIX R2.1 system. WinSPM R6.0 has been enhanced to automatically drop the programmer into Standard SPM programming mode, if upgrading from a MERLIN LEGEND system to a MERLIN MAGIX system with supported modules that are not recognized. See the Upgrade Information section of this Offer Announcement for specific information regarding supported and non-supported MERLIN LEGEND system modules.

## Upgrading from a MERLIN LEGEND System

Many customers want to use the capabilities of a MERLIN MAGIX system (especially the 100R INA module) without overhauling their entire MERLIN LEGEND system. To accomplish this, you can encase the modules introduced in the MERLIN MAGIX system in a plastic shell and place them into the MERLIN LEGEND plastic carrier (see instructions [“Installing and Removing the Plastic Shell”](#) on page 7-5). You also can add a metal expansion carrier to any MERLIN LEGEND system that has one or two plastic carriers and place modules into the metal carrier. (Three carriers is the maximum for the system.)

- NOTES** ▶
- You cannot add plastic expansion carriers to the end of a metal carrier.
  - The 100R INA module is supported only in the metal carrier.
  - Version 2.0 of the 100R INA module is required. All 100R INA modules manufactured beginning in May 2000 are Version 2.0.
  - The 100R INA module must be in the first slot of the metal expansion carrier. Any empty slot/s in the preceding plastic carrier are programmed as Bridge modules (see Step 5 on page 7-13 in the [“Upgrading to the MERLIN MAGIX System”](#) procedure for instructions)
  - For 100R INA modules earlier than Version 2.0, there can be no more than one empty slot in the preceding plastic carrier. Add more modules to fill the empty slots or upgrade the entire system to a metal carrier system.

You can place the following modules into a plastic or metal carrier:

- 100 DCD
- 100 DS1
- 400 E&M
- 408 GS/LS-ID-MLX
- 412 LS-ID-TDL module
- 800 DID
- 800 LS-ID
- 800 NI-BRI
- 008 MLX
- 008 OPT
- 016 ETR
- 016 MLX
- 016 T/R
- 024 TDL module
- MERLIN Messaging System

The following modules cannot be placed into a metal carrier but are supported by the Release 1.5 software:

- 400 GS/LS/TTR
- 408 GS/LS-MLX
- 800 LS
- 800 GS/LS
- 800 GS/LS-ID
- 008 OPT with ring generator
- 012 T/R with ring generator
- 012 T/R without ring generator
- MERLIN LEGEND Mail<sup>®</sup>

The software for Release 1.5 of the MERLIN MAGIX system introduces a new phantom module called the Bridge module. This module does not physically exist and has no lines or extensions. It serves to fill up the one empty slot at the end of the plastic carrier before the metal expansion carrier when a 100R INA module is installed (see Step 5 on page 7-13 in the [“Upgrading to the MERLIN MAGIX System”](#) procedure for instructions).

The following sections explain the upgrade process in full detail.

**NOTE** ► The MERLIN LEGEND system must have a CKE4 or CKE5 processor module.

## Installing and Removing the Plastic Shell


You can add or remove a plastic shell to or from modules, depending on whether you are going to use them in a plastic carrier (with shell) or a metal carrier (without shell).

**NOTE** ► The 100R INA module cannot be encased in a plastic shell.

### Installing the Plastic Shell

Follow these steps to enclose a module with a plastic shell so that the module can be used in a plastic carrier (see Figure 7-1):


1. Insert the two alignment tabs on the left housing through the two circuit board slots behind the module faceplate.
2. Rotate the module into position so that it aligns correctly on the five pins in the left housing.
3. Insert the two alignment tabs on the right housing behind the faceplate (see Figure 7-2).
4. Rotate the right housing into position so that the five snaps lock into position.

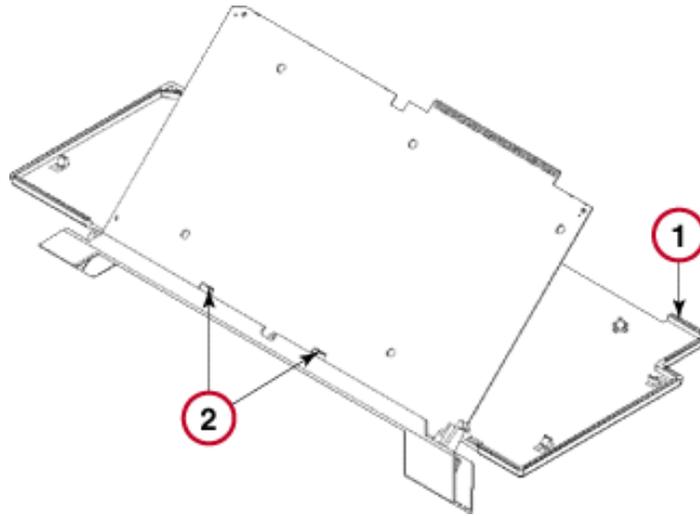

---

**Figure 7-1. Inserting the Module into the Left Housing**

- 1 Left Housing
- 2 Alignment Tabs

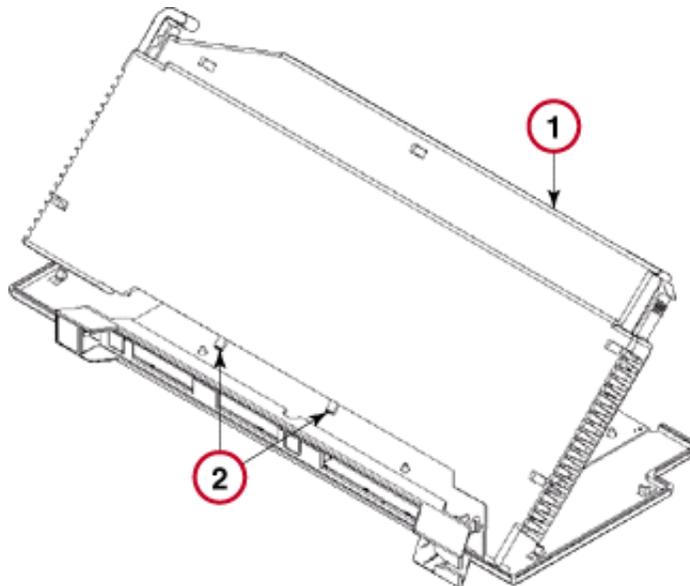

---

**Figure 7-2. Attaching the Right Housing**

- 1 Right Housing
- 2 Alignment Tabs

## Removing the Plastic Shell

Follow these steps to remove the plastic shell from a module:

1. Use a flat-bladed screwdriver to pry apart the five snaps.
2. Separate the left and right housings from the module.

## Preparing the MERLIN LEGEND System

All domestic versions of the MERLIN LEGEND Communications System that have a CKE4 or CKE5 processor module, except MERLIN LEGEND R2B systems, can be upgraded to the latest release of MERLIN MAGIX.

**NOTE** ▶ Release 2B was primarily sold to Government Solution customers.

The MERLIN LEGEND system carriers must have either a 391A3 or 391C1 power supply before upgrading to a MERLIN MAGIX system. Also be sure that each carrier's power supply supports the amount of new stations and/or modules you may be adding.

### CAUTION:

*If you are reusing 012 Tip/Ring modules without a ring generator, make sure the ring generator is removed from the old power supply and added to the new power supply, if you are replacing the power supply. Refer to "Replacing the Ring Generator (Plastic Carrier)" in Chapter 4 of Maintenance and Troubleshooting for instructions.*

Following are the maximum unit loads for each of the MERLIN power supplies:

- 391C1 and 491D1—96 Unit Loads
- 391A3—75 Unit Loads
- 391A1 and 319A2—54 Unit Loads

Use the following to determine which power supply is already installed in a plastic carrier:

- The 391A1 and 319A2 Power Supplies' power switch toggles up and down. The modules have a gray jack between the power switch and the power LED.
- The 391A3 Power Supply does not have a gray jack between the power switch and the power LED, but the power switch still toggles up and down.
- The 391C1 Power Supply also does not have a gray jack between the power switch and the power LED, but its power switch toggles left to right.

### CAUTION:

*The 491D1 Power Supply is the only power supply that can be installed in a metal carrier.*

Follow these steps to prepare the MERLIN LEGEND system for upgrading to the MERLIN MAGIX Release 1.5 system:

1. Remove any of the unsupported modules shown in Table 7-1:

**Table 7-1. Unsupported Modules from MERLIN LEGEND Communications System**

Module Description	Apparatus Code	COMCODE
4 Loop-Start lines	517A2	103983490
	517B2	105351084
4 Loop-Start lines w/ 4TTRs	517B12	105408892
8 analog multiline telephone extensions	517A3	103983508
	517B3	105351092
4 Loop-Start lines and 8 analog multiline telephone extensions	517A1	103983482
	517B1	105351076
	517C1	105512495
	517D1	106397516
4 Loop-Start/Ground-Start lines and 8 analog multiline telephone extensions	517A26	106064678
	517B26	106939366
	517C26	107044877
	517D26	107091407
8 CO-BRI—sold primarily to Government Solutions customers	517A32	107025793

1. If you are adding a 100R INA module while upgrading a MERLIN LEGEND system to a MERLIN MAGIX system, a metal expansion carrier and a Version 2.0 of the 100R INA module are required. All 100R INA modules manufactured beginning in May 2000 are Version 2.0. The 100R INA module must be in the first slot of the metal expansion carrier. Any empty slot/s in the preceding plastic carrier are programmed as Bridge modules (see Step 5 on page 7-13 in the “Upgrading to the MERLIN MAGIX System” procedure for instructions).

**NOTE** ► If you are adding a 100R INA module earlier than Version 2.0 (requires a metal carrier), *only one empty slot is allowed before the 100R INA module*, otherwise no empty slots are allowed. The one empty slot is programmed as a Bridge module. Add more modules to fill the empty slots or upgrade the entire system to a metal carrier system.

2. Do a board renumber each time you remove or move a module.
3. Relabel extensions.
4. Back up the system onto a floppy disk or a PC (not onto the PCMCIA card).

## Upgrading to the MERLIN MAGIX System

Upgrading to the MERLIN MAGIX system from a MERLIN LEGEND system involves the following:

- Converting and restoring the backup file
- Programming for Bridge modules
- Attaching the metal carrier as necessary
- Adding the MERLIN MAGIX modules
- Performing a board renumbering

- NOTES** ►
- You can upgrade from a MERLIN LEGEND system to a MERLIN MAGIX system without installing a metal carrier. However, the 100R INA module only fits into a metal carrier.
    - *Only one empty slot is allowed* in the plastic carrier to the left of the 100R INA module; otherwise no empty slots are allowed.
    - You cannot add plastic expansion carriers to the end of a metal carrier.

Follow these steps to upgrade to the MERLIN MAGIX system:

1. Back up the system programming.

This step creates a file containing system programming information. Be sure to use the most current release of WinSPM to back-up the system when upgrading to the latest release of MERLIN MAGIX, because only the latest release of WinSPM has the convert files. If you do not have the correct release of WinSPM, install it now and then continue.

When using WinSPM, you may see the message `WinSPM cannot recognize the circuit pack in slot #`. This indicates one of the following:

- You must remove unsupported modules before Quick Access will be available. Be sure to remove all non-supported modules before beginning the upgrade. Refer to Table 7-1 on page 7-8 for a list of unsupported modules.
- One of the following supported MERLIN LEGEND modules is installed. However, if you are using WinSPM R5, the Standard SPM mode is automatically selected so you can continue to upgrade a system with the modules listed in Table 7-2 installed.

**NOTE** ► These modules are unlike the modules listed above, because these modules *still work* in a plastic carrier that has been upgraded to the latest release of MERLIN MAGIX.

**Table 7-2. Supported MERLIN LEGEND Modules That Cause WinSPM Error Message**

Module Description	Apparatus Code	COMCODE
4 Loop-Start/Ground-Start lines and 8 MLX extensions (Not Caller ID compatible)	517A29	106698590
8 Loop-Start lines	517A4	103983516
	517B4	105351100
4 Loop-Start/Ground-Start lines w/ 4TTRs	517A18	105627988
	517B18	105628044
	517C18	107044869
	517D18	107091399
8 Loop-Start/Ground-Start lines (Not Caller ID compatible)	517A19	105627996
	517B19	105628069
	517C19	107091381
DS1 (Non-upgradeable)	517A15, 517B15	105486260
	517C15	105512438
	517E15	107533853
8 MLX extensions (Non-upgradeable)	517A21	105628010, 106215155
	517B21	107798183
	517B21B	108406547


- Using WinSPM, convert the MERLIN LEGEND backup file to the latest release of the MERLIN MAGIX system. (See [“Automatic Conversion of Backup Files”](#) on page 7-15.).

**CAUTION:**

*A new file name must be created for the converted file.*


- Do one of the following:
  - Only a CKE4 and CKE5 processor module can be upgraded to the latest release of the MERLIN MAGIX system. If the customer has an earlier version of the processor module, install a new metal control unit and processor module with the latest release of software already loaded. See Chapter 2, “Installing the Control Unit” in the *Installation Guide* for complete instructions. After the new processor module is installed, download the new converted file into the system.
  - If you are adding a 100R INA module that only fits in a metal carrier, attach a MERLIN MAGIX metal expansion carrier to the right of the existing MERLIN LEGEND carrier(s). (See “Mounting the Carrier and Expansion Carriers” on page 2-24 of the *Installation Guide*.)

- If you are using mounting brackets to mount the expansion carrier, see Figure 7-3.
- If you are not using mounting brackets to mount the expansion carrier, see Figure 7-4 for the correct positioning of the mounting screws.

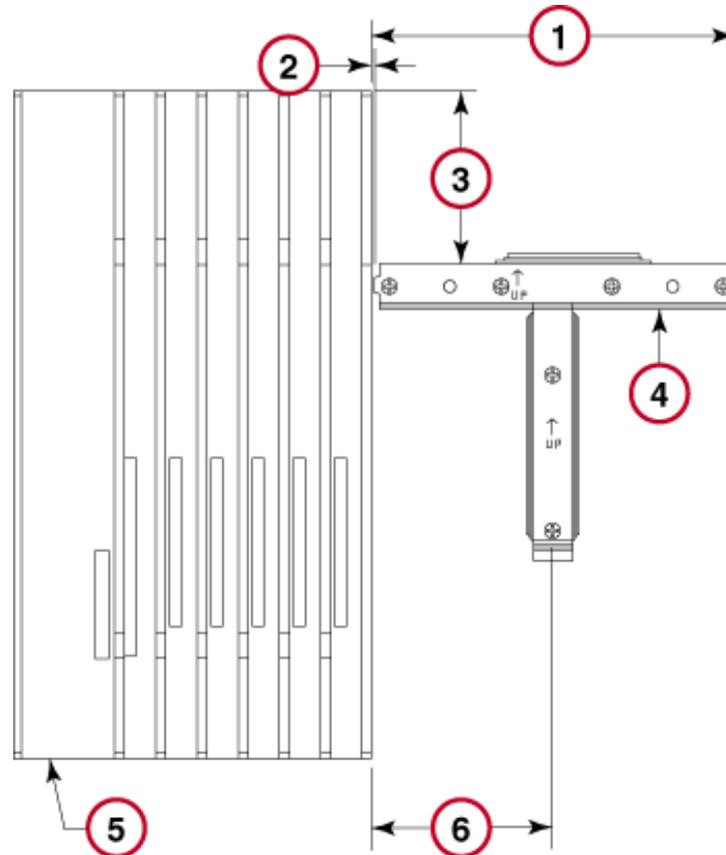

**Figure 7-3. Using a Mounting Bracket**

- |   |  |
|---|--|
| 1 | 11.472"                                      |
| 2 | .097"  |
| 3 | 5.480"                                       |
| 4 | MERLIN MAGIX metal carrier mounting brackets |
| 5 | MERLIN LEGEND plastic carrier                |
| 6 | 5.673"                                       |

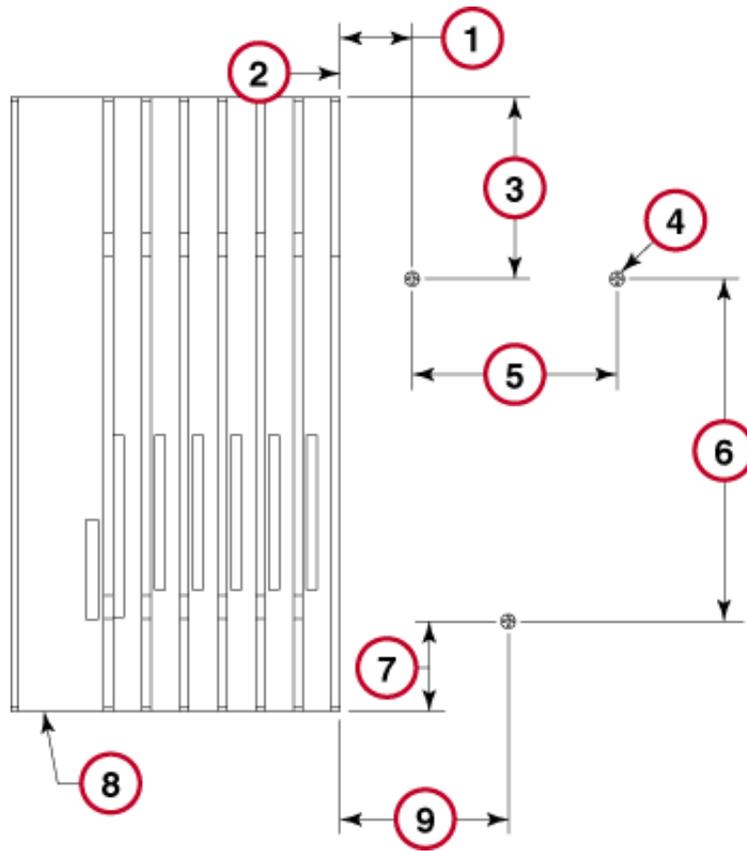

**Figure 7-4. Positioning Mounting Screws**

- 1 2.454"
- 2 .097"
- 3 6.130"
- 4 MERLIN MAGIX metal carrier mounting screw locations
- 5 7.000"
- 6 11.750"
- 7 3.102"
- 8 MERLIN LEGEND plastic carrier
- 9 5.704"

4. For customers who already have installed a CKE4 or CKE5 processor module, upgrade the software after the convert is completed. Insert the Upgrade Card into the CKE4 or CKE5 processor module's PCMCIA slot. (See ["Upgrading the System Software"](#) on page 7-13.)

5. As necessary, add a Bridge module to fill up the single empty slot at the end of the last plastic carrier before the metal carrier. To add a Bridge module, select "Bridge" from the Boards screen in System Programming. (Bridge module programming is available in Release 1.5 or later of the MERLIN MAGIX system.)

**NOTE** ► You can program a Bridge module only from a PC running WinSPM.

6. If you are adding a 100R INA module, place it in the first slot of the metal carrier.
7. Add any other modules you want to the metal carrier.
8. Power up the system.
9. Perform a board renumber.
10. If you have added a MERLIN Messaging System Release 2.0 or later module to the metal carrier, you must program for it in one of the two following ways:
  - If you have chosen to use the existing Voice Mail Calling Group, add the extension numbers assigned to the MERLIN Messaging ports to this calling group. Also, add the line numbers that go to this calling group. As needed, enable rotary dialing.
  - Run the automatic configuration for Release 2.0 or later of the MERLIN Messaging System. (See the Automatic Configuration of the MERLIN Messaging System feature in *Feature Reference*.) As necessary, program the restriction for outcalling, and program the lines that are to ring in the Voice Mail Calling Group.

---

## PCMCIA Upgrade Card

You can use the PCMCIA Upgrade card provided in Release 2.1 of the MERLIN MAGIX system to do one of two things: upgrade the system software to Release 2.1 or upgrade only the firmware on modules. If you choose to upgrade only the firmware on the modules, you leave the system software unchanged.

**NOTE** ► You must be running WinSPM Release 4.0 or later on a PC to upgrade the system.

## Upgrading the System Software

Follow these steps to upgrade the system software to Release 2.1 of the MERLIN MAGIX system:

1. Back up system programming. See "Backup" in the *Maintenance and Troubleshooting Guide*.
2. Insert the Upgrade card into the PCMCIA slot on the processor module.
3. Follow this system programming path: *Maintenance*→*System*→*Upgrade*.

The screen shows `Validation of MemoryCard in Progress` and then `Validation of MemoryCard Successfully Completed`.

4. Select `Exit`.

The next screen shows each release name and `Incompatible releases`.

5. Press `F10` twice or press the bottom right-hand button next to the display if you are using the 4424LD+ or MLX 20L telephone for programming.
6. Answer "Yes" to the next screen and the system continues with the upgrade.
7. After the system goes through a cold start, *restore* the converted backup file and set the system date and time.
8. After the system cold-starts, make some test calls to ensure that all types of calls can be made.
9. Back up the customer's translations by using a PCMCIA Backup and Restore Card, floppy disk (PC), or hard drive (PC).

## Upgrading Module Firmware

Follow these steps to upgrade module firmware without changing system programming:

1. Insert the Upgrade card into the PCMCIA slot on the processor module.
2. Follow this system programming path: `Menu`→`Maintenance`→`Slot`.
3. Enter the slot number of the module that needs a firmware upgrade. (You can upgrade only one module at a time.)
4. Select `Busyout`.
5. Answer "Yes" to `Do you want to continue?`
6. When you see `Busy-Out Complete` on the screen, select `Exit`.
7. Select `Upgrade` from the Maintenance Menu.

`Validation of MemoryCard in Progress` appears on the screen followed by `Validation of MemoryCard Successfully Completed`.

8. Select `Exit`.
9. The current module and version appears on the screen, followed by `Select one:` and the available versions for upgrading this module.
10. Select the version desired (you may only have one choice).
11. Press `Enter`, and select `Yes` when `Do you want to continue?` appears.
12. `In Progress` and the percentage completed appear as the upgrade is loaded.
13. When the upgrade is complete, the following appears:

If the upgrade was successful:

```
Upgrade Successfully Completed.  
Slot Busied Out.  
Slot Restore Needed.
```

If the upgrade was not successful (for example, you chose the wrong firmware for the module):

```
Upgrade Slot nn:
Board Memory Programming
Failure.
Upgrade CANCELLED.
Upgrade INCOMPLETE.
```

14. If the upgrade failed in Step 13, re-attempt the upgrade and choose the correct firmware. The upgrade will fail again, staying at 00% completed, and you will see the following error screen:

```
Upgrade Slot nn:
Memory on module will
not erase.
Upgrade CANCELLED.
Upgrade INCOMPLETE.
```

Repeat the upgrade again with the correct firmware and the upgrade will succeed.

15. When finished, select `Exit`.
16. Select `Restore` from the Maintenance Menu.
17. Select `Yes` when `Do you want to continue?` appears.
18. Repeat Steps 2 through 16 for each module to be upgraded.

When the upgrades are completed, verify the application version of each module by selecting its slot under `Maintenance`→`System`→`Inventory`.

---

## Automatic Conversion of Backup Files

WinSPM 4.0 or later contains a new upgrade feature that automatically converts previous releases of the MERLIN MAGIX and MERLIN LEGEND systems to later releases, including Release 2.1 of the MERLIN MAGIX system. With WinSPM 4.0 and earlier, you can take a backup file of an earlier release of a system and have the file automatically mapped into a version that a later release can use. The automatic conversion runs in the DOS Emulator portion of WinSPM 4.0.

**NOTE** ▶ Releases 1.4i and BRI of the MERLIN LEGEND Communications System cannot be upgraded.

To use this automatic conversion, you must have a PC loaded with WinSPM 4.0 or later connected to the System Administration port on the processor module; you cannot convert by using the 4424LD+ or MLX-20L system programming console.

**NOTE** ▶ If you are upgrading from a MERLIN LEGEND system to a MERLIN MAGIX system and the MERLIN LEGEND configuration contains modules that are not supported in the MERLIN MAGIX system (such as analog multiline telephone modules), the conversion is blocked. You can remove the unsupported modules, perform a system renumbering, and start the conversion again; or you can program the MERLIN MAGIX system from scratch.

Follow these steps to automatically convert the backup file of a previous release to Release 2.1 or later of the MERLIN MAGIX system:

1. Type A +U to start the conversion function from the SPM Main Menu.
2. Select the backup file to convert from (either on a floppy disk or on the PC's hard drive).
3. Select the system to convert to (MERLIN MAGIX).
4. Select the release to convert to.
5. Select a filename to convert to, or create a new file to convert to (either on a floppy disk or on the PC's hard drive).

On the hard drive, the file is placed in the BACKUP directory under the SPM directory. On the floppy disk, the file is placed in whatever directory is currently being used.

**NOTE** ► Once the conversion process starts, you cannot stop it until it finishes.

6. After the new processor module (CKE4 or CKE5) is installed as necessary or the system software has been upgraded, start the Restore procedure and select the file you converted to.

As you follow the procedure, WinSPM prompts you for the necessary entries, such as "Please select file name to convert to, or select NEW FILE to create a new file on selected drive."

---

## Flow Control

WinSPM provides flow control for the system programming serial port. Flow control prevents buffer overflow between WinSPM Release 4.0 or later and the MERLIN MAGIX Release 1.5 or later system. WinSPM automatically engages or disengages flow control as needed.

# Customer Support Information



---

## Support Telephone Number

**In the USA only**, Avaya provides a toll-tree customer Helpline (1 800 628-2888) 24 hours a day. If you need assistance when installing, programming, or using your system, call the Helpline or your Avaya representative. Consultation charges may apply.

**Outside the USA**, if you need assistance when installing, programming, or using your system, contact your Avaya representative.

---

## Federal Communications Commission (FCC) Electromagnetic Interference Information

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his or her own expense.

## Canadian Department of Communications (DOC)

### Interference Information

This digital apparatus does not exceed the Class A limits for radio noise emissions set out in the radio interference regulations of the Canadian Department of Communications.

Le Présent Appareil Numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le règlement sur le brouillage radioélectrique edicté par le ministère des Communications du Canada.

---

### FCC Notification and Repair Information

This equipment is registered with the FCC in accordance with Part 68 of its rules. In compliance with those rules, you are advised of the following:

- **Means of Connection.** Connection of this equipment to the telephone network shall be through a standard network interface jack, USOC RJ11C, RJ14C, or RJ21X. Connection to E&M tie trunks requires a USOC RJ2GX. Connection to off-premises extensions requires a USOC RJ11C or RJ14C. Connection to 1.544-Mbps digital facilities must be through a USOC RJ48C or RJ48X. Connection to DID requires a USOC RJ11C, RJ14C, or RJ21X. These USOCs must be ordered from your telephone company. Connection to 56-kbps or 64-kbps facilities requires a USOC RJ11C, RJ14C, or RJ21.
- **Party Lines and Coin Telephones.** This equipment may not be used with party lines or coin telephone lines.
- **Notification to the Telephone Companies.** Before connecting this equipment, you or your equipment supplier must notify your local telephone company's business office of the following:
  - The telephone number or numbers you will be using with this equipment.
    - The appropriate registration number and ringer equivalence number (REN), which can be found on the back or bottom of the control unit, as follows:
    - If this equipment is to be used as a Key system, report the number AS593M-72914-KF-E.
    - If the system provides both manual and automatic selection of incoming/outgoing access to the network, report the number AS593M-72682-MF-E.
    - If there are no directly terminated trunks, or if the only directly terminated facilities are Personal Lines, report the number AS593M-65646-PF-E.
    - The REN (Ringer Equivalence Number) for all three systems is 1.5A.
  - The facility interface code (FIC) and service order code (SOC): For tie line connection, the FIC is TL31M and the SOC is 9.0F.
    - For connection to off-premises stations, the FIC is OL13C and the SOC is 9.0F.

- For equipment to be connected to DID facilities, the FIC is 02RV2-T and the SOC is AS.2.
- For equipment to be connected to 1.544-MBps digital service, the SOC is 6.0P and the FIC is:
  - 04DU9-BN for D4 framing format with AMI zero code suppression.
  - 04DU9-DN for D4 framing format with bipolar 8 zero code suppression (B8ZS).04DU9-IKN for extended superframe format (ESF) with AMI zero code suppression.
  - 04DU9-ISN with ESF and B8ZS.
- For equipment to be connected to 56-kbps or 64-kbps digital facilities, the FIC is 02IS5.
  - The quantities and USOC numbers of the jacks required.
  - For each jack, the sequence in which lines are to be connected, the line types, the FIC, and the REN by position, when applicable.
- **Ringer Equivalence Number (REN).** The REN is used to determine the number of devices that may be connected to the telephone line. Excessive RENs on the line may result in the devices not ringing in response to an incoming call. In most, but not all, areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the local telephone company to determine the maximum REN for the calling area.
- **Disconnection.** You must also notify your local telephone company if and when this equipment is permanently disconnected from the line or lines.

---

## Installation and Operational Procedures

The guides for your system contain information about installation and operational procedures.

- **Repair Instructions.** If you experience trouble because your equipment is malfunctioning, the FCC requires that the equipment not be used and that it be disconnected from the network until the problem has been corrected. Repairs to this equipment can be made only by the manufacturers, their authorized agents, or others who may be authorized by the FCC. In the event repairs are needed on this equipment, contact your authorized Avaya dealer or, **in the USA only**, contact the Avaya Helpline at 1 800 628-2888.
- **Rights of the Local Telephone Company.** If this equipment causes harm to the telephone network, the local telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will also be informed of your right to file a complaint with the FCC.
- **Changes at Local Telephone Company.** Your local telephone company may make changes in its facilities, equipment, operations, or procedures that affect the proper functioning of this equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.
- **Hearing Aid Compatibility.** The custom telephone sets for this system are compatible with inductively coupled hearing aids as prescribed by the FCC.

- **Automatic Dialers.** WHEN PROGRAMMING EMERGENCY NUMBERS AND/OR MAKING TEST CALLS TO EMERGENCY NUMBERS:
  - Remain on the line and briefly explain to the dispatcher the reason for the call.
  - Perform such activities in off-peak hours, such as early morning or late evening.
- **Direct Inward Dialing (DID).** This equipment returns answer supervision signals to the Public Switched Telephone Network when:
  - Answered by the called station.
  - Answered by the attendant.
  - Routed to a recorded announcement that can be administered by the customer premises equipment user.
  - Routed to a dial prompt.

This equipment returns answer supervision on all DID calls forwarded back to the Public Switched Telephone Network. Permissible exceptions are when:

- A call is unanswered
- A busy tone is received
- A reorder tone is received

Allowing this equipment to be operated in such a manner as not to provide proper answer supervision signaling is in violation of Part 68 rules.

**New Network Area and Exchange Codes.** The MERLIN MAGIX Integrated System software does not restrict access to any new area codes or exchange codes established by a local telephone company. If the user has established Toll Restrictions on the system that could restrict access, then the user should check the lists of allowed and disallowed dial codes and modify them as needed.

**Equal Access Codes.** This equipment is capable of providing users access to interstate providers of operator services through the use of access codes. Modifications of this equipment by call aggregators to block access dialing codes is a violation of the Telephone Operator Consumers Act of 1990.

---

## DOC Notification and Repair Information

**NOTICE:** The Canadian Department of Communications (DOC) label identifies certified equipment. This certification means that the equipment meets certain protective, operational, and safety requirements of the telecommunications network. The DOC does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to connect it to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the company's inside wiring for single-line individual service may be extended by means of a certified connector assembly (telephone extension cord). The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or any equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure, for their own protection, that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected. This precaution may be particularly important in rural areas.

 **CAUTION:**

*Users should not attempt to make such connections themselves, but should contact the appropriate electrical inspection authority or electrician. To prevent overloading, the Load Number (LN) assigned to each terminal device denotes the percentage of the total load to be connected to a telephone loop used by the device. The termination on a loop may consist of any combination of devices subject only to the requirement that the total of the Load Numbers of all the devices does not exceed 100.*

**DOC Certification No.:** 230 4095A

**CSA Certification No.:** LR 56260

**Load No.:** 6

---

## Renseignements sur la Notification du Ministère des Communications du Canada et la Réparation

**AVIS:** L'étiquette du ministère des Communications du Canada identifie le matériel homologué. Cette étiquette certifie que le matériel est conforme à certaines normes de protection, d'exploitation et de sécurité des réseaux de télécommunications. Le Ministère n'assure toutefois pas que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunication. Le matériel doit également être installé en suivant une méthode acceptée de raccordement. Dans certains cas, les fils intérieurs de l'entreprise utilisés pour un service individuel à ligne unique peuvent être prolongés au moyen d'un dispositif homologué de raccordement (cordon prolongateur téléphonique interne). L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêchent pas la dégradation du service dans certaines situations. Actuellement, les entreprises de télécommunication ne permettent pas que l'on raccorde leur matériel à des jacks d'abonné, sauf dans les cas précis prévus par les tarifs particuliers de ces entreprises.

Les réparations de matériel homologué doivent être effectuées par un centre d'entretien canadien autorisé désigné par le fournisseur. La compagnie de télécommunications peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause de mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise à la terre de la source d'énergie électrique, des lignes téléphoniques et des canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales.

**AVERTISSEMENT:** L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à un service d'inspection des installations électriques, ou à un électricien, selon le cas.

L'indice de charge (IC) assigné à chaque dispositif terminal indique, pour éviter toute surcharge, le pourcentage de la charge totale qui peut être raccordée à un circuit téléphonique bouclé utilisé par ce dispositif. La terminaison du circuit bouclé peut être constituée de n'importe quelle combinaison de dispositifs, pourvu que la somme des indices de charge de l'ensemble des dispositifs ne dépasse pas 100.

**No d'homologation:** 230 4095A

**No de certification:** CSA LR 56260

**L'indice de charge:** 6

## MERLIN MAGIX D.O.C. Location Label Placement

Ministère des  
Communications  
du Canada  
emplacement  
de l'étiquette

**AVAYA** **MERLIN MAGIX**  
Model 515A Control Unit

INFORMATION TECHNOLOGY EQUIPMENT

UL LISTED 662K SP L.R. 56260 NOM NFCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Complies with Part 68, FCC Rules. See the System Reference Manual for proper FCC Classification. FCC Reg. Nos. MF: A5263M-72632-MF-E RF: A5933M-72914-RF-E PF: A5505A-65646-PF-E  
REN: 1.5A

MADE IN USA

DR ID

CANADA

Use only Avaya Inc. manufactured MERLIN MAGIX® circuit modules, carrier assemblies, and power units, as specified in the Installation Manual, in this product. There are no user serviceable parts inside. Contact your authorized agent for service and repair.

This digital apparatus does not exceed the Class A limits for radio noise emissions set out in the radio interference regulations of the Canadian Department of Communications.

Utilisez exclusivement des cartes électroniques, modules et blocs d'alimentation de Avaya Inc., comme indiqué dans le Manuel d'installation joint au produit. Cet emballage ne contient aucune pièce pouvant être réparée par l'utilisateur. Pour l'entretien et la réparation, veuillez contacter votre agent agréé.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

Use only Avaya Inc. manufactured circuit modules, carrier assemblies, and power units, as specified in the Installation Manual, in this product. There are no user serviceable parts inside. Contact your authorized agent for service and repair.

Cette équipe digital ne excède les limites de la Classe A pour radiations de radio émises en un radio major a lo permitido en la regulaciones del Departamento de Comunicaciones de Canada.

Use somente no MERLIN MAGIX as placas (módulos), gabinetes e fontes de alimentação fabricados pela Avaya Inc., conforme especificado no Manual de Instalação. Não há partes para serviços de reparo internos. Contatar seu distribuidor autorizada para os serviços de reparo.

Este aparelho digital não excede os limites para equipamentos Classe A, com relação às perturbações eletromagnéticas emitidas, conforme a regulamentação de radio perturbação em Equipamentos de Tecnologia da Informação (ETI), no NBR 12304.

**WARNING:** IF EQUIPMENT IS USED FOR OUT-OF-BUILDING APPLICATIONS, APPROVED SECONDARY PROTECTORS ARE REQUIRED. SEE INSTALLATION MANUAL.

**AVERTISSEMENT:** SI L'ÉQUIPEMENT EST UTILISÉ POUR DES APPLICATIONS EXTERIEURES, L'INSTALLATION D'UN PROTECTEUR SECONDAIR EST REQUISE. VOIR LE MANUEL D'INSTALLATION.

**PRECAUCION:** SI EL EQUIPO VA SER UTILIZADO PARA APLICACIONES EN EL EXTERIOR DE UN EDIFICIO, DEBEN USARSE PROTECTORES ADICIONALES DEBIDAMENTE APROVADOS. VEA EL MANUAL DE INSTALACION.

**AVISO:** CASO O EQUIPAMENTO FOR INSTALADO EM APLICACOES EXTERNAS AO PREDIO, DISPOSITIVOS PROTETORES EXTERNOS AUTORIZADOS PARA REDES EXTERNAS SAO NECESSARIOS. VER O MANUAL DE INSTALACAO.

## Security of Your System: Preventing Toll Fraud

As a customer of a new telephone system, you should be aware that there is an increasing problem of telephone toll fraud. Telephone toll fraud can occur in many forms, despite the numerous efforts of telephone companies and telephone equipment manufacturers to control it. Some individuals use electronic devices to prevent or falsify records of these calls. Others charge calls to someone else's number by illegally using lost or stolen calling cards, billing innocent parties, clipping on to someone else's line, and breaking into someone else's telephone equipment physically or electronically. In certain instances, unauthorized individuals make connections to the telephone network through the use of the Remote Access features of your system.

The Remote Access features of your system, if you choose to use them, permit off-premises callers to access the system from a remote telephone by using a telephone number with or without a barrier code. The system returns an acknowledgment, signaling the user to key in his or her barrier code, which is selected and administered by the System Manager. After the barrier code is accepted, the system returns dial tone to the user. Barrier codes are, by default, restricted from making outside calls.

The Remote Access feature, as designed, helps the customer, through proper administration, to minimize the ability of unauthorized persons to gain access to the network. Most commonly, telephone numbers and codes are compromised when overheard in a public location, through theft of a wallet or purse containing access information, or through carelessness (for example, writing codes on a piece of paper and improperly discarding it). Additionally, hackers may use a computer to dial an access code and then publish the information to other hackers. Enormous charges can be run up quickly. It is the customer's responsibility to take the appropriate steps to properly implement the features, evaluate and administer the various restriction levels, protect access codes, and distribute access codes only to individuals who have been fully advised of the sensitive nature of the access information.

Common carriers are required by law to collect their tariffed charges. While these charges are fraudulent charges made by persons with criminal intent, applicable tariffs state that the customer of record is responsible for payment of all long-distance or other network charges. Avaya cannot be responsible for such charges and will not make any allowance or give any credit for charges that result from unauthorized access.

To minimize the risk of unauthorized access to your communications system:

- Use an unpublished Remote Access number.
- Assign access codes randomly to users on a need-to-have basis, keeping a log of *all* authorized users and assigning one code to each person.
- Use random-sequence access codes, which are less likely to be broken.
- Use the longest-length access codes the system will allow.
- Deactivate all unassigned codes promptly.
- Ensure that Remote Access users are aware of their responsibility to keep the telephone number and any access codes secure.

- When possible, restrict the off-network capability of off-premises callers, using calling restrictions, Facility Restriction Levels (Hybrid/PBX mode only), and Disallowed List capabilities. A prepared Disallowed List (number 7) is provided and is designed to prevent the types of calls that toll-fraud abusers often make.
  - When possible, block out-of-hours calling.
  - Frequently monitor system call detail reports for quicker detection of any unauthorized or abnormal calling patterns.
  - Limit Remote Call Forwarding to persons on a need-to-have basis.
  - Change access codes every 90 days.
  - Use the longest-length barrier codes possible, following the guidelines for passwords. (See [“Choosing Passwords”](#) on page 16.)
- 

## Toll Fraud Prevention

Toll fraud is the unauthorized use of your telecommunications system by third parties to make long-distance telephone calls. Under the law, you, the customer, are responsible for paying part or all of those unauthorized calls. Thus, the following information is of critical importance.

Unauthorized persons concentrate their activities in two areas with the MERLIN MAGIX Integrated System:

- They try to transfer out of the MERLIN MAGIX Integrated System to gain access to an outgoing trunk and make long-distance calls.
- They try to locate unused or unprotected mailboxes and use them as drop-off points for their own messages.

The following is a discussion of how toll fraud is often perpetrated and ways to prevent unauthorized access that can lead to toll fraud.

## Physical Security, Social Engineering, and General Security Measures

Criminals called hackers may attempt to gain unauthorized access to your communications system and voice messaging system in order to use the system features. Hackers often attempt to trick employees into providing them with access to a network facility (line/trunk) or a network operator. This is referred to as social engineering. Hackers may pose as telephone company employees or employees of Avaya or your authorized dealer. Hackers will go through a company's trash to find directories, dialing instructions, and other information that will enable them to break into the system. The more knowledgeable they appear to be about the employee names, departments, telephone numbers, and the internal procedures of your company, the more likely it is that they will be able to trick an employee into helping them.

## Preventive Measures

Take the following preventive measures to limit the risk of unauthorized access by hackers:

- Provide good physical security for the room containing your telecommunications equipment and the room with administrative tools, records, and System Manager information. These areas should be locked when not attended.
- Provide a secure trash disposal for all sensitive information, including telephone directories, call accounting records, or anything that may supply information about your communications system. This trash should be shredded.
- Educate employees that hackers may try to trick them into providing them with dial tone or dialing a number for them. All reports of trouble, requests for moving extensions, or any other administrative details associated with the MERLIN MAGIX Integrated System should be handled by one person (the System Manager) or within a specified department. Anyone claiming to be a telephone company representative should be referred to this person or department.
- No one outside of Avaya needs to use the MERLIN MAGIX Integrated System to test facilities (lines/trunks). If a caller claims to be an Avaya employee, the System Manager should ask for a telephone number where the caller can be reached. The System Manager should be able to recognize the number as an Avaya telephone number. *Before connecting the caller to the administrative port of the MERLIN MAGIX Integrated System, the System Manager should feel comfortable that a good reason to do so exists.* In any event, it is not advisable to give anyone access to network facilities or operators, or to dial a number at the request of the caller.
- Any time a call appears to be suspicious, call the Avaya Helpline at 1 800 628-2888 (fraud intervention for System 25, PARTNER<sup>®</sup> and MERLIN Systems).
- Customers should also take advantage of Avaya monitoring services and devices, such as the NetPROTECT<sup>®</sup> family of fraud-detection services, CAS with HackerTracker<sup>®</sup>, and CAT Terminal with Watchdog. Call 1 800 638-7233 to get more information on these Avaya fraud detection services and products.

## Security Risks Associated with Transferring through Voice Messaging Systems

Toll fraud hackers try to dial into a voice mailbox and then execute a transfer by dialing \*T. The hacker then dials an access code (either 9 for Automatic Route Selection or a pooled facility code), followed by the appropriate digit string to either direct dial or access a network operator to complete the call.

**NOTE** ► All extensions are initially, and by default, restricted from dial access to pools. In order for an extension to use a pool to access an outside line/trunk, this restriction must be removed.

## Preventive Measures

Take the following preventive measures to limit the risk of unauthorized transfers by hackers:

- Outward restrict all MERLIN MAGIX Integrated System voice mail port extension numbers. This denies access to facilities (lines/trunks). Voice mail ports are, by default, outward restricted.
- As an additional security step, network dialing for all extensions, including voice mail port extensions, should be processed through ARS using dial access code 9.

### SECURITY ALERT:

*The MERLIN MAGIX Integrated System ships with ARS activated with all extensions set to Facility Restriction Level 3, allowing all international calling. **To prevent toll fraud**, ARS Facility Restriction Levels (FRLs) should be established using:*

- FRL 0 for restriction to internal dialing only
- FRL 2 for restriction to local network calling only
- FRL 3 for restriction to domestic long-distance (excluding area code 809 for the Dominican Republic as this is part of the North American Numbering Plan, unless 809 is required)
- FRL 4 for international calling

### WARNING:

*Default local and default toll tables are factory-assigned an FRL of 2. This simplifies the task of restricting extensions: the FRL for an extension merely needs to be changed from the default of 3.*

### WARNING:

*Each extension should be assigned the appropriate FRL to match its calling requirements. All voice mail port extensions not used for Outcalling should be assigned to FRL 0 (the default setting).*

- Deny access to pooled facility codes by removing pool dial-out codes 70, 890–899, or any others on your system.
- Create a Disallowed List or use the pre-prepared Disallowed List number 7 to disallow dialing 0, 11, 10, 1700, 1809, 1900, and 976 or 1 (wildcard) 976. Disallowed List number 7 does not include 800, 1800, 411, and 1411, but Avaya recommends that you add them.

**NOTE** ► Assign all voice mail port extensions to this Disallowed List. Avaya recommends assigning Disallowed List number 7. This is an added layer of security, in case outward restriction is inadvertently removed. (Voice messaging ports are assigned, by default, to Disallowed List number 7.)

If Outcalling is required by voice messaging system extensions:

- Program an ARS Facility Restriction Level (FRL) of 2 on voice mail port extensions used for Outcalling.
- If 800 and 411 numbers are used, remove 1800, 800, 411, and 1411 from Disallowed List number 7.
- If Outcalling is allowed to long-distance numbers, build an Allowed List for the voice mail port extensions used for Outcalling. This list should contain the area code and the first three digits of the local exchange telephone numbers to be allowed.

Additional general security for voice messaging systems:

- Use a secure password for the General Mailboxes.
- The default administration mailbox, 9997, must be reassigned to the System Manager's mailbox/extension number and securely password protected.
- All voice messaging system users must use secure passwords known only to the user.

### **Security Risks Associated with the Automated Attendant Feature of Voice Messaging Systems**

Two areas of toll fraud risk associated with the Automated Attendant feature of voice messaging systems are:

- Pooled facility (line/trunk) access codes are translated to a menu prompt to allow Remote Access. If a hacker finds this prompt, the hacker has immediate access. (Dial access to pools is initially factory-set to restrict all extensions: to allow pool access, this restriction must be removed by the System Manager.)
- If the Automated Attendant prompts callers to use Remote Call Forwarding (RCF) to reach an outside telephone number, the system may be susceptible to toll fraud. An example of this application is a menu or submenu that says, "To reach our answering service, select prompt number 5," and transfers a caller to an external telephone number.

Remote Call Forwarding can be used securely only when the Central Office provides "reliable disconnect" (sometimes referred to as forward disconnect or disconnect supervision), which guarantees that the Central Office does not return a dial tone after the called party hangs up. In most cases, the Central Office facility is a loop-start line/trunk which does not provide reliable disconnect. When loop-start lines/trunks are used, if the calling party stays on the line, the Central Office does return a dial tone at the conclusion of the call, enabling the caller to place another call as if it were being placed from your company. Ground-start trunks provide reliable disconnect and should be used whenever possible.

## Preventive Measures

Take the following preventive measures to limit the risk of unauthorized use of the Automated Attendant feature by hackers:

- *Do not* use Automated Attendant prompts for Automatic Route Selection (ARS) codes or Pooled Facility codes.
- Assign all unused Automated Attendant selector codes to zero, so that attempts to dial these are routed to the system attendant.
- If Remote Call Forwarding (RCF) is required, MERLIN MAGIX Integrated System owners should coordinate with their Avaya Account Team or authorized dealer to verify the type of Central Office facility used for RCF. If it is a ground-start line/trunk, or if it is a loop-start line/trunk and Central Office reliable disconnect can be ensured, then nothing else needs to be done.

**NOTE** ► In most cases, these are loop-start lines/trunks without reliable disconnect. The local telephone company must be involved in order to change the facilities used for RCF to ground-start line/trunks. Usually, a charge applies for this change. Also, hardware and software changes may be necessary in the MERLIN MAGIX Integrated System. The Octel Messaging 100 Automated Attendant feature merely accesses the RCF feature in the MERLIN MAGIX Integrated System. Without these changes being made, this feature is highly susceptible to toll fraud. These same preventive measures must be taken if the RCF feature is active for MERLIN MAGIX Integrated System extensions, whether or not it is accessed by an Automated Attendant menu.

## Security Risks Associated with the Remote Access Feature

Remote Access allows the MERLIN MAGIX Integrated System owner to access the system from a remote telephone and make an outgoing call or perform system administration using the network facilities (lines/trunks) connected to the MERLIN MAGIX Integrated System. Hackers, scanning the public switched network by randomly dialing numbers with war dialers (a device that randomly dials telephone numbers, including 800 numbers, until a modem or dial tone is obtained), can find this feature, which will return a dial tone to them. They can even employ war dialers to attempt to discover barrier codes.

## Preventive Measures

Take the following preventive measures to limit the risk of unauthorized use of the MERLIN MAGIX Integrated System Remote Access feature:

- The Remote Access feature can be abused by criminal toll fraud hackers if it is not properly administered. Therefore, this feature should not be used unless there is a strong business need.
- It is strongly recommended that customers invest in security adjuncts, which typically use one-time passcode algorithms. These security adjuncts discourage hackers. Since a secure use of the Remote Access feature generally offers savings over credit-card calling, the break-even period can make the investment in security adjuncts worthwhile.

- If a customer chooses to use the Remote Access feature without a security adjunct, then multiple barrier codes should be employed, with one per user, if the system permits. The MERLIN MAGIX Integrated System permits a maximum of 16 barrier codes.
- The maximum length should be used for each barrier code, and should be changed periodically. Barrier codes, like passwords, should consist of a random, hard-to-guess sequence of digits. The MERLIN MAGIX Integrated System permits a barrier code of up to 11 digits.

---

## Other Security Hints

Make sure that the Automated Attendant selector codes do not permit outside line selection.

Multiple layers of security are always recommended to keep your system secure.

A number of measures and guidelines that can help you ensure the security of your communications system and voice messaging system follows:

## Educating Users

Everyone in your company who uses the telephone system is responsible for system security. Users and attendants/operators need to be aware of how to recognize and react to potential hacker activity. Informed people are more likely to cooperate with security measures that often make the system less flexible and more difficult to use.

- Never program passwords or authorization codes onto Auto Dial buttons. Display telephones reveal the programmed numbers and internal abusers can use the Auto Dial buttons to originate unauthorized calls.
- Discourage the practice of writing down barrier codes or passwords. If a barrier code or password needs to be written down, keep it in a secure place and never discard it while it is active.
- Instruct operators and attendants to inform tell their System Manager whenever they answer a series of calls where there is silence on the other end or the caller hangs up.
- Advise users who are assigned voice mailboxes to frequently change personal passwords and not to choose obvious passwords.
- Ensure that the System Manager advises users with special telephone privileges (such as Remote Access, Outcalling, and Remote Call Forwarding) of the potential risks and responsibilities.
- Be suspicious of any caller who claims to be with the telephone company and wants to check an outside line. Ask for a callback number, hang up, and confirm the caller's identity.
- Never distribute the office telephone directory to anyone outside the company; be careful when discarding it (shred the directory).
- Never accept collect telephone calls.
- Never discuss your telephone system's numbering plan with anyone outside the company.

## Educating Operators

Operators or attendants need to be especially aware of how to recognize and react to potential hacker activity. To defend against toll fraud, operators should follow the guidelines below:

- Establish procedures to counter *social engineering*. Social engineering is a con game that hackers frequently use to obtain information that may help them gain access to your communications system or voice messaging system.
- When callers ask for assistance in placing outside or long-distance calls, ask for a callback extension.
- Verify the source. Ask callers claiming to be maintenance or service personnel for a callback number. Never transfer to \*10 without this verification. Never transfer to extension 900.
- Remove the headset and/or handset when the console is not in use.

## Detecting Toll Fraud

To detect toll fraud, users and operators should look for the following:

- Lost voice mail messages, mailbox lockout, or altered greetings
- Inability to log into voice mail
- Inability to get an outside line
- Foreign language callers
- Frequent hang-ups
- Touch-Tone sounds
- Caller or employee complaints that the lines are busy
- Increases in internal requests for assistance in making outbound calls (particularly international calls or requests for dial tone)
- Outsiders trying to obtain sensitive information
- Callers claiming to be the “telephone” company
- Sudden increase in wrong numbers

## Establishing a Policy

As a safeguard against toll fraud, follow these guidelines for your MERLIN MAGIX Integrated System and voice messaging system:

- Change passwords frequently (at least quarterly). Changing passwords routinely on a specific date (such as the first of the month) helps users to remember to do so.
- Always use the longest-length password allowed.
- Establish well-controlled procedures for resetting passwords.
- Limit the number of invalid attempts to access a voice mailbox to five or less.

- Monitor access to the MERLIN MAGIX Integrated System dial-up maintenance port. Change the access password regularly and issue it only to authorized personnel. Disconnect the maintenance port when not in use. (This however, eliminates Avaya's 24-hour maintenance surveillance capability and may result in additional maintenance costs.)
- Create a communications system management policy concerning employee turnover and include these suggestions:
  - Delete all unused voice mailboxes in the voice mail system.
  - If a terminated employee had Remote Access calling privileges and a personal authorization code, remove the authorization code immediately.
  - If barrier codes and/or authorization codes were shared by the terminated employee, these should be changed immediately.
- Regularly back up your MERLIN MAGIX Integrated System files to ensure a timely recovery should it be required. Schedule regular, off-site backups.
- Keep the Remote Maintenance Device turned off when not in use by Avaya or your authorized dealer.
- Limit transfers to registered subscribers only.
- Use the Security Violations Notification options (Mailbox Lock or Warning Message) to alert you of any mailbox break-in attempts. Investigate all incidents.
- Review security policies and procedures and keep them up to date.

### Choosing Passwords

Passwords should be the maximum length allowed by the system.  
Passwords should be hard to guess and should not contain:

- All the same numbers (for example, 1111, 666666)
- Sequential characters (for example, 123456)
- Numbers that can be associated with you or your business, such as your name, birthday, business name, business address, telephone number, or social security number
- Words and commonly used names

Passwords should be changed regularly—at least on a quarterly basis. Recycling old passwords is not recommended. Never program passwords (or authorization codes or barrier codes) onto a speed dial button.

## Physical Security

You should always limit access to the system console (or attendant console) and supporting documentation. The following are some recommendations:

- Keep the system console and supporting documentation in an office that is secured with a changeable combination lock. Provide the combination only to those individuals having a real need to enter the office.
- Keep telephone wiring closets and equipment rooms locked.
- Keep telephone logs and printed reports in locations that only authorized personnel can enter.
- Design distributed reports so they do not reveal password or trunk access code information.
- Keep the voice messaging system Remote Maintenance Device turned off.

## Limiting Outcalling

When Outcalling is used to contact subscribers who are off-site, use the MERLIN MAGIX Integrated System Allowed Lists and Disallowed Lists or Automatic Route Selection features to minimize toll fraud.

If the Outcalling feature will not be used, outward restrict all voice messaging system ports. If Outcalling will be used, ports not used for Outcalling should be Outward Restricted. Use Outward Restriction, Toll Restrictions, Allowed Lists, Disallowed Lists and Facility Restrictions Levels, as appropriate, to minimize the possibility of toll fraud.

---

## Limited Warranty and Limitation of Liability

Avaya Inc. warrants to you, the customer, that your MERLIN MAGIX Integrated System will be in good working order on the date Avaya or its authorized reseller delivers or installs the system, whichever is later ("Warranty Date"). If you notify Avaya or its authorized reseller within one year of the Warranty Date that your system is not in good working order, Avaya will, without charge to you, repair or replace, at its option, the system components that are not in good working order. Repair or replacement parts may be new or refurbished and will be provided on an exchange basis.

If you purchased your system directly from Avaya, Avaya will perform warranty repair in accordance with the terms and conditions of the specific type of Avaya maintenance coverage you selected. If you purchased your system from an Avaya-authorized reseller, contact your reseller for the details of the maintenance plan applicable to your system.

The following will not be deemed to impair the good working order of the system, and Avaya will not be responsible under the limited warranty for damages resulting from:

- Failure to follow Avaya's installation, operation, or maintenance instructions
- Unauthorized system modification, movement, or alteration
- Unauthorized use of common carrier communications services accessed through the system

- Abuse, misuse, or negligent acts or omissions of the customer and persons under the customer's control
- Power surges, including power surges due to lightning
- Acts of third parties and acts of God

AVAYA'S OBLIGATION TO REPAIR, REPLACE, OR REFUND AS SET FORTH ABOVE IS YOUR EXCLUSIVE REMEDY.

EXCEPT AS SPECIFICALLY SET FORTH ABOVE, AVAYA, ITS AFFILIATES, SUPPLIERS, AND AUTHORIZED RESELLERS MAKE NO WARRANTIES, EXPRESS OR IMPLIED, AND SPECIFICALLY DISCLAIM ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

### Limitation of Liability

Except as provided below, the liability of Avaya and its affiliates and suppliers for any claims, losses, damages, or expenses from any cause whatsoever (including acts or omissions of third parties), regardless of the form of action, whether in contract, tort, or otherwise, shall not exceed the lesser of: (1) the direct damages proven; or (2) the repair cost, replacement cost, license fee, annual rental charge, or purchase price, as the case may be, of the equipment that gives rise to the claim. Except as provided below, Avaya and its affiliates and suppliers shall not be liable for any incidental, special, reliance, consequential, or indirect loss or damage incurred in connection with the equipment. As used in this paragraph, consequential damages include, but are not limited to, the following: lost profits, lost revenues, and losses arising out of unauthorized use (or charges for such use) of common carrier telecommunications services or facilities accessed through or connected to the equipment. For personal injury caused by Avaya's negligence, Avaya's liability shall be limited to proven damages to person. **No action or proceeding against Avaya or its affiliates or suppliers may be commenced more than twenty-four (24) months after the cause of action accrues.** THIS PARAGRAPH SHALL SURVIVE FAILURE OF AN EXCLUSIVE REMEDY.

---

## Remote Administration and Maintenance

The Remote Administration and Maintenance feature of your telecommunications system, if you choose to use it, permits users to change the system features and capabilities from a remote location.

The Remote Administration and Maintenance feature, through proper administration, can help you reduce the risk of unauthorized persons gaining access to the network. However, telephone numbers and access codes can be compromised when overheard in a public location, or lost through theft of a wallet or purse containing access information or through carelessness (for example, writing codes on a piece of paper and improperly discarding them). Additionally, hackers may use a computer to dial an access code and then publish the information to other hackers. Substantial charges can accumulate quickly. It is your responsibility to take appropriate steps to implement the features properly, evaluate and administer the various restriction levels, and protect and carefully distribute access codes.

Under applicable tariffs, you will be responsible for payment of toll charges. Avaya cannot be responsible for such charges and will not make any allowance or give any credit resulting from unauthorized access.

To reduce the risk of unauthorized access through Remote Administration and Maintenance, please observe the following procedures:

- The System Administration and Maintenance capability of a Hybrid/PBX or Key system is protected by a password.
  - Change the default password immediately.
  - Continue to change the password regularly.
  - Give the password only to people who need it and impress upon them the need to keep it secret.
  - If anyone who knows the password leaves the company, change the password immediately.
- If you have a special telephone line connected to your Hybrid/PBX or Key system for Remote Administration and Maintenance, you should do one of the following:
  - Unplug the line when it is not being used.
  - Install a switch in the line to turn it off when it is not being used.
  - Keep the Remote Administration and Maintenance telephone number secret. Give it only to people who need to know it, and impress upon them the need to keep it a secret. Do not write the telephone number on the Hybrid/PBX or Key system, the connecting equipment, or anywhere else in the system room.

If your Remote Administration and Maintenance feature requires that someone in your office transfer the caller to the Remote Administration and Maintenance extension, you should impress upon your employees the importance of transferring only authorized individuals to that extension.



---

## Overview

This appendix contains one copy of each system planning form. The forms are in numerical order and organized according to planning purpose, as shown in Table B-1. You should make copies of these forms and use the copies, keeping the originals for future use. Planning forms for data communications are contained in Appendix C. The T1/PRI Planner is contained in Appendix D. The NI-1 BRI Planner is contained in Appendix G. The Network Engineering forms are contained in Appendix I.

**Table B-1. System Forms**

Used for Planning...	Form No.	Form Title
Features and Calling Privileges	N/A	Employee Communication Survey
Control Unit Assembly and Operating Conditions	1	System Planning
System Component Numbering	2a	System Numbering: Extension Jacks
	2b	System Numbering: Digital Adjuncts
	2c	System Numbering: Line/Trunk Jacks
	2d	System Numbering: Special Renumbers

**Table B-1. System Forms—Continued**

<b>Used for Planning...</b>	<b>Form No.</b>	<b>Form Title</b>
Incoming Line/Trunk Connections	3a	Incoming Trunks: Remote Access
	3b	Incoming Trunks: DS1 Connectivity (100D, 100R INA, or 100 DCD Module)
	3c	Incoming Trunks: Tie
	3d	Incoming Trunks: DID
	3e	Automatic Route Selection Worksheet
	3f	Automatic Route Selection Tables
	3g	Automatic Route Selection Default and Special Numbers Tables
	3h	LS-ID Delay
	3i	Incoming Trunks: BRI Options
	3j	Enhanced 911 Service
	4c	Extension Copy: MLX Telephone Template
	4d	MLX Telephone
	4e	MFM Adjunct: MLX Telephone
	4f	Tip/Ring Equipment
	4g	Extension Copy: ETR Telephone Template
	4h	ETR Telephone
	4i	Extension Copy: MLS Telephone Template
	4j	MLS Telephone
	4k	4400/4400D Telephone
	4l	Extension Copy: Multiline 4400-Series Telephone Template
	4m	Multiline 4400-Series Telephone
	4n	Extension Copy: Wireless Telephone
	4o	Wireless Telephone
5b	Direct-Line Console (DLC)	
5c	MFM Adjunct: DLC	
5d	Queued Call Console (QCC)	
Features for Operators	6a	Optional Operator Features

Table B-1. System Forms—Continued

Used for Planning...	Form No.	Form Title
Features for User	6b	Optional Extension Features
Groups	6c	Principal User of Personal Line
Features for Systemwide Use	6d	Message-Waiting Receivers
	6e	Allowed Lists
	6f	Disallowed Lists
	6g	Call Restriction Assignments and Lists
	6h	Authorization Codes
	6i	Pool Dial-Out Code Restrictions
	7a	Call Pickup Groups
	7b	Group Paging
	7c	Group Coverage
	7d	Group Calling
	8a	System Features
	9a	Night Service: Group Assignment
	9b	Night Service: Outward Restriction
	9c	Night Service: Time Set
	10a	Label Form: Posted Message
10b	System Speed Dial	
11	Service Observing: Group Assignment	



## System Planning

### Line/Trunk Capacity\*

Module Type	Number of Modules	Trunks Supported by Module	Total Trunks by Module Type
408 GS/LS-ID-MLX	x	4	
412 LS-ID-TDL	x	4	
400EM	x	4	
800 DID†	x	8	
100D‡	x	24	
100R INA‡	x	24	
100 DCD‡, §	x	24	
800 GS/LS-ID	x	8	
800 NI-BRI**	x	16	
System Totals			

### Extension Capacity\*

Module Type	Number of Modules	Physical Jacks per Module	Physical Jacks by Module Type	Extensions Assigned	Total Extensions Assigned	
008 MLX	x	8	x	2		
408 GS/LS-ID-MLX	x	8	x	2		
412 LS-ID-TDL	x	12	x	2		
016 (T/R)	x	16	x	1		
016 MLX	x	16	x	1		
016 ETR	x	16	x	1		
024 TDL	x	24	x	2		
008 OPT	x	8	+	( ___x4)††		
MERLIN Messaging	N / A	x	7	N / A	x	12††
System Totals						

\* System capacity for Personal Directories is decreased by one whenever a 4424LD+ telephone is connected to a TDL port or an MLX-20L telephone is connected to an MLX port.

† Hybrid/PBX mode only.

‡ The 100D, 100R INA, and 100 DCD modules have one physical jack that supports 24 trunks.

§ Release 1.5 or later systems.

\*\* The 800 NI-BRI module has 8 physical jacks that support 16 trunks. Up to five 800 NI-BRI modules (or any combination of LINE/TRUNK modules up to the system maximum of 80 trunks) may be placed in the system. However, the number of 800 NI-BRI modules plus 100D, 100R INA, and 100 DCD modules cannot exceed 3 per carrier.


†† The 008 OPT module is assigned 12 extension numbers although there are only 8 physical extension jacks.

‡‡ The MERLIN Messaging module has 7 dedicated internal ports, but assigns 12 total extensions.

## System Planning

### Control Unit Diagram

UnitLoadTotal _____	UnitLoadTotal _____	UnitLoadTotal _____
Auxiliary Power Required	Auxiliary Power Required	Auxiliary Power Required
<input type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
<input type="checkbox"/> No	<input type="checkbox"/> No	<input type="checkbox"/> No

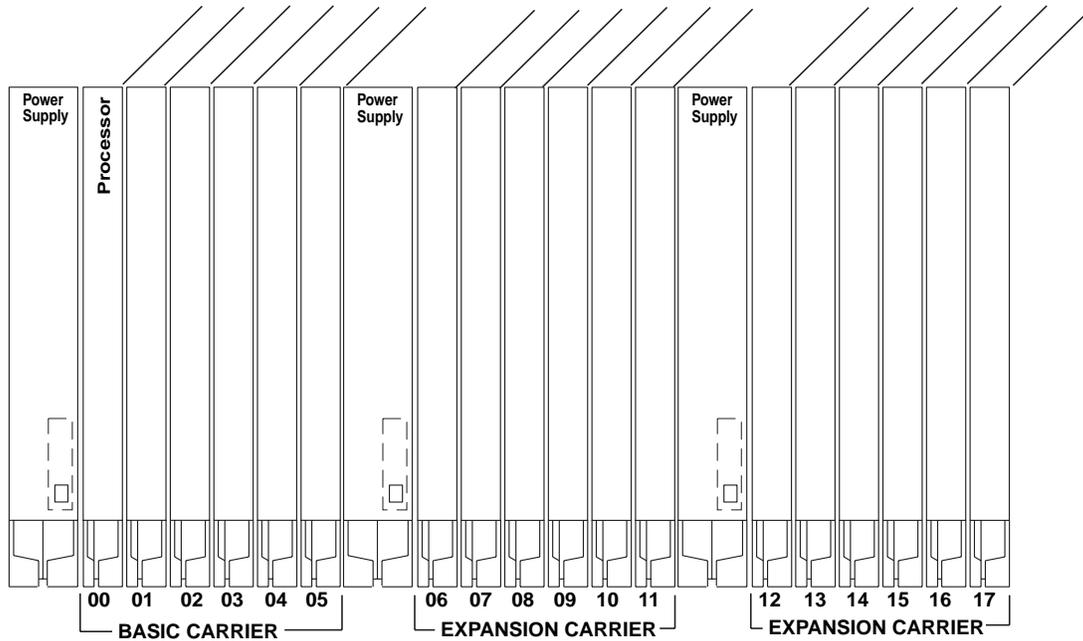

### System Operating Conditions

#### Programming Equipment

- System Programming Console  
Logical ID \_\_\_\_\_ Ext. No. \_\_\_\_\_
- PC with WinSPM software
- PCMCIA Memory Card

#### System Mode

- Key ♦
- Hybrid/PBX\*
- Behind Switch  
Host Dial Codes:  
  - Transfer \_\_\_\_\_
  - Conference \_\_\_\_\_
  - Drop \_\_\_\_\_
- Permanent Key

#### Language Selection

- System:
- English ♦  French  Spanish
- SMDR:
- English ♦  French  Spanish
- Printer:
- English ♦  French  Spanish

#### Automatic Maintenance Busy

- Enable
- Disable ♦

#### Set System Date

- Yes

#### Backup

- Automatic  
Weekly at \_\_\_\_\_  
Daily at \_\_\_\_\_
- Manual

#### System Consoles

- QCC (s)  
\_\_\_\_\_
- DLC (s)  
\_\_\_\_\_
- \_\_\_\_\_
- \_\_\_\_\_

#### Second Dial Tone Timer

\_\_\_\_\_ (0♦ – 5000 ms)

♦ Factory Setting for system software

\* Factory Setting for hardware

**Applications\***

- Automated Document Delivery System (ADDS)

Notes: \_\_\_\_\_  
\_\_\_\_\_

- Call Accounting System (CAS) for Plus V3†

Notes: \_\_\_\_\_  
\_\_\_\_\_

- Call Accounting System for Windows

Notes: \_\_\_\_\_  
\_\_\_\_\_

- Call Accounting Terminal (CAT)

- Business  
 Hospitality

Notes: \_\_\_\_\_  
\_\_\_\_\_

- Centrex

Notes: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

- CONVERSANT®

Notes: \_\_\_\_\_  
\_\_\_\_\_

- MERLIN Messaging™ Voice Messaging System

Notes: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

- MERLIN MAGIX Reporter

Notes: \_\_\_\_\_  
\_\_\_\_\_

- Group IV Fax

- Primary Rate Interface (PRI)                       Basic Rate Interface (BRI)

Notes: \_\_\_\_\_

- Windows™ System Programming and Maintenance (WinSPM)

Notes: \_\_\_\_\_

- Video Conferencing

Notes: \_\_\_\_\_

\* *CAUTION: General information about these applications is in the Feature Reference. But to ensure proper operation, you must review the documentation provided with the applications.*

† *Orderable only as an upgrade to existing CAS installations.*

- IS III\*
  - IVP/Auto Attendant     AUDIX Voice Power     CAS
  - FAX Attendant System™  Integrated Administration

Notes: \_\_\_\_\_

- PassageWay Direct Connect Solution

Notes: \_\_\_\_\_

- Computer Telephony Integration
  - NetWare                       Windows NT

Telephony Application:

Notes: \_\_\_\_\_

- Octel 100 (also known as Messaging 2000)

Notes:

- Enhanced Customer Care Solution

Notes: \_\_\_\_\_

- Other \_\_\_\_\_

- \_\_\_\_\_
- \_\_\_\_\_
- \_\_\_\_\_
- \_\_\_\_\_

Notes: \_\_\_\_\_

\* Not Orderable

**System Numbering: Extension Jacks**

**Renumber System\***  2-Digit ♦  Selected Extension Numbers  3-Digit  Set Up Space  Set Up Space  Networked Switch  No  Yes  Centralized Voice Messaging  No  Yes

Mod. Type	Log. ID	Jack Type			Equipment	2-Dig. Ext. No. ♦	3-Dig. Ext. No.	Set Up Space	Renumber to	Label	Old Ext. No.	Wire No.	Person, Location, or Function	Ring Freq. ‡	Appl#	Rot. Dial	CTI Link**
		D†	T	E													
	1					10	100	7100									N/A
	2					11	101	7101									
	3					12	102	7102									
	4					13	103	7103									
	5					14	104	7104									N/A
	6					15	105	7105									
	7					16	106	7106									
	8					17	107	7107									
	9					18	108	7108									N/A
	10					19	109	7109									
	11					20	110	7110									
	12					21	111	7111									
	13					22	112	7112									N/A
	14					23	113	7113									
	15					24	114	7114									
	16					25	115	7115									
	17					26	116	7116									N/A
	18					27	117	7117									
	19					28	118	7118									
	20					29	119	7119									
	21					30	120	7120									N/A
	22					31	121	7121									
	23					32	122	7122									
	24					33	123	7123									

Shaded lines indicate possible operator positions.  
 ♦ Factory Setting  
 \* The system capacity for Personal Directories is decreased by one whenever a 4424LD+ telephone is connected to a TDL port or an MLX-20L telephone is connected to an MLX port.  
 † Use Form 2b for adjuncts connected via MFM.  
 ‡ Ringing Frequency is programmable on the 016 T/R module only.  
 # The maximum number of VMI ports is 24.  
 \*\* The maximum number of CTI links is 1.

System Numbering: Extension Jacks

Mod. Type	Log. ID	Jack Type		Equipment	2-Dig. Ext. No. ♦	3-Dig. Ext. No.	Set Up Space	Renumber to	Label	Old Ext. No.	Wire No.	Person, Location, or Function	Ring Freq. ‡	Appl#	Rot. Dial	CTI Link**
		D †	T E													
	25				34	124	7124									N/A
	26				35	125	7125									
	27				36	126	7126									
	28				37	127	7127									
	29				38	128	7128									N/A
	30				39	129	7129									
	31				40	130	7130									
	32				41	131	7131									
	33				42	132	7132									N/A
	34				43	133	7133									
	35				44	134	7134									
	36				45	135	7135									
	37				46	136	7136									N/A
	38				47	137	7137									
	39				48	138	7138									
	40				49	139	7139									
	41				50	140	7140									N/A
	42				51	141	7141									
	43				52	142	7142									
	44				53	143	7143									
	45				54	144	7144									N/A
	46				55	145	7145									
	47				56	146	7146									
	48				57	147	7147									

Shaded lines indicate possible operator positions.

♦ Factory Setting

\* The system capacity for Personal Directories is decreased by one whenever a 4424LD+ telephone is connected to a TDL port or an MLX-20L telephone is connected to an MLX port.

† Use Form 2b for adjuncts connected via MFM.

‡ Ringing Frequency is programmable on the 016 T/R module only.

# The maximum number of VMI ports is 24.

\*\* The maximum number of CTI links is 1.

System Numbering: Extension Jacks

Mod. Type	Log. ID	Jack Type			Equipment	2-Dig. Ext. No.♦	3-Dig. Ext. No.	Set Up Space	Renumbr to	Label	Old Ext. No.	Wire No.	Person, Location, or Function	Ring Freq.‡	Appl#	Rot. Dial	CTI Link**
		D†	T	E													
	49					58	148	7148									N/A
	50					59	149	7149									
	51					60	150	7150									
	52					61	151	7151									
	53					62	152	7152									N/A
	54					63	153	7153									
	55					64	154	7154									
	56					65	155	7155									
	57					66	156	7156									N/A
	58					6700	157	7157									
	59					6701	158	7158									
	60					6702	159	7159									
	61					6703	160	7160									N/A
	62					6704	161	7161									
	63					6705	162	7162									
	64					6706	163	7163									
	65					6707	164	7164									N/A
	66					6708	165	7165									
	67					6709	166	7166									
	68					6710	167	7167									
	69					6711	168	7168									N/A
	70					6712	169	7169									
	71					6713	170	7170									
	72					6714	171	7171									

Shaded lines indicate possible operator positions.

♦ Factory Setting

\* The system capacity for Personal Directories is decreased by one whenever a 4424LD+ telephone is connected to a TDL port or an MLX-20L telephone is connected to an MLX port.

† Use Form 2b for adjuncts connected via MFM.

‡ Ringing Frequency is programmable on the 016 T/R module only.

# The maximum number of VMI ports is 24.

\*\* The maximum number of CTI links is 1.

System Numbering: Extension Jacks

Mod. Type	Log ID	Jack Type		Equipment	2-Dig. Ext. No.♦	3-Dig. Ext. No.	Set Up Space	Renumber to	Label	Old Ext. No.	Wire No.	Person, Location, or Function	Ring Freq.‡	Appl#	Rot. Dial	CTI Link**
		D†	T E													
	73				6715	172	7172									N/A
	74				6716	173	7173									
	75				6717	174	7174									
	76				6718	175	7175									
	77				6719	176	7176									N/A
	78				6720	177	7177									
	79				6721	178	7178									
	80				6722	179	7179									
	81				6723	180	7180									N/A
	82				6724	181	7181									
	83				6725	182	7182									
	84				6726	183	7183									
	85				6727	184	7184									N/A
	86				6728	185	7185									
	87				6729	186	7186									
	88				6730	187	7187									
	89				6731	188	7188									N/A
	90				6732	189	7189									
	91				6733	190	7190									
	92				6734	191	7191									
	93				6735	192	7192									N/A
	94				6736	193	7193									
	95				6737	194	7194									
	96				6738	195	7195									

Shaded lines indicate possible operator positions.  
 ♦ Factory Setting  
 \* The system capacity for Personal Directories is decreased by one whenever a 4424LD+ telephone is connected to a TDL port or an MLX-20L telephone is connected to an MLX port.  
 † Use Form 2b for adjuncts connected via MFM.  
 ‡ Ringing Frequency is programmable on the 016 T/R module only.  
 # The maximum number of VMI ports is 24.  
 \*\* The maximum number of CTI links is 1.

System Numbering: Extension Jacks

Mod. Type	Log. ID	Jack Type			Equipment	2-Dig. Ext. No.♦	3-Dig. Ext. No.	Set Up Space	Renumbr to	Label	Old Ext. No.	Wire No.	Person, Location, or Function	Ring Freq.‡	Appl#	Rot. Dial	CTI Link**
		D	T	E													
	97					6739	196	7196									N/A
	98					6740	197	7197									
	99					6741	198	7198									
	100					6742	199	7199									
	101					6743	200	7200									N/A
	102					6744	201	7201									
	103					6745	202	7202									
	104					6746	203	7203									
	105					6747	204	7204									N/A
	106					6748	205	7205									
	107					6749	206	7206									
	108					6750	207	7207									
	109					6751	208	7208									N/A
	110					6752	209	7209									
	111					6753	210	7210									
	112					6754	211	7211									
	113					6755	212	7212									N/A
	114					6756	213	7213									
	115					6757	214	7214									
	116					6758	215	7215									
	117					6759	216	7216									N/A
	118					6760	217	7217									
	119					6761	218	7218									
	120					6762	219	7219									

Shaded lines indicate possible operator positions.  
 ♦ Factory Setting  
 \* The system capacity for Personal Directories is decreased by one whenever a 4424LD+ telephone is connected to a TDL port or an MLX-20L telephone is connected to an MLX port.  
 † Use Form 2b for adjuncts connected via MFM.  
 ‡ Ringing Frequency is programmable on the 016 T/R module only.  
 # The maximum number of VMI ports is 24.  
 \*\* The maximum number of CTI links is 1.

System Numbering: Extension Jacks

Mod. Type	Log. ID	Jack Type		Equipment	2-Dig. Ext. No. ♦	3-Dig. Ext. No.	Set Up Space	Renumber to	Label	Old Ext. No.	Wire No.	Person, Location, or Function	Ring Freq. †	Appl#	Rot. Dial	CTI Link**
		D †	T E													
	121				6763	220	7220									N/A
	122				6764	221	7221									
	123				6765	222	7222									
	124				6766	223	7223									
	125				6767	224	7224									N/A
	126				6768	225	7225									
	127				6769	226	7226									
	128				6770	227	7227									
	129				6771	228	7228									N/A
	130				6772	229	7229									
	131				6773	230	7230									
	132				6774	231	7231									
	133				6775	232	7232									N/A
	134				6776	233	7233									
	135				6777	234	7234									
	136				6778	235	7235									
	137				6779	236	7236									N/A
	138				6780	237	7237									
	139				6781	238	7238									
	140				6782	239	7239									
	141				6783	240	7240									N/A
	142				6784	241	7241									
	143				6785	242	7242									
	144				6786	243	7243									

Shaded lines indicate possible operator positions.

- ♦ Factory Setting
- \* The system capacity for Personal Directories is decreased by one whenever a 4424LD+ telephone is connected to a TDL port or an MLX-20L telephone is connected to an MLX port.
- † Use Form 2b for adjuncts connected via MFM.
- ‡ Ringing Frequency is programmable on the 016 T/R module only.
- # The maximum number of VMI ports is 24.
- \*\* The maximum number of CTI links is 1.

System Numbering: Extension Jacks

Mod. Type	Log. ID	Jack Type		Equipment	2-Dig. Ext. No.♦	3-Dig. Ext. No.	Set Up Space	Renumbr to	Label	Old Ext. No.	Wire No.	Person, Location, or Function	Ring Freq.‡	Appl#	Rot. Dial	CTI Link**
		D†	T E													
	145				6787	244	7244									N/A
	146				6788	245	7245									
	147				6789	246	7246									
	148				6790	247	7247									
	149				6791	248	7248									N/A
	150				6792	249	7249									
	151				6793	250	7250									
	152				6794	251	7251									
	153				6795	252	7252									N/A
	154				6796	253	7253									
	155				6797	254	7254									
	156				6798	255	7255									
	157				6799	256	7256									N/A
	158				6800	257	7257									
	159				6801	258	7258									
	160				6802	259	7259									
	161				6803	260	7260									N/A
	162				6804	261	7261									
	163				6805	262	7262									
	164				6806	263	7263									
	165				6807	264	7264									N/A
	166				6808	265	7265									
	167				6809	266	7266									
	168				6810	267	7267									

Shaded lines indicate possible operator positions.  
 ♦ Factory Setting  
 \* The system capacity for Personal Directories is decreased by one whenever a 4424LD+ telephone is connected to a TDL port or an MLX-20L telephone is connected to an MLX port.  
 † Use Form 2b for adjuncts connected via MFM.  
 ‡ Ringing Frequency is programmable on the 016 T/R module only.  
 # The maximum number of VMI ports is 24.  
 \*\* The maximum number of CTI links is 1.

System Numbering: Extension Jacks

Mod. Type	Log. ID	Jack Type			Equipment	2-Dig. Ext. No. ♦	3-Dig. Ext. No.	Set Up Space	Renumbr to	Label	Old Ext. No.	Wire No.	Person, Location, or Function	Ring Freq. ‡	Appl#	Rot. Dial	CTI Link**	
		D	T	E														
	169					6811	268	7268									N/A	
	170					6812	269	7269										
	171					6813	270	7270										
	172					6814	271	7271										
	173					6815	272	7272										N/A
	174					6816	273	7273										
	175					6817	274	7274										
	176					6818	275	7275										
	177					6819	276	7276										N/A
	178					6820	277	7277										
	179					6821	278	7278										
	180					6822	279	7279										
	181					6823	280	7280										N/A
	182					6824	281	7281										
	183					6825	282	7282										
	184					6826	283	7283										
	185					6827	284	7284										N/A
	186					6828	285	7285										
	187					6829	286	7286										
	188					6830	287	7287										
	189					6831	288	7288										N/A
	190					6832	289	7289										
	191					6833	290	7290										
	192					6834	291	7291										

Shaded lines indicate possible operator positions.

♦ Factory Setting

\* The system capacity for Personal Directories is decreased by one whenever a 4424LD+ telephone is connected to a TDL port or an MLX-20L telephone is connected to an MLX port.

† Use Form 2b for adjuncts connected via MFM.

‡ Ringing Frequency is programmable on the 016 T/R module only.

# The maximum number of VMI ports is 24.

\*\* The maximum number of CTI links is 1.

**System Numbering: Extension Jacks**

Mod. Type	Log. ID	Jack Type			Equipment	2-Dig. Ext. No.♦	3-Dig. Ext. No.	Set Up Space	Renumbr to	Label	Old Ext. No.	Wire No.	Person, Location, or Function	Ring Freq.‡	Appl#	Rot. Dial	CTI Link**	
		D†	T	E														
	193				6835	292	7292										N/A	
	194				6836	293	7293											
	195				6837	294	7294											
	196				6838	295	7295											
	197				6839	296	7296											N/A
	198				6840	297	7297											
	198				6841	298	7298											
	200				6842	299	7299											

Shaded lines indicate possible operator positions.

- ♦ Factory Setting
- \* The system capacity for Personal Directories is decreased by one whenever a 4424LD+ telephone is connected to a TDL port or an MLX-20L telephone is connected to an MLX port.
- † Use Form 2b for adjuncts connected via MFM.
- ‡ Ringing Frequency is programmable on the 016 T/R module only.
- # The maximum number of VMI ports is 24.
- \*\* The maximum number of CTI links is 1.



**System Numbering: Digital Adjuncts**

(Make additional copies of this form as needed.)

Maximum: 200 Adjuncts

**Networked Switch**

No

Yes

Log. ID	Factory-Set			Renumber to	Adjuncts	2B	Pass. Bus	MLX Telephone Ext. No.	Person, Location, Function, and Equipment Type
	2-digit	3-digit	Set Up Space						
1	710	300	7300						
2	711	301	7301						
3	712	302	7302						
4	713	303	7303						
5	714	304	7304						
6	715	305	7305						
7	716	306	7306						
8	717	307	7307						
9	718	308	7308						
10	719	309	7309						
11	720	310	7310						
12	721	311	7311						
13	722	312	7312						
14	723	313	7313						
15	724	314	7314						
16	725	315	7315						
17	726	316	7316						
18	727	317	7317						
19	728	318	7318						
20	729	319	7319						
21	730	320	7320						
22	731	321	7321						
23	732	322	7322						
24	733	323	7323						
25	734	324	7324						
26	735	325	7325						
27	736	326	7326						
28	737	327	7327						
29	738	328	7328						
30	739	329	7329						
31	740	330	7330						
32	741	331	7331						
33	742	332	7332						
34	743	333	7333						
35	744	334	7334						
36	745	335	7335						
37	746	336	7336						
38	747	337	7337						
39	748	338	7338						
40	749	339	7339						

**System Numbering: Digital Adjuncts**

(Make additional copies of this form as needed.)

Maximum: 200 Adjuncts

Log. ID	Factory-Set			Renumber to	Adjuncts	2B	Pass. Bus	MLX Telephone Ext. No.	Person, Location, Function, and Equipment Type
	2-digit	3-digit	Set Up Space						
41	750	340	7340						
42	751	341	7341						
43	752	342	7342						
44	753	343	7343						
45	754	344	7344						
46	755	345	7345						
47	756	346	7346						
48	757	347	7347						
49	758	348	7348						
50	759	349	7349						
51	760	350	7350						
52	761	351	7351						
53	762	352	7352						
54	763	353	7353						
55	764	354	7354						
56	765	355	7355						
57	766	356	7356						
58	6850	357	7357						
59	6851	358	7358						
60	6852	359	7359						
61	6853	360	7360						
62	6854	361	7361						
63	6855	362	7362						
64	6856	363	7363						
65	6857	364	7364						
66	6858	365	7365						
67	6859	366	7366						
68	6860	367	7367						
69	6861	368	7368						
70	6862	369	7369						
71	6863	370	7370						
72	6864	371	7371						
73	6865	372	7372						
74	6866	373	7373						
75	6867	374	7374						
76	6868	375	7375						
77	6869	376	7376						
78	6870	377	7377						
79	6871	378	7378						
80	6872	379	7379						

**System Numbering: Digital Adjuncts**

(Make additional copies of this form as needed.)

Maximum: 200 Adjuncts

Log. ID	Factory-Set			Renumber to	Adjuncts	2B	Pass. Bus	MLX Telephone Ext. No.	Person, Location, Function, and Equipment Type
	2-digit	3-digit	Set Up Space						
81	6873	380	7380						
82	6874	381	7381						
83	6875	382	7382						
84	6876	383	7383						
85	6877	384	7384						
86	6878	385	7385						
87	6879	386	7386						
88	6880	387	7387						
89	6881	388	7388						
90	6882	389	7389						
91	6883	390	7390						
92	6884	391	7391						
93	6885	392	7392						
94	6886	393	7393						
95	6887	394	7394						
96	6888	395	7395						
97	6889	396	7396						
98	6890	397	7397						
99	6891	398	7398						
100	6892	399	7399						
101	6893	400	7400						
102	6894	401	7401						
103	6895	402	7402						
104	6896	403	7403						
105	6897	404	7404						
106	6898	405	7405						
107	6899	406	7406						
108	6900	407	7407						
109	6901	408	7408						
110	6902	409	7409						
111	6903	410	7410						
112	6904	411	7411						
113	6905	412	7412						
114	6906	413	7413						
115	6907	414	7414						
116	6908	415	7415						
117	6909	416	7416						
118	6910	417	7417						
119	6911	418	7418						
120	6912	419	7419						

**System Numbering: Digital Adjuncts**

(Make additional copies of this form as needed.)

Maximum: 200 Adjuncts

Log. ID	Factory-Set			Renumbr to	Adjuncts	2B	Pass. Bus	MLX Telephone Ext. No.	Person, Location, Function, and Equipment Type
	2-digit	3-digit	Set Up Space						
121	6913	420	7420						
122	6914	421	7421						
123	6915	422	7422						
124	6916	423	7423						
125	6917	424	7424						
126	6918	425	7425						
127	6919	426	7426						
128	6920	427	7427						
129	6921	428	7428						
130	6922	429	7429						
131	6923	430	7430						
132	6924	431	7431						
133	6925	432	7432						
134	6926	433	7433						
135	6927	434	7434						
136	6928	435	7435						
137	6929	436	7436						
138	6930	437	7437						
139	6931	438	7438						
140	6932	439	7439						
141	6933	440	7440						
142	6934	441	7441						
143	6935	442	7442						
144	6936	443	7443						
145	6937	444	7444						
146	6938	445	7445						
147	6939	446	7446						
148	6940	447	7447						
149	6941	448	7448						
150	6942	449	7449						
151	6943	450	7450						
152	6944	451	7451						
153	6945	452	7452						
154	6946	453	7453						
155	6947	454	7454						
156	6948	455	7455						
156	6949	456	7456						
157	6950	457	7457						
158	6951	458	7458						
159	6952	459	7459						

**System Numbering: Digital Adjuncts**

(Make additional copies of this form as needed.)

Maximum: 200 Adjuncts

Log. ID	Factory-Set			Renumber to	Adjuncts	2B	Pass. Bus	MLX Telephone Ext. No.	Person, Location, Function, and Equipment Type
	2-digit	3-digit	Set Up Space						
160	6953	460	7460						
161	6954	461	7461						
162	6955	462	7462						
163	6956	463	7463						
164	6957	464	7464						
165	6958	465	7465						
166	6959	466	7466						
167	6960	467	7467						
168	6961	468	7468						
169	6962	469	7469						
170	6963	470	7470						
171	6964	471	7471						
172	6965	472	7472						
173	6966	473	7473						
174	6967	474	7474						
175	6968	475	7475						
176	6969	476	7476						
177	6970	477	7477						
178	6971	478	7478						
179	6972	479	7479						
180	6973	480	7480						
181	6974	481	7481						
182	6975	482	7482						
183	6976	483	7483						
184	6977	484	7484						
185	6978	485	7485						
186	6979	486	7486						
187	6980	487	7487						
188	6981	488	7488						
189	6982	489	7489						
190	6983	490	7490						
191	6984	491	7491						
192	6985	492	7492						
193	6986	493	7493						
194	6987	494	7494						
195	6988	495	7495						
196	6989	496	7496						
197	6990	497	7497						
198	6991	498	7498						
199	6992	499	7499						
200	6993	500	7500						



**System Numbering: Line/Trunk Jacks**

Music On Hold, Line/Trunk No. \_\_\_\_\_ Source \_\_\_\_\_ Maintenance Alarm, Line/Trunk No. \_\_\_\_\_

Loudspeaker Page, Line/Trunk No(s). \_\_\_\_\_ Loop-Start Reliable Disconnect\*  No  Yes

Module Type and Slot No.	Log. ID	Jack Type (LS, GS, DID, Tie, etc.)	Line/Trunk No.	Pool Dial-Out Code††	Re-number to	Incoming Line/Trunk No., Personal Line, WATS, FX, NI-BRI, etc.)	Telephone Number or Equipment	Label	Outmode Signaling		Toll Type Prefix Req'd for LD		Hold Disc. Interval		QCC Operator to Receive Calls† (No ♦)	QCC Queue Priority Level† (4 ♦)	Function
									TT♦	R	Yes♦	No	Short	Long ♦			
	1		801					.....									
	2		802					.....									
	3		803					.....									
	4		804					.....									
	5		805					.....									
	6		806					.....									
	7		807					.....									
	8		808					.....									
	9		809					.....									
	10		810					.....									
	11		811					.....									
	12		812					.....									
	13		813					.....									
	14		814					.....									
	15		815					.....									
	16		816					.....									
	17		817					.....									
	18		818					.....									
	19		819					.....									
	20		820					.....									

♦ Factory Setting  
 \* If the system has AUDIX Voice Power/FAX Attendant System™, Integrated Administration will automatically set Loop-Start Reliable Disconnect to Yes.  
 † Hybrid/PBX mode only.  
 ‡ Maximum: 11 pools with up to 80 trunks per pool.  
 Factory settings: 70 (main), 891 (dial-in tie), 892 (automatic-in tie).

### System Numbering: Line/Trunk Jacks

Module Type and Slot No.	Log. ID	Jack Type (LS, GS, DID, Tie, etc.)	Line/Trunk No.	Pool Dial-Out Code††	Re-number to	Incoming Line/Trunk Type (Main No., Personal Line, WATS, FX, NI-BRI, etc.)	Telephone Number or Equipment	Label	Outmode Signaling		Toll Type Prefix Req'd for LD		Hold Disc. Interval		QCC Operator to Receive Calls† (No ♦)	QCC Queue Priority Level† (4 ♦)	Function
									TT♦	R	Yes♦	No	Short	Long ♦			
	21		821														
	22		822														
	23		823														
	24		824														
	25		825														
	26		826														
	27		827														
	28		828														
	29		829														
	30		830														
	31		831														
	32		832														
	33		833														
	34		834														
	35		835														
	36		836														
	37		837														
	38		838														
	39		839														
	40		840														

♦ Factory Setting  
 † Hybrid/PBX mode only.  
 ‡ Maximum: 11 pools with up to 80 trunks per pool.  
 Factory settings: 70 (main), 891 (dial-in tie), 892 (automatic-in tie).

### System Numbering: Line/Trunk Jacks

Module Type and Slot No.	Log. ID	Jack Type (LS, GS, DID, Tie, etc.)	Line/Trunk No.	Pool Dial-Out Code†	Re-number to	Incoming Line/Trunk Type (Main No., Personal Line, WATS, FX, NI-BRI, etc.)	Telephone Number or Equipment	Label	Outmode Signaling		Toll Type Prefix Req'd for LD		Hold Disc. Interval		QCC Operator to Receive Calls† (No ♦)	QCC Queue Priority Level† (4 ♦)	Function
									TT♦	R	Yes♦	No	Short	Long ♦			
	41		841														
	42		842														
	43		843														
	44		844														
	45		845														
	46		846														
	47		847														
	48		848														
	49		849														
	50		850														
	51		851														
	52		852														
	53		853														
	54		854														
	55		855														
	56		856														
	57		857														
	58		858														
	59		859														
	60		860														

♦ Factory Setting  
 † Hybrid/PBX mode only.  
 ‡ Maximum: 11 pools with up to 80 trunks per pool.  
 Factory settings: 70 (main), 891 (dial-in tie), 892 (automatic-in tie).

**System Numbering: Line/Trunk Jacks**

Module Type and Slot No.	Log. ID	Jack Type (LS, GS, DID, Tie, etc.)	Line/Trunk No.	Pool Dial-Out Code††	Re-number to	Incoming Line/Trunk Type (Main No., Personal Line, WATS, FX, NI-BRI, etc.)	Telephone Number or Equipment	Label	Outmode Signaling		Toll Type Prefix Req'd for LD		Hold Disc. Interval		QCC Operator to Receive Callst (No ♦)	QCC Queue Priority Level† (4 ♦)	Function
									TT♦	R	Yes♦	No	Short	Long ♦			
	61		861														
	62		862														
	63		863														
	64		864														
	65		865														
	66		866														
	67		867														
	68		868														
	69		869														
	70		870														
	71		871														
	72		872														
	73		873														
	74		874														
	75		875														
	76		876														
	77		877														
	78		878														
	79		879														
	80		880														

♦ Factory Setting  
 † Hybrid/PBX mode only.  
 ‡ Maximum: 11 pools with up to 80 trunks per pool.  
 Factory settings: 70 (main), 891 (dial-in tie), 892 (automatic-in tie).

**System Numbering: Special Renumbers**

Pools* (Form 2c) Description	Factory-Set Number	Renumber to
	70	
	890	
	891	
	892	
	893	
	894	
	895	
	896	
	897	
	898	
	899	

Group Paging (Form 7b) Group ID	Factory-Set Number	Renumber to
	793	
	794	
	795	
	796	
	797	
	798	
	799	

Park Zone (Form 6a) Description	Factory-Set Number	Renumber to
	881	
	882	
	883	
	884	
	885	
	886	
	887	
	888	

DSS Page Buttons	
PAGE 1	Beginning extension for range _____
PAGE 2	Beginning extension for range _____
PAGE 3	Beginning extension for range _____

ARS Dial-Out Code†	Default	Renumber to
	9	

Group Calling (Form 7d) Group ID Label	Factory-Set Number	Renumber to
	770	
	771	
	772	
	773	
	774	
	775	
	776	
	777	
	778	
	779	
	780	
	781	
	782	
	783	
	784	
	785	
	786	
	787	
	788	
	789	
	790	
	791	
	7920	
	7921	
	7922	
	7923	
	7924‡	
	7925‡	
	7926‡	
	7927‡	
	7928‡	
	7929‡	

Listed Directory Number* (QCC Queue)	Factory-Set Number	Renumber to
	800	

Remote Access Code (Form 3a)	Factory-Set Number	Renumber to
	889	

\* Hybrid/PBX mode only.  
 † ARS Dial-Out Code is Idle Line Preference Code in Key mode.  
 ‡ Reserved for AUDIX Voice Power/FAX Attendant System.







**Class of Restriction without Barrier Codes**

**DID\* and Tie Trunks**

**Network Calls**

- None
- Tandem
- ARS

**Restriction**

- Unrestricted
- Outward Restrict ♦
- Toll Restrict

**ARS Restriction Level\***

- 0                       4
- 1                       5
- 2                       6
- 3 ♦

**Disallowed List Access**

- List Numbers (0-7)

\_\_\_\_\_

\_\_\_\_\_

**Non-Tie Trunks**

**Network Calls**

- None
- Tandem
- ARS

**Restriction**

- Unrestricted
- Outward Restrict ♦
- Toll Restrict

**ARS Restriction Level\***

- 0                       4
- 1                       5
- 2                       6
- 3 ♦

**Disallowed List Access**

- List Numbers (0-7)

\_\_\_\_\_

\_\_\_\_\_

♦ Factory Setting

\* Hybrid/PBX mode only

### Class of Restriction with Barrier Codes

Maximum: 16 barrier codes. (Make copies if more than 4 are assigned.)

<p><b>Barrier Code</b> Number _____ Digits _____ (0-9, plus *)</p> <p><b>Restriction</b> <input type="checkbox"/> Unrestricted <input type="checkbox"/> Outward Restrict ♦ <input type="checkbox"/> Toll Restrict</p> <p><b>ARS Restriction Level*</b> <input type="checkbox"/> 0                      <input type="checkbox"/> 4 <input type="checkbox"/> 1                      <input type="checkbox"/> 5 <input type="checkbox"/> 2                      <input type="checkbox"/> 6 <input type="checkbox"/> 3 ♦</p> <p><b>Disallowed List Access</b> <input type="checkbox"/> List Numbers (0-7) _____ _____</p>
---

<p><b>Barrier Code</b> Number _____ Digits _____ (0-9, plus *)</p> <p><b>Restriction</b> <input type="checkbox"/> Unrestricted <input type="checkbox"/> Outward Restrict ♦ <input type="checkbox"/> Toll Restrict</p> <p><b>ARS Restriction Level*</b> <input type="checkbox"/> 0                      <input type="checkbox"/> 4 <input type="checkbox"/> 1                      <input type="checkbox"/> 5 <input type="checkbox"/> 2                      <input type="checkbox"/> 6 <input type="checkbox"/> 3 ♦</p> <p><b>Disallowed List Access</b> <input type="checkbox"/> List Numbers (0-7) _____ _____</p>
---

<p><b>Barrier Code</b> Number _____ Digits _____ (0-9, plus *)</p> <p><b>Restriction</b> <input type="checkbox"/> Unrestricted <input type="checkbox"/> Outward Restrict ♦ <input type="checkbox"/> Toll Restrict</p> <p><b>ARS Restriction Level*</b> <input type="checkbox"/> 0                      <input type="checkbox"/> 4 <input type="checkbox"/> 1                      <input type="checkbox"/> 5 <input type="checkbox"/> 2                      <input type="checkbox"/> 6 <input type="checkbox"/> 3 ♦</p> <p><b>Disallowed List Access</b> <input type="checkbox"/> List Numbers (0-7) _____ _____</p>
---

<p><b>Barrier Code</b> Number _____ Digits _____ (0-9, plus *)</p> <p><b>Restriction</b> <input type="checkbox"/> Unrestricted <input type="checkbox"/> Outward Restrict ♦ <input type="checkbox"/> Toll Restrict</p> <p><b>ARS Restriction Level*</b> <input type="checkbox"/> 0                      <input type="checkbox"/> 4 <input type="checkbox"/> 1                      <input type="checkbox"/> 5 <input type="checkbox"/> 2                      <input type="checkbox"/> 6 <input type="checkbox"/> 3 ♦</p> <p><b>Disallowed List Access</b> <input type="checkbox"/> List Numbers (0-7) _____ _____</p>
---

♦ Factory Setting  
\* Hybrid/PBX mode only

Incoming Trunks: DS1 Connectivity (100D, 100R INA, or 100 DCD Module)

Module 1 Slot No. \_\_\_\_\_

<p><b>Type of Service</b></p> <p><input type="checkbox"/> T1 ♦*</p> <p><input type="checkbox"/> PRI††</p> <p><b>T1 Trunks</b></p> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">Trunk Type</th> <th rowspan="2">Channel Number(s)</th> <th colspan="3">For Tie/All Tie</th> </tr> <tr> <th>Tie-PBX</th> <th>Toll</th> <th>S56</th> </tr> </thead> <tbody> <tr><td>Ground-Start</td><td></td><td></td><td></td><td></td></tr> <tr><td>Loop-Start</td><td></td><td></td><td></td><td></td></tr> <tr><td>Tie</td><td></td><td></td><td></td><td></td></tr> <tr><td>Unequipped</td><td></td><td></td><td></td><td></td></tr> <tr><td>All Ground-Start</td><td></td><td></td><td></td><td></td></tr> <tr><td>All Loop-Start</td><td></td><td></td><td></td><td></td></tr> <tr><td>All Tie</td><td></td><td></td><td></td><td></td></tr> <tr><td>All Unequipped</td><td></td><td></td><td></td><td></td></tr> <tr><td>DID</td><td></td><td></td><td></td><td></td></tr> <tr><td>All DID</td><td></td><td></td><td></td><td></td></tr> <tr><td>S56 Data</td><td></td><td></td><td></td><td></td></tr> <tr><td>All S56 Data</td><td></td><td></td><td></td><td></td></tr> </tbody> </table>	Trunk Type	Channel Number(s)	For Tie/All Tie			Tie-PBX	Toll	S56	Ground-Start					Loop-Start					Tie					Unequipped					All Ground-Start					All Loop-Start					All Tie					All Unequipped					DID					All DID					S56 Data					All S56 Data					<p><b>Switch Type (PRI Service Only)</b></p> <p><input type="checkbox"/> 4ESS♦*‡ <input type="checkbox"/> DEX600E</p> <p><input type="checkbox"/> 5ESS† <input type="checkbox"/> Legend-PBX</p> <p><input type="checkbox"/> DMS-100 <input type="checkbox"/> Legend-NTWK</p> <p><input type="checkbox"/> DMS-250</p>	<p><b>Frame Format</b></p> <p><input type="checkbox"/> D4 Compatible ♦</p> <p><input type="checkbox"/> Extended Superframe (ESF)</p> <p><b>Suppression (Line Code)</b></p> <p><input type="checkbox"/> AMI-ZCS ♦</p> <p><input type="checkbox"/> B8ZS</p> <p><b>Signaling Mode (not for PRI)</b></p> <p><input type="checkbox"/> Robbed-Bit Signaling (RBS) ♦</p> <p><input type="checkbox"/> Common-Channel Signaling (CCS)</p> <p><b>Line Compensation</b></p> <p style="text-align: right;"><b>Cable Feet</b></p> <p><input type="checkbox"/> 1 (-.6 dB) ♦</p> <p><input type="checkbox"/> 2 (-1.2 dB)</p> <p><input type="checkbox"/> 3 (-1.8 dB)</p> <p><input type="checkbox"/> 4 (-2.4 dB)</p> <p><input type="checkbox"/> 5 (-3.0 dB)</p>	<p><b>Clock Synchronization</b></p> <p><b>Priority</b></p> <p><input type="checkbox"/> Primary ♦</p> <p><input type="checkbox"/> Secondary</p> <p><input type="checkbox"/> Tertiary</p> <p><input type="checkbox"/> None</p> <p><b>Source</b></p> <p><input type="checkbox"/> Loop ♦</p> <p><input type="checkbox"/> Local</p> <p><b>Activation</b></p> <p><input type="checkbox"/> Active ♦</p> <p><input type="checkbox"/> Not Active</p> <p><b>Channel Service Unit</b></p> <p><b>Access</b></p> <p><input type="checkbox"/> Foreign Exchange ♦</p> <p><input type="checkbox"/> Special Access</p> <p><b>Activation§</b></p> <p><input type="checkbox"/> Activated ♦</p> <p><input type="checkbox"/> Deactivated</p>
Trunk Type			Channel Number(s)	For Tie/All Tie																																																																			
	Tie-PBX	Toll		S56																																																																			
Ground-Start																																																																							
Loop-Start																																																																							
Tie																																																																							
Unequipped																																																																							
All Ground-Start																																																																							
All Loop-Start																																																																							
All Tie																																																																							
All Unequipped																																																																							
DID																																																																							
All DID																																																																							
S56 Data																																																																							
All S56 Data																																																																							

Module 2 Slot No. \_\_\_\_\_

<p><b>Type of Service</b></p> <p><input type="checkbox"/> T1 ♦*</p> <p><input type="checkbox"/> PRI††</p> <p><b>T1 Trunks</b></p> <table border="1" style="width:100%; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">Trunk Type</th> <th rowspan="2">Channel Number(s)</th> <th colspan="3">For Tie/All Tie</th> </tr> <tr> <th>Tie-PBX</th> <th>Toll</th> <th>S56</th> </tr> </thead> <tbody> <tr><td>Ground-Start</td><td></td><td></td><td></td><td></td></tr> <tr><td>Loop-Start</td><td></td><td></td><td></td><td></td></tr> <tr><td>Tie</td><td></td><td></td><td></td><td></td></tr> <tr><td>Unequipped</td><td></td><td></td><td></td><td></td></tr> <tr><td>All Ground-Start</td><td></td><td></td><td></td><td></td></tr> <tr><td>All Loop-Start</td><td></td><td></td><td></td><td></td></tr> <tr><td>All Tie</td><td></td><td></td><td></td><td></td></tr> <tr><td>All Unequipped</td><td></td><td></td><td></td><td></td></tr> <tr><td>DID</td><td></td><td></td><td></td><td></td></tr> <tr><td>All DID</td><td></td><td></td><td></td><td></td></tr> <tr><td>S56 Data</td><td></td><td></td><td></td><td></td></tr> <tr><td>All S56 Data</td><td></td><td></td><td></td><td></td></tr> </tbody> </table>	Trunk Type	Channel Number(s)	For Tie/All Tie			Tie-PBX	Toll	S56	Ground-Start					Loop-Start					Tie					Unequipped					All Ground-Start					All Loop-Start					All Tie					All Unequipped					DID					All DID					S56 Data					All S56 Data					<p><b>Switch Type (PRI Service Only)</b></p> <p><input type="checkbox"/> 4ESS♦*‡ <input type="checkbox"/> DEX600E</p> <p><input type="checkbox"/> 5ESS† <input type="checkbox"/> Legend-PBX</p> <p><input type="checkbox"/> DMS-100 <input type="checkbox"/> Legend-NTWK</p> <p><input type="checkbox"/> DMS-250</p>	<p><b>Frame Format</b></p> <p><input type="checkbox"/> D4 Compatible ♦</p> <p><input type="checkbox"/> Extended Superframe (ESF)</p> <p><b>Suppression (Line Code)</b></p> <p><input type="checkbox"/> AMI-ZCS ♦</p> <p><input type="checkbox"/> B8ZS</p> <p><b>Signaling Mode (not for PRI)</b></p> <p><input type="checkbox"/> Robbed-Bit Signaling (RBS) ♦</p> <p><input type="checkbox"/> Common-Channel Signaling (CCS)</p> <p><b>Line Compensation</b></p> <p style="text-align: right;"><b>Cable Feet</b></p> <p><input type="checkbox"/> 1 (-.6 dB) ♦</p> <p><input type="checkbox"/> 2 (-1.2 dB)</p> <p><input type="checkbox"/> 3 (-1.8 dB)</p> <p><input type="checkbox"/> 4 (-2.4 dB)</p> <p><input type="checkbox"/> 5 (-3.0 dB)</p>	<p><b>Clock Synchronization</b></p> <p><b>Priority</b></p> <p><input type="checkbox"/> Primary ♦</p> <p><input type="checkbox"/> Secondary</p> <p><input type="checkbox"/> Tertiary</p> <p><input type="checkbox"/> None</p> <p><b>Source</b></p> <p><input type="checkbox"/> Loop ♦</p> <p><input type="checkbox"/> Local</p> <p><b>Activation</b></p> <p><input type="checkbox"/> Active ♦</p> <p><input type="checkbox"/> Not Active</p> <p><b>Channel Service Unit</b></p> <p><b>Access</b></p> <p><input type="checkbox"/> Foreign Exchange ♦</p> <p><input type="checkbox"/> Special Access</p> <p><b>Activation§</b></p> <p><input type="checkbox"/> Activated ♦</p> <p><input type="checkbox"/> Deactivated</p>
Trunk Type			Channel Number(s)	For Tie/All Tie																																																																			
	Tie-PBX	Toll		S56																																																																			
Ground-Start																																																																							
Loop-Start																																																																							
Tie																																																																							
Unequipped																																																																							
All Ground-Start																																																																							
All Loop-Start																																																																							
All Tie																																																																							
All Unequipped																																																																							
DID																																																																							
All DID																																																																							
S56 Data																																																																							
All S56 Data																																																																							

NOTE: Do not configure 100D, 100R INA, or 100 DCD modules to do trunk-to-trunk transfers between DS1 and LS lines/trunks.

♦ Factory Setting

\* The factory setting of T1 is **not** automatically selected if you enter nothing; it must be entered.

† PRI must be selected as the Type of DS1 connectivity before PRI options are entered.

‡ AT&T Toll and 5ESS local PRI service requires service provider switching equipment to be either 4ESS Generic 13 through Generic 16, 5ESS Generic 6, or a 5ESS serving the FTS2000 network.

§ For 100R INA and 100 DCD modules only.

Module 3 Slot No. \_\_\_\_\_

<b>Type of Service</b>	<b>Switch Type (PRI Service Only)</b>	<b>Frame Format</b>	<b>Clock Synchronization</b>
<input type="checkbox"/> T1 ♦*	<input type="checkbox"/> 4ESS♦†	<input type="checkbox"/> D4 Compatible ♦	<b>Priority</b>
<input type="checkbox"/> PRI†‡	<input type="checkbox"/> DEX600E	<input type="checkbox"/> Extended Superframe (ESF)	<input type="checkbox"/> Primary ♦
	<input type="checkbox"/> 5ESS‡	<input type="checkbox"/> AMI-ZCS ♦	<input type="checkbox"/> Secondary
	<input type="checkbox"/> DMS-100	<input type="checkbox"/> B8ZS	<input type="checkbox"/> Tertiary
	<input type="checkbox"/> DMS-250	<input type="checkbox"/> Legend-PBX	<input type="checkbox"/> None
		<input type="checkbox"/> Legend-NTWK	<b>Source</b>
<b>T1 Trunks</b>		<input type="checkbox"/> Robbed-Bit Signaling (RBS) ♦	<input type="checkbox"/> Loop ♦
		<input type="checkbox"/> Common-Channel Signaling (CCS)	<input type="checkbox"/> Local
		<b>Line Compensation</b>	<b>Activation</b>
		<b>Cable Feet</b>	<input type="checkbox"/> Active ♦
		<input type="checkbox"/> 1 (-.6 dB) ♦	<input type="checkbox"/> Not Active
		<input type="checkbox"/> 2 (-1.2 dB)	<b>Channel Service Unit</b>
		<input type="checkbox"/> 3 (-1.8 dB)	<b>Access</b>
		<input type="checkbox"/> 4 (-2.4 dB)	<input type="checkbox"/> Foreign Exchange ♦
		<input type="checkbox"/> 5 (-3.0 dB)	<input type="checkbox"/> Special Access
			<b>Activation§</b>
			<input type="checkbox"/> Activated ♦
			<input type="checkbox"/> Deactivated

Trunk Type	Channel Number(s)	For Tie/All Tie		
		Tie-PBX	Toll	S56
Ground-Start		X	X	X
Loop-Start		X	X	X
Tie				
Unequipped		X	X	X
All Ground-Start		X	X	X
All Loop-Start		X	X	X
All Tie				
All Unequipped		X	X	X
DID		X	X	X
All DID		X	X	X
S56 Data		X	X	X
All S56 Data		X	X	X

NOTE: Do not configure 100D, 100R INA, or 100 DCD modules to do trunk-to-trunk transfers between DS1 and LS lines/trunks.

♦ Factory Setting

\* The factory setting of T1 is **not** automatically selected if you enter nothing; it must be entered.

† PRI must be selected as the Type of DS1 connectivity before PRI options are entered.

‡ AT&T Toll and 5ESS local PRI service requires service provider switching equipment to be either 4ESS Generic 13 through Generic 16, 5ESS Generic 6, or a 5ESS serving the FTS2000 network.

§ For 100R INA or 100 DCD modules only.



**Form 3b** (Continued)

**PRI Services**

Maximum: 3 Modules. (Make copies of this page for additional modules.)

Module Slot No. \_\_\_\_\_

B-Channel Group No.	Outgoing Services*	Incoming Services*	Incoming Routing	
			Dial Plan Routing†‡	Line Appearance§

\* *Services:*  
 AT&T Toll: Megacom WATS, Megacom 800, ACCUNET® SDS, Software Defined Network (SDN), MultiQuest, Long Distance.  
 5ESS Local: OUTWATS, 56/64 Digital, Virtual Private Network, INWATS.  
 MCI Toll: MCI PRISM, MCI Vnet, MCI 800, MCI 900  
 DMS-100 Local: DMS Private, DMS INWATS, DMS OUTWATS, DMS Foreign Exchange (FX), DMS Tie Trunk.  
 Other: Call-by-Call, Other.

† Hybrid/PBX mode only.

‡ If you select Dial Plan Routing, complete "Dial Plan Routing" information on Form 3b-6.

§ If you select Line Appearance, complete "Line Appearance Routing" information on Form 3b-5.



**Dial Plan Routing (Incoming Services)\***

Maximum: 16 entries

Entry No.	0	1	2	3	4	5	6	7
Service†								
Pattern to Match‡								
Total Digits in Dialed Number (0-14)								
Delete Digits (0-14)								
Add Digits (0-4)								

Entry No.	8	9	10	11	12	13	14	15
Service†								
Pattern to Match‡								
Total Digits in Dialed Number (0-14)								
Delete Digits (0-14)								
Add Digits (0-4)								

\* Hybrid/PBX mode only.

† Services:

AT&T Toll: Megacom WATS, Megacom 800, ACCUNET® SDS, Software Defined Network (SDN), MultiQuest, Long Distance.

5ESS Local: OUTWATS, 56/64 Digital, Virtual Private Network, INWATS.

MCI Toll: MCI PRISM, MCI Vnet, MCI 800, MCI 900

DMS-100 Local: DMS Private, DMS INWATS, DMS OUTWATS, DMS Foreign Exchange (FX), DMS Tie Trunk.

Other: Call-by-Call, Other.

‡ Pattern of up to 8 digits.

**Outgoing Tables (Outgoing Services)**

**Network Selection Table**

Maximum: 4 entries

Entry No.	0♦	1♦	2	3
Dial Prefix*	101***	10***		

**Special Services Table**

Maximum: 8 entries

Entry No.	0	1	2	3	4	5	6	7
Pattern to Match†	011	010	01	00	0	1		
Operator‡	none	OP	OP	P	OP	none		
Type of No. (N=Nat'l; I=Int'l)	I	I	I	N	N	N		
Delete Digits (0-4)	3	3	2	2	1	1		

♦ Defaults.

\* Dial Pattern can be up to 8 digits (\* is a wildcard); must include at least one number; cannot begin with \*.

† Pattern can be up to 4 digits; no asterisks(\*).

‡ Operator: Local Operator (OP), Presubscribed Carrier (P), No operator (none).

**Call-By-Call Service Table**

Maximum: 10 entries

Entry No.	0	1	2	3	4
Pattern to Match (up to 10 entries)					
Call Type (Voice/Data/Both)					
Service*					
Delete Digits (0-8)					

Entry No.	5	6	7	8	9
Pattern to match (up to 10 entries)					
Call-Type (Voice/Data/Both)					
Service*					
Delete Digits (0-8)					

\* Services:

AT&T Toll: Megacom WATS, Megacom 800, ACCUNET® SDS, Software Defined Network (SDN), MultiQuest, Long Distance.  
 5ESS Local: OUTWATS, 56/64 Digital, Virtual Private Network, INWATS.  
 MCI Toll: MCI PRISM, MCI Vnet, MCI 800, MCI 900  
 DMS-100 Local: DMS Private, DMS INWATS, DMS OUTWATS, DMS Foreign Exchange (FX), DMS Tie Trunk.  
 Other: Call-by-Call, Other.



**Test Telephone Numbers**

**Module 1:** \_\_\_\_\_ **Module 2:** \_\_\_\_\_ **Module 3:** \_\_\_\_\_

**PRI Protocol**

**Timers and Counters**

	Factory Setting	Change to
T200 Timer	1 second	(1000–3000 ms)
T203 Timer	30 seconds	(1–60 seconds)
N200 Counter	3 transmissions	(1–5 transmissions)
N201 Counter	260 octets	(16–260 octets)
K Counter	7 frames	(1–15 frames)
T303 Timer	4 seconds	(4–12 seconds)
T305 Timer	4 seconds	(4–30 seconds)
T308 Timer	4 seconds	(4–12 seconds)
T309 Timer	90 seconds	(30–120 seconds)
T310 Timer	60 seconds	(2–120 seconds)
T313 Timer	4 seconds	(4–60 seconds)
T316 Timer	120 seconds	(3–120 seconds)

**Terminal Equipment Identifier (TEI)**

- 0 ♦
- \_\_\_\_\_ (1–63)

♦ *Factory Setting*

### T1 Switch 56 Options\*

Maximum: 3 modules (Make additional copies of this page as needed.)

Module Slot No.: \_\_\_\_\_ Channel No.: \_\_\_\_\_

**Type**

- Incoming
- Outgoing
- Two Way ♦

**Incoming Signaling Type**

- Wink ♦
- Auto
- Delay

**Outgoing Signaling Type**

- Wink ♦
- Auto
- Delay

**Incoming Signaling Mode**

- Rotary
- Touch-tone ♦

**Incoming Signaling Mode**

- Rotary
- Touch-tone ♦

**Dial Plan Routing Options**

**Expected Digits**

- 1
- 2
- 3 ♦
- 4

**Delete Digits**

- 0 ♦
- 1
- 2
- 3
- 4

**Add Digits**

- 0 digits ♦
- Add these digits \_\_\_\_\_  
(Any number from 1-9999)

♦ Factory Setting

\* T1 must be selected as the Type of DS1 connectivity. The T1 Truck Type must be configured as S56 (not T1-tie).















**Automatic Route Selection Tables\***

Maximum: 24 Tables (16 in Release 1.0 systems). (Make a copy for each table.)

Table No. \_\_\_\_\_

**Type of Table**

- 6-Digit
- Area Code
- Exchange
- 1 + 7, dialing from
  - within area code
  - not within area code ◆

**Area Code/Exchanges**

001_____	021_____	041_____	061_____	081_____
002_____	022_____	042_____	062_____	082_____
003_____	023_____	043_____	063_____	083_____
004_____	024_____	044_____	064_____	084_____
005_____	025_____	045_____	065_____	085_____
006_____	026_____	046_____	066_____	086_____
007_____	027_____	047_____	067_____	087_____
008_____	028_____	048_____	068_____	088_____
009_____	029_____	049_____	069_____	089_____
010_____	030_____	050_____	070_____	090_____
011_____	031_____	051_____	071_____	091_____
012_____	032_____	052_____	072_____	092_____
013_____	033_____	053_____	073_____	093_____
014_____	034_____	054_____	074_____	094_____
015_____	035_____	055_____	075_____	095_____
016_____	036_____	056_____	076_____	096_____
017_____	037_____	057_____	077_____	097_____
018_____	038_____	058_____	078_____	098_____
019_____	039_____	059_____	079_____	099_____
020_____	040_____	060_____	080_____	100_____

Subpattern A Time of Day				
Pool	FRL (3 ◆)‡	Other Digits	Absorb	Call Type† (Both ◆)
1_____	_____	_____	1_____	_____
2_____	_____	_____	2_____	_____
3_____	_____	_____	3_____	_____
4_____	_____	_____	4_____	_____
5_____	_____	_____	5_____	_____
6_____	_____	_____	6_____	_____

Subpattern B Time of Day				
Pool	FRL (3 ◆)‡	Other Digits	Absorb	Call Type† (Both ◆)
1_____	_____	_____	1_____	_____
2_____	_____	_____	2_____	_____
3_____	_____	_____	3_____	_____
4_____	_____	_____	4_____	_____
5_____	_____	_____	5_____	_____
6_____	_____	_____	6_____	_____

◆ Factory Setting

\* Hybrid/PBX mode only

† Select Voice only, Data only, or Both.

‡ Local tables default FRL is 2.

Table No. \_\_\_\_\_

**Type of Table**

- 6-Digit
- Area Code
- Exchange
- 1 + 7, dialing from
  - within area code
  - not within area code ♦

**Area Code/Exchanges**

001_____	021_____	041_____	061_____	081_____
002_____	022_____	042_____	062_____	082_____
003_____	023_____	043_____	063_____	083_____
004_____	024_____	044_____	064_____	084_____
005_____	025_____	045_____	065_____	085_____
006_____	026_____	046_____	066_____	086_____
007_____	027_____	047_____	067_____	087_____
008_____	028_____	048_____	068_____	088_____
009_____	029_____	049_____	069_____	089_____
010_____	030_____	050_____	070_____	090_____
011_____	031_____	051_____	071_____	091_____
012_____	032_____	052_____	072_____	092_____
013_____	033_____	053_____	073_____	093_____
014_____	034_____	054_____	074_____	094_____
015_____	035_____	055_____	075_____	095_____
016_____	036_____	056_____	076_____	096_____
017_____	037_____	057_____	077_____	097_____
018_____	038_____	058_____	078_____	098_____
019_____	039_____	059_____	079_____	099_____
020_____	040_____	060_____	080_____	100_____

Subpattern A Time of Day					Subpattern B Time of Day				
Pool	FRL (3 ♦) ‡	Other Digits	Absorb	Call Type† (Both ♦)	Pool	FRL (3 ♦) ‡	Other Digits	Absorb	Call Type† (Both ♦)
1_____	_____	_____	1_____	_____	1_____	_____	_____	1_____	_____
2_____	_____	_____	2_____	_____	2_____	_____	_____	2_____	_____
3_____	_____	_____	3_____	_____	3_____	_____	_____	3_____	_____
4_____	_____	_____	4_____	_____	4_____	_____	_____	4_____	_____
5_____	_____	_____	5_____	_____	5_____	_____	_____	5_____	_____
6_____	_____	_____	6_____	_____	6_____	_____	_____	6_____	_____

♦ Factory Setting  
 \* Select Voice only, Data only, or Both.  
 ‡ Local tables default FRL is 2.

**Automatic Route Selection Default and Special Numbers Tables\***

**Table 25 (17 in Release 1.0 systems): Default Toll Table**

Subpattern A Time of Day					Subpattern B Time of Day				
Pool	FRL (3 ♦)	Other Digits	Absorb	Call Type† (Both ♦)	Pool	FRL (3 ♦)	Other Digits	Absorb	Call Type† (Both ♦)
1 _____	_____	_____	1 _____	_____	1 _____	_____	_____	1 _____	_____
2 _____	_____	_____	2 _____	_____	2 _____	_____	_____	2 _____	_____
3 _____	_____	_____	3 _____	_____	3 _____	_____	_____	3 _____	_____
4 _____	_____	_____	4 _____	_____	4 _____	_____	_____	4 _____	_____
5 _____	_____	_____	5 _____	_____	5 _____	_____	_____	5 _____	_____
6 _____	_____	_____	6 _____	_____	6 _____	_____	_____	6 _____	_____

**Table 26 (18 in Release 1.0 systems): Default Local Table**

Subpattern A Time of Day					Subpattern B Time of Day				
Pool	FRL (2 ♦)	Other Digits	Absorb	Call Type† (Both ♦)	Pool	FRL (2 ♦)	Other Digits	Absorb	Call Type† (Both ♦)
1 _____	_____	_____	1 _____	_____	1 _____	_____	_____	1 _____	_____
2 _____	_____	_____	2 _____	_____	2 _____	_____	_____	2 _____	_____
3 _____	_____	_____	3 _____	_____	3 _____	_____	_____	3 _____	_____
4 _____	_____	_____	4 _____	_____	4 _____	_____	_____	4 _____	_____
5 _____	_____	_____	5 _____	_____	5 _____	_____	_____	5 _____	_____
6 _____	_____	_____	6 _____	_____	6 _____	_____	_____	6 _____	_____

**Table 27 (19 in Release 1.0 systems): Dial 0**

Pool	FRL (3 ♦)	Other Digits
1 _____	_____	_____

**Table 28 (20 in Release 1.0 systems): Special Number (411, 611, 811, 911‡)**

Pool§	FRL (3 ♦)	Other Digits
1 70 _____	_____	_____

**Table 29 (Not available in Release 1.0 systems): E911**

Pool	FRL	Other Digits
1 _____	0	_____

♦ Factory Setting  
 \* Hybrid/PBX mode only  
 † Select Voice only, Data only, or Both.  
 ‡ Release 1.0 systems only.  
 § Always set to the first pool in the system; cannot be changed.









**Clock Synchronization—100D, 100R INA, 100 DCD, or BRI Modules\***

**Primary Clock Synchronization**

Slot No. \_\_\_\_\_

DSL No. \_\_\_\_\_ (BRI only)

**Source**

- Loop
- Local (100D, 100R INA, or 100 DCD only)

**Secondary Clock Synchronization**

Slot No. \_\_\_\_\_

DSL No. \_\_\_\_\_ (BRI only)

**Source**

- Loop ♦
- Local (100D, 100R INA, or 100 DCD only)

**Tertiary Clock Synchronization**

Slot No. \_\_\_\_\_

DSL No. \_\_\_\_\_ (BRI only)

**Source**

- Loop ♦
- Local (100D, 100R INA, or 100 DCD only)

**Timers**

**T200 Timer**

- 1,000 ms. ♦
- \_\_\_\_\_ ms. (500 to 5,000 ms. in increments of 500 ms)

**T203 Timer**

- 33 seconds ♦
- \_\_\_\_\_ seconds (10 to 255 seconds in increments of 1 second)

**T303 Timer**

- 4 seconds ♦
- \_\_\_\_\_ seconds (2 to 10 seconds in increments of 1 second)

**T305 Timer**

- 30 seconds ♦
- \_\_\_\_\_ seconds (2 to 60 seconds in increments of 1 second)

**T308 Timer**

- 4 seconds ♦
- \_\_\_\_\_ seconds (2 to 10 seconds in increments of 1 second)

♦ *Factory Setting*

\* *If the system includes 800 NI-BRI modules, 100D modules, 100R INA modules, and 100 DCD modules, synchronization planning should be completed at the same time. Refer to Form 3b while completing this form.*

**Form 3j**

**Enhanced 911 Service\***

**Allow-11**

- Enable
- Disable ♦

**Type of E911 Service**

- E911 Partition ♦
- E911 Adjunct

**E911 Partition**

Enter trunks (801-880).

**Partition** \_\_\_\_\_ (All extensions in Partition 1 ♦)


**Partition Digits** (up to 20): \_\_\_\_\_

**Partition** \_\_\_\_\_


**Partition Digits** (up to 20): \_\_\_\_\_

**Copy Form As Needed**

♦ Factory Setting

\* Hybrid/PBX mode only; MERLIN MAGIX systems of Release 1.5 or later.

**E911 Adjunct**

Enter up to five trunks (801–880). Use loop-start or ground-start (preferred) trunks. Use ground-start trunks connected to 800 GS/LS-ID modules of vintage 1.4 or greater and to 408 GS/LS-ID-MLX modules of vintage 3.2 or greater.

--	--	--	--	--

**E911 Adjunct Alarm Extension** \_\_\_\_\_ (The first operation position is the factory setting.)

Extension Copy: Analog Multiline Telephone Template  
**Discontinued**

**Discontinued**


**Analog Multiline Telephone**

**Discontinued**

**Discontinued**



**Button Diagram**

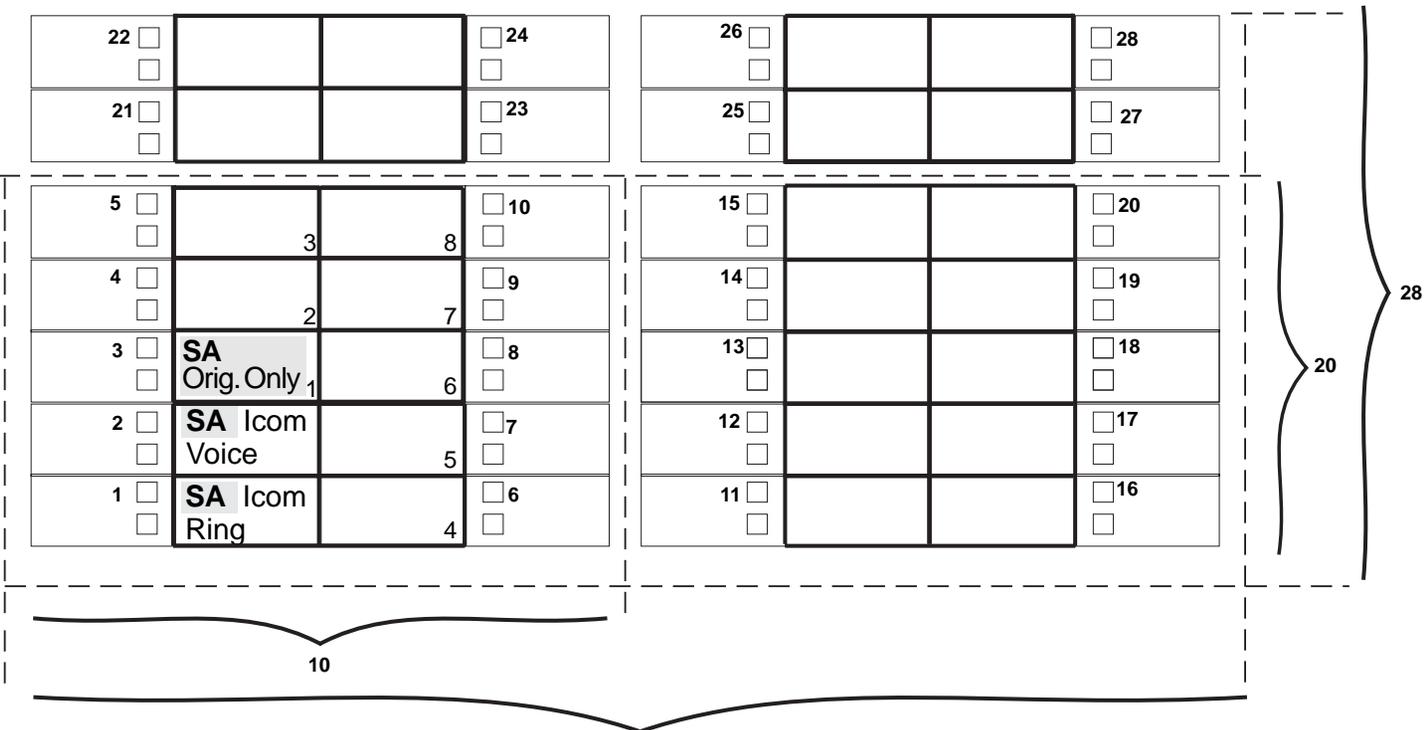

**Note:** Lines 1 through 8 only default on a telephone when the system is in Key mode.





## MLX Telephone

(Make a copy of this form for each telephone.)

Logical ID \_\_\_\_\_ Extension No. \_\_\_\_\_ Person or Location \_\_\_\_\_

Copied from Master Ext. No. \_\_\_\_\_

Wall Mount

### Telephone Model

MLX-20L®\*

MLX-28D®

MLX-16DP®

MLX-10D®

MLX-10DP®†

MLX-10®

MLX-5D®

MLX-5®

### Adjuncts

Headset

Hearing-impaired handset

Noisy environment

Multi-Function Module (MFM) (Not supported on the MLX-5 and MLX-5D) Extension No. \_\_\_\_\_

FAX machine

Answering machine

Data terminal

Alert device, type \_\_\_\_\_

Other \_\_\_\_\_

Off Premises

Passageway

### Personal Lines

\_\_\_\_\_

\_\_\_\_\_

Shared Extension No. \_\_\_\_\_

Ring

No Ring

### Auto Line Selection

\_\_\_\_\_

\_\_\_\_\_

### Centralized Programming Requirements\*\*

Assign Service Observing Button

◆ Factory Setting

\* The system capacity for Personal Directories is decreased by one whenever an MLX-20L telephone is connected to an MLX port.

† This telephone is the same as the MLX-10D except it has an adjunct plug in the back for connection to a PC when programming telephone features using the PassageWay™ Direct Connect Solution software application. This telephone is available with Release 2.1 and later.

\*\* Refer to Form 11 to assign as a Service Observer.

### Optional Features

#### Abbreviated Ring

Off

On ◆

#### Auto Callback

Off ◆

On

#### Call Waiting

Off ◆

On

#### Voice-Announced Calls

On ◆

Off

On Idle Only

#### Coverage Inside

Off

On ◆

#### Cover Ring Delay

##### Primary Cover Ring Delay

2 Rings ◆

\_\_\_\_\_rings (1-6)

##### Secondary Cover Ring Delay

2 Rings ◆

\_\_\_\_\_rings (1-6)

##### Group Coverage Ring Delay

3 Rings ◆


\_\_\_\_\_rings (1-9)

#### Computer Telephony Integrated Client PC

Yes

No ◆

**Button Diagram**  
 See Master Extension

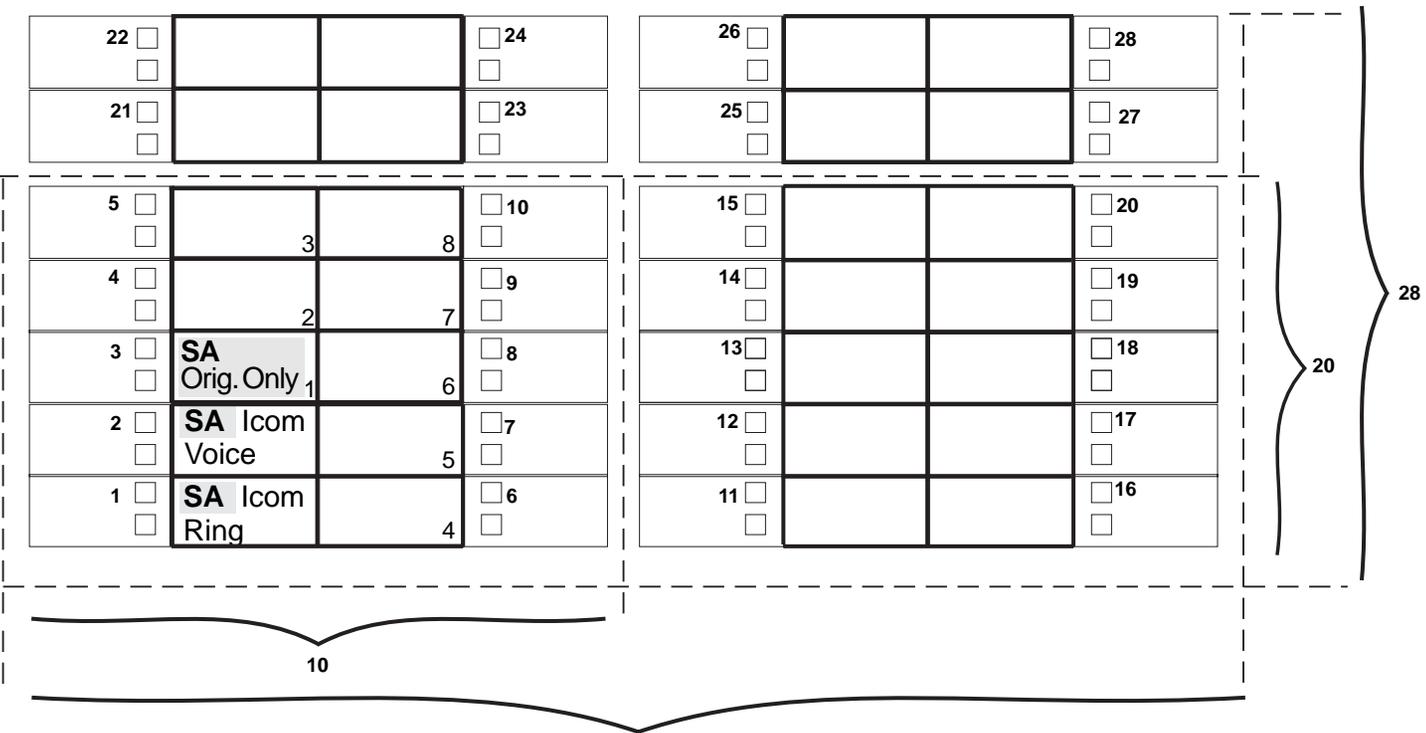

**Note:** Lines 1 through 8 only default on a telephone when the system is in Key mode.

**Button Diagram**

See Master Extension

 13  			 16  
 12  			 15  
 11  			 14  
 5  			 10  
 4  			 9  
 3  	<b>SA</b> Orig. Only		 8  
 2  	<b>SA</b> Icom Voice		 7  
 1  	<b>SA</b> Icom Ring		 6  

Button Diagram for MLX-16DP Telephone



**MFM Adjunct: MLX Telephone**

Extension No. \_\_\_\_\_ Person or Location \_\_\_\_\_

Connected to MLX extension No. \_\_\_\_\_

Copied from Master Extension No. \_\_\_\_\_

**Adjuncts**

- FAX machine
- Answering machine
  - Used as delay announcement device for calling groups  
Ext. No. \_\_\_\_\_
- Data terminal
- Alert device, type \_\_\_\_\_
  - Used as Calls-in-Queue Alarm device for calling groups  
Ext. No. \_\_\_\_\_
- Other \_\_\_\_\_

**Button Diagram**

- See Master Extension

Line 3	5	Line 8	10
Line 2	4	Line 7	9
Line 1 SA Orig. Only	3	Line 6	8
SA Icom Voice	2	Line 5	7
SA Icom Ring	1	Line 4	6

**Note:** Lines 1 through 8 only default on a telephone when the system is in Key mode.

**Centralized Programming Requirements**

- Disable Voice Announce – change button 2 assignment to System Access Originate Only and remove button 3 assignment
- Enable Ringing/Idle Line Preference
- Change Automatic Line Selection order to: (1) System Access Ring, (2) System Access Originate Only, (3) outside trunks assigned to buttons 3 through 10
- Set Ringing Option to No Ring for each personal line on which calls are **not** received

**Auto Line Selection**

\_\_\_\_\_

\_\_\_\_\_

**Optional Features**

**Auto Callback**

- Off ♦
- On

**Call Waiting**

- Off ♦
- On

**Coverage Inside**

- Off
- On ♦

**Cover Ring Delay**

**Primary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_rings (1–6)

**Secondary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_rings (1–6)

**Group Coverage Ring Delay**

- 3 Rings ♦
- \_\_\_rings (1–9)

♦ Factory Setting



## Tip/Ring Equipment

(Make a copy of this form for each device.)

Logical ID \_\_\_\_\_ Extension No. \_\_\_\_\_ Person or Location \_\_\_\_\_

**Type**

- Single-line telephone
- Answering machine
  - Used as delay announcement device for calling groups  
Ext. No. \_\_\_\_\_
- FAX machine
- PARTNER Doorphone (008 OPT or 016 ETR module)
- Other \_\_\_\_\_

**Adjuncts**

- Speakerphone
- Hearing-impaired handset
- Noisy environment
- Off Premises via OPRE

**Auto Line Selection**

\_\_\_\_\_

**Button Diagram**

Line 3	5	Line 8	10
Line 2	4	Line 7	9
Line 1 SA Orig. Only	3	Line 6	8
SA Icom Ring	2	Line 5	7
SA Icom Ring	1	Line 4	6

**Optional Features**

**Auto Callback**

- Off ♦
- On

**Call Waiting**

- Off ♦
- On

**Coverage Inside**

- Off
- On ♦

**HotLine**

- Off ♦
- On  
Tel. No. or Ext. No. \_\_\_\_\_

**Cover Ring Delay**

**Primary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_\_rings (1-6)

**Secondary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_\_rings (1-6)

**Group Coverage Ring Delay**

- 3 Rings ♦
- \_\_\_\_rings (1-9)

**Centralized Programming Requirements**

- Remove all but one SA button to disable features such as Transfer and Conference.


♦ Factory Setting





**ETR-34D Button Diagram**


These buttons not used in MERLIN MAGIX system.

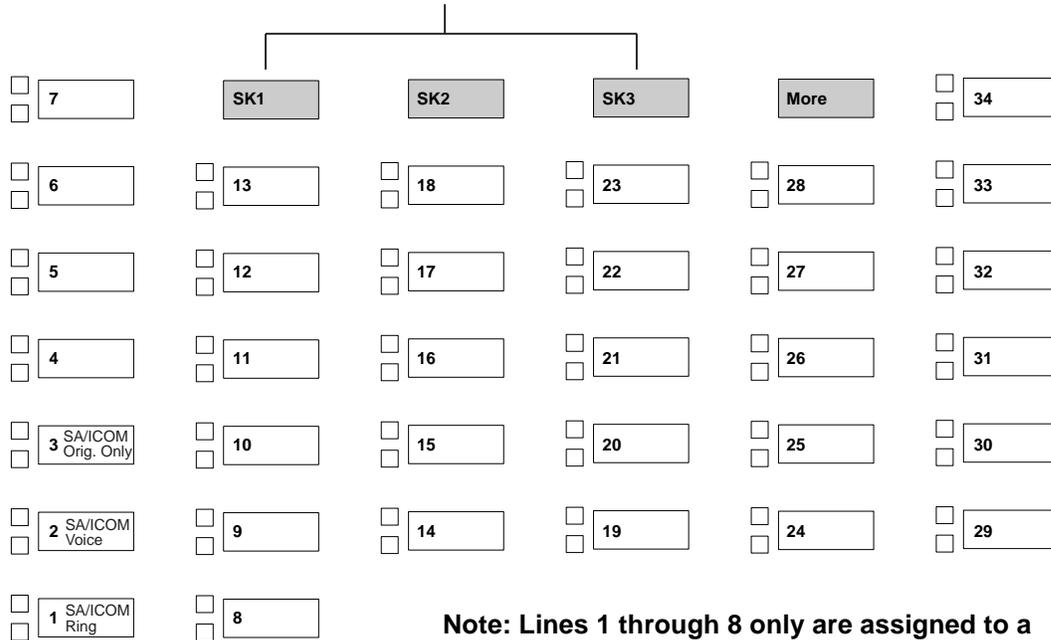

**Note: Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.**


**ETR-18/18D Button Diagram**

These buttons not used in MERLIN MAGIX system.

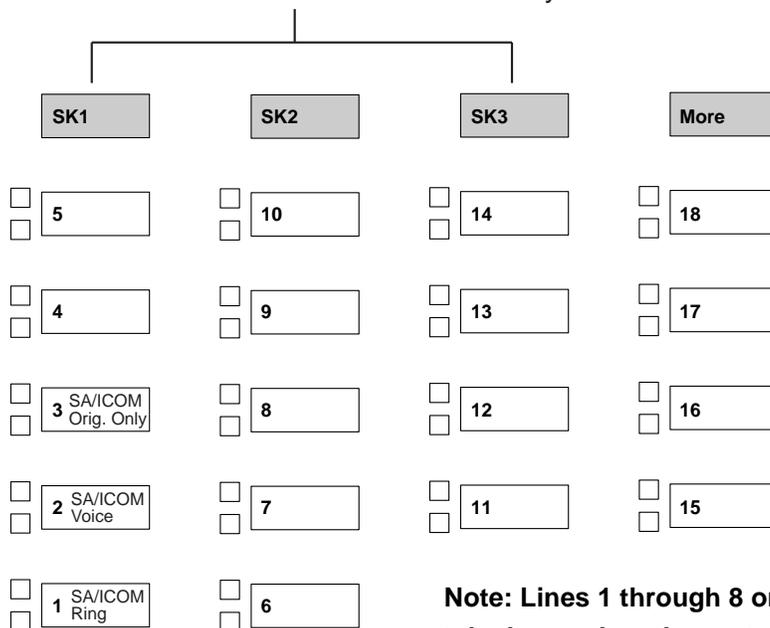

**Note: Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.**

**ETR-6 Button Diagram**

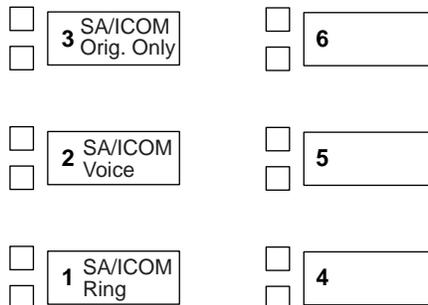



**Form 4h**

**ETR Telephone**

(Make a copy of this form for each telephone.)

Logical ID \_\_\_\_\_ Extension No. \_\_\_\_\_ Person or Location \_\_\_\_\_

Copied from Master Ext. No. \_\_\_\_\_

**Telephone Model**

- ETR-34D®
- ETR-18D®
- ETR-18®
- ETR-6®

**Adjuncts**

- Off Premises via OPRE

**Personal Lines**

\_\_\_\_\_  
\_\_\_\_\_

**Shared Extension No.** \_\_\_\_\_

- Ring
- No Ring

**Auto Line Selection**

\_\_\_\_\_  
\_\_\_\_\_

**Optional Features**

**Abbreviated Ring**

- Off
- On ♦

**Auto Callback**

- Off ♦
- On

**Call Waiting**

- Off ♦
- On

**Coverage Inside**

- Off
- On ♦

**Computer Telephony Integrated Client PC**

- Yes
- No♦

**Cover Ring Delay**

**Primary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_rings (1-6)

**Secondary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_rings (1-6)

**Group Coverage Ring Delay**

- 3 Rings ♦
- \_\_\_rings (1-9)


♦ Factory Setting

**Form 4h** (Continued)

**ETR-34D Button Diagram**

See Master Extension

These buttons not used in MERLIN MAGIX system.

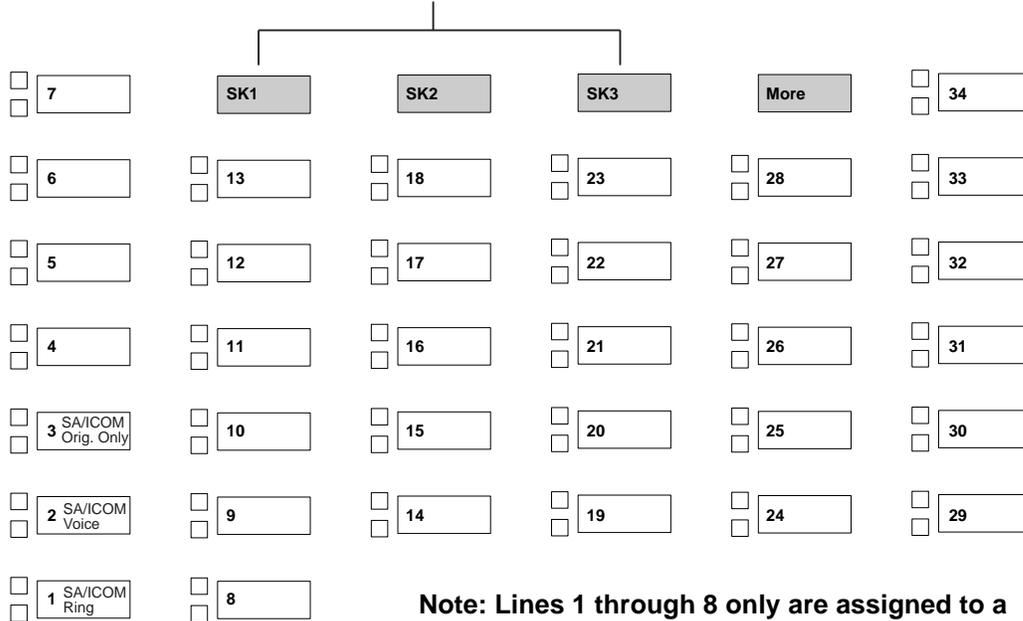


**Note: Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.**

**ETR-18/18D Button Diagram**

See Master Extension

These buttons not used in MERLIN MAGIX system.

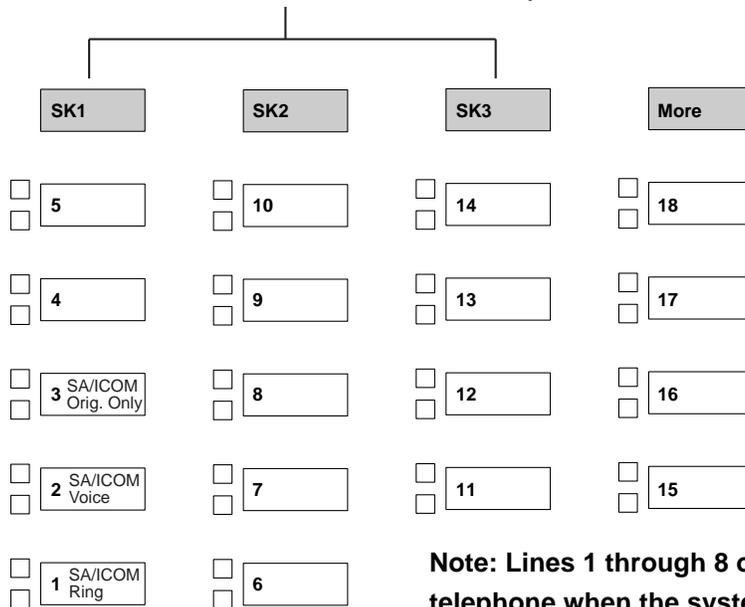


**Note: Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.**

**Form 4h** (Continued)

---

**ETR-6 Button Diagram**

See Master Extension

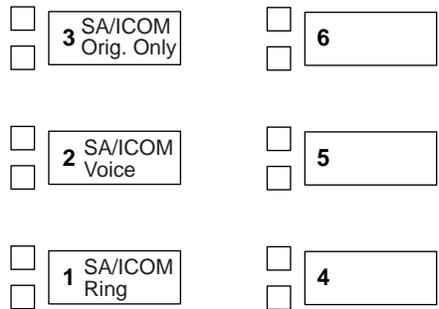







**Form 4i** (Continued)

**MLS-34D Button Diagram**

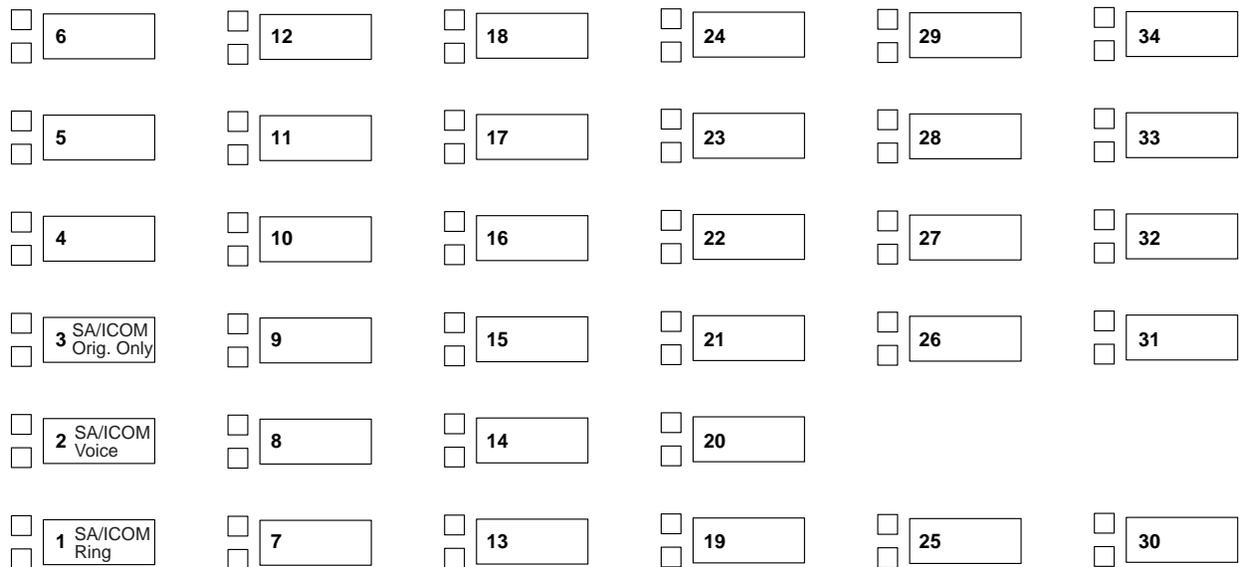


**Note: Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.**

**MLS-18D Button Diagram**

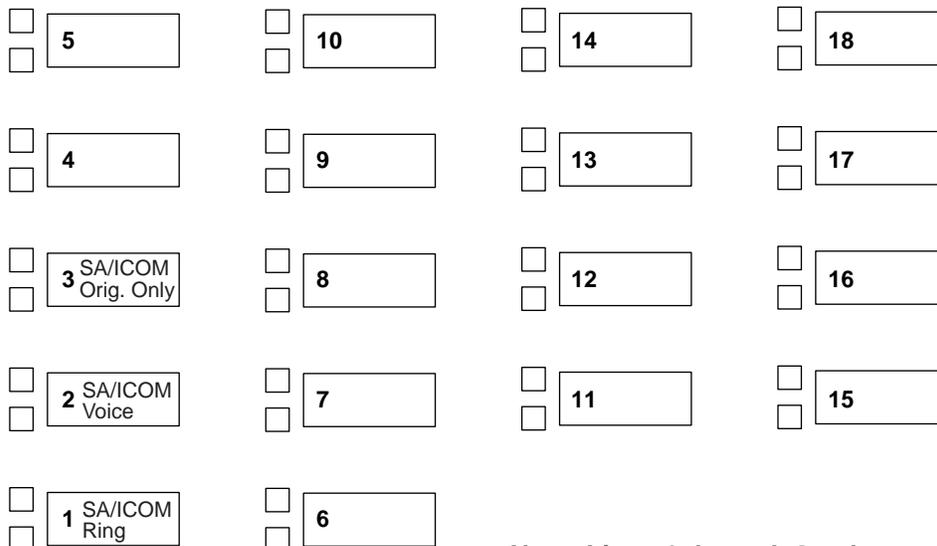

**Note: Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.**


**MLS-12/12D Button Diagram**

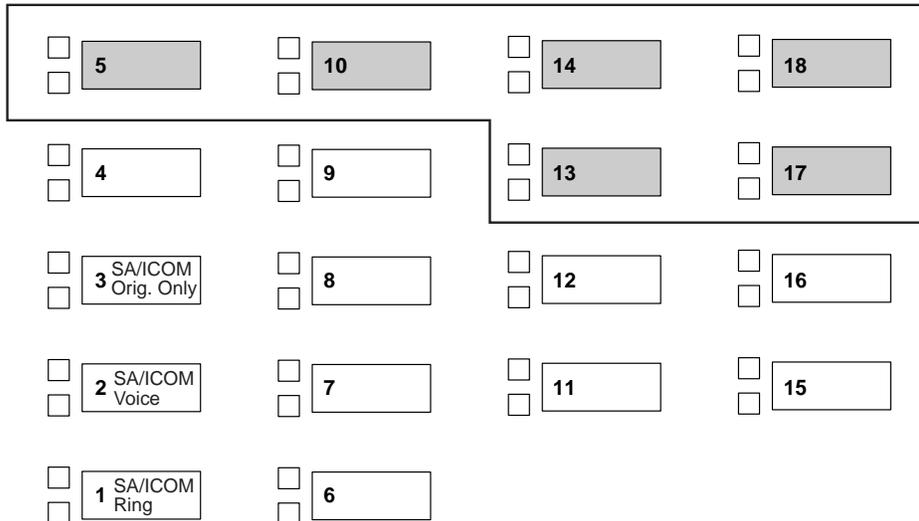

Do not use these buttons for any facilities or features that require LEDs.

**Note: Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.**

**MLS-6 Button Diagram**

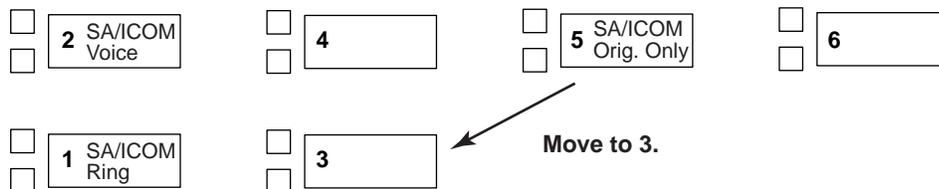



**Form 4j**

**MLS Telephone\***

(Make a copy of this form for each telephone.)

Logical ID \_\_\_\_\_ Extension No. \_\_\_\_\_ Person or Location \_\_\_\_\_

Copied from Master Ext. No. \_\_\_\_\_

**Telephone Model**

- MLS-34D®
- MLS-18D®
- MLS-12D®
- MLS-12
- MLS-6®
- TransTalk®
- Business Cordless 905®

**Adjuncts**

- Off Premises via OPRE

**Personal Lines**

\_\_\_\_\_  
\_\_\_\_\_

**Shared Extension No.** \_\_\_\_\_

- Ring
- No Ring

**Auto Line Selection**

\_\_\_\_\_  
\_\_\_\_\_

**Optional Features**

**Abbreviated Ring**

- Off
- On ♦

**Auto Callback**

- Off ♦
- On

**Call Waiting**

- Off ♦
- On

**Coverage Inside**

- Off
- On ♦

**Computer Telephony Integrated Client PC**

- Yes
- No♦

**Cover Ring Delay**

**Primary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_rings (1-6)

**Secondary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_rings (1-6)

**Group Coverage Ring Delay**


- 3 Rings ♦
- \_\_\_rings (1-9)

♦ Factory Setting  
\* No longer available

**Form 4j** (Continued)

**MLS-34D Button Diagram**


See Master Extension

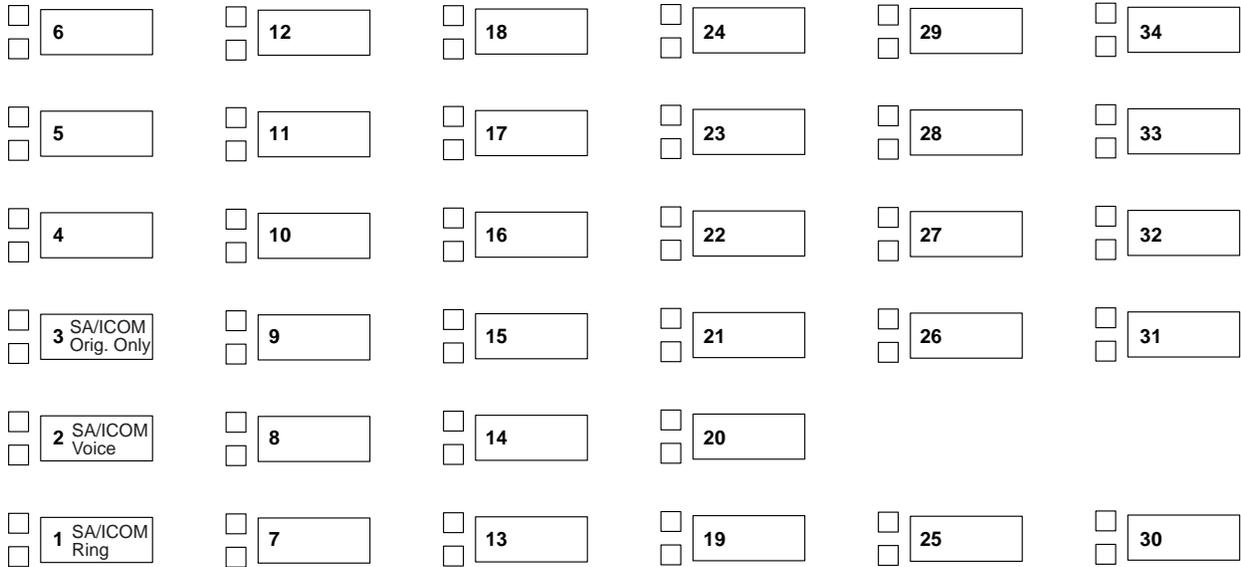

**Note: Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.**

**MLS-18D Button Diagram**

See Master Extension

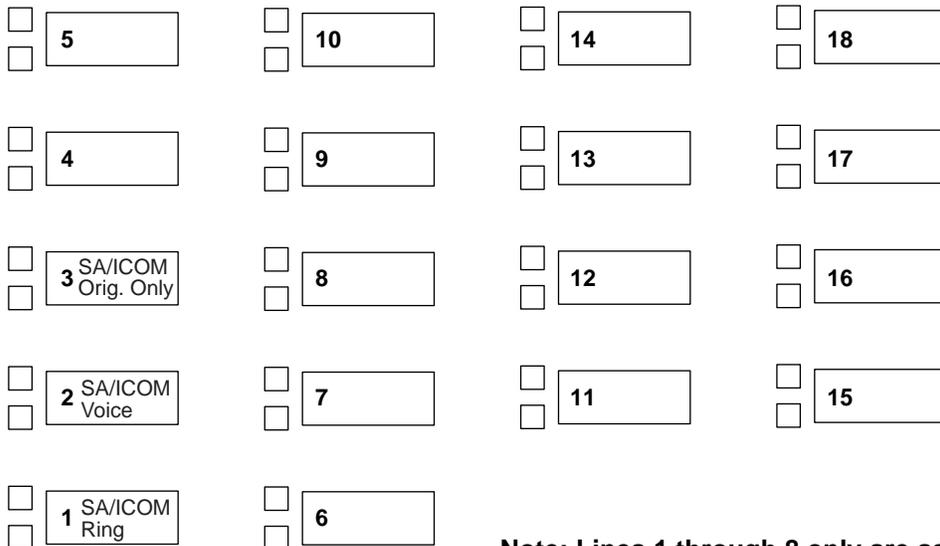


**Note: Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.**

**Form 4j** (Continued)

**MLS-12/12D Button Diagram**

See Master Extension

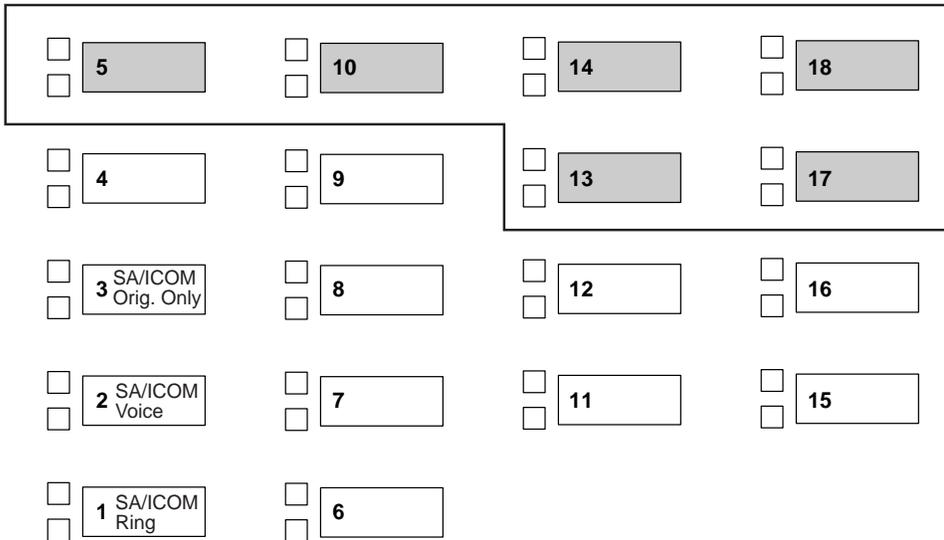


Do not use these buttons for any facilities or features that require LEDs.

**Note:** Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.

**MLS-6 Button Diagram**

See Master Extension

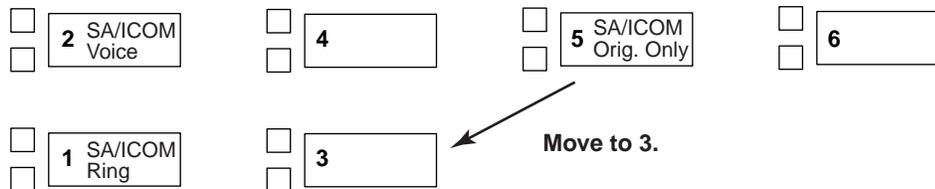



### 4400/4400D Telephone

(Make a copy of this form for each device.)

Logical ID \_\_\_\_\_ Extension No. \_\_\_\_\_ Person or Location \_\_\_\_\_

**Telephone**

- 4400
- 4400D

**Auto Line Selection**

\_\_\_\_\_  
\_\_\_\_\_

**Optional Features**

**Auto Callback**

- Off ♦
- On

**Call Waiting**

- Off ♦
- On

**Coverage Inside**

- Off
- On ♦

**Cover Ring Delay**

**Primary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_\_rings (1-6)

**Secondary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_\_rings (1-6)

**Group Coverage Ring Delay**

- 3 Rings ♦
- \_\_\_\_rings (1-9)

♦ *Factory Setting*





**4424LD+, 4424D+, and 4412D+ Button Diagram**

<input type="checkbox"/> 21 <input type="checkbox"/>			<input type="checkbox"/> 23 <input type="checkbox"/>	<input type="checkbox"/> 25 <input type="checkbox"/>			<input type="checkbox"/> 27 <input type="checkbox"/>
<input type="checkbox"/> 5 <input type="checkbox"/>			<input type="checkbox"/> 10 <input type="checkbox"/>	<input type="checkbox"/> 15 <input type="checkbox"/>			<input type="checkbox"/> 20 <input type="checkbox"/>
<input type="checkbox"/> 4 <input type="checkbox"/>			<input type="checkbox"/> 9 <input type="checkbox"/>	<input type="checkbox"/> 14 <input type="checkbox"/>			<input type="checkbox"/> 19 <input type="checkbox"/>
<input type="checkbox"/> 3 <input type="checkbox"/>	SA/ICOM Orig. Only		<input type="checkbox"/> 8 <input type="checkbox"/>	<input type="checkbox"/> 13 <input type="checkbox"/>			<input type="checkbox"/> 18 <input type="checkbox"/>
<input type="checkbox"/> 2 <input type="checkbox"/>	SA/ICOM Voice		<input type="checkbox"/> 7 <input type="checkbox"/>	<input type="checkbox"/> 12 <input type="checkbox"/>			<input type="checkbox"/> 17 <input type="checkbox"/>
<input type="checkbox"/> 1 <input type="checkbox"/>	SA/ICOM Ring		<input type="checkbox"/> 6 <input type="checkbox"/>	<input type="checkbox"/> 11 <input type="checkbox"/>			<input type="checkbox"/> 16 <input type="checkbox"/>

**Note: Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.**

**4406D+ Button Diagram**

<input type="checkbox"/> 3 <input type="checkbox"/>	SA/ICOM Orig. Only		<input type="checkbox"/> 6 <input type="checkbox"/>
<input type="checkbox"/> 2 <input type="checkbox"/>	SA/ICOM Voice		<input type="checkbox"/> 5 <input type="checkbox"/>
<input type="checkbox"/> 1 <input type="checkbox"/>	SA/ICOM Ring		<input type="checkbox"/> 4 <input type="checkbox"/>

**Form 4m**

**Multiline 4400-Series Telephone**

(Make a copy of this form for each telephone.)

Logical ID \_\_\_\_\_ Extension No. \_\_\_\_\_ Person or Location \_\_\_\_\_

Copied from Master Ext. No. \_\_\_\_\_

Wall Mount

**Telephone Model**

4424LD+™

4424D+™

4412D+™

4406D+™

**Adjuncts**

Headset

Hearing-impaired handset

Noisy environment

Off Premises

**Optional Features**

**Abbreviated Ring**

Off

On ♦

**Auto Callback**

Off ♦

On

**Call Waiting**

Off ♦

On

**Voice-Announced Calls**

On ♦

Off

**Coverage Inside**

Off

On ♦

**Cover Ring Delay**

**Primary Cover Ring Delay**

2 Rings ♦

\_\_\_ rings (1-6)

**Secondary Cover Ring Delay**

2 Rings ♦

\_\_\_ rings (1-6)

**Group Coverage Ring Delay**

3 Rings ♦

\_\_\_ rings (1-9)

**Computer Telephony Integrated Client PC**

Yes

No♦

**Personal Lines**

\_\_\_\_\_

\_\_\_\_\_

**Shared Extension No.** \_\_\_\_\_

Ring

No Ring

**Auto Line Selection**

\_\_\_\_\_

\_\_\_\_\_

**Centralized Programming Requirements\***

Assign Service Observing Button

♦ Factory Setting

\* Refer to Form 11 to assign as a Service Observer.

**Form 4m** (Continued)

**4424LD+, 4424D+, and 4412D+ Button Diagram**

See Master Extension

<input type="checkbox"/> 21 <input type="checkbox"/>			<input type="checkbox"/> 23 <input type="checkbox"/>	<input type="checkbox"/> 25 <input type="checkbox"/>			<input type="checkbox"/> 27 <input type="checkbox"/>
<input type="checkbox"/> 5 <input type="checkbox"/>			<input type="checkbox"/> 10 <input type="checkbox"/>	<input type="checkbox"/> 15 <input type="checkbox"/>			<input type="checkbox"/> 20 <input type="checkbox"/>
<input type="checkbox"/> 4 <input type="checkbox"/>			<input type="checkbox"/> 9 <input type="checkbox"/>	<input type="checkbox"/> 14 <input type="checkbox"/>			<input type="checkbox"/> 19 <input type="checkbox"/>
<input type="checkbox"/> 3 <input type="checkbox"/>	SA/ICOM Orig. Only		<input type="checkbox"/> 8 <input type="checkbox"/>	<input type="checkbox"/> 13 <input type="checkbox"/>			<input type="checkbox"/> 18 <input type="checkbox"/>
<input type="checkbox"/> 2 <input type="checkbox"/>	SA/ICOM Voice		<input type="checkbox"/> 7 <input type="checkbox"/>	<input type="checkbox"/> 12 <input type="checkbox"/>			<input type="checkbox"/> 17 <input type="checkbox"/>
<input type="checkbox"/> 1 <input type="checkbox"/>	SA/ICOM Ring		<input type="checkbox"/> 6 <input type="checkbox"/>	<input type="checkbox"/> 11 <input type="checkbox"/>			<input type="checkbox"/> 16 <input type="checkbox"/>

**Note:** Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.

**4406D+ Button Diagram**

See Master Extension

<input type="checkbox"/> 3 <input type="checkbox"/>	SA/ICOM Orig. Only		<input type="checkbox"/> 6 <input type="checkbox"/>
<input type="checkbox"/> 2 <input type="checkbox"/>	SA/ICOM Voice		<input type="checkbox"/> 5 <input type="checkbox"/>
<input type="checkbox"/> 1 <input type="checkbox"/>	SA/ICOM Ring		<input type="checkbox"/> 4 <input type="checkbox"/>



**TransTalk 9031/9040 Button Diagrams**

**Hybrid/PBX Mode**

Blank 5	Blank 6	Blank 7	Blank 8
SA OO 1	Blank 2	Blank 3	Blank 4
SA Ring A	SA Voice B	Blank C	Drop D

**Key Mode**

Line 5 5	Line 6 6	Line 7 7	Line 8 8
Line 1 1	Line 2 2	Line 3 3	Line 4 4
ICOM Ring A	ICOM Voice B	Blank C	Blank D

**Note: Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.**

**Business Cordless 905 Button Diagrams**

**Hybrid/PBX Mode**

SA Ring 1	SA Voice 2	SA OO 3	Blank 4	Drop 5
-----------------	------------------	---------------	------------	-----------

**Key Mode**

ICOM Ring 1	ICOM Voice 2	Blank 3	Blank 4	Blank 5
-------------------	--------------------	------------	------------	------------

**Form 4o**

**Wireless Telephone**

(Make a copy of this form for each telephone.)

Logical ID \_\_\_\_\_ Extension No. \_\_\_\_\_ Person or Location \_\_\_\_\_

Copied from Master Ext. No. \_\_\_\_\_

**Telephone Model**

- TransTalk 9031
- TransTalk 9040
- Business Cordless 905

**Adjuncts**

- Headset

**Personal Lines**

\_\_\_\_\_  
\_\_\_\_\_

**Shared Extension No.** \_\_\_\_\_

- Ring
- No Ring

**Auto Line Selection**

\_\_\_\_\_  
\_\_\_\_\_

**Optional Features**

**Auto Callback**

- Off ♦
- On

**Call Waiting**

- Off ♦
- On

**Coverage Inside**

- Off
- On ♦

**Cover Ring Delay**

**Primary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_\_rings (1-6)

**Secondary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_\_rings (1-6)

**Group Coverage Ring Delay**

- 3 Rings ♦
- \_\_\_\_rings (1-9)

**Computer Telephony Integrated Client PC**

- Yes
- No♦

♦ *Factory Setting*

**Form 4o** (Continued)

**TransTalk 9031/9040 Button Diagrams**

See Master Extension

**Hybrid/PBX Mode**

Blank 5	Blank 6	Blank 7	Blank 8
SA OO 1	Blank 2	Blank 3	Blank 4
SA Ring A	SA Voice B	Blank C	Drop D

**Key Mode**

Line 5 5	Line 6 6	Line 7 7	Line 8 8
Line 1 1	Line 2 2	Line 3 3	Line 4 4
ICOM Ring A	ICOM Voice B	Blank C	Blank D

**Note:** Lines 1 through 8 only are assigned to a telephone when the system is in Key mode.

**Business Cordless 905 Button Diagrams**

See Master Extension

**Hybrid/PBX Mode**

SA Ring 1	SA Voice 2	SA OO 3	Blank 4	Drop 5
-----------------	------------------	---------------	------------	-----------

**Key Mode**

ICOM Ring 1	ICOM Voice 2	Blank 3	Blank 4	Blank 5
-------------------	--------------------	------------	------------	------------

**Direct-Line Console (DLC): Analog**

**Discontinued**

**Discontinued**

## Direct-Line Console (DLC)

(Make a copy of this form for each console.)

Logical ID \_\_\_\_\_ Extension No. \_\_\_\_\_ Person or Location \_\_\_\_\_

Copied from Master Ext. No. \_\_\_\_\_

### **Console Model**

- 4424LD+™
- 4424D+™
- MLX-20L®
- MLX-28D®

### **Adjuncts**

- Direct Station Selector  
Number (1 or 2) \_\_\_\_\_
- Multi-Function Module (MFM) Extension No.\*  
\_\_\_\_\_
  - FAX machine
  - Answering machine
  - Data terminal
  - Alert device  
type \_\_\_\_\_
  - Other \_\_\_\_\_
- Headset
- Hearing-impaired handset
- Noisy environment
- CTI PC

### **Personal Lines**

\_\_\_\_\_  
\_\_\_\_\_

### **Auto Line Selection**

\_\_\_\_\_  
\_\_\_\_\_

### **Optional Features**

#### **Abbreviated Ring**

- Off
- On ♦

#### **Auto Callback**

- Off ♦
- On

### **Call Waiting**

- Off ♦
- On

### **Voice-Announced Calls**

- On ♦
- Off

### **Coverage Inside**

- Off
- On ♦

### **Cover Ring Delay**

#### **Primary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_rings (1-6)

#### **Secondary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_rings (1-6)

#### **Group Coverage Ring Delay**

- 3 Rings ♦
- \_\_\_rings (1-9)

♦ *Factory Setting*

\* *MLX DLC only.*

**Form 5b** (Continued)

**4424LD+ or 4424D+ DLC Button Diagram**

See Master Extension

<input type="checkbox"/> 21 <input type="checkbox"/>			<input type="checkbox"/> 23 <input type="checkbox"/>	<input type="checkbox"/> 25 <input type="checkbox"/>			<input type="checkbox"/> 27 <input type="checkbox"/>
<input type="checkbox"/> 5 <input type="checkbox"/>			<input type="checkbox"/> 10 <input type="checkbox"/>	<input type="checkbox"/> 15 <input type="checkbox"/>			<input type="checkbox"/> 20 <input type="checkbox"/>
<input type="checkbox"/> 4 <input type="checkbox"/>			<input type="checkbox"/> 9 <input type="checkbox"/>	<input type="checkbox"/> 14 <input type="checkbox"/>			<input type="checkbox"/> 19 <input type="checkbox"/>
<input type="checkbox"/> 3 <input type="checkbox"/>			<input type="checkbox"/> 8 <input type="checkbox"/>	<input type="checkbox"/> 13 <input type="checkbox"/>			<input type="checkbox"/> 18 <input type="checkbox"/>
<input type="checkbox"/> 2 <input type="checkbox"/>	<b>SA</b> Icom Voice		<input type="checkbox"/> 7 <input type="checkbox"/>	<input type="checkbox"/> 12 <input type="checkbox"/>			<input type="checkbox"/> 17 <input type="checkbox"/>
<input type="checkbox"/> 1 <input type="checkbox"/>	<b>SA</b> Icom Ring		<input type="checkbox"/> 6 <input type="checkbox"/>	<input type="checkbox"/> 11 <input type="checkbox"/>			<input type="checkbox"/> 16 <input type="checkbox"/>

**MLX-20L or MLX-28D DLC Button Diagram**

See Master Extension

<input type="checkbox"/> 22 <input type="checkbox"/>			<input type="checkbox"/> 2 <input type="checkbox"/>	<input type="checkbox"/> 26 <input type="checkbox"/>			<input type="checkbox"/> 28 <input type="checkbox"/>
<input type="checkbox"/> 21 <input type="checkbox"/>			<input type="checkbox"/> 2 <input type="checkbox"/>	<input type="checkbox"/> 25 <input type="checkbox"/>			<input type="checkbox"/> 27 <input type="checkbox"/>
<input type="checkbox"/> 5 <input type="checkbox"/>		3	8 <input type="checkbox"/> 1 <input type="checkbox"/>	<input type="checkbox"/> 15 <input type="checkbox"/>		13	18 <input type="checkbox"/> 20 <input type="checkbox"/>
<input type="checkbox"/> 4 <input type="checkbox"/>		2	7 <input type="checkbox"/>	<input type="checkbox"/> 14 <input type="checkbox"/>		12	17 <input type="checkbox"/> 19 <input type="checkbox"/>
<input type="checkbox"/> 3 <input type="checkbox"/>		1	6 <input type="checkbox"/>	<input type="checkbox"/> 13 <input type="checkbox"/>		11	16 <input type="checkbox"/> 18 <input type="checkbox"/>
<input type="checkbox"/> 2 <input type="checkbox"/>	<b>SA</b> Icom Voice		5 <input type="checkbox"/>	<input type="checkbox"/> 12 <input type="checkbox"/>		10	15 <input type="checkbox"/> 17 <input type="checkbox"/>
<input type="checkbox"/> 1 <input type="checkbox"/>	<b>SA</b> Icom Ring		4 <input type="checkbox"/>	<input type="checkbox"/> 11 <input type="checkbox"/>		9	14 <input type="checkbox"/> 16 <input type="checkbox"/>

} 20 } 28

Assignment of outside trunks to console buttons begins with number 3.

**MFM Adjunct: MLX-20L or MLX-28D DLC**

ExtensionNo. \_\_\_\_\_ PersonorLocation \_\_\_\_\_

ConnectedtoMLXextensionNo. \_\_\_\_\_

CopiedfromMasterExtensionNo. \_\_\_\_\_

**Adjuncts**

- FAX machine
- Answering machine
  - Used as delay announcement device for calling groups  
Ext. No. \_\_\_\_\_
- Data terminal
- Alert device, type \_\_\_\_\_
  - Use as Calls-in-Queue Alarm device for calling groups  
Ext. No. \_\_\_\_\_
- Other \_\_\_\_\_

**Button Diagram**

- See Master Extnsions

Line 3	Line 8
Line 2	Line 7
Line 1 SA Orig. Only	Line 6
SA Icom Voice	Line 5
SA Icom Ring	Line 4

**Note:** Lines 1 through 8 only default on a telephone when the system is in Key mode.

**Centralized Programming Requirements**

- Disable Voice Announce – change button 2 assignment to System Access Originate Only and remove button 3 assignment
- Enable Ringing/Idle Line Preference
- Change Automatic Line Selection order to: (1) System Access Ring, (2) System Access Originate Only, (3) outside trunks assigned to buttons 3 through 10
- Set Ringing Option to No Ring for each personal line on which calls are **not** received

**Auto Line Selection**

\_\_\_\_\_

\_\_\_\_\_

**Optional Features**

**Auto Callback**

- Off ♦
- On

**Call Waiting**

- Off ♦
- On

**Coverage Inside**

- Off
- On ♦

**Cover Ring Delay**

**Primary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_rings (1–6)

**Secondary Cover Ring Delay**

- 2 Rings ♦
- \_\_\_rings (1–6)

**Group Coverage Ring Delay**

- 3 Rings ♦
- \_\_\_rings (1–9)

♦ Factory Setting



**Queued Call Console (QCC)\***

(Make a copy of this form for each console.)

Logical ID \_\_\_\_\_ Extension No. \_\_\_\_\_ Person or Location \_\_\_\_\_

**Adjuncts**

- DirectStationSelector
- Number(1or2)\_\_\_\_\_
- Headset
- Hearing-impairedhandset
- Noisyenvironment

**Message Center Operator**

- No
- Yes

\* Hybrid/PBX mode only.

**4424LD+ QCC Button Diagram**

<input type="checkbox"/>	<input type="checkbox"/>	<i>Feature</i>	<i>HFAI</i>	<input type="checkbox"/>	<input type="checkbox"/>	<i>Drop</i>	<i>Inspect</i>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<b>G</b> <i>Call 5</i>	<b>H</b> <i>Position Busy</i>	<input type="checkbox"/>	<input type="checkbox"/>	<b>I</b> <i>Alarm</i>	<b>J</b> <i>Forced Release</i>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<b>K</b> <i>Call 4</i>	<b>L</b> <i>Send/Remove Message</i>	<input type="checkbox"/>	<input type="checkbox"/>	<b>M</b> <i>Night Service</i>	<b>N</b> <i>Pool Status</i>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<b>O</b> <i>Call 3</i>	<b>P</b> <i>Loudspeaker Page</i>	<input type="checkbox"/>	<input type="checkbox"/>	<b>Q</b> <i>Headset Status</i>	<b>R</b> <i>Headset Auto Ans</i>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<b>S</b> <i>Call 2</i>	<b>T</b> <i>Source</i>	<input type="checkbox"/>	<input type="checkbox"/>	<b>U</b> <i>Destination</i>	<b>V</b> <i>Join</i>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<b>W</b> <i>Call 1</i>	<b>X</b> <i>Start</i>	<input type="checkbox"/>	<input type="checkbox"/>	<b>Y</b> <i>Release</i>	<b>Z</b> <i>Cancel</i>	<input type="checkbox"/>	<input type="checkbox"/>

**MLX-20L QCC Button Diagram**

5	<input type="checkbox"/>	<b>G</b> CALL 5/VA	<b>H</b> POSITION BUSY	<input type="checkbox"/>	10	<input type="checkbox"/>	<b>I</b> ALARM	<b>J</b> FORCED RELEASE	<input type="checkbox"/>	20
4	<input type="checkbox"/>	<b>K</b> CALL 4	<b>L</b> SEND/REMOVE MSG	<input type="checkbox"/>	9	<input type="checkbox"/>	<b>M</b> NIGHT SERVICE	<b>N</b> POOL STATUS	<input type="checkbox"/>	19
3	<input type="checkbox"/>	<b>O</b> CALL 3	<b>P</b> HEADSET MUTE	<input type="checkbox"/>	8	<input type="checkbox"/>	<b>Q</b> HEADSET STATUS	<b>R</b> HEADSET AUTO ANSWER	<input type="checkbox"/>	18
2	<input type="checkbox"/>	<b>S</b> CALL 2	<b>T</b> SOURCE	<input type="checkbox"/>	7	<input type="checkbox"/>	<b>U</b> DESTINATION	<b>V</b> JOIN	<input type="checkbox"/>	17
1	<input type="checkbox"/>	<b>W</b> CALL 1	<b>X</b> START	<input type="checkbox"/>	6	<input type="checkbox"/>	<b>Y</b> RELEASE	<b>Z</b> CANCEL	<input type="checkbox"/>	16

## Optional Operator Features

### Direct-Line Console

**Operator Hold Timer**

- 60 seconds ♦
- \_\_\_\_\_ seconds (10–255)

**DLC Automatic Hold**

- Disable ♦
- Enable

### Queued Call Console\*

**Hold Return**

- Remain on hold ♦
- Return to queue

**Automatic Hold or Release**

- Automatic Release ♦
- Automatic Hold

**Calls-in-Queue Alert**

- Disable ♦
- Enable, Operator Extension No(s).  
 \_\_\_\_\_

**Queue Over Threshold**

- 0 calls ♦ (operators not notified when calls are in queue)
- \_\_\_\_\_ calls (1–99)

**Elevate Priority**

- 0 seconds ♦ (calls are not automatically reprioritized)
- \_\_\_\_\_ seconds (5–30)

**Message Center**

- No
- Yes, Operator Extension No. \_\_\_\_\_

**Extended Call Completion**

- Automatic completion ♦
- Manual completion

**Return Ring**

- 4 rings ♦
- \_\_\_\_\_ rings (1–15)

**Position Busy Backup**

- No ♦
- Yes, Extension no. of calling group backup \_\_\_\_\_

**Operator Hold Timer**

- 60 seconds ♦
- \_\_\_\_\_ seconds (10–255)

**Voice Announce**

- Disable ♦
- Enable

### Direct Station Selector

**Page Buttons**

Page Button	1	2	3
Beginning extension for range			

*Enter first extension number for range of 50 (1 DSS) or 100 (2 DSSs) extensions for each **Page** button.*

### **Call Park Codes (See Form 2d)**

Factory-Set Extension No.	Renumber to	Factory-Set Extension No.	Renumber to
881		885	
882		886	
883		887	
884		888	

♦ *Factory Setting*

\* *Hybrid/PBX mode only*

**Call Types\***

<b>Call Types</b>	<b>QCC Operator to Receive Calls</b>	<b>QCC Queue Priority Level (4◆)</b>
Dial 0		
Call Follow/Forward	N/A	
Unassigned DID		
Listed Directory Number		
QCC Extension	N/A	
Returning		

**Group Coverage Calls**

<b>Group No.</b>	<b>QCC Operator to Receive Calls</b>	<b>QCC Queue Priority Level (4◆)</b>	<b>Group No.</b>	<b>QCC Operator to Receive Calls</b>	<b>QCC Queue Priority Level (4◆)</b>
1			16		
2			17		
3			18		
4			19		
5			20		
6			21		
7			22		
8			23		
9			24		
10			25		
11			26		
12			27		
13			28		
14			29		
15			30		

◆ Factory Setting  
 \* Hybrid/PBX mode only





**Principal User of Personal Line**

Factory-Set Trunk No.	Extension No.						
801		821		841		861	
802		822		842		862	
803		823		843		863	
804		824		844		864	
805		825		845		865	
806		826		846		866	
807		827		847		867	
808		828		848		868	
809		829		849		869	
810		830		850		870	
811		831		851		871	
812		832		852		872	
813		833		853		873	
814		834		854		874	
815		835		855		875	
816		836		856		876	
817		837		857		877	
818		838		858		878	
819		839		859		879	
820		840		860		880	

Note: Lines must be assigned to the principal user's extension before the principal users can be programmed.  
 See Form 2c, page1 for telephone numbers and extension numbers assigned to trunks.



### Message-Waiting Receivers

**System Notification Threshold (0-30 seconds)** \_\_\_\_\_  
(factory setting is 10 seconds)

	Fax Machine Extension No.	Receivers			
		Ext. No.	Ext. No.	Ext. No.	Ext. No.
1					
2					
3					
4					
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					































### Call Pickup Groups

Maximum: 30 groups. (Make additional copies if more than 8 groups are assigned.)

Group Number _____		
Group ID _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

Group Number _____		
Group ID _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

Group Number _____		
Group ID _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

Group Number _____		
Group ID _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

Group Number _____		
Group ID _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

Group Number _____		
Group ID _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

Group Number _____		
Group ID _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

Group Number _____		
Group ID _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		

### Group Paging

(See Form 2d)

<b>Group No. 1</b> Group ID _____		
Factory-Set Ext. No. 793 Renumber to _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		

<b>Group No. 2</b> Group ID _____		
Factory-Set Ext. No. 794 Renumber to _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		

<b>Group No. 3</b> Group ID _____		
Factory-Set Ext. No. 795 Renumber to _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		

<b>Group No. 4</b> Group ID _____		
Factory-Set Ext. No. 796 Renumber to _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		

<b>Group No. 5</b> Group ID _____ Factory-Set Ext. No. 797 Renumber to _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		

<b>Group No. 6</b> Group ID _____ Factory-Set Ext. No. 798 Renumber to _____		
	Ext. No.	Person or Location
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		

<b>Group No. 7</b> Page All Factory-Set Ext. No. 799 Renumber to _____
---







Group Number \_\_\_\_\_

Group ID \_\_\_\_\_

Ext. No. \_\_\_\_\_

**Calling Group Options\***

**Hunt Type**

- Circular ♦
- Linear
- Most-Idle

**Primary Delay Announcements**

- No ♦
- Yes, Extension No. \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

**Secondary Delay Announcement**

- No ♦
- Yes, Extension No. \_\_\_\_\_  
Delay Interval \_\_\_\_\_ (0♦-900 sec.)
  - Disabled ♦
  - Enabled

**Message-Waiting Receiver**

- No ♦
- Yes, Extension No. \_\_\_\_\_

**First Calls-in-Queue Alarm Threshold**

- 1 call ♦
- \_\_\_\_\_ calls (2-99)

**Second Calls-in-Queue Alarm Threshold**

- 1 call ♦
- \_\_\_\_\_ calls (2-99)

**Third Calls-in-Queue Alarm Threshold**

- 1 call ♦
- \_\_\_\_\_ calls (2-99)

**External Alert for Calls-in-Queue Alarm**

- No ♦
- Yes, Extension No. \_\_\_\_\_

**Overflow Coverage**

- No ♦
- Yes, Calling Group No. \_\_\_\_\_
- Yes, QCC LDN (queue) Extension No. \_\_\_\_\_

**Overflow Threshold**

- 1 call ♦
- \_\_\_\_\_ calls (2-99)

**Overflow Threshold Time**

- 0 seconds ♦
- \_\_\_\_\_ seconds (1-900)

**Group Type**

- Auto Login
- Auto Logout ♦
- Integrated VMI†
- Generic VMI†

**Prompt-Based Overflow**

- Disabled ♦
- Enabled

**Queue Control**

- 99 calls ♦
- \_\_\_\_\_ calls (0-98)

**Priority Call Queuing**

- No ♦
- Yes
  - Home Group Priority Level \_\_\_\_\_  
(1-32; 16 is the factory setting.)
  - Support Group Extension No. \_\_\_\_\_  
(Support Group Priority Level) \_\_\_\_\_

\* If the system has AUDIX Voice Power/FAX Attendant System, you do not need to fill in this information. Settings will be automatically set by Integrated Administration to defaults assumed by the AUDIX Voice Power system (and not necessarily those listed on this form). Changing the assumed defaults could affect how the AUDIX Voice Power system works. If you change them, DO SO WITH CAUTION, and record the settings on this form. For more information, see the AUDIX Voice Power documentation.

† Any port programmed as a VMI port is, by default, restricted from making outgoing calls.

## System Features

### Transfer Options\*

#### **Return Time Interval†**

- 4 rings ♦
- 0 rings
- \_\_\_\_\_ rings (1–9)

#### **One-Touch Call Handling**

- One-Touch Transfer ♦
  - Manual Completion
  - Automatic Completion ♦
- One-Touch-Hold

#### **Transfer Audible**

- Music On Hold ♦
- Ringback

#### **Type of Transfer**

- Voice button
- Ring button ♦

#### **Camp-On Return Time**

- 90 seconds ♦
- \_\_\_\_\_ seconds (30–300)

#### **Call Park Return Time**

- 180 seconds ♦
- \_\_\_\_\_ seconds (30–300)

#### **Automatic Callback Interval**

- 3 rings ♦
- \_\_\_\_\_ rings (1–6)

#### **Extension Status**

- Hotel
  - Assign to operator positions

\_\_\_\_\_  
\_\_\_\_\_

- Group Calling/CMS ♦

### **SMDR Options**

#### **Call Report Format**

- Basic ♦
- ISDN

#### **Calls Reported (non-UDP)**

- Incoming and outgoing ♦
- Outgoing only

#### **Talk Time**

- Enabled
- Disabled ♦

#### **Call Length‡**

- 40 seconds ♦
- \_\_\_\_\_ seconds (0–255)

#### **Calls Reported (UDP)**

- Incoming and outgoing
- None ♦

#### **Inside Dial Tone**

- Inside ♦
- Outside

#### **Reminder Service Cancel**

- No
- Yes, \_\_\_\_\_ time of day

#### **Calls to Unassigned Extensions**

- QCC Queue \_\_\_\_\_ §
- Extension ♦, No. \_\_\_\_\_ (default is the primary operator extension)
- Calling Group, Extension No. \_\_\_\_\_

### **Recall Timer**

- 350 ms
- 450 ms ♦
- 650 ms
- 1 sec

### **Rotary**

- Delay ♦
- No Delay

### **Automatic Daylight Savings Time**

- Enable ♦
  - USA ADST ♦
  - Custom
- Disable

Note: If you use equipment that rebroadcasts music or other copyrighted material, you may be required to obtain a copyright license from, and pay license fees to, a third party such as the American Society of Composers, Artists, and Producers (ASCAP) or Broadcast Music Incorporated (BMI). Or you can purchase a Magic-on-Hold system, which does not require you to obtain such a license, from Lucent Technologies or an authorized representative.

♦ Factory Setting

\* Transfer features (and any feature that requires more than one SA button) can be disabled on single-line telephones by removing all but one SA button via Centralized Programming.

† If the system has AUDIX Voice Power/FAX Attendant System, Integrated Administration will automatically set the Return Time Interval to "6."

‡ For systems where the majority of lines are PRI, the SMDR Call Length should be one second.

§ Hybrid/PBX mode only











### Night Service: Options

Day	Start Time*	Stop Time*
Sunday (0)		
Monday (1)		
Tuesday (2)		
Wednesday (3)		
Thursday (4)		
Friday (5)		
Saturday (6)		

\* Hours and minutes in 24-hour (military) time

Note: Start time is the END of your business day.  
Stop time is the BEGINNING of your business day.

#### Coverage Control

- Enable
- Disable ◆

◆ Factory Setting



**Label Form: Posted Message**

Message No.	Default Label	Revised Message (16 characters maximum)
1	DO NOT DISTURB	(Cannot be changed)
2	OUT TO LUNCH	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
3	AT HOME	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
4	OUT SICK	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
5	IN A MEETING	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
6	IN CONFERENCE	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
7	WITH A CLIENT	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
8	WITH A CUSTOMER	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
9	AWAY FROM DESK	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
10	OUT ALL DAY	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
11	CUSTM MSG11	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
12	CUSTM MSG12	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
13	CUSTM MSG13	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
14	CUSTM MSG14	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
15	CUSTM MSG15	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
16	CUSTM MSG16	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
17	CUSTM MSG17	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
18	CUSTM MSG18	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
19	CUSTM MSG19	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _
20	CUSTM MSG20	_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _



### System Speed Dial

Dial Code	Name (11 characters maximum)	Telephone Number (40 digits maximum)	Display	
			Yes ♦	No*
#600				
#601				
#602				
#603				
#604				
#605				
#606				
#607				
#608				
#609				
#610				
#611				
#612				
#613				
#614				
#615				
#616				
#617				
#618				
#619				
#620				
#621				

♦ Factory Setting  
 \* If you select "No" display, this indicates a Marked System Speed Dial number which can override calling restrictions.

Dial Code	Name (11 characters maximum)	Telephone Number (40 digits maximum)	Display	
			Yes ♦	No*
#622				
#623				
#624				
#625				
#626				
#627				
#628				
#629				
#630				
#631				
#632				
#633				
#634				
#635				
#636				
#637				
#638				
#639				
#640				
#641				
#642				
#643				

♦ Factory Setting  
 \* If you select "No" display, this indicates a Marked System Speed Dial number which can override calling restrictions.

### System Speed Dial

Dial Code	Name (11 characters maximum)	Telephone Number (40 digits maximum)	Display	
			Yes ♦	No*
#644				
#645				
#646				
#647				
#648				
#649				
#650				
#651				
#652				
#653				
#654				
#655				
#656				
#657				
#658				
#659				
#660				
#661				
#662				
#663				
#664				
#665				

♦ Factory Setting  
 \* If you select "No" display, this indicates a Marked System Speed Dial number which can override calling restrictions.

Dial Code	Name (11 characters maximum)	Telephone Number (40 digits maximum)	Display	
			Yes ♦	No*
#666				
#667				
#668				
#669				
#670				
#671				
#672				
#673				
#674				
#675				
#676				
#677				
#678				
#679				
#680				
#681				
#682				
#683				
#684				
#685				
#686				
#687				

♦ Factory Setting  
 \* If you select "No" display, this indicates a Marked System Speed Dial number which can override calling restrictions.

### System Speed Dial

Dial Code	Name (11 characters maximum)	Telephone Number (40 digits maximum)	Display	
			Yes ◆	No*
#688				
#689				
#690				
#691				
#692				
#693				
#694				
#695				
#696				
#697				
#698				
#699				
#700				
#701				
#702				
#703				
#704				
#705				
#706				
#707				
#708				
#709				

◆ Factory Setting  
 \* If you select "No" display, this indicates a Marked System Speed Dial number which can override calling restrictions.

Dial Code	Name (11 characters maximum)	Telephone Number (40 digits maximum)	Display	
			Yes ♦	No*
#710				
#711				
#712				
#713				
#714				
#715				
#716				
#717				
#718				
#719				
#720				
#721				
#722				
#723				
#724				
#725				
#726				
#727				
#728				
#729				

♦ Factory Setting  
 \* If you select "No" display, this indicates a Marked System Speed Dial number which can override calling restrictions.





---

## Data Forms

This appendix contains one copy of each data form. The forms are listed in Table C-1. You should make copies of these forms and use the copies, keeping the originals for future use. The system planning forms are contained in Appendix B. The T1/PRI Planner is contained in Appendix D. The NI-1 BRI Planner is contained in Appendix G. The Network Engineering forms are contained in Appendix I.

**Table C-1. Data Forms**

---

<b>Form No.</b>	<b>Form Title</b>
1a	Modem Data Station
1b	ISDN Terminal Adapter Data Station
2	Data Hunt Groups
3	Digital Data/Video Station

---











### Data Hunt Groups

(Make a copy for each group.)

Group Number (1 -32) \_\_\_\_\_ Factory-Set Ext. No. \_\_\_\_\_ Purpose of Group \_\_\_\_\_  
 Group ID \_\_\_\_\_ Renumber To \_\_\_\_\_ \_\_\_\_\_  
 \_\_\_\_\_

(example: Local Host Computer  
 Access Workstation or LAN  
 Access, etc.)

**Stations**

	Ext. No.	Person or Location		Ext. No.	Person or Location		Ext. No.	Person or Location		Ext. No.	Person or Location
1			6			11			16		
2			7			12			17		
3			8			13			18		
4			9			14			19		
5			10			15			20		

**Trunks or Pools**

Logical ID	Trunk or Pool						
1		21		41		61	
2		22		42		62	
3		23		43		63	
4		24		44		64	
5		25		45		65	
6		26		46		66	
7		27		47		67	
8		28		48		68	
9		29		49		69	
10		30		50		70	
11		31		51		71	
12		32		52		72	
13		33		53		73	
14		34		54		74	
15		35		55		75	
16		36		56		76	
17		37		57		77	
18		38		58		78	
19		39		59		79	
20		40		60		80	

Group Number \_\_\_\_\_

Group ID \_\_\_\_\_

Ext. No. \_\_\_\_\_

**Calling Group Options**

**Hunt Type**

- Circular ◆
- Linear

**Delay Announcement**

- No ◆
- Yes, Extension No. \_\_\_\_\_

**Message-Waiting Receiver**

- No ◆
- Yes, Extension No. \_\_\_\_\_

**Calls-in-Queue Alarm Threshold**

- 1 call ◆
- \_\_\_\_\_ calls (2-99)

**External Alert for Calls-in-Queue Alarm**

- No ◆
- Yes, Extension No. \_\_\_\_\_

**Overflow Coverage**

- No ◆
- Yes, Calling Group No. \_\_\_\_\_
- Yes, QCC LDN (queue) Extension No. \_\_\_\_\_

**Overflow Threshold**

- 1 call ◆
- \_\_\_\_\_ calls (2-99)

**Group Type**

- Auto Login
- Auto Logout ◆
- Integrated VMI
- Generic VMI

**Coverage Group Receiver**

- No
- Yes, Group No. \_\_\_\_\_  
(See Form 6d.)





---

## T1/PRI Planner

To ensure compatibility with the system, all local offerings of DS1 configurations must be reviewed by Avaya Sales and Design Support Center (SDSC) personnel. This review begins when SDSC receives the T1/PRI Planner form. This appendix contains instructions for completing the planner, including a blank form. You should make copies of the form pages and use the copies, keeping the originals for future use.

**NOTE** ► T1 trunks are ordered for private networks. The MERLIN MAGIX system programs the T1 trunks as PRI trunks between the switches. See the *Network Reference* for more information on configuring a system in a private network.

The MERLIN MAGIX Integrated System can support the services listed below for each type of central office switch:

- **AT&T Toll Services for 4ESS or 5ESS.** Megacom WATS, Megacom 800, ACCUNET SDS, Software Defined Network (SDN), MultiQuest, and Long Distance.
- **5ESS Local.** OUTWATS, 56/64 Digital, Virtual Private Network, and INWATS.
- **MCI Toll Services for DMS-250 or DEX600E.** MCI Prism, MCI VNet, MCI 800, MCI 900.
- **Local Exchange Carrier Services for DMS-100.** DMS Private Network, DMS INWATS (Inward Wide Area Telephone Service), DMS OUTWATS (Outward Wide Area Telephone Service), DMS FX (Foreign Exchange), DMS Tie Trunk.
- **Miscellaneous.** Call-by-Call, other.

For more information on the particular services, see the *Feature Reference*.

### Planning Form Needed

T1/PRI Planner

### Planning Form Instructions

1. On page 1, fill in the customer name, telephone number, and address.

**NOTE** ► The Reference Number is filled in by SDSC.

2. Fill in the Order Number.
3. Identify the personnel handling the account:
  - a. Account Executive's name and telephone number.
  - b. System Consultant's name and telephone number.
4. Identify the DS1 facility vendor by writing the vendor's name under the T1/PRI Vendor heading, along with the contact person's name and telephone number.
5. Under the Installation heading:
  - a. Write the Due Date on which the installation is scheduled to be complete.
  - b. Write the date the equipment is scheduled for delivery to the customer in the Materials-on-Job Date space.
6. Under the Installation Contacts heading, list the names and telephone numbers of the personnel responsible for the equipment order and its installation:
  - a. (Order) Implementor
  - b. SDSC Manager
  - c. National Technical Service Center (NTSC) Engineer
  - d. Data Services Organization (DSO) Manager
7. Under the question about whether the order has been placed:
  - If the order has been placed, check the Yes check box and fill in the date.
  - If the order has not been placed, check the No check box.
8. On page 2, complete one check box for each 100D, 100 DCD, or 100R INA module by transferring the options information for each module from the corresponding check box on Form 3b (page 1):
  - a. Service Ordered or Planned (Type of Service)
  - b. Frame Format
  - c. Switch Type
  - d. Line Coding (Suppression)
  - e. Line Signaling Mode
  - f. Synchronization Timing (Clock Synchronization: Source)

9. To ensure that the synchronization integrity of the DS1 network — both this system and its far-end connections — is protected, prepare the DS1 Planning Map on page 4 for review by SDSC. Describe the entire network of DS1 facilities by summarizing the following for each 100D, 100 DCD, or 100R INA module:
  - a. Fill in the control unit slot number or numbers of the 100D modules connected to the CSU or CSUs.
  - b. Write the approximate number of cable feet between each 100D module and its CSU or far-end connection (refer to the Line Compensation entry on Form 3b, Page 1).
  - c. For the model number or numbers of the CSU or CSUs, do *one* of the following:
    - If the CSU is the ACCULINK 3150, check the check box for the ACCULINK 3150.
    - If the CSU is not the ACCULINK 3150, check the Other check box and write the manufacturer's name and model number in the space provided at the bottom of the page.
    - If no CSU is needed, check the None check box.


**NOTE** ► The 100R INA and 100 DCD modules each contain a built-in Channel Service Unit (CSU), so Steps a, b, and c above do not apply. The built-in CSU in the 100 DCD module is supported in systems of Release 1.5 or later.

  - d. In the connection block or blocks, describe the DS1's far-end connection by doing *one* of the following:
    - If connected to the telephone company central office, check the central office check box.
    - If connected to another system, check the PBX check box.
    - If connected to the PRI network, check the PRI check box.
    - If the facility's type of service is T1, check the type or types of emulated trunks. Also, check the Services check box if the facility includes services such as MultiQuest with DNIS.
  - e. Describe the clock synchronization sources according to the key at the lower left of the map.
    - Draw a circle and line from the clock source to the appropriate 100D, 100 DCD, or 100R INA module.
    - Label the circle P for primary, S for secondary, or T for tertiary.
10. Make a copy of the T1/PRI Planner for your records and forward the original to SDSC.

As an example, the system described in Figure D-1 shows a processor module system with a 100D module and a 100 DCD module; this system is configured as follows:

- The 100D module in slot 04 is connected to an ACCULINK 3150 CSU, which is approximately 100 cable feet from the control unit. (The DS1 facility is connected to the PRI network.)
- The 100 DCD module in slot 05 is approximately 160 cable feet from the control unit. (The far end is another system.)

- The primary clock synchronization source is the PRI network connected to Module 1. Its path is shown by a line and the letter P.
- The secondary clock synchronization path, shown by a line and the letter S, is the system internal clock.

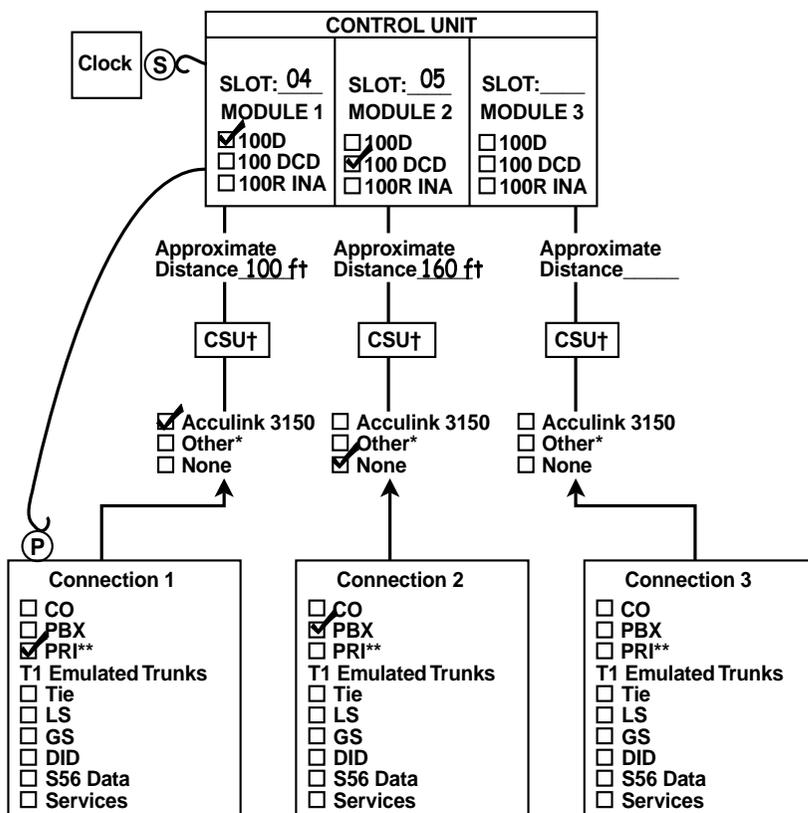

Key:

- Digital Transmission Facility →
- Primary Synchronization Source (P) →
- Secondary Synchronization Source (S) →
- Tertiary Synchronization Source (T) →

† The 100 DCD and 100R INA modules have built-in CSUs. The CSU in the 100 DCD module is supported in Release 1.5 and later systems.

\* Other model numbers  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

\*\* The switching equipment of the service provider must be 4ESS Generic 13 or later or 5ESS G6 or later.

Figure D-1. Sample DS1 Planning Map

SDSC also evaluates the complexity of the facility configuration requested. Examples of complex configurations are connections into PBX networking applications, connections to multiplexing arrangements, or applications that involve customer engineering or design. SDSC then does *either* of the following:

- If an order is considered complex, SDSC directs you to the Business Communications System (BCS) National Engineering Center (NEC).
- If SDSC notifies you that the order's configuration is not complex, Tier III General Business System (GBS) National Technical Service Center (NTSC) is authorized to approve the configuration.

The NTSC group's preauthorization review is based, in part, on information you provide to them. Specifically, you must send them the following:

- A copy of the planner.
- A completed "Non-Complex Configuration" sheet (pages 5 through 10 of the Planner) for each 100D, 100R INA, or 100 DCD module you plan to install.

Complete one Non-Complex Configuration page (pages 5 through 10) for each 100D, 100 DCD, and 100R INA module. Label the top right corner of the copies "Page 1 of \_" (1, 2, or 3). On each page:

1. Write the module number (1, 2, or 3). Indicate the total number of 100D, 100 DCD, and 100R INA modules (maximum of 3 for each system).
2. Fill in the control unit slot number (refer to page 1 of Form 3b).
3. In the Services section:
  - a. Check the check box next to each emulated trunk or service that will be connected. Check only those services allowed on the type of service (T1, AT&T Toll, MCI Toll, or DMS Local) selected for the module.
  - b. Circle the channel or channels to which each emulated trunk or service will be assigned.

**NOTE** ► No channel should show more than one trunk or service, and the 24th channel cannot be used if the signaling type is common channel.

4. If the type of service is PRI, complete the PRI Identification Service section by doing *either* of the following:
  - If you are not planning to use the number identification service, check the No check box and proceed to Step 5.
  - If you are planning to use the identification services, check the Yes check box and check the service planned:
    - For incoming calls, check one of the following check boxes: ANI, SID, or Both. If both automatic and extension identification service are planned, indicate the order in which the information should be displayed (ANI then SID or SID then ANI).

- For outgoing calls, check either ANI, SID/ANI Privacy, SID – Extension Based, or SID – Line Based to indicate the service planned.

**NOTE** ► The availability of the caller identification information may be limited by local-serving (caller's) jurisdiction, availability, or central office equipment.

5. In the Channel Service Unit section:
  - a. Check the check box that describes the channel service unit used. If you are not using the model listed, check the second check box and write in the manufacturer information that describes the unit. If you are using the 100R INA module or the 100 DCD module (in a Release 1.5 or later system), check the "None" box.
  - b. Forward all copies of this page, along with a copy of the Planner, to Tier III, GBS NTSC.

MERLIN MAGIX® Integrated System Release 2.1  
**T1/PRI Planner**

---

For use with Form 3b, Incoming Trunks–DS1 Connectivity (100D Module)

Reference No. \_\_\_\_\_

**Customer**

\*Name \_\_\_\_\_ Tel. No. \_\_\_\_\_

\*Address \_\_\_\_\_

\* Order Number \_\_\_\_\_

Account Executive \_\_\_\_\_ Tel. No. \_\_\_\_\_

Systems Consultant \_\_\_\_\_ Tel. No. \_\_\_\_\_

**T1/PRI Vendor**

\*Name \_\_\_\_\_

Contact \_\_\_\_\_ Tel. No. \_\_\_\_\_

**Installation**

Due Date \_\_\_\_\_

Materials-on-Job Date \_\_\_\_\_

**Installation Contacts**

Implementor \_\_\_\_\_ Tel. No. \_\_\_\_\_

SDSC Manager \_\_\_\_\_ Tel. No. \_\_\_\_\_

NTSC Engineer \_\_\_\_\_ Tel. No. \_\_\_\_\_

DSO Manager \_\_\_\_\_ Tel. No. \_\_\_\_\_

Has order been placed with the network provider for this service?

Yes, Date \_\_\_\_\_

No

*\* Required fields for presale.*

**\*Module 1**

**Service Ordered or Planned**

- PRI
- T1

**Frame Format**

- ESF (Preferred)
- D4 (May be used if required by local telephone company)

**Switch Type (PRI Service Only)**

- 4ESS                       Legend-NTWK
- 5ESS                       Legend-PBX
- DMS-250
- DMS-100
- DXE600

**Line Coding (Suppression)**

- B8ZS (Preferred)
- AMI-ZCS

**Line Signaling Mode**

- Common Channel (Required for PRI)
- Local

**Synchronization Timing**

- Loop (Default)
- Local

**\*Module 2**

**Service Ordered or Planned**

- PRI
- T1

**Frame Format**

- ESF (Preferred)
- D4 (May be used if required by local telephone company)

**Switch Type (PRI Service Only)**

- 4ESS                       Legend-NTWK
- 5ESS                       Legend-PBX
- DMS-250
- DMS-100
- DXE600

**Line Coding (Suppression)**

- B8ZS (Preferred)
- AMI-ZCS

**Line Signaling Mode**

- Common Channel (Required for PRI)
- Local

**Synchronization Timing**

- Loop (Default)
- Local

\* All fields required for presale

**\*Module 3**

**Service Ordered or Planned**

- PRI
- T1

**Frame Format**

- ESF (Preferred)
- D4 (May be used if required by local telephone company)

**Switch Type (PRI Service Only)**

- 4ESS                       Legend-NTWK
- 5ESS                         Legend-PBX
- DMS-250
- DMS-100
- DXE600

**Line Coding (Suppression)**

- B8ZS (Preferred)
- AMI-ZCS


**Line Signaling Mode**

- Common Channel (Required for PRI)
- Local

**Synchronization Timing**

- Loop (Default)
- Local

### DS1 Planning Map

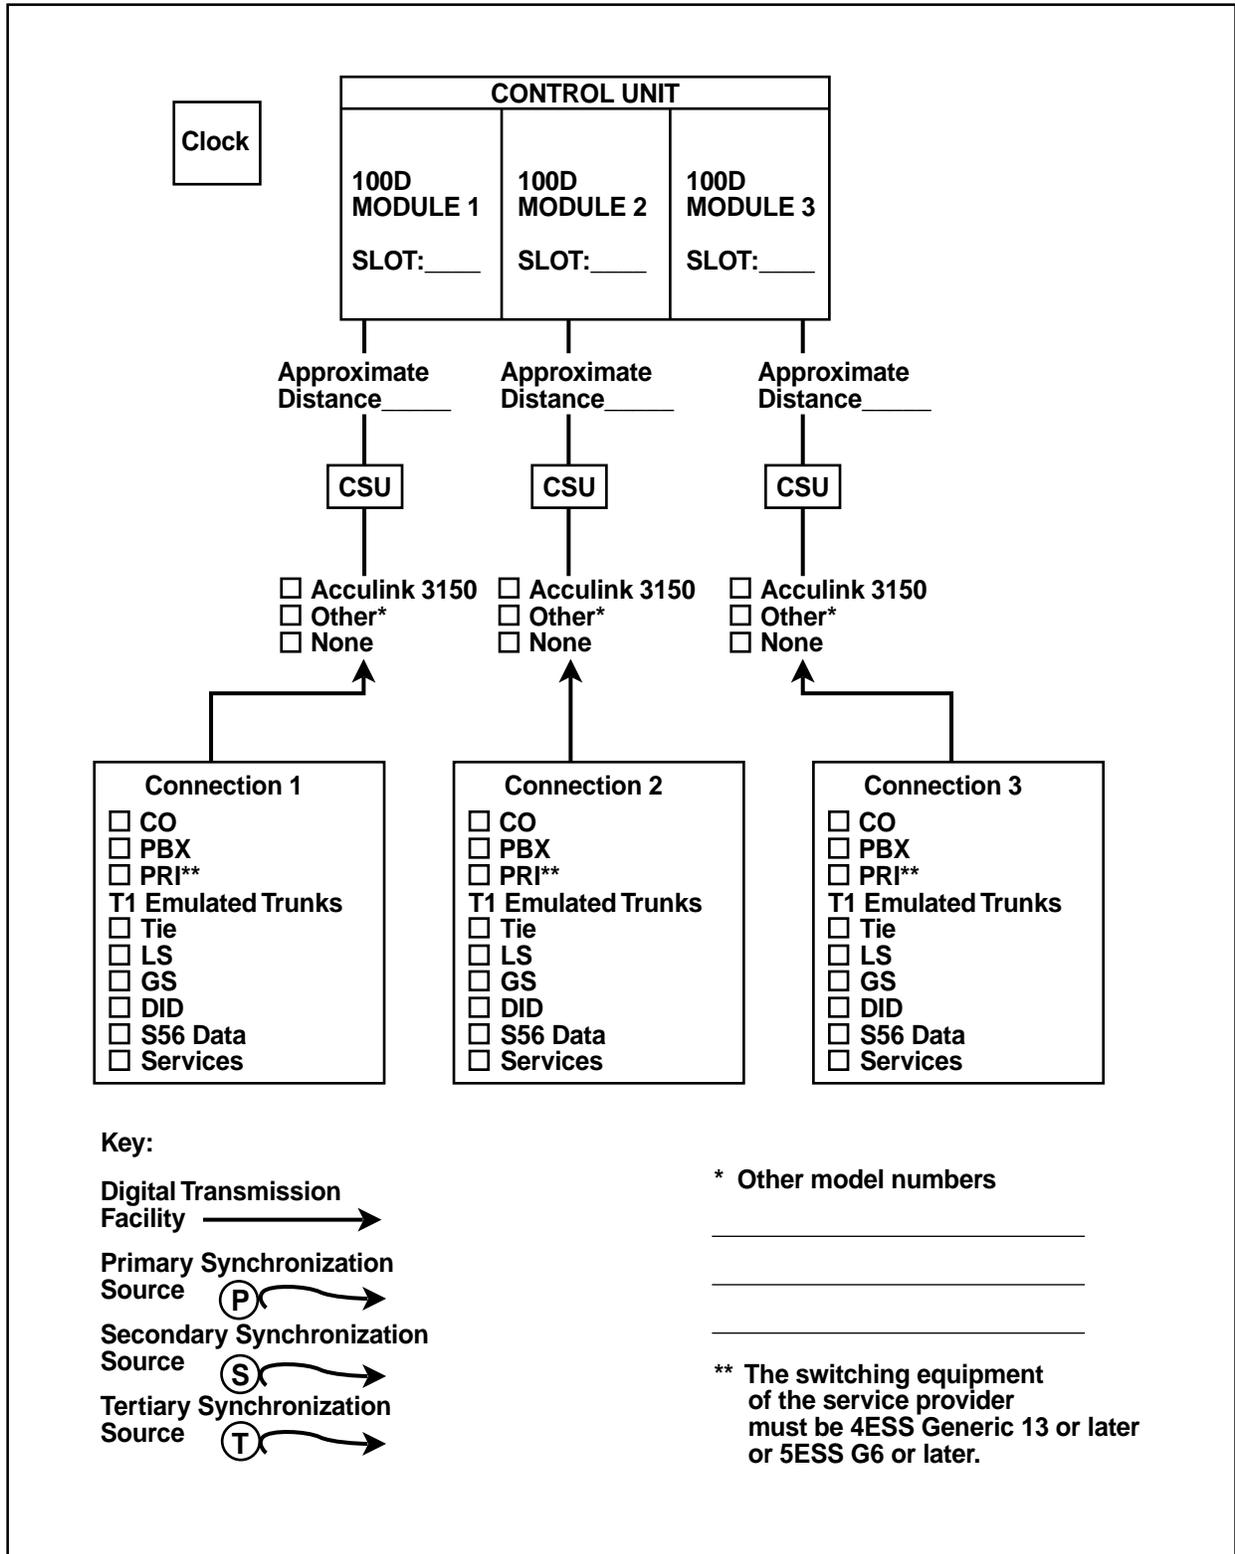

### Non-Complex Configuration

Module \_\_\_\_\_ of \_\_\_\_\_ SlotNo. \_\_\_\_\_

**Services\***

Subscribed To:	Channels Assigned to Service																							
<input type="checkbox"/> Ground-start (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Loop-start (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Tie Trunk (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> MultiQuest 900 (w/wo DNIS) (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Megacom† <input type="checkbox"/> OUTWATS‡ (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Megacom 800 <input type="checkbox"/> INWATS‡ (w/wo DNIS)† (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Megacom/ Megacom 800† <input type="checkbox"/> OUTWATS/ INWATS‡ (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> SDN† <input type="checkbox"/> VPN† (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> ACCUNET Switched <input type="checkbox"/> 56/64 Digital‡ Digital Service (AT&T Toll only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> ACCUNET Switched 56 Digital Data Service (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> DID (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Call-by-Call Service Selection (AT&T Toll only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> MCI PRISM†† <input type="checkbox"/> MCI Vnet†† (MCI Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> MCI 800†† <input type="checkbox"/> MCI 900†† (MCI Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> DMS Private# <input type="checkbox"/> DMS INWATS# (DMS Local)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> DMS OUTWATS# <input type="checkbox"/> DMS FX# (DMS Local)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> DMS Tie Trunk# Digital Service (PRI only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

\* Required fields for presale

† 4ESS

‡ 5ESS

†† DMS-250 or DEX600

# DMS-100

### Non-Complex Configuration

Module \_\_\_\_\_ of \_\_\_\_\_ Slot No. \_\_\_\_\_

#### **PRI Identification Service**

*Will SID/ANI be used?	<input type="checkbox"/> No	<input type="checkbox"/> Yes		
Incoming calls	<input type="checkbox"/> ANI	<input type="checkbox"/> SID	<input type="checkbox"/> Both ... Prefer _____ then _____	
Outgoing calls	<input type="checkbox"/> ANI	<input type="checkbox"/> SID/ANI Privacy	<input type="checkbox"/> SID - Extension Based	<input type="checkbox"/> SID - Line Based

#### **Channel Service Unit**

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Mfr	AT&T Paradyne	_____	_____
Model	3150	_____	_____
REG#	AW2USA-74673-DD-E	_____	_____

*§ If a CSU other than the one listed AT&T models is used, AT&T will not accept the responsibility for its installation, connection, or testing.*

\* Required fields for presale

### Non-Complex Configuration

Module \_\_\_\_\_ of \_\_\_\_\_ SlotNo. \_\_\_\_\_

**Services\***

Subscribed To:	Channels Assigned to Service																							
<input type="checkbox"/> Ground-start (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Loop-start (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Tie Trunk (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> MultiQuest 900 (w/wo DNIS) (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Megacom† <input type="checkbox"/> OUTWATS‡ (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Megacom 800 <input type="checkbox"/> INWATS‡ (w/wo DNIS)† (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Megacom/ Megacom 800† <input type="checkbox"/> OUTWATS/ INWATS‡ (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> SDN† <input type="checkbox"/> VPN† (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> ACCUNET Switched <input type="checkbox"/> 56/64 Digital‡ Digital Service (AT&T Toll only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> ACCUNET Switched 56 Digital Data Service (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> DID (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Call-by-Call Service Selection (AT&T Toll only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> MCI PRISM†† <input type="checkbox"/> MCI Vnet†† (MCI Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> MCI 800†† <input type="checkbox"/> MCI 900†† (MCI Toll)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> DMS Private# <input type="checkbox"/> DMS INWATS# (DMS Local)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> DMS OUTWATS# <input type="checkbox"/> DMS FX# (DMS Local)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> DMS Tie Trunk# Digital Service (PRI only)	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24

\* Required fields for presale

†4ESS

‡5ESS

†† DMS-250 or DEX600

# DMS-100

### Non-Complex Configuration

Module \_\_\_\_\_ of \_\_\_\_\_ Slot No. \_\_\_\_\_

#### **PRI Identification Service**

*Will SID/ANI be used?	<input type="checkbox"/> No	<input type="checkbox"/> Yes	
Incoming calls	<input type="checkbox"/> ANI	<input type="checkbox"/> SID	<input type="checkbox"/> Both... Prefer _____ then _____
Outgoing calls	<input type="checkbox"/> ANI	<input type="checkbox"/> SID/ANI Privacy	<input type="checkbox"/> SID-Extension Based <input type="checkbox"/> SID-Line Based

#### **Channel Service Unit**

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Mfr	AT&T Paradyne	_____	_____
Model	3150	_____	_____
REG#	AW2USA-74673-DD-E	_____	_____

*§ If a CSU other than the one listed AT&T models is used, AT&T will not accept the responsibility for its installation, connection, or testing.*

\* Required fields for presale

### Non-Complex Configuration

Module \_\_\_\_\_ of \_\_\_\_\_ SlotNo. \_\_\_\_\_

**Services\***

Subscribed To:	Channels Assigned to Service											
<input type="checkbox"/> Ground-start (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Loop-start (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Tie Trunk (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> MultiQuest 900 (w/wo DNIS) (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Megacom† <input type="checkbox"/> OUTWATS‡ (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Megacom 800 <input type="checkbox"/> INWATS‡ (w/wo DNIS)† (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Megacom/ Megacom 800† <input type="checkbox"/> OUTWATS/ INWATS‡	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> SDN† <input type="checkbox"/> VPN† (T1 or AT&T Toll)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> ACCUNET Switched <input type="checkbox"/> 56/64 Digital‡ Digital Service (AT&T Toll only)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> ACCUNET Switched 56 Digital Data Service (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> DID (T1 only)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> Call-by-Call Service Selection (AT&T Toll only)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> MCI PRISM†† <input type="checkbox"/> MCI Vnet†† (MCI Toll)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> MCI 800†† <input type="checkbox"/> MCI 900†† (MCI Toll)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> DMS Private# <input type="checkbox"/> DMS INWATS# (DMS Local)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> DMS OUTWATS# <input type="checkbox"/> DMS FX# (DMS Local)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
<input type="checkbox"/> DMS Tie Trunk# Digital Service (PRI only)	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24

\* Required fields for presale

† 4ESS

‡ 5ESS

†† DMS-250 or DEX600

# DMS-100

### Non-Complex Configuration

Module \_\_\_\_\_ of \_\_\_\_\_ Slot No. \_\_\_\_\_

#### PRI Identification Service

*Will SID/ANI be used?	<input type="checkbox"/> No	<input type="checkbox"/> Yes
Incoming calls	<input type="checkbox"/> ANI	<input type="checkbox"/> SID
Outgoing calls	<input type="checkbox"/> ANI	<input type="checkbox"/> SID/ANI Privacy
	<input type="checkbox"/> Both... Prefer _____ then _____	<input type="checkbox"/> SID-Extension Based
		<input type="checkbox"/> SID-Line Based

#### Channel Service Unit

	<input type="checkbox"/>	<input type="checkbox"/> §
Mfr	AT&T Paradyne	_____
Model	3150	_____
REG#	AW2USA-74673-DD-E	_____
		_____

§ If a CSU other than the one listed AT&T models is used, AT&T will not accept the responsibility for its installation, connection, or testing.

\* Required fields for presale

---

## DS1 Connectivity Ordering

After the contract is signed, the sales representative or authorized dealer contacts the DS1 connectivity vendor to discuss the T1/PRI service order. The vendor needs information about the communications system as well as customer identification. Table E-1 describes the kind of information the vendor requires. This table should be reviewed with the customer's network representative or dealer so the information will be available when needed.

**Table E-1. Guide to DS1 Connectivity Ordering**

<b>Communications System:</b>	
Model	MERLIN MAGIX
Type (Mode)	Digital PBX
Jack Type	RJ48C or RJ48X
Facility Interface Code	Digital D4 Framing Digital ESF Framing Digital ESF and B8ZS

### Digital PBX

The following conditions relate to the Digital PBX:

- It has the EIA standard CISA transmission path.
- It is senderized.
- It is the equipment that must be timed.
- It has an internal stratum clock level of 4.
- It provides automatic call distribution through the Group Calling feature.
- It provides loopback (keeps signal alive) through the CSU. (The 100R INA and 100 DCD modules have a built-in CSU; the built-in CSU in the 100 DCD module is supported in systems of Release 1.5 or later.)

**Table E-2. Channel Service Unit (CSU)**

---

Manufacturer:	AT&T	Other _____
Model:	3150	_____
Reg. Number:	AW2USA-74673-DD-E	_____
Facility Interface Codes:	_____	_____
Digital D4 Framing:	Digital ESF Framing	
	Digital ESF and B8ZS	

---

Standard CSU jacks and test point are provided.

**Audible Ringing Source**

- Digital PBX
- Channel Service

**Testing Service**

- AT&T
- Other \_\_\_\_\_

If a CSU other than those listed above is used, Avaya will not accept the responsibility for its installation, connection, or testing.

**Echo Control Device**

Not used.

---

## Overview

### **WARNING:**

*When using high-density station modules (016- and 024-port), some configurations will be limited to three station modules per carrier due to exceeding the unit load capacity of the power supply. This unit load limitation typically occurs when a predominance (more than 50%) of large, multi-button telephones (4424LD+, 4424D+, 4412D+, MLX-20L, MLX-28D, ETR-34D, and/or ETR-18D telephones) are used. To prevent unit load problems in configuring systems, please follow the unit load configuration rules outlined below.*

A unit load is a measure of power (1.9 watts) used to determine the electrical load that the following components have on *each carrier's* power supply:

- **Telephones and Adjuncts.** Only the telephones and adjuncts that connect to the analog and digital ports on the control unit require unit load calculation. Do not include any equipment with its own power supply in the unit load calculation (for example: do not count the DSS).
- **Direct Inward Dial (DID) modules.**

Unit load and power requirements for a new system are computed automatically when the equipment for the system is initially ordered. These calculations are based on the assumption that each module is fully utilized—that is, all jacks are used.

### **WARNING:**

*Never have more than two (2) 800 BRI modules, two (2) DS1 modules (100D or 100 DCD), two (2) INA modules (100R INA), or more than one (1) 100D/100 DCD and one (1) 100R INA module in a carrier.*

*A maximum of two Merlin Messaging R2.5 modules can be installed per MERLIN MAGIX R2.0 system, however, only the first module installed (left most slot in system) can be programmed for voice messaging and/or Delayed Announcement Service. The second Merlin Messaging module installed can only be programmed for Delayed Announcement Service. Whether both Merlin Messaging modules can be installed in the same carrier depends on how many other -5 volt modules are also installed in that carrier.*

*Lastly, there can be any combination of the following three -5v dc modules per carrier, but do not exceed three per carrier:*

- *MAGIX/LEGEND processor*
- *Merlin Messaging Module*
- *100D module (with or without built-in CSU/DSU)*
- *100R INA Module*
- *800 BRI Module*

*If you exceed three –5v dc modules in a single carrier, the system will fail to come on-line.*

---

## Configuration Rules for Power Supplies (assumes a mix of telephone types)

1. In Key mode, the MERLIN MAGIX 491D1 and the MERLIN LEGEND 391C1 power supplies can generally support up to **three 016 MLX, 024TDL (MAGIX only), or 016 ETR modules**, as long as no DID, OPT or E&M Tie Line modules are in the same carrier.
2. In the Hybrid/PBX mode, the 491D1 and 391C1 power supplies can generally support up to **four 016 MLX, 024TDL (MAGIX only) and 016 ETR modules**, as long as no DID, OPT or E&M Tie Line modules are in the same carrier.

In many circumstances a more accurate unit load calculation may be useful. This may include situations where modules are not fully utilized, a predominance of large multi-button telephones are used, there is a change in the equipment, or you suspect that a particular carrier has more unit loads than the power supply can handle.

---

## Unit Load Capacity of Power Supplies

Following are the maximum unit loads for each of the power supplies:

- 391C1 & 491D1 = 96 unit loads
- 391A3 = 75 unit loads
- 391A1 & 319A2 = 54 unit loads

Here's how you determine which power supply is already installed in a plastic carrier:

- The 391A1 and 319A2 Power Supply's power switch toggles up and down, and have a gray jack between the power switch and the power "LED".
- The 391A3 Power Supply does not have a gray jack between the power switch and the power "LED", but the power switch still toggles up and down.
- The 391C1 Power Supply also does not have a gray jack between the power switch and the power "LED", but it's power switch toggles left to right.

The 491D1 Power Supply is the only power supply that can be installed in a metal carrier.

## Unit Load Rules for Different Modes

A general rule to follow is that if you can distribute the DID modules and telephone modules equally across the carriers, you will prevent unnecessary drain on any one carrier.

Also, depending on the system's mode, the rules vary, as follows:

- **Unit Loads for the Hybrid/PBX Mode.** The 491D1 power supply has a maximum rating of 96 unit loads and can handle up to a total of 96 4400-Series, MLX, ETR, and MLS telephones.
- **Unit Loads for Key or Behind Switch Mode.** In a Key or Behind Switch system with four or fewer modules, no calculation is needed. The power supply generally supports four modules of any type in Key or Behind Switch mode.

## Calculation of Unit Loads

1. Add up the unit load for each type of module using Table F-1. If the total doesn't exceed 96, no further calculations are necessary. Table F-1 assumes a mix of telephone types with no more than 50% of telephones being large, multi-button telephones (4424LD+, 4424D+, 4412D+, MLX-20L, MLX-28D, ETR-34D, and/or ETR-18D) telephones.
2. If unit loads calculated from Table F-1 exceed 96 or if more than 50% of the telephones are large multi-button telephones, calculate the actual total using the unit load values in Table F-2 for each type of station device and trunk (include DSS and adjuncts powered from the Processor).

If the total exceeds the maximum unit loads per power supply, try to exchange modules between carriers to reduce the load below the maximum. MERLIN LEGEND customers using a 391A1, 391A2, or 391A3 power supply may need to purchase a 391C1 power supply.

**NOTE** ► No empty slots are permitted between modules in MERLIN MAGIX Release 1.0 systems.

**Table F-1. Unit Loads per Module**

Module App Code	Type	Unit Load
617A52 617B52	412 LS-TDL	13
617A58 617B58	024 TDL	24
617S15 617T15	100 DCD	0
617A59	100R INA	0

**Table F-1. Unit Loads per Module —Continued**

Module App Code	Type	Unit Load
617N15	100D	0
617C21	008 MLX	13.5
617A54	016 MLX	27
617E34	016 T/R	12.8
617A56	016 ETR	24
617B35	800 NI-BRI	0
617G20	800 DID	8.0
617 E28	008 OPT	8.0
617D14	400 E&M	8.0
617B31	800 GS/LS-ID	0
617 E29	408 GS/LS-MLX-ID	13.5
617A49	MERLIN Messaging	0

**Table F-2. Unit Loads per Port**

Port Load	Hybrid/PBX Mode	Key Mode
<b>TDL module for 4400-Series telephones</b>		
4424LD+	1.1	1.3
4412D+/4424D+	1.1	1.3
4400/4400D/4406D+	0.9	1.0
DSS	0	0
<b>MLX telephone/adjunct</b>		
MLX-20L	1.1	1.6
MLX-28	1.2	1.7
MLX-5/-10/-16 w/ or w/o display	0.9	1.2
DSS	0.7	0.9
MFM (use local PSU)	0	0
<b>Tip/ring telephone</b>	0.6	0.7
<b>ETR telephone/adjunct</b>		
ETR-6	0.9	1.0

Table F-2. Unit Loads per Port—Continued

Port Load	Hybrid/PBX Mode	Key Mode
ETR-18	1.0	1.2
ETR-18D	1.2	1.4
ETR-34D	1.5	1.7
<b>Trunk</b>		
GS-LS	0	0
DID	1.0	1.0
E&M	1.4	1.4
DS1	0	0

## Unit Load Worksheet

Use this worksheet to calculate unit loads for each carrier. Make a copy of all pages of the worksheet for each carrier.

1. Number of modules in carrier (excluding power supply and processor):
  - If fewer than 5, no further calculation is required. \_\_\_\_\_
  - If 5 or 6, continue to Step 2.
2. Key or Behind Switch mode only:  Key  
 Modified  
 Indicate the configuration of lines; then go to Step 5.
3. Hybrid/PBX mode only:  
 Do all modules in the carrier have 4400-Series and/or MLX telephone jacks?  Yes  
 No
  - If no, no further calculation is required.
  - If yes, continue to Step 4.

4. Hybrid/PBX mode only:

Calculate the total number of multiline 4400-Series and MLX telephones.

Number of 4424LD+ telephones connected to modules in the carrier: \_\_\_\_\_

Number of 4424D+ telephones connected to modules in the carrier: \_\_\_\_\_

Number of 4412D+ telephones connected to modules in the carrier: \_\_\_\_\_

Number of MLX-20L telephones connected to modules in the carrier: \_\_\_\_\_

Number of MLX-28D telephones connected to modules in the carrier: \_\_\_\_\_

Total of 4424LD+, 4424D+, 4412D+, MLX-20L, and MLX-28D telephones: \_\_\_\_\_

- If the total is less than 45, no further calculation is required.
- If the total is 45 or more, continue to Step 5.

5. Calculate the estimated unit loads by using the following table.

<b>Module</b>	<b>Qty</b>	<b>x</b>	<b>Unit Load</b>	<b>= Total</b>
008 MLX			13.25	
016 MLX			27	
008 OPT			8.0	
016 ETR			24	
016 (T/R)			12.8	
024 TDL			24	
100 DCD			0.0	
100D			0.0	
100R INA			0.0	
400 EM			8.0	
408 GS/LS-ID-MLX			13.5	
412 LS-ID-TDL			13	
800 GS/LS-ID			0.0	
800 DID			8.0	
800 NI-BRI			0.0	
Total estimated unit load:				

- If the total is less than 96, no further calculation is required.
  - If the total is 96 or more, continue to Step 6.
6. Calculate the actual carrier unit load using the following table.
- If the total actual unit load is less than or equal to 96, no further calculation is required.
  - If the total actual unit load is more than 96, continue to Step 7.

Equipment	Qty x	Unit Load		= Total
		Hybrid/PBX or Modified	Key	
<b>Network Access Lines<sup>1</sup></b>				
DID		1.0	0.0	
DS1		0.0	0.0	
NI-1 BRI		0.0	0.0	
GS/LS		0.0	0.0	
Tie		1.4	1.4	
<b>Telephones</b>				
4400		0.9	1.0	
4400D		0.9	1.0	
4406D+		0.9	1.0	
4412D+		1.1	1.3	
4424D+		1.1	1.3	
4424LD+		1.1	1.3	
MLX-5		0.9	1.2	
MLX-5D		0.9	1.2	
MLX-10		0.9	1.2	
MLX-10D		0.9	1.2	
MLX-10DP		0.9	1.2	
MLX-16DP		1.5	1.5	
MLX-28D		1.2	1.7	
MLX-20L		1.1	1.6	
ETR-6		0.9	1.0	
ETR-18		1.0	1.2	
ETR-18D		1.0	1.2	
ETR-34D		1.5	1.7	
MLS-6		0.7	0.7	
MLS-12		0.8	0.8	
MLS-12D		0.8	0.8	

Equipment	Qty x	Unit Load		= Total
		Hybrid/PBX or Modified	Key	
<b>Telephones (continued)</b>				
MLS-18D		0.8	0.8	
MLS-34D		0.9	0.9	
Business Cordless 905		0.0	0.0	
TransTalk 9031/9040		0.0	0.0	
Single-Line Telephone		0.6	0.7	
<b>Optional Equipment<sup>2</sup></b>				
Direct Station Selector (DSS) <sup>3</sup>		0.7	0.9	
DSS 4450 <sup>4</sup>		0.0	0.0	
Hands-Free Unit		0.8	1.0	
Headset Adapter		0.8	1.0	
EICON board		0.0	0.0	
Total actual unit load:				

1 Unit loads are computed for each trunk for trunk-type network access lines.

2 The MFM has its own wall power unit located at the telephone and, therefore, is not added to the unit load calculation.

3 For MLX telephones, up to two DSSs (one DSS for each MLX-28D or MLX-20L) can be powered from each control unit carrier. For example, a three-carrier system can have six system operator positions, each with one DSS powered from the control unit.

4 The power supply unit that comes with the 4424LD+ telephone also can power up to two DSSs attached to the telephone. When you connect one or two DSSs to a 4424D+ telephone, you must use a power supply unit to power these DSSs.

7. Try to exchange modules between carriers to reduce the unit loads to 96. (Remember that the 100D, 100DCD, 100R INA, 800 NI-BRI, and 800 GS/LS modules have unit loads of 0.0.) Repeat Steps 1 through 6 to recalculate unit loads for the new configuration.

- Empty slots are not permitted between modules.
- If the exchange reduces the unit load to below the rated maximum for your power supply module, no further calculation is required.
- If the exchange does not reduce the unit load to 96, install wall power units for the appropriate number of telephones to reduce the unit load to 96.



---

## NI-1 BRI Review

This appendix contains instructions for completing the NI-1 BRI Planner Form. If you have questions while completing the form prior to the sale, contact the Sales and Design Support Center (SDSC) engineers. Once the contract has been signed and the forms are completed, make a photocopy of the forms for your records and forward the forms to the technician who will do the installation. The technician will then fax a copy to the National Service Assistance Center (NSAC) if any questions or problems occur at the customer site.

The NI-1 BRI Planner Form should be used in conjunction with System Form 3i, Incoming Trunks: BRI Options (800 NI-BRI Module).

### Form Needed

NI-1 BRI Planner

### Planning Form Instructions

**NOTE** ▶ Prior to completing any of the steps below, you should first verify that the customer's local service provider offers National ISDN-1 BRI service with ISDN Ordering Code (IOC) standardized capability package "S" and a separate Multiline Hunt (MLH) service, depending on the customer's requirements. If the Central Office uses an Lucent Technologies 5ESS or Siemens SSC EWSD switch, MLH is available through the Series Completion feature. The Multiline Hunt Group (MLHG) feature on these central office switches is not recommended for use with the MERLIN MAGIX system. The Northern Telecom DMS-100 provides MLH service through the MLHG feature. A customer may want to order several BRI lines, some assigned as IOC package "S" and the others as MLH.

To properly order and program NI-1 BRI service, it may be necessary to contact the local service provider to determine what services are available and the type of switching equipment used. See Appendix H, "[NI-1 BRI Provisioning](#)," for detailed information that the local service provider may require in order to supply the necessary connections.

1. On page 1, fill in the customer name, telephone number, and address.

**NOTE** ► Reference Number is filled in by SDSC.

2. Fill in the Order Number.
3. Identify the personnel handling the account:
  - a. Account Executive's name and telephone number.
  - b. System Consultant's name and telephone number.
4. Identify the NI-1 BRI facility vendor by writing the vendor's name under the NI-1 BRI Vendor heading, along with the contact person's name and telephone number.
5. Under the Installation heading:
  - a. Write the Due Date on which the installation is scheduled to be completed.
  - b. Write the date the equipment is scheduled for delivery to the customer in the Materials-on-Job Date space.
6. Under the Installation Contacts heading, list the names and telephone numbers of the personnel responsible for the equipment order and its installation:
  - a. (Order) Implementor
  - b. SDSC Manager
  - c. National Technical Service Center (NTSC) Engineer
  - d. Data Services Organization (DSO) Manager
7. Under the question about whether the order has been placed:
  - If the order has been placed, check the Yes check box and fill in the expected service turn on date.
  - If the order has not been placed, check the No check box.
8. On page 2, enter the type of BRI service to be ordered.
9. Contact the local service provider and determine what type of central office switch serves your area (for example, Lucent Technologies 5ESS, Northern Telecom DMS-100, or Siemens SSC EWSD). Enter this information under the "Type of CO Switch" heading on page 2 of the form.
10. Determine which type of configuration is best suited for your system. Some guidelines for selecting the service configuration are shown below:
  - **IOC Capability Package "S."** Each BRI line, also called a Digital Subscriber Line (DSL), consists of two B-channels, both of which support voice and data calls. In order to have two simultaneous voice or digital data calls, the central office must assign two Directory Numbers (DNs) and two Service Profile Identifiers (SPIDs) to each DSL. Basic call-handling is supported, along with the Calling Party Number/Billing Number (CPN/BN) identification feature. No packet data capabilities or hunting features are provided.

- NOTES** ▶
- On the Lucent Technologies 5ESS switch, the Calling Party Number identification feature is assigned using the standard BRCS preconstructed features /LICNDA and /CPCOFA. If it is possible, request /CPCPFA for the Calling Number Identification feature from your local service provider as it provides a clearer display of the CPN information.
  - IOC package “S” supports a maximum of one call per telephone number (DN) at any given time. If another call comes in on that line, the caller gets a busy signal.
  - For Canada and those areas of the United States where IOC package “S” is not available, the capability package that is ordered must provide alternate voice/circuit-switched data on both B-channels with no packet data capability or supplementary voice features except for the CPN/BN feature, if available. See Appendix H, “[NI-1 BRI Provisioning](#)” for detailed information.

- **Multiline Hunt (MLH).** This feature is not part of the IOC package “S” and must be provisioned separately.

One or more BRI lines (and their associated DNs) are grouped together with one (main) telephone number. When an incoming call arrives at the main number, the central office searches through the DNs until an available line is found.

- NOTE** ▶ Each DN in the MLH group can be dialed directly, but hunting may not be initiated (depending on the central office switch).

For the Siemens SSD EWSD switch, each MLH group must be assigned as either voice or data; alternate voice/data is not supported since mixing the two types in one group could create call interference. This constraint does not apply to the Lucent Technologies 5ESS or the Northern Telecom DMS-100 switches.

The programming for Multiline Hunt is central office switch dependent. The Lucent Technologies 5ESS and Siemens SSC EWSD switches provide hunting through the Series Completion feature. The Northern Telecom DMS-100 switch provides hunting through the Multiline Hunt Group (MLHG) feature. Contact the local service provider to determine what type of switching equipment is in use and check the appropriate check box under the MLH subheading of the Service Configurations section on page 2 of the form.

The MERLIN MAGIX Integrated System has currently been tested with each switch type in the following configurations:

- Lucent Technologies 5ESS in a linear hunt group
- Northern Telecom DMS-100 in a circular hunt group
- Siemens SSC EWSD in a circular hunt group

Other configurations are possible, but are not guaranteed to work.

Appendix H, “[NI-1 BRI Provisioning](#),” provides sample LEC programming screens of the Series Completion and MLHG features. These screens show the fields and parameters for the central office switch and may be forwarded to the local service provider if necessary.

11. Once you have determined your Service Configuration, do *either* of the following:
  - If your Service Configuration will be IOC “S,” check the check box beside the IOC “S” selection under the Service Configuration heading, then enter the number of BRI lines that will be provisioned using this package.
  - If your Service Configuration will be MLH, check the check box beside the MLH selection under the Service Configurations heading.
    - Check the check box for MLHG (Northern Telecom DMS-100) or Series Completion (Lucent Technologies 5ESS or Siemens SSC EWSD).
    - Enter the total number of BRI lines provisioned using MLH, the number of BRI lines provisioned as voice only hunt groups, the number of BRI lines provisioned as data only hunt groups, and the number of BRI lines provisioned as voice/data hunt groups in the spaces provided.
12. Specify the total number of BRI lines under the Number of BRI Lines Ordered heading.
13. If CPN/BN is available with the BRI lines ordered, check the CPN/BN check box under the Additional Features heading.
14. Make a copy of the NI-1 BRI Planner for your records and forward the original to the technician who will perform the installation.

MERLIN MAGIX® Integrated System Release 2.1  
**NI-1 BRI Planner**

---

For use with Form 3i, Incoming Trunks: BRI Options (800 NI-BRI Module)

Reference No. \_\_\_\_\_

**Customer**

\*Name \_\_\_\_\_ Tel. No. \_\_\_\_\_

\*Address \_\_\_\_\_

\* Order Number \_\_\_\_\_

Account Executive \_\_\_\_\_ Tel. No. \_\_\_\_\_

Systems Consultant \_\_\_\_\_ Tel. No. \_\_\_\_\_

**NI-1 BRI Vendor**

\*Name \_\_\_\_\_

Contact \_\_\_\_\_ Tel. No. \_\_\_\_\_

**Installation**

Due Date \_\_\_\_\_

Materials-on-Job Date \_\_\_\_\_

**Installation Contacts**

Implementor \_\_\_\_\_ Tel. No. \_\_\_\_\_

SDSC Manager \_\_\_\_\_ Tel. No. \_\_\_\_\_

NTSC Engineer \_\_\_\_\_ Tel. No. \_\_\_\_\_

DSO Manager \_\_\_\_\_ Tel. No. \_\_\_\_\_

Has order been placed with the network provider for this service?

Yes, Date \_\_\_\_\_

No

*\* Required fields for presale.*

**Type of Service\***

\_\_\_\_\_

**Type of CO Switch**

\_\_\_\_\_

**Service Configurations**

IOC"S"

Number of BRI Lines Provisioned \_\_\_\_\_

MLH:     MLHG     Series Completion

Number of BRI Lines Provisioned \_\_\_\_\_

Number of Voice Only Hunt Groups Provisioned \_\_\_\_\_

Number of Data Only Hunt Groups Provisioned \_\_\_\_\_

Number of Voice/Data Hunt Groups Provisioned† \_\_\_\_\_

**Number of BRI Lines Ordered**

\_\_\_\_\_

**Additional Features**

CPN/BN

\* MERLIN LEGEND Release 4.0 supports only National ISDN-1 BRI (2B + D) service.

† MERLIN LEGEND Release 4.0 does not support Voice/Data Hunt Groups with the Siemens SSC EWSD Central Office Switch.

---

## NI-1 BRI Provisioning

This appendix provides detailed information concerning the features and translations that make up the ISDN Ordering Code (IOC) standardized capability package “S,” as well as the Multiline Hunt (MLH) feature. The MLH feature is provisioned using either the Multiline Hunt Group or the Series Completion feature, depending on the central office switch type.

Specific translations are provided for the following switches:

- Lucent Technologies 5ESS
- Northern Telecom DMS-100
- Siemens SSC EWSD

After determining that the local service provider offers National ISDN-1 service, the information contained in this appendix should be given to the local service provider, if necessary.

**NOTE** ► The programming screens shown in this appendix are representative samples only. The local service provider will need to enter applicable data (such as the telephone numbers) where necessary. Also note that the programming covered in this appendix *does not* take place on the MERLIN MAGIX Integrated System. All programming is performed by the local service provider on the central office switch.

## Lucent Technologies 5ESS Switch Translations

For the Lucent Technologies 5ESS switch, Capability Package "S" includes alternate voice/circuit-switched data on two B-channels. It also supports Calling Number Identification on data and voice connections. Please note that in order to have simultaneous calls on the two B-channels, two Directory Numbers (DNs) must be assigned with this package.

The Lucent Technologies 5ESS switch also allows alternate voice and data hunting on one DN using the Series Completion feature.

### ISDN Capability Package "S"

The information listed below provides the DN translations that define Capability Package "S," and the screens and fields that must be programmed.

The information provided shows the translations for one Digital Subscriber Line (DSL) and two DN's. For multiple DSLs/DN's, the central office will duplicate these screens and enter the applicable DSL and DN values as needed.

#### ISDN Ordering Code: Capability S

##### VIEW 23.2

##### DN1 Translations

Fields that must be programmed on Screens 1, 2, 3, and 4:

1	DSL TN	<C plus <i>Telephone number</i> >
9	ASSOC	<U>
11	OE	< <i>enter OE and type</i> >
14	D ISCN	< <i>enter value</i> >
15	DSERV	<SX>
16	B1SERV	<DMD>
17	B2SERV	<DMD>
18	NT1 TYPE	< <i>enter NT1 type</i> >
20	DSL CLS	<STD>
21	RSTR MP	<N>
23	MDPKT	<0>
24	MTERM	<2>
28	USPID	< <i>enter value</i> >
29	MAXB CHL	<2>
30	ACT USER	<Y>

Fields that must be populated on Screens 4, 5, and 6:

34	CKT TN	<enter TN>
35	CKT LCC	<enter LCC>
36	CKT RAX	<enter RAX value>
41	TERMTYP	<TYPEA>
42	DISPLAY	<Y>
46	CSV	<1>
47	CSV CHL	<ANY>
49	CSV LIMIT	<1>
55	CSD	<2>
56	CSD CHL	<ANY>
58	CSD LIMIT	<2>
126	CPN SCRN	<Y>
91	PIC	<enter PIC>

The Calling Number Identification feature is assigned using the standard BRCS preconstructed features /LICNDA and /CPCOFA. If it is possible, request /CPCPFA for the Calling Number Identification feature, as it provides a clearer display of the CPN information.

The Redirecting Number Delivery (RND) feature is assigned using the preconstructed RND feature, /RND. These features are assigned to the user in View 23.8, Field 109.

### **DN2 Translations (Note: DSL information was built with DN1)**

Fields that must be populated on Screens 1, 2, 3, and 4:

1	DSL TN	<C plus second Telephone number>
9	ASSOC	<U>
11	OE	<enter OE and type>
28	USPID	<enter value>
29	MAXB CHL	<2>
30	ACT USER	<Y>

Fields that must be populated on Screens 4, 5, and 6:

34	CKT TN	<enter TN>
35	CKT LCC	<enter LCC>
36	CKT RAX	<enter RAX value>
41	TERMTYP	<TYPEA>
42	DISPLAY	<Y>
46	CSV	<1>
47	CSV CHL	<ANY>
49	CSV LIMIT	<1>
55	CSD	<2>
56	CSD CHL	<ANY>
58	CSD LIMIT	<2>
126	CPN SCRN	<Y>
91	PIC	<enter PIC>

The Calling Number Identification feature is assigned using the standard BRCS preconstructed features /LICNDA and /CPCOFA. If it is possible, request /CPCPFA for the Calling Number Identification feature, as it provides a clearer display of the CPN information.

The Redirecting Number Delivery (RND) feature is assigned using the preconstructed RND feature, /RND. These features are assigned to the user in View 23.8, Field 109.

### Series Completion Feature Translations

The sample screens shown below illustrate the translations for alternate voice and data hunting on one main DSL and three DNs forming a linear series completion group. Voice hunting is provided using Series Completion (Field 87, SERHLN). Data hunting is provided with Call Forward Data Busy Line (/CFDBLAC).

The 5ESS limits the number of members of a series completion group to 16 DNs, and the number of lines forwarded using /CFDBLAC to the value specified on Screen 9, Field 176 (SIMINTRA). This value is currently set to 99 series completion groups, but can be changed.

```

SCREEN 1 OF 14          RECENT CHANGE 23.8
                        DSL/BRCS ASSIGNMENT
(*)1. DSL TN C 2228700  SERVICES AND FEATURES  SCREENS
(*)4. MLHG_____      -----
(*)5. TERM_____      BRCS FEATURE LIST          6
(*)6. DSL OE  _ _____ BRCS FEATURE PARAMETERS  7 to 9
(*)9. ASSOC  UCKT      4 & 5
                        DELFEAT LIST          14
                        DPKT                  10
                        DSL INFO              2
                        ODB                  11
                        PPB1                 c
                        PPB2                 13
                        USER INFO           3
    
```

```

5ESS SWITCH LABNSC1
SCREEN 2 OF 14          RECENT CHANGE 23.8
                        DSL/BRCS ASSIGNMENT (DSL INFO)
>11. OE  I 00101209    25. CUT DGTS                2228
14. D ISCN 007096     26. ACSR GRP_____
15. D SERV SX         27. DFLT SRV_____
16. B1 SERV DMD
17. B2 SERV DMD
18. NT1 TYPE AULC
19. PM GRP PMDEF
20. DSL CLS STD
21. RSTR MP N
22. ACSR INH Y
23. MDPKT 8
24. MTERM 2
    
```

## System Planning

---

---

SCREEN 3 OF 14

5ESS SWITCH LABNSC1  
RECENT CHANGE 23.8  
DSL/BRCS ASSIGNMENT (USER INFO)

>28. USPID 0122287000  
29. MAXB CHL1  
30. ACT USERY  
31. PPB1 USRN  
32. PPB2 USRN  
33. AGI \_

---

---

SCREEN 4 OF 14

5ESS SWITCH LABNSC1  
RECENT CHANGE 23.8  
DSL/BRCS ASSIGNMENT (CKT)

		CIRCUIT VOICE (CSV)	CIRCUIT DATA (CSD)
>34. CKT TN	2228700		
35. CKT LCC	DSL	46. CSV 1	55. CSD 1
36. CKT RAX	1	47. CSV CHL ANY	56. CSD CHL ANY
37. CKT MLHG	_____	48. CSV ACO	57. CSD ACO _____
38. CKT TERM	_____	49. CSV LIMIT 1	58. CSD LIMIT 1
39. NEW TN	_____	50. CSV NBLIMIT _____	59. CSD NBLIMIT _____
40. CONFIG GRP	NI17507B	50. CSV NBLIMIT _____	60. K56 DNA _____
41. TERMTYP	TYPEA	51. SP DNA _____	61. K56 DNA QTY _____
42. DISPLAY	Y	52. SP DNA QTY _____	62. K64 DNA _____
43. EKTS	_____	53. AU DNA	63. K64 DNA QTY _____
44. CA	_____	54. AU DNA QTY	
45. CA QT	_____		

---

```

SCREEN 5 OF 14          5ESS SWITCH LABNSC1
                        RECENT CHANGE 23.8
                        DSL/BRCS ASSIGNMENT (CKT)
>64. TKSN              72. SAR QTY__          82. BUSY MONITORN
65. TAUTON             73. SAR ORIGN          83. ATT MLHG_____
66. SHAREDN           74. SAR TERMN          84. RBV TGN_____
67. SAUTON            75. INCOMINGN          85. ERCO ASGNN
68. PRIVACYN          76. INTERCOMN          86. ERCO ACTN
69. ICPN              77. ORIG CWN           87. SERHLN2228701
70. SUSON             78. PPN                88. BCK LNKN
71. SUSTN             79. CA PREF            90. CIDIALALLOW
                        80. AUTO HOLD          91. PIC_____
                        81. ONE TOUCHN        92. PTC_____
                        95. E911 PSAPN
    
```

```

SCREEN 6 OF 14          5ESS SWITCH LABNSC1
                        RECENT CHANGE 23.8
                        DSL/BRCS ASSIGNMENT
>106. BFGN _____ 109. FEATURE LIST (FL)
                        A
ROW FEATURE A P C R   FEATURE  A P C R   FEATURE  A P C R   FEATURE  A P C R
1 /LIDLXA  Y _ N N   10 _____ _ _ _ _   19 _____ _ _ _ _   28 _____ _ _ _ _
2 /CPCPFA  Y _ N N   11 _____ _ _ _ _   20 _____ _ _ _ _   29 _____ _ _ _ _
3 /CFDBLAC Y _ N N   12 _____ _ _ _ _   21 _____ _ _ _ _   30 _____ _ _ _ _
4 _____ _ _ _ _   13 _____ _ _ _ _   22 _____ _ _ _ _   31 _____ _ _ _ _
5 _____ _ _ _ _   14 _____ _ _ _ _   23 _____ _ _ _ _   32 _____ _ _ _ _
6 _____ _ _ _ _   15 _____ _ _ _ _   24 _____ _ _ _ _   33 _____ _ _ _ _
7 _____ _ _ _ _   16 _____ _ _ _ _   25 _____ _ _ _ _   34 _____ _ _ _ _
8 _____ _ _ _ _   17 _____ _ _ _ _   26 _____ _ _ _ _   35 _____ _ _ _ _
9 _____ _ _ _ _   18 _____ _ _ _ _   27 _____ _ _ _ _   36 _____ _ _ _ _
    
```



```

SCREEN 10 OF 14          5ESS SWITCH LABNSC1
                        RECENT CHANGE 23.8
                        DSL/BRC5 ASSIGNMENT (DPKT)
>183. DPKT TN           _____ 192. IECP DNIC           _____ 198. H PVC LCN           _____
184. LCC                 _____ 193. PB GRP             _____ 199. L IN LCN           _____
185. RAX                 _____ 194. NOTIF             NO      200. H IN LCN           _____
186. MLHG                _____ 195. ICP               N       201. L 2W LCN           _____
187. TERM                _____ 196. HUNT NOTIF        _____ 202. H 2W LCN           _____
188. LNR HNT TN         _____ 197. TCID              _____ 203. L OUT LCN          _____
190. CHL SEL            N          _____                _____ 204. H OUT LCN          _____
191. NEW TN              _____                _____ 206. PMDR GRP           _____
                                                _____ 207. PMDR ACT           _____
                                                _____ 208. DNA                 _____
                                                _____ 209. DNA QTY            _____
    
```

```

SCREEN 11 OF 14         5ESS SWITCH LABNSC
                        RECENT CHANGE 23.8
                        DSL/BRC5 ASSIGNMENT (ODB)
>210. ODB TN            _____ 222. RATE              _____ 234. L IN LCN           _____
211. LCC                 _____ 223. N2                _____ 235. H IN LCN           _____
212. RAX                 0          _____ 224. T1                _____ 236. L 2W LCN           _____
213. MLHG                _____ 225. T3                _____ 237. H 2W LCN           _____
214. TERM                _____ 226. WNDSZ             _____ 238. L OUT LCN          _____
215. LNR HNT TN         _____ 227. NEW TN            _____ 239. H OUT LCN          _____
216. HUNT DEACT         _____ 228. IECP DNIC        _____ 240. BUSY LIMIT         _____
217. CHL SEL            N          _____ 229. PB GRP            _____ 241. PMDR GRP           _____
218. ISCN1              _____ 230. NOTIF             _____ 242. PMDR ACT           _____
219. ISCN2              _____ 231. T3XX              0       243. DNA                 _____
220. BAND                0          _____ 232. ICP               N       244. DNA QTY            _____
221. ODB                 _____ 233. HUNT NOTIF        _____
    
```

## System Planning

---

---

SCREEN 12 OF 14

5ESS SWITCH LABNSC1  
RECENT CHANGE 23.8  
DSL/BRCS ASSIGNMENT (PPB1)

>245. PPB1 TN	_____	254. RATE	_____	264. H PVC LCN	_____
246. LCC	_____	255. N2	_____	265. L IN LCN	_____
247. RAX	0	256. T1	_____	266. H IN LCN	_____
248. MLHG	_____	257. T3	_____	267. L 2W LCN	_____
249. TERM	_____	258. WNDSZ	_____	268. H 2W LCN	_____
250. LNR HNT TN	_____	259. NEW TN	_____	239. H OUT LCN	_____
251. HUNT DEACT	_____	260. IECP DNIC	_____	269. L OUT LCN	_____
252. CHL SEL	N	261. PB GRP	_____	270. H OUT LCN	_____
253. ISCN	_____	262. ICP	N	271. BUSY LIMIT	_____
		263. HUNT NOTIF	_____	272. PMDR GRP	_____
				273. PMDR AC	_____

---

---

SCREEN 13 OF 14

5ESS SWITCH LABNSC1  
RECENT CHANGE 23.8  
DSL/BRCS ASSIGNMENT (PPB2)

>274. PPB2 TN	_____	283. RATE	_____	293. H PVC LCN	_____
275. LCC	_____	284. N2	_____	294. L IN LCN	_____
276. RAX	0	285. T1	_____	295. H IN LCN	_____
277. MLHG	_____	286. T3	_____	296. L 2W LCN	_____
278. TERM	_____	287. WNDSZ	_____	297. H 2W LCN	_____
279. LNR HNT TN	_____	288. NEW TN	_____	298. L OUT LCN	_____
280. HUNT DEACT	_____	289. IECP DNIC	_____	299. H OUT LCN	_____
281. CHL SEL	N	290. PB GRP	_____	300. BUSY LIMIT	_____
282. ISCN	_____	291. ICP	N	301. PMDR GRP	_____
		292. HUNT NOTIF	_____	302. PMDR ACT	_____

---



## System Planning

---

---

SCREEN 2 OF 14

5ESS SWITCH LABNSC1  
RECENT CHANGE 23.8  
DSL/BRCS ASSIGNMENT (DSL INFO)

>11. OE I	00101209	25. CUT DGTS	2228
14. D ISCN	007096	26. ACSR GRP	_____
15. D SERV	SX	27. DFLT SRV	_____
16. B1 SERV	DMD		
17. B2 SERV	DMD		
18. NT1 TYPE	AULC		
19. PM GRP	PMDEF		
20. DSL CLS			
21. RSTR MP	N		
22. ACSR INH	Y		
23. MDPKT	8		
24. MTERM	2		

---

---

SCREEN 3 OF 14

5ESS SWITCH LABNSC1  
RECENT CHANGE 23.8  
DSL/BRCS ASSIGNMENT (USER INFO)

>28. USPID0122287010	
29. MAXB CHL1	
30. ACT USERY	
31. PPB1 USRN	
32. PPB2 USRN	
33. AGI	_____

---

```

SCREEN 4 OF 14                                5ESS SWITCH LABNSC1
                                              RECENT CHANGE 23.8
                                              DSL/BRCS ASSIGNMENT (CKT)
>34. CKT TN      2228701  CIRCUIT VOICE      (CSV)  CIRCUIT DATA      (CSD)
35. CKT LCC      DSL      46. CSV            1      55. CSD            1
36. CKT RAX      1      47. CSV CHL       ANY     56. CSD CHL       ANY
37. CKT MLHG     _____ 48. CSV ACO       _____ 57. CSD ACO       _____
38. CKT TERM     _____ 49. CSV LIMIT    1      58. CSD LIMIT    1
39. NEW TN       _____ 50. CSV NBLIMIT  _____ 59. CSD NBLIMIT  _____
40. CONFIG GRP  NI17507A  51. SP DNA       _____ 60. K56 DNA       _____
41. TERMTYP     TYPEA   52. SP DNA QTY   _____ 61. K56 DNA QTY   _____
42. DISPLAY     Y      53. AU DNA       _____ 62. K64 DNA       _____
43. EKTS        _____ 54. AU DNA       _____ 63. K64 DNA QTY   _____
44. CA          _____
45. CA QTY      _____
    
```

```

SCREEN 5 OF 14                                5ESS SWITCH LABNSC1
                                              RECENT CHANGE 23.8
                                              DSL/BRCS ASSIGNMENT (CKT)
>64. TKS        72. SAR QTY___  82. BUSY MONITORN
65. TAUTON      73. SAR ORIGN  83. ATT MLHG_____
66. SHAREDN     74. SAR TERMN  84. RBV TGN_____
67. SAUTON      75. INCOMINGN 85. ERCO ASGNN
68. PRIVACYN    76. INTERCOMN 86. ERCO ACTN2228703
69. ICPN        77. ORIG CWN  87. SERHLN
70. SUSON       78. PPN      88. BCK LNKY
71. SUSTN       79. CA PREFI  89. ACD POS NUM_____
                80. AUTO HOLDN 90. CIDIALALLOW
                81. ONE TOUCHN 91. PIC_____
                92. PTC_____
                95. E911 PSAPN
    
```

SCREEN 6 OF 14

5ESS SWITCH LABNSC1  
 RECENT CHANGE 23.8  
 DSL/BRCS ASSIGNMENT

>106. BFGN \_\_\_\_\_ 109. FEATURE LIST (FL)

ROW	FEATURE	A	P	C	R	FEATURE	A	P	C	R	FEATURE	A	P	C	R	FEATURE	A	P	C	R
1	/CPCPFA	Y	_	N	N	10	_____	-	-	-	19	_____	-	-	-	28	_____	-	-	-
2	/LIDLXA	Y	_	N	N	11	_____	-	-	-	20	_____	-	-	-	29	_____	-	-	-
3	/CFDBLAC	Y	_	N	N	12	_____	-	-	-	21	_____	-	-	-	30	_____	-	-	-
4	_____	-	-	-	-	13	_____	-	-	-	22	_____	-	-	-	31	_____	-	-	-
5	_____	-	-	-	-	14	_____	-	-	-	23	_____	-	-	-	32	_____	-	-	-
6	_____	-	-	-	-	15	_____	-	-	-	24	_____	-	-	-	33	_____	-	-	-
7	_____	-	-	-	-	16	_____	-	-	-	25	_____	-	-	-	34	_____	-	-	-
8	_____	-	-	-	-	17	_____	-	-	-	26	_____	-	-	-	35	_____	-	-	-
9	_____	-	-	-	-	18	_____	-	-	-	27	_____	-	-	-	36	_____	-	-	-

---

SCREEN 7 OF 14

5ESS SWITCH LABNSC1  
 RECENT CHANGE 23.8  
 DSL/BRCS ASSIGNMENT (HIGH RUNNER FEATURE PARAMETERS)

>134. TG:GRPID	0	146. ACSR GRPNM	_____	158. QALWD	_____
135. MOH ALW	_____	147. EDS:GRPNM	_____	159. PRIORITY Q	_____
136. IDP NAME	_____	148. BCLID GRP	_____	160. ARSSI	_____
137. DPAT CAT	0	149. PFA:VGRPNM	_____	161. DIALPLN	_____
138. ICR SFG	0	150. PFA:DGRPNM	_____	162. ALWMDR	_____
139. SC1NAME	_____	151. ATH:VGRPNM	_____	163. ACSR PINREQ	_____
140. SC1S	_____	152. ATH:DGRPNM	_____	164. DRING	_____
141. SC2NAME	_____	153. MDR:GRPNM	_____	165. DCW DRING	_____
142. SC2S	_____	154. ACCT:GRPNM	_____	166. CWO DRING	_____
143. CPUO:SELQ1	0	156. ARS:DGRPNM	_____	167. MWY DRING	_____
144. CPUO:SELQ2	0	157. FRL	_____		
145. CPUT:TPREDQ	0				

---

SCREEN 8 OF 14            5ESS SWITCH LABNSC1  
 RECENT CHANGE 23.8  
 DSL/BRCS ASSIGNMENT (HIGH RUNNER FEATURE PARAMETERS)  
 >172. MESSAGE SERVICE (MSS)                            175. MW:DCNDN \_\_\_\_\_

ROW	FEATURE	GRPNM
1	_____	_____
2	_____	_____
3	_____	_____
4	_____	_____

SCREEN 9 OF 14            5ESS SWITCH LABNSC1  
 RECENT CHANGE 23.8  
 DSL/BRCS ASSIGNMENT (HIGH RUNNER FEATURE PARAMETERS)  
 >176. CALL FORWARDING FEATURE PARAMETERS (CF)

ROW	FEATURE	FWD TO DN	TIMEOUT	BSRING	SIMINTER	SIMINTRA
1	/CFDBLAC2228703		0	N	1	99
2	_____		0	-	0	0
3	_____		0	-	0	0
4	_____		0	-	0	0
5	_____		0	-	0	0
6	_____		0	-	0	0

## System Planning

---

---

SCREEN 1 OF 14                    5ESS SWITCH LABNSC1  
                                  RECENT CHANGE 23.8  
                                  DSL/BRCS ASSIGNMENT

(*)1. DSL	TN C	2228703	SERVICES AND FEATURES	SCREENS
(*)4. MLHG	_____		-----	-----
(*)5. TERM	_____		BRCS FEATURE LIST	6
(*)6. DSL OE	_____		BRCS FEATURE PARAMETERS	7 to 9
(*)9. ASSOC	U	CKT		4 & 5
			DELFEAT LIST	14
			DPKT	10
			DSL INFO	2
			ODB	11
			PPB1	12
			PPB2	13
			USER INFO	3

---

---

SCREEN 2 OF 14                    5ESS SWITCH LABNSC1  
                                  RECENT CHANGE 23.8  
                                  DSL/BRCS ASSIGNMENT (DSL INFO)

>11. OE	I	00101221	25. CUT DGTS	2228
14. D ISCN		007105	26. ACSR GRP	_____
15. D SERV	SX		27. DFLT SRV	_____
16. B1 SERV	DMD			
17. B2 SERV	DMD			
18. NT1 TYPE	TLC			
19. PM GRP	_____			
20. DSL CLS	STD			
21. RSTR MP	N			
22. ACSR INH	Y			
23. MDPKT	8			
24. MTERM	2			

---

```

SCREEN 3 OF 14                5ESS SWITCH LABNSC1
                              RECENT CHANGE 23.8
                              DSL/BRCS ASSIGNMENT (USER INFO)

>28. USPID0122287030
29. MAXB CHL1
30. ACT USERY
31. PPB1 USRN
32. PPB2 USRN
33. AGI _____
    
```

```

SCREEN 4 OF 14                5ESS SWITCH LABNSC1
                              RECENT CHANGE 23.8
                              DSL/BRCS ASSIGNMENT (CKT)

>34. CKT TN      2228703    CIRCUIT VOICE   (CSV)    CIRCUIT DATA    (CSD)
35. CKT LCC      DSL          46. CSV         1             55. CSD          1
36. CKT RAX      1           47. CSV CHL    ANY          56. CSD CHL     ANY
37. CKT MLHG     _____  48. CSV ACO    _____  57. CSD ACO     _____
38. CKT TERM     _____  49. CSV LIMIT  1           58. CSD LIMIT   1
39. NEW TN       _____  50. CSV NBLIMIT _____  59. CSD NBLIMIT _____
40. CONFIG GRP  _____  51. SP DNA     _____  60. K56 DNA     _____
41. TERMTYP     TYPEA      52. SP DNA QTY _____  61. K56 DNA QTY _____
42. DISPLAY     Y           53. AU DNA     _____  62. K64 DNA     _____
43. EKTS        _____  54. AU DNA     _____  63. K64 DNA QTY _____
44. CA          _____
45. CA QTY      _____
    
```

SCREEN 5 OF 14

5ESS SWITCH LABNSC1  
 RECENT CHANGE 23.8  
 DSL/BRCS ASSIGNMENT (CKT)

>64. TKSND	72. SAR QTY__	82. BUSY MONITORN
65. TAUTON	73. SAR ORIGN	83. ATT MLHG__
66. SHAREDN	74. SAR TERMN	84. RBV TGN__
67. SAUTON	75. INCOMINGN	85. ERCO ASGNN
68. PRIVACYN	76. INTERCOMN	86. ERCO ACTN
69. ICPN	77. ORIG CWN	87. SERHLN2228704
70. SUSON	78. PPN	88. BCK LNKY
71. SUSTN	79. CA PREFI	89. ACD POS NUM__
	80. AUTO HOLDN	90. CIDIALALLOW
	81. ONE TOUCHN	91. PIC__
		92. PTC__
		95. E911 PSAPN

---

SCREEN 6 OF 14

5ESS SWITCH LABNSC1  
 RECENT CHANGE 23.8  
 DSL/BRCS ASSIGNMENT

>106. BFGN \_\_\_\_\_ \_ 109. FEATURE LIST (FL)

ROW	FEATURE	A	P	C	R	FEATURE	A	P	C	R	FEATURE	A	P	C	R	FEATURE	A	P	C	R	
1	/CPCPFA	Y	_	N	N	10	_____	-	-	-	19	_____	-	-	-	28	_____	-	-	-	-
2	/LIDLXA	Y	_	N	N	11	_____	-	-	-	20	_____	-	-	-	29	_____	-	-	-	-
3	/CFDBLAC	Y	_	N	N	12	_____	-	-	-	21	_____	-	-	-	30	_____	-	-	-	-
4	_____	-	-	-	-	13	_____	-	-	-	22	_____	-	-	-	31	_____	-	-	-	-
5	_____	-	-	-	-	14	_____	-	-	-	23	_____	-	-	-	32	_____	-	-	-	-
6	_____	-	-	-	-	15	_____	-	-	-	24	_____	-	-	-	33	_____	-	-	-	-
7	_____	-	-	-	-	16	_____	-	-	-	25	_____	-	-	-	34	_____	-	-	-	-
8	_____	-	-	-	-	17	_____	-	-	-	26	_____	-	-	-	35	_____	-	-	-	-
9	_____	-	-	-	-	18	_____	-	-	-	27	_____	-	-	-	36	_____	-	-	-	-

---

```

SCREEN 7 OF 14      5ESS SWITCH LABNSC1
                    RECENT CHANGE 23.8
                    DSL/BRCS ASSIGNMENT (HIGH RUNNER FEATURE PARAMETERS)
>134. TG:GRPID      0          146. ACSR GRPNM _____ 158. QALWD _____
135. MOH ALW        _____ 147. EDS:GRPNM _____ 159. PRIORITY Q _____
136. IDP NAME       _____ 148. BCLID GRP _____ 160. ARSSI _____
137. DPAT CAT       0          149. PFA:VGRPNM _____ 161. DIALPLN _____
138. ICR SFG        0          150. PFA:DGRPNM _____ 162. ALWMDR _____
139. SC1NAME        _____ 151. ATH:VGRPNM _____ 163. ACSR PINREQ _____
140. SC1S           _____ 152. ATH:DGRPNM _____ 164. DRING _____
141. SC2NAME        _____ 153. MDR:GRPNM _____ 165. DCW DRING _____
142. SC2S           _____ 154. ACCT:GRPNM _____ 166. CWO DRING _____
143. CPUO:SELQ1     0          156. ARS:DGRPNM _____ 167. MWY DRING _____
144. CPUO:SELQ2     0          157. FRL _____
145. CPUT:TPREDQ    0
    
```

```

SCREEN 8 OF 14      5ESS SWITCH LABNSC1
                    RECENT CHANGE 23.8
                    DSL/BRCS ASSIGNMENT (HIGH RUNNER FEATURE PARAMETERS)
>172. MESSAGE SERVICE (MSS)          175. MW:DCNDN _____
    
```

ROW	FEATURE	GRPNM
1	_____	_____
2	_____	_____
3	_____	_____
4	_____	_____

## System Planning

---

SCREEN 9 OF 14      5ESS SWITCH LABNSC1

RECENT CHANGE 23.8

DSL/BRCS ASSIGNMENT (HIGH RUNNER FEATURE PARAMETERS)

>176. CALL FORWARDING FEATURE PARAMETERS (CF)

ROW	FEATURE	FWD TO DN	TIMEOUT	BSRING	SIMINTER	SIMINTRA
1	/CFDBLAC2228704		0	Y	1	99
2	_____		0	-	0	0
3	_____		0	-	0	0
4	_____		0	-	0	0
5	_____		0	-	0	0
6	_____		0	-	0	0

---

SCREEN 1 OF 14

5ESS SWITCH LABNSC1

RECENT CHANGE 23.8

DSL/BRCS ASSIGNMENT

(*)1. DSL	TN C	2228704	SERVICES AND FEATURES	SCREENS
(*)4. MLHG	_____		-----	-----
(*)5. TERM	_____		BRCS FEATURE LIST	6
(*)6. DSL OE	- _____		BRCS FEATURE PARAMETERS	7 to 9
(*)9. ASSOC	U	CKT		4 & 5
			DELFEAT LIST	14
			DPKT	10
			DSL INFO	2
			ODB	11
			PPB1	12
			PPB2	13
			USER INFO	3

---

SCREEN 2 OF 14

5ESS SWITCH LABNSC1  
 RECENT CHANGE 23.8  
 DSL/BRCS ASSIGNMENT (DSL INFO)

>11. OE	I	00101221	25. CUT DGTS	2228
14. D ISCN		007105	26. ACSR GRP	_____
15. D SERV		SX	27. DFLT SRV	_____
16. B1 SERV		DMD		
17. B2 SERV		DMD		
18. NT1 TYPE		TLC		
19. PM GRP		_____		
20. DSL CLS		STD		
21. RSTR MP		N		
22. ACSR INH		Y		
23. MDPKT		8		
24. MTERM		2		

SCREEN 3 OF 14

5ESS SWITCH LABNSC1  
 RECENT CHANGE 23.8  
 DSL/BRCS ASSIGNMENT (USER INFO)

>28. USPID0122287040  
 29. MAXB CHL1  
 30. ACT USERY  
 31. PPB1 USRN  
 32. PPB2 USRN  
 33. AGI\_

## System Planning

---

SCREEN 4 OF 14

5ESS SWITCH LABNSC1  
RECENT CHANGE 23.8  
DSL/BRCS ASSIGNMENT (CKT)

>34. CKT TN	2228704	CIRCUIT VOICE	(CSV)	CIRCUIT DATA	(CSD)
35. CKT LCC	DSL	46. CSV	1	55. CSD	1
36. CKT RAX	1	47. CSV CHL	ANY	56. CSD CHL	ANY
37. CKT MLHG	_____	48. CSV ACO	_____	57. CSD ACO	_____
38. CKT TERM	_____	49. CSV LIMIT	1	58. CSD LIMIT	1
39. NEW TN	_____	50. CSV NBLIMIT	_____	59. CSD NBLIMIT	_____
40. CONFIG GRP	_____	51. SP DNA	_____	60. K56 DNA	_____
41. TERMTYP	TYPEA	52. SP DNA QTY	_____	61. K56 DNA QTY	_____
42. DISPLAY	Y	53. AU DNA	_____	62. K64 DNA	_____
43. EKTS	_____	54. AU DNA	_____	63. K64 DNA QTY	_____
44. CA	_____				
45. CA QTY	_____				

---

SCREEN 5 OF 14

5ESS SWITCH LABNSC1  
RECENT CHANGE 23.8  
DSL/BRCS ASSIGNMENT (CKT)

>64. TKS	N	72. SAR QTY	___	82. BUSY MONITOR	N
65. TAUTO	N	73. SAR ORIG	N	83. ATT MLHG	___
66. SHARED	N	74. SAR TERM	N	84. RBV TGN	___
67. SAUTO	N	75. INCOMING	N	85. ERCO ASGN	N
68. PRIVACY	N	76. INTERCOM	N	86. ERCO ACT	N
69. ICP	N	77. ORIG CW	N	87. SERHLN	___
70. SUSO	N	78. PP	N	88. BCK LNK	Y
71. SUST	N	79. CA PREF	I	89. ACD POS NUM	___
		80. AUTO HOLD	N	90. CIDIAL	ALLOW
		81. ONE TOUCH	N	91. PIC	___
				92. PTC	___
				95. E911 PSAP	N

---

SCREEN 6 OF 14            5ESS SWITCH LABNSC1  
 RECENT CHANGE 23.8  
 DSL/BRCS ASSIGNMENT  
 >106. BFGN \_\_\_\_\_ \_    109. FEATURE LIST (FL)

	A					A					A					A				
ROW	FEATURE	A	P	C	R	FEATURE	A	P	C	R	FEATURE	A	P	C	R	FEATURE	A	P	C	R
1	/CPCPFA	Y	_	N	N	10	_____	_____	_____	_____	19	_____	_____	_____	_____	28	_____	_____	_____	_____
2	/LIDLXA	Y	_	N	N	11	_____	_____	_____	_____	20	_____	_____	_____	_____	29	_____	_____	_____	_____
3	_____	_____	_____	_____	_____	12	_____	_____	_____	_____	21	_____	_____	_____	_____	30	_____	_____	_____	_____
4	_____	_____	_____	_____	_____	13	_____	_____	_____	_____	22	_____	_____	_____	_____	31	_____	_____	_____	_____
5	_____	_____	_____	_____	_____	14	_____	_____	_____	_____	23	_____	_____	_____	_____	32	_____	_____	_____	_____
6	_____	_____	_____	_____	_____	15	_____	_____	_____	_____	24	_____	_____	_____	_____	33	_____	_____	_____	_____
7	_____	_____	_____	_____	_____	16	_____	_____	_____	_____	25	_____	_____	_____	_____	34	_____	_____	_____	_____
8	_____	_____	_____	_____	_____	17	_____	_____	_____	_____	26	_____	_____	_____	_____	35	_____	_____	_____	_____
9	_____	_____	_____	_____	_____	18	_____	_____	_____	_____	27	_____	_____	_____	_____	36	_____	_____	_____	_____

SCREEN 7 OF 14            5ESS SWITCH LABNSC1  
 RECENT CHANGE 23.8  
 DSL/BRCS ASSIGNMENT (HIGH RUNNER FEATURE PARAMETERS)

>134. TG:GRPID	0	146. ACSR GRPNM	_____	158. QALWD	_____
135. MOH ALW	_____	147. EDS:GRPNM	_____	159. PRIORITY Q	_____
136. IDP NAME	_____	148. BCLID GRP	_____	160. ARSSI	_____
137. DPAT CAT	0	149. PFA:VGRP NM	_____	161. DIALPLN	_____
138. ICR SFG	0	150. PFA:DGRP NM	_____	162. ALWMDR	_____
139. SC1NAME	_____	151. ATH:VGRP NM	_____	163. ACSR PINREQ	_____
140. SC1S	_____	152. ATH:DGRP NM	_____	164. DRING	_____
141. SC2NAME	_____	153. MDR:GRPNM	_____	165. DCW DRING	_____
142. SC2S	_____	154. ACCT:GRPNM	_____	166. CWO DRING	_____
143. CPUO:SELQ1	0	155. ARS:VGRP NM	_____	167. MWY DRING	_____
144. CPUO:SELQ2	0	156. ARS:DGRP NM	_____		
145. CPUT:TPREDQ	0	157. FRL			

## System Planning

---

---

SCREEN 8 OF 14            5ESS SWITCH LABNSC1  
RECENT CHANGE 23.8  
DSL/BRCS ASSIGNMENT (HIGH RUNNER FEATURE PARAMETERS)  
>172. MESSAGE SERVICE (MSS)                            175. MW:DCNDN \_\_\_\_\_

ROW	FEATURE	GRPNM
1	_____	_____
2	_____	_____
3	_____	_____
4	_____	_____

---

---

SCREEN 9 OF 14            5ESS SWITCH LABNSC1  
RECENT CHANGE 23.8  
DSL/BRCS ASSIGNMENT (HIGH RUNNER FEATURE PARAMETERS)  
>176. CALL FORWARDING FEATURE PARAMETERS (CF)

ROW	FEATURE	FWD TO DN	TIMEOUT	BSRING	SIMINTER	SIMINTRA
1	_____		0	-	0	0
2	_____		0	-	0	0
3	_____		0	-	0	0
4	_____		0	-	0	0
5	_____		0	-	0	0
6	_____		0	-	0	0

---

## Northern Telecom DMS-100 Switch Translations

For the Northern Telecom DMS-100 switch, Capability Package "S" includes alternate voice/circuit-switched data on two B-channels. It also supports Calling Number Identification on data and voice connections. Please note that the assignment of two DNs is required for this package.

The DMS-100 switch also allows alternate voice and data hunting on one DN through the Multiline Hunt Group feature.

### ISDN Capability Package "S"

The information listed below provides the DN translations that define Capability Package "S," and the commands that must be executed.

#### ISDN Ordering Code: Capability S

#### Provision DN1 using the following translations

Define a new Logical Terminal Identifier (LTID) using the SLT command:

SONUMBER	<<cr> or \$>
LTID	<enter identifier value>
FUNCTION	<enter identifier value>
LTCLASS	<BRAFS>
CS	<Y>
PS	<N>
MAXKEYS	<64>
TEI_TYPE	<DTEI>
ABS	<NOPMD>
ABS	<\$>
EKTS	<N>
SPIDSFX option	
SPID_SUFFIX	<enter spid suffix value>
PVC option	
VERSION	<FUNCTIONAL>
ISSUE	<2>

Associate new DN with LTID using the NEW command:

SONUMBER	<<cr> or \$>
DN	<enter DN>
LCC	<ISDNKSET>
GROUP	<enter group name>
SUBGRP	<enter subgrp value>
NCOS	<enter ncos value>
SNPA	<enter NXX value>
KEY	<1>
RINGING	<Y>
LATANAME	<enter value>
LTG	<enter value>
LEN_OR_LTID	<enter assigned value>

DMS-100 normally delivers the Calling Party Number and the Redirecting Number, if available.

Attach LTIDs to LEN using the SLT command:

SONUMBER	<<cr> or \$>
LTID	<enter value>
FUNCTION	<ATT>
LEN	<enter LEN to which LTID will be attached>

### Provision DN2 using the following translations

Define a new Logical Terminal Identifier (LTID) using the SLT command:

SONUMBER	<<cr> or \$>
LTID	<enter identifier value>
FUNCTION	<ADD>
LTCLASS	<BRAFS>
CS	<Y>
PS	<N>
MAXKEYS	<64>
TEI_TYPE	<DTEI>
ABS	<NOPMD>
ABS	<\$>
EKTS	<N>
SPIDSFX option	
SPID_SUFFIX	<enter spid suffix value>
PVC option	
VERSION	<FUNCTIONAL>
ISSUE	<2>

Associate new DN with LTID using the NEW command:

SONUMBER	<<cr> or \$>
DN	<enter DN>
LCC	<ISDNKSET>
GROUP	<enter group name>
SUBGRP	<enter subgrp value>
NCOS	<enter ncos value>
SNPA	<enter NXX value>
KEY	<1>
RINGING	<Y>
LATANAME	<enter value>
LTG	<enter value>
LEN_OR_LTID	<enter assigned value>

DMS-100 normally delivers the Calling Party Number and the Redirecting Number, if available.

Attach LTIDs to LEN using the SLT command:

SONUMBER	<<cr> or \$>
LTID	<enter value>
FUNCTION	<ATT>
LEN	<enter LEN to which LTID will be attached>

## Multiline Hunt Group Feature Translations

The sample screens shown below illustrate the translations for alternate voice and data hunting on three Digital Subscriber Lines (DSLs) and six Directory Numbers (DNs) forming a circular hunt group. This hunting is provided using the Multiline Hunt Group feature.

The screens shown in this section are examples, DNs shown on these screens should be replaced with applicable data.

QDN 2257141

---

```
DN: 2257141
TYPE: PILOT OF DNH HUNT GROUP
SNPA: 201SIG: N/A LNATTIDX: N/A
HUNT GROUP: 22 HUNT MEMBER: 0
LTID: PSATS 141
LTCLASS: BRAFS
LINE CLASS CODE: ISDNKSET
KEY: 1
CUSTGRP: MDCSCA SUBGRP: 0 NCOS: 0 RING: Y
OPTIONS:
SFC
GROUP OPTIONS:
CIR RCVD
MEMBER INFO:
  1 2257146
  2 2257145
  3 2257144
  4 2257143
  5 2257142
```

---

QLT PSATS 141

LTID: PSATS 141  
 SNPA: 201  
 DIRECTORY NUMBER: 2257141  
 LT GROUP NO: 13  
 LTCLASS: BRAFS DEFAULT LOGICAL TERMINAL: N  
 EKTS: N CACH: N  
 BEARER SERVICE RESTRICTIONS: NOPMD  
 CS: Y PS: N  
 VERSION: FUNCTIONAL ISSUE: 2  
 SPID-SUFFIX: 01  
 LEN: HOST 01 1 10 01 TEI: DYNAMIC  
 CUSTGRP: MDCSCA SUBGRP: O NCOS: ORING: Y  
 LINE CLASS CODE: ISDNKSET  
 MAXKEYS: 64  
 DN IS ASSIGNED AS A DNH HUNT PILOT.  
 HUNT GROUP: 22 HUNT MEMBER: 0  
 OPTIONS:  
 SFC

KEY	DN	
---	--	
1	DN	2257141

KEY	FEATURE
---	-----
	NONE

GROUP OPTIONS:  
 CIR RCVD  
 MEMBER INFO:

1	2257146
2	2257145
3	2257144
4	2257143
5	2257142

## System Planning

---

QLT PSATS 142

---

LTID: PSATS 142  
SNPA: 201  
DIRECTORY NUMBER: 2257142  
LT GROUP NO: 13  
LTCLASS: BRAFS DEFAULT LOGICAL TERMINAL: N  
EKTS: N CACH: N  
BEARER SERVICE RESTRICTIONS: NOPMD  
CS: Y PS: N  
VERSION: FUNCTIONAL ISSUE: 2  
SPID-SUFFIX: 01  
LEN: HOST 01 1 10 02 TEI: DYNAMIC  
CUSTGRP: MDCSCA SUBGRP: O NCOS: O RING: Y  
LINE CLASS CODE: ISDNKSET  
MAXKEYS: 64  
DN IS ASSIGNED AS A DNH HUNT MEMBER (NOT PILOT).  
HUNT GROUP: 22 HUNT MEMBER: 5  
OPTIONS:  
SFC

KEY	DN	
---	--	
1	DN	2257142

KEY FEATURE  
--- -----  
NONE

PILOT DN: 2257141  
GROUP OPTIONS:  
CIR RCVD

---

DN: 2257143  
TYPE: MEMBER OF DNH HUNT GROUP  
SNPA: 201 SIG: N/A LNATTIDX: N/A  
HUNT GROUP: 22 HUNT MEMBER: 4  
LTID: PSATS 143  
LTCLASS: BRAFS  
LINE CLASS CODE: ISDNKSET  
KEY: 1  
CUSTGRP: MDCSCA SUBGRP: O NCOS: O RING: Y  
OPTIONS:  
SFC  
PILOT DN: 2257141  
GROUP OPTIONS:  
CIR RCVD

---

LTID: PSATS 143  
 SNPA: 201  
 DIRECTORY NUMBER: 2257143  
 LT GROUP NO: 13  
 LTCLASS: BRAFS DEFAULT LOGICAL TERMINAL: N  
 EKTS: N CACH: N  
 BEARER SERVICE RESTRICTIONS: NOPMD  
 CS: Y PS: N  
 VERSION: FUNCTIONAL ISSUE: 2  
 SPID-SUFFIX: 01  
 LEN: HOST 01 0 07 01 TEI: DYNAMIC  
 CUSTGRP: MDCSCA SUBGRP: O NCOS: O RING: Y  
 LINE CLASS CODE: ISDNKSET  
 MAXKEYS: 64  
 DN IS ASSIGNED AS A DNH HUNT MEMBER (NOT PILOT).  
 HUNT GROUP: 22 HUNT MEMBER: 4  
 OPTIONS:  
 SFC

KEY	DN	
---	--	
1	DN	2257143

KEY FEATURE  
 --- -----  
 NONE

PILOT DN: 2257141  
 GROUP OPTIONS:  
 CIR RCVD

QDN 2257144;QLT PSATS 144

DN: 2257144  
 TYPE: MEMBER OF DNH HUNT GROUP  
 SNPA: 201 SIG: N/A LNATTIDX: N/A  
 HUNT GROUP: 22 HUNT MEMBER: 3  
 LTID: PSATS 144  
 LTCLASS: BRAFS  
 LINE CLASS CODE: ISDNKSET  
 KEY: 1  
 CUSTGRP: MDCSCA SUBGRP: O NCOS: O RING: Y  
 OPTIONS:  
 SFC  
 PILOT DN: 2257141  
 GROUP OPTIONS:  
 CIR RCVD

---

LTID: PSATS 144  
SNPA: 201  
DIRECTORY NUMBER: 2257144  
LT GROUP NO: 13  
LTCLASS: BRAFS DEFAULT LOGICAL TERMINAL: N  
EKTS: N CACH: N  
BEARER SERVICE RESTRICTIONS: NOPMD  
CS: Y PS: N  
VERSION: FUNCTIONAL ISSUE: 2  
SPID-SUFFIX: 01  
LEN: HOST 01 1 10 01 TEI: DYNAMIC  
CUSTGRP: MDCSCA SUBGRP: O NCOS: O RING: Y  
LINE CLASS CODE: ISDNKSET  
MAXKEYS: 64  
DN IS ASSIGNED AS A DNH HUNT MEMBER (NOT PILOT).  
HUNT GROUP: 22 HUNT MEMBER: 3  
OPTIONS:  
SFC

KEY	DN	
---	--	
1	DN	2257144

KEY FEATURE  
--- -----  
NONE

PILOT DN: 2257141  
GROUP OPTIONS:  
CIR RCVD

---

QDN 2257145;QLT PSATS 145

---

DN: 2257145  
TYPE: MEMBER OF DNH HUNT GROUP  
SNPA: 201 SIG: N/A LNATTIDX: N/A  
HUNT GROUP: 22 HUNT HENBER: 2  
LTID: PSATS 145  
LTCLASS: BRAFS  
LINE CLASS CODE: ISDNKSET  
KEY: 1  
CUSTGRP: MDCSCA SUBGRP: O NCOS: O RING: Y  
OPTIONS:  
SFC  
PILOT DN: 2257141  
GROUP OPTIONS:  
CIR RCVD

---

LTID: PSATS 145  
 SNPA: 201  
 DIRECTORY NUMBER: 2257145  
 LT GROUP NO: 13  
 LTCLASS: BRAFS DEFAULT LOGICAL TERMINAL: N  
 EKTS: N CACH: N  
 BEARER SERVICE RESTRICTIONS: NOPMD  
 CS: Y PS: N  
 VERSION: FUNCTIONAL ISSUE: 2  
 SPID-SUFFIX: 01  
 LEN: HOST 01 1 10 02 TEI: DYNAMIC  
 CUSTGRP: MDCSCA SUBGRP: O NCOS: O RING: Y  
 LINE CLASS CODE: ISDNKSET  
 MAXKEYS: 64  
 DN IS ASSIGNED AS A DNH HUNT MEMBER (NOT PILOT).  
 HUNT GROUP: 22 HUNT MEMBER: 2  
 OPTIONS:  
 SFC

KEY	DN	
---	--	
1	DN	2257145

KEY	FEATURE
---	-----
	NONE

PILOT DN: 2257141  
 GROUP OPTIONS:  
 CIR RCVD

QDN 2257146;QLT PSATS 146

DN: 2257146  
 TYPE: MEMBER OF DNH HUNT GROUP  
 SNPA: 201 SIG: N/A LNATTIDX: N/A  
 HUNT GROUP: 22 HUNT MEMBER: 1  
 LTID: PSATS 146  
 LTCLASS: BRAFS  
 LINE CLASS CODE: ISDNKSET  
 KEY: 1  
 CUSTGRP: MDCSCA SUBGRP: O NCOS: O RING: Y  
 OPTIONS:  
 SFC  
 PILOT DN: 2257141  
 GROUP OPTIONS:  
 CIR RCVD

## System Planning

---

---

LTID: PSATS 146  
SNPA: 201  
DIRECTORY NUMBER: 2257146  
LT GROUP NO: 13  
LTCLASS: BRAFS      DEFAULT LOGICAL TERMINAL: N  
EKTS: N   CACH: N  
BEARER SERVICE RESTRICTIONS:      NOPMD  
CS: Y PS: N  
VERSION: FUNCTIONAL   ISSUE: 2  
SPID-SUFFIX:           01  
LEN: HOST 01 0 07 01    TEI: DYNAMIC  
CUSTGRP:      MDCSCA   SUBGRP: O   NCOS: O   RING: Y  
LINE CLASS CODE: ISDNKSET  
MAXKEYS: 64  
DN IS ASSIGNED AS A DNH HUNT MEMBER (NOT PILOT).  
HUNT GROUP: 22           HUNT MEMBER: 1  
OPTIONS:  
SFC

KEY	DN	
---	--	
1	DN	2257146

KEY FEATURE  
---      -----  
NONE

PILOT DN: 2257141  
GROUP OPTIONS:  
CIR RCVD

---

QLEN 1 1 10 1;QLEN 1 1 10 2;QLEN 1 0 7 1

---

LEN:      HOST 01 1 10 01  
ISG: 0 DCH: 1 ISG BRA Channel: 21  
CARCODE: BX27AA      PADGRP: NPDGP  
PM NODE NUMBER: 32  
PM TERMINAL NUMBER:      322

TEI	LTID	CSPSBCH/ISG Bd	
---	-----	--	---
DYNAMIC	PSATS	141	Y N -
DYNAMIC	PSATS	144	Y N -

---

LEN: HOST 01 1 10 02  
 ISG: 0 DCH: 1 ISG BRA Channel: 21  
 CARCODE: BX27AA PADGRP: NPDGP  
 PM NODE NUMBER: 32  
 PM TERMINAL NUMBER: 323

TEI	LTID	CSPSBCH/ISG Bd			
---	-----	--	--	-----	
DYNAMIC	PSATS	142	Y	N	-
DYNAMIC	PSATS	145	Y	N	-

LEN: HOST 01 0 07 01  
 ISG: 0 DCH: 1 ISG BRA Channel: 24  
 CARCODE: BX27AA PADGRP: NPDGP  
 PM NODE NUMBER: 31  
 PM TERMINAL NUMBER: 226

TEI	LTID	CSPSBCH/ISG Bd			
---	-----	--	--	-----	
DYNAMIC	PSATS	143	Y	N	-
DYNAMIC	PSATS	146	Y	N	-
STOP2					

## Siemens SSC EWSD Switch Translations

For the Siemens SSC EWSD switch, Capability Package "S" includes alternate voice/circuit-switched data on two B-channels. It also supports Calling Number Identification on data and voice connections. Please note that the assignment of two Directory Numbers (DNs) is required for this package.

The Siemens SSC EWSD switch allows either voice or data hunting on one DN using the Series Completion feature. The same provisioning is used for either a voice or data series completion group.

### ISDN Capability Package "S"

The information listed below provides the DN translations that define Capability Package "S," and the screens and fields that must be populated.

The information provided shows the translations for one DSL and two DN's. For multiple DSLs/ DN's, the central office will duplicate these screens and enter the applicable DSL and DN values as needed.

#### ISDN Ordering Code: Capability S

DISPACCESS:EQN=20-0-5-4; ACCESS DATA	EXEC'D MASKNO:04328 MASKNO:00000
EQN =20-0-5-4, CLOSS = 0, BCHEQN =2, BCEQN = SP & AU3 & C56 & C64, CPDDN = 2156855917-VI & 2156855917-CMD, CPVDN2 = 2156855917, COE = CLASS1, LINKOPT = DYNNOPAL, BAPROF = 0;	

DISPSUB:DN=6855917;  
 NPA = 215 DN = 6855917 EQN = 20-0-5-4MASKNO:03800  
 CAT = IBA MASKNO:03774  
 BCHDN = 2 MASKNO:03798  
 BCDN = SP &AU3 &C56 &C64 MASKNO:04535  
 CT = VI MASKNO:04396  
 LCC = BVCE RAX = 1 MASKNO:03785  
 BCHCT = 2 MASKNO:06282  
 IBCHCT = 2 MASKNO:06288  
 OBCHCT = 2 MASKNO:06291  
 PIC = 0288-SP MASKNO:04398  
 & 0288-AU3  
 CHRG = FRSA1 MASKNO:03775  
 COS = ICND & RND MASKNO:03777  
 CRBLIM = 2 MASKNO:03798  
 CT = CMD MASKNO:04396  
 LCC = BCMD RAX = 1 MASKNO:03785  
 BCHCT = 2 MASKNO:06282  
 IBCHCT = 2 MASKNO:06288  
 OBCHCT = 2 MASKNO:06291  
 PIC = 0288-C56 MASKNO:04398  
 & 0288-C64  
 CHRG = FRSA1 MASKNO:03775  
 COS = ICND &RND MASKNO:03777  
 CRBLM = 2 MASKNO:03798

DISPTSP:TSPID=215685591701 MASKNO:04383  
 EQN: 20-0-5-4  
 USID: 5  
 TSPID: 215685591701  
 TERMLIM: 1 MASKNO:04386  
 DN: 6855917 MASKNO:04382  
 CT: VI MASKNO:04385  
 DN: 6855917 MASKNO:04382  
 CT: CMD MASKNO:04385

DISPSUB:DN=6855919;	
NPA = 215    DN = 6855919    EQN = 20-0-5-4	MASKNO:03800
CAT = IBA	MASKNO:03774
BCHDN = 2	MASKNO:03798
BCDN = SP    &AU3    &C56    &C64	MASKNO:04535
CT = VI	MASKNO:04396
LCC =BVCE    RAX = 1	MASKNO:03785
BCHCT = 2	MASKNO:06282
IBCHCT = 2	MASKNO:06288
OBCHCT = 2	MASKNO:06291
PIC = 0288-SP	MASKNO:04398
& 0288-AU3	
CHRG = FRSA1	MASKNO:03775
COS = ICND & RND	MASKNO:03777
CRBLIM = 2	MASKNO:03798
CT = CMD	MASKNO:04396
LCC = BCMD    RAX = 1	MASKNO:03785
BCHCT = 2	MASKNO:06282
IBCHCT = 2	MASKNO:06288
OBCHCT = 2	MASKNO:06291
PIC = 0288-C56	MASKNO:04398
& 0288-C64	
CHRG = FRSA1	MASKNO:03775
COS = ICND    &RND	MASKNO:03777
CRBLIM = 2	MASKNO:03798
DISPTSP:TSPID=215685591901;	MASKNO:04383
EQN: 20-0-5-4	
USID: 1	
TSPID: 215685591901	
TERMLIM: 1	MASKNO:04386
DN: 6855919	MASKNO:04382
CT: VI	MASKNO:04385
DN: 6855919	MASKNO:04382
CT: CMD	MASKNO:04385

## Series Completion Feature Translations

The information listed below provides the translation for either voice or data hunting on three Digital Subscriber Lines (DSLs) and six Directory Numbers (DNs) forming a circular series completion group.

The screens shown in this section are examples. DNs shown on these screens should be replaced with applicable data.

---

M	NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 0959	OMT-00/LEONLY	2816/04328	96-01-18	16:22:05
	DISPSDNDAT:EQN=20-0-0-1&20-0-5-0&40-0-2-4:			EXEC'D	
	ISDN ACCESS DATA			MASKNO:04328 MASKNO:00000	
	VIEW = EQN. EQN = 20-0-00-01. BCHEQN = 2. BCEQN = SP. BCEQN = AU3. BCEQN = C56. BCEQN = C64. CPDDN = 2156851189-VI. CPDDN = 2156851189-CMD. COE = CLASS1. LINKOPT = DYNNOPAL. NCCSL = D1--4. NCCSL = D2--4. NPCSL = P1--0. NPCSL = P2--0. NSL = 10. L2TIM = T200-10. L2TIM = T201-10. L2TIM = T203-3. L2COUNT = N200-3. L2COUNT = OIFDCC-1. L2COUNT = OIFDPC-3. CPVDN2 = 2156851189. CPVDN2 = 2156851289:				
	INTERRUPTION TEXT JOB 0959				

CONTINUATION TEXT 0001

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:08  
0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
MASKNO:00000

VIEW = DN.  
NPA = 215.  
DN = 6851189.  
EQN = 20-0-00-01.  
BCHDN = 2.  
BCDN = SP.  
BCDN = AU3.  
BCDN = C56.  
BCDN = C64.  
BCHCT = 2-VI.  
BCHCT = 2-CMD.  
BCHCT = 0-PMD.  
IBCHCT = 2-VI.  
IBCHCT = 2-CMD.  
IBCHCT = 0-PMD.  
OBCHCT = 2-VI.  
OBCHCT = 2-CMD.  
OBCHCT = 0-PMD.  
CT = VI.  
C1 = CMD:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0002

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:31  
0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
MASKNO:00000

VIEW = DNCT.  
NPA = 215.  
DN = 6851189.  
EQN = 20-0-00-01.  
CT = VI.  
CAT = IBA.  
LCC = PKGSV.  
RAX = 1.  
COS = ICND.  
COS = RND.  
COSDAT = SERCOMP-6851289.  
PIC = 222-SP.  
PIC = 288-AU3.  
CRBLIM = 1:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0003

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:15  
 0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
 MASKNO:00000

VIEW = DNCT.  
 NPA = 215.  
 DN = 6851189.  
 EQN = 20-0-00-01.  
 CT = CMD.  
 CAT = IBA.  
 LCC = PKGSD.  
 RAX = 1.  
 COS = ICND.  
 COS = RND.  
 COSDAT = SERCOMP-6851289.  
 PIC = 222-C56.  
 PIC = 288-C64.  
 CRBLIM = 1:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0004

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:19  
 0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
 MASKNO:00000

VIEW = DN.  
 NPA = 215.  
 DN = 6851289.  
 EQN = 20-0-00-01.  
 BCHDN = 2.  
 BCDN = SP.  
 BCDN = AU3.  
 BCDN = C56.  
 BCDN = C64.  
 BCHCT = 2-VI.  
 BCHCT = 2-CMD.  
 BCHCT = 0-PMD.  
 IBCHCT = 2-VI.  
 IBCHCT = 2-CMD.  
 IBCHCT = 0-PMD.  
 OBCHCT = 2-VI.  
 OBCHCT = 2-CMD.  
 OBCHCT = 0-PMD.  
 CT = VI.  
 CT = CMD:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0005

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:22  
0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
MASKNO:00000

VIEW = DNCT.  
NPA = 215.  
DN = 6851289.  
EQN = 20-0-00-01.  
CT = VI.  
CAT = IBA.  
LCC = PKGSV.  
RAX = 1.  
COS = ICND.  
COS = RND.  
COSDAT = SERCOMP-6852199.  
PIC = 222-SP.  
PIC = 288-AU3.  
CRBLIM = 1:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0006

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:26  
0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
MASKNO:00000

VIEW = DNCT.  
NPA = 215.  
DN = 6851289.  
EQN = 20-0-00-01.  
CT = CMD.  
CAT = IBA.  
LCC = PKGSD.  
RAX = 1.  
COS = ICND.  
COS = RND.  
COSDAT = SERCOMP-6852199.  
PIC = 222-C56.  
PIC = 288-C64.  
CRBLIM = 1:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0007

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:29  
 0959 OMT-00/LEONLY2816/04328

TERMINAL SERVICE PROFILE DATAMASKNO:04328

MASKNO:00000

VIEW = TSP.  
 EQN = 20-0-00-01.  
 USID = 1.  
 TSPID = 2156851189.  
 TERMLIM = 1.  
 TSPCOS = CHDBCHR:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0008

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:32  
 0959 OMT-00/LEONLY2816/04328

TERMINAL SERVICE PROFILE DATA

MASKNO:04328  
 MASKNO:00000

VIEW = TSPDNCT.  
 EQN = 20-0-00-01.  
 TSPID = 2156851189.  
 NPA = 215.  
 DN = 6851189.  
 CT= VI:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0009

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:35  
 0959 OMT-00/LEONLY2816/04328

TERMINAL SERVICE PROFILE DATA

MASKNO:04328  
 MASKNO:00000

VIEW = TSPDNCT.  
 EQN = 20-0-00-01.  
 TSPID = 2156851189.  
 NPA = 215.  
 DN = 6851189.  
 CT= CMD:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0010

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:38  
0959 OMT-00/LEONLY2816/04328

TERMINAL SERVICE PROFILE DATA

MASKNO:04328  
MASKNO:00000

VIEW = TSP.  
EQN = 20-0-00-01.  
USID = 2.  
TSPID = 2156851289.  
TERMLIM = 1.  
TSPCOS = CHDBCHR:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0011

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:40  
0959 OMT-00/LEONLY2816/04328

ISDN ACCESS DATA

MASKNO:04328  
MASKNO:00000

VIEW = EQN.  
EQN = 20-0-05-01.  
BCHEQN = 2.  
BCEQN = SP.  
BCEQN = AU3.  
BCEQN = C56.  
BCEQN = C64.  
CPDDN = 2156852199-VI.  
CPDDN = 2156852199-CMD.  
COE = CLASS1.  
LINKOPT = DYNNOPAL.  
NCCSL = D1--4.  
NCCSL = D2--4.  
NPCSL = P1--0.  
NPCSL = P2--0.  
NSL = 10.  
L2TIM = T200-10.  
L2TIM = T201-10.  
L2TIM = T203-3.  
L2COUNT = N200-3.  
L2COUNT = OIFDCC-1.  
L2COUNT = OIFDPC-3.  
CPVDN2 = 2156852199.  
CPVDN2 = 2156852299:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0012

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:44  
 0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
 MASKNO:00000

VIEW = DN.  
 NPA = 215.  
 DN = 6852199.  
 EQN = 20-0-05-00.  
 BCHDN = 2.  
 BCDN = SP.  
 BCDN = AU3.  
 BCDN = C56.  
 BCDN = C64.  
 BCHCT = 2-VI.  
 BCHCT = 2-CMD.  
 BCHCT = 0-PMD.  
 IBCHCT = 2-VI.  
 IBCHCT = 2-CMD.  
 IBCHCT = 0-PMD.  
 OBCHCT = 2-VI.  
 OBCHCT = 2-CMD.  
 OBCHCT = 0-PMD.  
 CT = VI.  
 CT = CMD:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0013

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:48  
 0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
 MASKNO:00000

VIEW = DNCT.  
 NPA = 215.  
 DN = 6852199.  
 EQN = 20-0-05-00.  
 CT = VI.  
 CAT = IBA.  
 LCC = PKGSV.  
 RAX = 1.  
 COS = ICND.  
 COS = RND.  
 COSDAT = SERCOMP-6852299.  
 PIC = 222-SP.  
 PIC = 288-AU3.  
 CRBLIM = 1:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0014

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:51  
0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
MASKNO:00000

VIEW = DNCT.  
NPA = 215.  
DN = 6852199.  
EQN = 20-0-05-00.  
CT = CMD.  
CAT = IBA.  
LCC = PKGSD.  
RAX = 1.  
COS = ICND.  
COS = RND.  
COSDAT = SERCOMP-6852299.  
PIC = 222-C56.  
PIC = 288-C64.  
CRBLIM = 1:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0015

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:55  
0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
MASKNO:00000

VIEW = DN.  
NPA = 215.  
DN = 6852299.  
EQN = 20-0-05-00.  
BCHDN = 2.  
BCDN = SP.  
BCDN = AU3.  
BCDN = C56.  
BCDN = C64.  
BCHCT = 2-VI.  
BCHCT = 2-CMD.  
BCHCT = 0-PMD.  
IBCHCT = 2-VI.  
IBCHCT = 2-CMD.  
IBCHCT = 0-PMD.  
OBCHCT = 2-VI.  
OBCHCT = 2-CMD.  
OBCHCT = 0-PMD.  
CT = VI.  
CT = CMD:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0016

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:22:58  
 0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
 MASKNO:00000

VIEW = DNCT.  
 NPA = 215.  
 DN = 6852299.  
 EQN = 20-0-05-00.  
 CT = VI.  
 CAT = IBA.  
 LCC = PKGSV.  
 RAX = 1.  
 COS = ICND.  
 COS = RND.  
 COSDAT = SERCOMP-6853119.  
 PIC = 222-SP.  
 PIC = 288-AU3.  
 CRBLIM = 1:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0017

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:01  
 0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
 MASKNO:00000

VIEW = DNCT.  
 NPA = 215.  
 DN = 6852299.  
 EQN = 20-0-05-00.  
 CT = CMD.  
 CAT = IBA.  
 LCC = PKGSD.  
 RAX = 1.  
 COS = ICND.  
 COS = RND.  
 COSDAT = SERCOMP-6853119.  
 PIC = 222-C56.  
 PIC = 288-C64.  
 CRBLIM = 1:

INTERRUPTION TEXT JOB 0959

## System Planning

---

CONTINUATION TEXT 0018  
M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:05  
0959 OMT-00/LEONLY2816/04328

TERMINAL SERVICE PROFILE DATA MASKNO:04328  
MASKNO:00000

VIEW = TSP.  
EQN = 20-0-05-00.  
USID = 1.  
TSPID = 2156852199.  
TERMLIM = 1.  
TSPCOS = CHDBCHR:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0019  
M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:07  
0959 OMT-00/LEONLY2816/04328

TERMINAL SERVICE PROFILE DATA MASKNO:04328  
MASKNO:00000

VIEW = TSPDNCT.  
EQN = 20-0-05-00.  
TSPID = 2156852199.  
NPA = 215.  
DN = 6852199.  
CT= VI:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0020  
M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:11  
0959 OMT-00/LEONLY2816/04328

TERMINAL SERVICE PROFILE DATA MASKNO:04328  
MASKNO:00000

VIEW = TSPDNCT.  
EQN = 20-0-05-00.  
TSPID = 2156852199.  
NPA = 215.  
DN = 6852199.  
CT= CMD:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0021

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:13  
 0959 OMT-00/LEONLY2816/04328

TERMINAL SERVICE PROFILE DATA

MASKNO:04328  
 MASKNO:00000

VIEW = TSP.  
 EQN = 20-0-05-00.  
 USID = 2.  
 TSPID = 2156852299.  
 TERMLIM = 1.  
 TSPCOS = CHDBCHR:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0022

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:16  
 0959 OMT-00/LEONLY2816/04328

ISDN ACCESS DATA

MASKNO:04328  
 MASKNO:00000

VIEW = EQN.  
 EQN = 40-0-02-04.  
 BCHEQN = 2.  
 BCEQN = SP.  
 BCEQN = AU3.  
 BCEQN = C56.  
 BCEQN = C64.  
 CPDDN = 2156853119-VI.  
 CPDDN = 2156853119-CMD.  
 COE = CLASS1.  
 LINKOPT = DYNNOPAL.  
 NCCSL = D1--4.  
 NCCSL = D2--4.  
 NPCSL = P1--0.  
 NPCSL = P2--0.  
 NSL = 10.  
 L2TIM = T200-10.  
 L2TIM = T201-10.  
 L2TIM = T203-3.  
 L2COUNT = N200-3.  
 L2COUNT = OIFDCC-1.  
 L2COUNT = OIFDPC-3.  
 CPVDN2 = 2156853119.  
 CPVDN2 = 2156853219:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0023

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:20  
0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
MASKNO:00000

VIEW = DN.  
NPA = 215.  
DN = 6853119.  
EQN = 40-0-02-04.  
BCHDN = 2.  
BCDN = SP.  
BCDN = AU3.  
BCDN = C56.  
BCDN = C64.  
BCHCT = 2-VI.  
BCHCT = 2-CMD.  
BCHCT = 0-PMD.  
IBCHCT = 2-VI.  
IBCHCT = 2-CMD.  
IBCHCT = 0-PMD.  
OBCHCT = 2-VI.  
OBCHCT = 2-CMD.  
OBCHCT = 0-PMD.  
CT = VI.  
CT = CMD:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0024

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:23  
0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
MASKNO:00000

VIEW = DNCT.  
NPA = 215.  
DN = 6853119.  
EQN = 40-0-02-04.  
CT = VI.  
CAT = IBA.  
LCC = PKGSV.  
RAX = 1.  
COS = ICND.  
COS = RND.  
COSDAT = SERCOMP-6853219.  
PIC = 222-SP.  
PIC = 288-AU3.  
CRBLIM = 1:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0025

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:27  
 0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
 MASKNO:00000

VIEW = DNCT.  
 NPA = 215.  
 DN = 6853119.  
 EQN = 40-0-02-04.  
 CT = CMD.  
 CAT = IBA.  
 LCC = PKGSD.  
 RAX = 1.  
 COS = ICND.  
 COS = RND.  
 COSDAT = SERCOMP-6853219.  
 PIC = 222-C56.  
 PIC = 288-C64.  
 CRBLIM = 1:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0026

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:30  
 0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
 MASKNO:00000

VIEW = DN.  
 NPA = 215.  
 DN = 6853219.  
 EQN = 40-0-02-04.  
 BCHDN = 2.  
 BCDN = SP.  
 BCDN = AU3.  
 BCDN = C56.  
 BCDN = C64.  
 BCHCT = 2-VI.  
 BCHCT = 2-CMD.  
 BCHCT = 0-PMD.  
 IBCHCT = 2-VI.  
 IBCHCT = 2-CMD.  
 IBCHCT = 0-PMD.  
 OBCHCT = 2-VI.  
 OBCHCT = 2-CMD.  
 OBCHCT = 0-PMD.  
 CT = VI.  
 CT = CMD:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0027

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:34  
0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
MASKNO:00000

VIEW = DNCT.  
NPA = 215.  
DN = 6853219.  
EQN = 40-0-02-04.  
CT = VI.  
CAT = IBA.  
LCC = PKGSV.  
RAX = 1.  
COS = ICND.  
COS = RND.  
COSDAT = SERCOMP-6851189.  
PIC = 222-SP.  
PIC = 288-AU3.  
CRBLIM = 1:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0028

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:37  
0959 OMT-00/LEONLY2816/04328

SUBSCRIBER

MASKNO:04328  
MASKNO:00000

VIEW = DNCT.  
NPA = 215.  
DN = 6853219.  
EQN = 40-0-02-04.  
CT = CMD.  
CAT = IBA.  
LCC = PKGSD.  
RAX = 1.  
COS = ICND.  
COS = RND.  
COSDAT = SERCOMP-6851189.  
PIC = 222-C56.  
PIC = 288-C64.  
CRBLIM = 1:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0029

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:40  
 0959 OMT-00/LEONLY2816/04328

TERMINAL SERVICE PROFILE DATA MASKNO:04328  
 MASKNO:00000

VIEW = TSP.  
 EQN = 40-0-02-04.  
 USID = 1.  
 TSPID = 2156853119.  
 TERMLIM = 1.  
 TSPCOS = CHDBCHR:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0030

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:43  
 0959 OMT-00/LEONLY2816/04328

TERMINAL SERVICE PROFILE DATA MASKNO:04328  
 MASKNO:00000

VIEW = TSPDNCT.  
 EQN = 40-0-02-04.  
 TSPID = 2156853119.  
 NPA = 215.  
 DN = 6853119.  
 CT= VI:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0031

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:46  
 0959 OMT-00/LEONLY2816/04328

TERMINAL SERVICE PROFILE DATA MASKNO:04328  
 MASKNO:00000

VIEW = TSPDNCT.  
 EQN = 40-0-02-04.  
 TSPID = 2156853119.  
 NPA = 215.  
 DN = 6853119.  
 CT= CMD:

INTERRUPTION TEXT JOB 0959

CONTINUATION TEXT 0032

M NAVK1/BELLCORNJRB/APS 13.0 PS0071/000 96-01-18 16:23:49  
 0959 OMT-00/LEONLY2816/04328

TERMINAL SERVICE PROFILE DATA MASKNO:04328  
 MASKNO:00000

VIEW = TSP.  
 EQN = 40-0-02-04.  
 USID = 2.  
 TSPID = 2156853219.  
 TERMLIM = 1.  
 TSPCOS = CHDBCHR:

END JOB 0959 EXEC'D



This appendix contains information on how to obtain forms used by the Network Engineering Group to help you plan and configure a MERLIN MAGIX private network.

**NOTE** ► To contact the Network Engineering Group, call 1 888 297-4700.

The system planning forms are presented in Appendix B. Planning forms for data communications are presented in Appendix C. The T1/PRI Planner is presented in Appendix D. The NI-1 BRI Planner is presented in Appendix G.

You can obtain more information about designing a private network by accessing these websites and following the directions:

- The internal Avaya web site: <http://sdsc.web.lucent.com>. Select “Job Aids,” and then select “LEGEND Networking” from the drop-down menu.
- For business partners: <http://www.businesspartner.lucent.com>. Select “Technical Support.” Scroll down to “SDSC,” and select “MERLIN MAGIX/LEGEND Networking” for information, forms, and a job aid.

Included in these web sites is information about:

- Centralized Voice Messaging/Automated Attendant Product Considerations—provides considerations for each voice messaging system that can be used in a Centralized Voice Messaging arrangement on a MERLIN MAGIX/MERLIN LEGEND system
- MERLIN MAGIX/LEGEND Networking Job Aid—a tool designed to provide a step-by-step process for designing a MERLIN MAGIX/MERLIN LEGEND private network
- Network Map blank form and example form—required by the NSAC before it will offer installation support
- Non-Local Uniform Dial Plan Administration—a planning form and system programming steps for the UDP for a private network
- PRI Switch Type—a planning form and system programming steps for assigning the Switch Type for a private network
- UDP Route Patterns—a planning form and system programming steps for the UDP route patterns in a private network

This appendix contains information on how to obtain forms used by the Network Engineering Group to help you plan and configure a MERLIN MAGIX private network.

**NOTE** ► To contact the Network Engineering Group, call 1 888 297-4700.

The system planning forms are presented in Appendix B. Planning forms for data communications are presented in Appendix C. The T1/PRI Planner is presented in Appendix D. The NI-1 BRI Planner is presented in Appendix G.

You can obtain more information about designing a private network by accessing these websites and following the directions:

- The internal Avaya web site: <http://sdsc.web.lucent.com>. Select “Job Aids,” and then select “LEGEND Networking” from the drop-down menu.
- For business partners: <http://www.businesspartner.lucent.com>. Select “Technical Support.” Scroll down to “SDSC,” and select “MERLIN MAGIX/LEGEND Networking” for information, forms, and a job aid.

Included in these web sites is information about:

- Centralized Voice Messaging/Automated Attendant Product Considerations—provides considerations for each voice messaging system that can be used in a Centralized Voice Messaging arrangement on a MERLIN MAGIX/MERLIN LEGEND system
- MERLIN MAGIX/LEGEND Networking Job Aid—a tool designed to provide a step-by-step process for designing a MERLIN MAGIX/MERLIN LEGEND private network
- Network Map blank form and example form—required by the NSAC before it will offer installation support
- Non-Local Uniform Dial Plan Administration—a planning form and system programming steps for the UDP for a private network
- PRI Switch Type—a planning form and system programming steps for assigning the Switch Type for a private network
- UDP Route Patterns—a planning form and system programming steps for the UDP route patterns in a private network

- Traffic Analysis Tool for Tandem Trunks—a tool designed to calculate the number of tandem trunks required to handle call traffic in a private network.

# Glossary

---

**NOTE** ► The use of italics in this glossary denotes a cross-reference to other glossary entries or the expanded name for an acronym.

## Numerics

### **2B Data**

Digital information carried by two *B-Channels* for better performance and quality; the *Bit Rate* is twice that of one B-channel used alone.

### **4400-Series Telephones**

A family of digital multiline and digital single-line telephones.

## A

### **Account Code**

Code used to associate incoming and outgoing calls with corresponding accounts, employees, projects, and clients.

### **ACCUNET**

AT&T's switched digital service for 56-kbps, 64-kbps restricted, and 64-kbps clear circuit-switched data calls.

### **Address**

Coded representation of the destination of data or of the data's originating terminal, such as the dialed extension number assigned to the data terminal. Multiple terminals on one communications line each must have a unique address.

### **ADDS**

*Automated Document Delivery System*. Computer-based application that stores documents in a database and automatically faxes them on request.

### **Adjunct**

Optional equipment used with the communications system, such as an alerting device or *Modem* that connects to a multiline telephone or to an extension jack.

## ALS

*Automatic Line Selection.* Programmed order in which the system makes outside lines available to a user.

## Ambiguous Numbering

Numbering of extension ranges, remote access codes, or other system components that causes conflicts in network operations. These numbers can be unique and still be ambiguous. For example, Extension 441 is different from Extension 4410; for *UDP* routing purposes, however, the two numbers are ambiguous and a call intended for Extension 4410 would be misrouted, on the first three digits sent, to Extension 441. See also *Unambiguous Numbering*.

## AMI

*Alternate Mark Inversion.* Line coding format in which a binary one is represented by a positive or negative pulse, a binary zero is represented by no line signal, and subsequent binary ones must alternate in polarity; otherwise, a *Bipolar Violation* occurs. AMI is used in the *DS1* interface.

## Analog Data Station

See *Modem Data Station*.

## Analog Transmission

Mode of transmission in which information is represented in continuously variable physical quantities, such as amplitude, frequency, phase, or resistance. See also *Digital Transmission*.

## ANI

*Automatic Number Identification.* Process of automatically identifying a caller's billing number and transmitting that number from the caller's local central office to another point on or off the public network.

## Application

Software and/or hardware that adds functional capabilities to the system. For example, MERLIN MAGIX Reporter is an application that provides call management information (if available in the local area or jurisdiction).

## ARS

*Automatic Route Selection.* System feature that routes calls on outside facilities according to the number dialed and line/trunk availability. To initiate ARS, the user dials a *Dial-Out Code*, also called an "*ARS* access code."

## ASCAP

*American Society of Composers, Artists, and Producers.*

## Ascend Pipeline

ISDN-BRI bridge/router that enables high-speed Internet access over a digital facility. It makes outgoing calls only.

**ASN**

*AT&T Switched Network*. AT&T telecommunications services provided through an Integrated Digital Services Network Primary Rate Interface (ISDN-PRI) trunk, *ACCUNET* switched digital service, *Megacom*, *Megacom 800*, Software Defined Network (*SDN*), Multiquest, and Shared Access for Switch Services (SASS).

**Asynchronous Data Transmission**

Method of transmitting a short bitstream of digital data, such as printable characters represented by a 7- or 8-*Bit* ASCII code. Each string of data bits is preceded by a start bit and followed by a stop bit, thus permitting data to be transmitted at irregular intervals. See also *Synchronous Data Transmission*.

**AT&T Attendant**

Application with equipment that connects to one or more *Tip/Ring* extension jacks and automatically answers incoming calls with a recorded announcement; directs calls in response to touch tones.

**AT&T Switched Network**

See *ASN*.

**Automated Attendant**

An application that automatically answers incoming calls with a recorded announcement and directs callers to a department, an extension, or the system operator.

**Automated Document Delivery System**

See *ADDS*.

**Automatic Immediate Cycling**

Process that occurs in a *Private Network* when all available routes for a call specify systems with a matching *Switch Identifier*. The call is routed from the originating system to the destination system and back to the originating system in a continuous loop. *Switch Identifier* labeling systems must be unique across a network.

**Automatic Line Selection**

See *ALS*.

**Automatic Number Identification**

See *ANI*.

**Automatic Ringdown Tie-Trunk**

See *Automatic-Start Tie Trunk*.

**Automatic Route Selection**

See *ARS*.

### **Automatic-Start Tie Trunk**

*Tie Trunk* on which incoming calls are routed to an operator or other designated destination without a start signal, as soon as the trunk is seized; the destination is specified during programming. Also called “Automatic Ringdown” or “Auto-In” Tie Trunk.

## **B**

### **B8ZS**

*Bipolar 8 Zero Substitution*. Line-coding format that encodes a string of eight zeros in a unique binary sequence to detect bipolar violations.

### **Backup**

Procedure for saving a copy of system programming onto a floppy disk or *Memory Card*. See also *Restore*.

### **Bandwidth**

Difference, expressed in hertz, between the highest and lowest frequencies in a range that determines channel capacity.

### **Barrier Code**

Password used to limit access to the *Remote Access* feature of the system. In a *Private Network*, it is especially important that barrier codes be required for all types of remote access.

### **Basic Carrier**

Hardware that holds and connects the *Processor Module*, *Power Supply Module*, and up to five other modules in the system. See also *Expansion Carrier*.

### **Baud Rate**

Strictly speaking, a measurement of transmission speed equal to the number of signal level changes per second. In practice, often used synonymously with *Bit Rate* and *bps*.

### **B-Channels**

*Bearer-Channel*. 64- or 56-kbps channel that carries a variety of digital information streams, such as voice at 64 kbps, data at up to 64 kbps, wideband voice encoded at 64 kbps, and voice at less than 64 kbps, alone or combined.

### **Basic Rate Interface**

See *BRI*.

### **Bearer-Channel**

See *B-Channels*.

**Behind Switch Mode**

One of three modes of system operation in which the control unit is connected to (behind) another telephone switching system, such as [Centrex](#) or DEFINITY, which provides features and services to telephone users. See also [Hybrid/PBX Mode](#) and [Key Mode](#).

**Binary Code**

Electrical representation of quantities or symbols expressed in the base-2 number system, which includes zeros and ones.

**Bipolar 8 Zero Substitution**

See [B8ZS](#).

**Bipolar Signal**

Digital signal in which pulses (ones) alternate between positive and negative. See also [AMI](#), [B8ZS](#), and [Bipolar Violation](#).

**Bipolar Violation**

Condition occurring when two positive or two negative pulses are received in succession. See also [AMI](#) and [B8ZS](#).

**Bit**

*Binary Digit*. One unit of information in binary notation; it can have one of two values—zero or one.

**Bit Rate**

Speed at which bits are transmitted, usually expressed in [bps](#). Also called “data rate.”

**Blocking**

Condition in which end-to-end connections cannot be made on calls because of a full load on all possible services and facilities. See also [Glare](#).

**BMI**

*Broadcast Music Incorporated*.

**Board**

Module—for example, 100D or 408 MLX GS/LS—that allows you to connect lines/trunks and extensions to the communications system.

**Board Assignment**

System Programming and Maintenance (SPM) procedure for assigning line/trunk and extension modules to slots on the control unit.

### **Board Renumbering**

System programming procedure for renumbering boards that have already been assigned to specific slots on the control unit.

### **bps**

*Bits per second.*

### **BRI**

*Basic Rate Interface.* Standard protocol for accessing Integrated Service Digital Network (ISDN) services.

### **Broadband**

Transmission path having a bandwidth greater than a voice-grade channel.

### **Bus**

Multiconductor electrical path used to transfer information over a common connection from any of several sources to any of several destinations.

### **Business Cordless 905**

Wireless multiline telephone that connects to an ETR port.

### **Button**

Key on the face of a telephone that is used to access a line, activate a feature, or enter a code on a communications system.

### **Byte**

Sequence of eight *Bits* processed together. Also called "octet."

## **C**

### **Call Accounting System**

See *CAS*.

### **Call Accounting Terminal**

See *CAT*.

### **Caller ID**

Service provided by some local telephone companies (if local regulations allow) that supplies the calling party telephone number and name. An 800 GS/LS-ID, 408 GS/LS-ID-MLX, or 412 LS-ID-TDL module can capture both the number and name of the calling party and display them on the screens of 44xx, MLX, ETR, and MLS telephones. See also *ANI*.

**Calling Group**

Team of individuals who answer the same types of calls.

**Calling Party Name on Caller ID**

This central office service allows a subscriber to view the name of the calling party on a 44xx, MLX, ETR, or MLS display telephone.

**Calling Party Number on Caller ID**

This central office service allows a subscriber to view the number of the calling party on a 44xx, MLX, ETR, or MLS display telephone.

**CAS**

*Call Accounting System*. DOS- or UNIX System-based application that monitors and manages telecommunications costs.

**CAT**

*Call Accounting Terminal*. Stand-alone unit with a built-in microprocessor and data buffer that provides simple call accounting at a low cost.

**CCITT**

*International Telegraph and Telephone Consultative Committee*.

**CCS**

*Common Channel Signaling*. Signaling in which one channel of a group of channels carries signaling information for each of the remaining channels, permitting each of the remaining channels to be used to nearly full capacity. In the system's 100D module, channel 24 can be designated as the signaling channel for channels 1–23.

**Centralized Telephone Programming**

Programming of features on individual telephones; performed at a central location by the system manager. See also *System Programming* and *Extension Programming*.

**Centralized Voice Messaging**

Sharing of a voice messaging system by two or more directly connected MERLIN MAGIX, MERLIN LEGEND (Release 6.1 or higher), DEFINITY ECS, DEFINITY BCS, or DEFINITY ProLogix Solutions systems in a *Private Network*.

**Central Office**

See *CO*.

**Centrex**

Set of system features to which a user can subscribe on telephone trunks from the local telephone company.

**Channel**

Telecommunications transmission path for voice and/or data.

**Channel Service Unit**

See [CSU](#).

**Checksum**

Sum of ones in a sequence of ones and zeros, used to detect or correct errors in data transmission.

**Circuit-Switched Data Call**

Data call made through an exclusively established and maintained connection between [Data Stations](#).

**Class of Restriction**

See [COR](#).

**Clear Data Channel**

Clear data channels (also called unrestricted data channels) allow the transmission of occurrences of more than seven contiguous zero bits. If a clear data channel is requested and only restricted channels are available, the call will be rejected. See also [Restricted Data Channel](#).

**Clock Synchronization**

When digital signals are transmitted over a communications link, the receiving end must be synchronized with the transmitting end to receive the digital signals without errors using clock synchronization. A system synchronizes itself by extracting a timing signal from an incoming digital stream. All the digital facilities in a network operate from a single common clock—preferably a port connected to a digital [PSTN](#) facility on a [Hub System](#) or a system that connects two network systems. In this case, all digital facilities specify a loop clock source. One system in a network may be specified as a local clock source when no functioning digital facility in the network is connected to the [PSTN](#). All other digital facilities then use this clock and specify their clock sources as loop. Primary, secondary, and tertiary clock sources are specified to allow backup synchronization in the event that the primary source is out of service.

**CO**

[Central Office](#). Location of telephone switching equipment that provides local telephone service and access to toll facilities for long-distance calling.

**Coaxial Cable**

Cable consisting of one conductor, usually a small copper tube or wire within, and insulated from, another conductor of larger diameter—usually copper tubing or copper braid.

**Codec**

*Coder-Decoder*. Device used to convert analog signals— such as speech, music, or television—to digital form for transmission over a digital medium and back to the original analog form.

**Collected Digits**

Digits that a caller dials in response to an integrated voice response application's menus; collected digits may be used to initiate a [Screen Pop](#) at a system extension. See also [CTI Link](#) and [Enhanced Customer Care Solution](#).

**Combination Configuration**

[Private Network](#) arrangement that combines characteristics of [Virtual Private Network \(VPN\)](#), a [Series Configuration](#), and a [Star Configuration](#).

**Common Channel Signaling**

See [CCS](#).

**Control Unit**

[Processor Module](#), [Power Supply Module](#), other [Modules](#), carriers, and housing of the system.

**Console**

Telephone and [Adjuncts](#) (if any) at an operator or system programmer extension.

**CONVERSANT**

Entry-level voice response application that automatically answers and routes calls and executes telephone transactions.

**Conversion Resource**

See [Modem Pool](#).

**Coordinating System Manager**

In a [Private Network](#) that includes more than two systems, the system manager who acts as a clearinghouse for any changes made on local systems that affect the network, assuring that all system managers work together and that local system changes do not have undesirable effects on the network as a whole.

## **COR**

*Class of Restriction*. Various types of restrictions that can be assigned to *Remote Access* trunks or barrier codes. These restrictions consist of calling restrictions, *ARS* Facility Restriction Levels (*FRLs*), Allowed Lists, Disallowed Lists, and Automatic Callback queuing.

## **Coverage**

Set of system features that can determine how an extension's calls are covered when the person at the extension is busy or not available.

## **CRC**

*Cyclic Redundancy Check*. Error-detection code used on *DS1* facilities with the extended superframe format (*ESF*).

## **CSU**

*Channel Service Unit*. Equipment used on customer premises to provide *DS1* facility terminations and signaling compatibility.

## **CTI Link**

*Computer Telephony Integration*. Hardware/software feature that is part of the PassageWay Telephony Services application. It allows the use of Lucent Technologies-certified software applications on a *LAN* running Novell NetWare or Windows NT software in a *Hybrid/PBX Mode* system. These applications may provide special features for client control of such calling activities as power dialing. See also *Screen Pop*.

## **Cyclic Redundancy Check**

See *CRC*.

# **D**

## **D4 Framing Format**

*Framing Format* consisting of a sequence of individual frames of 24 eight-*Bit* slots and one signal bit (193 bits) in a 12-frame superframe. See also *ESF*.

## **Data-Channel**

See *D-Channel*.

## **Data Communications Equipment**

See *DCE*.

**Data Module**

Type of *ISDN Terminal Adapter* that acts as the *DCE* at a *Data Workstation* that communicates over high-speed *Digital* facilities.

**Data Rate**

See *bps*.

**Data Station**

Special type of extension where data communications take place; includes *DTE* and *DCE*; sometimes a telephone is also part of a data station.

**Data Terminal**

Input/output device (often a personal computer) that can be connected to the control unit via an interface.

**Data Terminal Equipment**

See and *Data Terminal*.

**Data Workstation**

Special type of extension where data communications take place; includes *DTE* and *DCE*; sometimes a telephone is also part of a data workstation.

**DCE**

*Data Communications Equipment*. Equipment, such as *Modems* or ISDN terminal adapters, used to establish, maintain, and terminate a connection between the system and data terminal equipment (*DTE*)—such as printers, personal computers, host computers, or network workstations.

**DCP**

*Digital Communications Protocol*. AT&T proprietary protocol to transmit digitized voice and data over the same communications link.

**D-Channel**

*Data-Channel*. 16- or 64-kbps channel that carries signaling information or data on a *PRI* or *BRI*.

**Dedicated Feature Buttons**

The imprinted feature buttons on a telephone: for example, Conf or Conference, Drop, Feature, HFAI (Hands-Free Answer on Intercom), Hold, Message, Mute or Microphone, Recall, Speakerphone or Spkrphone, and Transfer.

**Delay-Start Tie Trunk**

*Tie Trunk* or *Tandem Tie Trunk* on which the originating end of the tie trunk transmits an off-hook signal to the receiving end and waits for the receiving end to send an off-hook signal followed by an on-hook signal. Also called “dial-repeating tie trunk.”

### **Desktop Videoconferencing System**

System application that allows face-to-face, simultaneous video and voice communications between individuals and requires high-speed data transmission facilities. See also [Group Videoconferencing System](#).

### **DFT**

[Direct Facility Termination](#). See [Personal Line](#).

### **DHG**

[Data Hunt Group](#). Group of analog or digital [Data Station](#) that share a common access code. Calls are connected in a round-robin fashion to the first available data station in the group.

### **Dial Access**

See [Feature Code](#).

### **Dialed Number Identification Service**

See [DNIS](#).

### **Dial-Out Code**

Digit (usually a 9) or digits dialed by telephone users to get an outside line.

### **Dial Plan**

Numbering scheme for system extensions, lines, and trunks.

### **Dial-Repeating Tie Trunk**

[Tie Trunk](#) on which the originating end of the tie trunk transmits an off-hook signal to the receiving end and waits for the receiving end to send an off-hook signal followed by an on-hook signal.

### **DID**

[Direct Inward Dial](#). Service that transmits from the telephone company central office and routes incoming calls directly to the called extension, [Calling Group](#), or outgoing line/trunk [Pool](#), bypassing the system operator.

### **DID Trunk**

Incoming trunk that receives dialed digits from the local exchange, allowing the system to connect directly to an extension without assistance from the system operator.

### **Digital**

Representation of information in discrete elements—such as off and on or zero and one. See also [Analog Transmission](#).

**Digital Communications Protocol**

See [DCP](#).

**Digital Data Station**

See [ISDN Terminal Adapter Data Station](#).

**Digital Signal 0**

See [DS0](#).

**Digital Signal 1**

See [DS1](#).

**Digital Subscriber Line**

See [DSL](#).

**Digital Transmission**

Mode of transmission in which the information to be transmitted is first converted to digital form and then transmitted as a serial stream of pulses. See also [Analog Transmission](#).

**DIP Switch**

*Dual In-line Package*. Switch on a 400EM module used to select the signaling format for tie-line transmission. Also used on other equipment for setting hardware options.

**Direct Facility Termination**

[DFT](#). See [Personal Line](#).

**Direct Inward Dial**

See [DID](#).

**Direct-Line Console**

See [DLC](#).

**Direct Station Selector**

See [DSS](#).

**Display Buttons**

Buttons on a 4412D+, 4424D+, 4424LD+, or MLX display telephone used to access the telephone's display.

**DLC**

*Direct-Line Console.* Telephone used by a system operator to answer outside calls (not directed to an individual or a group) and inside calls, to transfer calls, to make outside calls for users with outward calling restrictions, to set up conference calls, and to monitor system operation.

**DNIS**

*Dialed Number Identification Service.* Service provided by AT&T and MCI to route incoming 800 or 900 calls according to customer-selected parameters, such as area code, state, or time of call.

**Door Answering Unit**

Device connected to a *Tip/Ring* jack and used at an unattended extension or front desk.

**DOS**

*Disk Operating System.*

**Drop-and-Insert Equipment**

Device that can be installed between systems connected by *Tandem PRI Trunks* or T1-Emulated *Tandem Tie Trunks* to allow fractional use of the facility—that is, use of fewer than 23 of the PRI *B-Channels* or fewer than 24 of the T1 *Channels*. In a PRI facility, the equipment must never drop Channel 24, the *D-Channel*. All channels must still be programmed and all count towards the system maximum of 80 lines.

**DS0**

*Digital Signal 0.* Single 64-kbps voice or data channel.

**DS1**

*Digital Signal 1.* *Bit*-oriented signaling interface that multiplexes twenty-four 64-kbps channels into a single 1.544-mbps stream.

**DSL**

*Digital Subscriber Line.* Digital Subscriber Line provides full-duplex service on a single twisted metallic pair (2-wire) at a rate sufficient to support ISDN Basic Rate Access.

**DSS**

*Direct Station Selector.* Fifty-button *Adjunct* that enhances the call-handling capabilities of a 4424D+, 4424LD+, MLX-20L, or MLX-28D telephone used as an operator console.

**DTE**

*Data Terminal Equipment.* Equipment that makes the endpoints in a connection over a data connection—for example, a data terminal, personal computer, host computer, or printer.

**DTMF signaling**

*Dual-Tone Multifrequency Signaling.* Touch-tone signaling from telephones using the voice transmission path. DTMF signaling provides 12 distinct signals, each representing a dialed digit or character, and each composed of two voiceband frequencies.

**E****E911**

Enhanced 911 service; available in Release 1.5 and later systems. E911 service speeds up the handling of emergency calls and helps to pinpoint the location of the caller. The two types of E911 service are the E911 Partition and the E911 Adjunct.

**E&M Signaling**

Trunk supervisory signaling, used between two communications systems, in which signaling information is transferred through two-state voltage conditions (on the Ear and Mouth leads) for analog applications and through two *Bits* for digital applications. See also *Tie Trunk*.

**EIA**

*Electronic Industries Association.*

**EIA-232-D**

Physical interface, specified by the *EIA*, that transmits and receives asynchronous data at speeds of up to 19.2-kbps over cable distances of 50 feet (15 meters).

**Electronic Switching System**

See *ESS*.

**Endpoint**

Final destination in the path of an electrical or telecommunications signal.

**Enhanced Customer Care Solution**

Application that sends calls to available agents in a calling group. The Enhanced Customer Care Solution places calls in queue, plays announcements, tracks agent activity and availability, and provides real-time reports.

**ESF**

*Extended Superframe Format. PRI* framing format consisting of individual frames of 24 eight-bit slots and one signal bit (193 bits) in a 24-frame extended superframe.

**ESS**

*Electronic Switching System.* Class of central office (CO) switching systems developed by Lucent Technologies in which the control functions are performed principally by electronic data processors operating under the direction of a stored program.

**ETR Telephone**

Enhanced tip/ring telephone (Series 4).

**Expansion Carrier**

Carrier added to the control unit when the basic carrier cannot house all of the required modules. Houses a power supply module and up to six additional modules.

**Extended Superframe Format**

See *ESF*.

**Extension**

*Endpoint* on the internal side of the communications system. An extension can be a telephone with or without an adjunct. Also called "station." See also *Data Workstation*.

**Extension Jack**

An analog, digital, or *Tip/Ring* physical interface on a module in the control unit for connecting a telephone or other device to the system. Also called "station jack."

**Extension Programming**

Programming performed at an extension to customize telephones for personal needs; users can program features on buttons, set the telephone ringing pattern, and so on. See also *Centralized Telephone Programming* and *System Programming*.

**F**

**Facility**

Equipment (often a *Line/Trunk*) constituting a telecommunications path between the system and the telephone company central office (CO).

**Facility Restriction Level**

See [FRL](#).

**Factory Setting**

Default state of a device or feature when an optional setting is not programmed by the user or system manager.

**Fax**

*Facsimile*. Scanning and transmission of a graphic image over a telecommunications facility, or the resulting reproduced image, or the machine that does the scanning and transmitting.

**FCC**

*Federal Communications Commission*.

**Feature**

Function or service provided by the system.

**Feature Code**

Code entered on a dialpad to activate a feature.

**Feature Screen**

Display screen on 4412D+, 4424D+, 4424LD+, and MLX display telephones; provides quick access to commonly used features.

**Flash ROM**

Type of read-only memory provided on the [Processor Module](#), used to supply system features.

**Foil Shield**

Copper foil sheet (for power units), used to prevent excessive noise on the module.

**Forced Idle**

Condition of the system during certain programming or maintenance procedures; system prevents initiation of new calls.

**Foreign Exchange**

See [FX](#).

**Fractional-T1**

A digital transmission facility consisting of at least one, and fewer than 24, [DSO](#) channels using robbed-bit signaling, and connecting a [PBX](#) and a [Central Office](#) or toll office.

**Frame**

One of several segments of an analog or digital signal that has a repetitive characteristic. For example, a *DS1* frame consists of a framing *Bit* and 24 bytes, which equals 193 bits.

**Framing Format**

Pattern of *Frames* used in transmissions.

**FRL**

*Facility Restriction Level*. Calling restriction type that restricts calls to certain specified *ARS* and *UDP* routes.

**FX**

*Foreign Exchange*. *Central Office* other than the one that is providing local access to the public telephone network.

**G**

**Glare**

Condition that occurs when a user tries to call out on a *Loop-Start Line* at the same time that another call arrives on the same line.

**Ground-Start Trunk**

Trunk on which the communications system, after verifying that the trunk is idle (no ground on tip lead), transmits a request for service (puts ground on ring lead) to the telephone company *Central Office*.

**Group IV (G4) Fax Machine**

Fax unit, offering 400 by 100 dots per inch (DPI) in fine mode, that can operate at any speed for communication with a Group III (G3) fax machine or another Group IV (G4) fax machine.

**Group Videoconferencing System**

System application that allows face-to-face, simultaneous video and voice communications between groups and requires high-speed data transmission facilities. See also *Desktop Videoconferencing System*.

**H**

**Hands-Free Answer Intercom**

See *HFAI*.

**Headset**

Lightweight earpiece and microphone used for hands-free telephone operation.

**HFAI**

*Hands-Free Answer Intercom*. Feature that allows a user to answer a voice-announced call.

**Home Screen**

Display normally shown on a 44xx or MLX display telephone; shows time, date, and call information, as well as when some features are in use.

**Host**

Telephone company or other switch providing features and services to the system users, usually when the system is operating in *Behind Switch Mode*.

**Hub System**

In a *Private Network* that is arranged in a *Star Configuration*, the communications system through which all calls across the network pass.

**Hybrid/PBX Mode**

One of three modes of system operation in which the system uses line/trunk *Pools* and *ARS* in addition to *Personal Lines*. Provides a single interface (SA buttons) to users for both internal and external calling. See also *Behind Switch Mode* and *Key Mode*.

**I****ICLID**

*Incoming Call Line Identification*. See *Caller ID*.

**ICOM Buttons**

*Intercom Buttons*. Telephone buttons that provide access to inside system lines for calling other extensions or receiving calls from them.

**Immediate-Start Tie Trunk**

*Tie Trunk* on which no start signal is necessary; dialing can begin immediately after the trunk is seized.

**In-Band Signaling**

See *Robbed-Bit Signaling*.

**Inside Dial Tone**

Tone users hear when they are off-hook on an SA or ICOM *Button*.

**Inspect Screen**

Display screen on a multiline 44xx or MLX display telephone that allows the user to preview incoming calls and view a list of the features programmed on line buttons.

**Integrated Services Digital Network**

See [ISDN](#).

**Integrated Solution III**

See [IS III](#).

**Integrated System**

Software-controlled processor complex that interprets dialing pulses, tones, and/or keyboard characters and makes the proper interconnections—both inside and outside. Consists of a computer, software, a storage device, and carriers with special hardware to perform the actual connections. Provides voice and/or data communications services, including access to public and private networks, for telephones and other equipment. Also referred to in this guide as “system,” short for MERLIN MAGIX Integrated System.

**Intercom Buttons**

See [ICOM Buttons](#).

**Interface**

Hardware and/or software that links systems, programs, or devices.

**Intersystem Calls**

In a [Private Network](#), calls between a local extension and a [Local Dial Plan](#) or [Non-Local Dial Plan](#) extension.

**Intuity**

Set of integrated applications that provides voice mail, fax messaging, Automated Attendant, call accounting, and system programming.

**Intuity CONVERSANT**

Voice response application that automatically answers and routes calls and executes telephone transactions.

**I/O Device**

*Input/Output Device.* Equipment that can be attached to a computer internally or externally for managing a computer system’s input and output of information.

**IROB Protector**

*In-Range Out-of-Building protector.* Surge-protection device for off-premises telephones at a location within 1000 feet (305 meters) of cable distance from the control unit.

**IS III**

*Integrated Solution III*. Set of UNIX System-based applications that augments and provides additional services using the system. IS III is no longer available.

**ISDN**

*Integrated Services Digital Network*. Public or private network that provides end-to-end digital connectivity for all services to which users have access by a limited set of standard multipurpose user and *Network Interface*; provides digital circuit-switched or packet-switched connections within the network and to other networks for national and international digital connectivity.

**ISDN Terminal Adapter**

*Integrated Services Digital Network Terminal Adapter*. A device that connects the communications system with *Data Terminal Equipment (DTE)*.

**ISDN Terminal Adapter Data Station**

Type of data station that includes an ISDN terminal adapter as its DCE. It may also include an MLX telephone for simultaneous voice and data (ISDN terminal adapter data-only station). These data stations connect to MLX extension jack modules for digital transmission of data over a DS1 facility.

**J****Jack**

Physical connection point to the system for a telephone, line/trunk, or other device. Also called "port."

**K****kbps**

*kilobits per second*.

**Key Mode**

One of three modes of system operation, in which the system uses personal lines on line buttons for outside calls, with a separate interface (*ICOM Buttons*) for inside calling. See also *Behind Switch Mode* and *Hybrid/PBX Mode*.

## L

### LAN

*Local Area Network.* Arrangement of interconnected personal computers or terminals, which sometimes access a host computer, and sometimes sharing resources such as files and printers.

### LDN

*Listed Directory Number.*

### LED

*Light-Emitting Diode.* Semiconductor device that produces light when voltage is applied; light on a telephone.

### Line

Connection between extensions within the communications system; often, however, used synonymously with *Trunk*.

### Line and Trunk Assignment

Assignment of lines and trunks connected to the system control unit to specific buttons on each telephone.

### Line Coding

Pattern that data assumes as it is transmitted over a communications channel.

### Line Compensation

Adjustment for the amount of cable loss in decibels (dB), based on the length of cable between a 100D module and a channel service unit (*CSU*) or other far-end connection point.

### Line/Trunk

Refers to inside system lines and outside lines/trunks in general terms. See also *Line* and *Trunk*.

### Line/Trunk Jack

Physical interface on a module in the control unit for connecting an outside line/trunk to the communications system. Also called "trunk jack."

### Line/Trunk and Extension Module

Module on which the jacks for connecting central office lines/trunks and/or the jacks for connecting the extensions are located.

### Local Dial Plan

In a system that is part of a *Private Network*, list of extension ranges that the local system refers to in order to route local *Intersystem Calls* via *UDP*.

**Local Extension**

In a system that is part of a *Private Network*, extension that is listed in the system's *Local Dial Plan*.

**Local Host Computer Access**

Method for connecting an extension jack to an on-site computer for data-only calls through a *Modem* or *ISDN Terminal Adapter*.

**Local Loop**

The two-way connection between a customer's premises and the *Central Office*.

**Local User**

In a *Private Network*, person whose extension is connected to the local control unit.

**Logical ID**

Unique numeric identifier for each *Extension* and *Line/Trunk Jack* in the system control unit.

**Loop-Start Line**

Line on which a closure between the tip and ring leads is used to originate or answer a call. High-voltage 20-Hz AC ringing current from the *Central Office* signals an incoming call.

**M****Magic On Hold**

Lucent Technologies Music-On-Hold enhancement that promotes a company's products or services.

**mbps**

*megabits per second*.

**Megacom**

AT&T tariffed digital *WATS* offering for outward calling.

**Megacom 800**

AT&T tariffed digital 800 offering for inward calling.

**Memory Card**

Storage medium, similar in function to a floppy disk, that allows information to be added to, or obtained from, the communications system through the PCMCIA interface slot on the processor module.

### **MERLIN Messaging System**

Voice-messaging system that provides Automated Attendant, call answering, and voice-mail services. It is housed in its own module.

### **Messaging 2000**

See [Octel 100 Messaging](#).

### **MFM**

[Multi-Function Module](#). Adapter that has a [Tip/Ring](#) mode for answering machines, modems, fax machines, and tip/ring alerts, and an SAA mode for -48 VDC alerts. It is installed inside an MLX telephone and is used to connect optional equipment to the telephone. The optional equipment and the telephone operate simultaneously and independently.

### **MLS Telephone**

An enhanced [Tip/Ring](#) (Series 3) telephone. No longer available.

### **MLX Telephone**

Multiline button telephone that transmits and receives digital signals.

### **Mode Codes**

Streams of touch-tone codes used by voice messaging applications to communicate with the system's control unit.

### **Modem**

Device that converts digital data signals to analog signals for transmission over a telephone line, and analog signals received on a telephone line to digital signals.

### **Modem Data Station**

Type of data station that includes a modem as its DCE. It may also include an MLX telephone for simultaneous voice and data (MLX voice and modem data station), an analog multiline telephone (analog voice and modem data station), or a single-line telephone for dialing only (modem data-only station). These data stations connect respectively to MLX, analog, or [Tip/Ring](#) extension jack modules. They provide analog transmission of data.

### **Modem Pool**

Pair, or group of pairs, of [Modems](#) and data modules with interconnected RS-232 interfaces that converts digital signals to analog, or analog signals to digital, thereby allowing users with [ISDN Terminal Adapter Data Station](#) to communicate with users who have analog [Modem Data Stations](#).

**Module**

Circuit pack in the control unit that provides the physical jacks for connecting telephones and/or outside lines/trunks to the communications system. In the name of a module, the first digit indicates the number of *Line/Trunk Jacks* it contains; the last digit indicates the number of *Extension Jacks* it contains. If no letters appear after the number, a line/trunk module provides *Loop-Start Lines* or an extension jack module provides analog or *Tip/Ring* jacks. For example, a 408 GS/LS-MLX module contains four line/trunk jacks and eight digital (MLX) extension jacks, and provides either Loop Start (LS) or *Ground-Start Trunks* (GS).

**Monitored Extension**

Extension for which one or more CTI applications is receiving call information. The CTI application does not have to be directly attached to the equipment at the extension in order to monitor calls. The call information may appear on the PC screen of another extension that has been programmed to receive it. See also *CTI Link* and *Unmonitored Extension*.

**Multi-Function Module**

See *MFM*.

**Multiline Telephone**

Telephone that provides multiple line buttons for making or receiving calls or programming features.

**Multiplexing**

Division of a transmission channel into two or more independent channels—either by splitting the frequency band into a number of narrower bands or by dividing the channel into successive time slots.

**Music-On-Hold**

Customer-provided music source or Magic On Hold connected to the system through a loop-start jack.

**N****Network**

Configuration of communications devices and software connected for information interchange.

**Network Interface**

Hardware, software, or both that links two systems in an interconnected group of systems—for example, between the local telephone company and a PBX.

### **NI-1 BRI**

*National Integrated Services Digital Network 1 Basic Rate Interface*. Type of digital facility that carries the equivalent of three lines. Two are called *B-Channels* and provide voice and data communications services. A third *D-Channel* controls signaling and maintains operations on the B-channels.

### **Non-Local Dial Plan**

In a system that is part of a *Private Network*, list of extension ranges that the local system references in order to route non-local *Intersystem Calls* via *UDP*.

### **Non-Local Extension**

In a system that is part of a *Private Network*, extension that is in the *Non-Local Dial Plan*.

### **Non-Local User**

In a *Private Network*, user who is connected to another system in the network and not to the local system.

### **Non-Satellite System**

In a *Private Network*, communications system that is directly connected to and located more than 200 miles from the local system.

## **O**

### **Octel 100 Messaging**

Voice-messaging system housed in a PC that connects to *Tip/Ring* ports on the system's modules. Messaging 2000 provides voice mail, Automated Attendant, call answering, and fax messaging services.

### **Off-Hook**

Telephone is said to be off-hook when the user has lifted the handset, pressed the speakerphone button to turn on the speakerphone, or used a headset to connect to the communications system or the telephone network.

### **Off-Premises Telephone**

See *OPT*.

### **Ones Density**

Requirement for channelized *DS1* service to the public network that prohibits eight consecutive zeros in a digital data stream.

### **On-Hook**

Telephone is said to be on-hook when the handset is hung up, the speakerphone is turned off, and the user is not using a headset to connect to the communications system or the telephone network.

**OPT**

*Off-Premises Telephone*. *Single-Line Telephone* or other *Tip/Ring* device connected to the system via a 008 OPT module in the control unit. Appears as an inside extension to the system, but may be physically located away from the system.

**OPX**

*Off-Premises Extension*.

**Out-of-Band Signaling**

Signaling that uses the same path as voice-frequency transmission and in which the signaling is outside the band used for voice frequencies.

**P****Parity**

Addition of a *Bit* to a bit string so that the total number of ones is odd or even; used to detect and correct transmission errors.

**PassageWay Direct Connection Solution**

Set of software applications that provides an interface between a personal computer and an MLX telephone.

**PBX**

*Private Branch Exchange*. Local electronic telephone switch that serves local stations (for example, extensions within a business) and provides them with access to the public network.

**PC**

*Personal Computer*.

**PCMCIA Memory Card**

*Personal Computer Memory Card International Association Memory Card*. See *Memory Card*.

**Peripheral System**

In a *Private Network*, system that does not connect to more than one other system, sometimes called an "end node."

**Personal Line**

*Central Office* line/trunk that terminates directly at one or more extensions. In *Hybrid/PBX Mode*, a personal line cannot be part of a line/trunk *Pool*. Also called "DFT" (Direct Facility Termination).

## **PFT**

*Power Failure Transfer*. Feature that provides continuity of telephone service during a commercial power failure by switching some of the system's line/trunk connections to telephones connected to specially designated extension jacks.

## **Phantom Extension**

Extension that is not actually plugged into the system, but is used, for example, as a calling group member covered by a *Voice Messaging Interface*.

## **Pool**

In *Hybrid/PBX Mode*, a group of outside lines/trunks that users can access with a Pool button or by dialing an access code on *SA buttons*. Also used by the *ARS* feature when choosing the least expensive route for a call.

## **Point-to-Point Facility**

In a *Private Network*, a line/trunk that passes through the *PSTN* without using the switching capabilities of the PSTN.

## **Port**

See *Jack*. Also, refers to *Extension* or *Line/Trunk Jack* before these are numbered according to the *Dial Plan* during programming. The lowest jack on a module is always Port 1.

## **Power Failure Transfer**

See *PFT*.

## **Power Supply Module**

Device that directs electricity to modules and telephones on the system. One power supply module is needed for each carrier.

## **PRI**

*Primary Rate Interface*. Standard interface that specifies the protocol used between two or more communications systems. As used in North America, it provides twenty-three 64-kbps *B-Channels* for voice and/or data and one 16-kbps *D-Channel*, which carries multiplexed signaling information for the other 23 channels.

## **Primary System Operator Position**

First extension *Jack* on the first TDL or MLX module in the control unit—that is, the extension jack with the lowest logical ID in the system.

## **Prime Line**

Individual extension number assigned to a telephone in a system operating in *Behind Switch Mode*. Each telephone user has his or her own prime line and is automatically connected to that line when he or she lifts the handset.

**Priority Call Queuing**

System function that prioritizes calling groups, thereby allowing certain incoming calls to be answered before others.

**Private Communications Network**

See [Private Network](#).

**Private Network**

Interconnected group of communications systems, which may consist of MERLIN MAGIX Integrated Systems, MERLIN LEGEND Communications Systems, DEFINITY Enterprise Communications Servers (ECS), DEFINITY Business Communications Servers (BCS), and/or DEFINITY ProLogix Solutions.

**Private Network Trunks**

Facilities that connect communications systems in a [Private Network](#). See also [Tandem Tie Trunk](#) and [Tandem PRI Trunk](#).

**Processor Module**

Module in the second slot of the control unit (Slot 0, to the right of the [Power Supply Module](#)). Includes the software and memory that runs the system.

**Programming Port Reassignment**

Reassignment of the system programming jack position to any of the first five extension jacks on the first TDL or MLX module in the control unit.

**Protocol**

Set of conventions governing the format and timing of message exchanges between devices, such as an MLX telephone and the control unit.

**PSTN**

[Public Switched Telephone Network](#). Network that is commonly accessible for local or long-distance calling. Also called “public network” or “public switched network.”

**PSTN Trunk**

In a [Private Network](#), facility that connects a networked system to the [Public Switched Telephone Network](#).

**Public Switched Telephone Network**

See [PSTN](#).

## Q

### QCC

*Queued Call Console.* A 4424LD+ or MLX-20L telephone used by a system operator in *Hybrid/PBX Mode* only. Used to answer outside calls (directed to a system operator position) and inside calls, to direct inside and outside calls to an extension or to an outside telephone number, to serve as a message center, to make outside calls for users with outward calling restrictions, to set up conference calls, and to monitor system operation.

## R

### RAM

*Random-Access Memory.* Computer memory in which an individual *Byte* or range of bytes can be addressed and read or changed without affecting other parts of memory.

### Read-Only Memory

See *ROM*.

### Remote Access

System feature that allows an outside caller to gain access to the system, almost as if at a system extension. In a *Private Network*, remote access settings are used to control calls routed via *ARS* or *UDP* routing across the network.

### Restore

Procedure whereby saved and archived system programming is reinstated on the system, from a floppy disk or *Memory Card*. See also *Backup*.

### Restricted Data Channel

Channels that do not allow the transmission of occurrences of more than seven contiguous zero bits. See also *Unrestricted Data Channels*.

### Rotary Dial Enable

Through centralized programming, T/R ports (including the T/R ports on the new ETR modules) can be programmed to accept rotary-dial and touch-tone digits or just touch-tone digits.

### Riser Cable

Cable that runs between floors in a multi-story building and connects wiring closets.

**RS-232**

Physical interface, specified by the Electronics Industries Association (EIA), that transmits and receives asynchronous data at distances of up to 50 feet (15 meters).

**Robbed-Bit Signaling**

Signaling in which the least significant *Bit* of every sixth *Frame* per channel is used for signaling in that channel.

**ROM**

*Read-Only Memory*. Computer memory that can be read, but cannot be changed.

**S****SA buttons**

Telephone buttons that provide access to both inside and outside calls.

**Satellite System**

In a *Private Network*, a communications system that is directly connected to, and located within 200 miles of the local system.

**Screen Pop**

Refers to a computer-telephony software application that takes caller information (for example, the calling party number provided by Caller ID service), queries a database, and displays a screen with information about the caller onto a user's PC screen. Screen pop requires that an identifying number or code be available to identify the calling party. See also *CTI Link*.

**SDN**

*Software Defined Network*. AT&T private networking service created by specialized software within the public network.

**Series Configuration**

*Private Network* arrangement whereby either two or four or more communications systems are connected in a line, with no particular system acting as the *Hub System*. See also *Star Configuration*.

**Service Observing**

Feature that allows one extension to listen in (observe) on calls that arrive at another extension.

**SID**

*Station (Extension) Identification.*

**Signaling**

Sending of information between devices to set up, maintain, or cease a connection, such as a telephone call.

**Simplex Signaling**

Transmission of signals in one direction only, across a telecommunications channel.

**Single-Line Telephone**

Industry-standard touch-tone or rotary dial telephone that handles one call at a time. It is connected to the system via an *Extension Jack* on a 016 (T/R) or 008 OPT module, or via a *Port* on an 016 ETR module programmed for *Tip/Ring* operation.

**Slot**

Position in a carrier for a module; numbered from 0.

**SMDR**

*Station Message Detail Recording.* Feature that captures usage information on incoming and outgoing calls.

**SMDR Printer**

Printer used to produce *SMDR* reports. Connected to the system via an RS-232 *Jack* on the *Processor Module*.

**Software Defined Network**

See *SDN*.

**Special Character**

Pause, Stop, or End-of-Dialing signal in a programmed dialing sequence, such as a speed dial number.

**Square Key**

Configuration in *Key Mode* operation in which all outside lines appear on all telephones.

**Star Configuration**

*Private Network* arrangement whereby either three or more communications systems are connected with one system acting as the *Hub System*. See also *Series Configuration*.

**Station**

See [Extension](#).

**Station Jack**

See [Extension Jack](#).

**Station Message Detail Recording**

See [SMDR](#).

**Switch**

See [Integrated System](#).

**Switched 56 Service**

*DS1* Switched 56 service is an end-to-end digital, 56-kbps, full-duplex, synchronous, circuit-switched service offering. The service is offered by network service providers and by some Local Exchange Carriers (LECs) as circuit-switched, 56-kbps service. T1-emulated [Tandem Tie Trunks](#) in a [Private Network](#) can be programmed for data.

**Switchhook Flash**

Momentary (320 ms to 1 sec) on-hook signal used as a control; may be directed to the control unit or to a [Host](#) switch outside the system. Also called "Recall" or "timed flash."

**Switch Identifier**

Number assigned to a [Tandem Trunk](#) in a [Private Network](#). It identifies the system connected to the far end of the trunk. A switch identifier is based on the type of system and its distance from the system where the identifier is assigned. See also [Satellite System](#) and [Non-Satellite System](#).

**Synchronous Data Transmission**

Method of transmitting a continuous digital data stream in which the transmission of each binary *Bit* is synchronized with a master clock. See also [Asynchronous Data Transmission](#).

**System Acceptance Test**

Test of all trunks, telephones, data terminals, and features after installation to ensure that they are working correctly.

**System Access Buttons**

See [SA buttons](#).

**System Date and Time**

Date and time that appear on 44xx, MLX, and ETR display telephones and [SMDR](#) reports.

### **System Programming**

Programming of system functions and features that affect most users, performed from a 4424LD+ or MLX-20L telephone or a computer using [WinSPM](#). See also [Extension Programming](#) and [Centralized Telephone Programming](#).

### **System Programming and Maintenance**

See [WinSPM](#).

### **System Renumbering**

Procedure used to change the numbers assigned to telephones, [Adjuncts](#), [Calling Groups](#), paging groups, park zones, [Remote Access](#), and lines/trunks.

## **T**

### **T1**

Type of digital transmission facility that, in North America, transmits at the [DS1](#) rate of 1.544 mbps.

### **T1-Emulated Data**

A T1 [Tie Trunk](#) programmed for S56DATA for use by data calls at speeds up to 56 kbps. These trunks may be used for tandem and non-tandem operation.

### **T1-Emulated Voice**

A T1 [Tie Trunk](#) programmed for Tie-PBX or Tie-Toll for use by voice calls.

### **T1 Switched 56 Service**

[T1](#) digital data transmission over the [Private Network](#) or over a private network at 56 kbps. See [Switched 56 Service](#).

### **Tandem Switching**

Capability of [Private Network](#) communications systems that allows them to direct outside calls from one facility to another, rather than just to an extension. Calls may be sent, for example, from a [PSTN](#) facility to a [Tandem Trunk](#), or vice versa.

### **Tandem Trunk**

Private outside facility (as opposed to an inside system line) that connects two communications systems in a [Private Network](#) and can carry calls to another outside facility through [Tandem Switching](#). The trunk is not connected to the [PSTN](#).

**Tandem Tie Trunk**

*Tandem Trunk* that is an analog *Delay-Start Tie Trunk*, providing a single line/trunk per facility and allowing *Analog Transmission* of voice and low-speed data; or a T1 facility offering 24 channels on emulated tie trunks and programmed for voice or data.

**Tandem PRI Trunk**

*Tandem Primary Rate Interface Trunk*. See also *Private Network Trunks*.

**TAPI**

*Telephony Application Programming Interface*. Application programming interface that allows computer telephony applications to be used with MLX telephones. See also *PassageWay Direct Connection Solution*.

**Telephone Power Supply Unit**

Equipment that provides power to an individual telephone.

**Terminal Adapter**

See *ISDN Terminal Adapter*.

**Tie Trunk**

Private trunk directly connecting two telephone switches.

**Timed Flash**

See *Switchhook Flash*.

**Tip/Ring**

Contacts and associated conductors of a *Single-Line Telephone* plug or jack.

**Touch-Tone Receiver**

See *TTR*.

**T/R**

See *Tip/Ring*.

**TransTalk Telephones**

The TransTalk 9031 and TransTalk 9040 are wireless multiline telephones.

**Trunk**

Telecommunications path between the communications system and the telephone company *Central Office* or another switch. Often used synonymously with *Line*.

**Trunk Jack**

See [Line/Trunk Jack](#).

**Trunk Pool**

See [Pool](#).

**TSAPI**

*Telephony Services Application Programming Interface*. Application programming interface that allows computer telephony applications to be used. See also [TAPI](#) and [CTI Link](#).

**TTR**

*Touch-Tone Receiver*. Device used to decode DTMF touch-tones dialed from *Single-Line Telephones* or *Remote Access* telephones.

**U**

**UDP**

*Uniform Dial Plan*. Composed of the *Local Dial Plan* and *Non-Local Dial Plan*. A dial plan that allows a caller at any *Extension* in a *Private Network* to dial the same number of digits to reach any other extension in the private network, even if the originating extension is physically connected to one communications system and the terminating extension is physically connected to a different communications system.

**Unambiguous Numbering**

Practice of numbering of extension ranges, remote access codes, or other system components to avoid routing conflicts in network or local calling. For example, Extension 441 is unique when compared to Extension 4410; however, this is ambiguous, because the system routes as soon as it matches the digits sent for a call with the digits in a *Local Dial Plan* or in a *Non-Local Dial Plan* extension range. When a caller dials 4410, therefore, the system routes the call to Extension 441 without considering the last dialed digit.

**Uniform Dial Plan**

See [UDP](#).

**Uninterruptible Power Supply**

See [UPS](#).

**Unit Load**

Measure of the power load drain of a module, telephone, or *Adjunct*.

**Unmonitored Extension**

*Extension* for which no CTI application is receiving call information. See also *CTI Link* and *Monitored Extension*.

**Unrestricted Data Channels**

Also called *Clear Data Channel*. Allow the transmission of occurrences of more than seven contiguous zero bits. If an unrestricted data channel is requested and only restricted channels are available, the call will be rejected. See also *Restricted Data Channel*.

**UPS**

*Uninterruptible Power Supply*. Device that connects to the system to provide 117 VAC to the equipment when the commercial power source fails.

**V****VAC**

*Alternating Current Voltage*.

**VDC**

*Direct Current Voltage*.

**VMI**

*Voice Messaging Interface*. Enhanced *Tip/Ring* port.

**VideoconferencingSystem**

System application that allows face-to-face meetings, with voice and video, between individuals or groups. This application requires high-speed data transmission facilities. See also *Desktop Videoconferencing System* and *Group Videoconferencing System*.

**Virtual Private Network**

See *VPN*.

**VPN**

*Virtual Private Network*. Type of *Private Network* that uses the switching capabilities of the *PSTN*, rather than *Tandem Switching*, to direct calls between connected communications systems. A VPN may constitute a part of a private network.

**Voice Announce**

System feature that allows users to receive voice announcements on their telephones. In Release 7.0 and later systems, the VA On Idle Only option (only for MLX telephones) allows voice announcement calls to go through only when the telephone is idle.

**Voice-Band Channel**

Transmission channel, generally in the 300–3400-Hz frequency band.

**Voice Mail**

Application that allows users to send messages to other system extensions, to forward messages received with comments, and to reply to messages.

**Voice Messaging Interface**

See [VMI](#).

**W**

**WATS**

*Wide Area Telecommunications Service*. Service that allows calls to certain areas for a flat-rate charge based on expected usage.

**Wink-Start Tie Trunk**

*Tie Trunk* on which the originating end transmits an off-hook signal and waits for the remote end to send back a signal (a wink) that it is ready for transmission.

**WinSPM**

Windows *System Programming and Maintenance*. Windows-based application for programming the system.

# Index

## Numerics

- 008 MLX module, [2-2](#), [2-4](#)
- 008 OPT module, [2-25](#)
  - AUDIX Voice Power, [2-25](#), [2-27](#)
  - extension capacity, [2-2](#)
  - MERLIN Mail voice messaging system, [2-27](#)
- 016 ETR module
  - applications, [2-13](#)
  - REN, [2-4](#)
  - tip/ring operation, [6-2](#)
  - TTRs, [2-15](#)
- 016 T/R module, [2-25](#)
  - ringing frequency, [2-26](#), [2-28](#)
- 100D module, [3-3](#)
- 2-digit numbering plan, [2-29](#)
- 3-digit numbering plan, [2-30](#)
- 408 GS/LS MLX module
  - jacks, [3-2](#)
- 408 GS/LS-ID-MLX
  - Caller ID, [3-2](#)
- 4400-Series telephones
  - language, [2-8](#)
- 4ESS, [3-20](#), [D-1](#)
- 5ESS, [3-20](#), [D-1](#)
- 5ESS Local, [3-30](#)
- 800 NI-BRI module, [3-2](#), [3-4](#)

## A

- Absorb digits, [4-61](#)
- Account Code Entry, [5-29](#)
- ACCUNET Switched Digital Services (SDS), [3-3](#), [D-1](#)
- Adding to the system, [6-2](#)
- Adjuncts, system
  - assigning buttons, [3-54](#)
  - features, [4-3](#)
  - numbering, [2-24](#)
  - Queued Call Console (QCC), [4-3](#)
- Alert
  - external, [4-31](#)
- American Society of Composers, Artists, and Producers (ASCAP), [3-8](#)
- Analog multiline telephones
  - button assignments (Hybrid/PBX mode), [3-54](#)
  - Extension Copy feature, [4-8](#)
- Answer supervision time, [3-36](#)
- Applications
  - AUDIX Voice Power/Fax Attendant, [2-26](#)

- CONVERSANT, [2-27](#)
- Enhanced Service Center (ESC), [2-27](#)
- Integrated Solution II (IS II), [2-28](#)
- Integrated Solution III (IS III), [2-28](#)
- Intuity AUDIX, [2-27](#)
- jacks, [2-25](#)
- Lucent Attendant, [2-26](#)
- MERLIN LEGEND Mail, [2-26](#)
- Messaging 2000, [2-26](#)
- planning for, [2-10](#)
- AT&T Switched Network (ASN), [3-3](#)
- AT&T Toll, [3-30](#)
- AUDIX Voice Power/Fax Attendant System
  - 008 OPT module, [2-14](#)
  - coverage group, [4-26](#)
  - ports, [2-25](#)
  - renumbering, [2-29](#)
  - reserved extensions, [4-28](#)
- Automatic backup, [2-9](#)
- Automatic Callback, [3-16](#), [3-17](#), [4-38](#)
- Automatic Hold or Release, [4-16](#)
- Automatic Maintenance Busy, [2-8](#)
- Automatic Route Selection (ARS), [5-29](#)
  - absorb digits setting, [4-63](#)
  - area code/exchanges, [4-53](#)
  - button assignments, [3-53](#)
  - call types, [4-63](#)
  - description, [4-52](#)
  - Facility Restriction Levels (FRLs), [4-58](#)
  - other digits setting, [4-63](#)
  - pools, [4-61](#)
  - preferred trunk pools, [4-53](#)
  - subpatterns, [4-58](#)
  - tables, [4-55](#)
  - type of dialing, [4-52](#)
  - worksheet, [4-53](#)
- Auxiliary equipment, [6-2](#)

## B

- Backing up the system, system programming, [2-9](#)
- Barrier codes, [3-16](#), [3-17](#)
- B-channel groups, [3-29](#)
- Behind Switch mode
  - button assignments, [3-54](#)
  - features, [2-7](#)
- BRI line options
  - Service Profile Identifier (SPID)
    - planning form instructions, [3-40](#)
- BRI line options planning, [3-39](#)

- clock synchronization
  - planning considerations, 3-41
- Service Profile Identifier (SPID)
  - planning considerations, 3-40
- timers
  - planning considerations, 3-42
  - planning form instructions, 3-43
- Broadcast Music Incorporated (BMI), 3-8
- Business Cordless 905, 2-13

- Buttons
  - assigning, 3-52
  - assigning in Behind Switch mode, 3-54
  - assigning in Hybrid/PBX mode, 3-46
  - assigning in Key mode, 3-54
  - factory assignments, 3-55

## C

- Call-by-Call Service Selection, 3-3, 3-32
  - Caller ID Toggle Button, 4-9
  - Calling Groups
    - and dial-in trunks, 3-14, 4-29
    - and DID trunks, 3-37
    - and Incoming Call Line Identification (ICLID), 3-4
    - and Pools, 3-14
    - and Remote Access, 3-16
    - and Tie trunks, 3-35
  - Calls-in-Queue alarm threshold, 4-30
  - extension number, 4-28
  - Extension Status, 4-27, 4-39
  - external alert for, 4-31
  - Hunt type, 4-30
  - interaction with Music on Hold and External Page Port trunks, 3-3
  - MERLIN LEGEND Mail, 4-29
  - Message Waiting receiver, 4-30
  - names, 4-29
  - options, 4-30
  - overflow coverage, 4-34
  - overflow threshold, 4-31
  - overflow time threshold, 4-34
  - overview, 4-27
  - types, 4-35
- Calling restrictions, 5-29, 5-30
    - overview, 4-4, 4-47
  - Calls-in-Queue alarm threshold, 4-30
  - Calls-in-Queue alert, 4-16
  - Camp-On, 4-38
  - Capacity
    - lines/trunks, 2-2
  - Centralized programming, 4-2
  - Centralized Voice Mail, 2-28
  - CentreVu Computer-Telephony for Windows NT, 1-8
  - CentreVu Computer-Telephony Services for Windows NT, 2-24

- Centrex, 3-3
- Channel service unit (CSU), 3-24
- Class of restriction (COR)
  - with barrier codes, 3-18
  - without barrier codes, 3-18
- Clock synchronization
  - 800 NI-BRI and 100D module interaction, 3-41
  - NI-1 BRI service, 3-41
  - planning considerations, 3-41
  - T1 service, 3-23
- common-channel signaling
  - 100D module and T1 option, 3-22
- Computer Telephony Integration (CTI) link, 1-6, 2-24
- Consoles, system, 2-10
- Control unit
  - configuration planning, 2-1, 2-31
  - diagram, 2-5
  - extension capacity, 2-2
  - line/trunk capacity, 2-2
  - module placement, 2-1, 2-3
  - operating conditions, 2-6
- CONVERSANT, 2-27
- Cover Ring Delay, 4-12
- Coverage, 2-15
  - AUDIX Voice Power/Fax Attendant System, 4-26
  - Cover button, 4-27
  - delay interval, 4-26
  - group, 4-26
  - Group Cover button, 4-27
  - Group Coverage calls, 4-27
  - Individual Coverage, 4-24
  - overview, 4-24
  - primary, 4-25
  - receivers, 4-24, 4-25
  - secondary, 4-25
  - senders, 4-24
- Coverage VMS, 4-50
- CTI link
  - available ports, 2-23

## D

- Data communications
  - equipment, 5-2
  - extension jacks, 5-17
- Data forms, C-1
- Data Hunt Group, 5-3
- Data stations, 5-2
  - buttons in Hybrid/PBX mode, 5-25
  - calling restrictions, 5-29
  - extension jacks, 5-1
  - extension jacks for, 5-1
  - ISDN terminal adapter data-only, 5-7
  - LAN host computer, 5-11, 5-20

- LAN workstations, 5-11, 5-20
  - modem data-only, 5-5
- Data Status, 5-29
- Data Terminal, 5-3
- Data Terminal Equipment (DTE), 5-2
- Date, 2-9
- Delay Announcement Devices, 2-17
  - connected to tip/ring jacks, 2-25
  - MLX telephone adjunct, 2-22
- Delay Announcement Units
  - TTRs required, 2-18, 2-19
- Delay Ring interval, 4-26
- DEX600, D-1
- Dial plan routing, 3-29
- Dial tone, 2-16, 3-36
  - secondary dial tone timer, 2-10
- Dialed Number Identification Service (DNIS), 3-3
- Digital adjuncts
  - assigning trunks, 3-45
  - features, 4-3
  - jacks, 2-23
  - user information, 3-45
- Digital Signal 1 (DS1)
  - configurations summary, 3-34
  - ground-start emulation, 3-3
  - T1, 6-2
- Direct Inward Dial (DID) trunks, 5-23
  - blocks and, 3-38
  - dial one, 3-37
  - disconnect time, 3-38
  - expected digits, 3-38
  - invalid destination, 3-38
  - options, 3-37
  - planning, 3-37
  - remote access, 3-16, 3-37
  - signaling, 3-38
  - type, 3-37
- Direct Station Selector (DSS)
  - buttons, 3-67
  - park zones, 4-22
  - ranges, 4-21
- Directed call completion, 4-19
- Direct-Line Console (DLC)
  - Automatic Hold, 4-15
  - button assignment, 3-67, 3-68
  - button assignments, 3-67
  - definition, 2-10
  - Extension Copy feature, 4-8
  - features, 4-14
  - primary operator position, 2-19
- Disallowed Lists, 4-46
- Disconnect signal, 3-10
- Disconnect time, 3-36, 3-38
- DMS FX services, D-1
- DMS INWATS services, D-1
- DMS OUTWATS services, D-1
- DMS Private Network services, D-1
- DMS Tie Trunk services, D-1

- DMS-100 Local services, 3-30
- DMS-100 services, D-1
- DMS-250 services, D-1

## E

- E&M signal, 3-35
- Eicon Technology Corporation, 1-8
  - DIVA ISDN interface card, 1-8
- Elevate priority, 4-17
- Emergency Allowed List, 4-49
- Enhanced Service Center, 2-26
- Enhanced Service Center (ESC), 2-27
- ETR telephone
  - button assignments
    - Hybrid/PBX mode, 3-49
- ETR-6 and MLS-6 telephones
  - system treatment, 3-52
  - system treatment in Behind Switch mode, 3-66
  - system treatment in Key mode, 3-65
- Extension Copy, 4-2
- Extension jacks
  - data stations, 5-1
  - identifying, 2-12
  - LAN data stations, 5-11
  - numbers, 2-3, 4-24
- Extension Status, 4-27, 4-39
- Extensions
  - adding, 6-2
  - assigning numbers, 2-11
  - capacity, 2-2
  - identifying jacks, 2-12
  - labels, 2-28
  - module types, 2-13
  - numbering plans, 2-28

## F

- Facility Restriction Levels (FRLs), 4-58
- Fax machines
  - features, 4-7
  - message threshold, 4-7
  - message-waiting receiver, 4-7
- Features
  - adding, 6-2
  - copying of, 4-9
  - group-assigned, 4-22
  - overview, 4-1
  - system, 4-35
  - telephone, 4-2
- Federal Communications Commission (FCC)
  - Key mode registration, 3-6
- Forced Account Code Entry, 4-5
- Forms
  - data, C-1
  - system planning, B-1

Forward Delay option, [4-6](#)  
Framing format, [3-21](#), [3-27](#)  
FTS2000 network, [3-20](#)

## G

Ground-start  
  emulation, [3-3](#)  
  lines/trunks, [5-22](#)  
Ground-start trunks  
  emulation, [3-3](#)  
Group Calling  
  and dial-in trunks, [3-14](#), [4-29](#)  
  and DID trunks, [3-37](#)  
  and Incoming Call Line Identification (ICLID),  
    [3-4](#)  
  and Pools, [3-14](#)  
  and Remote Access, [3-16](#)  
  and Tie trunks, [3-35](#)  
  assigning trunks, [3-3](#)  
  Delay Announcement Device, [2-22](#)  
  interaction with Music on Hold and External  
    Page Port trunks, [3-3](#)  
  options, [4-30](#)  
  overview, [4-27](#)  
  touch-tone receivers (TTRs) required, [2-17](#)  
Group channel assignments, [3-29](#)  
**Group Cover** button, [4-27](#)  
Group Coverage, [4-26](#)  
Group ID, [4-24](#)  
Group name, [4-24](#)  
Group number, [4-24](#)  
Group paging, [4-24](#)  
Group Videoconferencing, [5-13](#)

## H

Hold  
  return, [4-16](#)  
  timer, [4-15](#)  
Home calling group, [4-32](#)  
HotLine, [4-8](#)  
Hunt type, [4-30](#)  
Hybrid/PBX mode  
  Automatic Maintenance Busy, [2-8](#)  
  buttons for data stations in, [5-25](#)  
  calling restrictions, [5-29](#)  
  setting up, [2-7](#)

## I

Idle Line Preference, [5-29](#)  
Integrated Solution II (IS II), [2-28](#)  
Integrated Solution III (IS III), [2-28](#)  
Interdigit timers, [4-43](#)  
Intuity, [GL-20](#)

Intuity AUDIX, [2-26](#), [2-27](#)  
INWATS, [D-1](#)  
ISDN Terminal Adapter, [5-3](#)

## J

Jacks  
  4400-Series, [2-21](#)  
  additional operator positions, [2-20](#)  
  applications, [2-25](#)  
  auxiliary equipment, [3-8](#)  
  CTI applications, [2-24](#)  
  data terminals, [2-23](#)  
  identifying for extensions, [2-12](#)  
  lines/trunks, [3-1](#)  
  MLX, [2-22](#)  
  primary operator position, [2-19](#)  
  system programming, [2-7](#)  
  tip/ring (T/R) equipment, [2-25](#)

## K

Key mode  
  data stations, [5-27](#)  
  FCC registration, [3-6](#)  
  setting up, [2-7](#)

## L

Labeling  
  display telephones, [4-50](#)  
  extensions, [2-28](#)  
  Posted Messages, [4-51](#)  
  System Speed Dial, [4-51](#)  
Language selection, [2-8](#)  
Line coding  
  Primary Rate Interface (PRI), [3-27](#)  
  T1 service, [3-21](#)  
Line compensation  
  settings, [3-22](#), [3-27](#)  
  T1, [3-22](#)  
Line options planning  
  BRI Line Options, [3-39](#)  
  Service Profile Identifier (SPID), [3-40](#)  
  clock synchronization, [3-41](#)  
  timers, [3-42](#)  
Lines/trunks  
  adding to the system, [6-2](#)  
  assigning, [3-44](#)  
  capacity, [2-2](#)  
  connecting components with, [2-3](#)  
  Direct Inward Dial (DID), [3-37](#)  
  identifying jacks, [3-1](#)  
  incoming types, [3-6](#)  
  jacks, [3-1](#)  
  labels, [3-7](#)

- loop-start disconnect, 3-10
- modules and jack types, 3-2
- NI-1 BRI connectivity, 3-39
- outmode signaling, 3-11
- Primary Rate Interface (PRI), 3-19, 3-20
- QCC operator to receive calls, 3-13
- QCC queue priority, 3-13
- remote access, 3-15
- T1 service, 3-19
- T1 Switched 56 service, 3-24
- tie, 3-34
- toll type, 3-12
- Voice Messaging System, 3-9
- Local Area Networks (LANs)
  - host computer data stations, 5-11, 5-20
  - workstation data stations, 5-11, 5-20
- Logical IDs, 2-3
- Loop-Start
  - disconnect signal, 3-10
  - lines/trunks, 5-22
  - reliable disconnect, 3-10, 3-11
  - trunk-to-trunk transfer, 3-11
- Loudspeaker paging jacks, 3-8
- LS-ID Delay, 3-3

## M

- Magic On Hold, 3-8
- Maintenance Alarm jacks, 3-8
- Marked System Speed Dial, 4-51
- Marked system speed dial
  - and star codes, 2-10, 4-52
- Master extensions, 4-11
- MCI 800 services, D-1
- MCI 900 services, D-1
- MCI Prism services, D-1
- MCI Toll services, 3-30
- MCI VNet services, D-1
- Megacom 800 services, 3-3, 3-20, D-1
- Megacom WATS services, 3-3, D-1
- MERLIN LEGEND Mail, 2-26, 4-28
  - calling groups, 4-29
- Message center, 4-18
- Message-waiting receiver, 4-30
- Messaging 2000, 2-26
- Microphone operation, 4-5
- MLS telephone
  - button assignments
    - Hybrid/PBX mode, 3-50
- MLX telephones
  - and Delay Announcement Devices, 2-22
  - as programming equipment (MLX-20L telephone), 2-6
  - button assignments in Hybrid/PBX mode, 3-54
  - button assignments in Key and Behind Switch mode, 3-54
  - Extension Copy feature, 4-8

- jacks, 2-22
- language, 2-8
- MFM adjuncts, 4-3
- microphone operation, 4-5
- modules, 2-13
- optional features, 4-2
- Modem, 5-3
- Modem Data Stations, 5-2
- Modem data-only stations, 5-5
- Modem/ISDN Terminal Adapter Pool, 5-3
- Modes of operation, 2-7
- Modifications to system
  - overview, 6-1
  - preparation, 6-1
- Modules
  - line/trunk jack types and, 3-2
  - placement in control unit, 2-1
  - touch-tone receivers (TTRs), 2-15
  - types, 2-1
- Multi-Function Module (MFM)
  - assigning buttons, 3-54
  - Behind Switch mode and, 2-22, 2-23, 3-55
  - extension number, 2-22
- MultiQuest, 3-3, D-1
- Music-On-Hold, 3-8

## N

- Network selection table, 3-32
- NI-1 BRI, 5-24
  - connectivity, 3-39
- Night Service
  - Emergency Allowed List, 4-49
  - Exclusion List, 4-49
  - group assignment, 4-48
  - outward restriction, 4-49
  - time set, 4-49
- Night Service Coverage Control, 4-50
- Numbering line/trunk jacks, 3-2
- Numbering plans, 2-28
- Numbering the system, 2-11

## O

- One-Touch Call Handling, 4-37
- Operation
  - modes, 2-7
- Operator features, 4-14
- Operator hold timer, 4-15, 4-20
- Operator positions, 2-20
- Outmode signaling, 3-11
- OUTWATS, D-1
- Overflow
  - Prompt-based, 4-34
  - threshold, 4-31
  - time threshold, 4-34
- Overflow coverage, 4-31

## P

- Page buttons, [4-21](#)
- Park return time, [4-38](#)
- Park zones, [4-22](#)
- PC with System Programming and Maintenance (SPM), [2-6](#)
- PCMCIA card, [2-9](#)
- Personal Line, [5-25](#)
- Personal Lines, [5-29](#)
- Personal lines, [4-6](#)
- Personal Speed Dial, [5-29](#)
- Personal Video Conferencing, [5-12](#)
- Pickup groups, [4-23](#)
- Planning forms, [B-1](#)
- Pool, [5-26](#)
- Pool dial-out code, [3-15](#)
- Pools
  - Automatic Route Selection (ARS), [4-53, 4-61](#)
- Posted Messages, [4-51](#)
- Power Failure Transfer (PFT) telephones
  - jacks, [2-5](#)
  - module placement, [2-5](#)
- Primary Cover Ring Delay, [4-12](#)
- Primary operator position, [2-19, 2-20](#)
- Primary Rate Interface (PRI), [3-3](#)
  - B-channel groups, [3-29](#)
  - Call-by-Call Service Selection, [3-32](#)
  - Dial Plan Routing, [3-29](#)
  - framing format, [3-27](#)
  - incoming services, [3-29](#)
  - line appearance routing, [3-29](#)
  - line coding, [3-27](#)
  - line compensation, [3-27](#)
  - network selection table, [3-29, 3-32](#)
  - number to send, [3-33](#)
  - options, [3-29](#)
  - outgoing services, [3-29](#)
  - outgoing tables, [3-30](#)
  - overview, [3-26](#)
  - review by Lucent, [3-34](#)
  - signaling mode, [3-27](#)
  - Special Services Selection Table, [3-32](#)
  - Terminal Equipment Identifier (TEI), [3-33](#)
  - test telephone number, [3-33](#)
  - timers and counters, [3-33](#)
  - type of service, [3-26](#)
- Principal user, [4-6](#)
- Priority Call Queuing, [4-34](#)
- Privacy, [5-29](#)
- Programming
  - centralized, [4-2](#)
  - equipment, [2-6](#)
  - Extension Copy feature, [4-8](#)
  - system, [4-2](#)
- Prompt-Based Overflow setting, [2-17](#)

## Q

- Queue over threshold, [4-17](#)
- Queued Call Console (QCC)
  - additional operator positions, [2-20](#)
  - adjuncts, [4-3](#)
  - call types, [4-20](#)
  - Direct Station Selector (DSS), [4-15](#)
  - features, [4-15](#)
  - identification information, [4-3](#)
  - Message Center, [4-18](#)
  - operator to receive calls, [3-13](#)
  - Position-Busy Backup, [4-19](#)
  - primary operator position, [2-19](#)
  - queue priority, [4-16, 4-27](#)
  - Voice Announce, [4-21](#)

## R

- Remote Access
  - barrier codes, [3-15](#)
  - dial-in tie trunks, [3-15](#)
  - Direct Inward Dial (DID) trunks, [3-15, 3-37](#)
  - modifying, [6-2](#)
  - overview, [3-15](#)
  - Private network tandem trunks, [3-16](#)
  - shared access, [3-16](#)
- Remote access
  - Direct Inward Dial (DID) trunks, [3-16](#)
- Remote Call Forward, [4-6](#)
  - forward delay option, [4-6](#)
- Renumbering
  - 2-digit numbering plan, [2-29](#)
  - 3-digit numbering plan, [2-30](#)
  - AUDIX Voice Power, [2-29](#)
  - overview, [2-28](#)
  - Set Up Space numbering plan, [2-30](#)
- Requirements
  - CTI Applications, [1-6](#)
- Return ring, [4-19](#)
- Ringing frequency
  - 016 module, [2-26, 2-28](#)
- Rotary Dial Enable, [2-26, 2-28](#)

## S

- Sales and Design Support Center (SDSC), [3-34](#)
- Secondary Cover Ring Delay, [4-12](#)
- Secondary Dial Tone Timer, [2-10](#)
- Service Observing, [4-13](#)
- Service Profile Identifier (SPID)
  - planning considerations, [3-40](#)
  - planning form instructions, [3-40](#)
- Set Up Space numbering plan, [2-30](#)
- Shared Access for Switched Services (SASS), [3-3](#)

- Signaling
    - Direct Inward Dial (DID) trunks, 3-38
    - Primary Rate Interface (PRI), 3-27
    - tie trunks, 3-35
  - Signaling mode
    - T1 service, 3-21
  - Software Defined Network (SDN), 3-3
  - Special Services Table, 3-32
  - Specifications, environmental
    - CTI, 1-9
  - Speed Dial
    - marked system, 4-51
    - marked system and star codes, 2-10, 4-52
    - system, 4-51
  - Speed dial
    - marked system and star codes, 2-10
  - Station Message Detail Recording (SMDR)
    - language, 2-8, 2-9
    - options, 4-39
  - Subpatterns, 4-58
  - Supplemental Alert Adapter (SAA), 2-23
  - Support calling group, 4-32
  - Switchhook flash, 3-3
  - System
    - adding to, 6-2
    - adjuncts, 3-8, 3-9
    - consoles, 2-6, 2-10
    - date, 2-9
    - extension capacity, 2-2
    - lines/trunks capacity, 2-2
    - modifications, 6-1
    - operating conditions, 2-6, 2-22
    - programming, 4-2
    - time, 2-9
  - System Access buttons
    - when connected to tip/ring port, 3-48
  - System Access Ring, 5-25
  - System features
    - Automatic Callback interval, 4-38
    - Camp-On return time, 4-38
    - one-touch call handling, 4-37
    - overview, 4-35
    - Park return time, 4-38
    - transfer audible, 4-37
    - transfer options, 4-36, 4-37
  - System numbering
    - adjuncts, 2-24
    - extension jacks, 2-12
    - line/trunk jacks, 3-2
    - overview, 2-11
    - plans, 2-28
    - renumbering, 2-28
  - System planning form, B-1
  - System Programming and Maintenance (SPM)
    - console, 2-6
    - software, 2-6
  - System Speed Dial, 4-51
    - labels, 4-51
- ## T
- T1 service
    - channel service unit (CSU), 3-24
    - clock synchronization, 3-23
    - common services, 3-3
    - digital data transmission, 3-20
    - framing format, 3-21
    - line coding, 3-21
    - line compensation, 3-22
    - signaling mode, 3-21
    - type of service, 3-21
  - T1 Switched 56 service, 3-2, 3-20
    - clock synchronization, 3-23
    - dial plan routing, 3-25
    - direction, 3-25
    - framing format, 3-21
    - incoming signaling mode, 3-25
    - incoming signaling type, 3-25
    - line appearance routing, 3-25
    - line coding, 3-21
    - line compensation, 3-22
    - outgoing signaling mode, 3-25
    - outgoing signaling type, 3-25
    - overview, 3-24
    - signaling mode, 3-21
    - type of service, 3-21
  - TAPI, GL-35
  - TDL modules
    - extension number assignment, 2-2
  - Telephone buttons
    - assigning, 3-45
    - Direct-Line Console (DLC), 3-67
    - Hybrid/PBX mode, 3-46
    - Key and Behind Switch mode, 3-54
  - Terminal adapters, 2-22
  - Terminal Equipment Identifier (TEI), 3-33
  - Test telephone number, 3-29, 3-33
  - Tie trunks, 3-34, 5-22
    - barrier codes, 3-16
    - dial tone, 3-36
    - options, 3-34
    - overview, 3-34
    - remote access and, 3-18
    - signaling, 3-35
  - Time, 2-9
  - Timers
    - planning considerations, 3-42
    - planning form instructions, 3-43
    - secondary dial tone, 2-10
  - Timers and counters, 3-33
  - Tip/ring (T/R) equipment
    - assigning trunks, 3-44
    - Delay Announcement Devices, 2-25
    - features, 4-3
    - jacks, 2-25
    - MLX telephones, 2-24
    - optional features, 4-3

- tip/ring operation
  - jacks for equipment and applications, [2-25](#)
- Toll abuse, [3-37](#)
- Toll type, [3-12](#)
- Touch-tone receivers (TTRs)
  - calculating number required, [2-18](#)
  - modules with, [2-15](#)
  - required by prompt-based overflow, [2-17](#)
  - required by voice mail/auto attendant, [2-16](#)
  - system requirements, [2-15](#)
  - voice messaging system requirement, [2-15](#)
- Transfer audible, [4-37](#)
- TransTalk Wireless telephone, [2-13](#)
- Trunk-to-trunk transfer, [3-10](#), [3-11](#), [4-7](#)
- TSAPI, [GL-36](#)

## U

- Unit load rules, [F-5](#)
- Unit load worksheet, [F-5](#)

## V

- Video endpoints, [2-2](#)
- Video System, [5-3](#)
- Virtual Private Network, [D-1](#)
- Voice Mail, Centralized, [2-28](#)
- Voice mail/auto attendant
  - fails to transfer calls, [2-15](#)
- Voice Messaging System
  - functions, [3-9](#)
  - services, [3-9](#)
- Voice messaging systems, [2-15](#)