

USER MANUAL

DAP-1522

VERSION 1.0



Table of Contents

Product Overview	4	WLAN Partition	30
Package Contents.....	4	QoS.....	31
System Requirements	4	Tools	33
Introduction	5	Admin	33
Features.....	6	Time	34
Hardware Overview	7	System	35
Connections	7	Firmware	36
LEDs	8	Status	37
Installation	9	Device Info	37
Before you Begin.....	9	Wireless	38
Wireless Installation Considerations.....	10	Logs	39
AP/Bridge/Auto Mode	11	Statistics	40
Configuration for AP Mode.....	13	Help	41
Web-based Configuration Utility	13	Configuration for Bridge Mode	42
Setup Wizard	14	Web-based Configuration Utility	42
Wireless Setup Wizard	15	Setup Wizard	43
Add Wireless Device With WPS	22	Wireless	51
Manual Configuration.....	24	Network Settings	53
Wireless Settings	24	Static.....	53
Network Settings	26	DHCP	54
DHCP	26	Advanced	55
Static IP	27	Advanced Wireless	55
Advanced	28	Tools	56
MAC Address Filter	28	Admin	56
Advanced Wireless	29	Time	57

System	58	Networking Basics.....	88
Firmware	59	Check your IP address.....	88
Status	60	Statically Assign an IP address	89
Device Info	60	Technical Specifications.....	90
Logs	61	Contacting Technical Support	91
Help	62	Warranty	92
Wireless Security.....	63	Registration	98
What is WEP?	63		
What is WPA?	64		
Configure WEP in AP Mode.....	65		
Configure WPA-Personal (PSK) in AP Mode.....	66		
Configure WPA-Enterprise (RADIUS) in AP Mode	67		
Configure WEP in Bridge Mode	68		
Configure WPA-Personal (PSK) in Bridge Mode	69		
Connect to a Wireless Network	70		
Using Windows® XP	70		
Connect to a Wireless Network	71		
Using Windows® Vista	71		
Configure WEP	75		
Configure WPA-PSK.....	77		
Troubleshooting	79		
Wireless Basics	83		
What is Wireless?	84		
Tips.....	86		
Wireless Modes.....	87		

Package Contents

- D-Link DAP-1522 Xtreme N Duo Wireless Bridge
- Power Adapter (Use with the power supply provided by the manufacturer)
- CAT5 Ethernet Cable
- Rubber Feet
- CD-ROM with User Manual



Note: Using a power supply with a different voltage rather than the one included with the DAP-1522 will cause damage and void the warranty for this product.

System Requirements

- Computers with Windows®, Macintosh®, or Linux-based operating systems with an installed Ethernet adapter
- Internet Explorer Version 6.0, Mozilla 1.7.12 (5.0), or Firefox 1.5 and above (for configuration)

Introduction

TOTAL PERFORMANCE

Combines award winning access point features and Draft 802.11n wireless technology to provide the best wireless performance

TOTAL SECURITY

The most complete set of security features including WPA2 and MAC Address Control to protect your network against outside intruders

TOTAL COVERAGE

Provides greater wireless signal rates even at farther distances for best-in-class Whole Home Coverage.

ULTIMATE PERFORMANCE

The D-Link Xtreme N™ Duo Wireless Bridge (DAP-1522) is a draft 802.11n compliant device that delivers real world performance of up to 650% faster than an 802.11g wireless connection (also faster than a 100Mbps wired Ethernet connection). Create a secure wireless network to share photos, files, music, video, printers, and network storage throughout your home. Connect the Xtreme N™ Duo Wireless Bridge to router and share your high-speed Internet access with everyone on the network. In addition, this Wireless Bridge includes a Quality of Service (QoS) engine that keeps digital phone calls (VoIP) and online gaming smooth and responsive, providing a better Internet experience.

EXTENDED WHOLE HOME COVERAGE

Powered by Xtreme N™ Duo technology, this high performance Wireless Bridge provides superior Whole Home Coverage while reducing dead spots. The Xtreme N™ Duo Wireless Bridge is designed for use in bigger homes and for users who demand higher performance networking. Add an Xtreme N™ Duo notebook or desktop adapter and stay connected to your network from virtually anywhere in your home.

TOTAL NETWORK SECURITY

The Xtreme N™ Duo Wireless Bridge supports all of the latest wireless security features to prevent unauthorized access, be it from over the wireless network or from the Internet. Support for WPA and WEP standards ensure that you'll be able to use the best possible encryption method, regardless of your client devices.

* Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and Draft 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

Features

- **Faster Wireless Networking** - The DAP-1522 provides up to 300Mbps* wireless connection with other 802.11n wireless clients. This capability allows users to participate in real-time activities online, such as video streaming, online gaming, and real-time audio. The performance of this 802.11n wireless access point gives you the freedom of wireless networking at speeds 650% faster than 802.11g.
- **Compatible with 802.11a, 802.11b, and 802.11g Devices** - The DAP-1522 is still fully compatible with the IEEE 802.11a/b/g standard, so it can connect with existing 802.11a/b/g PCI, USB, and Cardbus adapters.
- **Advanced Firewall Features** - The Web-based user interface displays advanced network management features including Content Filtering, which allows easily applied content filtering based on MAC Address.

* **WPS PBC**- (Wi-Fi Protected Setup Push Button Configuration) Push Button Configuration is a button that can be pressed to add the device to an existing network or to create a new network. A virtual button can be used on the utility while a physical button is placed on the side of the device.


This easy setup method allows you to form a secured wireless link between the DAP-1522 and another WPS enabled device. A PC is no longer needed to log into the Web-based interface.

* **WPS PIN** - (Wi-Fi Protected Setup Personal Identification Number) A PIN is a unique number that can be used to add the access point to an existing network or to create a new network. The default PIN may be printed on the bottom of the access point. For extra security, a new PIN can be generated. You can restore the default PIN at any time. Only the Administrator ("admin" account) can change or reset the PIN.

- **User-friendly Setup Wizard** - Through its easy-to-use Web-based user interface, the DAP-1522 lets you control what information is accessible to those on the wireless network, whether from the Internet or from your company's server. Configure your access point to your specific settings within minutes.


Hardware Overview

Connections

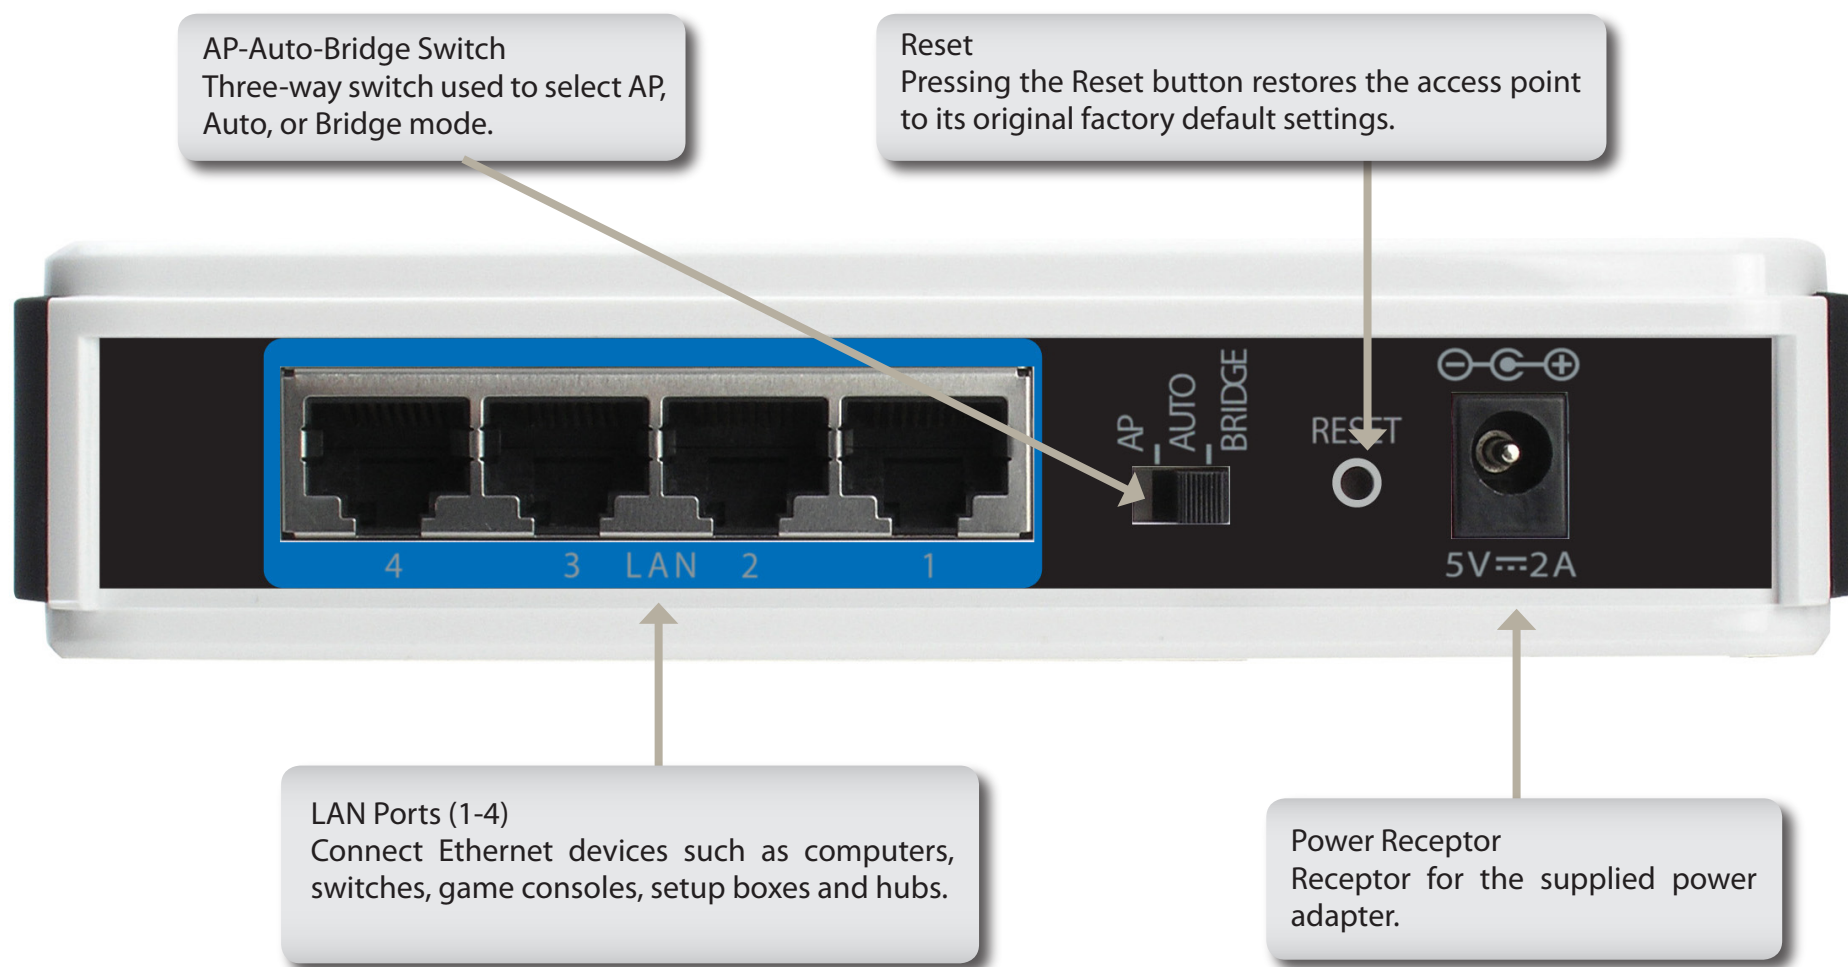

Hardware Overview

LEDs

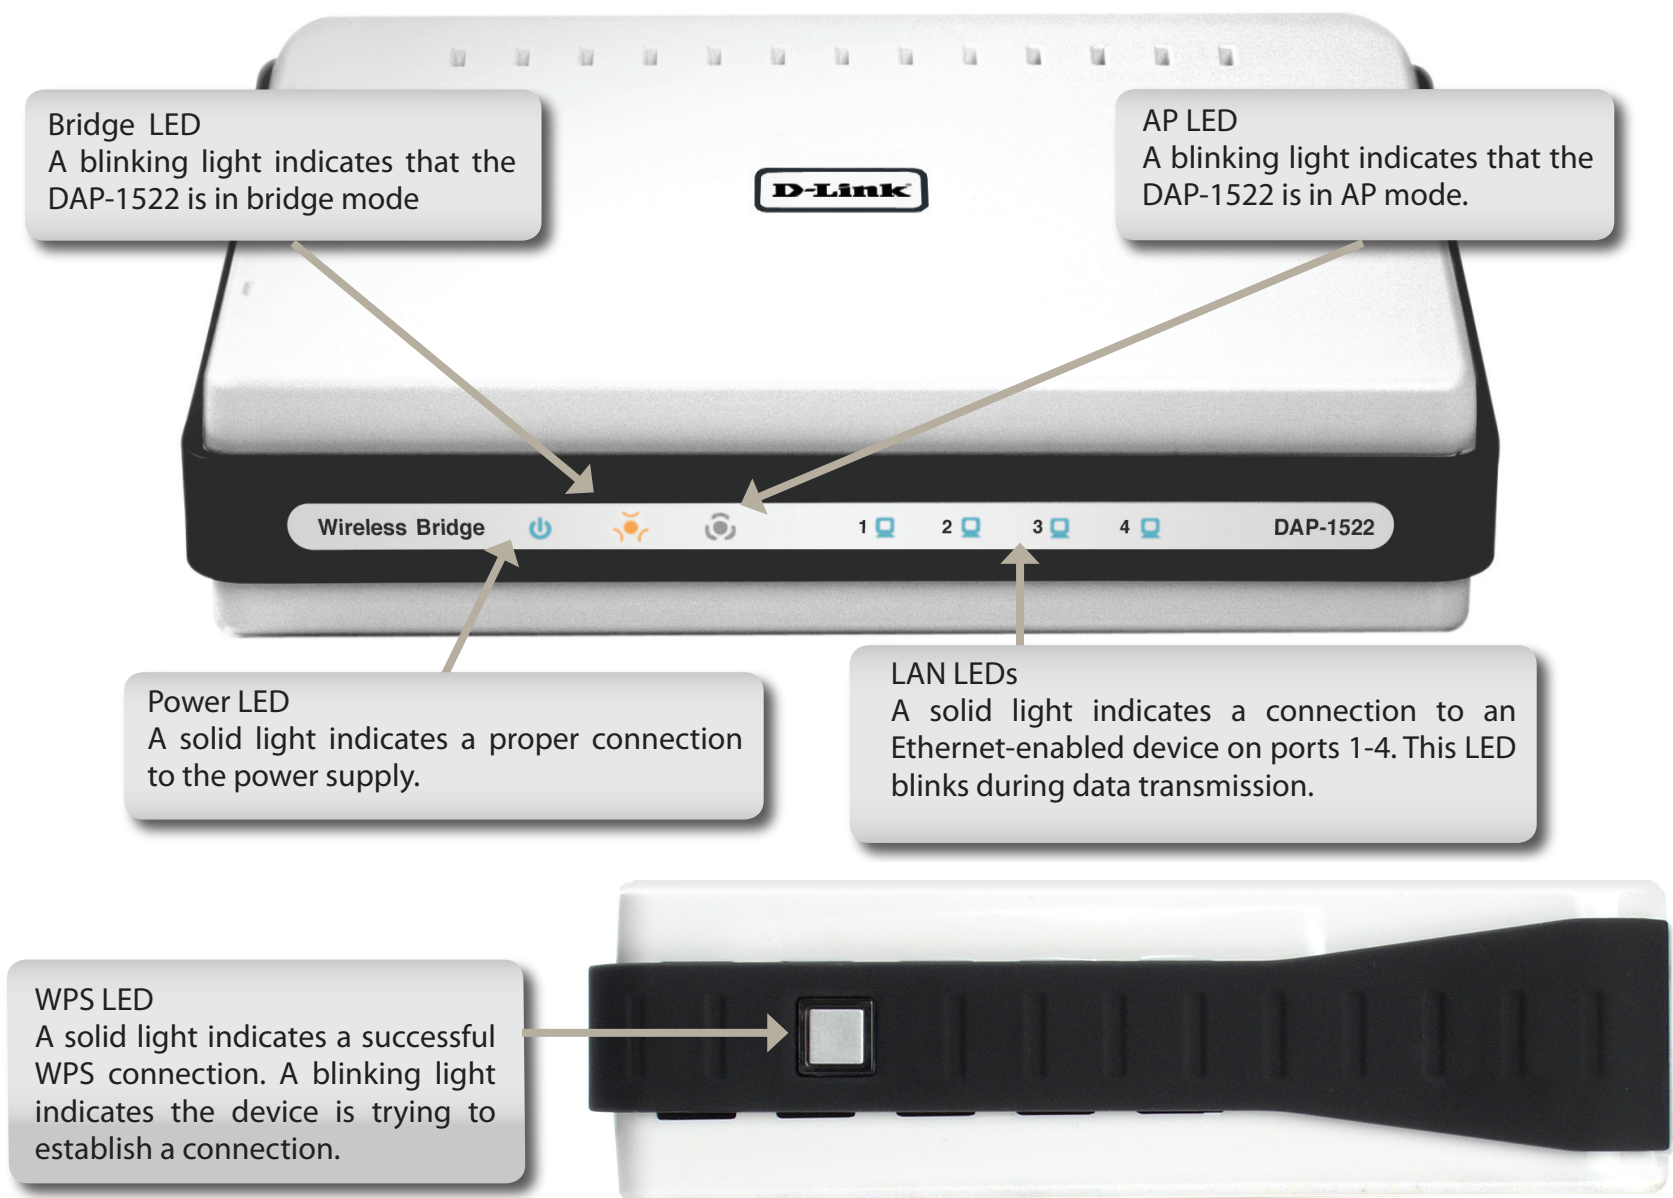

Installation

This section will walk you through the installation process. Placement of the DAP-1522 is very important. Do not place the DAP-1522 in an enclosed area such as a closet, cabinet, or in the attic or garage.

Before you Begin

Please configure the Wireless Bridge with the computer that was last connected directly to your modem. Also, you can only use the Ethernet port on your modem. If you were using the USB connection before using the Wireless Bridge, then you must turn off your modem, disconnect the USB cable and connect an Ethernet cable to the Internet port on the Wireless Bridge, and then turn the modem back on. In some cases, you may need to call your ISP to change connection types (USB to Ethernet).

If you have DSL and are connecting via PPPoE, make sure you disable or uninstall any PPPoE software such as WinPoet, Broadjump, or Enternet 300 from your computer or you will not be able to connect to the Internet.

Wireless Installation Considerations

The D-Link wireless access point lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:


1. Keep the number of walls and ceilings between the D-Link access point and other network devices to a minimum - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building Materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless access points, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.

AP/Bridge/Auto Mode

Depending on how you want to use your DAP-1522 will determine which mode you use. This section will help you figure out which setting works with your setup.

AP Mode

If you already have a wired or wireless router, and want to add a MediaBand (5GHz wireless), to your network, you will need to move the switch on the back panel of the DAP-1522 to “AP”.

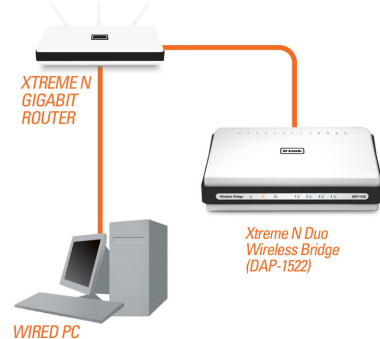

Bridge Mode

If you want to wirelessly connect multiple Ethernet enabled devices such as game consoles, media players, or network attached storage devices you will need to move the switch on the back panel of the DAP-1522 to “Bridge”.




Auto Mode

If the switch on the back panel of the DAP-1522 is set to “Auto”, the device will wait for 30 seconds, looking for an IP address. If an IP address is found, it will automatically shift to AP mode. If an IP address is not located, the DAP-1522 will automatically shift to Bridge mode.

Create a Full MediaBand (5GHz wireless) Network

If you have two DAP-1522 devices and want to create a wireless network with full MediaBand technology you will need to connect one Wireless Bridge to your router and move the switch on the back panel to “AP”. The second Wireless Bridge will need to be placed next to your Ethernet-enabled devices and you will need to move the switch on the back panel to “Bridge”.

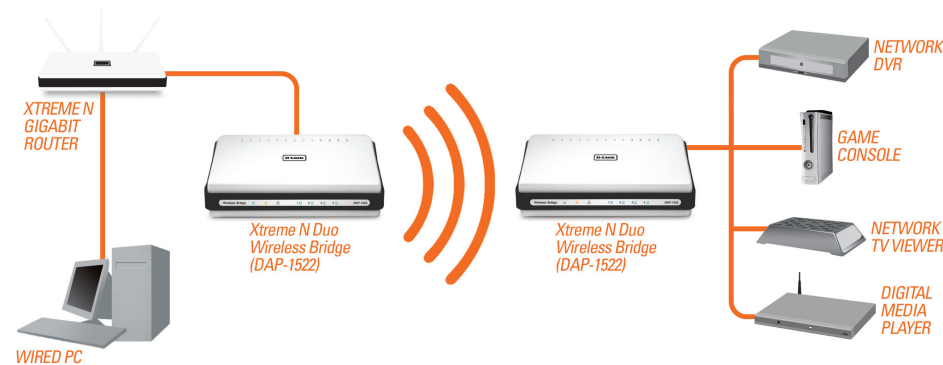


Configuration for AP Mode

This section will show you how to configure your new D-Link wireless access point using the web-based configuration utility.


Web-based Configuration Utility

To access the configuration utility, open a web-browser such as Internet Explorer and enter the friendly address for AP mode (dlinkap).

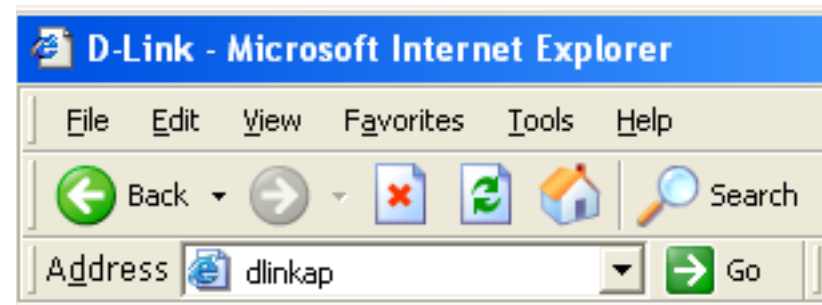

Select Admin from the drop-down menu and then enter your password. Leave the password blank by default.

If you get a Page Cannot be Displayed error, please refer to the Troubleshooting section for assistance.

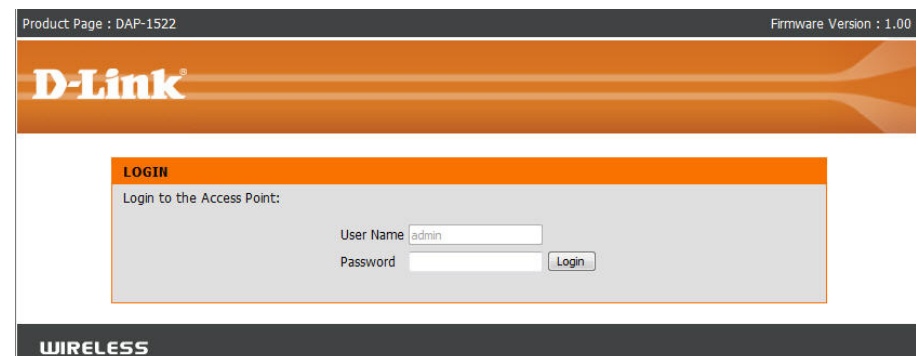

Setup Wizard

Click Launch Wireless Setup Wizard to quickly configure your access point.

To set up your wireless network, click Add Wireless Device With WPS and skip to page 22.

If you want to enter your settings without running the wizard, click Manual Wireless Network Setup and skip to page 24.

D-Link

DAP-1522 // **SETUP** **ADVANCED** **MAINTENANCE** **STATUS** **HELP**

WIRELESS SETTINGS

The following Web-based wizards are designed to assist you in your wireless network setup and wireless device connection.

Before launching these wizards, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

WIRELESS CONNECTION SETUP WIZARD

If you would like to utilize easy to use web-based wizard to assist you in connecting your DAP-1522 to the wireless network, click on the button below.

[Launch Wireless Setup Wizard](#)

Note: Some changes made using this Setup Wizard may require you to change some settings on your wireless client adapters so they can still connect to the D-Link Access Point.

MANUAL WIRELESS NETWORK SETUP

If your wireless network is already set up with Wi-Fi Protected Setup, manual configuration of the wireless network will destroy the existing wireless network. If you would like to configure the wireless settings of your new access point manually, then click on the Manual Wireless Network Setup button below.

[Manual Wireless Network Setup](#)

ADD WIRELESS DEVICE WITH WPS (WIFI PROTECTED SETUP) WIZARD

This wizard is designed to assist you in connecting your DAP-1522 to wireless network using WPS. It will guide you through step-by-step instructions on how to get your wireless device connected. Click the button below to begin.

[Add Wireless Device With WPS](#)

Helpful Hints..

If you already have a wireless network setup with Wi-Fi Protected Setup, click on **Add Wireless Device Wizard** to add new device to your wireless network.

If you are new to wireless networking and have never configured a wireless router before, click on **Wireless Network Setup Wizard** and the router will guide you through a few simple steps to get your wireless network up and running.

If you consider yourself an advanced user and have configured a wireless router before, click **Manual Wireless Network Setup** to input all the settings manually.

[More...](#)

Wireless Setup Wizard

This Wizard is designed to assist you in connecting your wireless device to your access point. It will guide you through step-by-step instructions on how to get your wireless device connected.

Enter the Device Name of the AP and click Next to continue. It is recommended to change the Device Name if there is more than one D-Link device within the subnet.

Product Page : DAP-1522 Firmware Version : 1.00

D-Link®

SET YOUR DEVICE NAME

Enter the Device Name of the AP. Recommend to change the Device Name if there're more than one D-Link devices within the subnet. Click **Next** to continue.

Device Name (NetBIOS Name)

WIRELESS

If you want to change the admin account password, enter a new password and click Next.

Product Page : DAP-1522 Firmware Version : 1.00

D-Link®

SET YOUR NEW PASSWORD

You may change the **admin** account password by entering in a new password. Click **Next** to continue.

Password :

Verify Password :

WIRELESS

Select Auto as the configuration method only if your wireless device supports Wi-Fi Protected Setup.

Skip to page 17 for Manual configuration.

Click Next to continue.

Product Page : DAP-1522 Firmware Version : 1.00

D-Link

SELECT CONFIGURATION METHOD

Please select one of the following configuration methods and click next to continue.

☒ Auto -- Select this option if your wireless device supports WPS (Wi-Fi Protected Setup)

☐ Manual -- Select this option if you want to setup your network manually

Prev Next Exit

WIRELESS

Click Save to save your network settings.

Product Page : DAP-1522 Firmware Version : 1.00

D-Link

SETUP COMPLETE!

Please keep the following information for future reference.

Wireless Network Name (SSID) : **dlink**

802.11 Band : **5GHz**

Channel : **36**


Wireless Security Mode : **WPA2-Personal/AUTO (also known as WPA2 Personal)**

Network Key : **kkNYBnzQX**

Prev Save Exit


WIRELESS

The following screen opens to indicate that you have successfully saved your new settings.

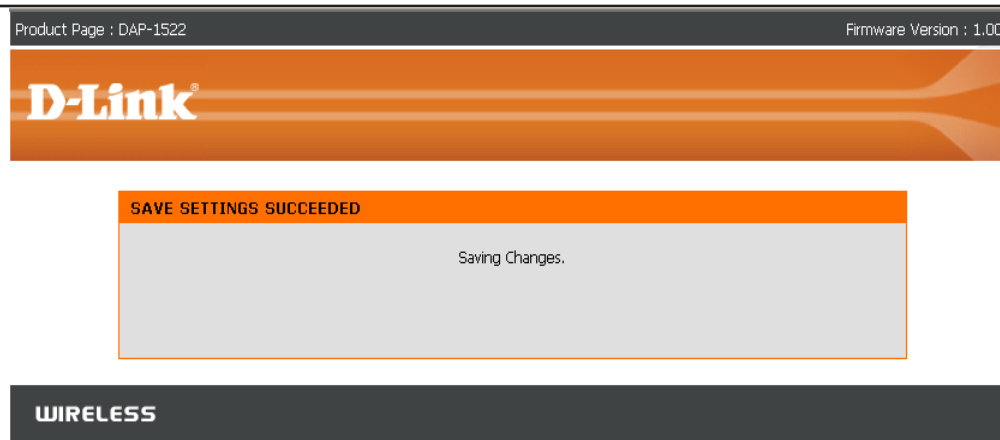

Select Manual as the configuration method to set up your network manually.

Click Next to continue.

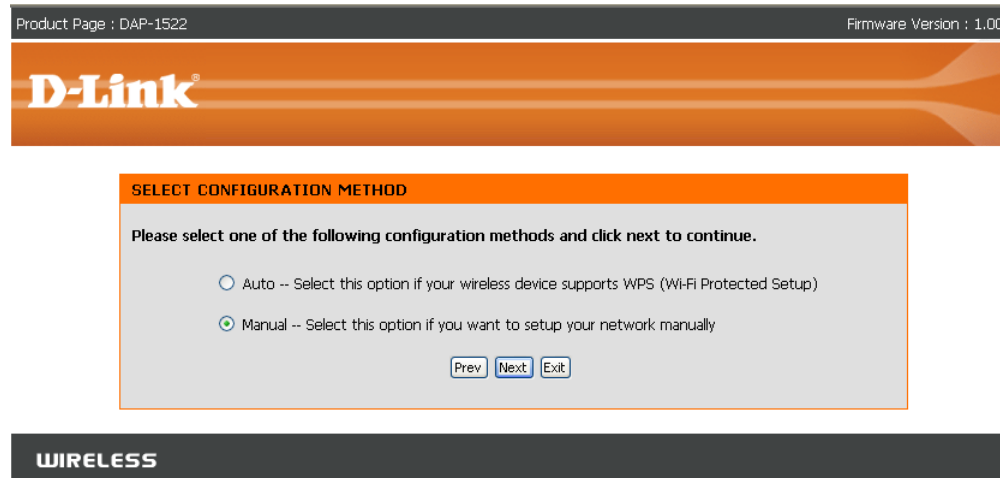

Enter a network name and choose Automatically assign a network key.

To Manually assign a network key, skip to page 19.

Click Next to continue.

If you choose WPA-PSK encryption, the following screen will show you your Network Key to enter on your wireless clients.

Click Save to finish the Setup Wizard.



WELCOME TO THE D-LINK WIRELESS SETUP WIZARD

Give your network a name, using up to 32 characters.

Network Name (SSID) :

802.11 Band ☐ 2.4GHz ☒ 5GHz

Channel

Auto Channel Scan ☒

☒ Automatically assign a network key (Recommended)

To prevent outsiders from accessing your network, the AP will automatically assign a security key (also called WEP or WPA key) to your network.

☐ Manually assign a network key

Use this option if you prefer to create your own key.

☒ Use WPA encryption instead of WEP (WPA is stronger than WEP and all D-Link wireless client adapters support WPA).

WIRELESS

Product Page : DAP-1522 Firmware Version : 1.00

D-Link

SETUP COMPLETE!

Please keep the following information for future reference.

Wireless Network Name (SSID) : **dlink**

802.11 Band : **5GHz**

Channel : **Auto Channel Scan**

Wireless Security Mode : **WPA-PSK**

Network Key : **7ZdtBzW3**

WIRELESS

If you choose WEP encryption, the following screen will show you your Network Key to enter on your wireless clients.

Click Save to finish the Setup Wizard.



SETUP COMPLETE!

Please keep the following information for future reference.

Wireless Network Name (SSID) : **dlink**
 802.11 Band : **5GHz**
 Channel : **Auto Channel Scan**
 Wireless Security Mode : **WEP**
 Network Key : **CF4D3EC6AE0D2015ED425117AF**

[Prev](#) [Save](#) [Exit](#)

WIRELESS

Product Page : DAP-1522 Firmware Version : 1.00



WELCOME TO THE D-LINK WIRELESS SETUP WIZARD

Give your network a name, using up to 32 characters.

Network Name (SSID) :

802.11 Band ☐ 2.4GHz ☒ 5GHz

Channel

Auto Channel Scan ☒

☐ Automatically assign a network key (Recommended)

To prevent outsiders from accessing your network, the AP will automatically assign a security key (also called WEP or WPA key) to your network.

☒ Manually assign a network key

Use this option if you prefer to create your own key.

☒ Use WPA encryption instead of WEP (WPA is stronger than WEP and all D-Link wireless client adapters support WPA).

[Prev](#) [Next](#) [Exit](#)


WIRELESS

Choose Manually assign a network key to create your own key.

Click Next to continue.

For WPA encryption, enter a Network Key between 8 and 63 characters long or enter exactly 64 characters using 0-9 and A-F.

Click Next to continue.

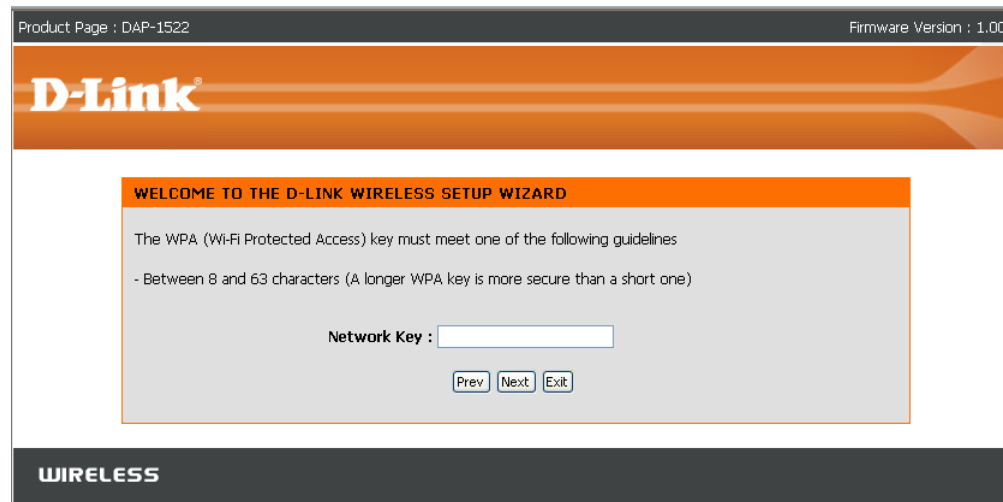

Product Page : DAP-1522 Firmware Version : 1.00

D-Link

WELCOME TO THE D-LINK WIRELESS SETUP WIZARD

The WPA (Wi-Fi Protected Access) key must meet one of the following guidelines


- Between 8 and 63 characters (A longer WPA key is more secure than a short one)

Network Key :

WIRELESS

If you select WPA encryption, the following screen will show you your network key to enter on your wireless clients.

Click Save to finish the Setup Wizard.

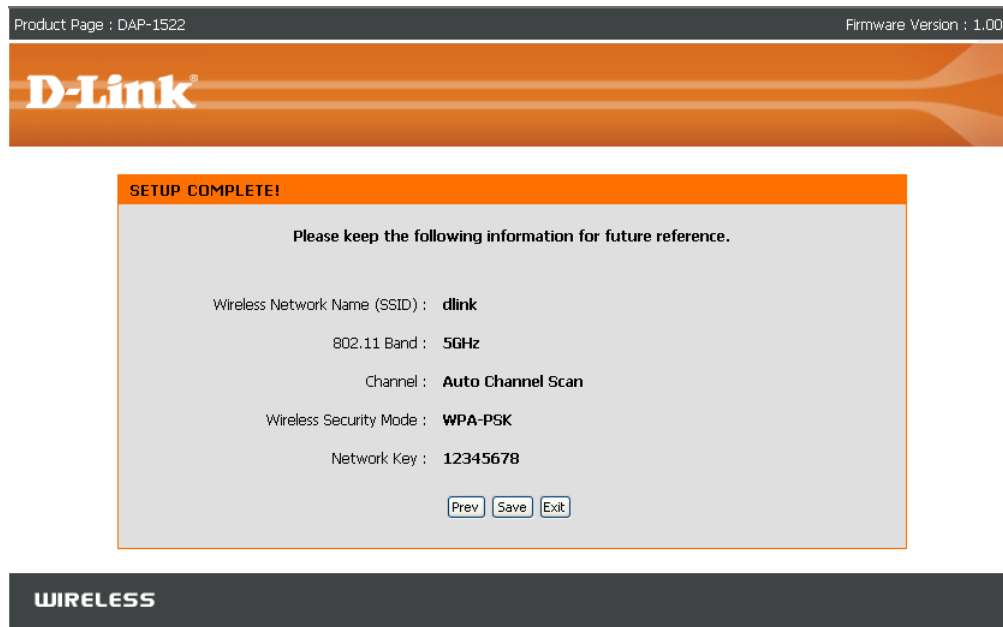

Product Page : DAP-1522 Firmware Version : 1.00

D-Link

SETUP COMPLETE!

Please keep the following information for future reference.

Wireless Network Name (SSID) : **dlink**

802.11 Band : **5GHz**

Channel : **Auto Channel Scan**


Wireless Security Mode : **WPA-PSK**

Network Key : **12345678**

WIRELESS

For WEP encryption, enter a Network Key exactly 5 or 13 characters long or exactly 10 or 26 characters using 0-9 and A-F.

Click Next to continue.

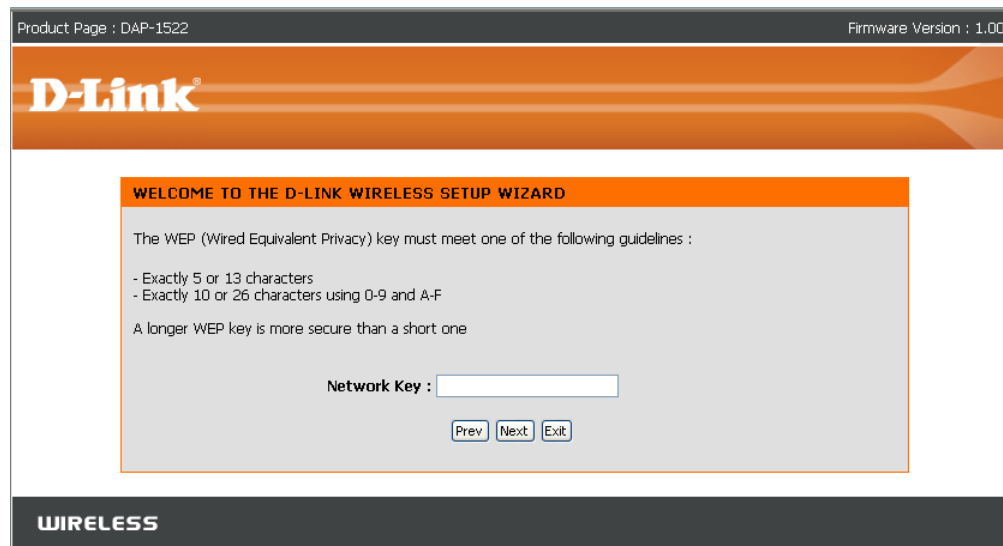

Product Page : DAP-1522 Firmware Version : 1.00

D-Link®

WELCOME TO THE D-LINK WIRELESS SETUP WIZARD

The WEP (Wired Equivalent Privacy) key must meet one of the following guidelines :

- Exactly 5 or 13 characters
- Exactly 10 or 26 characters using 0-9 and A-F


A longer WEP key is more secure than a short one

Network Key :

WIRELESS

If you select WEP encryption, the following screen will show you your network key to enter on your wireless clients.

Click Save to finish the Setup Wizard.

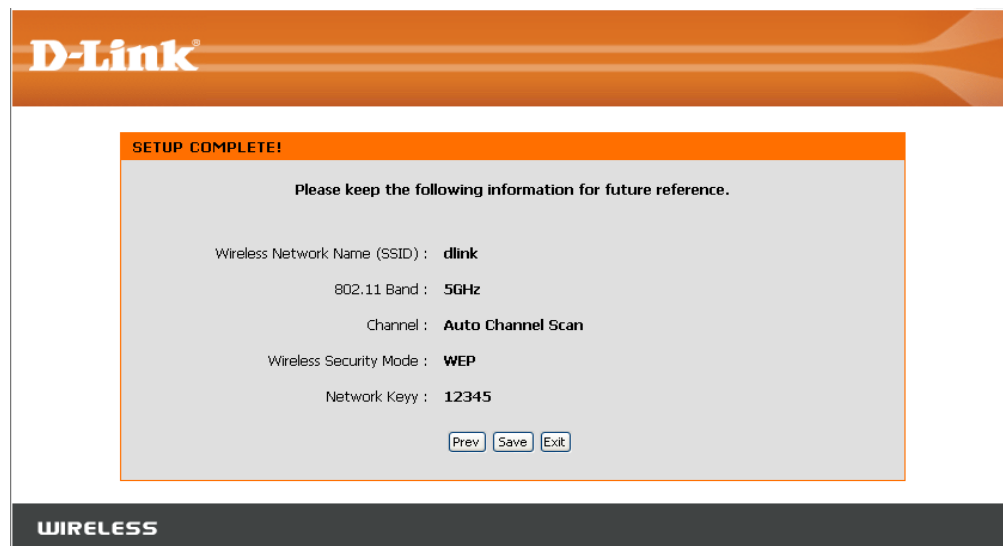

D-Link®

SETUP COMPLETE!

Please keep the following information for future reference.

Wireless Network Name (SSID) : **dlink**

802.11 Band : **5GHz**

Channel : **Auto Channel Scan**

Wireless Security Mode : **WEP**

Network Key : **12345**

WIRELESS

Add Wireless Device With WPS

This Wizard is designed to assist you in your wireless network setup. It will guide you through step-by-step instructions on how to set up your wireless network and how to make it secure.

Select PIN to use your PIN number from your wireless device to connect to your network.

For PBC configuration, skip to page 23.

Click Connect to continue.



ADD A WIRELESS DEVICE WITH WPS (WI-FI PROTECTED SETUP)

There are two ways to add a wireless device to your wireless network:

- PIN (Personal Identification Number)
- PBC (Push Button Configuration)

☒ **PIN** : 74985412

Please enter the PIN from your wireless device and click the below "Connect" button

☐ **PBC**

Please press the push button on your wireless device and press the "Connect" button below within 120 seconds

WIRELESS

Start WPS on the wireless device you are adding to you wireless network to complete the setup.



USING PIN NUMBER

Please start WPS on the wireless device you are adding to your network within 118 seconds

WIRELESS

Select PBC to use the Push Button Configuration to connect to your network.

Click Connect to continue.

Product Page : DAP-1522 Firmware Version : 1.00

D-Link

ADD WIRELESS DEVICE WITH WPS (WI-FI PROTECTED SETUP)

There are two ways to add wireless device to your wireless network:

- PIN (Personal Identification Nummer)
- PBC (Push Button Configuration)

☐ PIN :

Please enter the PIN from your wireless device and click the below "Connect" button

☒ PBC

Please press the push button on your wireless device and press the "Connect" button below within 120 seconds

WIRELESS

Press down the Push Button on the wireless device you are adding to your network to complete the setup.

Product Page : DAP-1522 Firmware Version : 1.00

D-Link

VIRTUAL PUSH BUTTON

Please press down the Push Button (physical or virtual) on the wireless device you are adding to your wireless network within 116 seconds ...

WIRELESS

Manual Configuration

Wireless Settings

Wireless Mode: The current wireless mode is set to Access Point, it will create a wireless infrastructure network.

Enable Wireless: Check the box to enable the wireless function. If you do not want to use wireless, uncheck the box to disable all the wireless functions.

Wireless Network Name: When you are browsing for available wireless networks, this is the name that will appear in the list (unless Visibility Status is set to Invisible, see below). This name is also referred to as the SSID. For security purposes, it is highly recommended to change from the pre-configured network name.

802.11 Band: Operating frequency band. Choose 2.4GHz for visibility to legacy devices and for longer range. Choose 5GHz for least interference.

802.11 Mode: If you choose 2.4GHz band, than select one of the following:

Mixed 802.11n, 802.11g and 802.11b - Select if you are using a mix of 802.11n, 11g, and 11b wireless clients.
802.11b Only - Select if you are only using 802.11b wireless clients.

802.11g Only - Select if you are only using 802.11g wireless clients.

802.11n Only - Select if you are only using 802.11n wireless clients.

Mixed 802.11g and 802.11b - Select if you are using a mix of 802.11g and 11b wireless clients.

Mixed 802.11n and 802.11g - Select if you are using a mix of 802.11n and 11g wireless clients.

If you choose 5GHz band, then select either 802.11a Only, 802.11n Only, or Mixed 802.11n and 802.11a.

D-Link

DAP-1522

SETUP **ADVANCED** **MAINTENANCE** **STATUS** **HELP**

WIRELESS SETTINGS

WIRELESS NETWORK

Use this section to configure the wireless settings for your access point. Please note that changes made on this section may also need to be duplicated on your Wireless Client.

Save Settings Don't Save Settings

WIRELESS NETWORK SETTINGS

Wireless Mode : Access Point

Enable Wireless : ☒

Wireless Network Name : dlink (Also called the SSID)

802.11 Band : 2.4GHz 5GHz

802.11 Mode : Mixed 802.11n and 802.11a

Enable Auto Channel Scan : ☐

Wireless Channel : 36

Transmission Rate : Best(automatic) (Mbit/s)

Channel Width : 20 MHz

Visibility Status : Visible Invisible

WIRELESS SECURITY MODE

Security Mode : Disable Wireless Security (not recommended)

WI-FI PROTECTED SETUP (ALSO CALLED WCN 2.0 IN WINDOWS VISTA)

Enable : ☒

Lock Wireless Security Settings : ☐

Current PIN : 12345678

Generate New PIN Reset PIN to Default

Wi-Fi Protected Status : Enabled / Configured

Reset to Unconfigured

Helpful Hints..

Changing your Wireless Network Name is the first step in securing your wireless network. Choose a familiar name that not contain any person information.

Auto Channel Scan is selected by default. It automatically finds the least loaded channel for interference free communication.

Enabling Hidden Mode is another way to secure network. With this option enabled, no wireless client will be able to see your wireless network when scan to see what's available. For your wireless device connect to your access point, you will need to manually enter the Wireless Network Name on each device.

If you have enabled Wireless Security, make you write down the WEP Key or Passphrase that have configured. You will need to enter this information on any wireless device that you connect your wireless network.

More...

Enable Auto Channel Scan: The Auto Channel Scan setting can be selected to allow the DAP-1522 to choose the channel with the least amount of interference.

Wireless Channel: Indicates the channel setting for the DAP-1522. The Channel can be changed to fit the channel setting for an existing wireless network or to customize the wireless network. If you enable Auto Channel Scan, this option will be grayed out.

Transmission Rate: Select the transmit rate. It is strongly suggested to select Best (automatic) for best performance.

Channel Width: Select the Channel Width:

Auto 20/40 - Select if you are using both 802.11n and non-802.11n wireless devices.

20MHz - Select if you are not using any 802.11n wireless clients.

Visibility Status: Select Invisible if you do not want the SSID of your wireless network to be broadcasted by the DAP-1522. If Invisible is selected, the SSID of the DAP-1522 will not be seen by Site Survey utilities so your wireless clients will have to know the SSID of your DAP-1522 in order to connect to it.

Security Mode: Refer to page 63 for more information regarding the wireless security.

Enable: Enable the Wi-Fi Protected Setup feature.

Lock Wireless Security Settings: Locking the wireless security settings prevents the settings from being changed by any new external registrar using its PIN. Devices can still be added to the wireless network using Wi-Fi Protected Setup. It is still possible to change wireless network settings with Manual Wireless Network Setup, Wireless Network Setup Wizard, or an existing external WLAN Manager Registrar.

Current PIN: Shows the current value of the access point's PIN.

Generate New PIN: Create a random number that is a valid PIN. This becomes the access point's PIN. You can then copy this PIN to the user interface of the registrar.

Reset PIN to Default: Restore the default PIN of the access point.

Reset to Unconfigured: Resets Wi-Fi Protected Status to Not Configured. Vista WPS icon will only be displayed when the Wi-Fi Protected Status is Not Configured.

Network Settings

DHCP

This section will allow you to change the local network settings of the access point and to configure the DHCP settings.

LAN Connection Use the drop-down menu to select Dynamic IP (DHCP) Type: to automatically obtain an IP address on the LAN/private network.

Device Name: Enter the Device Name of the AP. It is recommended to change the Device Name if there is more than one D-Link device within the subnet.

The screenshot displays the D-Link DAP-1522 web interface. The top navigation bar includes the D-Link logo and tabs for SETUP, ADVANCED, MAINTENANCE, STATUS, and HELP. The left sidebar contains a menu with WIZARD, WIRELESS, and NETWORK SETTINGS. The main content area is titled 'NETWORK SETTINGS' and contains instructions for configuring internal network settings. Below the instructions are two buttons: 'Save Settings' and 'Don't Save Settings'. The 'LAN SETTINGS' section includes a 'LAN Connection Type' dropdown menu set to 'Dynamic IP (DHCP)'. The 'DEVICE NAME (NETBIOS NAME)' section has a text input field with 'dlinkap' entered.

D-Link					
DAP-1522	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
WIZARD	NETWORK SETTINGS Use this section to configure the internal network settings of your access point and also to configure the built-in DHCP Server to assign IP addresses to the computers on your network. The IP Address that is configured here is the IP Address that you use to access the Web-based management interface. If you change the IP Address here, you may need to adjust your PC's network settings to access the network again. <input type="button" value="Save Settings"/> <input type="button" value="Don't Save Settings"/>				Helpful Hints.. If you have a DHCP server on your network, you can select DHCP to get the IP address from a DHCP server. More...
WIRELESS					
NETWORK SETTINGS					
LAN SETTINGS Use this section to configure the internal network settings of your access point. The IP Address that is configured here is the IP Address that you use to access the Web-based management interface. If you change the IP Address here, you may need to adjust your PC's network settings to access the network again. LAN Connection Type : <input type="button" value="Dynamic IP (DHCP)"/>					
DEVICE NAME (NETBIOS NAME) Device Name : <input type="text" value="dlinkap"/>					

Static IP

Select Static IP Address if all the Internet port's IP information is provided to you by your ISP. You will need to enter in the IP address, subnet mask, gateway address, and DNS address(es) provided to you by your ISP. Each IP address entered in the fields must be in the appropriate IP form, which are four octets separated by a dot (x.x.x.x). The Access point will not accept the IP address if it is not in this format.

LAN Connection Type: Use the drop-down menu to select Static IP if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses. Select Dynamic IP (DHCP) to automatically assign an IP address to the computers on the LAN/private network.

Access Point IP Address: Enter the IP address of the access point. The default IP address is 192.168.0.50. If you change the IP address, once you click Apply, you will need to enter the new IP address in your browser to get back into the configuration utility.

Subnet Mask: Enter the Subnet Mask assigned by your ISP.

Default Gateway: Enter the Gateway assigned by your ISP.

Device Name: Enter the Device Name of the AP. It is recommended to change the Device Name if there is more than one D-Link device within the subnet.

The screenshot shows the D-Link DAP-1522 configuration utility. The top navigation bar includes tabs for SETUP, ADVANCED, MAINTENANCE, STATUS, and HELP. The left sidebar shows options for WIRELESS SETTINGS and NETWORK SETTINGS. The main content area is titled 'NETWORK SETTINGS' and contains the following sections:

- NETWORK SETTINGS:** A text box explaining that this section is used to configure internal network settings and the built-in DHCP server. It includes 'Save Settings' and 'Don't Save Settings' buttons.
- ACCESS POINT SETTINGS:** A section for configuring the access point's internal network settings. It includes:
 - LAN Connection Type:** A dropdown menu set to 'Static IP'.
 - Access Point IP Address:** A text field containing '192.168.0.50'.
 - Subnet Mask:** A text field containing '255.255.255.0'.
 - Default Gateway:** An empty text field.
- DEVICE NAME (NETBIOS NAME):** A section with a 'Device Name' text field containing 'dlinkap'.

On the right side, there is a 'Helpful Hints..' section with text about LAN settings and a 'More...' link.

Advanced MAC Address Filter

The MAC address filter section can be used to filter network access by machines based on the unique MAC addresses of their network adapter(s). It is most useful to prevent unauthorized wireless devices from connecting to your network. A MAC address is a unique ID assigned by the manufacturer of the network adapter.

Configure MAC Filtering: When “Turn MAC Filtering OFF” is selected, MAC addresses are not used to control network access. When “Turn MAC Filtering ON and ALLOW computers listed to access the network” is selected, only computers with MAC addresses listed in the MAC Address List are granted network access. When “Turn MAC Filtering ON and DENY computers listed to access the network” is selected, any computer with a MAC address listed in the MAC Address List is refused access to the network.

Add MAC Filtering Rule: This parameter allows you to manually add a MAC filtering rule. Click the Add button to add the new MAC filtering rule to the MAC Filtering Rules list at the bottom of this screen.

The screenshot shows the D-Link DAP-1522 web interface. The top navigation bar includes tabs for SETUP, ADVANCED (selected), MAINTENANCE, STATUS, and HELP. The left sidebar lists configuration options: MAC ADDRESS FILTER (selected), ADVANCED WIRELESS, WLAN PARTITION, and QOS. The main content area is titled 'MAC ADDRESS FILTER' and contains the following sections:

- MAC ADDRESS FILTER:** A text box explaining that the MAC (Media Access Controller) Address filter option is used to control network access based on the MAC Address of the network adapter. It includes 'Save Settings' and 'Don't Save Settings' buttons.
- MAC FILTERING SETUP:** A section with a dropdown menu labeled 'Configure MAC Filtering below :'. The current selection is 'Turn MAC Filtering OFF'.
- ADD MAC FILTERING RULE:** A section with a form for adding a new rule. It includes a 'MAC Address' field with six input boxes (each with a colon) and an 'Add' button.
- MAC FILTERING RULES:** A table with two columns: 'MAC Address' and 'Delete'.

On the right side of the interface, there is a 'Helpful Hints..' section with text explaining how to create a list of MAC addresses and how to use the 'Clear' button to remove an address from the list. A 'More...' link is also present.

Advanced Wireless

Transmit Power: Set the transmit power of the antennas.

Beacon Period: Beacons are packets sent by an Access Point to synchronize a wireless network. Specify a value. 100 is the default setting and is recommended.

DTIM Interval: (Delivery Traffic Indication Message) 1 is the default setting. A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.

RTS Threshold: This value should remain at its default setting of 2346. If inconsistent data flow is a problem, only a minor modification should be made.

Fragmentation Threshold: The fragmentation threshold, which is specified in bytes, determines whether packets will be fragmented. Packets exceeding the 2346 byte setting will be fragmented before transmission. 2346 is the default setting.

WMM Enable: WMM is QoS for your wireless network. This will improve the quality of video and voice applications for your wireless clients.

Short GI: Check this box to reduce the guard interval time therefore increasing the data capacity. However, it is less reliable and may create higher data loss.

IGMP Snooping: This enables IGMP snooping for the wireless connection. We recommend enabling this if you often use multicast services such as video conferencing and streaming audio/video.

D-Link

DAP-1522

SETUP **ADVANCED** MAINTENANCE STATUS HELP

MAC ADDRESS FILTER

ADVANCED WIRELESS

WLAN PARTITION

QOS

ADVANCED WIRELESS

If you are not familiar with these Advanced Wireless settings, please read the help section before attempting to modify these settings.

Save Settings Don't Save Settings

ADVANCED WIRELESS SETTINGS

Transmit Power : 100%

Beacon Period : 100 (msec, range:25~500, default:100)

DTIM Interval : 1 (range: 1~15, default:1)

RTS Threshold : 2346 (range: 256~2346, default:2346)

Fragmentation Threshold : 2346 (range: 1500~2346, default:2346, even number only)

WMM Enable : ☒

Short GI : ☒

IGMP Snooping : ☐

Helpful Hints..

It is recommended that you leave these parameters at their default values. Adjusting them could limit the performance of your wireless network.

Enabling WMM can help control latency and jitter when transmitting multimedia content over a wireless connection.


[More...](#)

WLAN Partition

WLAN Partition allows you to segment your Wireless network by managing access to both the internal station and Ethernet access to your WLAN.

Internal Station Connection: Use the drop-down menu to either Allow or Deny internal station connection.

Ethernet to WLAN Access: Use the drop-down menu to either Allow or Deny Ethernet to Wireless LAN access.

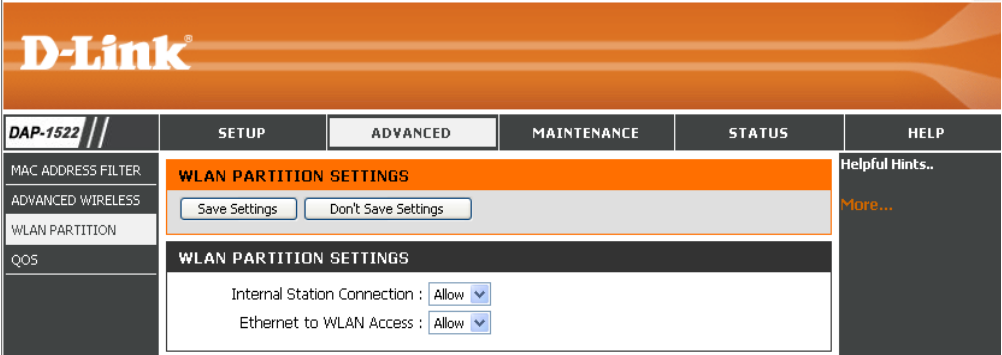

QoS

QoS is short for Quality of Service, a technology developed to enhance your experience of using a network by prioritizing the traffic of different applications.

Enable QoS: Enable this option if you want to allow QoS to prioritize your traffic.

HTTP: Allows the access point to recognize HTTP transfers for many common audio and video streams and prioritize them above other traffic. Such streams are frequently used by digital media players.

Automatic: When enabled, this option allows the access point to automatically attempt to prioritize traffic streams that it doesn't otherwise recognize, based on the behavior that the streams exhibit. This acts to de-prioritize streams that exhibit bulk transfer characteristics, such as file transfers, while leaving interactive traffic, such as gaming or VoIP, running at a normal priority.

Add QoS Rule: A QoS Rule identifies a specific message flow and assigns a priority to that flow. For most applications, the priority classifiers ensure the right priorities and specific QoS Rules are not required. QoS supports overlaps between rules. If more than one rule matches for a specific message flow, the rule with the highest priority will be used.

Enable QoS: Enable this option if you want to allow QoS to prioritize your traffic.

Name: Create a name for the rule that is meaningful to you.

Priority: The priority of the message flow is entered here. The four priorities are defined as:

D-Link

DAP-1522

SETUP ADVANCED MAINTENANCE STATUS HELP

QoS

Qos prioritizes the traffic of various wireless applications.

Save Settings Don't Save Settings

QoS

Enable Qos : ☐

PRIORITY CLASSIFIERS

HTTP : ☒

Automatic : ☒ (default if not matched by anything else)

ADD QoS RULE

Enable Qos : ☐

Name :

Priority : Background(BK)

Protocol : Any

Host 1 IP Range : -

Host 1 Port Range : -

Host 2 IP Range : -

Host 2 Port Range : -

Add Clear

QoS RULES

Name	Priority	Host 1 IP Range	Host 2 IP Range	Protocol / Ports

Helpful Hints..

Enable this option if you want to allow WISH to prioritize wireless traffic.

For most applications, the priority classifiers ensure the right priorities, and specific WISH Rules are not required.

More...

BK: Background (least urgent)
BE: Best Effort
VI: Video
VO: Voice (most urgent)

Protocol: The protocol used by the messages.

Host 1 IP Range: The rule applies to a flow of messages for which one computer's IP address falls within the range set here.

Host 1 Port Range: The rule applies to a flow of messages for which host 1's port number is within the range set here.

Host 2 IP Range: The rule applies to a flow of messages for which the other computer's IP address falls within the range set here.

Host 2 Port Range: The rule applies to a flow of messages for which host 2's port number is within the range set here.

QoS Rules: This section is where you define QoS Rules. Enable or disable defined rules with the check boxes at the left.

Tools Admin

This page will allow you to change the Administrator password. The administrator password has read/write access.

Password: Enter a new password for the Administrator Login Name. The administrator can make changes to the settings.

Verify Password: Enter the same password that you entered in the previous textbox in order to confirm its accuracy.

The screenshot displays the D-Link DAP-1522 Web Management Interface. The top navigation bar includes the D-Link logo and tabs for SETUP, ADVANCED, MAINTENANCE, STATUS, and HELP. The left sidebar shows a menu with ADMIN, TIME, SYSTEM, and FIRMWARE. The main content area is titled 'ADMINISTRATOR SETTINGS' and contains the following text: 'The 'admin' accounts can access the management interface. The admin has read/write access and can change passwords.' and 'By default, there is no password configured. It is highly recommended that you create a password to keep your access point secure.' Below this text are two buttons: 'Save Settings' and 'Don't Save Settings'. The 'ADMIN PASSWORD' section is also visible, with the instruction 'Please enter the same password into both boxes, for confirmation.' and two password input fields labeled 'Password :' and 'Verify Password :'. A 'Helpful Hints..' section on the right provides additional security advice, and a 'More...' link is located below it.

Time

The Time Configuration option allows you to configure, update, and maintain the correct time on the internal system clock. From this section you can set the time zone that you are in. Daylight Saving can also be configured to automatically adjust the time when needed.

Time Zone: Select the Time Zone from the drop-down menu.

Daylight Saving: To select Daylight Saving time manually, tick the Enable Daylight Saving check box. Next use the drop-down menu to select a Daylight Saving Offset and then enter a start date and an end date for daylight saving time.

Date and Time: To manually input the time, enter the values in these fields for the Year, Month, Day, Hour, Minute, and Second and then click Save Settings. You can also click the Copy Your Computer's Time Settings button at the bottom of the screen.

The screenshot shows the D-Link DAP-1522 web interface. The top navigation bar includes tabs for SETUP, ADVANCED, MAINTENANCE, STATUS, and HELP. The left sidebar lists ADMIN, TIME, SYSTEM, and FIRMWARE. The main content area is titled 'TIME' and contains a description of the Time Configuration option. Below this, there are two sections: 'TIME CONFIGURATION' and 'SET THE DATE AND TIME MANUALLY'.

TIME CONFIGURATION

Time : 01/01/2000 10:19:41
 Time Zone : (GMT-08:00) Pacific Time (US & Canada); Tijuana
 Enable Daylight Saving : ☐
 Daylight Saving Offset : -2:00

Daylight Saving Dates :

	Month	Week	Day of Week	Time
DST Start	Jan	1st	Sun	12 am
DST End	Jan	1st	Sun	12 am

SET THE DATE AND TIME MANUALLY

Date And Time : Year 2008 Month Jan Day 3
 Hour 7 Minute 23 Second 18 PM
 Copy Your Computer's Time Settings

System

Save to Local Hard Drive: Use this option to save the current access point configuration settings to a file on the hard disk of the computer you are using. First, click the Save button. You will then see a file dialog, where you can select a location and file name for the settings.

Load from Local Hard Drive: Use this option to load previously saved access point configuration settings. First, use the Browse control to find a previously save file of configuration settings. Then, click the Load button to transfer those settings to the access point.

Restore to Factory Default: This option will restore all configuration settings back to the settings that were in effect at the time the access point was shipped from the factory. Any settings that have not been saved will be lost, including any rules that you have created. If you want to save the current access point configuration settings, use the Save button above.
Note: Restoring the factory default settings will not reset the Wi-Fi Protected Status to Not Configured.

Reboot the Device: Click to reboot the access point.

The screenshot displays the D-Link DAP-1522 web interface. The top navigation bar includes the D-Link logo and tabs for SETUP, ADVANCED, MAINTENANCE, STATUS, and HELP. The left sidebar shows a menu with ADMIN, TIME, SYSTEM (selected), and FIRMWARE. The main content area is titled 'SYSTEM SETTINGS' and contains the following options:

- Save To Local Hard Drive :** A button labeled 'Save Configuration'.
- Load From Local Hard Drive :** A text input field followed by a 'Browse...' button, and a button labeled 'Restore Configuration from File'.
- Restore To Factory Default :** A button labeled 'Restore Factory Defaults' with the text 'Restore all settings to the factory defaults.' below it.
- Reboot The Device :** A button labeled 'Reboot the Device'.

On the right side of the interface, there is a 'Helpful Hints..' section with the following text:

Once your access point is configured the way you want it, you can save the configuration settings to a configuration file.

You might need this file so that you can load your configuration later in the event that the access point's default settings are restored.

To save the configuration, click the **Save Configuration** button.

[More...](#)

Firmware

You can upgrade the firmware of the access point here. Make sure the firmware you want to use is on the local hard drive of the computer. Click on Browse to locate the firmware file to be used for the update. Please check the D-Link support website for firmware updates at <http://support.dlink.com>. You can download firmware upgrades to your hard drive from this site.

Browse: After you have downloaded the new firmware, click Browse to locate the firmware update on your hard drive. Click Upload to complete the firmware upgrade.

Upload: Once you have a firmware update on your computer, use this option to browse for the file and then upload the information into the access point.

The screenshot shows the D-Link DAP-1522 web interface. The top navigation bar includes tabs for SETUP, ADVANCED, MAINTENANCE (selected), STATUS, and HELP. On the left, a sidebar menu lists ADMIN, TIME, SYSTEM, and FIRMWARE (selected). The main content area is titled 'FIRMWARE' and contains the following sections:

- FIRMWARE:** A message stating 'Use the Firmware section to install the latest firmware code to improve functionality and performance.' with buttons for 'Save Settings' and 'Don't Save Settings'.
- FIRMWARE INFORMATION:** Displays 'Current Firmware Version : 1.00' and 'Current Firmware Date : 11:44:01 01/23/2008'.
- FIRMWARE UPGRADE:** Contains a red note: 'Note: Some firmware upgrades reset the configuration options to the factory defaults. Before performing an upgrade, be sure to save the current configuration from the Maintenance -> Admin screen.' Below this, it states: 'To upgrade the firmware, your PC must have a wired connection to the access point. Enter the name of the firmware upgrade file, and click on the Upload button.' There is an 'Upload' label followed by a text input field, a 'Browse...' button, and an 'Upload' button.

On the right side, there is a 'Helpful Hints...' section with text about firmware updates and a 'More...' link.

Status

Device Info

This page displays the current information for the DAP-1522. It will display the LAN and wireless LAN information.

General: Displays the access point's time and firmware version.

LAN: Displays the MAC address and the private (local) IP settings for the access point.

Wireless LAN: Displays the wireless MAC address and your wireless settings such as SSID and Channel.

D-Link®	
DAP-1522 //	SETUP ADVANCED MAINTENANCE STATUS HELP
DEVICE INFO WIRELESS LOGS STATISTICS	<div> DEVICE INFORMATION <p>All of your network connection details are displayed on this page. The firmware version is also displayed here.</p> </div> <div> GENERAL <p>Firmware Version : 1.00 , 11:44:01 01/23/2008</p> </div> <div> LAN <p>Connection Type : Static IP</p> <p>MAC Address : 00:1d:6a:12:12:0f:9c</p> <p>IP Address : 192.168.0.50</p> <p>Subnet Mask : 255.255.255.0</p> <p>Default Gateway :</p> </div> <div> WIRELESS LAN <p>Wireless Radio : Enabled</p> <p>MAC Address : 00:1d:6a:12:12:0f:9c</p> <p>Network Name(SSID) : dlink</p> <p>Channel : 36</p> <p>Security Type : WPA-Auto- Personal / Auto</p> <p>Wi-Fi Protected Setup : Enabled / Configured</p> </div>

Helpful Hints...
 All of your LAN and WLAN connection details are displayed here.
[More...](#)

Wireless


The wireless section allows you to view the wireless clients that are connected to your wireless access point.

MAC Address: The Ethernet ID (MAC address) of the wireless client.

UpTime: Displays the amount of time the wireless client has been connected to the access point.

Mode: The transmission standard being used by the client. Values are 11a, 11b, 11g, 11ng or 11na for 802.11a, 802.11b, 802.11g or 802.11n respectively.

Signal: This is a relative measure of signal quality. The value is expressed as a percentage of theoretical best quality. Signal quality can be reduced by distance, by interference from other radio-frequency sources (such as cordless telephones or neighboring wireless networks), and by obstacles between the access point and the wireless device.

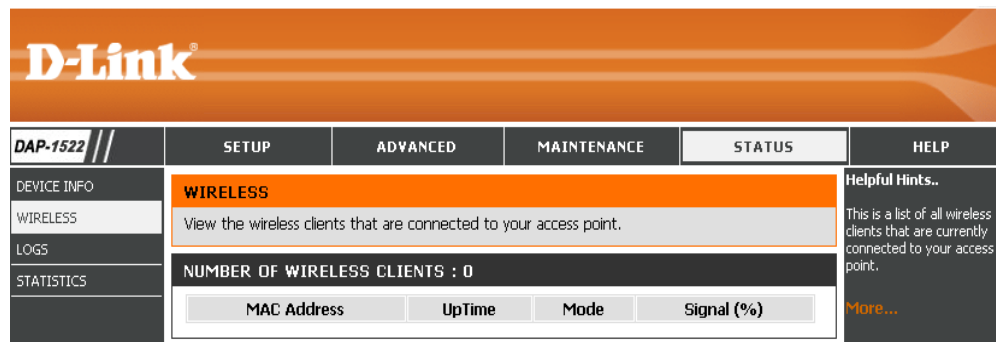

Logs

The access point automatically logs (records) events of possible interest in its internal memory. If there isn't enough internal memory for all events, logs of older events are deleted but logs of the latest events are retained. The Logs option allows you to view the access point logs. You can define what types of events you want to view and the level of the events to view. This access point also has external Syslog Server support so you can send the log files to a computer on your network that is running a Syslog utility

What to View: There are three types of logs that can be viewed: System Activity, Wireless Activity, and Notice. Tick the corresponding check box for the type(s) that you want displayed in the log.

Enable Remote Log: Tick this check box and enter a Log Server name or IP address to enable the remote log feature.

Apply Log Settings Now: Click this button to immediately filter the log results so that only the selected options appear in the Log Details section of this screen.

Refresh: Updates the log details on the screen so it displays any recent activity.

Clear: Clears all of the log contents.

Save Log: This option will save the access point to a log file on your computer.

D-Link

DAP-1522 // SETUP ADVANCED MAINTENANCE STATUS HELP

LOGS

View the logs. You can define the event levels to view.

LOG OPTIONS

What to View : ☒ System Activity ☒ Wireless Activity ☒ Notice

Enable Remote Log : ☐ **Log Server / IP Address :**

[Apply Log Settings Now](#)

LOG DETAILS

[First Page](#) [Last Page](#) [Previous](#) [Next](#) [Clear](#) [Refresh](#) [Save Log](#)

Page 1 of 3

Time	Priority	Message
Uptime 0 day 10:09:00	[SYSACT]	Web login success from 192.168.0.5
Uptime 0 day 10:08:52	[SYSACT]	Device is operating in AP mode!
Uptime 0 day 10:08:48	[Wireless]	Stop Wireless success
Uptime 0 day 10:08:48	[Wireless]	Initiate Wireless success
Uptime 0 day 10:08:48	[Wireless]	Auto channel:Best channel is 48
Uptime 0 day 10:08:48	[Wireless]	Stop Wireless success
Uptime 0 day 09:55:44	[Wireless]	Initiate Wireless success
Uptime 0 day 09:55:39	[Wireless]	Stop Wireless success
Uptime 0 day 09:55:39	[Wireless]	Initiate Wireless success
Uptime 0 day 09:55:38	[Wireless]	Stop Wireless success

Helpful Hints..
Check the log frequently to detect unauthorized network usage.
[More...](#)

Statistics

The Statistics page displays all of the LAN and Wireless packets transmit and receive statistics.

TX Packets: The total number of packets sent from the access point.

RX Packets: The total number of packets received by the access point.

TX Packets Dropped: Displays the number of packets that were dropped while sending, due to errors, collisions, or access point resource limitations.

RX Packets Dropped: Displays the number of packets that were dropped while receiving, due to errors, collisions, or access point resource limitations.

TX Bytes: Displays the number of bytes that were sent from the access point.

RX Bytes: Displays the number of bytes that were received by the access point.


The screenshot shows the D-Link DAP-1522 web interface. The top navigation bar includes links for SETUP, ADVANCED, MAINTENANCE, STATUS, and HELP. The left sidebar contains links for DEVICE INFO, WIRELESS, LOGS, and STATISTICS. The main content area is titled 'TRAFFIC STATISTICS' and includes a description: 'Traffic Statistics display receive and transmit packets passing through your access point.' Below this are two buttons: 'Refresh Statistics' and 'Clear Statistics'. The page is divided into two sections: 'LAN STATISTICS' and 'WIRELESS STATISTICS'. Each section displays a table of statistics.

LAN STATISTICS	
TX Packets Packets : 2798	RX Packets Packets : 5235
TX Packets Dropped : 0	RX Packets Dropped : 0
TX Packets Bytes : 3145352	RX Packets Bytes : 362978

WIRELESS STATISTICS	
TX Packets Packets : 0	RX Packets Packets : 0
TX Packets Dropped : 0	RX Packets Dropped : 0
TX Packets Bytes : 0	RX Packets Bytes : 0

On the right side of the interface, there is a 'Helpful Hints..' section with a summary of the statistics and a 'More...' link.

Help



DAP-1522

///

SETUP

ADVANCED

MAINTENANCE

STATUS

HELP

MENU

SETUP

ADVANCED

MAINTENANCE

STATUS

SUPPORT MENU

Setup Help

- Wireless Settings
- Network Settings

Advanced Help

- MAC Address Filter
- Advanced Wireless
- WLAN Partition
- Qos

Maintenance Help

- Admin
- Time
- System
- Firmware

Status Help

- Device Info
- Wireless
- Log
- Statistics

Helpful Hints..

D-Link DAP-1522 User Manual


41

Configuration for Bridge Mode

This section will show you how to configure your new D-Link wireless MediaBridge using the web-based configuration utility.


Web-based Configuration Utility

To access the configuration utility, open a web-browser such as Internet Explorer and enter the friendly address for Bridge mode (dlinkap).

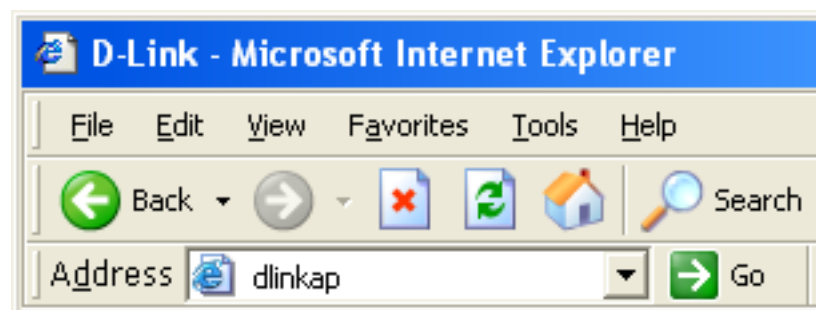

Select Admin from the drop-down menu and then enter your password. Leave the password blank by default.

If you get a Page Cannot be Displayed error, please refer to the Troubleshooting section for assistance.

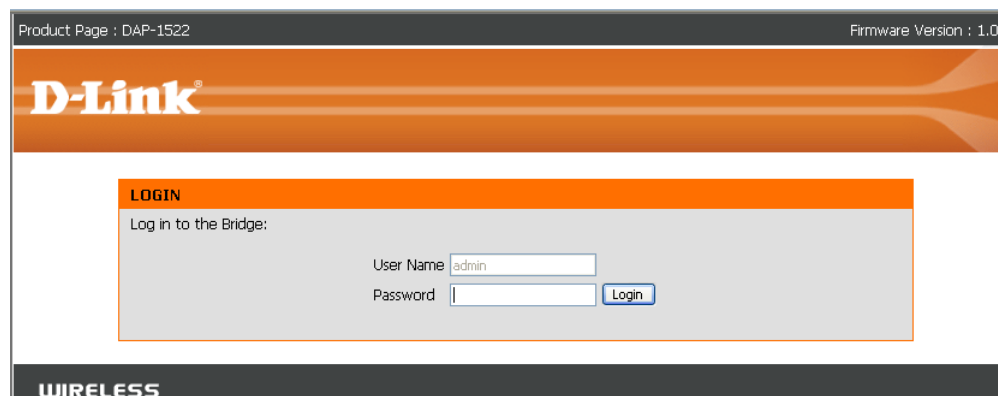

Setup Wizard


This wizard is designed to assist you in configuring the wireless settings for your bridge. It will guide you through step-by-step instructions on how to setup your wireless network.

Click Launch Wireless Setup Wizard to begin.

Click Launch Wireless Setup Wizard



Enter the Device Name of the AP and click Next to continue. It is recommended to change the Device Name if there is more than one D-Link device within the subnet.

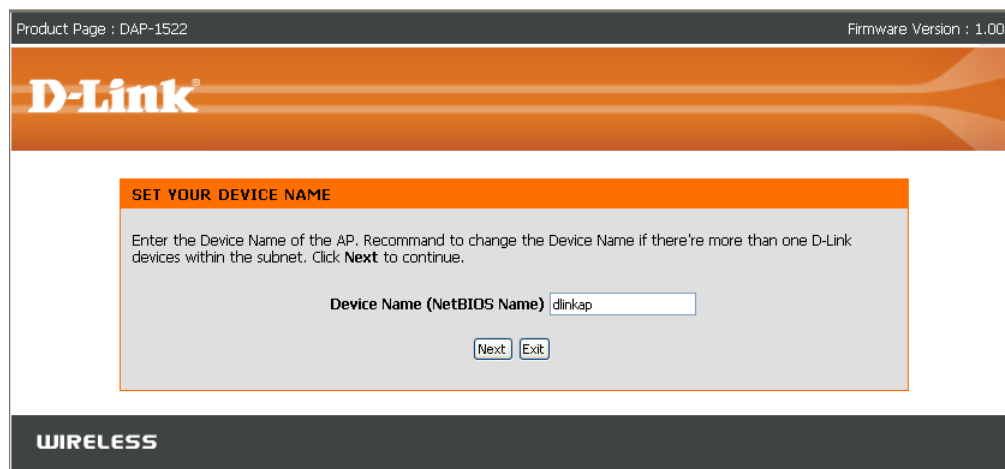

If you want to change the admin account password, enter a new password and click Next.

Product Page : DAP-1522 Firmware Version : 1.00

D-Link®

SET YOUR NEW PASSWORD

You may change the **admin** account password by entering in a new password. Click **Next** to continue.

Password :

Verify Password :

WIRELESS

Select Auto configuration if you want to use Wi-Fi Protected Setup.

If you want to set up your network manually, skip to page 47.

Click Next to continue.

Product Page : DAP-1522 Firmware Version : 1.00

D-Link®

SELECT CONFIGURATION METHOD

Please select one of the following configuration methods and click next to continue.

☒ **Auto** (Select this option if you want to use Wi-Fi Protected Setup)


☐ **Manual** (Select this option if you want to setup your network manually)

WIRELESS


Select PIN to connect your wireless device with WPS.

For PBC configuration, skip to page 46.

Enter the PIN number used into you access point and click Connect.

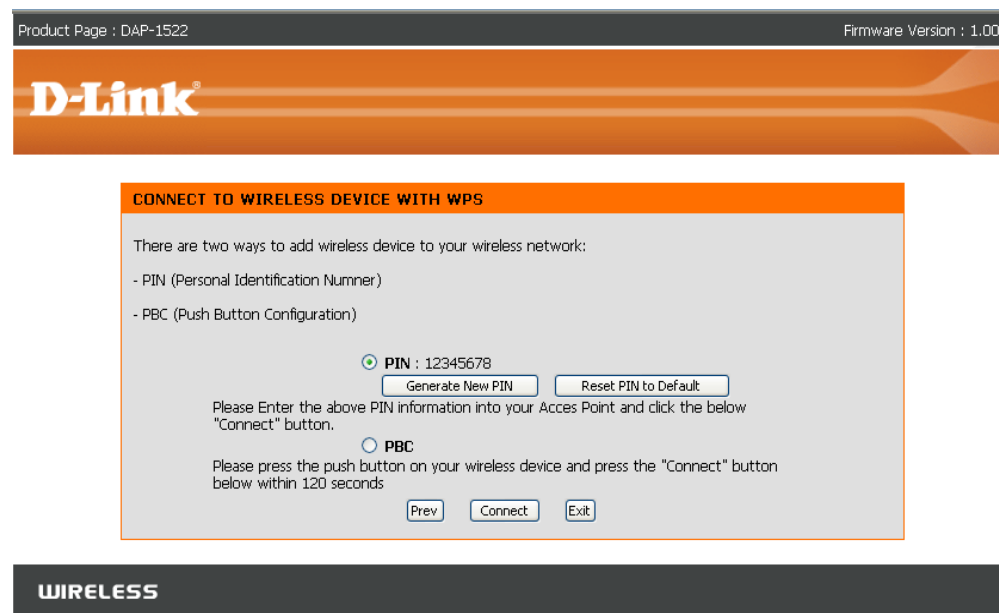


Start WPS on the wireless device you are adding to you wireless network to complete the setup.

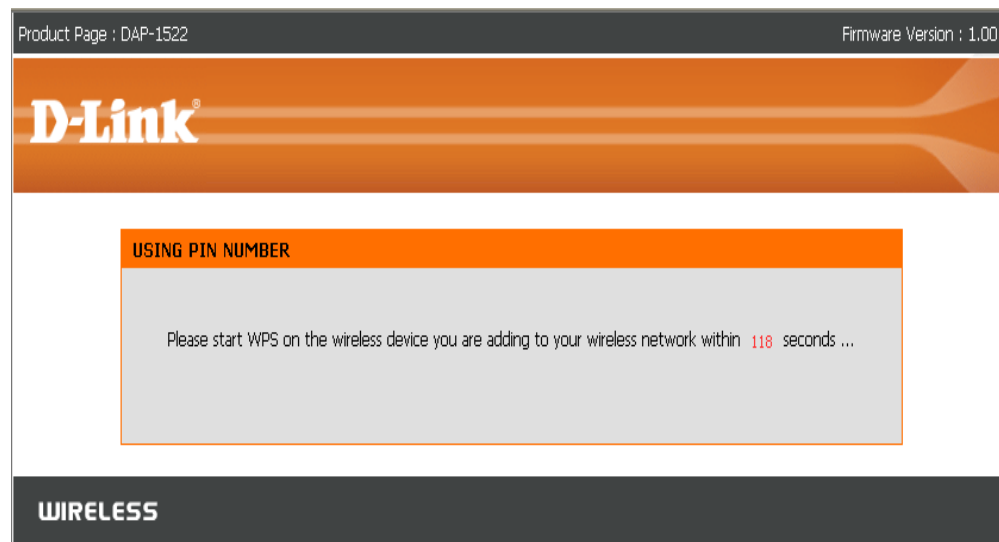


Select PBC to use the Push Button Configuration to connect to your network.

Click Connect to continue.

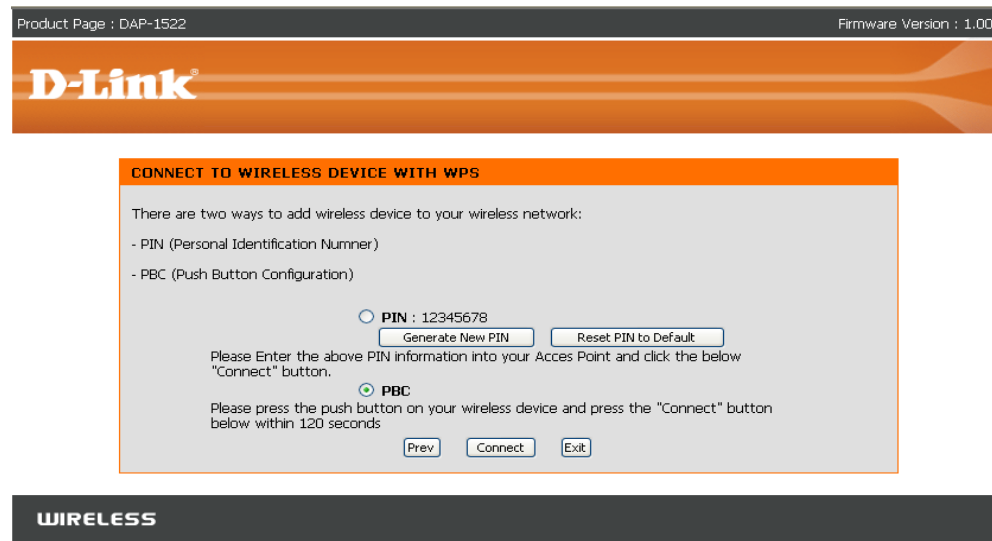


Press down the Push Button on the wireless device you are adding to your network to complete the setup.

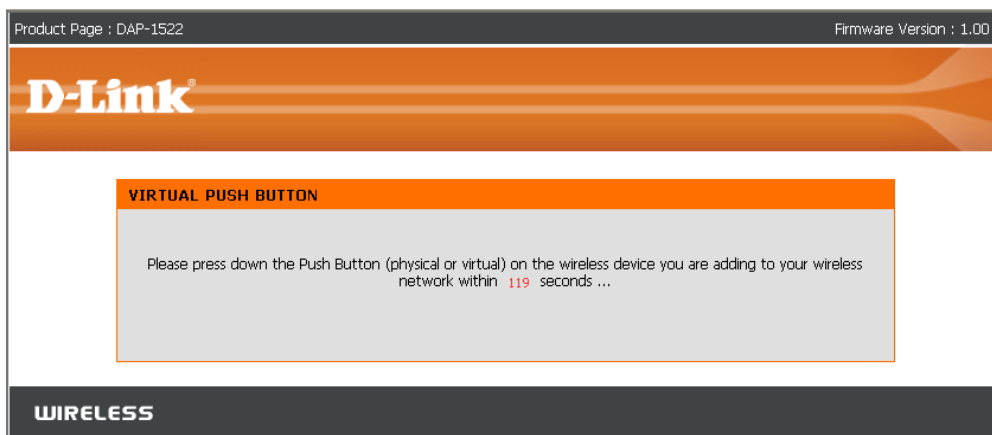

Select Manual configuration to set up your network manually.

Click Next to continue.

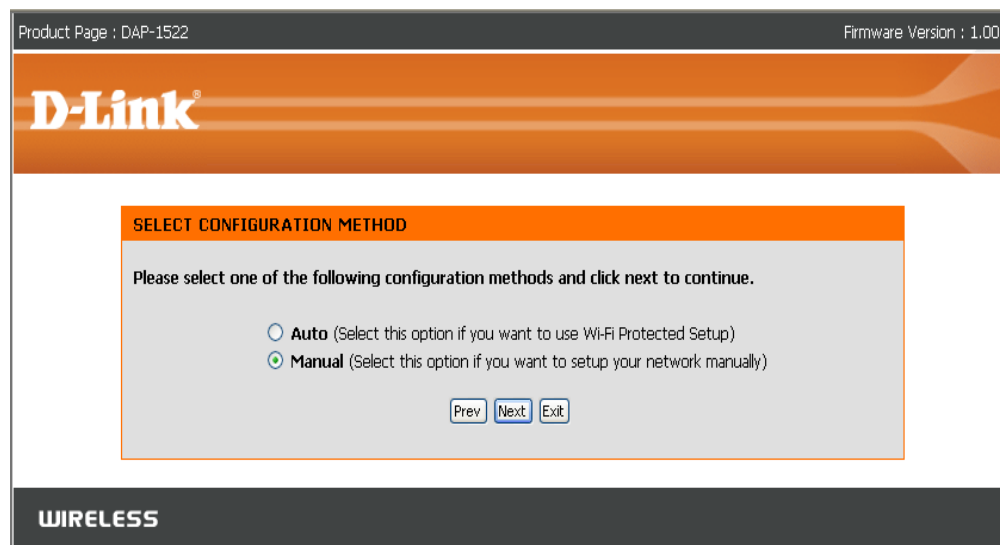

Product Page : DAP-1522 Firmware Version : 1.00

D-Link®

SELECT CONFIGURATION METHOD

Please select one of the following configuration methods and click next to continue.

☐ **Auto** (Select this option if you want to use Wi-Fi Protected Setup)


☒ **Manual** (Select this option if you want to setup your network manually)

Prev Next Exit

WIRELESS

Enter the Wireless Network Name of the AP or click the Site Survey button to find the AP.

Click Next to continue on to page 50.

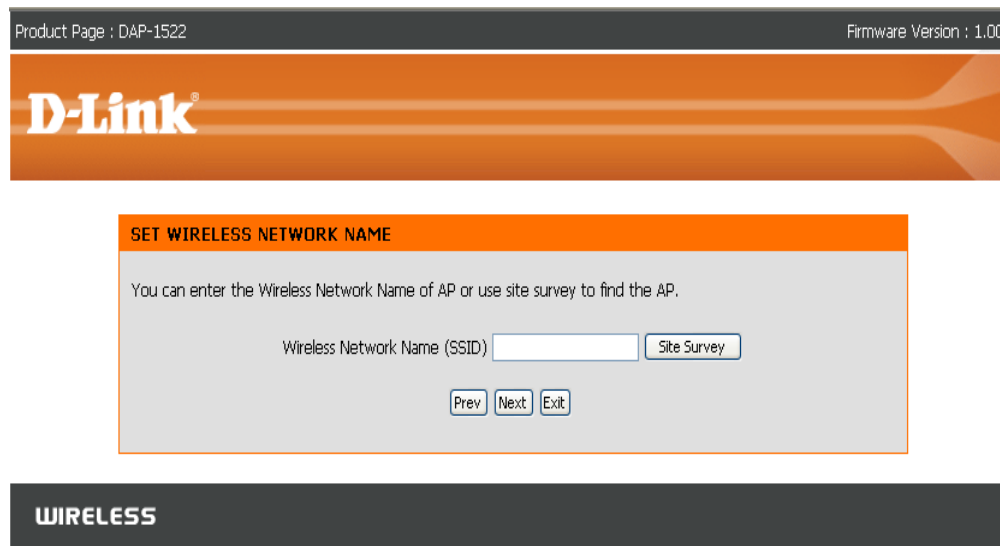

Product Page : DAP-1522 Firmware Version : 1.00

D-Link®

SET WIRELESS NETWORK NAME

You can enter the Wireless Network Name of AP or use site survey to find the AP.


Wireless Network Name (SSID) Site Survey

Prev Next Exit


WIRELESS

If you clicked on Site Survey, the following screen will be displayed.

Find your access point from the list and click Connect to complete the Setup Wizard.

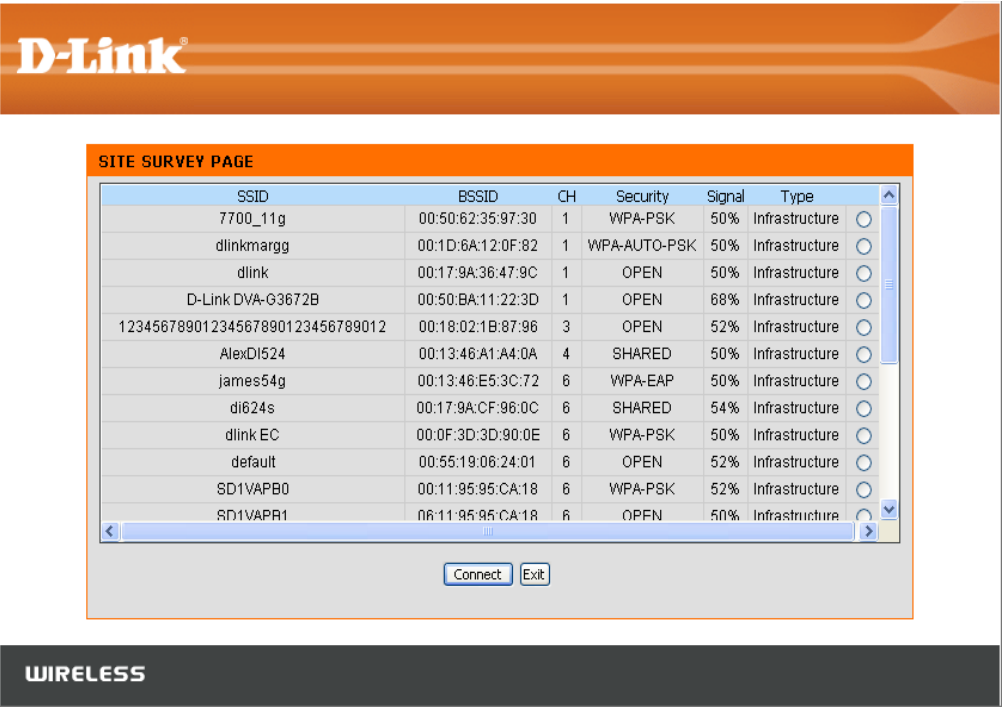

Choose which Security Mode you want to use and click Next to continue.

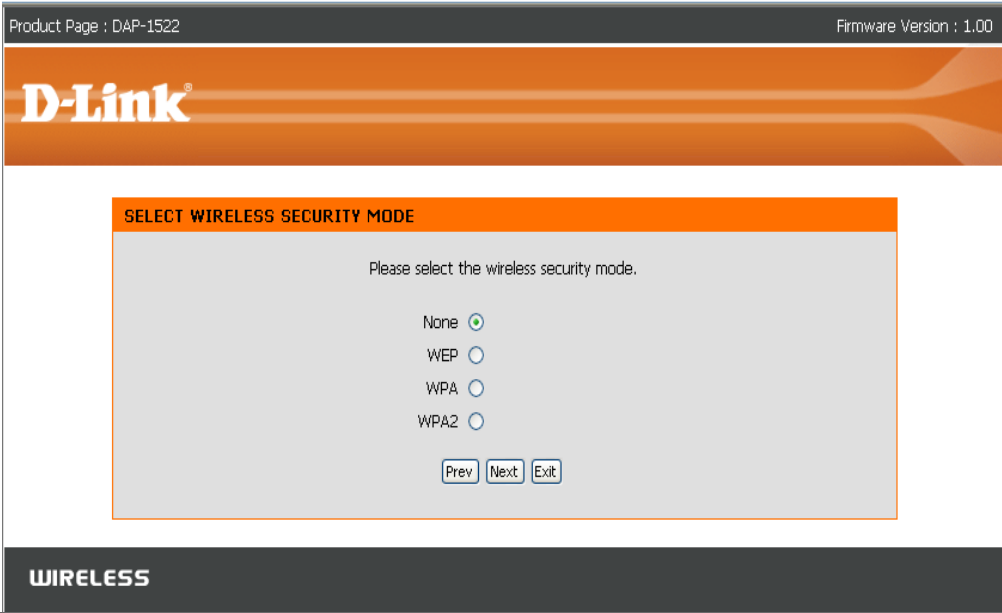

If you choose WEP, enter the wireless security password and click Next to complete the Setup Wizard.

Product Page : DAP-1522

Firmware Version : 1.00

D-Link®

SET YOUR WIRELESS SECURITY PASSWORD

Please enter the wireless security password to establish wireless connection.

Key Type:

Key Size:

Network Key :

WIRELESS

If you choose WPA, enter the WPA Personal Passphrase and click Next to complete the Setup Wizard.

Product Page : DAP-1522

Firmware Version : 1.00

D-Link®

SET YOUR WPA PERSONAL PASSPHRASE


Please enter the WPA personal passphrase to establish wireless connection.

WPA Personal Passphrase :

(8 to 63 characters)

WIRELESS

If you choose WPA2, enter the WPA2 Personal Passphrase and click Next to complete the Setup Wizard.

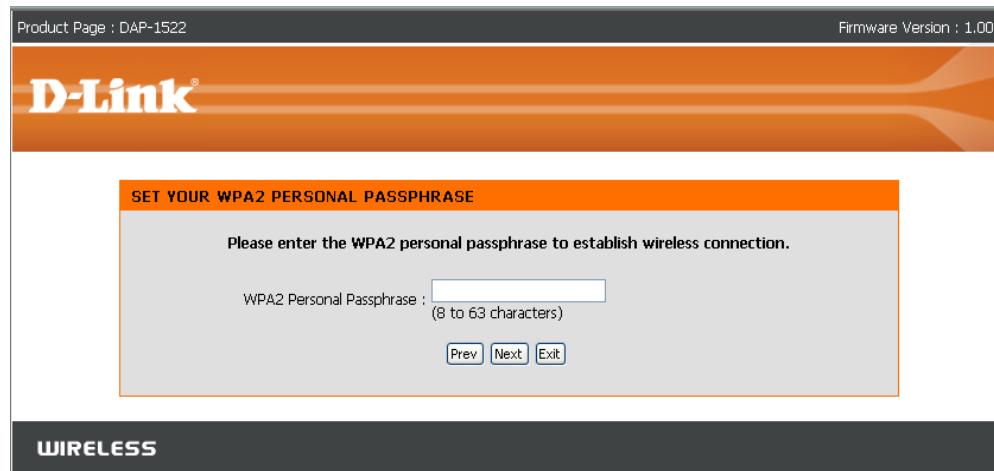

Product Page : DAP-1522 Firmware Version : 1.00

D-Link®


SET YOUR WPA2 PERSONAL PASSPHRASE

Please enter the WPA2 personal passphrase to establish wireless connection.

WPA2 Personal Passphrase :
(8 to 63 characters)

WIRELESS

The following screen opens to indicate that you have successfully saved your new settings.

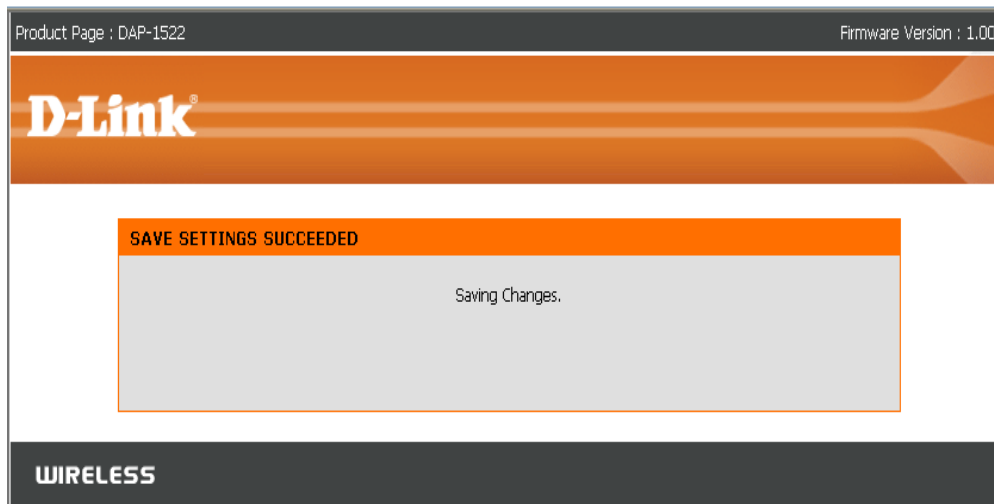

Product Page : DAP-1522 Firmware Version : 1.00

D-Link®

SAVE SETTINGS SUCCEEDED

Saving Changes.

WIRELESS

Wireless

Wireless Mode: Select Infrastructure to connect to a wireless (AP) Access Point, select Ad-hoc to connect to another bridge or wireless station.

Site Survey: A function that looks for available wireless networks.

Enable Wireless: Tick the check box to enable the wireless function. If you do not want to use wireless, uncheck the box to disable all the wireless functions.

Wireless Network Name: Service Set Identifier (SSID) is the name of your wireless network. Create a name using up to 32 characters. The SSID is case-sensitive.

802.11 Band The options include 2.4GHz, 5GHz, and 2.4GHz/5GHz. This option is unavailable in Bridge Mode.

802.11 Mode: If all of the wireless devices in your wireless network can connect in the same transmission mode, you can improve performance slightly by choosing the appropriate "Only" mode. If you have some devices that use a different transmission mode, choose the appropriate "Mixed" mode. This option is unavailable in Bridge Mode.

Enable Auto Channel Scan: The Auto Channel Scan setting is used to allow the DAP-1522 to choose the channel with the least amount of interference. This option is unavailable in Bridge Mode.

Wireless Channel: Indicates the channel setting for the DAP-1522. The Channel can be changed to fit the channel setting for an existing wireless network or to customize the wireless network. This option is unavailable in Bridge Mode.

Transmission Rate: Select the transmit rate. It is strongly suggested to select Best (automatic) for best performance. This option is unavailable in Bridge Mode.

Channel Width: Select the Channel Width:
 Auto 20/40 - Select if you are using both 802.11n and non-802.11n wireless devices.
 20MHz - Select if you are not using any 802.11n wireless clients.

The screenshot shows the D-Link DAP-1522 Web UI. The top navigation bar includes tabs for SETUP, ADVANCED, MAINTENANCE, STATUS, and HELP. The left sidebar shows a menu with WIZARD, WIRELESS, and NETWORK SETTINGS. The main content area is titled 'WIRELESS NETWORK' and contains the following settings:

- WIRELESS NETWORK SETTINGS**
 - Wireless Mode : Bridge Mode [Site Survey](#)
 - Enable Wireless : ☒
 - Wireless Network Name : (Also called the SSID)
 - 802.11 Band : ☐ 2.4GHz ☐ 5GHz ☒ 2.4GHz/5GHz
 - 802.11 Mode :
 - Enable Auto Channel Scan : ☐
 - Wireless Channel :
 - Transmission Rate : (Mbit/s)
 - Channel Width :
 - Visibility Status : ☒ Visible ☐ Invisible
- WIRELESS SECURITY MODE**
 - Security Mode :
- WI-FI PROTECTED SETUP (ALSO CALLED WCN 2.0 IN WINDOWS VISTA)**
 - Enable : ☒

On the right side, there is a 'Helpful Hints...' section with text about selecting the SSID and configuring wireless security.

Visibility Status: This setting determines whether the DAP-1522 will continue to periodically broadcast its presence on the network. This option is unavailable in Bridge Mode.

Security Mode: Refer to page 65 for more information regarding wireless security.

Enable: Enable the Wi-Fi Protected Setup feature.

Network Settings

Static

This section will allow you to change the local network settings of the bridge and to configure the Static settings.

LAN Connection Type: Use the drop-down menu to select Static IP if your ISP assigned you the IP address, subnet mask, gateway, and DNS server addresses. Select Dynamic IP (DHCP) to automatically assign an IP address to the computers on the LAN/private network.

Access Point IP Address: Enter the IP address assigned by your ISP.

Subnet Mask: Enter the Subnet Mask assigned by your ISP.

Default Gateway: Enter the Gateway assigned by your ISP.

Device Name: Enter the Device Name of the AP and click Next to continue. It is recommended to change the Device Name if there is more than one D-Link device within the subnet.

The screenshot displays the D-Link DAP-1522 Web-based Management Interface. The top navigation bar includes the D-Link logo and tabs for SETUP, ADVANCED, MAINTENANCE, STATUS, and HELP. The left sidebar shows a menu with WIZARD, WIRELESS, and NETWORK SETTINGS (which is currently selected). The main content area is titled 'NETWORK SETTINGS' and contains the following sections:

- NETWORK SETTINGS:** A text box explaining that this section is used to configure the internal network settings of the access point and to assign IP addresses to the computers on the network. It notes that the IP Address configured here is the one used to access the Web-based management interface. Below this text are two buttons: 'Save Settings' and 'Don't Save Settings'.
- LAN SETTINGS:** A section for configuring the internal network settings of the access point. It includes a text box stating that the IP Address configured here is the one used to access the Web-based management interface. Below this are four fields:
 - LAN Connection Type:** A dropdown menu currently set to 'Static IP'.
 - Access Point IP Address:** A text box containing '192.168.0.50'.
 - Subnet Mask:** A text box containing '255.255.255.0'.
 - Default Gateway:** An empty text box.
- DEVICE NAME (NETBIOS NAME):** A section with a single field:
 - Device Name:** A text box containing 'dlinkap'.

On the right side of the interface, there is a 'Helpful Hints..' section with a link to 'More...'.

DHCP

LAN Connection Type: Select DHCP to automatically obtain an IP address on the LAN/private network.

Device Name: Enter the Device Name of the AP and click Next to continue. It is recommended to change the Device Name if there is more than one D-Link device within the subnet.

D-Link

DAP-1555

WIZARD

WIRELESS

NETWORK SETTINGS

SETUP

ADVANCED

MAINTENANCE

STATUS

HELP

NETWORK SETTINGS

Use this section to configure the internal network settings of your bridge and also to configure the built-in DHCP Server to assign IP addresses to the computers on your network. The IP Address that is configured here is the IP Address that you use to access the Web-based management interface. If you change the IP Address here, you may need to adjust your PC's network settings to access the network again.

Save Settings

Don't Save Settings

LAN SETTINGS

Use this section to configure the internal network settings of your bridge. The IP Address that is configured here is the IP Address that you use to access the Web-based management interface. If you change the IP Address here, you may need to adjust your PC's network settings to access the network again.

LAN Connection Type :

Dynamic IP (DHCP)

DEVICE NAME (NETBIOS NAME)

Device Name:

dlinkap

WIRELESS

Helpful Hints...

If you have a DHCP server on your network, you can select DHCP to get the IP address from a DHCP server.

More...

Advanced

Advanced Wireless

Transmit Power: Set the transmit power of the antennas.

RTS Threshold: This value should remain at its default setting of 2436. If inconsistent data flow is a problem, only a minor modification should be made.

Fragmentation Threshold: The fragmentation threshold, which is specified in bytes, determines whether packets will be fragmented. Packets exceeding the 2346 byte setting will be fragmented before transmission. 2346 is the default setting.

Short GI: Check this box to reduce the guard interval time therefore increasing the data capacity. However, it is less reliable and may create higher data loss.

D-Link

DAP-1522

SETUP ADVANCED MAINTENANCE STATUS HELP

ADVANCED WIRELESS

ADVANCED WIRELESS

If you are not familiar with these Advanced Wireless settings, please read the help section before attempting to modify these settings.

Save Settings Don't Save Settings

ADVANCED WIRELESS SETTINGS

Transmit Power : 100% ▼

RTS Threshold : 2346 (range: 256~2346, default:2346)

Fragmentation Threshold : 2346 (range: 1500~2346, default:2346, even number only)

Short GI : ☒

Helpful Hints..

It is recommended that you leave these parameters at their default values. Adjusting them could limit the performance of your wireless network.

[More...](#)

Tools Admin

This page will allow you to change the Administrator password. Admin has read/write access.

Password: Enter a new password for the Administrator Login Name. The administrator can make changes to the settings.

Verify Password: Enter the same password that you entered in the previous textbox in order to confirm its accuracy.

DAP-1522

ADMIN

TIME

SYSTEM

FIRMWARE

SETUP

ADVANCED

MAINTENANCE

STATUS

HELP

ADMINISTRATOR SETTINGS

The 'admin' accounts can access the management interface. The admin has read/write access and can change passwords.

By default, there is no password configured. It is highly recommended that you create a password to keep your access point secure.

Save Settings

Don't Save Settings

ADMIN PASSWORD

Please enter the same password into both boxes, for confirmation.

Password :

Verify Password :

Helpful Hints..

For security reasons, it is recommended that you change the password for the Admin and User accounts. Be sure to write down the new and passwords to avoid having to reset the access point in case they are forgotten.

More...

Time

The Time Configuration option allows you to configure, update, and maintain the correct time on the internal system clock. From this section you can set the time zone that you are in. Daylight Saving can also be configured to automatically adjust the time when needed.

Time Zone: Select the Time Zone from the drop-down menu.

Daylight Saving: To select Daylight Saving time manually, tick the Enable Daylight Saving check box. Next use the drop-down menu to select a Daylight Saving Offset and then enter a start date and an end date for daylight saving time.

Date and Time: To manually input the time, enter the values in these fields for the Year, Month, Day, Hour, Minute, and Second and then click Save Settings. You can also click the Copy Your Computer's Time Settings button at the bottom of the screen.

The screenshot shows the D-Link DAP-1522 web interface. The top navigation bar includes tabs for SETUP, ADVANCED, MAINTENANCE, STATUS, and HELP. The left sidebar lists menu items: ADMIN, TIME (selected), SYSTEM, and FIRMWARE. The main content area is titled 'TIME' and contains a description of the Time Configuration option. Below this, there are two sections: 'TIME CONFIGURATION' and 'SET THE DATE AND TIME MANUALLY'.

TIME CONFIGURATION

Time : 01/01/2000 10:02:42
 Time Zone : (GMT-08:00) Pacific Time (US & Canada); Tijuana
 Enable Daylight Saving : ☐
 Daylight Saving Offset : -2:00

Daylight Saving Dates :

	Month	Week	Day of Week	Time
DST Start	Jan	1st	Sun	12 am
DST End	Jan	1st	Sun	12 am

SET THE DATE AND TIME MANUALLY

Date And Time : Year 2008 Month Jan Day 3
 Hour 7 Minute 6 Second 21 PM
 Copy Your Computer's Time Settings


System

Save To Local Hard Drive: Use this option to save the current access point configuration settings to a file on the hard disk of the computer you are using. First, click the Save button. You will then see a file dialog, where you can select a location and file name for the settings.

Load From Local Hard Drive: Use this option to load previously saved access point configuration settings. First, use the Browse control to find a previously save file of configuration settings. Then, click the Load button to transfer those settings to the access point.

Restore To Factory Default: This option will restore all configuration settings back to the settings that were in effect at the time the access point was shipped from the factory. Any settings that have not been saved will be lost, including any rules that you have created. If you want to save the current access point configuration settings, use the Save button above.

Reboot The Device: Click to reboot the bridge.

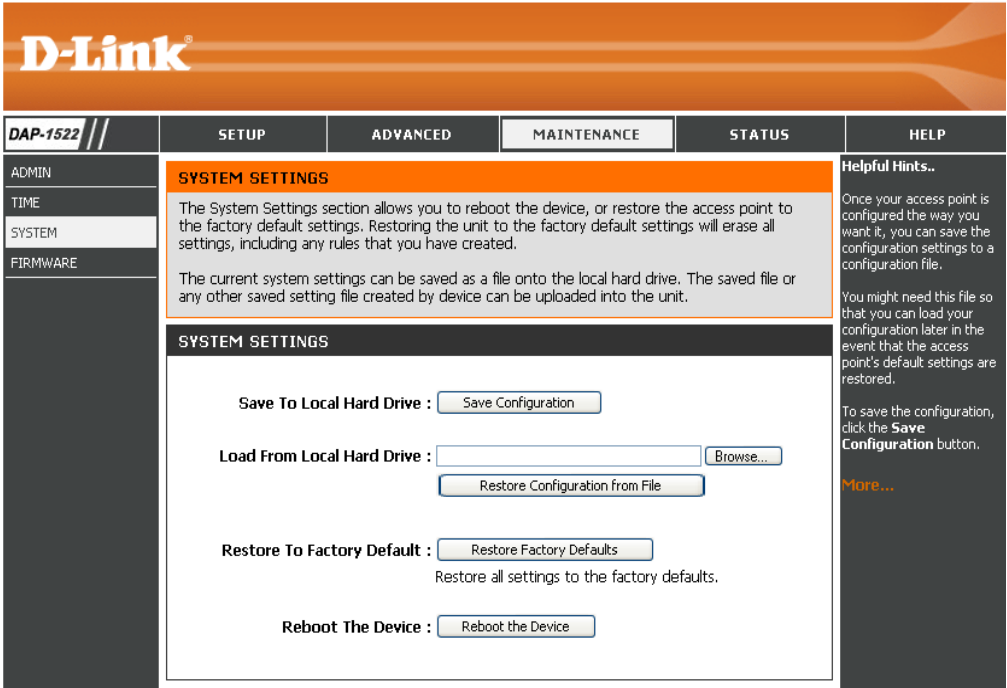

Firmware

You can upgrade the firmware of the access point here. Make sure the firmware you want to use is on the local hard drive of the computer. Click on Browse to locate the firmware file to be used for the update. Please check the D-Link support site for firmware updates at <http://support.dlink.com>. You can download firmware upgrades to your hard drive from the D-Link support site.

Browse: After you have downloaded the new firmware, click Browse to locate the firmware update on your hard drive. Click Upload to complete the firmware upgrade.

Upload: Once you have a firmware update on your computer, use this option to browse for the file and then upload the information into the bridge.

The screenshot shows the D-Link DAP-1522 web interface. The top navigation bar includes tabs for SETUP, ADVANCED, MAINTENANCE (selected), STATUS, and HELP. The left sidebar contains links for ADMIN, TIME, SYSTEM, and FIRMWARE (selected). The main content area is titled 'FIRMWARE' and contains the following sections:

- FIRMWARE:** A section with the text 'Use the Firmware section to install the latest firmware code to improve functionality and performance.' and two buttons: 'Save Settings' and 'Don't Save Settings'.
- FIRMWARE INFORMATION:** A section displaying 'Current Firmware Version : 1.00' and 'Current Firmware Date : 11:44:01 01/23/2008'.
- FIRMWARE UPGRADE:** A section containing a red note: 'Note: Some firmware upgrades reset the configuration options to the factory defaults. Before performing an upgrade, be sure to save the current configuration from the Maintenance -> Admin screen.' Below this is a blue instruction: 'To upgrade the firmware, your PC must have a wired connection to the access point. Enter the name of the firmware upgrade file, and click on the Upload button.' At the bottom, there is an 'Upload' label followed by a text input field, a 'Browse...' button, and an 'Upload' button.

On the right side of the interface, there is a 'Helpful Hints...' section with text about firmware updates and a 'More...' link.

Status

Device Info

This page displays the current information for the DAP-1522. It will display the LAN and wireless LAN information.

General: Displays the access point's time and firmware version.

LAN: Displays the MAC address and the private (local) IP settings for the access point.

Wireless LAN: Displays the wireless MAC address and your wireless settings such as SSID and Channel.

D-Link

DAP-1522 // SETUP ADVANCED MAINTENANCE **STATUS** HELP

DEVICE INFO

LOGS

DEVICE INFORMATION

All of your network connection details are displayed on this page. The firmware version is also displayed here.

GENERAL

Firmware Version : 1.00 , 11:44:01 01/23/2008

LAN

Connection Type : Static IP

MAC Address : 00:1d:6a:12:12:0f:9c

IP Address : 192.168.0.50

Subnet Mask : 255.255.255.0

Default Gateway :

WIRELESS LAN

Wireless Radio : Enabled

Status : disconnected

MAC Address : 00:1d:6a:12:12:0f:9c

Network Name(SSID) : dlink

Channel : 1

Security Type : WPA-Auto- Personal / Auto

Wi-Fi Protected Setup : Enabled / Configured

Helpful Hints...

All of your LAN and WLAN connection details are displayed here.

[More...](#)

Logs

The access point automatically logs (records) events of possible interest in its internal memory. If there isn't enough internal memory for all events, logs of older events are deleted but logs of the latest events are retained. The Logs option allows you to view the access point logs. You can define what types of events you want to view and the level of the events to view. This access point also has external Syslog Server support so you can send the log files to a computer on your network that is running a Syslog utility

What to View: There are three types of logs that can be viewed: System Activity, Wireless Activity, and Notice. Tick the corresponding check box for the type(s) that you want displayed in the log.

Enable Remote Log: Tick this check box and enter a Log Server name or IP address to enable the remote log feature.

Apply Log Settings Now: Click this button to immediately filter the log results so that only the selected options appear in the Log Details section of this screen.

Refresh: Updates the log details on the screen so it displays any recent activity.

Clear: Clears all of the log contents.

Save Log: This option will save the access point to a log file on your computer.

D-Link

DAP-1522 //

SETUP ADVANCED MAINTENANCE STATUS HELP

DEVICE INFO
LOGS

LOGS
View the logs. You can define the event levels to view.

LOG OPTIONS

What to View : ☒ System Activity ☒ Wireless Activity ☒ Notice

Enable Remote Log : ☐ Log Server / IP Address :

Apply Log Settings Now

LOG DETAILS

First Page Last Page Previous Next Clear Refresh Save Log

Page 1 of 2

Time	Priority	Message
Uptime 0 day 09:55:44	[Wireless]	Initiate Wireless success
Uptime 0 day 09:55:39	[Wireless]	Stop Wireless success
Uptime 0 day 09:55:39	[Wireless]	Initiate Wireless success
Uptime 0 day 09:55:38	[Wireless]	Stop Wireless success
Uptime 0 day 09:32:23	[SYSACT]	Web login success from 192.168.0.5
Uptime 0 day 09:32:14	[SYSACT]	Device is operating in Bridge mode!
Uptime 0 day 09:32:07	[Wireless]	Initiate Wireless success
Uptime 0 day 09:32:05	[Wireless]	Stop Wireless success
Uptime 0 day 09:30:05	[SYSACT]	Web login success from 192.168.0.5
Uptime 0 day 09:27:59	[SYSACT]	Web logout from 192.168.0.5

Helpful Hints..
Check the log frequently to detect unauthorized network usage.
More...

Help

DAP-1522

MENU

SETUP

ADVANCED

MAINTENANCE

STATUS

SUPPORT MENU

Setup Help

- WIZARD
- WIRELESS
- Network Settings

Advanced Help

- Advanced Wireless

Maintenance Help

- Admin
- Time
- System
- Firmware

Status Help

- Device Info
- Log

Helpful Hints..

Wireless Security

This section will show you the different levels of security you can use to protect your data from intruders. The DAP-1522 offers the following types of security:

- WPA2 (Wi-Fi Protected Access 2)
- WPA (Wi-Fi Protected Access)
- WEP (Wired Equivalent Privacy)
- WPA2-PSK (Pre-Shared Key)
- WPA-PSK (Pre-Shared Key)

What is WEP?

WEP stands for Wired Equivalent Privacy. It is based on the IEEE 802.11 standard and uses the RC4 encryption algorithm. WEP provides security by encrypting data over your wireless network so that it is protected as it is transmitted from one wireless device to another.

To gain access to a WEP network, you must know the key. The key is a string of characters that you create. When using WEP, you must determine the level of encryption. The type of encryption determines the key length. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange – alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember. The ASCII string is converted to HEX for use over the network. Four keys can be defined so that you can change keys easily.

What is WPA?

WPA, or Wi-Fi Protected Access, is a Wi-Fi standard that was designed to improve the security features of WEP (Wired Equivalent Privacy).

The 2 major improvements over WEP:

- Improved data encryption through the Temporal Key Integrity Protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and, by adding an integrity-checking feature, ensures that the keys haven't been tampered with. WPA2 is based on 802.11i and uses Advanced Encryption Standard (AES) instead of TKIP.
- User authentication, which is generally missing in WEP, through the extensible authentication protocol (EAP). WEP regulates access to a wireless network based on a computer's hardware-specific MAC address, which is relatively simple to be sniffed out and stolen. EAP is built on a more secure public-key encryption system to ensure that only authorized network users can access the network.


WPA-PSK/WPA2-PSK uses a passphrase or key to authenticate your wireless connection. The key is an alpha-numeric password between 8 and 63 characters long. The password can include symbols (!?*&_) and spaces. This key must be the exact same key entered on your wireless bridge or access point.

WPA/WPA2 incorporates user authentication through the Extensible Authentication Protocol (EAP). EAP is built on a more secure public key encryption system to ensure that only authorized network users can access the network.

Configure WEP in AP Mode

It is recommended to enable encryption on your wireless access point before your wireless network adapters. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

1. Log into the web-based configuration by opening a web browser and entering the IP address of the access point (192.168.0.50). Click on Setup and then click Wireless Settings on the left side.
2. Next to Security Mode in the Wireless Security Mode section, select WEP.
3. Next to WEP Key Length in the WEP section, select both the type of input (hexidecimal or ASCII) and the level of encryption (64-bit or 128-bit). Hex - (recommended) Letters A-F and numbers 0-9 are valid.
4. Next to Default WEP Key and the first selection on the drop-down menu, WEP Key 1. Enter a WEP key that you create in the WEP Key value and Verify WEP Key value fields. Make sure you enter this key exactly on all your wireless devices. You may enter up to 4 different keys using the Default WEP Key drop-down menu.
5. Next to Authentication, select Open or Shared Key.
6. Click Save Settings at the top of the window to save your settings. If you are configuring the access point with a wireless adapter, you will lose connectivity until you enable WEP on your adapter and enter the same WEP key as you did on the access point.

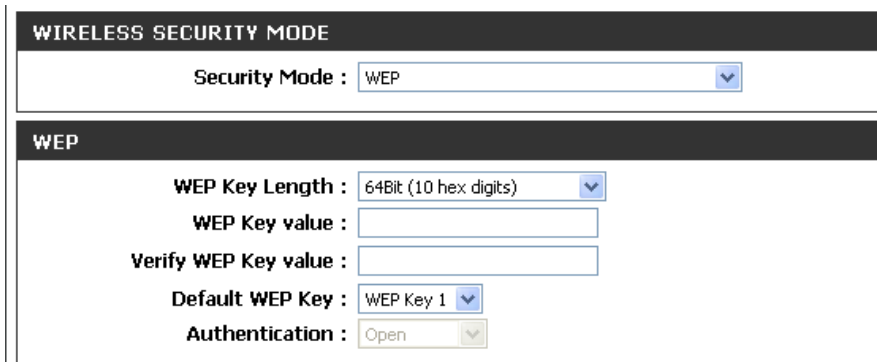

The screenshot displays the 'WIRELESS SECURITY MODE' configuration interface. Under the 'WIRELESS SECURITY MODE' header, the 'Security Mode' is set to 'WEP'. Below this, the 'WEP' section contains the following settings: 'WEP Key Length' is set to '64Bit (10 hex digits)'; 'WEP Key value' and 'Verify WEP Key value' are empty text input fields; 'Default WEP Key' is set to 'WEP Key 1'; and 'Authentication' is set to 'Open'.

Configure WPA-Personal (PSK) in AP Mode

It is recommended to enable encryption on your wireless access point before your wireless network adapters. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

1. Log into the web-based configuration by opening a web browser and entering the IP address of the access point (192.168.0.50). Click on Setup and then click Wireless Settings on the left side.

2. Next to Security Mode in the Wireless Security Mode section, select WPA-Personal.

3. Next to WPA Mode in the WPA section, select Auto (WPA or WPA2), WPA2 Only, or WPA Only. Use Auto if you have wireless clients using both WPA and WPA2.

4. Next to Cipher Type, select TKIP, AES, or TKIP and AES.

5. Next to Group Key Update Interval, enter the amount of time before the group key used for broadcast and multicast data is changed.

6. Next to the Pre-Shared Key section, enter a key in the Passphrase field. The key is entered as a passphrase in ASCII format at both ends of the wireless connection. The passphrase must be between 8-63 characters.

7. Click Save Settings at the top of the window to save your settings. If you are configuring the access point with a wireless adapter, you will lose connectivity until you enable WPA-PSK on your adapter and enter the same passphrase as you did on the access point.

WIRELESS SECURITY MODE	
Security Mode :	<input type="text" value="WPA-Personal"/>
WPA	
WPA Mode :	<input type="text" value="Auto (WPA or WPA2)"/>
Cipher Type :	<input type="text" value="TKIP"/>
Group Key Update Interval :	<input type="text" value="1800"/> (seconds)
PRE-SHARED KEY	
Passphrase :	<input type="text"/>

Configure WPA-Enterprise (RADIUS) in AP Mode

It is recommended to enable encryption on your wireless access point before your wireless network adapters. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

1. Log into the web-based configuration by opening a web browser and entering the IP address of the access point (192.168.0.50). Click on Setup and then click Wireless Settings on the left side.

2. Next to Security Mode in the Wireless Security Mode section, select WPA-Enterprise.

3. Next to WPA Mode in the WPA section, select Auto (WPA or WPA2), WPA2 Only, or WPA Only. Use Auto if you have wireless clients using both WPA and WPA2.

4. Next to Cipher Type, select TKIP, AES, or TKIP and AES

5. Next to Group Key Update Interval, enter the amount of time before the group key used for broadcast and multicast data is changed.

6. Next to RADIUS Server IP Address in the EAP (802.1X) section, enter the IP Address of your RADIUS server.

7. Next to RADIUS Server Port, enter the port you are using with your RADIUS server. 1812 is the default port.

8. Next to RADIUS Server Shared Secret, enter the security key.


9. Click Save Settings at the top of the window to save your settings.

WIRELESS SECURITY MODE	
Security Mode :	<input type="text" value="WPA-Enterprise"/>
WPA	
WPA Mode :	<input type="text" value="Auto (WPA or WPA2)"/>
Cipher Type :	<input type="text" value="TKIP"/>
Group Key Update Interval :	<input type="text" value="1800"/> (seconds)
EAP (802.1X)	
RADIUS Server IP Address :	<input type="text"/>
RADIUS Server Port :	<input type="text" value="1812"/>
RADIUS Server Shared Secret :	<input type="text"/>

Configure WEP in Bridge Mode

It is recommended to enable encryption on your wireless access point before your wireless network adapters. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

1. Log into the web-based configuration by opening a web browser and entering the IP address of the bridge (192.168.0.50). Click on Setup and then click Wireless Settings on the left side.
2. Next to Security Mode in the Wireless Security Mode section, select WEP.
3. Next to WEP Key Length in the WEP section, select both the type of input (hexidecimal or ASCII) and the level of encryption (64-bit or 128-bit). Hex - (recommended) Letters A-F and numbers 0-9 are valid.
4. Next to Default WEP Key and the first selection on the drop-down menu, WEP Key 1. Enter a WEP key that you create in the WEP Key value and Verify WEP Key value fields. Make sure you enter this key exactly on all your wireless devices. You may enter up to 4 different keys using the Default WEP Key drop-down menu.
5. Next to Authentication, select Open or Shared Key.
6. Click Save Settings at the top of the window to save your settings. If you are configuring the access point with a wireless adapter, you will lose connectivity until you enable WEP on your adapter and enter the same WEP key as you did on the access point.

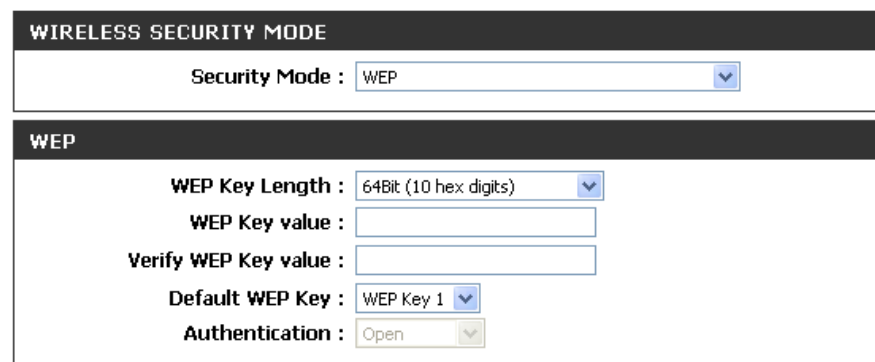

The screenshot displays the 'WIRELESS SECURITY MODE' configuration interface. Under the 'WIRELESS SECURITY MODE' header, the 'Security Mode' is set to 'WEP'. Below this, the 'WEP' section is expanded, showing the following settings: 'WEP Key Length' is set to '64Bit (10 hex digits)'; 'WEP Key value' and 'Verify WEP Key value' are empty text input fields; 'Default WEP Key' is set to 'WEP Key 1' from a dropdown menu; and 'Authentication' is set to 'Open' from a dropdown menu.

Configure WPA-Personal (PSK) in Bridge Mode

It is recommended to enable encryption on your wireless access point before your wireless network adapters. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

1. Log into the web-based configuration by opening a web browser and entering the IP address of the bridge (192.168.0.50). Click on Setup and then click Wireless Settings on the left side.

2. Next to Security Mode in the Wireless Security Mode section, select WPA-Personal.

3. Next to WPA Mode in the WPA section, select Auto (WPA or WPA2), WPA2 Only, or WPA Only. Use Auto if you have wireless clients using both WPA and WPA2.

4. Next to Cipher Type, select TKIP, AES, or TKIP and AES.

5. Next to Group Key Update Interval, enter the amount of time before the group key used for broadcast and multicast data is changed.

6. Next to the Pre-Shared Key section, enter a key in the Passphrase field. The key is entered as a passphrase in ASCII format at both ends of the wireless connection. The passphrase must be between 8-63 characters.

7. Click Save Settings at the top of the window to save your settings. If you are configuring the access point with a wireless adapter, you will lose connectivity until you enable WPA-PSK on your adapter and enter the same passphrase as you did on the access point.

WIRELESS SECURITY MODE	
Security Mode :	<input type="text" value="WPA-Personal"/>
WPA	
WPA Mode :	<input type="text" value="Auto (WPA or WPA2)"/>
Cipher Type :	<input type="text" value="TKIP"/>
Group Key Update Interval :	<input type="text"/> (seconds)
PRE-SHARED KEY	
Passphrase :	<input type="text"/>

Connect to a Wireless Network Using Windows® XP

Windows® XP users may use the built-in wireless utility (Zero Configuration Utility). The following instructions are for Service Pack 2 users. If you are using another company's utility or Windows® 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows® XP utility as seen below.




If you receive the Wireless Networks Detected bubble, click on the center of the bubble to access the utility.

or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select View Available Wireless Networks.

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the Connect button.


If you get a good signal but cannot access the Internet, check you TCP/IP settings for your wireless adapter. Refer to the Networking Basics section in this manual for more information.

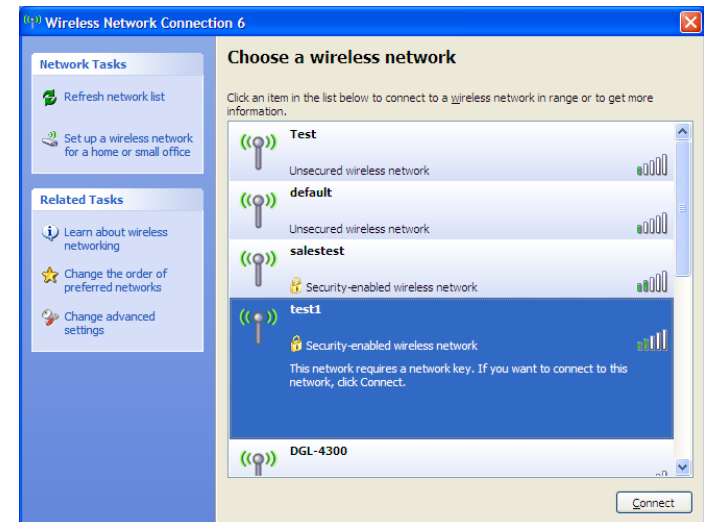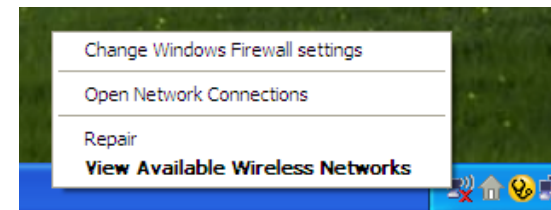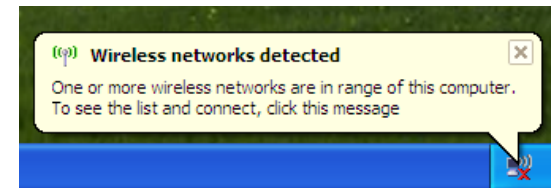


Connect to a Wireless Network Using Windows® Vista

Windows® Vista users may use the convenient, built-in wireless utility. Follow these instructions:


From the Start menu, go to Control Panel, and then click on Network and Sharing Center.

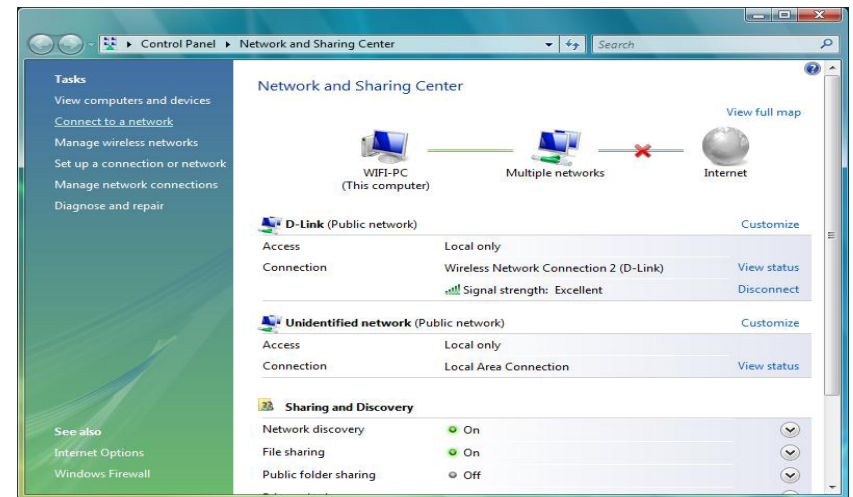


The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) under Select a network to connect to and then click the Connect button.

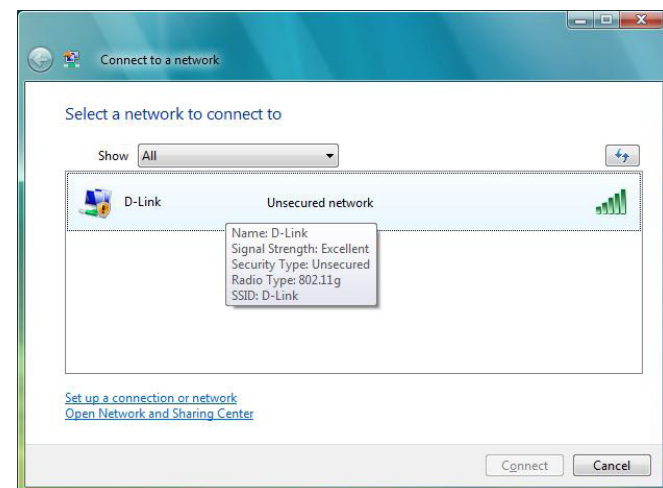

Click Connect Anyway to continue.

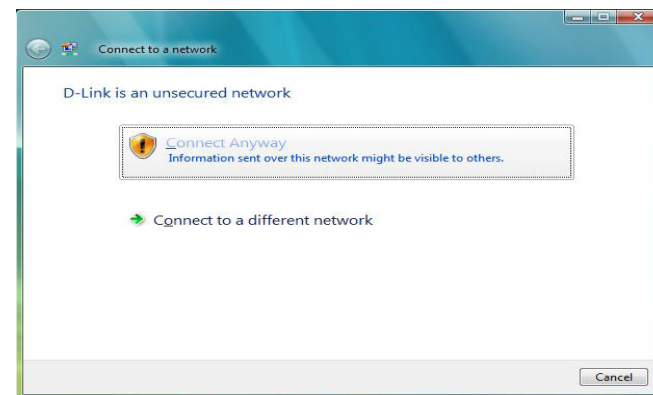


The utility will display the following window to indicate a connection is being made.

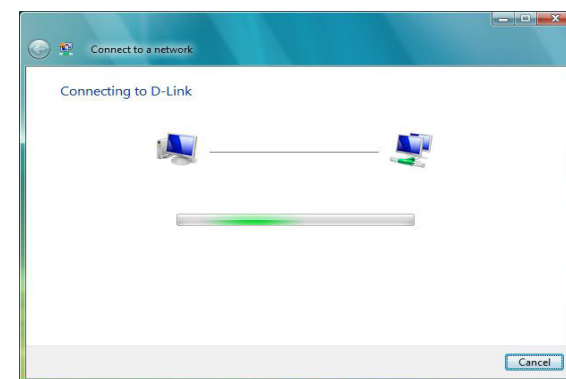


The final window indicates the establishment of a successful connection.

The next two pages display the windows used to connect to either a WEP or a WPA-PSK wireless network.

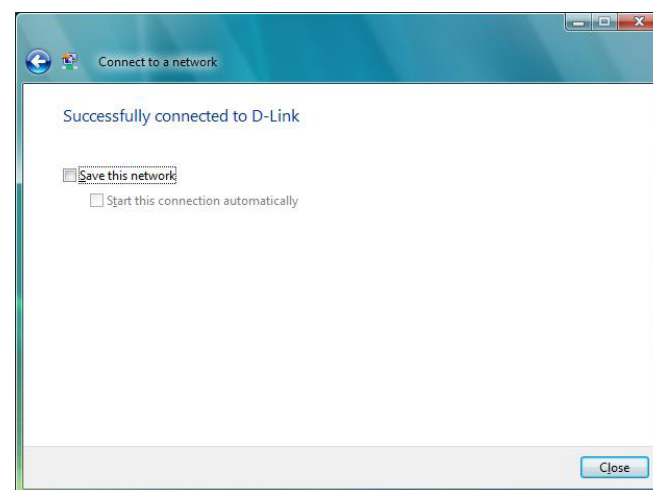


Windows® Vista users that want to connect to a wireless network using WEP security should follow these simple instructions:

Click on a network (displayed using the SSID) using WEP under Select a network to connect to and then click the Connect button.

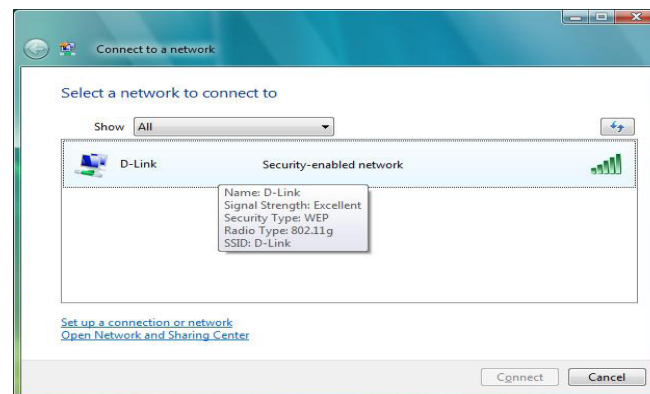


Enter the appropriate security key or passphrase in the field provided and then click the Connect button.

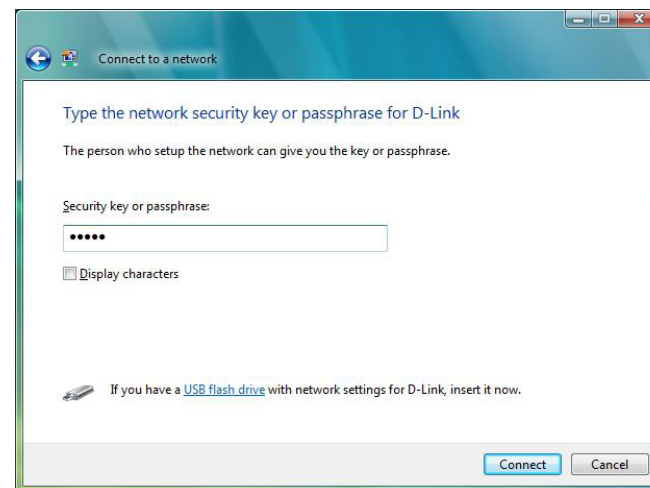


Windows® Vista users that want to connect to a wireless network using WPA-PSK security should follow these simple instructions:

Click on a network (displayed using the SSID) using WPA-PSK under Select a network to connect to and then click the Connect button.

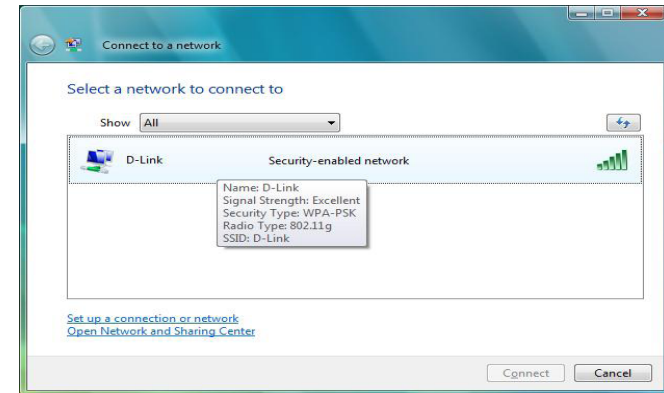


Enter the appropriate security key or passphrase in the field provided and then click the Connect button.

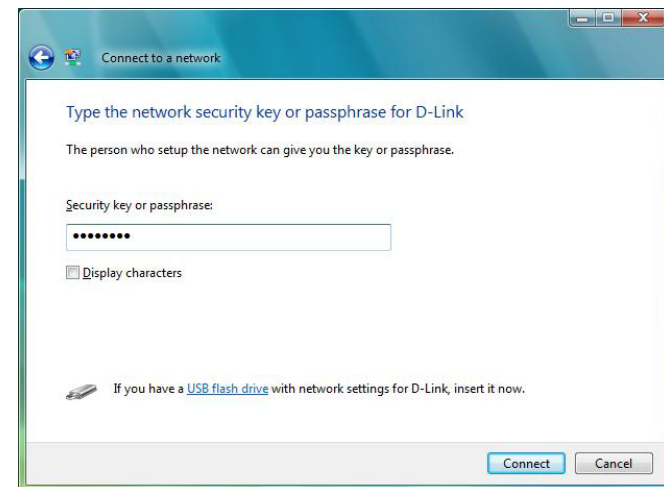


Configure WEP

It is recommended to enable WEP on your wireless bridge or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WEP key being used.

1. Open the Windows® XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select View Available Wireless Networks.

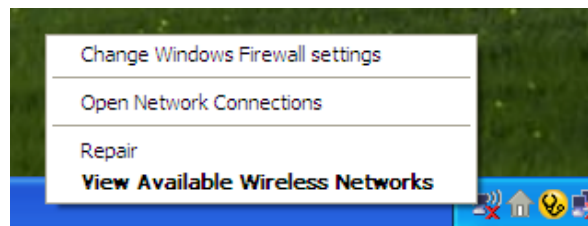


2. Highlight the wireless network (SSID) you would like to connect to and click Connect.

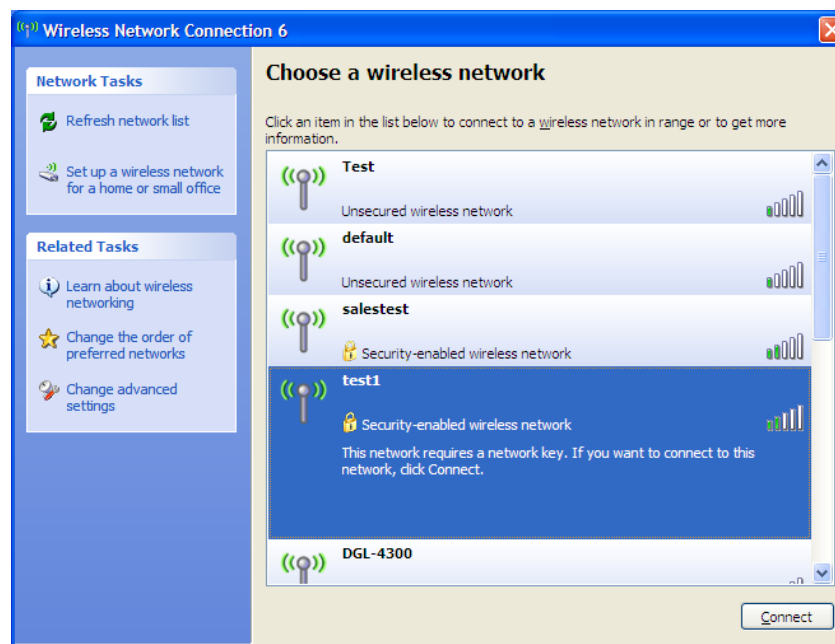

3. The Wireless Network Connection box will appear. Enter the same WEP key that is on your access point and click Connect.


It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WEP settings are correct. The WEP key must be exactly the same as on the wireless access point.

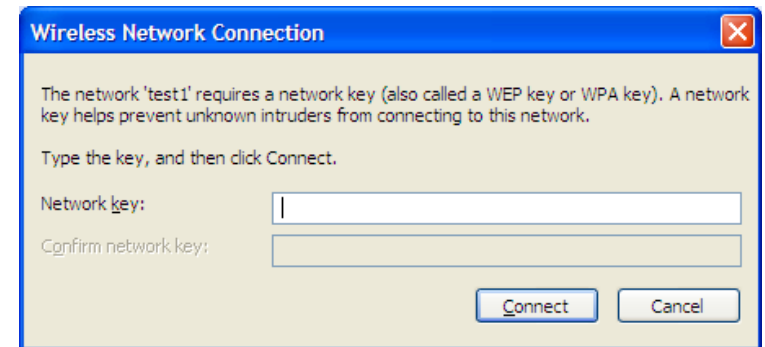


Configure WPA-PSK

It is recommended to enable WEP on your wireless bridge or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WEP key being used.

1. Open the Windows® XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select View Available Wireless Networks.

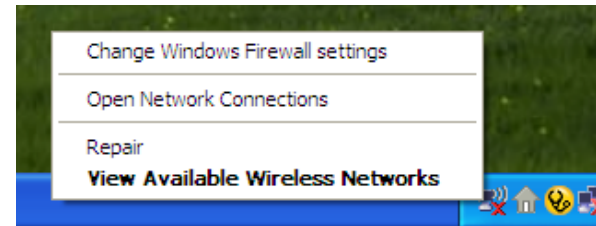


2. Highlight the wireless network (SSID) you would like to connect to and click Connect.

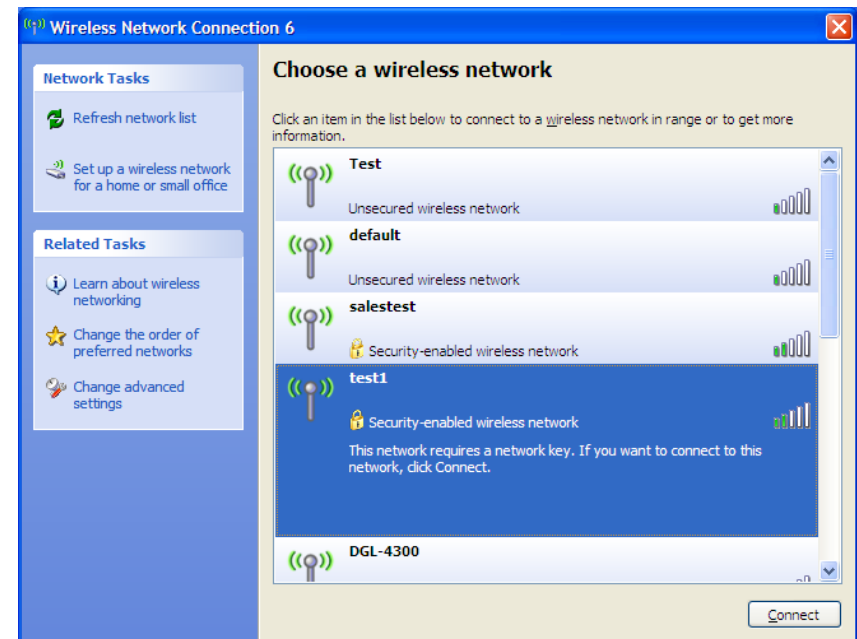

3. The Wireless Network Connection box will appear. Enter the WPA-PSK passphrase and click Connect.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WPA-PSK settings are correct. The WPA-PSK passphrase must be exactly the same as on the wireless access point.

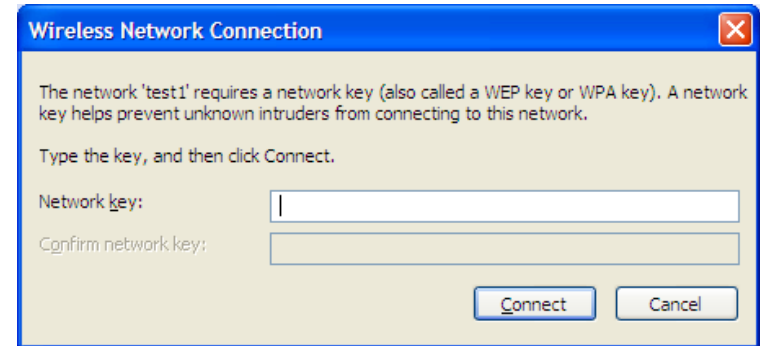

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DAP-1522. Read the following descriptions if you are having problems. (The examples below are illustrated in Windows® XP. If you have a different operating system, the screenshots on your computer will look similar to the following examples.)

1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link access point (192.168.0.50 for example), you are not connecting to a website on the Internet or have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:

- Internet Explorer 6.0 or higher
 - Netscape 8 or higher
 - Mozilla 1.7.12 (5.0) or higher
 - Opera 8.5 or higher
 - Safari 1.2 or higher (with Java 1.3.1 or higher)
 - Camino 0.8.4 or higher
 - Firefox 1.5 or higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.
- Disable any internet security software running on the computer. Software firewalls such as Zone Alarm, Black Ice, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:

- Go to Start > Settings > Control Panel. Double-click the Internet Options Icon. From the Security tab, click the button to restore the settings to their defaults.
 - Click the Connection tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click OK.
 - Go to the Advanced tab and click the button to restore these settings to their defaults. Click OK three times.
 - Close your web browser (if open) and open it.
- Access the web management. Open your web browser and enter the IP address of your D-Link access point in the address bar. This should open the login page for your the web management.
 - If you still cannot access the configuration, unplug the power to the access point for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

2. What can I do if I forgot my password?

If you forgot your password, you must reset your access point. Unfortunately this process will change all your settings back to the factory defaults.

To reset the access point, locate the reset button (hole) on the rear panel of the unit. With the access point powered on, use a paperclip to hold the button down for 10 seconds. Release the button and the access point will go through its reboot process. Wait about 30 seconds to access the access point. The default IP address is 192.168.0.1. When logging in, the username is admin and leave the password box empty.

3. Why can't I connect to certain sites or send and receive emails when connecting through my access point?

If you are having a problem sending or receiving email, or connecting to secure sites such as eBay, banking sites, and Hotmail, we suggest lowering the MTU in increments of ten (Ex. 1492, 1482, 1472, etc).

Note: AOL DSL+ users must use MTU of 1400.

To find the proper MTU Size, you'll have to do a special ping of the destination you're trying to go to. A destination could be another computer, or a URL.

- Click on Start and then click Run.
- Windows® 95, 98, and Me users type in command (Windows® NT, 2000, and XP users type in cmd) and press Enter (or click OK).
- Once the window opens, you'll need to do a special ping. Use the following syntax:

ping [url] [-f] [-l] [MTU value]

Example: ping yahoo.com -f -l 1472

```
C:\>ping yahoo.com -f -l 1482
Pinging yahoo.com [66.94.234.13] with 1482 bytes of data:
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Ping statistics for 66.94.234.13:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
C:\>ping yahoo.com -f -l 1472
Pinging yahoo.com [66.94.234.13] with 1472 bytes of data:
Reply from 66.94.234.13: bytes=1472 time=93ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=109ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=125ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=203ms TTL=52
Ping statistics for 66.94.234.13:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 93ms, Maximum = 203ms, Average = 132ms
C:\>
```

You should start at 1472 and work your way down by 10 each time. Once you get a reply, go up by 2 until you get a fragmented packet. Take that value and add 28 to the value to account for the various TCP/IP headers. For example, let's say that 1452 was the proper value, the actual MTU size would be 1480, which is the optimum for the network we're working with ($1452+28=1480$).

Once you find your MTU, you can now configure your access point with the proper MTU size.

To change the MTU rate on your access point follow the steps below:

- Open your browser, enter the IP address of your access point (192.168.0.50) and click OK.
- Enter your username (admin) and password (blank by default). Click OK to enter the web configuration page for the device.
- Click on Setup and then click Manual Configure.
- To change the MTU enter the number in the MTU field and click Save Settings to save your settings.
- Test your email. If changing the MTU does not resolve the problem, continue changing the MTU in increments of ten.

Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link wireless family of products will allow you to securely access the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A Wireless Access point is a device used to provide this link.

What is Wireless?

Wireless or Wi-Fi technology is another way of connecting your computer to the network without using wires. Wi-Fi uses radio frequency to connect wirelessly, so you have the freedom to connect computers anywhere in your home or office network.

Why D-Link Wireless?

D-Link is the worldwide leader and award winning designer, developer, and manufacturer of networking products. D-Link delivers the performance you need at a price you can afford. D-Link has all the products you need to build your network.

How does wireless work?

Wireless works similar to how cordless phone work, through radio signals to transmit data from one point A to point B. But wireless technology has restrictions as to how you can access the network. You must be within the wireless network range area to be able to connect your computer. There are two different types of wireless networks Wireless Local Area Network (WLAN), and Wireless Personal Area Network (WPAN).

Wireless Local Area Network (WLAN)

In a wireless local area network, a device called an Access Point (AP) connects computers to the network. The access point has a small antenna attached to it, which allows it to transmit data back and forth over radio signals. With an indoor access point as seen in the picture, the signal can travel up to 300 feet. With an outdoor access point the signal can reach out up to 30 miles to serve places like manufacturing plants, industrial locations, college and high school campuses, airports, golf courses, and many other outdoor venues.

Wireless Personal Area Network (WPAN)

Bluetooth is the industry standard wireless technology used for WPAN. Bluetooth devices in WPAN operate in a range up to 30 feet away.

Compared to WLAN the speed and wireless operation range are both less than WLAN, but in return it doesn't use nearly as much power which makes it ideal for personal devices, such as mobile phones, PDAs, headphones, laptops, speakers, and other devices that operate on batteries.

Who uses wireless?

Wireless technology has become so popular in recent years that almost everyone is using it, whether it's for home, office, business, D-Link has a wireless solution for it.

Home

- Gives everyone at home broadband access
- Surf the web, check email, instant message, and etc
- Gets rid of the cables around the house
- Simple and easy to use

Small Office and Home Office

- Stay on top of everything at home as you would at office
- Remotely access your office network from home
- Share Internet connection and printer with multiple computers
- No need to dedicate office space

Where is wireless used?

Wireless technology is expanding everywhere not just at home or office. People like the freedom of mobility and it's becoming so popular that more and more public facilities now provide wireless access to attract people. The wireless connection in public places is usually called "hotspots".

Using a D-Link Cardbus Adapter with your laptop, you can access the hotspot to connect to Internet from remote locations like: Airports, Hotels, Coffee Shops, Libraries, Restaurants, and Convention Centers.

Wireless network is easy to setup, but if you're installing it for the first time it could be quite a task not knowing where to start. That's why we've put together a few setup steps and tips to help you through the process of setting up a wireless network.

Tips

Here are a few things to keep in mind, when you install a wireless network.

Centralize your access point or Access Point

Make sure you place the bridge/access point in a centralized location within your network for the best performance. Try to place the bridge/access point as high as possible in the room, so the signal gets dispersed throughout your home. If you have a two-story home, you may need a repeater to boost the signal to extend the range.

Eliminate Interference

Place home appliances such as cordless telephones, microwaves, and televisions as far away as possible from the bridge/access point. This would significantly reduce any interference that the appliances might cause since they operate on same frequency.

Security

Don't let your next-door neighbors or intruders connect to your wireless network. Secure your wireless network by turning on the WPA or WEP security feature on the access point. Refer to product manual for detail information on how to set it up.

Wireless Modes

There are basically two modes of networking:

- Infrastructure – All wireless clients will connect to an access point or wireless bridge.
- Ad-Hoc – Directly connecting to another computer, for peer-to-peer communication, using wireless network adapters on each computer, such as two or more DAP-1522 wireless network Cardbus adapters.

An Infrastructure network contains an Access Point or wireless bridge. All the wireless devices, or clients, will connect to the wireless bridge or access point.

An Ad-Hoc network contains only clients, such as laptops with wireless cardbus adapters. All the adapters must be in Ad-Hoc mode to communicate.

Networking Basics

Check your IP address

After you install your new D-Link adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.


Click on Start > Run. In the run box type cmd and click OK.

At the prompt, type ipconfig and press Enter.

This will display the IP address, subnet mask, and the default gateway of your adapter.

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your access point. Some firewall software programs may block a DHCP request on newly installed adapters.

If you are connecting to a wireless network at a hotspot (e.g. hotel, coffee shop, airport), please contact an employee or administrator to verify their wireless network settings.

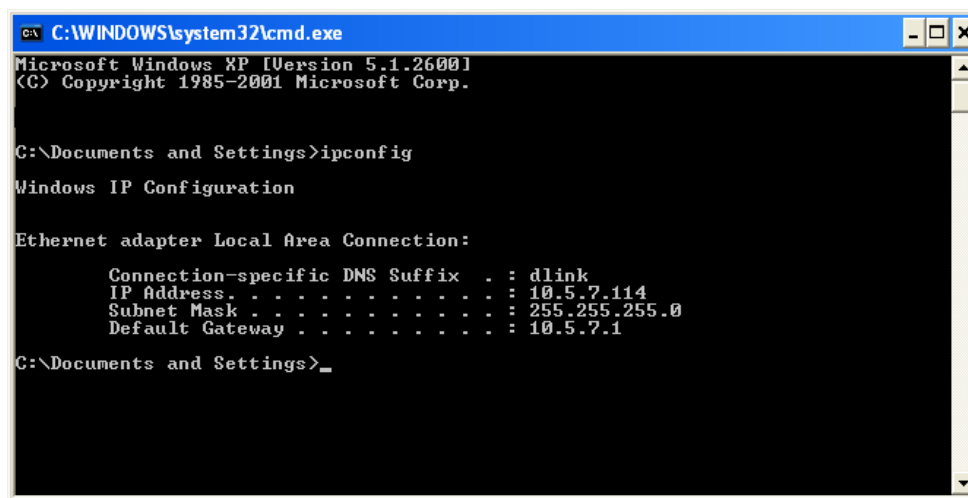

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address. . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>
```


Statically Assign an IP address

If you are not using a DHCP capable gateway/access point, or you need to assign a static IP address, please follow the steps below:

Step 1

Windows® XP - Click on Start > Control Panel > Network Connections.

Windows® 2000 - From the desktop, right-click My Network Places > Properties.

Step 2

Right-click on the Local Area Connection which represents your D-Link network adapter and select Properties.

Step 3

Highlight Internet Protocol (TCP/IP) and click Properties.

Step 4


Click Use the following IP address and enter an IP address that is on the same subnet as your network or the LAN IP address on your access point.

Example: If the access point's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your access point (192.168.0.1).

Set Primary DNS the same as the LAN IP address of your access point (192.168.0.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.

Step 5

Click OK twice to save your settings.

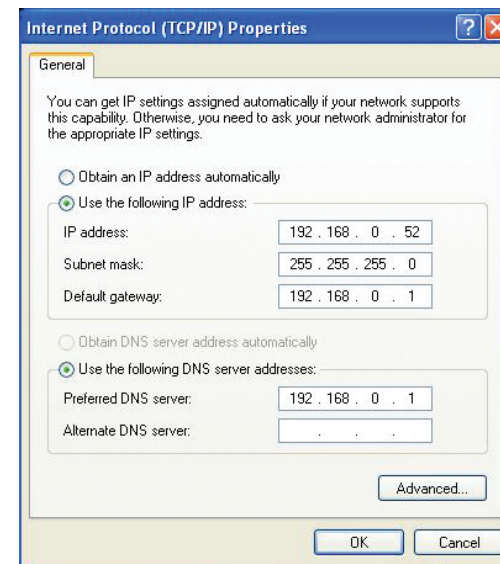

Technical Specifications

Standards

- IEEE 802.11n (draft)
- IEEE 802.11a
- IEEE 802.11g
- IEEE 802.11b
- IEEE 802.3
- IEEE 802.3u

Security

- WPA-Personal
- WPA2-Personal
- WPA-Enterprise
- WPA2-Enterprise
- 64/128-bit WEP

Wireless Signal Rates¹

- | | |
|-----------|-----------|
| • 300Mbps | • 108Mbps |
| • 54Mbps | • 48Mbps |
| • 36Mbps | • 24Mbps |
| • 18Mbps | • 12Mbps |
| • 11Mbps | • 9Mbps |
| • 6Mbps | • 5.5Mbps |
| • 2Mbps | • 1Mbps |

Maximum Operating Voltage
3.3V

Maximum Power Consumption
1435 mA

Modulation

- 11b: DQPSK, DBPSK and CCK
- 11a/g: BPSK, QPSK, 16QAM, 64QAM, OFDM
- 11n: BPSK, QPSK, 16QAM, 64QAM, OFDM, MCS

Frequency Range²

- 2.4GHz to 2.483GHz • 5.15GHz~5.825GHz³

LEDs

- | | |
|---------|----------|
| • Power | • Bridge |
| • AP | • LAN |

Operating Temperature
32°F to 104°F (0°C to 40°C)

Humidity

90% maximum (non-condensing)

Safety & Emissions

- | | |
|-------|----------|
| • FCC | • CE |
| • IC | • C-Tick |
| • CSA | |

Dimensions

- L = 5.75 inches
- W = 4.5 inches
- H = 1.25 inches

¹Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and Draft 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

²Range varies depending on country's regulation.

³The DAP-1522 doesn't include 5.25-5.35GHz & 5.47~5.725GHz.

Contacting Technical Support

U.S. and Canadian customers can contact D-Link technical support through our web site or by phone.

Before you contact technical support, please have the following ready:

- Model number of the product (e.g. DAP-1522)
- Hardware Revision (located on the label on the bottom of the access point (e.g. rev A1))
- Serial Number (s/n number located on the label on the bottom of the access point).

You can find software updates and user documentation on the D-Link website as well as frequently asked questions and answers to technical issues.

For customers within the United States:

Phone Support:
(877) 453-5465

Internet Support:
<http://support.dlink.com>

For customers within Canada:

Phone Support:
(800) 361-5265

Internet Support:
<http://support.dlink.com>

Warranty

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited Warranty:

- Only to the person or entity that originally purchased the product from D-Link or its authorized reseller or distributor, and
- Only for products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, or addresses with an APO or FPO.

Limited Warranty:

D-Link warrants that the hardware portion of the D-Link product described below ("Hardware") will be free from material defects in workmanship and materials under normal use from the date of original retail purchase of the product, for the period set forth below ("Warranty Period"), except as otherwise stated herein.

- Hardware (excluding power supplies and fans): One (1) year
- Power supplies and fans: One (1) year
- Spare parts and spare kits: Ninety (90) days

The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund the actual purchase price paid. Any repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement hardware need not be new or have an identical make, model or part. D-Link may, at its option, replace the defective Hardware or any part thereof with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement hardware will be warranted for the remainder of the original Warranty Period or ninety (90) days, whichever is longer, and is subject to the same limitations and exclusions. If a material defect is incapable of correction, or if D-Link determines that it is not practical to repair or replace the defective Hardware, the actual price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware or part thereof that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty:

D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Software Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Software Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. The customer's sole and exclusive remedy and the entire liability of D-Link and its suppliers under this Limited Warranty will be, at D-Link's option, to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund the portion of the actual purchase price paid that is attributable to the Software. Except as otherwise agreed by DLink in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Replacement Software will be warranted for the remainder of the original Warranty Period and is subject to the same limitations and exclusions. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty:

The Limited Warranty provided hereunder for Hardware and Software portions of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim:

The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow DLink to confirm the same, along with proof of purchase of the product (such as a copy of the dated purchase invoice for the product) if the product is not registered.
- The customer must obtain a Case ID Number from D-Link Technical Support at 1-877-453-5465, who will attempt to assist the customer in resolving any suspected defects with the product. If the product is considered defective, the customer must obtain a Return Material Authorization ("RMA") number by completing the RMA form and entering the assigned Case ID Number at <https://rma.dlink.com/>.

- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. DLink will only replace the defective portion of the product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer and shipped to D-Link Systems, Inc., 17595 Mt. Herrmann, Fountain Valley, CA 92708. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link. Return shipping charges shall be prepaid by D-Link if you use an address in the United States, otherwise we will ship the product to you freight collect. Expedited shipping is available upon request and provided shipping charges are prepaid by the customer. D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered:

The Limited Warranty provided herein by D-Link does not cover:

Products that, in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; and Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product.

While necessary maintenance or repairs on your Product can be performed by any company, we recommend that you use only an Authorized D-Link Service Office. Improper or incorrectly performed maintenance or repair voids this Limited Warranty.

Disclaimer of Other Warranties:

EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT.

IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO THE DURATION OF THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability:

TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NONCONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

Governing Law:

This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This Limited Warranty provides specific legal rights and you may also have other rights which vary from state to state.

Trademarks:

D-Link is a registered trademark of D-Link Corporation/D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

Copyright Statement:

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice.

Copyright ©2008 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning:

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

For operation within 5.15 ~ 5.25GHz frequency range, it is restricted to indoor environment.

IEEE 802.11b or 802.11g operation of this product in the U.S.A. is firmware-limited to channels 1 through 11.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada Statement

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device

This device has been designed to operate with an antenna having a maximum gain of 2dBi.

Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the EIRP is not more than required for successful communication.

Caution:

The device for the band 5150-5250 MHz is only for indoor usage to reduce potential for harmful interference to co-channel mobile satellite systems.

Because high power radars are allocated as primary users (meaning they have priority) in 5250-5350 MHz and 5650-5850 MHz, these radars could cause interference and/or damage to license exempt LAN devices.

IMPORTANT NOTE:

IC Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.

Registration



Product registration is entirely voluntary and failure to complete or return this form will not diminish your warranty rights.

Version 1.0
February 1, 2008