



HP Pavilion g6-1b79dx RAM Replacement

Removing your laptop's RAM.

Written By: Rachel Gallegos



INTRODUCTION

This is a guide to remove the RAM in your laptop.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery



- Flip the computer so the bottom is facing up with the battery away from you.
- ⚠ Turn off the computer and disconnect the charger.

Step 2

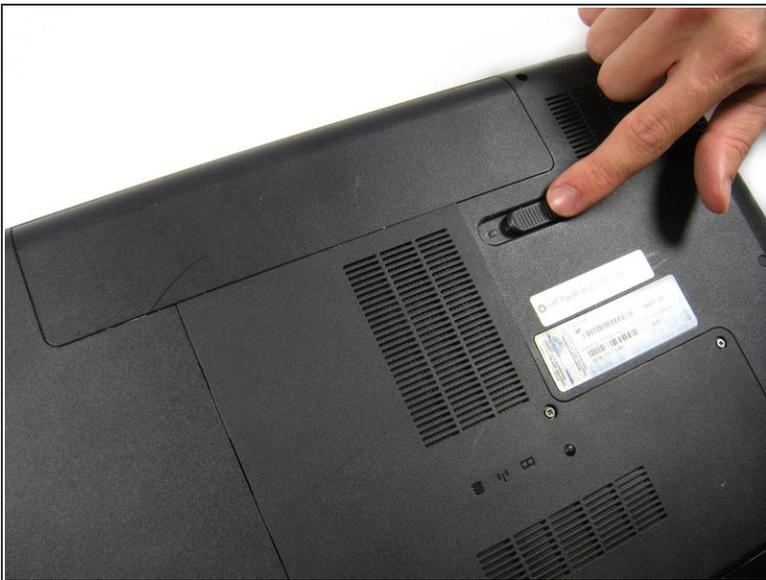


- Slide the battery switch to the left until the battery unlatches from the base of the laptop.

Step 3




- Lift the battery from its compartment away from the laptop.

Step 4 — Bottom Panel

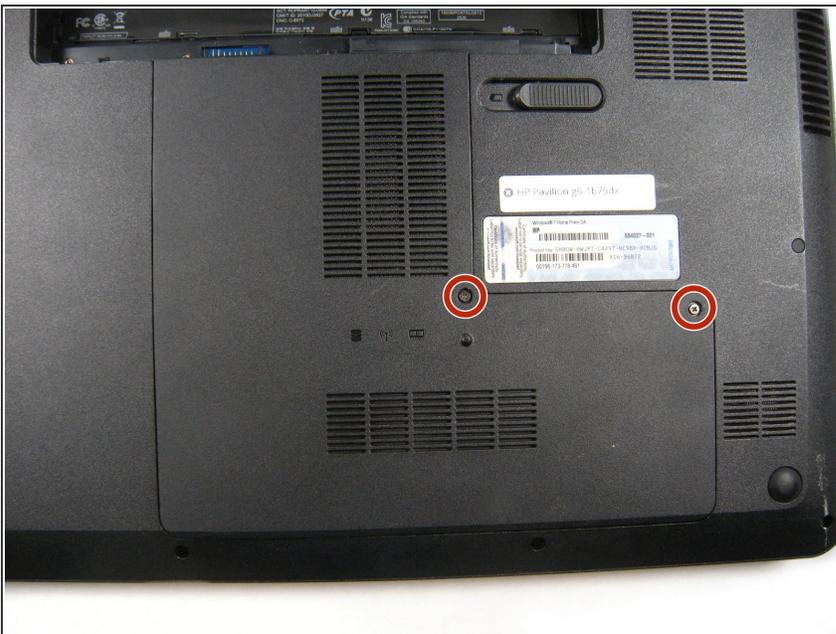

- Loosen the two 5.7 mm screws on the bottom panel using a PH00 screwdriver.
- ⚠ The screws do not come out of the panel due to small washers. Do not try to remove the screws completely.

Step 5

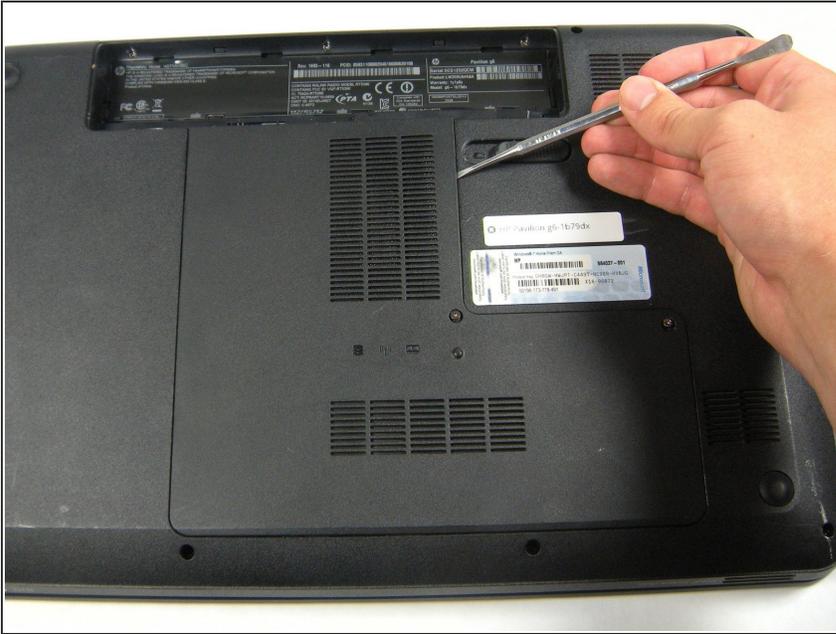

- Use the metal spudger all around the panel to pop it up from the base.
- ⚠ When working with electronics, it's important to choose a tool that's ESD-safe to avoid accidental damage to the device. The regular black nylon spudger or a plastic opening tool should be used whenever possible.
- ⓘ Using your finger is acceptable but not entirely recommended. Be gentle if you choose to use your hands.

Step 6




- With your hands, lift the panel completely off the base of the laptop.

Step 7 — RAM



- Slide the two latches away from the RAM to unhook it.

Step 8

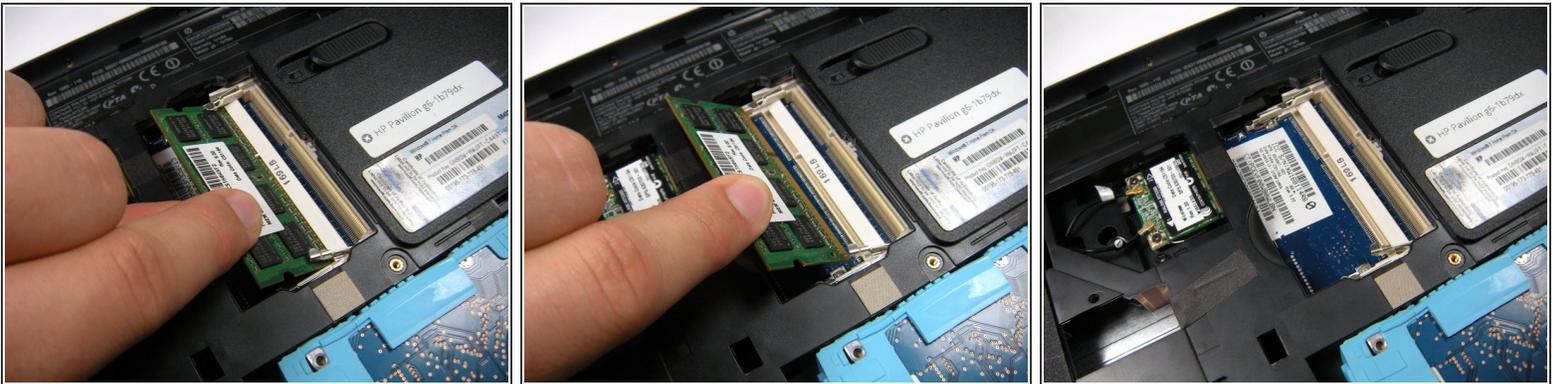

- Gently slide the RAM out from the laptop.

To reassemble your device, follow these instructions in reverse order.