READ FIRST

DKT-408 QUICK SETUP GUIDE

READ FIRST

START HERE - INSTALLING ROUTER

INSERT THE DIR-615 CD into the CD-ROM drive on a computer that is online and click **Install Router** to start the Quick Router Setup Wizard.

IMPORTANT: For the quick setup wizard to work properly, the computer must be connected to the Internet and be online. If you have disconnected any hardware, please re-connect your computer back to the modem and make sure you are able to get online.

To get the best wireless coverage, place your router in an open area away from your computer, monitor, and speakers. When the router is positioned, use the reference diagram below to adjust your antennas. Since each house is different, you may need to try several different antenna configurations to get the best coverage.

HORIZONTAL

front view

VERTICAL

front view

Use one of the following antenna configurations for optimal wireless performance.

Use of this device may make your wireless network connection vulnerable to unauthorized access and/or accessible by an unauthorized user. To protect your wireless network connection from unauthorized access, you must activate the WEP, WPA™, or WPA2™ security feature supported by this device. Please consult the product manual that came with this device or visit www.support.dlink.com for more information on how to activate this feature. Third party software/hardware may also be used to help protect against unauthorized access to your wireless network connection.

FOR BEST RESULTS - RUN THE QUICK ROUTER SETUP WIZARD ON CD

If you are unable to use the wizard, use the manual setup outlined below and refer to the manual on the CD.

1 Position your router close to your modem and the computer that is already online. If you are installing a wireless router, place this router in an open area of your intended work area for better wireless coverage.

2 Unplug the power cord from the back of your broadband modem. (fig. A)

Unplug the Ethernet cable from your modem that is connected to your computer. (fig. B)

Plug it into the blue port labeled 1 on the back of your router. The router is now connected to your computer. (fig. C)

3 Plug one end of the included Ethernet cable that came with your router into the port labeled INTERNET on the back of the router. (fig. D)

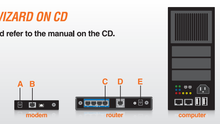

Plug the other end of this cable into the Ethernet port on your modem. (fig. B)

Plug the power cord back into your modem. (fig. A)

Plug the power supply that came with your router into the POWER port on the back of the router, and then plug it into an electrical outlet. (fig. E)

4 Reboot your computer.

Verify you're online by launching a web browser and loading your homepage.

INSTALLING USB ADAPTER

- Insert the CD that was included into your CD-ROM drive
- Click "Install Drivers" and follow the onscreen directions
- Wait to be prompted to insert adapter into an available USB slot

NEED MORE HELP?

For information about features, please refer to the help section in the web-based interface for example settings and definitions. Additional production information can also be found in the Product Manual included on the CD. Answers to Frequently Asked Questions (FAQs) about this product are located on our support site. You can get additional product information, access support tools, and download manuals and updates at http://support.dlink.com

If you are still having difficulty installing this device, please contact our Customer Support team before returning this product to the store by:
E-mail: Visit support.dlink.com, click on Contact and choose your product from the dropdown menu Phone: Call 877-45-DLINK (877-453-5465)

©2009 D-Link Corporation/D-Link Systems, Inc. All rights reserved.