iFIXIT

Acer Aspire 5740-5780 Keyboard Replacement

Guide to remove Keyboard from Acer Aspire 5740-5780.

Written By: Gian Farrell

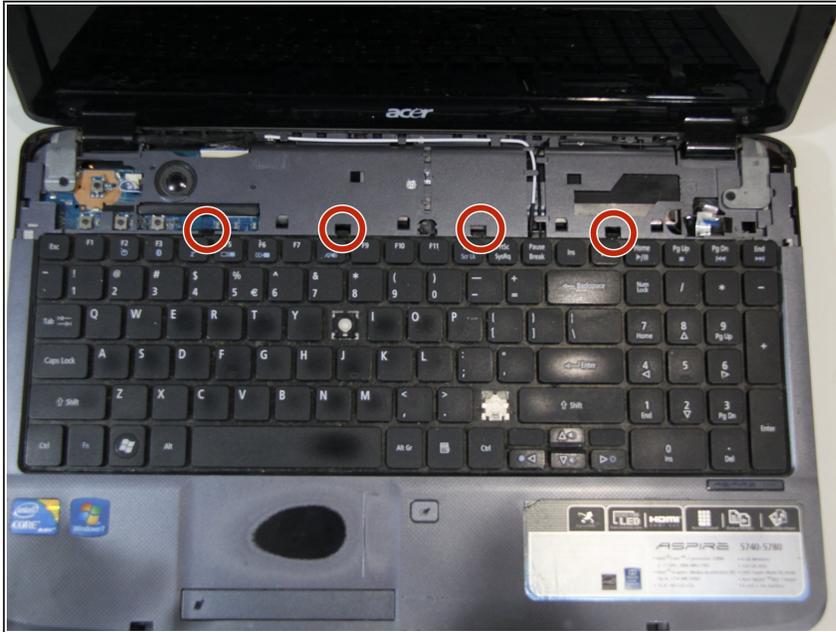This document was generated on 2019-10-25 11:21:22 AM (MST).

INTRODUCTION

Use this guide to remove the keyboard from your device. You'll need a metal spudger and some prying power to complete the guide.
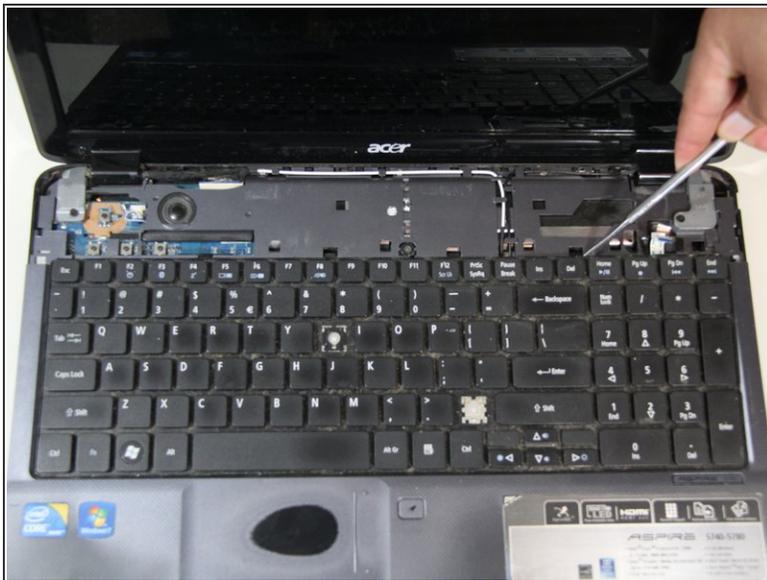
🔧 TOOLS:

- Spudger (1)
- Metal Spudger (1)
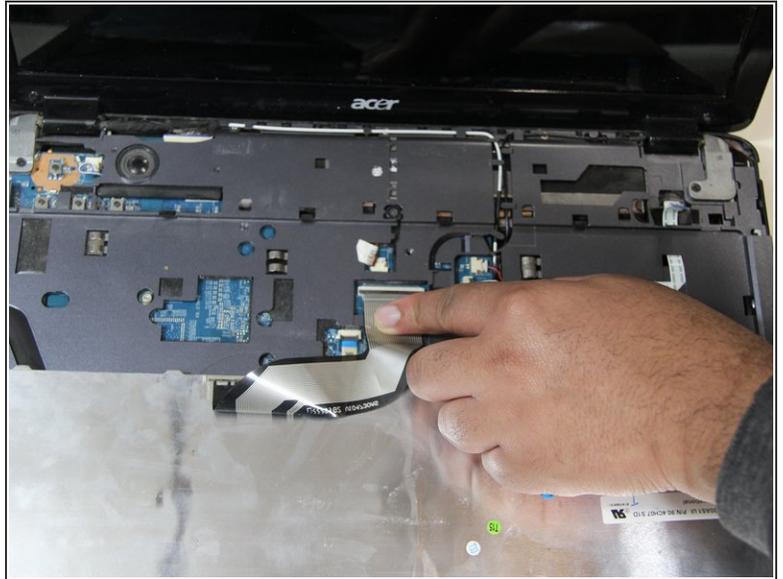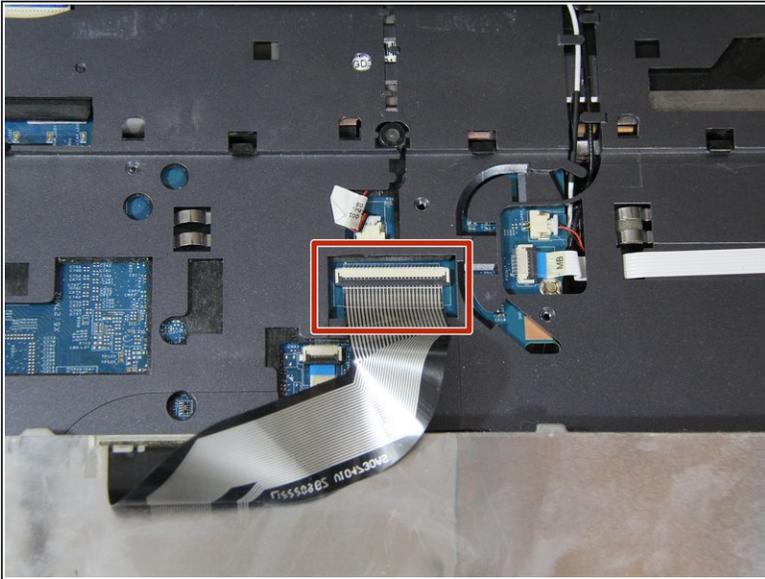
Step 1 — Keyboard

- These latches must be released in order for the keyboard to be removed.

Step 2

- Using a spudger, pry the keyboard from the PC, gently.

- Lift the keyboard and flip it over, so that it rests on its keys.

This document was generated on 2019-10-25 11:21:22 AM (MST).

Step 3

- Using your hands, open the latch holding the wire in place, and remove the keyboard.

To reassemble your device, follow these instructions in reverse order.