How to Fix Bent Silverware

This is a 7 step guide on how to fix silverware if/when it gets bent out of shape.

Written By: Anna Sharpes

INTRODUCTION

If your silverware starts to bend, there's no need to go out and buy more. This guide will show you a quick fix to repairing your silverware and bending it back to its original shape.
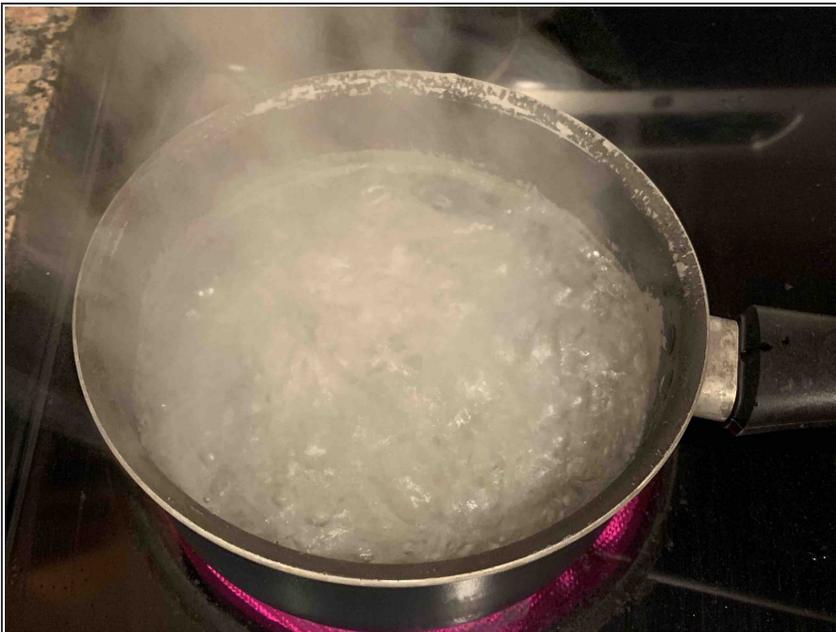
🔧 TOOLS:

- Pot (1)
- Water (1)
- Slip Joint Pliers (1)
- Hammer (1)
- Towels (1)

This document was generated on 2019-09-19 02:06:21 AM (MST).

www.iFixit.com

Step 1 — How to Fix Bent Silverware

- First, clean with soap and water all of the bent silverware.

Step 2

- Take the pot and fill it halfway with water.

- Put the pot on the stove and heat the water till it's boiling.

This document was generated on 2019-09-19 02:06:21 AM (MST).

Step 3

- Place the bent silverware in the water for at least one minute.

Step 4

- After the minute is over, carefully pull out all of the silverware using pliers.

This document was generated on 2019-09-19 02:06:21 AM (MST).

© iFixit — CC BY-NC-SA

www.iFixit.com

Page 4 of 6

Step 5

- Dry off the silverware with either paper or cloth towels. Be careful not to burn yourself.

Step 6

- Use tools such as pliers, a hard surface, rulers, and/or hammers to reshape silverware as desired.

This document was generated on 2019-09-19 02:06:21 AM (MST).

Step 7

- When your done bending the silverware to its desired shape, let the silverware cool down to stay in that shape.

www.iFixit.com