InFocus Screenplay 4805 Motherboard Replacement
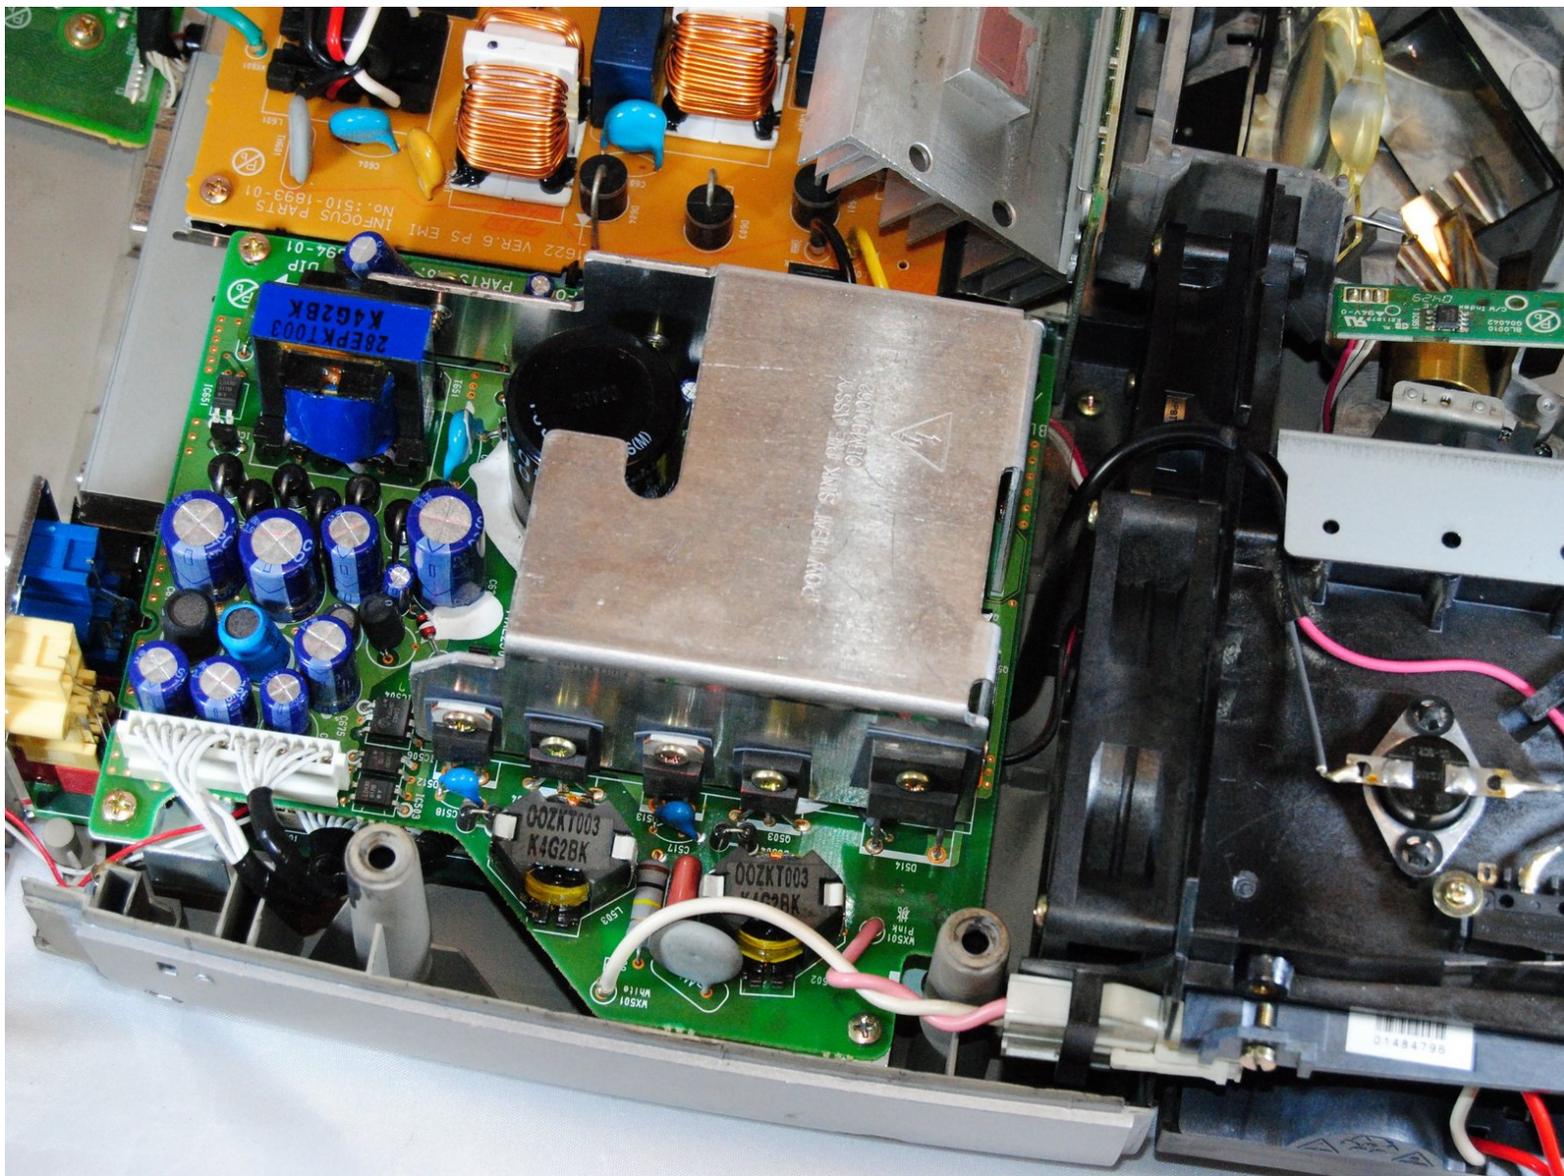
Replace motherboard if experiencing sound and power malfunctions.

Written By: Marilyn Urness

This document was generated on 2019-11-05 06:47:36 AM (MST).

INTRODUCTION

Replace the motherboard if experiencing sound and power problems.

For this project you may need a can of compressed air to clean the insides of the projector. You may also want safety goggles.
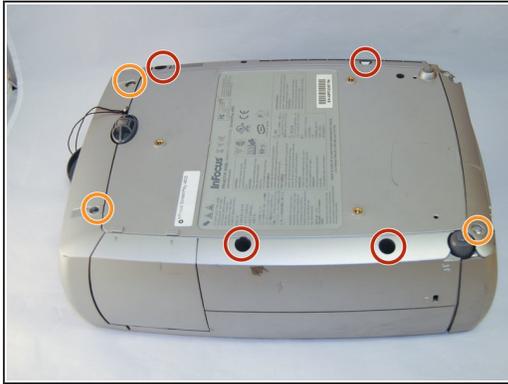
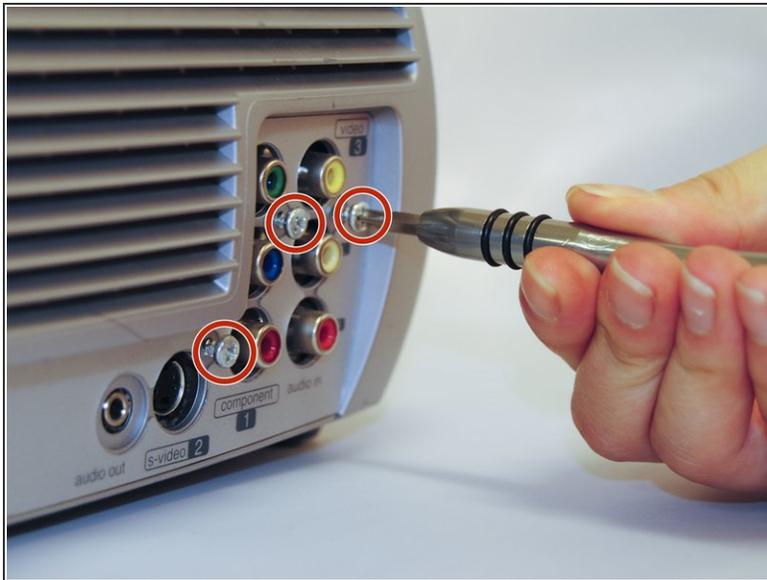### 🔧 TOOLS:

- T5 Torx Screwdriver (1)
- Metal Spudger (1)

⚙ PARTS:

- Motherboard Replacement (1)

This document was generated on 2019-11-05 06:47:36 AM (MST).

www.iFixit.com

Step 1 — Top Panel

- Flip the projector on its back.

- Use the Phillips #2 screwdriver to remove the (4) four 2 cm gold screws.

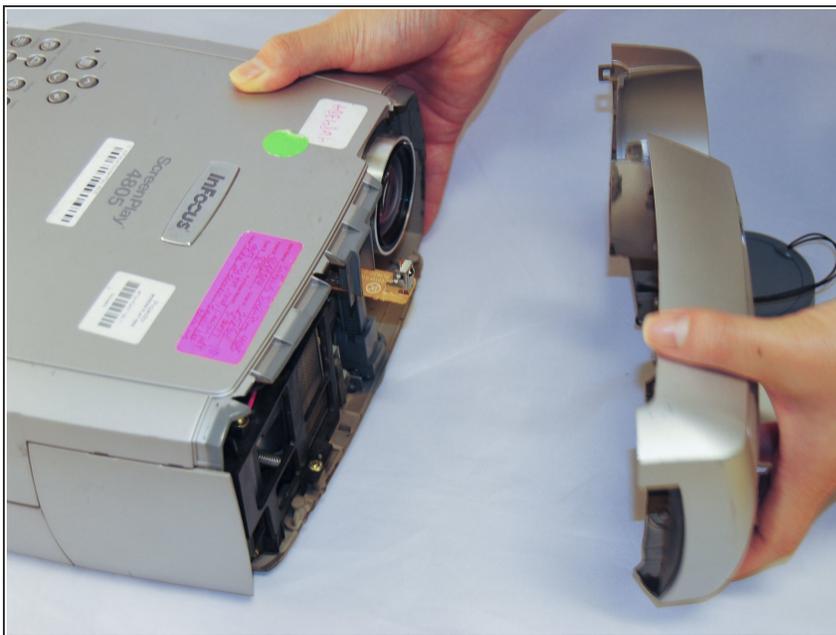- Use the Phillips #2 screwdriver to remove the (3) three 1 cm silver screws.

Step 2

- Turn the projector, facing the back cable board towards you.

- Using the Phillips #0 screwdriver, remove the (3) three 1.0 cm silver screws on the back panel.
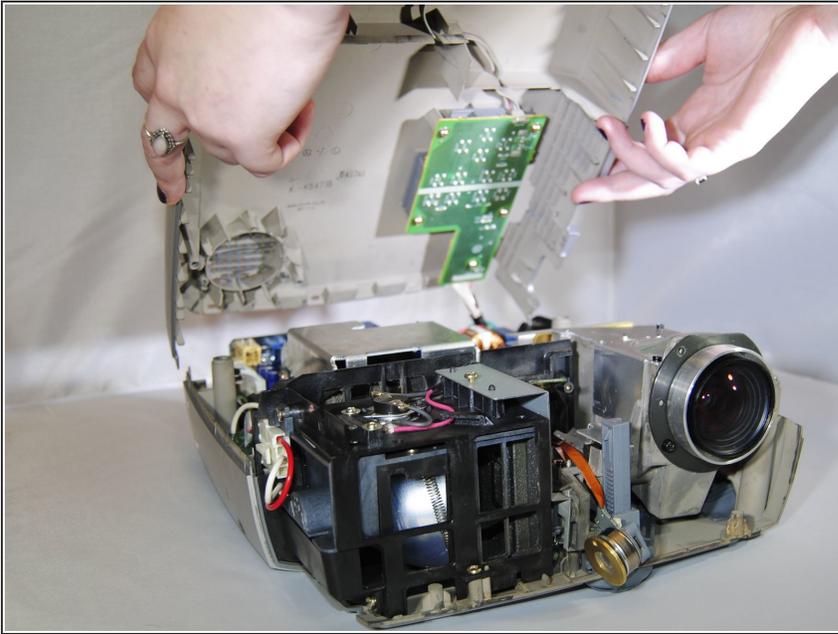
- Gently take off back cable panel.

This document was generated on 2019-11-05 06:47:36 AM (MST).

Step 3

- Turn the projector so the front side with the lens is facing you.

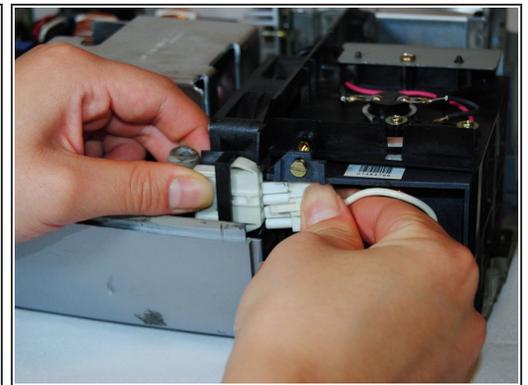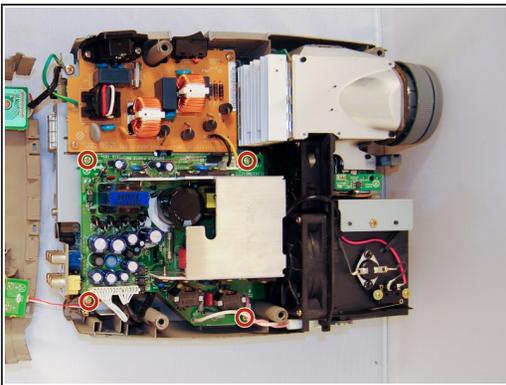- Gently pry the both of the grey lens rings using the metal spudger.

Step 4

- Now that the screws have been removed, proceed with the removal of the outer panel.

- Gently remove the front lens panel.

- (i) Be forewarned, the panel will resist. Be careful not to break the lens.
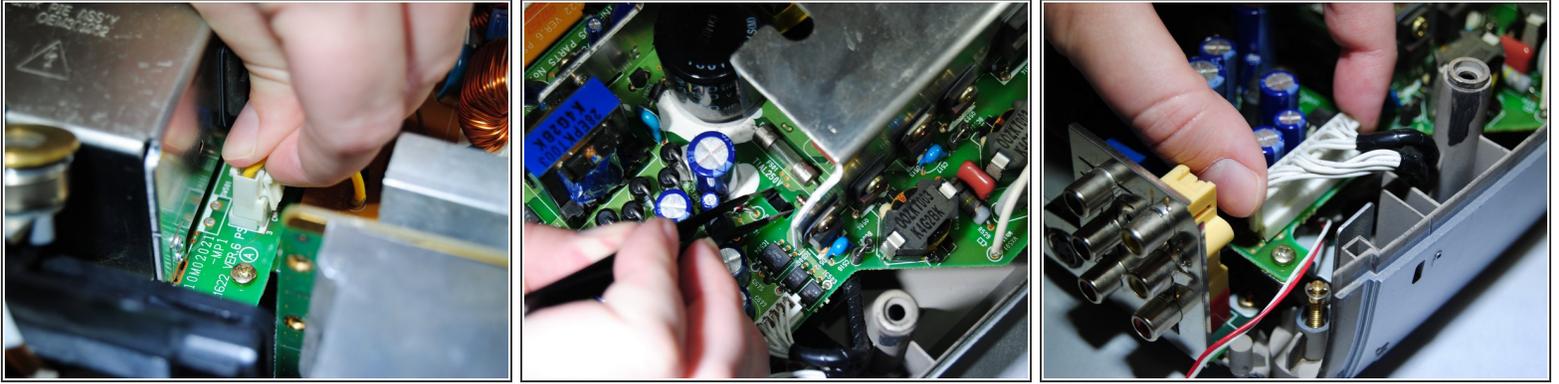
Step 5

- Being careful not to pull the wires inside the projector, gently lift the top panel off the projector.

- ⓘ Rest the lid behind the projector so the insides are exposed and undamaged.

Step 6 — Motherboard

- Using the Phillips #1 screwdriver, remove the (4) four 1.5 cm screws on each of the four corners of the motherboard cover.

- Remove the white tab connected to the light bulb.

|

Step 7

- Gently pull the white tab on the right side of the silver power housing by pinching each side of it.

- Pinch the two black tabs on the inside of the cover to remove.

- Gently pull on the long white tab to remove it.

To reassemble your device, follow these instructions in reverse order.