Novatel MiFi 2 4G LTE Hotspot SD Card Replacement

Replace a faulty SD Card in your Novatel Hotspot device.
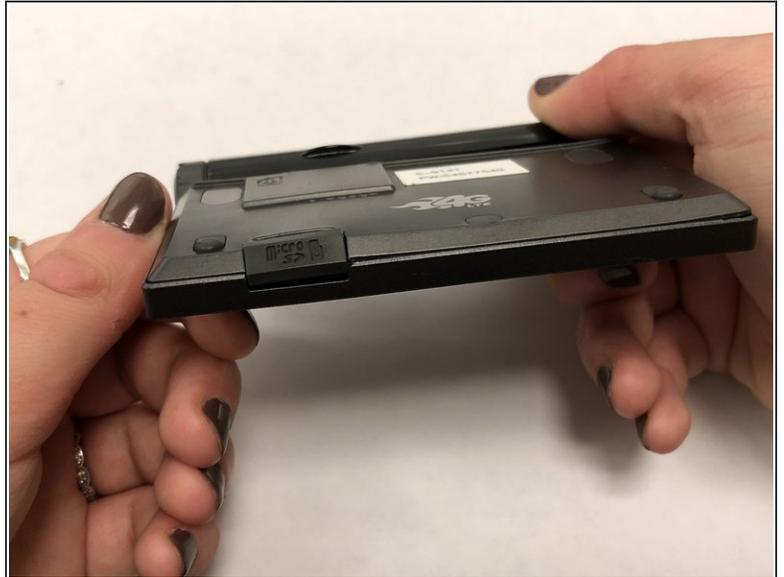
Written By: GerardFoley

INTRODUCTION

This guide will show you how to replace a faulty SD Card in your Novatel Hotspot device. This requires opening the rubber flap and removing the old SD Card.

Note: This guide does not feature an actual SD Card.

Step 1 — SD Card

- Unplug the charger from your Novatel Hotspot device.

- Place the Novatel Hotspot device face down on a flat, clean surface.

- Locate the rubber SD Card cover on the bottom left hand side of the device. The cover is labeled "Micro SD."

Step 2

- Open the SD Card cover by placing your finger on the top of the rubber cover and pulling it down.

- Remove the faulty SD card from its slot by sliding it out with your finger.

- ⓘ This guide does not feature an actual SD Card.

This document was generated on 2019-09-22 10:49:44 AM (MST).

© iFixit — CC BY-NC-SA

www.iFixit.com

Page 3 of 4

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-22 10:49:44 AM (MST).