# SiriusXM Onyx Plus Buttons Replacement

In this guide we will be replacing the buttons on a SiriusXM Onyx Plus radio.

Written By: Angel Rivera

This document was generated on 2019-09-18 10:45:07 AM (MST).

　　　　　　　　www.iFixit.com

# INTRODUCTION

Buttons might tear and get worn out so it is important to replace the buttons.

## TOOLS:

- iFixit Opening Tools (1)
- JIS #00 Screwdriver (1)

This document was generated on 2019-09-18 10:45:07 AM (MST).

　　　　　　　　　　www.iFixit.com

## Step 1 — Case



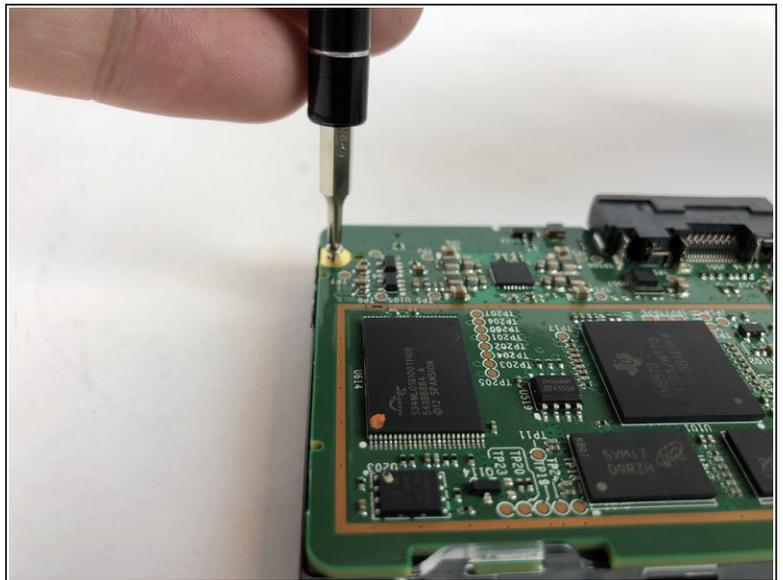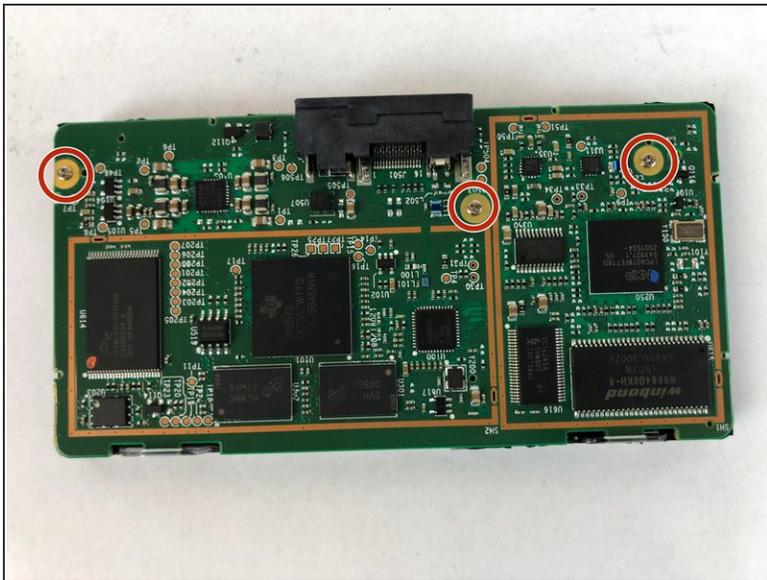- Wedge a plastic opening tool in between the case.

## Step 2



- Starting with the bottom left corner, press down on the plastic opening tool to unhook the latches on the inside of the device.

- ⓘ You have to start with the bottom left and right corners, and then flip the device to over and do the top of the device.

This document was generated on 2019-09-18 10:45:07 AM (MST).

© iFixit — CC BY-NC-SA                    www.iFixit.com                    Page 3 of 6
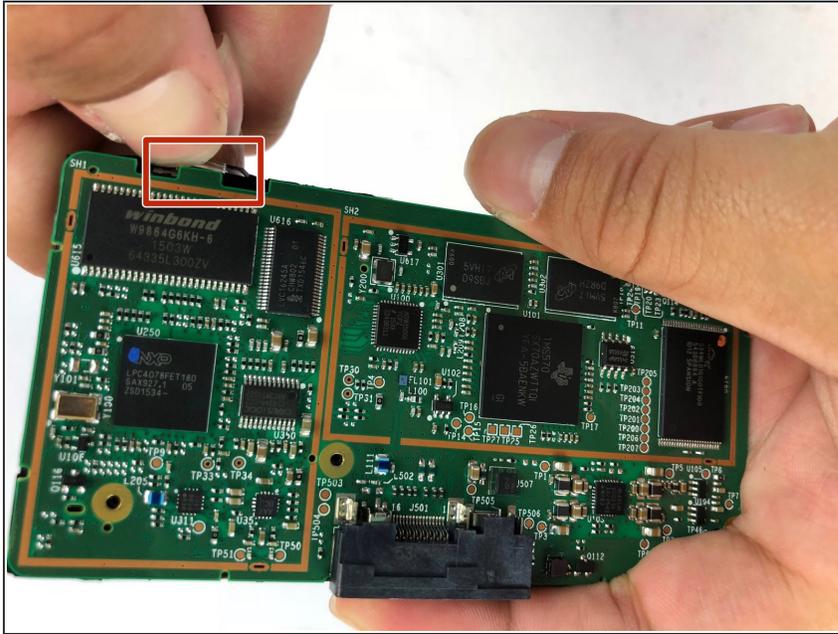
## Step 3



- Once unclipped, separate the back casing from the device.
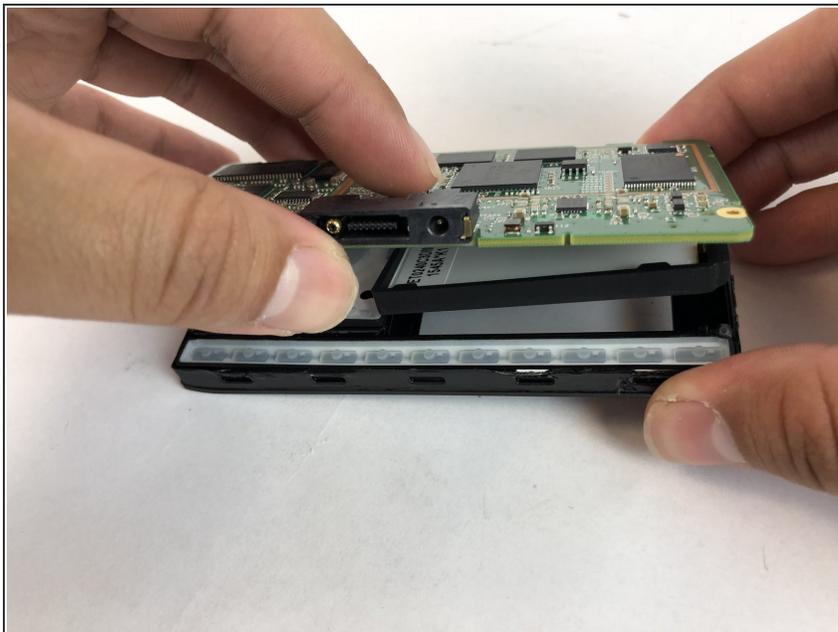
## Step 4 — Buttons



- Remove the three 5mm JIS #00 screws from the motherboard.

## Step 5



● Unlatch the two clips that hold the motherboard in place.

## Step 6



● Lift the motherboard up and out of the frame.

**Step 7**



- Holding the front casing in your hand, push the button panels out of the casing.

*There are two buttons panels: Navigation panel and the Channel Number panel*

To reassemble your device, follow these instructions in reverse order.

www.iFixit.com