

C KNOB

1. GENERAL

1.01 The C knob (Fig. 1) is intended for use as an intermediate or last attachment of drop wires when porcelain insulated building attachments are required.

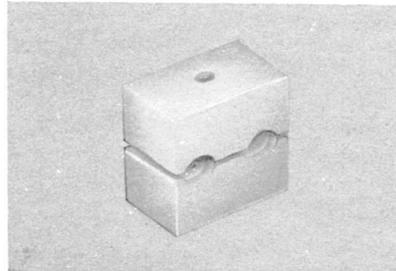


Fig. 1 — C Knob

1.02 Fig. 2 illustrates a C knob used as a last attachment.

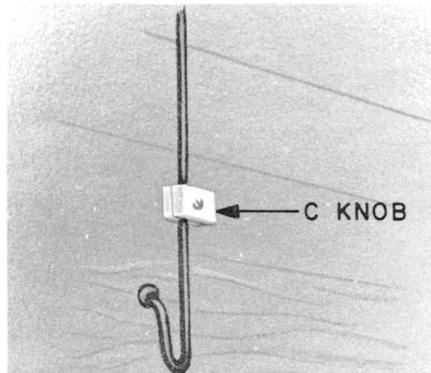


Fig. 2 — C Knob Used As Last Attachment

1.03 Fig. 3 illustrates a C knob used as an intermediate attachment.

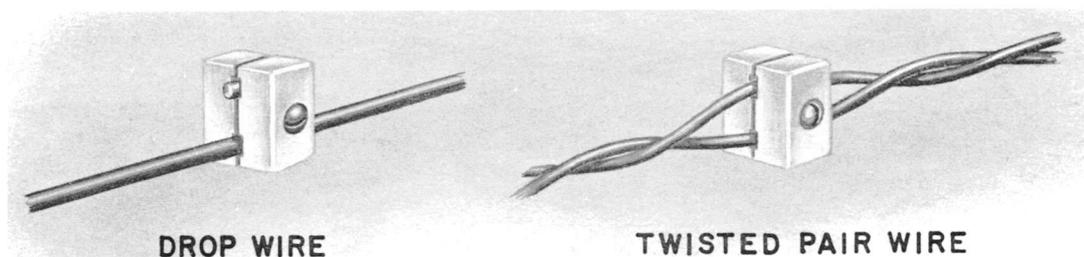


Fig. 3 — C Knob Used As Intermediate Attachment