

CS952A1-03 TELEPHONE SET

IDENTIFICATION, MOUNTING, CONNECTIONS, AND MAINTENANCE

1. GENERAL

1.01 This section contains information on the CS952A1-03 (Fig. 1) DESIGN LINE* telephone set (Americana Edition Circa 1882 Telephone).

1.02 The reasons for reissuing this section are listed below. Revision arrows are used to emphasize the more significant changes.

- Delete information on 952A1-03 telephone set
- Add CS952A1-03 telephone set.

1.03 Telephone sets having the prefix "CS" (CS952A1-03) added to the set code do not include telephone company-owned components. They are for sale to the customer in their entirety (the housing as well as the transmission and signaling components).

2. IDENTIFICATION

2.01 The CS952A1-03 rotary dial telephone set is a DESIGN LINE telephone set that is available to the customer.

2.02 The CS952A1-03 telephone set is comprised of the following component parts:

- Dial, 8UB
- Cord, Receiver H4EK (2 feet, 8 inches long)
- 841407638 Receiver Assembly
- Transmitter Assembly
- Jack, Receiver, 616P4B
- Cord, Mounting, D4BU-29 (14 feet long)
- Jack, Assembly, 623P4 (mounting cord)

* Trademark of American Telephone and Telegraph Company.

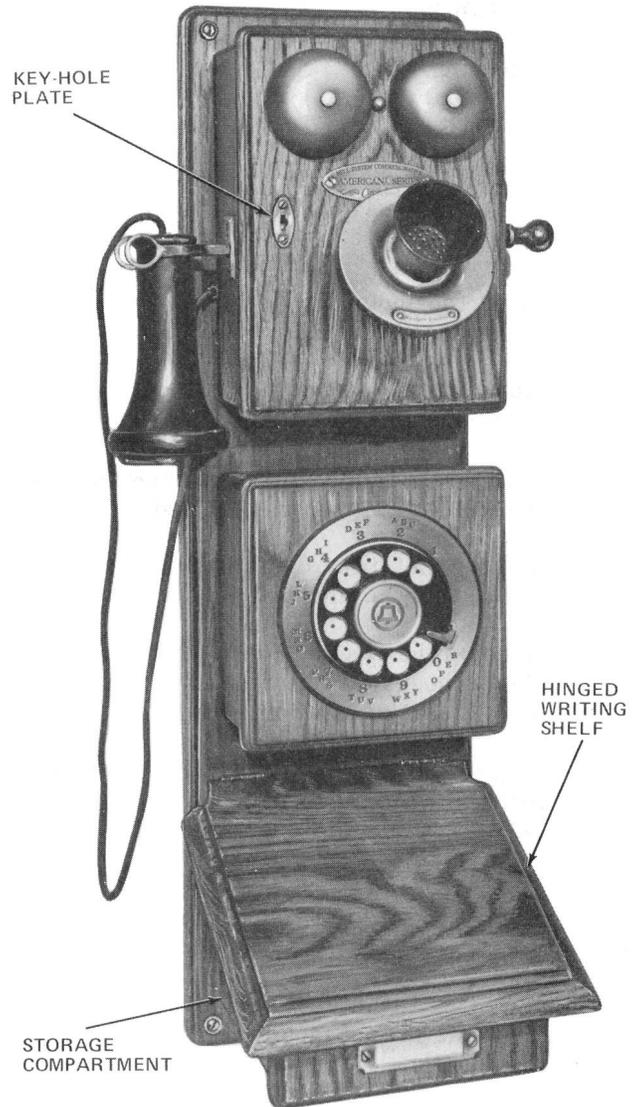


Fig. 1—CS952A1-03 DESIGN LINE Telephone Set

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

SECTION 503-200-116

- Ringer, P3A or P1A
- Unit, Receiver, Modified LB-7 (used as a transmitter)
- Unit, Receiver, U3 or U5
- Network
- Housing.

3. MOUNTING

3.01 To mount the CS952A1-03 telephone set over a 630-type modular connecting block, proceed as follows.

- (1) Place the mounting template (shipped with set) over the modular outlet and level it.
- (2) Mark two upper and two lower mounting holes, one on each corner of the template.
- (3) Drill four 5/16-inch diameter holes and install the wall screw anchors provided.
- (4) Remove and discard the four screws used to install the wall anchors.
- (5) Wind up the excess mounting cord on the four plastic hooks on the rear of the set. Leave about six inches of cord loose (Fig. 2).
- (6) Plug in the end of the mounting cord and secure the set to the wall anchors using the four decorative screws and washers provided.

3.02 To connect the CS952A1-03 telephone set to a 625-type modular connecting block, proceed as follows.

- (1) Make sure the intended mounting location will allow the 14-foot mounting cord to reach the telephone outlet.

- (2) Place the template at a convenient height and level it.
- (3) Mark the two upper and two lower mounting holes, one on each corner of the template.
- (4) Drill four 5/16-inch diameter holes and install the wall screw anchors provided.
- (5) Discard the four screws used to install the wall anchors.
- (6) Wind up the excess line cord on the four plastic hooks on the rear of the set housing (Fig. 2).
- (7) Dress the mounting cord into the channel on the back of the telephone set (Fig. 2).
- (8) Secure the set to the wall anchors using the set of four decorative screws and washers provided.
- (9) Dress the mounting cord to the 625-type modular connecting block and plug in the cord.

4. CONNECTIONS

4.01 These sets are intended to be used as single line sets for bridged service only and are not for use on multiparty service.

5. MAINTENANCE

5.01 No adjustments or wiring changes are to be performed on these sets on the customer's premises.

5.02 When it is desired to return a set to Western Electric for repair, it should be packed using an appropriate protective packing material.

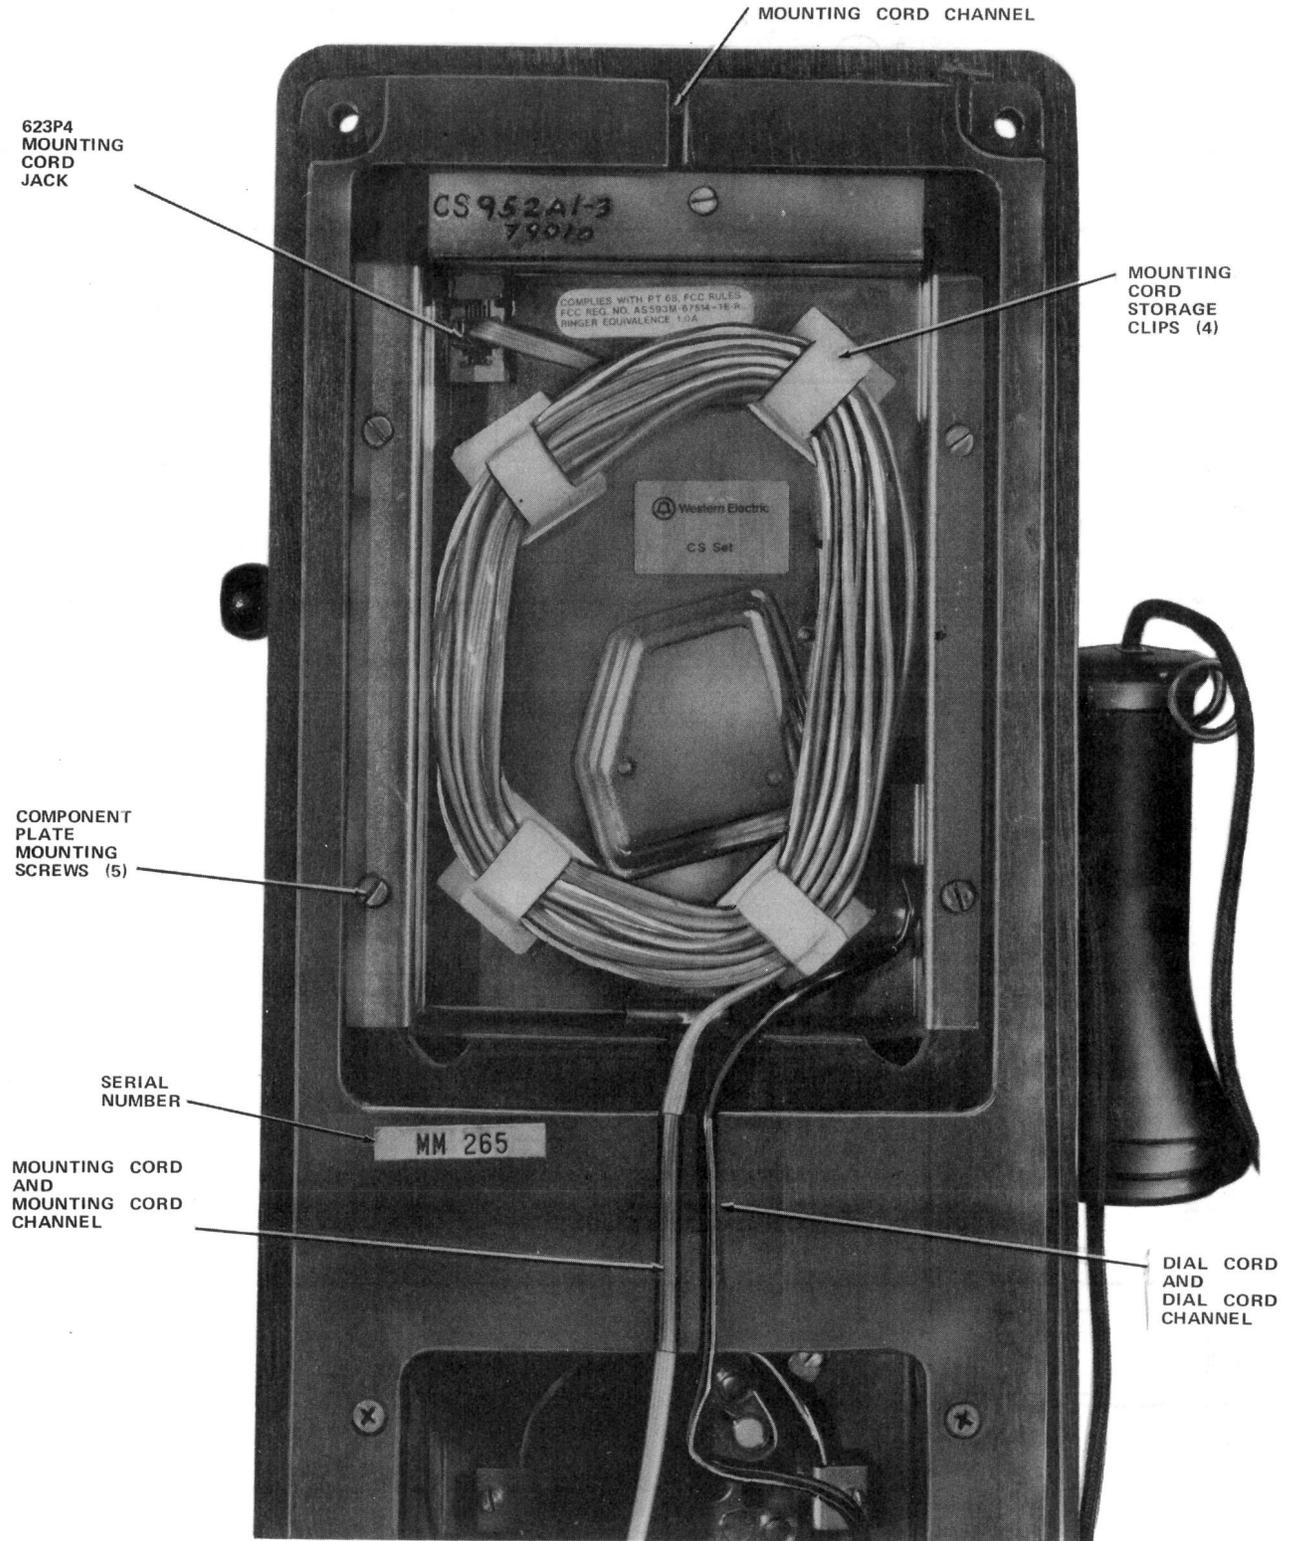


Fig. 2—CS952A1-03 Telephone Set, Rear View

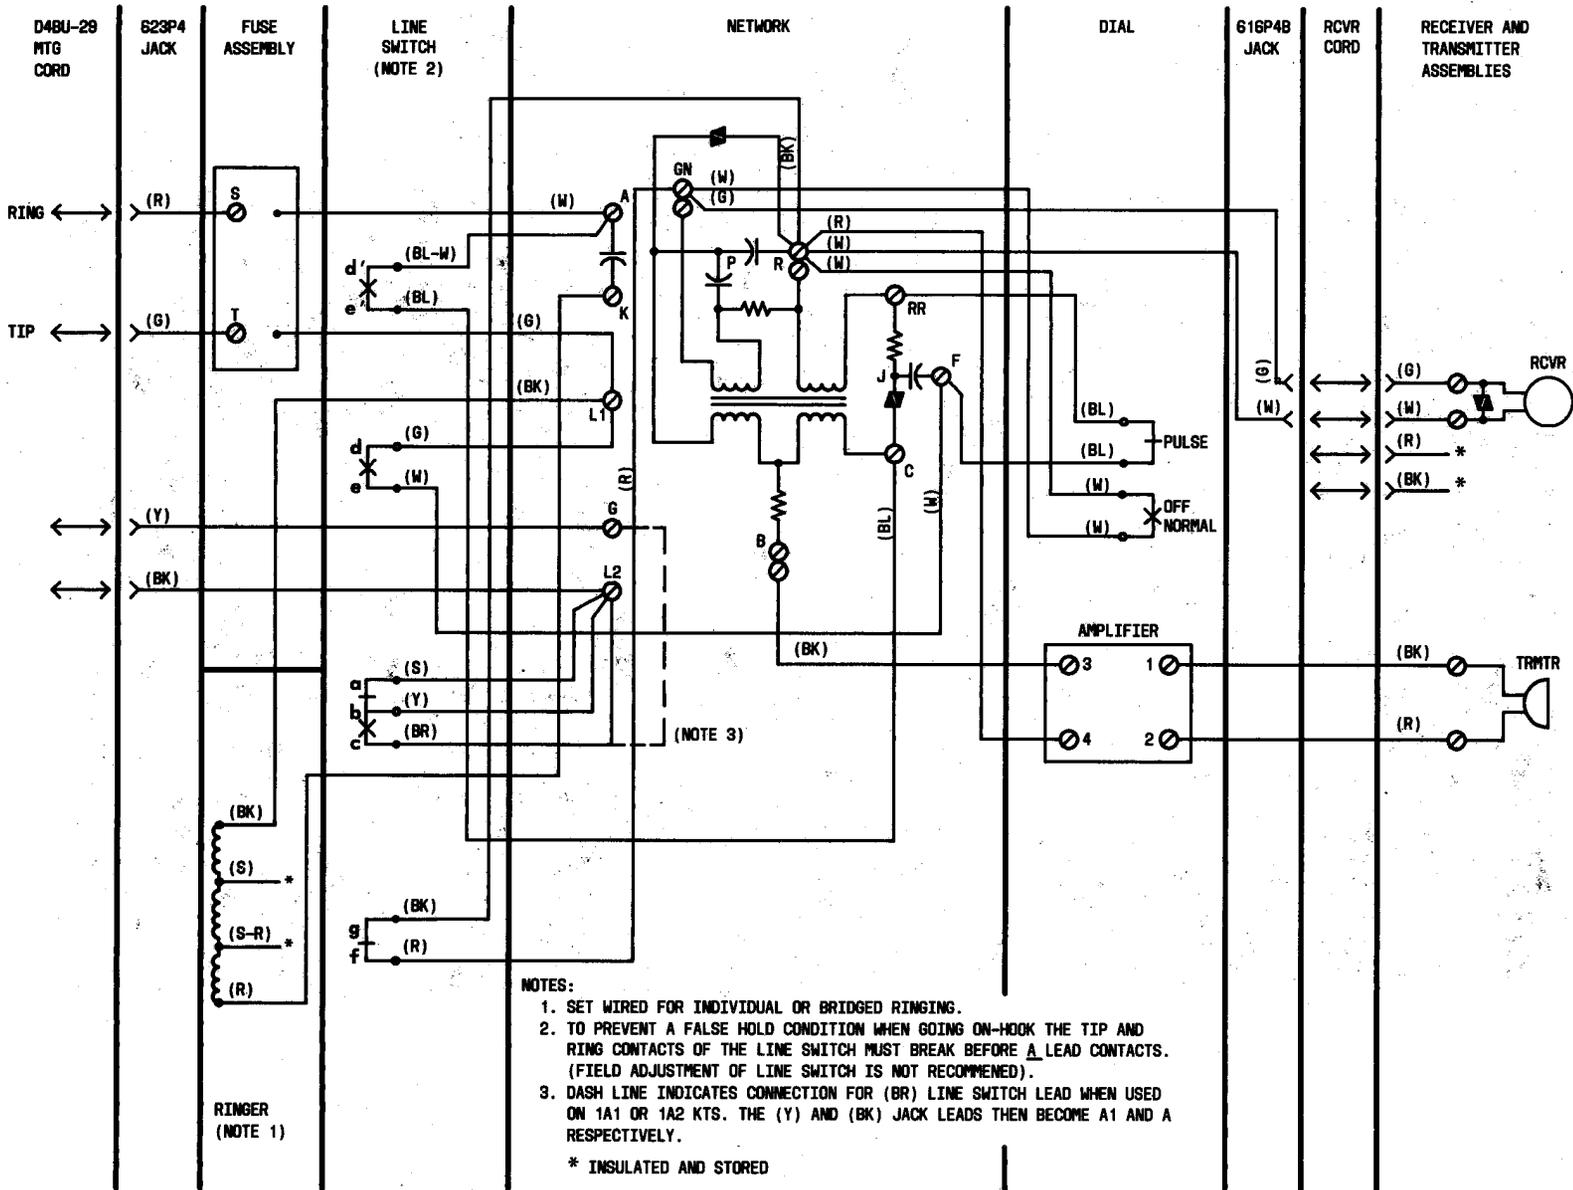


Fig. 3—CS952A1-03 Telephone Set, Connections