



Assembling Parabolic Solar Cooker Tripod Base Stand

This guide will help you put together the tripod base stand.

Written By: Ashlie Reott




INTRODUCTION

A stand created by three legs is a common method of supporting a load.

TOOLS:

- [Socket 14mm](#) (1)
 - [14mm Wrench](#) (1)
-

Step 1 — Assembling Parabolic Solar Cooker Tripod Base Stand

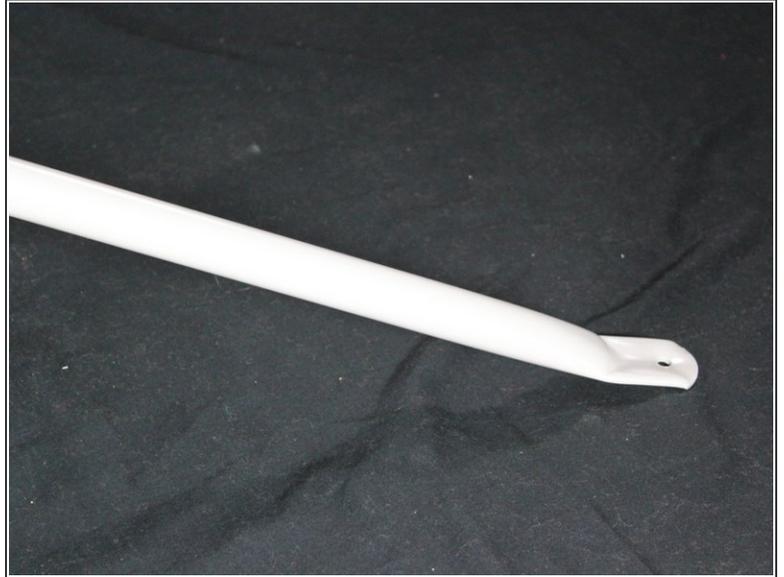

- Insert a 14mm bolt through each tripod leg and through the center plate. Secure each bolt by hand threading a nut on the other side.
- ⓘ Be sure the flat side of each tripod leg is facing toward the ground.

Step 2



- Tighten each nut using two 14mm wrenches until each leg is stable and the tripod will stand on its own.

To disassemble your device, follow these instructions in reverse order.