



# Disassembling BlackBerry Bold 9700 Motherboard Housing

This guide will help you separate the motherboard from the housing. It will also serve as a prerequisite for the more involved repairs for the BlackBerry Bold 9700.

Written By: Patrick



---

## INTRODUCTION

This guide is necessary for getting deeper into your BlackBerry Bold 9700. By following these steps, you will be able to separate your device into its two major components: the motherboard and the back housing.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [T5 Torx Screwdriver](#) (1)
-

## Step 1 — Motherboard Housing



- Remove the battery by prying the bottom of the battery upward.
- Once the battery is angled up, pull it away from the top of the device.

 Be sure to remove all power sources before working on electronic devices to avoid harming yourself or the device.

## Step 2



- Slide the SIM card from underneath the holding bracket upward toward the battery connector pins.


 You must remove the SIM card before you can fully disassemble the device. Failure to do so may cause damage to components later on in this process.

### Step 3




- Pry off the AT&T logo panel with the plastic opening tool.
- ⓘ You will hear a snapping sound as the plastic tabs pop out.

### Step 4

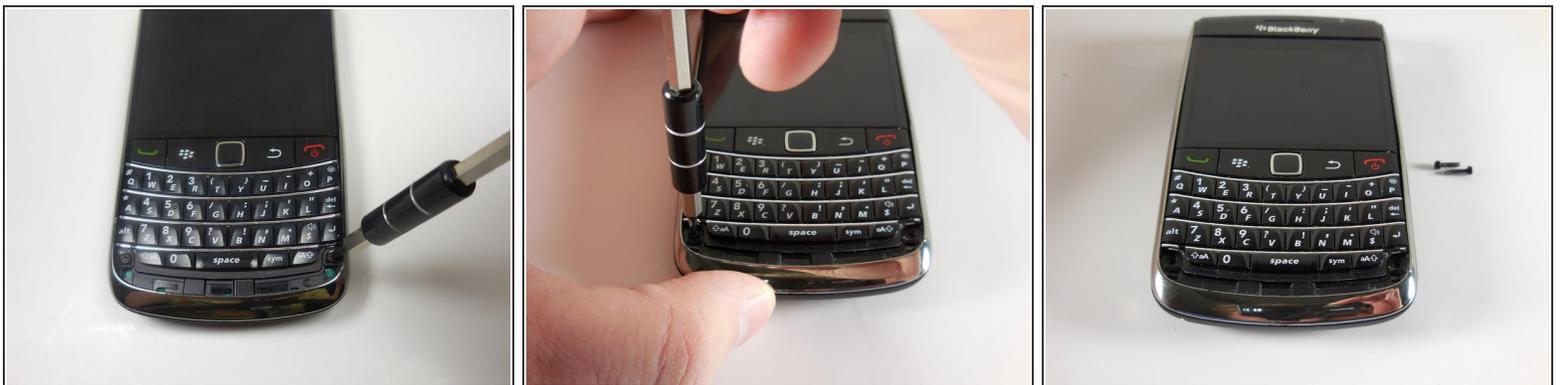

- Use your T5 Torx screwdriver to remove the two black 5.57mm Torx head screws underneath the keyboard.

## Step 5

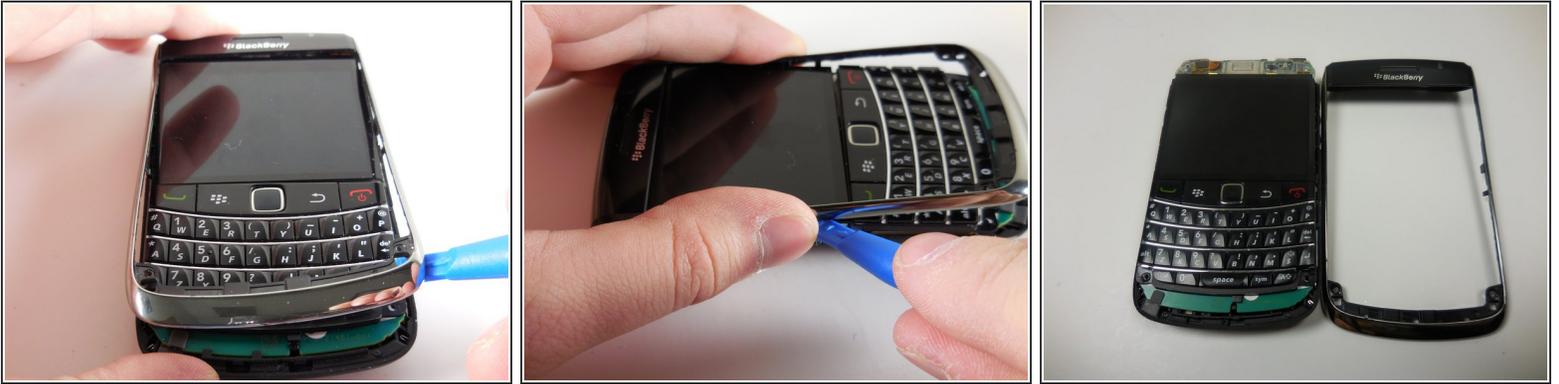


- Use the plastic opening tool to remove the frame of your device.
- ⓘ You will hear a snapping sound as the tabs pop out.
- Once the case is loosened from the device, slide the case away from the top of the phone.

## Step 6




- Gently lift the bottom of the keyboard upward.
- Pull the keyboard away from the bottom of the LCD display and lift upward.

## Step 7

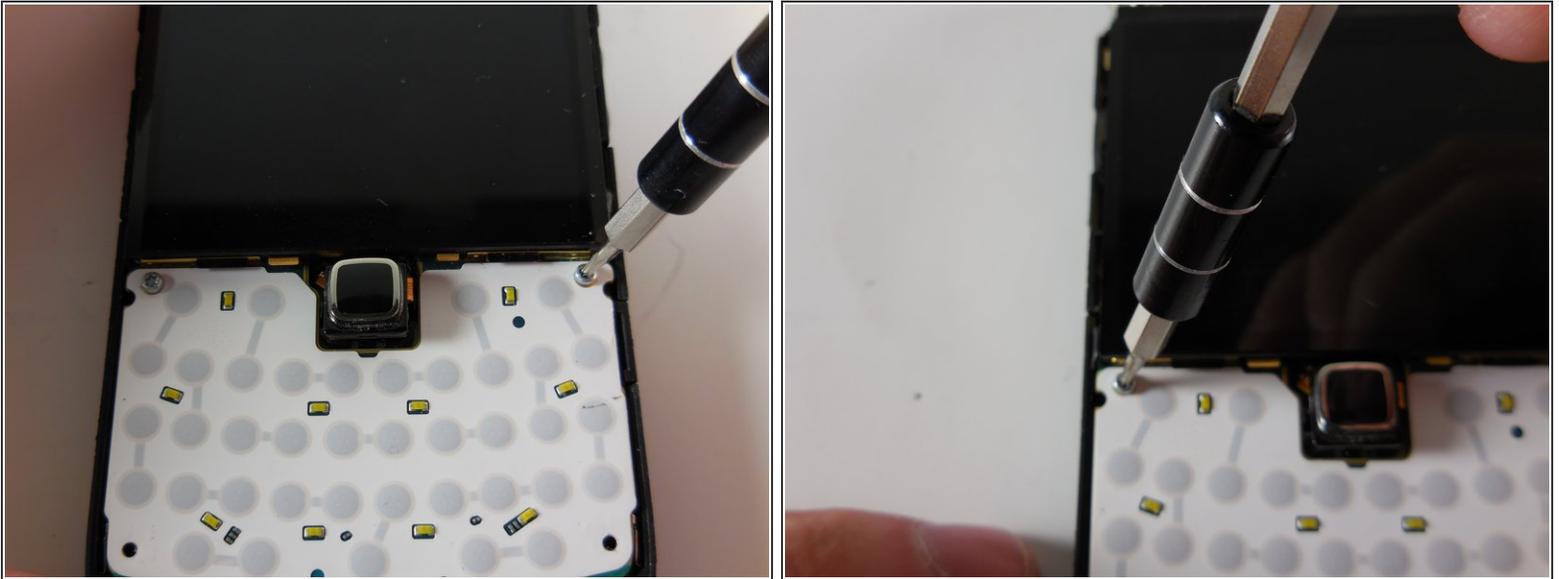

- Remove the two Torx head 4.13mm steel screws with your T5 Torx screwdriver.


## Step 8

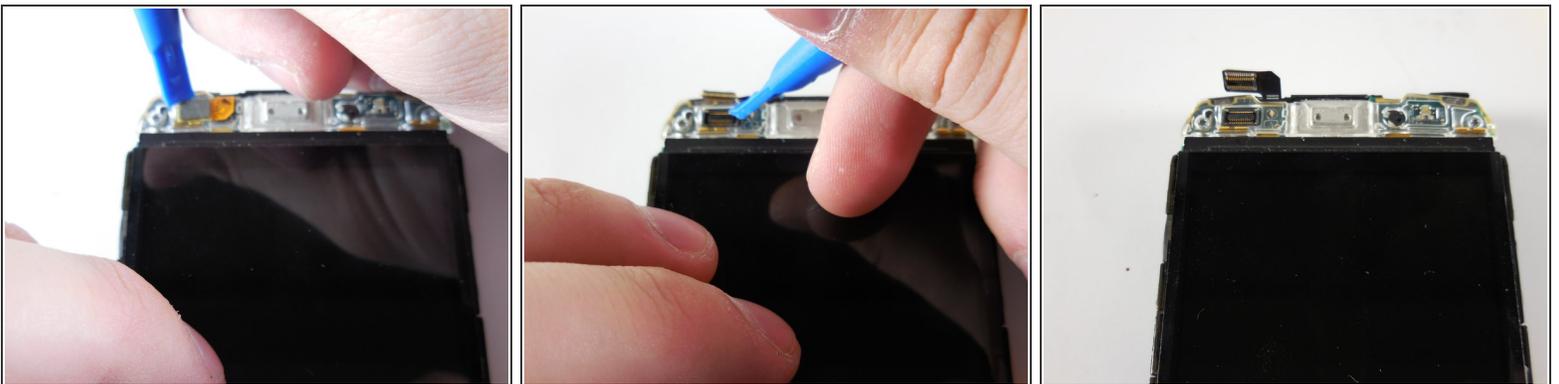

- Gently pry up the ribbon connector at the top of the phone with a plastic opening tool.


**⚠** Ribbon connectors are fragile. Too much force in the wrong place will damage the ribbon and may force you to replace an entire assembly.

## Step 9

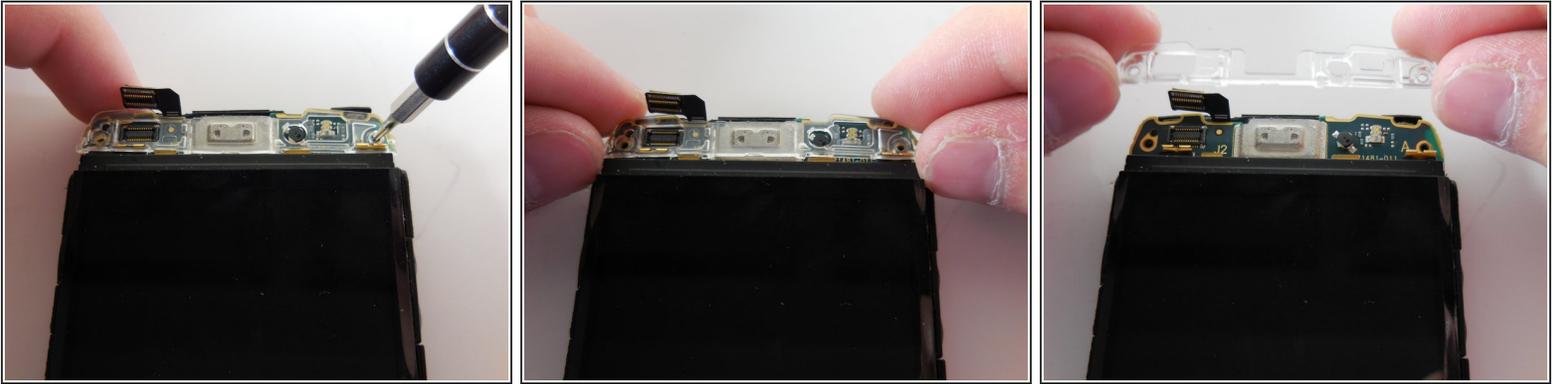

- Remove the top two Torx head 4.13mm steel screws with your T5 Torx screwdriver.
- ☑ You should now have two 5.57mm black torx head screws and four 4.13mm steel Torx head screws off to the side. Do not lose them.
- Lift the clear plastic cover directly upward.

## Step 10

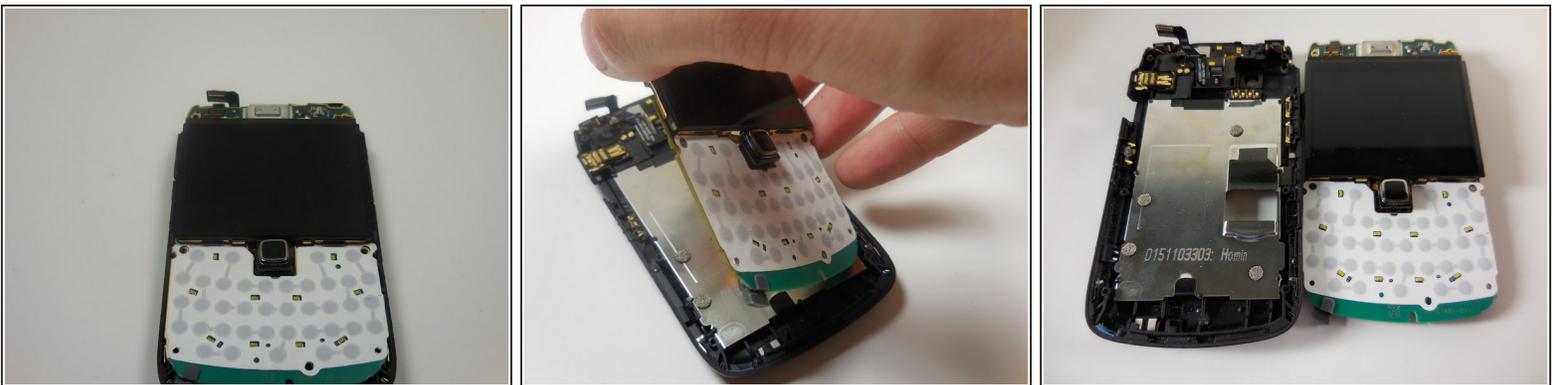

- Grip the motherboard by the screen
- Lift the board away from the base of the housing and vertically up.

To reassemble your device, follow these instructions in reverse order.