



# MacBook Pro 13" Unibody Mid 2009 Trackpad Replacement

i will show you how to change the trackpad.

Written By: SIMRAN



---

## INTRODUCTION

This guide has been updated by iFixit staff! Read the new, official guide [here](#).

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Tri-point Y0 Screwdriver](#) (1)
-

## Step 1 — Trackpad



- Remove the following 10 screws securing the lower case to the MacBook Pro 13" Unibody:
- Red Seven 3 mm Phillips screws.
- Orange Three 13.5 mm Phillips screws.

## Step 2




- Slightly lift the lower case and push it toward the rear of the computer to free the mounting tabs.

## Step 3



- Remove the following tri-wing screws securing the battery to the upper case:
  - Red One 5.5 mm tri-wing screw
  - Orange One 13.5 mm tri-wing screw.

## Step 4

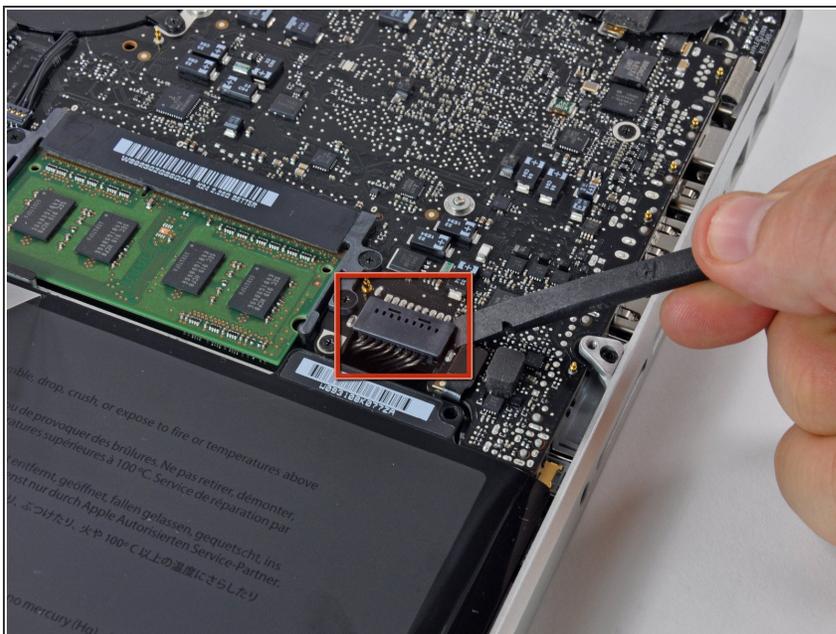


- Use the flat end of a spudger to lift the battery connector up out of its socket on the logic board.

## Step 5



- Lift the battery out of the upper case

## Step 6

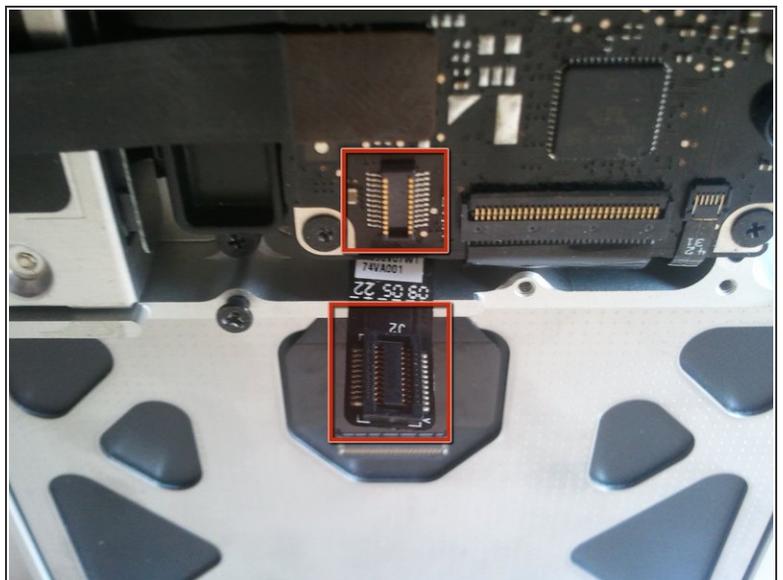

- Remove the ribbon cable by releasing it from the ZIF connector on the underside of the trackpad and also from the socket that attaches it to the logic board.

## Step 7



- Remove the four 1.2mm #00 Phillips head screws from rear of the trackpad.

To reassemble your device, follow these instructions in reverse order.