




Moto C Plus Motherboard Cover Replacement

Motherboard Cover prereq

Written By: Dominik Schnabelrauch

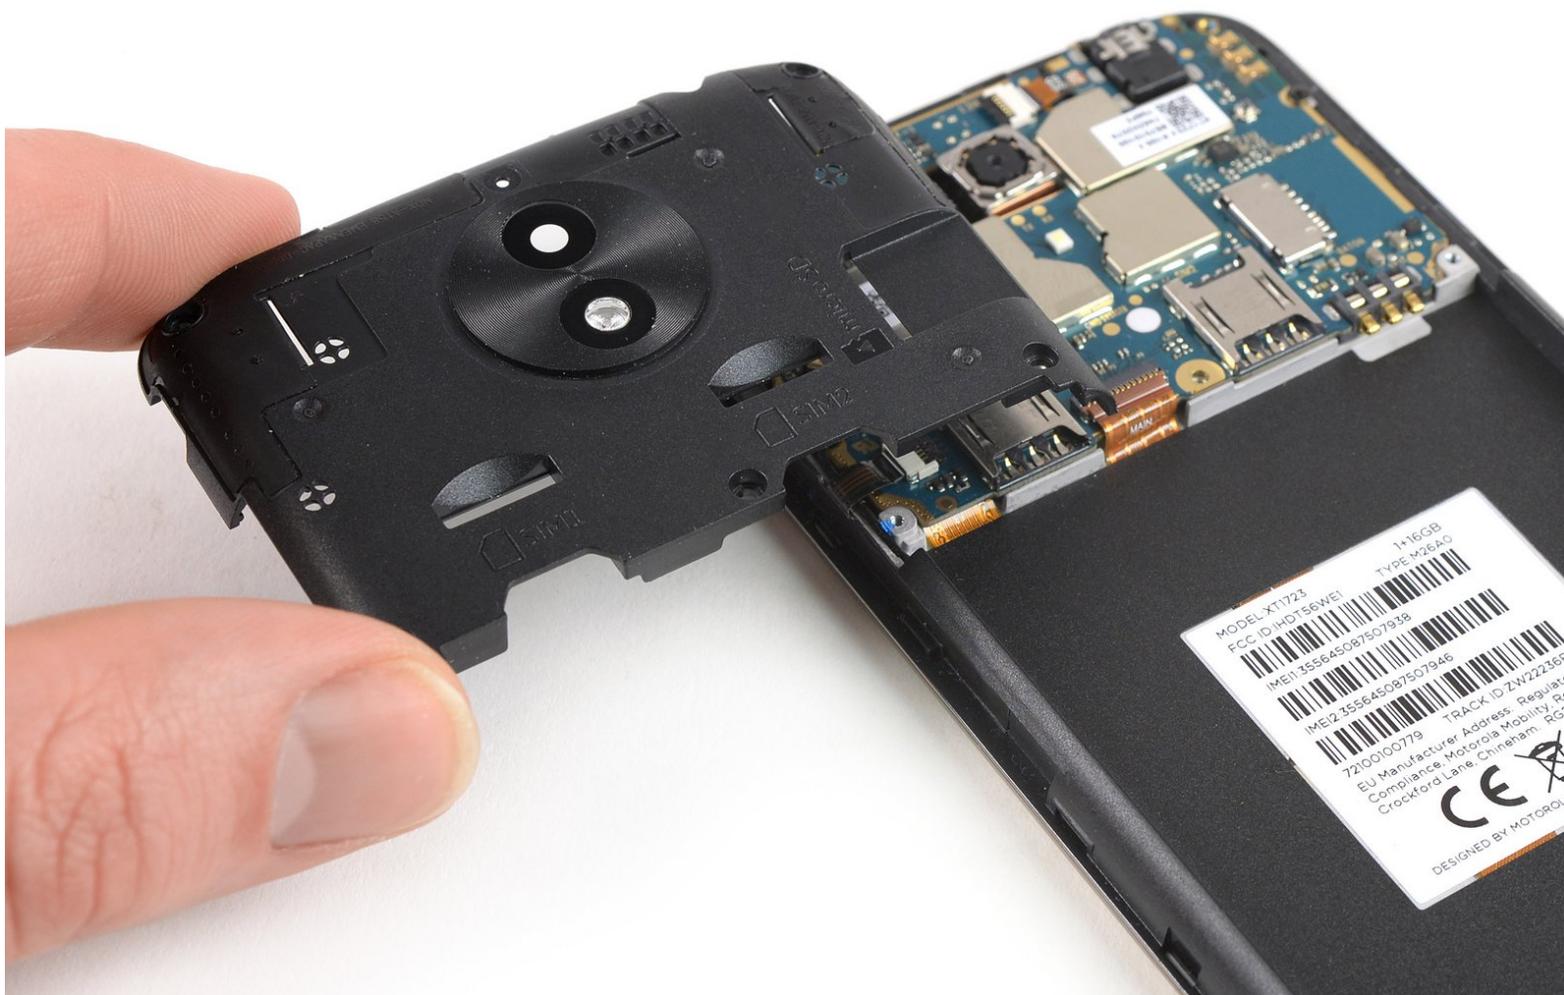

INTRODUCTION

Motherboard Cover prereq only

TOOLS:

- [Spudger](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Cover



i Power off your phone before beginning disassembly.

- Insert a thumbnail, or spudger, into the notch on the bottom right to start separating the phone unit from the back cover.
- Move to the bottom left corner and pry the phone unit out of the back cover until you can get a good grip.

Step 2




- Lift the phone out of the back cover.

Step 3 — Battery



- Use a spudger or fingernail to lift the battery starting at the notch on the bottom left.
- Lever the battery out of its recess and remove it.

Step 4 — Motherboard Cover

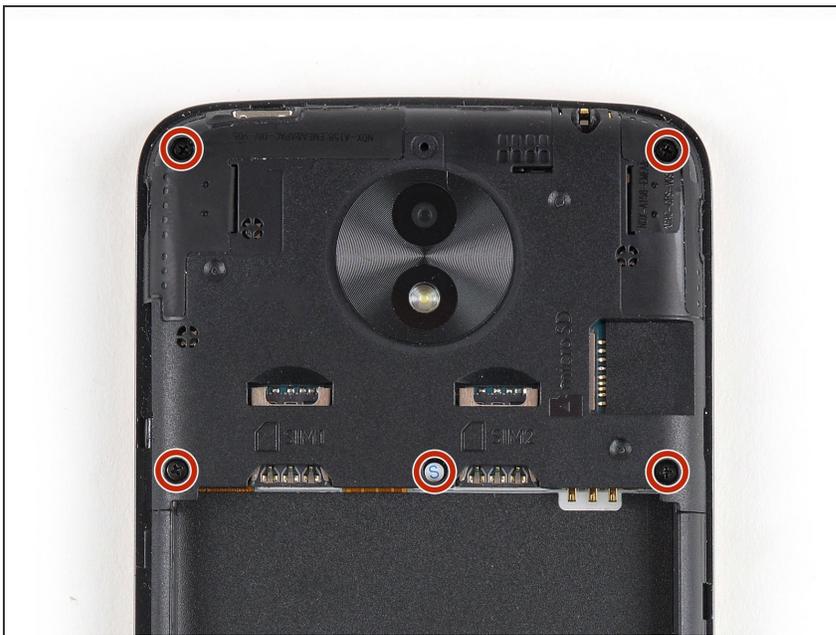

- Remove the five 3.1 mm long Phillips #00 screws.

Step 5



- Apply an opening pick to the bottom right corner of the motherboard cover.
- Twist the opening pick to free the motherboard cover out of the plastic clamps on the right side of the phone.

Step 6



- Repeat the previous step on the left side of the motherboard cover to free it out of the plastic clamps.
- Pry up the motherboard cover until you can get a good grip.
- Remove the motherboard cover.

To reassemble your device, follow these instructions in reverse order.